
Assembly Instructions

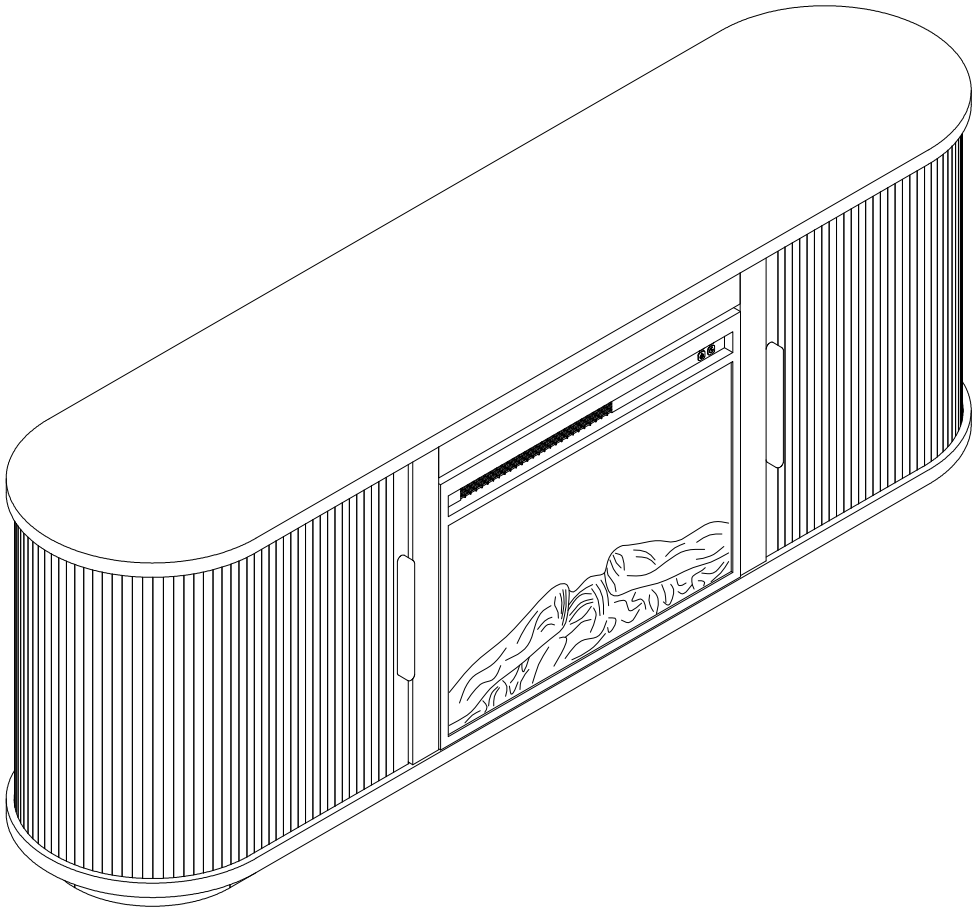

This product is shipped in 2 boxes. If you receive only one box, please wait a few business days for the remaining box to arrive, or contact us for assistance.


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

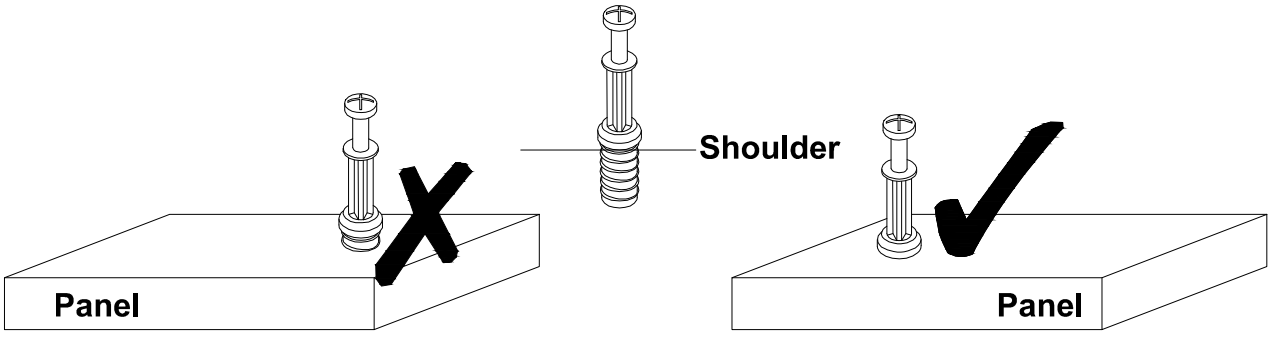


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

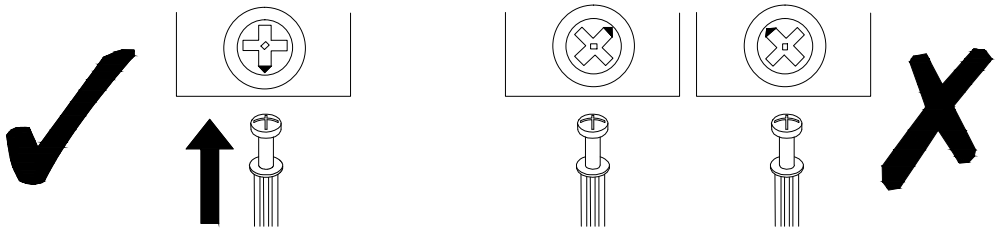


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

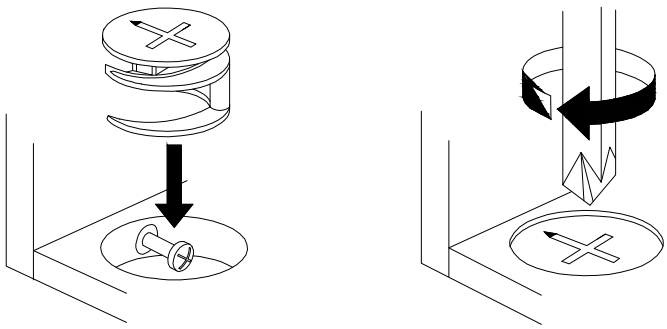

Turn cam lock clockwise to tighten.









Product structure

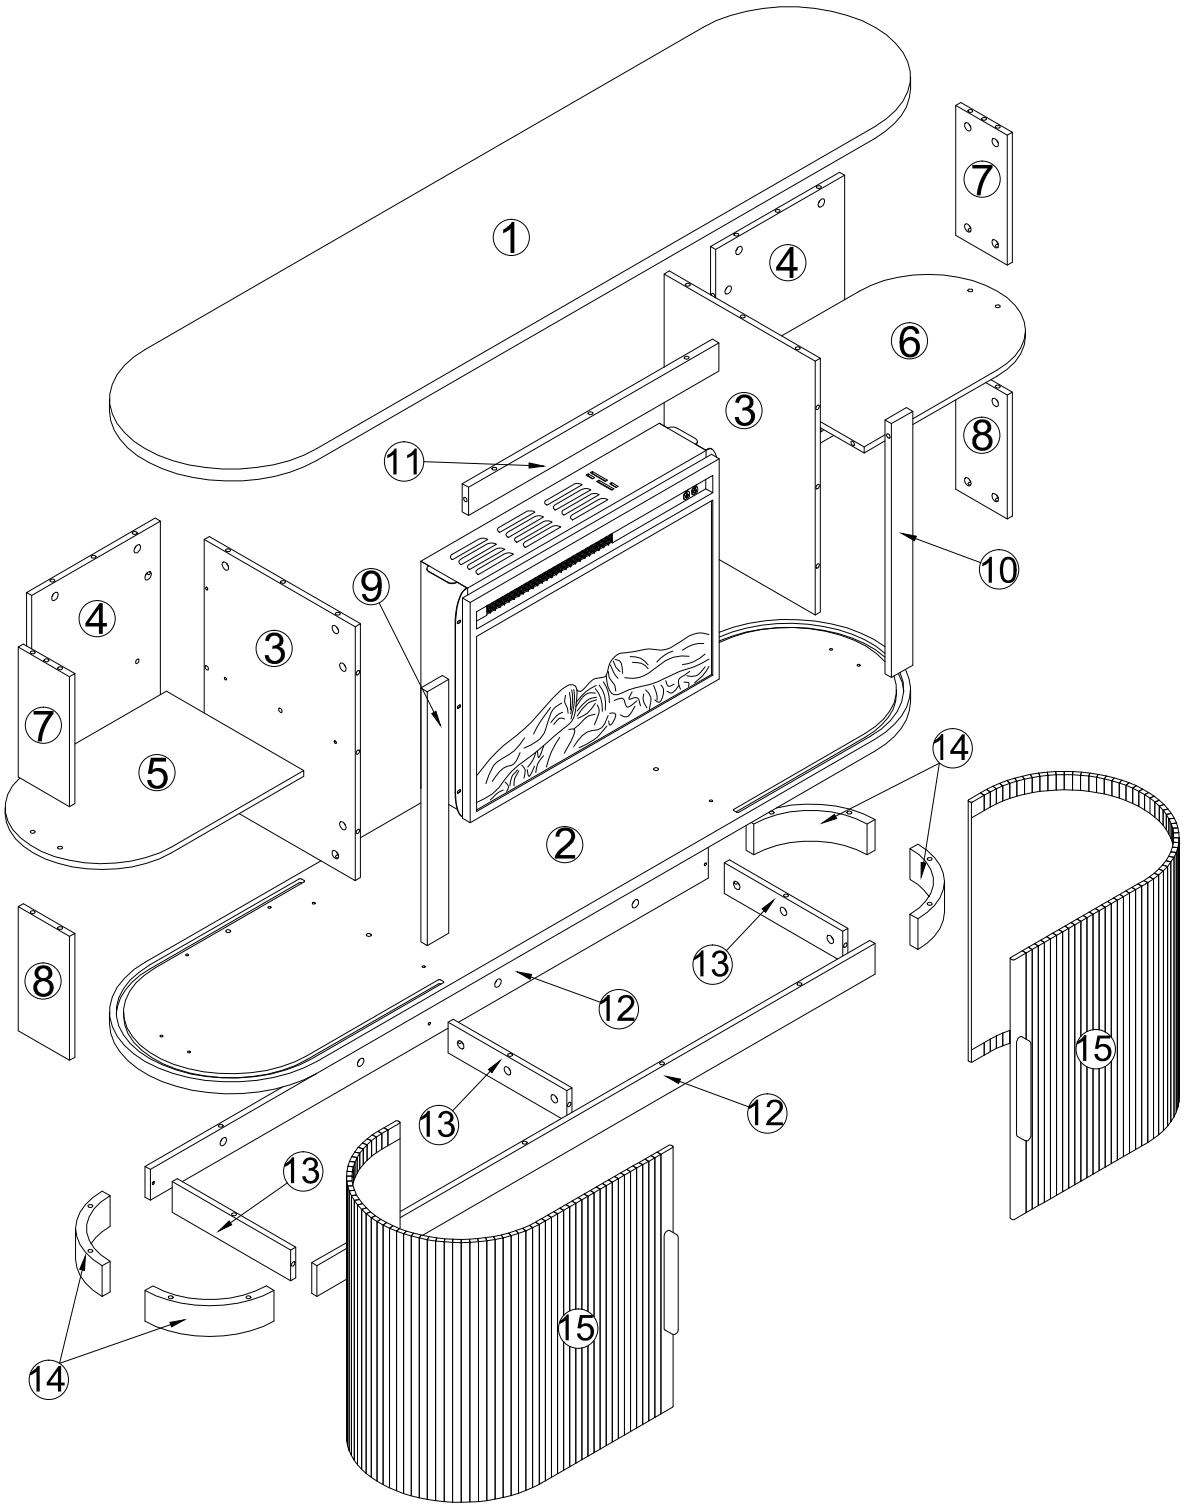


⚠	“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”

Part List


“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A Quantity:55 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:63 Pcs Cam φ15 	No. C Quantity:63 Pcs Sticker Ø20 	No. D Quantity:19 Pcs Dowel 8*30mm 
No. E Quantity:2 Pcs Handle 200*20mm 	No. F Quantity:4 Pcs Screw M6*40mm 	No. G Quantity:1 Pc Allen Key 4# 	No. H Quantity:8 Pcs Screw M6*40mm 
No. I Quantity:10 Pcs Foot Pad Ø15 	No. J Quantity:4 Pcs Double-ended rod 6*68mm 	No. K Quantity:4 Pcs Screw M4*14mm 	No. L Quantity:1 Pc Screwdriver 
No. M Quantity:2 Pcs L-shaped hardware 	No. N Quantity:8 Pcs Screw M3.5*14mm 	No. O Quantity:2 Sets Anti-falling Parts 	


STEP 1

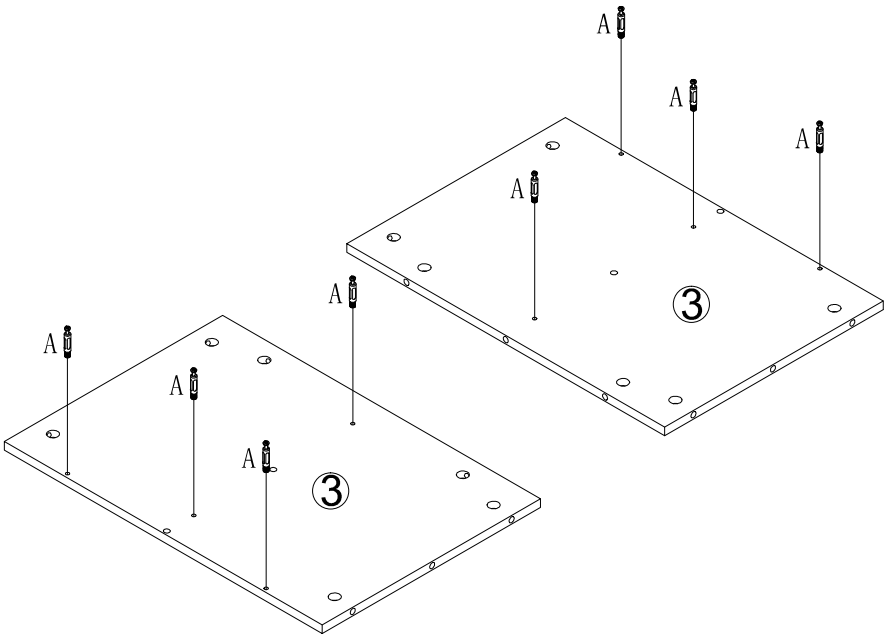


No. A
Quantity: 8 Pcs
8*28 mm



STEP 2

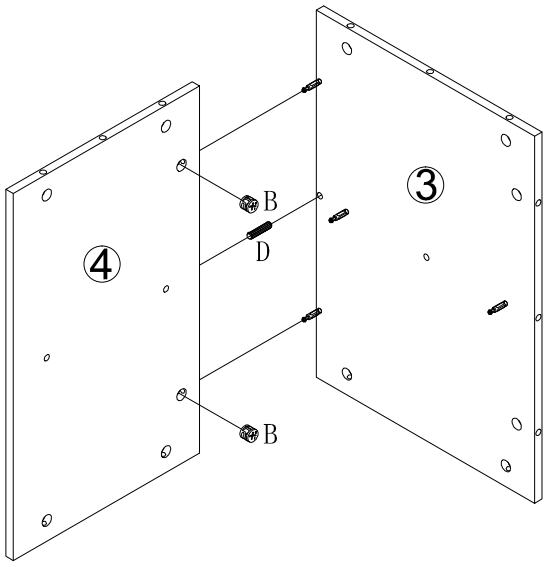

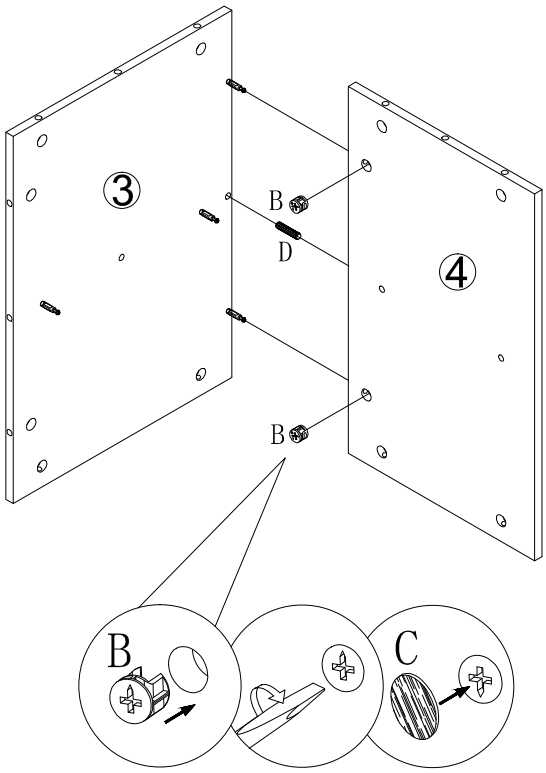


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm



STEP 3

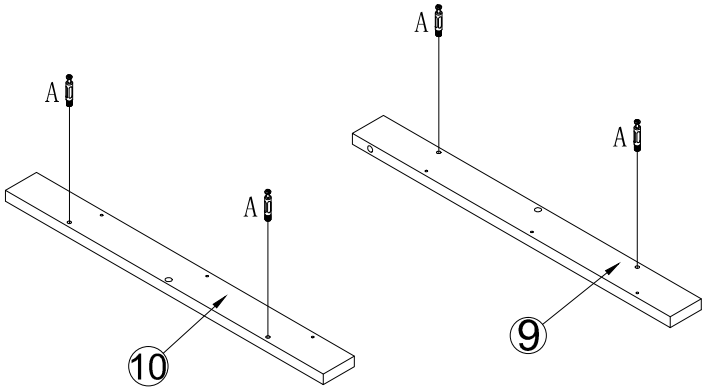


No. A
Quantity: 4 Pcs
8*28 mm



STEP 4

Note, the dowel hole is on the reverse side here, please distinguish the direction before assembly.

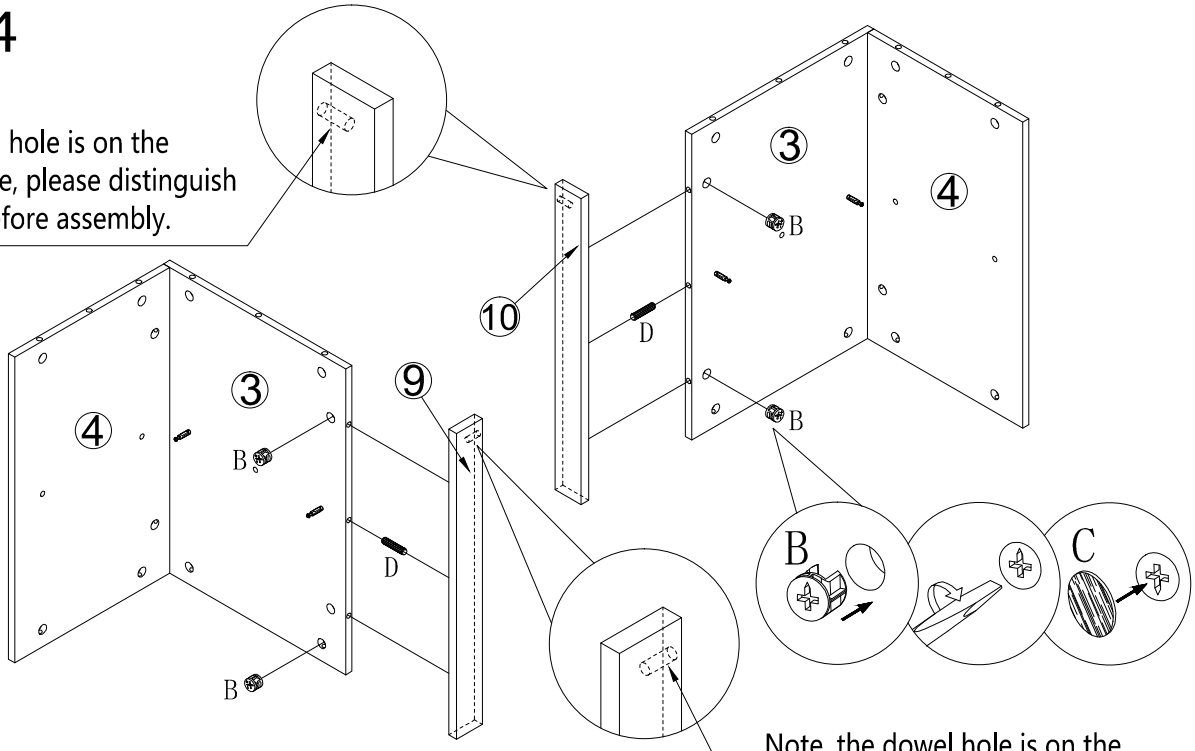

Note, the dowel hole is on the reverse side here, please distinguish the direction before assembly.


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm




STEP 5

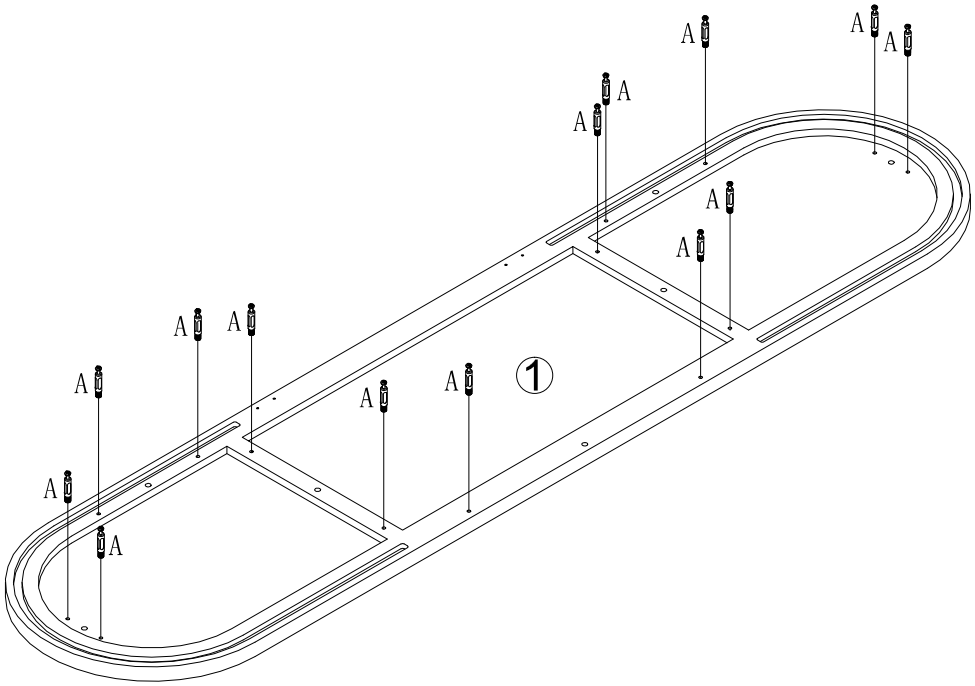


No. A
Quantity: 14 Pcs
8*28 mm



STEP 6

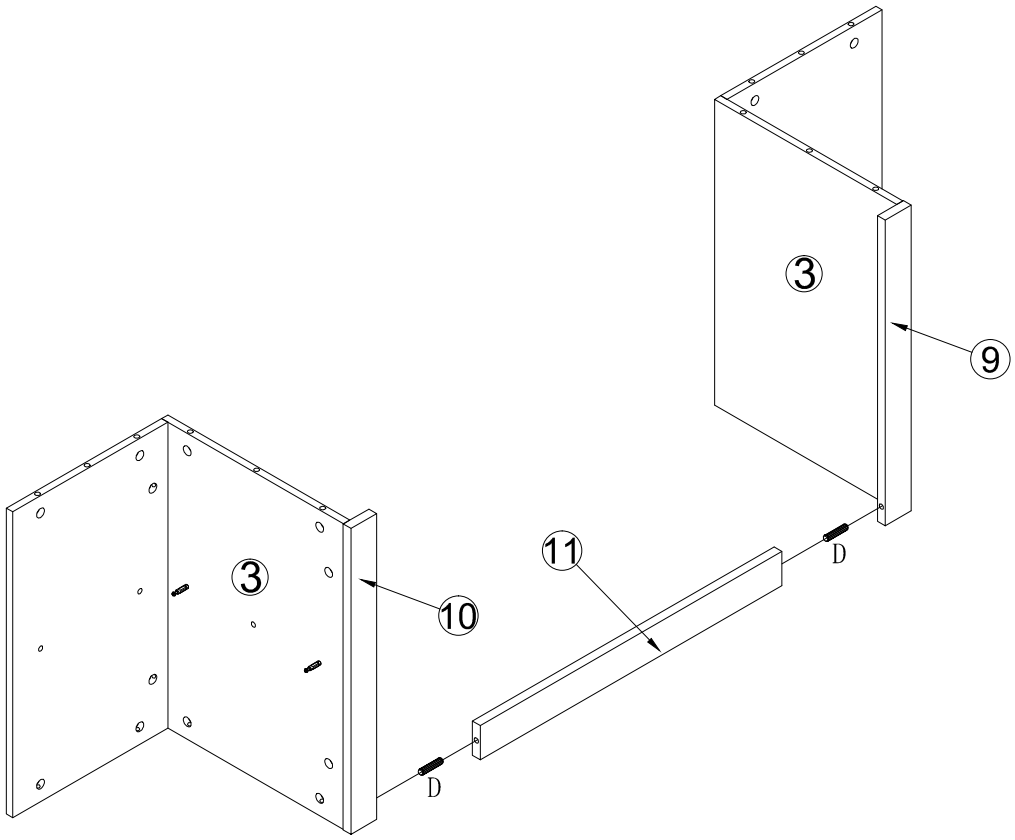


No. D
Quantity: 2 Pcs
8*30mm



STEP 7


No. B
Quantity: 10 Pcs
Ø15




No. C
Quantity: 10 Pcs
Ø20




No. D
Quantity: 5 Pcs
8*30mm



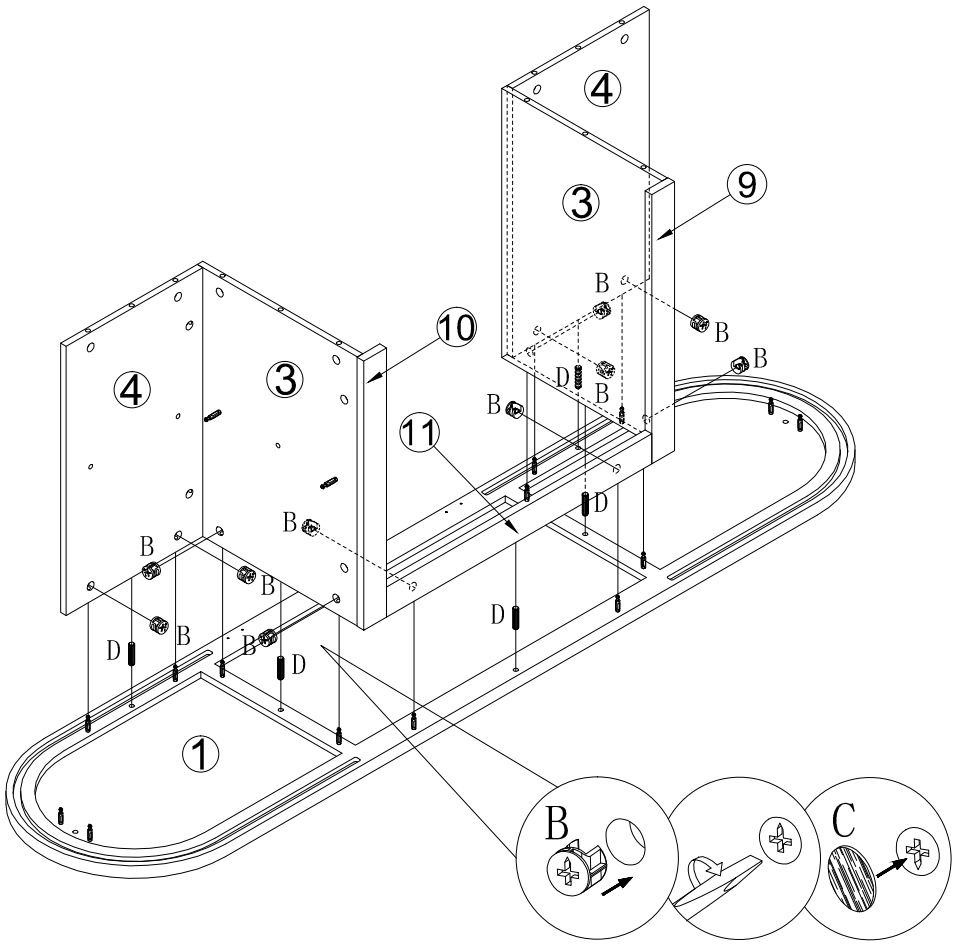

STEP 8


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm



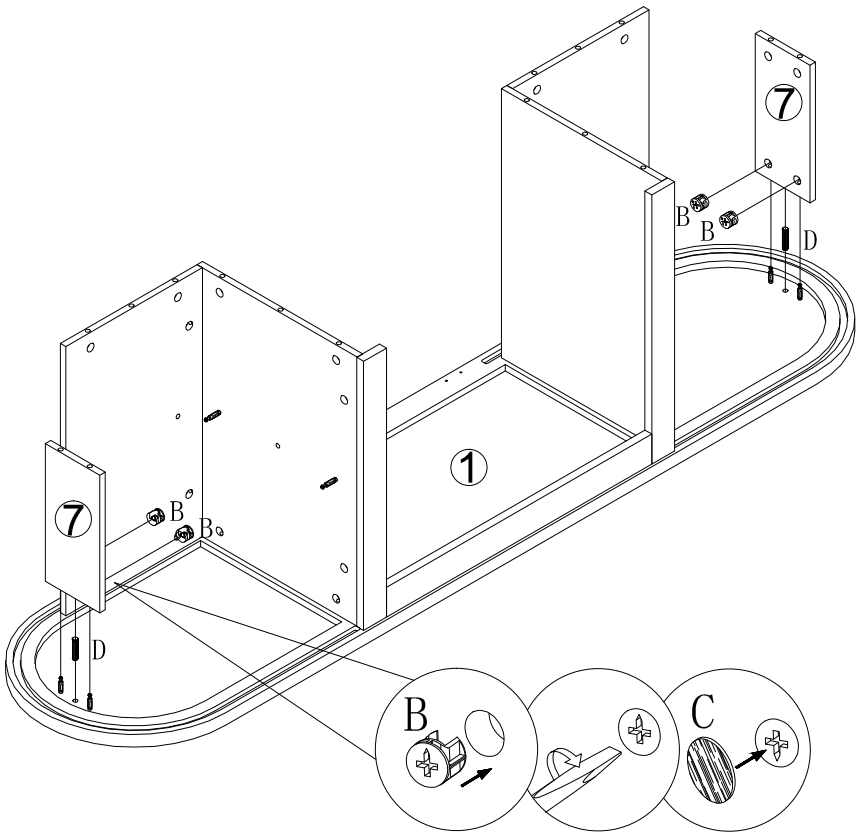

STEP 9


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm



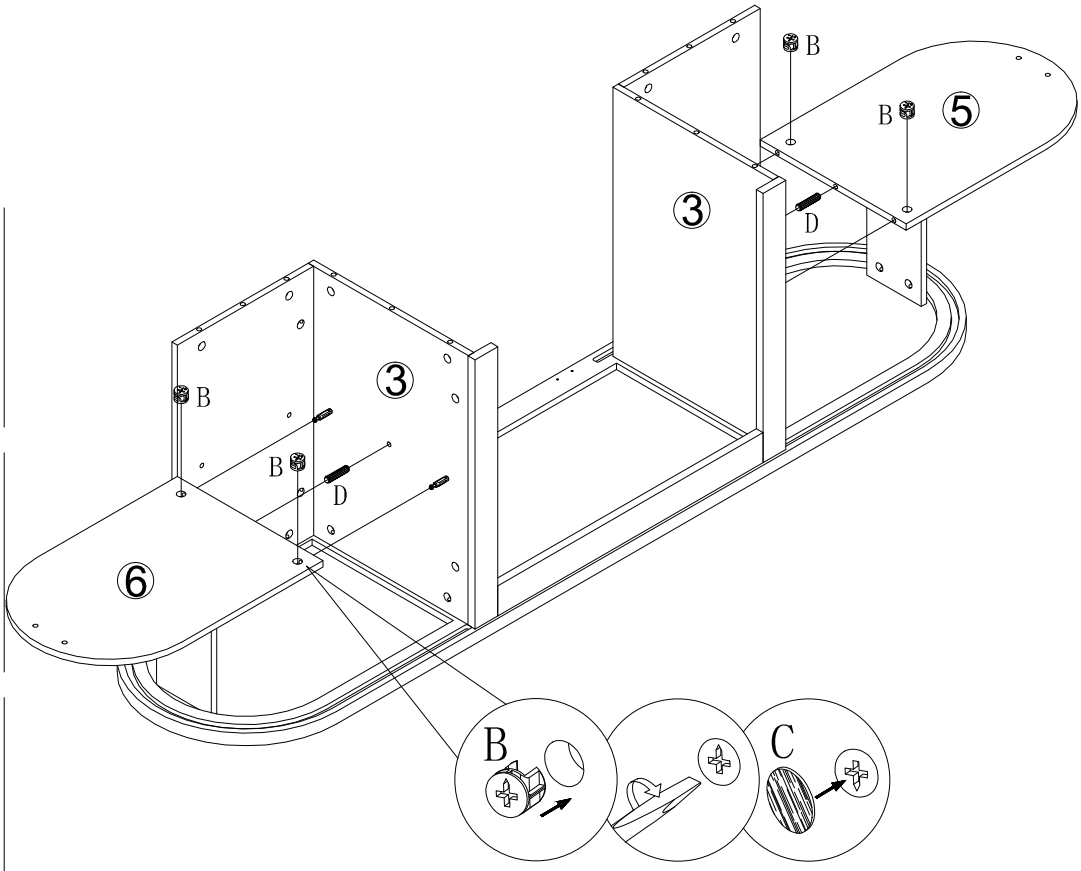

STEP 10


Note that the screw needs to be locked from the back here.

No. F
Quantity: 4 Pcs
M6*40mm




No. G
Quantity: 1 Pc
4#



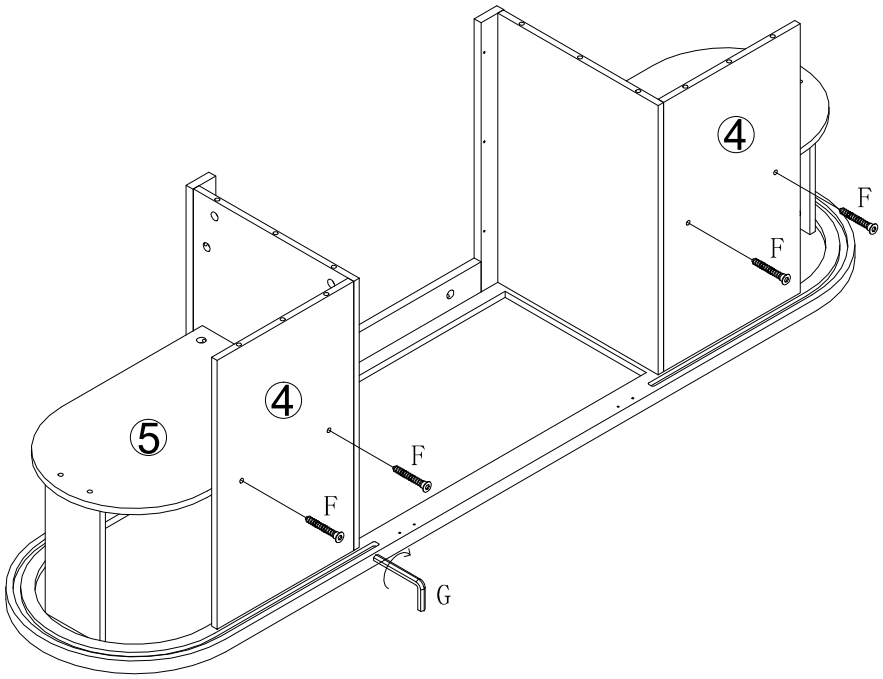

STEP 11


No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20




No. J
Quantity: 4 Pcs
6*68mm



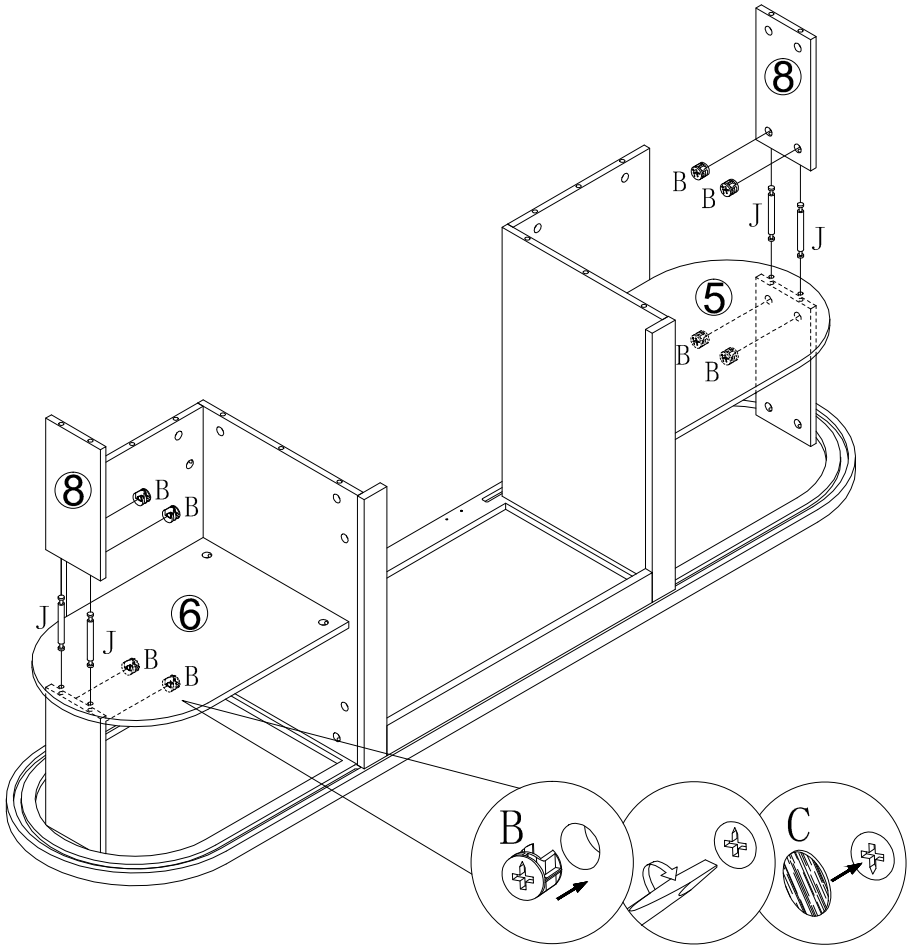

STEP 12

Note, the white cloth is on this side.

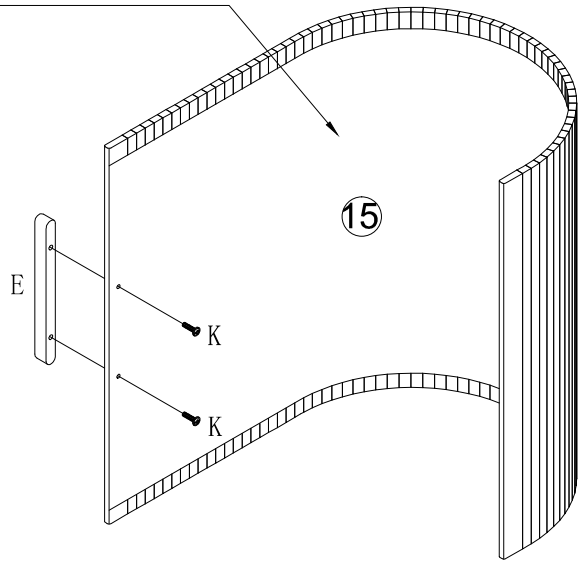

No. E
Quantity: 2 Pcs
200*20mm




x2


No. K
Quantity: 4 Pcs
M4*14mm



STEP 13

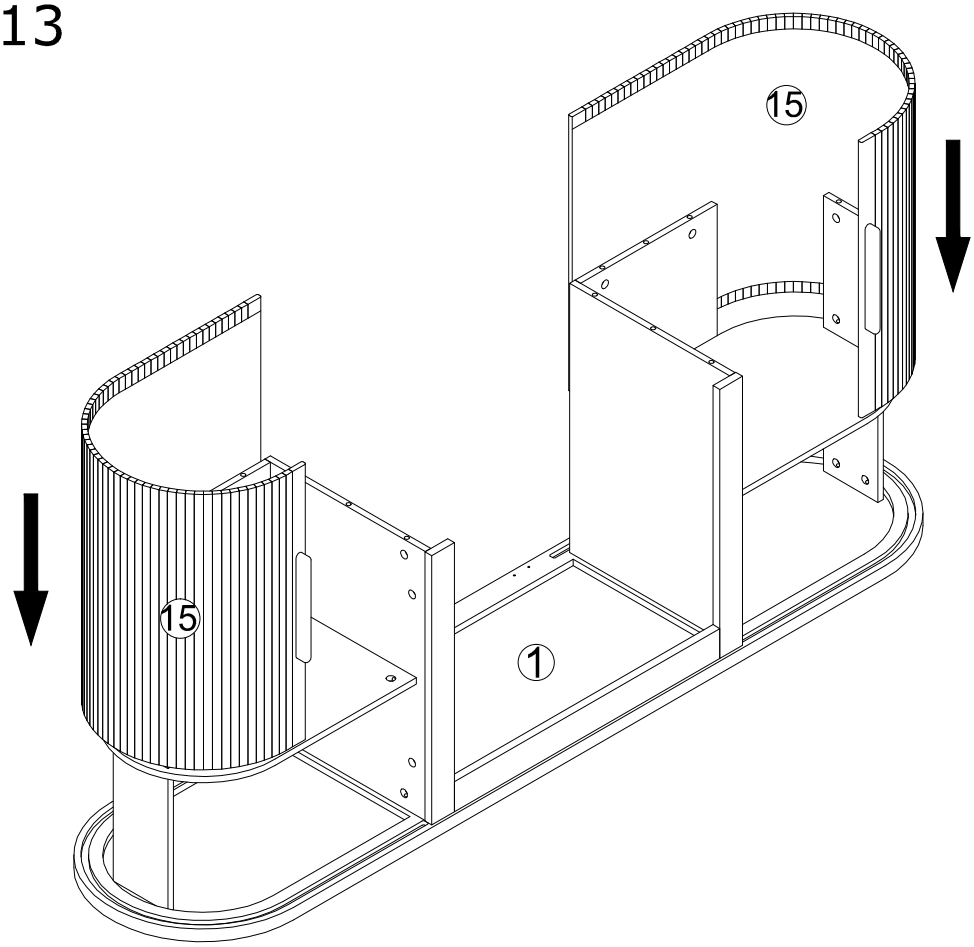

STEP 14

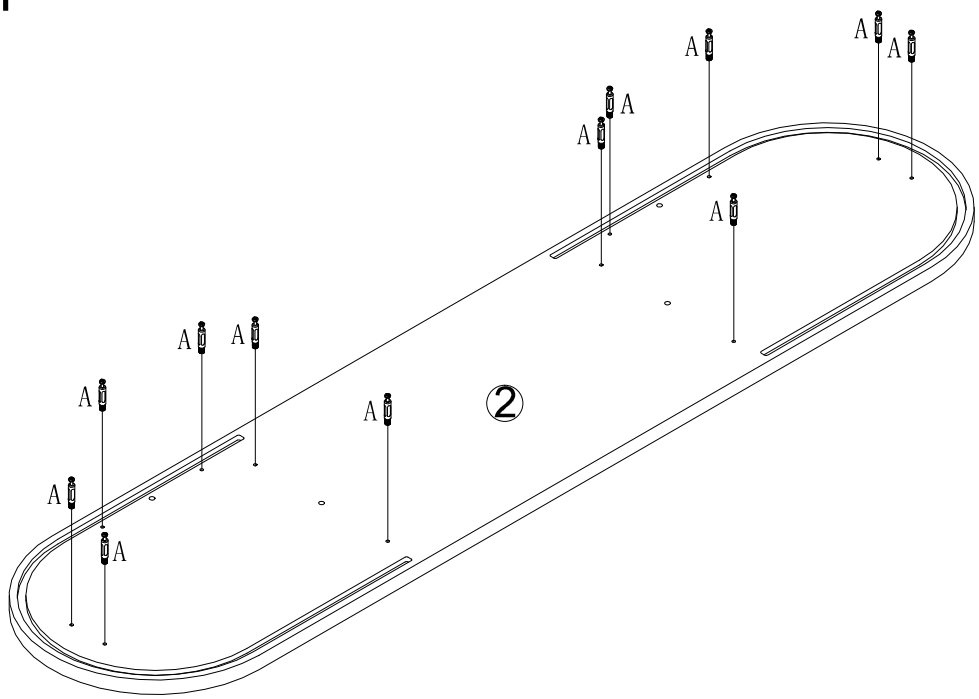


No. A
Quantity: 12 Pcs
8*28 mm



STEP 15

Precautions: Do not tighten yet; try to push the roller shutter smoothly. If it cannot be pushed or pulled, you can tap it gently by hand to the roller shutter can be pushed and pulled smoothly.


No. B
Quantity: 12 Pcs
Ø15




No. C
Quantity: 12 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm




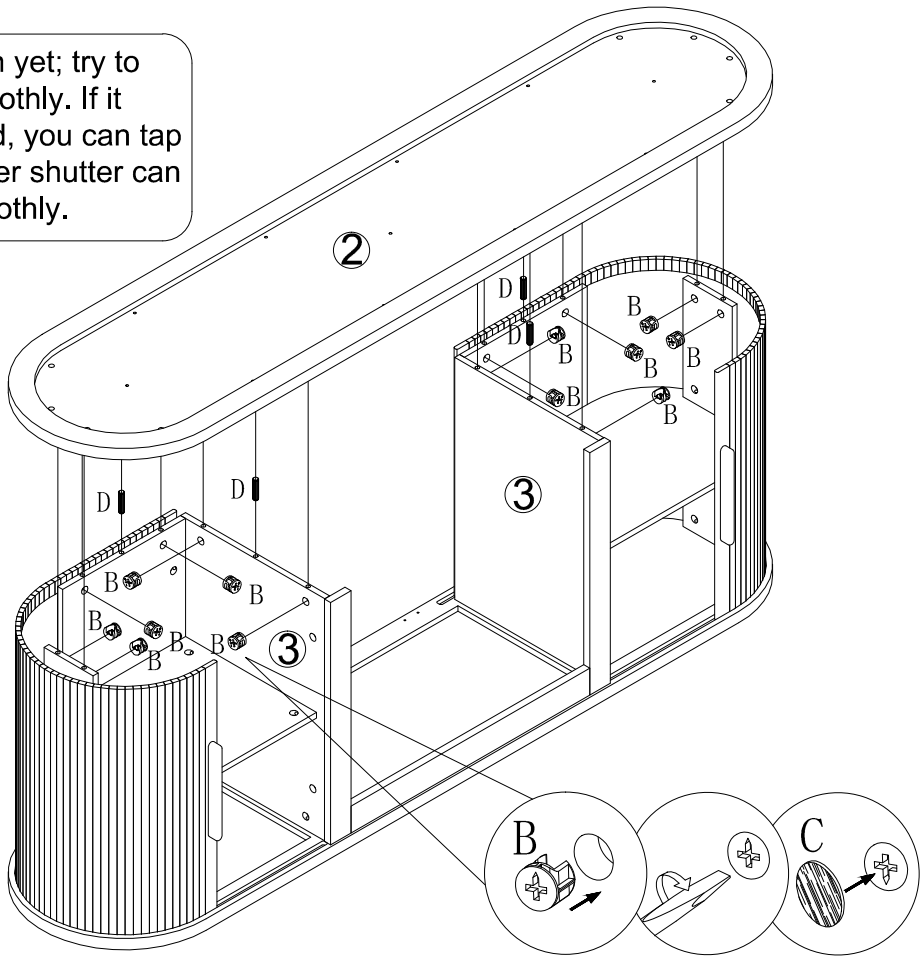


STEP 16

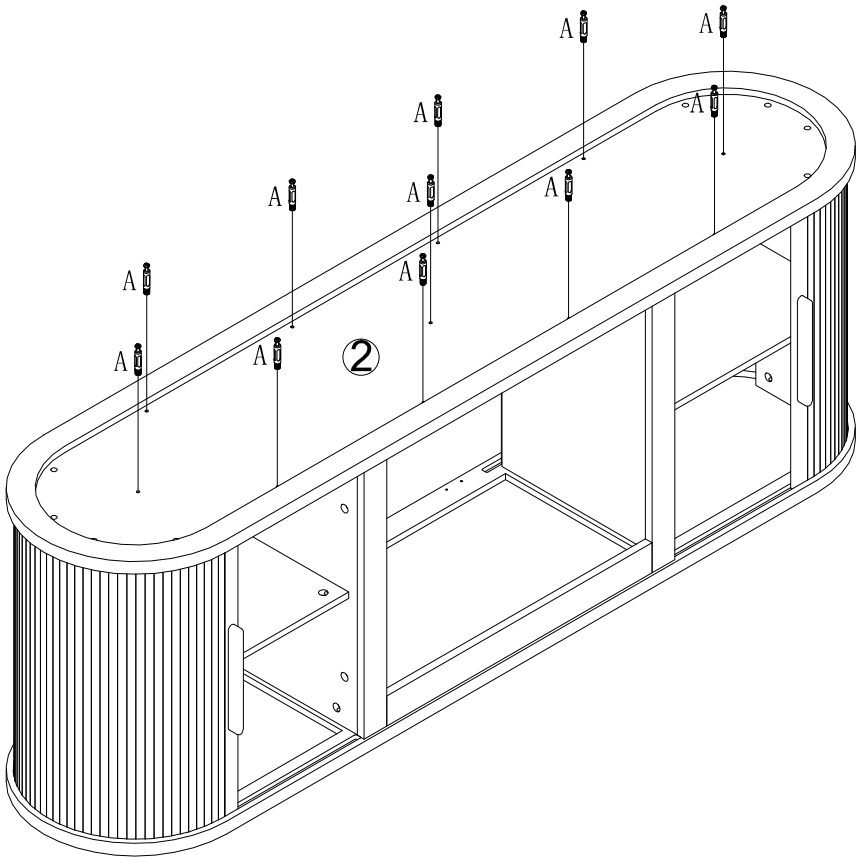


No. A
Quantity: 11 Pcs
8*28 mm




STEP 17

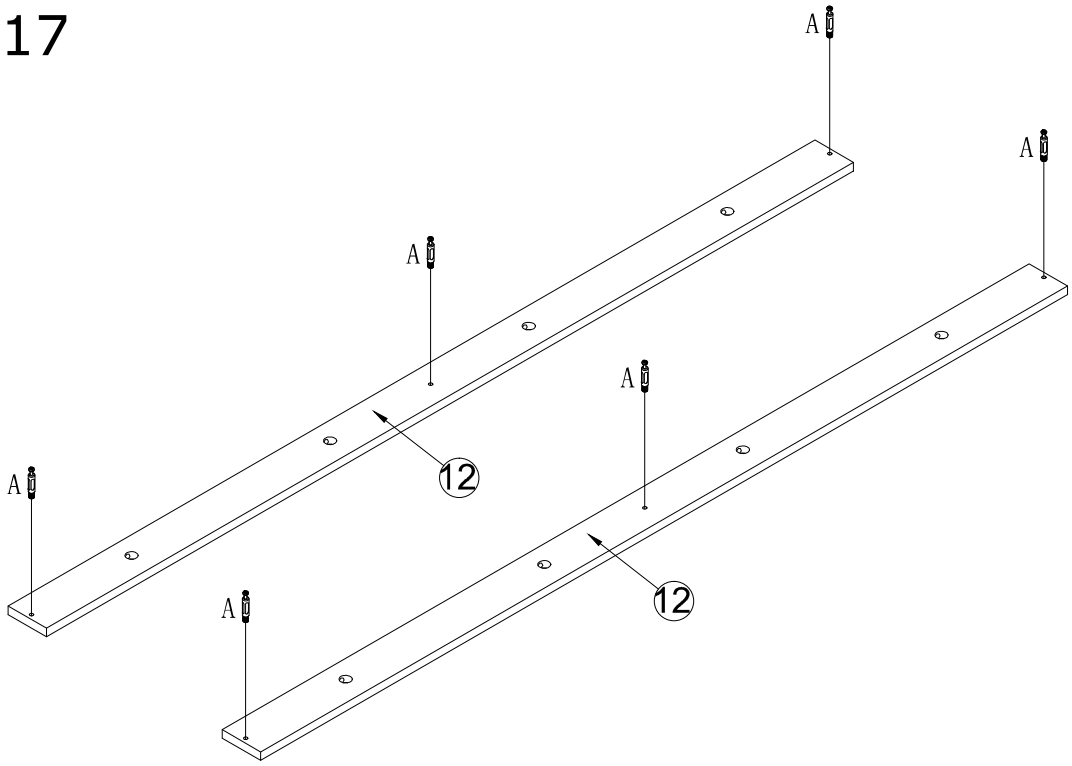

No. A
Quantity: 6 Pcs
8*28 mm



STEP 18

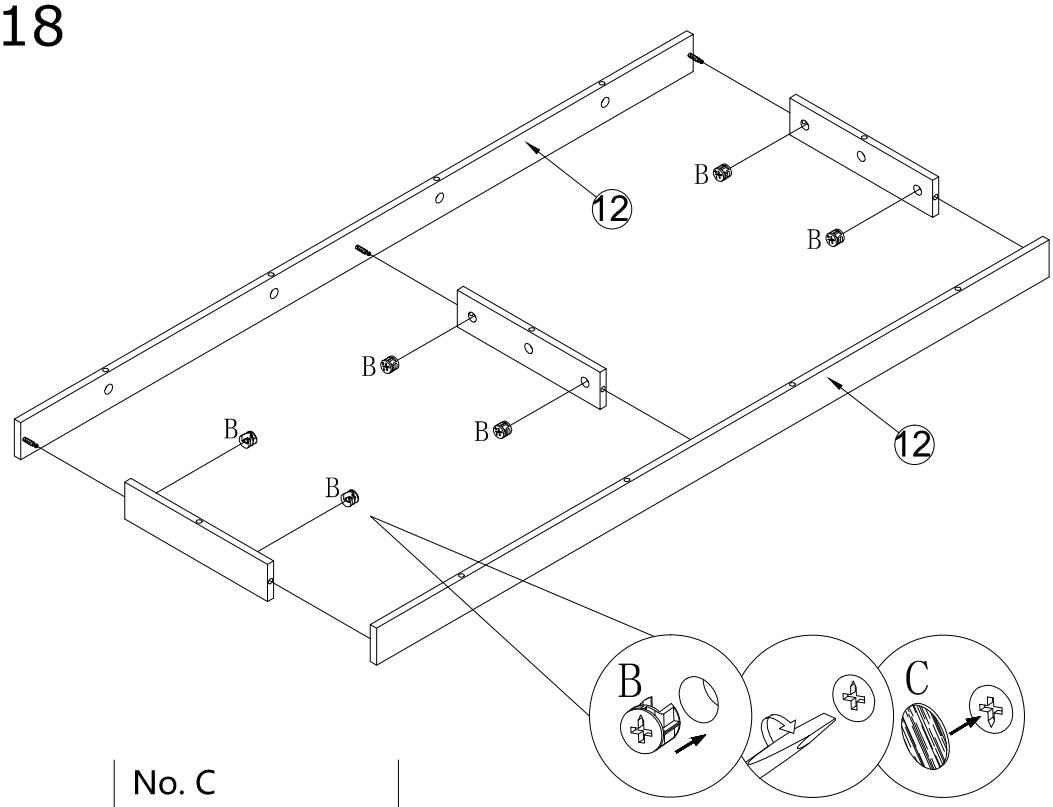


No. B
Quantity: 6 Pcs
Ø15



No. C
Quantity: 6 Pcs
Ø20




STEP 19

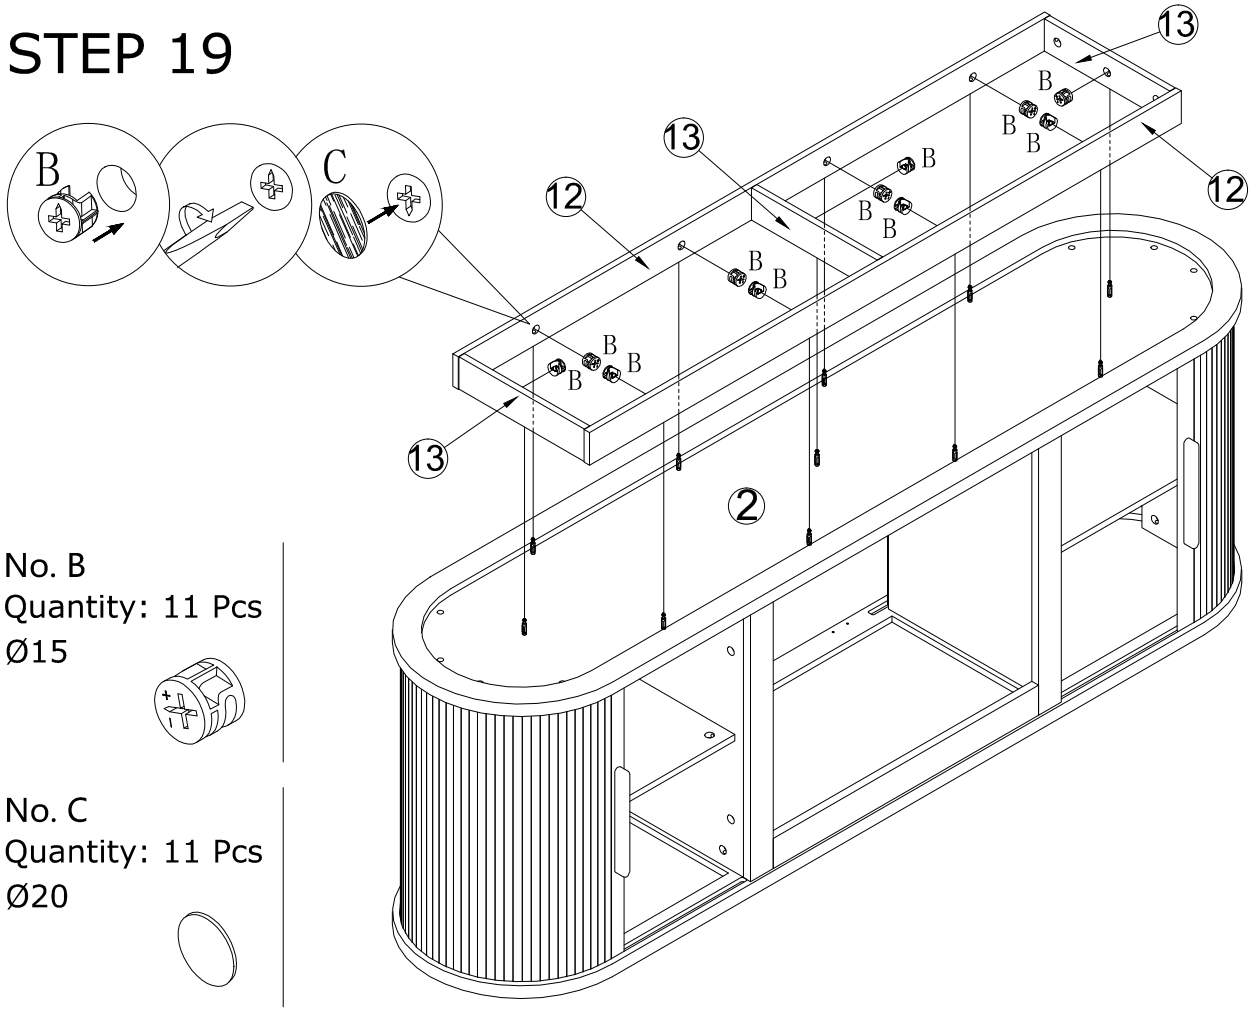


No. B
Quantity: 11 Pcs
Ø15

No. C
Quantity: 11 Pcs
Ø20

STEP 20

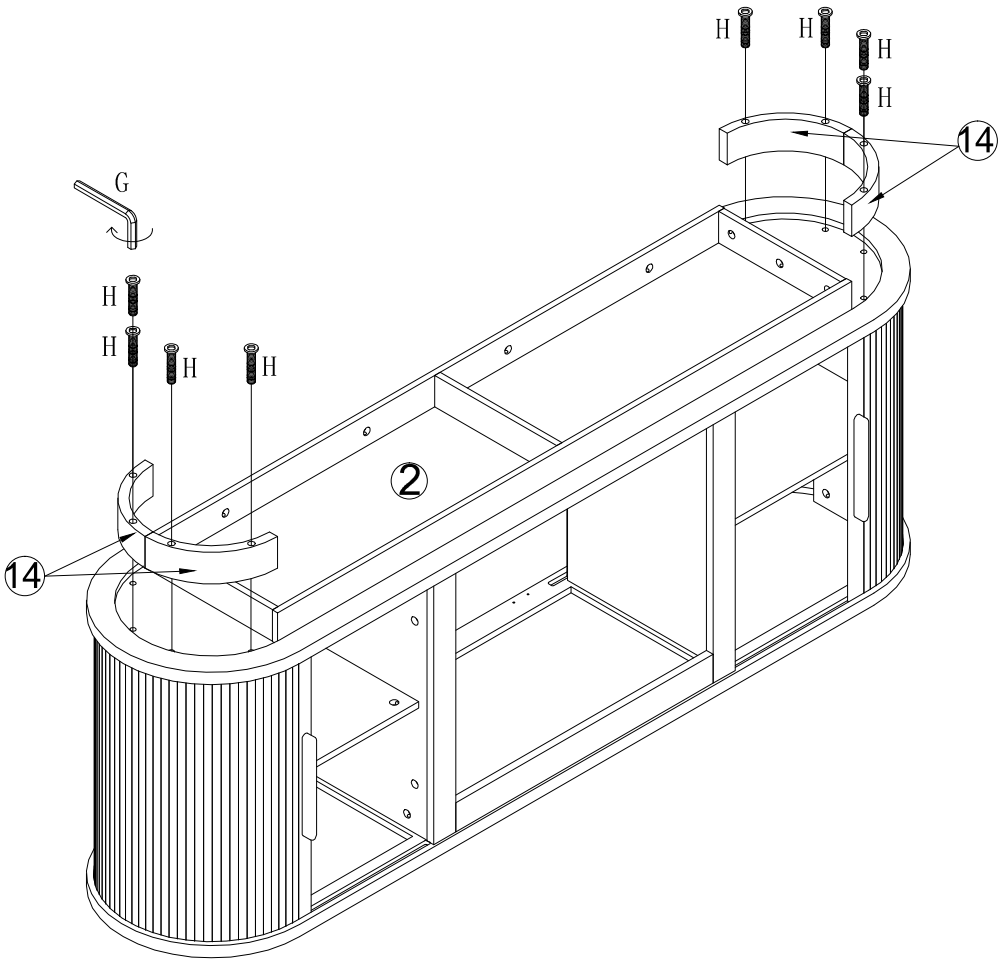


No. H
Quantity: 8 Pcs
M6*40mm



No. G
Quantity: 1 Pc
4#




STEP 21

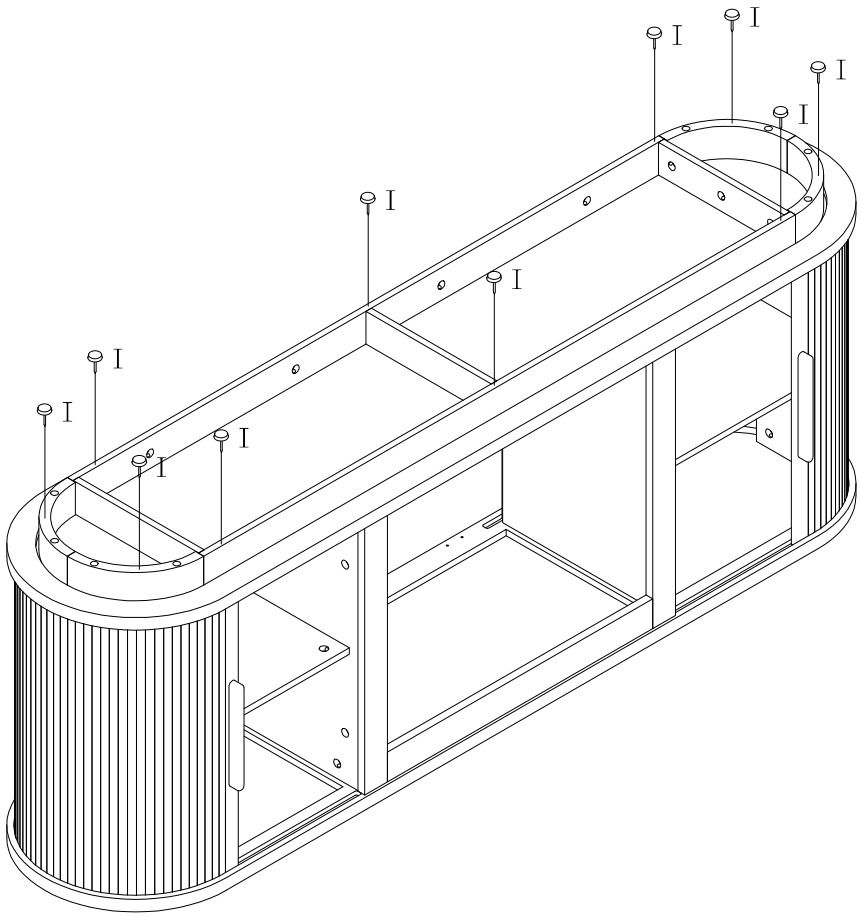

No. I
Quantity: 10 Pcs
Ø15




STEP 22

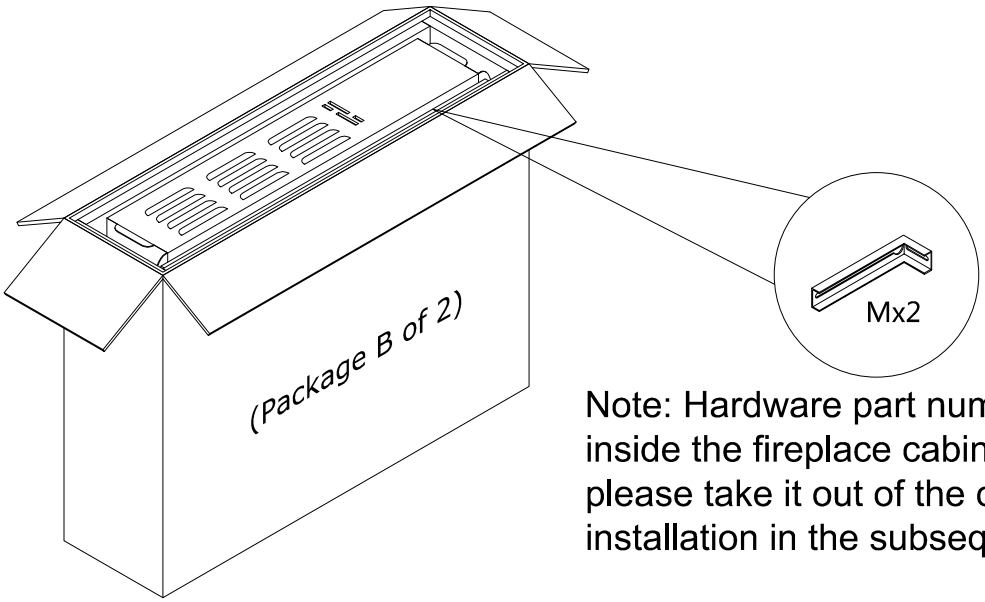


Note: Hardware part number "M" is inside the fireplace cabinet carton; please take it out of the carton for installation in the subsequent steps.

Take the fireplace out of the separate box and proceed to the next installation step.

STEP 23

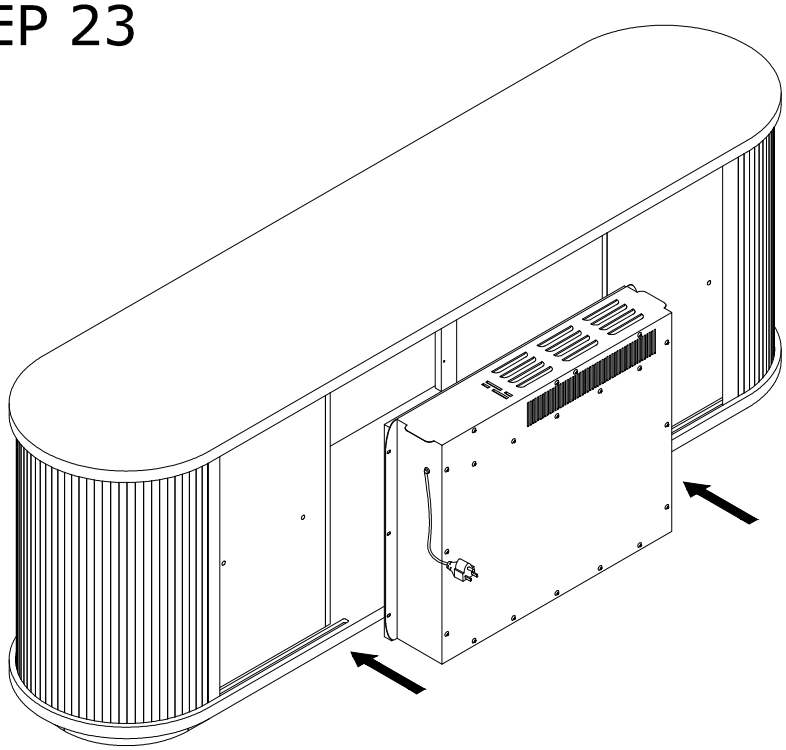


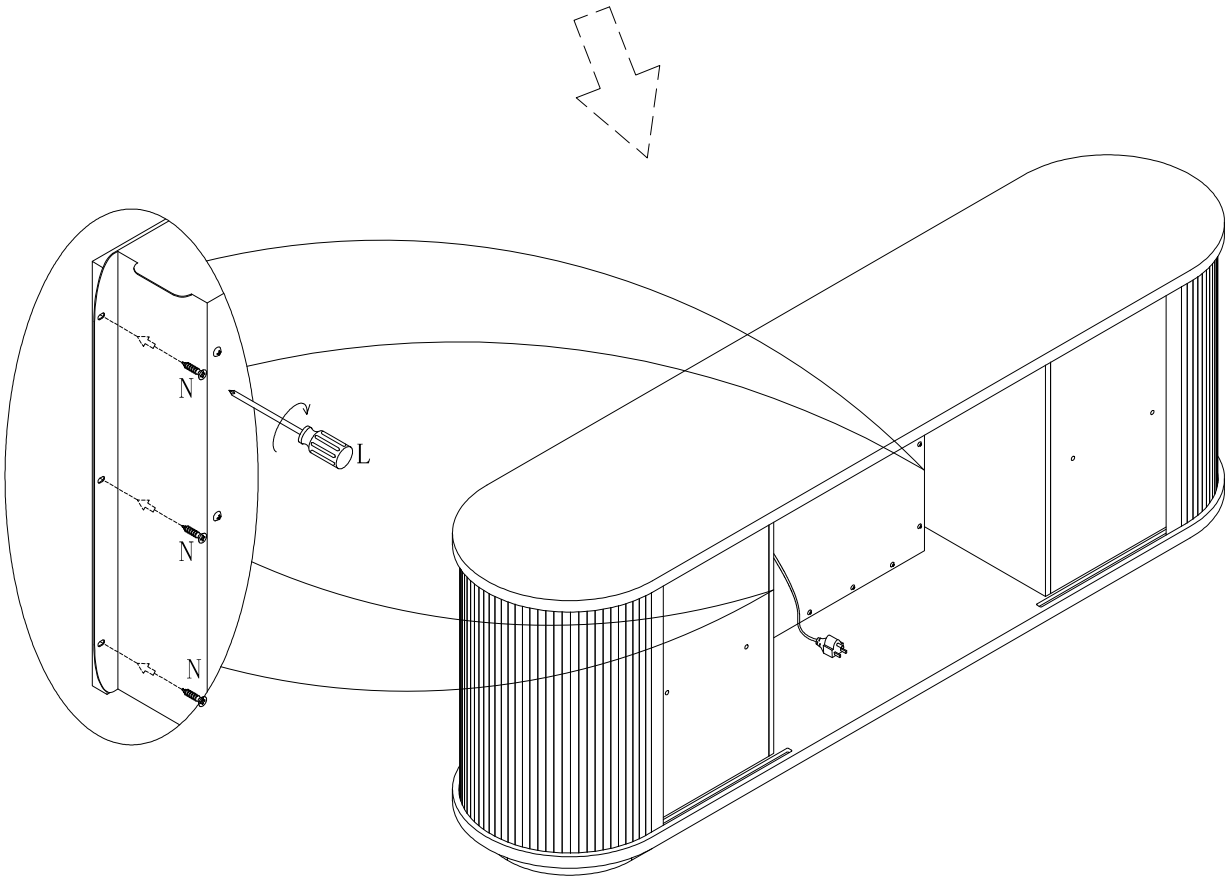


No. N
Quantity: 6 Pcs
M3.5*14mm




STEP 24

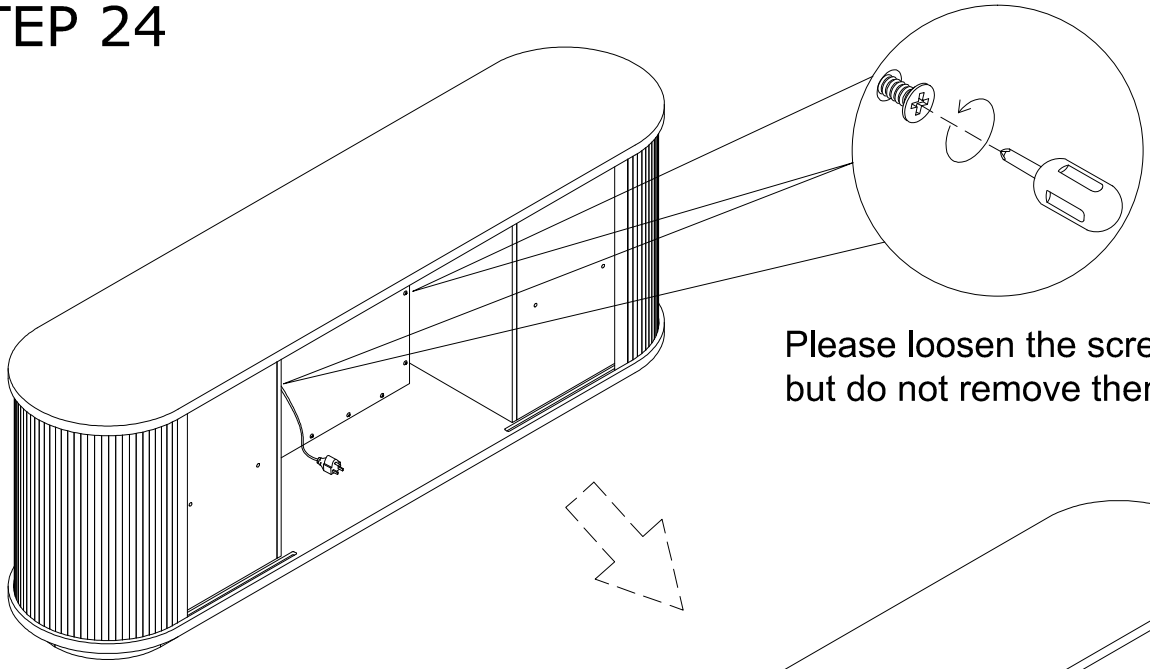

Please loosen the screws here,
but do not remove them.

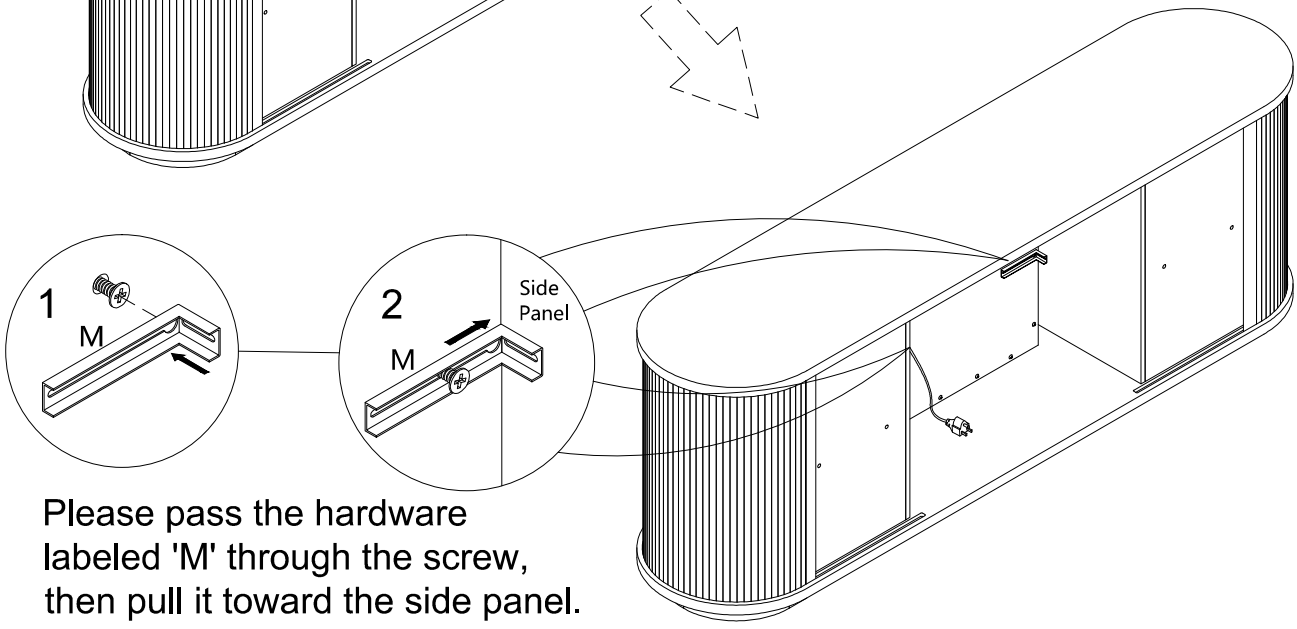

Please pass the hardware
labeled 'M' through the screw,
then pull it toward the side panel.

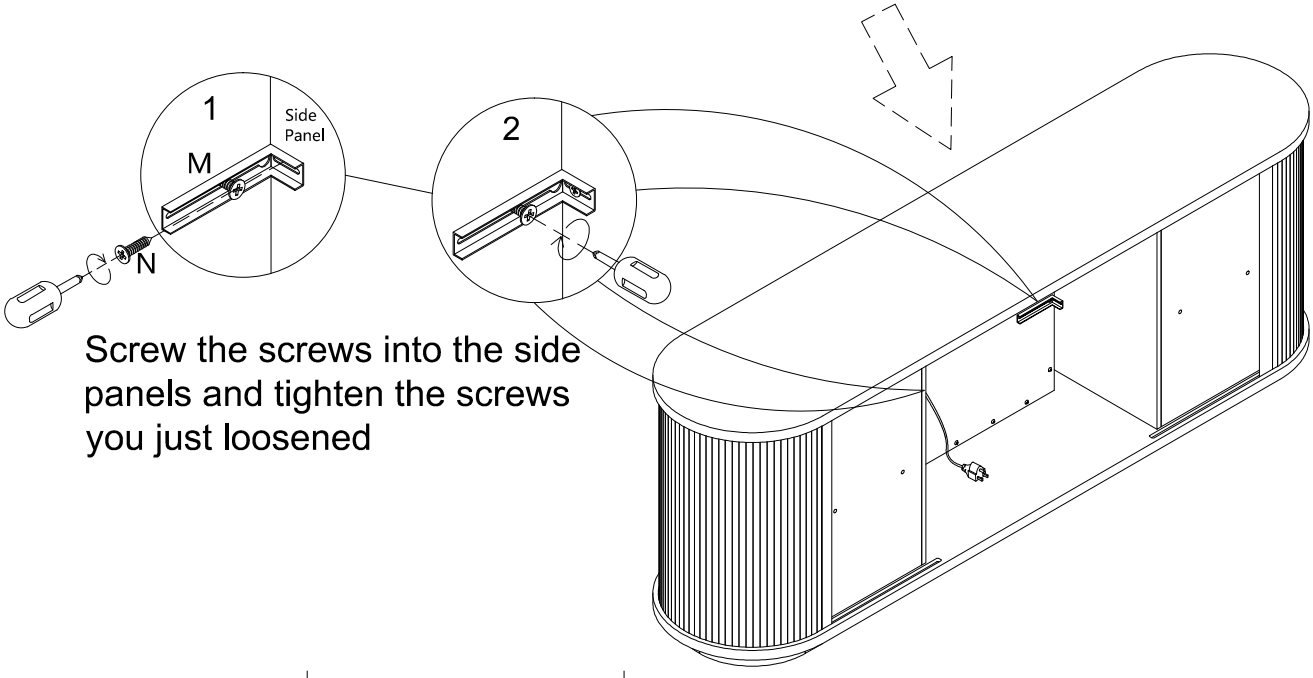


Screw the screws into the side
panels and tighten the screws
you just loosened


No. M	No. N
Quantity: 2 Pcs	Quantity: 2 Pcs
	M3.5*14mm


STEP 25

Anti-tipping Kit

WARNING: ALWAYS LIFT the cabinet when moving it. NEVER DRAG it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

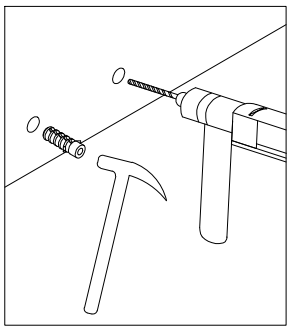

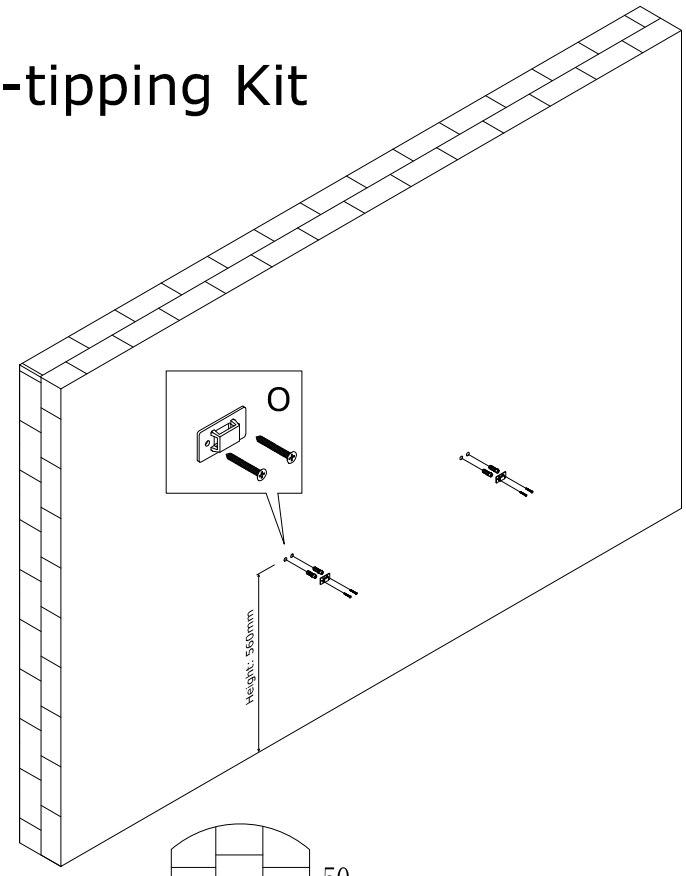

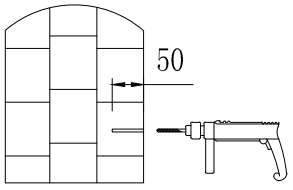

No. O

Quantity:2 Sets

Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.