




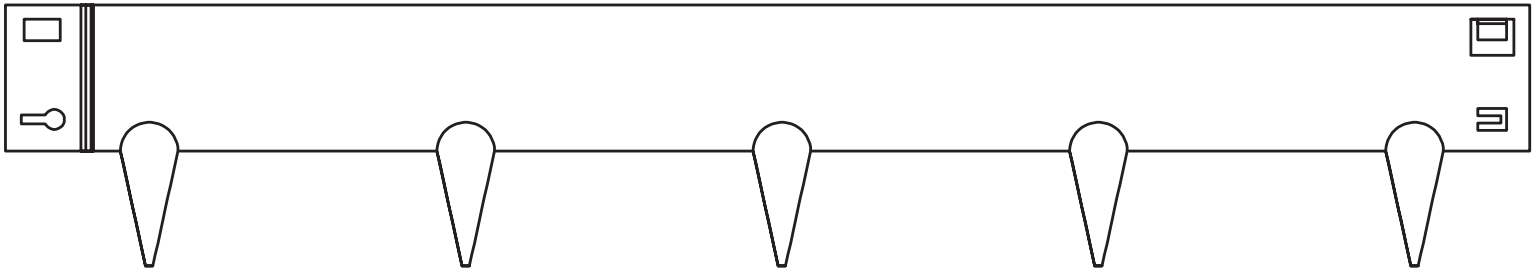



STEEL LAWN EDGING

Read this manual carefully before use and save it for future reference.




REQUIRED TOOLS (not included)	
	Screwdriver
	Mallet
	Wooden Block
	Gloves

RECOMMENDED TOOLS (not included)	
	Lawn Edger
	String & Spikes

! HELPFUL TIPS

- Before beginning, ensure you have enough edging to complete your project. Remember, the overall length will be shorter when edging is overlapped during installation.
- If shaping edging for or around corners, wait to bend the edging until the corner section is being installed.
- Only use a wooden block or table edge when bending edging; the corners should always be slightly rounded.
- Overlap or bend surplus edging to finish installation; cutting is not advised as it will void the product warranty and require the exposed end be painted to prevent rust.

PREPARE AREA

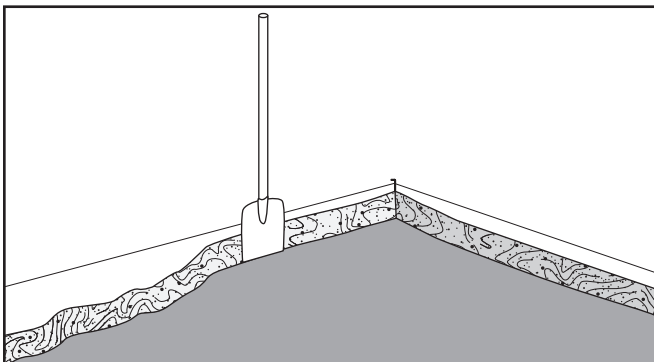

Mark out the area using use string & spikes.

Following the marked area, use a lawn edger to cut a nice, clean face around the inside perimeter of the string and spikes.


Remove excess turf, but keep some in case you need to backfill later.

Clear any debris, such as rocks and stones, that may prevent the edging from installing smoothly.




INSTALLATION

Read and fully understand installation instructions before beginning.

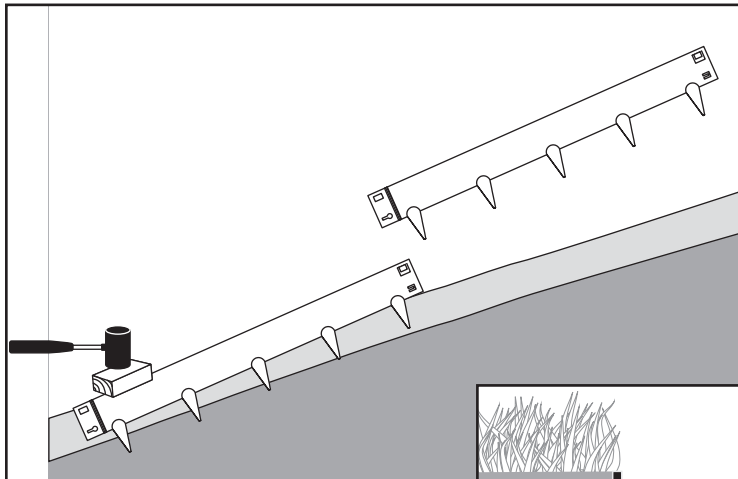


Lay edging strips along the prepared edge so they are easily accessible when you need them.

Ensuring the rounded sides of the spikes face forward and the flat edge is against the turf, drive one end of the edging to the correct depth, leaving the other end sufficiently clear to link the next section.

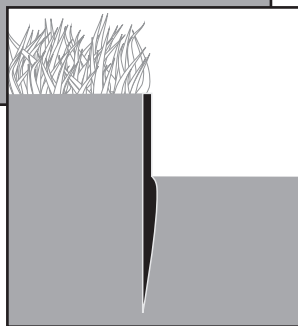


- Install edging with the flat side against the turf, as shown.
- The top of the edging should be flush with the point where the soil and grass meet.

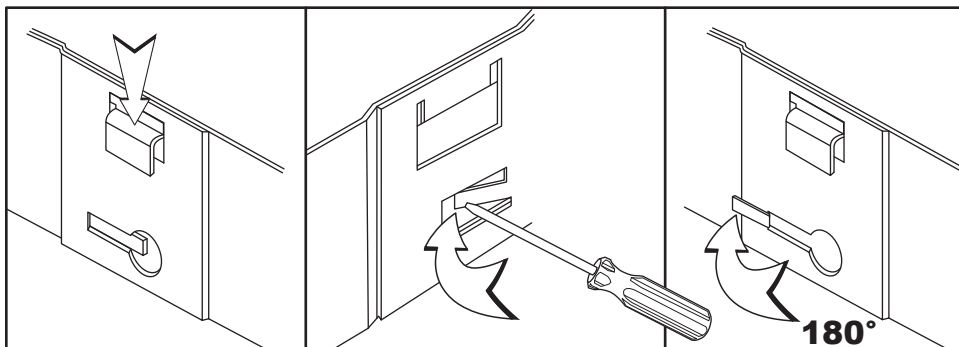

Link the next section of edging with the previous piece, as shown.

There is a tab below the interlocking pieces. Use a screwdriver to push the tab through the hole of the rear panel to about 180°.

Continue to drive the edging into the ground as each section is installed. After all sections have been installed, check that all sections are level with the point where the soil and grass meet.

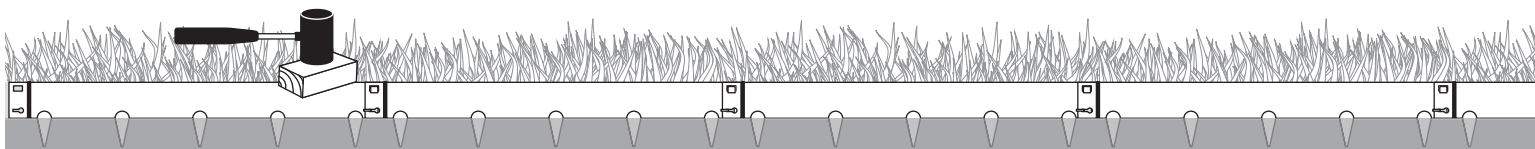

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

