

Installation & Assembly

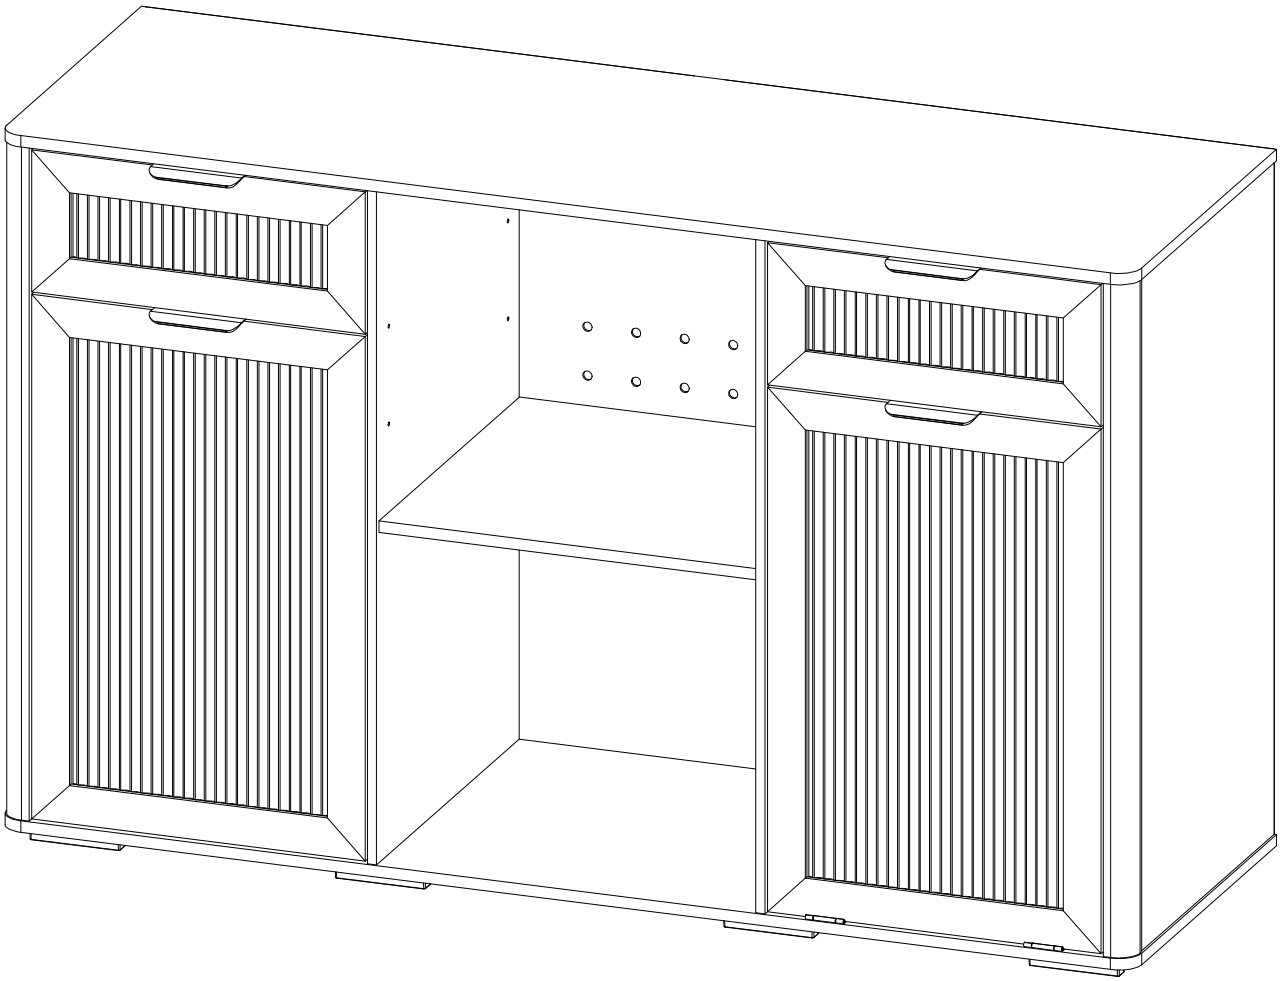

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

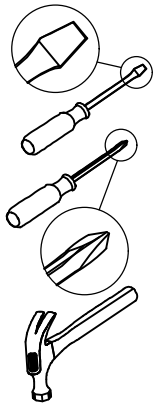

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

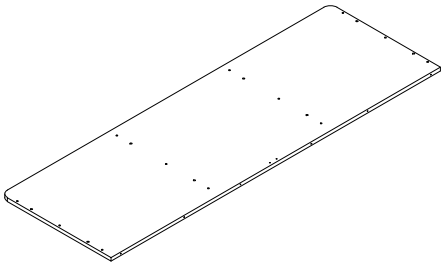


A
TOP
Qty:1

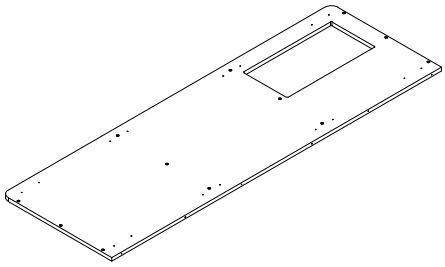


B
BOTTOM
Qty:1

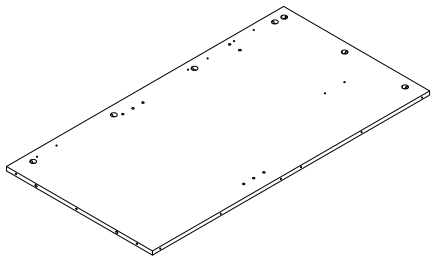


C
LEFT SIDE PANEL
Qty:1

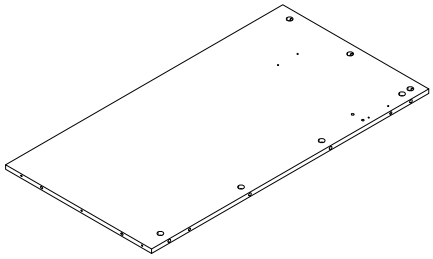


D
RIGHT SIDE PANEL
Qty:1

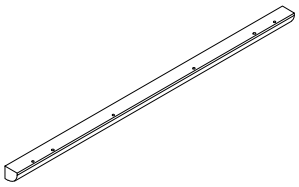


E
FRONT VERTICAL POST
Qty:1

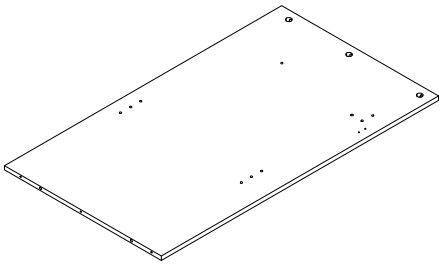


F
LEFT CENTER SIDE PANEL
Qty:1

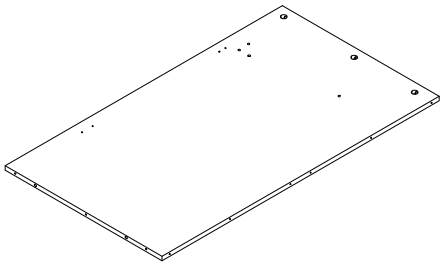


G
RIGHT CENTER SIDE PANEL
Qty:1

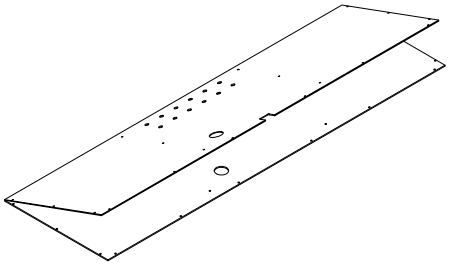


H
BACK PANEL
Qty:1

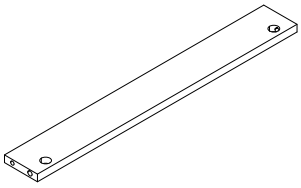


I
CROSS RAIL
Qty:2

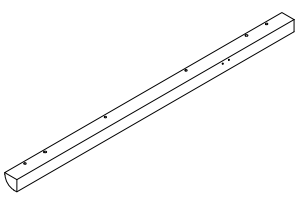

J
FRONT VERTICAL POST
Qty:1

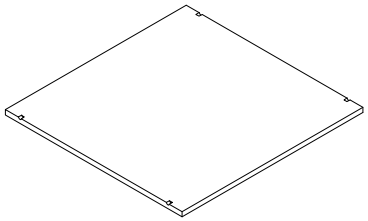


K
ADJUSTABLE SHELF
Qty:1

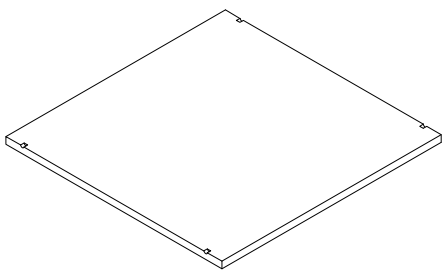

L
ADJUSTABLE SHELF
Qty:1


Board Identification

Not actual size

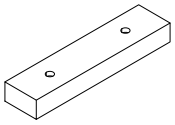


M

SUPPORT BLOCK
Qty:1

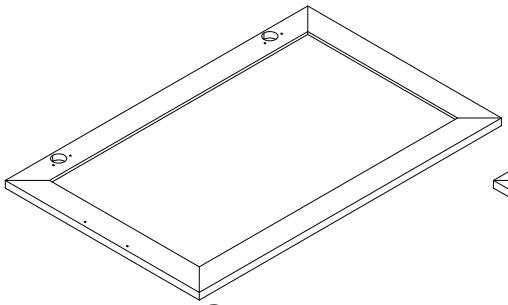


N

DOOR
Qty:1

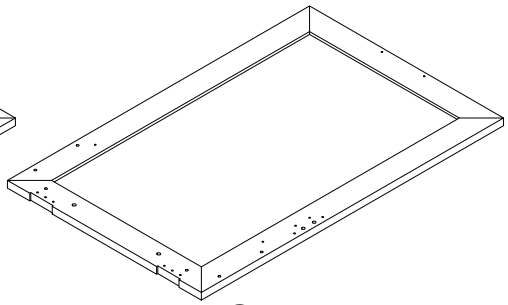


O

FLAP
Qty:1

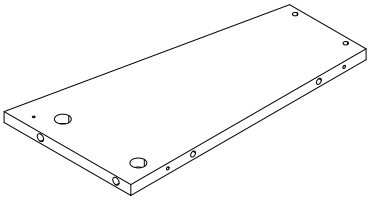


P

INNER LEFT SIDE PANEL
Qty:1

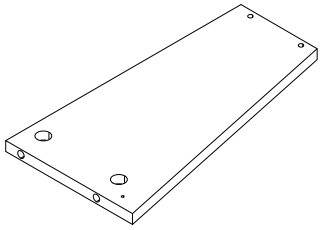


Q

INNER RIGHT SIDE PANEL
Qty:1

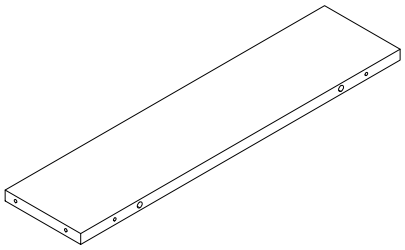


R

INNER BACK PANEL
Qty:1

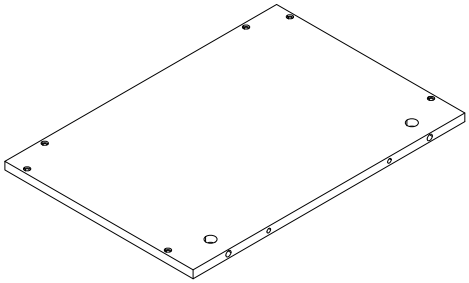


S

INNER BOTTOM
Qty:1

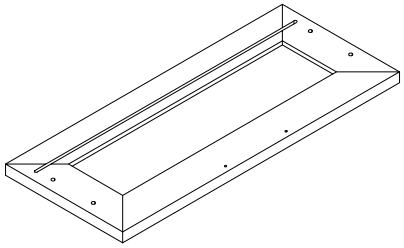


T

DRAWER FRONT
Qty:2

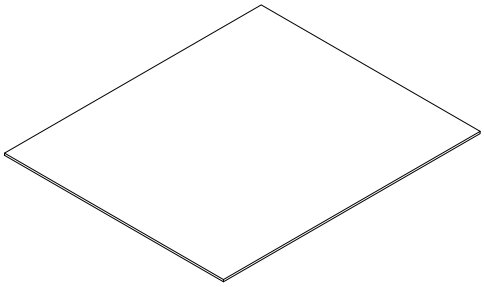


U

DRAWER BOTTOM PANEL
Qty:2

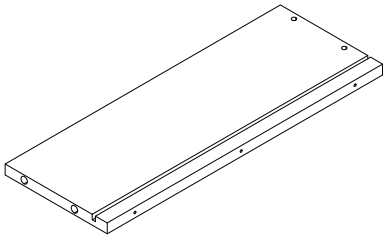


V

DRAWER LEFT PANEL
Qty:2

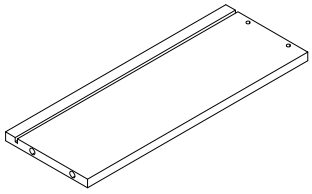

W

DRAWER RIGHT PANEL
Qty:2

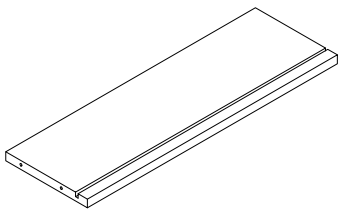


X

DRAWER BACK PANEL
Qty:2


Part List

Not actual size

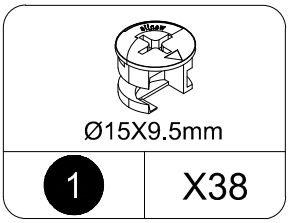
Ø15X9.5mm


1	X38

CAM LOCK
spare:1

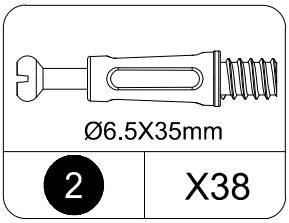
Ø6.5X35mm


2	X38

CAM BOLT
spare:1

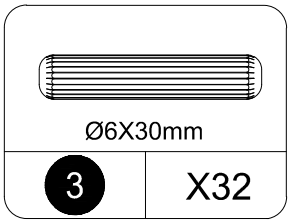
Ø6X30mm


3	X32

WOODEN DOWEL
spare:2

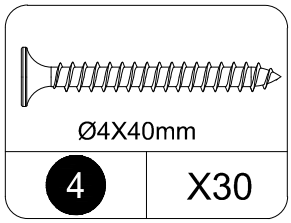
Ø4X40mm


4	X30

SCREW
spare:1

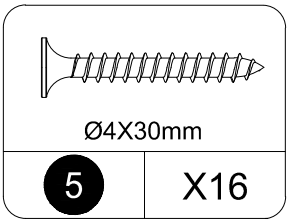
Ø4X30mm


5	X16

SCREW
spare:1

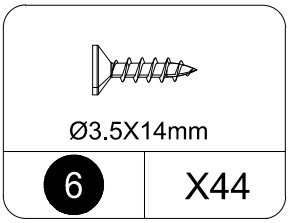
Ø3.5X14mm


6	X44

SCREW
spare:2

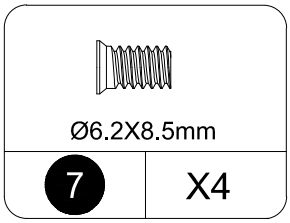
Ø6.2X8.5mm


7	X4

SCREW
spare:1

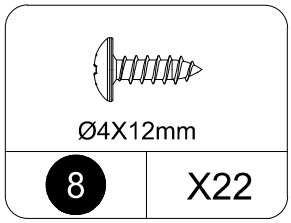
Ø4X12mm


8	X22

SCREW
spare:1

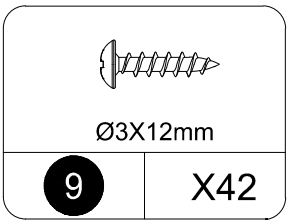
Ø3X12mm


9	X42

SCREW
spare:2

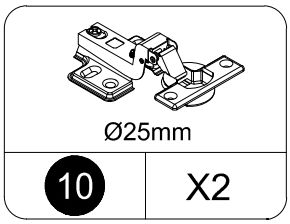
Ø25mm


10	X2

HINGE

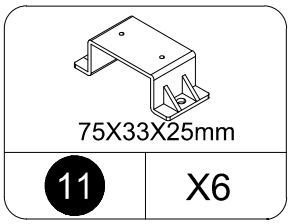
75X33X25mm


11	X6

U-BRACKET

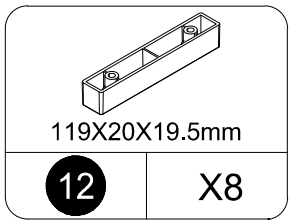
119X20X19.5mm


12	X8

PLASTIC LEG

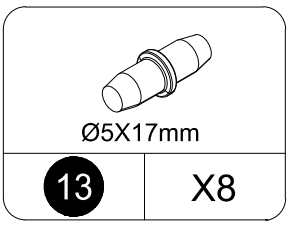
Ø5X17mm


13	X8

SHELF SUPPORT
spare:1

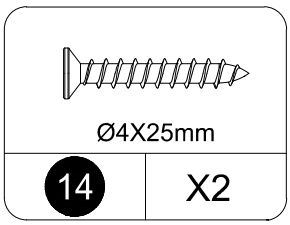
Ø4X25mm


14	X2

SCREW

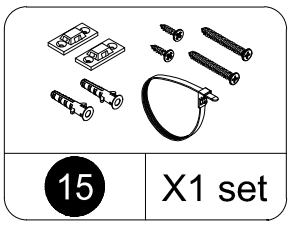


15	X1 set

ANTI-TIPPING HARDWARE

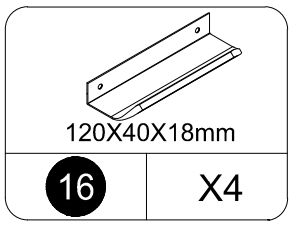
120X40X18mm


16	X4

HANDLE

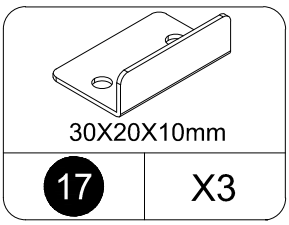
30X20X10mm


17	X3

STOPPER

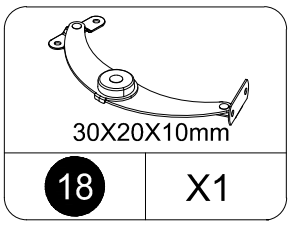
30X20X10mm


18	X1

LEFT HINGE

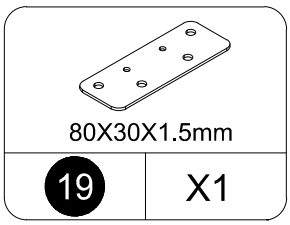
80X30X1.5mm

19	X1

FLAT IRON SHEET

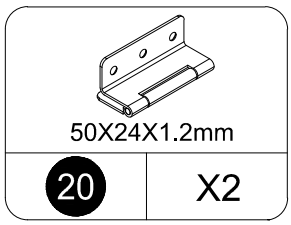

50X24X1.2mm

20	X2


HINGLE

Part List


Not actual size

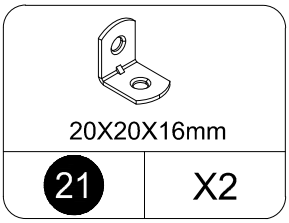


L -SHAPED IRON

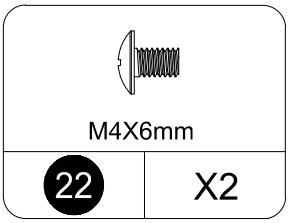


SCREW
spare:1

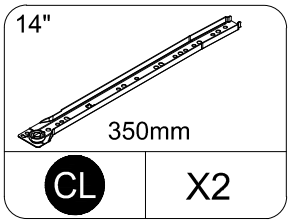


LEFT CABINET MEMBER

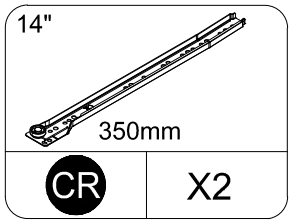

RIGHT CABINET MEMBER

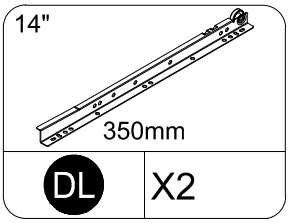

LEFT DRAWER RUNNER

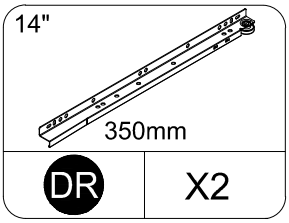


RIGHT DRAWER RUNNER


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

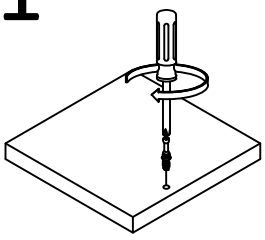

2

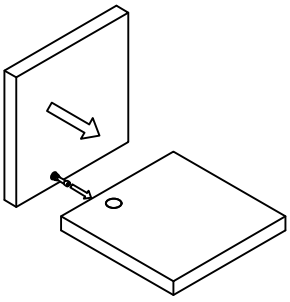


3

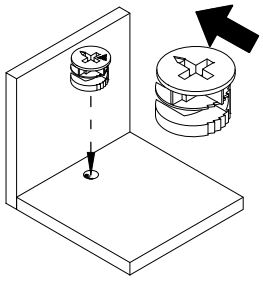


The opening must point toward the edge of the board

4

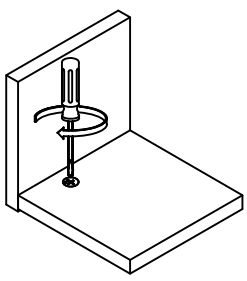



Board Identification


Not actual size

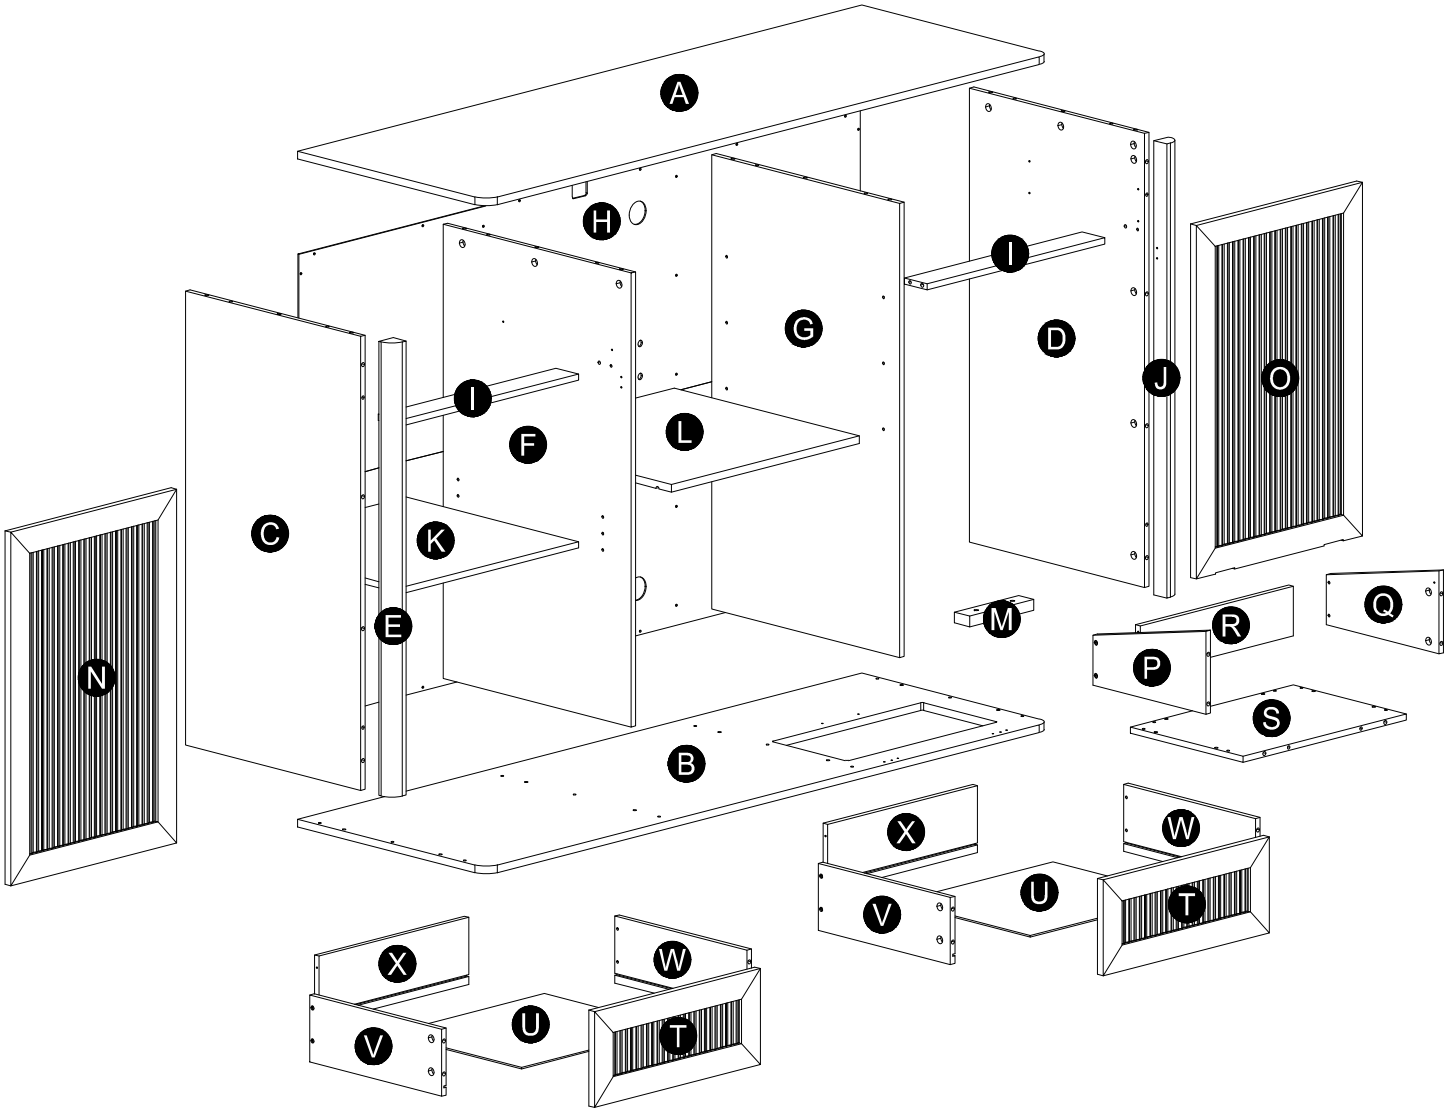


STEP1

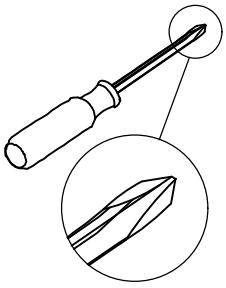


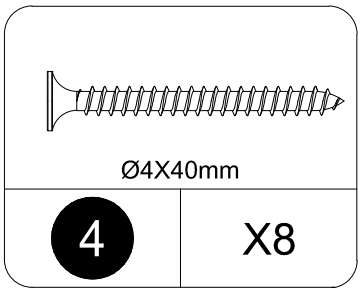

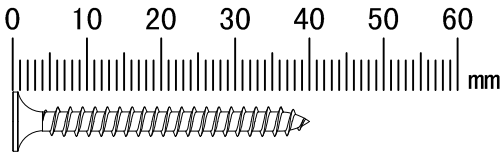


⚠ Before assembly, verify screw length.

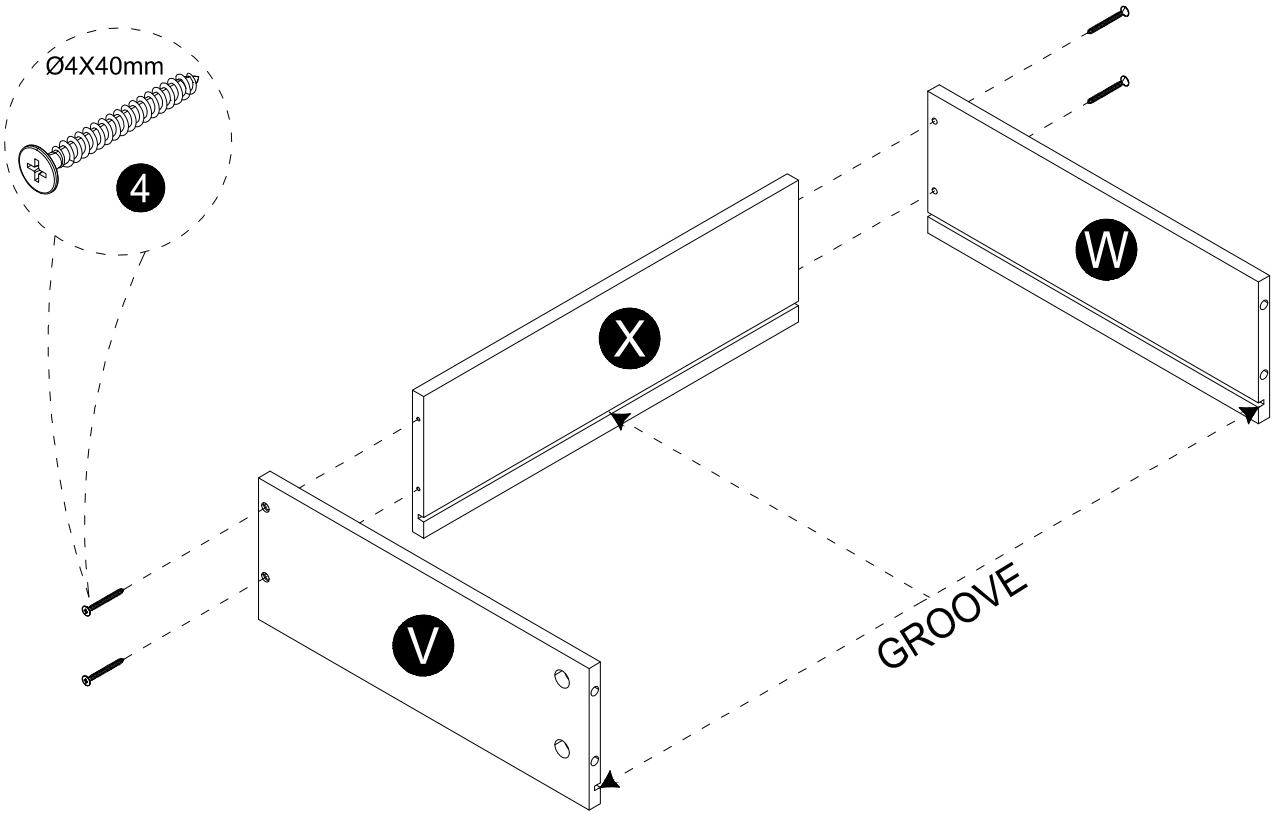


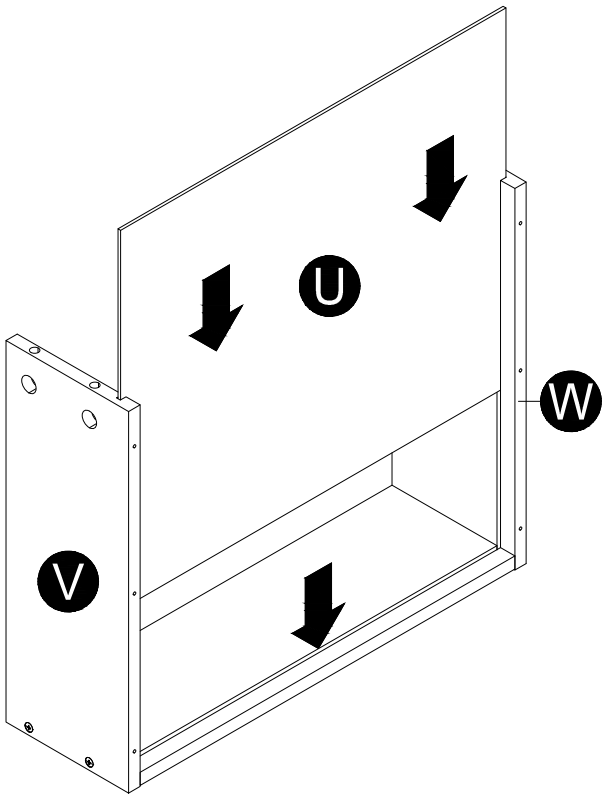



x 2

STEP2

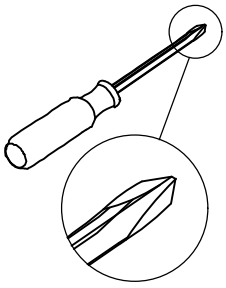

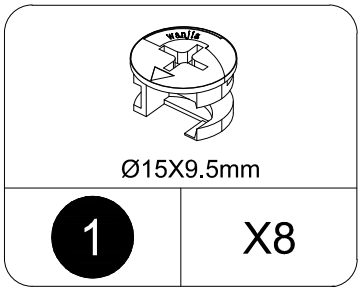


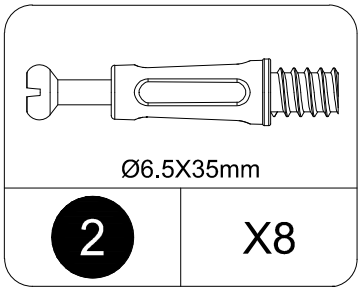


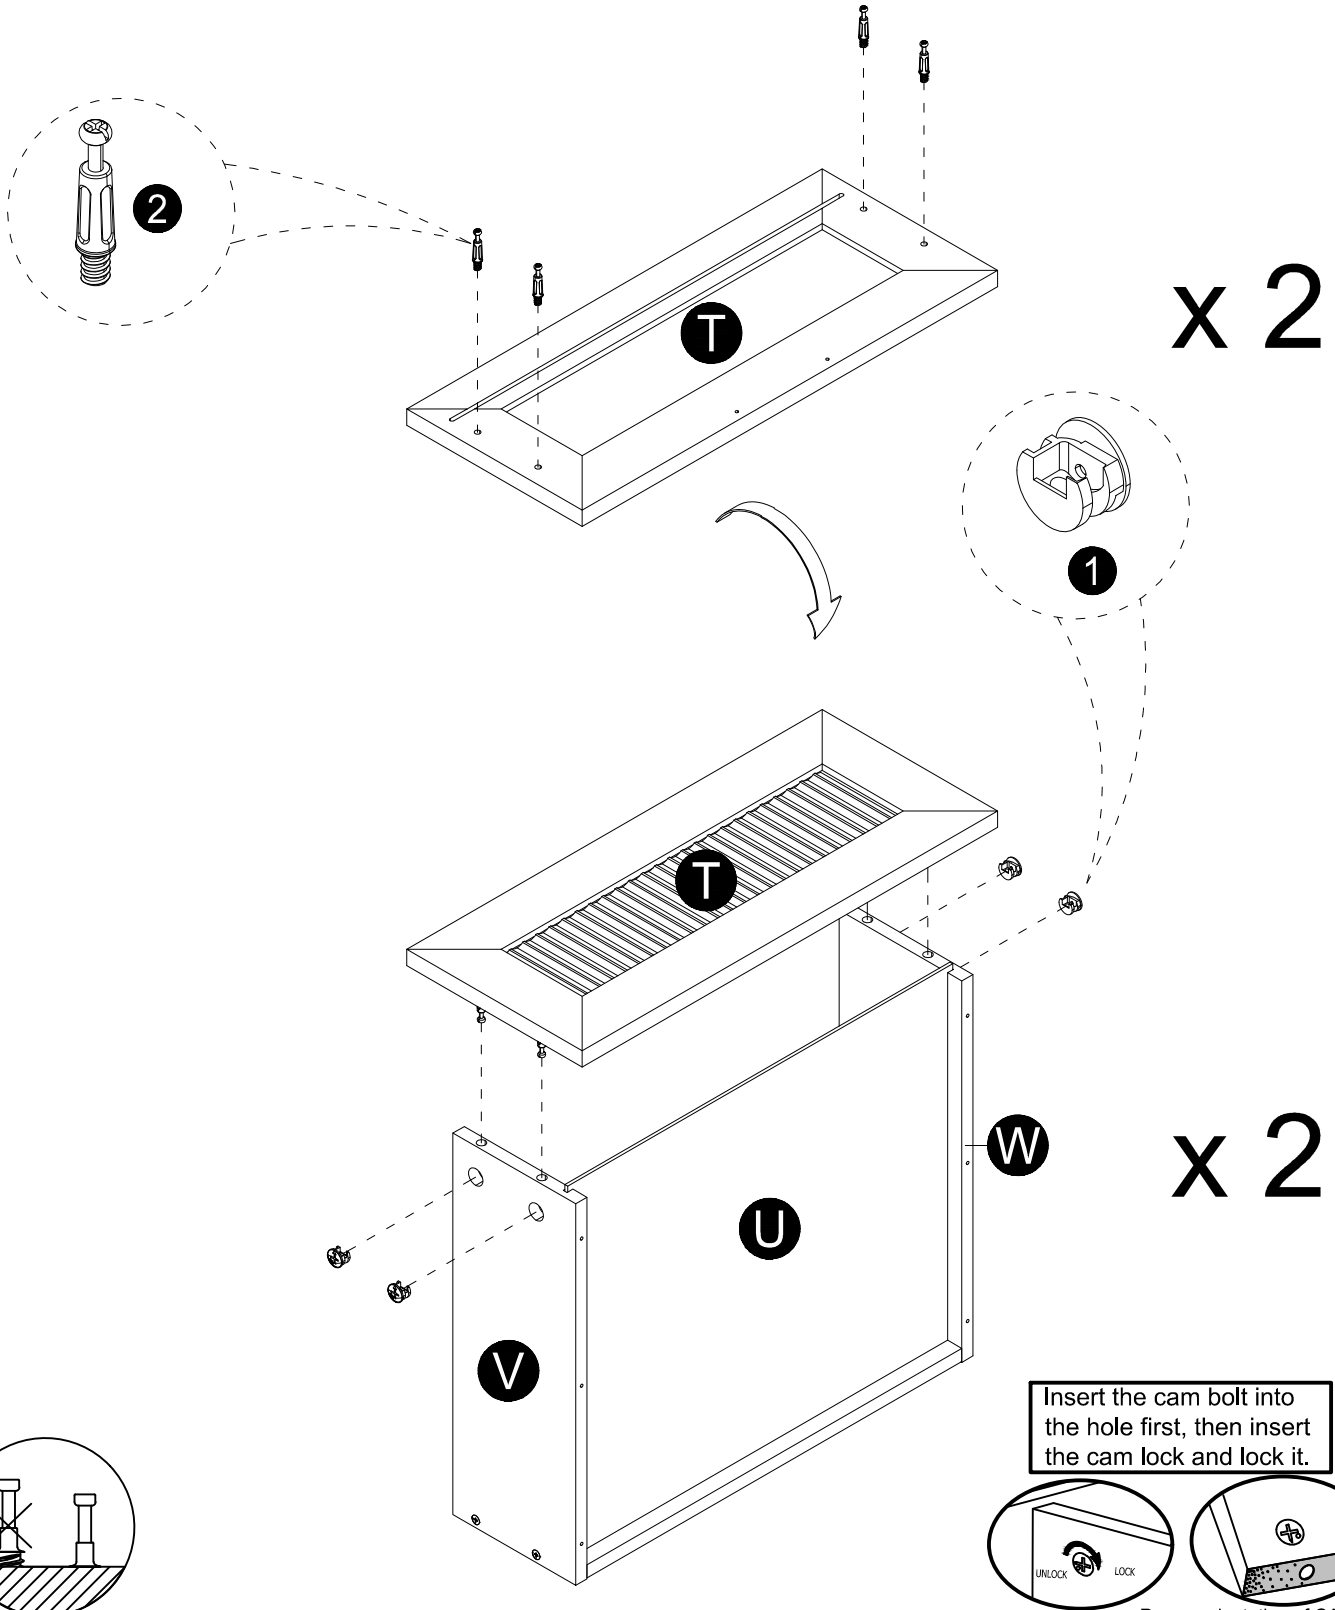

Proper orientation of CAM LOCK


STEP3

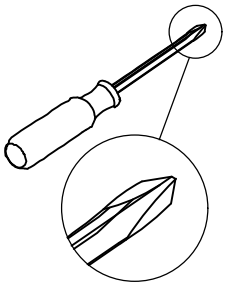




Ø3.5X14mm

6 X12

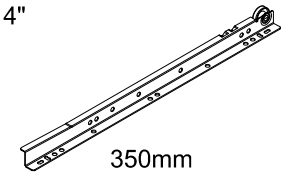

14" 350mm

DL X2

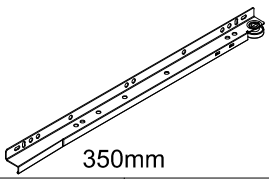


14" 350mm

DR X2


Note the DL or DR stamped label on the slider!


Note:Repeat for all 2 drawers.

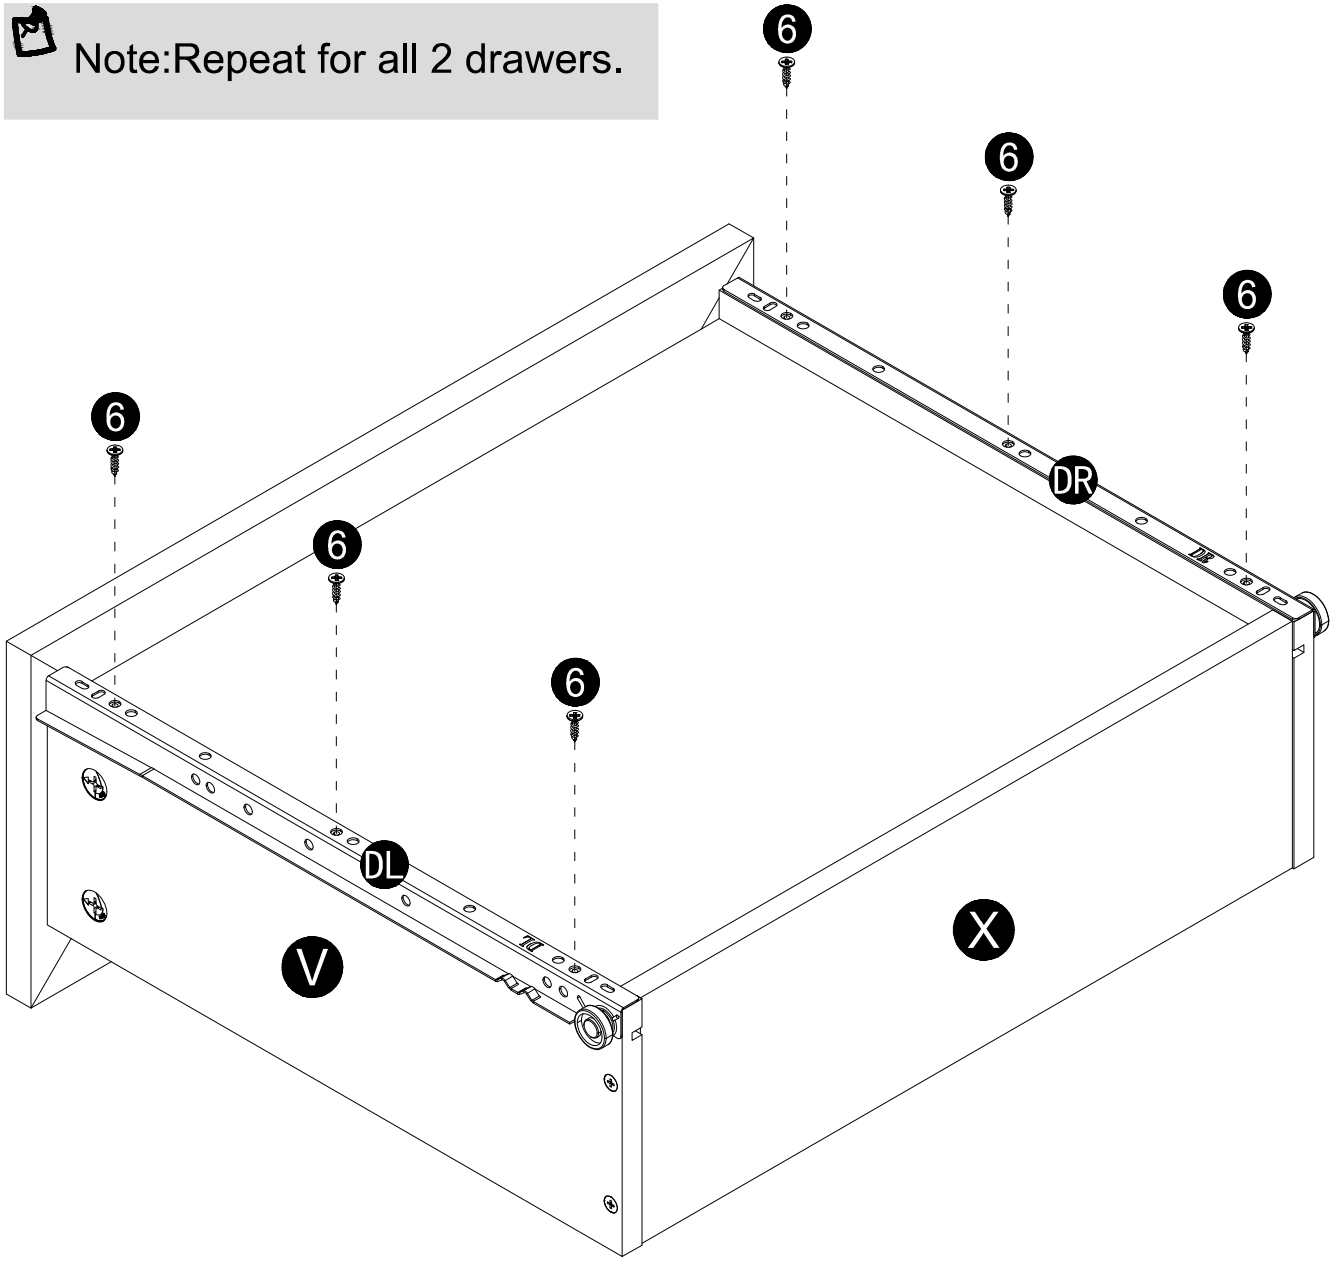



x 2

STEP4

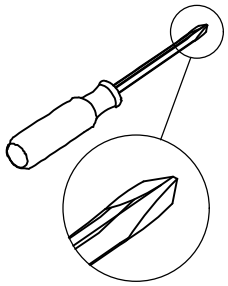


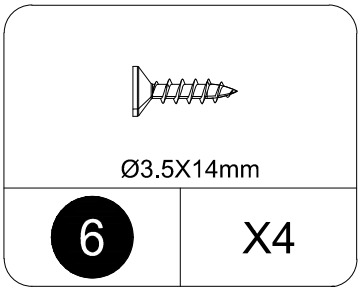


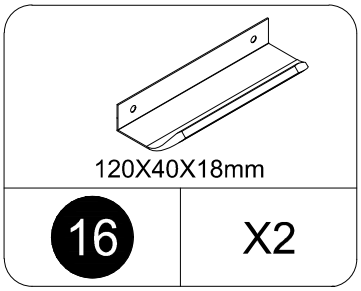


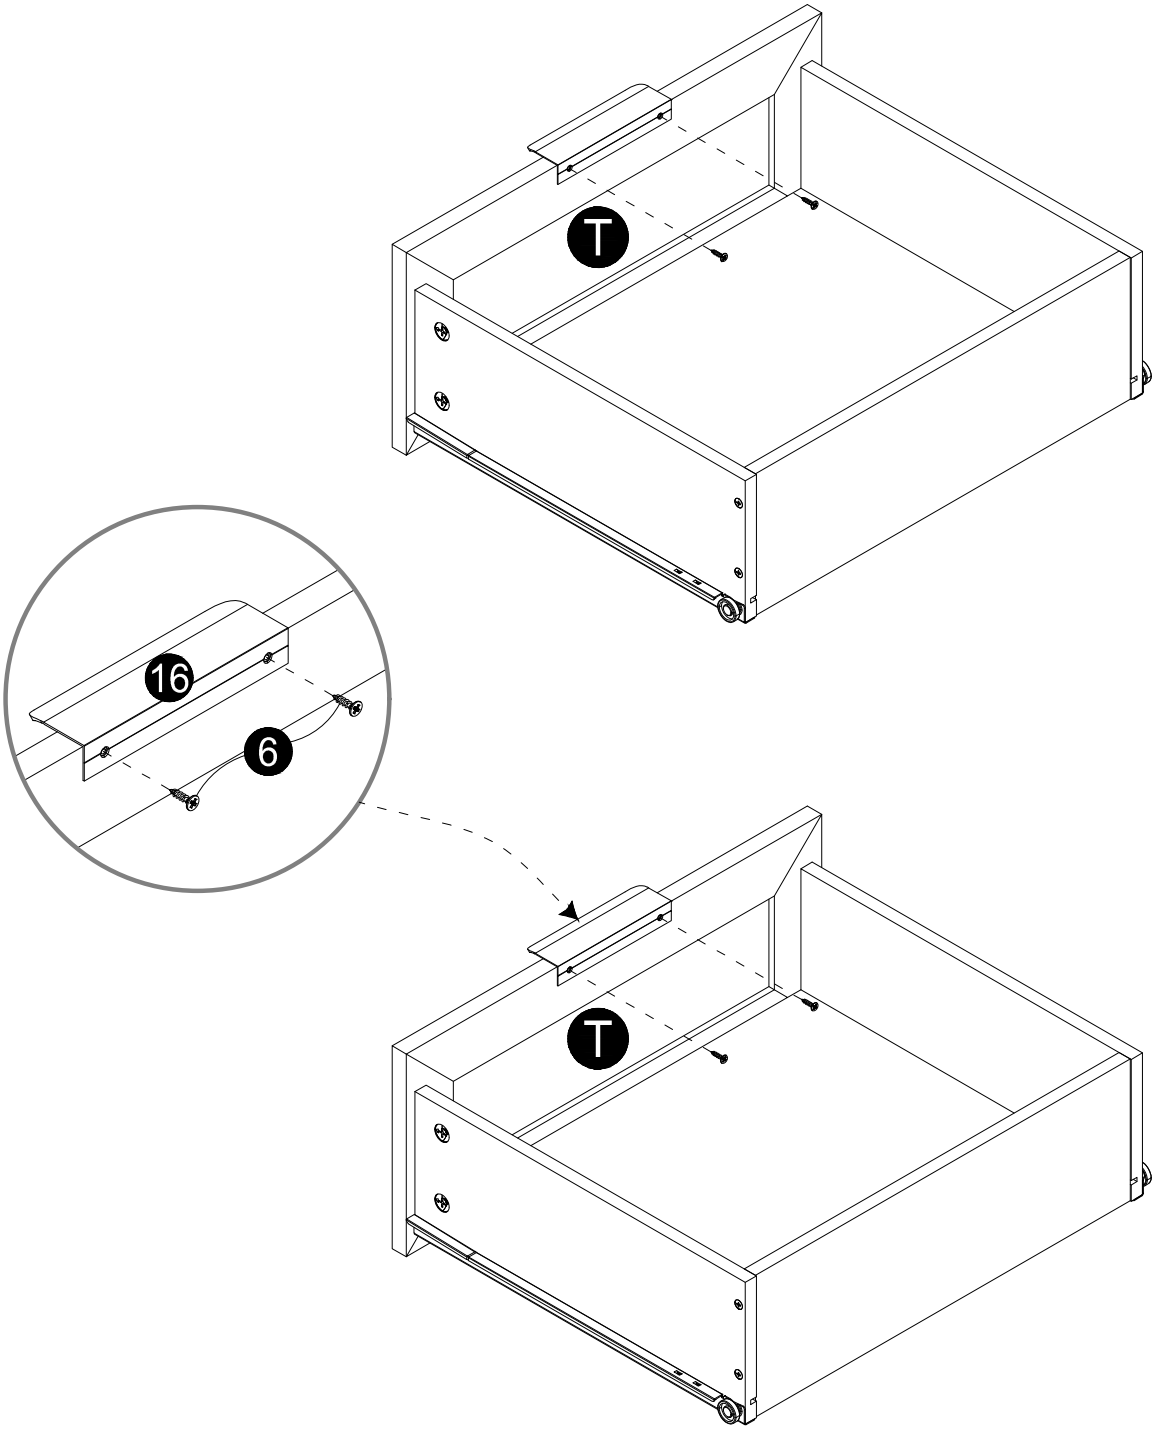



STEP5

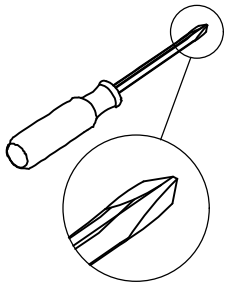

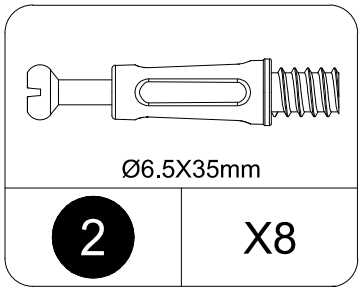


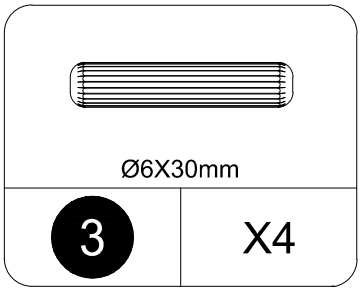


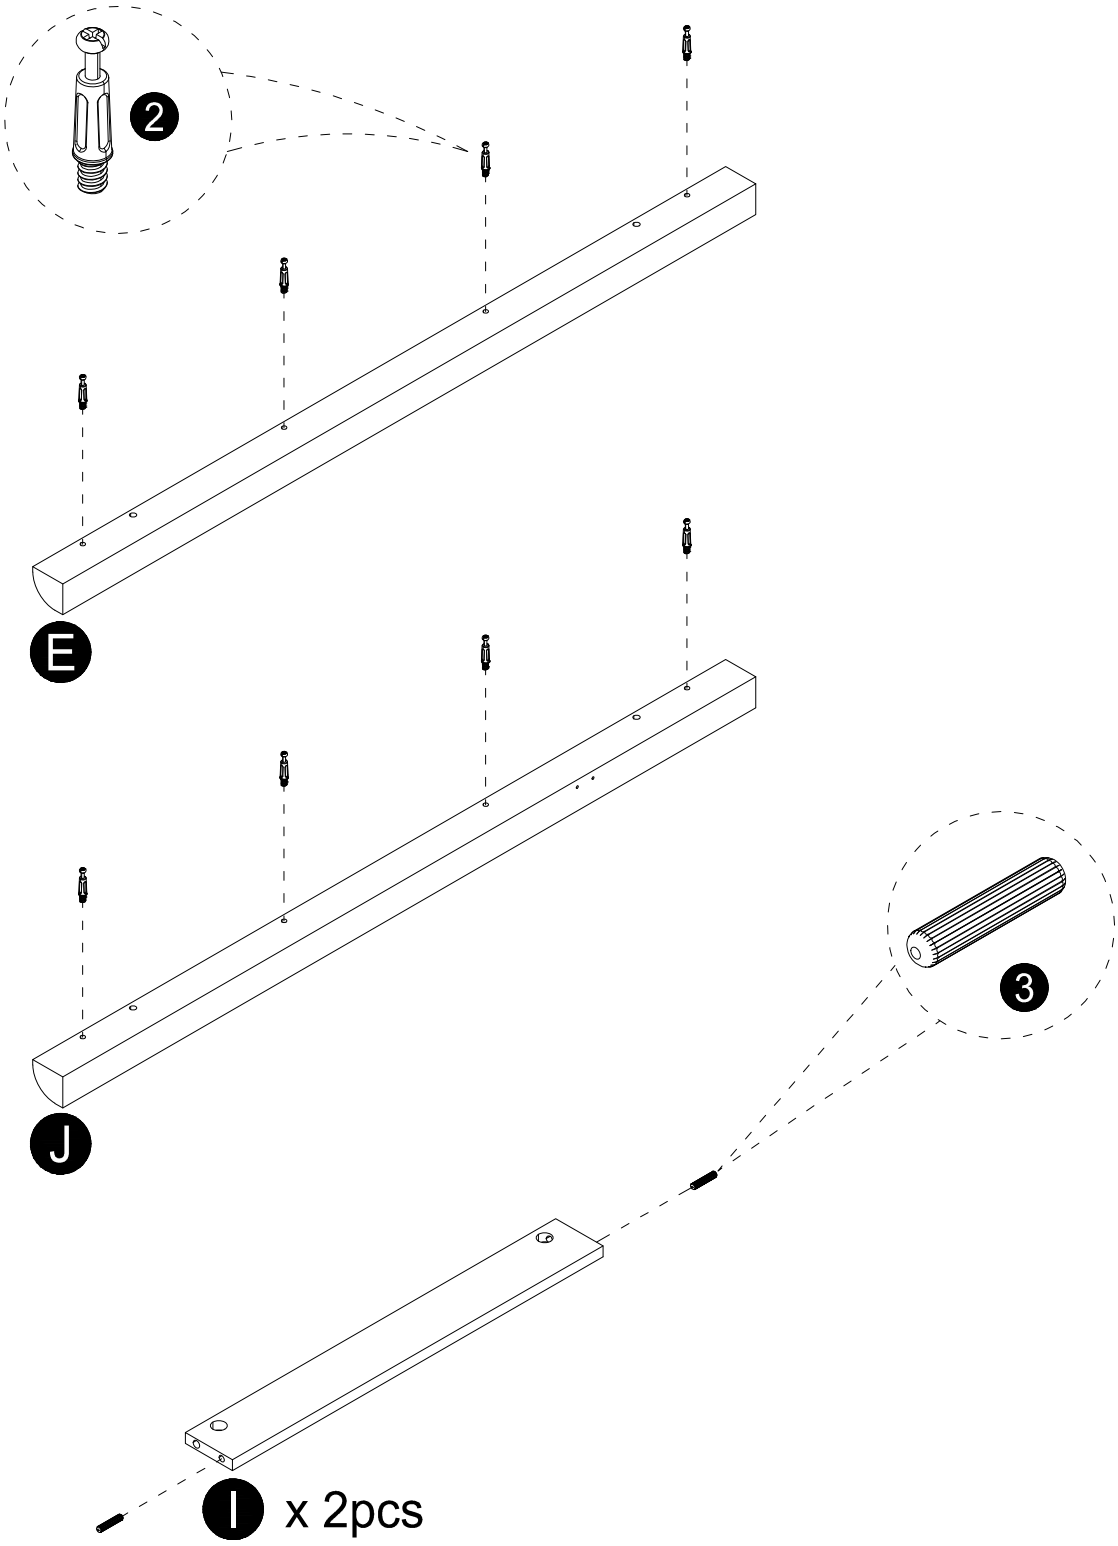


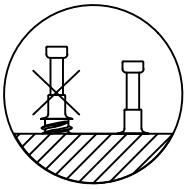



STEP6

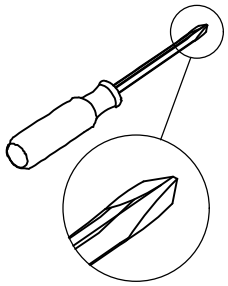

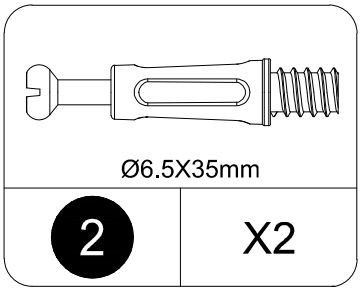


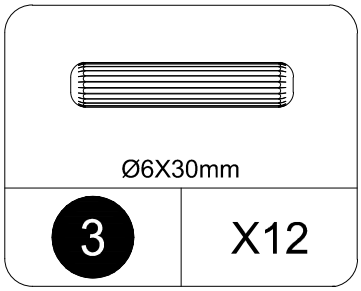


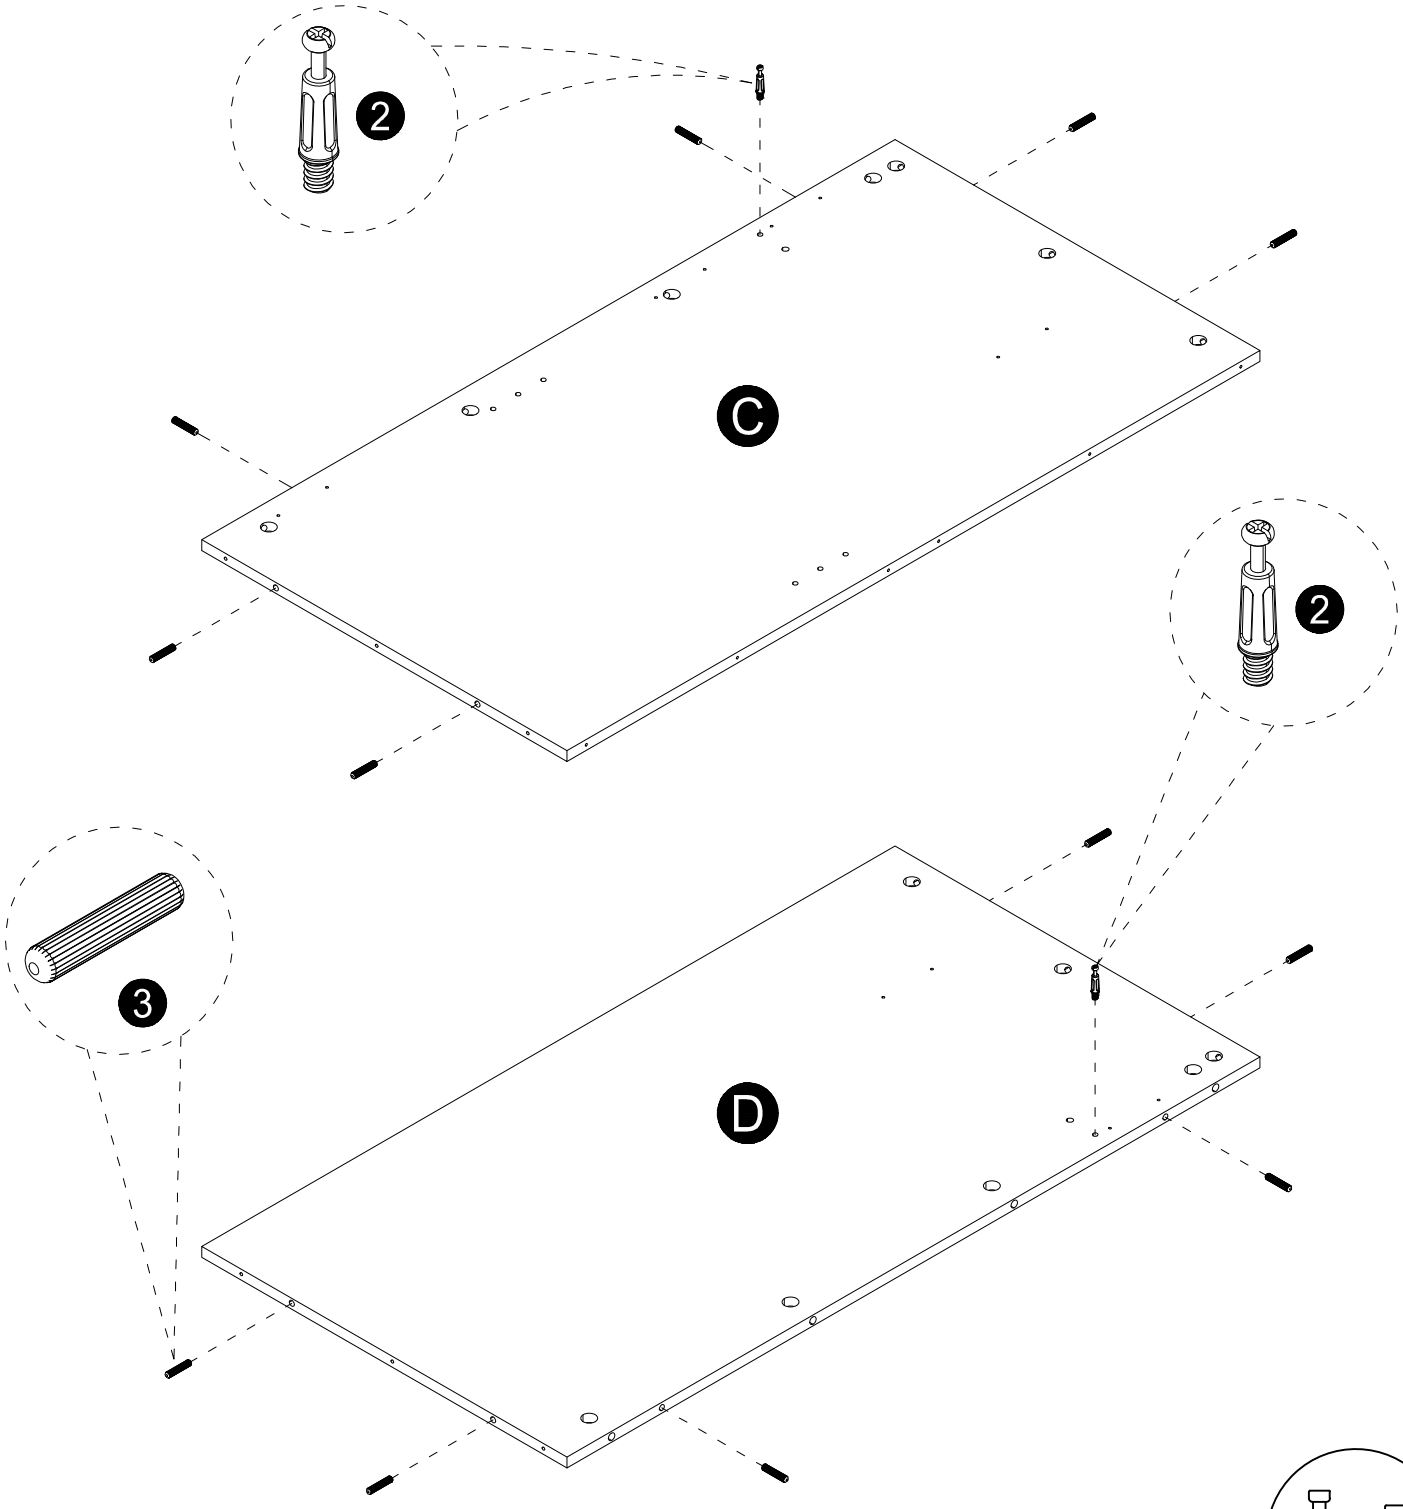


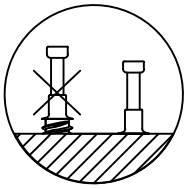



STEP7

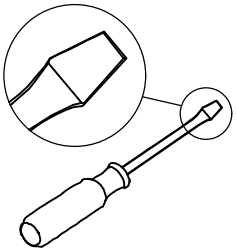


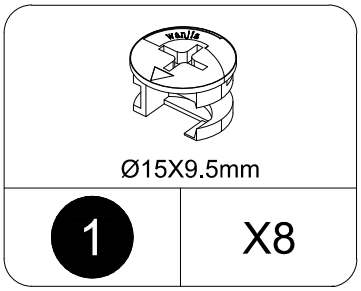

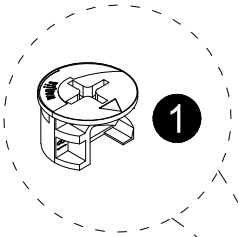

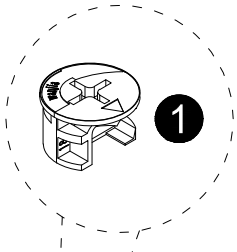

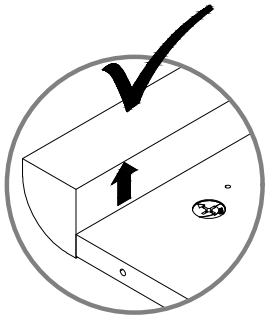


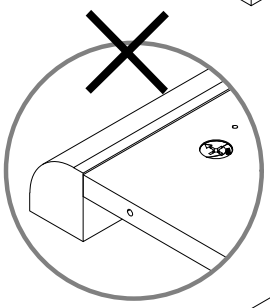

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Proper orientation of CAM LOCK

STEP8




Ø6.5X35mm

2	X12




Ø4X12mm

8	X8

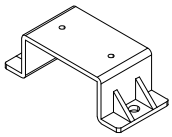


75X33X25mm


11	X4




Ø3.5X14mm


15	X1 set

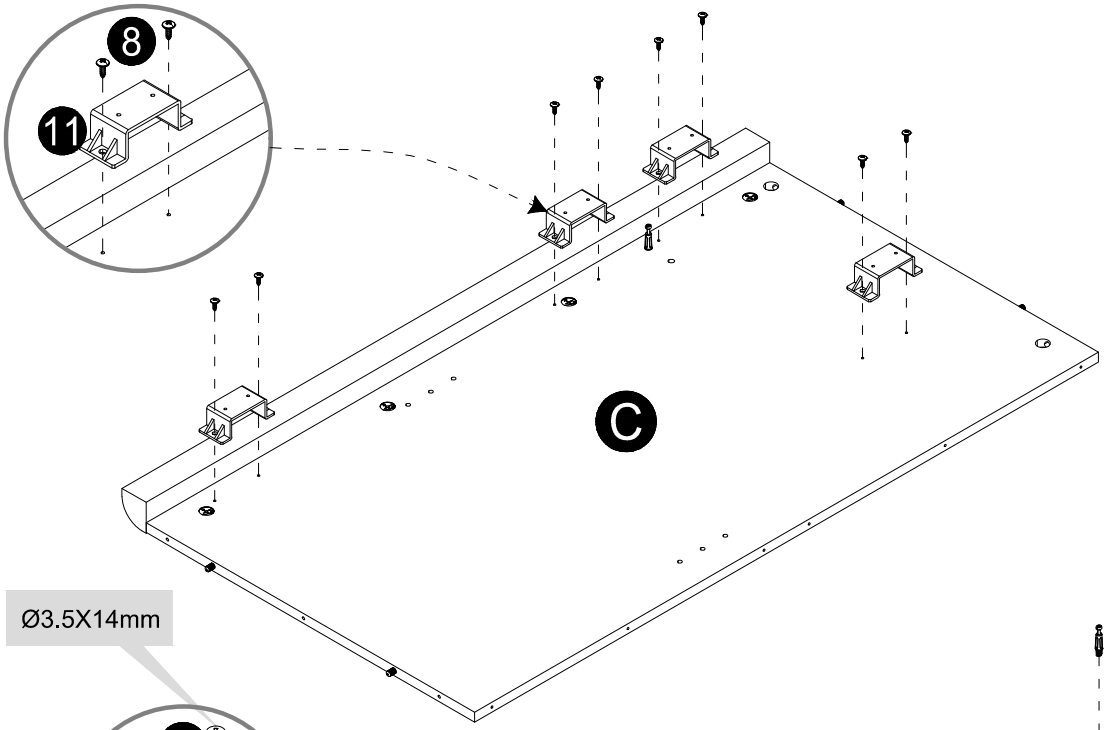

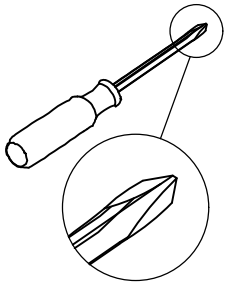

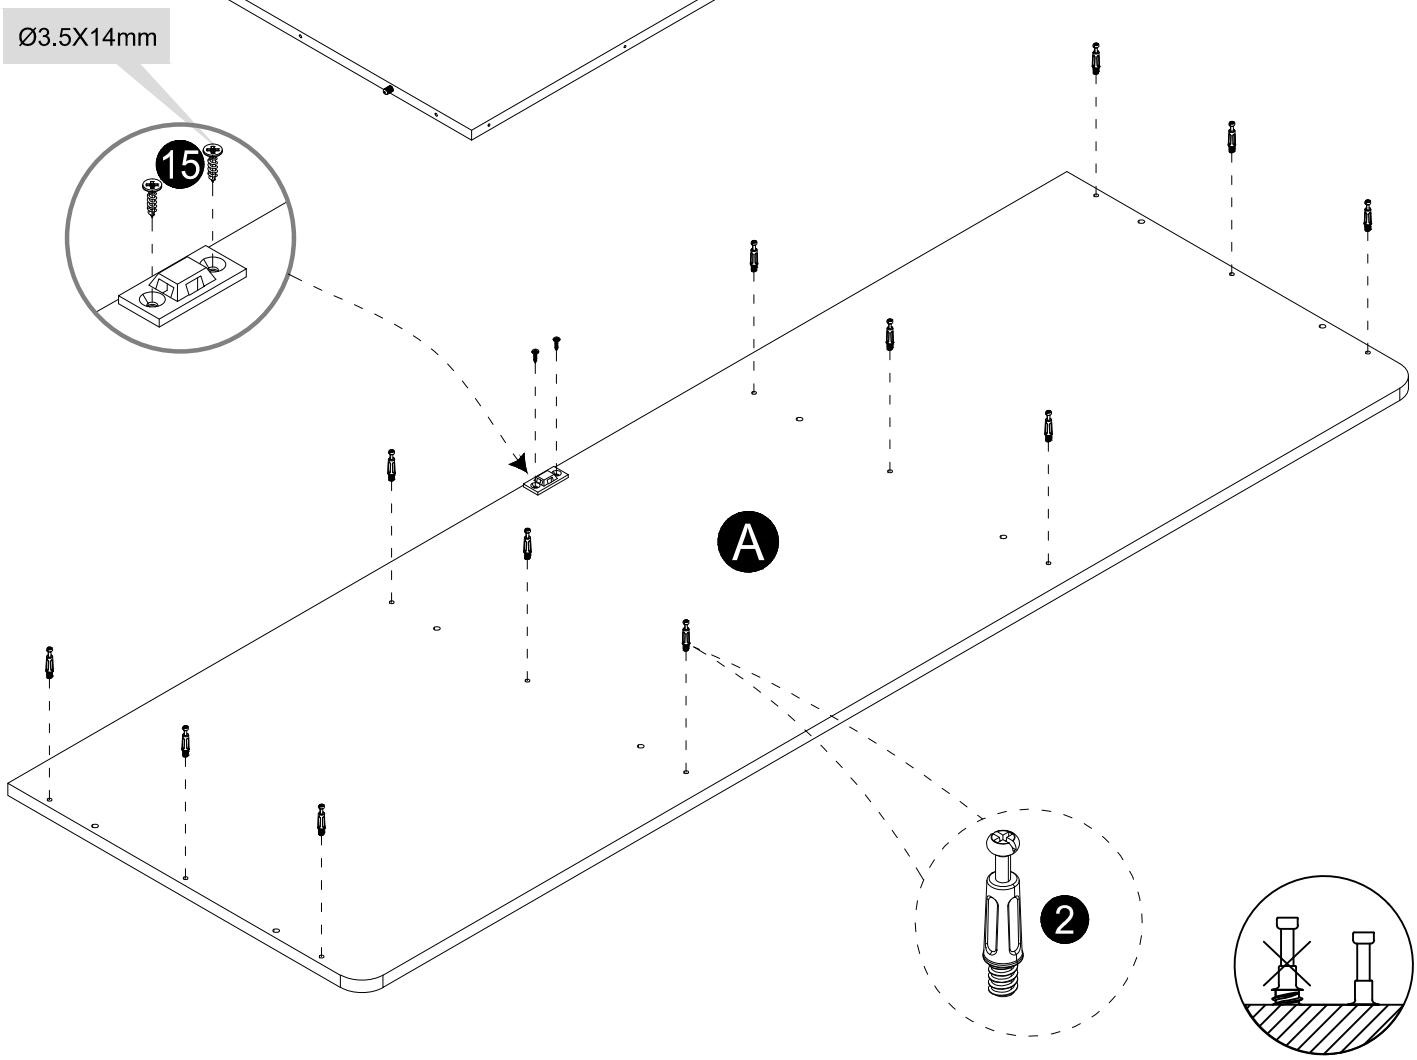


STEP9




Ø4X12mm

8	X4

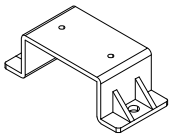


75X33X25mm

11	X2




Ø3X12mm


9	X2





30X20X10mm


17	X1

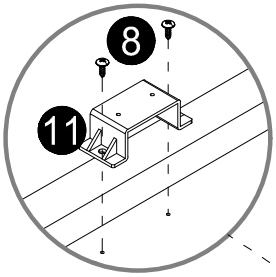

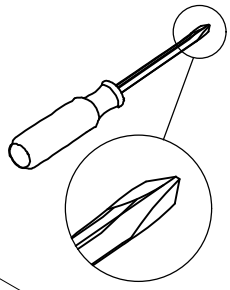


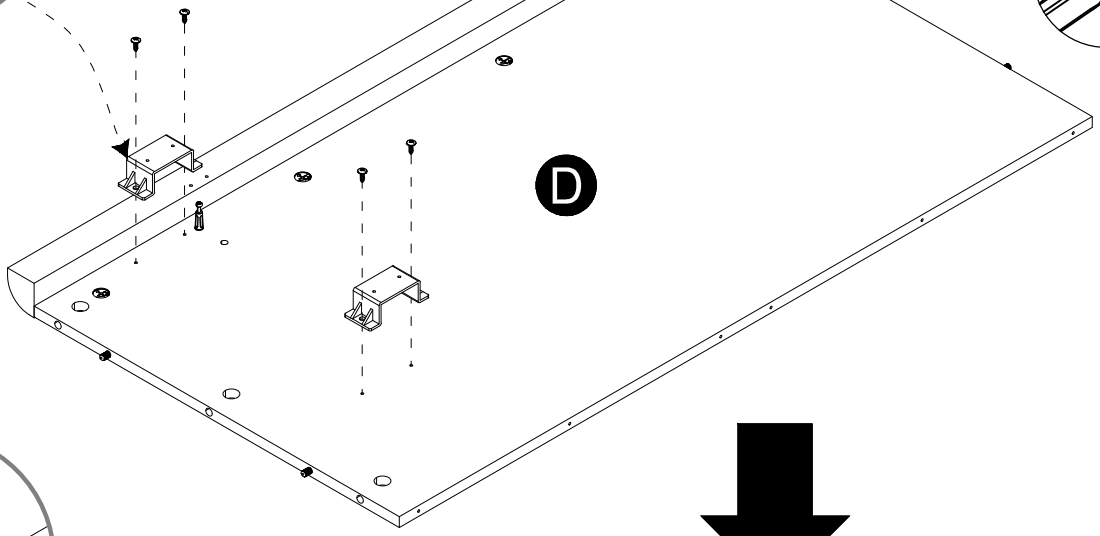

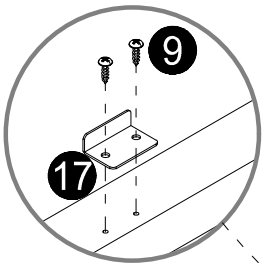

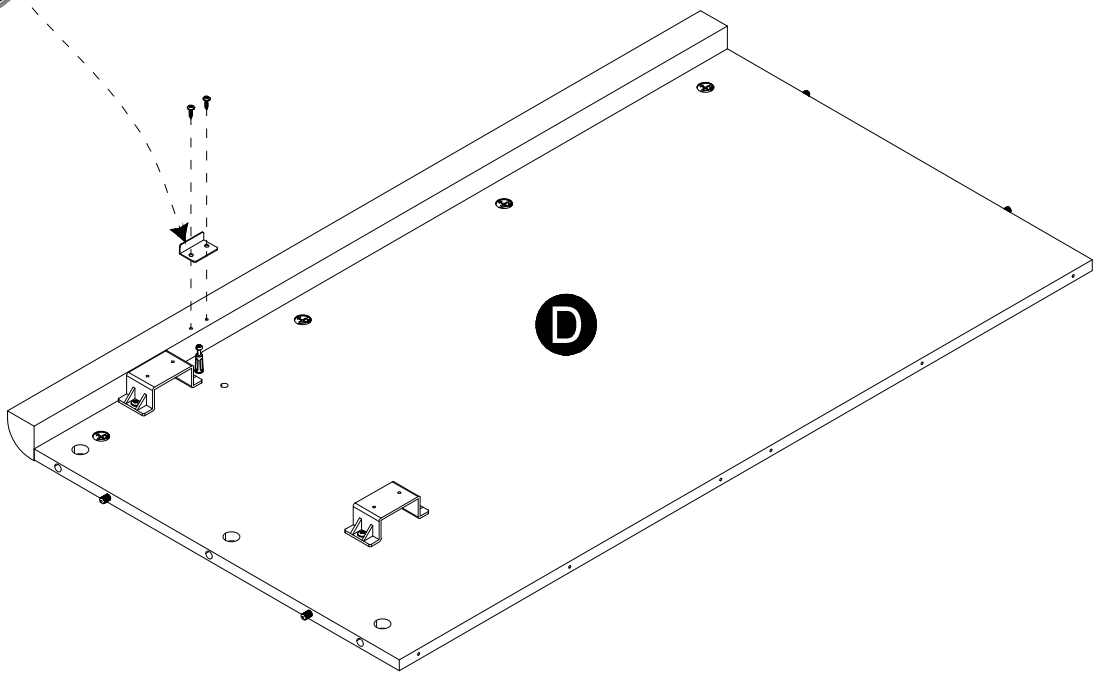

STEP10

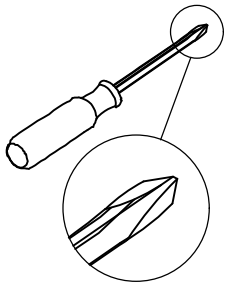



Ø3.5X14mm	
6	X4

14" 350mm	
CL	X1


14" 350mm	
CR	X1


Note the CL or CR stamped label on the slider!

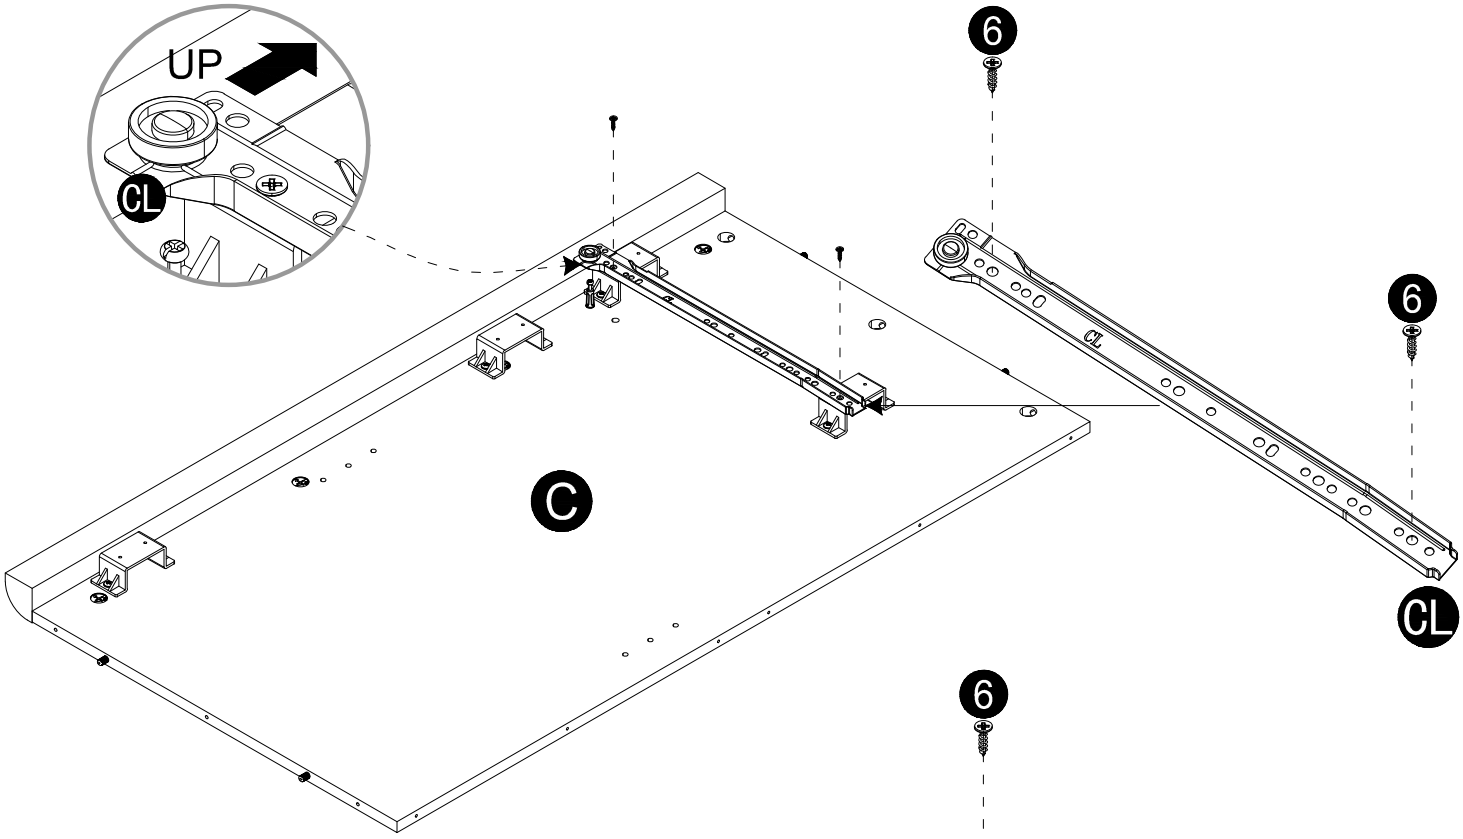


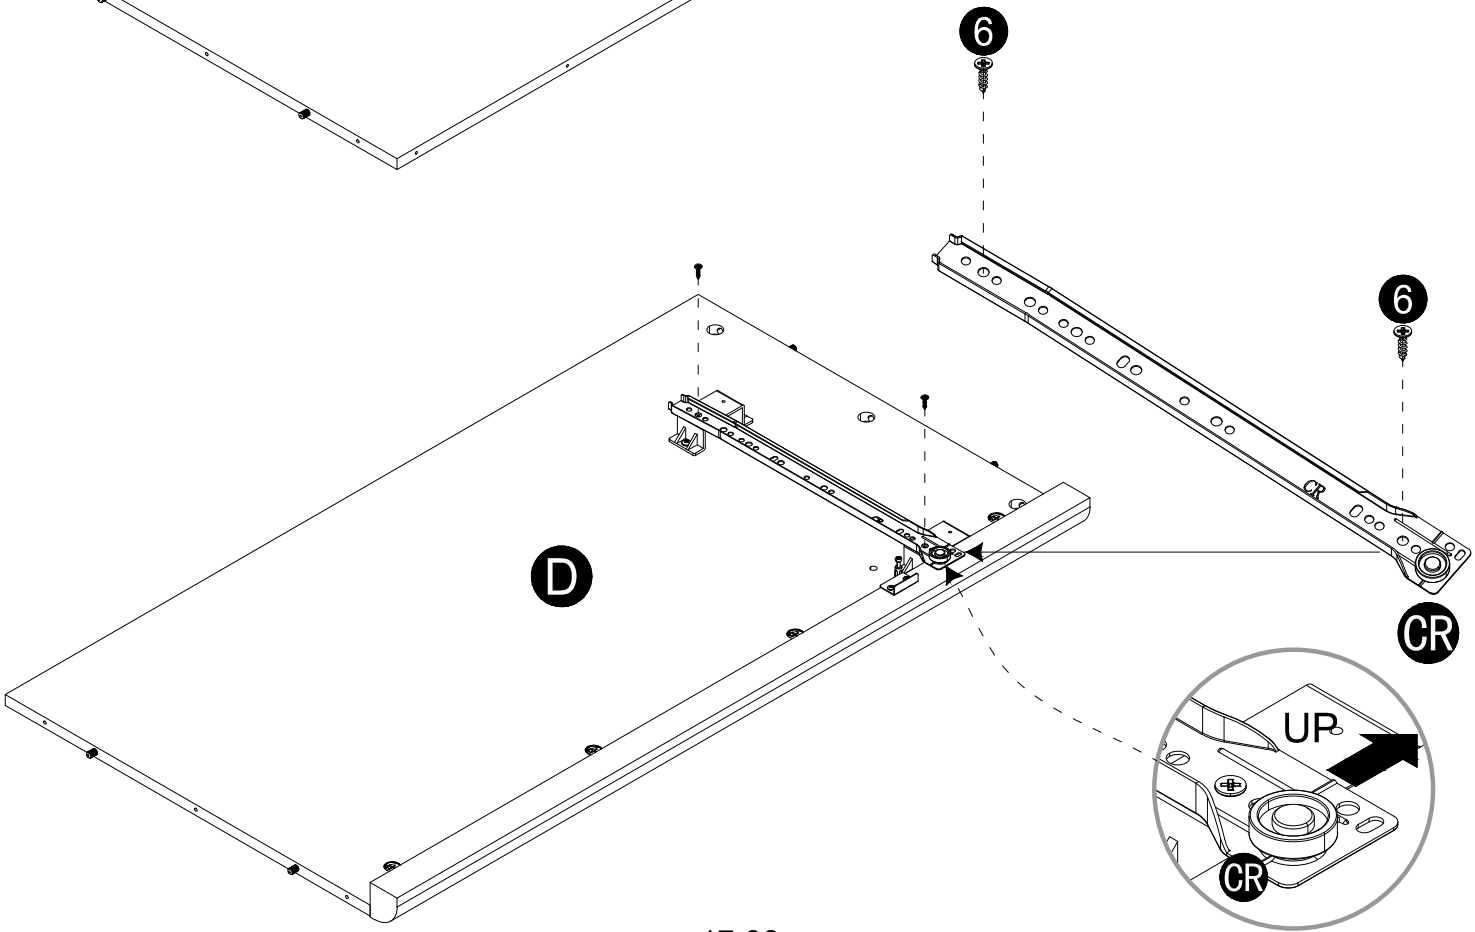


STEP11

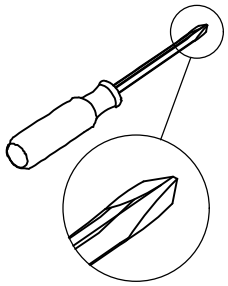


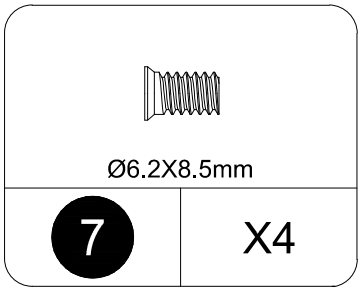

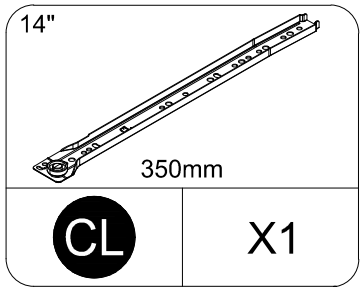


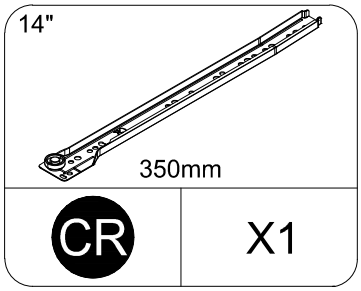

Note the CL or CR stamped label on the slider!

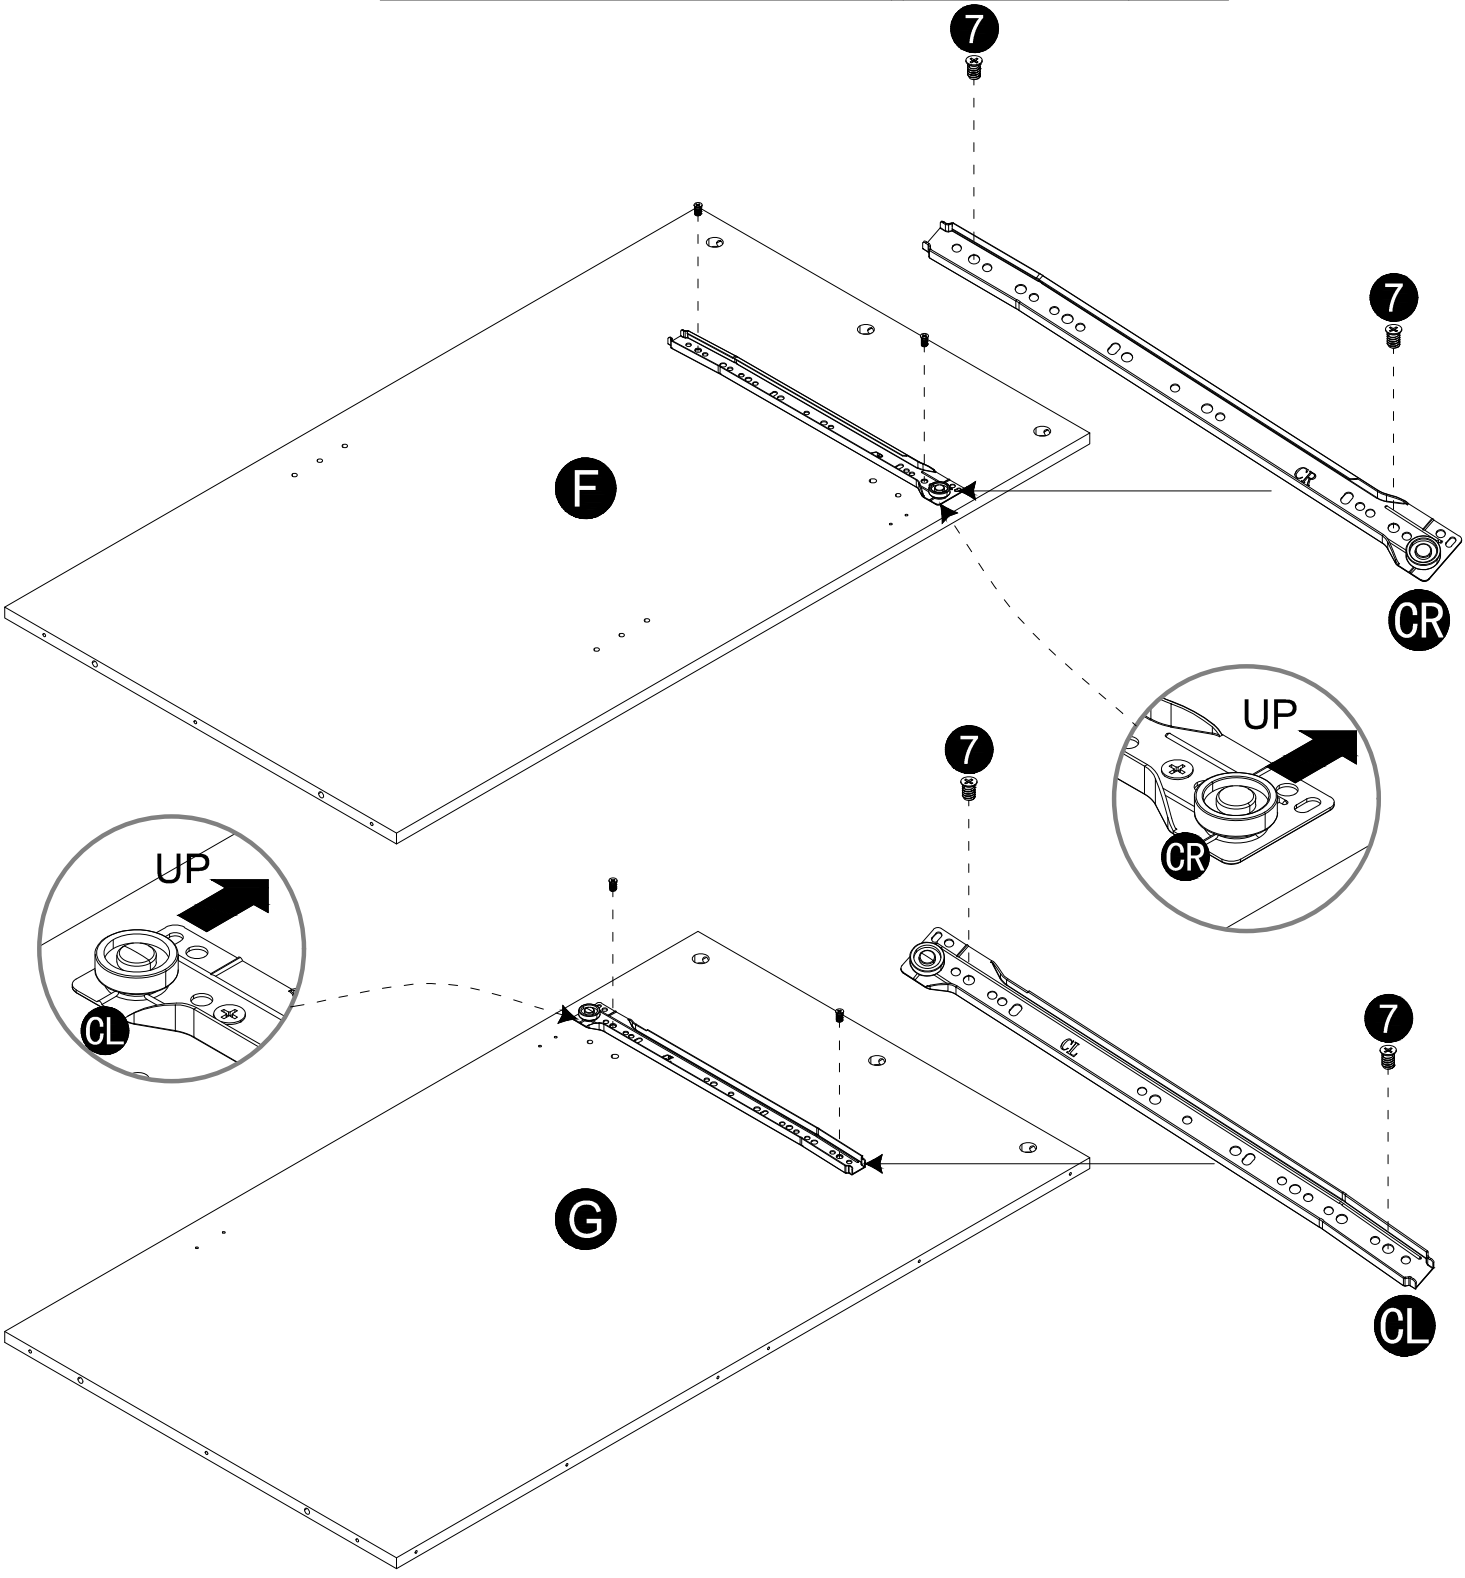

STEP12




Ø6.5X35mm

2	X2




Ø6X30mm

3	X8




Ø3X12mm

9	X4





30X20X10mm


17	X2

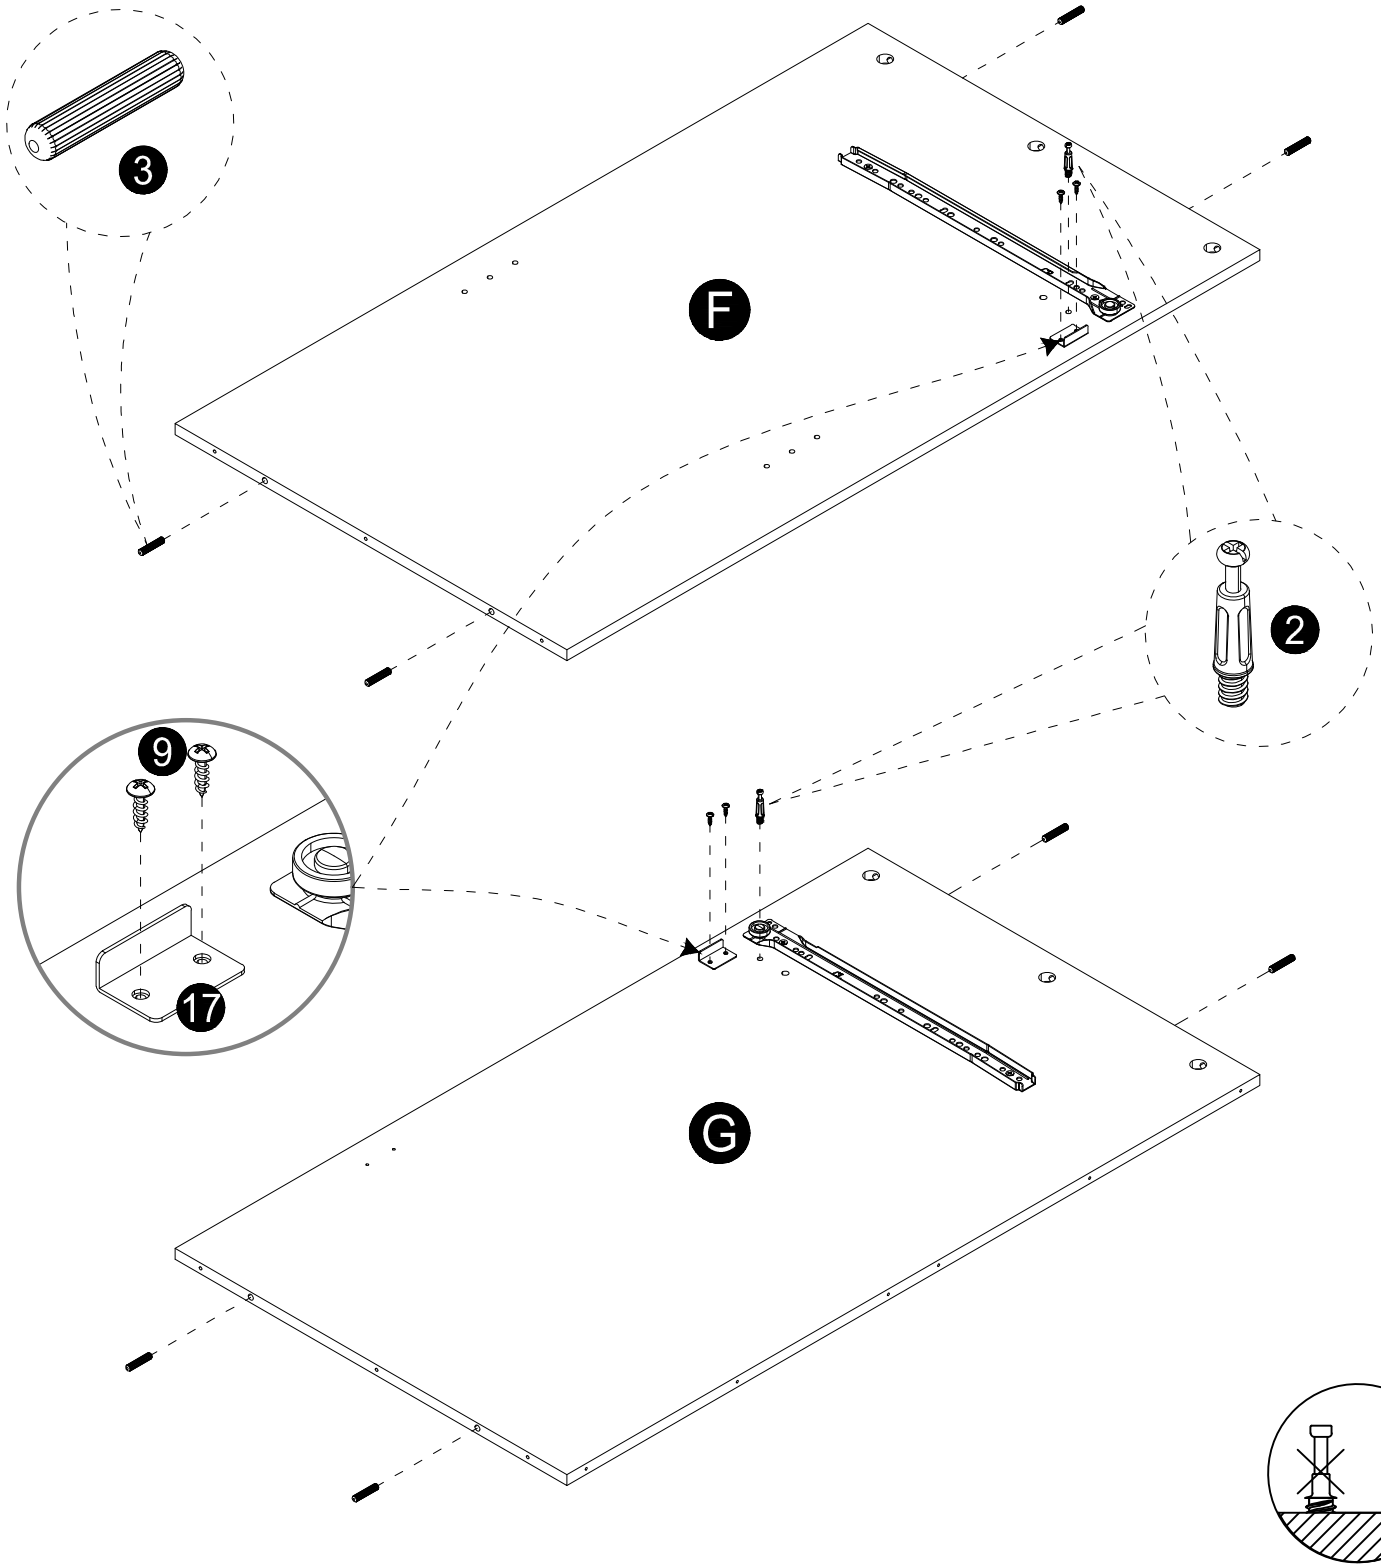


STEP13

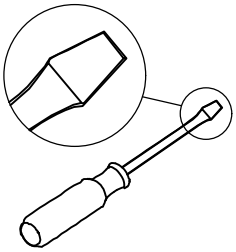

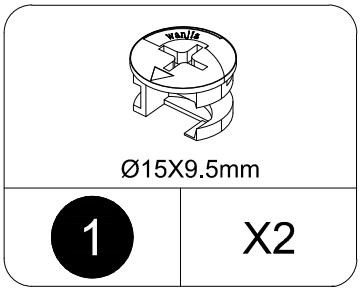

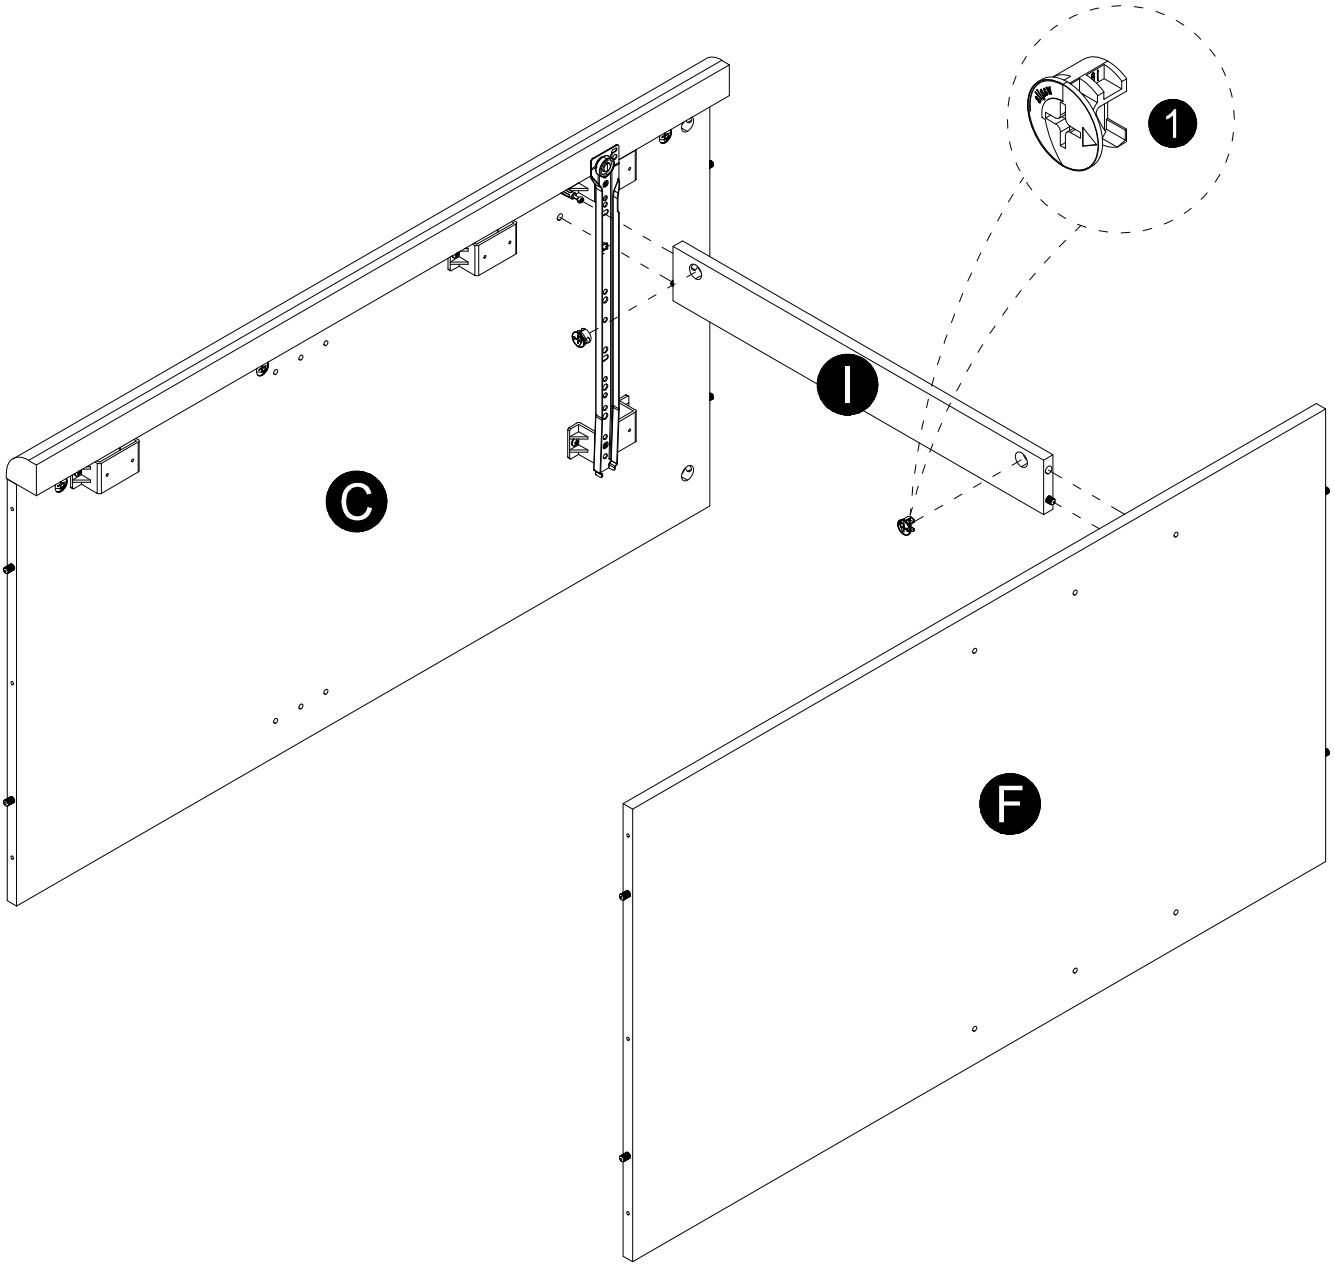



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

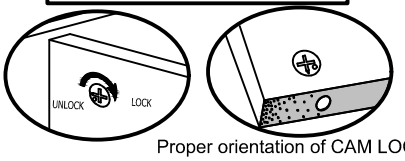


Proper orientation of CAM LOCK


STEP14

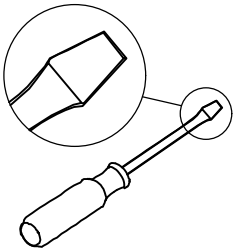

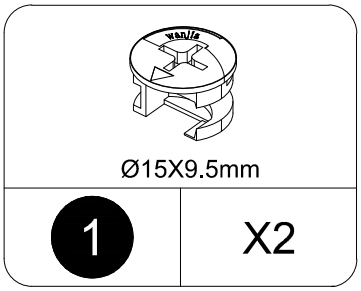

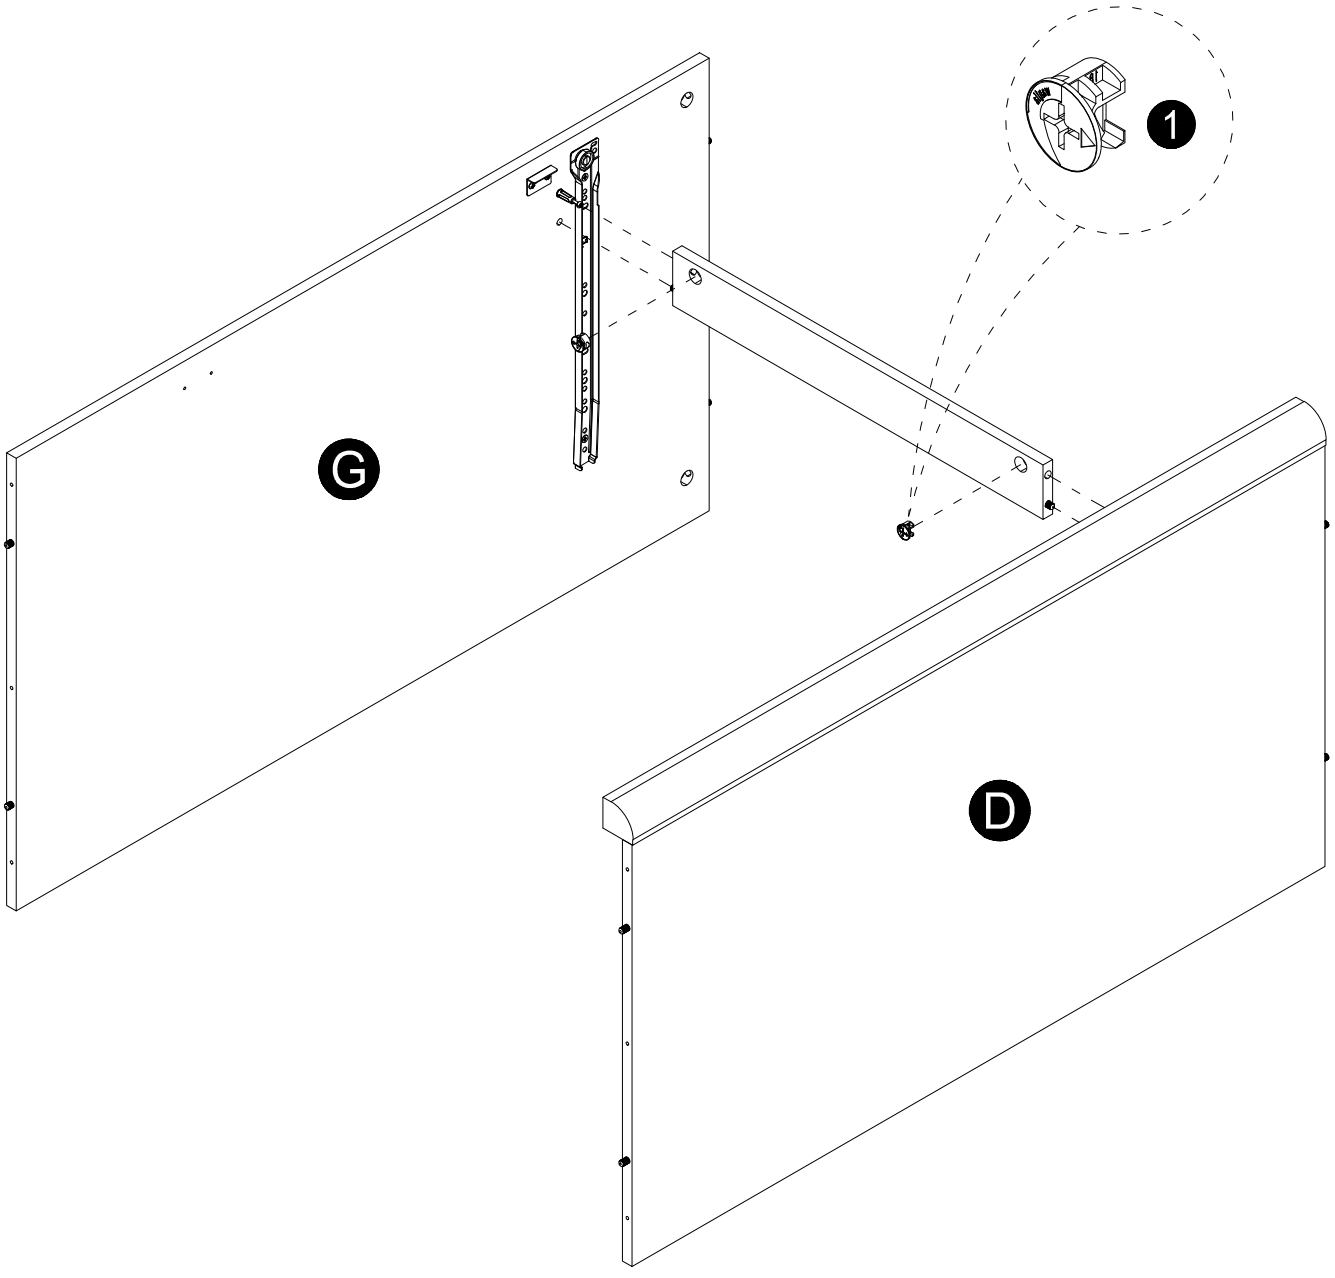



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

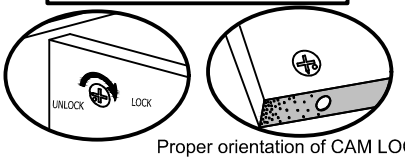


Proper orientation of CAM LOCK


STEP15

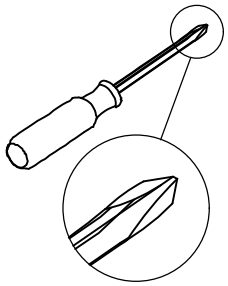

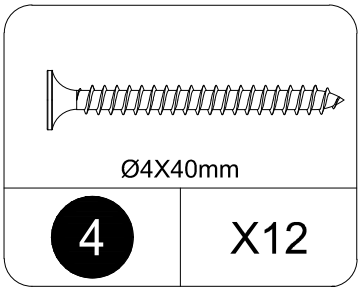


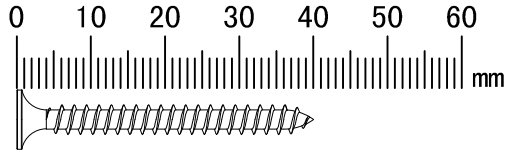


Before assembly, verify screw length.

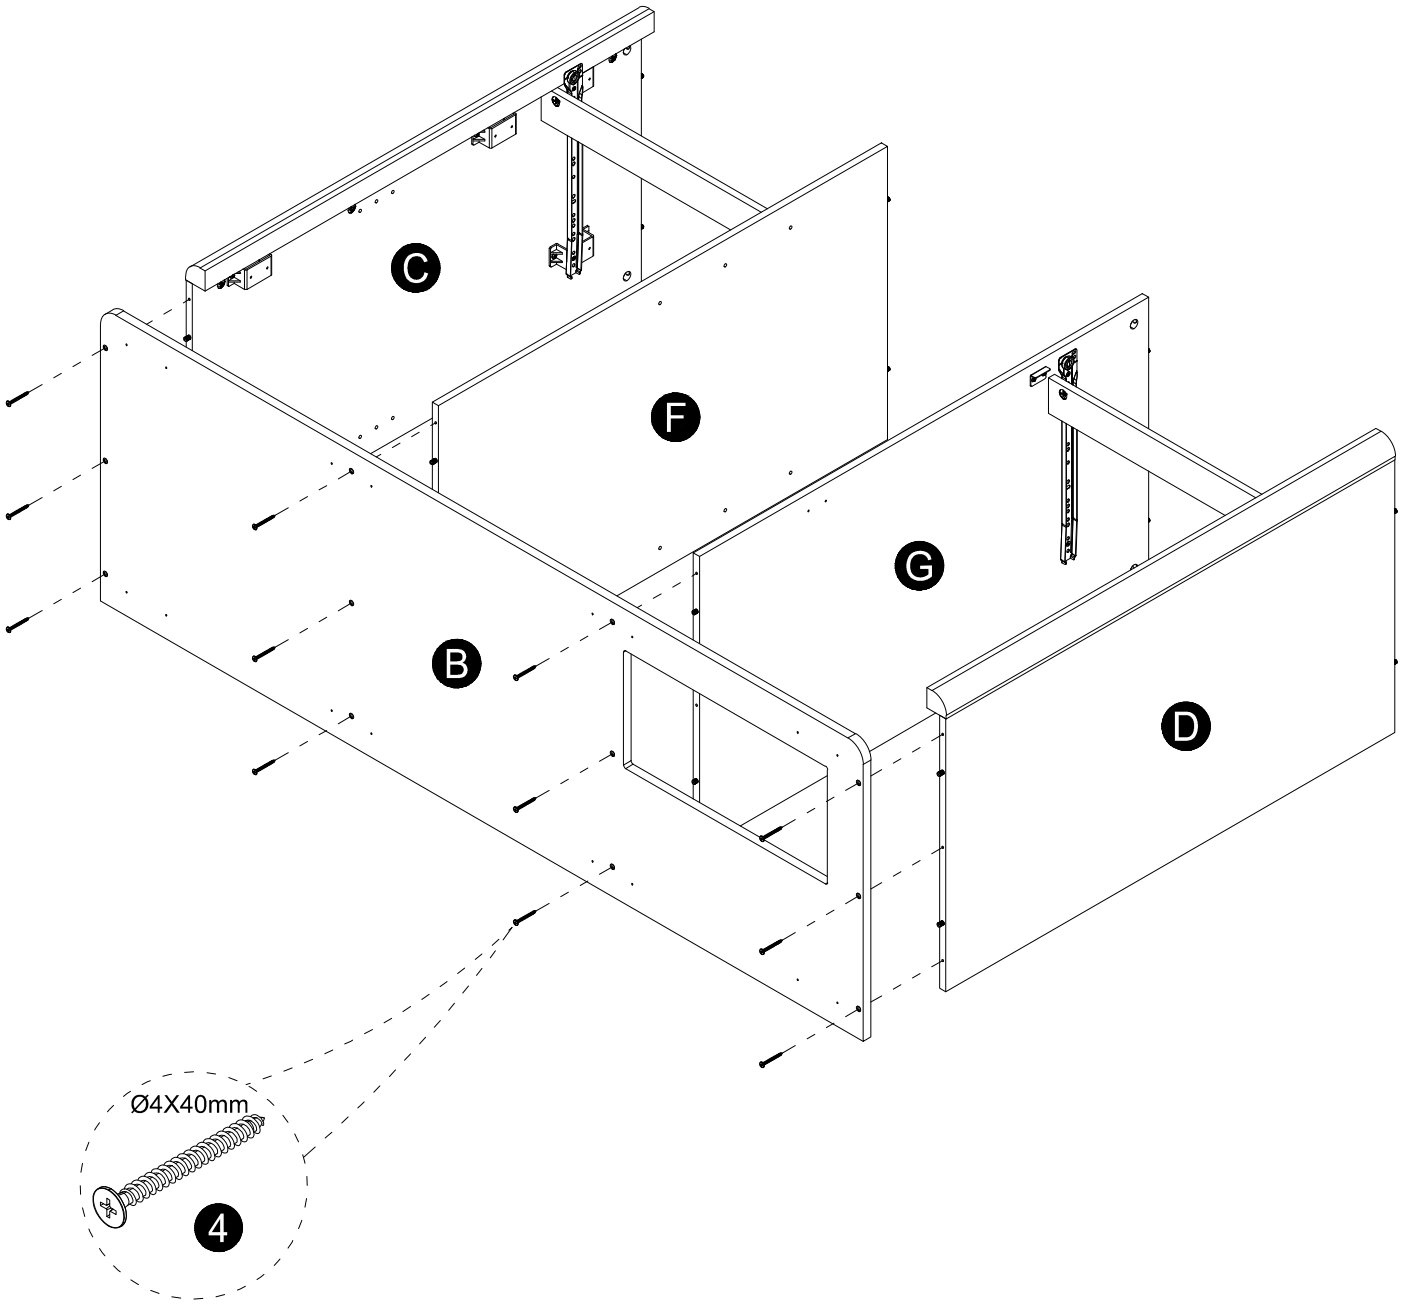


STEP16

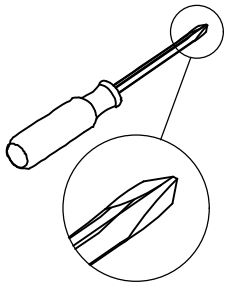

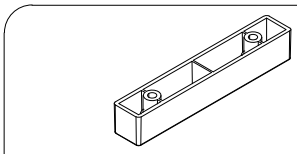


119X20X19.5mm

12	X8




Ø4X30mm

5	X16

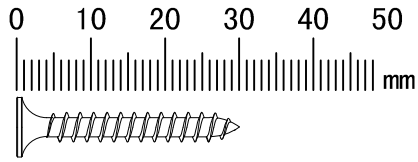



⚠ Before assembly, verify screw length.


Assembly Instructions:The screws (5) utilized in this step shall be strictly verified as 4*30mm in specification to prevent fastener misapplication that could result in over-penetration through the substrate panel.

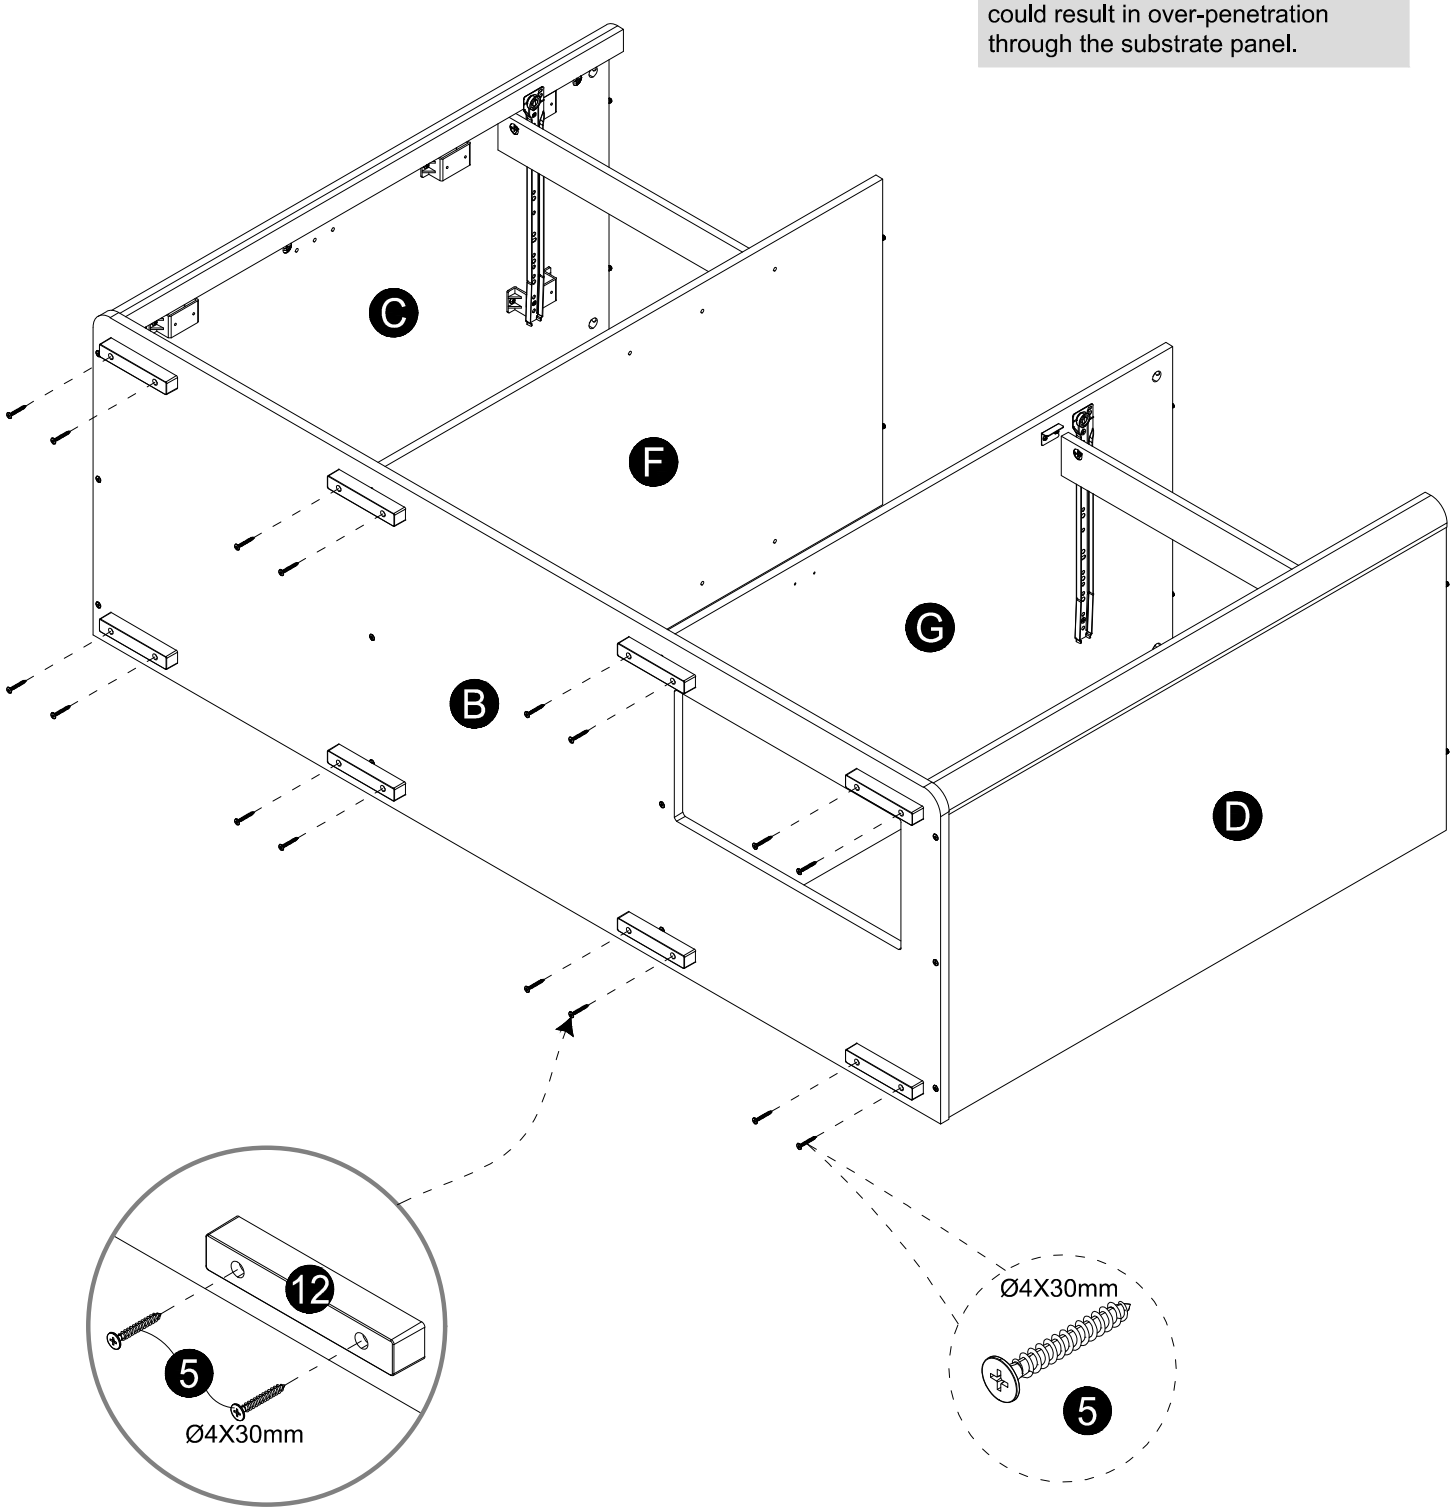


STEP17

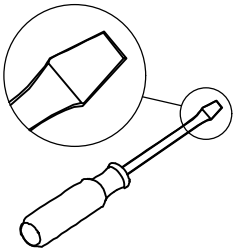


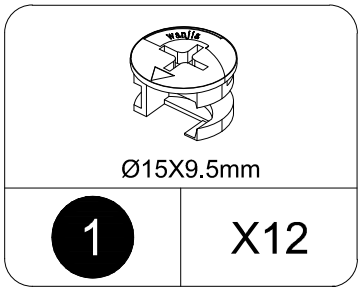

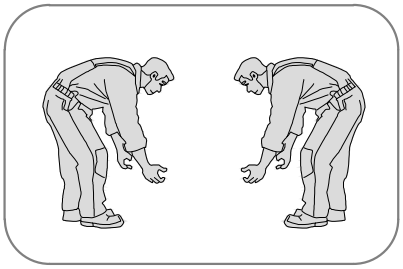


THIS STEP REQUIRES 2 PEOPLE

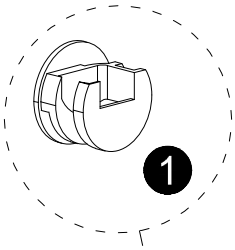

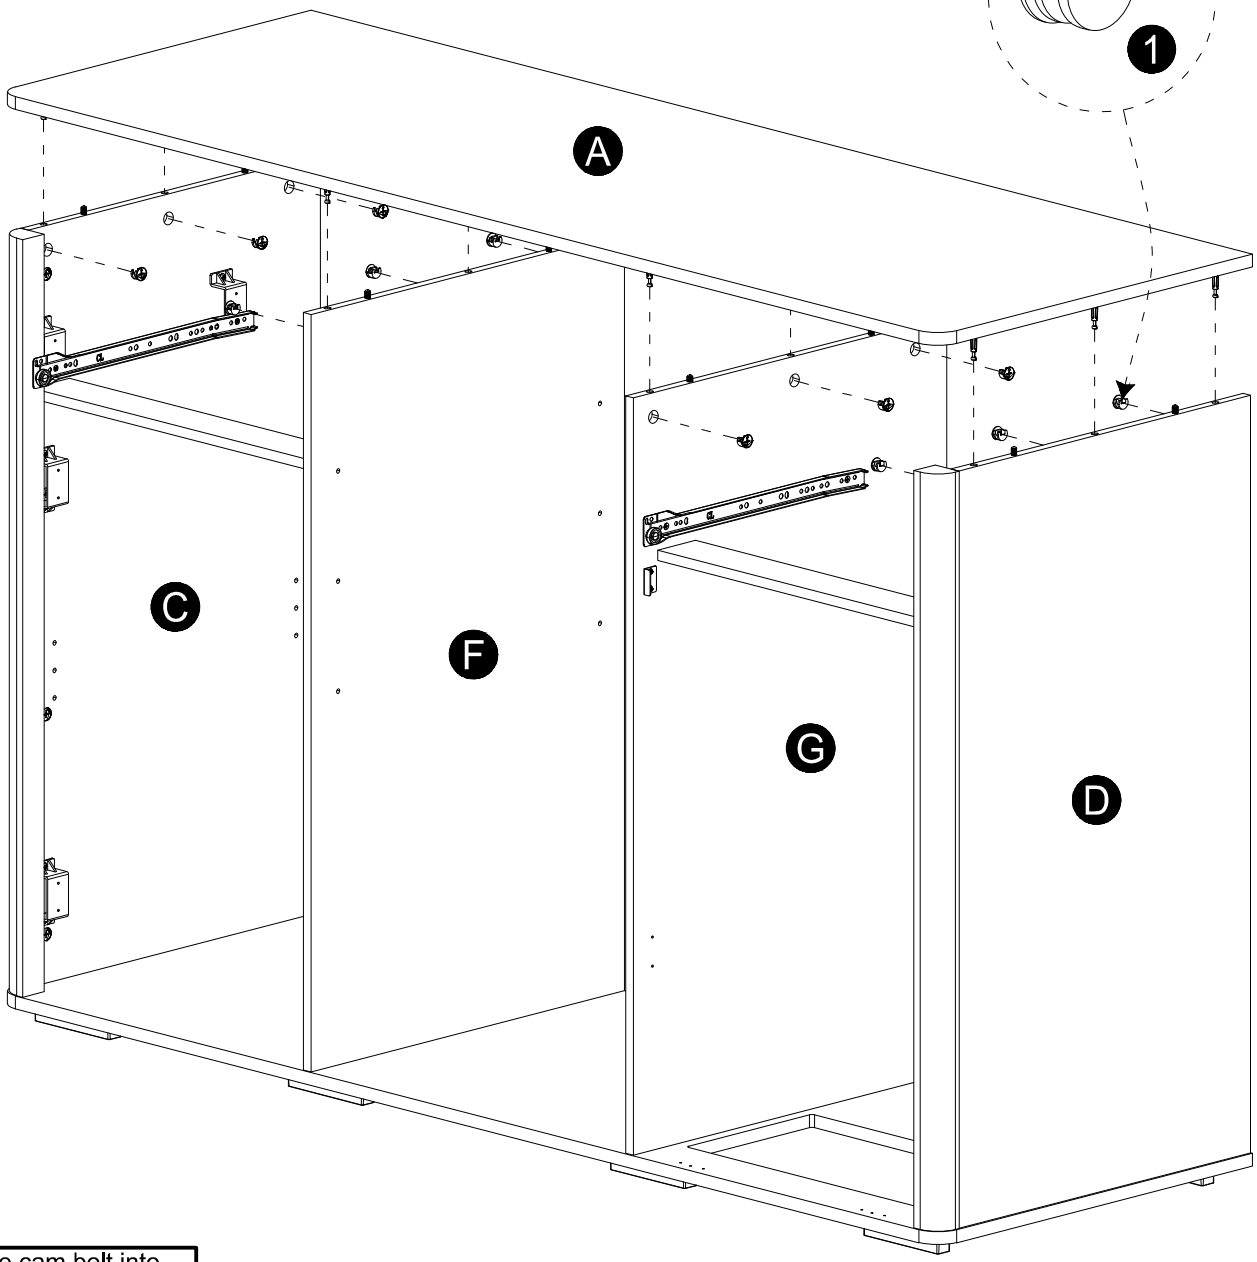



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

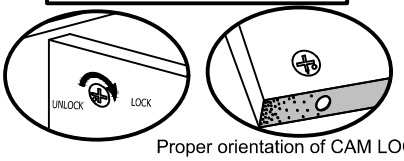



Proper orientation of CAM LOCK

STEP18

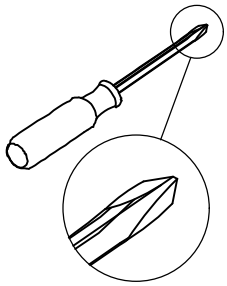


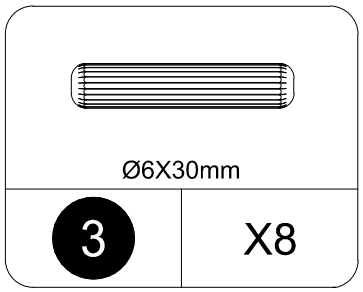

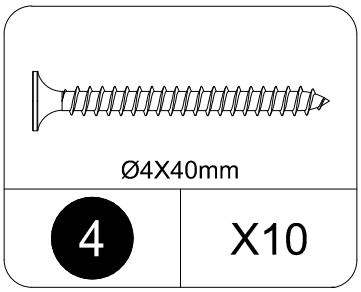


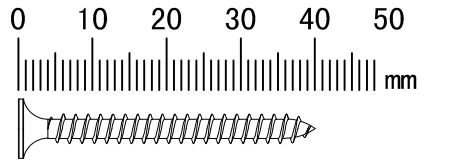


⚠ Before assembly, verify screw length.

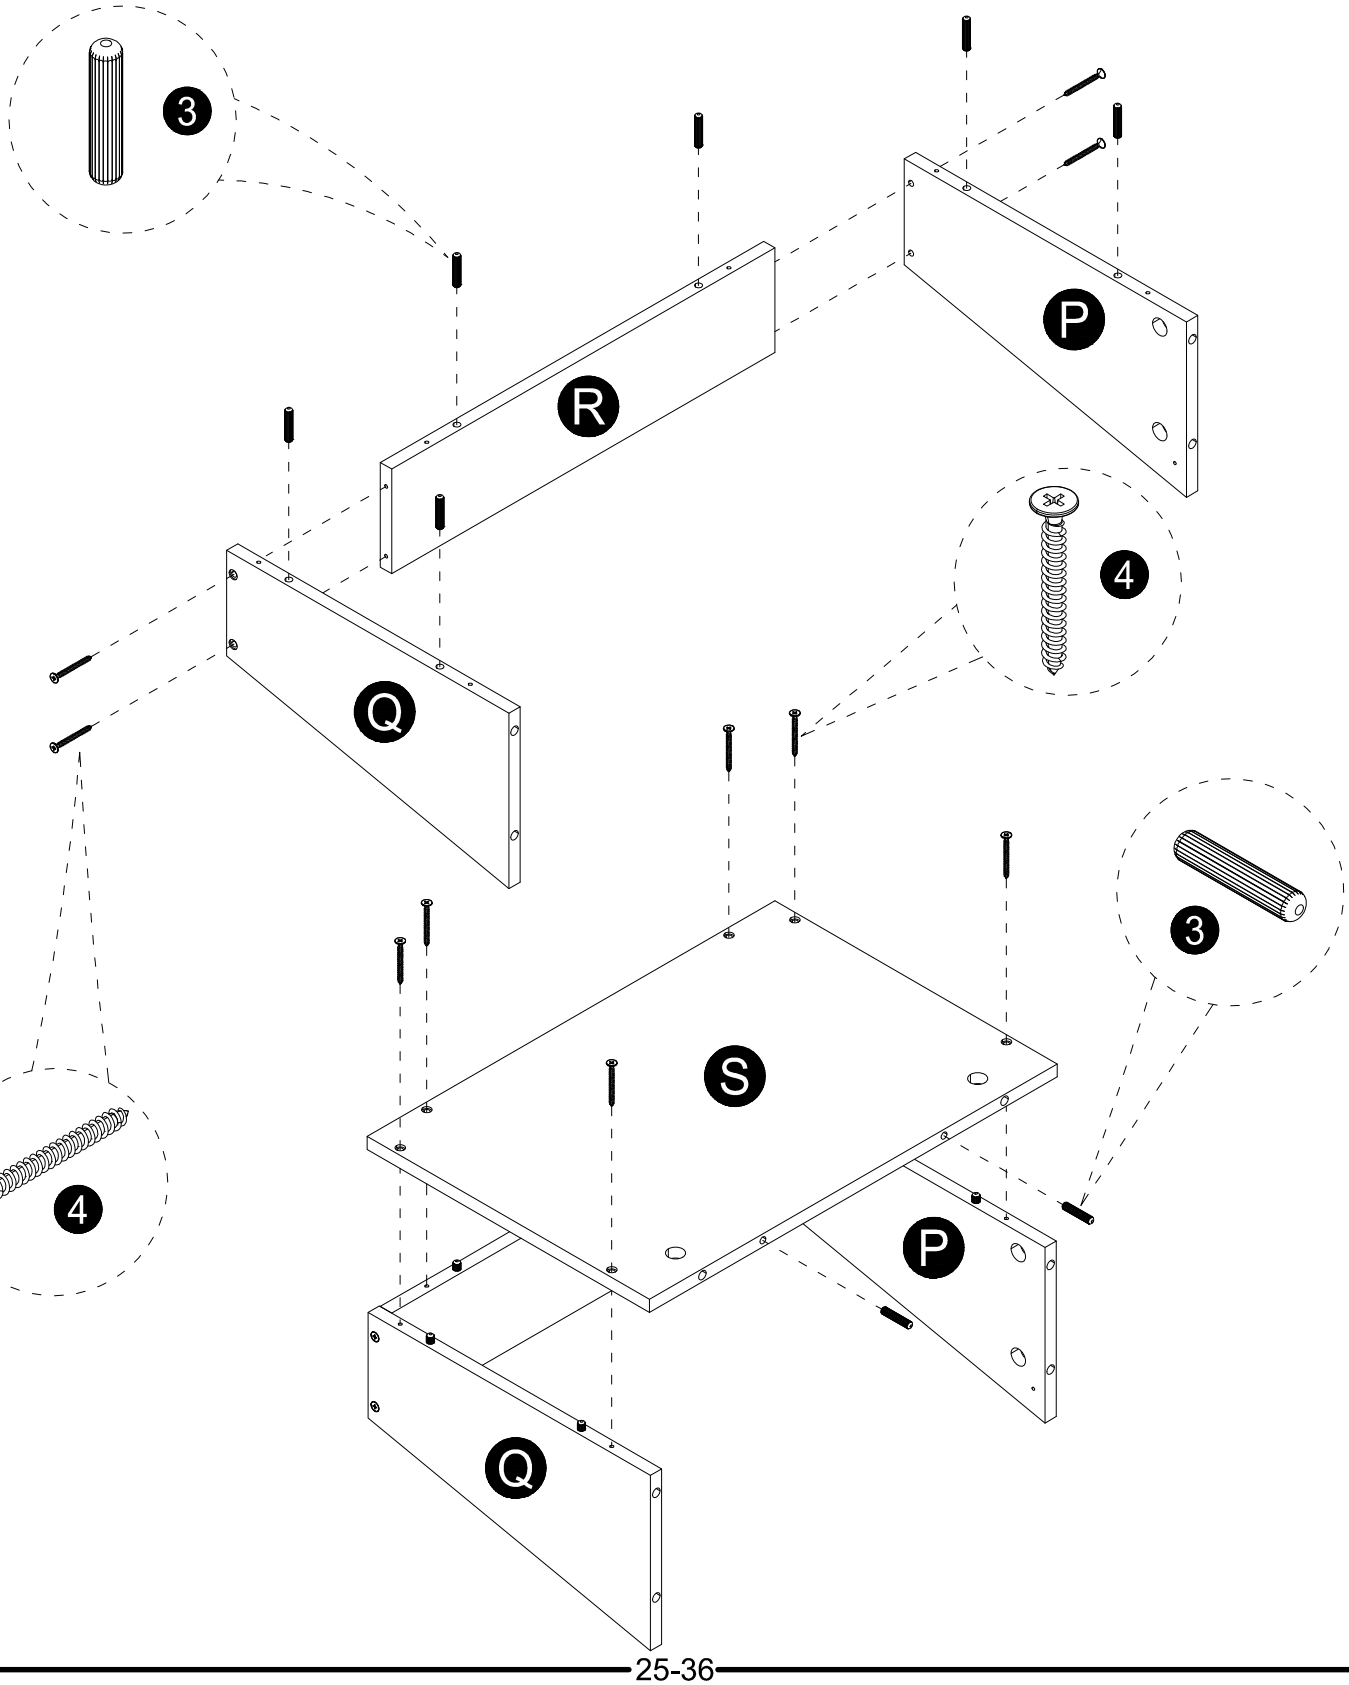


STEP19

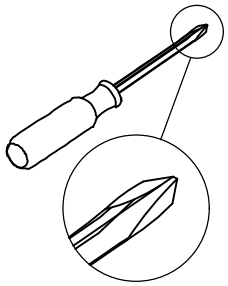

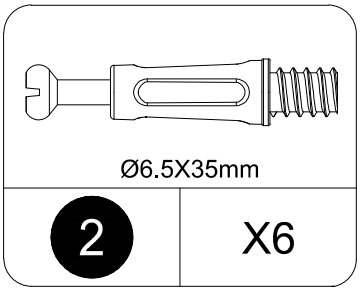


Ø6.5X35mm

2	X6

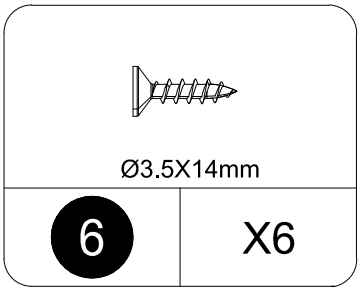


Ø3.5X14mm


6	X6

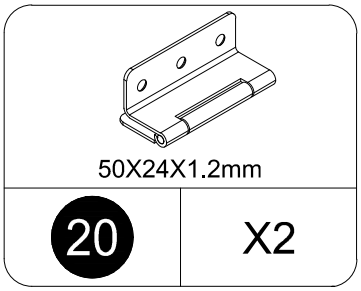



50X24X1.2mm


20	X2

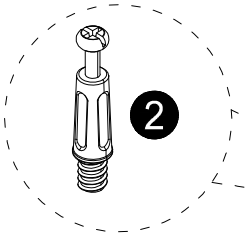


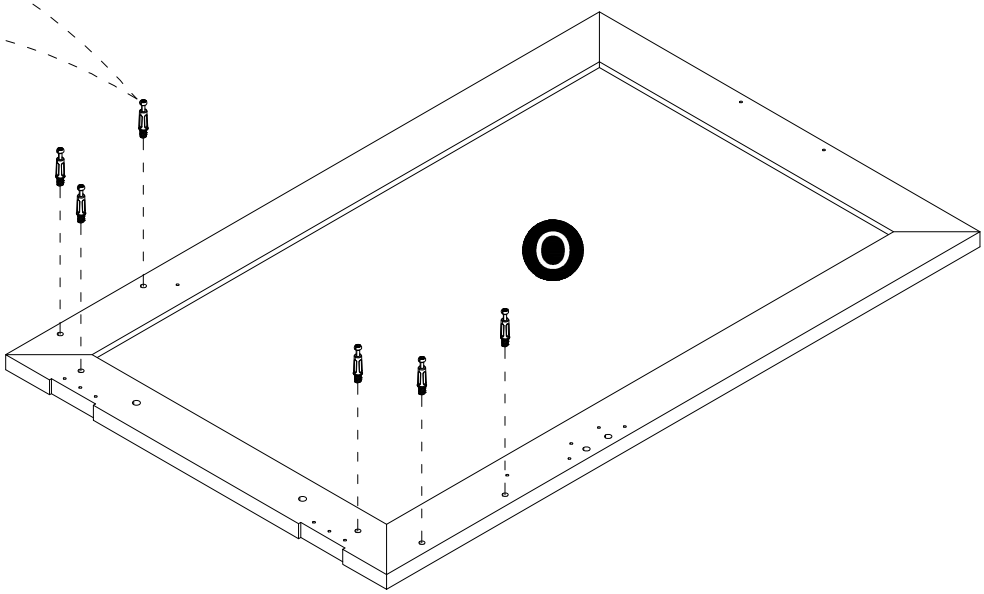

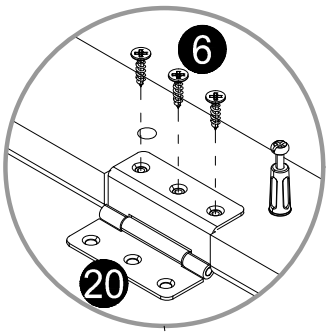


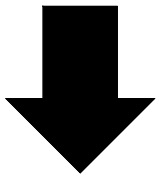


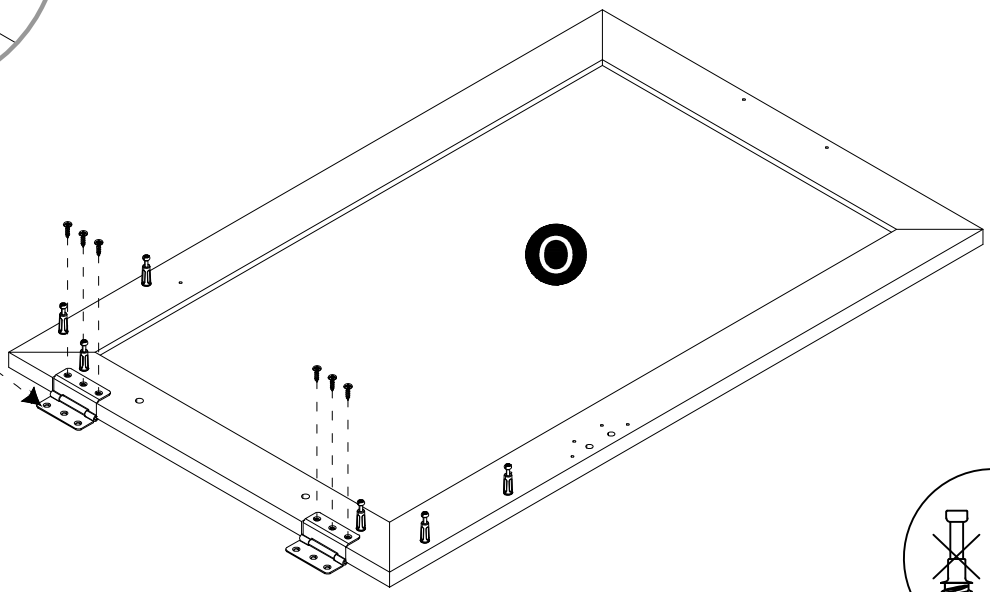

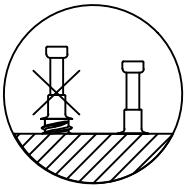


STEP20

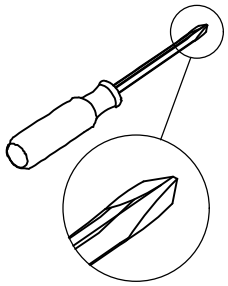




Ø15X9.5mm

1	X6




Ø4X12mm


8	X4





80X30X1.5mm

19	X1

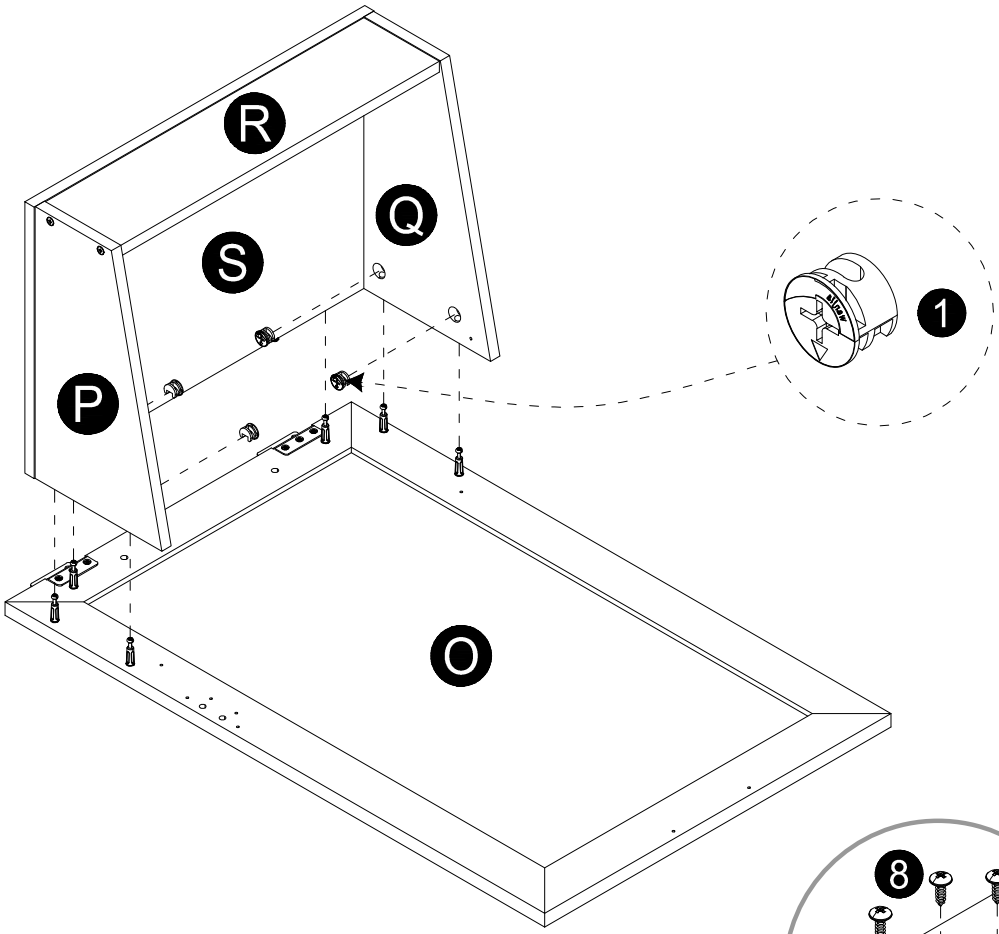


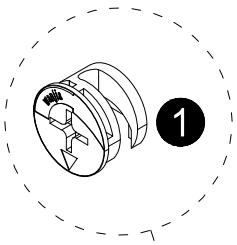

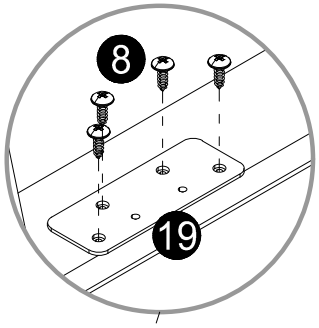

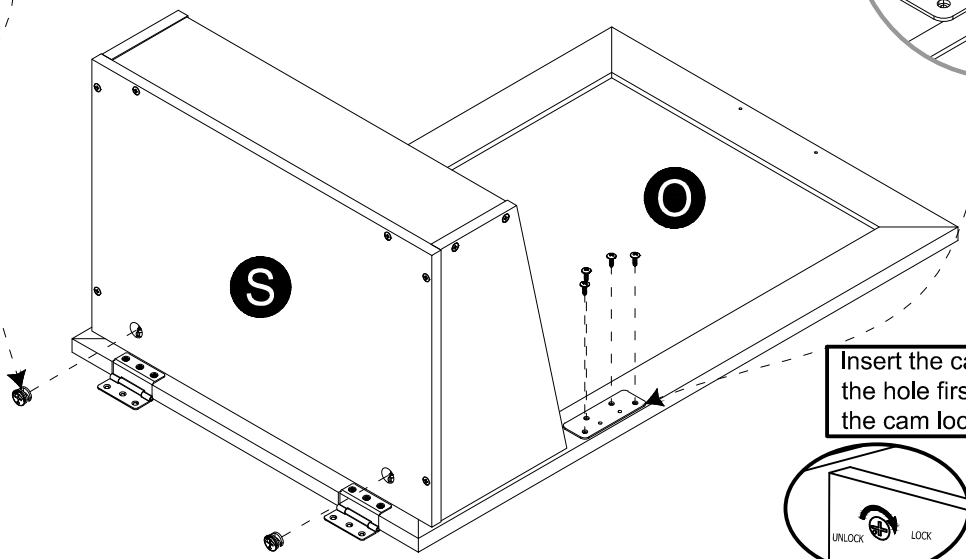


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

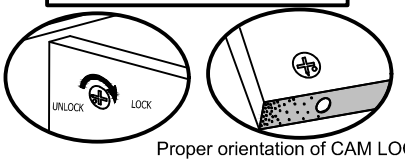


Proper orientation of CAM LOCK

STEP21



Ø4X12mm

8	X4




20X20X16mm

21	X2





M4X6mm


22	X2

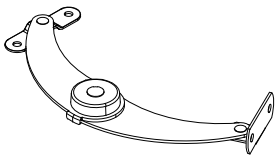



18	X1

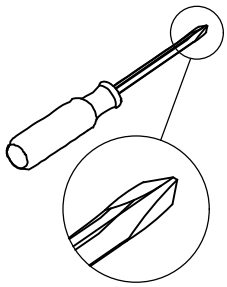

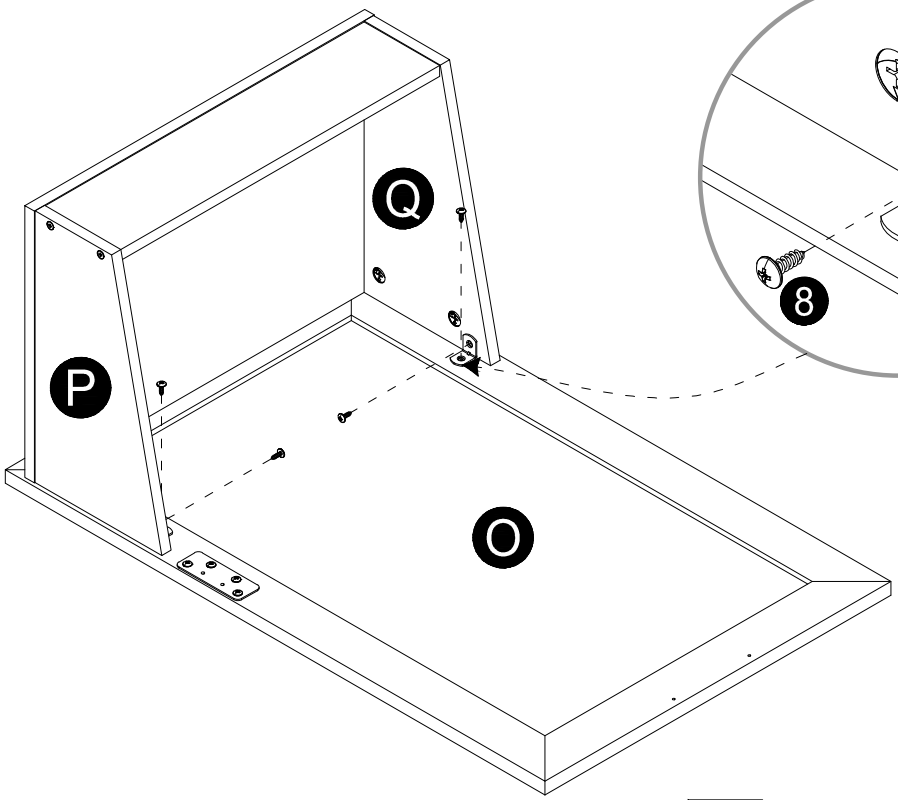


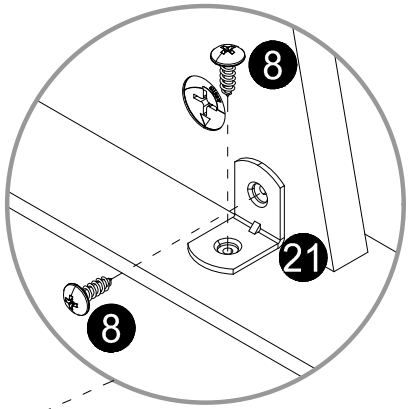


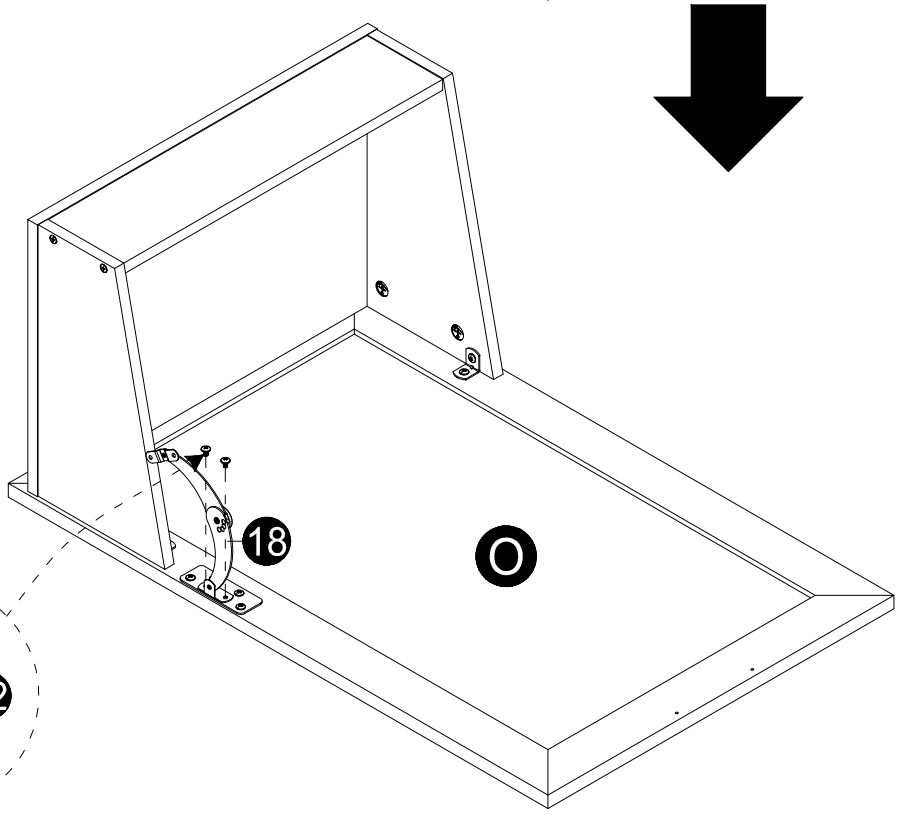


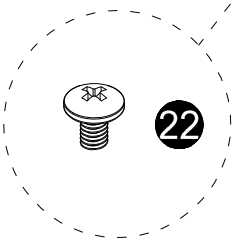



STEP22

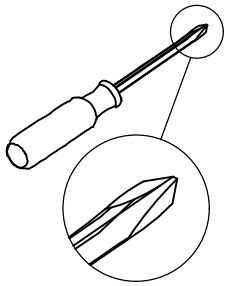

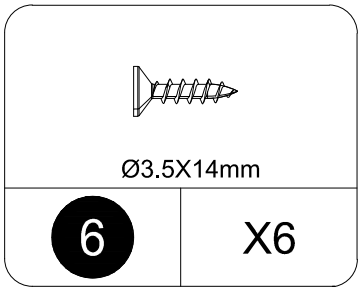

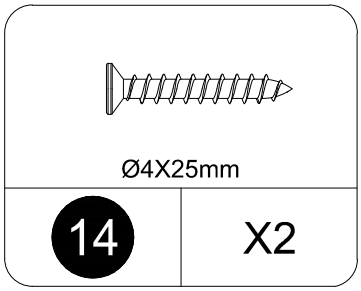


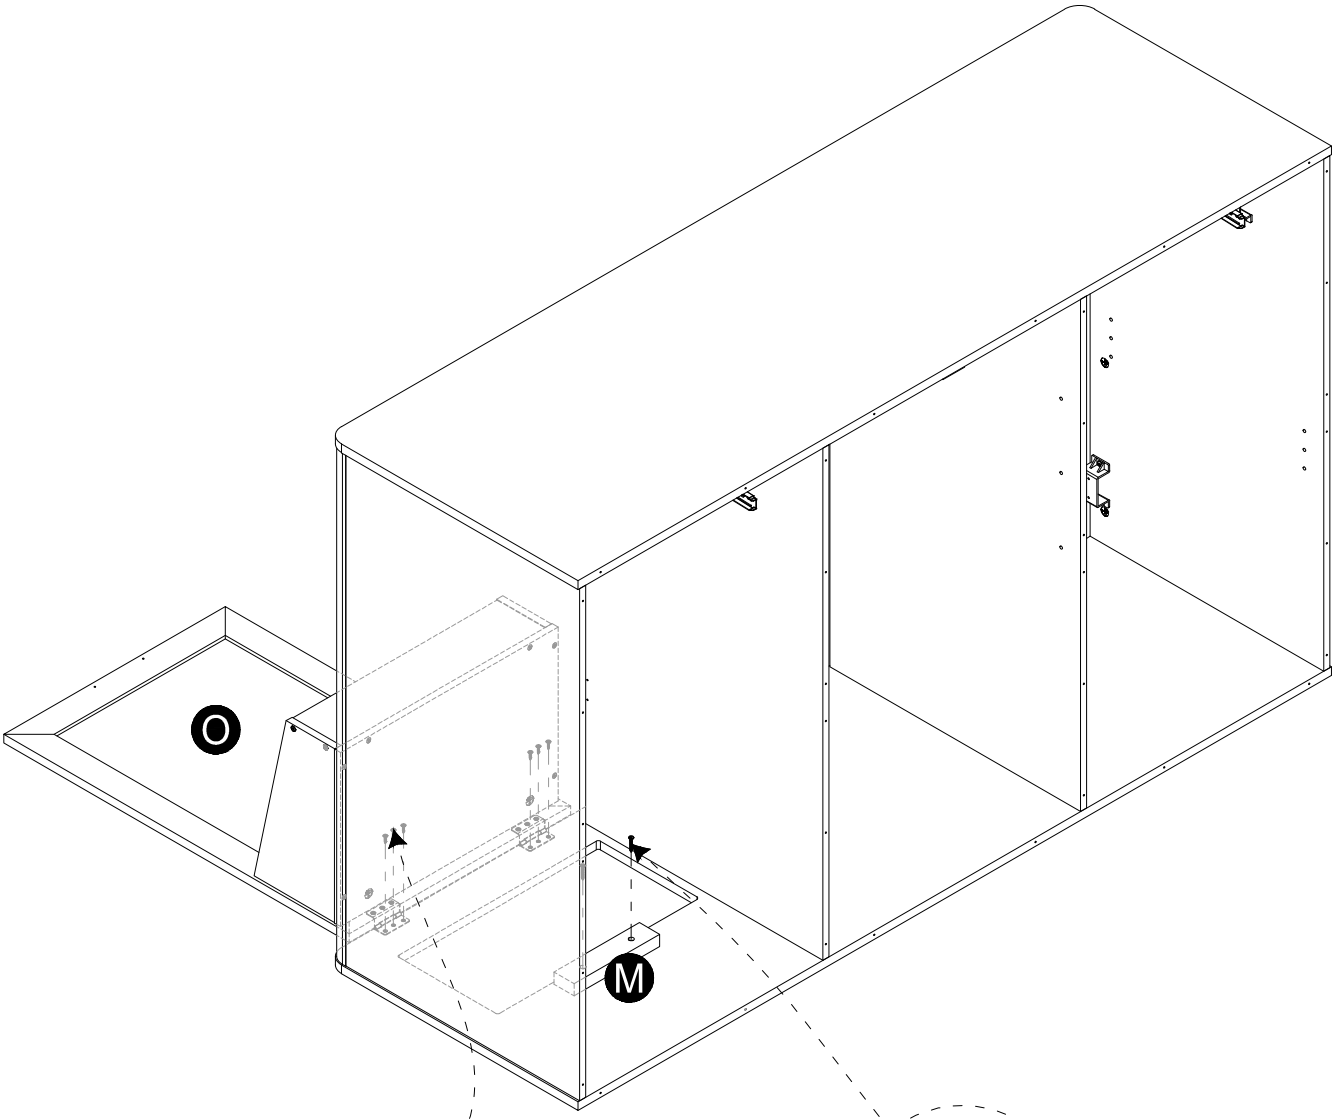


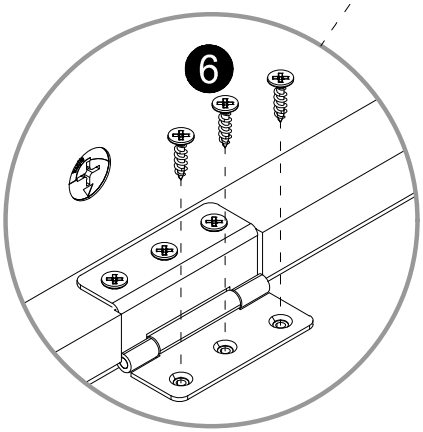



STEP23

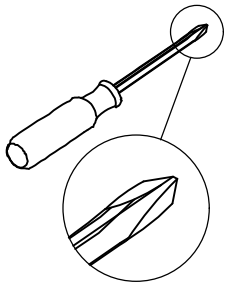




Ø4X12mm

8	X2



Ø3.5X14mm


6	X2

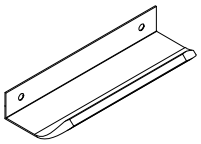


120X40X18mm


16	X1


THIS STEP REQUIRES 2 PEOPLE

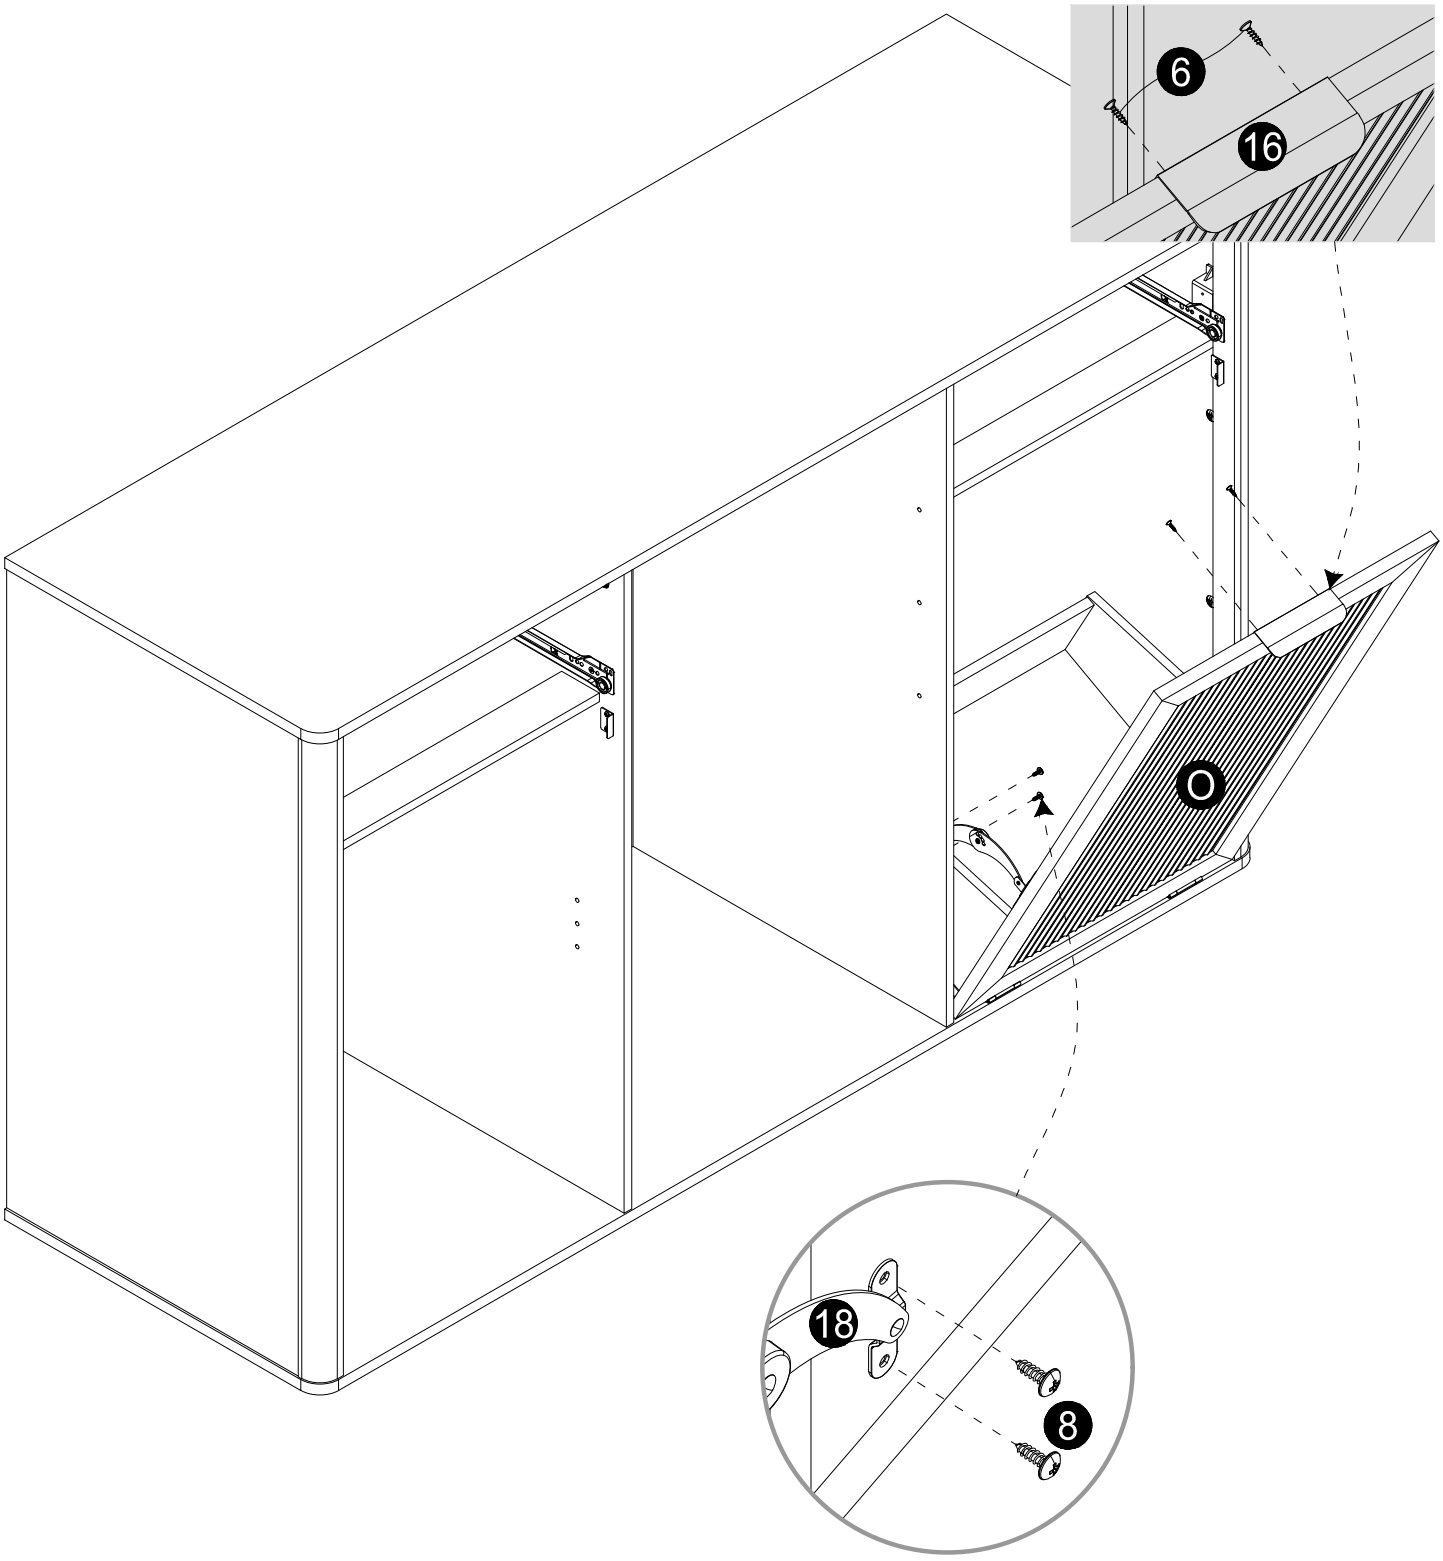

STEP24

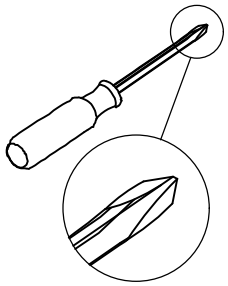


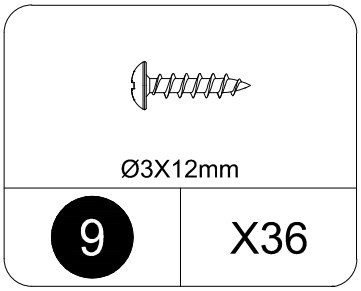

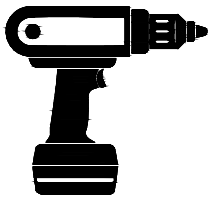


If you have an electric screwdriver tool at home, it will make installation faster


THIS STEP REQUIRES 2 PEOPLE

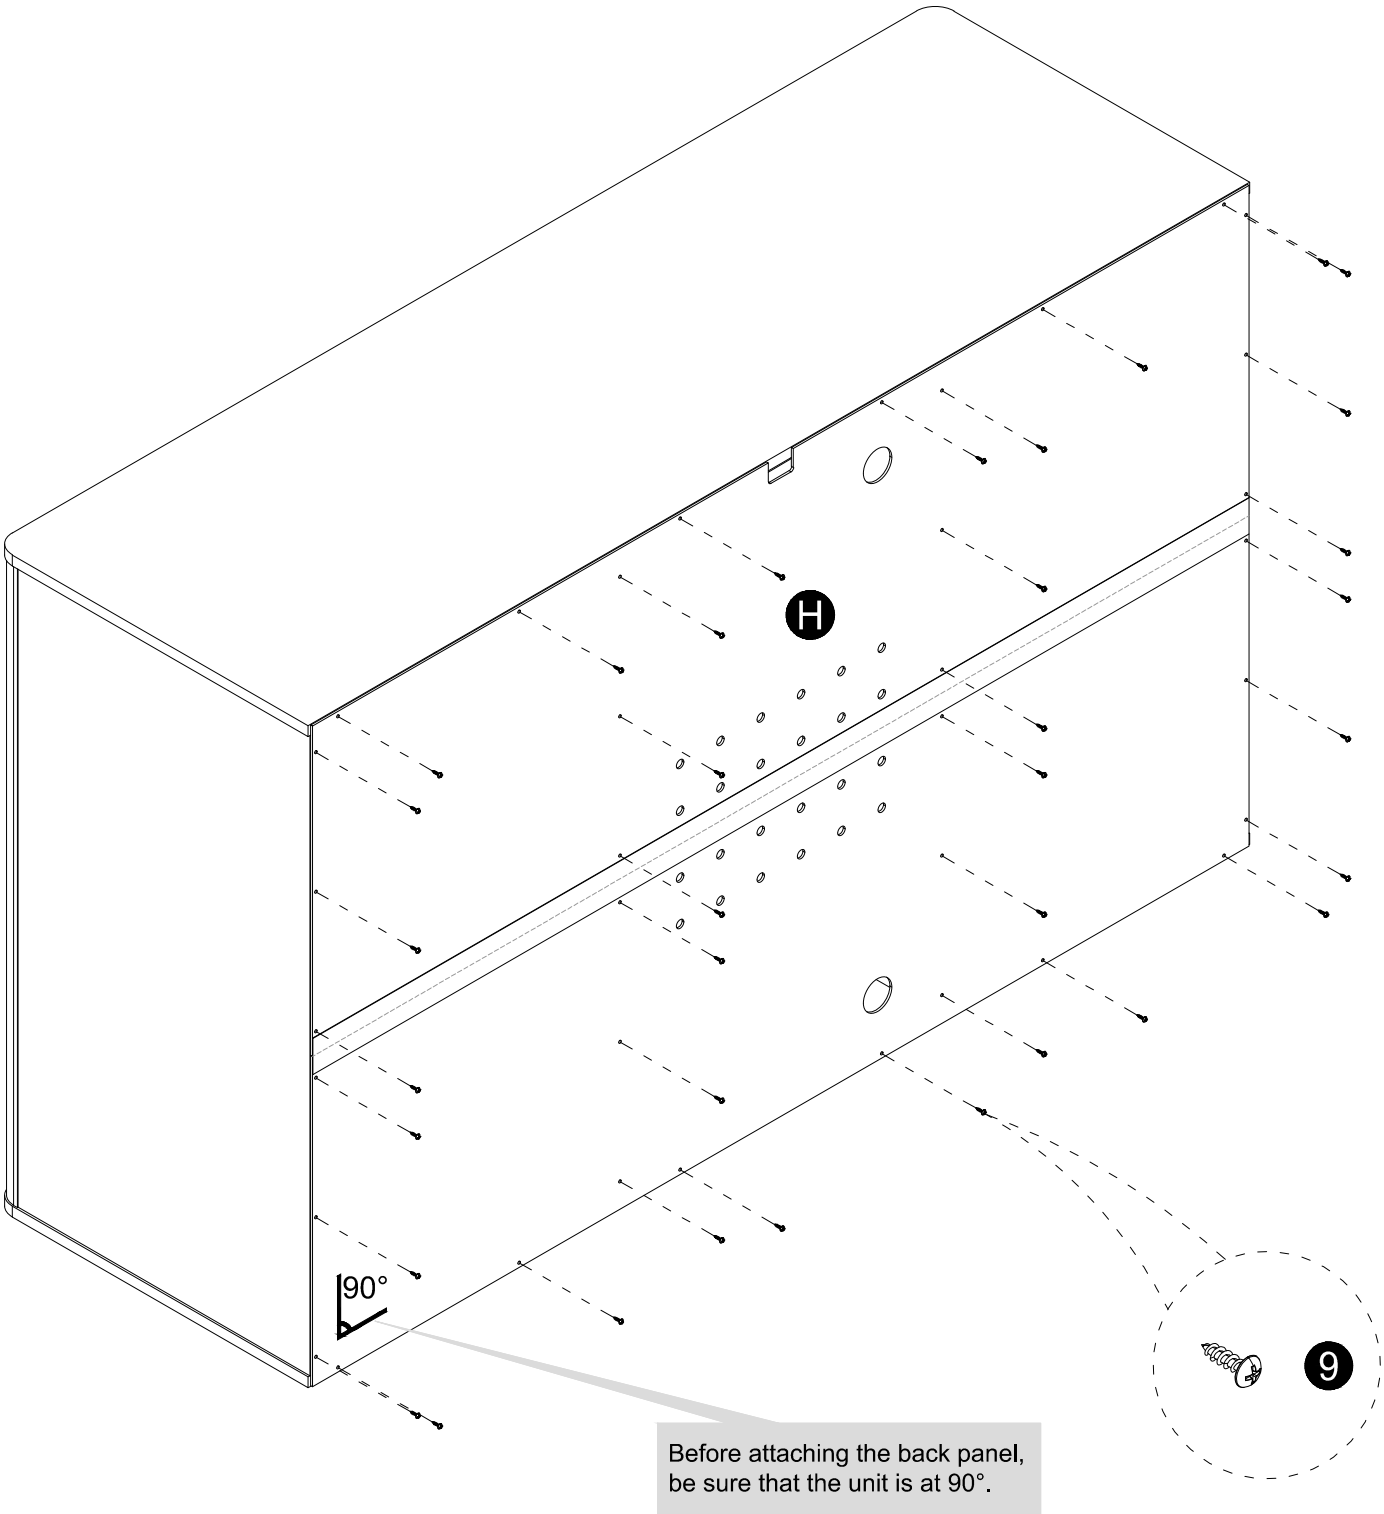

Before attaching the back panel, be sure that the unit is at 90°.


STEP25

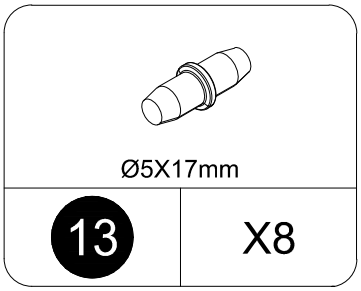


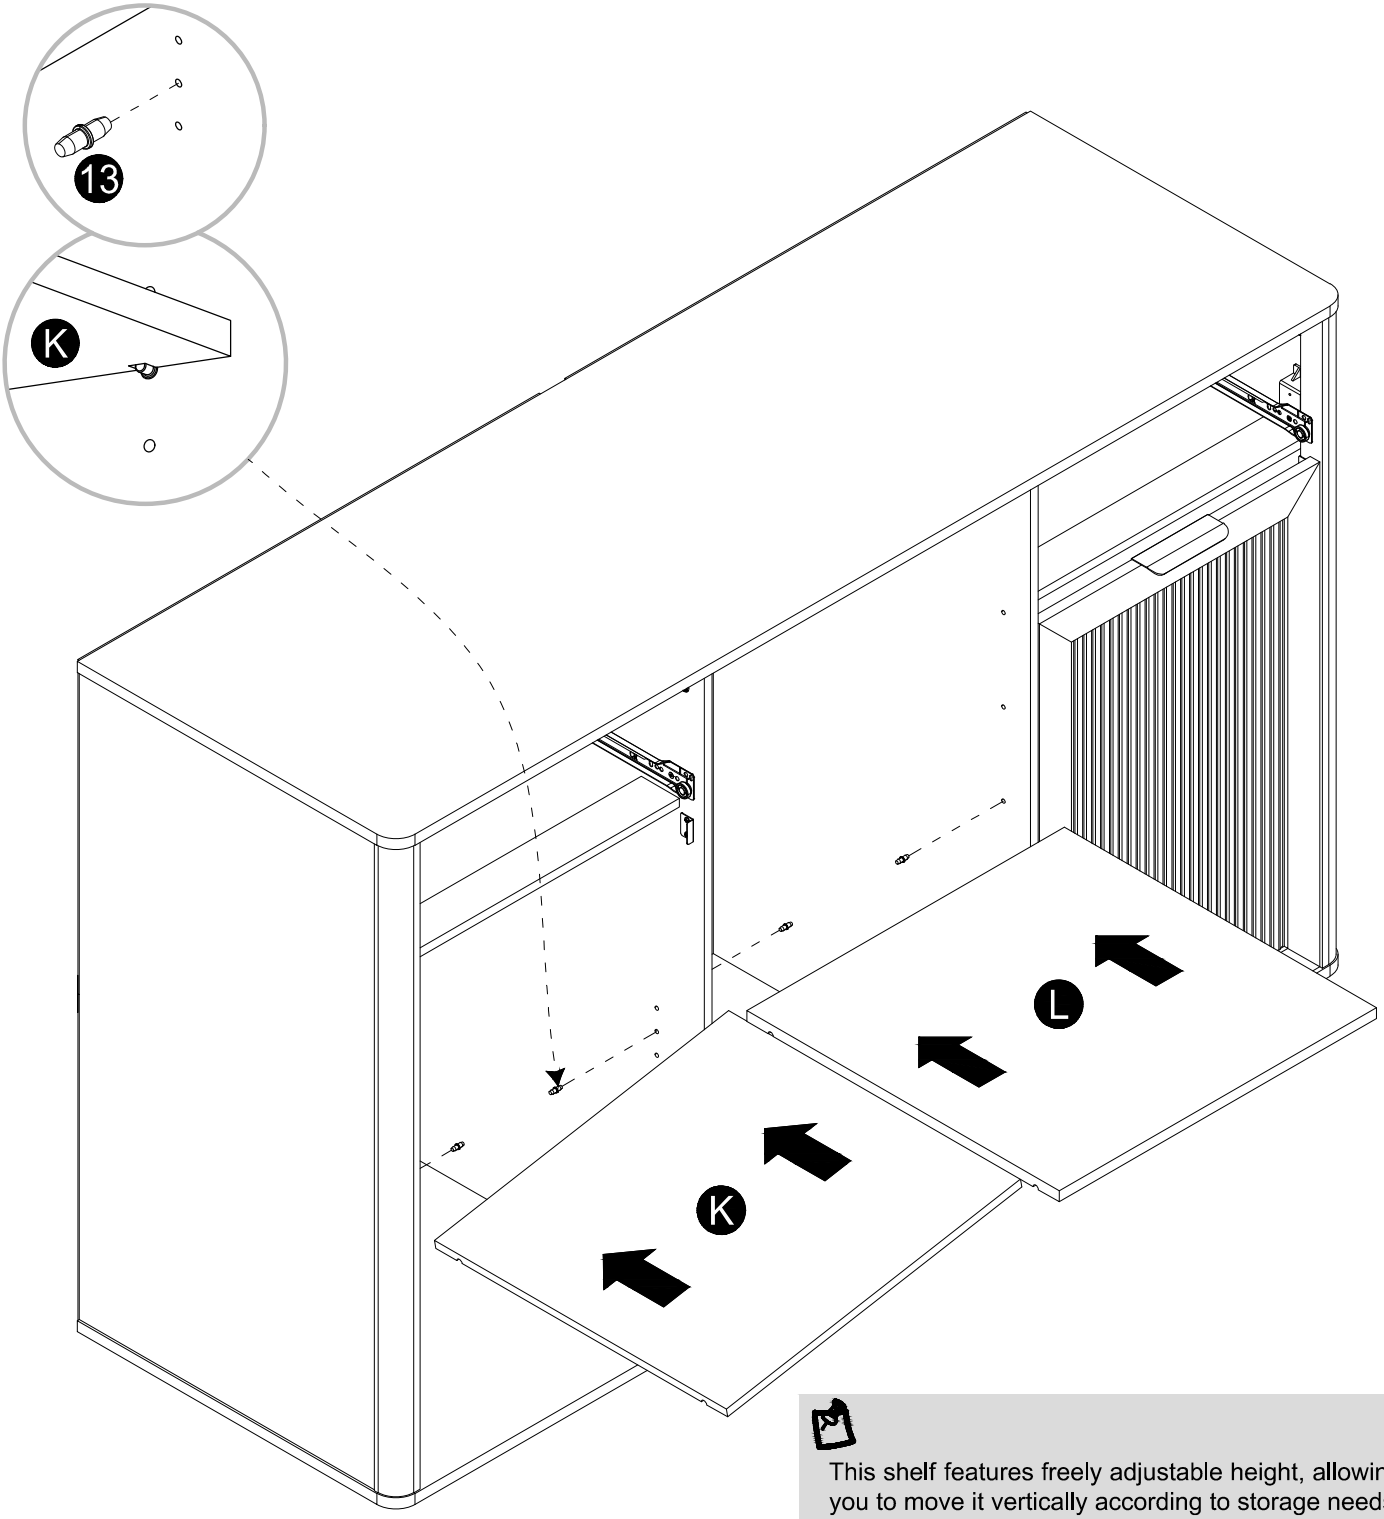

This shelf features freely adjustable height, allowing you to move it vertically according to storage needs. Both side panels are equipped with evenly spaced pre-drilled adjustment holes. Simply align the shelf clips with the desired holes at your preferred height for tool-free adjustment.


STEP26

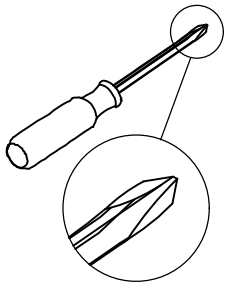




Ø3.5X14mm

6	X10



Ø25mm


10	X2

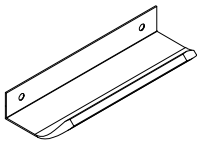



120X40X18mm

16	X1

THIS STEP REQUIRES 2 PEOPLE

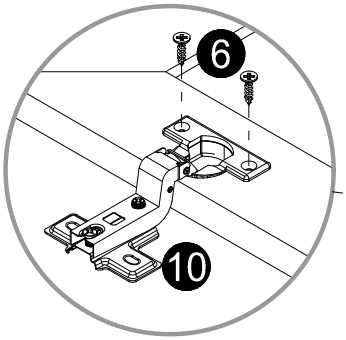


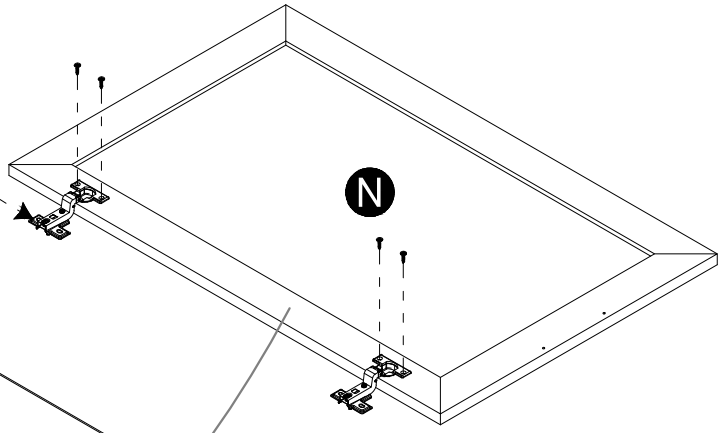


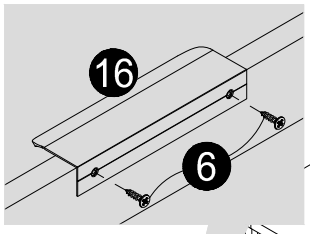


STEP27

SCHEMATIC DIAGRAM OF HINGE ADJUSTMENT DOOR PANEL GAP

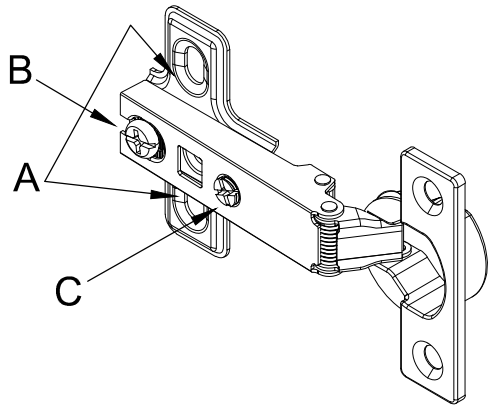


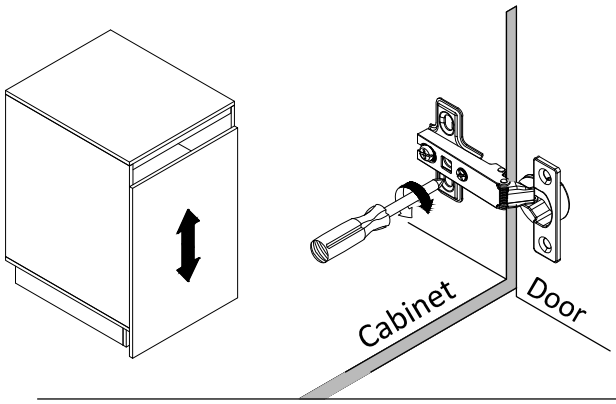

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

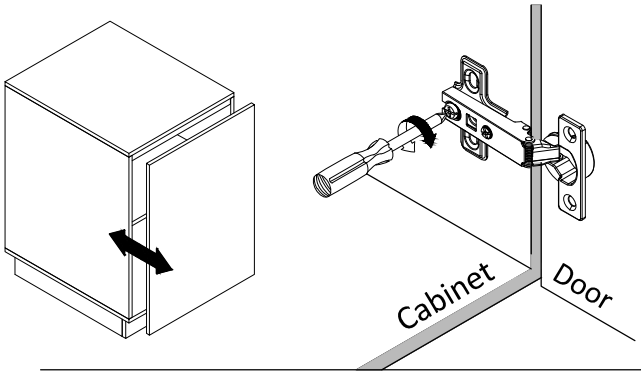


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

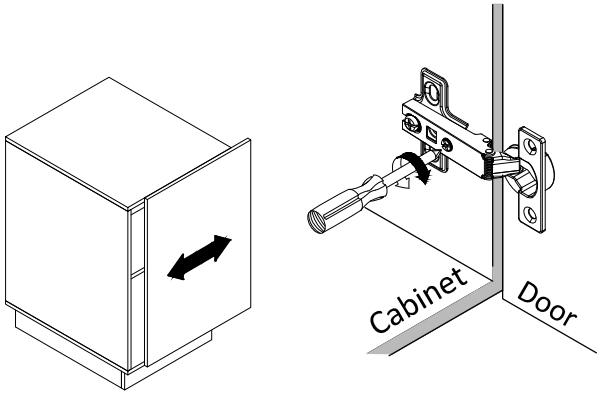


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP28

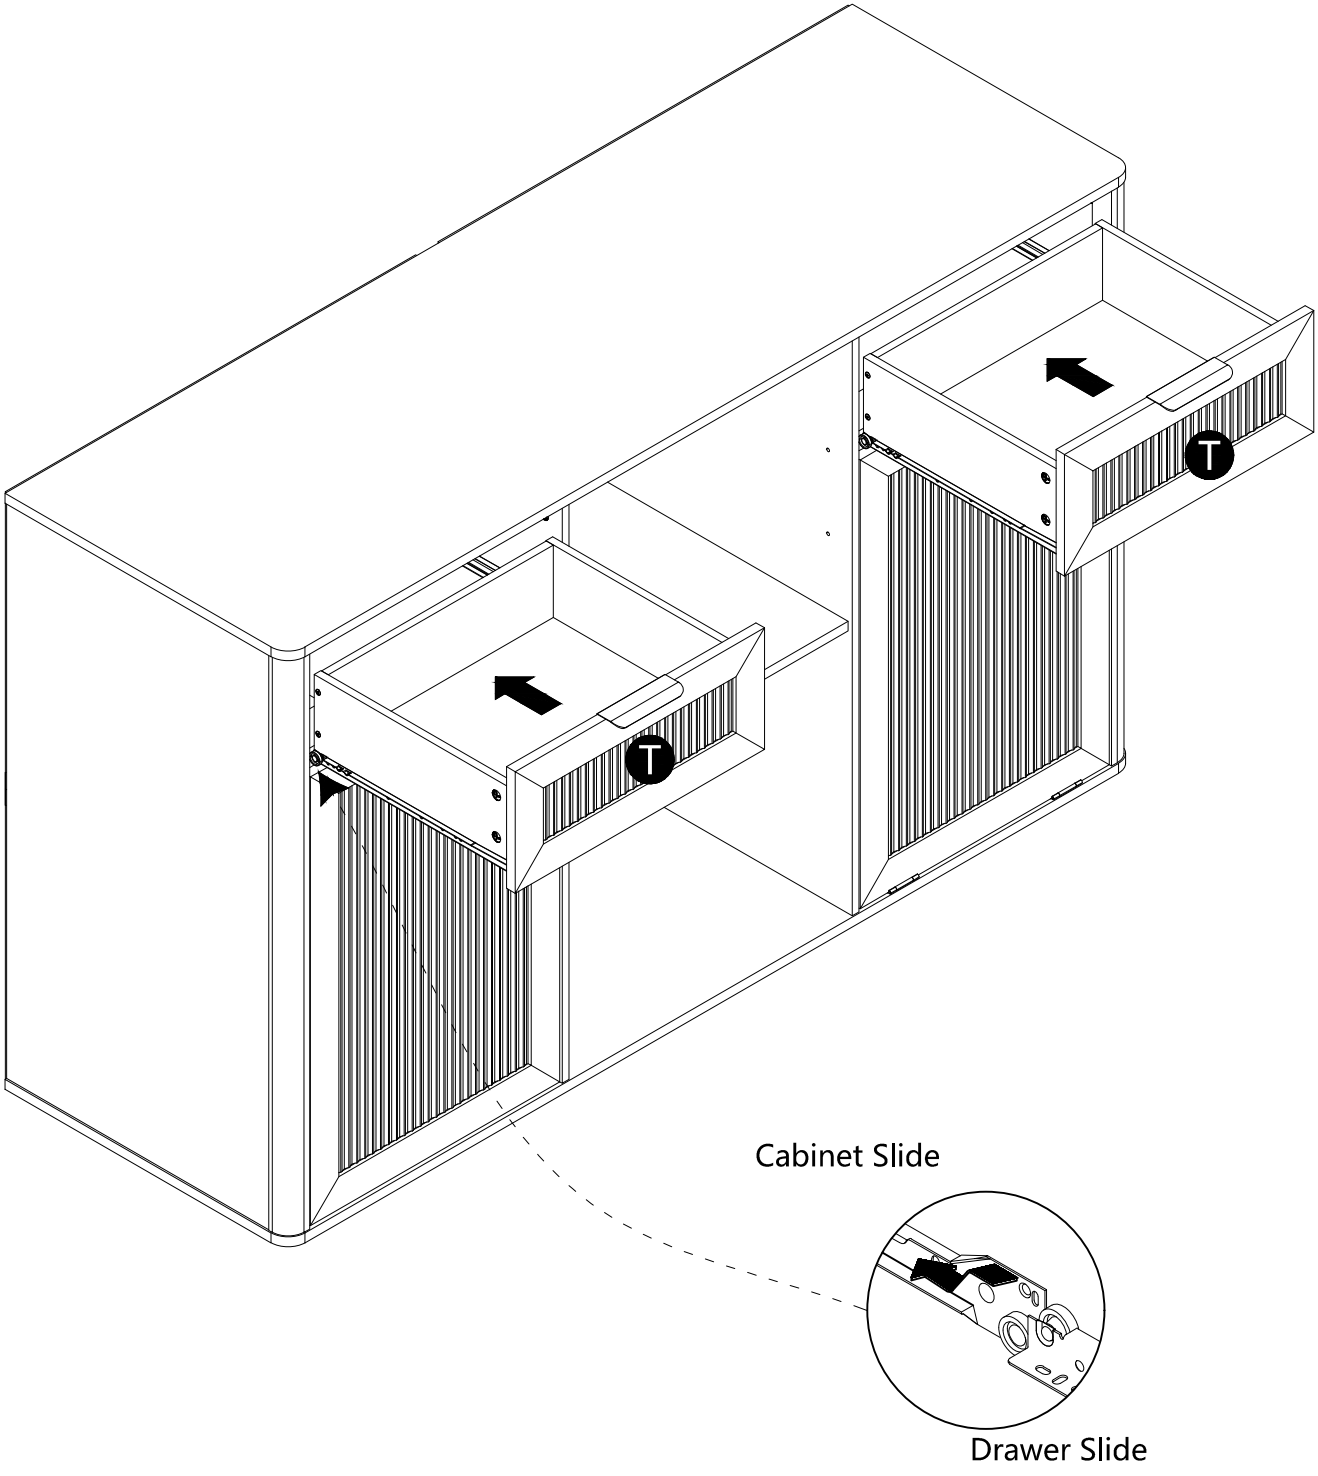

STEP29

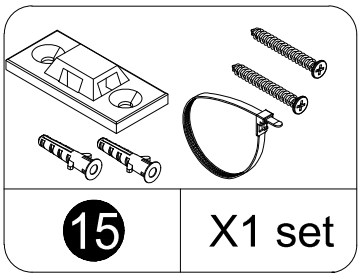


NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




Install the tipping restraint hard ware

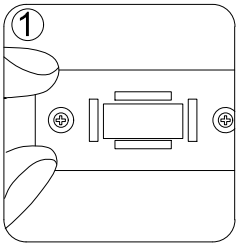


1.make mark on the wall

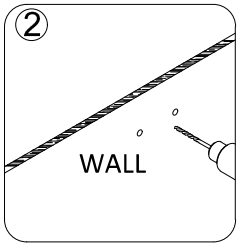


2.drill two Ø6 holes on the wall

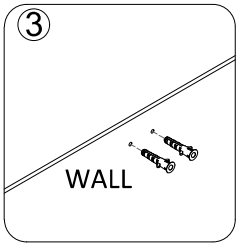

3.put two anchors in the holes

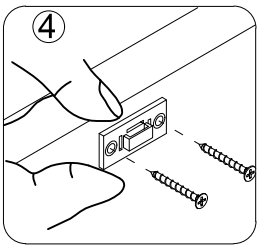

4.fix the device on the wall by the long srews

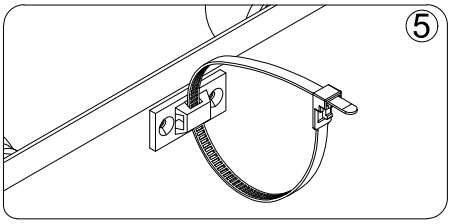

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

