

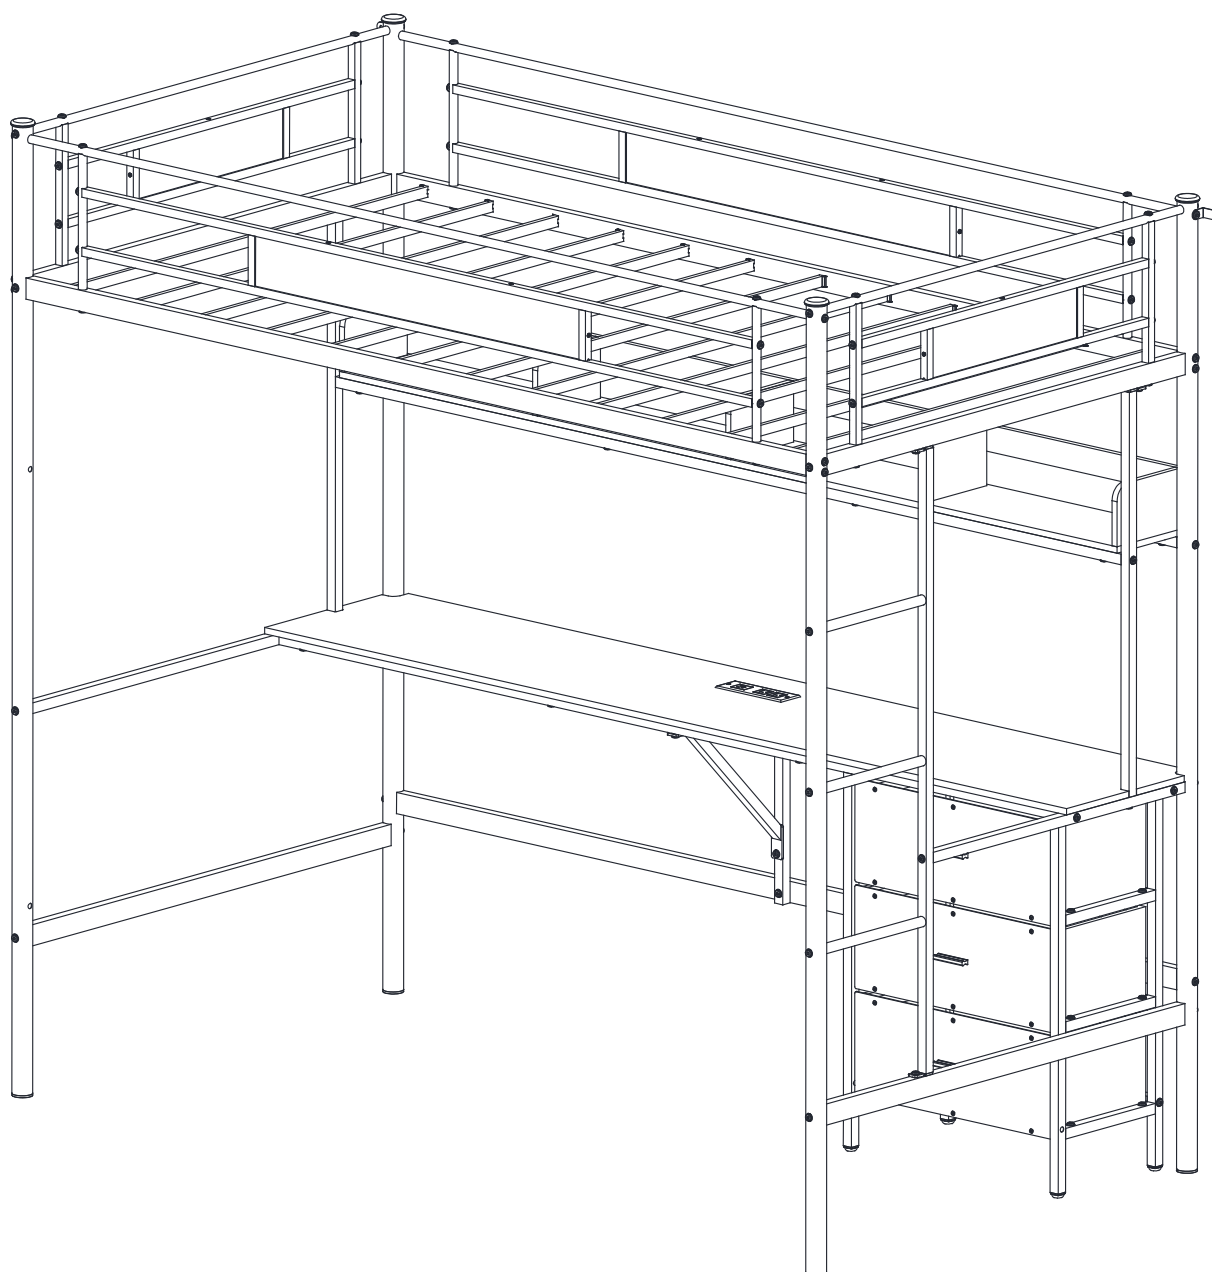


BED FRAME

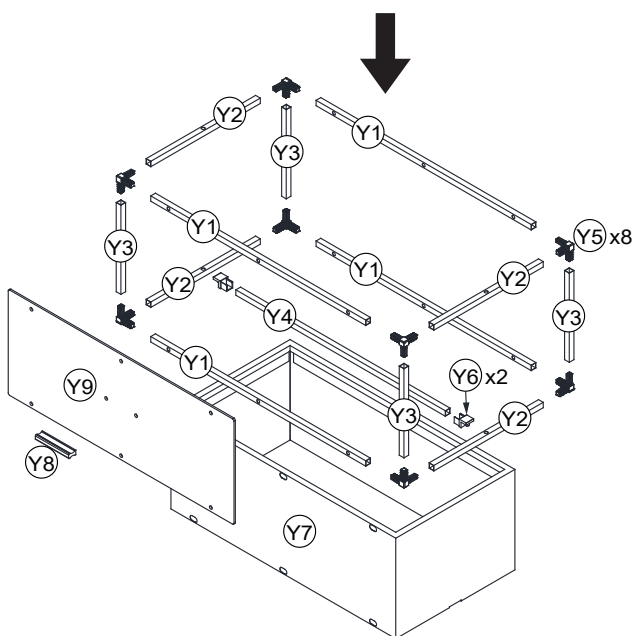

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




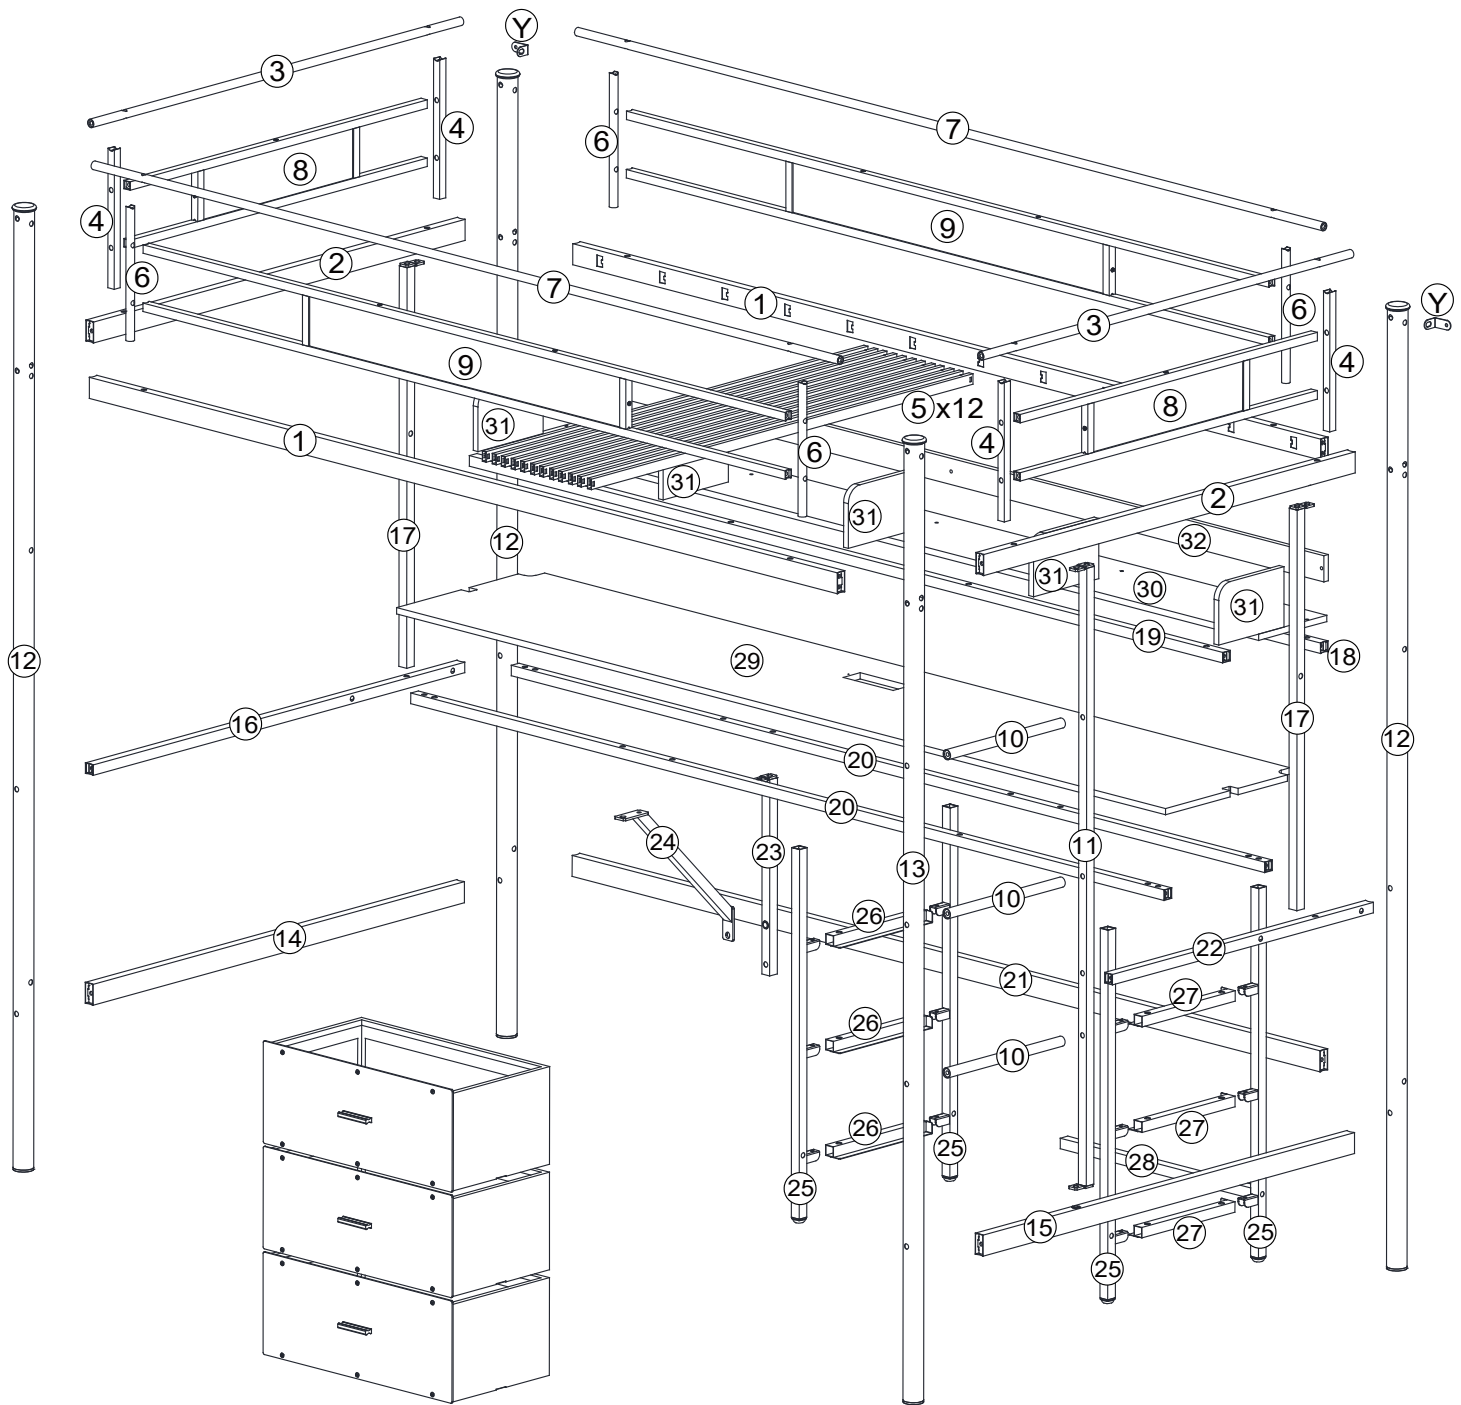




Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

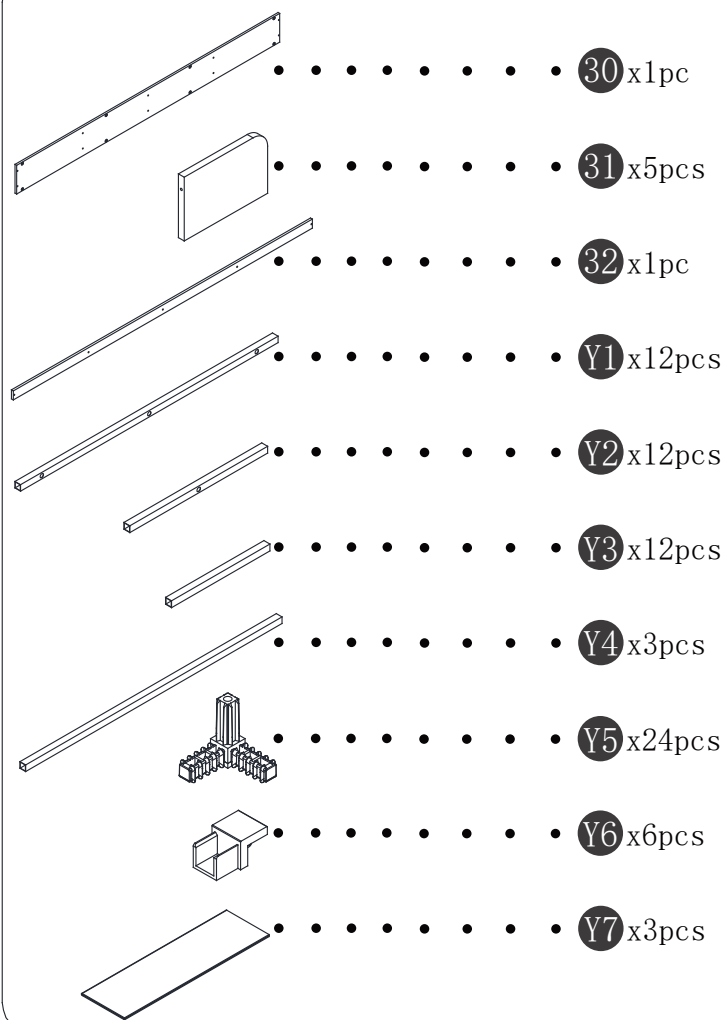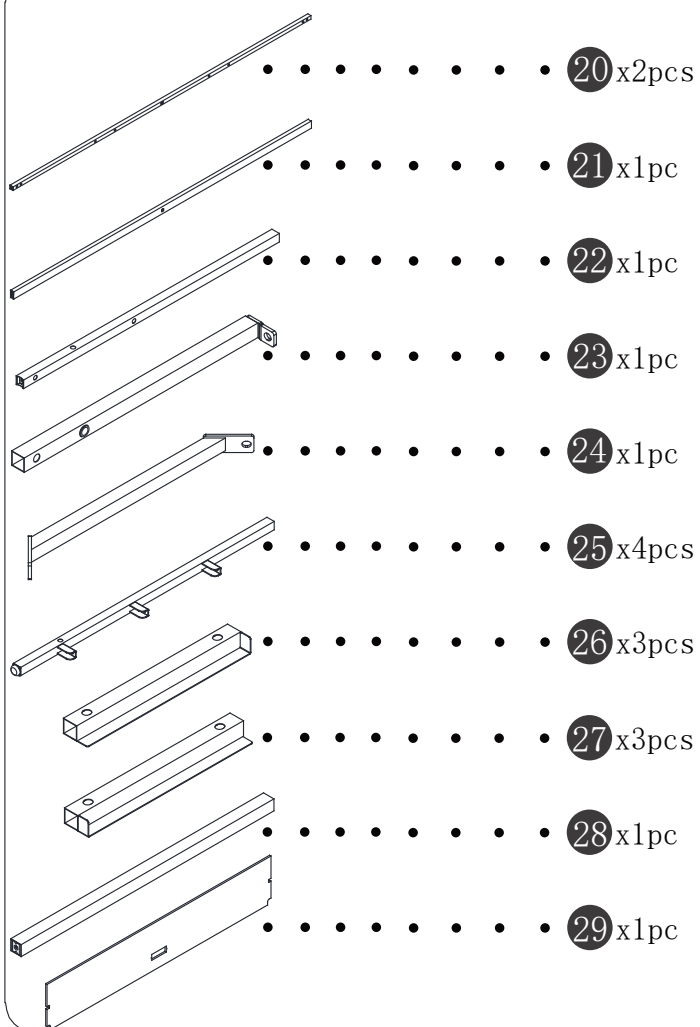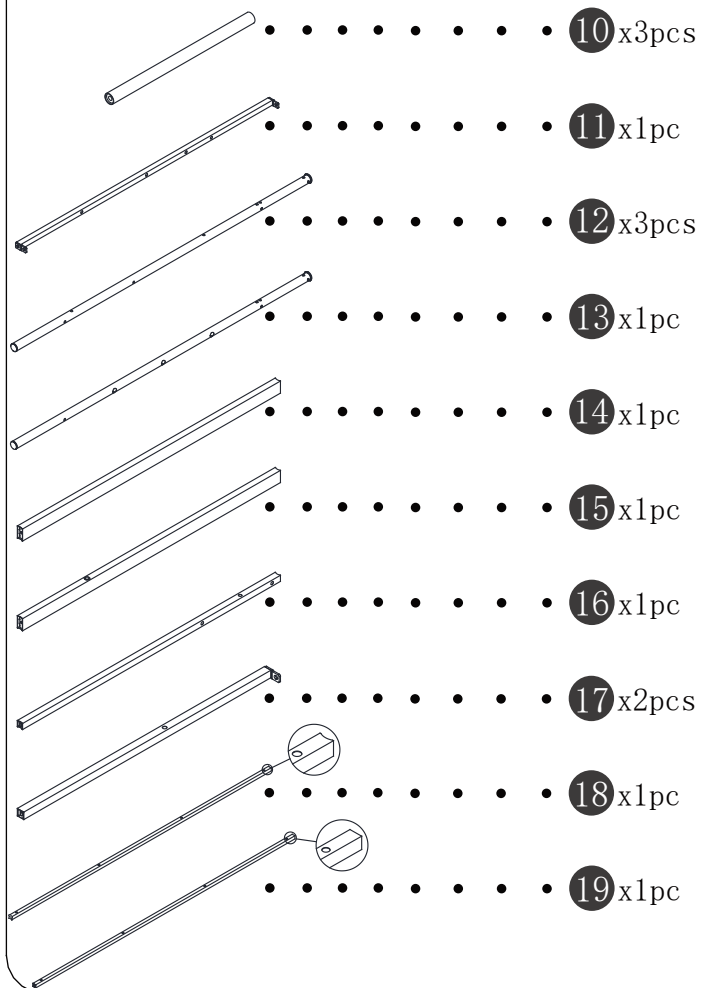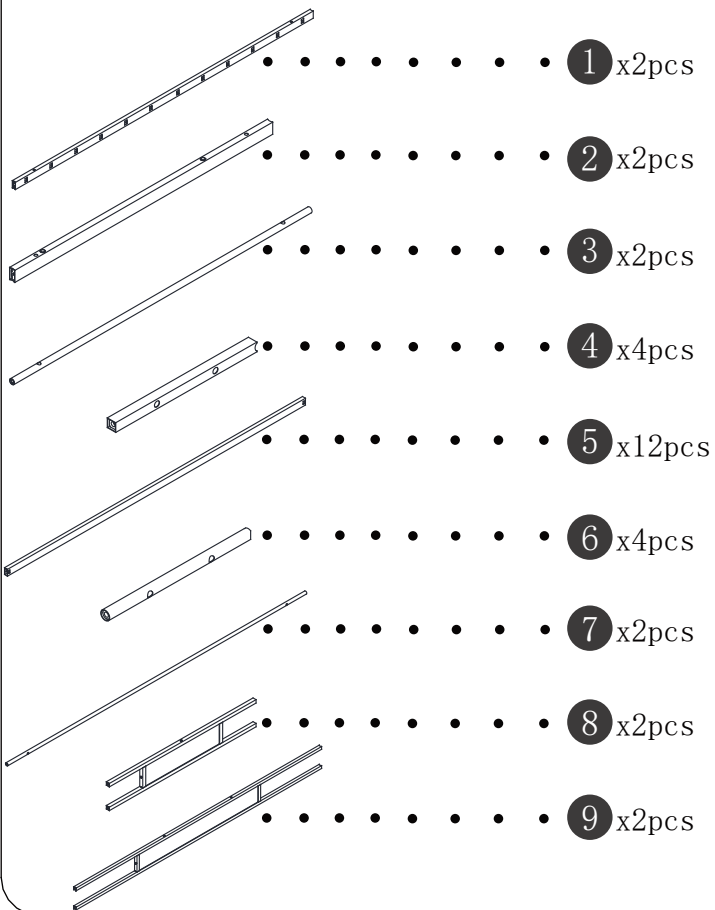


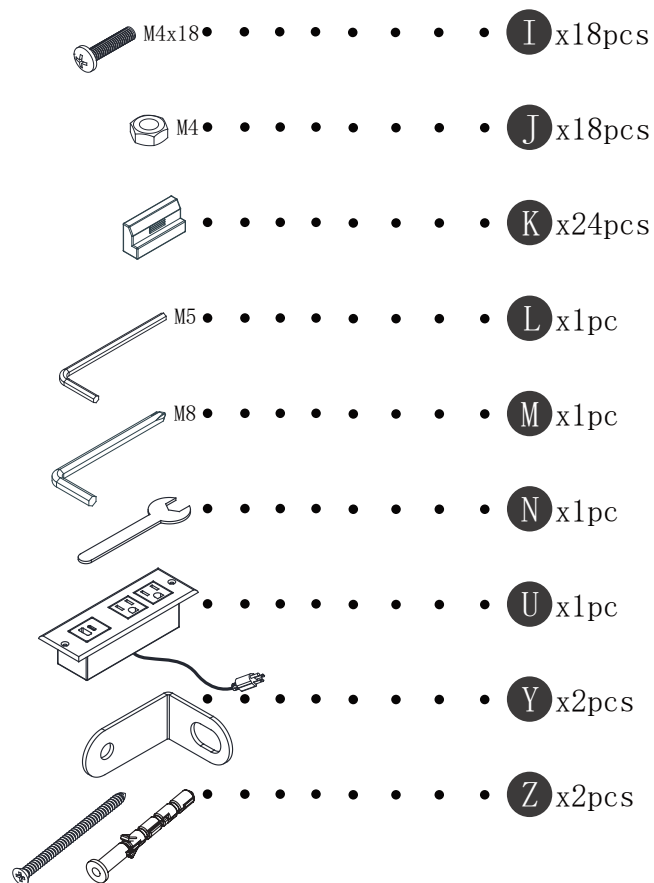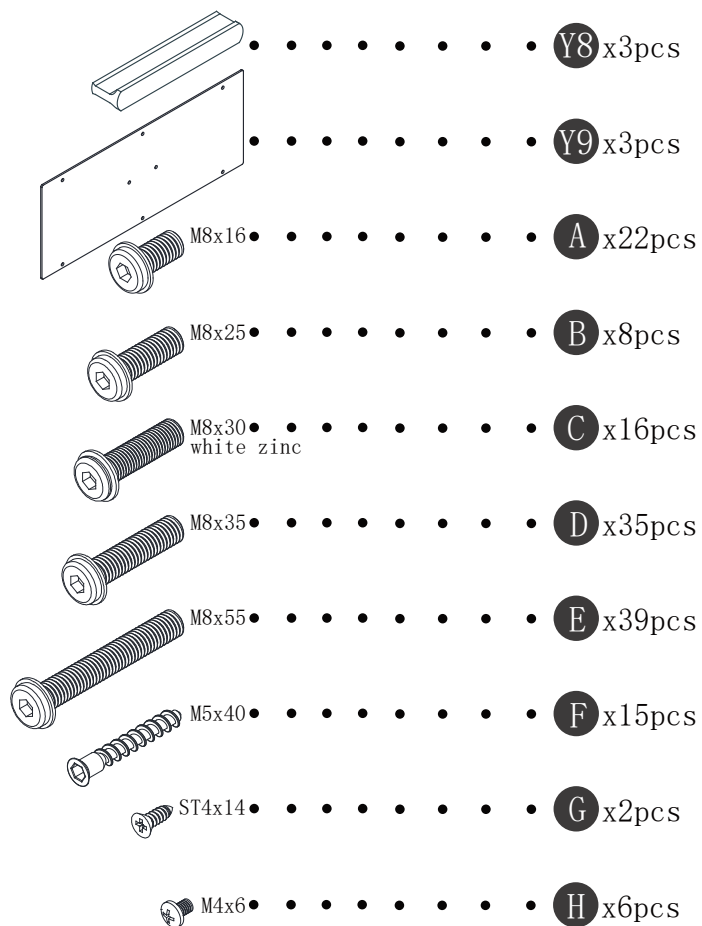


Type 1

Type 2

Choose the appropriate assembly steps based on the layout of the rooms in your home.

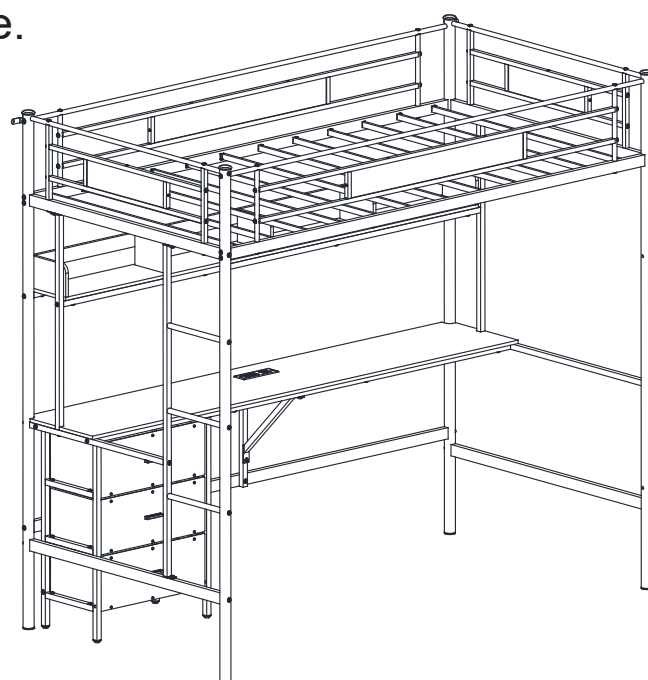


Type 1

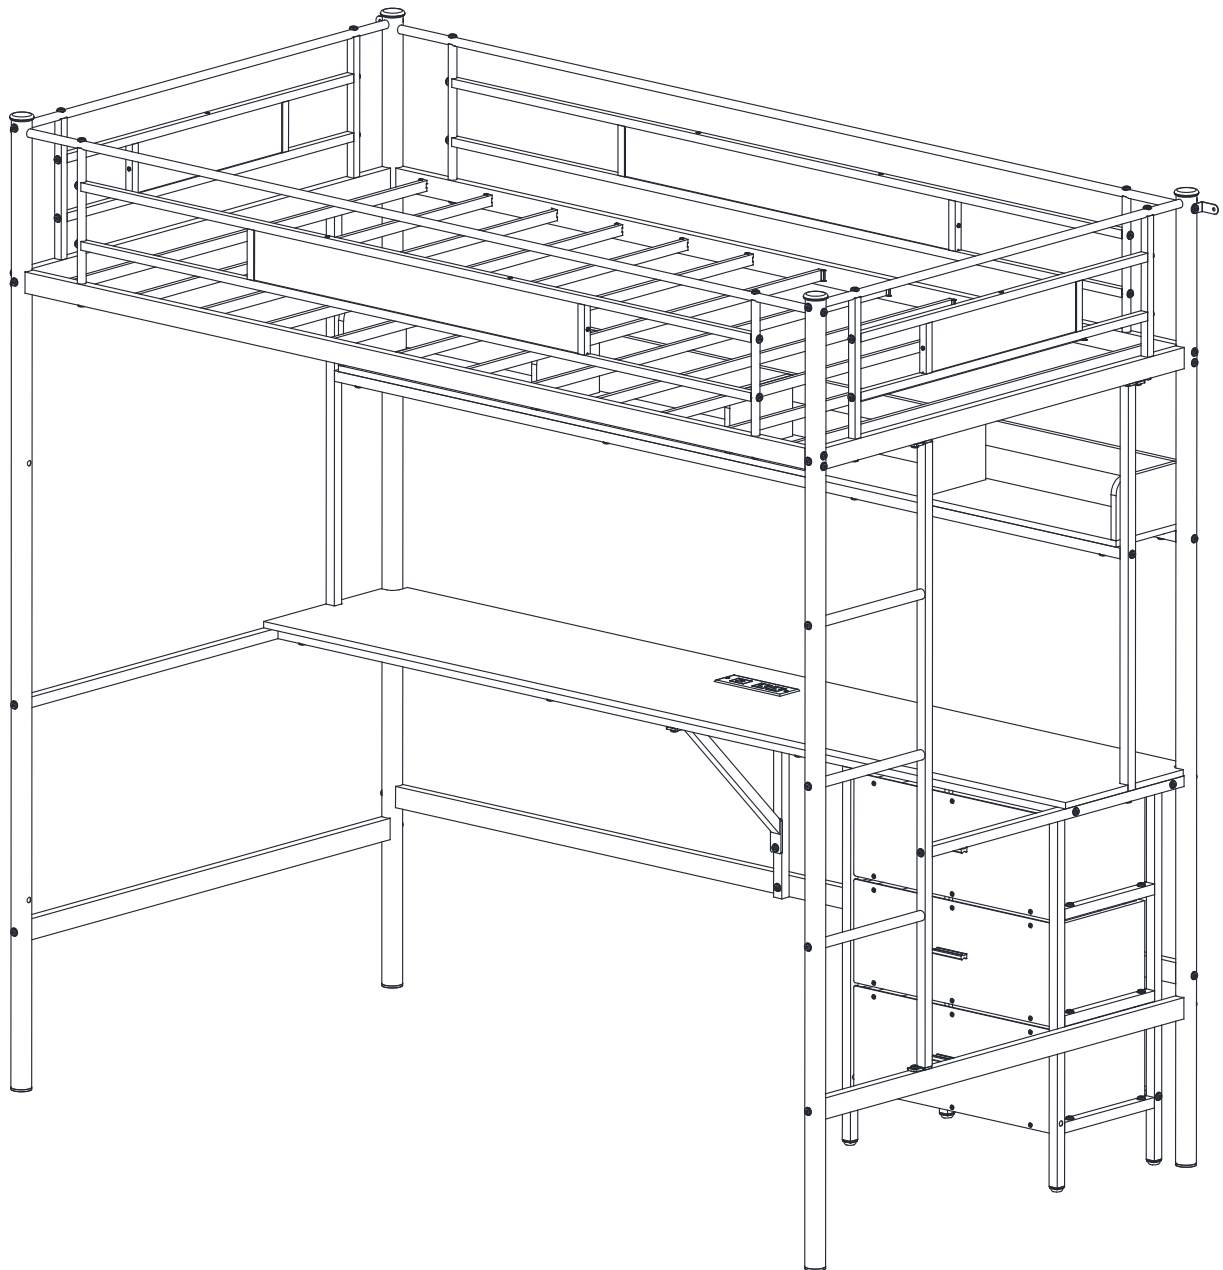

1

x2

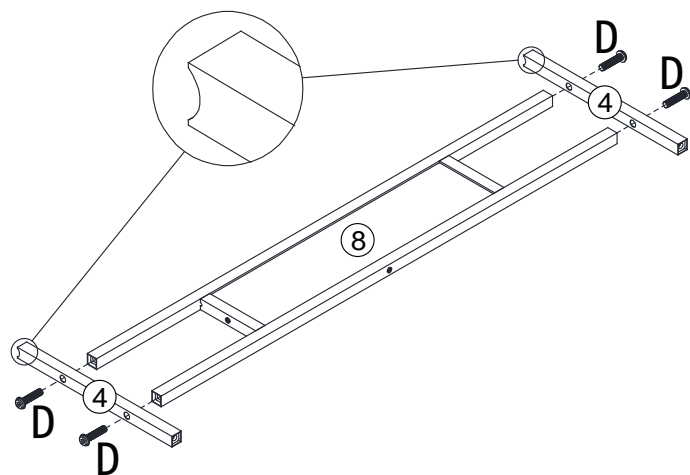


D		8pcs
---	---	------

M8x35

2

x2

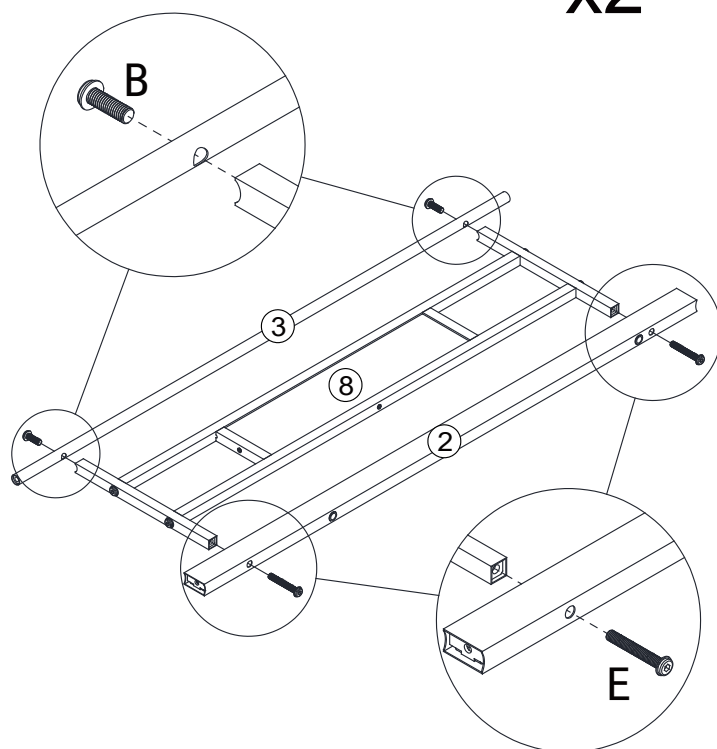


B		4pcs
E		4pcs

M8x25

M8x55

3

x2

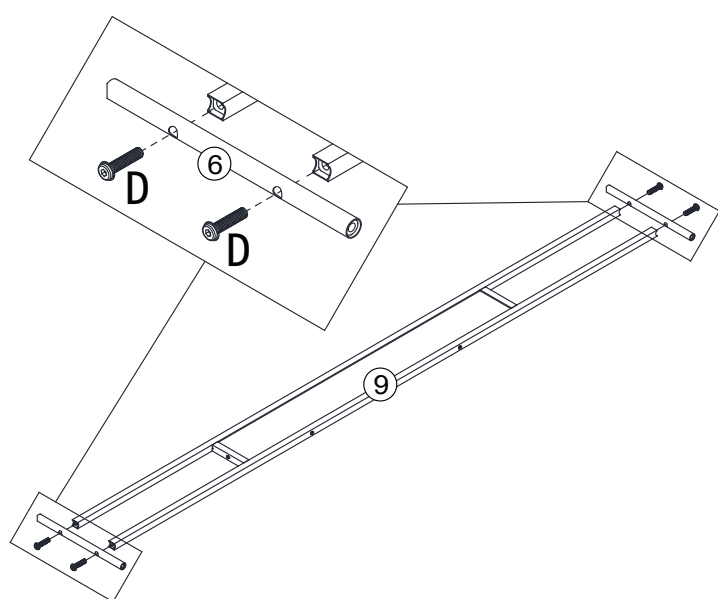


D		8pcs
---	---	------

M8x35

4

x2

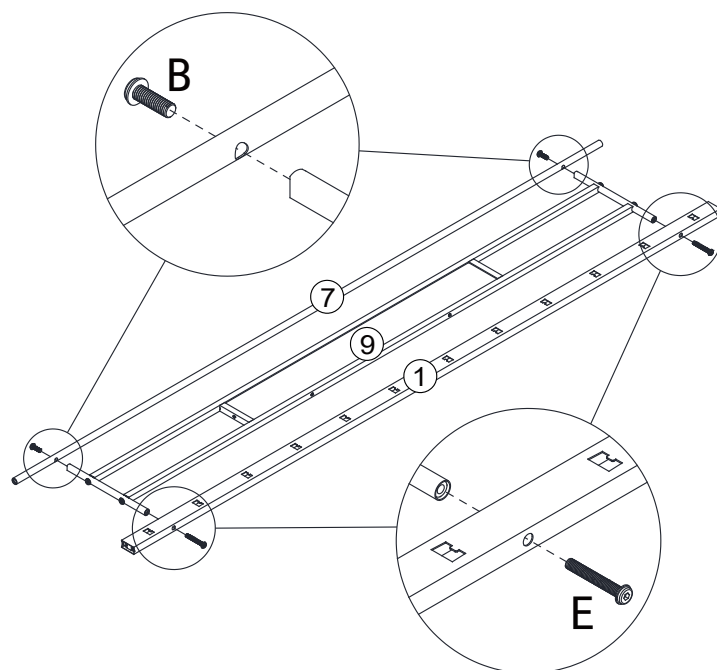


B		4pcs
E		4pcs

M8x25

M8x55


5

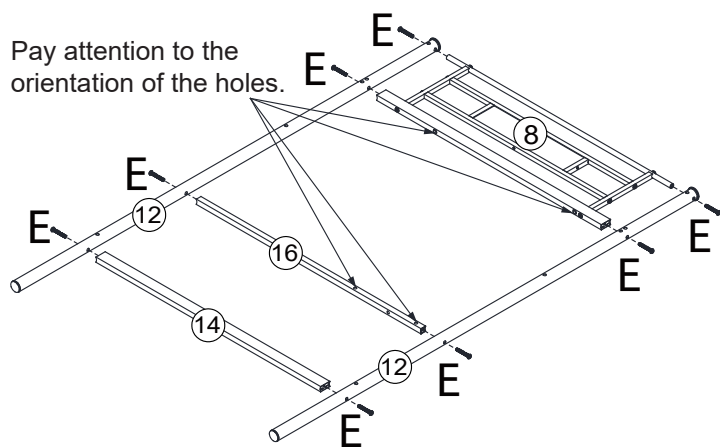

⚠ Do not fully tighten the screws yet.

E		8pcs
	M8x55	

6

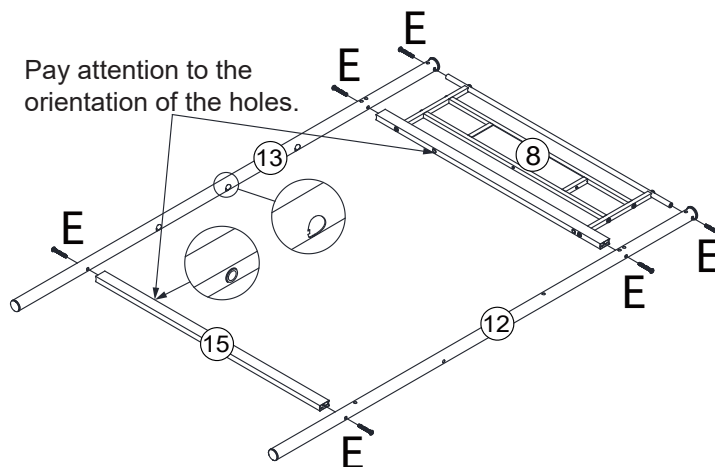


⚠ Do not fully tighten the screws yet.

E		6pcs
	M8x55	


7

⚠ Do not fully tighten the screws yet.

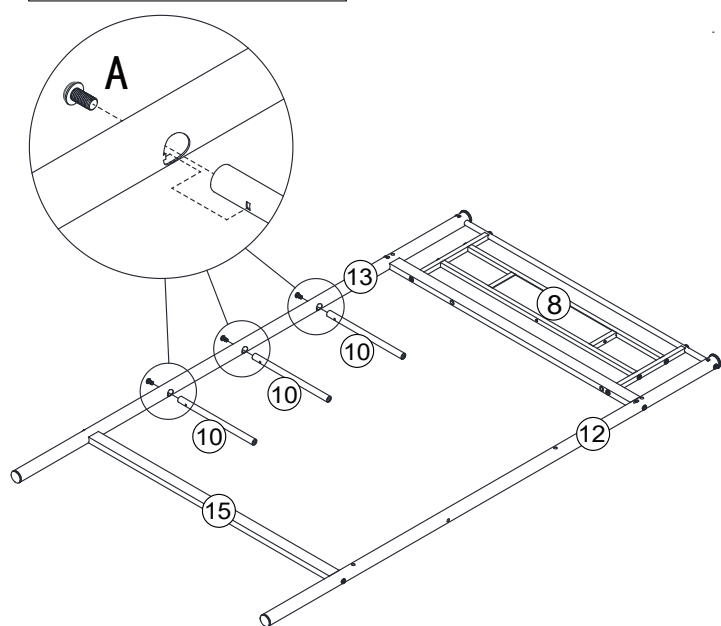

A		3pcs
	M8x16	


8

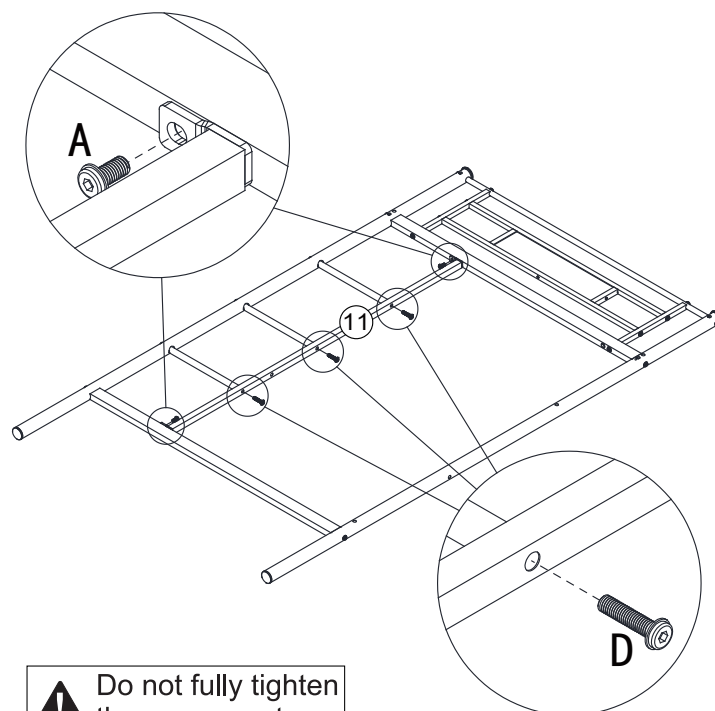


⚠ Do not fully tighten the screws yet.


A		2pcs
	M8x16	
D		3pcs
	M8x35	

9

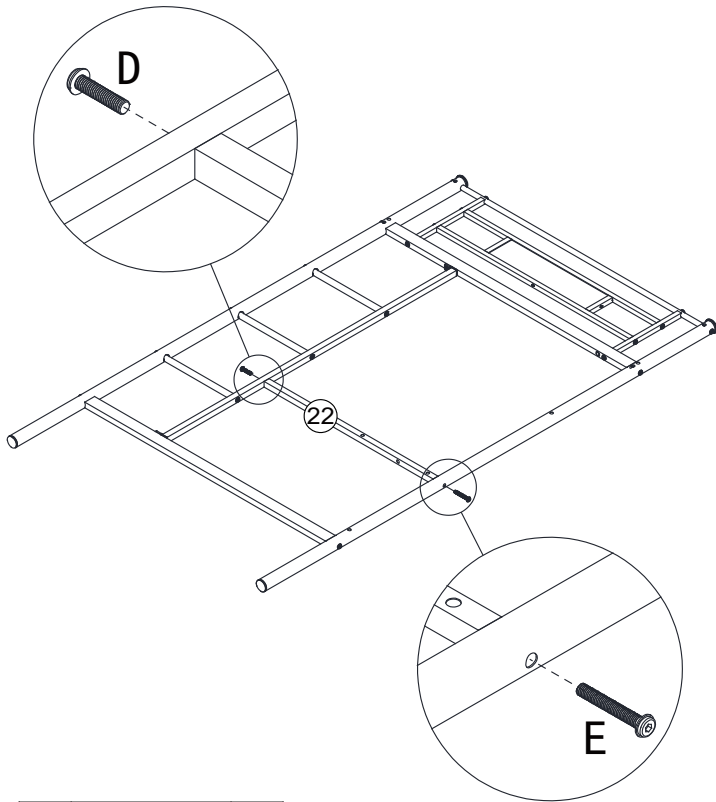

D	 M8x35	1pc
E	 M8x55	1pc


10

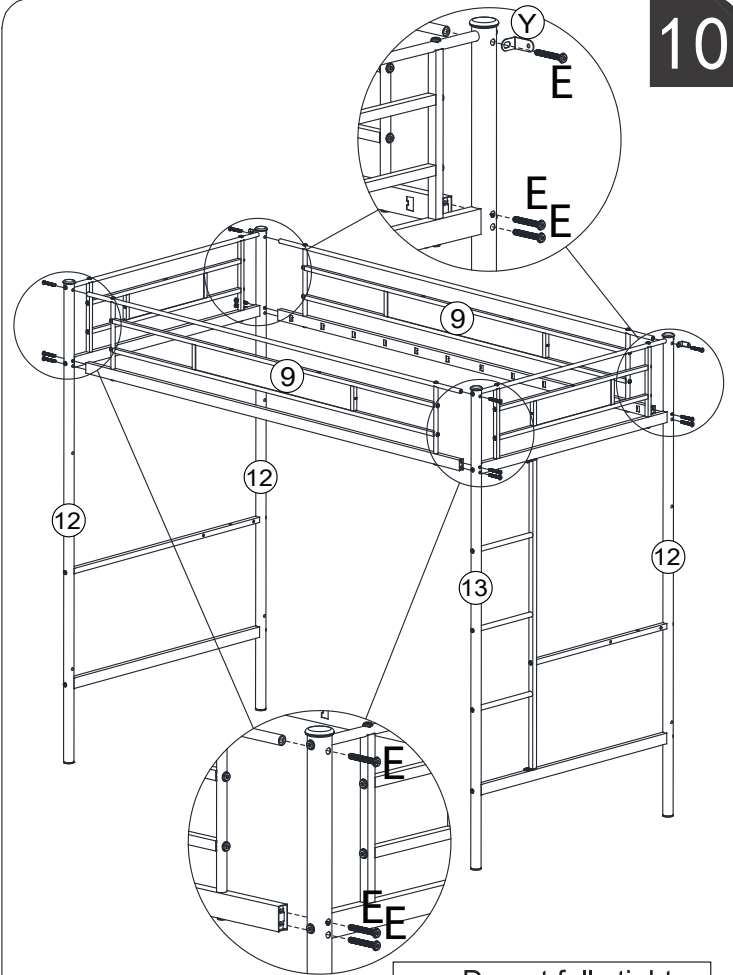

E	 M8x55	12pcs
---	--	-------


! Do not fully tighten the screws yet.

11

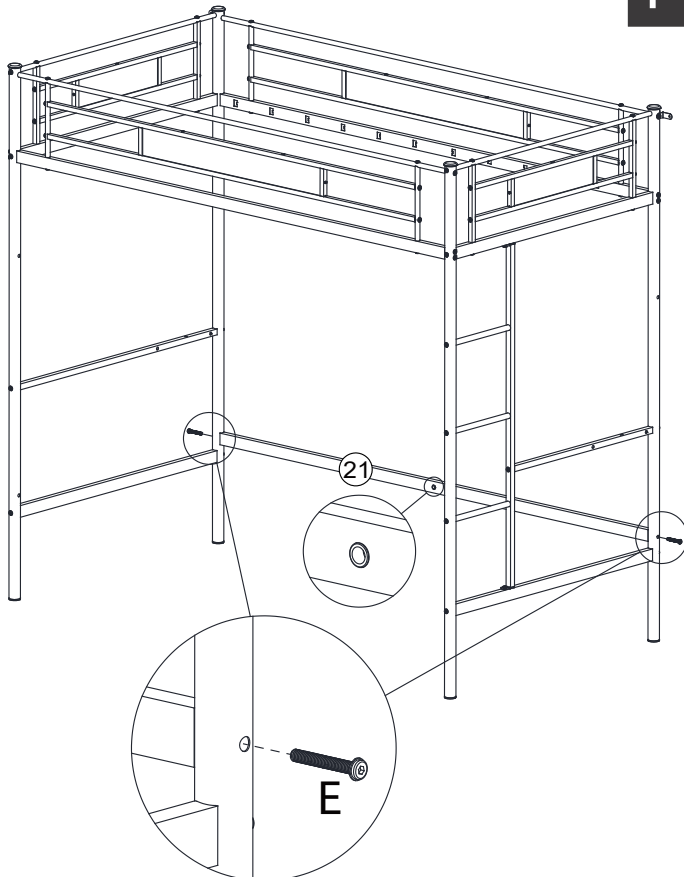

E	 M8x55	2pcs
---	--	------


12

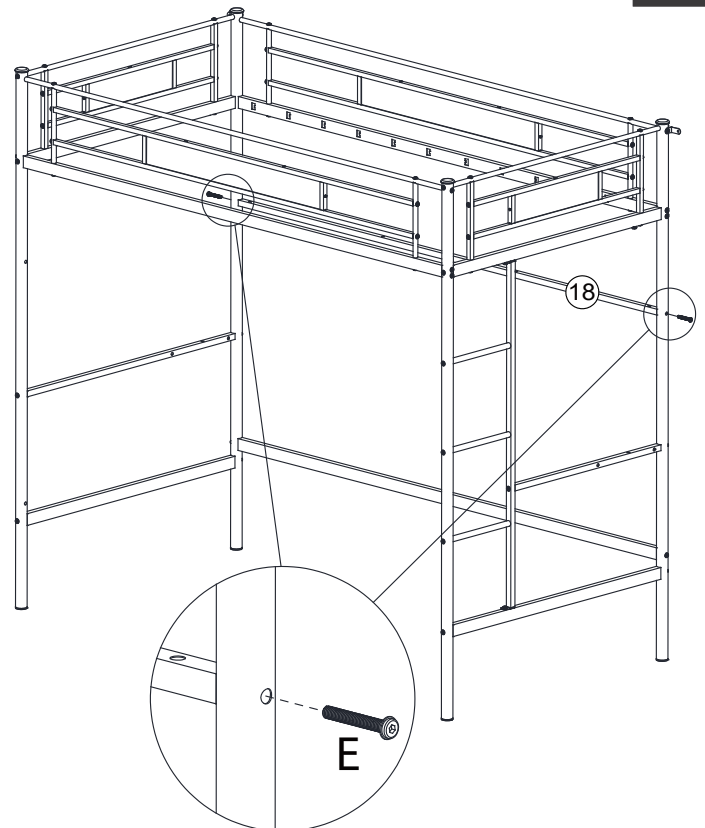

E	 M8x55	2pcs
---	--	------

! Do not fully tighten the screws yet.


13

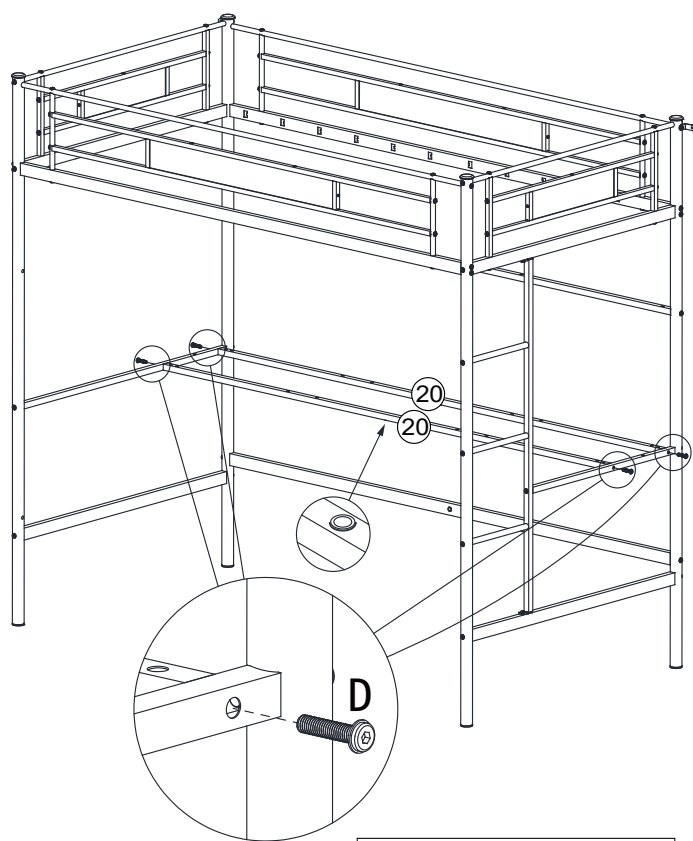

D		4pcs
---	---	------


! Do not fully tighten the screws yet.

14

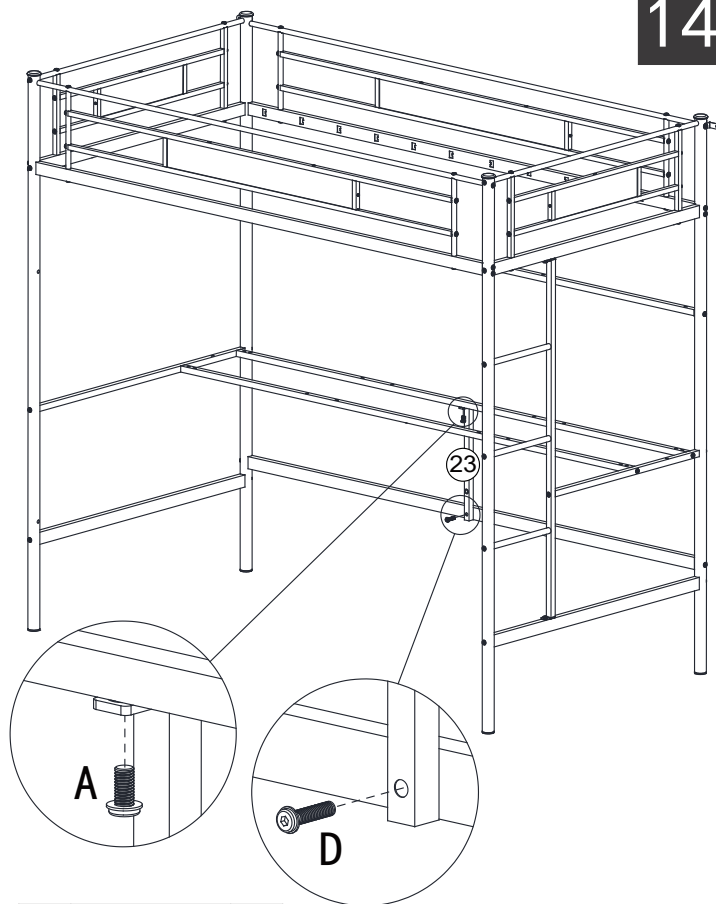


A		1pc
D		1pc

15

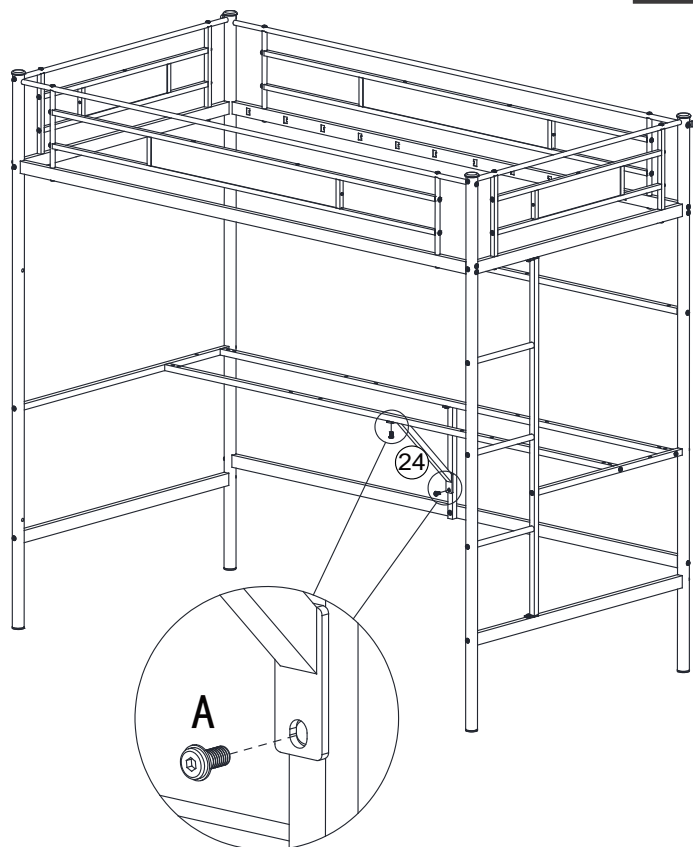


A		2pcs
---	---	------

16

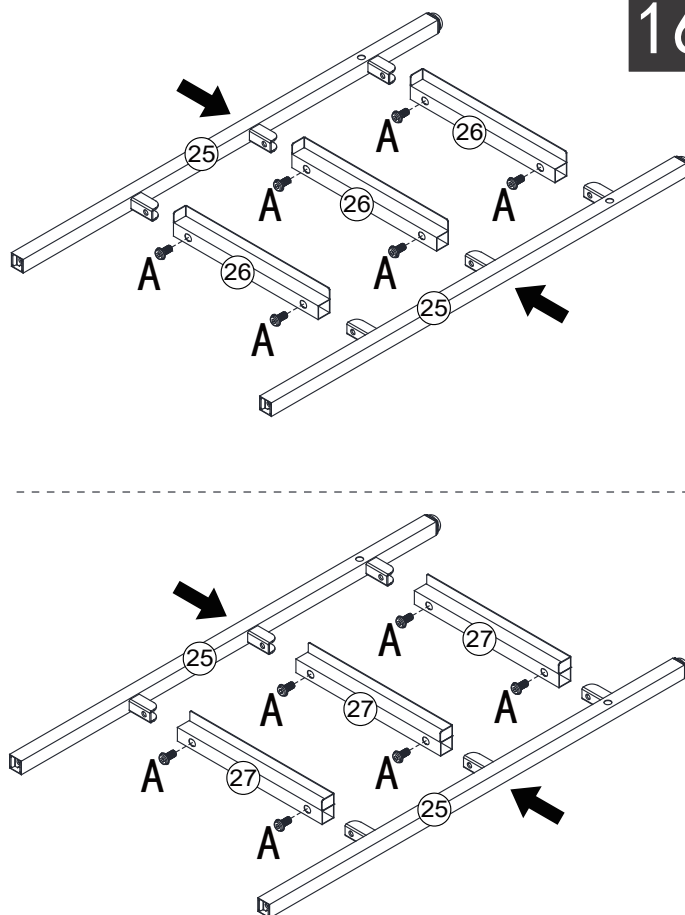

A		12pcs
---	---	-------

17

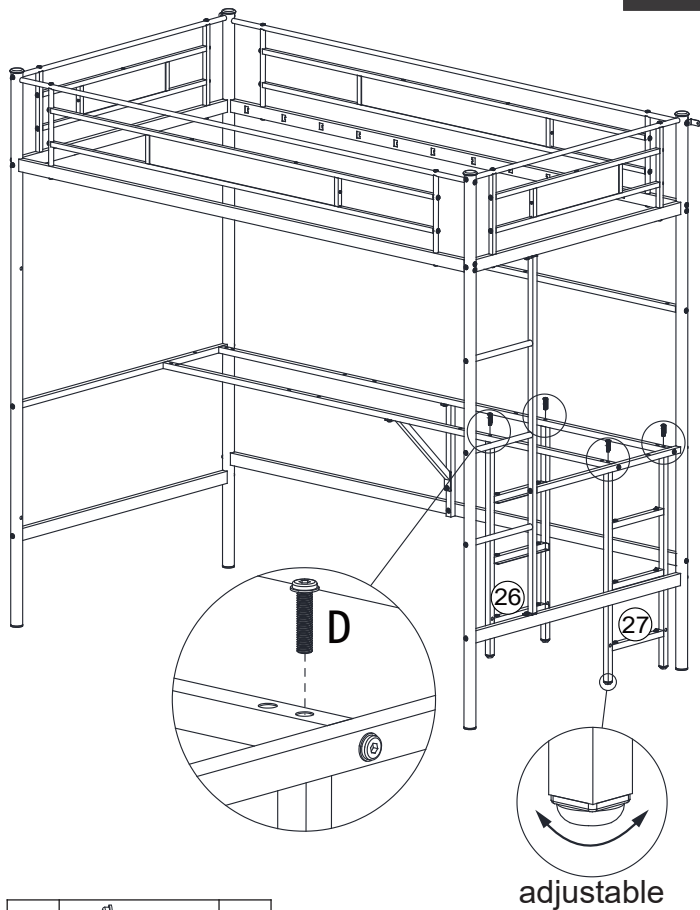


D		4pcs
---	---	------

M8x35

adjustable


18

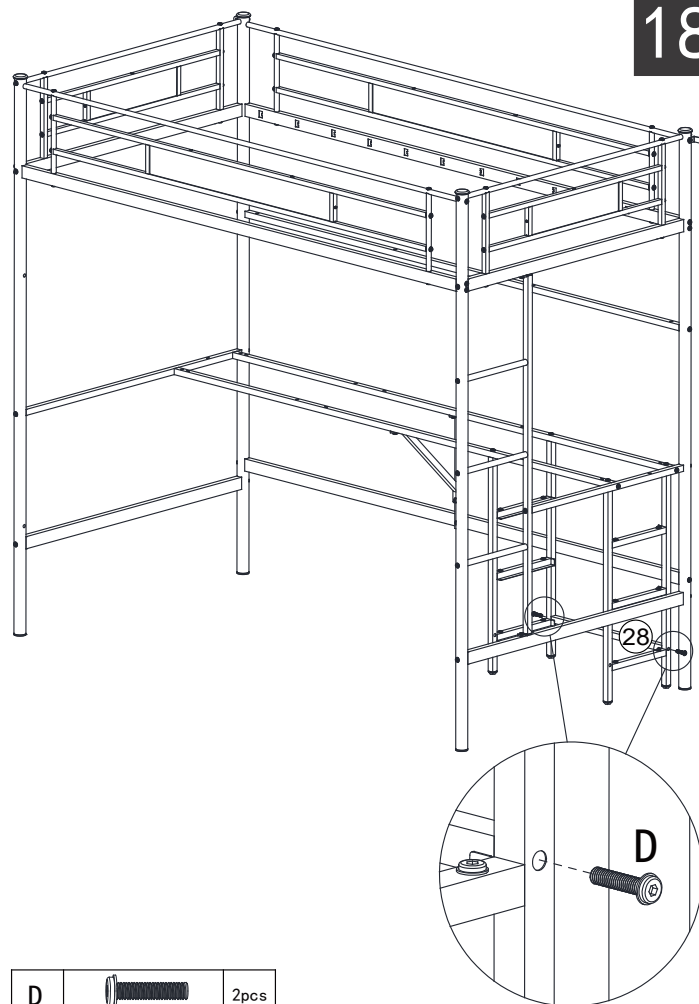

D		2pcs
---	--	------

M8x35


19

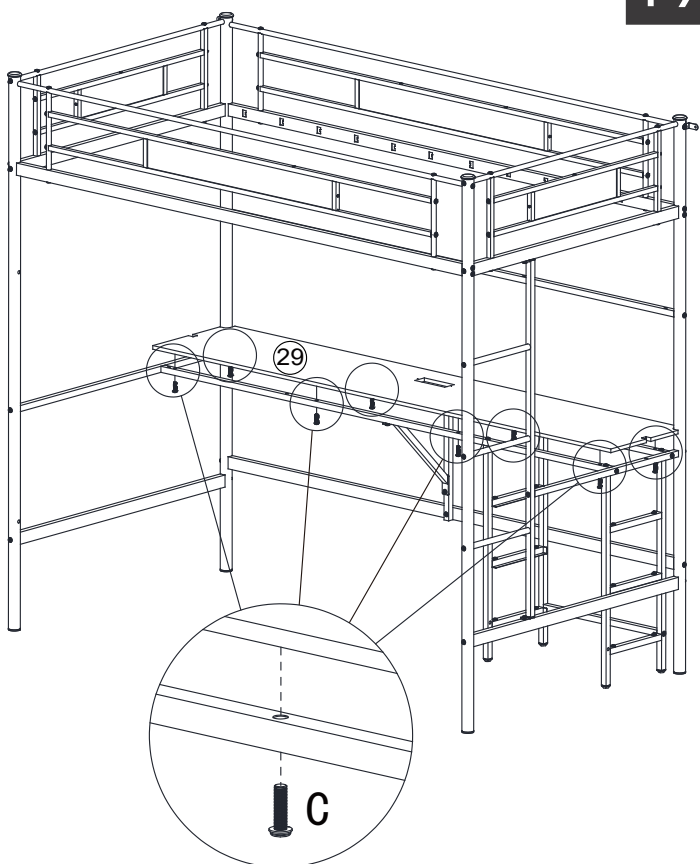

C		8pcs	white zinc
---	---	------	------------

M8x30

20

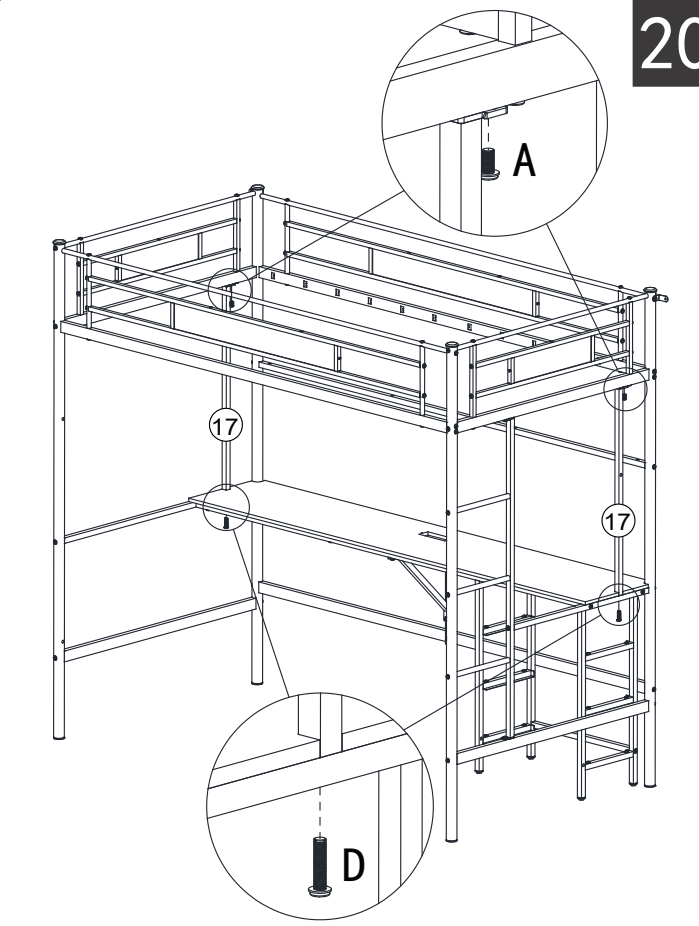


A		2pcs
D		2pcs

M8x16

M8x35

21

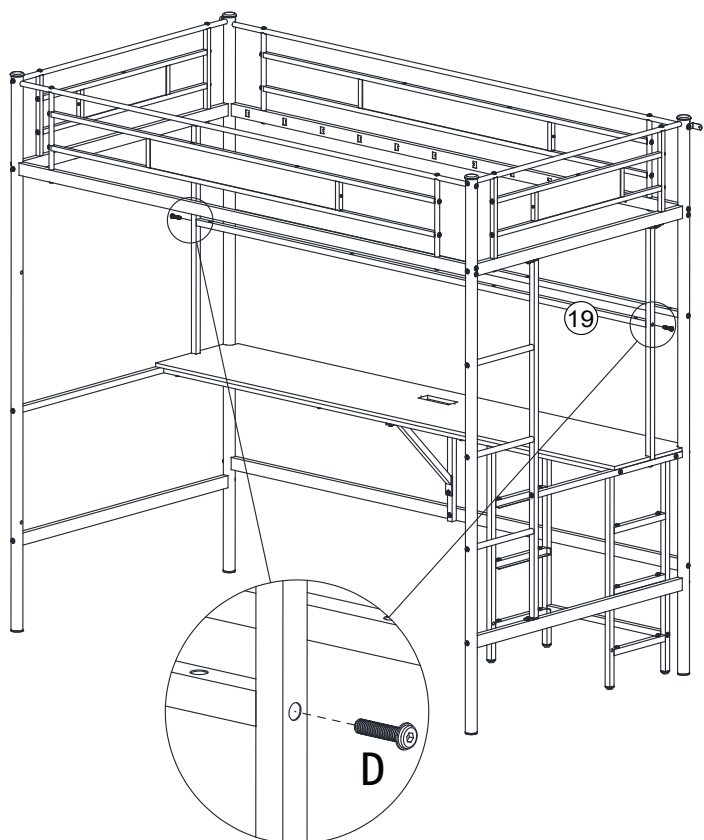


D



2pcs

⚠ Do not fully tighten the screws yet.

22

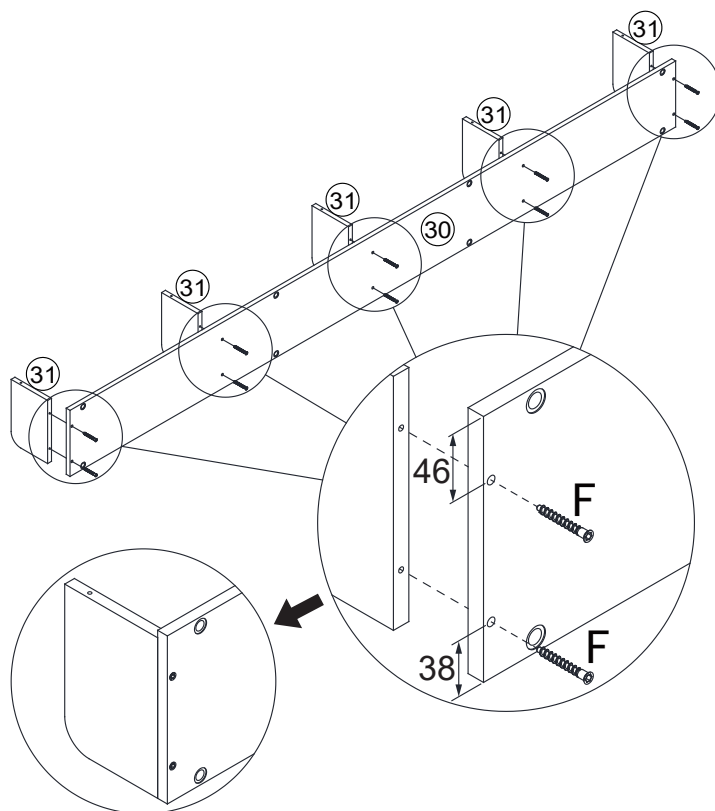


F



10pcs

23

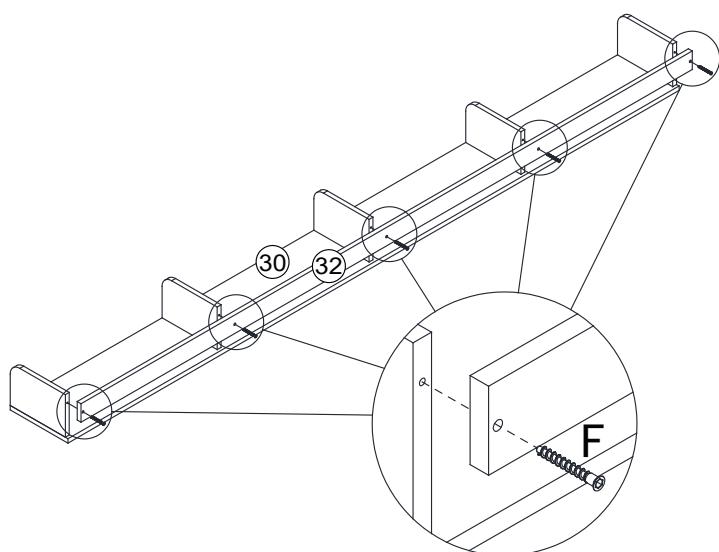


F



5pcs

24

⚠ Fully tighten all the screws.

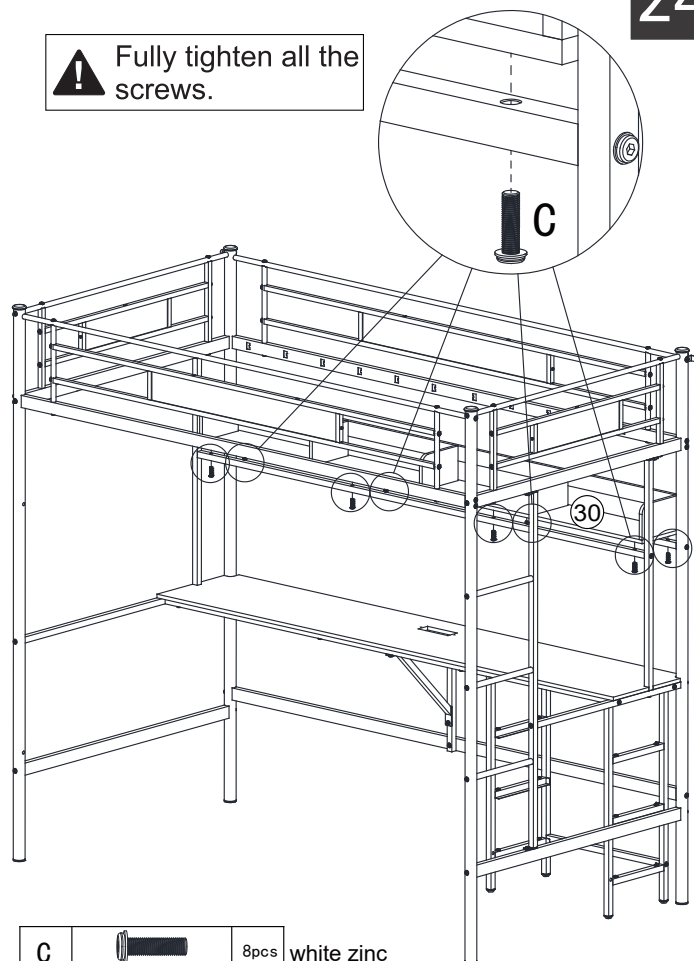


C



8pcs

white zinc

25

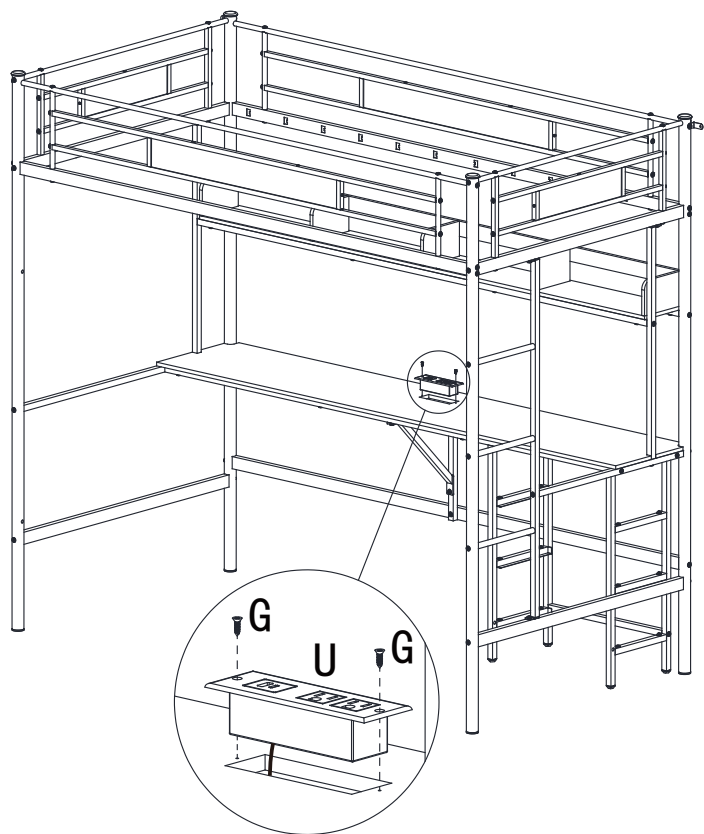


G

ST4x14

2pcs

26

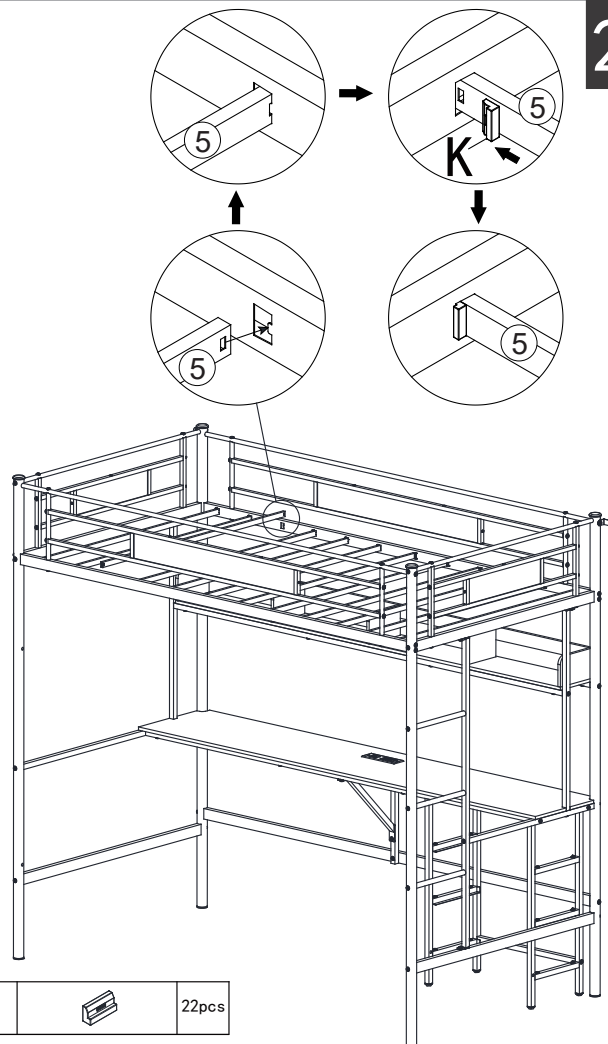


K

22pcs


x6 27

Pay attention to the orientation of the holes.

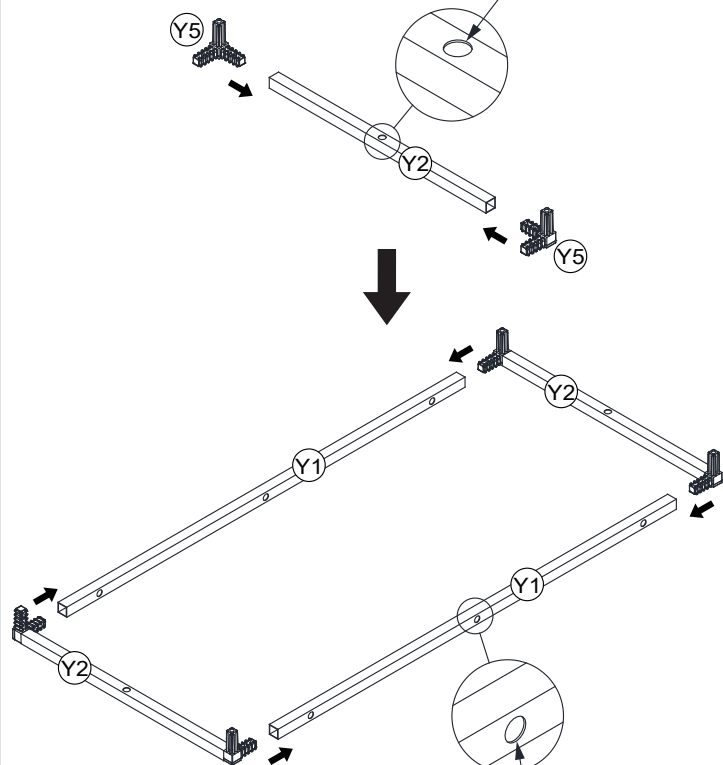


Pay attention to the orientation of the holes.


x3 28

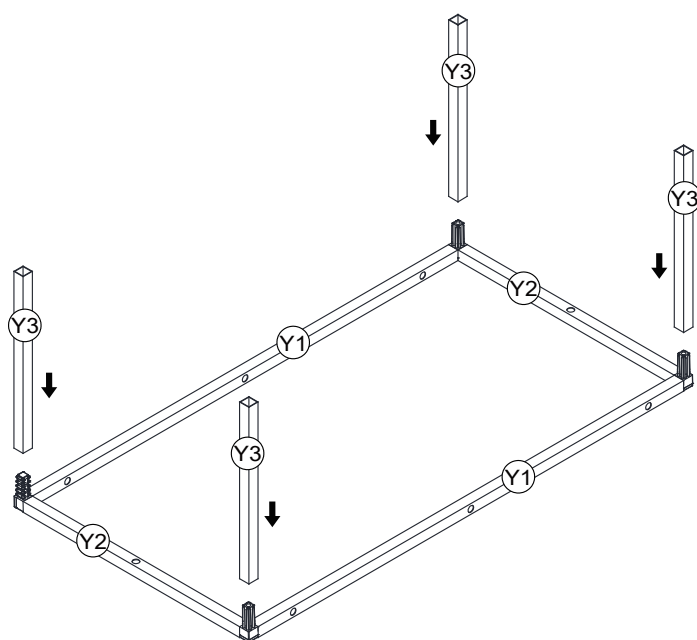


x3 29

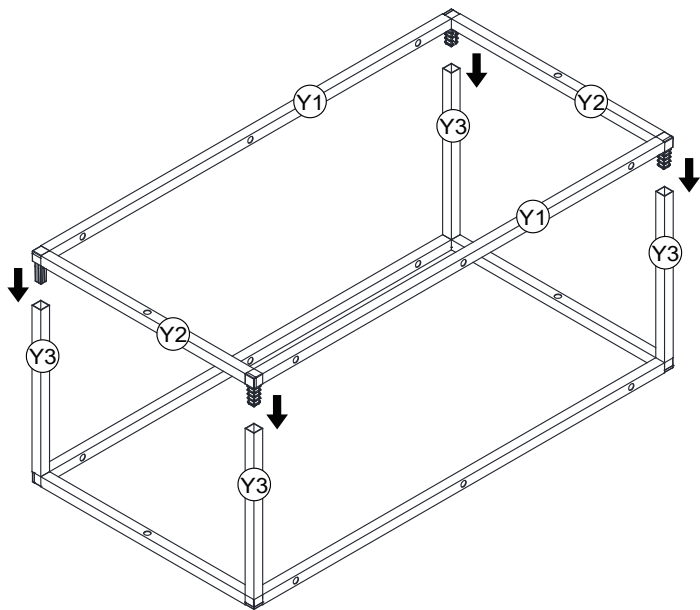


x3 30

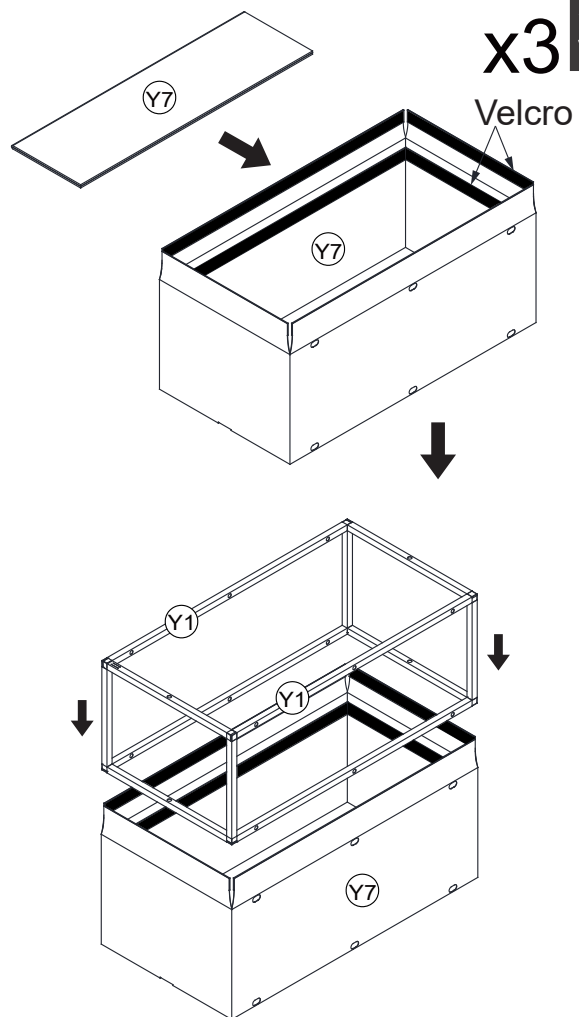


x3 31

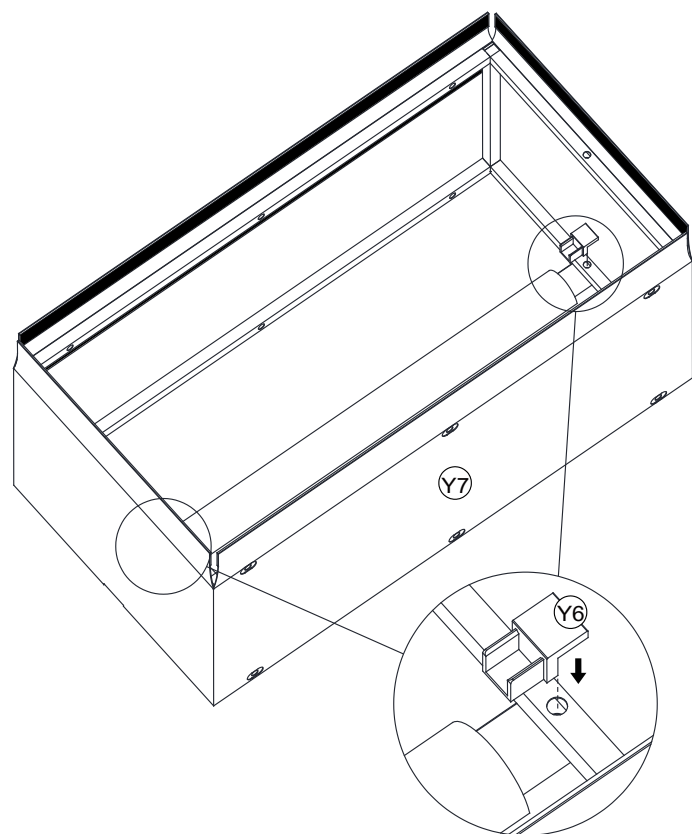

x3 32

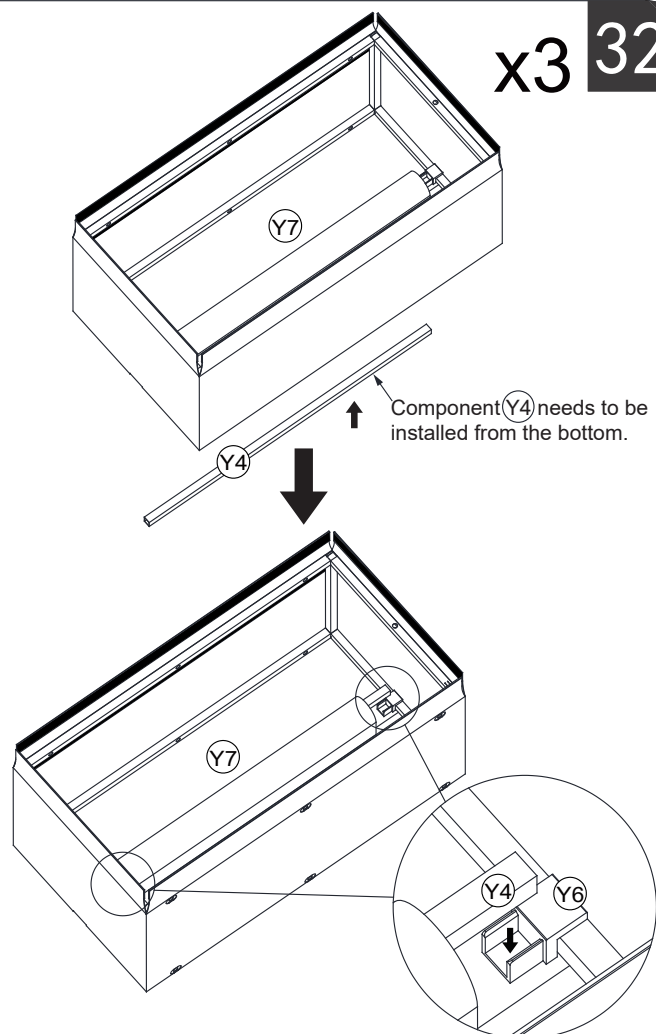


x3 33

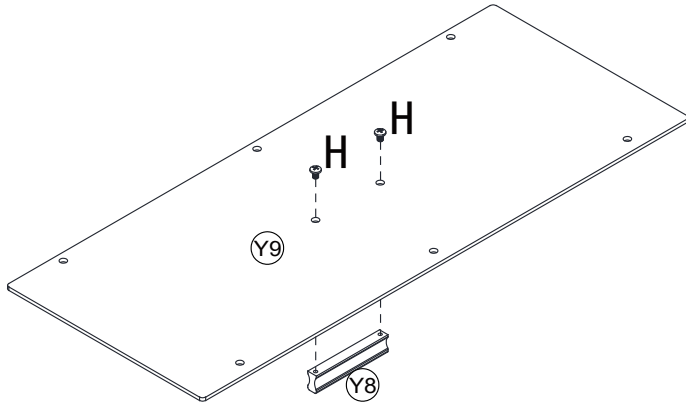

H		6pcs
---	---	------

M4x6

x3 34

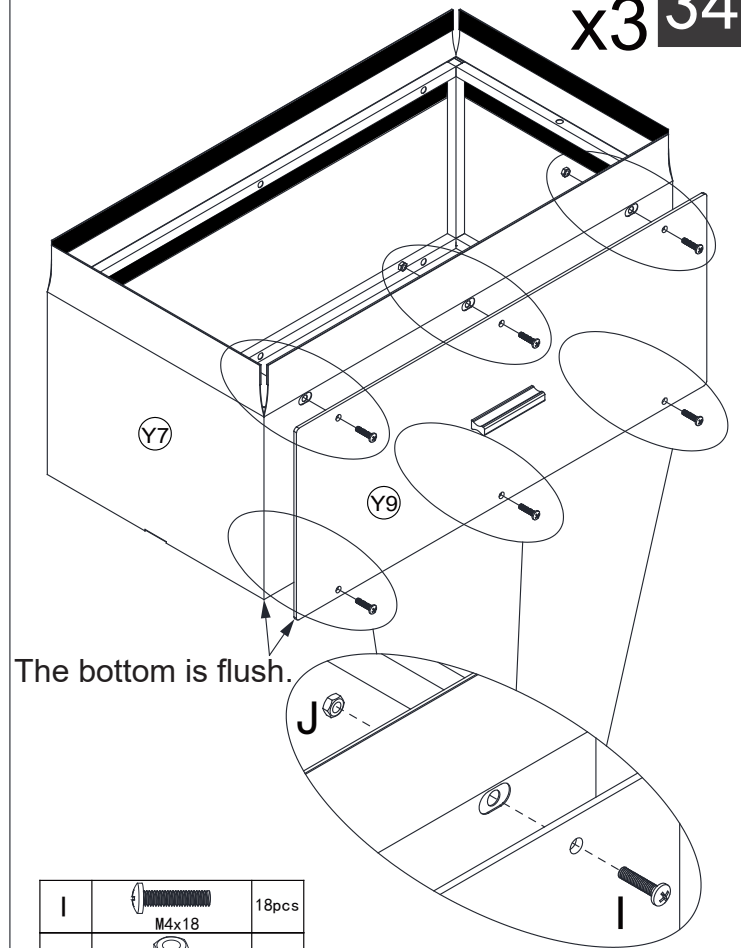

The bottom is flush.


I		18pcs
J		18pcs

M4x18

M4


35

Stick the Velcro around the edges.

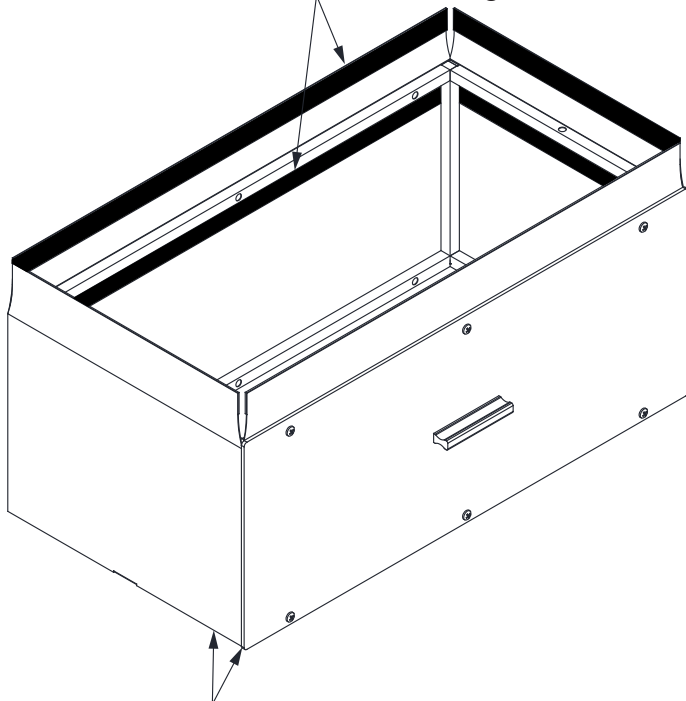


The bottom is flush.


36

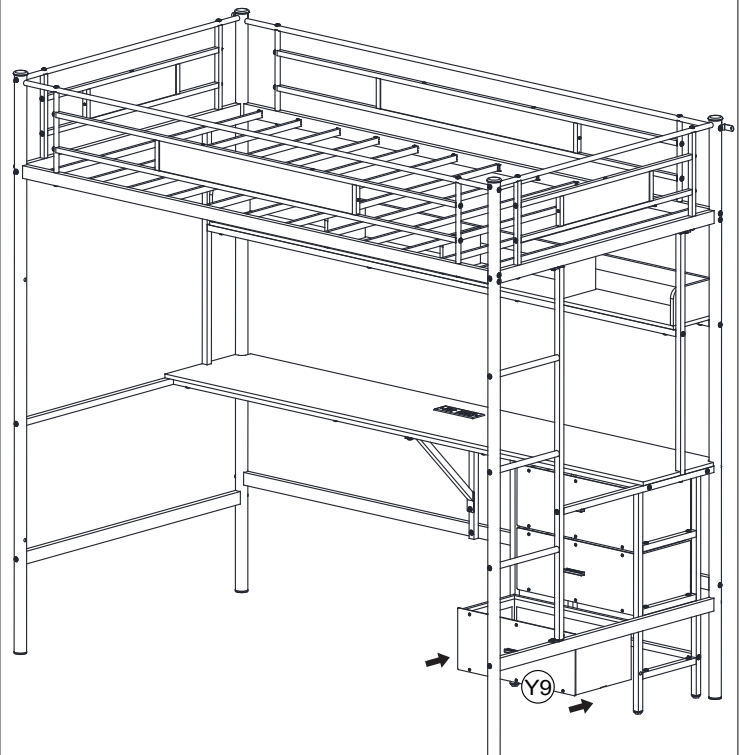

- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

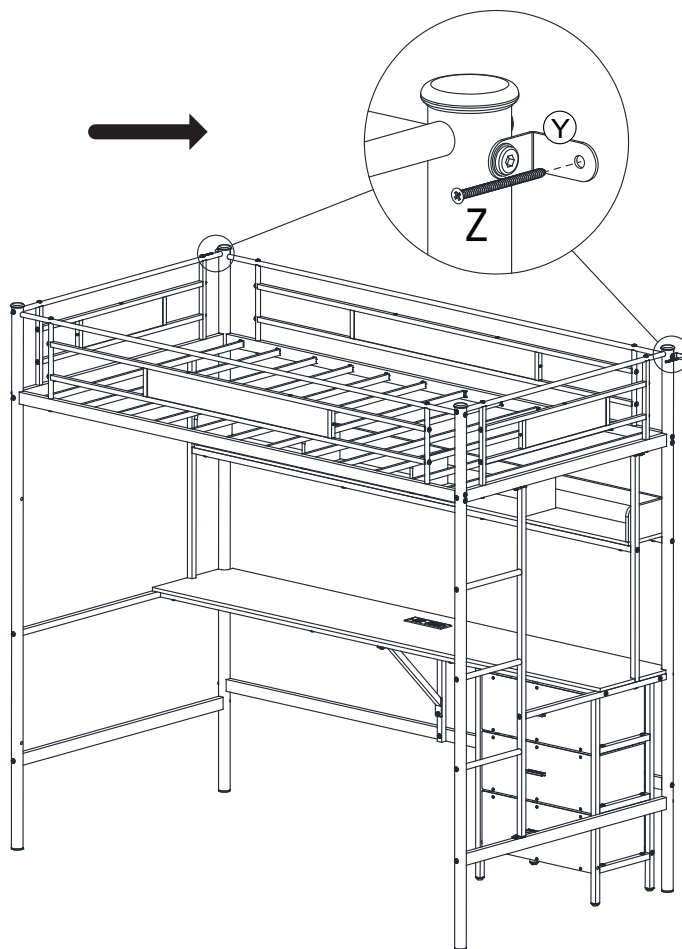


Type 1

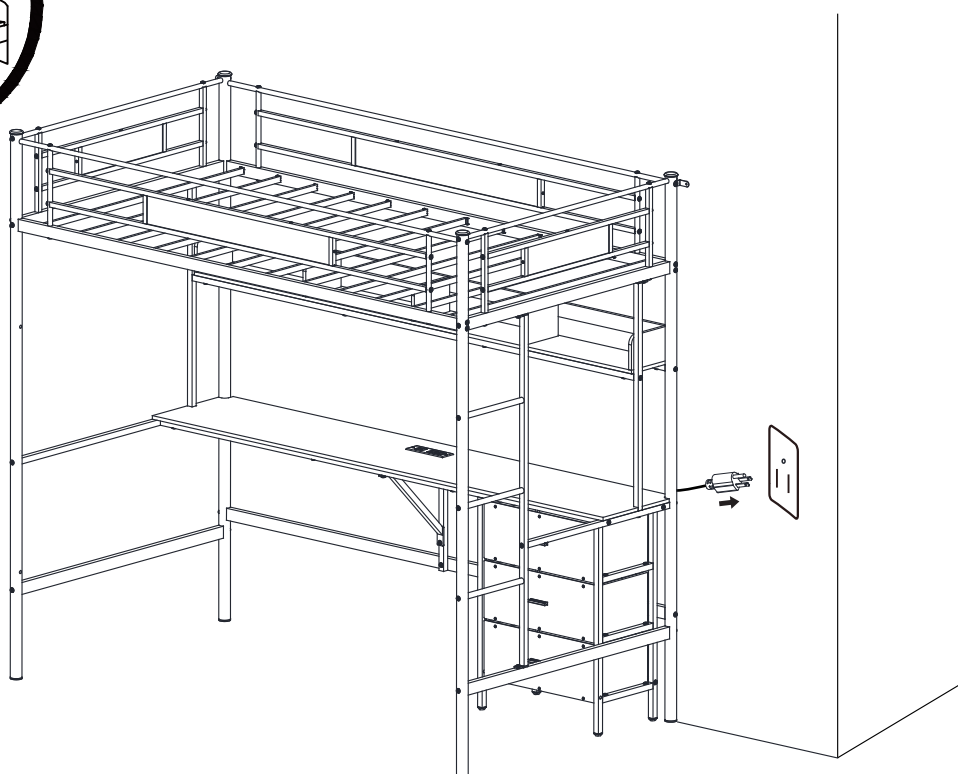


Finish

Type 2

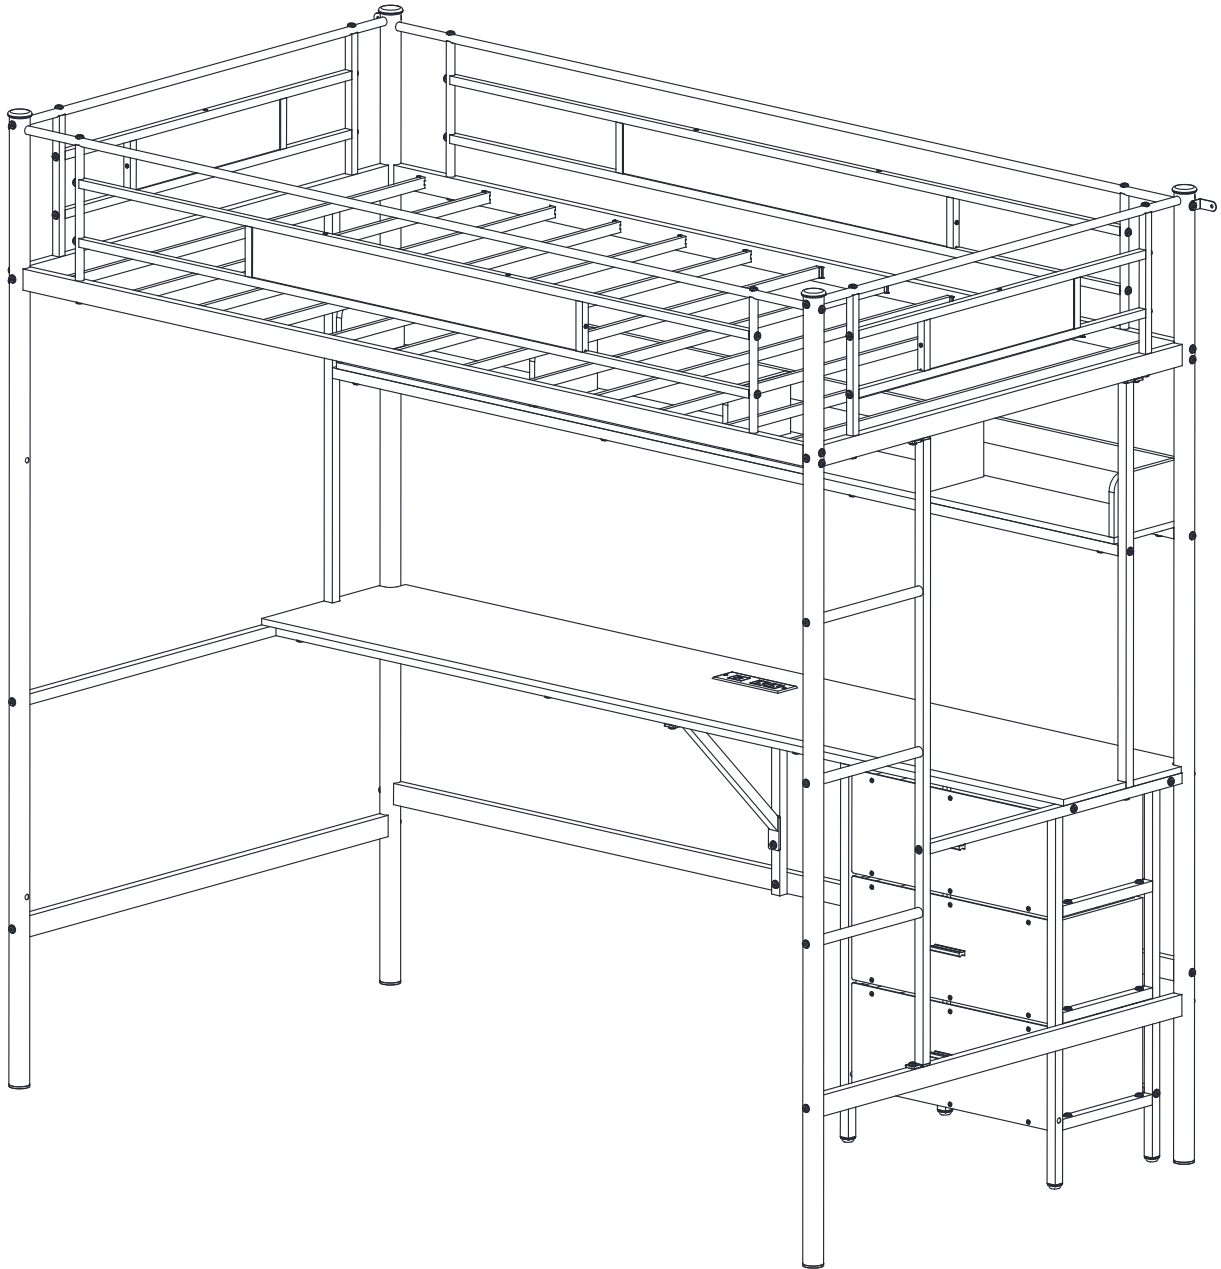

1

x2

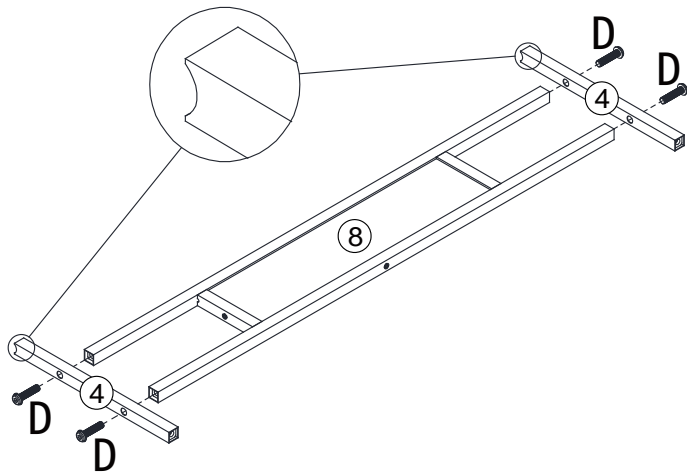


D		8pcs
---	---	------

M8x35

2

x2

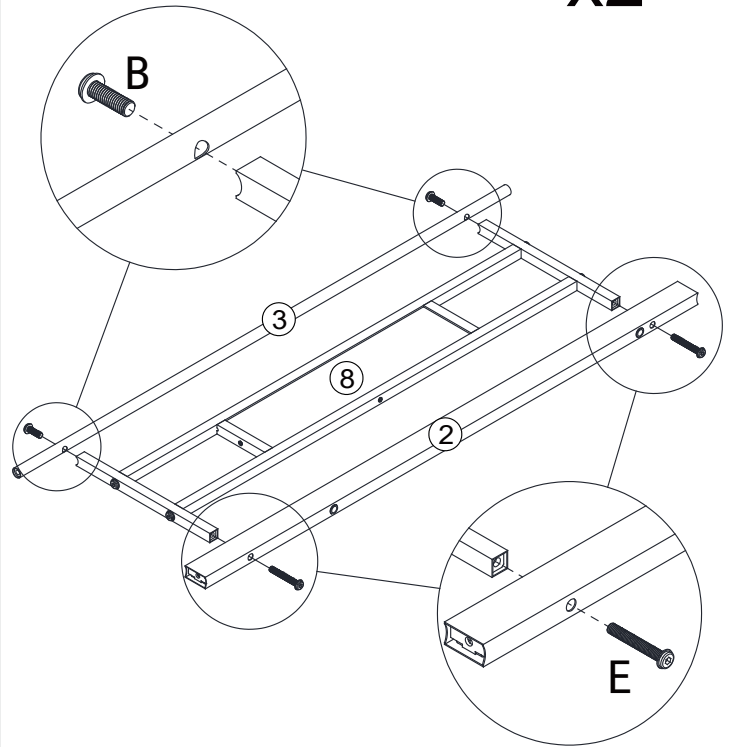


B		4pcs
E		4pcs

M8x25

M8x55

3

x2

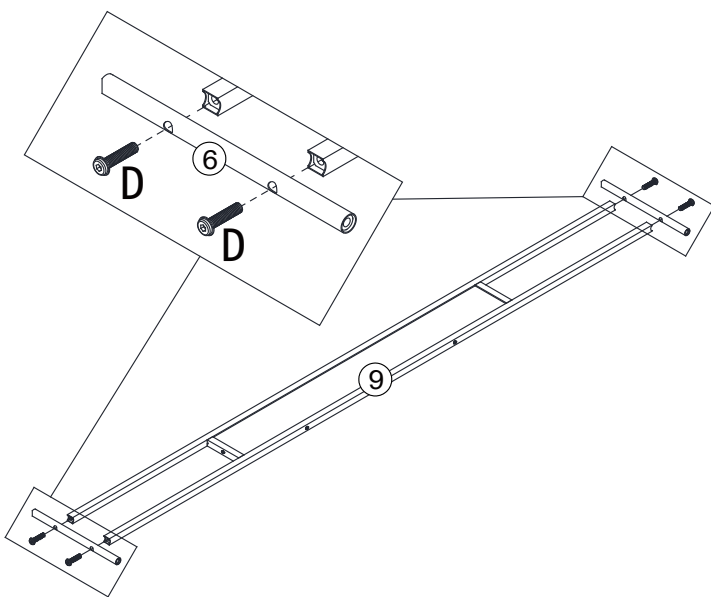


D		8pcs
---	---	------

M8x35

4

x2

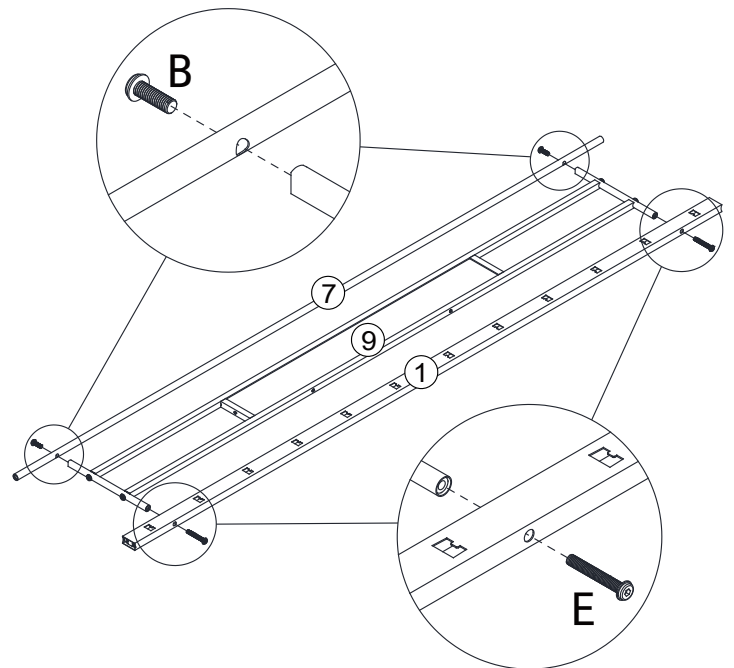


B		4pcs
E		4pcs

M8x25

M8x55


5

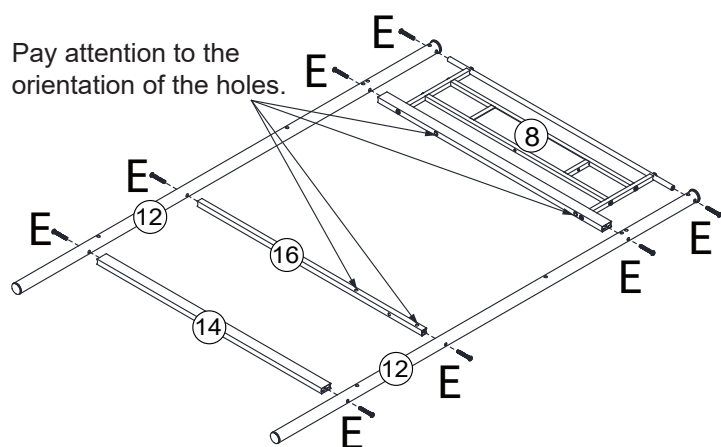

! Do not fully tighten the screws yet.

E		8pcs
M8x55		

6

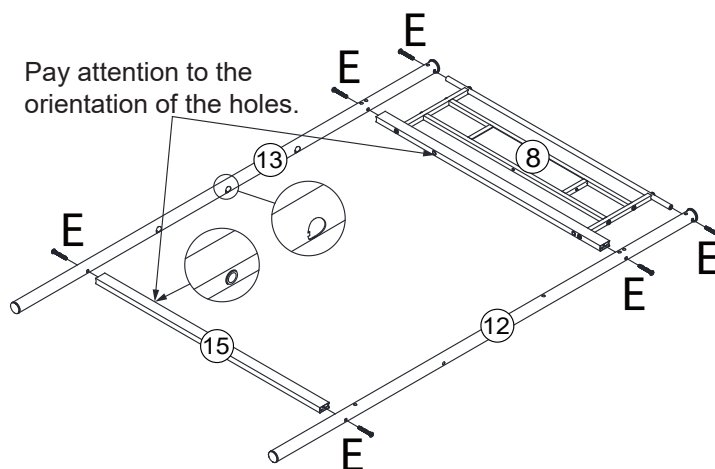


! Do not fully tighten the screws yet.

E		6pcs
M8x55		


7

! Do not fully tighten the screws yet.

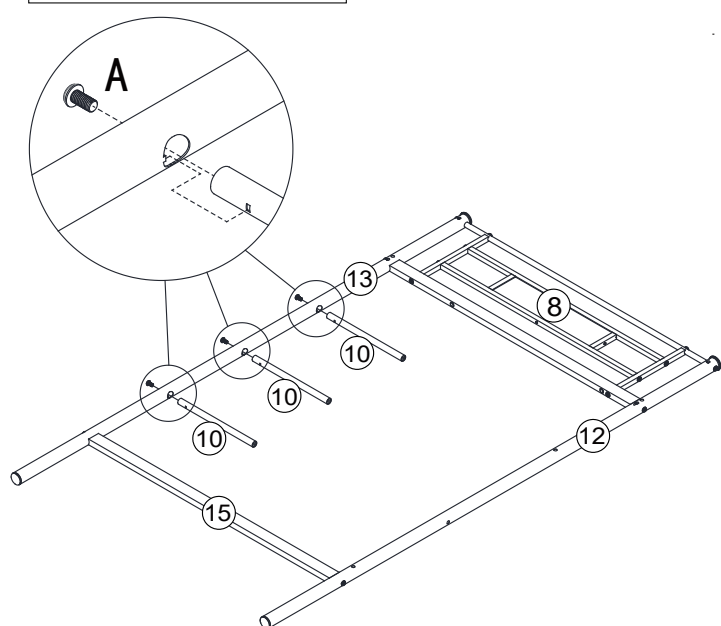

A		3pcs
M8x16		


8

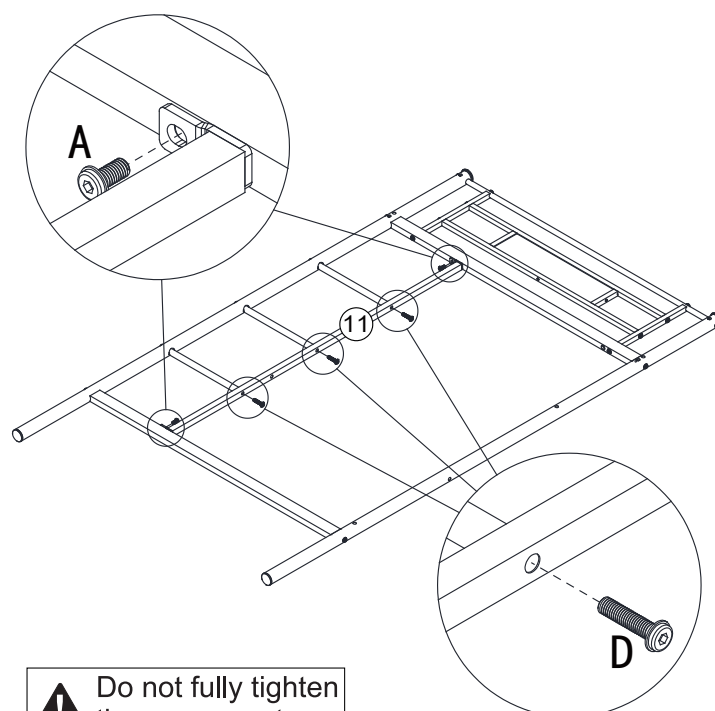

! Do not fully tighten the screws yet.


A		2pcs
M8x16		
D		3pcs
M8x35		

9

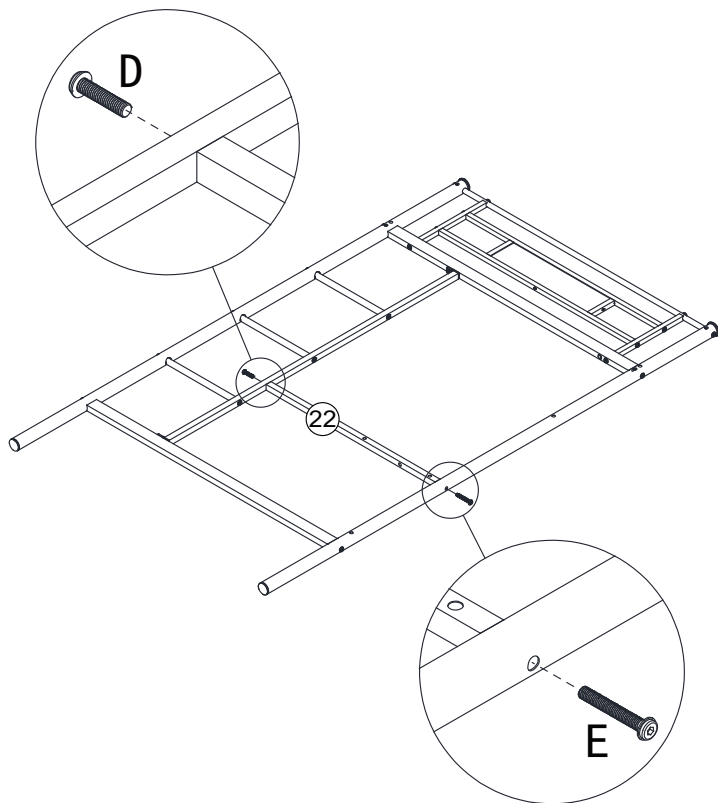


D	 M8x35	1pc
E	 M8x55	1pc

10

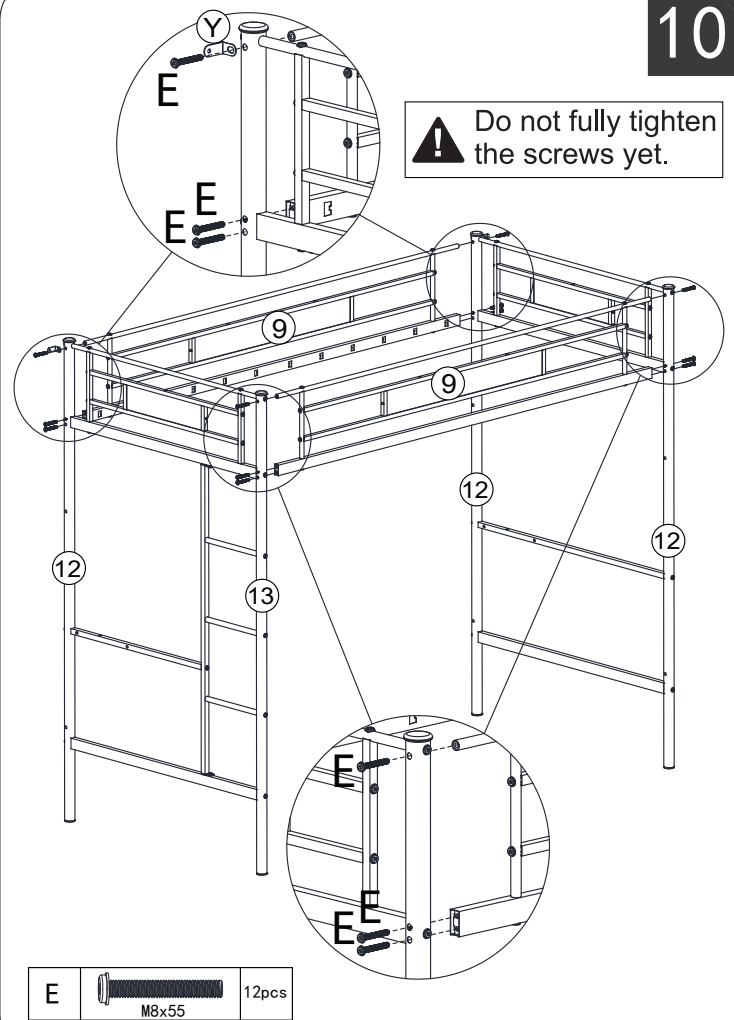


E	 M8x55	12pcs
---	---	-------

11

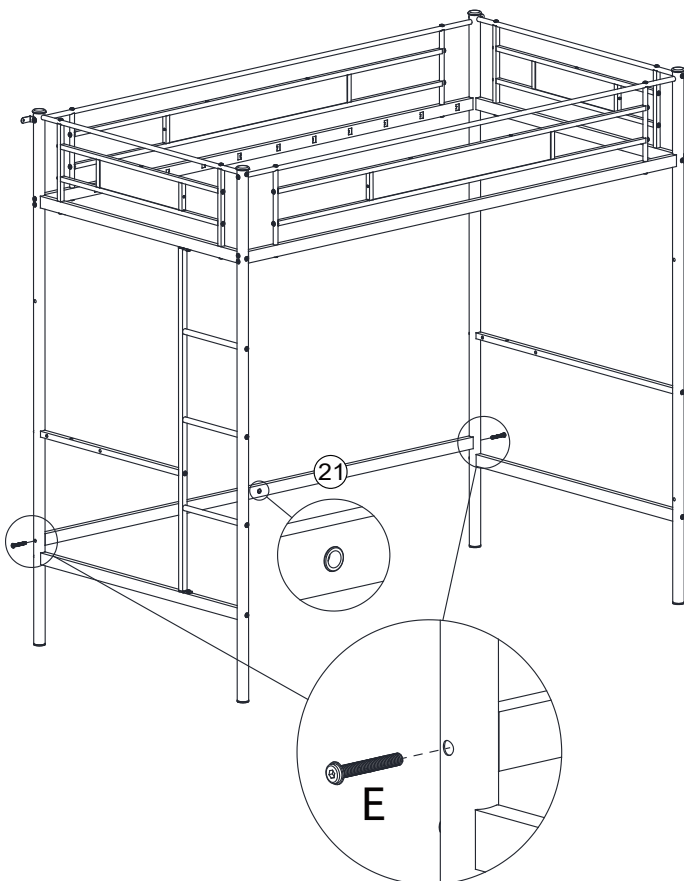

E	 M8x55	2pcs
---	---	------


12

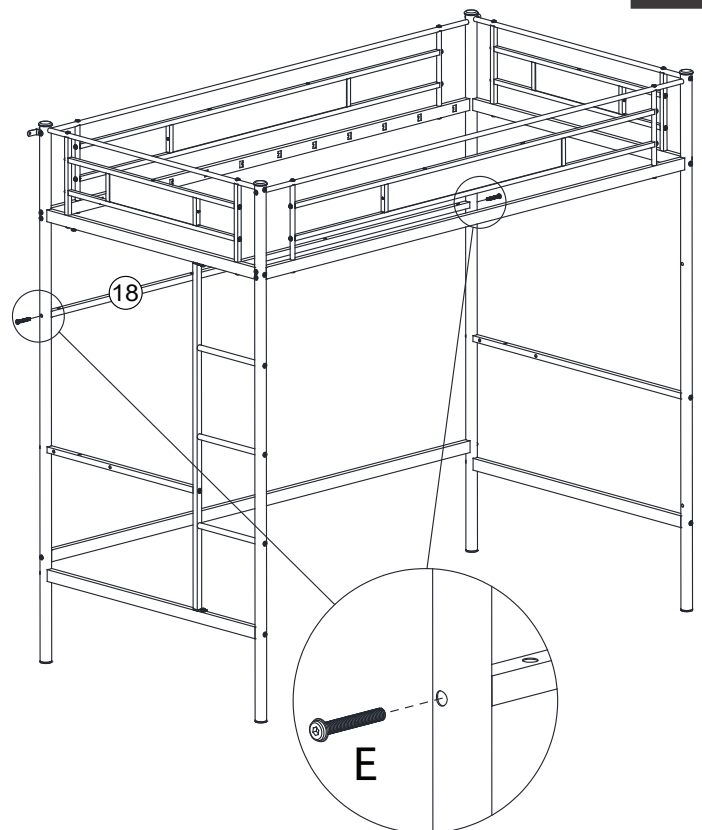

E	 M8x55	2pcs
---	---	------

 Do not fully tighten the screws yet.


13

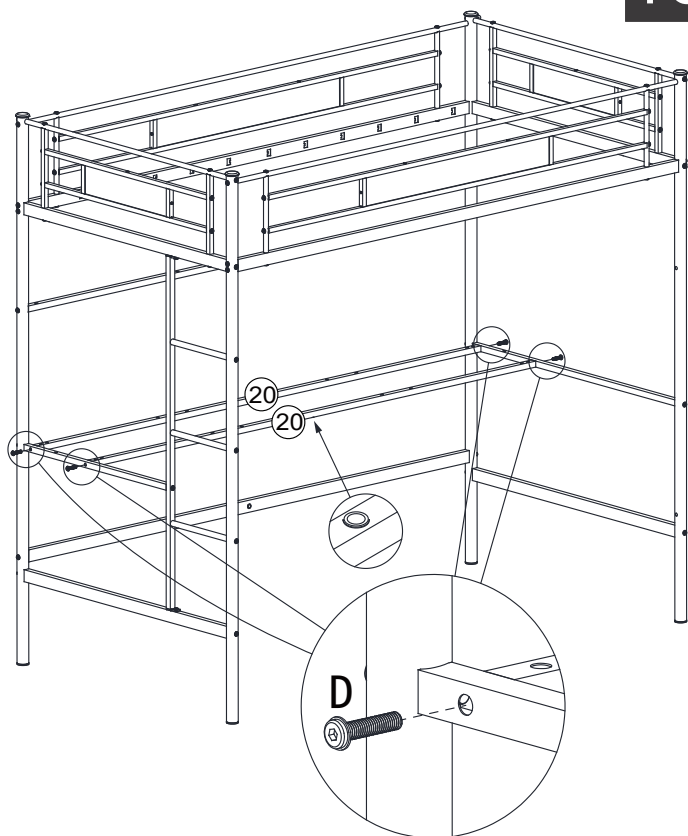

D		4pcs
---	---	------


! Do not fully tighten the screws yet.

14

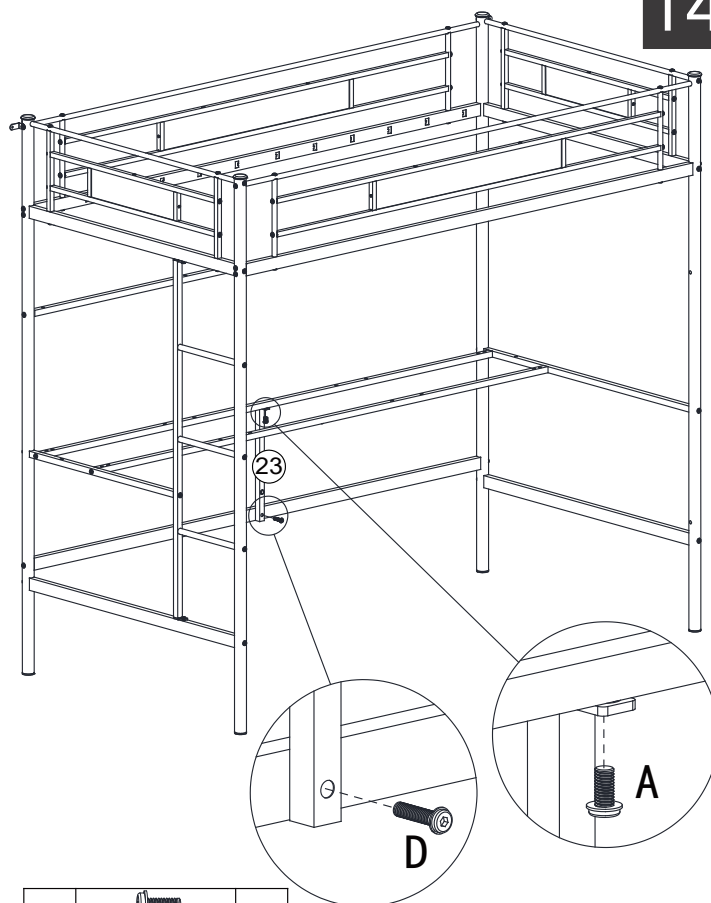


A		1pc
D		1pc

15

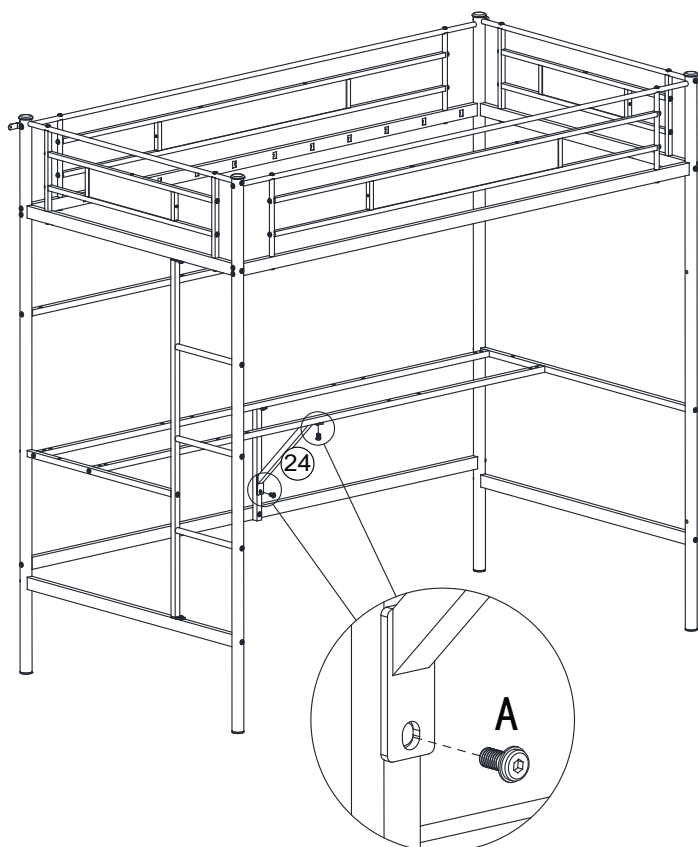


A		2pcs
---	---	------

16

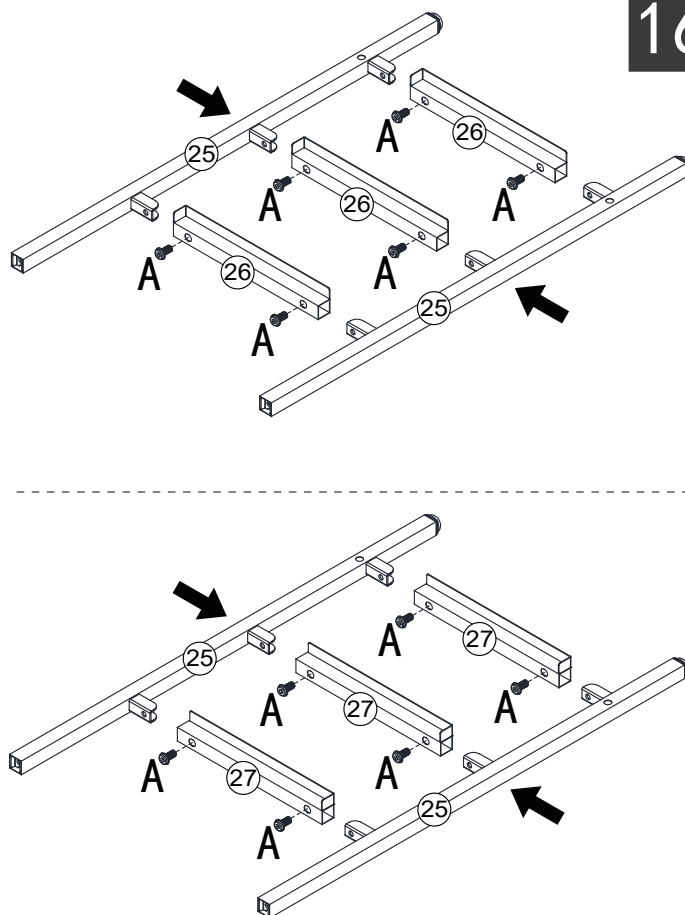


A		12pcs
---	---	-------

17

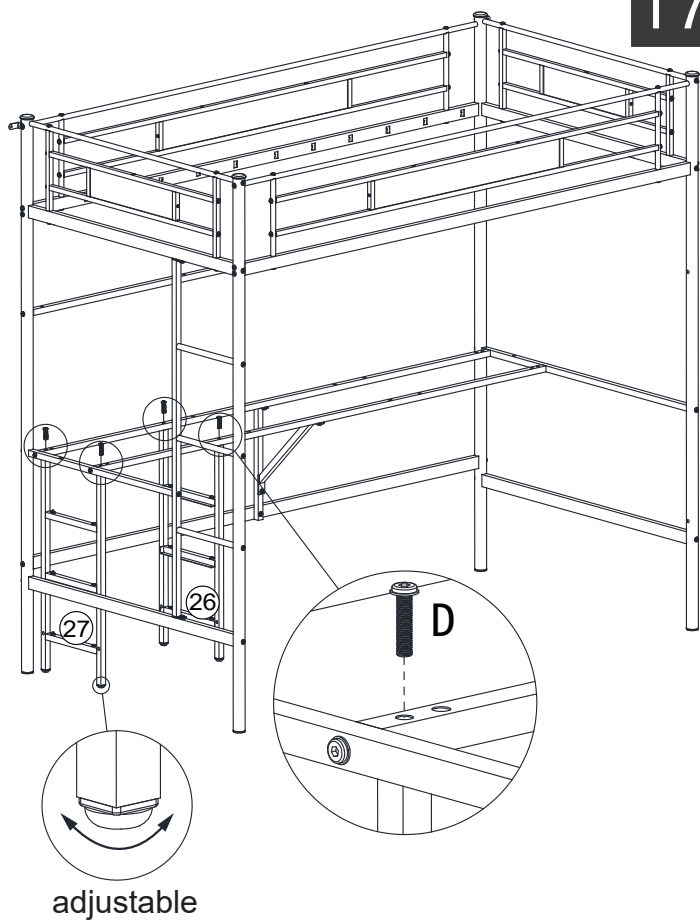


D		4pcs
M8x35		

18

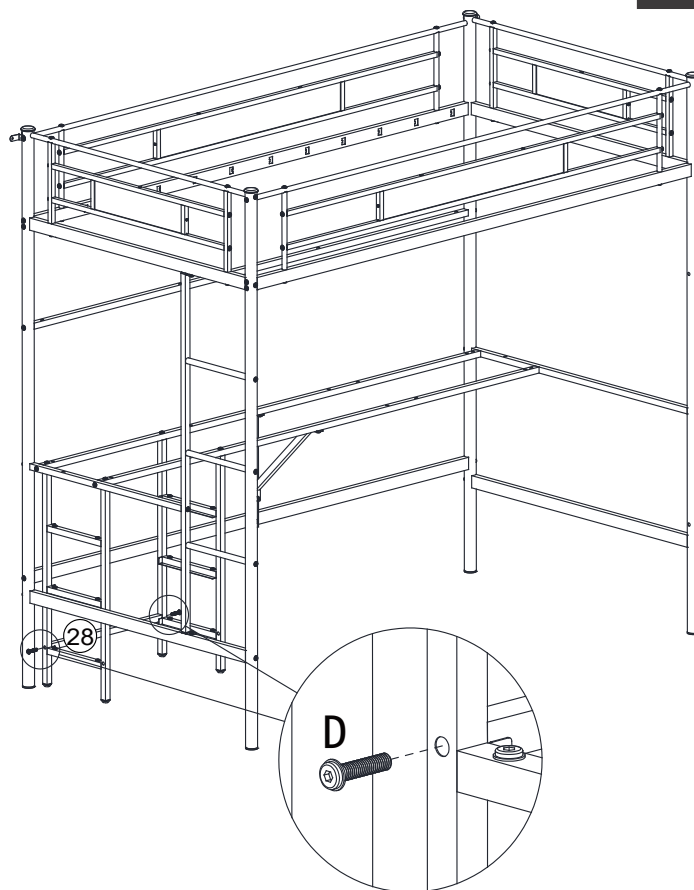


D		2pcs
M8x35		

19

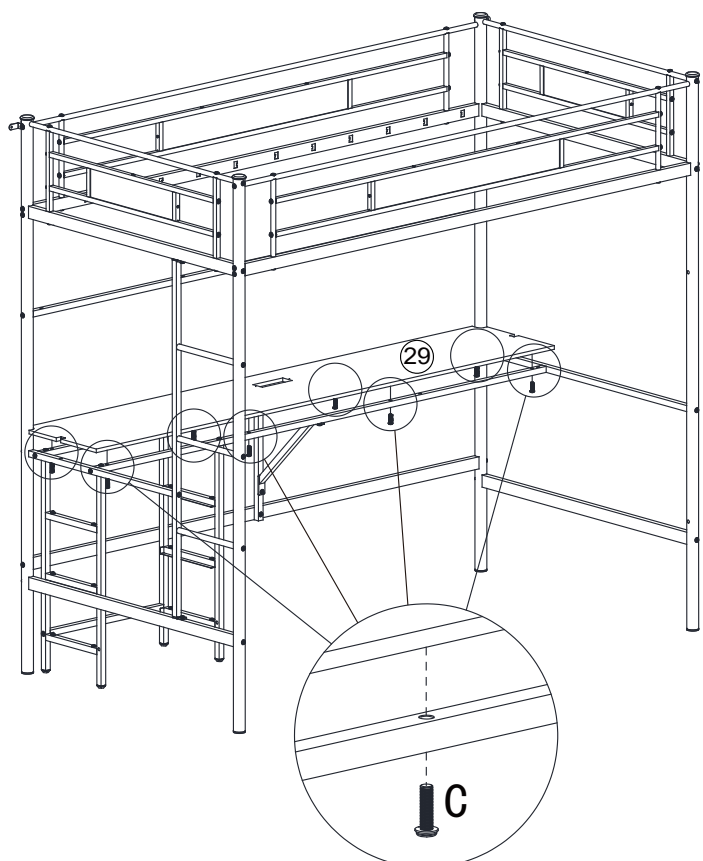


C		8pcs
white zinc		
M8x30		

20

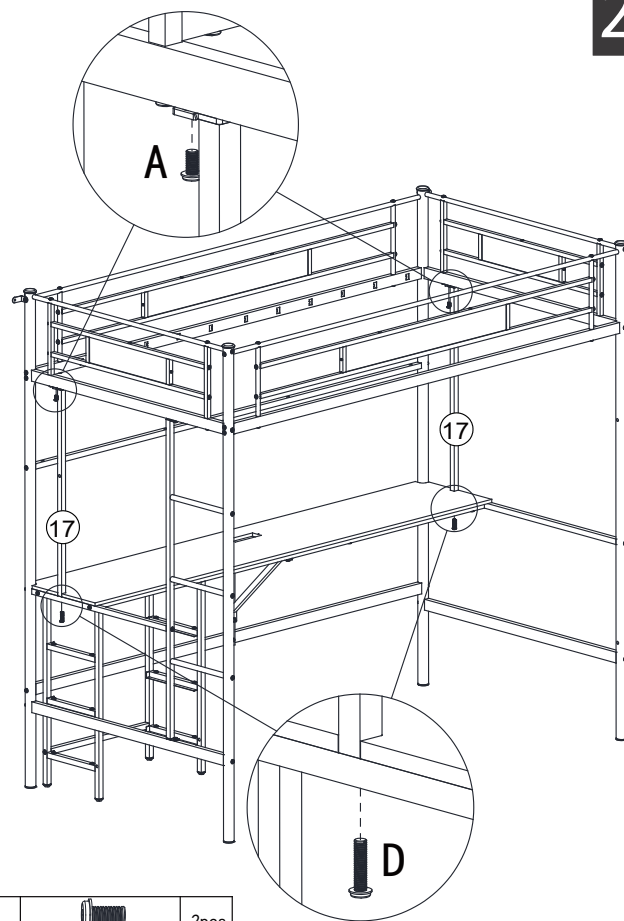

A		2pcs
M8x16		
D		2pcs
M8x35		

21

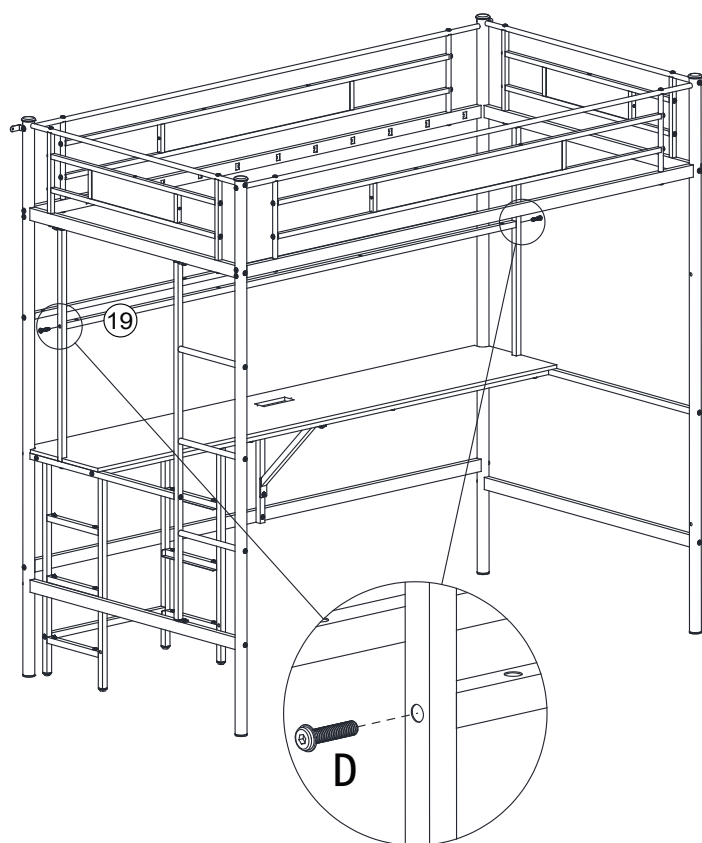


D



2 pcs

⚠ Do not fully tighten the screws yet.

22

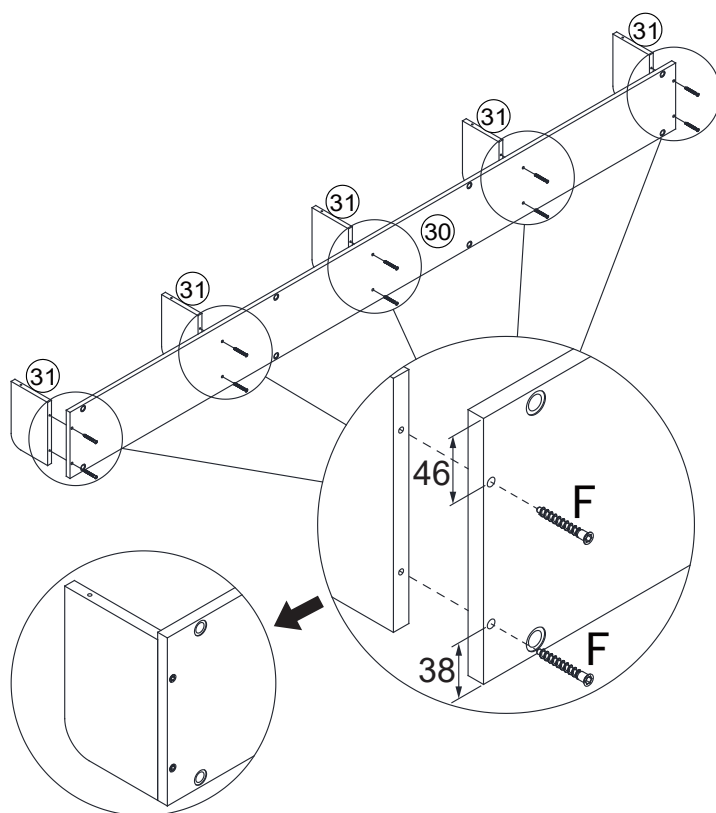


F



10 pcs

23

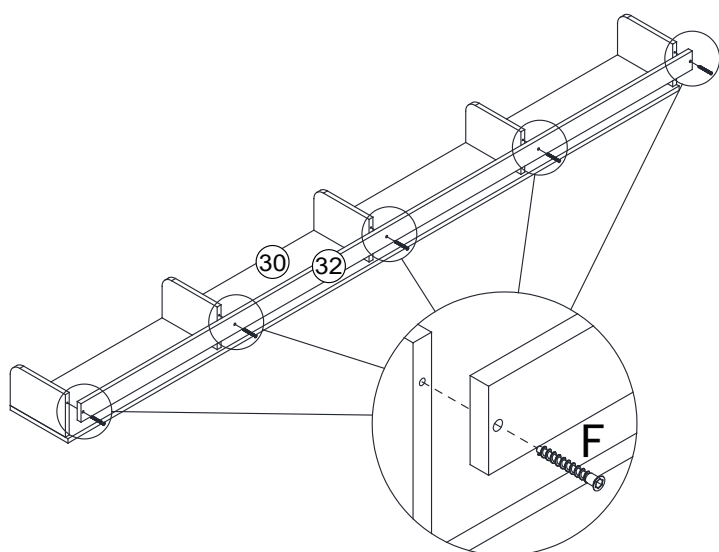


F



5 pcs

24

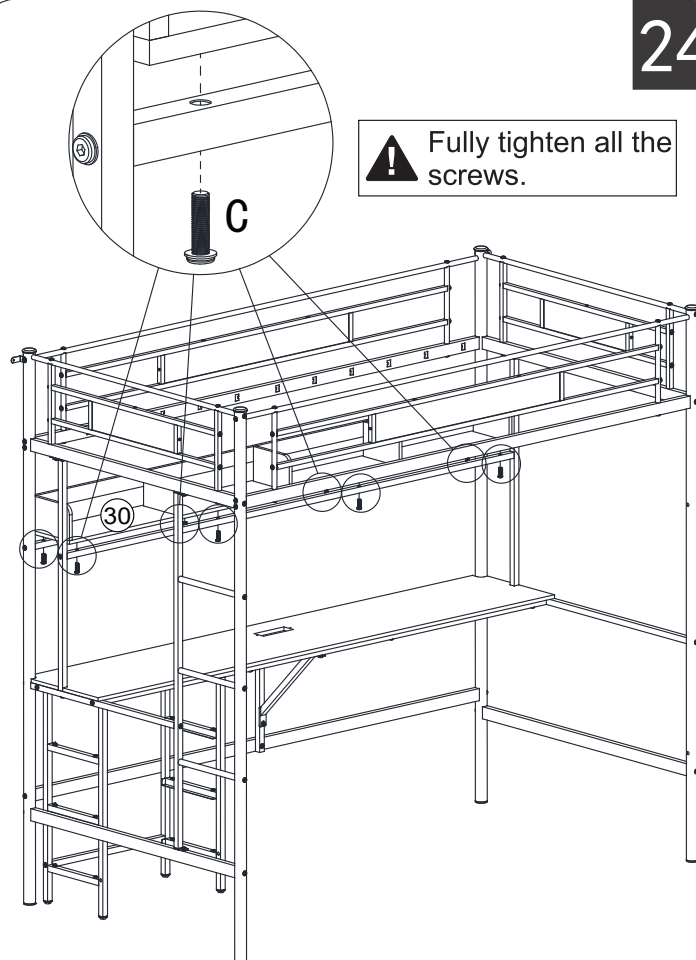

⚠ Fully tighten all the screws.


C



8 pcs

white zinc

25

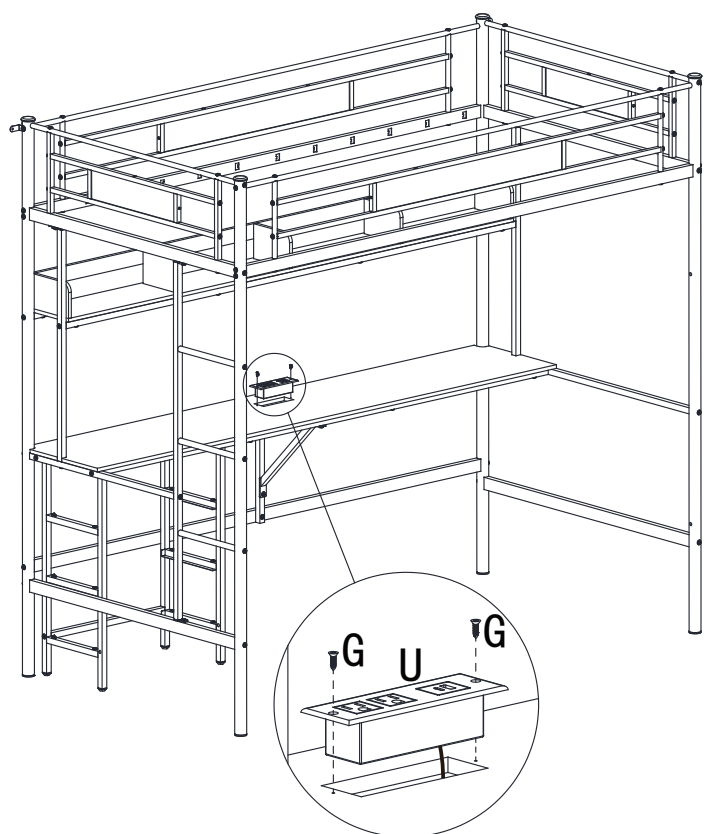


G



ST4x14

2pcs

26

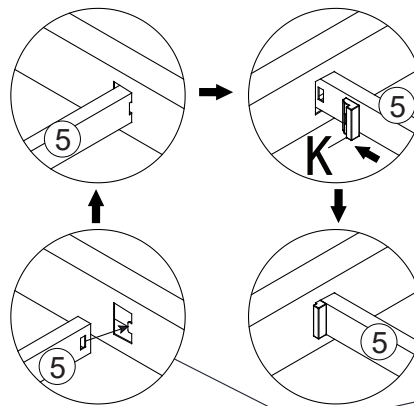


K



22pcs


x6 27

Pay attention to the orientation of the holes.

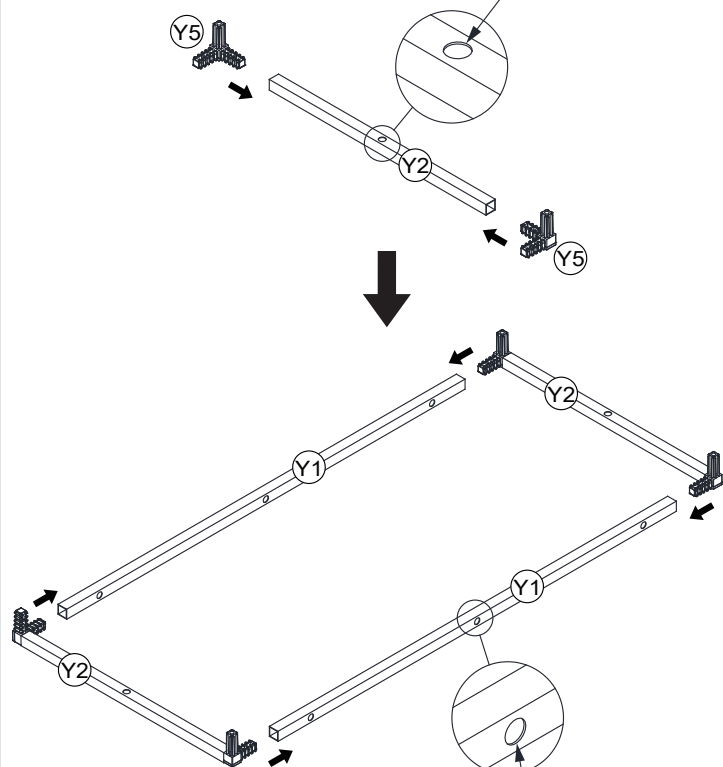


Pay attention to the orientation of the holes.


x3 28

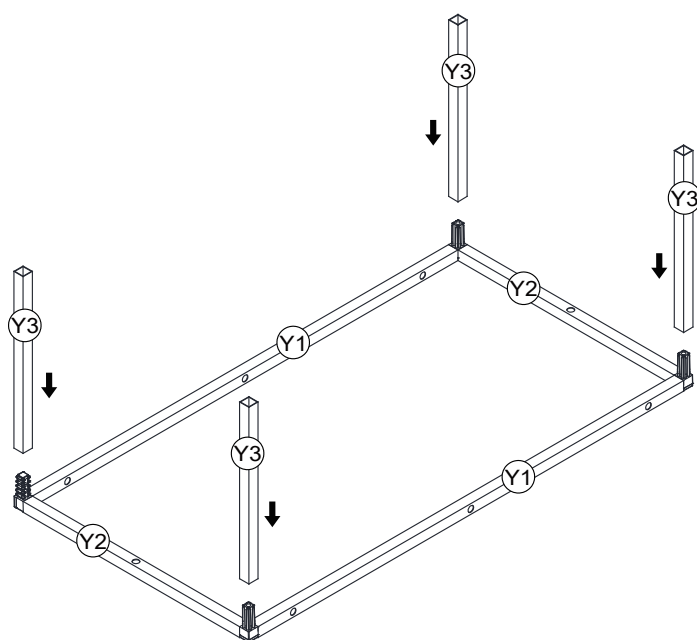


x3 29

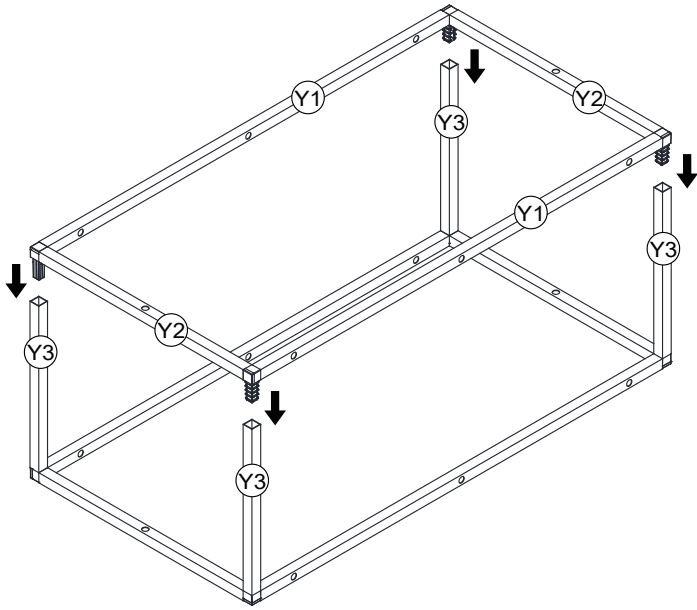


x3 30

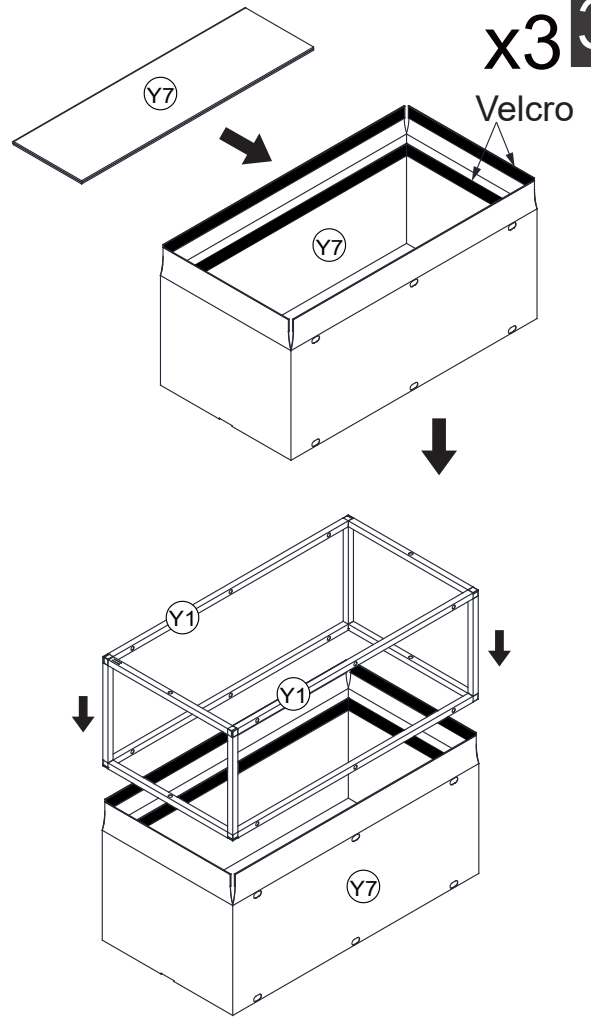


x3 31

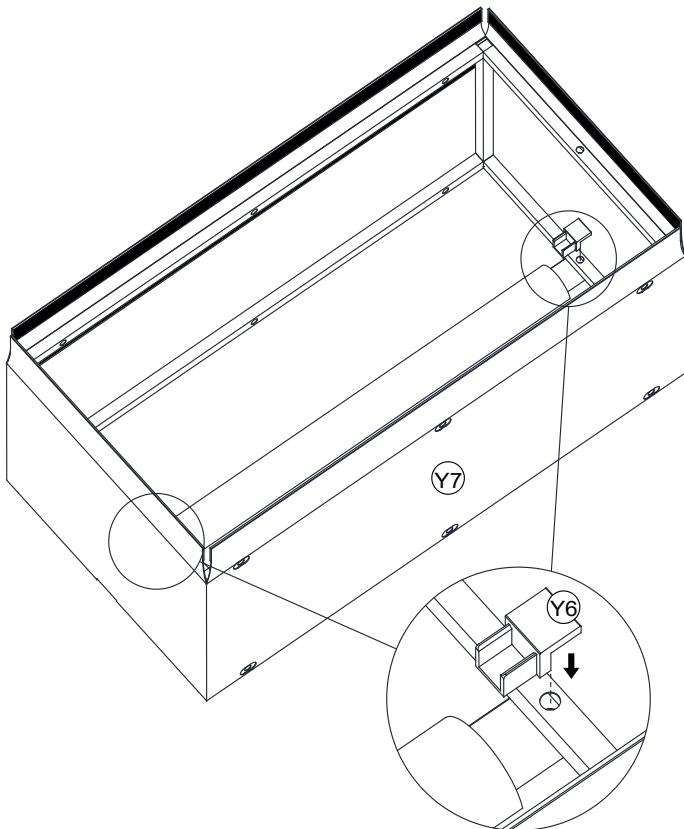

x3 32

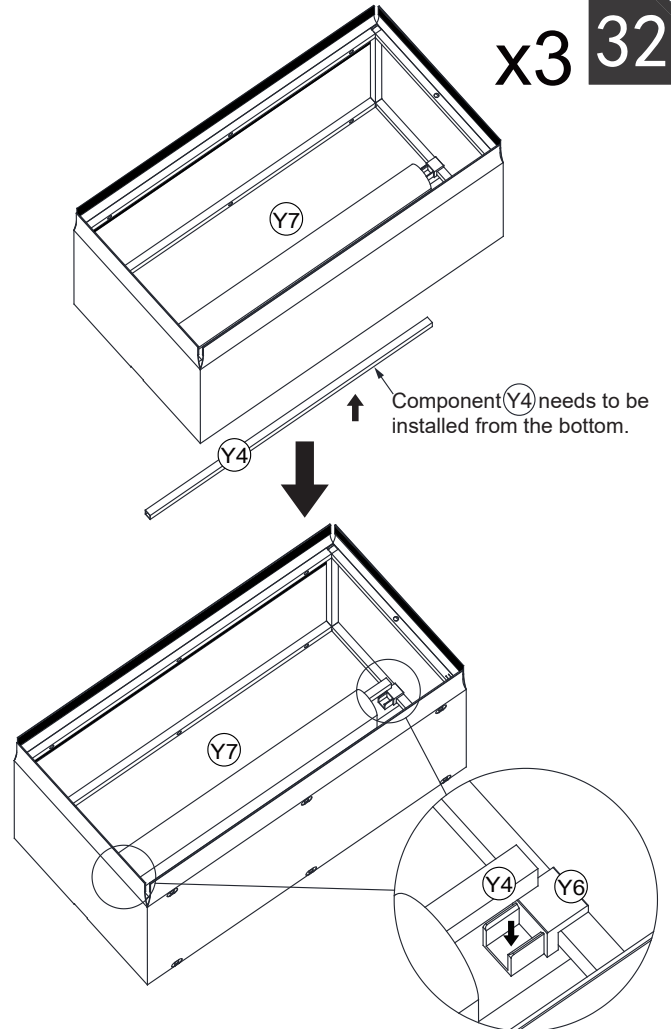


x3 33

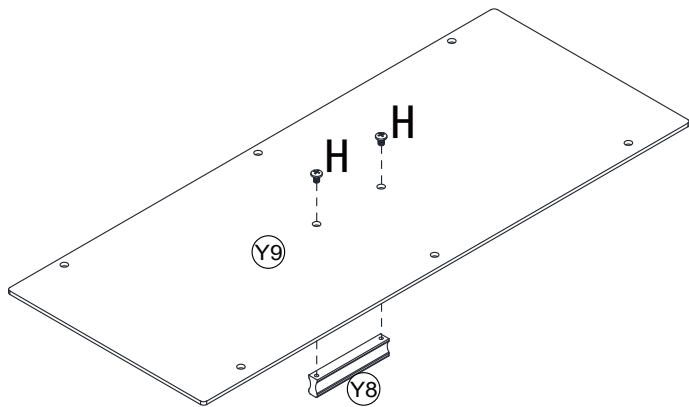

H		6pcs
---	---	------

M4x6

x3 34

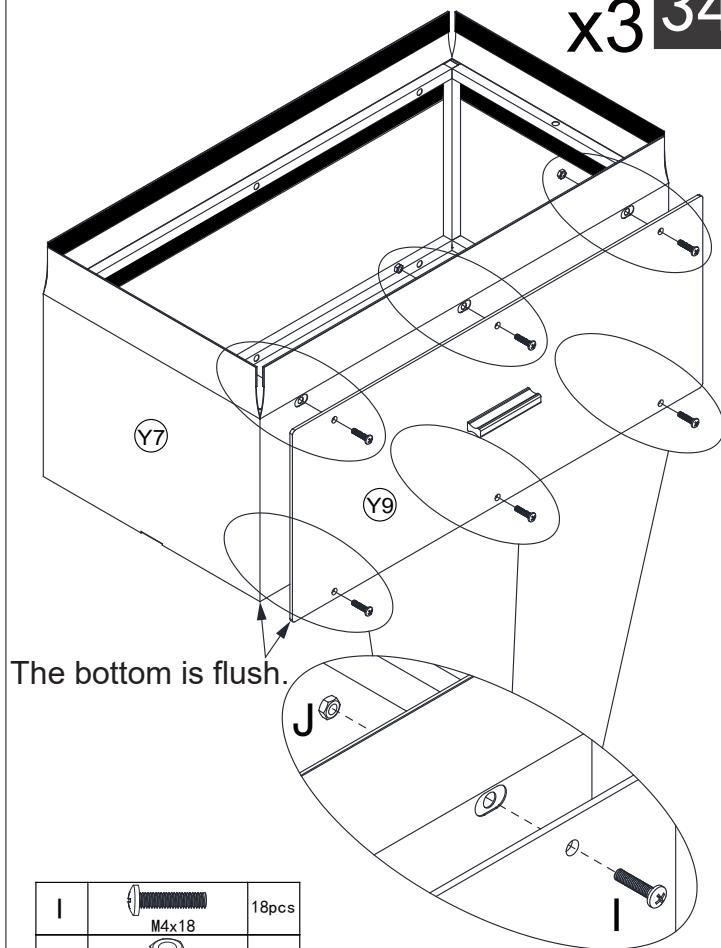


I		18pcs
J		18pcs

M4x18


M4

35


Stick the Velcro around the edges.

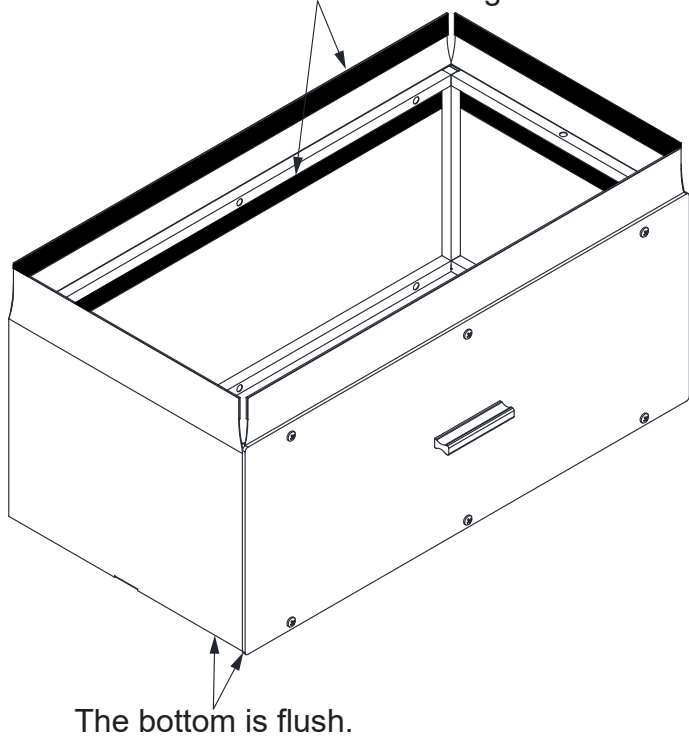

36

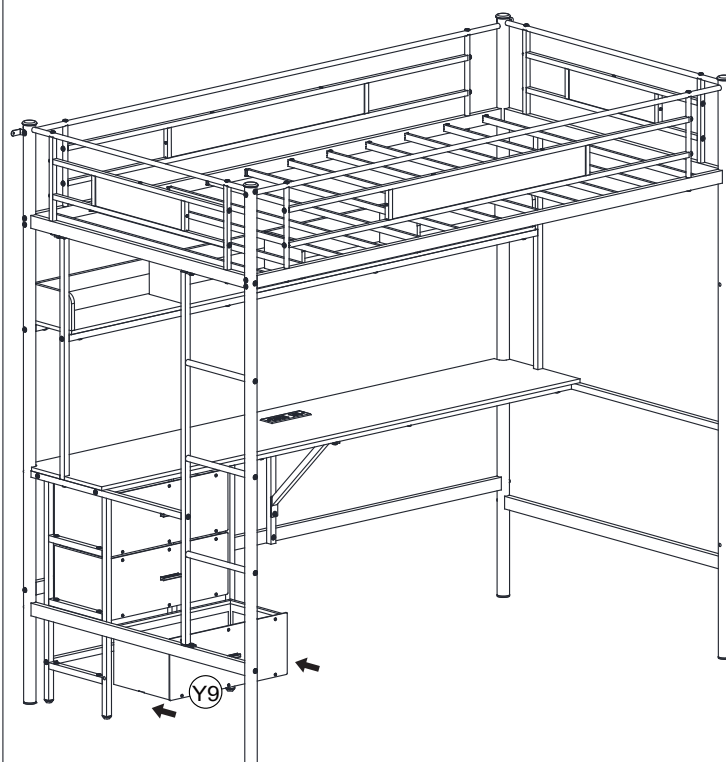


- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

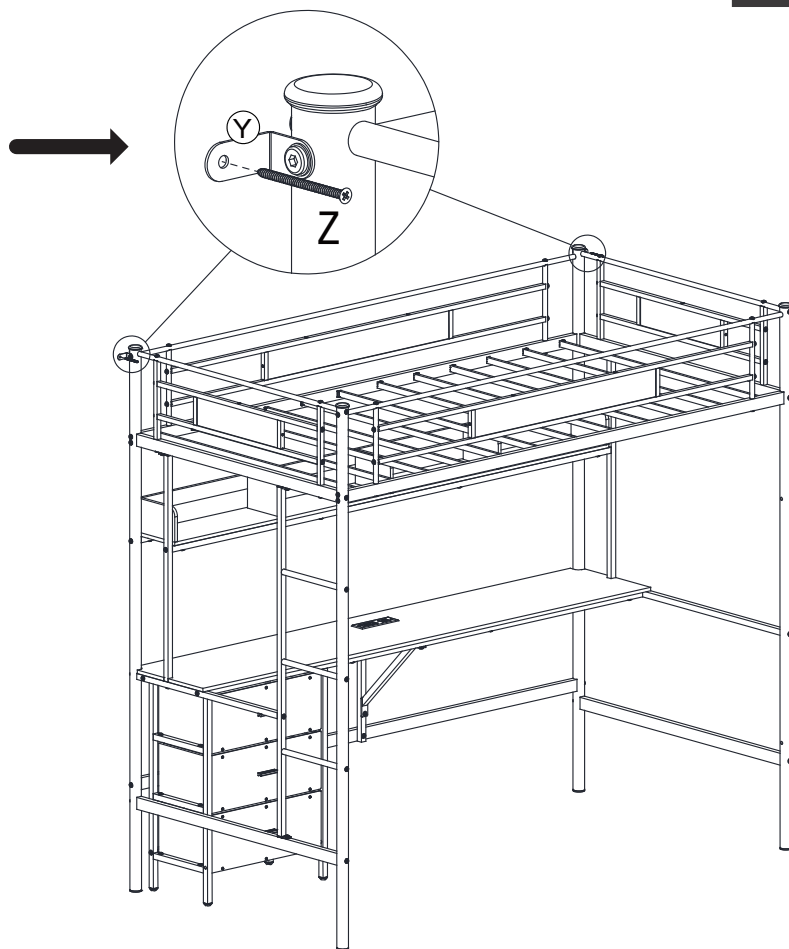

Z		2pcs
---	---	------

Type 2

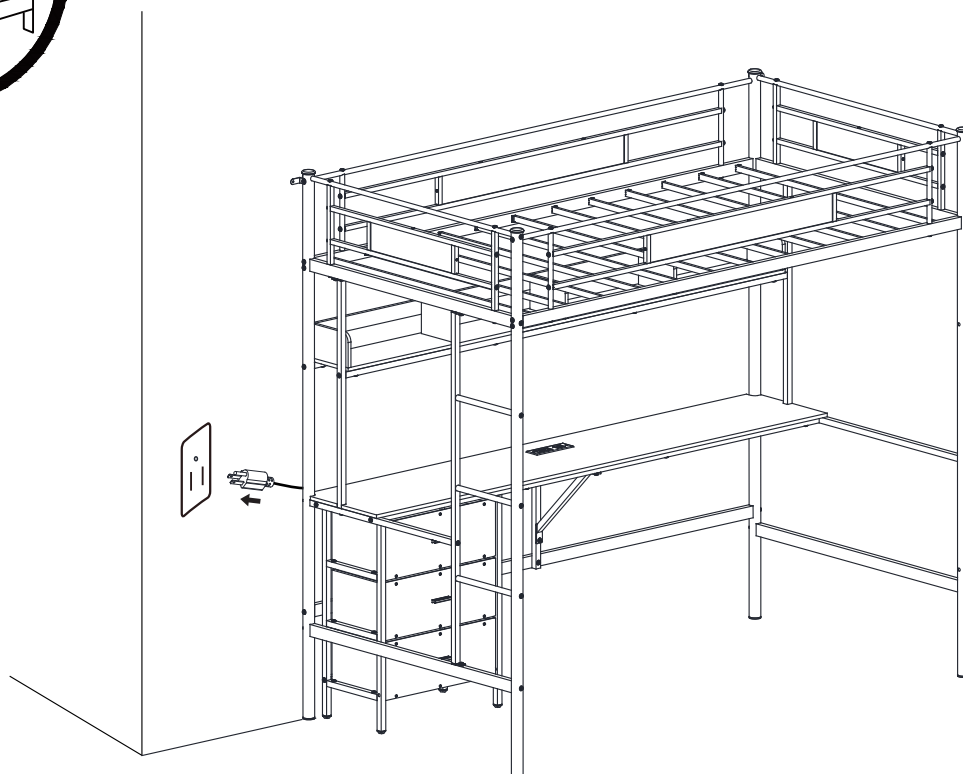

Finish