


Part	Reference
A	F13359
В	F13360
С	F13361
D	F13362
E	F13363
F	F13364
G	F13365
Н	F13366
I	F13367
J	F13368
К	F13369

No additional tools required.

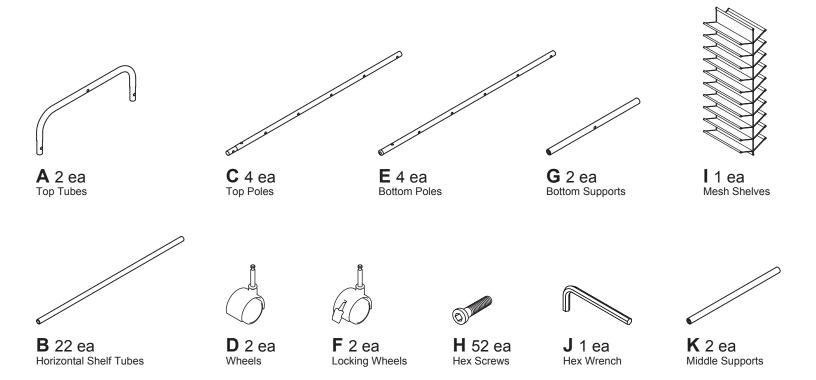


#### STEP 1:

- □ Start by assembling the side frames.
- $\Box$  Insert ends of the top tube (A) into two top poles (C).
- □ Insert top poles (C) into ends of bottom poles (E).
- □ Install the middle support (K) between the two top poles (C) using the lowest holes available. As shown below.
- □ Install the bottom support (G) between the bottom poles (E) using the lowest holes available.

**NOTE:** make sure the hole in the middle of bottom support (G) is facing up like the rest of the holes in the frame.  $\Box$  Secure using a hex wrench (J) and four hex screws (H).


 $\Box$  Repeat this step to assemble the other side frame.

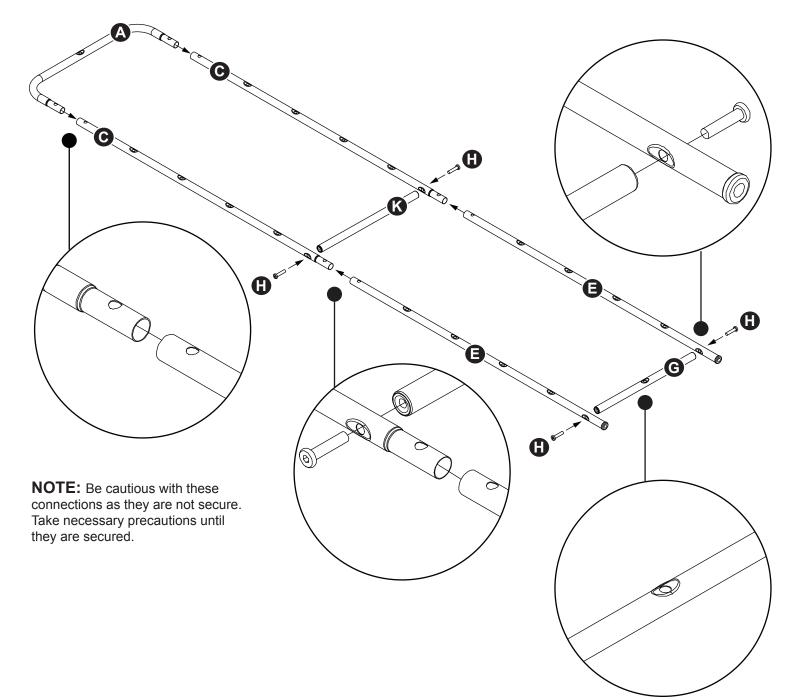



**NOTE:** When assembled center holes on bottom supports **(G)** must face each other.


#### STEP 2:


- □ Insert ends of the horizontal shelf tubes (B) into top tube (A) and bottom support (G).
- □ Secure using a hex wrench (J) and two hex screws (H).
- □ Tighten with hex wrench (J).

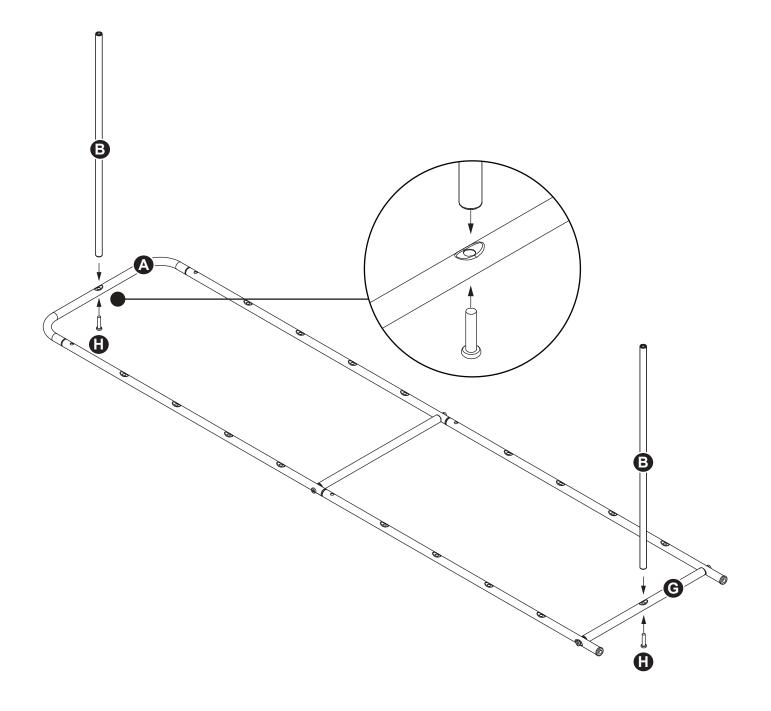


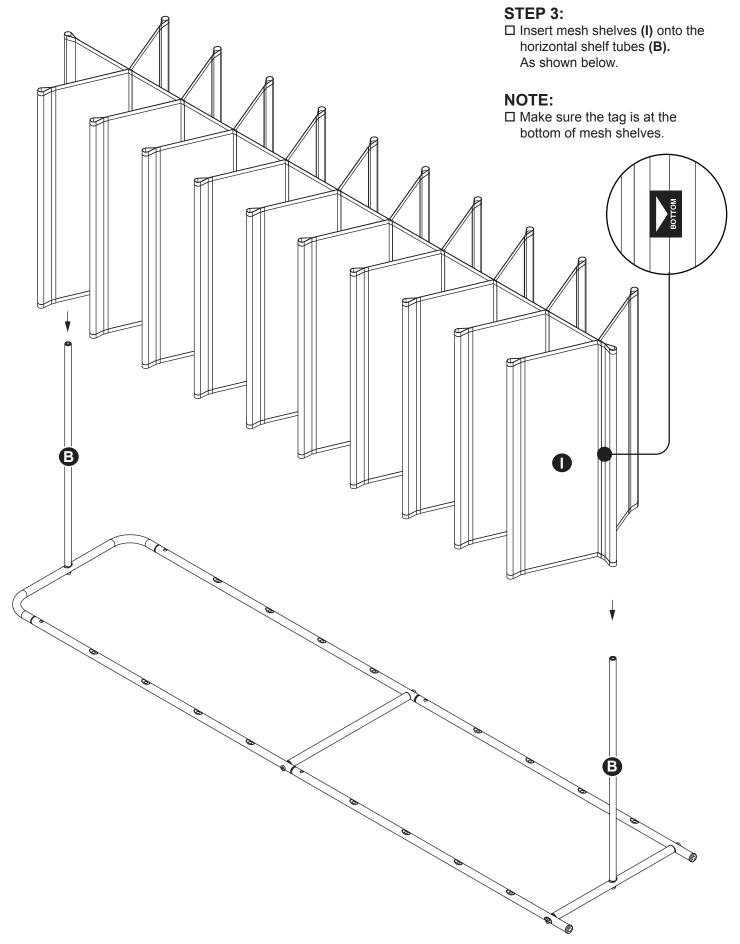

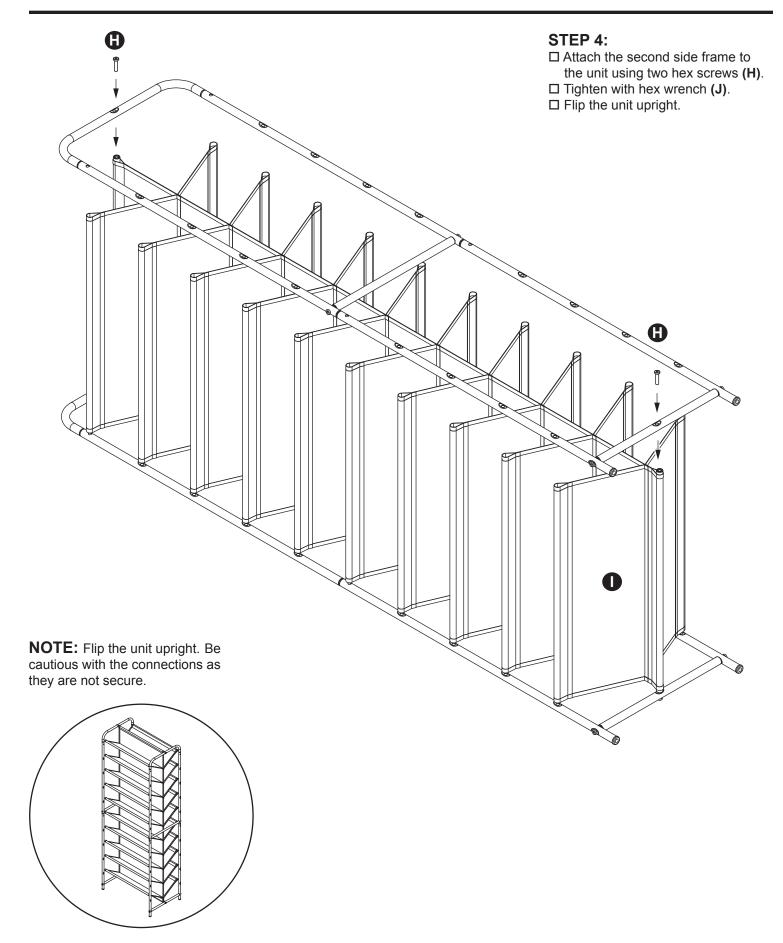

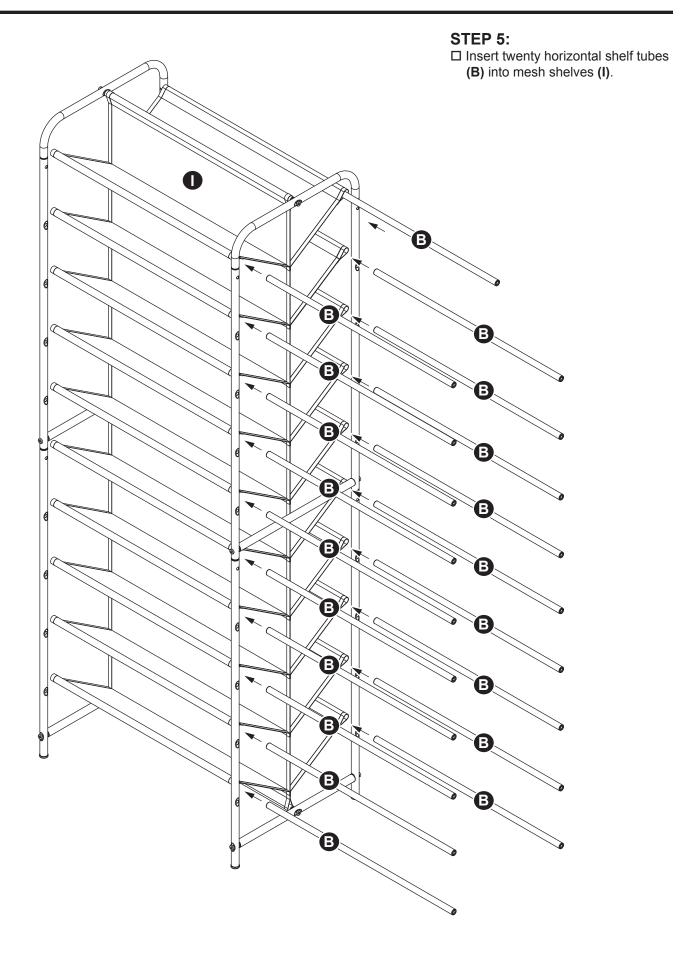

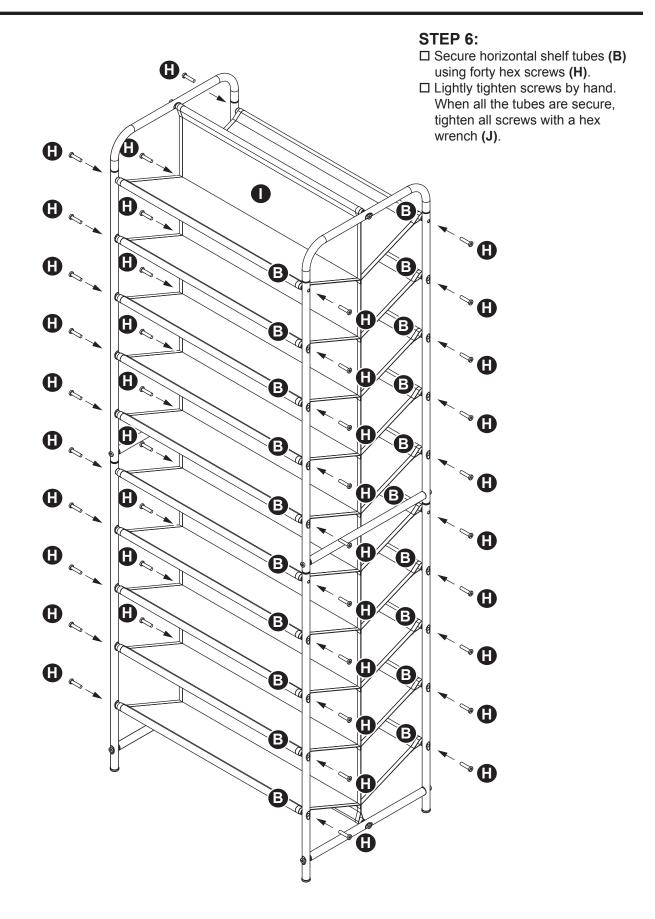

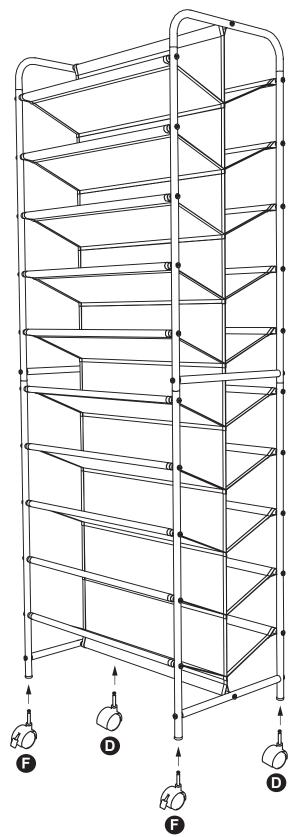

#### STEP 7:

Insert two wheels (D) on one side and two locking wheels (F) on the other side.