

INSTALLATION
Product Manual

Version: 510059US-00-26A-HB


Installation Instructions

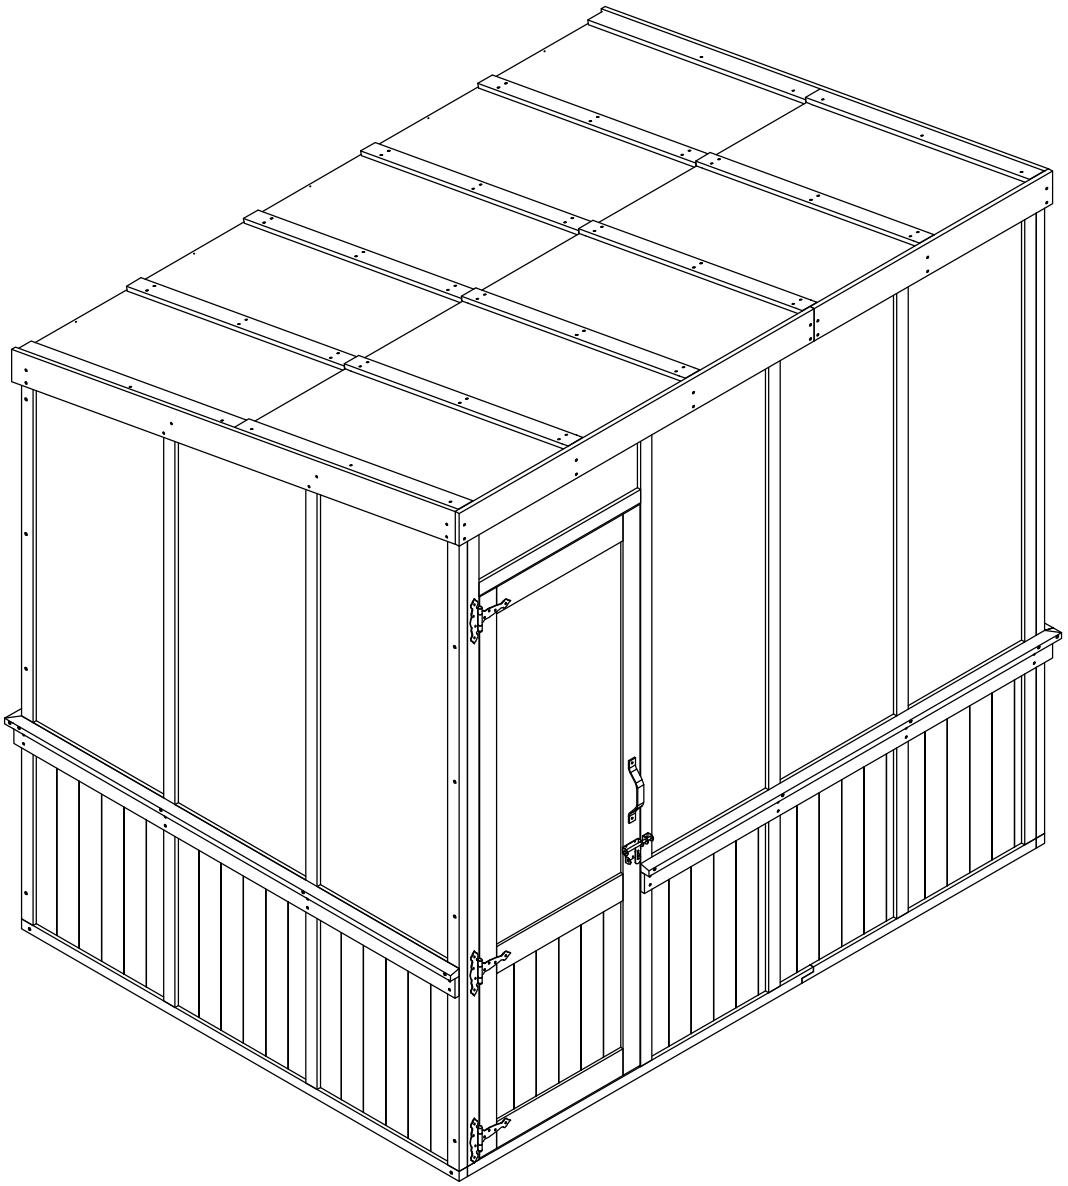


Tools Required for Installation

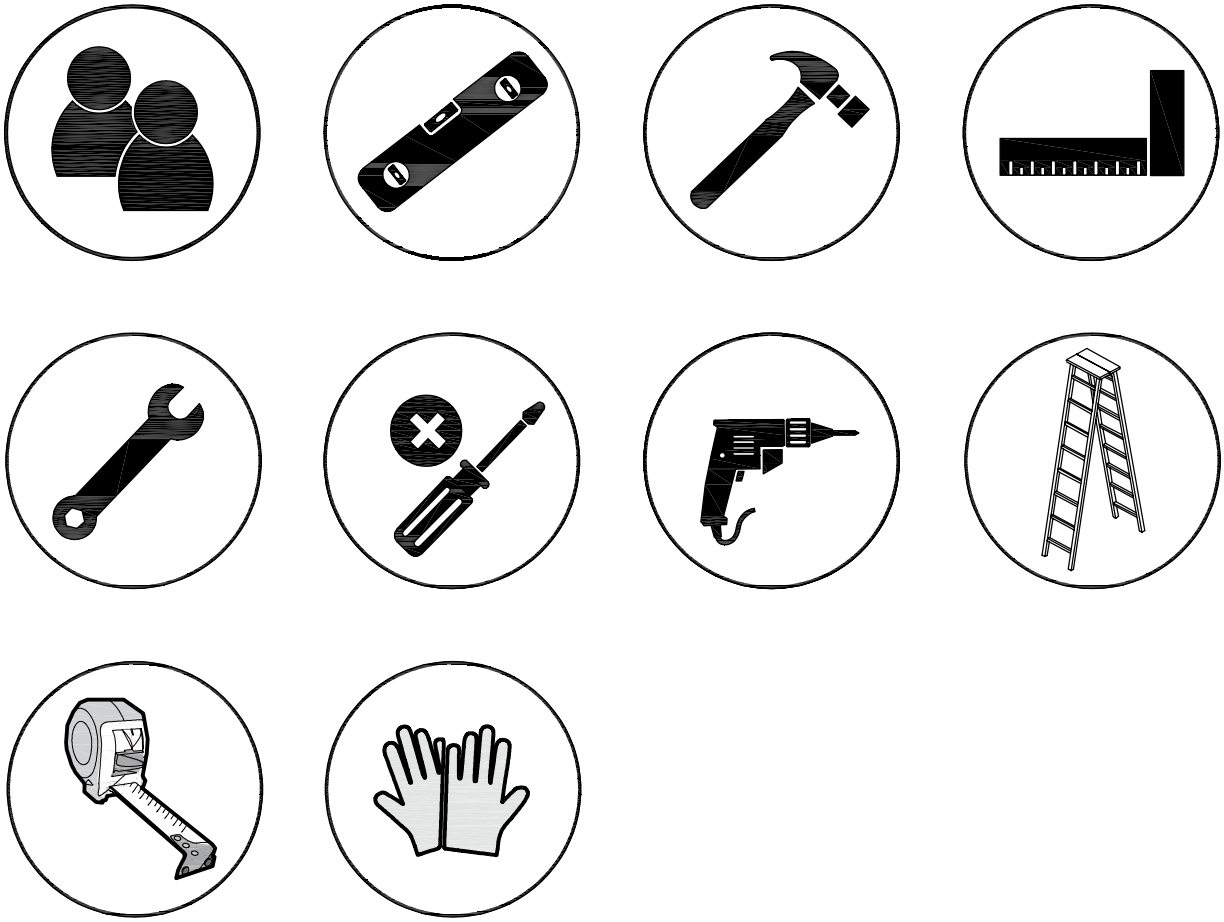

Icons and their uses you will see throughout this manual

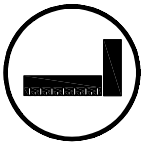

You will need to make sure that your assembly is square before tightening your bolts.

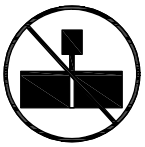

This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.



This icon will show you what dril! attachments are needed. For this example you will need a Phillips head attachment .



Some steps in the assembly process will require an extra set ofhands. Make sure you have a helper available.



This size of the open-end wrench on these icons should correspond to the size of the nut.




It is required for high-altitude installation




We need to measure the size and use it

Wood Components (Not to Scale)


BOX 1/3

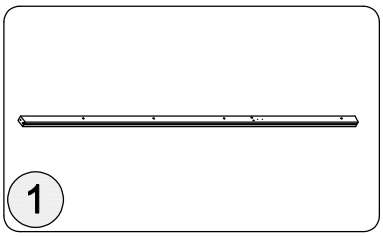


Left front pillar
Qty: 1

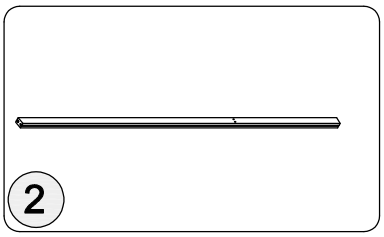


Left center pillar
Qty: 1

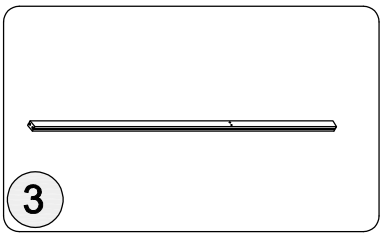


Left center pillar
Qty: 1

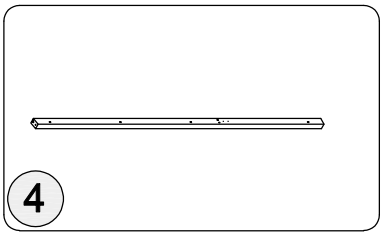


Left rear pillar
Qty: 1

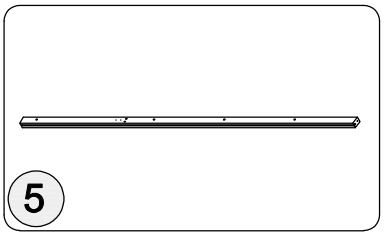


Right front pillar
Qty: 1

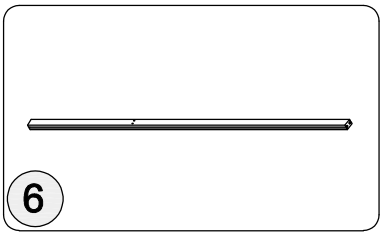


Right center pillar
Qty: 1

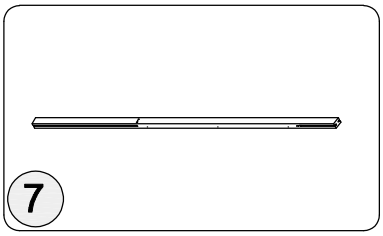


Right center pillar
Qty: 1

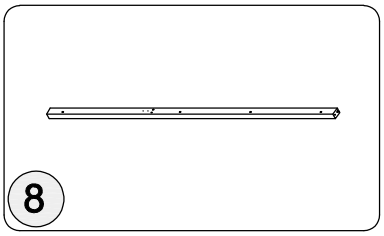


Right rear pillar
Qty: 1

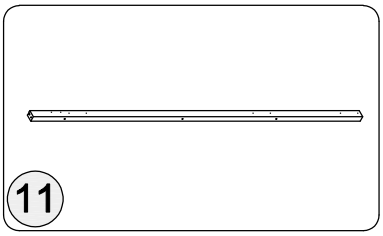


Front left pillar
Qty: 1

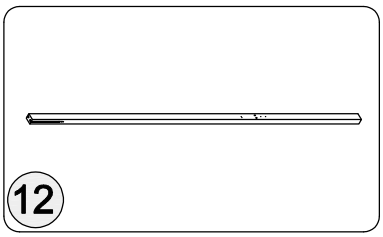


Center pillar
Qty: 1

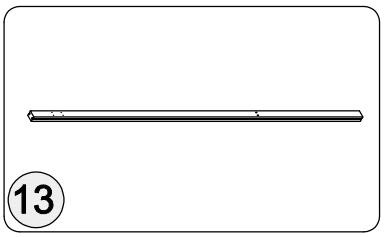


Center pillar
Qty: 1

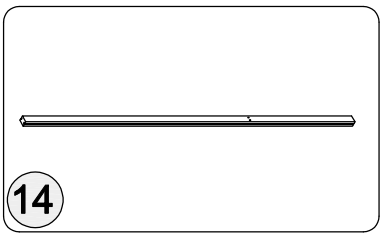


Center pillar
Qty: 1

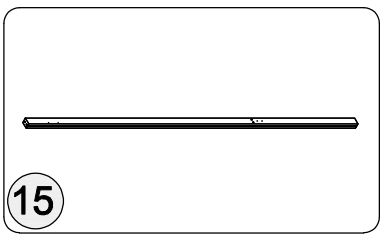

Front right pillar
Qty: 1

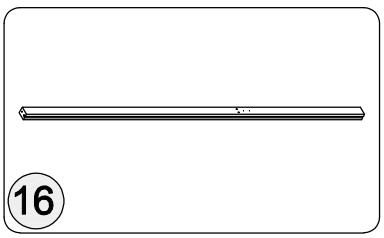


Rear left pillar
Qty: 1

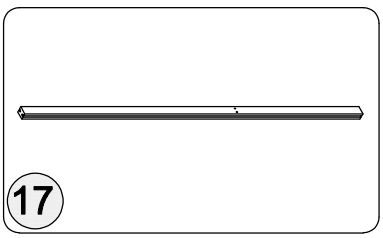


Rear center pillar
Qty: 1

Wood Components (Not to Scale)


BOX 1/3

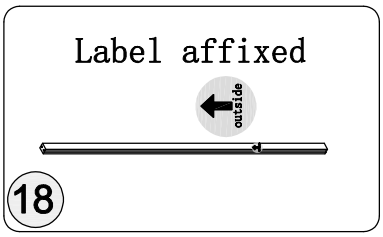


Rear center pillar
Qty: 1

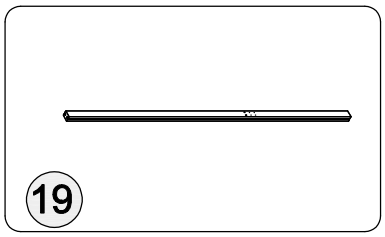


Rear center pillar
Qty: 1

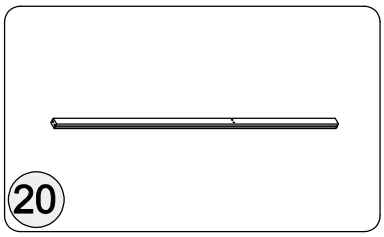


Rear center pillar
Qty: 1

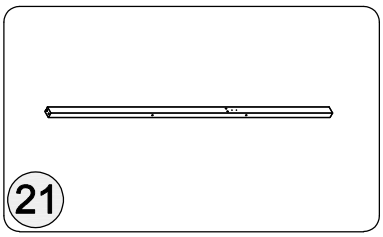


Rear right pillar
Qty: 1

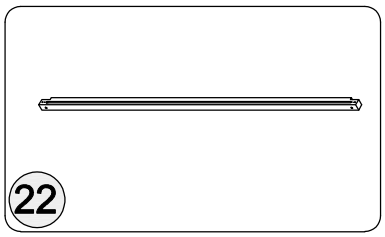


Side bottom Flat noodles
Qty: 2

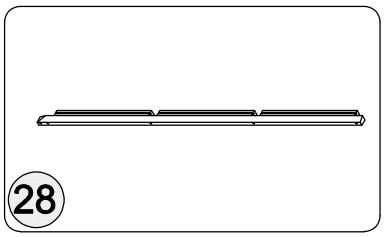


Left middle bar
Qty: 1

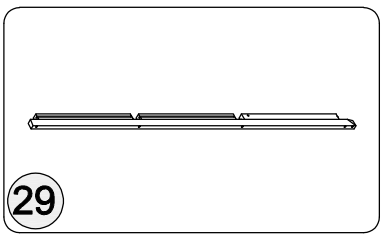


Right middle bar
Qty: 1

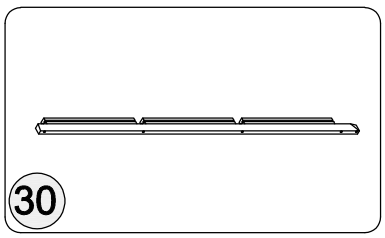


Front middle clause
Qty: 1

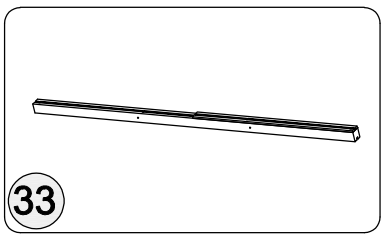


Left side beam
Qty: 1

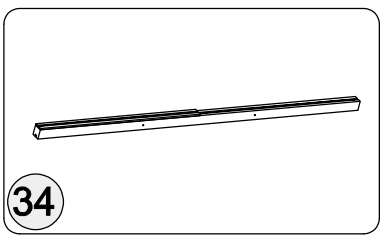


Right side beam
Qty: 1

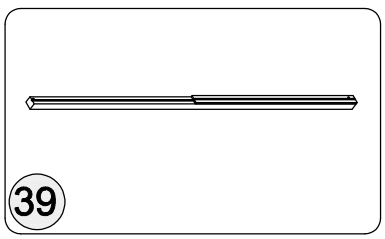


middle beam
Qty: 4

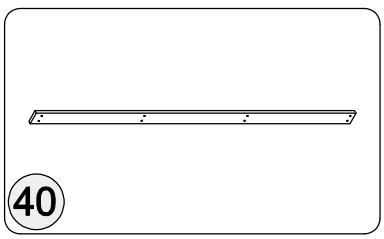


side baffle
Qty: 2

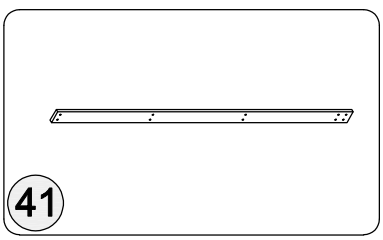

front fender
Qty: 1

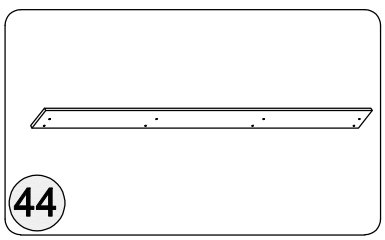

Top left baffle
Qty: 1

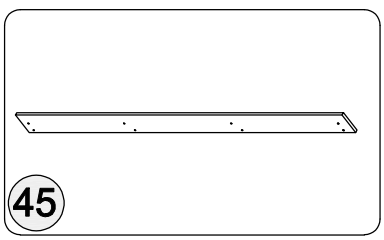


Top right baffle
Qty: 1

Wood Components (Not to Scale)


BOX 1/3




door stop
Qty: 1

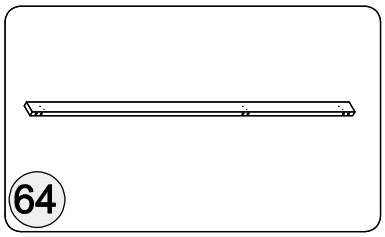

Left door strip
Qty: 1

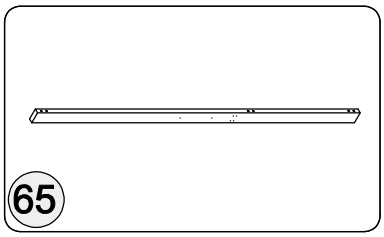

Right door strip
Qty: 1

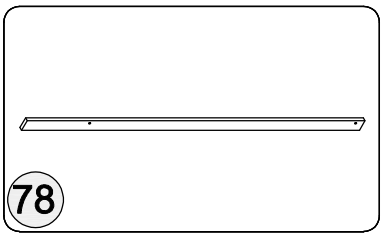


Right front gear strip
Qty: 1


Manual

Wood Components (Not to Scale)


BOX 2/3

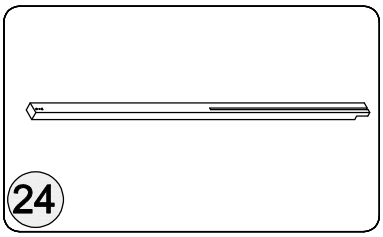


Front long bottom strip
Qty: 1

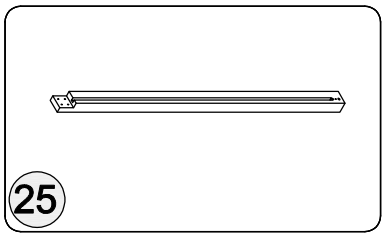


Front short bottom strip
Qty: 1

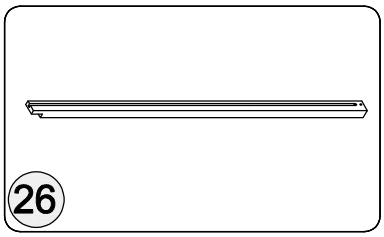


Rear long bottom strip
Qty: 1

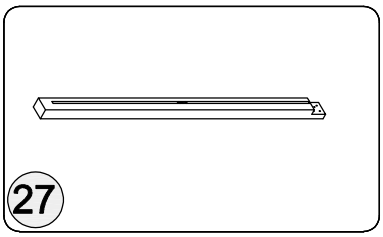


Rear short bottom strip
Qty: 1

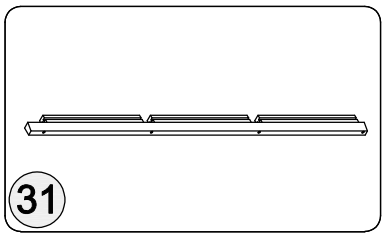


Rear middle strip
Qty: 1

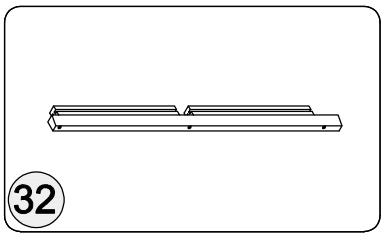


Rear middle short strip
Qty: 1

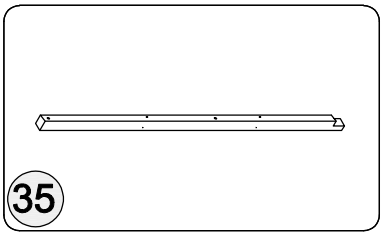


Front long beam
Qty: 1

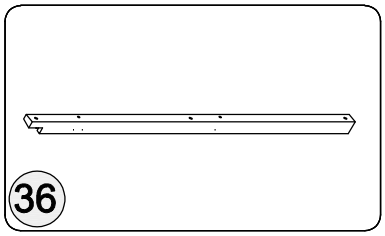


Front short beam
Qty: 1

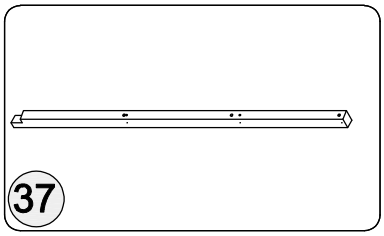


Rear long beam
Qty: 1

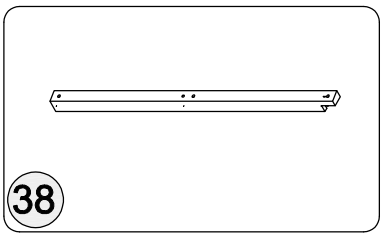


Rear short beam
Qty: 1

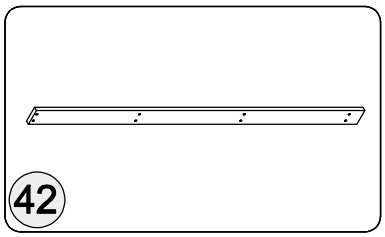


Rear long baffle
Qty: 1

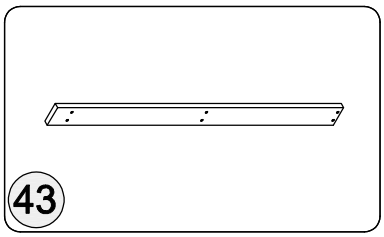


Rear short baffle
Qty: 1

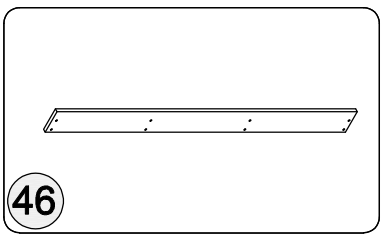

Top front long baffle
Qty: 1

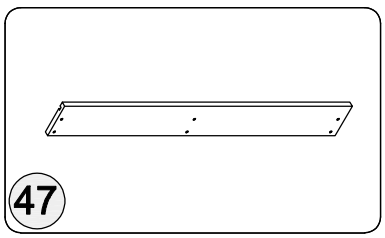


Top front short baffle
Qty: 1

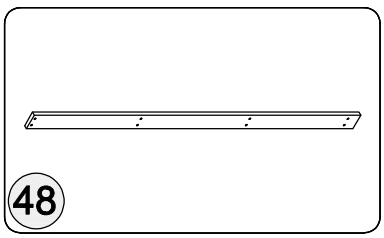


Top rear long baffle
Qty: 1

Wood Components (Not to Scale)


BOX 2/3

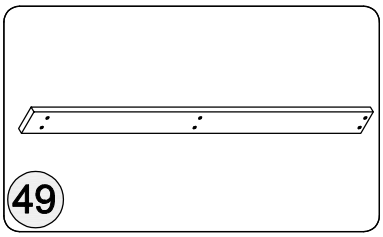


Top rear short baffle
Qty: 1

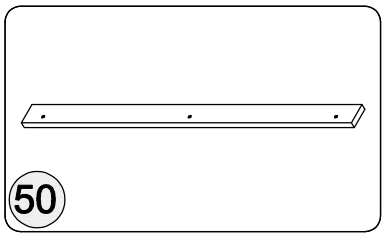


Top cover plate
Qty: 2

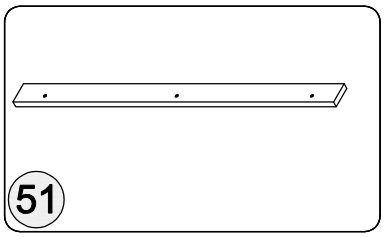


Top cover plate
Qty: 2

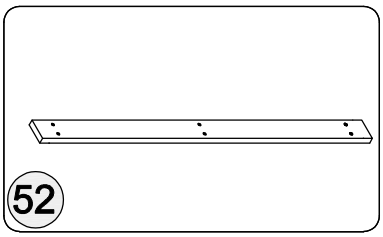


Top middle cover plate
Qty: 4

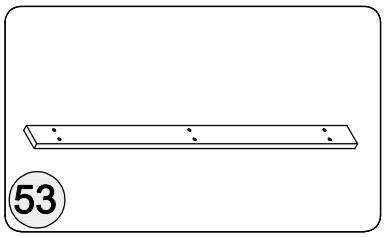


Top middle cover plate
Qty: 4

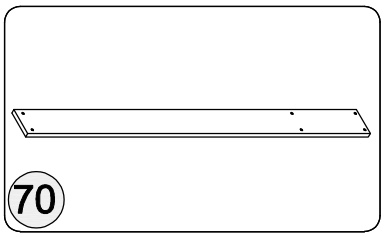


Rear left layer board
Qty: 2

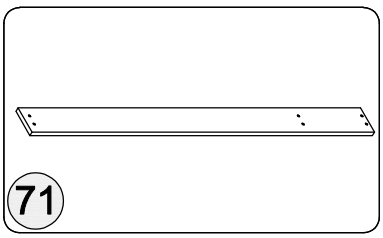


Rear left layer board
Qty: 1

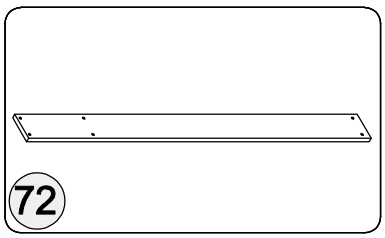


Rear right layer board
Qty: 2

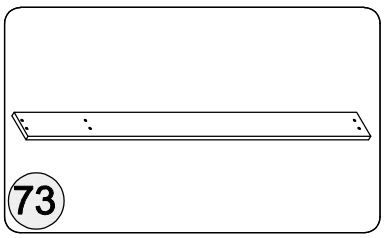


Rear right layer board
Qty: 1

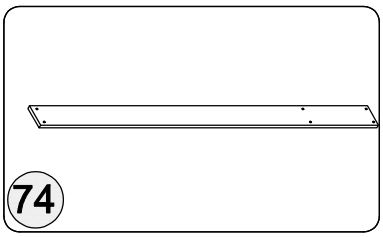


Right middle Flat noodles
Qty: 1

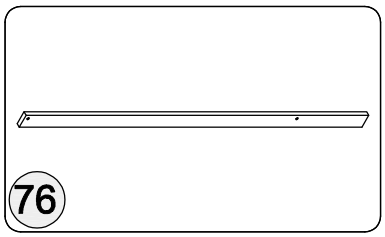


Front gear strip
Qty: 1

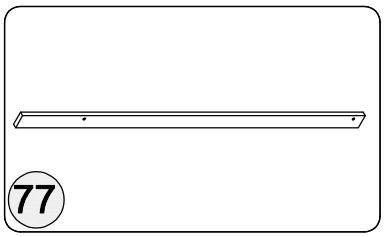

Front gear strip
Qty: 1

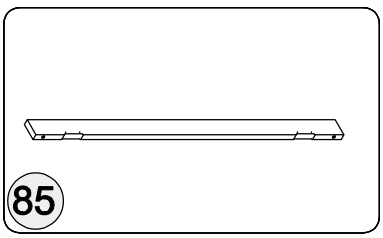

Left vertical bar
Qty: 1

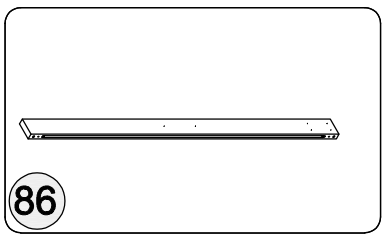


Right vertical bar
Qty: 1




retaining strip
Qty: 1

Wood Components (Not to Scale)


BOX 2/3

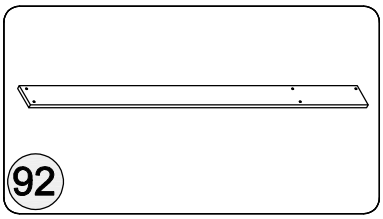


Right rear Flat noodles
Qty: 1

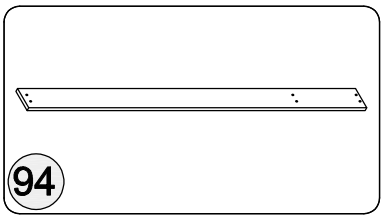


Front right Flat noodles
Qty: 1

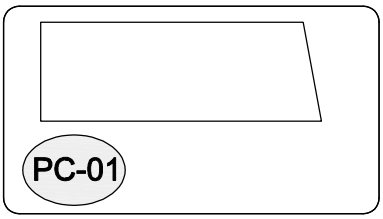


Front Sunlight Panel
Qty: 1

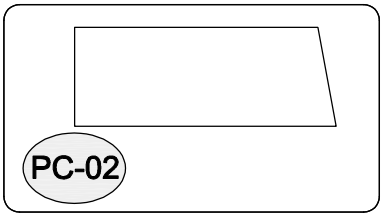


Sunlight panel
Qty: 1

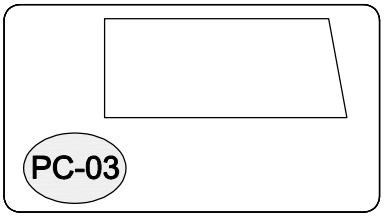


Rear sunlight panel
Qty: 1

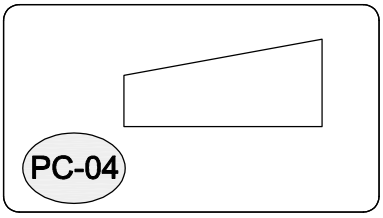


Rear sunlight panel
Qty: 1

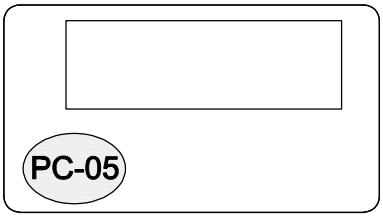


Front Sunlight Panel
Qty: 3

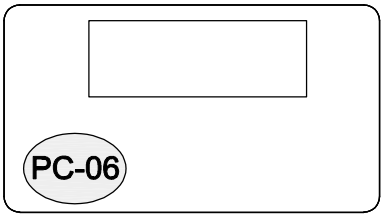


Rear sunlight panel
Qty: 5

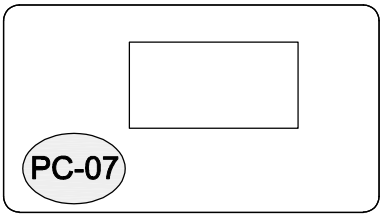


Top Sunshine Board
Qty: 5

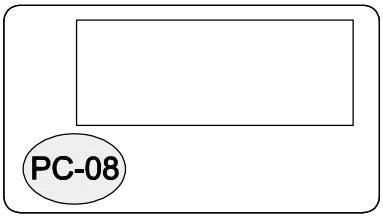


Door Sunshine Board
Qty: 1

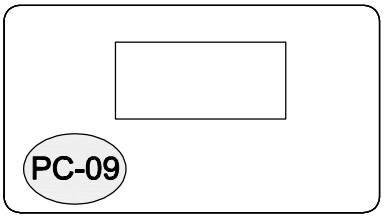


Window Sunlight Panel
Qty: 1

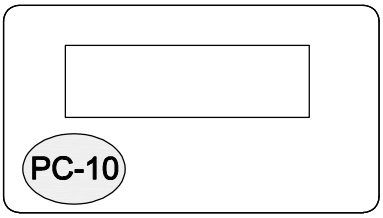


Sunshine board on the door
Qty: 1

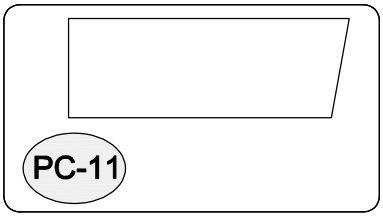

Side sunlight panel
Qty: 1

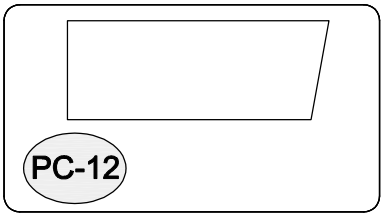

Side sunlight panel
Qty: 1

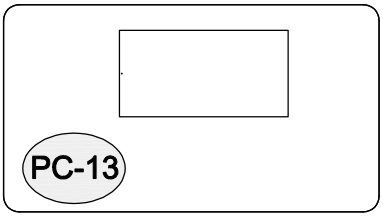


Top rear sunlight panel
Qty: 5


Before installing each PC component, the film should be peeled off first

Wood Components (Not to Scale)


BOX 3/3

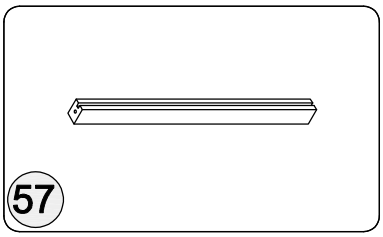


Door strip
Qty: 1

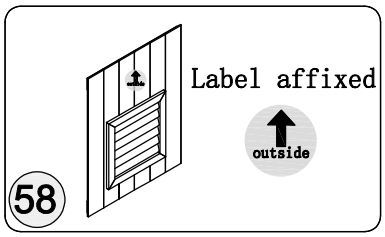


Side core board
Qty: 1

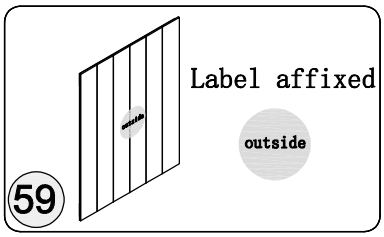


Side core board
Qty: 5

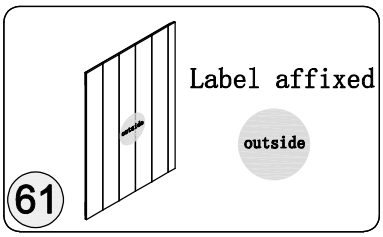


Front core board
Qty: 3

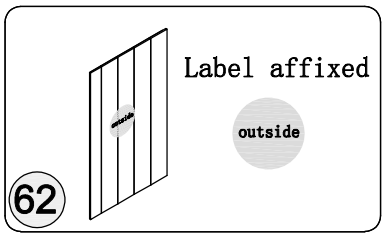


Rear core board
Qty: 4

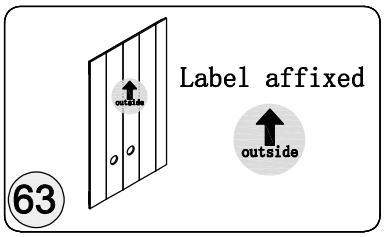


Rear core board
Qty: 1

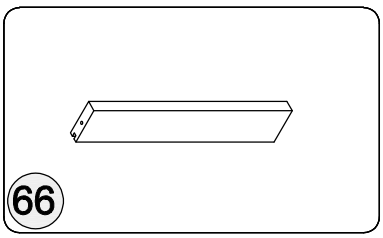


Above the door strip
Qty: 1

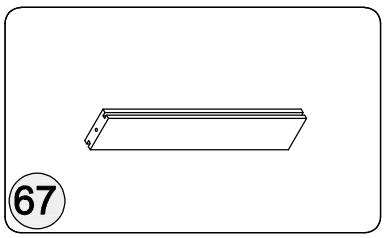


Door side clause
Qty: 1

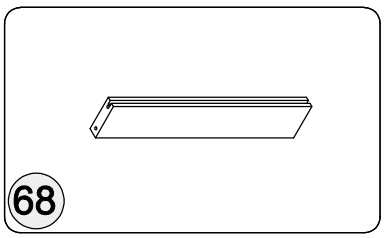


Door bottom strip
Qty: 1

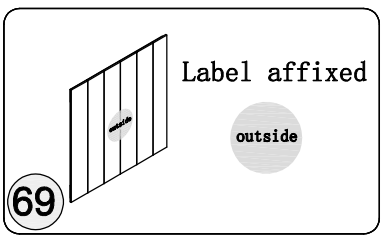


Door core board
Qty: 1

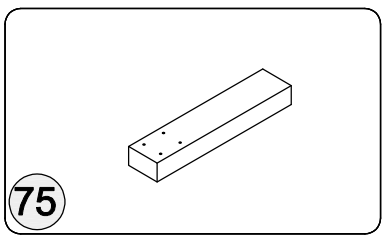


connecting strip
Qty: 1

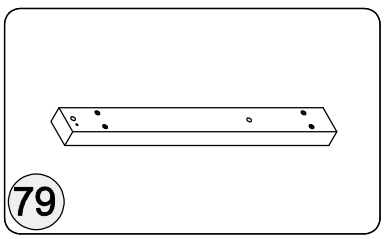


vertical bar
Qty: 5

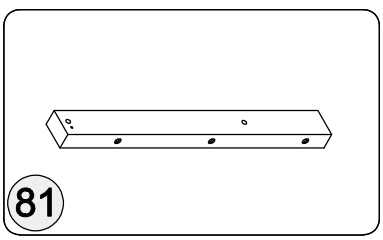

Right vertical bar
Qty: 1

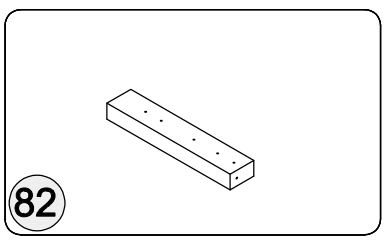


Triangular horizontal bar
Qty: 6

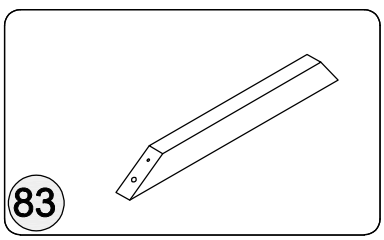


Triangular diagonal bar
Qty: 6

Wood Components (Not to Scale)


BOX 3/3

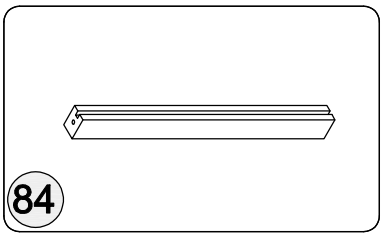


Noodles on the window
Qty: 1

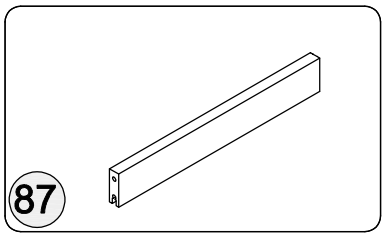

Up and down wooden strips
Qty: 2

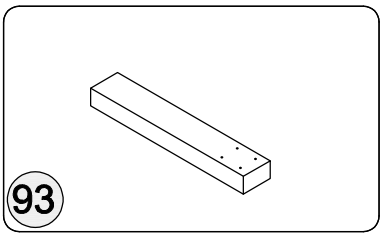


connecting strip
Qty: 1

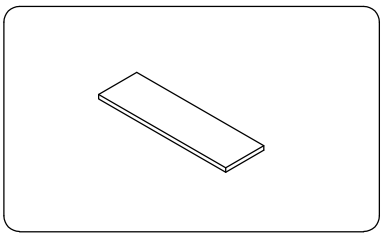

guide plate
Qty: 2

Hardwares

Hardware Components



Ø8*30

A	x 178

Wooden tenons



M3*16

B	x 20

Screw



M3.5*20

C	x 56

black screw



M4*30

D	x 17

Screw



M4*35

E	x 146

Screw



M4*45

F	x 60

Screw



M4*50

G	x 23

Screw



M4*60

H	x 68

Screw



M5*80

I	x 42

Screw



M5*100

J	x 16

Screw




K	x 5

Block inch lid




L	x 2

Outlet cover



M	x 1


plug



L=62

N	x 2

Hinge




O	x 3

Hinge




P	x 1

Lam door

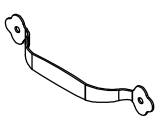

Q	x 1


Lam door




R	x 1

plug


Hardware Components

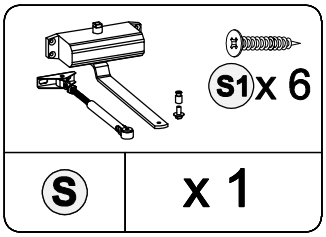


gas spring

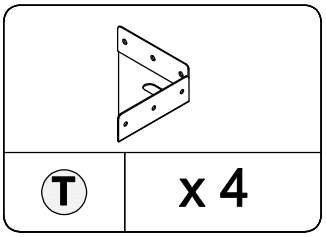

corner mark

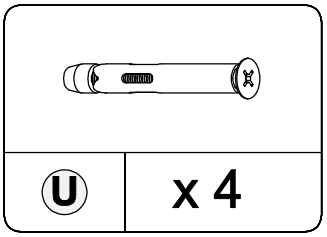

Earth screw

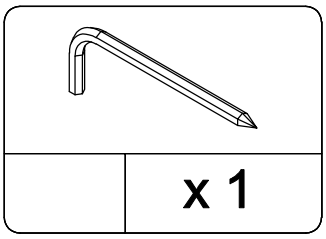


Hex key

Front frame installation


Step 1

It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.

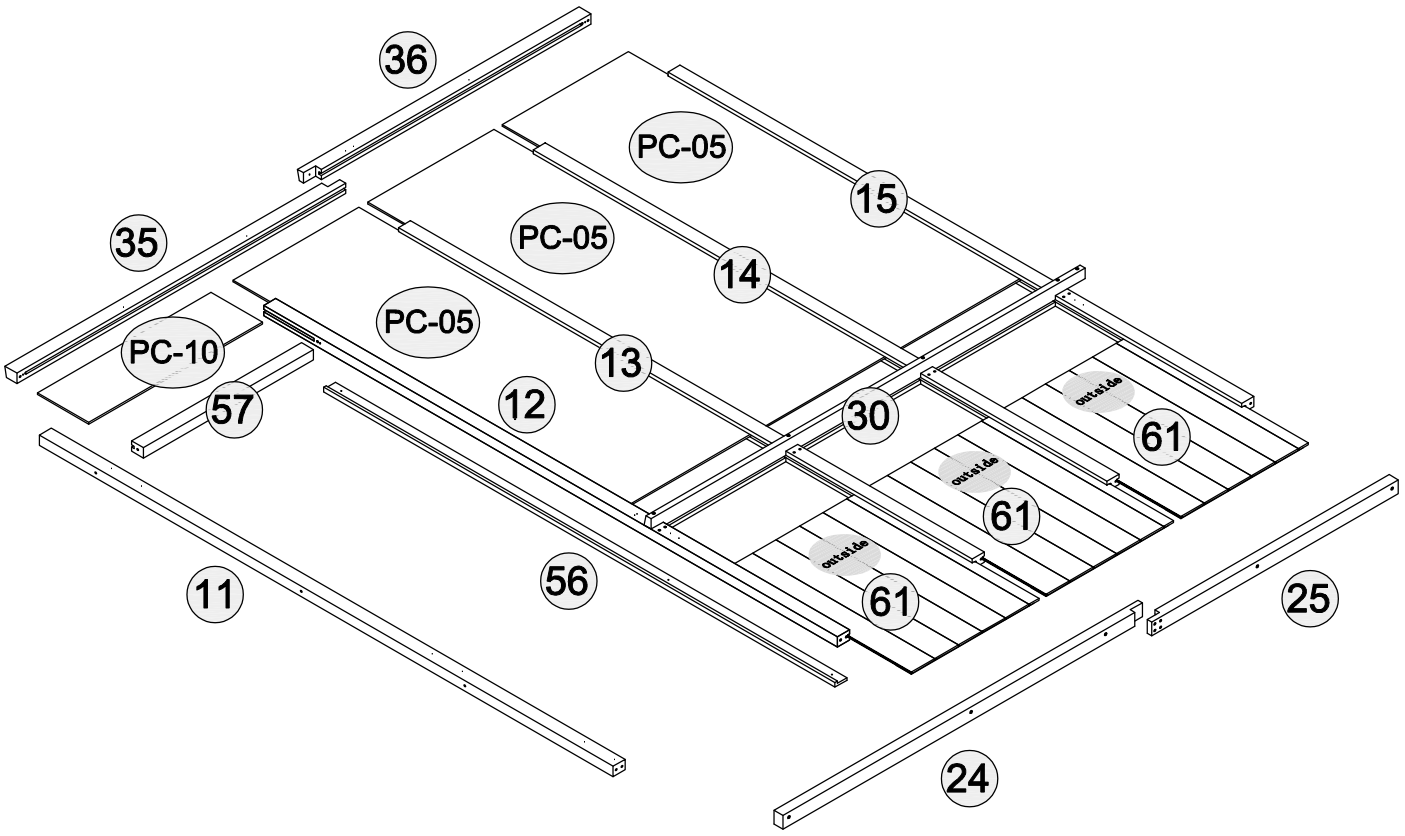


Front frame installation


Step 2

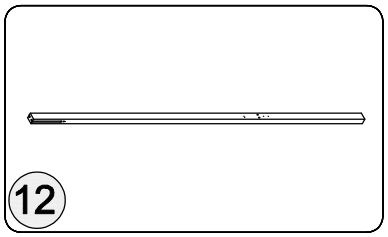


Center pillar
Qty: 1

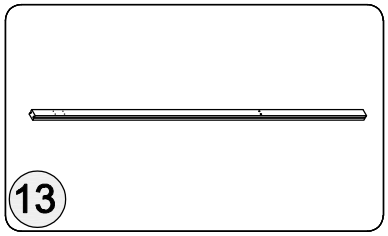


Center pillar
Qty: 1

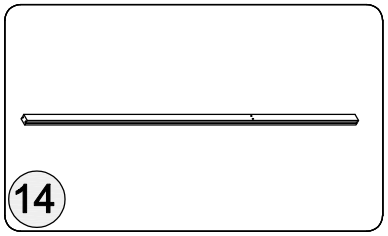


Center pillar
Qty: 1

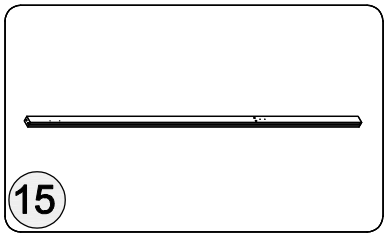


Front right pillar
Qty: 1

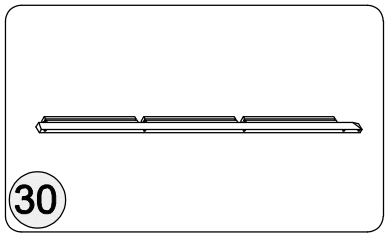

Front middle clause
Qty: 1

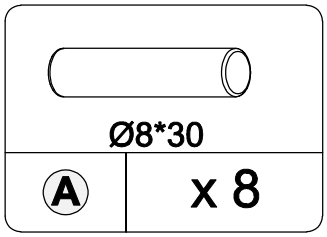


1.Connect with hardware A first

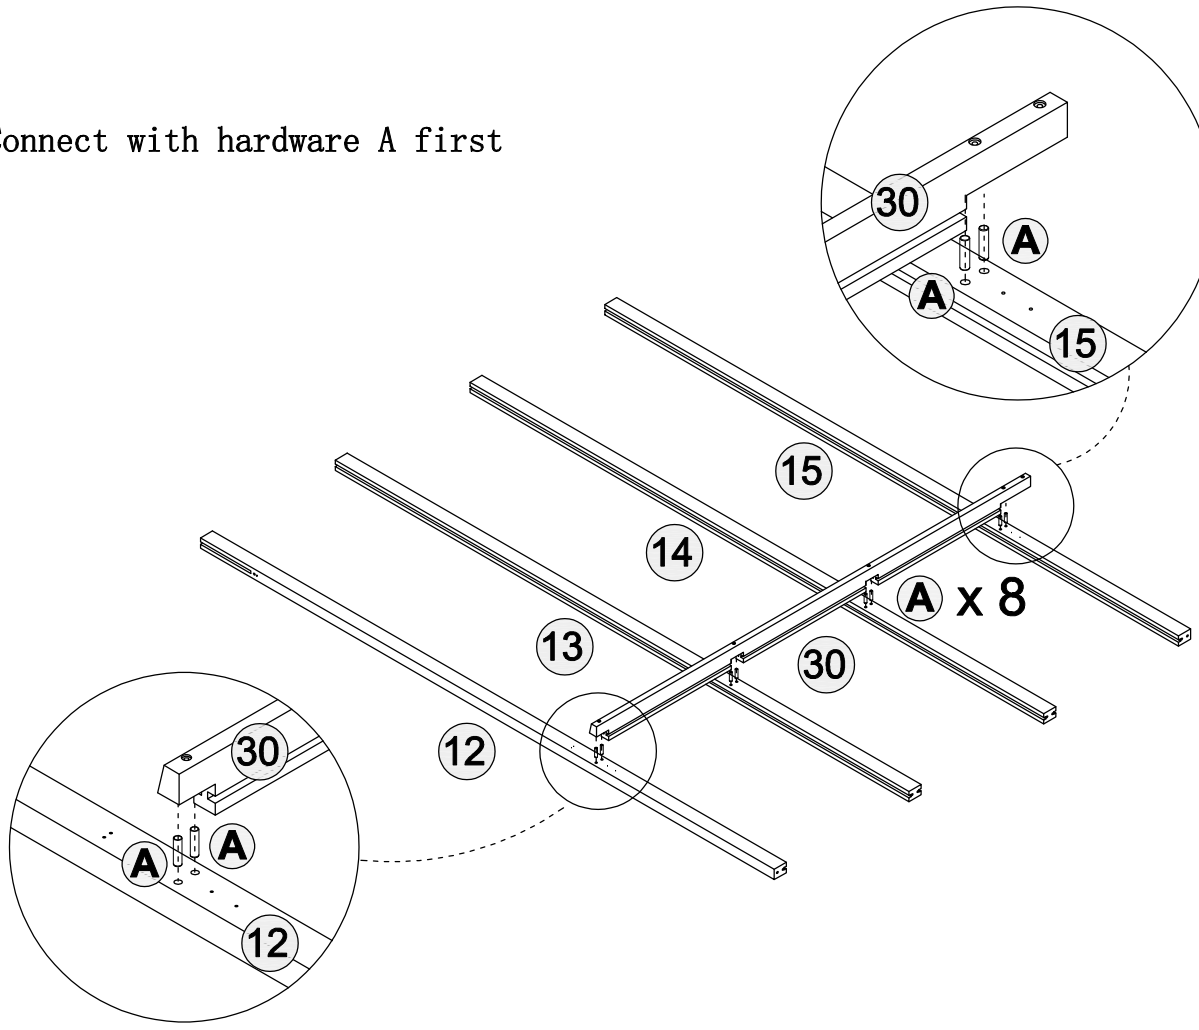


Front frame installation


Step 3

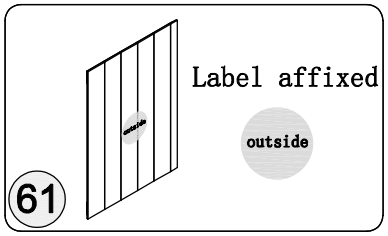


Front core board
Qty: 3

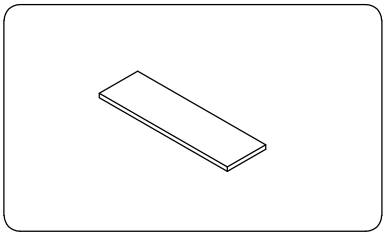

guide plate
Qty: 2

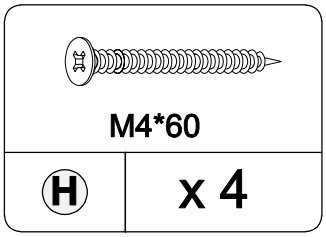


1. Connect with hardware H
2. Before installing component 61, insert the guide plate into the slot to align the slot
3. Place the 61-side plate into the side slot

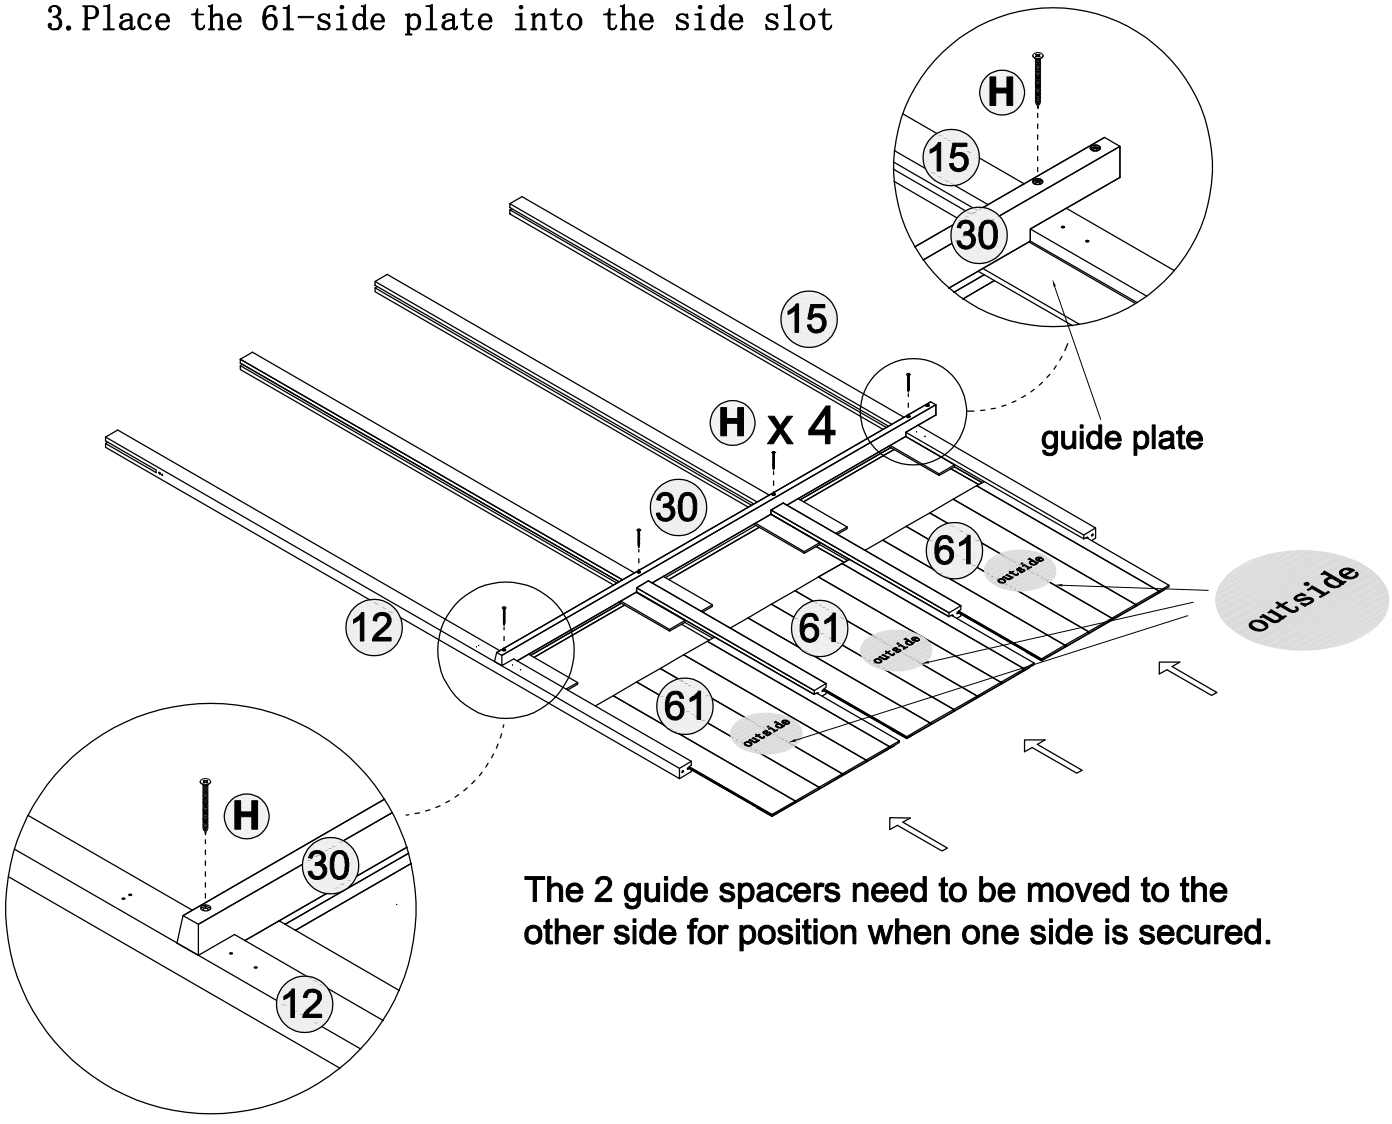


The 2 guide spacers need to be moved to the other side for position when one side is secured.

Front frame installation


Step 4

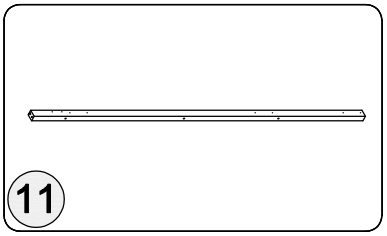


Front left pillar
Qty: 1

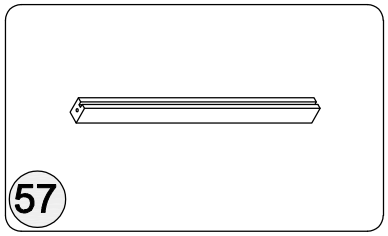


Door strip
Qty: 1

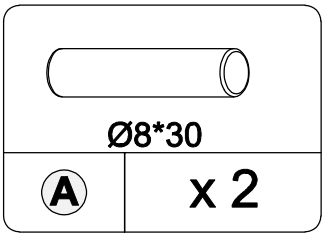

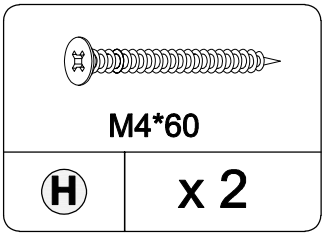


1. Connect with hardware A first, then install with hardware H

⚠ 2. Note that slot 57 is facing upwards and there is a lead hole behind the left end

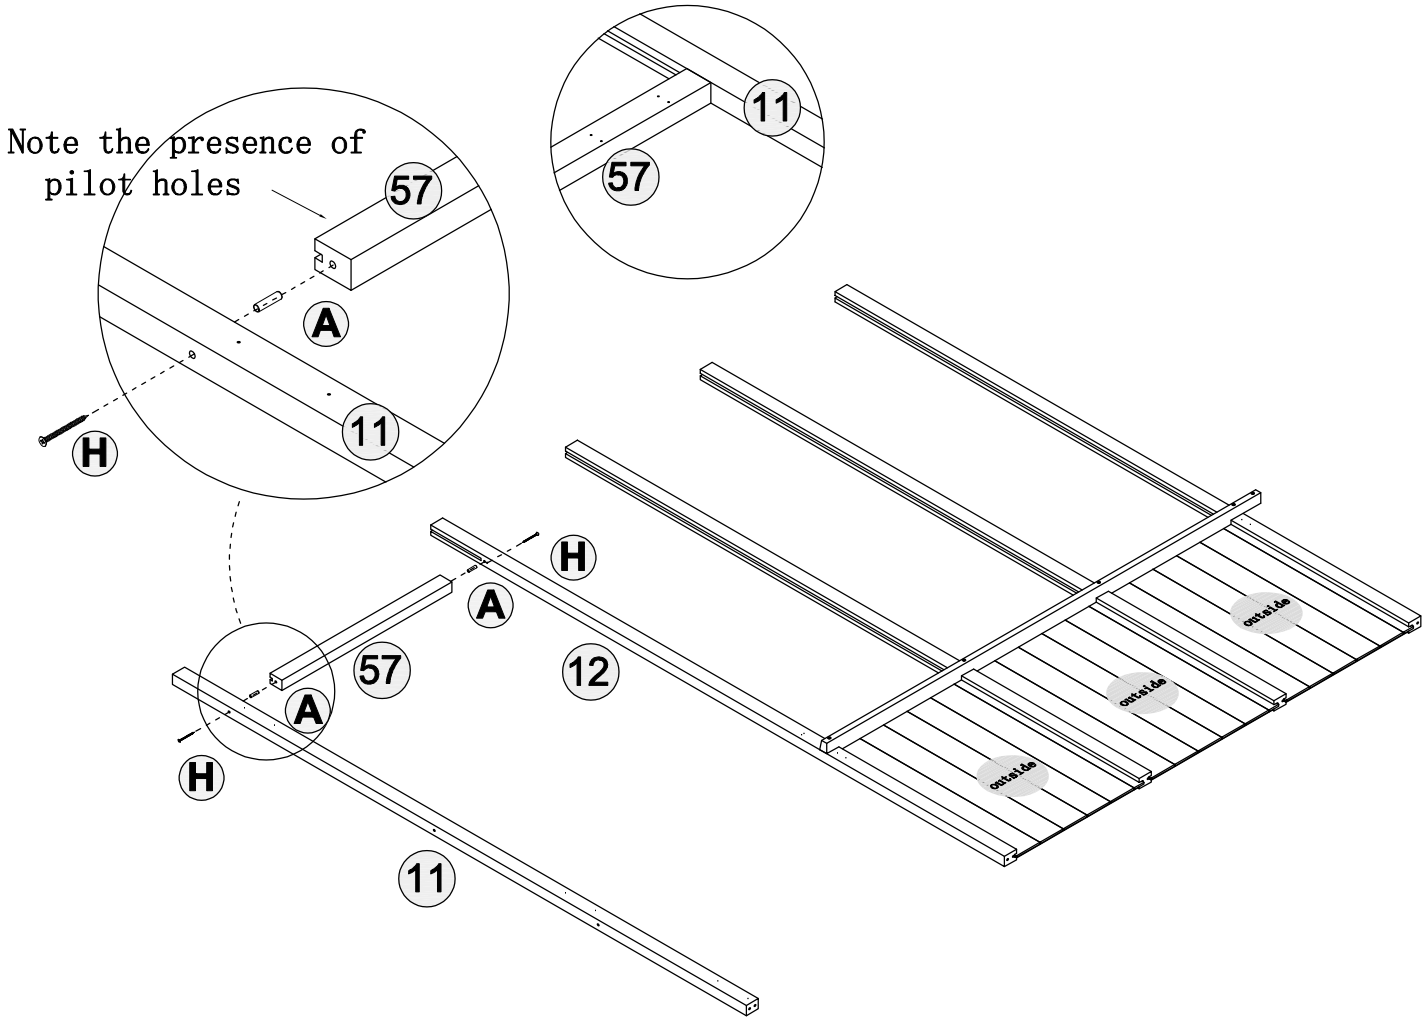


Front frame installation


Step 5

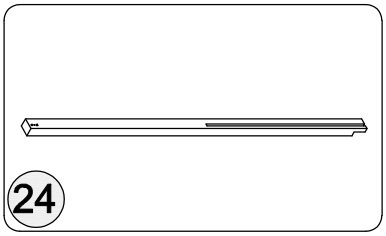



Front long bottom strip
Qty: 1

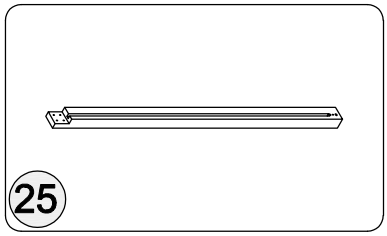


Front short bottom strip
Qty: 1

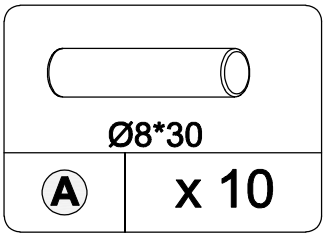

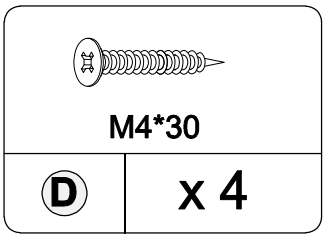

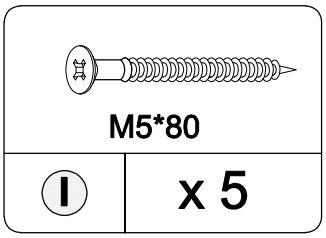


1. Connect with hardware A first, then install with hardware D, I

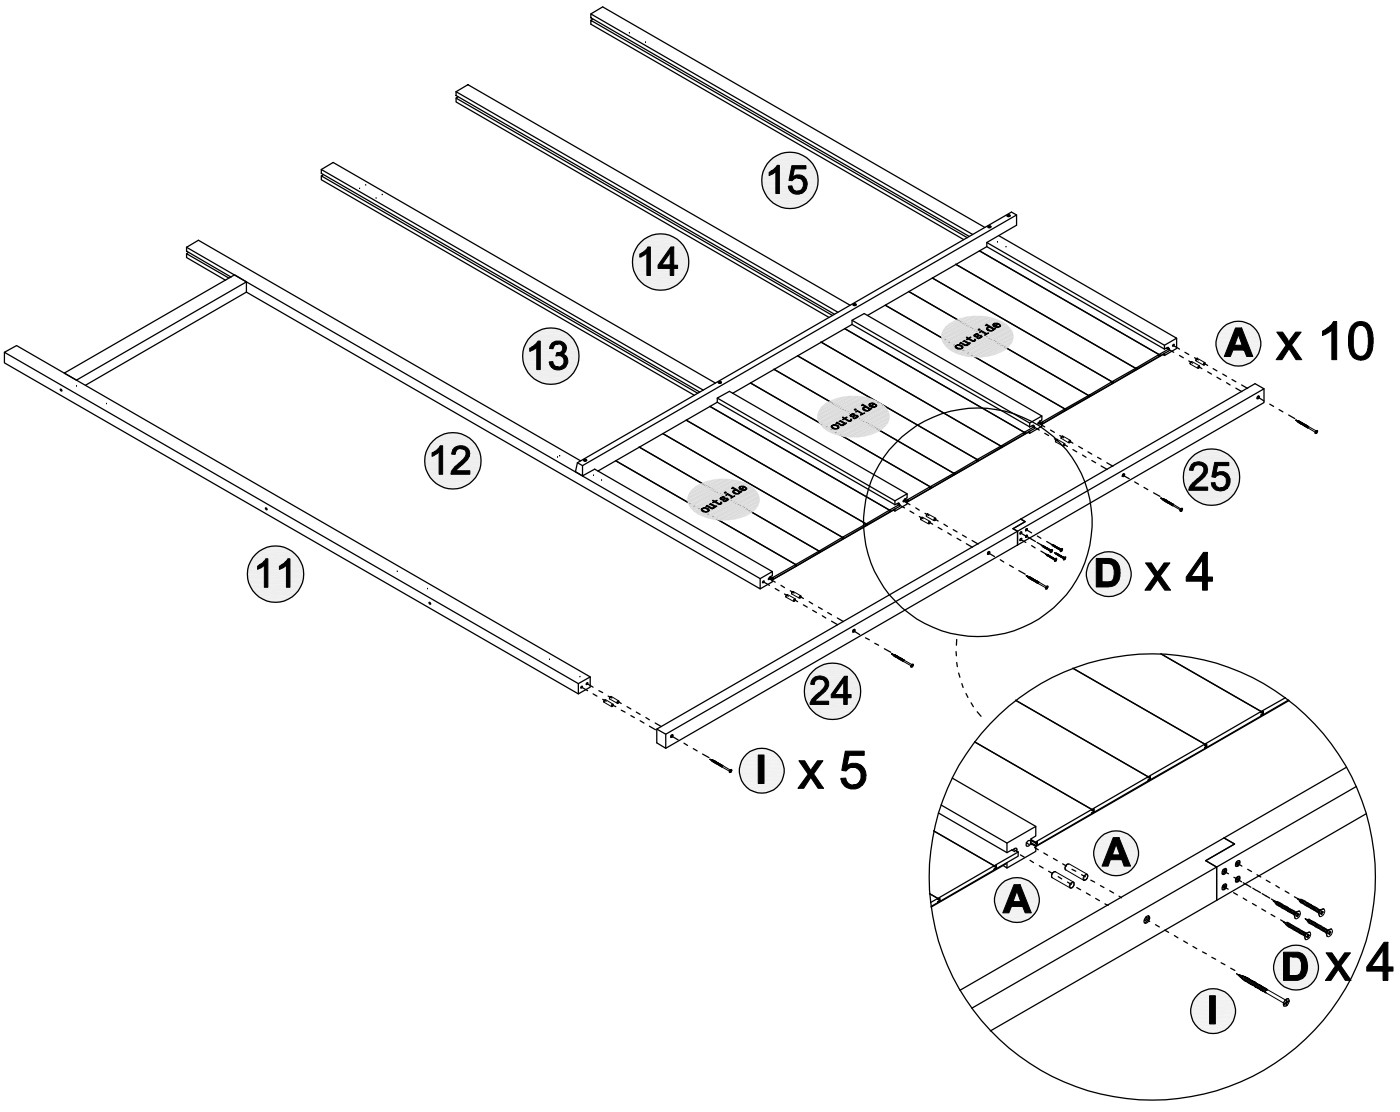


Front frame installation

Step 6

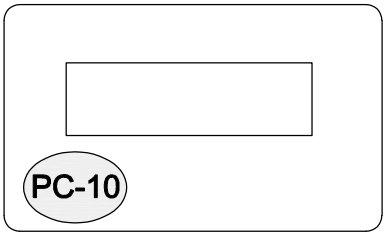


Sunshine board on the door
Qty: 1

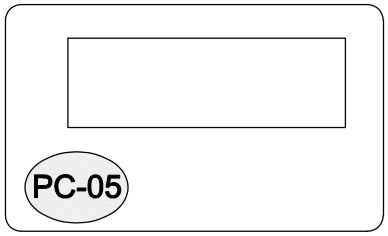

Front Sunlight Panel
Qty: 3


1. Place components PC-05 and PC-10 into the slot
2. Before installing component , insert the guide plate into the slot to align the slot
3. Before installing each PC component, the film should be peeled off first

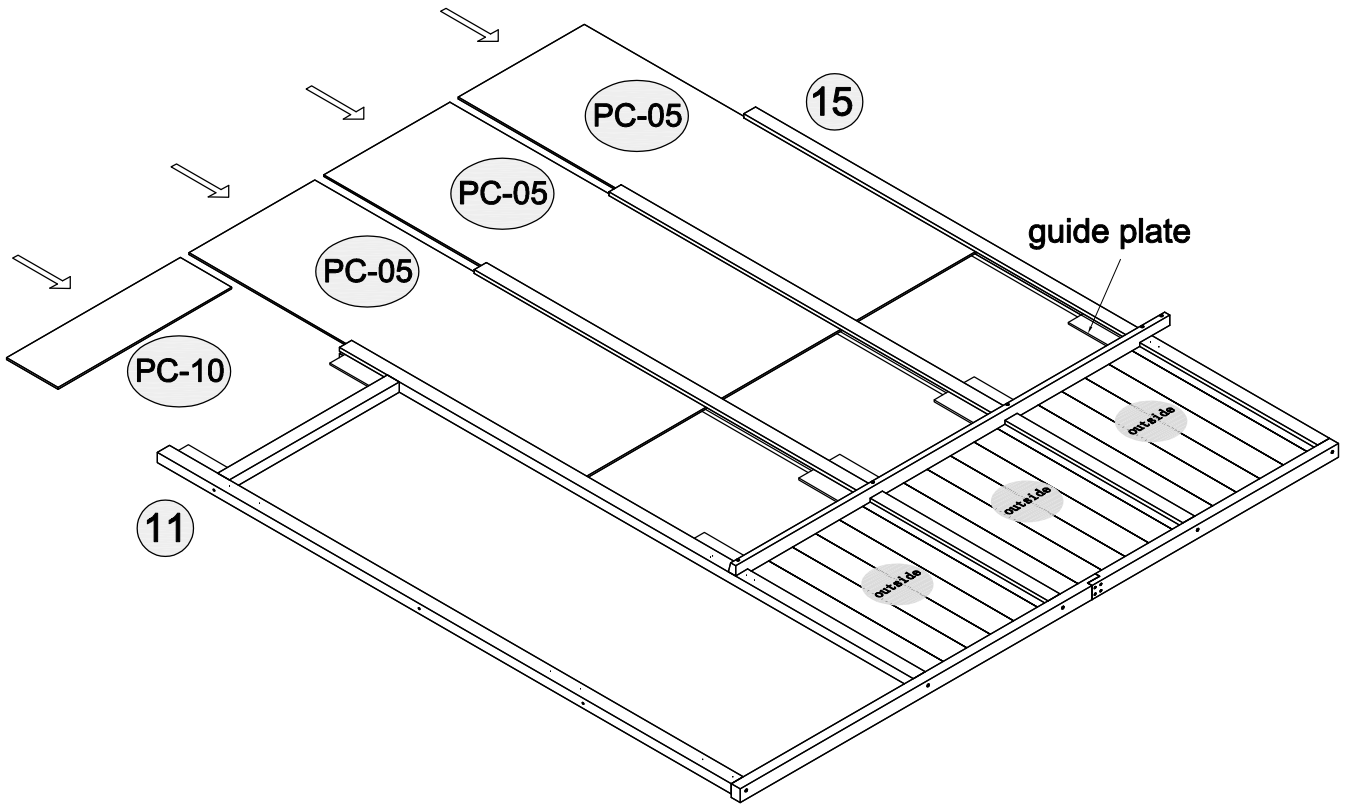


The 2 guide spacers need to be moved to the other side for position when one side is secured.

Front frame installation


Step 7

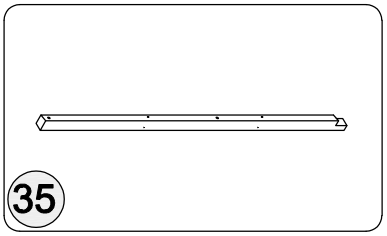


Front long beam
Qty: 1

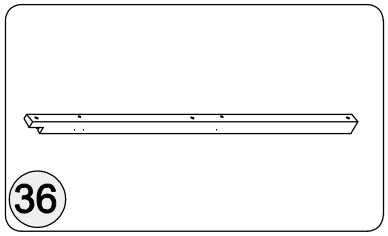


Front short beam
Qty: 1

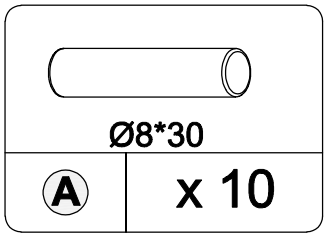

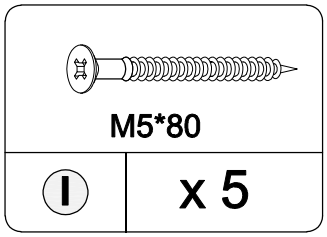

1. Connect with hardware A first, then install with hardware I

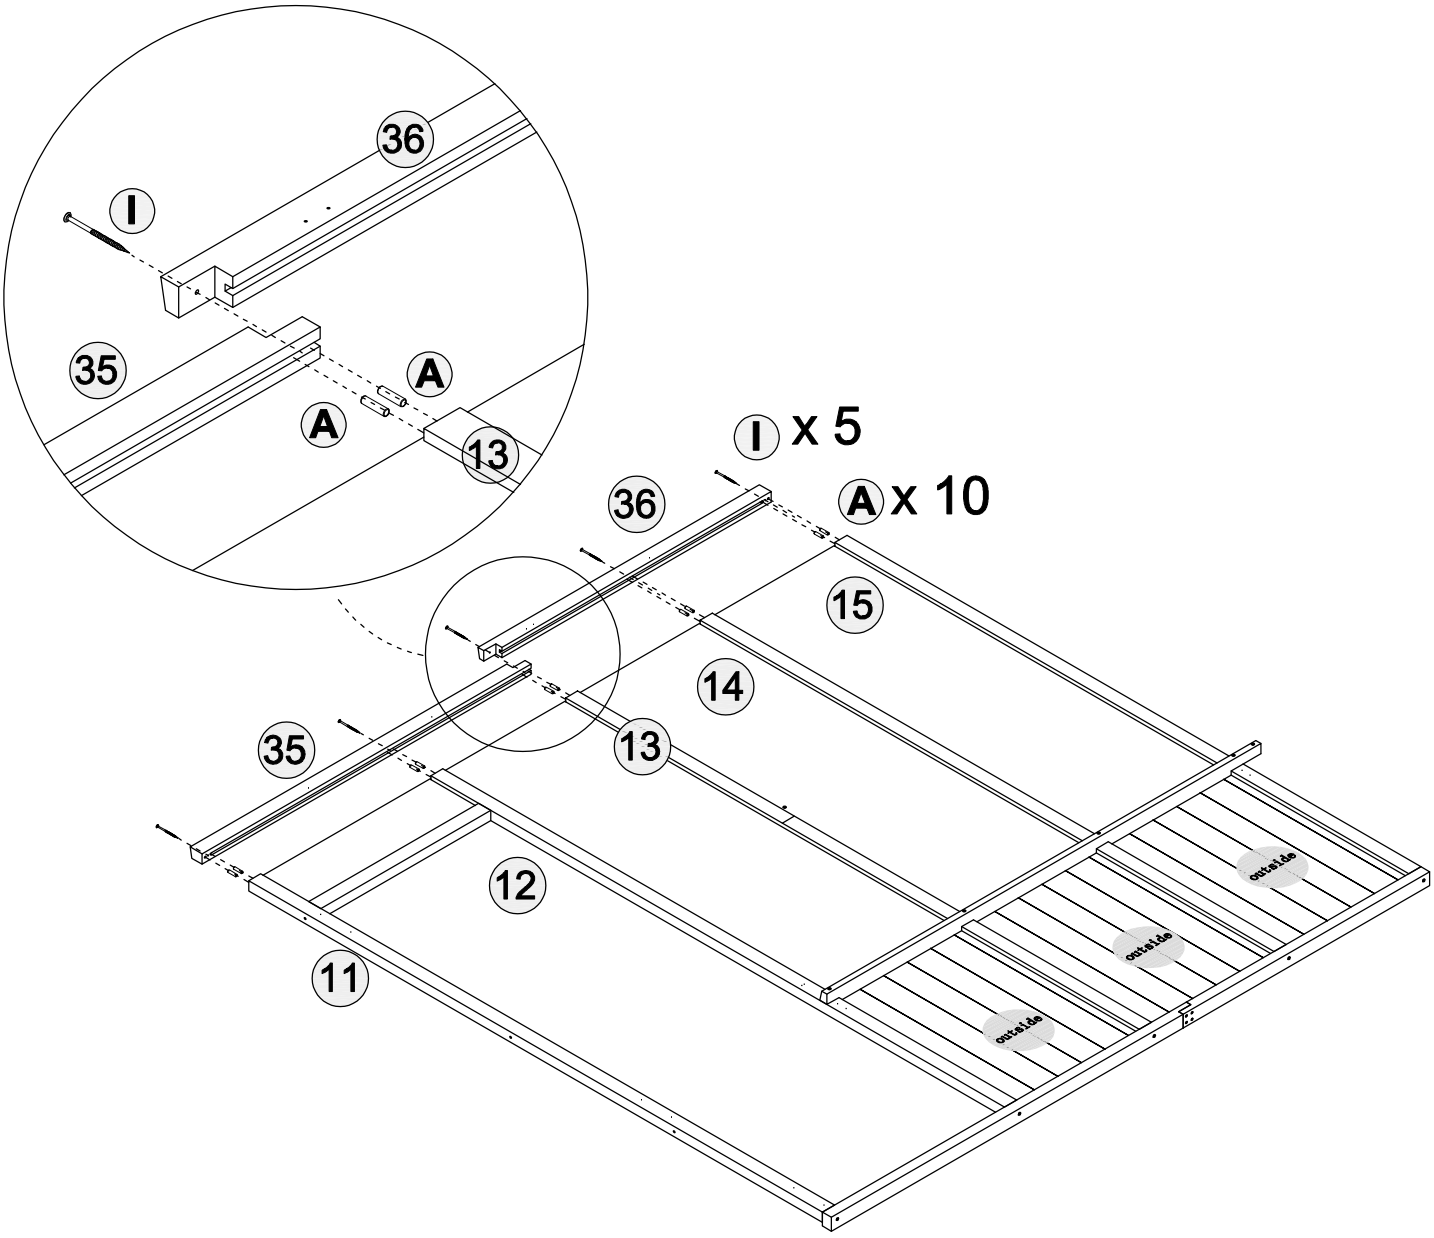


Front frame installation

Step 8




door stop


Qty: 1

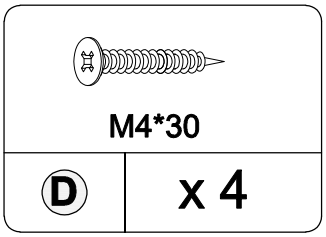

1. Use hardware D to pass through component 56 and install it towards the lead hole

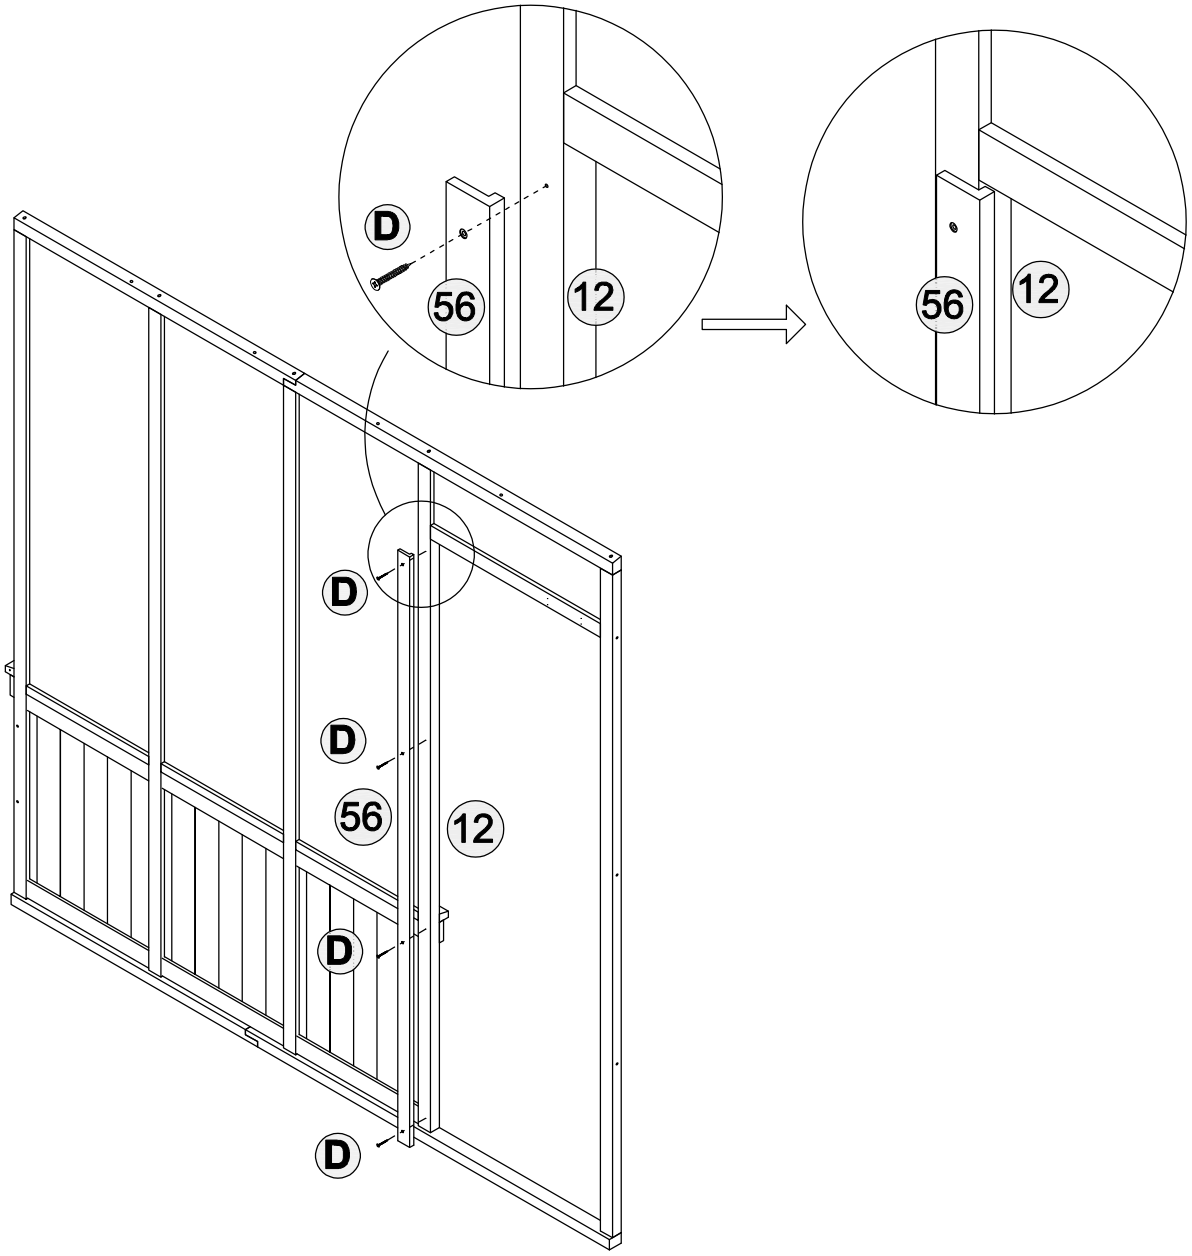


It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.

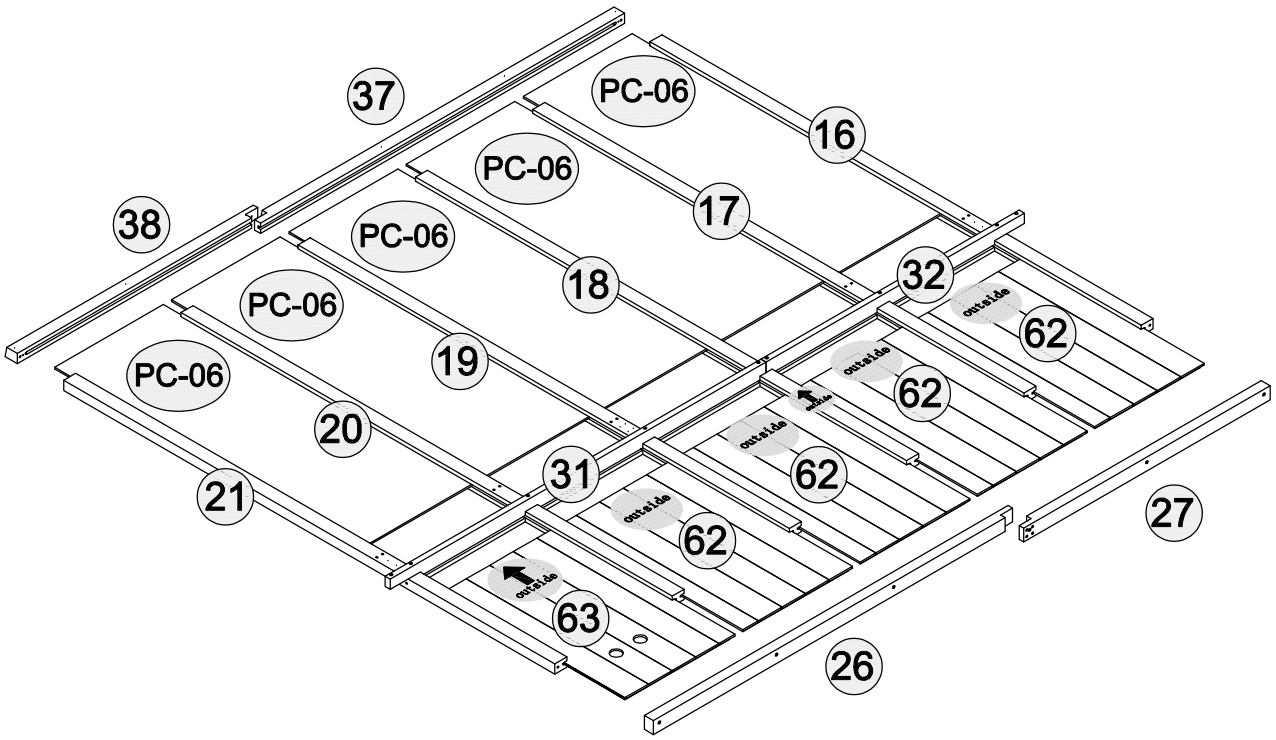


Rear frame installation


Step 10

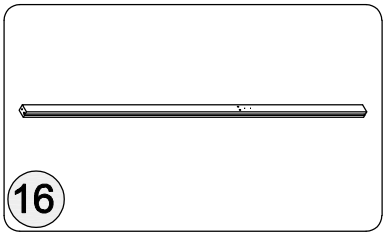


Rear left pillar
Qty: 1

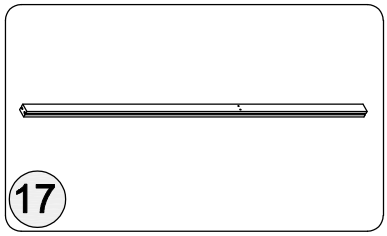


Rear center pillar
Qty: 1

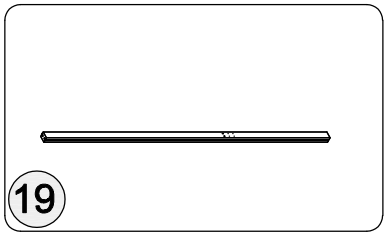


Rear center pillar
Qty: 1

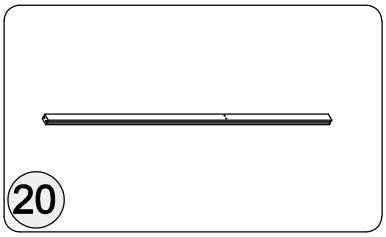


Rear center pillar
Qty: 1

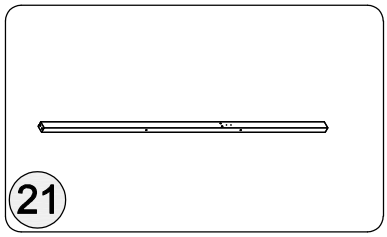


Rear right pillar
Qty: 1

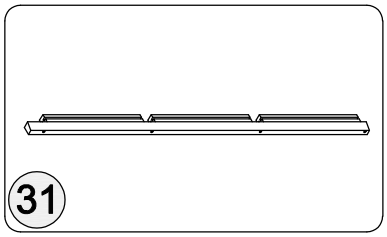


Rear middle strip
Qty: 1

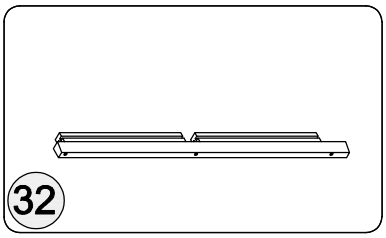

Rear middle short strip
Qty: 1

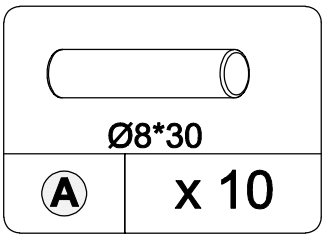


1. Connect with hardware A first

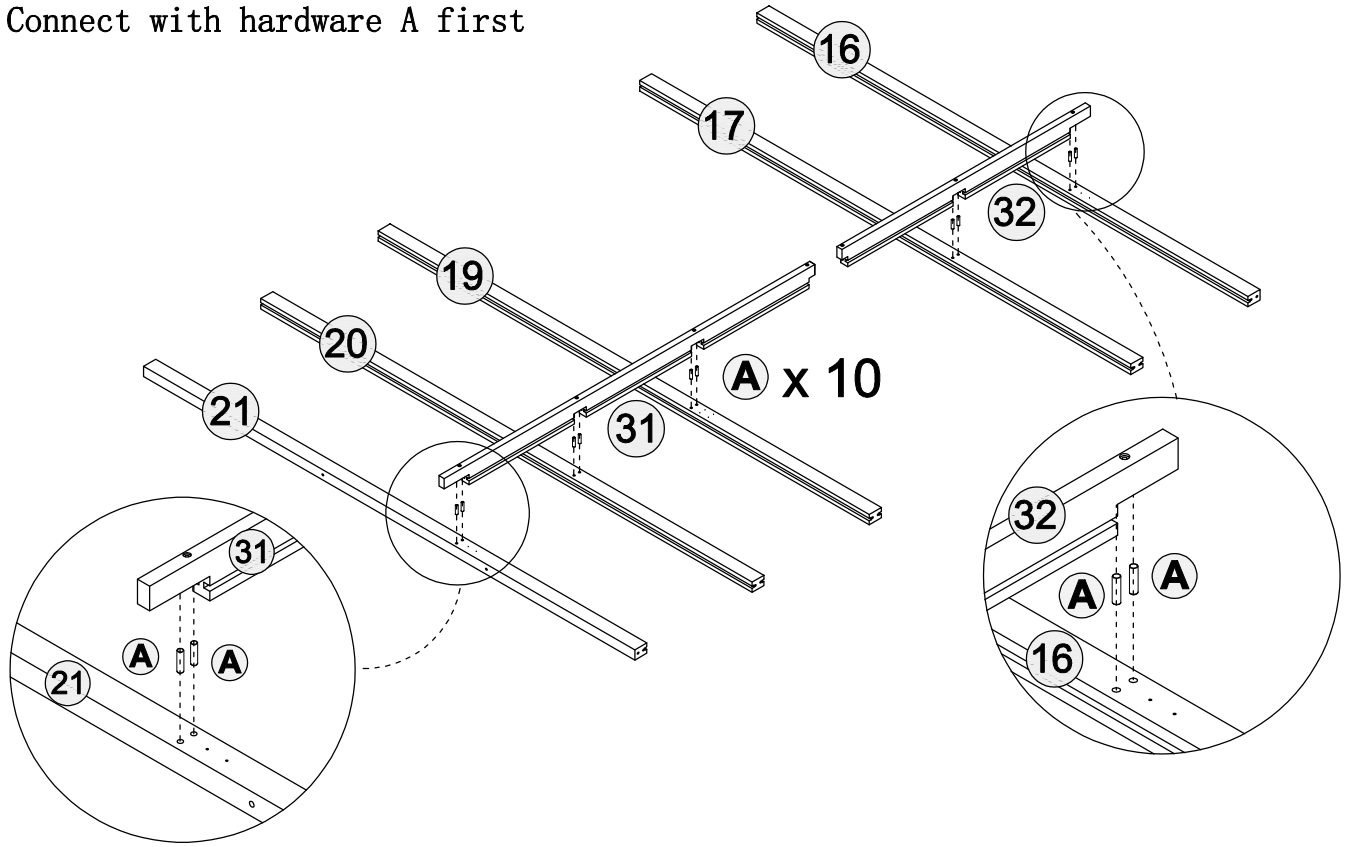


Rear frame installation


Step 11

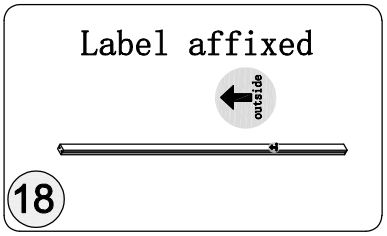


Rear center pillar
Qty: 1

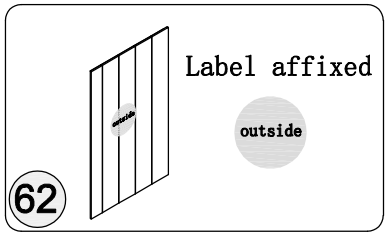


Rear core board
Qty: 4

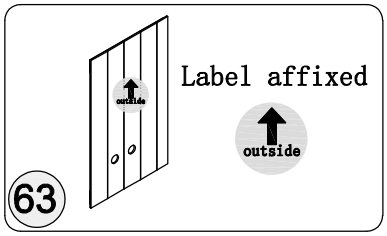

Rear core board
Qty: 1

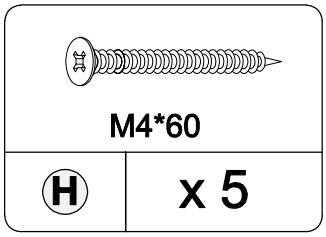


1. Component 18 is placed below components 31 and 32, Don't install the hardware yet
2. Before installing component , insert the guide plate into the slot to align the slot
3. Place the 62,63-side plate into the side slot

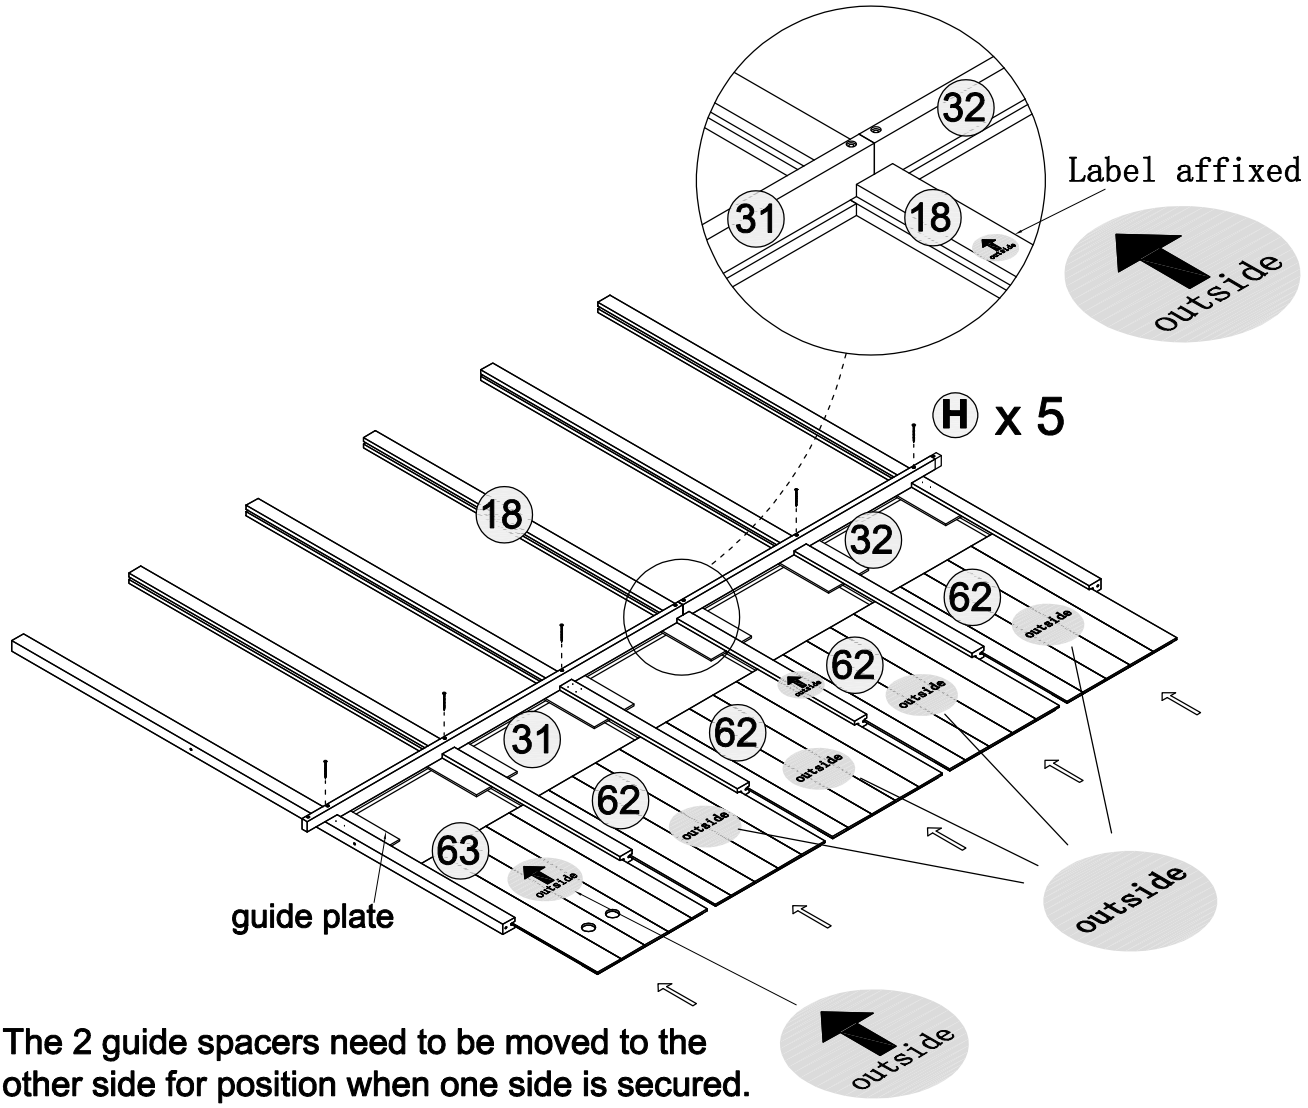


The 2 guide spacers need to be moved to the other side for position when one side is secured.

Rear frame installation


Step 12

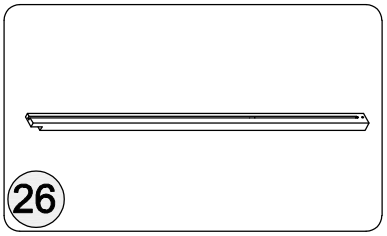



Rear long bottom strip
Qty: 1

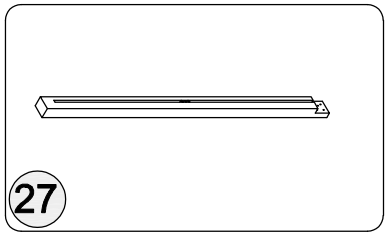


Rear short bottom strip
Qty: 1

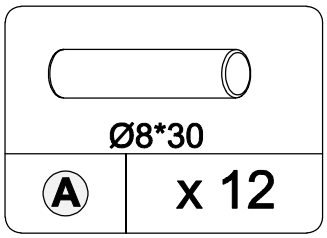

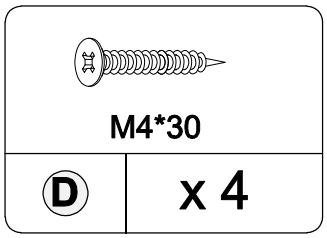

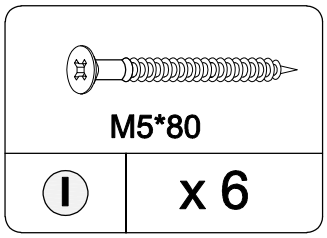


1. Connect with hardware A first, then install with hardware D, I

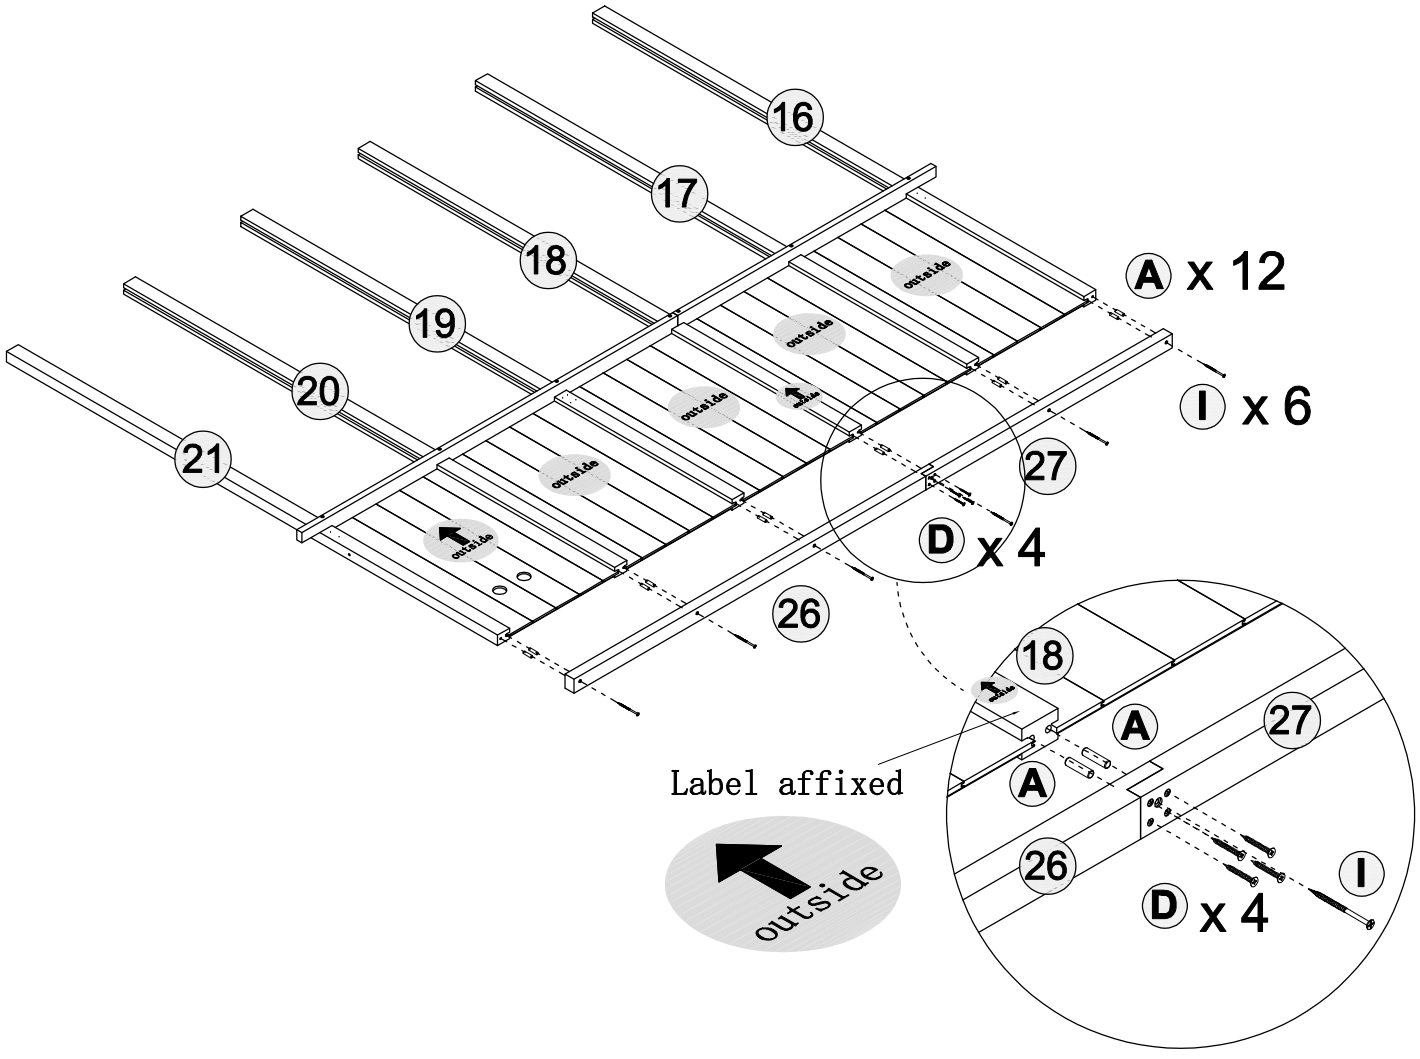


Rear frame installation


Step 13

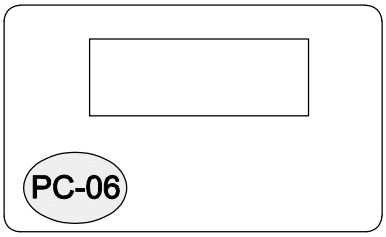

Rear sunlight panel
Qty: 5

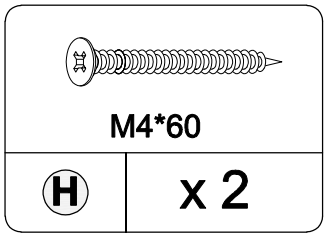


1. Connect with hardware H
2. Before installing component PC-06 , insert the guide plate into the slot to align the slot
3. Before installing each PC component, the film should be peeled off first

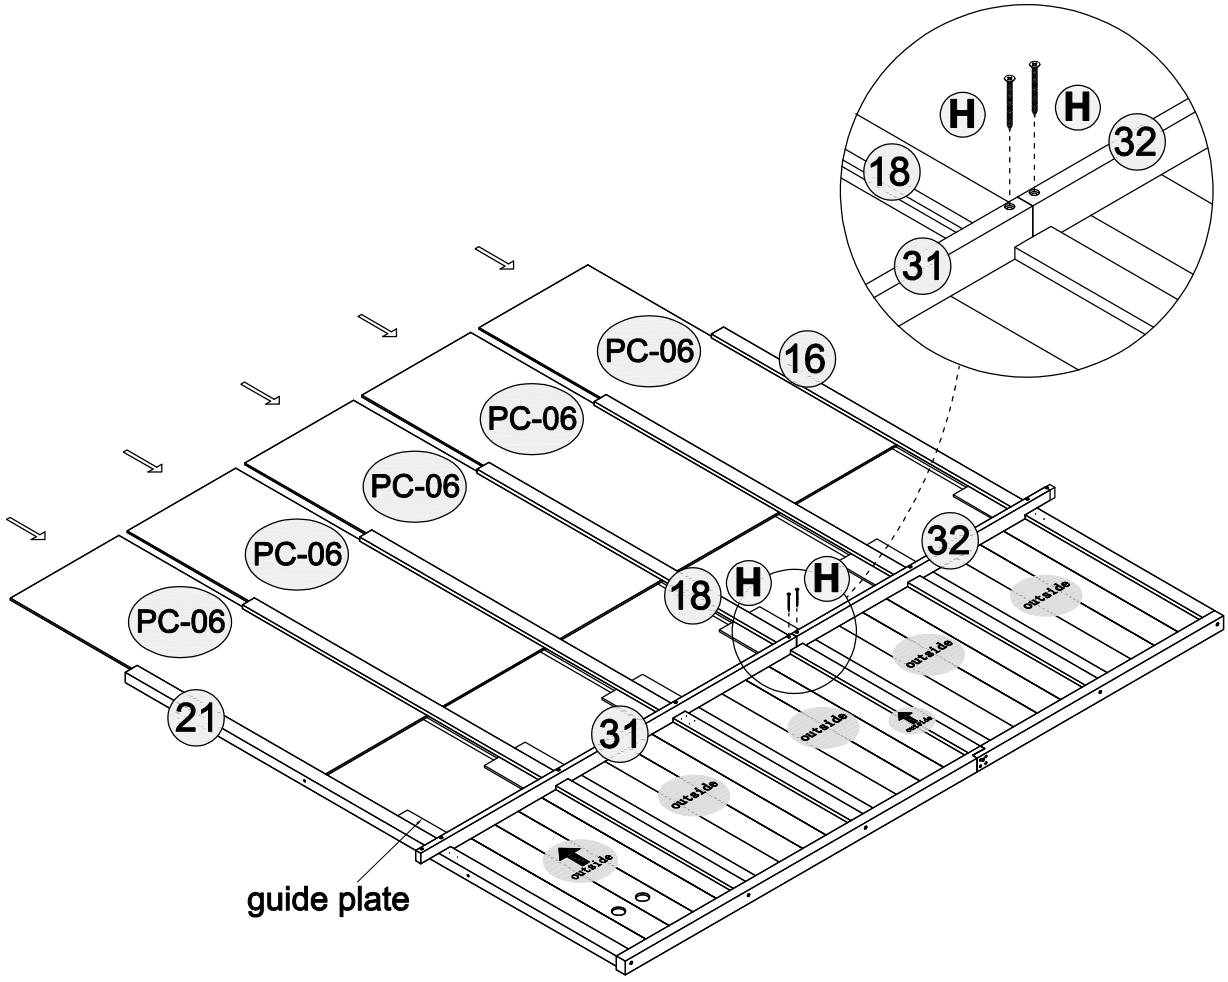


The 2 guide spacers need to be moved to the other side for position when one side is secured.

Rear frame installation


Step 14

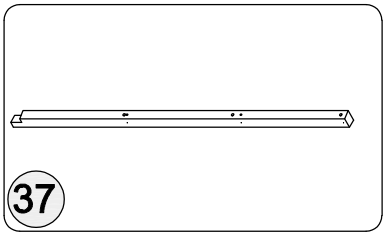


Rear long beam
Qty: 1

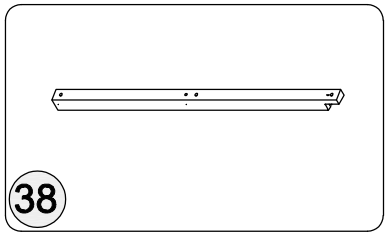


Rear short beam
Qty: 1

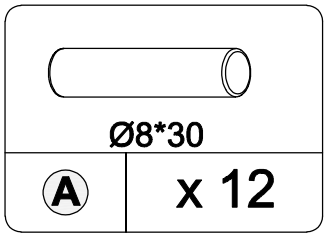

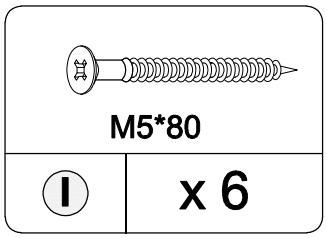


1. Connect with hardware A first, then install with hardware I

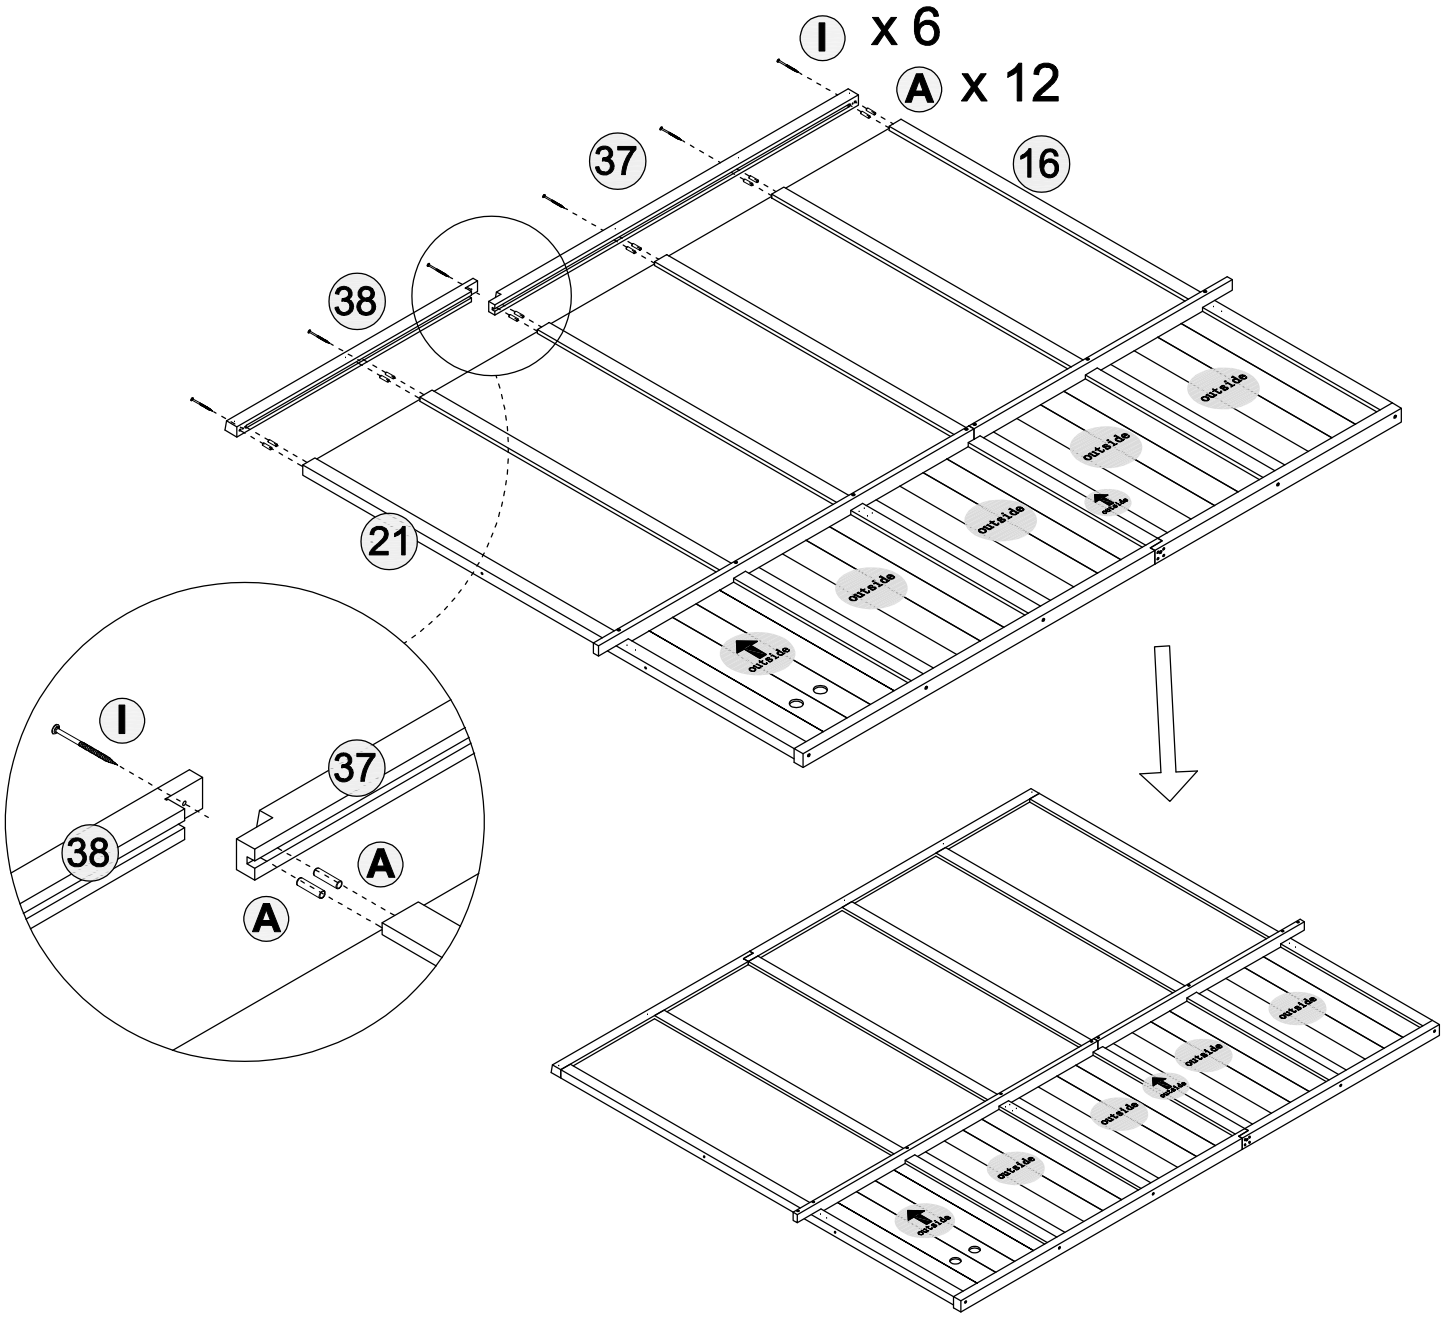


Effect after installation

It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.

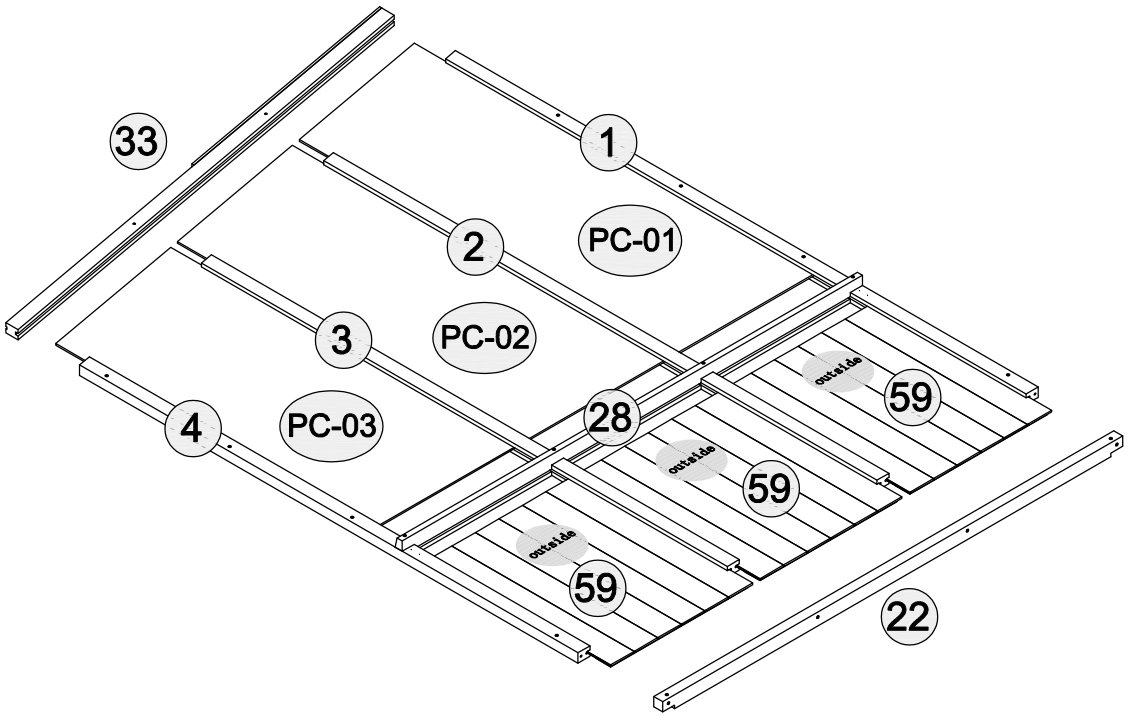


Installation of left frame


Step 16

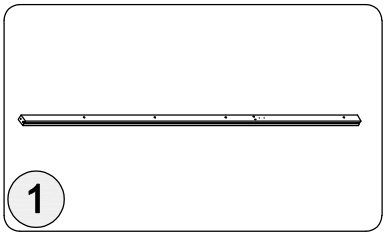


Left front pillar
Qty: 1

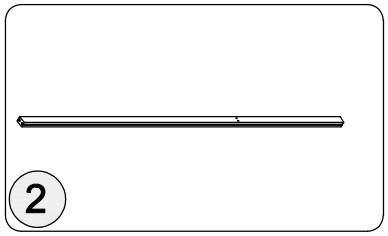


Left center pillar
Qty: 1

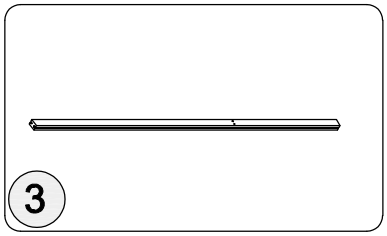


Left center pillar
Qty: 1

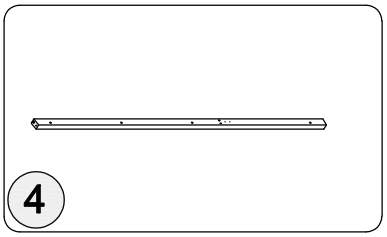


Left rear pillar
Qty: 1

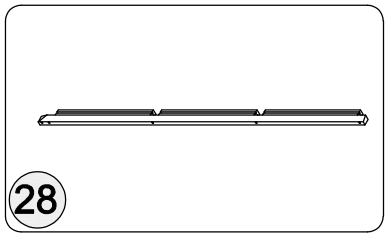

Left middle bar
Qty: 1

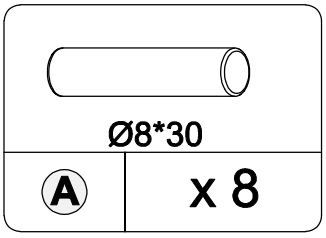


1.Connect with hardware A first

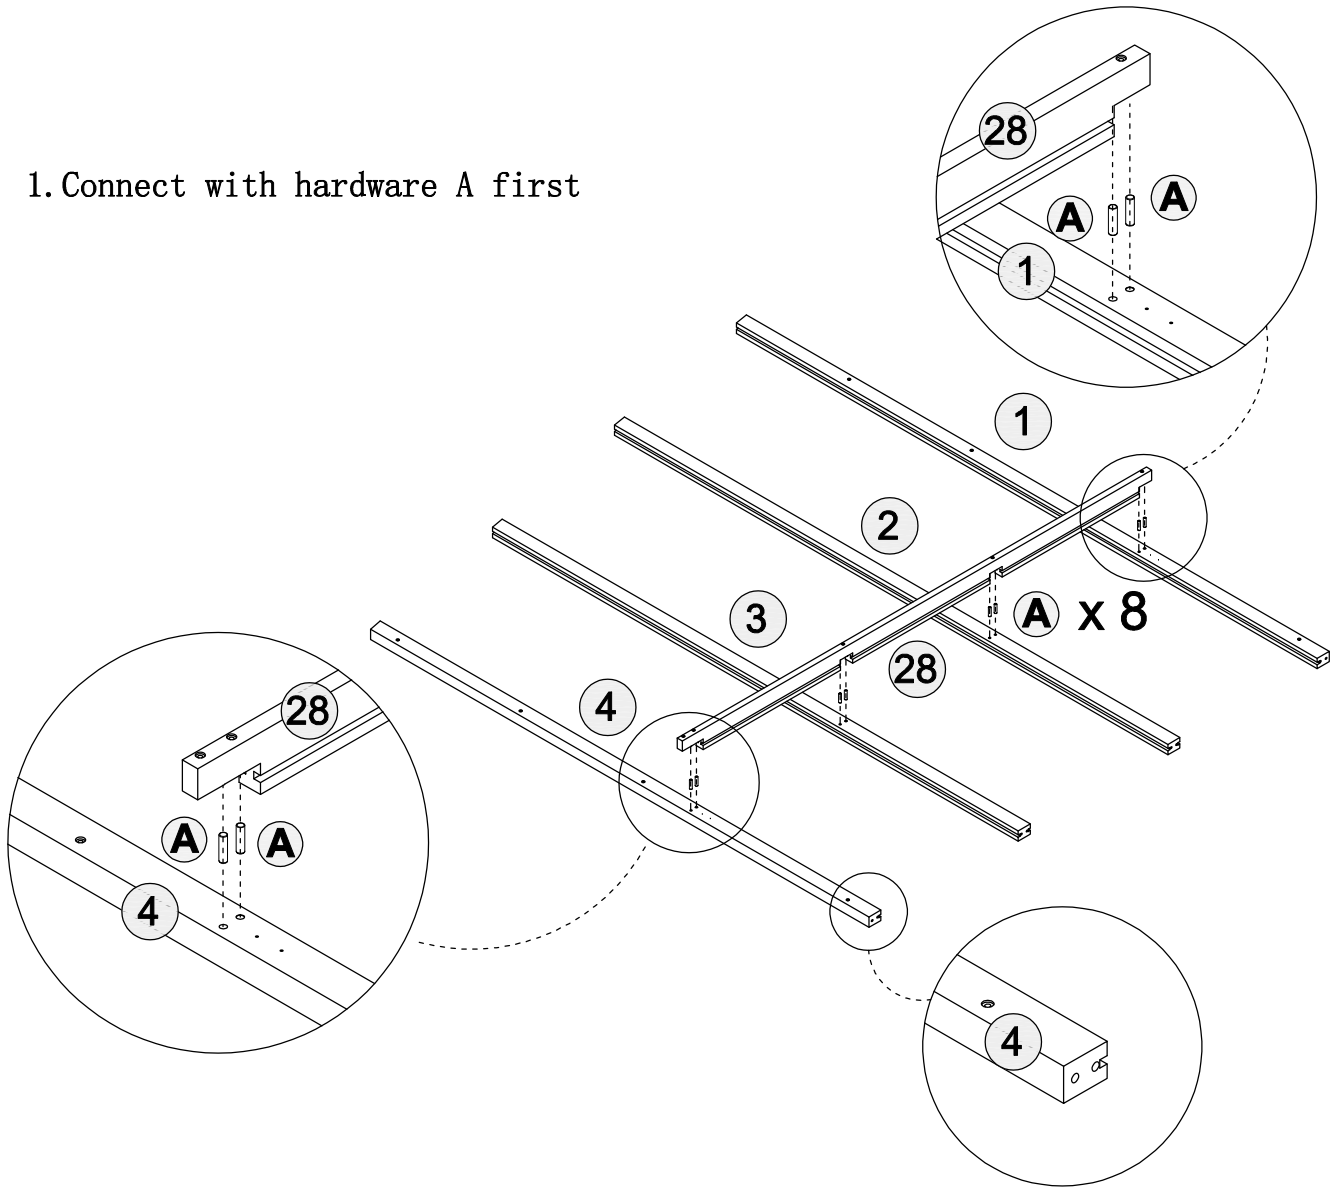


Installation of left frame


Step 17

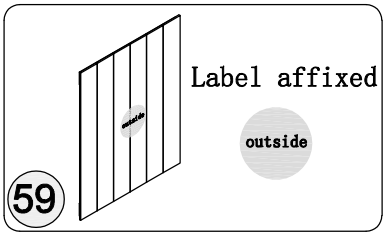

Side core board
Qty: 3

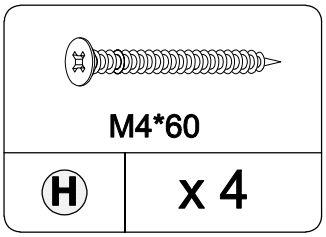


1. Connect with hardware H
2. Before installing component 59, insert the guide plate into the slot to align the slot
3. Place the 59-side plate into the side slot

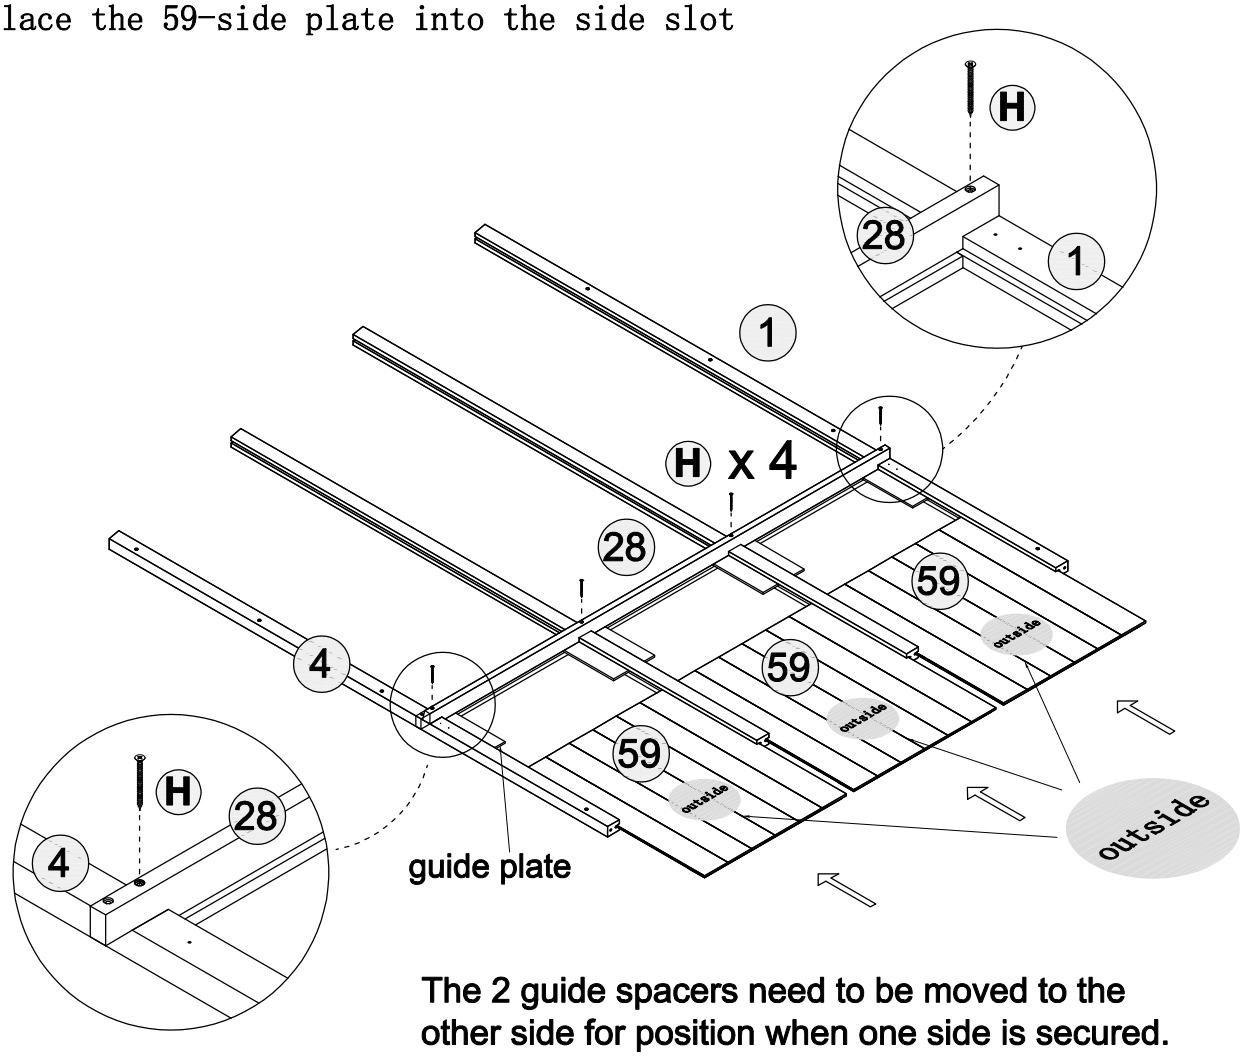


The 2 guide spacers need to be moved to the other side for position when one side is secured.


Installation of left frame

Step 18

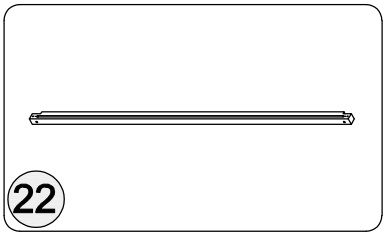


Side bottom Flat noodles
Qty: 1

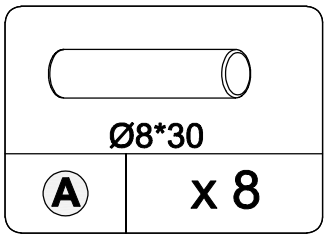

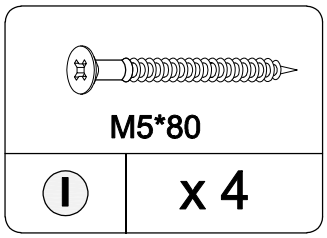


1. Connect with hardware A first, then install with hardware I

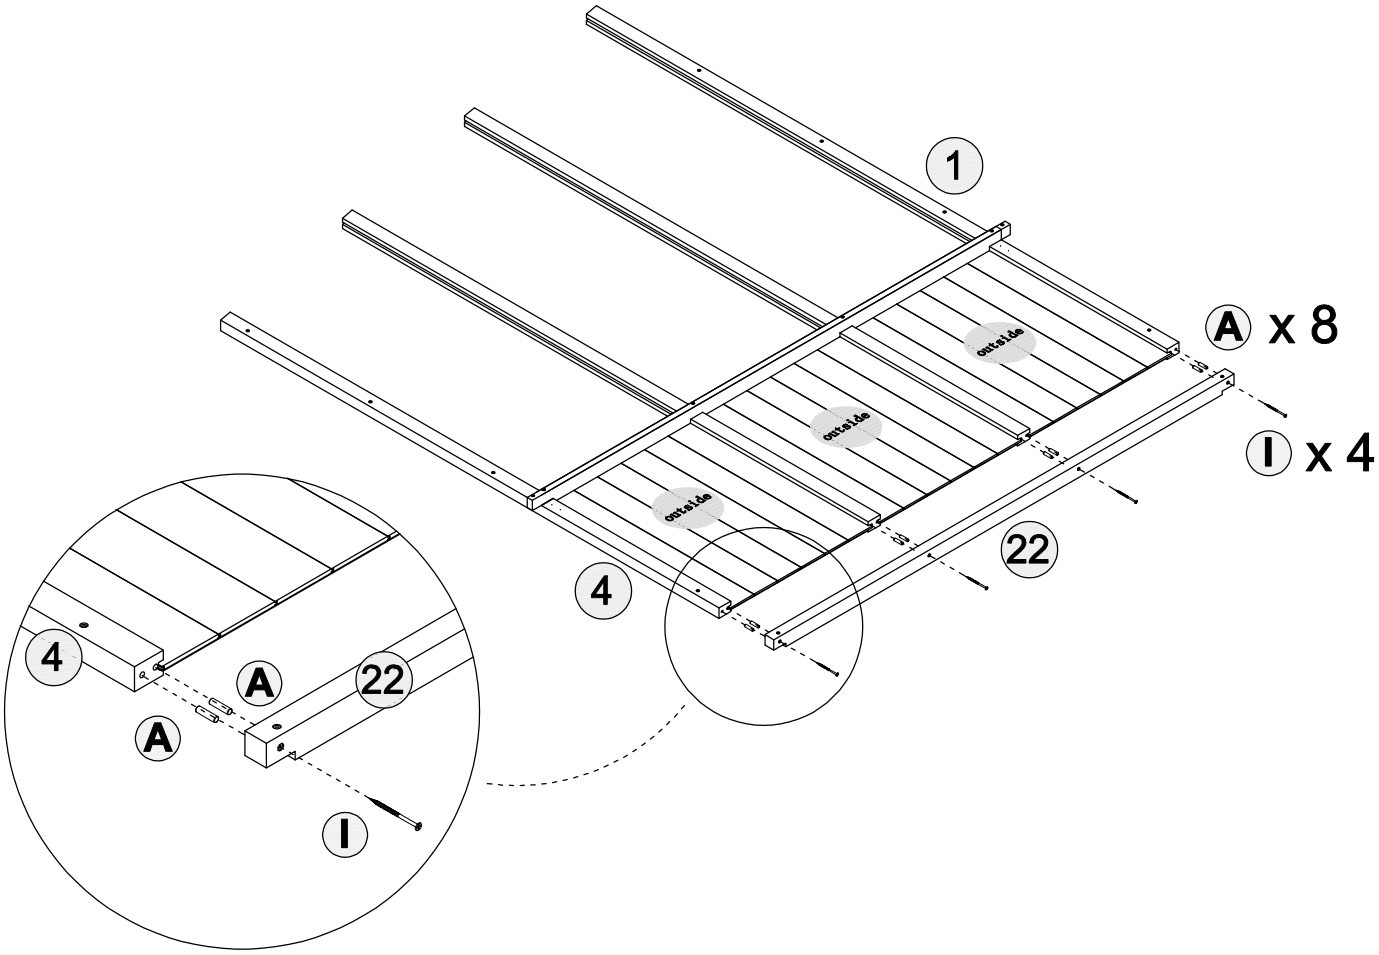


Installation of left frame


Step 19

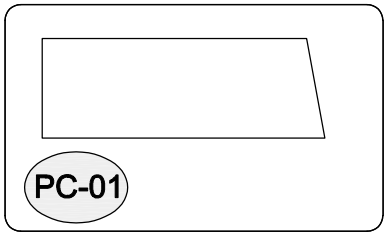

Front Sunlight Panel
Qty: 1

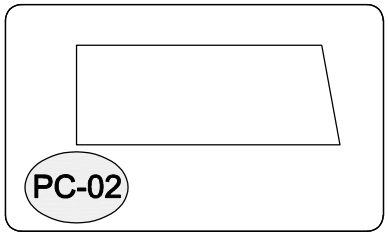


Sunlight panel
Qty: 1

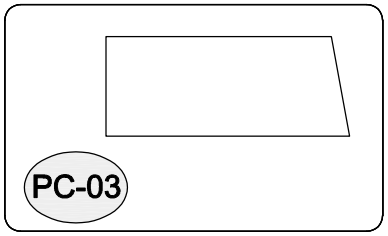

Rear sunlight panel
Qty: 1


1. Before installing component , insert the guide plate into the slot to align the slot
2. Place components PC-01,PC-02, and PC-03 into the slot
3. Before installing each PC component, the film should be peeled off first

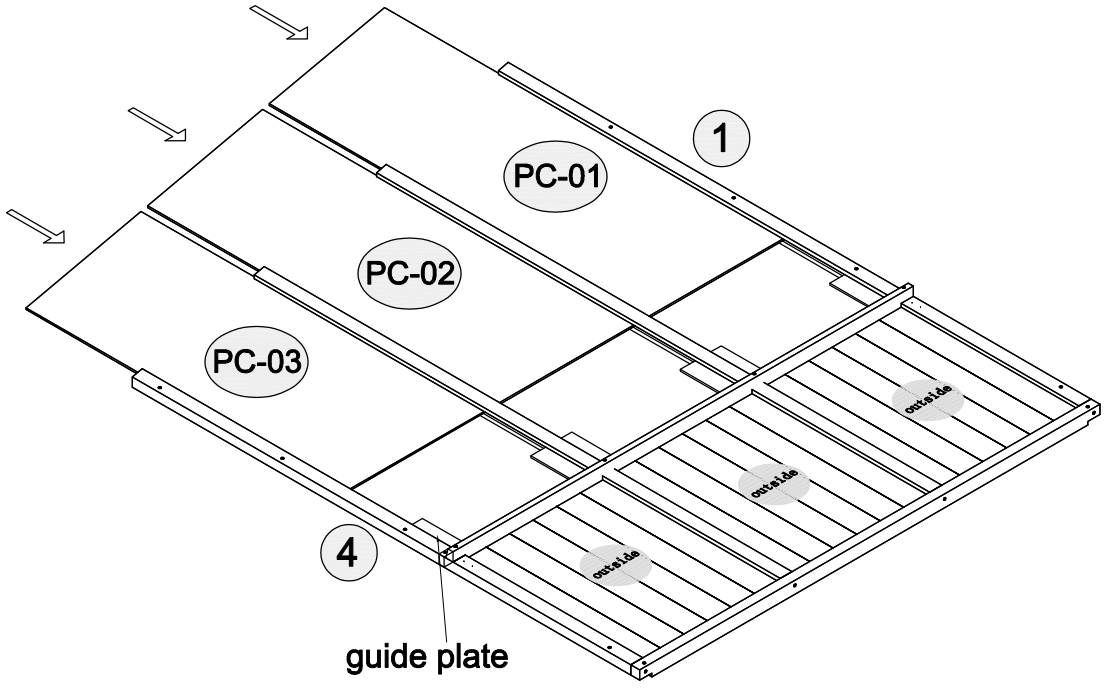

The 2 guide spacers need to be moved to the other side for position when one side is secured.


Installation of left frame


Step 20

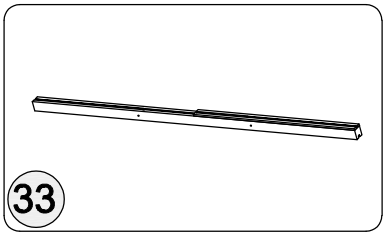


Left side beam

Qty: 1

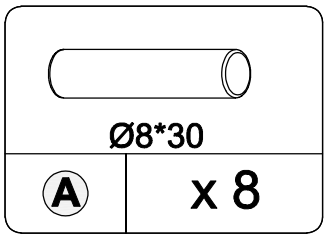

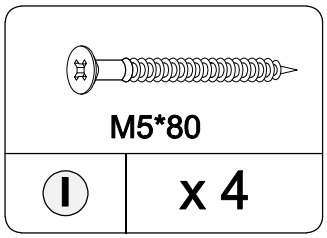


1. Connect with hardware A first, then install with hardware I

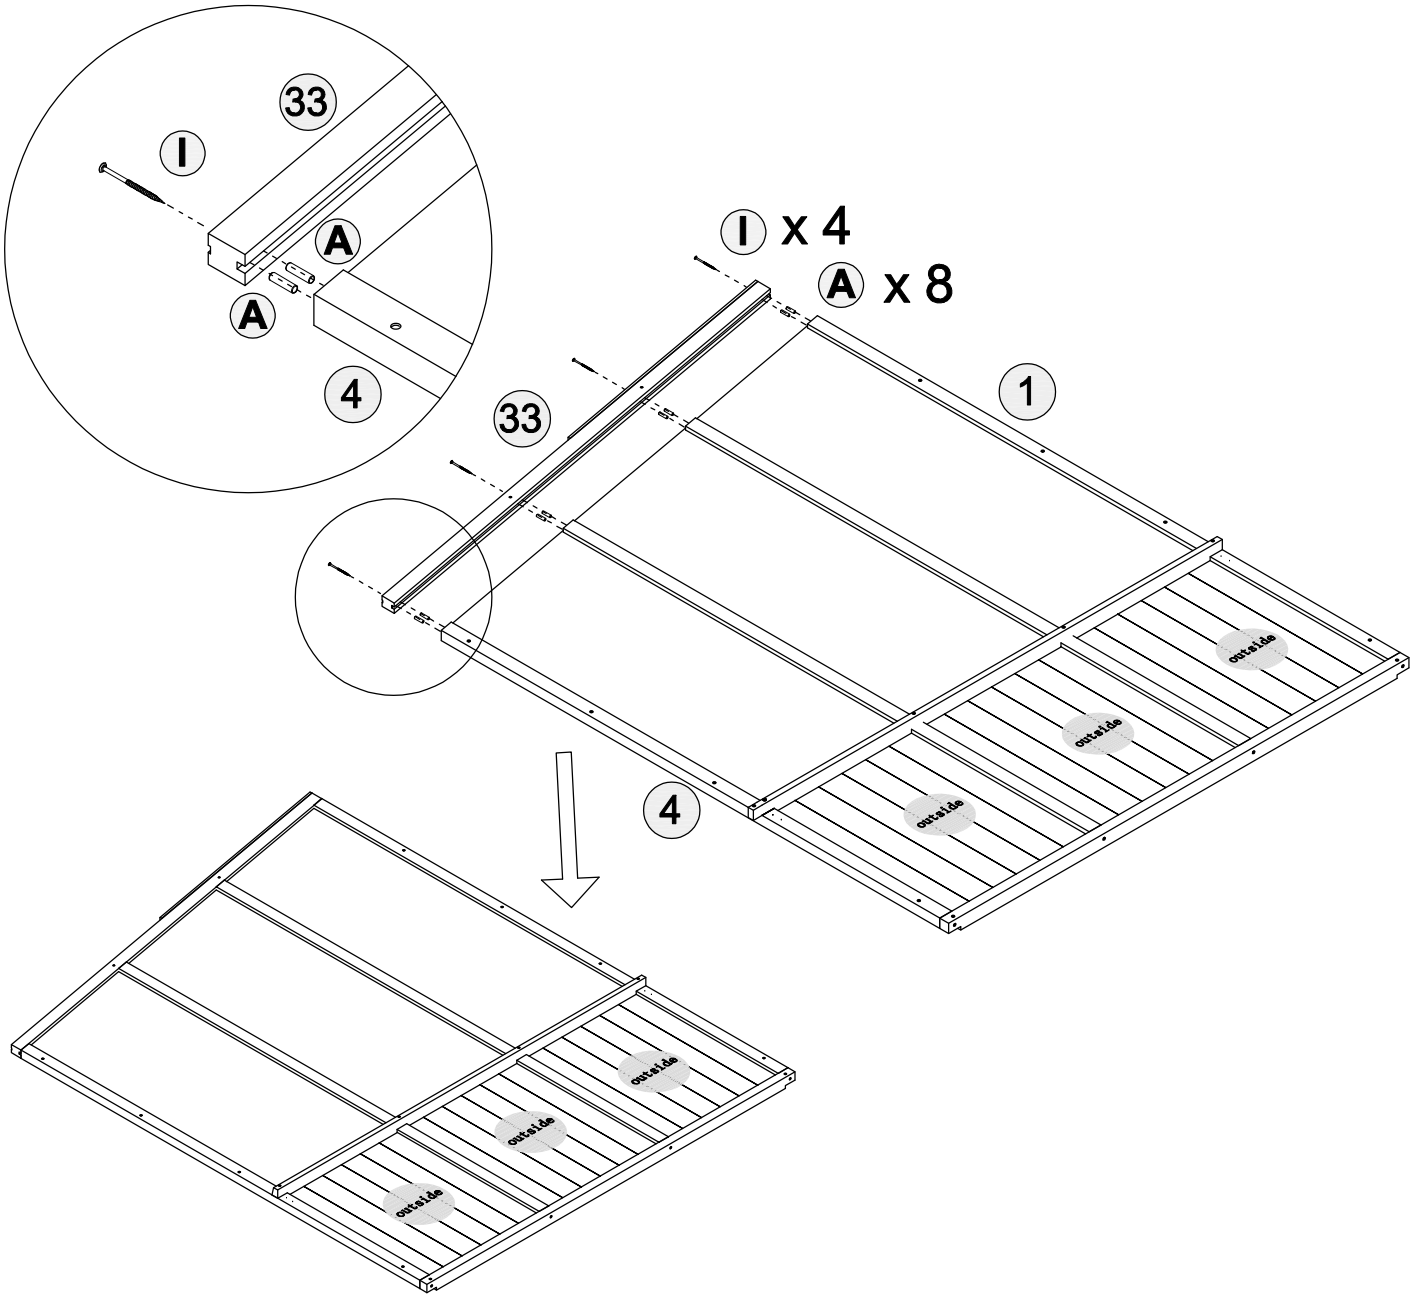


Effect after installation

It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.

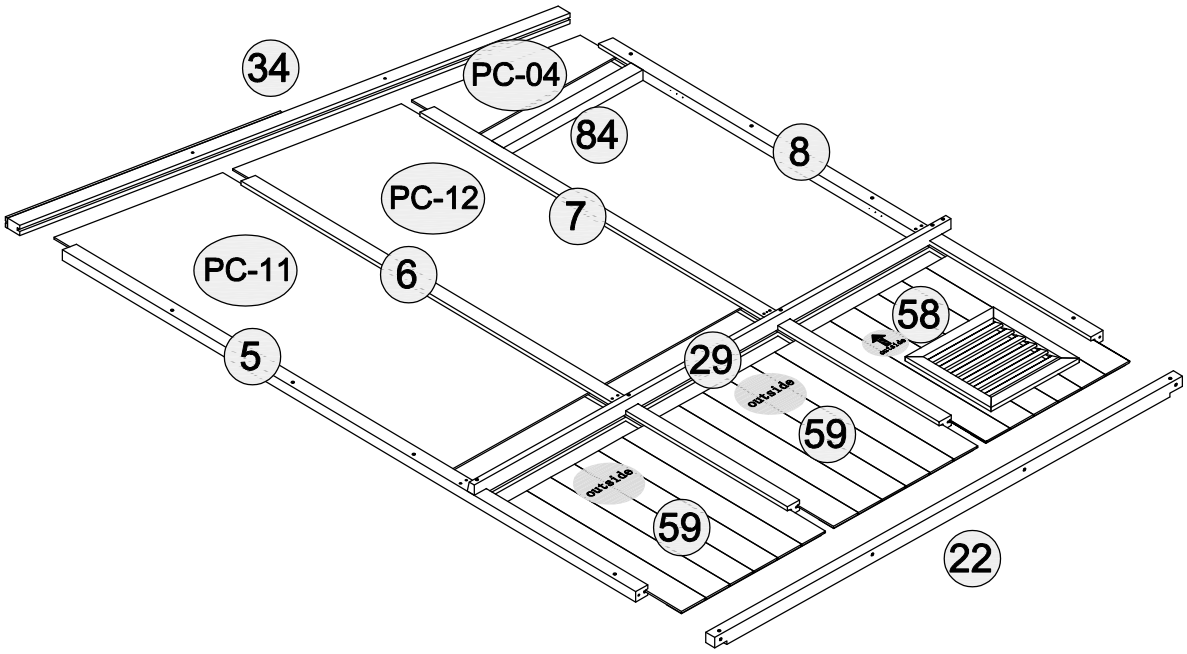


Right frame installation


Step 22

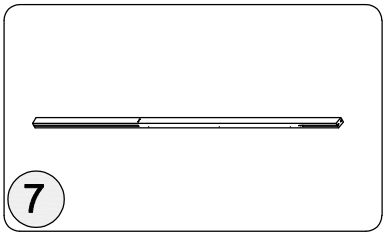


Right center pillar
Qty: 1

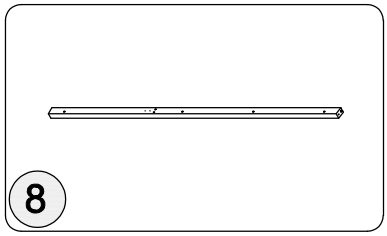


Right rear pillar
Qty: 1

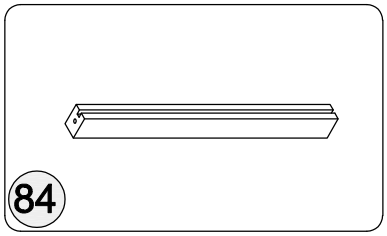


Noodles on the window
Qty: 1

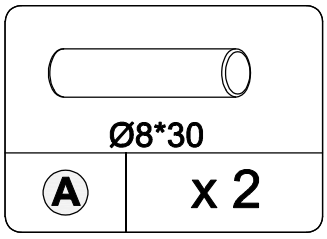

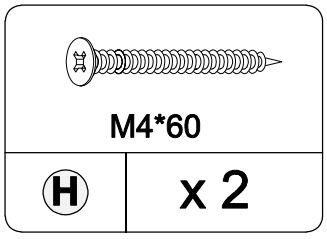


1. Connect with hardware A first, then install with hardware H
2. Note that slot 84 is facing upwards

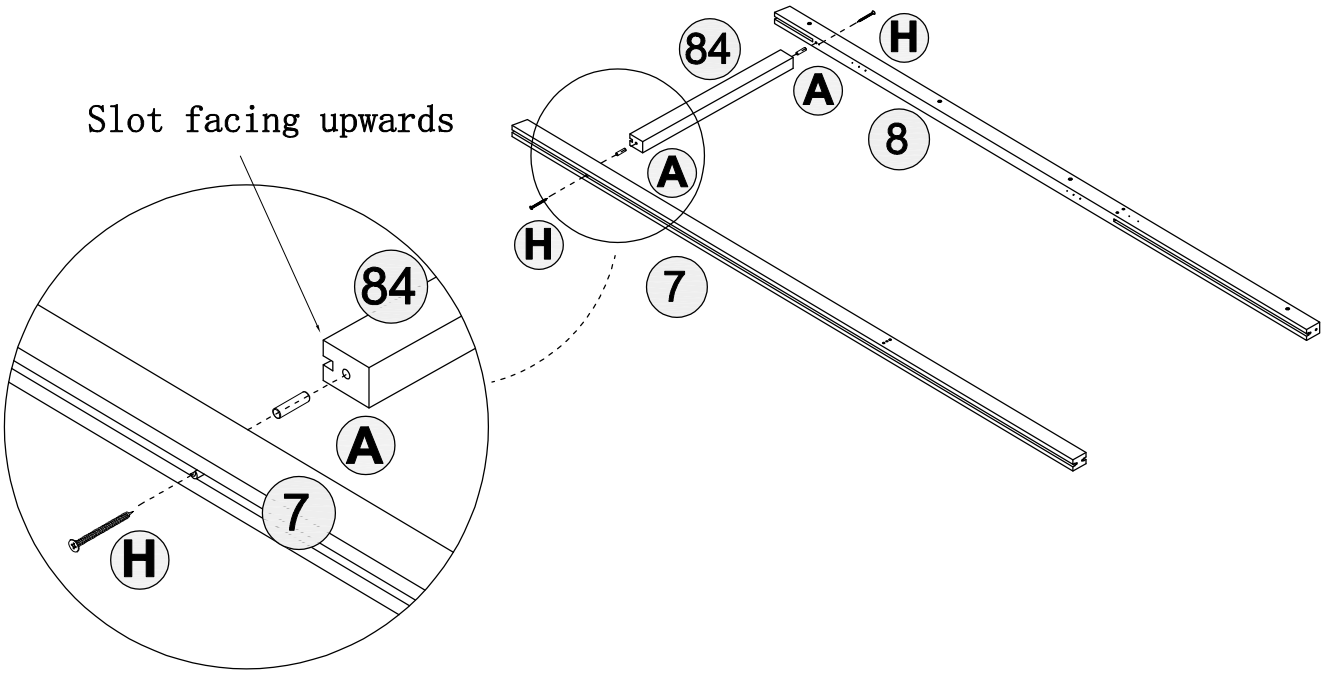


Right frame installation


Step 23

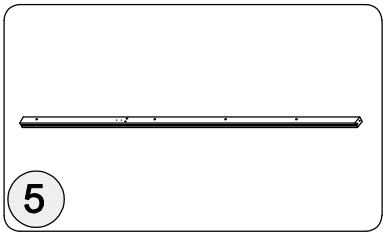


Right front pillar
Qty: 1

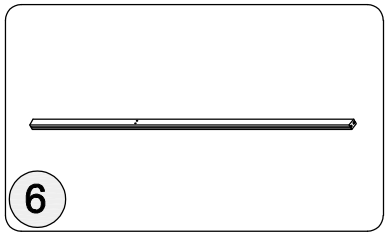


Right center pillar
Qty: 1

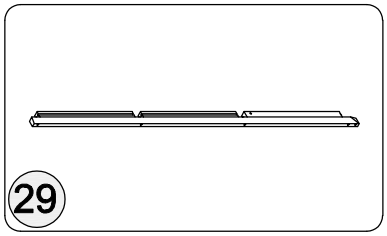

Right middle bar
Qty: 1

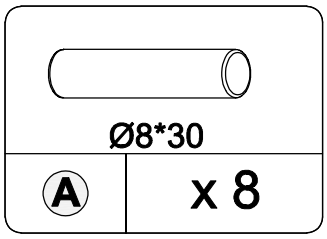


1.Connect with hardware A first

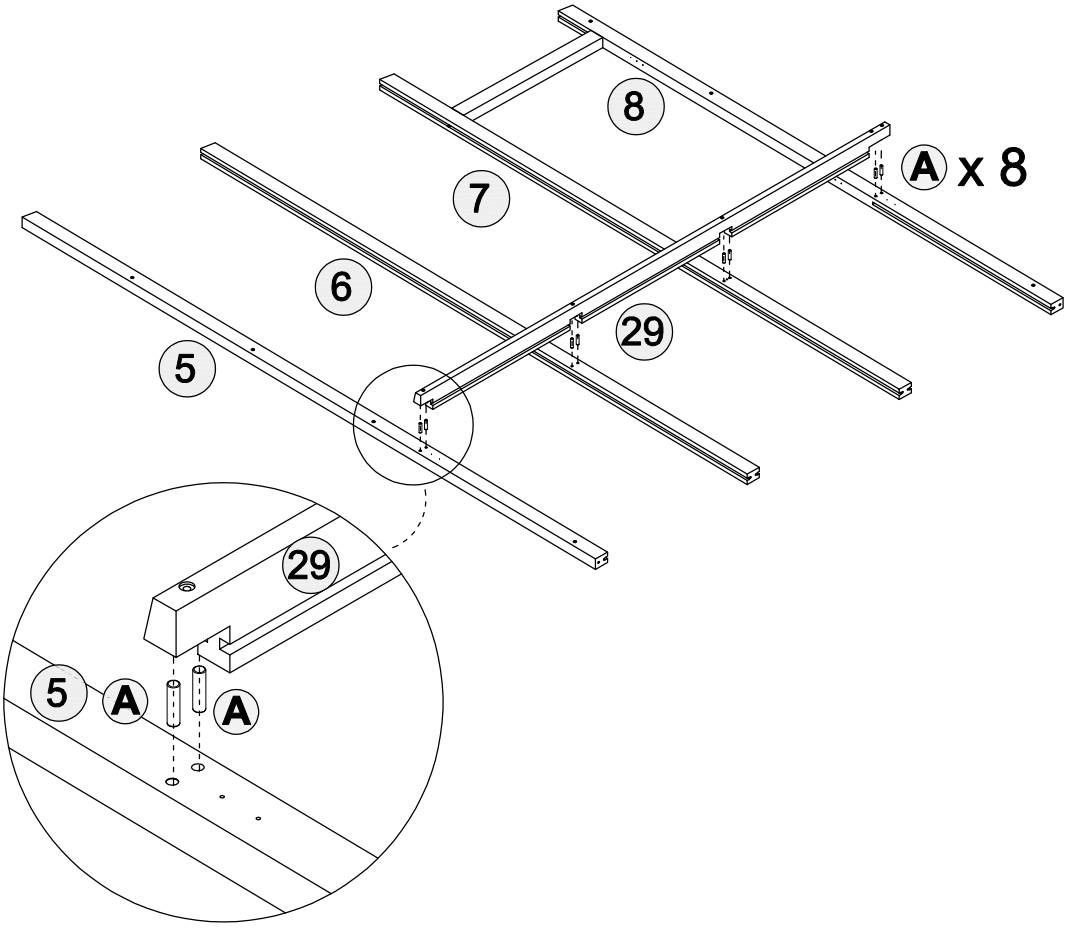


Right frame installation


Step 24

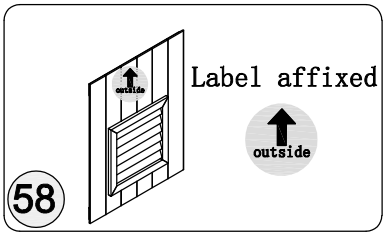


Side core board
Qty: 1

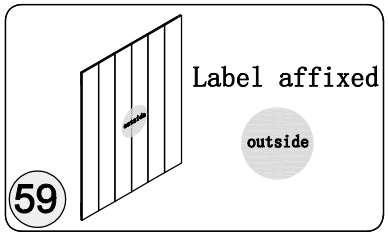

Side core board
Qty: 2

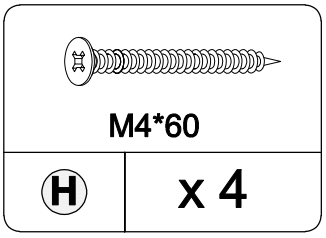


1. Connect with hardware H
2. Before installing component 58,59, insert the guide plate into the slot to align the slot
3. Place the 58,59-side plate into the side slot

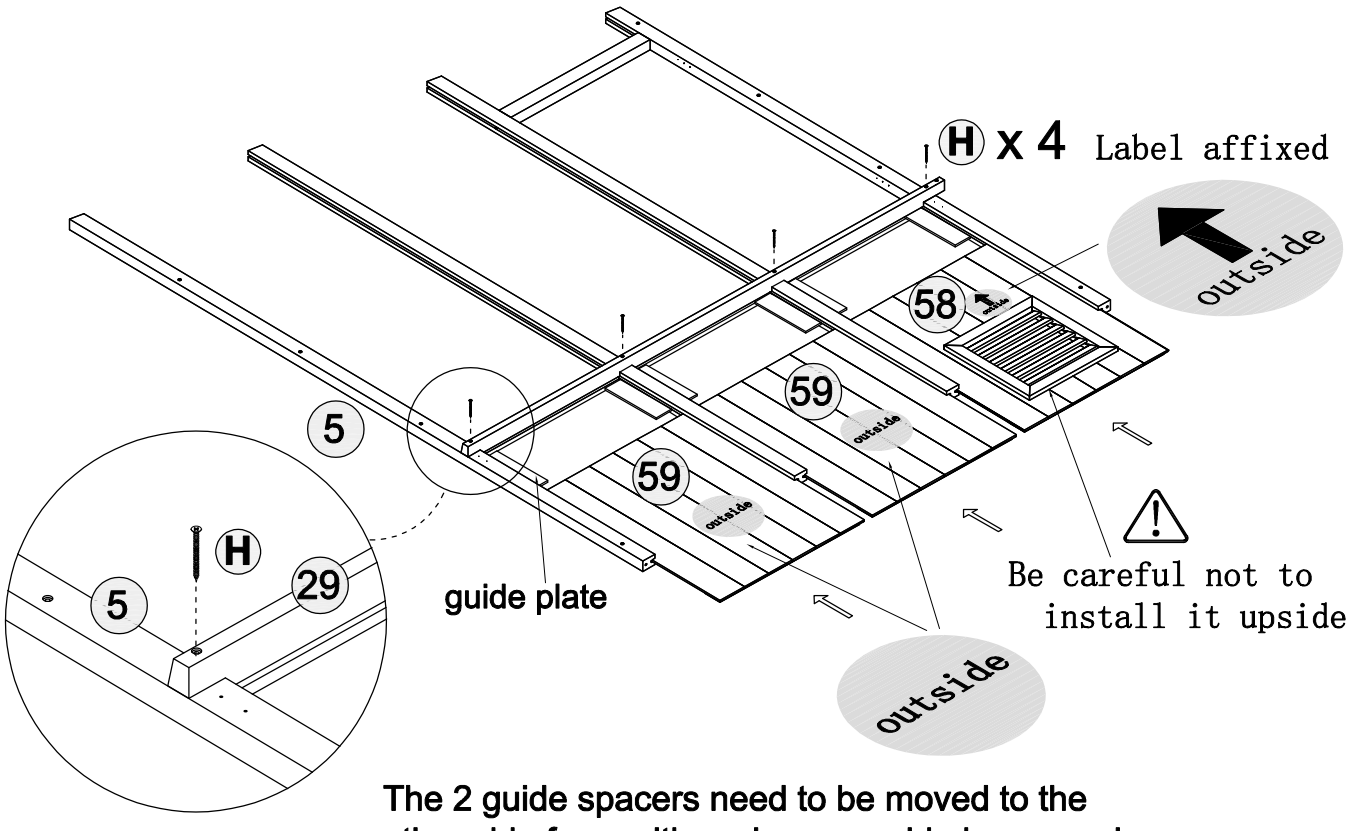


The 2 guide spacers need to be moved to the other side for position when one side is secured.


Right frame installation

Step 25

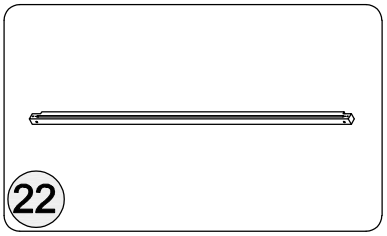


Side bottom Flat noodles
Qty: 1

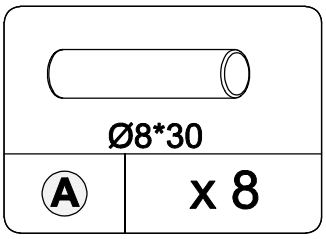

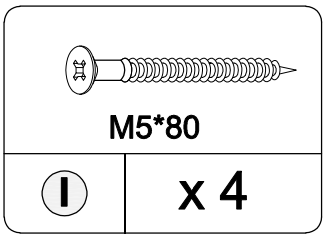


1. Connect with hardware A first, then install with hardware I

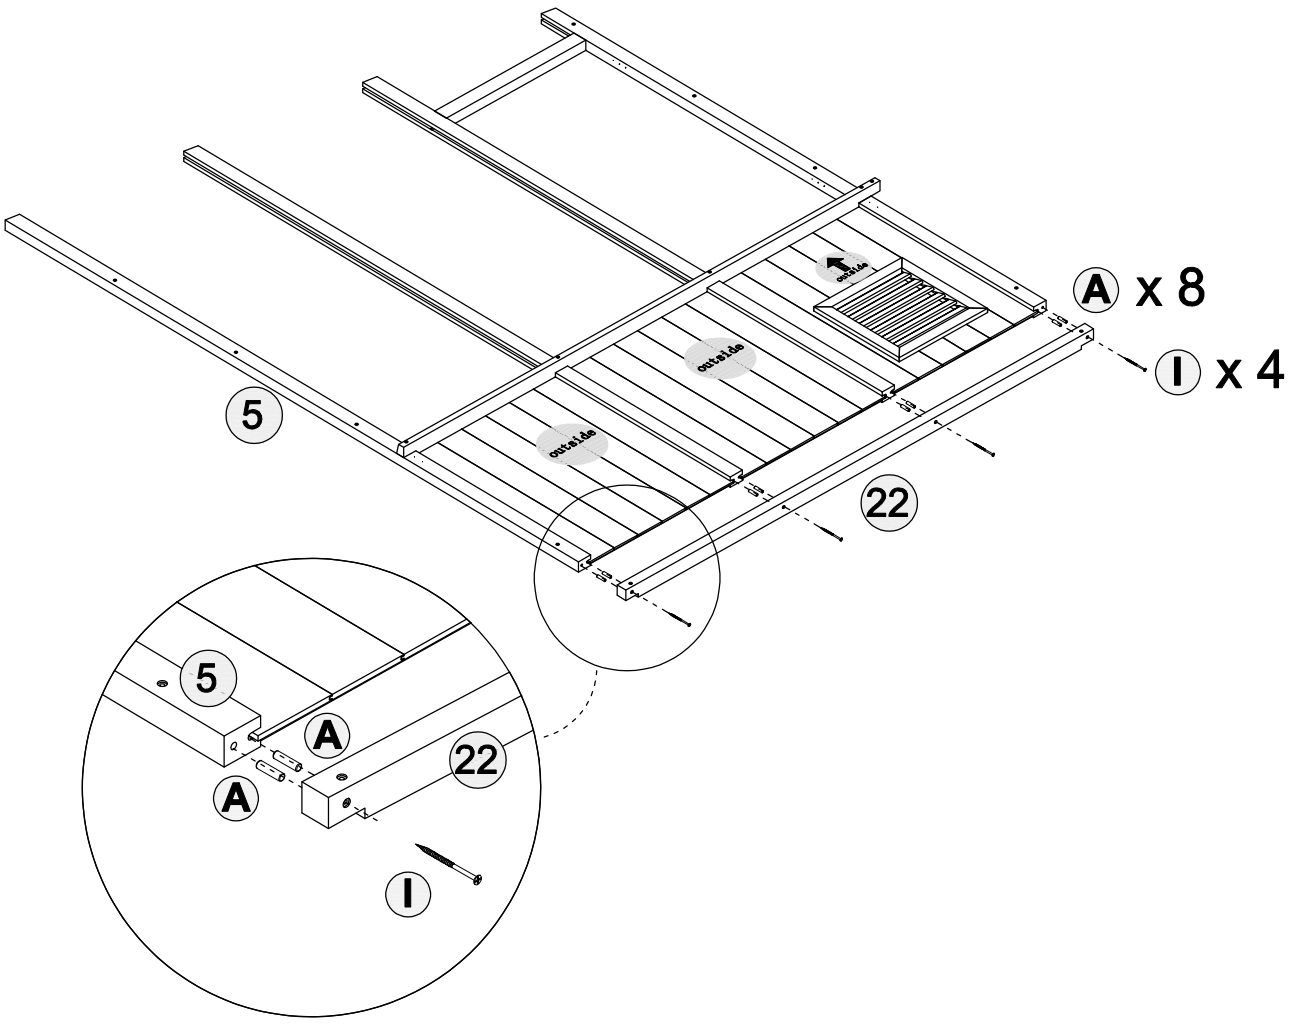

Right frame installation


Step 26

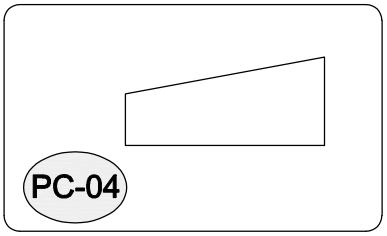

Rear sunlight panel
Qty: 1




Side sunlight panel
Qty: 1

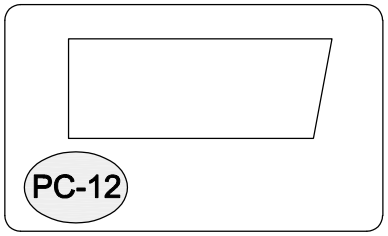

Side sunlight panel
Qty: 1


1. Before installing component , insert the guide plate into the slot to align the slot
2. Place components PC-04, PC-11, and PC-12 into the slot
3. Before installing each PC component, the film should be peeled off first

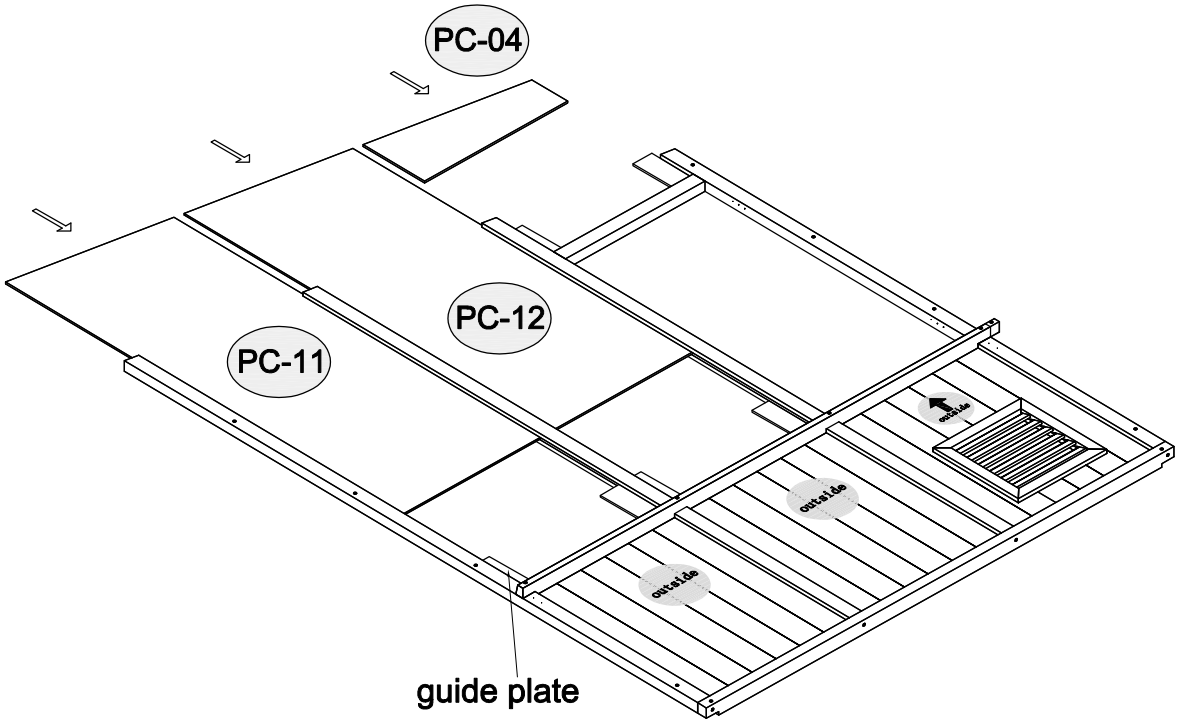

The 2 guide spacers need to be moved to the other side for position when one side is secured.


Right frame installation


Step 27

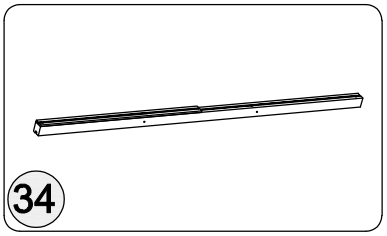


Right side beam

Qty: 1

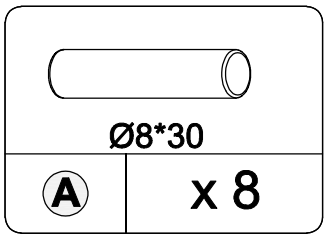

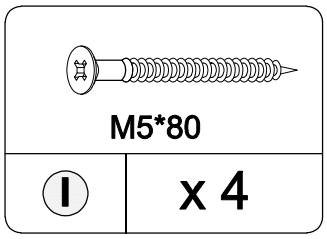

1. Connect with hardware A first, then install with hardware I

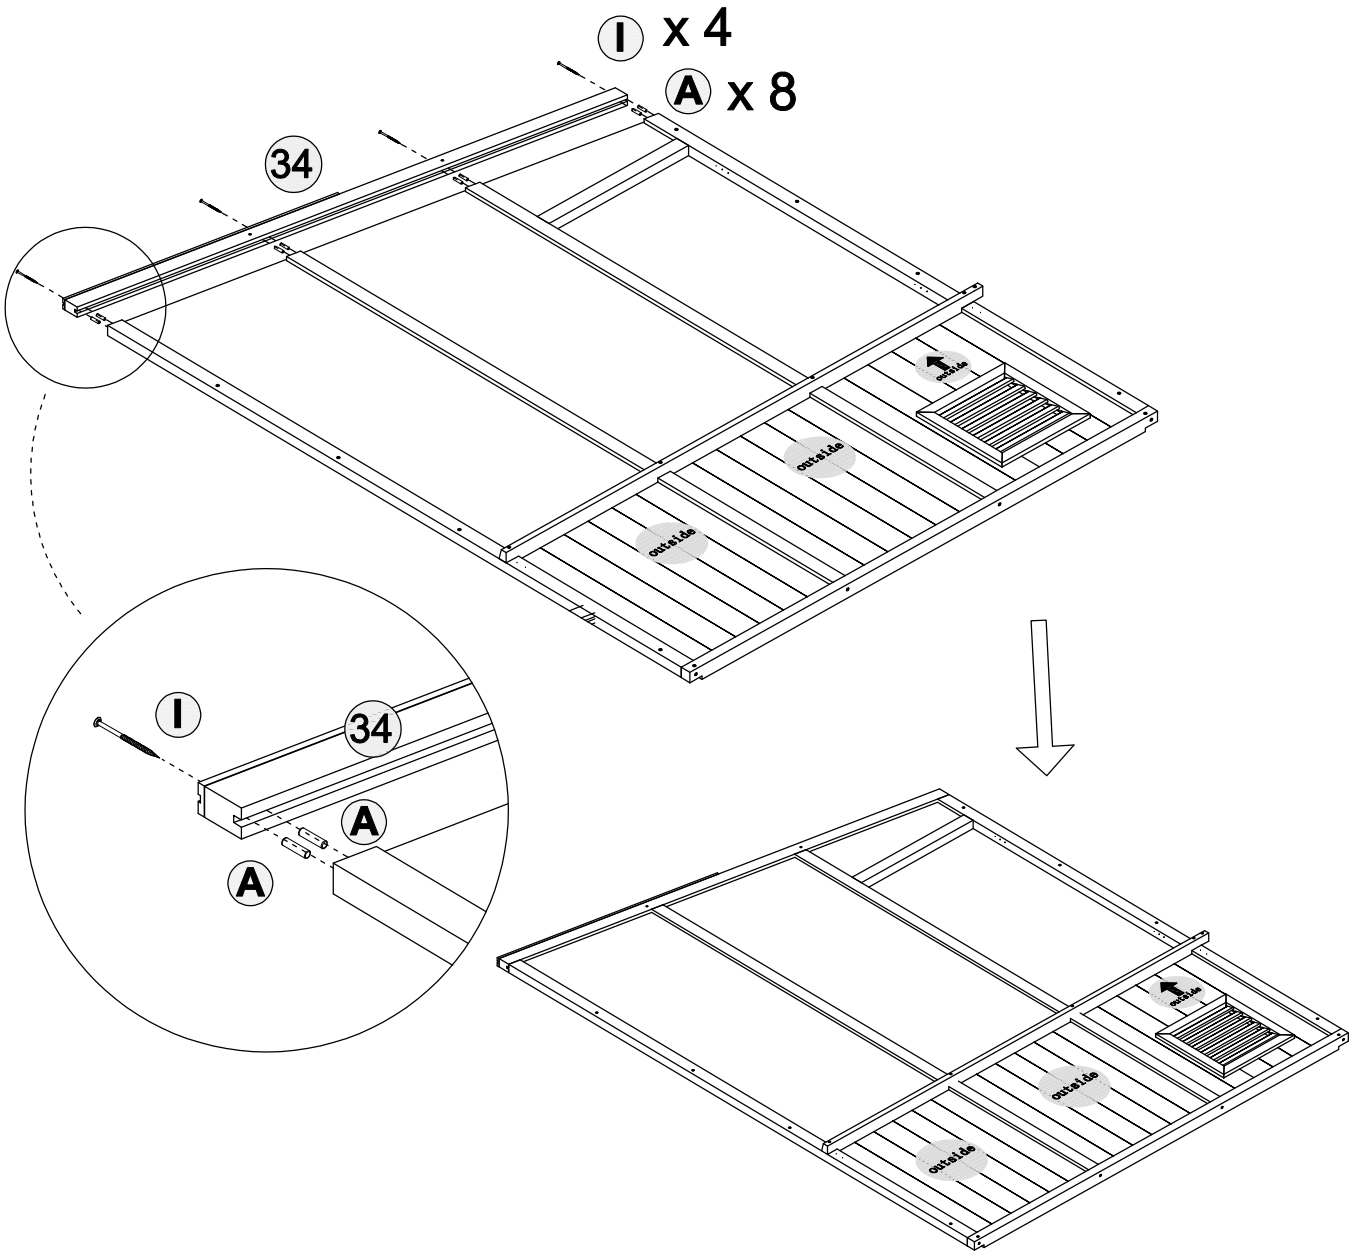



Effect after installation


Four sided frame assembly

Step 28

1. The diagram shows that the walls should be at a 90 degree angle to each other
2. Connect with hardware A first, then install with hardware F
3. Two people need to cooperate to do it
4. Double-check that all the door panels are facing the correct direction to avoid having to disassemble everything after the top section is installed due to an error.

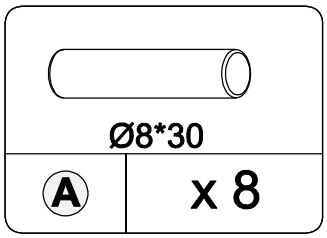

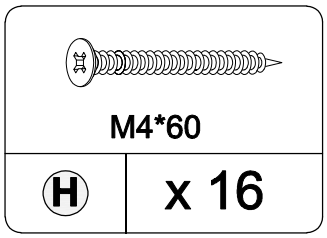


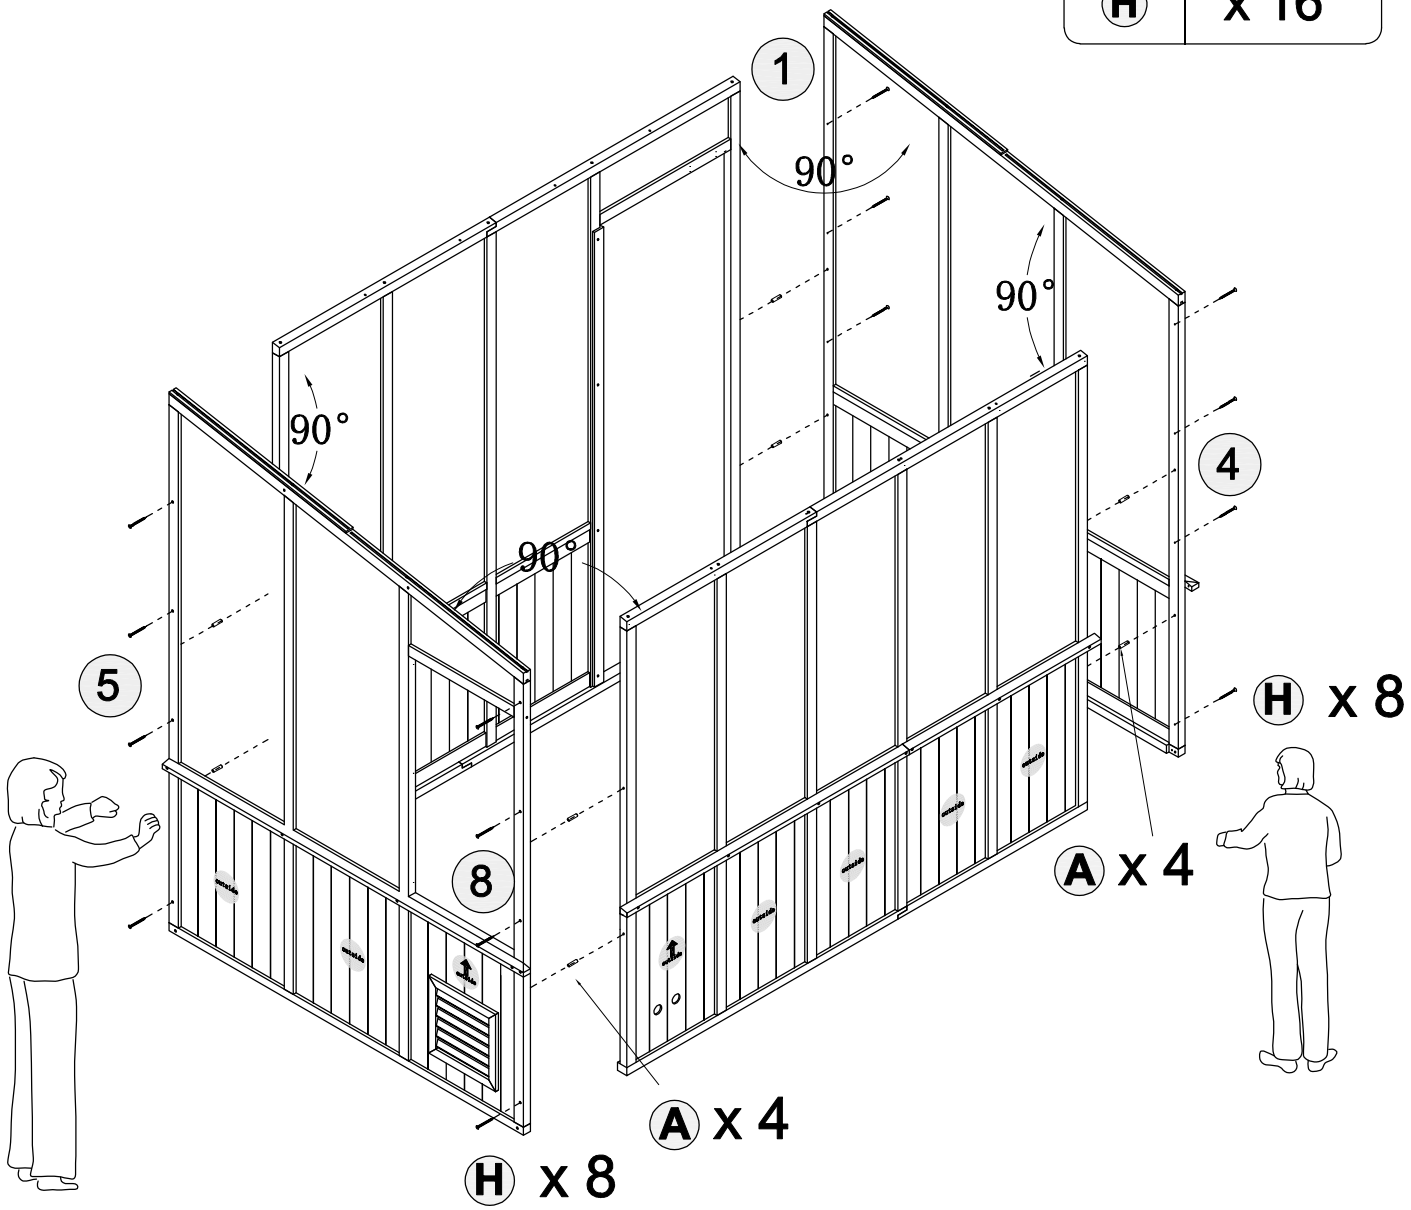



Four sided frame assembly


Step 29

1. The diagonal of the bottom inner space is the same, with a length of 2877mm
2. After adjustment, install hardware G and I

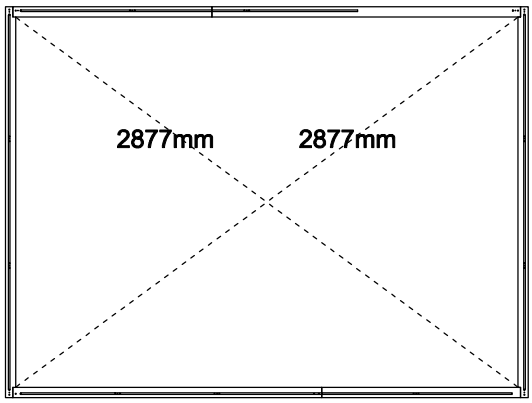

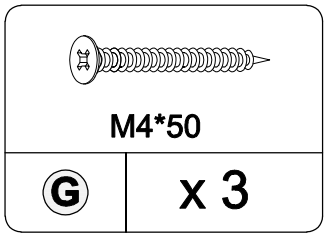


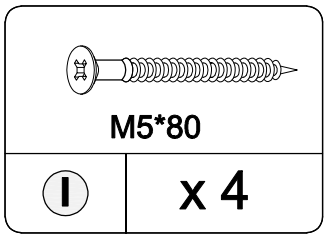

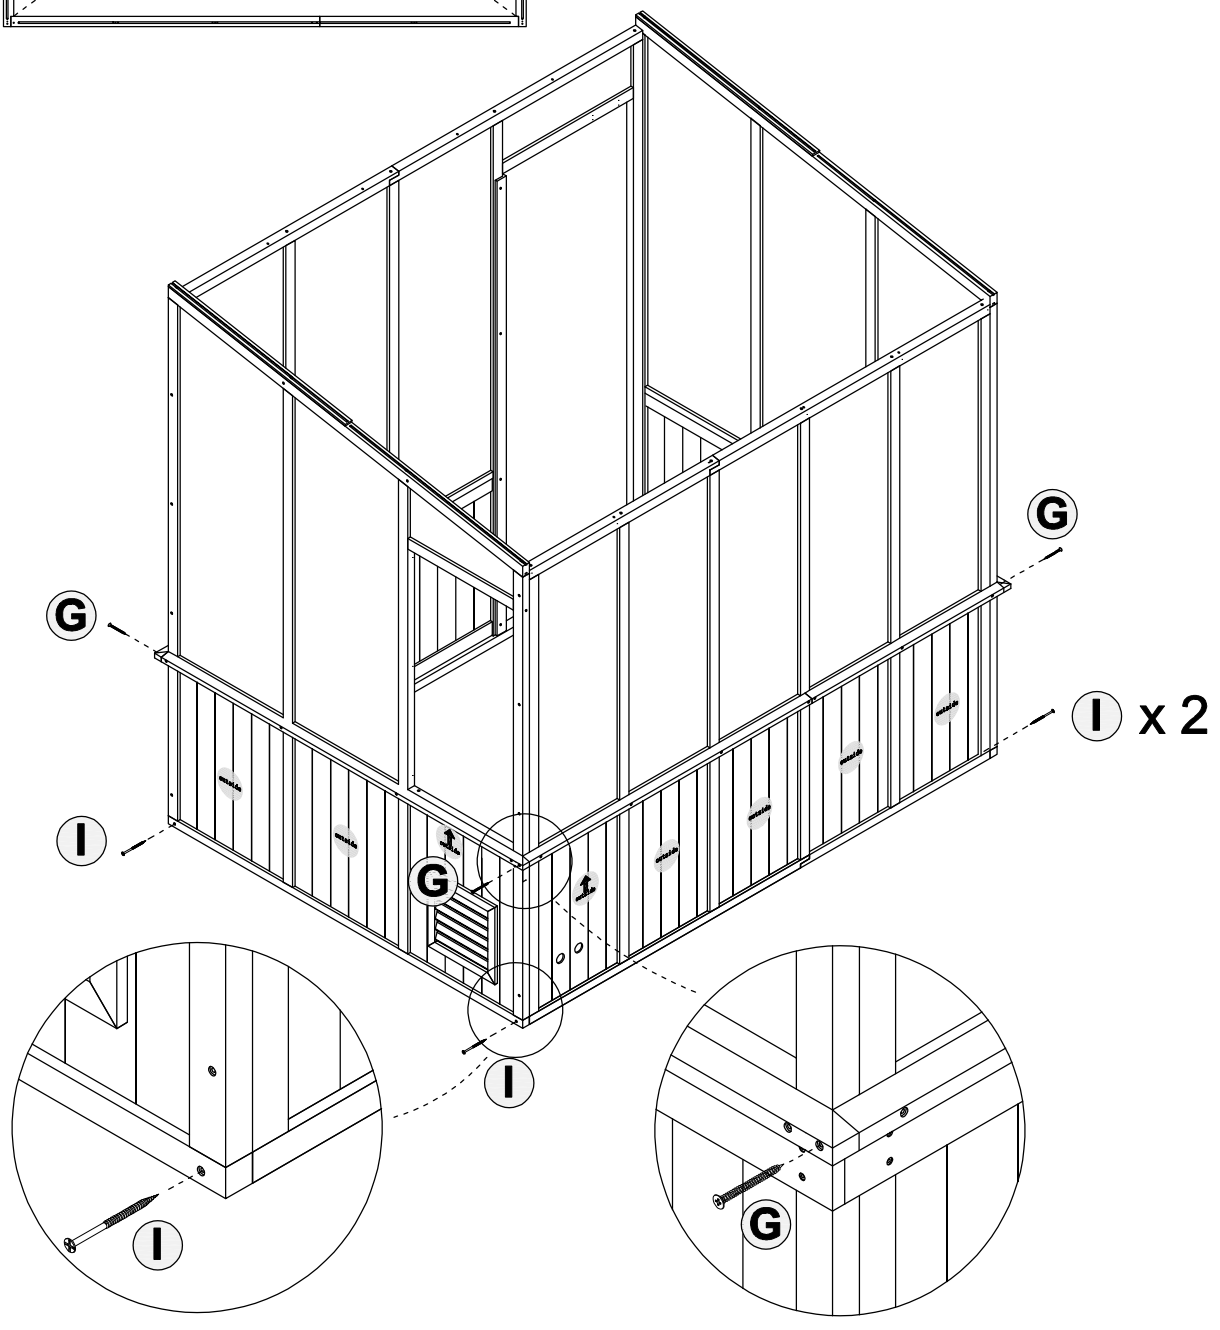


Four sided frame assembly

Step 30

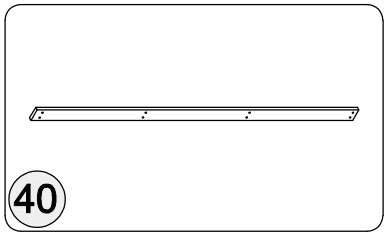


side baffle

Qty: 1

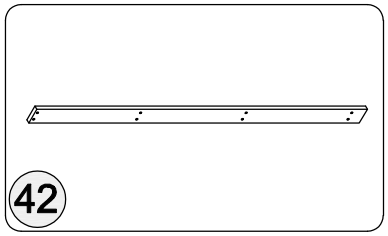

Rear long baffle


Qty: 1

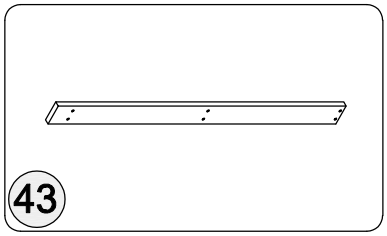


Rear short baffle


Qty: 1

1. Use hardware E to pass through component and install it towards the lead hole
2. The front end of component 40 is flush with component 5, and the right end of component 42 is flush with the outer edge of component 4

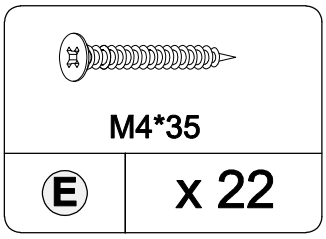


Screw

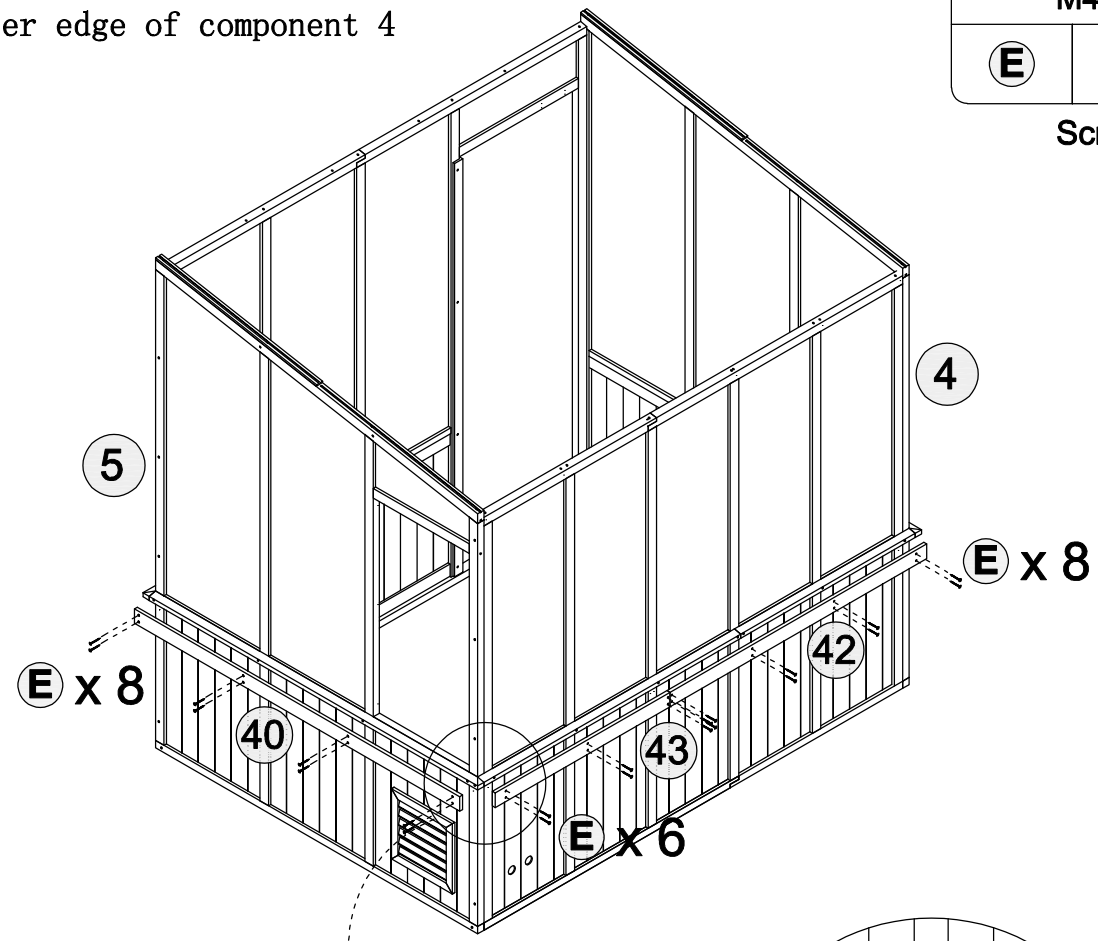

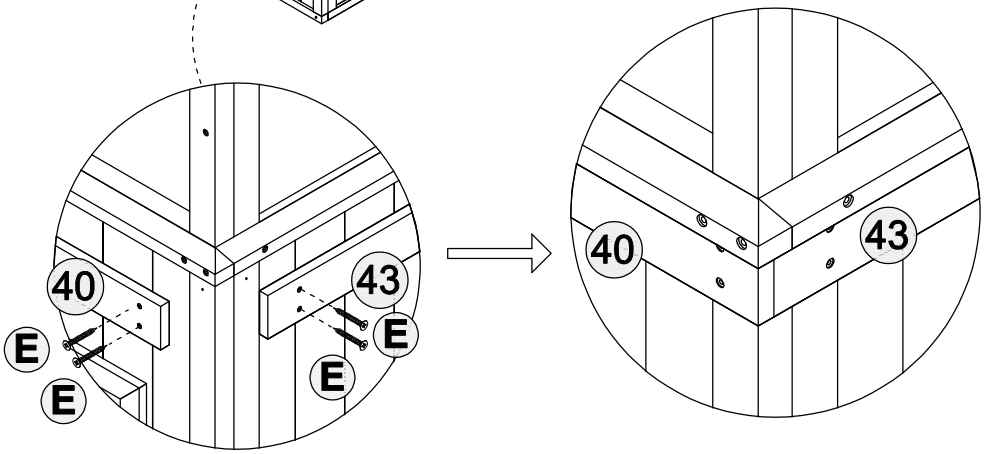


Four sided frame assembly

Step 31

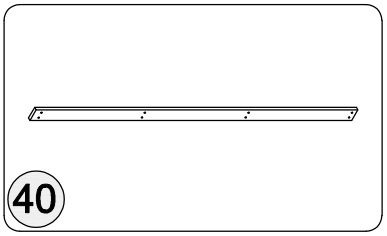


side baffle

Qty: 1

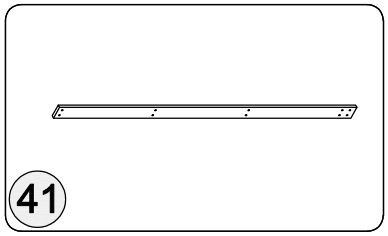


front fender

Qty: 1

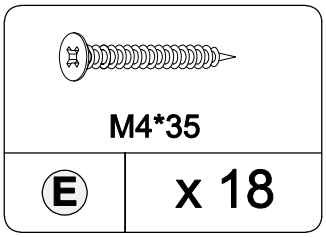


Screw

1. Use hardware E to pass through component and install it towards the lead hole

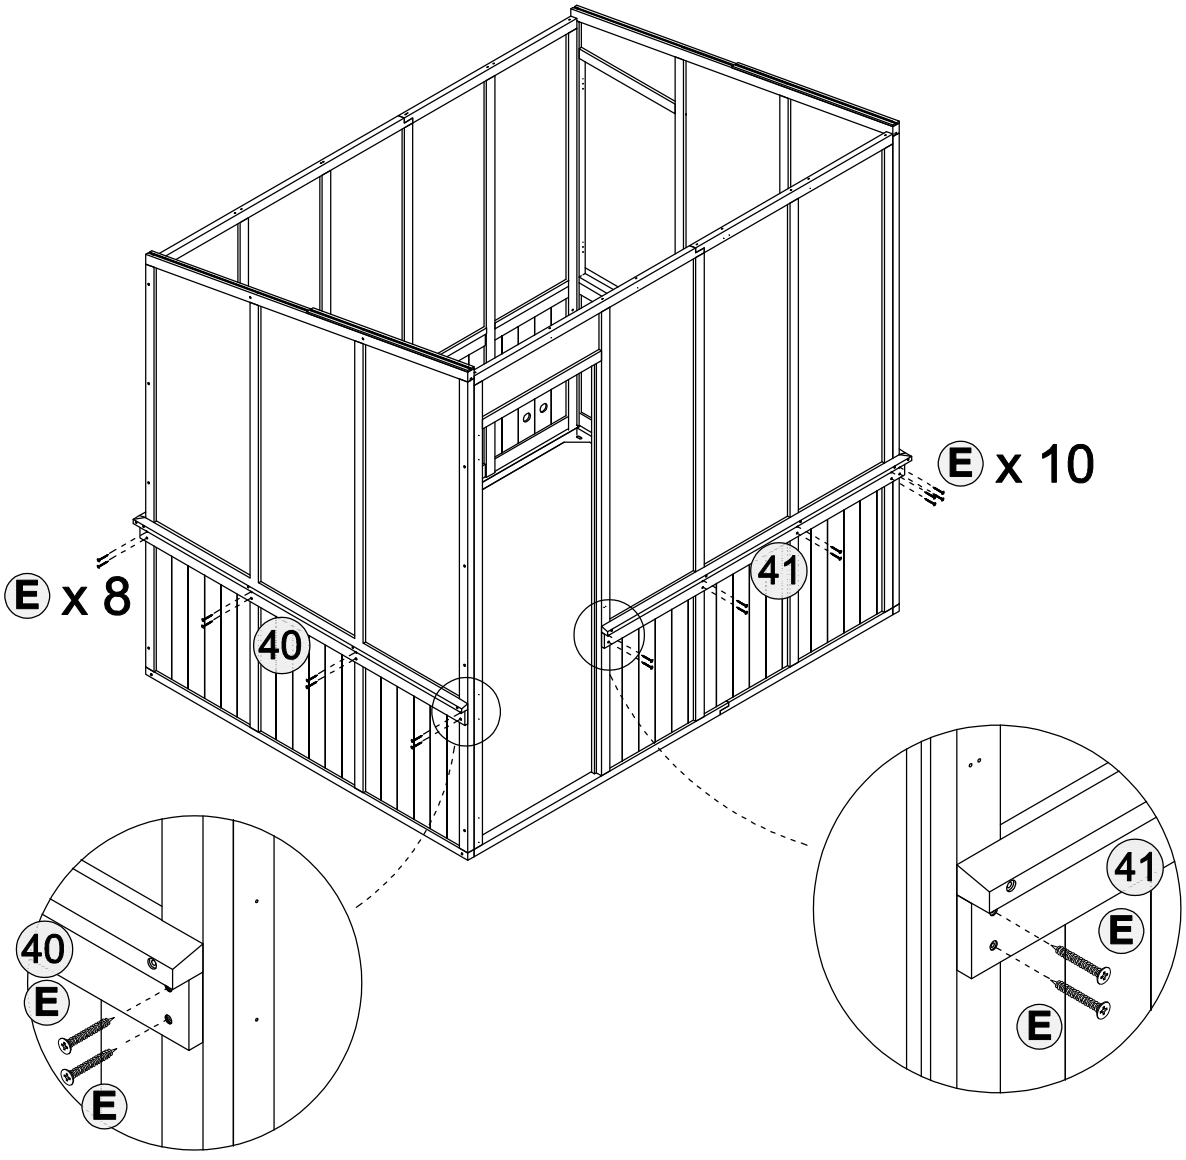


middle beam installation


Step 32

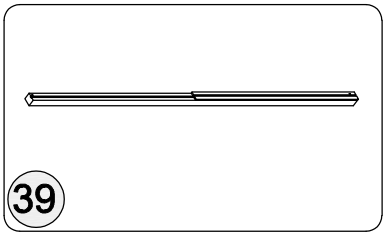

middle beam


Qty: 4

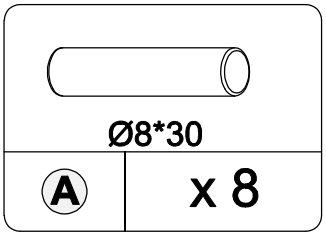

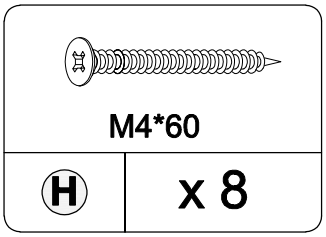


1. Connect with hardware A first, then install with hardware H

2. It needs to be installed one by one in sequence

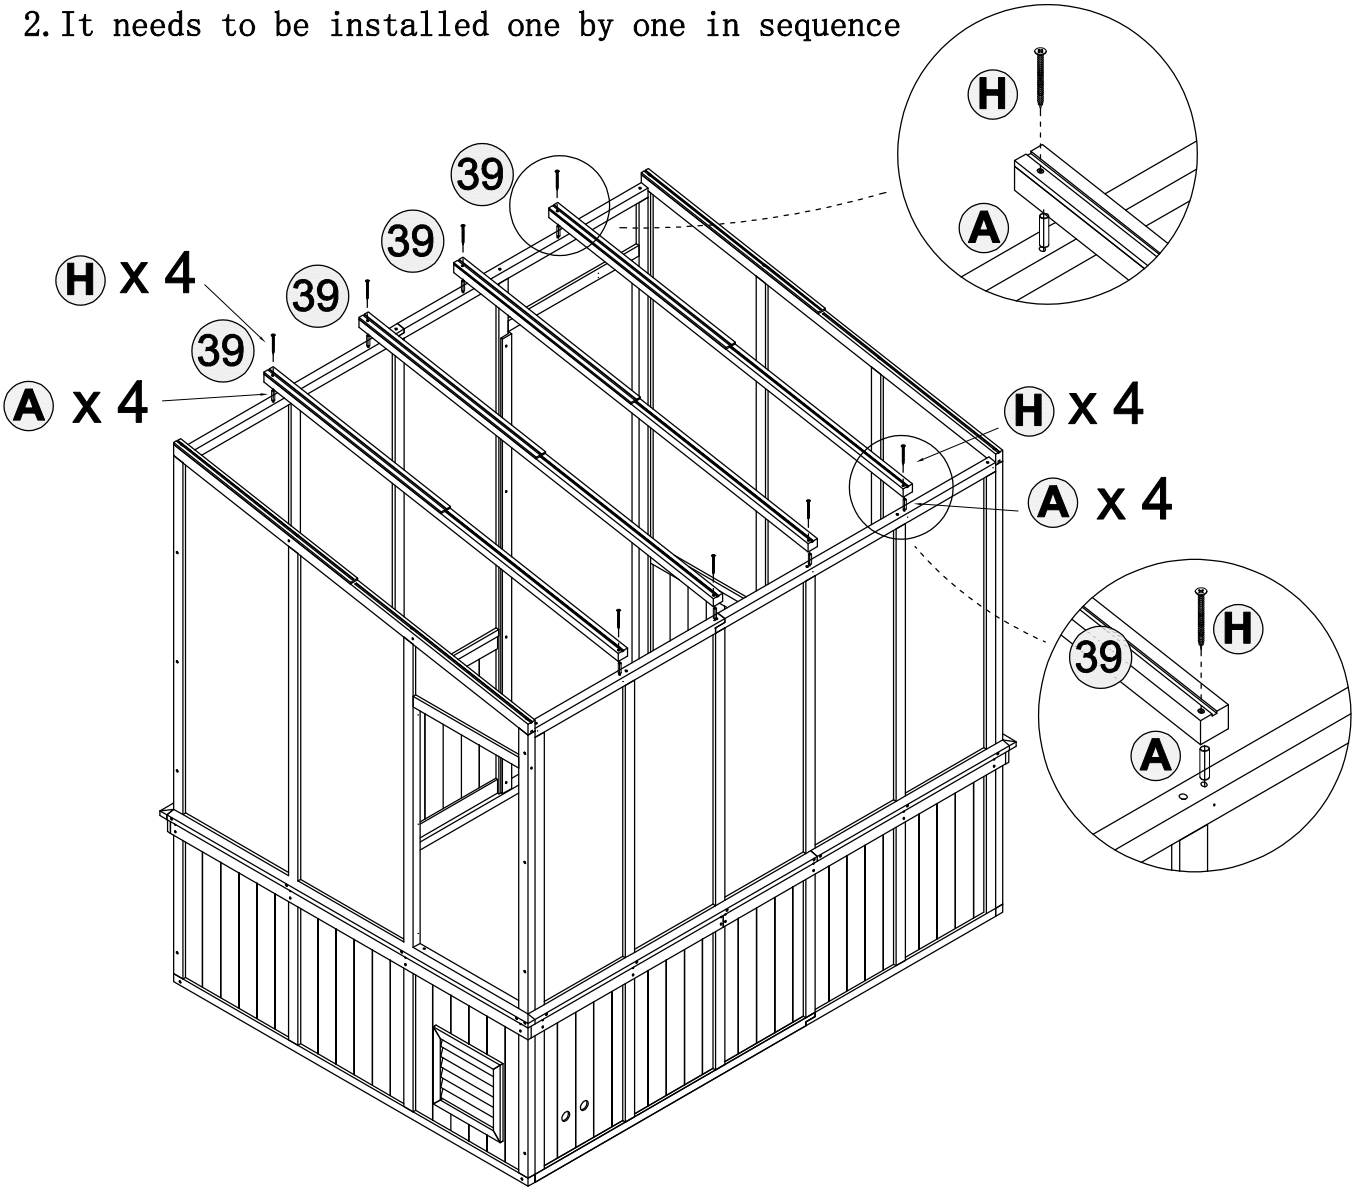


Rear panel installation


Step 33

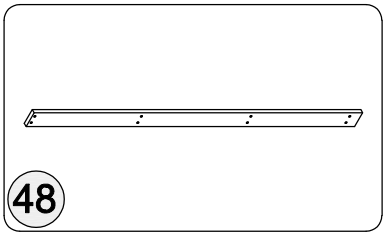


Top rear long baffle
Qty: 1

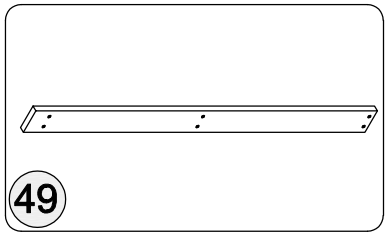

Top rear short baffle
Qty: 1

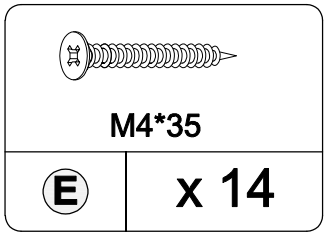


1. Use hardware E to pass through component 48 and install it towards the lead hole

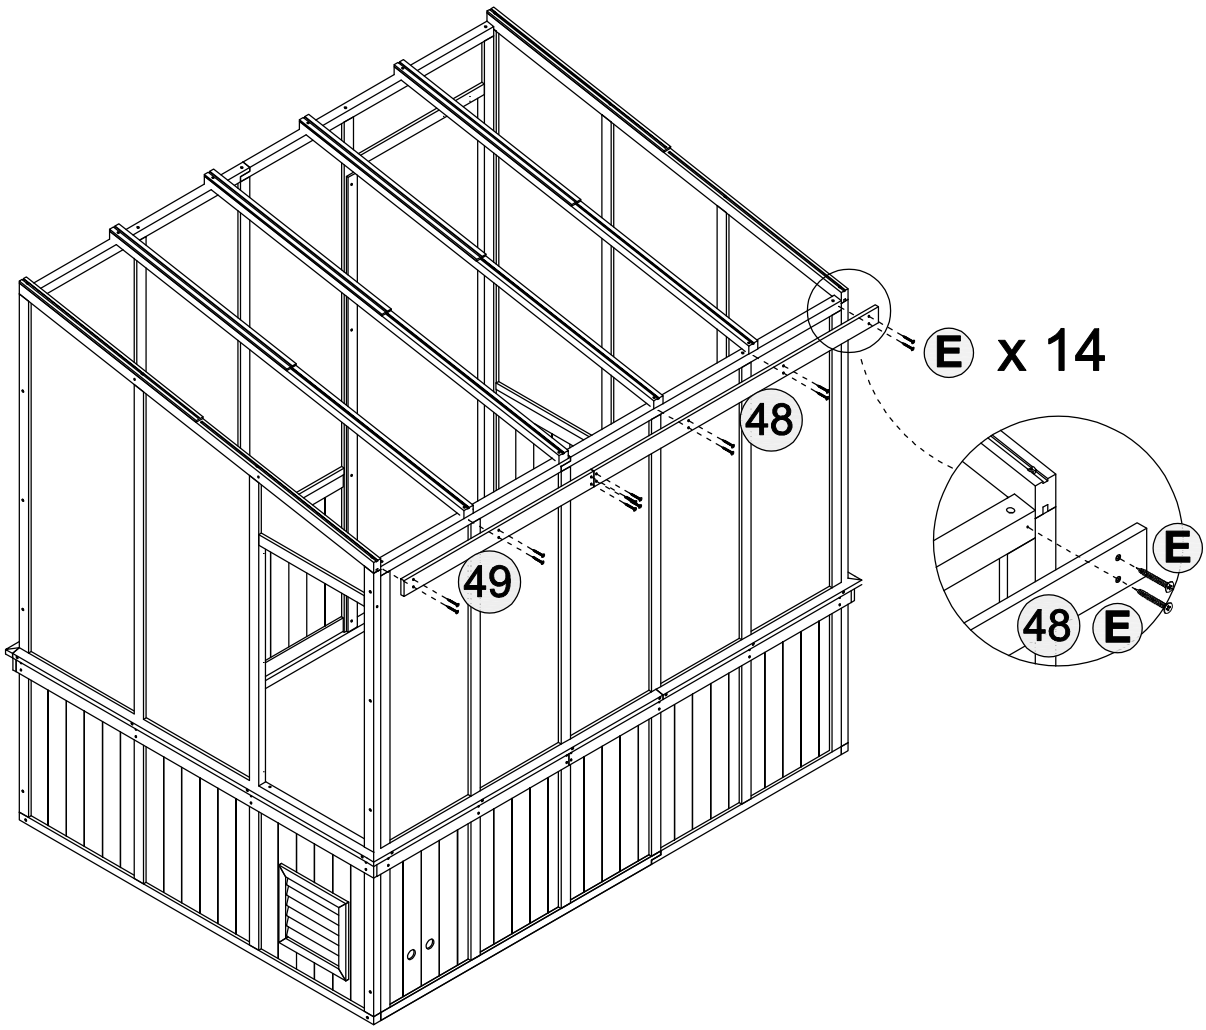


Installation of front panel

Step 34

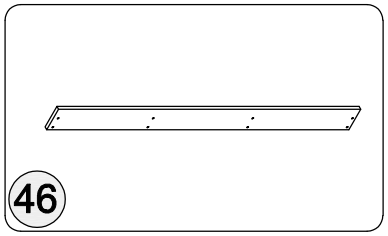


Top front long baffle

Qty: 1

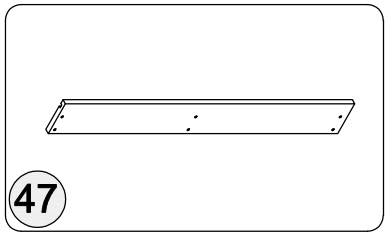


Top front short baffle

Qty: 1

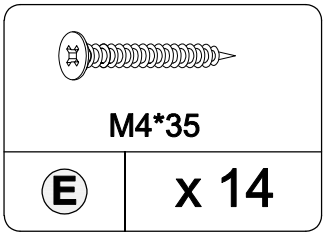

1. Components 46 and 47 have slots facing upwards from the back, and after installation, the bottom of the slots should be level with the top of the inclined beam
2. Use hardware E to pass through component 47 and install it towards the lead hole

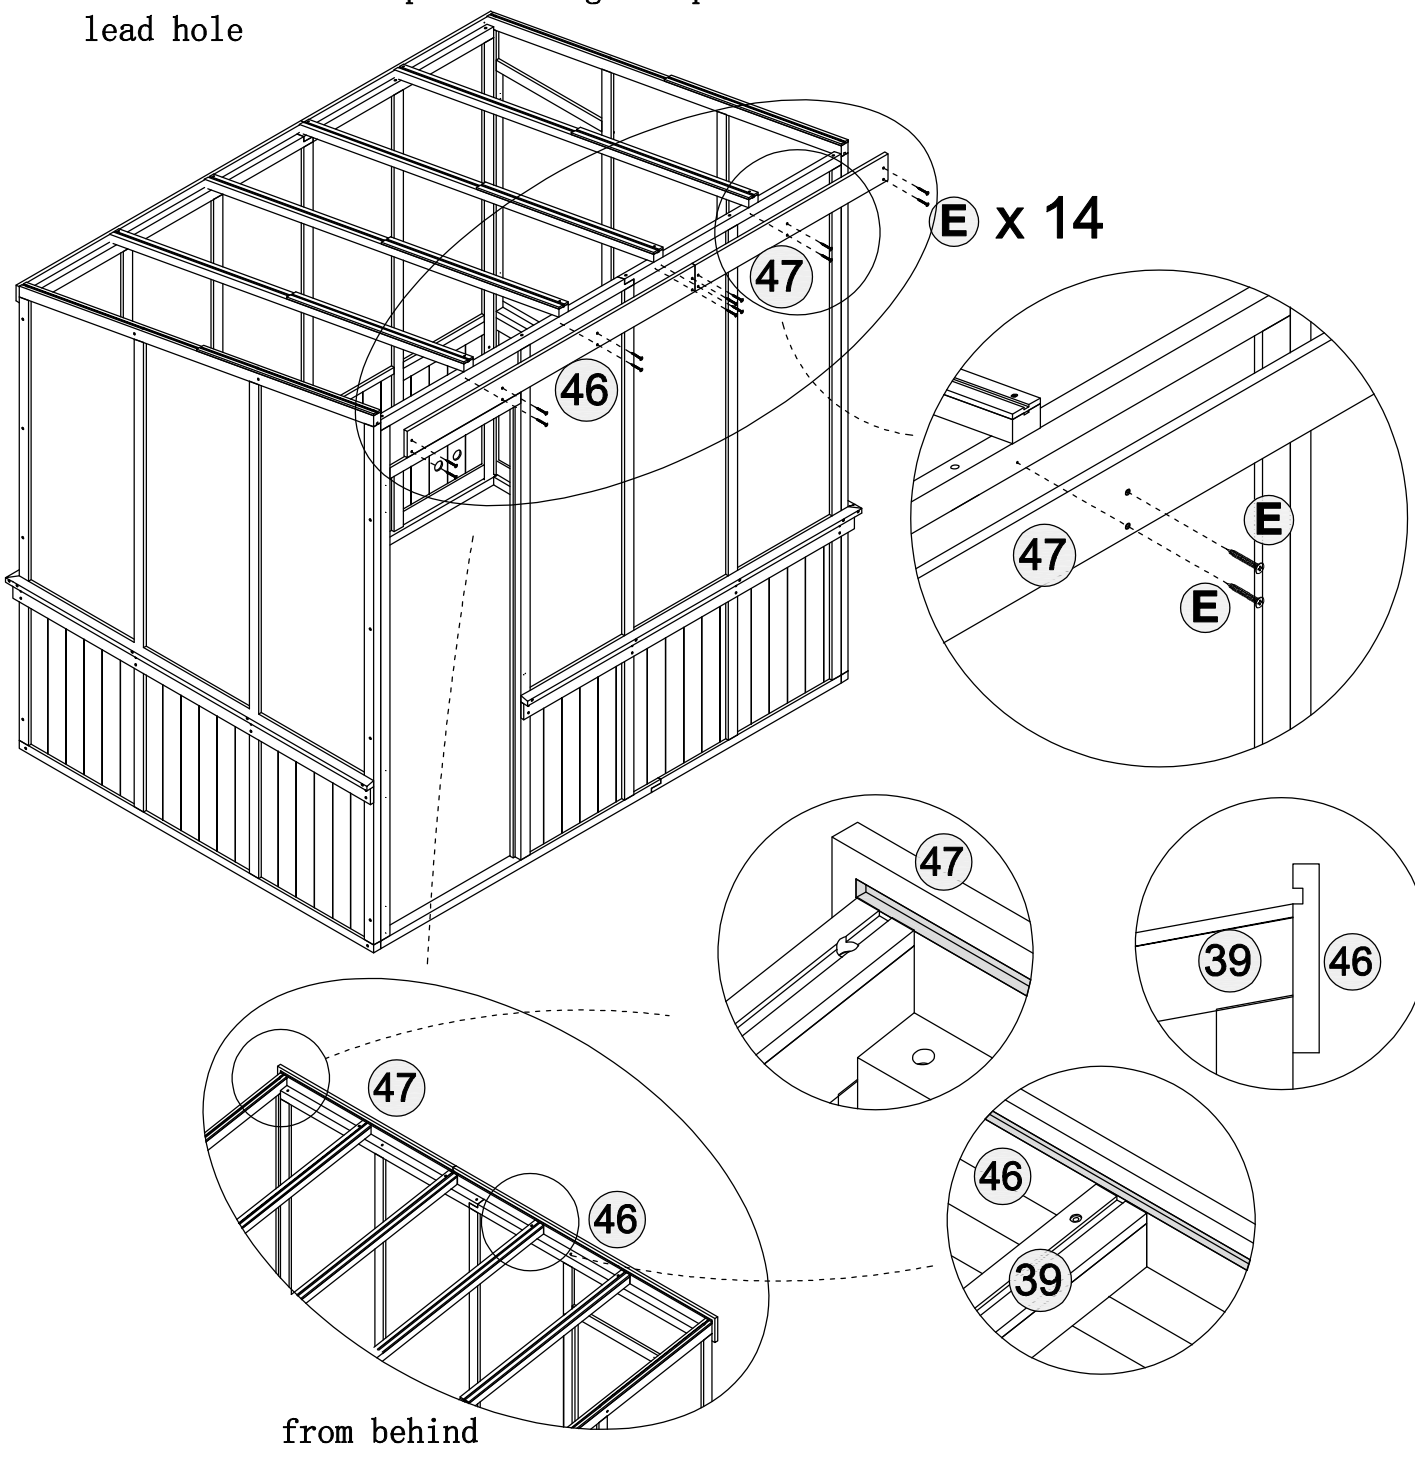

Installation of side panel


Step 35




Top left baffle
Qty: 1




Top right baffle
Qty: 1

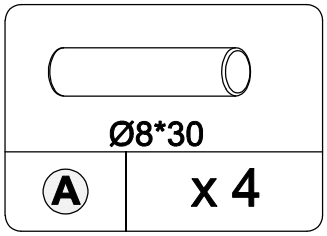

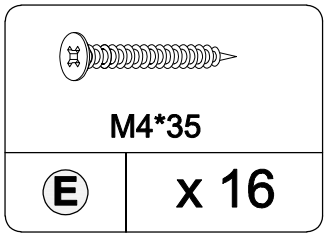


1. Connect with hardware A first, then install with hardware E

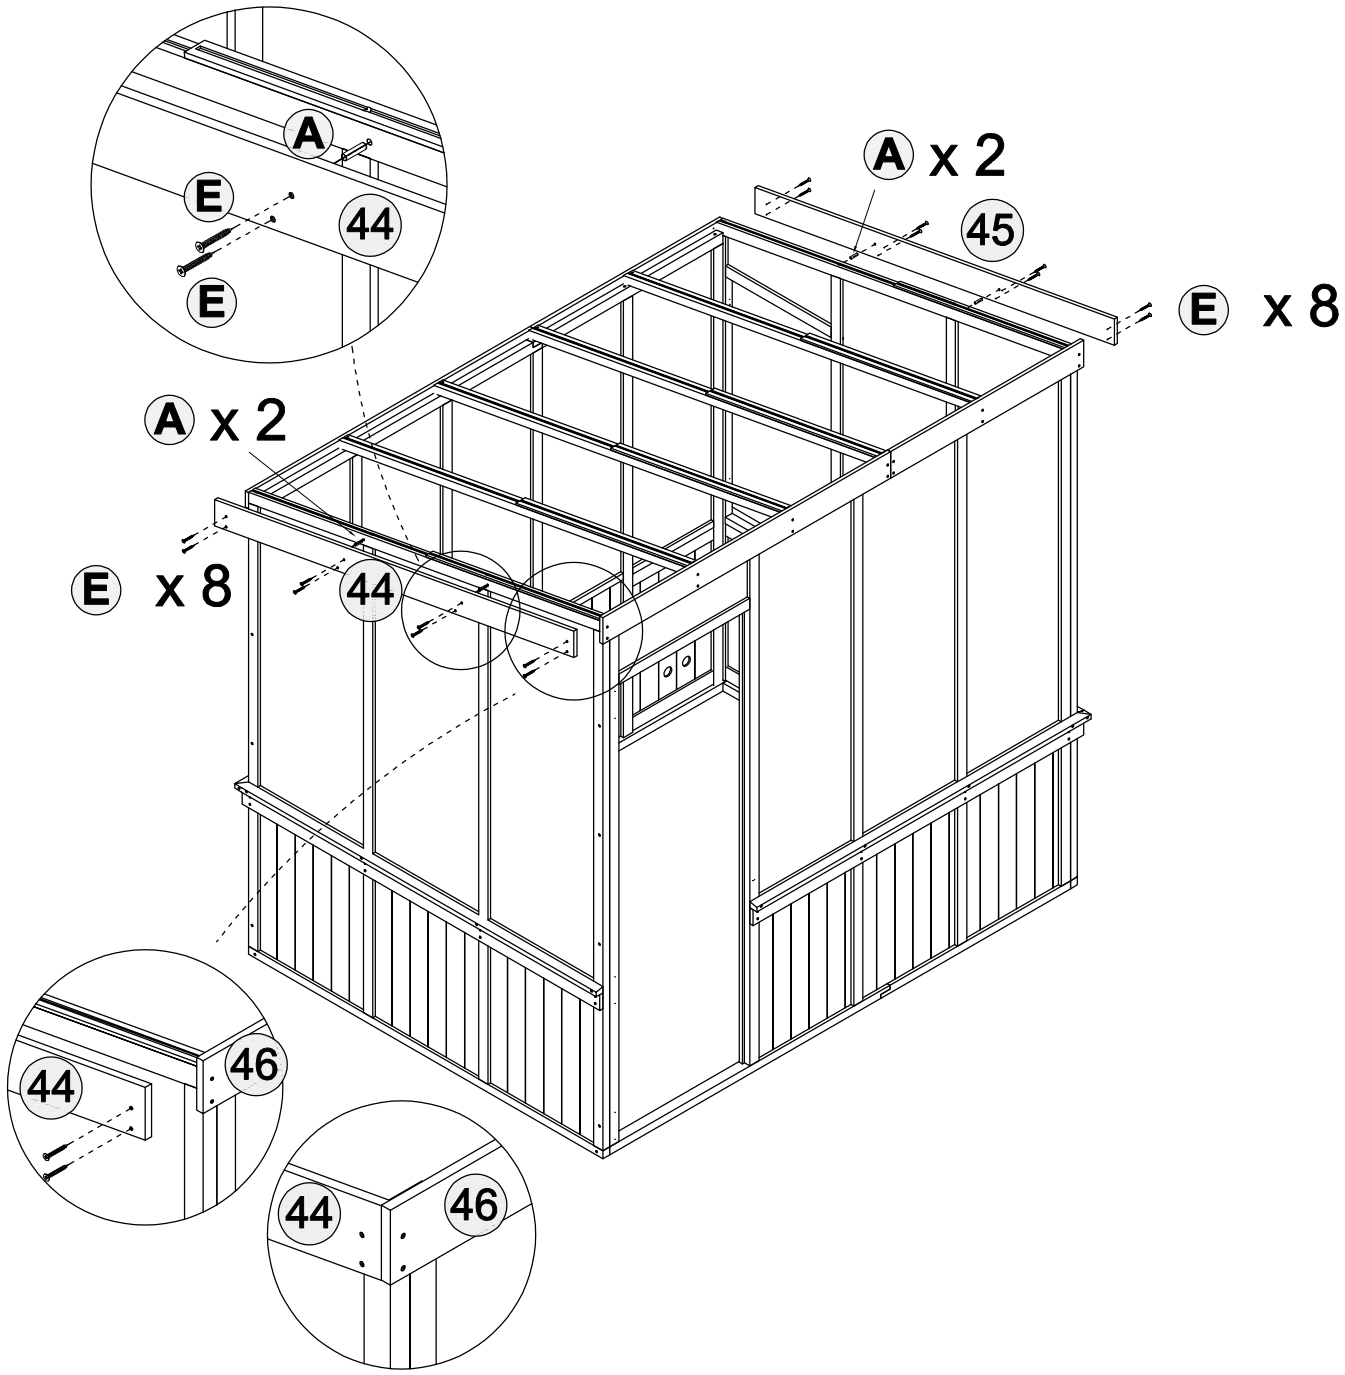


Sunshine board installation


Step 36

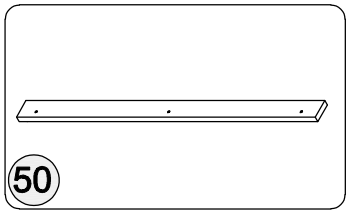


Top cover plate
Qty: 1

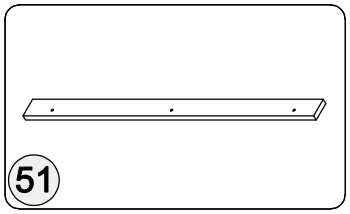


Top cover plate
Qty: 1

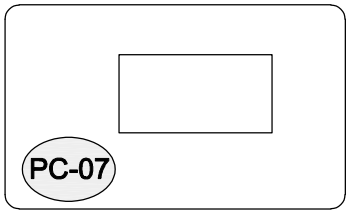


Top Sunshine Board
Qty: 1

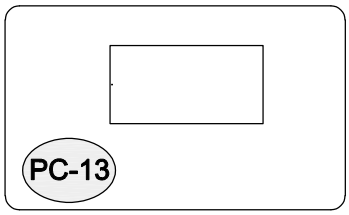

Top rear sunlight panel
Qty: 1

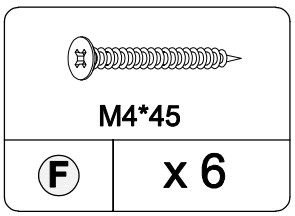


1. The component on the outer side of PC-13 that is flush with the edge
2. Place the front end of component PC-07 onto the front component and cover it with component PC-13
3. The components on the top and right sides of component 50 that are flush with each other
4. Before installing each PC component, the film should be peeled off first

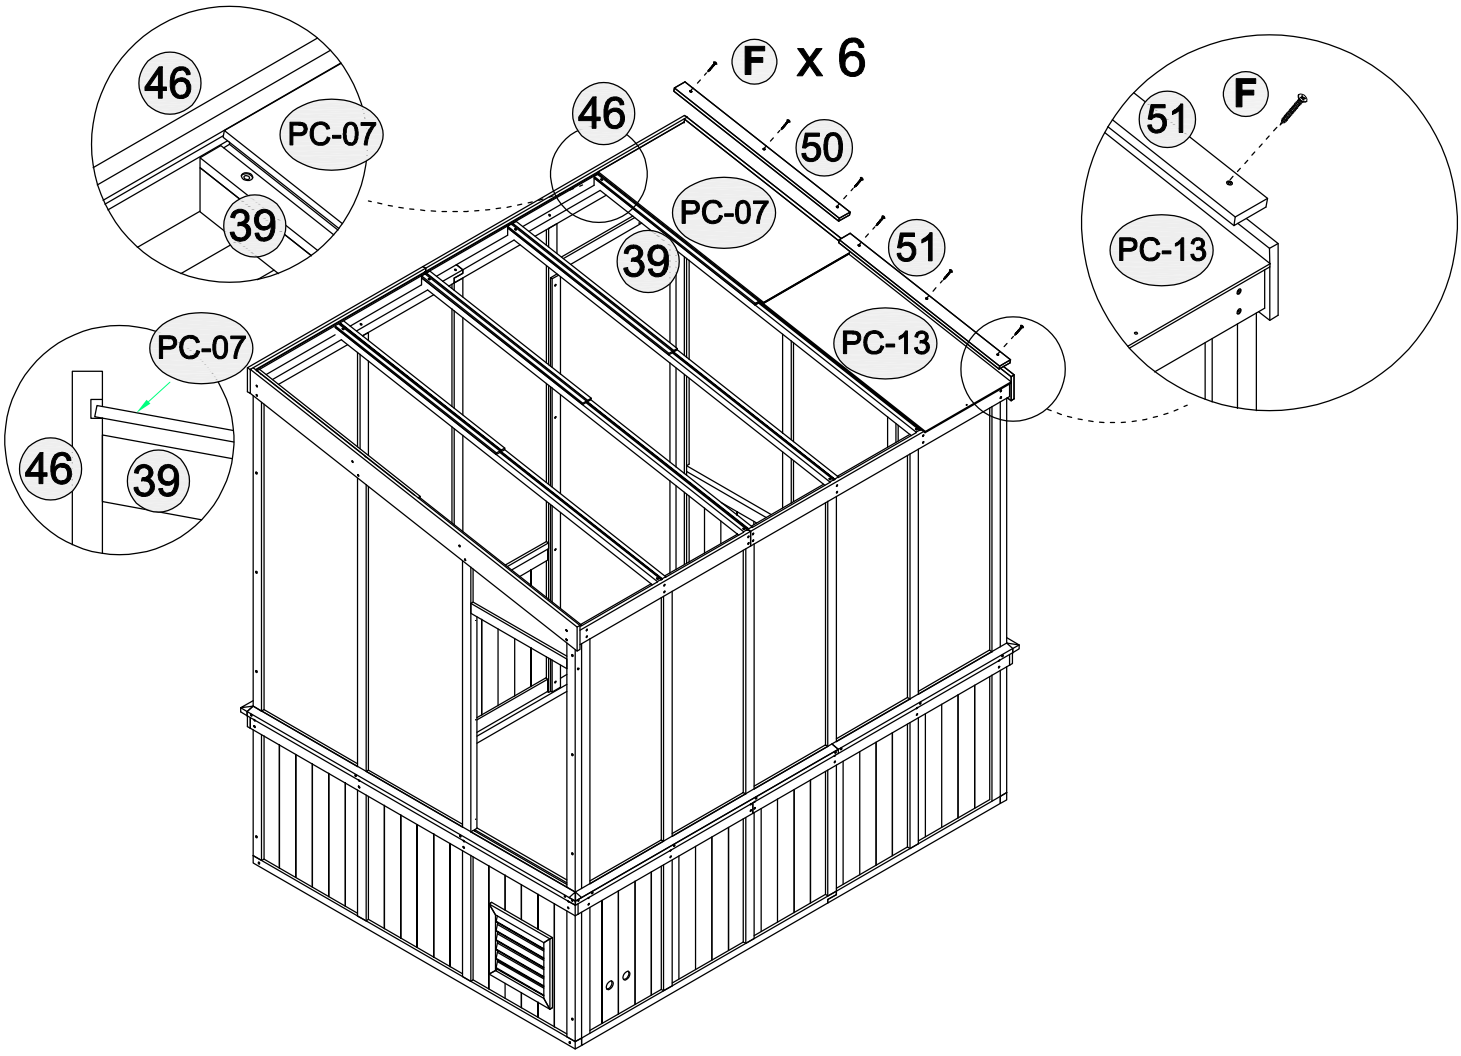


Cover plate installation


Step 37

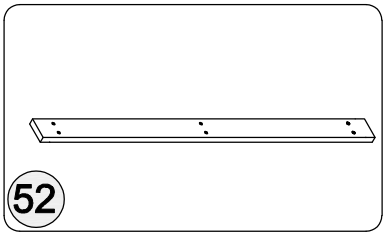


Top middle cover plate
Qty: 1

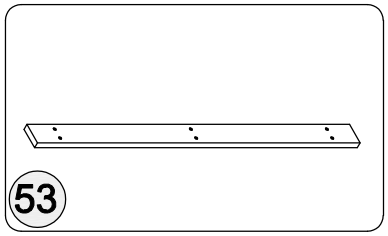


Top middle cover plate
Qty: 1

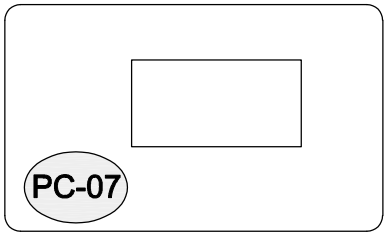


Top Sunshine Board
Qty: 1

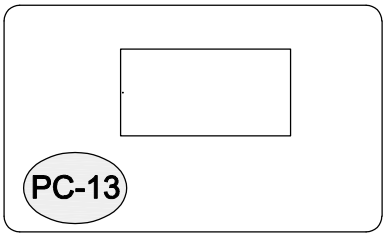

Top rear sunlight panel
Qty: 1

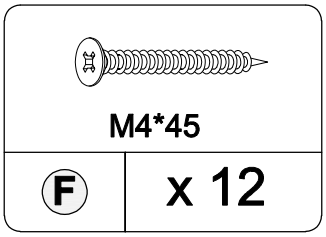


1. Place the components PC-07 and PC-13 according to the original method, with a gap of about 3MM on the edges
2. Components 52 and 53 are pressed in the middle of the PC component
3. Before installing each PC component, the film should be peeled off first

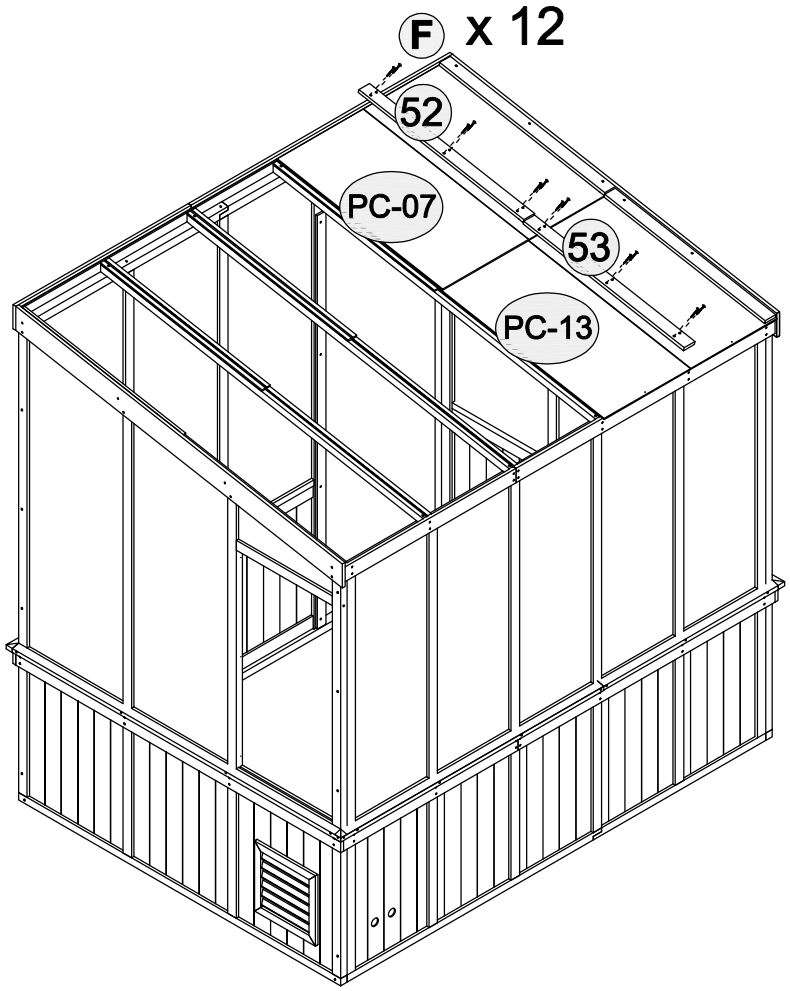


Cover plate installation


Step 38

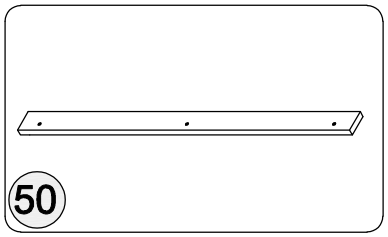


Top cover plate
Qty: 1

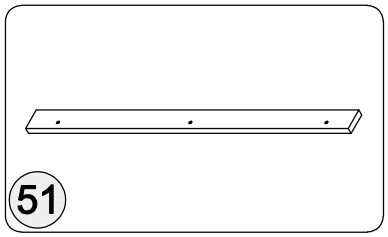


Top cover plate
Qty: 1

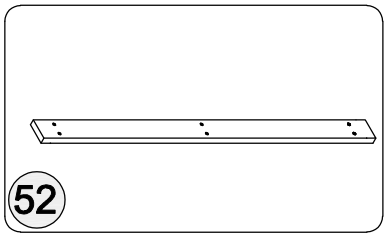


Top middle cover plate
Qty: 3

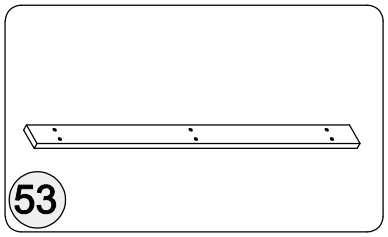

Top middle cover plate
Qty: 3

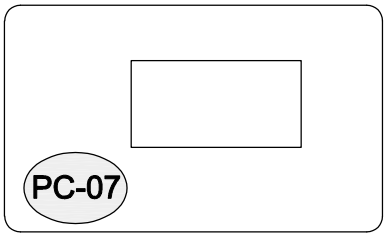



Top Sunshine Board
Qty: 3

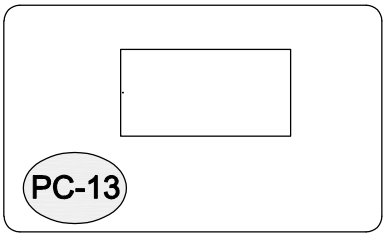


Top rear sunlight panel
Qty: 3


1. Install the components in sequence according to the original method
2. Before installing each PC component, the film should be peeled off first

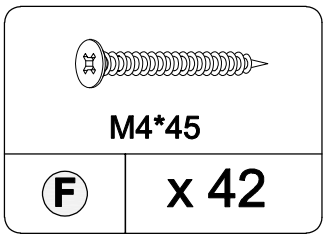

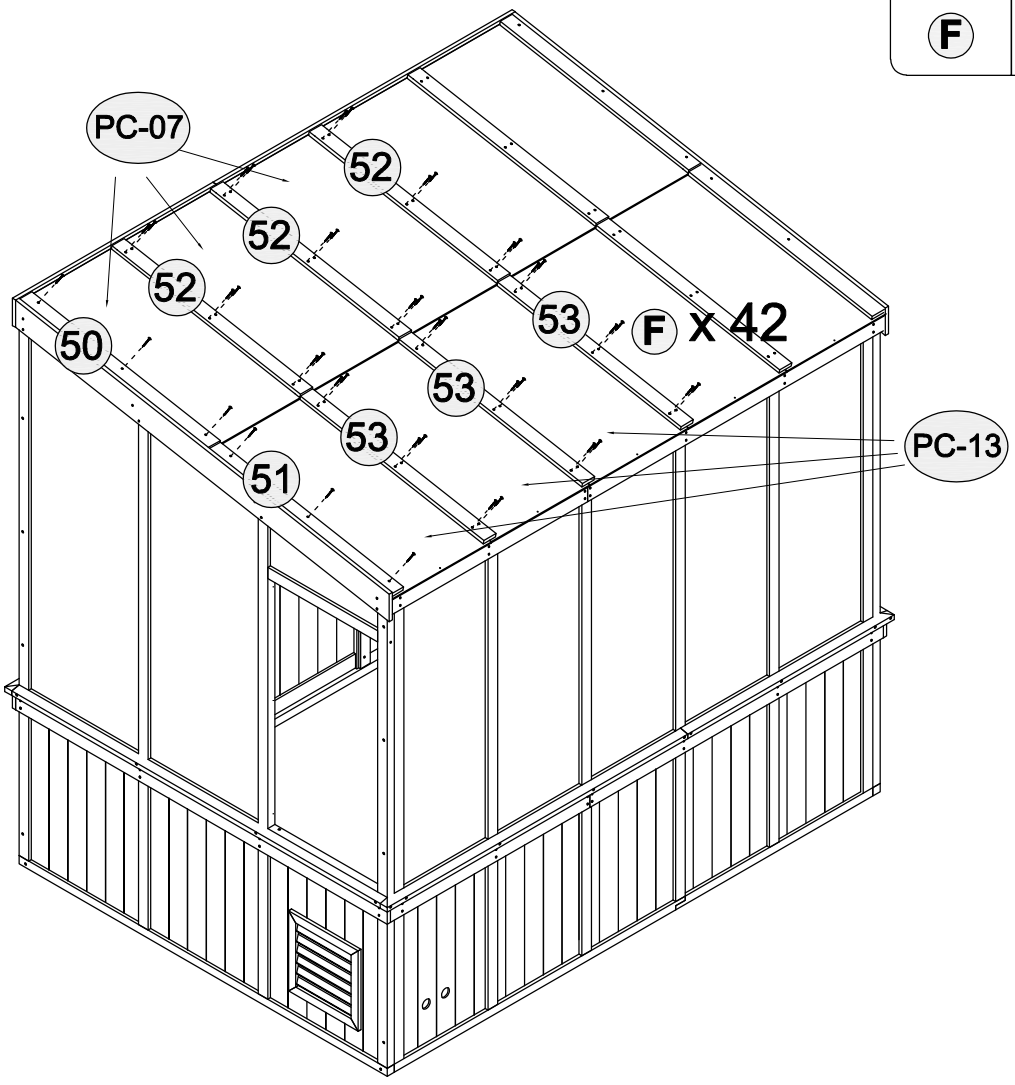

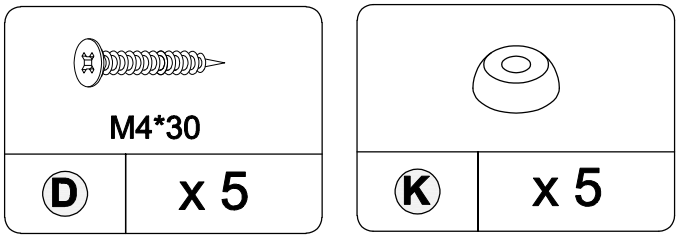

1. Thread hardware D through hardware K and install it into the lead hole of component PC-13

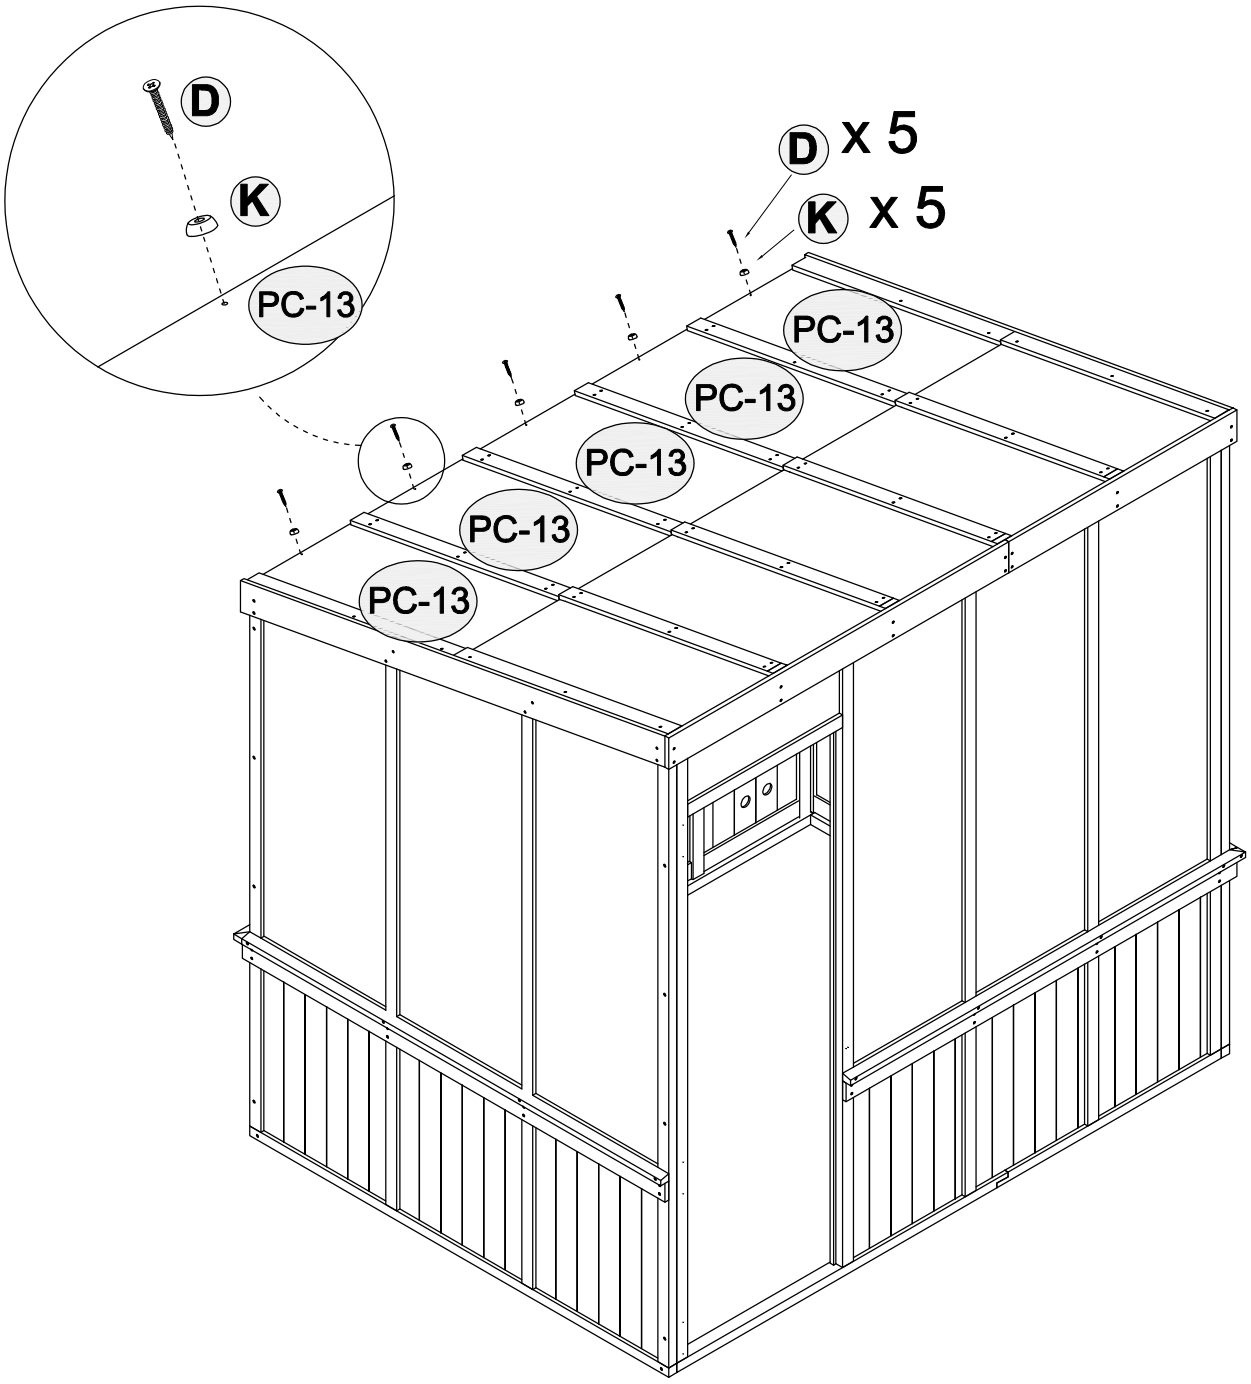

Installation of corner code

Step 40

T	x 4


U	x 4

M3.5*20	
C	x 24

L	x 2


1. The four corners of the room have the same corner code, and the hardware U is installed underground through the hardware T
2. Cover with hardware L

The four corners are fitted with such corner codes

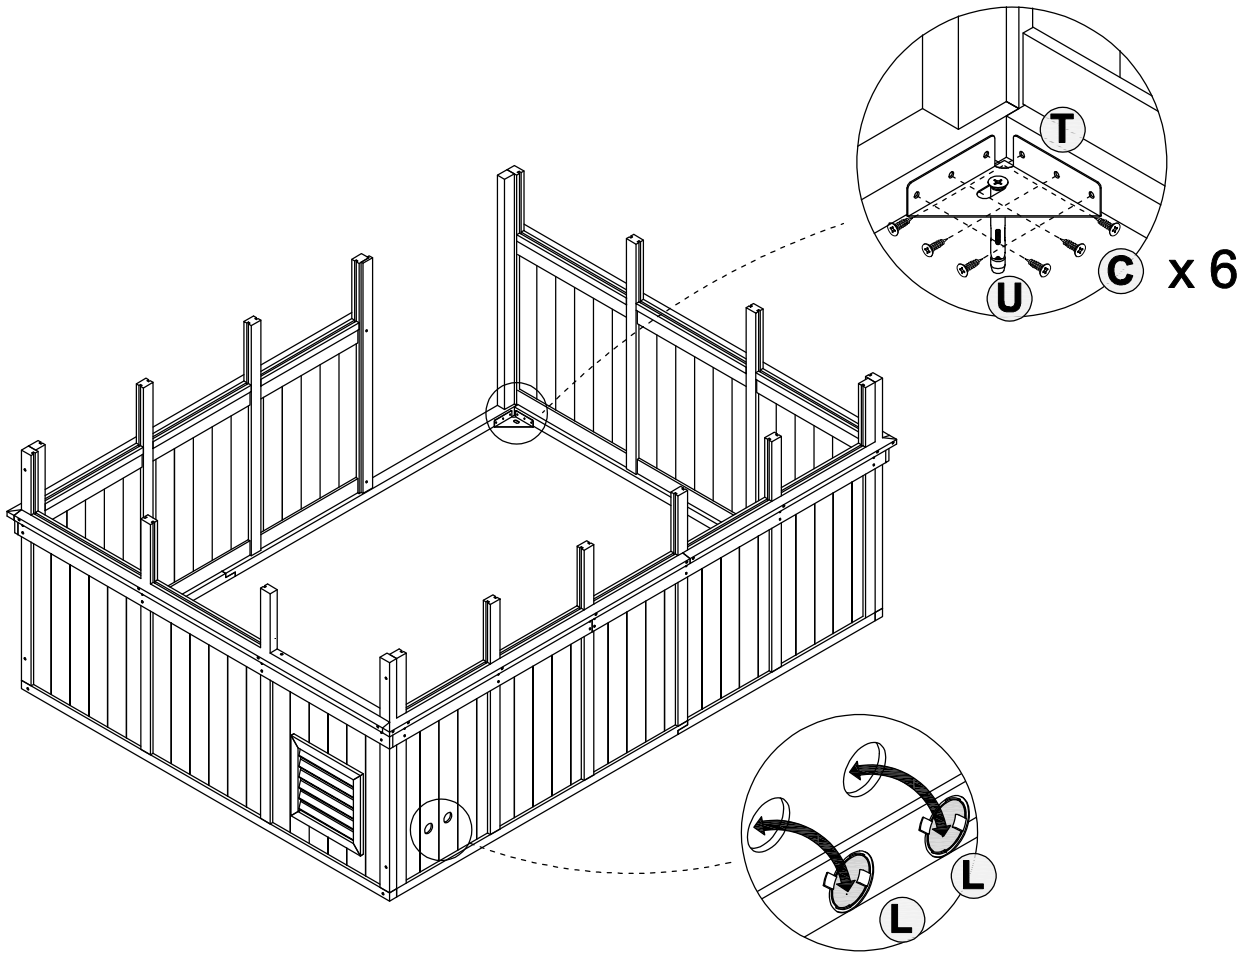


Installation of tripod


Step 41

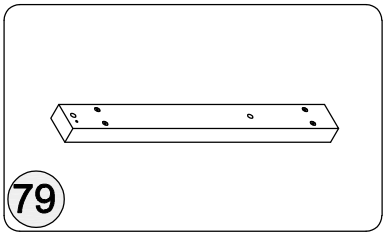


vertical bar
Qty: 5

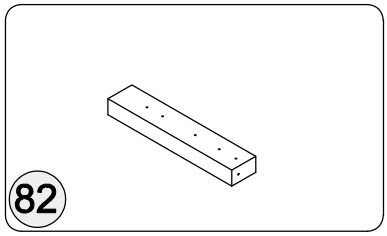


Triangular horizontal bar
Qty: 5

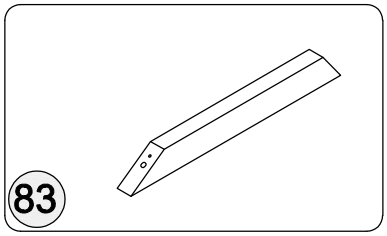


Triangular diagonal bar
Qty: 5

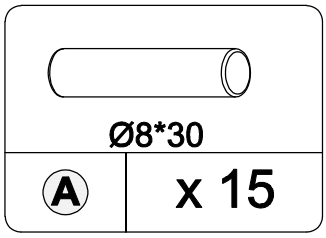


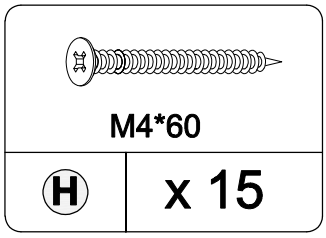

1. Connect with hardware A first, then install with hardware H
2. Install a total of 5

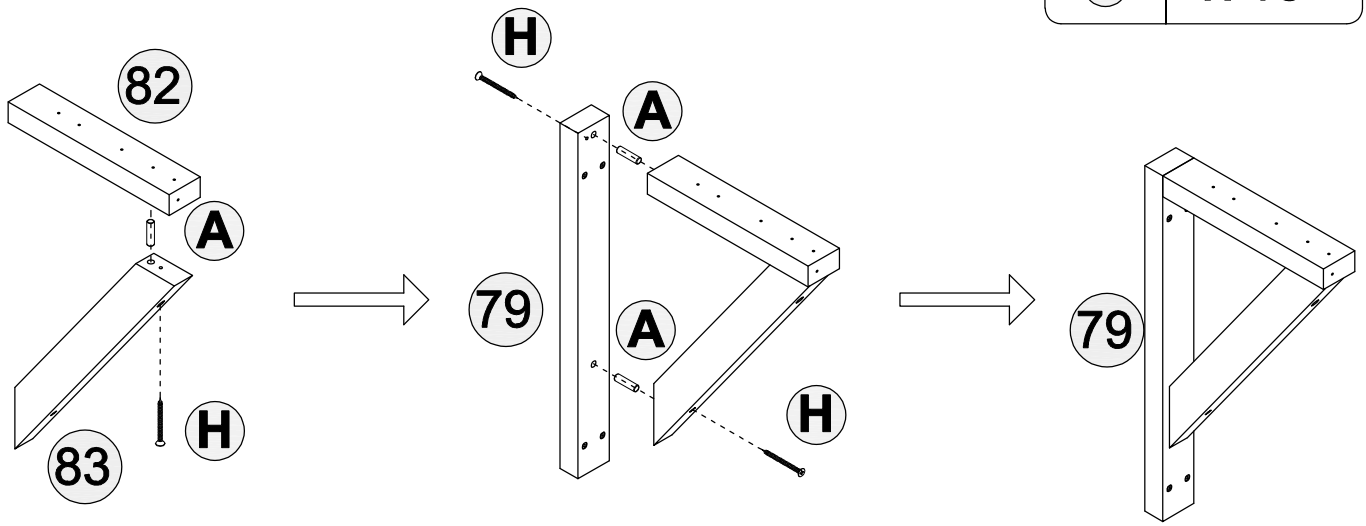


Install a total of 5

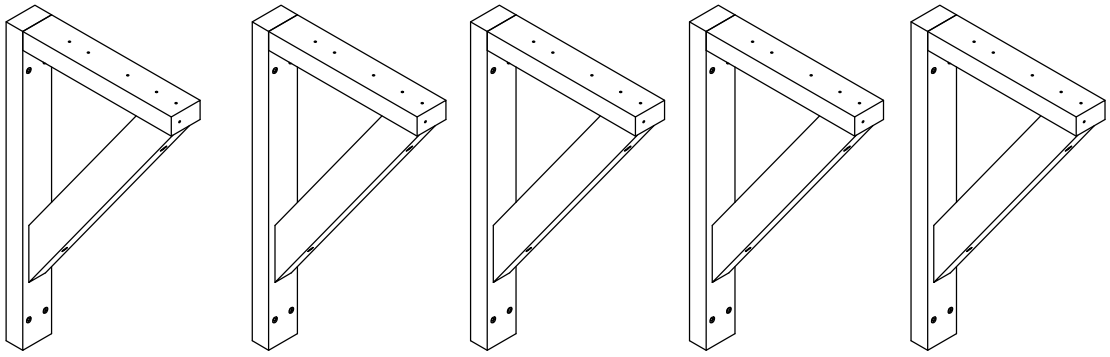


Installation of tripod


Step 42

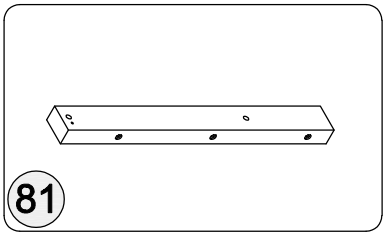


Right vertical bar
Qty: 1

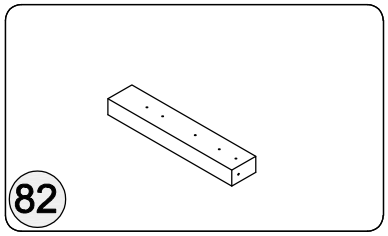


Triangular horizontal bar
Qty: 1

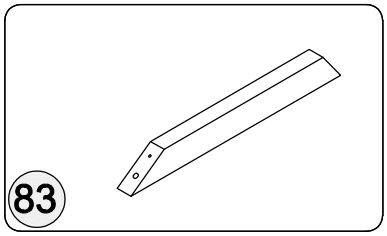


Triangular diagonal bar
Qty: 1

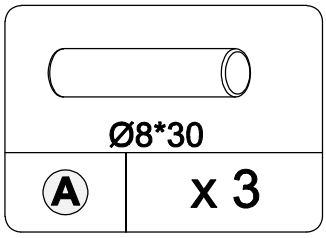


1. Connect with hardware A first, then install with hardware H

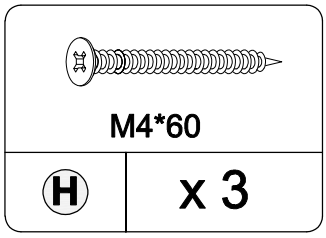


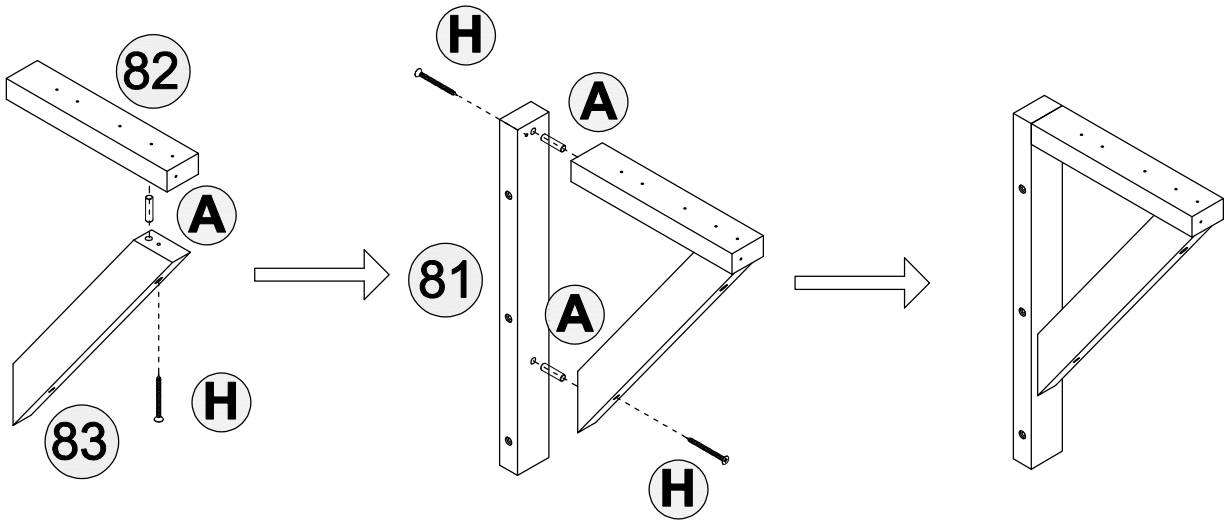


Installation of tripod

Step 43

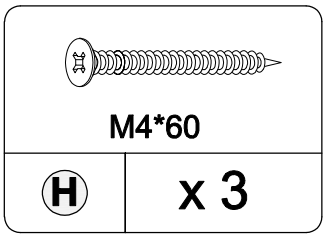

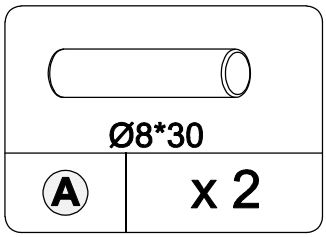



1. Connect with hardware A first, then install with hardware H

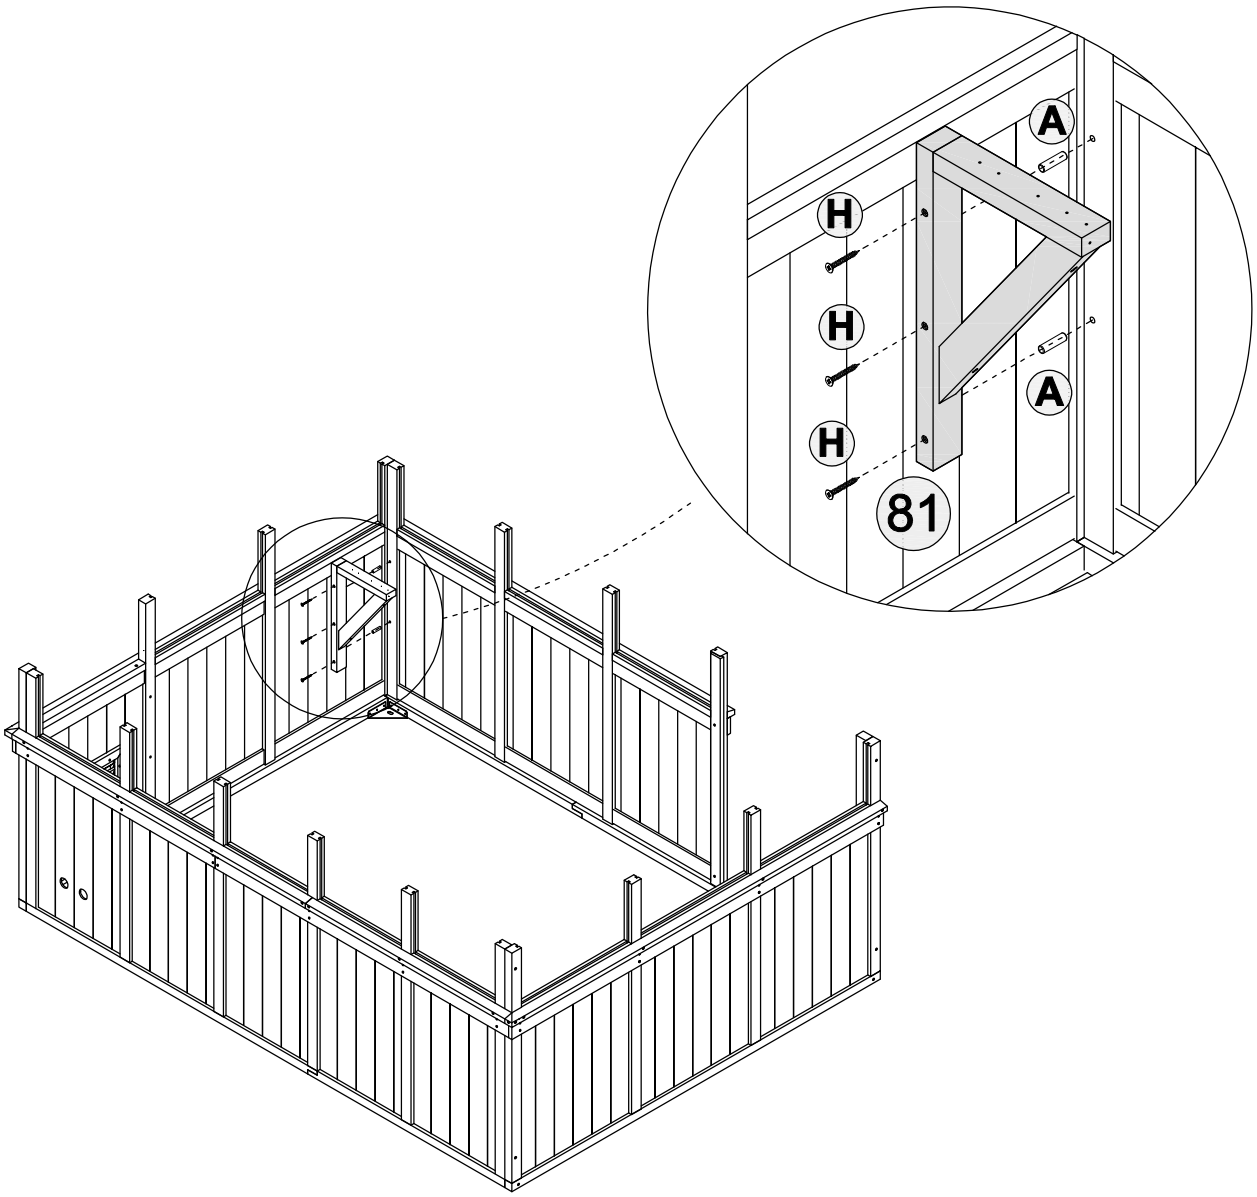


Installation of tripod


Step 44

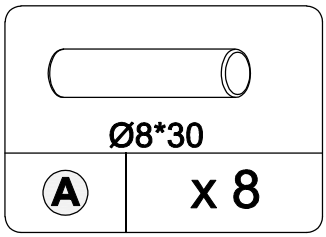


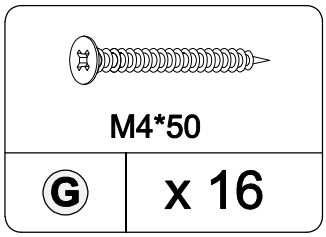

1. Connect with hardware A first, then install with hardware G

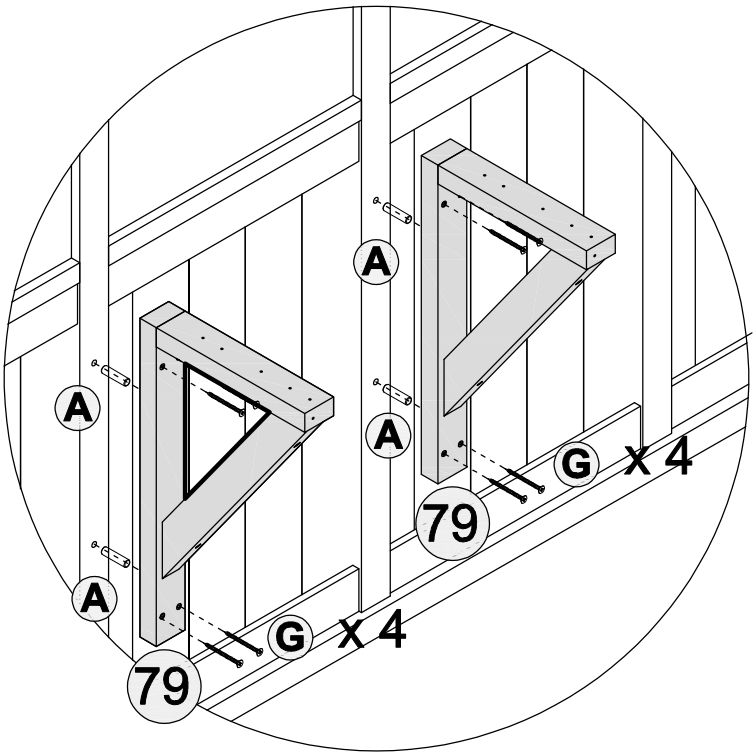


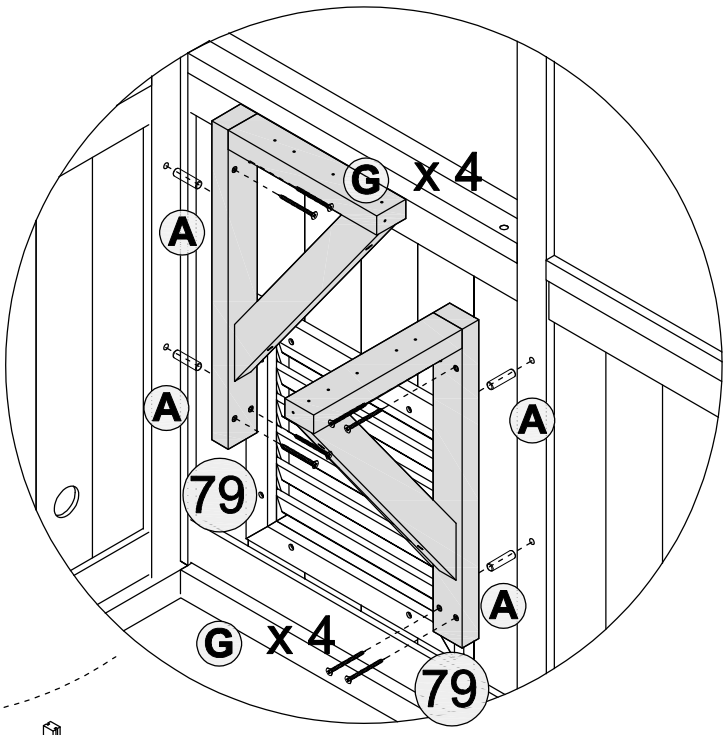


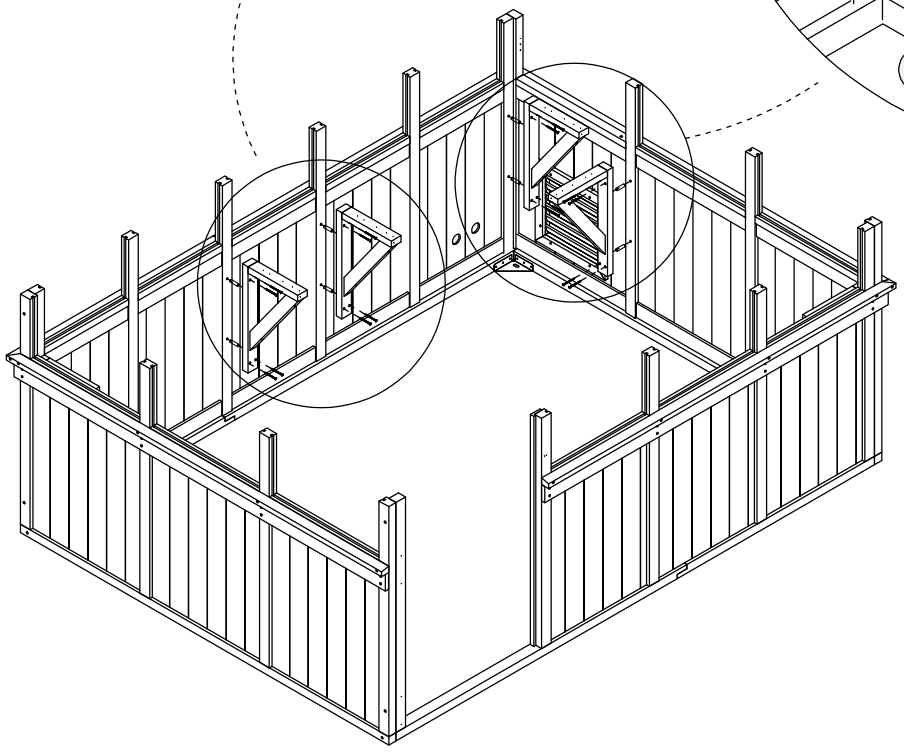


Installation of tripod

Step 45

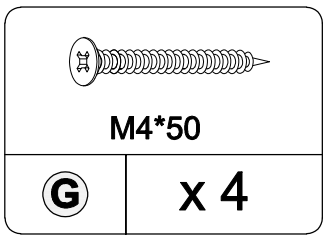

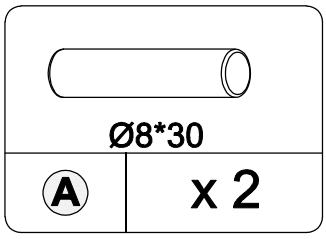


1. Connect with hardware A first, then install with hardware G

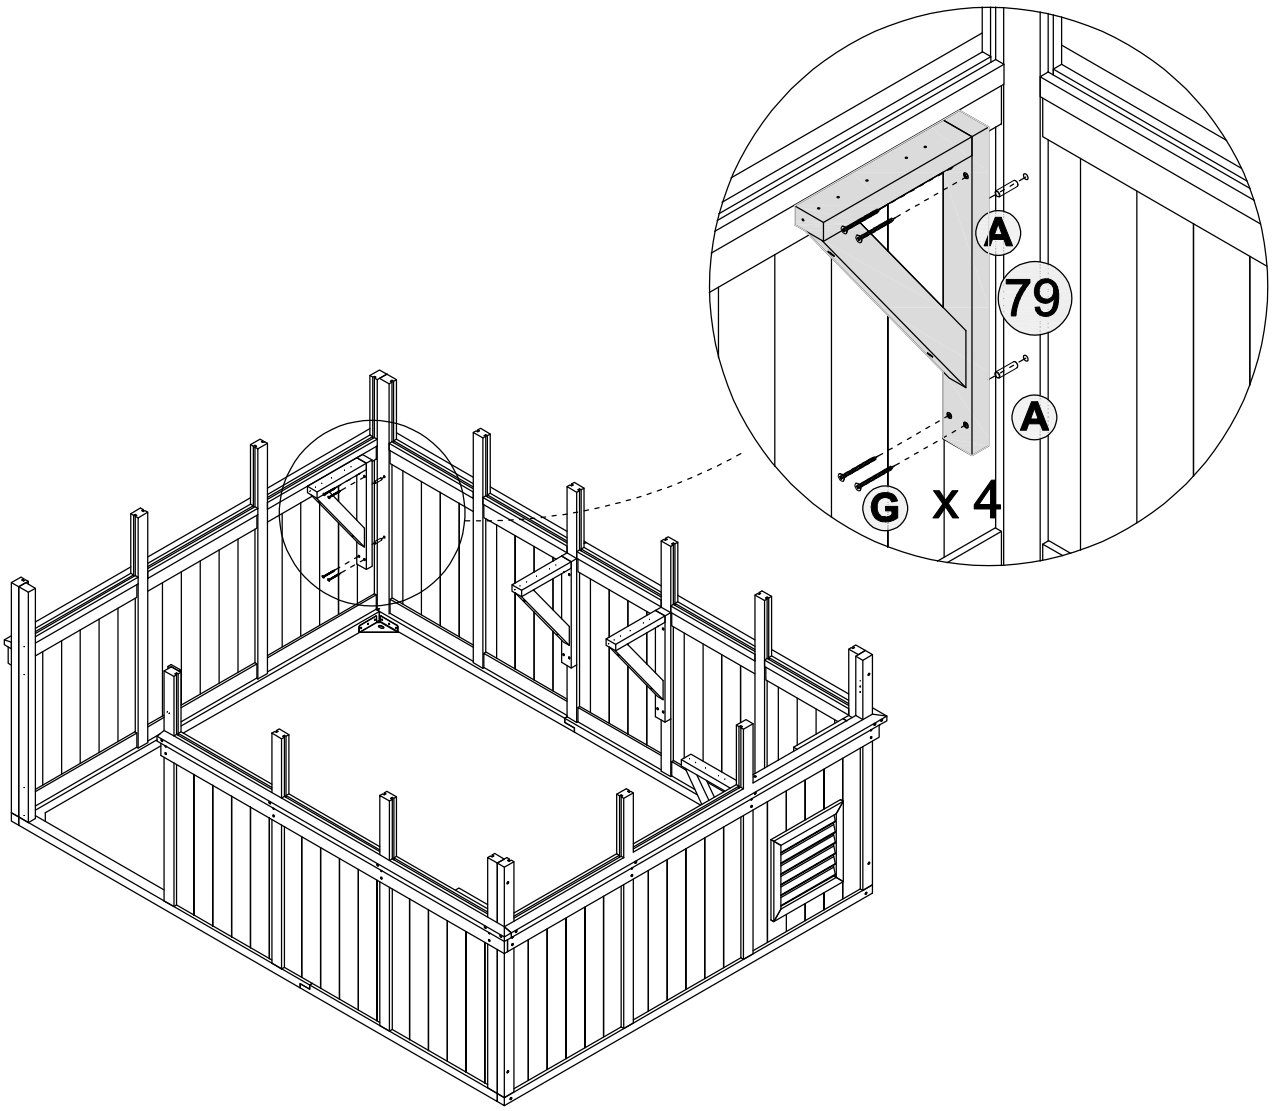


Layer board installation


Step 46

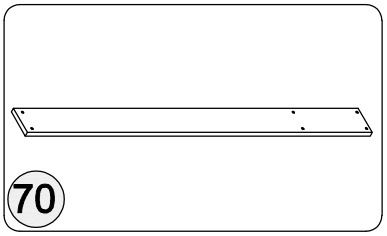


Rear left layer board
Qty: 2

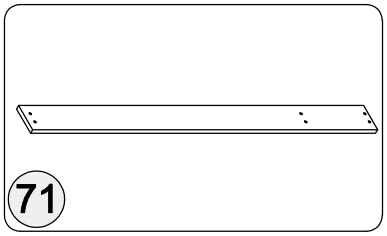


Rear left layer board
Qty: 1

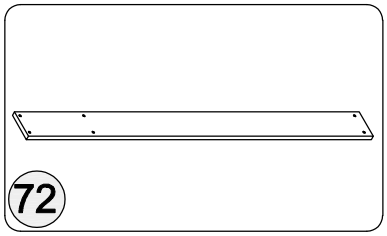


Rear right layer board
Qty: 2

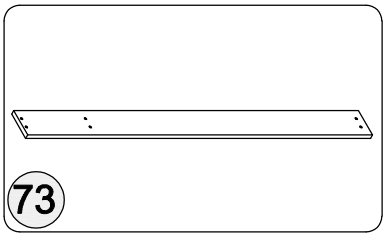


Rear right layer board
Qty: 1

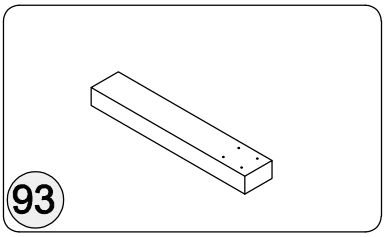

connecting strip
Qty: 1

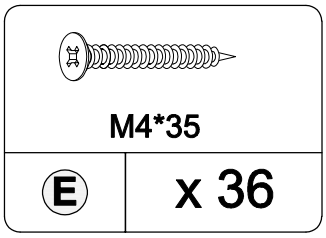


1. Use hardware E to pass through component and install it towards the lead hole

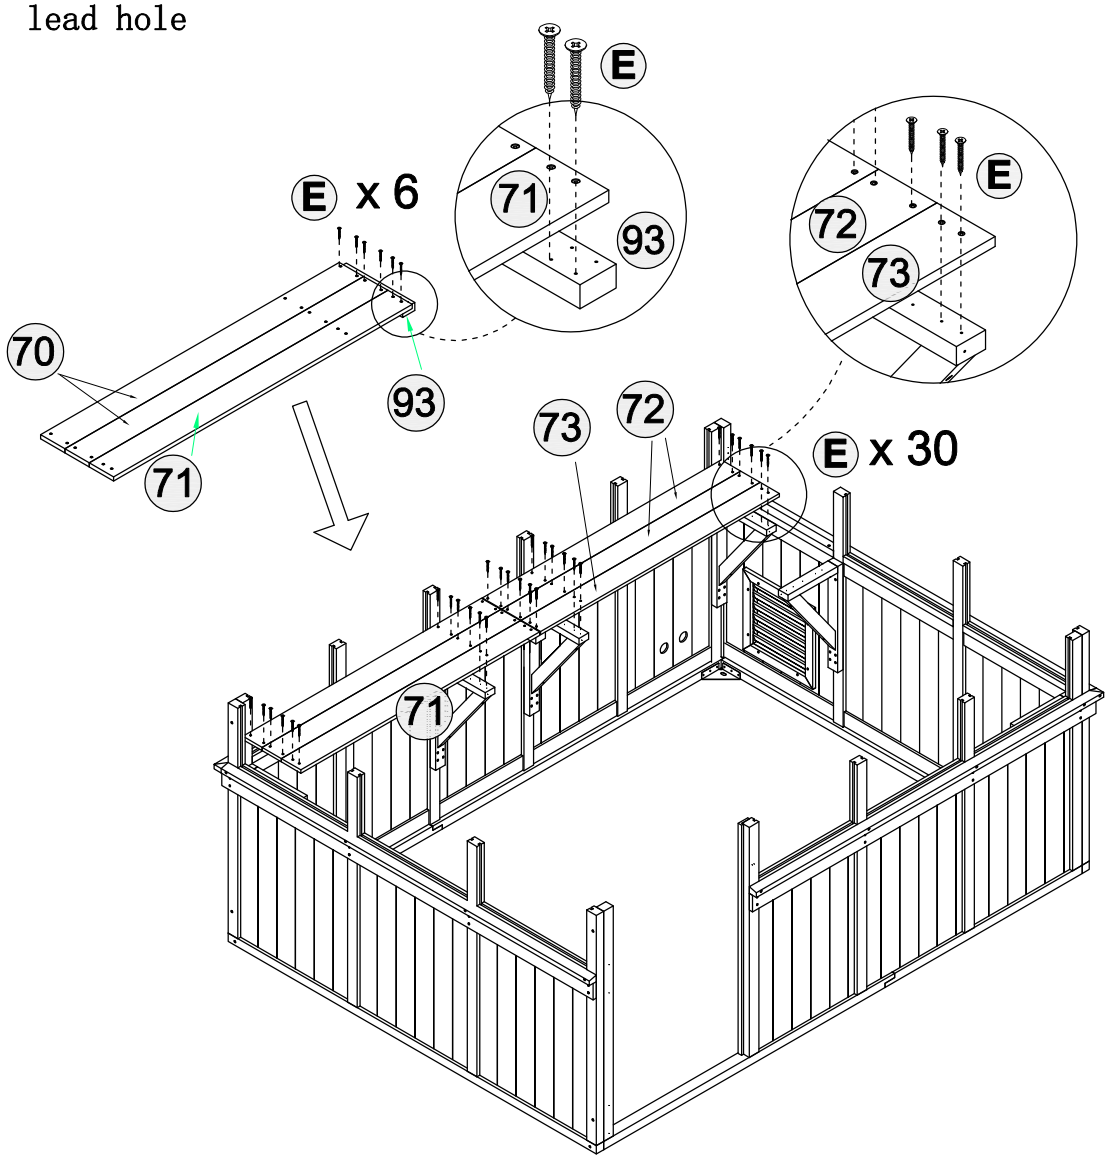


Front gear strip installation


Step 47

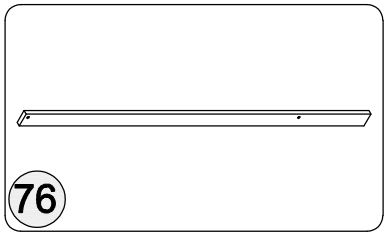


Front gear strip
Qty: 1

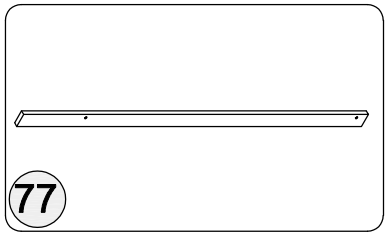

Front gear strip
Qty: 1

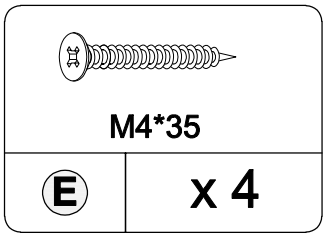


1. Use hardware E to pass through component 76, 77, and install it towards the lead hole

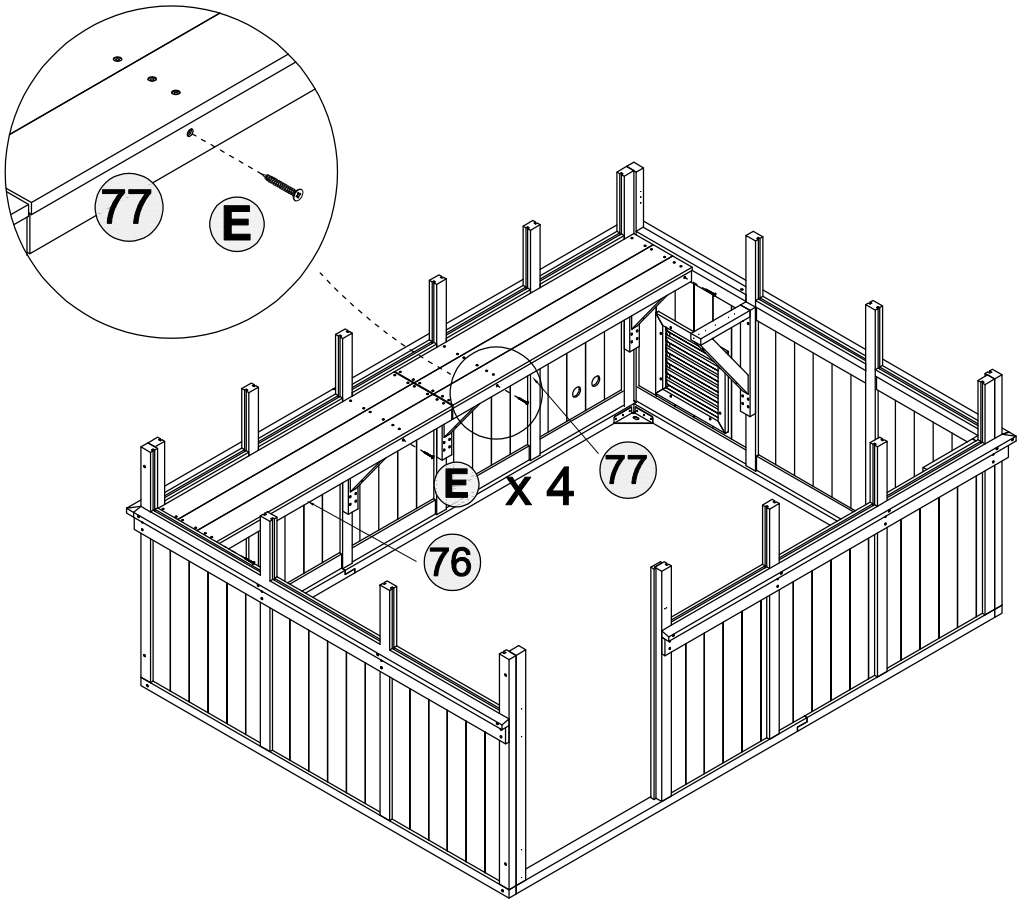


Layer board installation


Step 48

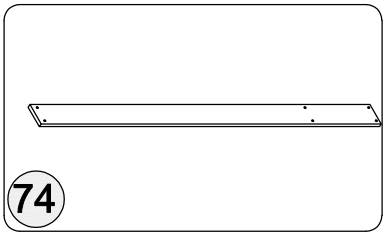


Right middle Flat noodles
Qty: 1

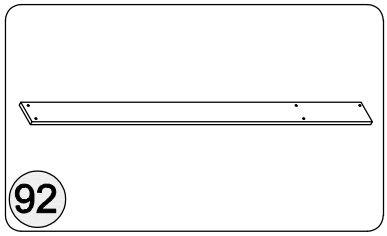


Right rear Flat noodles
Qty: 1

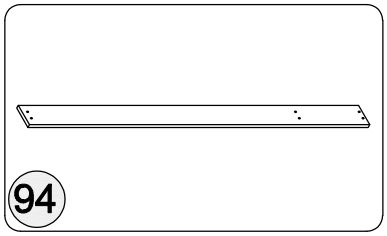


Front right Flat noodles
Qty: 1

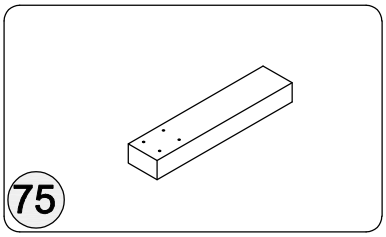

connecting strip
Qty: 1

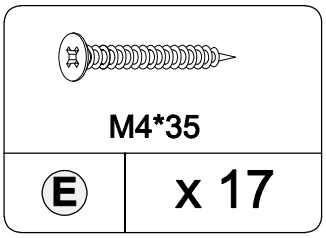


1. Use hardware E to pass through component and install it towards the lead hole

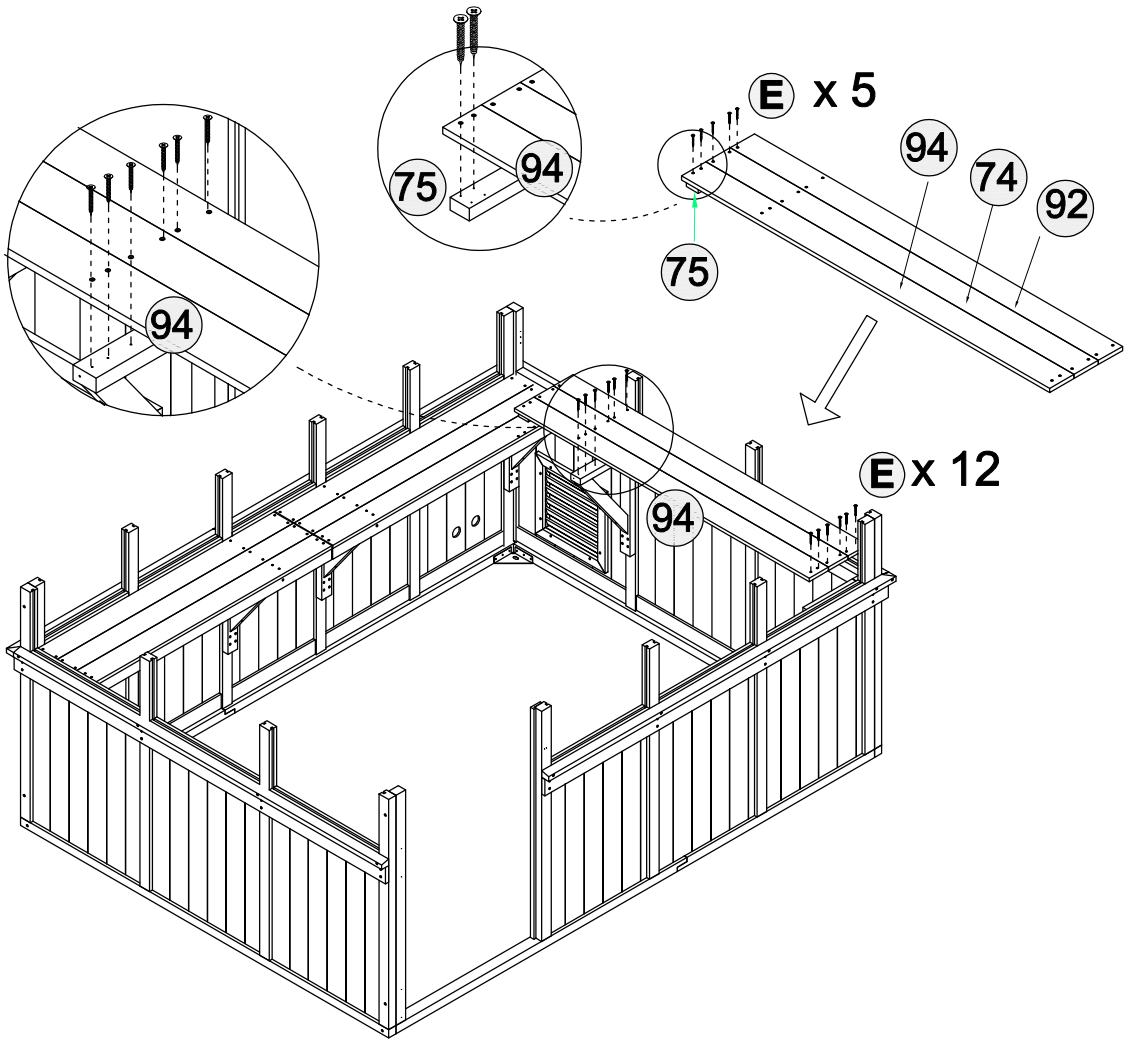


Front gear strip installation


Step 49

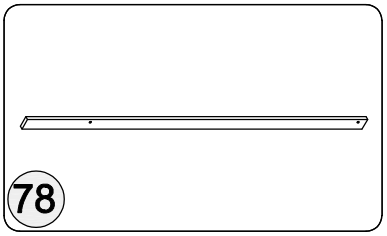


Right front gear strip
Qty: 1

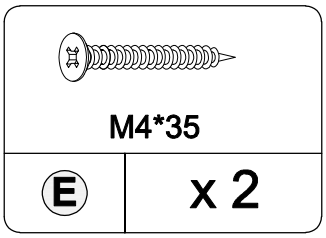


1. Use hardware E to pass through component 78 and install it towards the lead hole

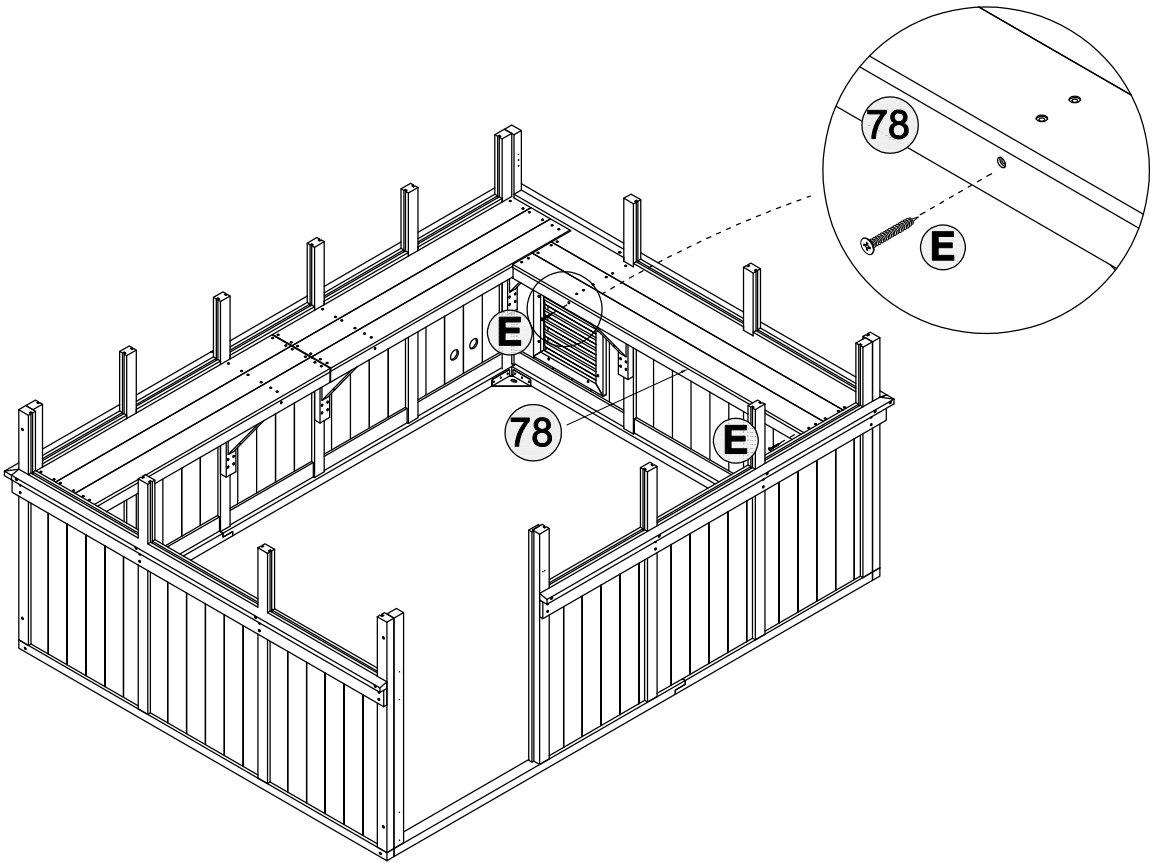


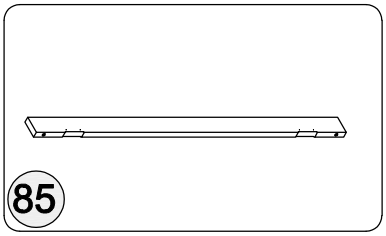


Left vertical bar
Qty: 1

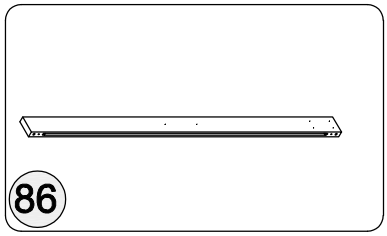


Right vertical bar
Qty: 1

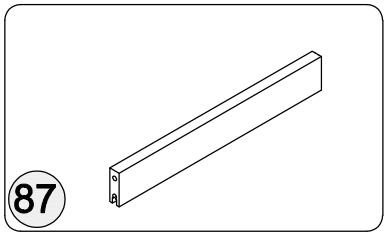


Up and down wooden strips
Qty: 2

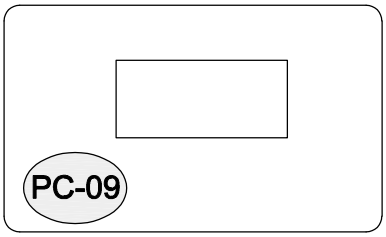


Window Sunlight Panel
Qty: 1

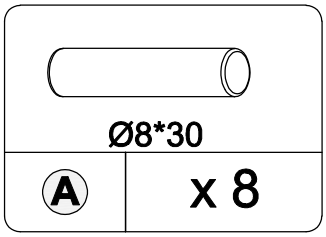

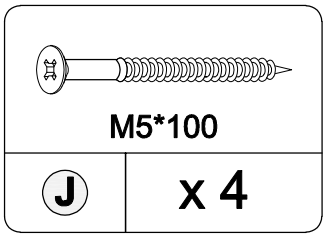

1. Connect with hardware A first, then install with hardware J
2. Pay attention to the front and back of the components
3. Before installing each PC component, the film should be peeled off first

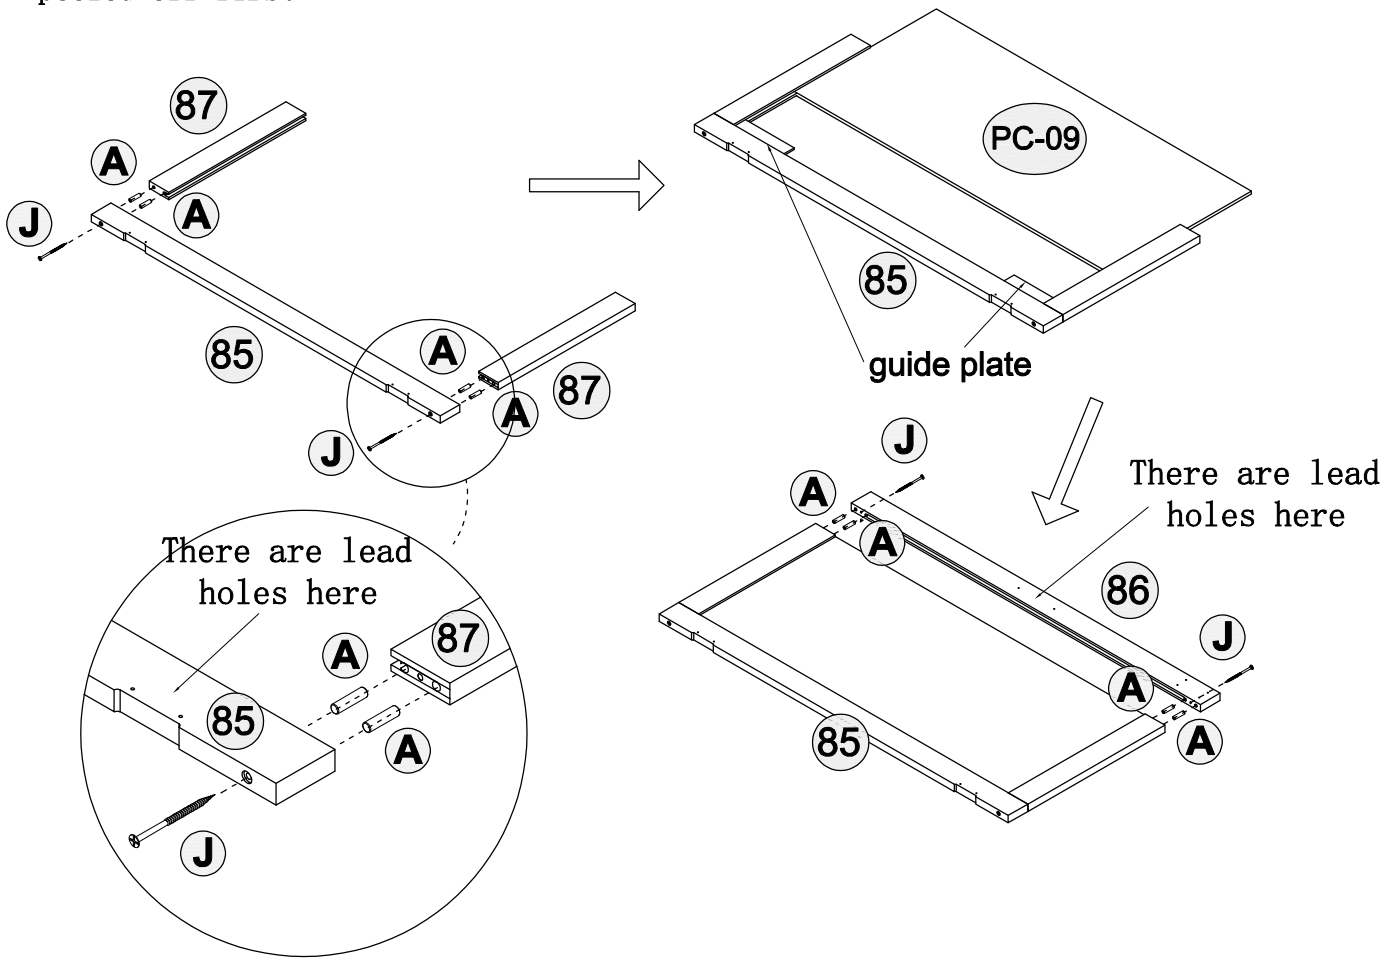


M3*16	
B	x14


Q	x 1

M	x 1


L=62	
N	x 2


1. Install hardware onto the lead hole
2. Pre-install the hardware B for the pilot hole, and then install the other holes of the hardware B.
3. Please note that the hole positions of the pilot holes must be aligned

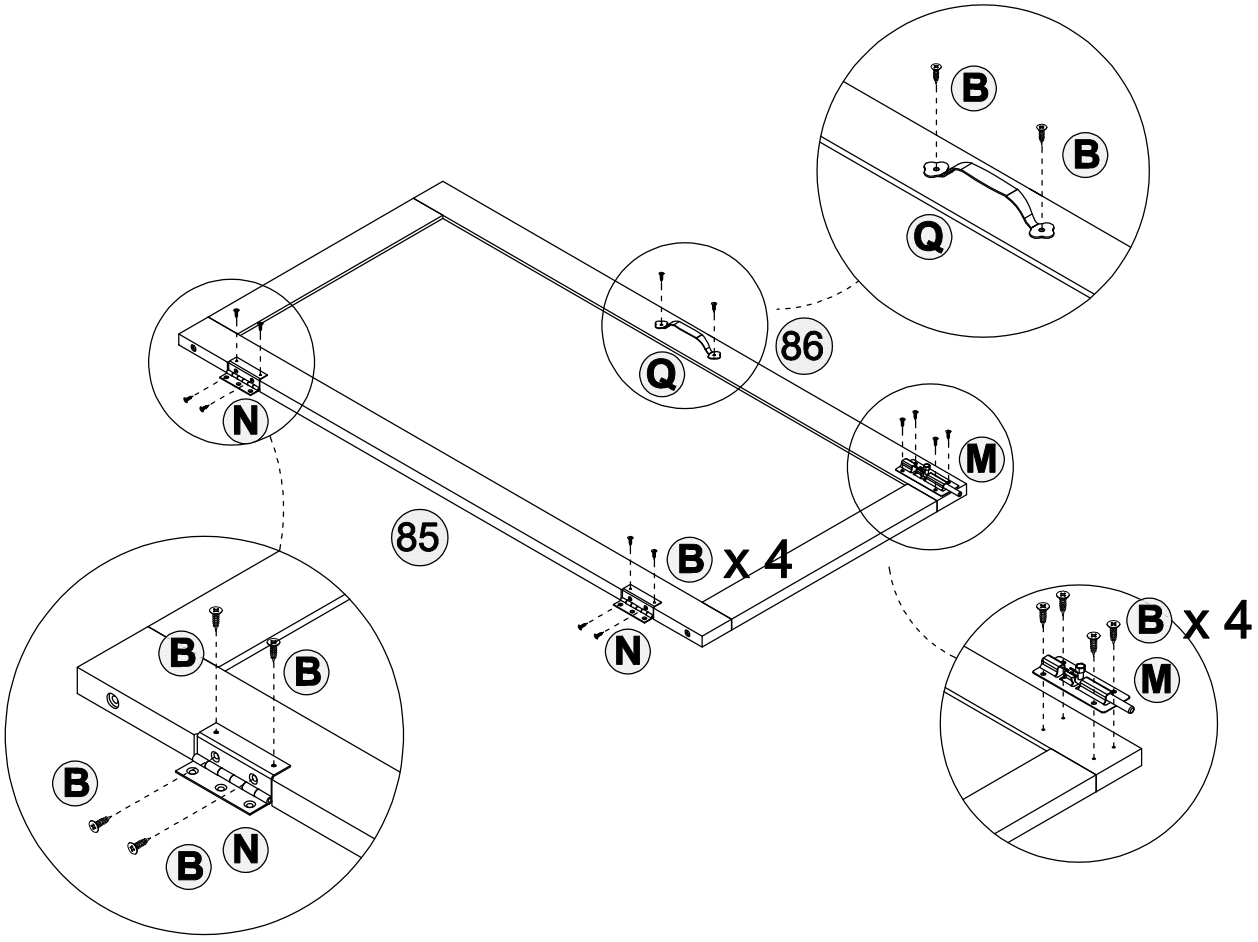

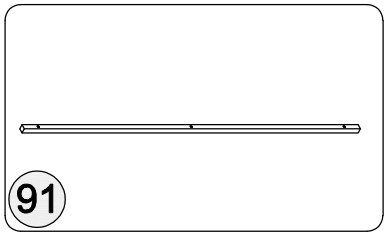


retaining strip
Qty: 1

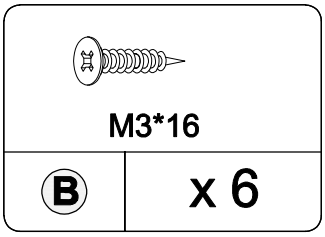

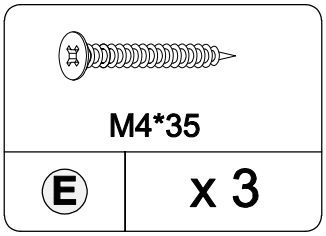


1. Use hardware E to pass through component 91 and install it towards the lead hole
2. Pre-install the hardware B for the pilot hole, and then install the other holes of the hardware B.
3. Please note that the hole positions of the pilot holes must be aligned

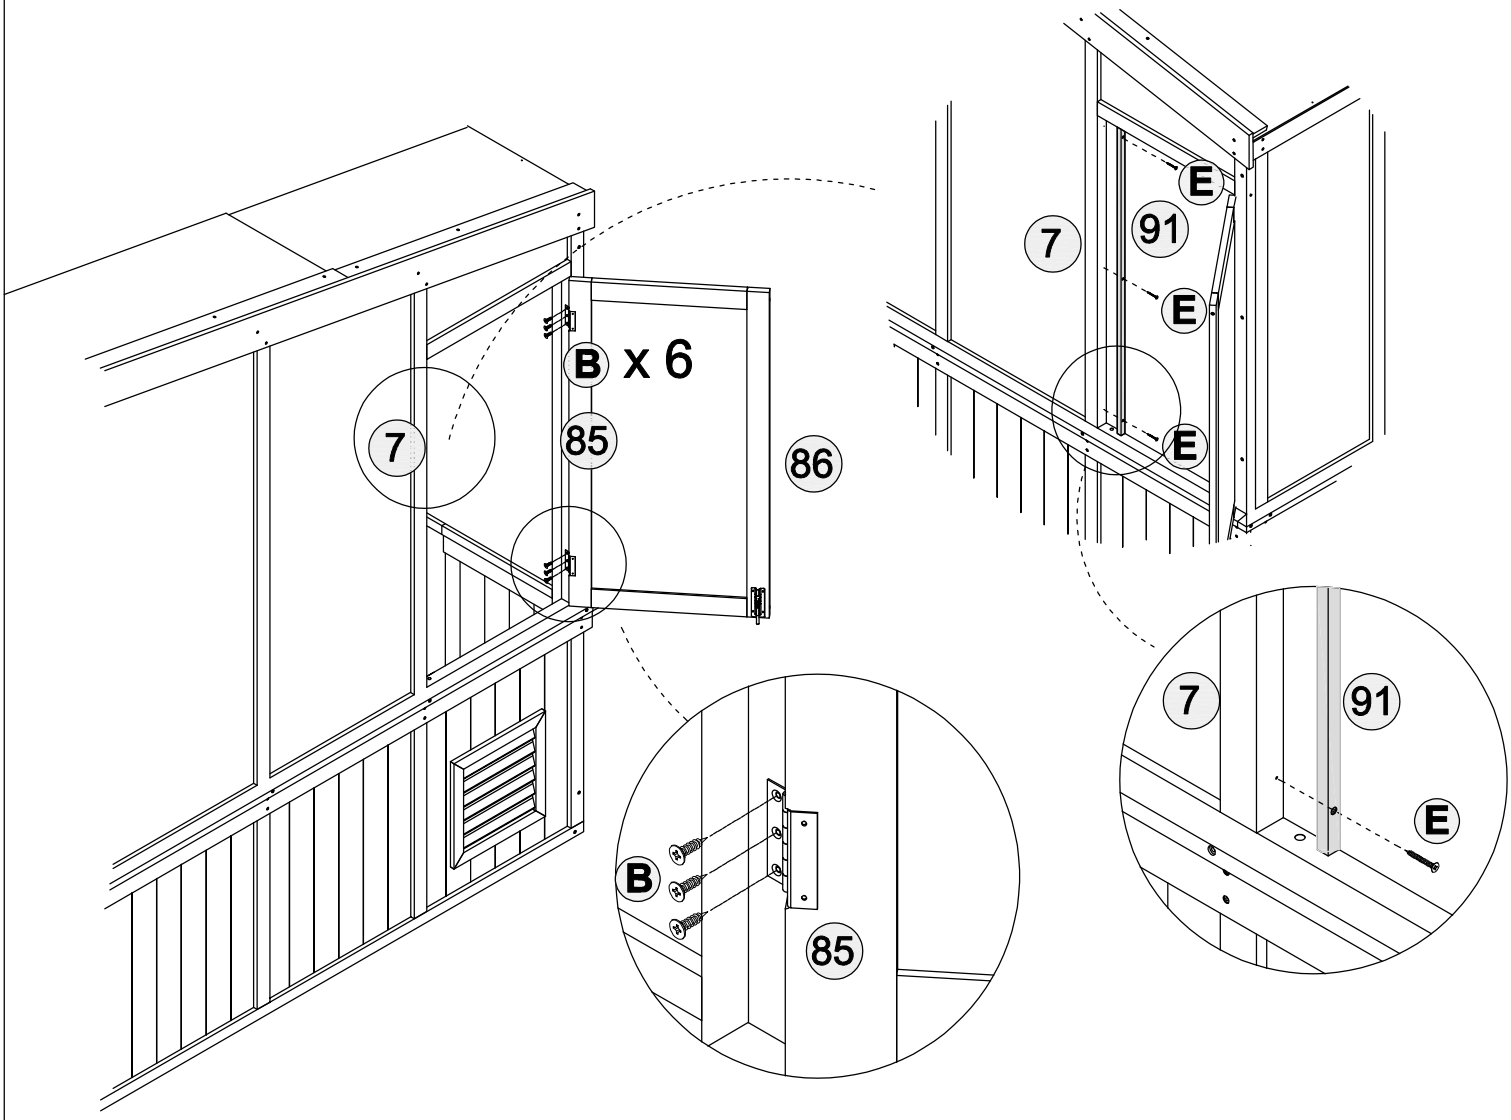


Door panel installation


Step 53

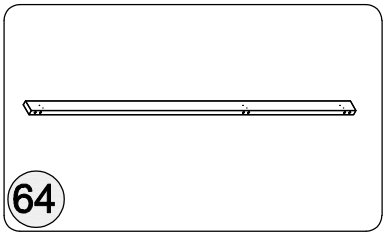


Left door strip
Qty: 1

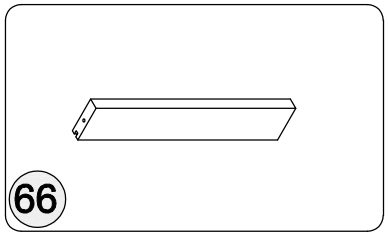


Above the door strip
Qty: 1

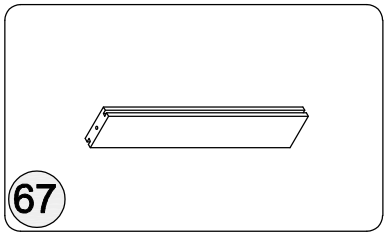


Door side clause
Qty: 1

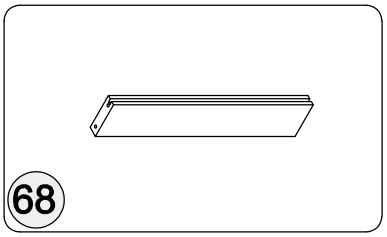

Door bottom strip
Qty: 1

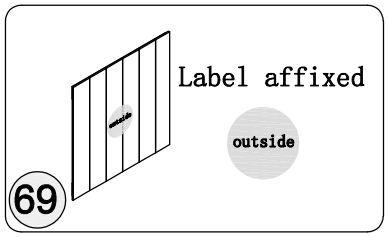



Door core board
Qty: 1

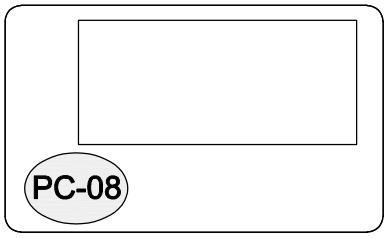


Door Sunshine Board
Qty: 1

1. Connect with hardware A first, then install with hardware J
2. Before installing each PC component, the film should be peeled off first

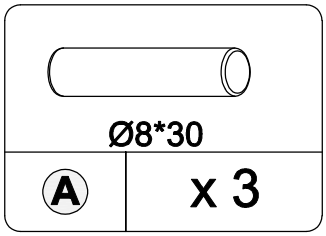

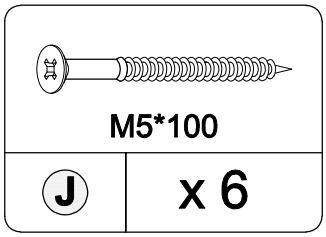


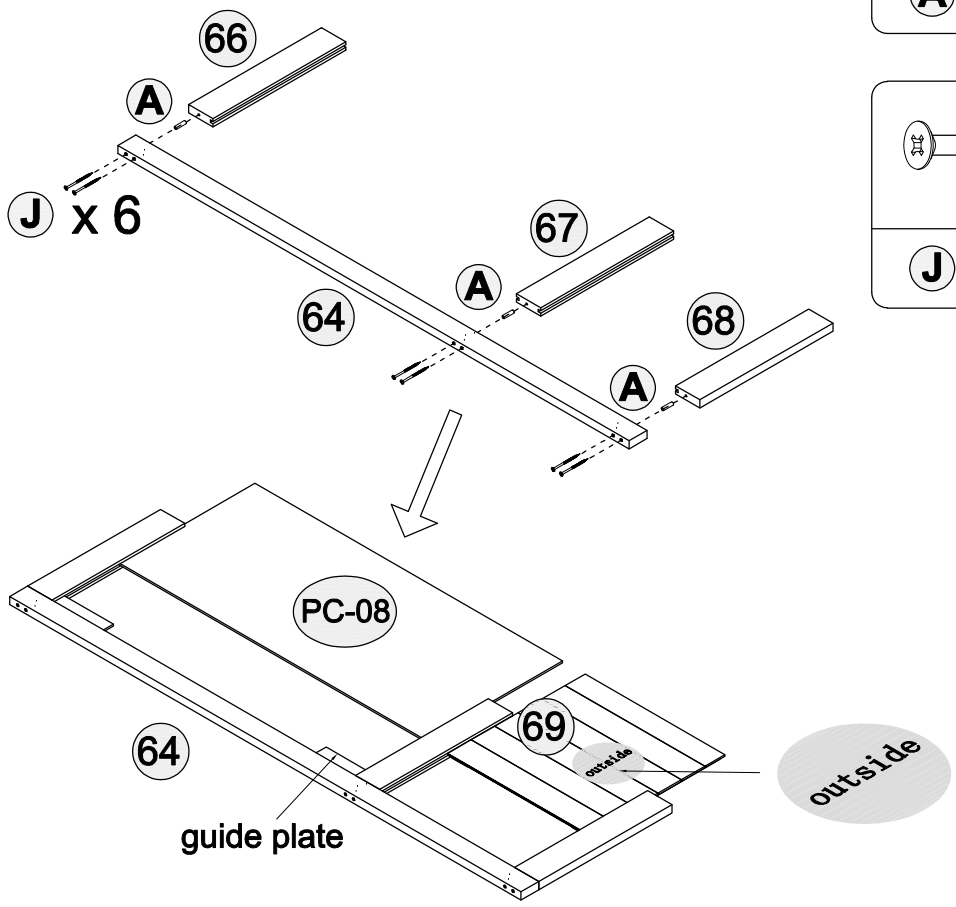


The 2 guide spacers need to be moved to the other side for position when one side is secured.


Door panel installation


Step 54

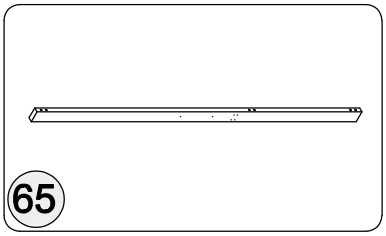


Right door strip
Qty: 1

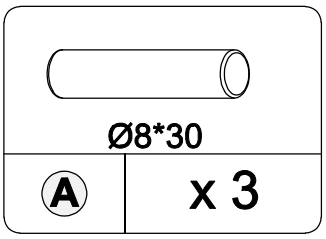


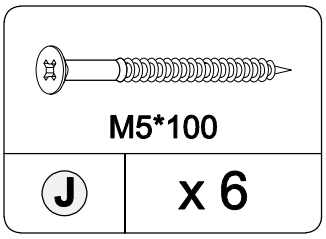


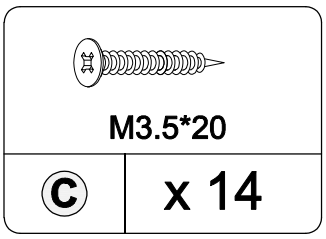


1. Before installing each PC component, the film should be peeled off first
2. Connect with hardware A first, then install with hardware J
3. Pre-install the hardware C for the pilot hole, and then install the other holes of the hardware C.

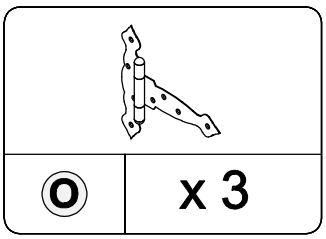

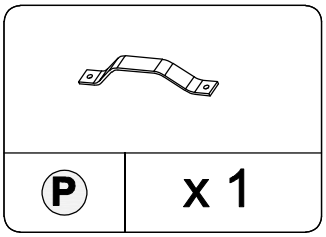

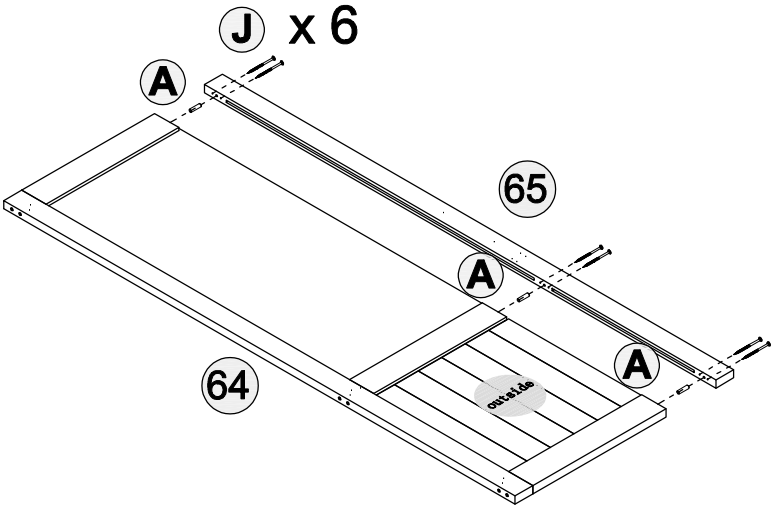


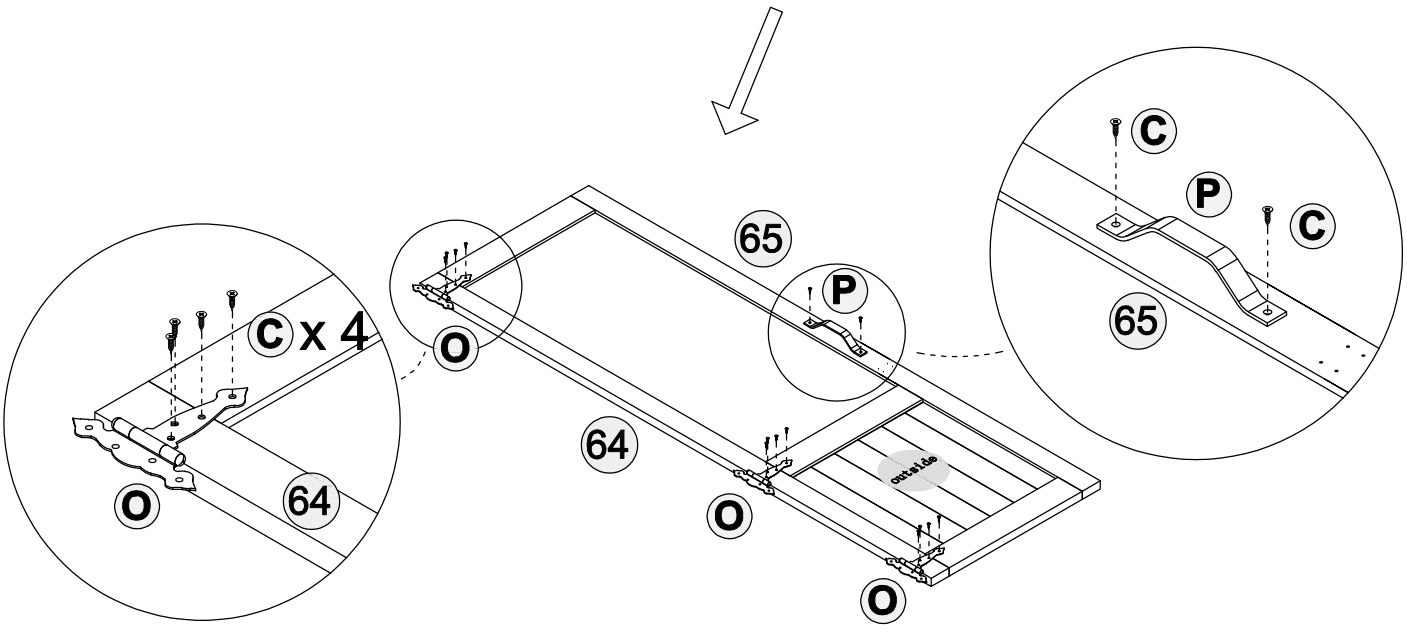



Door panel installation

Step 55

1. Pre-install the hardware C for the pilot hole, and then install the other holes of the hardware C.
2. Please note that the hole positions of the pilot holes must be aligned

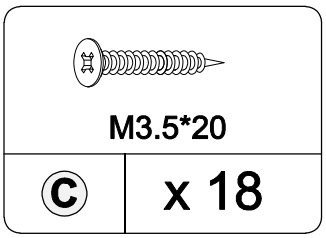


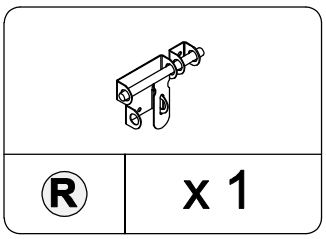

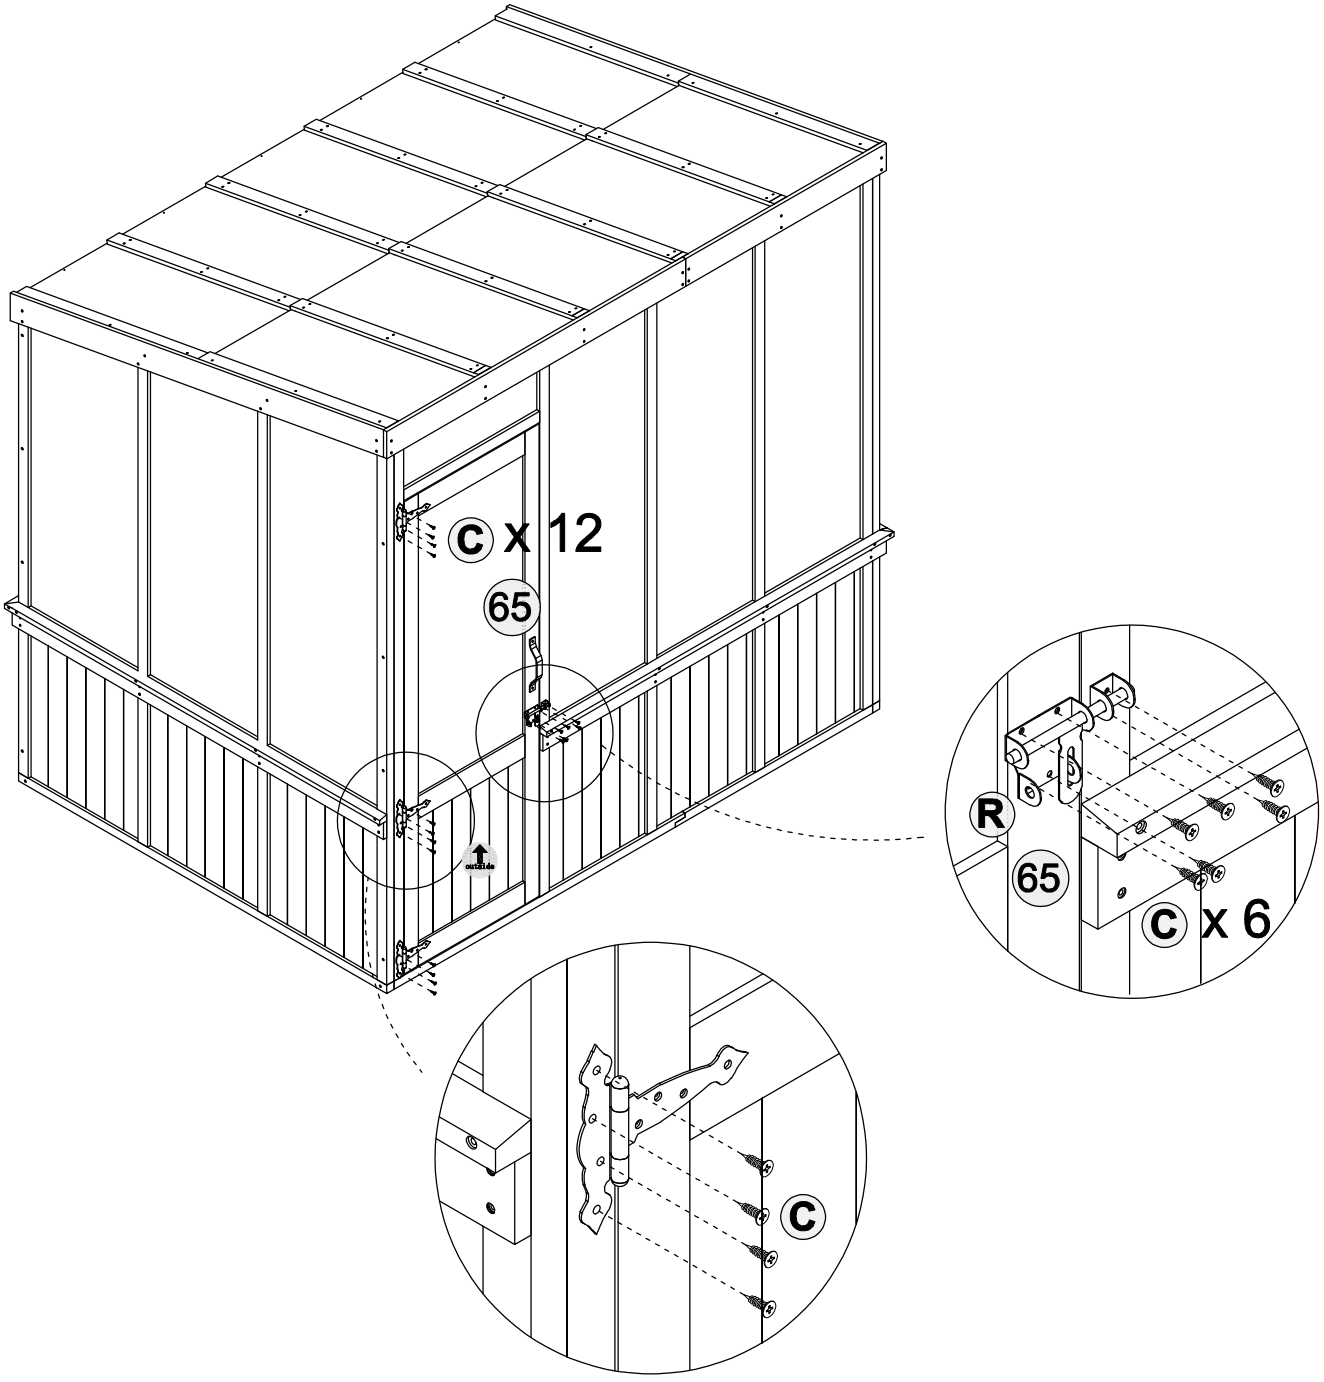


Door panel installation

Step 56

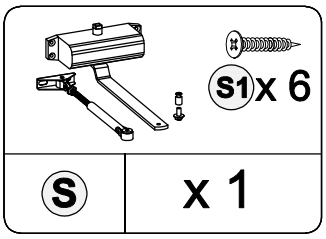

1. Install hardware S behind the door
2. Install towards the lead hole
3. Please note that the hole positions of the pilot holes must be aligned
4. Installation completed

Room door rear pull rod installation

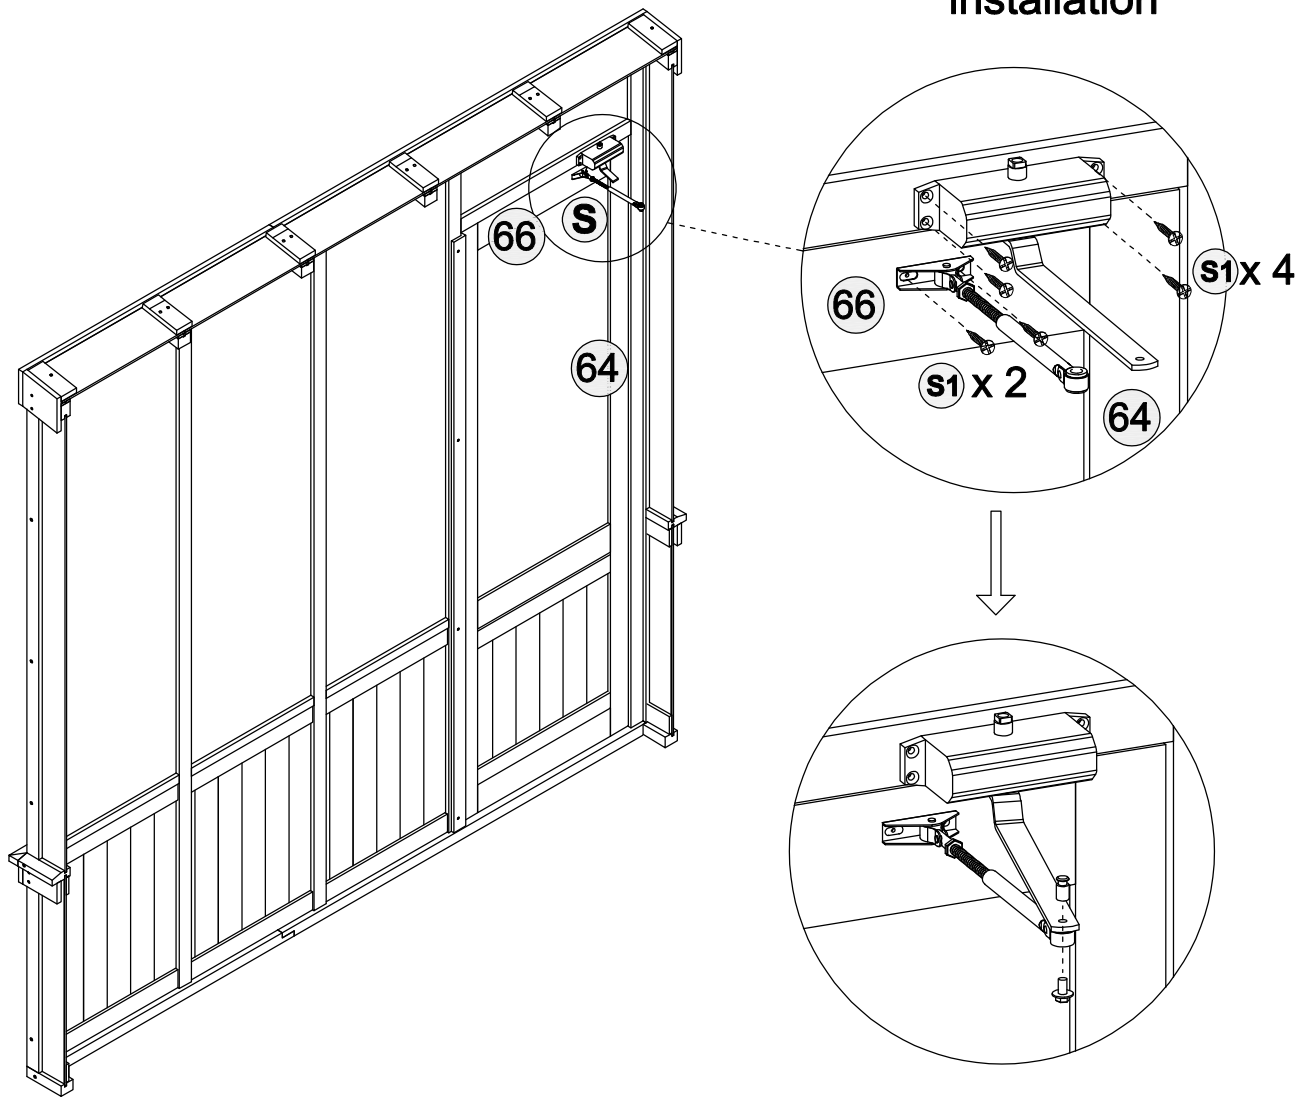

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


adelahu@fufugaga.com


208-820-0068

208-820-0799