


ASSEMBLY INSTRUCTIONS

LUNA BELLA TORCHIERE

1510017

1. Carefully remove all lamp parts from the box and spread on a flat clean surface.
2. Start by connecting amp connectors (L) & (M).
3. Next attach tubes (D) & (E), as these will comprise the body of your torchiere. Each tube has one end threaded on the outside and the opposite end threaded on the inside. Connect each tube with the outside thread facing up.
4. Insert tube (D) into the base assembly (C)/(B)/(A) and tighten the nut in the base with a wrench until secure.
5. Install the shade onto the top of the socket assembly (F). It will rest centered on top.
6. Slide the ring that is attached to the socket onto the top of the socket assembly. Turn the ring clockwise until the shade is secure.
7. Screw the light bulb into the socket assembly (recommended: E26, A16, 23W LED, 2700K, 90+CRI)
8. Plug into a 110V
9. Enjoy the beautiful light.

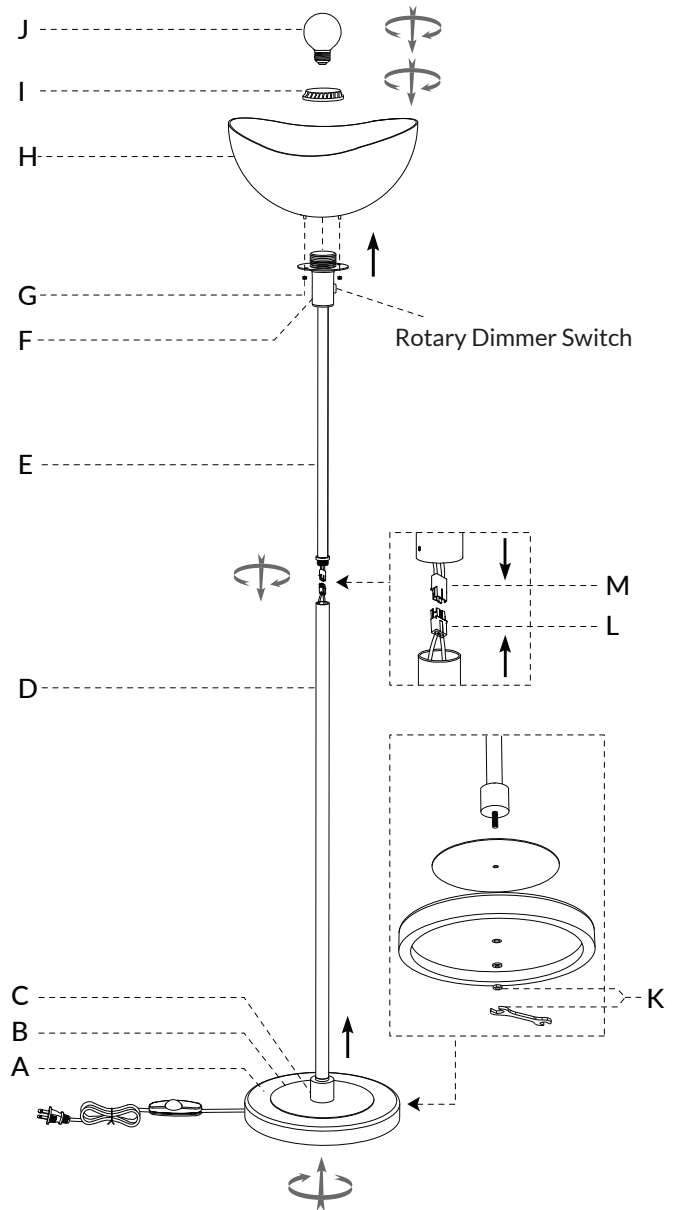

IMPORTANT SAFETY INSTRUCTIONS

This lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Esta lampara tiene un enchufe polarizado (una navaja es mas ancha que la otra) como forma de seguridad para reducir el riesgo de un shock electrico. Este enchufe polarizado entrara en una conexión solo de un lado. Si el enchufe no entra en la conexión trate al reverso. Si aun asi no entra, contacte a un electricista calificado. Nunca use una extension a menos que el enchufe pueda ser conectado completamente. No altere el enchufe.

 NOVA OF CALIFORNIA

WWW.NOVAOFCALIFORNIA.COM