
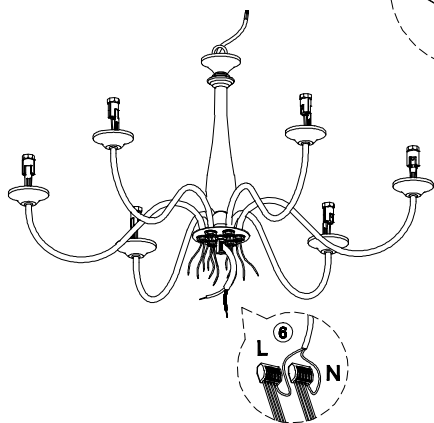



5mm: lock nut should be inside the threaded rod around 5mm

1. Rotate to install the threaded rod ③ to the bottom of the light fixture ①, fasten it with lock nut ②.
2. Install the arms ④ on the plate of fixture ① with lock nut & teeth lock washer ⑤, adjust the arms ④ to suitable angle.


1. Pull the orange operating handle A to open the inlet hole, insert the wire B.
2. Press the operating handle A to finish wiring. (Note: one inlet hole can put 2 or 3 wires inside)

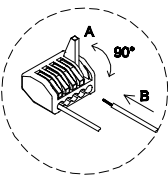


1. Connect all the wires by parallel with splicing connector ⑥ (all live line-L use one connector, and neutral Line-N use another connector).

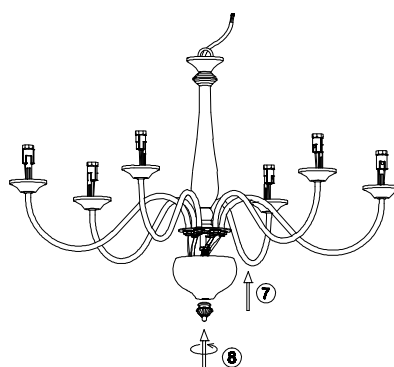

2. Install the bottom box ⑦ to the fixture ① with end cap ⑧.

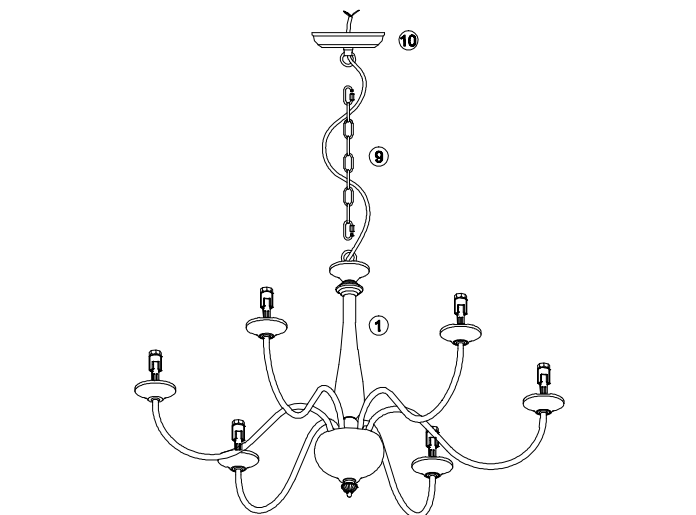

3. Hang the fixture ① to the canopy ⑩ with chain ⑨, let the wire go through the chain ⑨ and canopy ⑩.

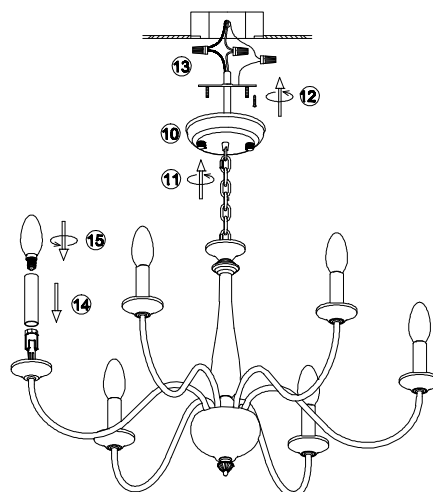

4. Install the bracket to the ceiling junction box with screw ⑫.
5. Connect the wire to your home line with cap connector ⑬.
6. Install the fixture to the bracket with cap nut ⑪.
7. Put the cylinder tube ⑭ on the bulb holder and install the bulb ⑮.

**Please read carefully before installation!!!**

**Note : Please make sure that the electricity is powered off during installation !**

**Only a professional electrician should install this kind of product !**