

PLEASE DO NOT RETURN TO STORE


User Manual
ASSEMBLY INSTRUCTION

N2802 1.8M Left



Please do not return this product to the retailer!
We are able to assist you in ANY way!


If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

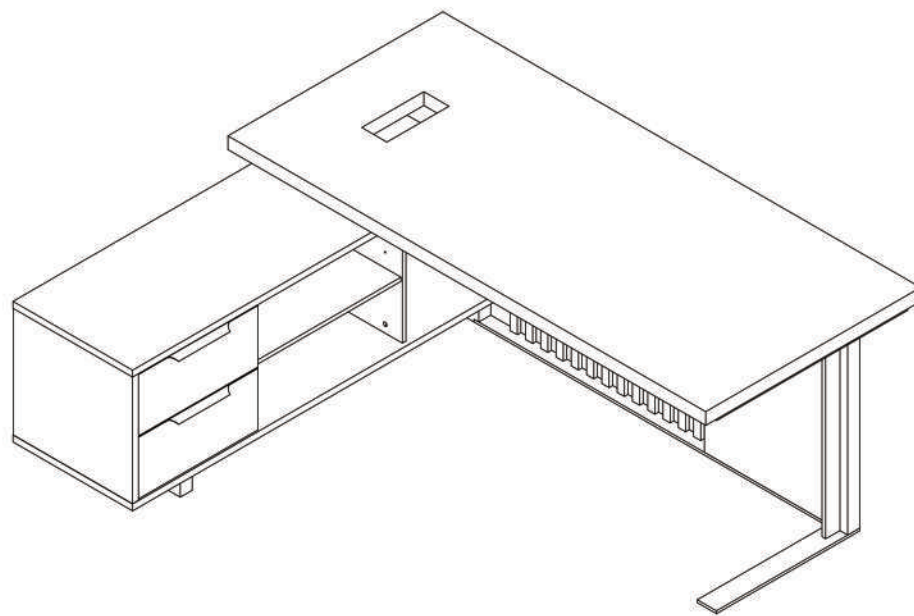

QR code for product installation video



Parts List

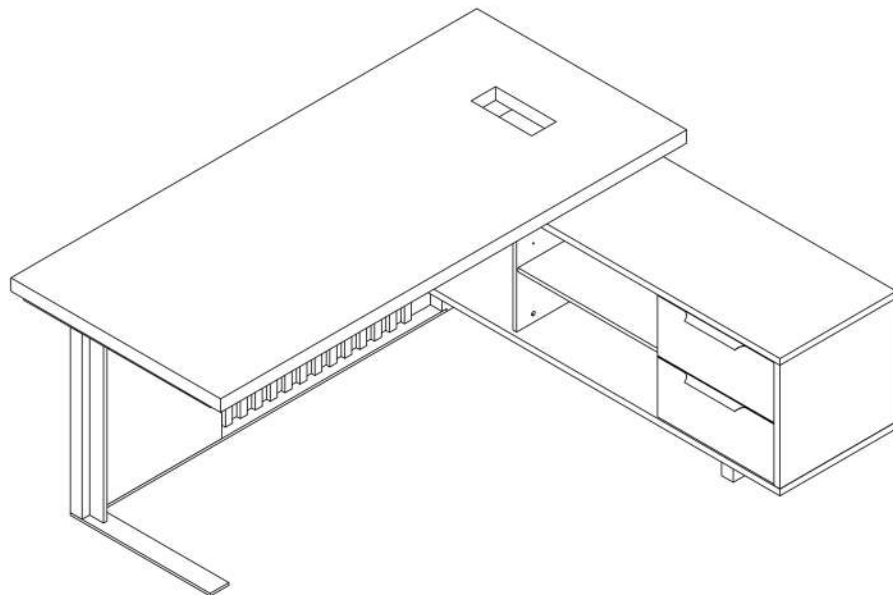

NO.	Drawing	Dimension	QTY
1		1800*900*50mm	1
2		700*600*50mm	1
3		1498*100*50mm	1
4		698*300*15mm	1
5		1800*500*25mm	1
6		1800*500*25mm	1
7		460*498*25mm	1
8		460*465*15mm	1
9		618*460*15mm	1
10		460*465*15mm	1
11		460*120*15mm	1
12		460*498*25mm	1
13		1748*460*15mm	1
14		460*260*15mm	1


NO.	Drawing	Dimension	QTY
15		400*100*50mm	1
16		400*100*50mm	1
17		400*100*50mm	1
18		400*100*50mm	1
19		500*225*15mm	2
20		350*140*15mm	2
21		350*140*15mm	2
22		431*140*15mm	2
23		441*344*4mm	2
24		1285*600*80*10mm	1
25		800*80*10mm	1
26		690*60*15mm	1
27		600*30*15mm	10



Hardware Fitting

NO.	Drawing	QTY
A		50
B		50
C		4
D		28
E		18
F		2
G		26
H		4
I		4
J		4




NO.	Drawing	QTY
K		2
L		6
M		6
N		6
O		4
P		1
Q		2
R		1
S		1

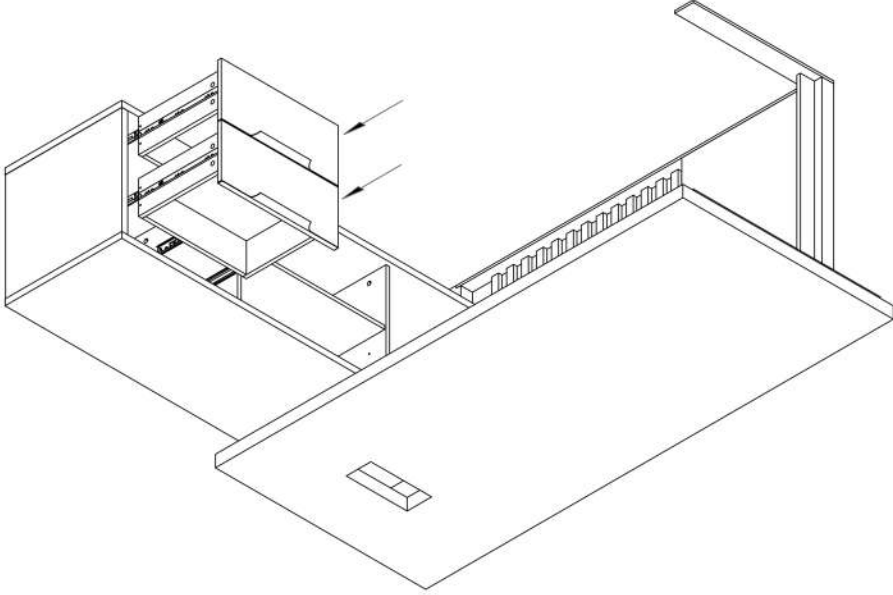

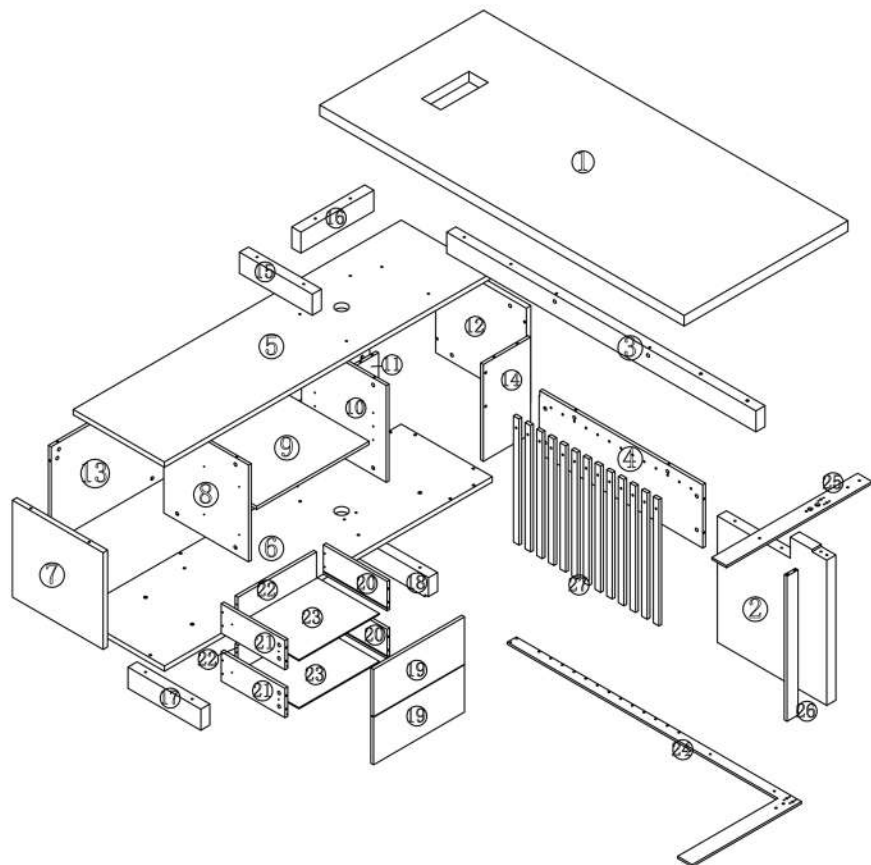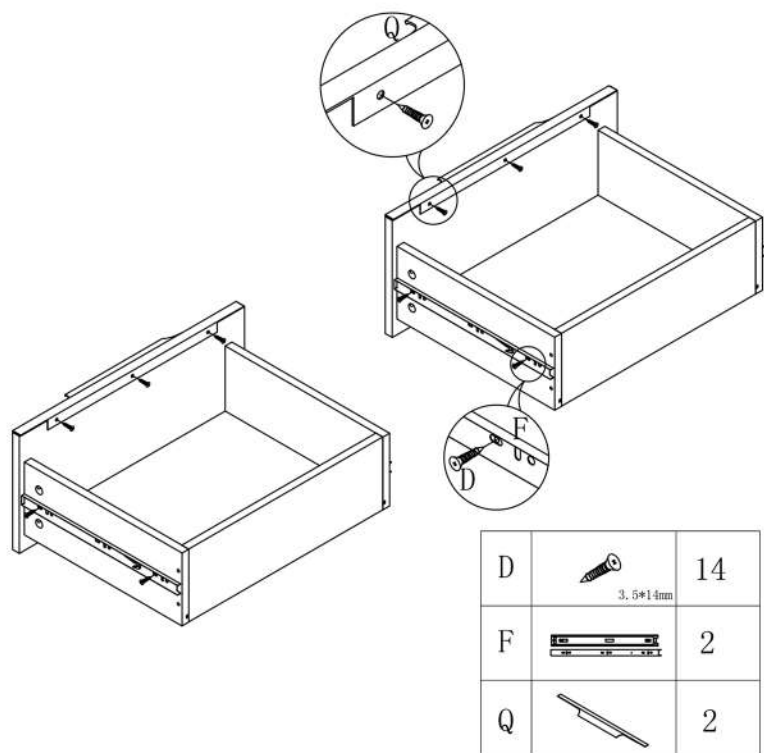

Cam Coupling Using Methods


Step1. Connect the cam coupling A as directed in the assembly instructions using hand.




Step2. Screw the cam coupling A as directed in the assembly instructions.



Step3. Push the cam coupling A into the entry hole.




Step4. Insert the cam coupling B as shown in the instructions.




Step5. Turn the cam coupling B clockwise with a screwdriver.



Step6. Put on Beautycam.



Step7. Finished.



You should feel a click when the camlock is locked in place. The joint is now secure.

