


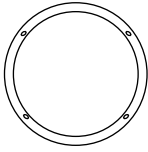
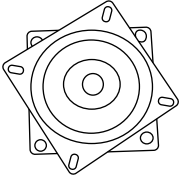





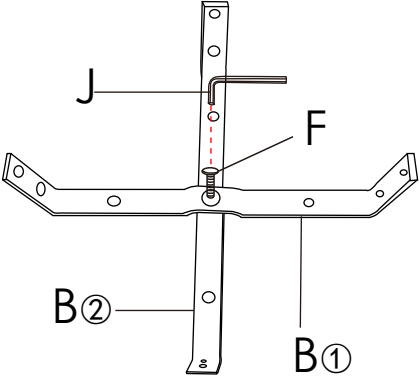



ASSEMBLY INSTRUCTION

<p>A x 1</p> 	<p>B x 2</p> 	<p>C x 4</p> 	<p>D x 1</p> 	<p>E x 1</p> 
<p>F x 5</p>  <p>M6x12mm</p>	<p>G x 4</p>  <p>M6x16mm</p>	<p>H x 8</p>  <p>M6x20mm</p>	<p>I x 4</p>  <p>M6x30mm</p>	<p>J x 1</p> 


①

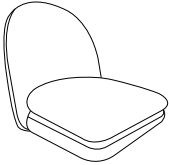


②

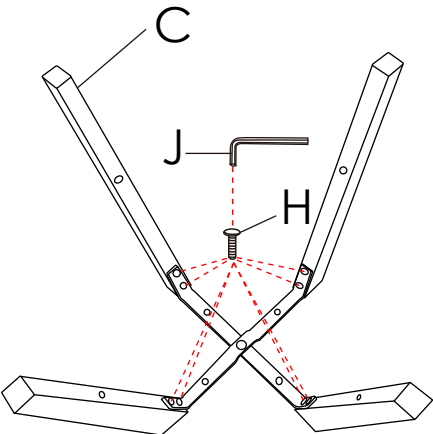


③

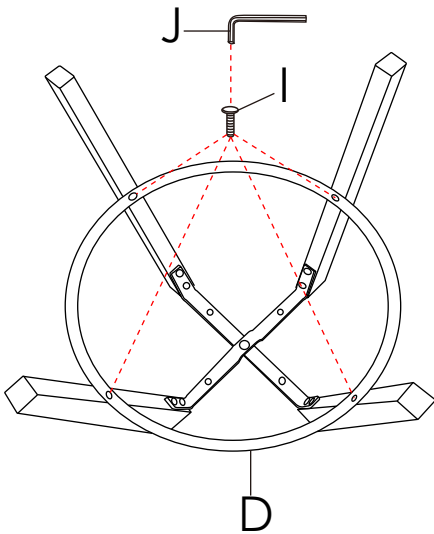


④

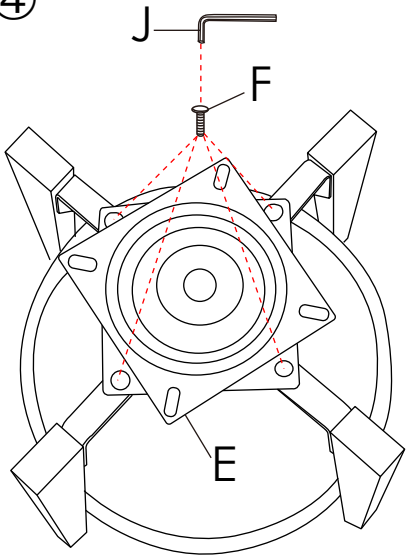

⑤

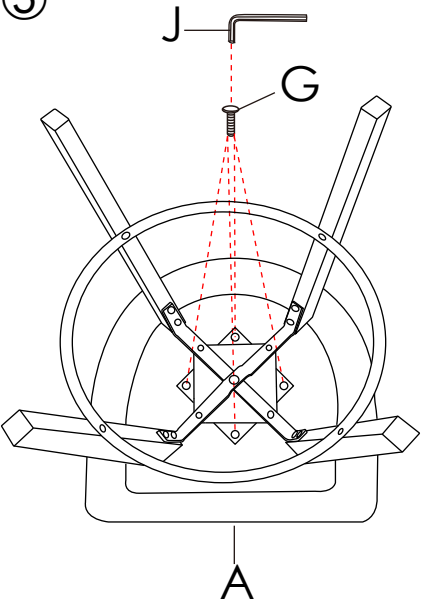

⑥

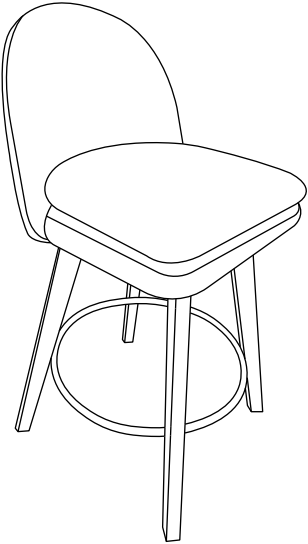

Tips: first tighten the screws 70% and finally tighten them all.