


PRODUCT NAME: INNERTUBE

Please consult your electrician for hanging fixture and wiring.

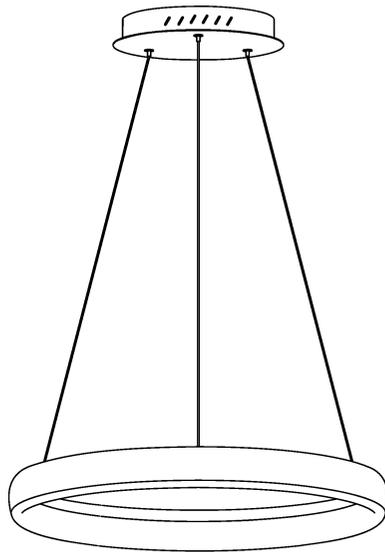

WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONNECT DIRECTLY TO POWER SOURCE OR A SHORT MIGHT OCCUR.

This fixture is designed to dim with standard triac forward phase dimmer. Dimming levels will vary by dimmer.


Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

Bulb (integrated): 45 Watts LED

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



Bracket (A)




Canopy (B)




Body (C)

Locate all hardware & components before discarding packaging

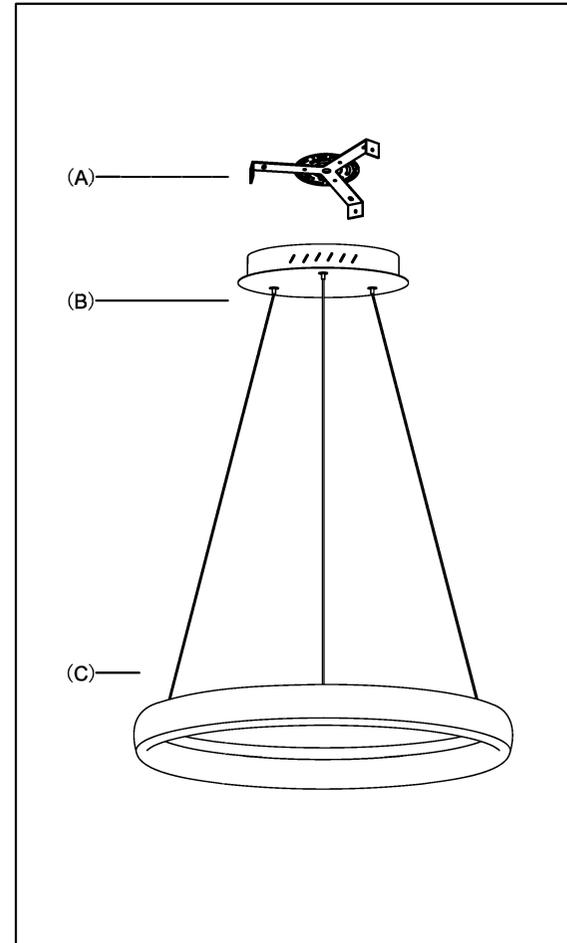


1.)

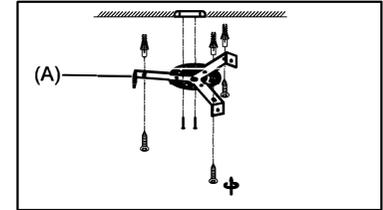


Step. 1: Remove Bracket (A) from fixture and install to electrical box.

2.)

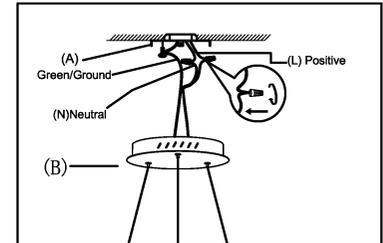

Step. 2: Wire fixture to wires in outlet box. Install Green wire to Ground Screw.

3.)

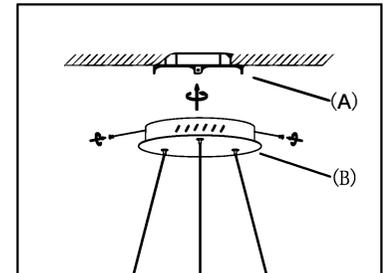

Step. 3: Adjust wire length to desired hanging height. Install Canopy (B) to Bracket (A) and tighten screws at the end of canopy to secure.

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.