


Assembly Instructions

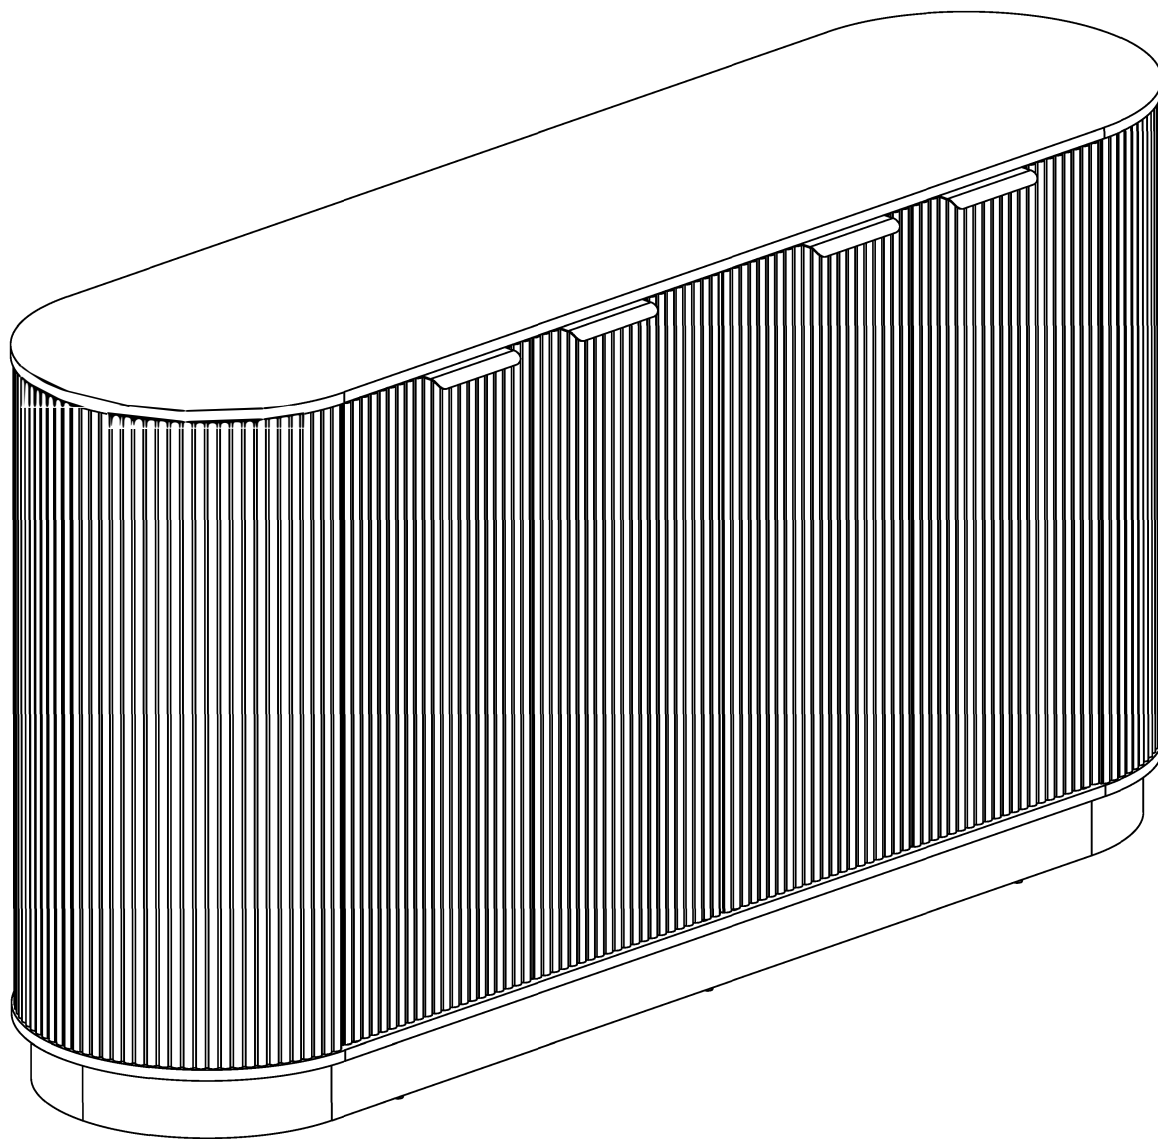


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

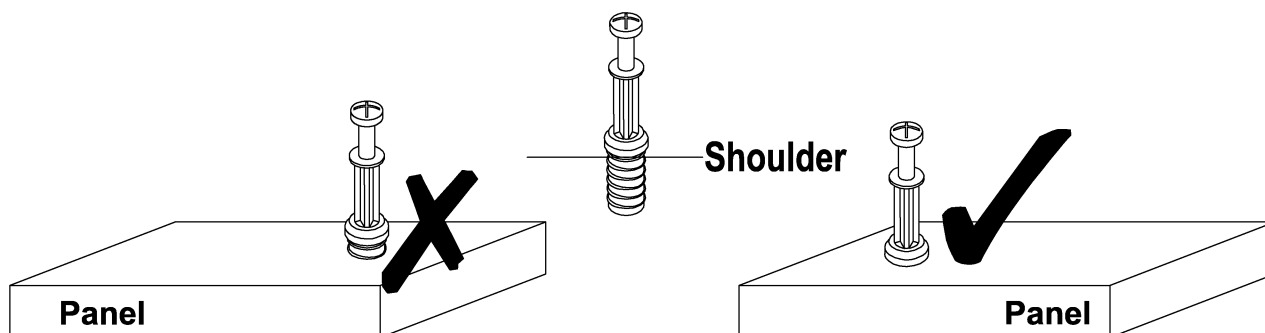

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

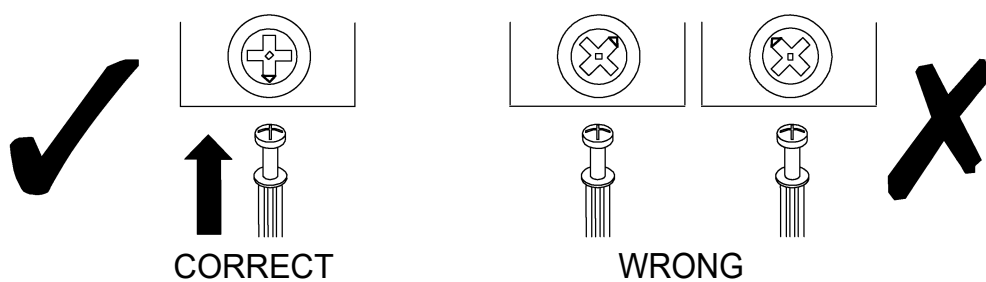

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT
















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

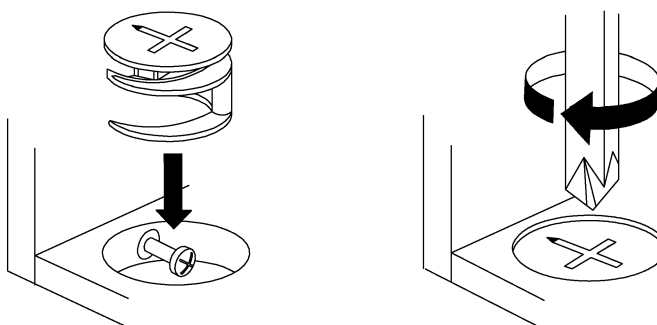


Turn cam lock clockwise to tighten.



Part List

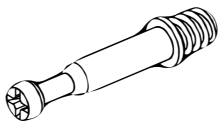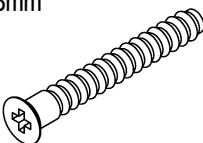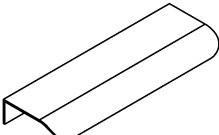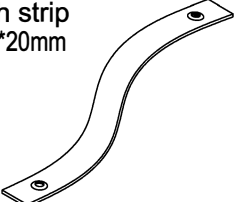No. A Quantity: 30+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 30+1 PCS Cam ø15x9.5mm 	No. C Quantity: 30+1 PCS Sticker ø20mm 	No. D Quantity: 28+1 PCS Dowel ø6x30mm 
No. E Quantity: 32+2 PCS Screw ø3.5x12mm 	No. F Quantity: 12+1 PCS Screw ø3x16mm 	No. G Quantity: 4 PCS Screw ø3x14mm 	No. H Quantity: 18+1 PCS Screw ø5x38mm 
No. I Quantity: 16+1 PCS ø5x16mm 	No. J Quantity: 8 PCS Rotating Shaft ø10x23mm 	No. K Quantity: 12 PCS plastic buckle 15*15*10mm 	No. L Quantity: 6 PCS Iron Plate 36x16mm 
No. M Quantity: 4 PCS Iron Plate 19x19*18mm 	No. N Quantity: 4 PCS Magnet 45*12mm 	No. O Quantity: 2 PCS Magnet 60x16*16mm 	No. P Quantity: 4 PCS Handle 38x15*120mm 
No. Q Quantity: 2 PCS plastic plug Ø8*40 	No. R Quantity: 2 PCS Screw Ø4*38 	No. S Quantity: 2 PCS Screw ø4x16mm 	No. T Quantity: 2 PCS Cloth strip L193*20mm 


Product structure

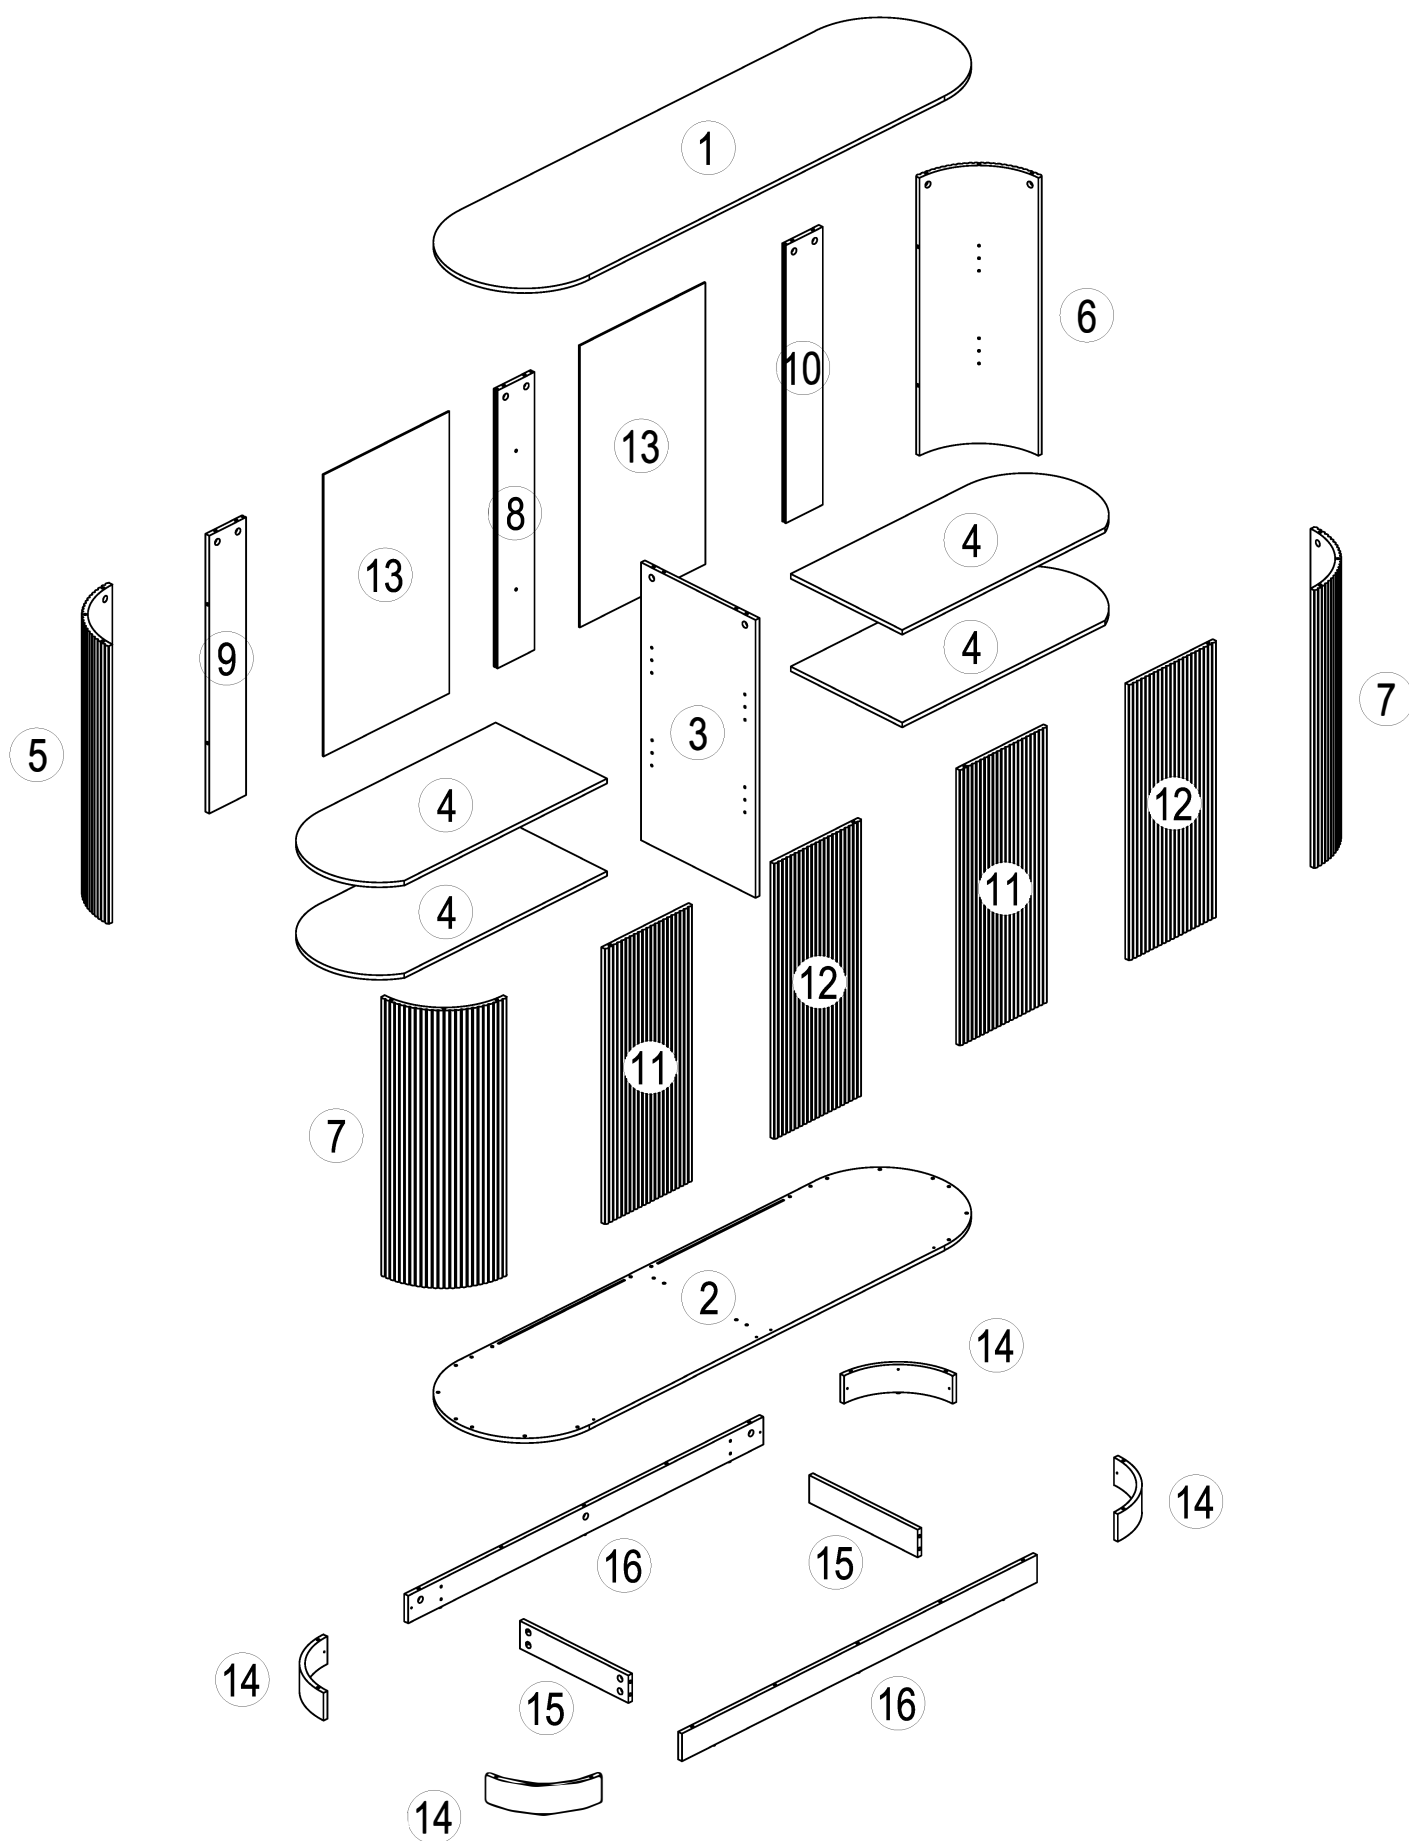

STEP 1

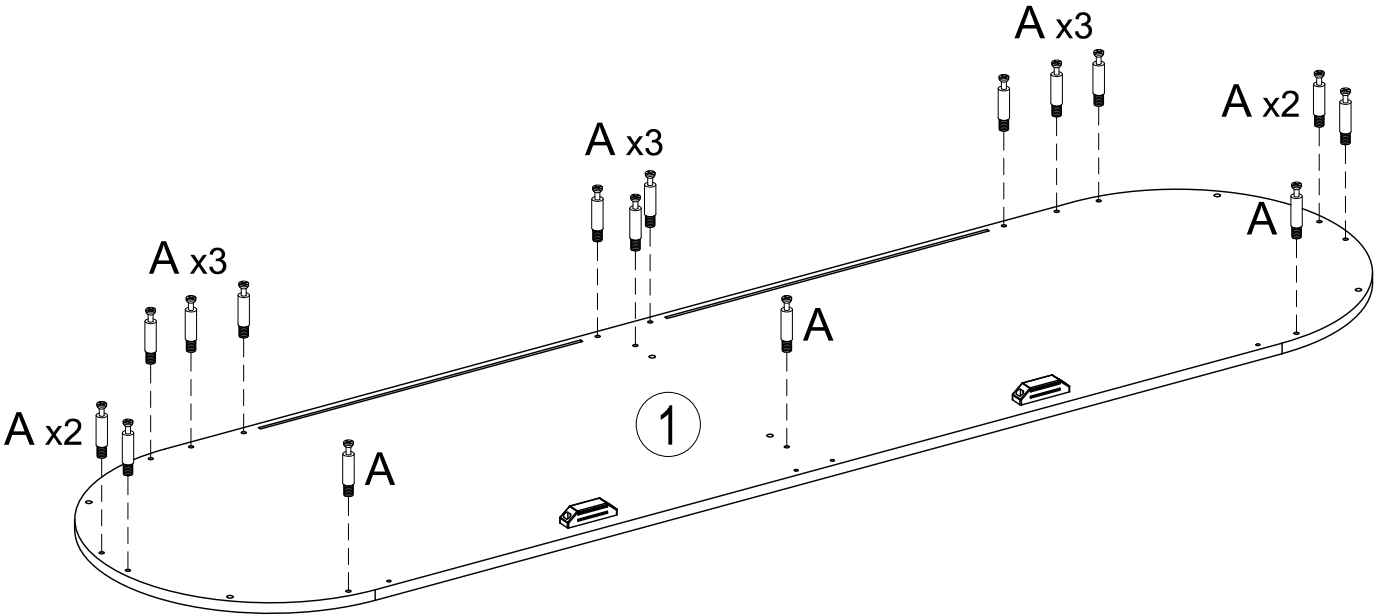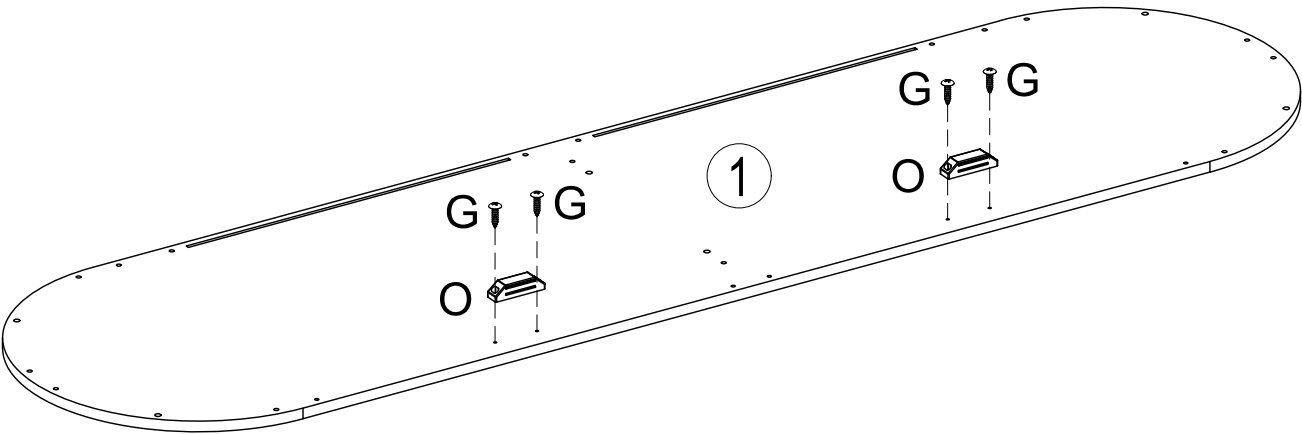


No. A
Quantity: 16 PCS
Cam Bolt
ø6x33.5mm





No. G
Quantity: 4 PCS
Screw
ø3x14mm




No. O
Quantity: 2 PCS
Magnet
60x16*16mm




STEP 2

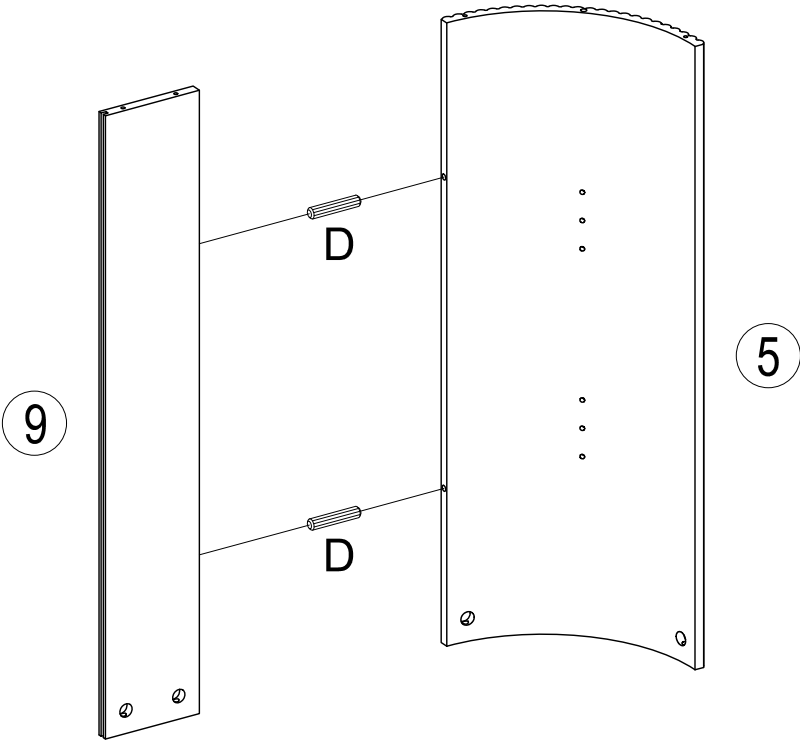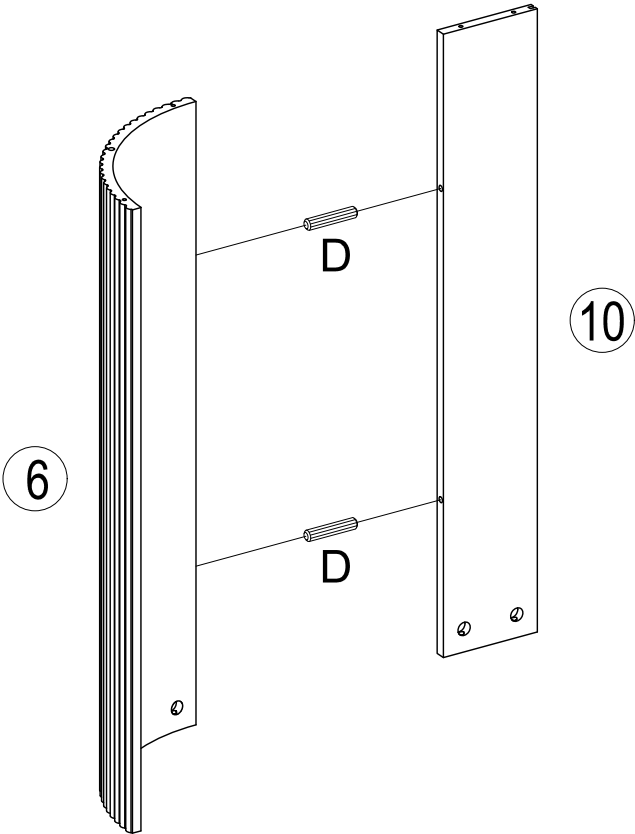


No. D
Quantity: 4 PCS
Dowel
ø6x30mm



STEP 3

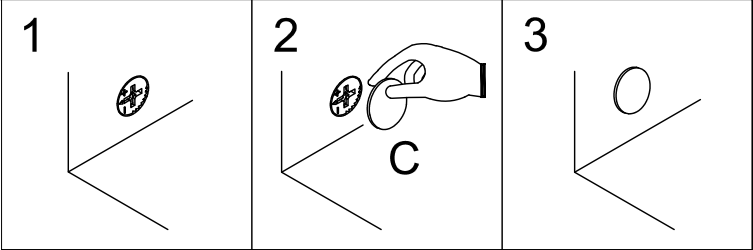

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

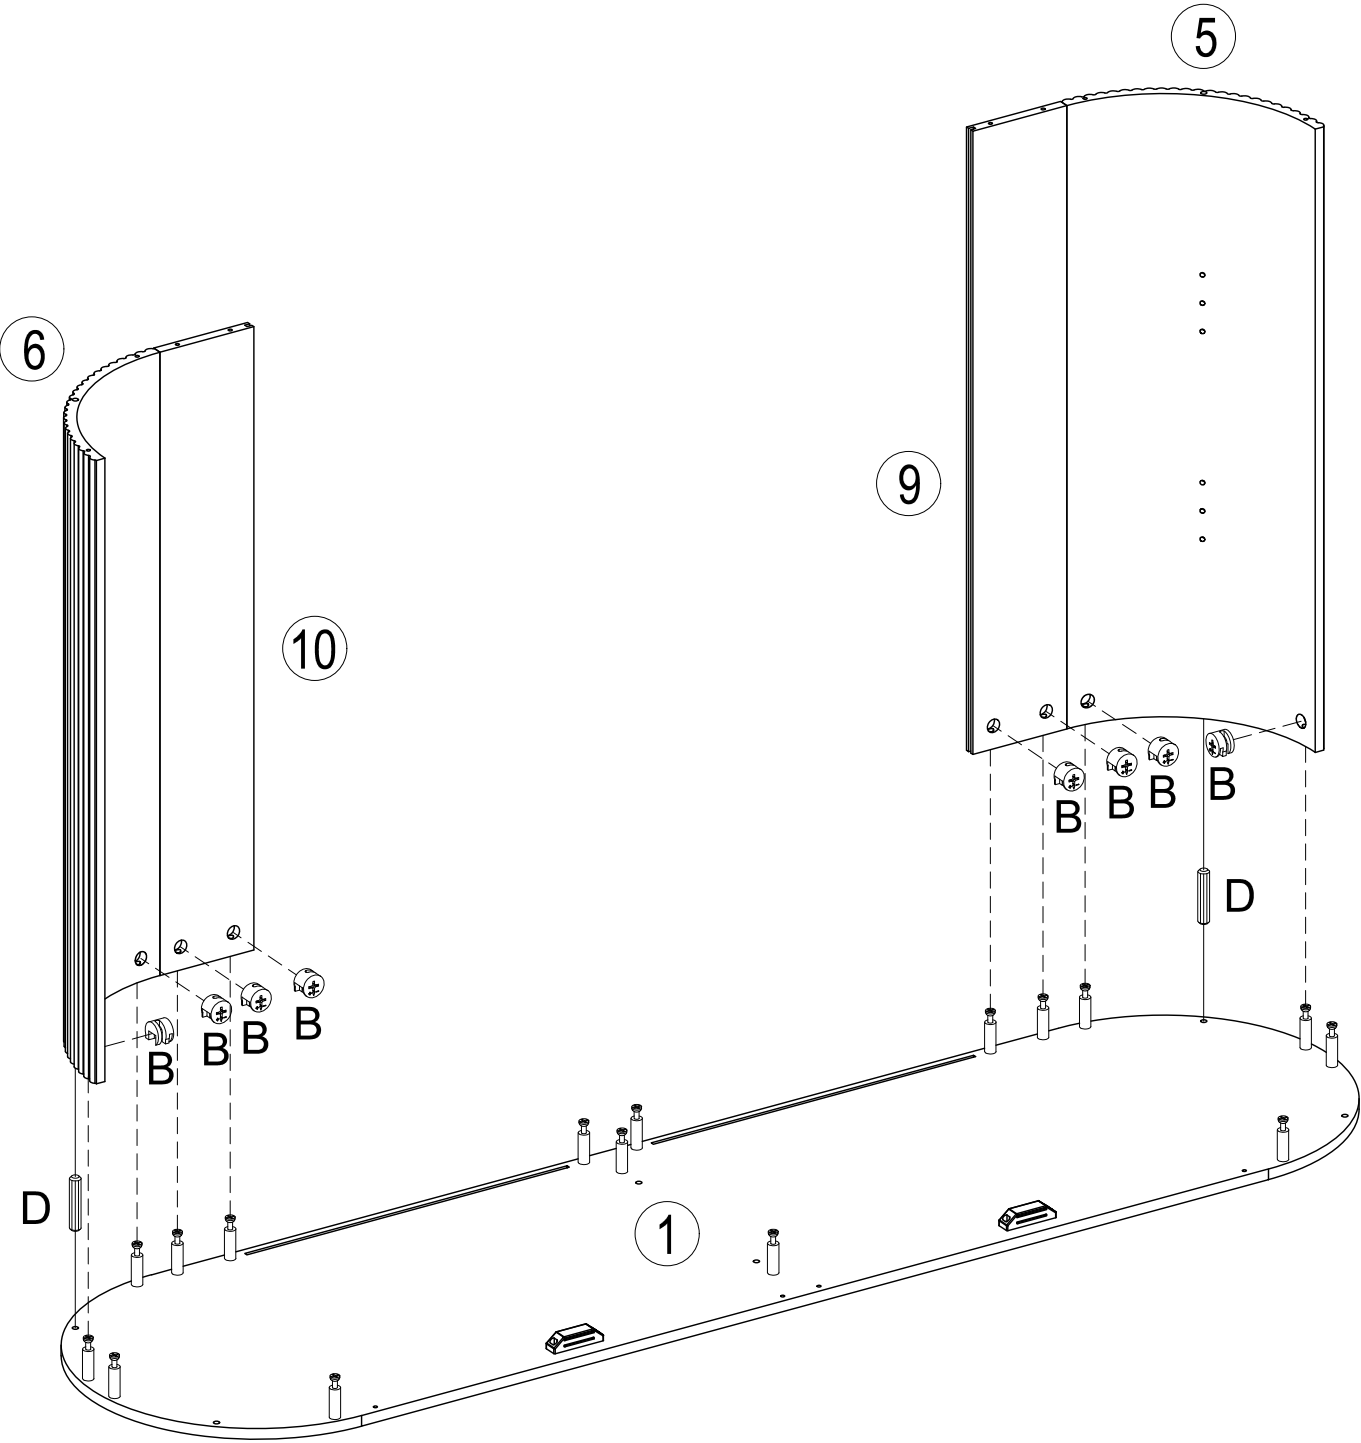


No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. C
Quantity: 8 PCS
Sticker
ø20mm




No. D
Quantity: 2 PCS
Dowel
ø6x30mm



STEP 4

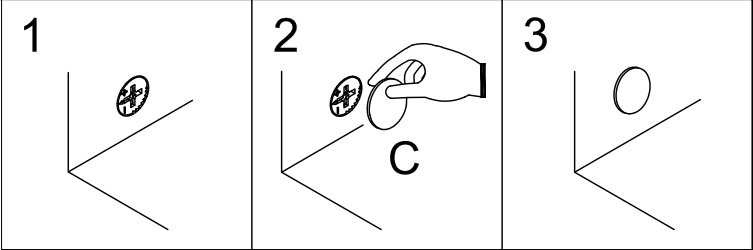

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better.
(There are as many Cs as there are Bs.)

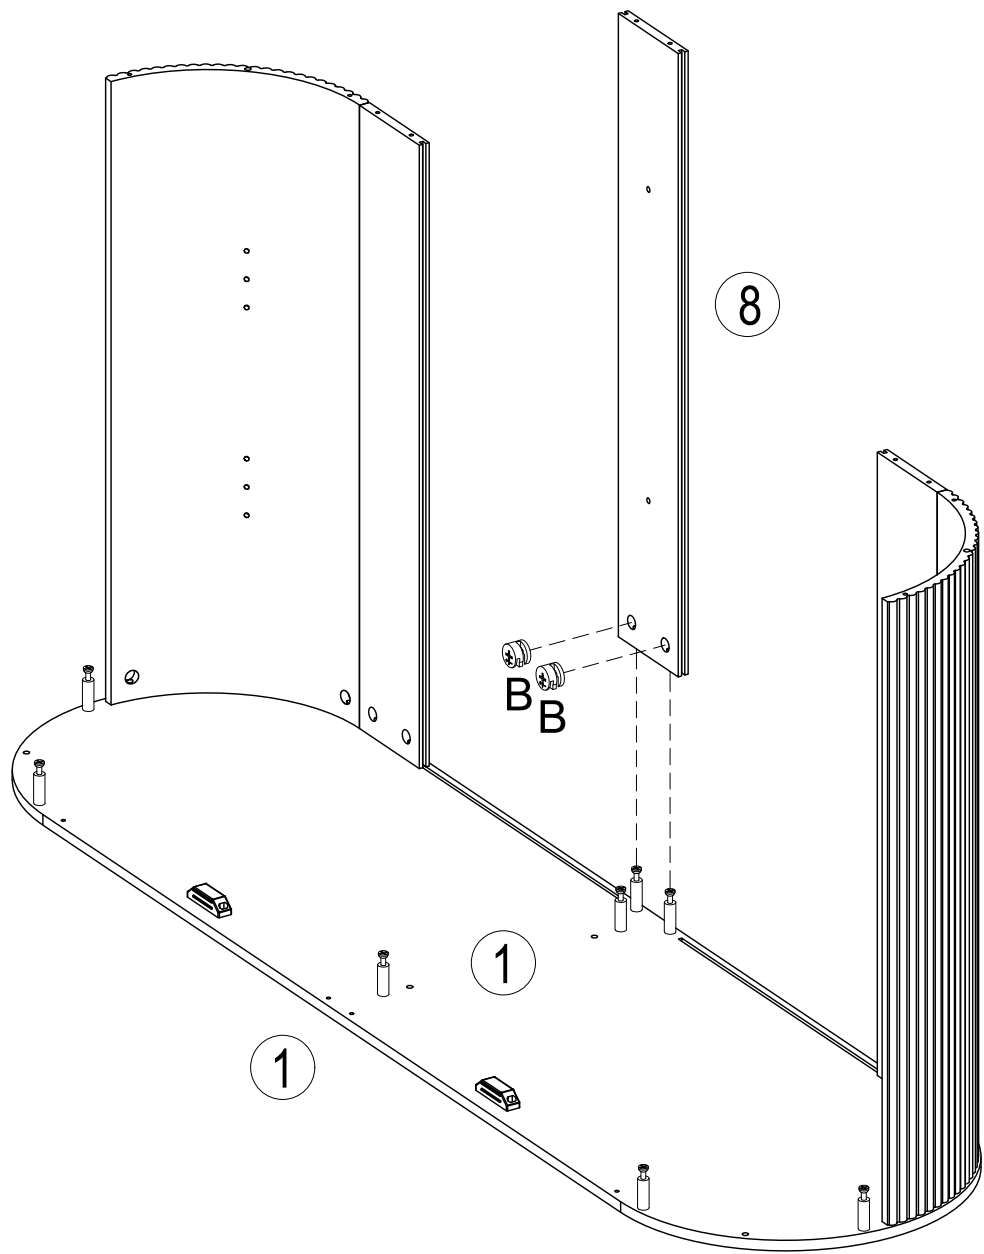

No. B

Quantity: 2 PCS
Cam
ø15x9.5mm




No. C


Quantity: 2 PCS
Sticker
ø20mm



STEP 5

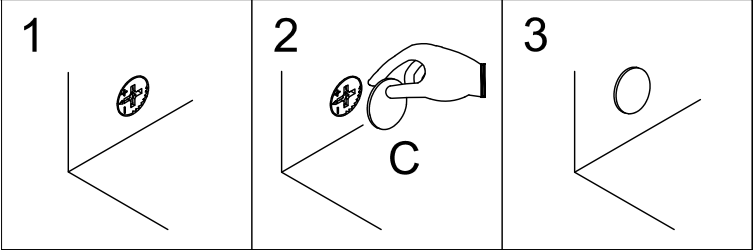

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

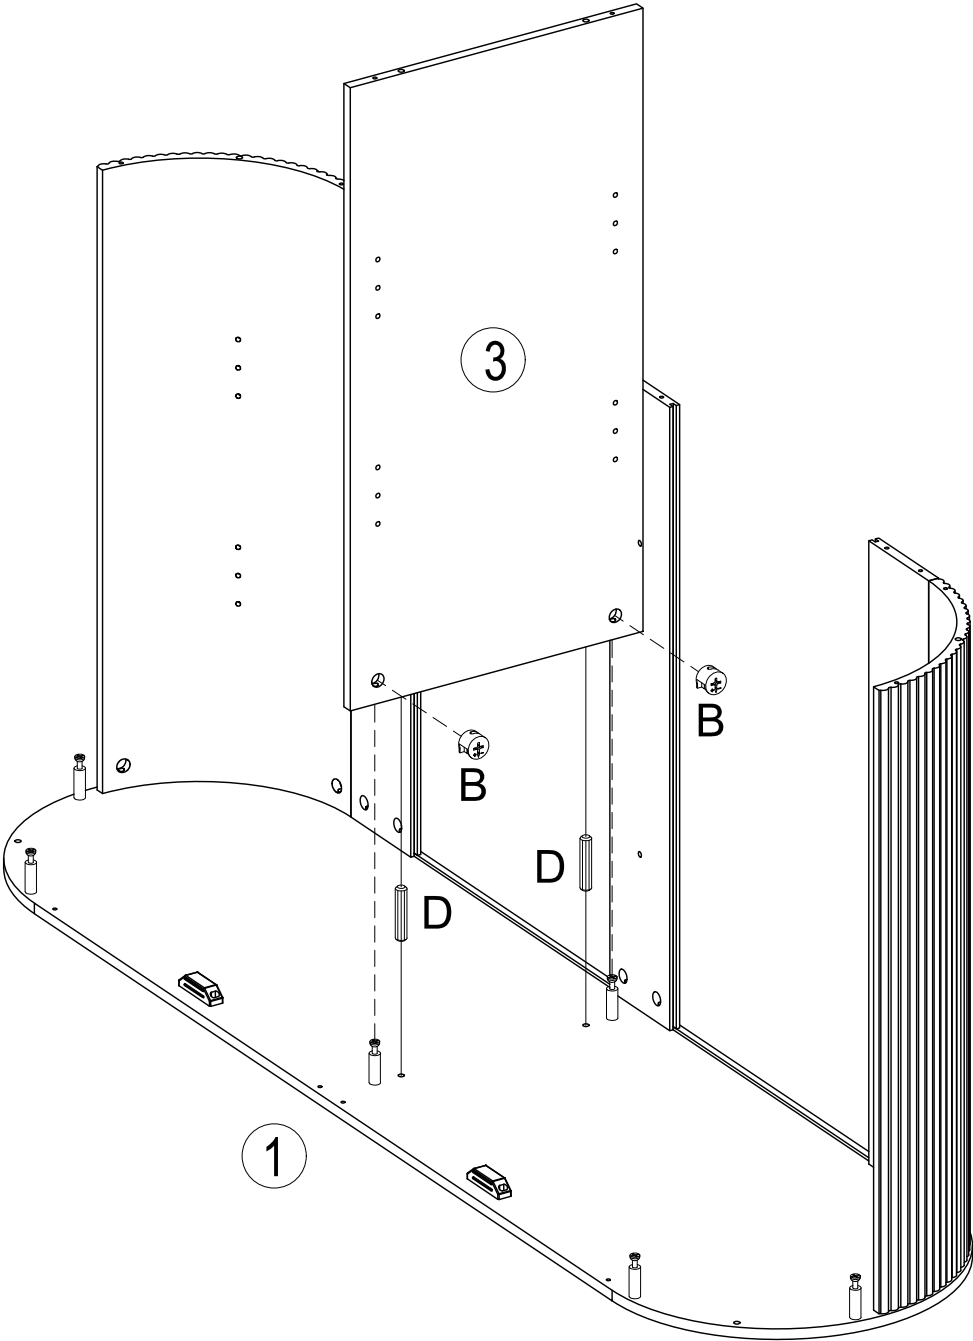


No. B
Quantity: 2 PCS
Cam
ø15x9.5mm




No. C
Quantity: 2 PCS
Sticker
ø20mm



No. D
Quantity: 2 PCS
Dowel
ø6x30mm



STEP 6

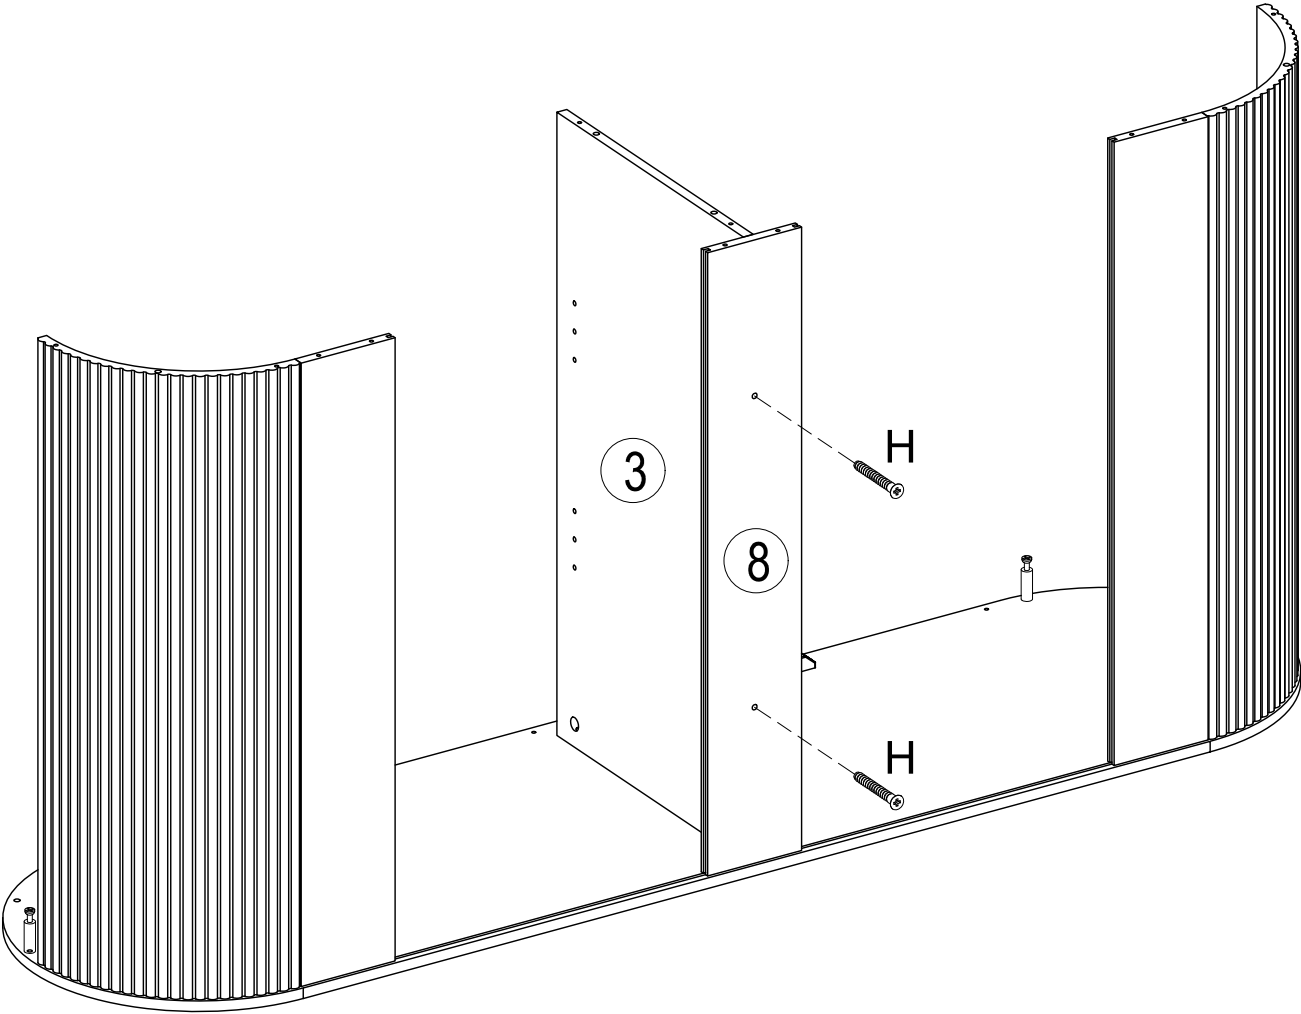


No. H


Quantity: 2 PCS

Screw


ø5x38mm



STEP 7

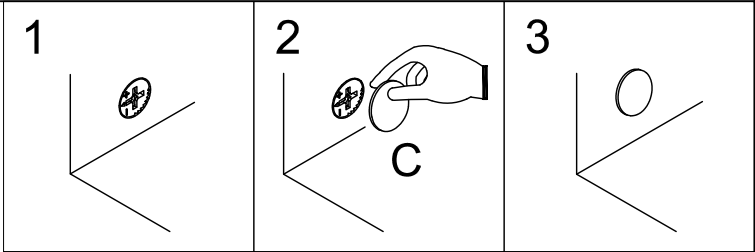

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

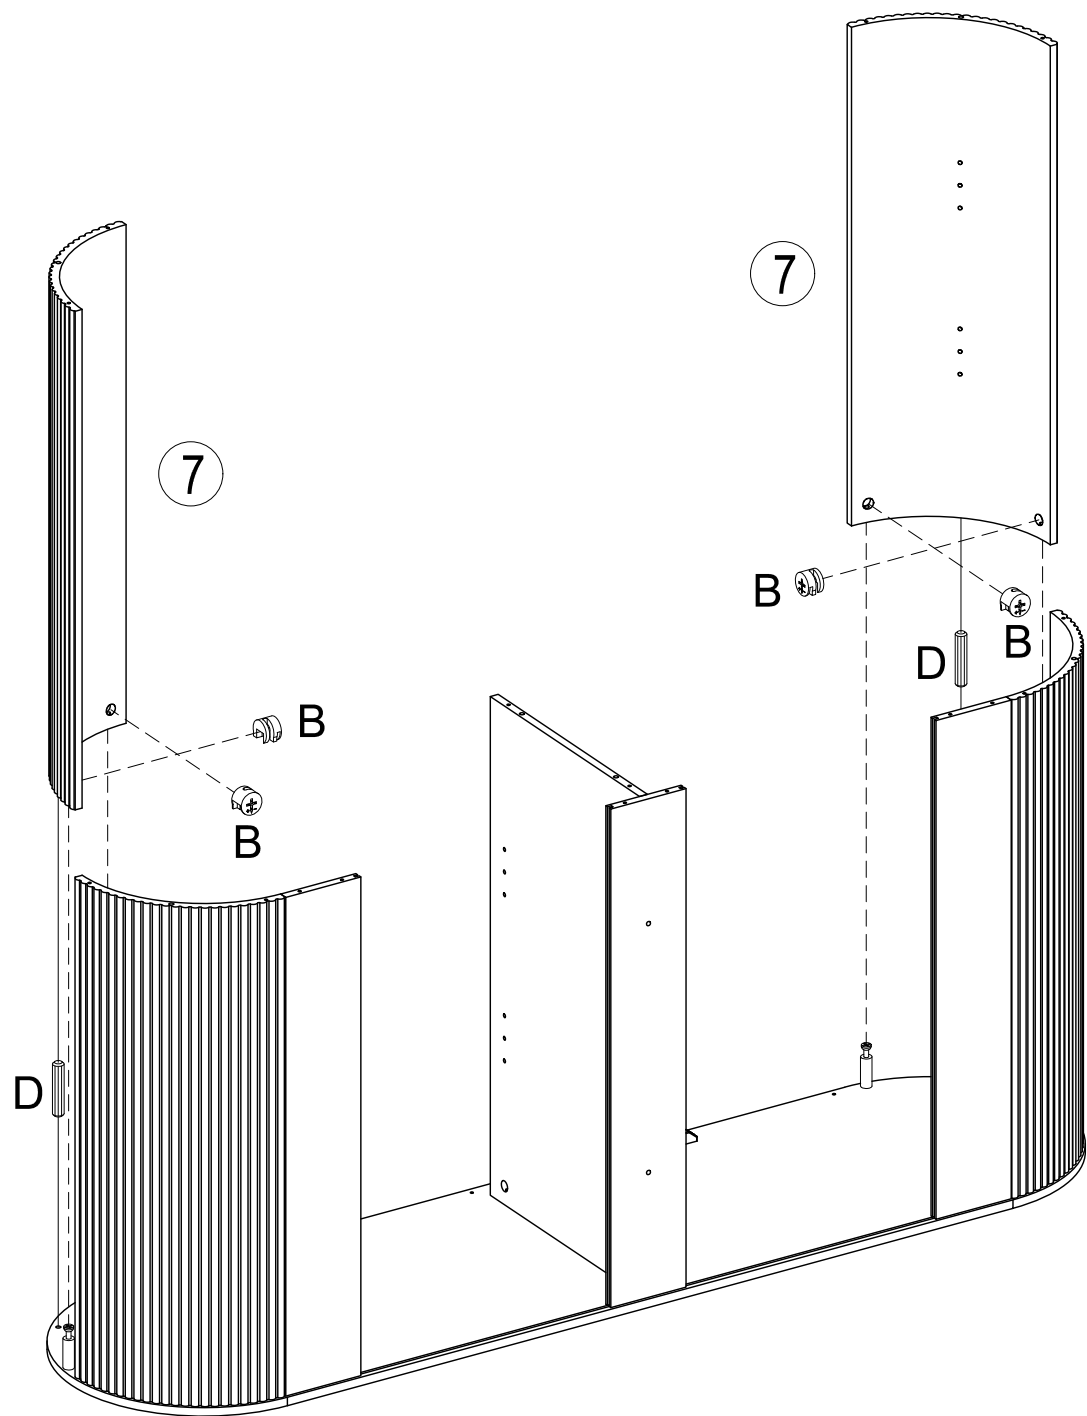

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. D


Quantity: 2 PCS
Dowel
ø6x30mm




STEP 8

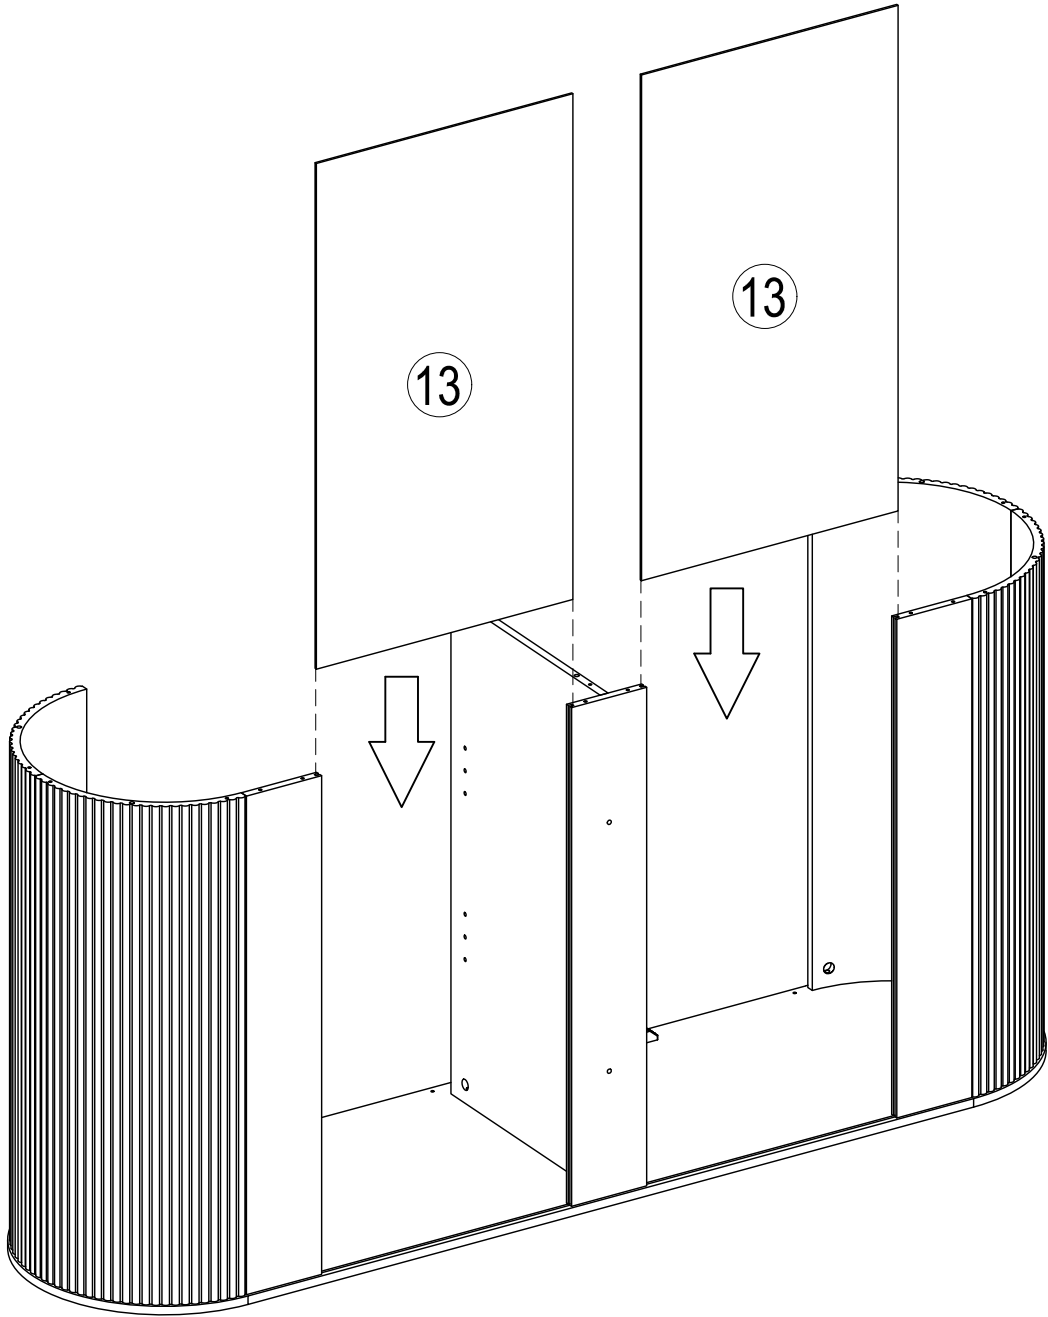


STEP 9

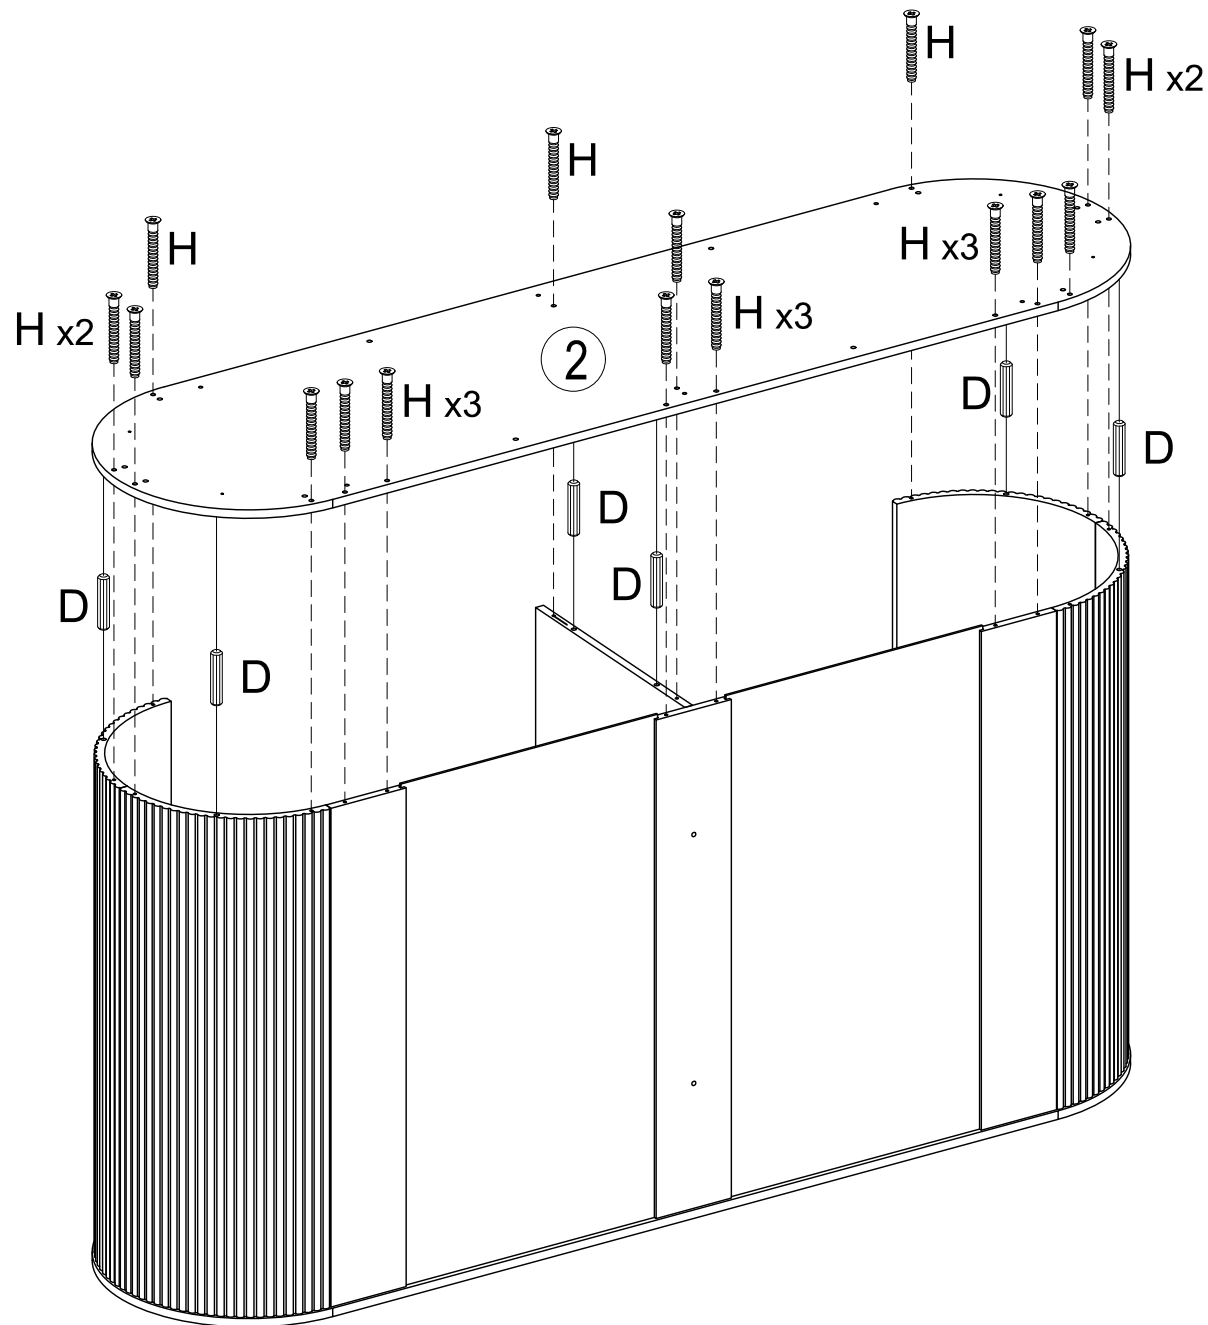

No. D
Quantity: 6 PCS
Dowel
ø6x30mm




No. H
Quantity: 16 PCS
Screw
ø5x38mm




STEP 10


Please Note: To ensure greater product stability, parts M and F must be installed according to the instructions. Failure to install them will cause the product to wobble.

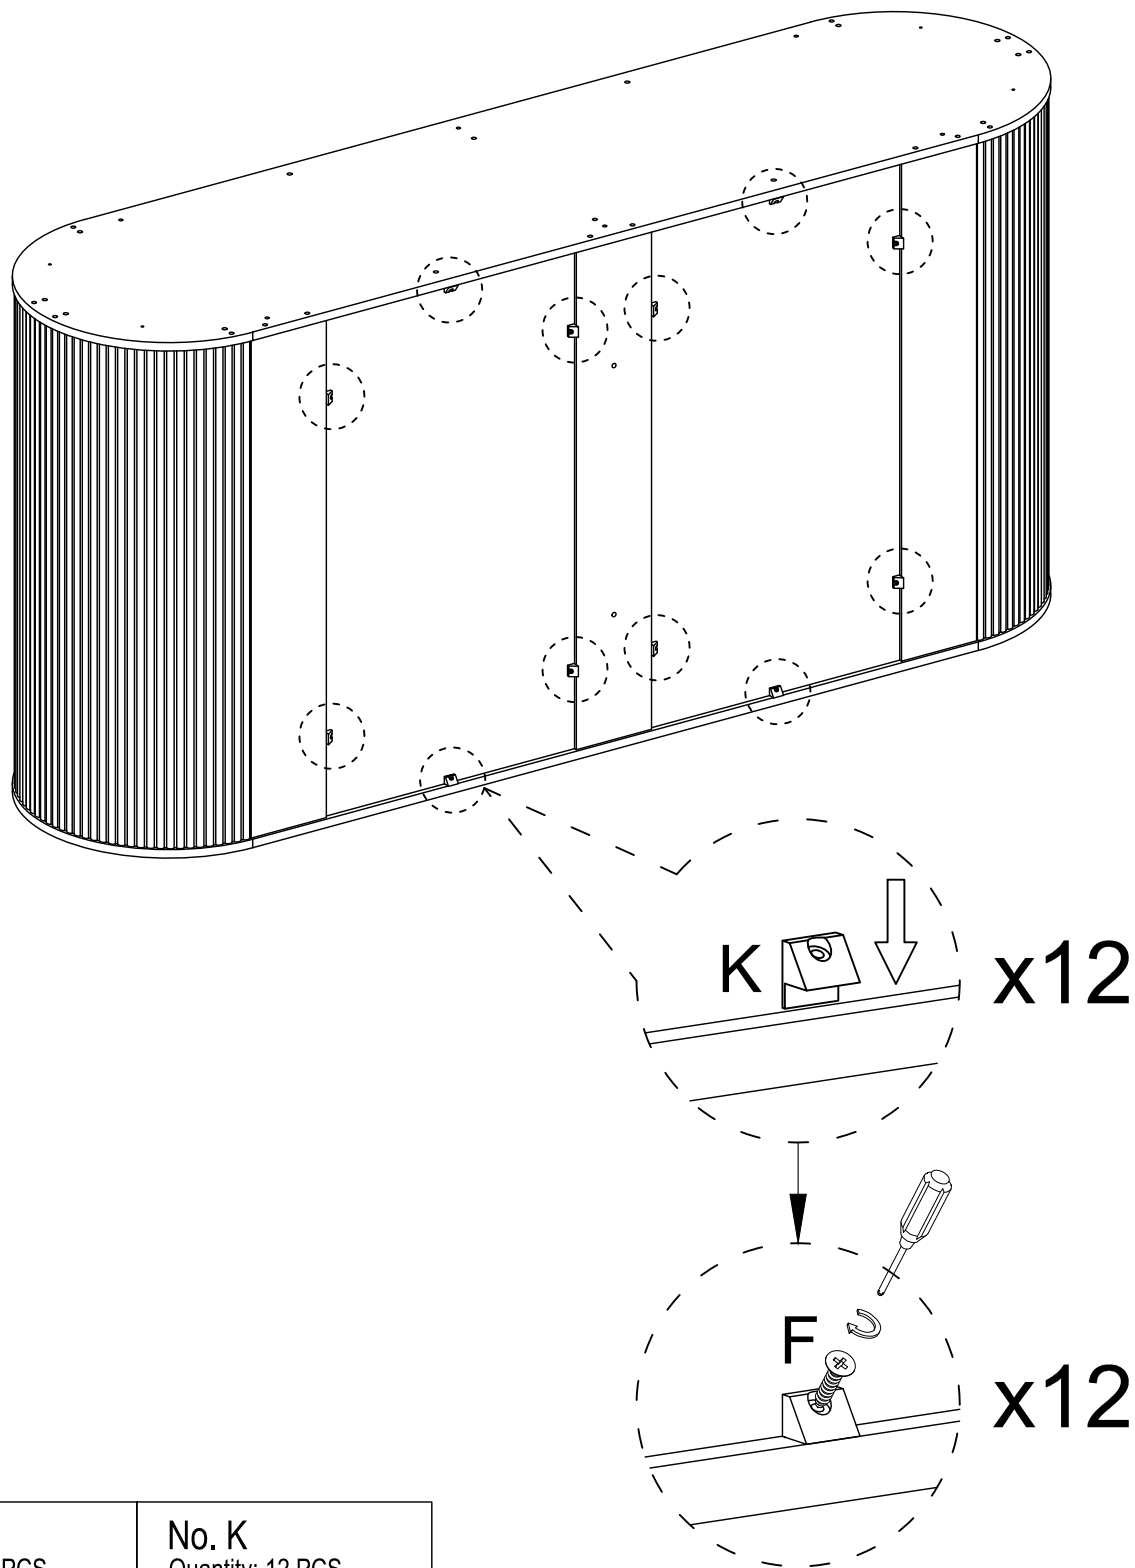


No. F
Quantity: 12 PCS
Screw
ø3x16mm




No. K
Quantity: 12 PCS
plastic buckle
15*15*10




STEP 11

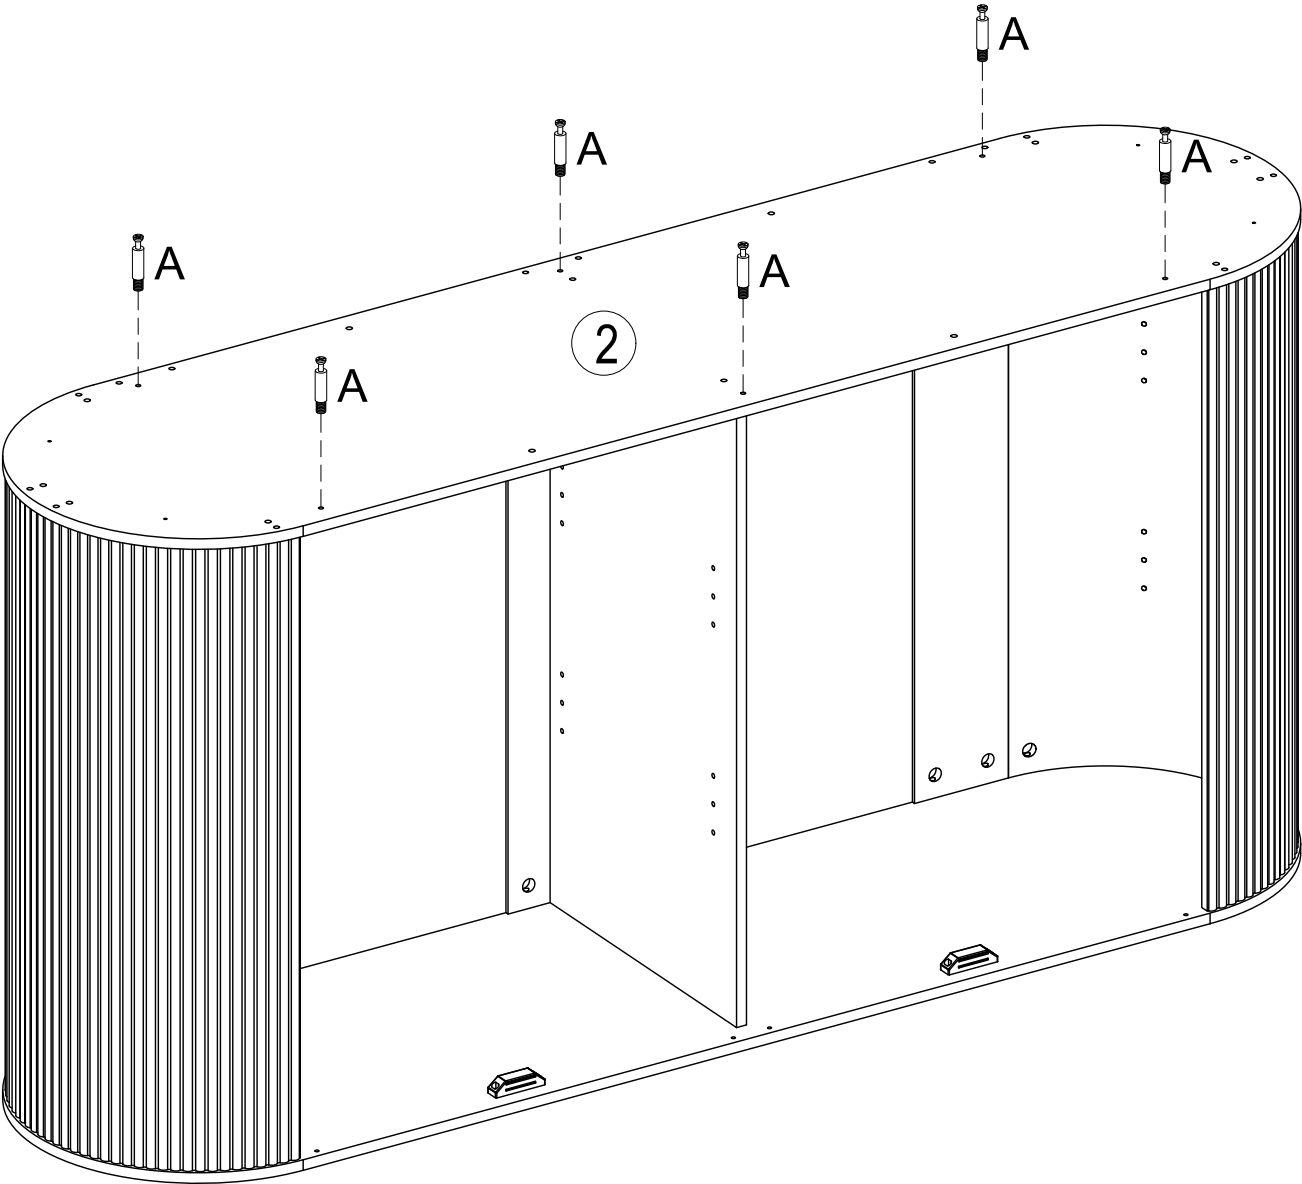


No. A
Quantity: 6 PCS
Cam Bolt
ø6x33.5mm




STEP 12

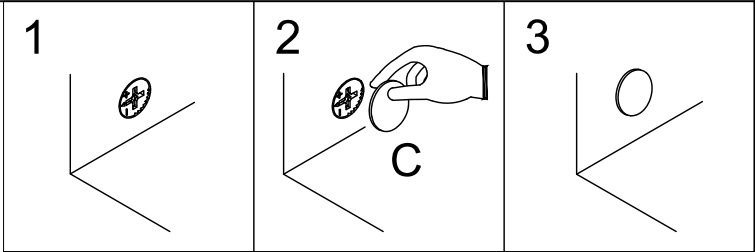


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

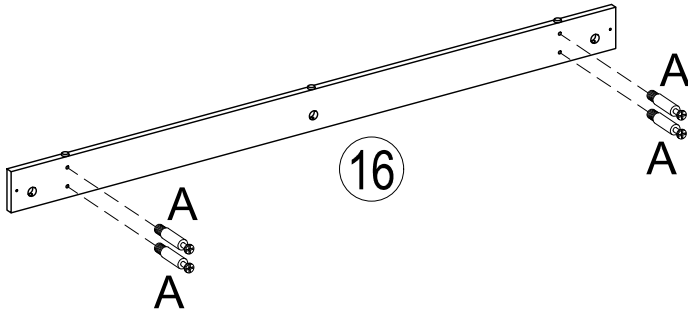

x2

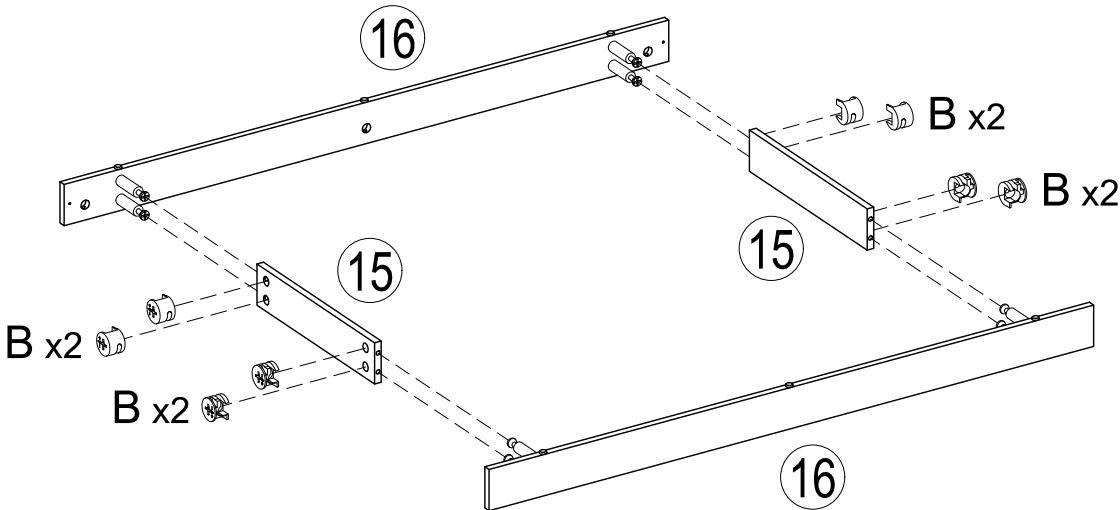

No. A
Quantity: 8 PCS
Cam Bolt
ø6x33.5mm




No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. C
Quantity: 8 PCS
Sticker
ø20mm



STEP 13

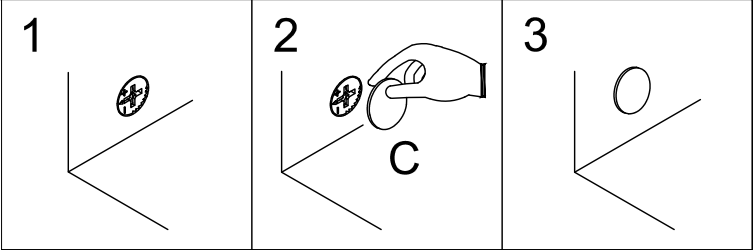

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

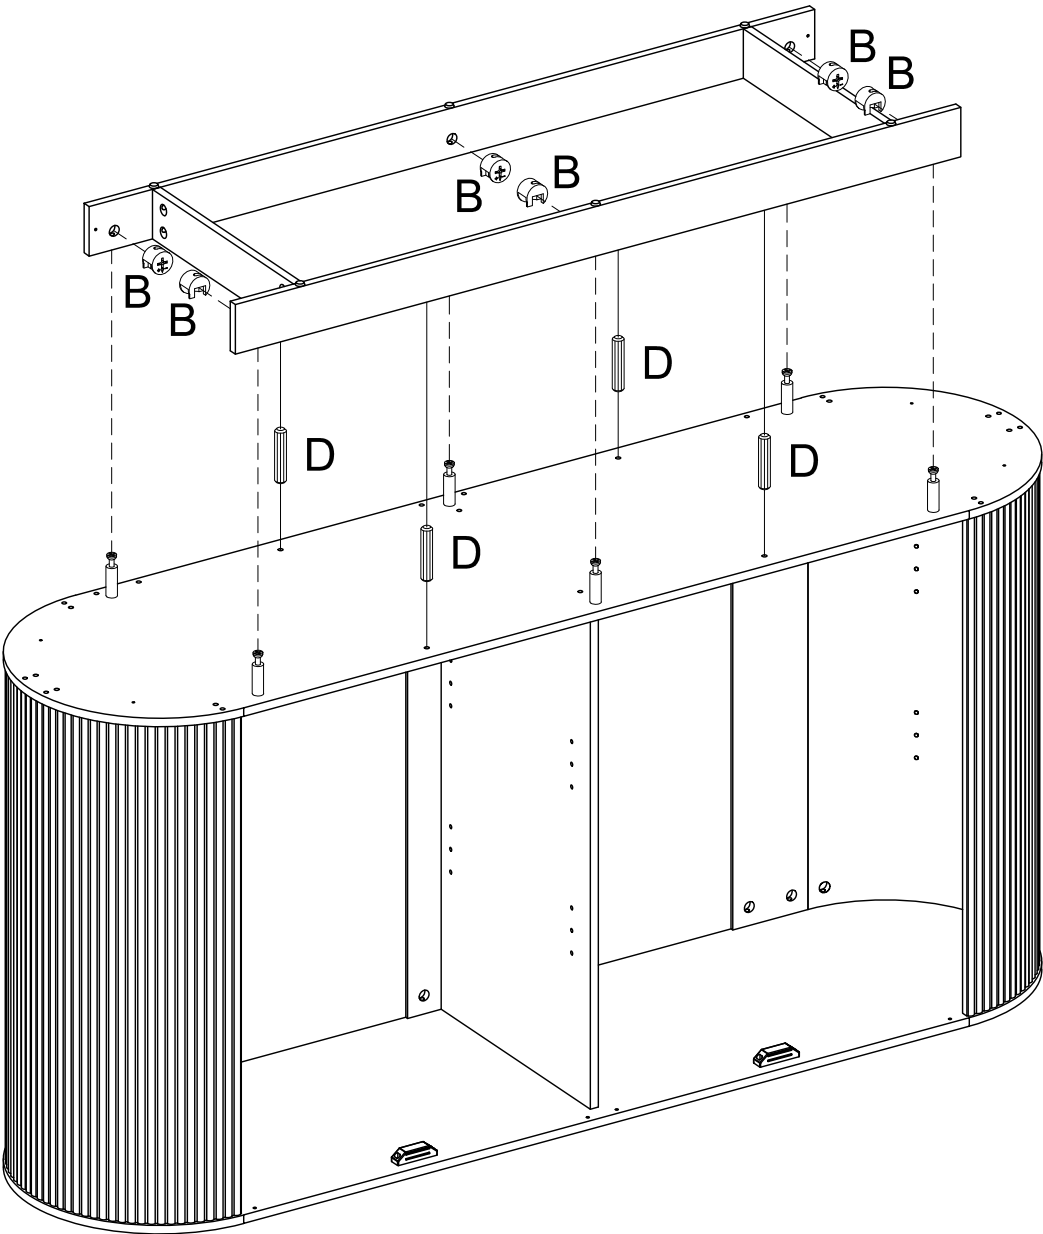

No. B

Quantity: 6 PCS
Cam
ø15x9.5mm




No. C

Quantity: 6 PCS
Sticker
ø20mm




No. D


Quantity: 4 PCS
Dowel
ø6x30mm





STEP 14

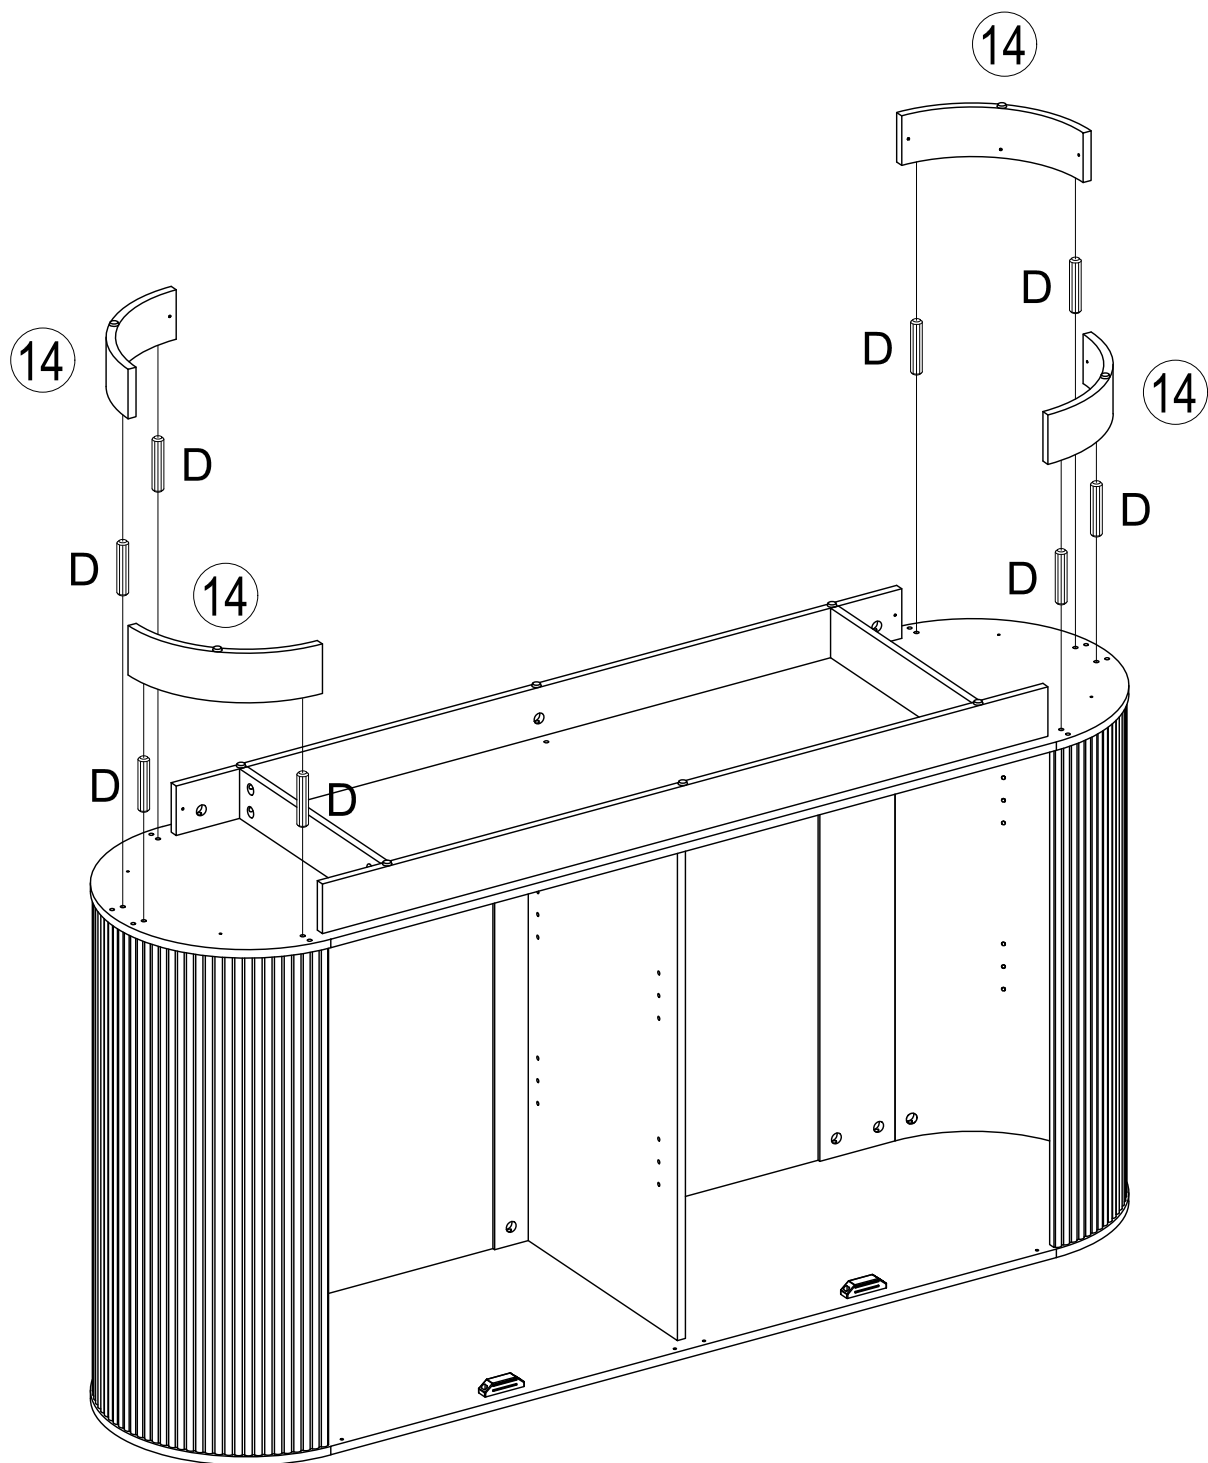

No. D
Quantity: 8 PCS
Dowel
ø6x30mm




STEP 15

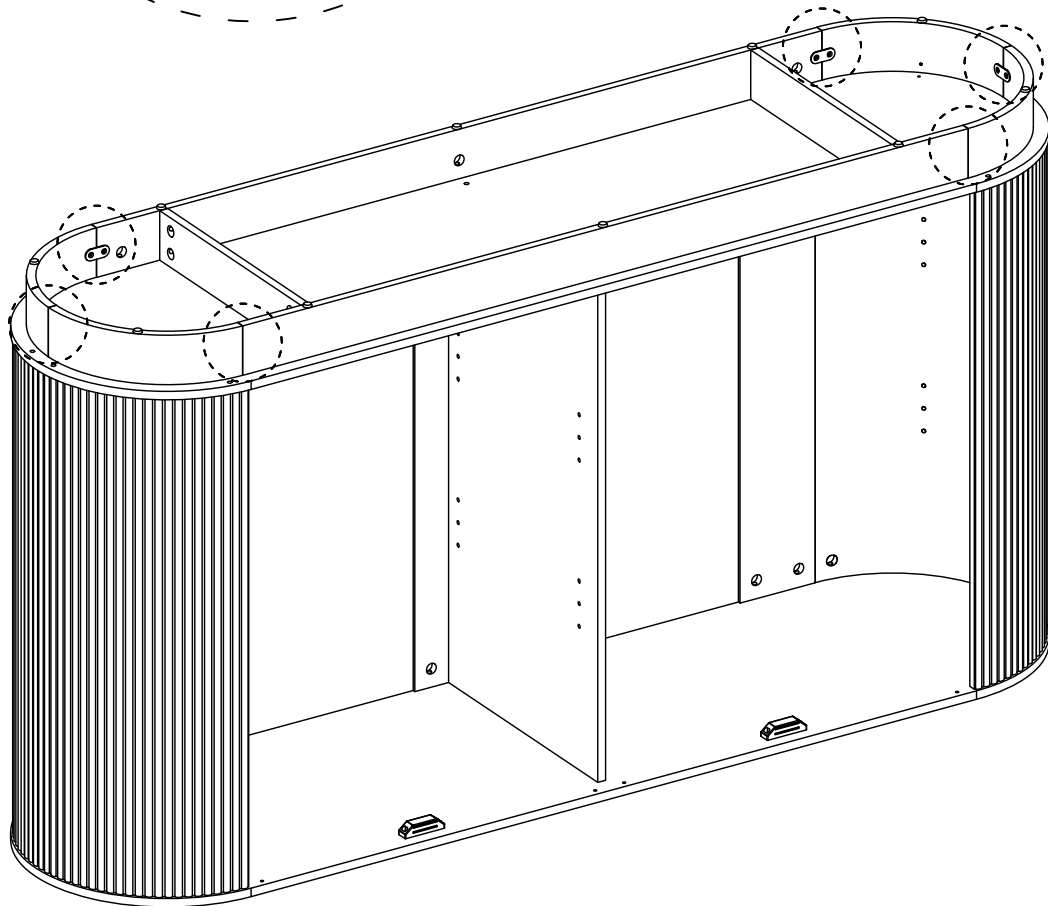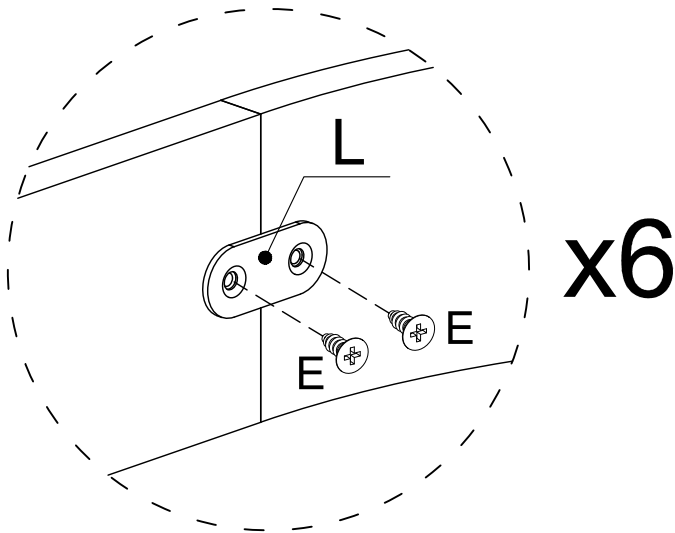


No. E
Quantity: 12 PCS
Screw
ø3.5x12mm



No. L
Quantity: 6 PCS
Iron Plate
36x16mm




STEP 16

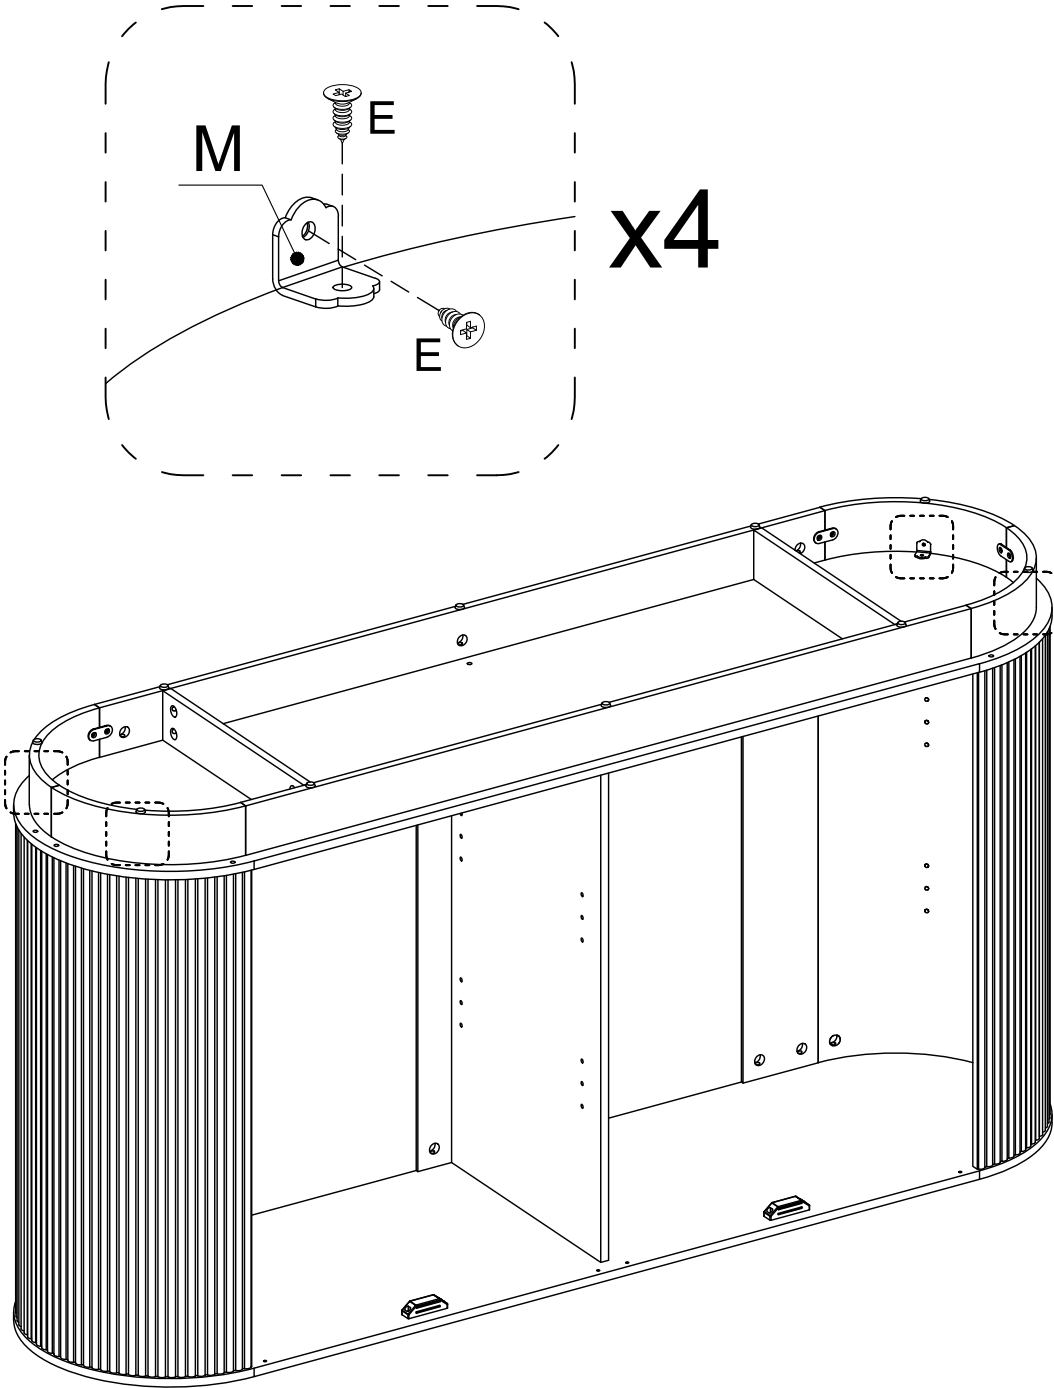



No. E
Quantity: 8 PCS
Screw
ø3.5x12mm



No. M
Quantity: 4 PCS
Iron Plate
19x19*18mm





STEP 17

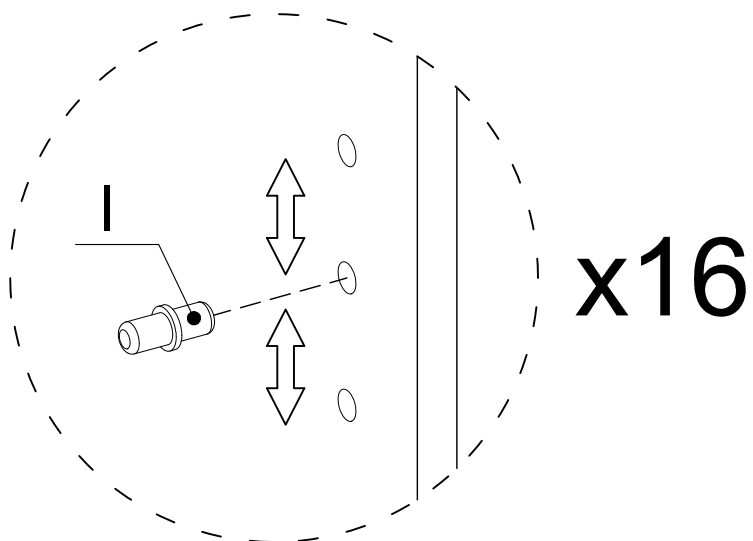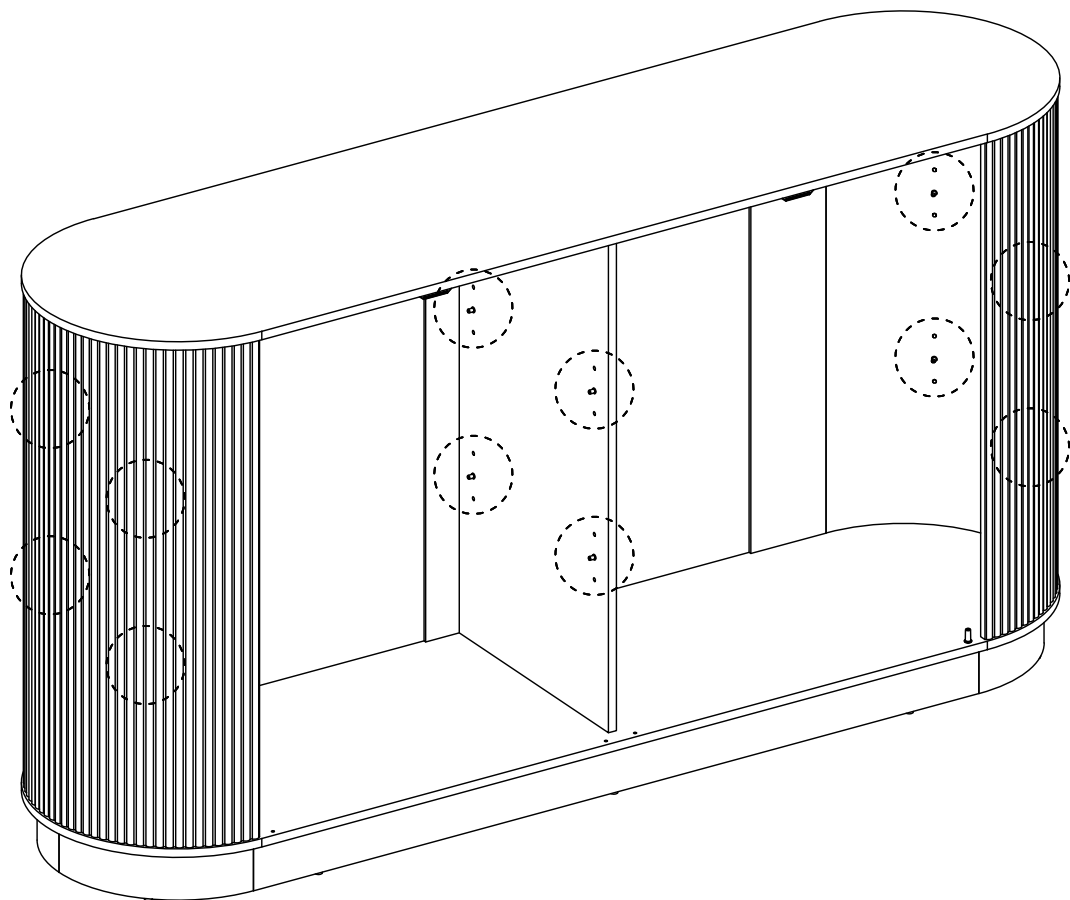

No. I
Quantity: 16 PCS
ø5x16mm




STEP 18

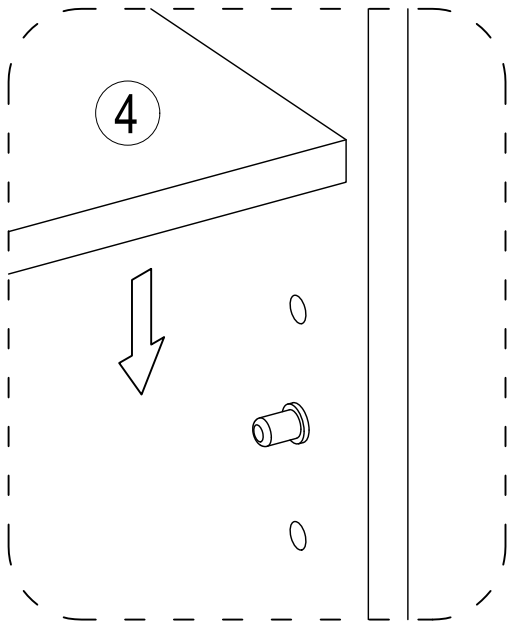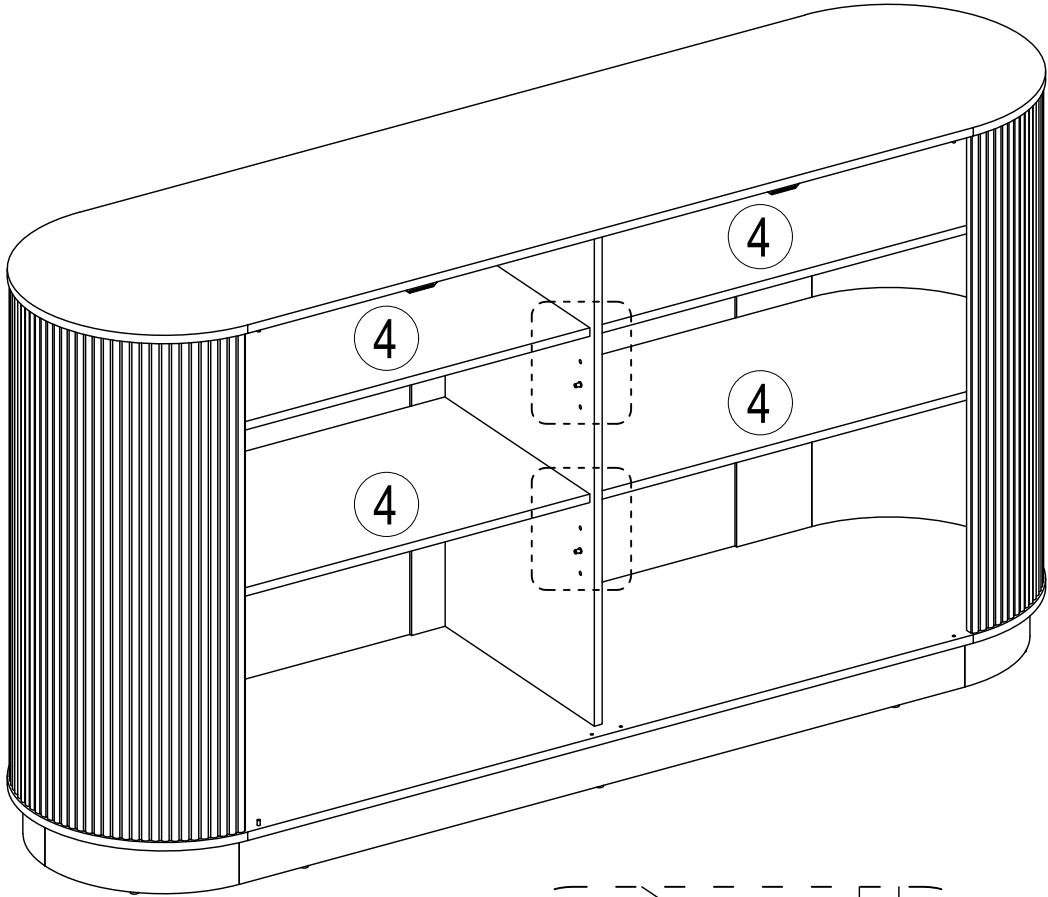

x4


STEP 19

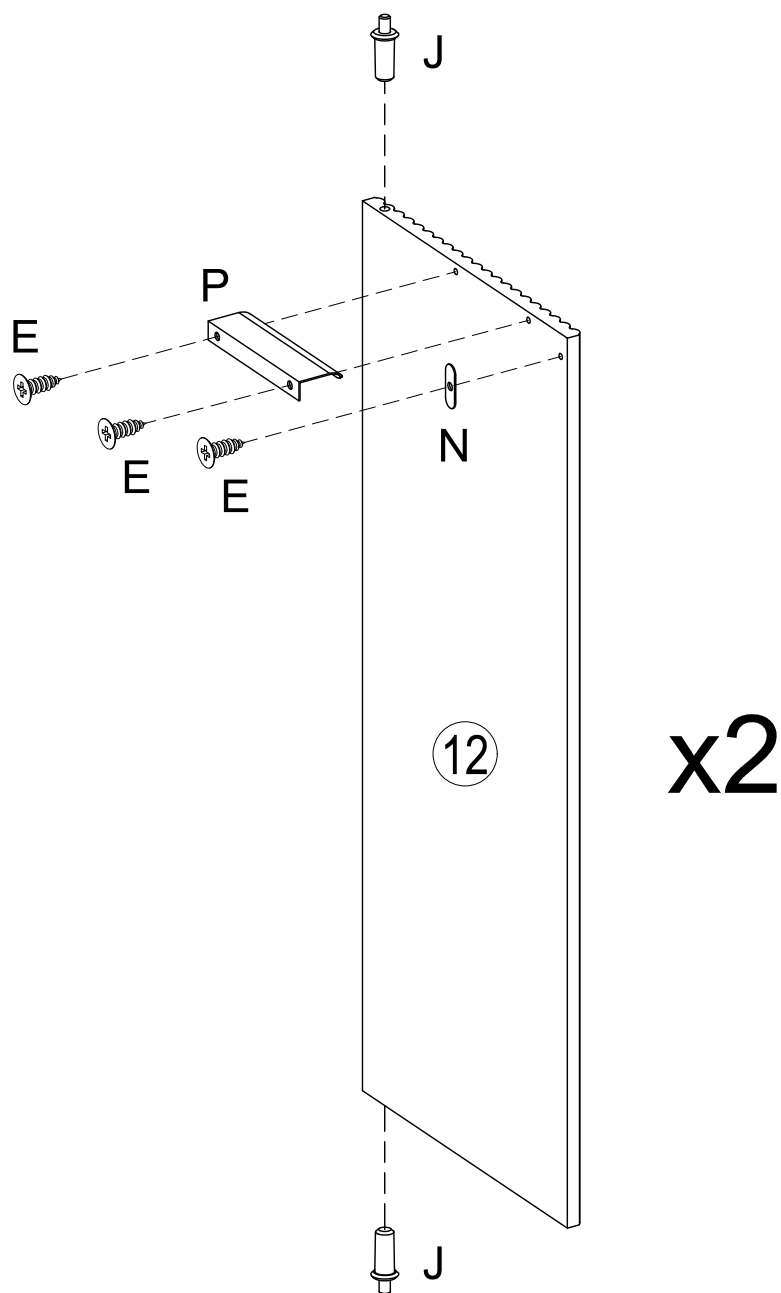

No. E
Quantity: 6 PCS
Screw
ø3.5x12mm



No. P
Quantity: 2 PCS
Handle
38x15*120mm

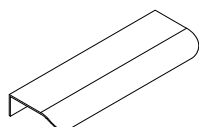


No. N
Quantity: 2 PCS
Magnet
45*12mm



No. J
Quantity: 4 PCS
Rotating Shaft
ø10x23mm




STEP 20

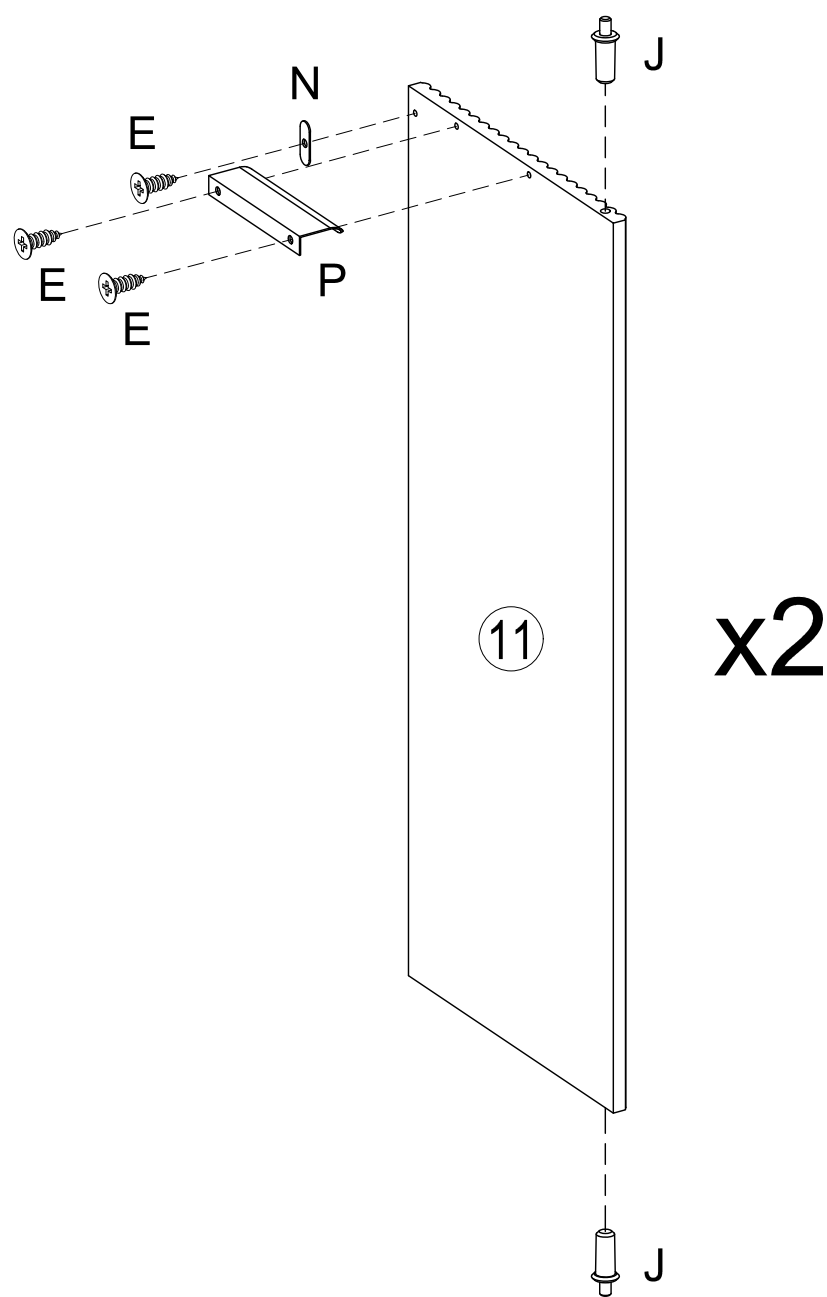

No. E
Quantity: 6 PCS
Screw
ø3.5x12mm



No. P
Quantity: 2 PCS
Handle
38x15*120mm

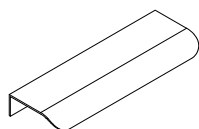


No. N
Quantity: 2 PCS
Magnet
45*12mm




No. J
Quantity: 4 PCS
Rotating Shaft
ø10x23mm





STEP 21

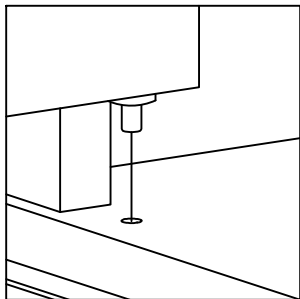


STEP1:Insert the lower pivot pin #L into the hole.

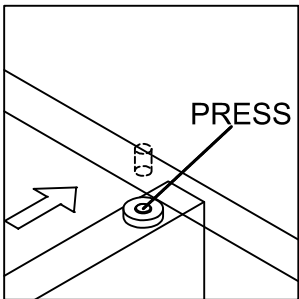

STEP2:Press and hold upper pivot pin #L, push the door under board #1, then slide the pin into the hole.

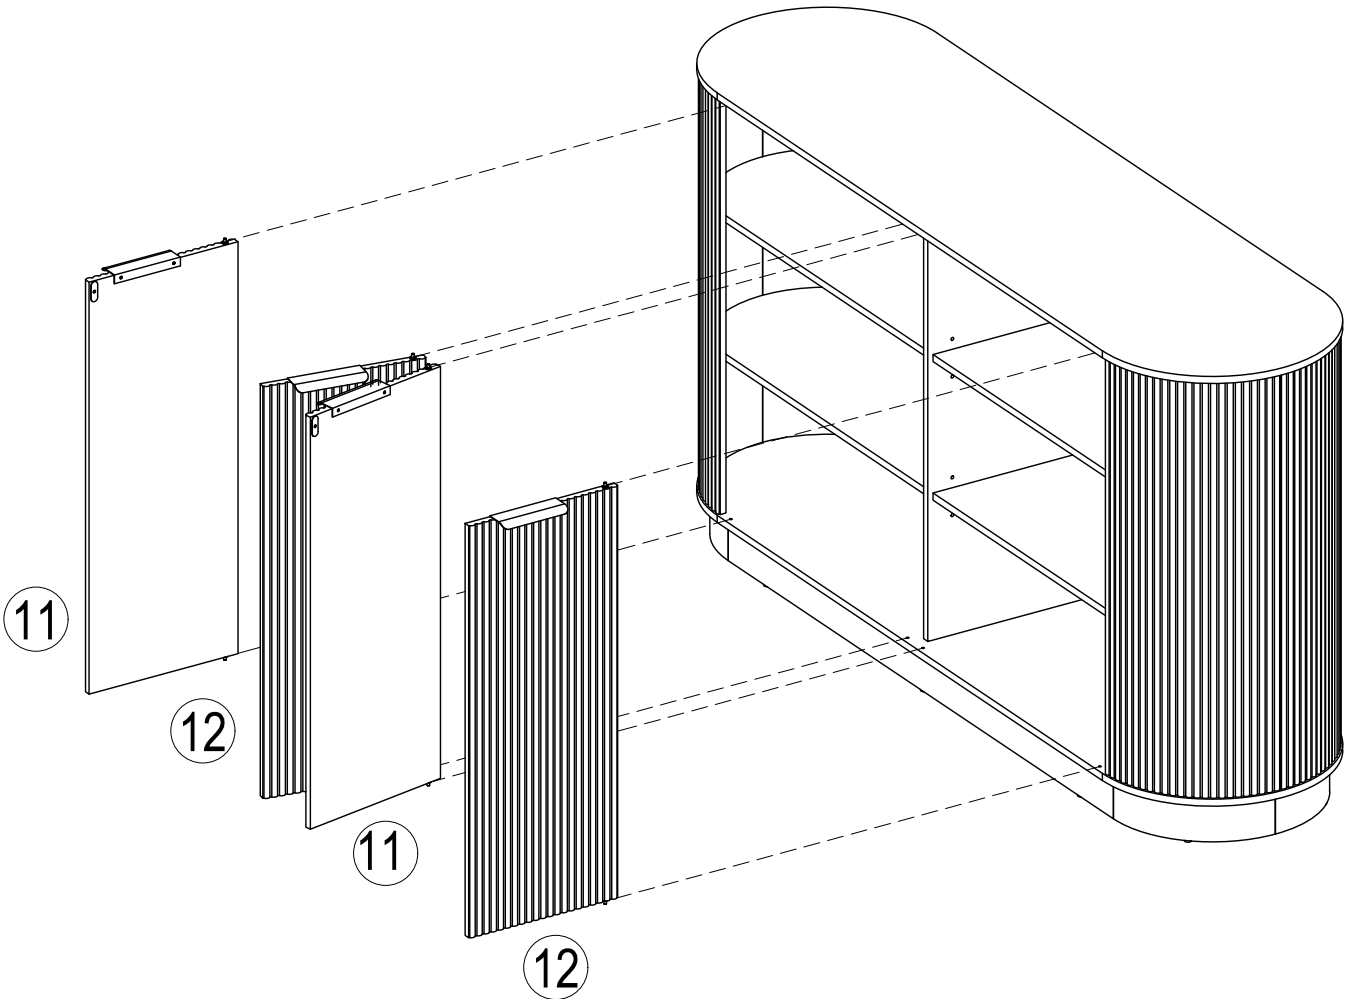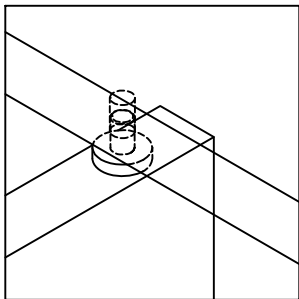


STEP 22

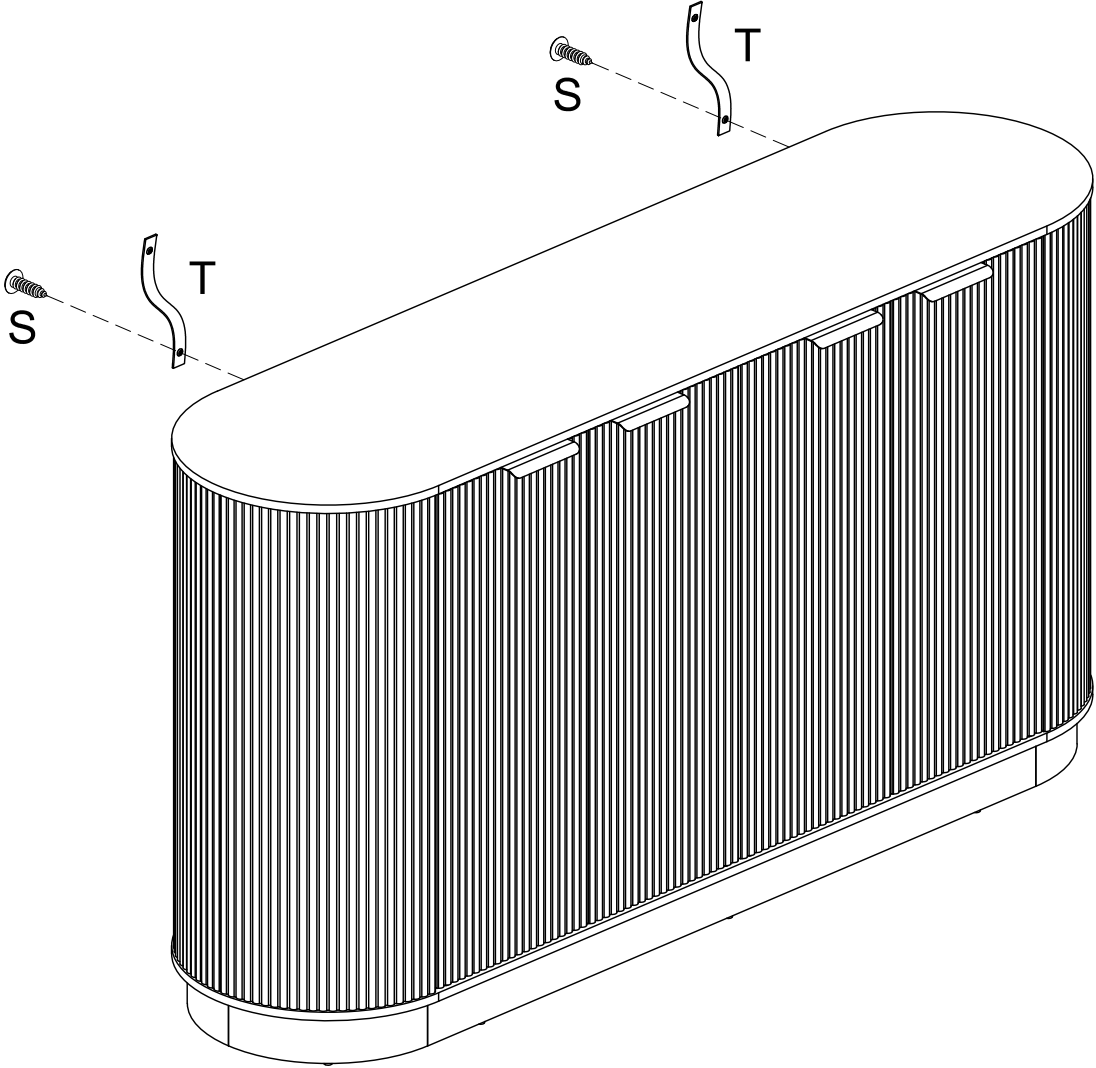


No. S

Quantity: 2 PCS
Screw
ø4x16mm





No. T


Quantity: 2 PCS
Cloth strip
L193*20mm

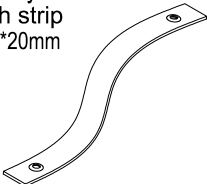

STEP 23

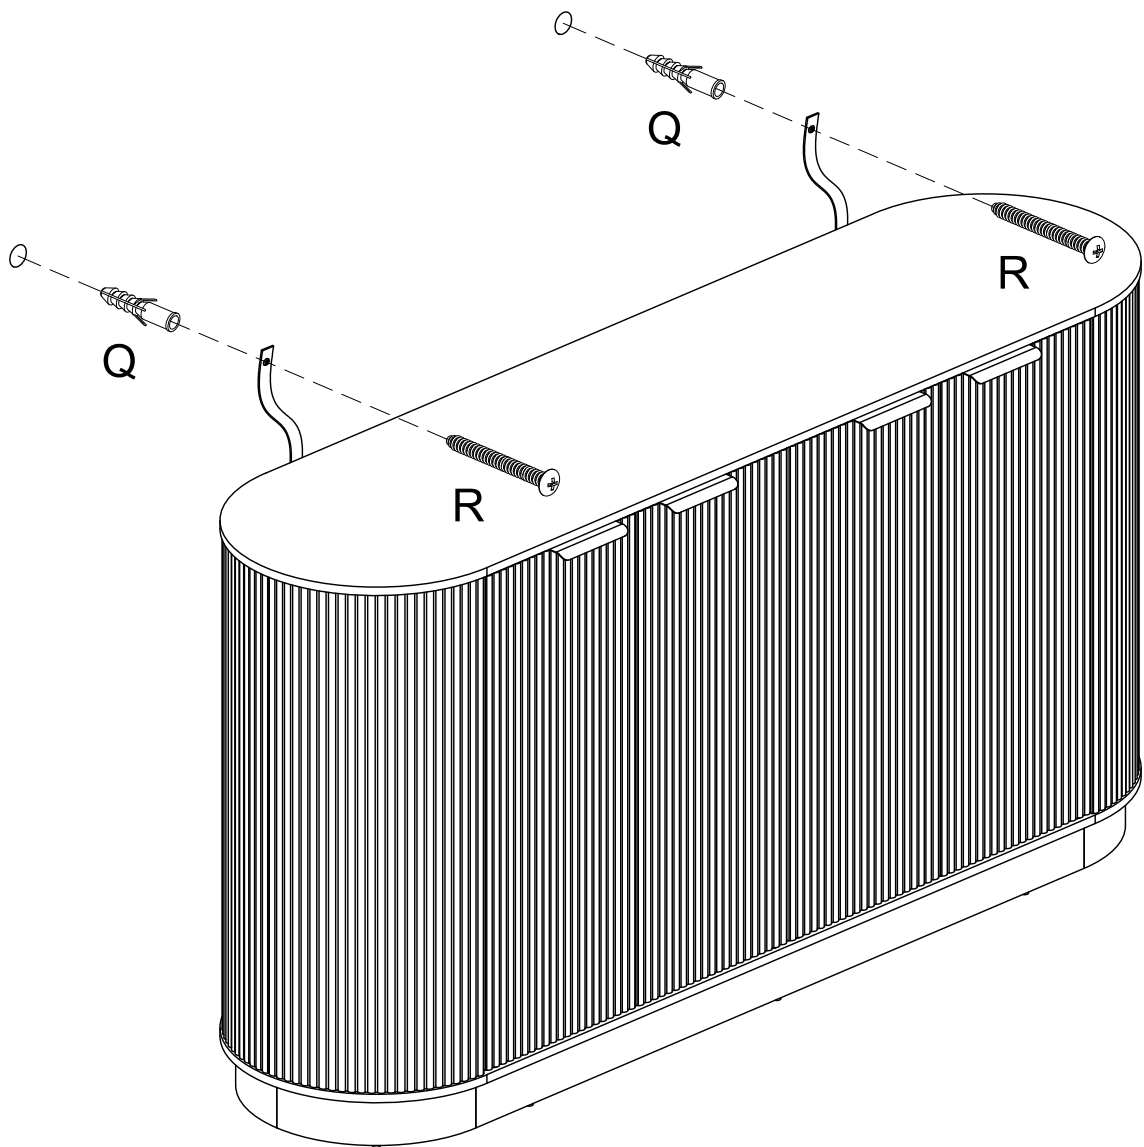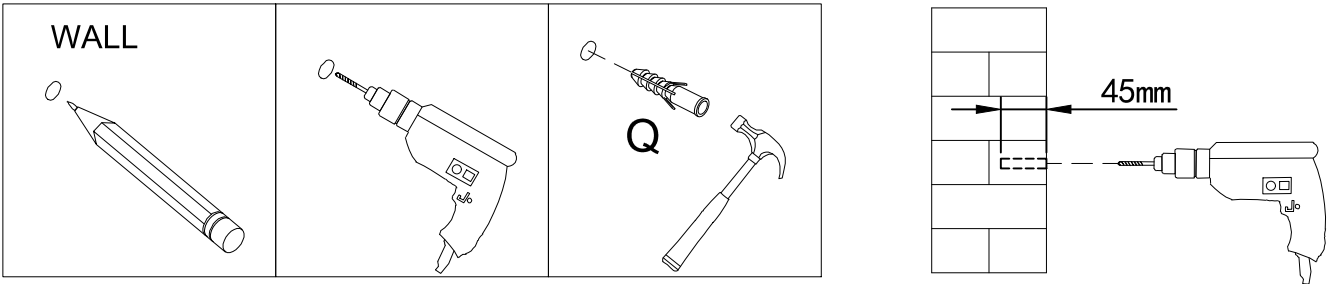

No. Q
Quantity: 2 PCS
plastic plug
Ø8*40



No. R
Quantity: 2 PCS
Screw
Ø4*38

