
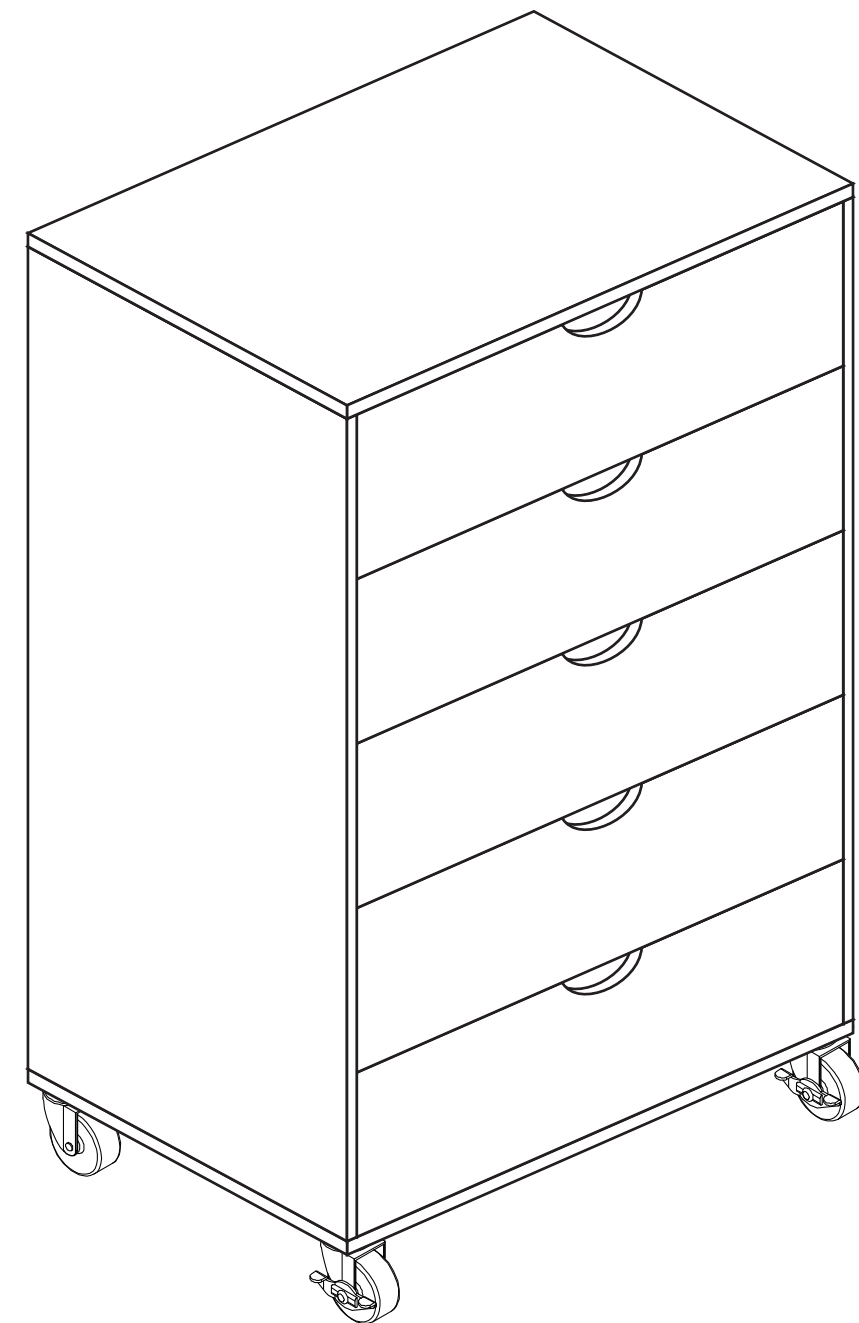
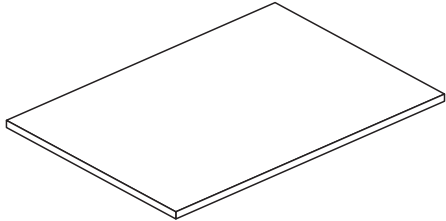
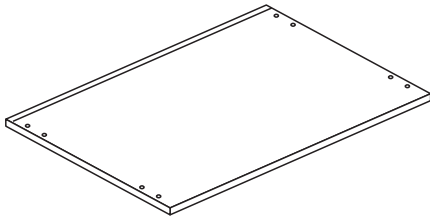
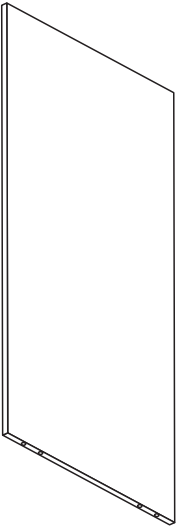
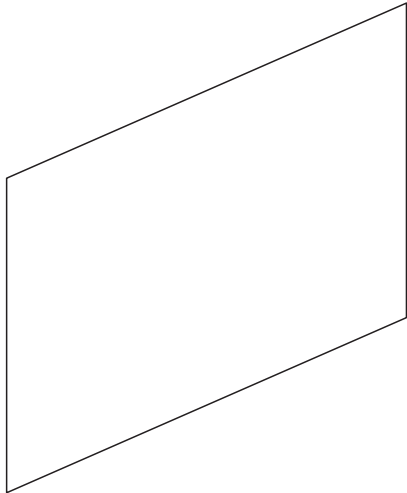
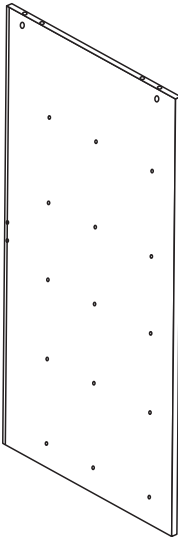








JMZX-V1














FTOFWF-0002
FTOFWF-0003

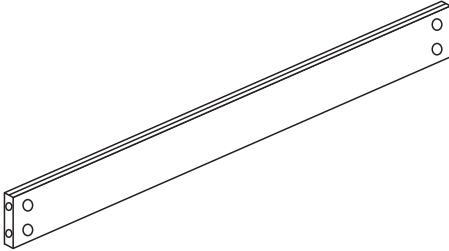

MOBILE 5-DRAWER FILING CABINET


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		X 1	D		X 1
B		X 1	E		X 2
C		X 1	F		X 1

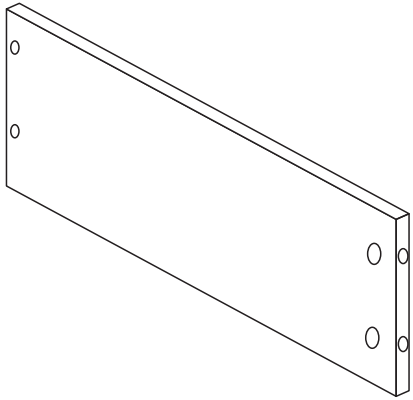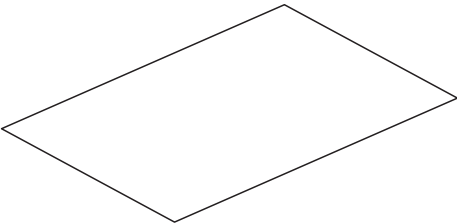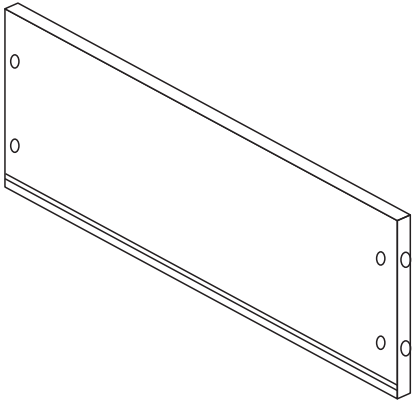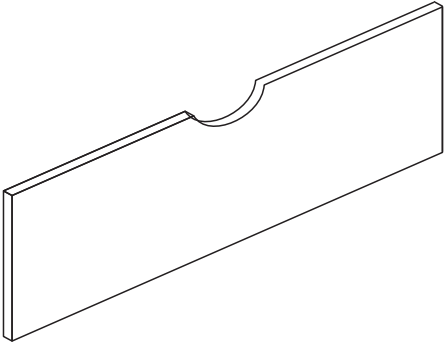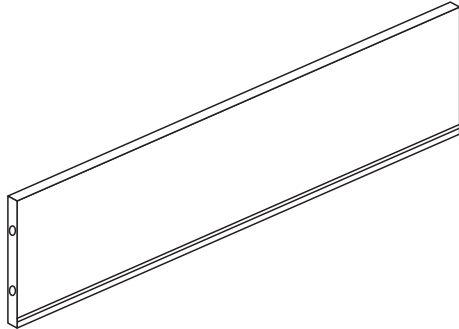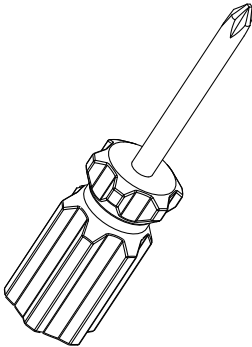Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
G		X 5	J		X 5
H		X 5	K		X 5
I		X 5	L		X 1

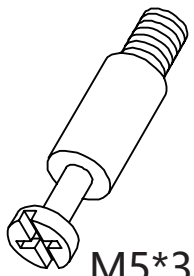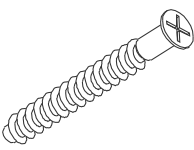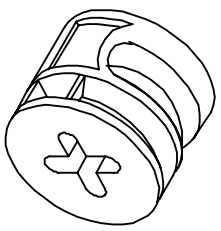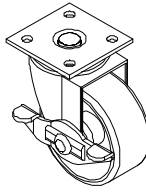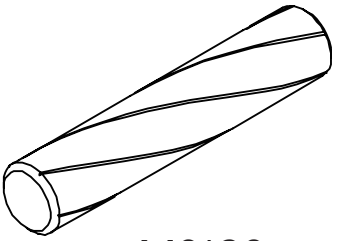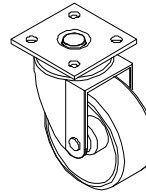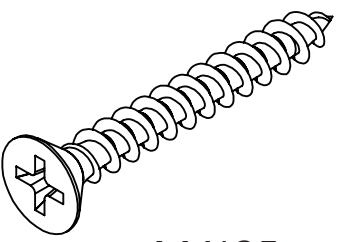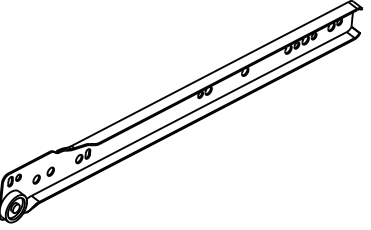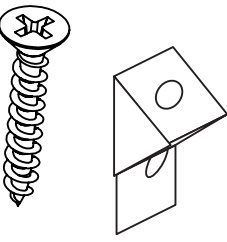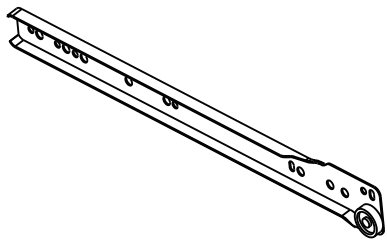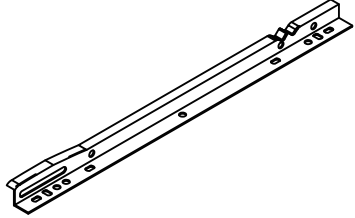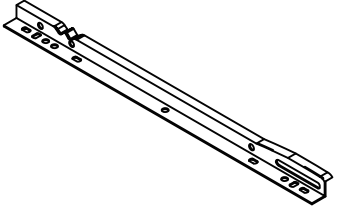
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
a	 M5*35mm	×28	g	 M6*38mm	×4
b	 M12*9.5mm	×28	h		×2
c	 M8*30mm	×8	i		×2
d	 M4*35mm	×20	CL		×5
e	 M3*16mm	×8	CR		×5
f	 M3.5*14mm	×76	DL		×5
			DR		×5

Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

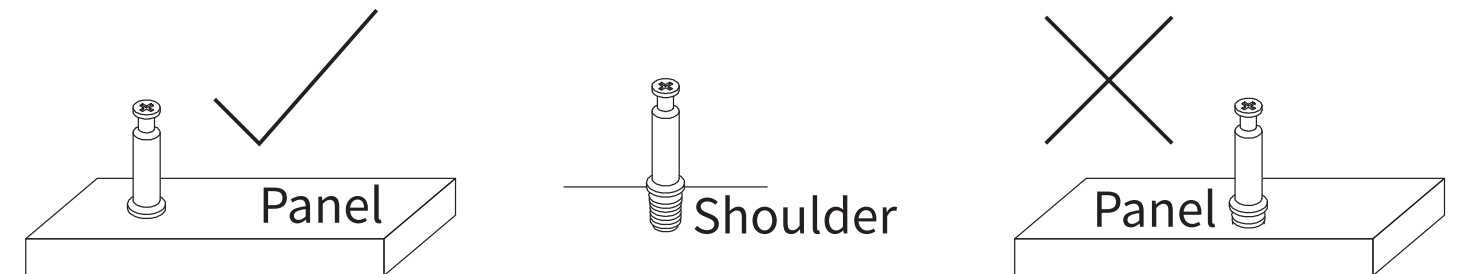

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.



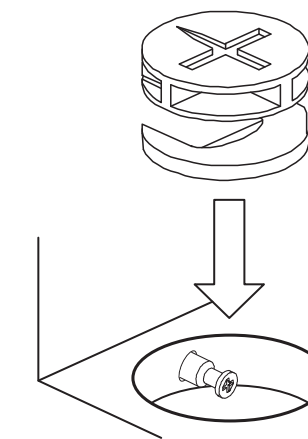


Turn the cam lock clockwise to tighten.

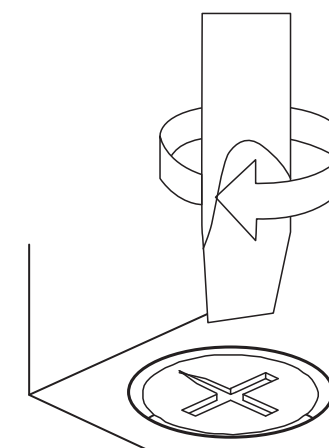

1



X5

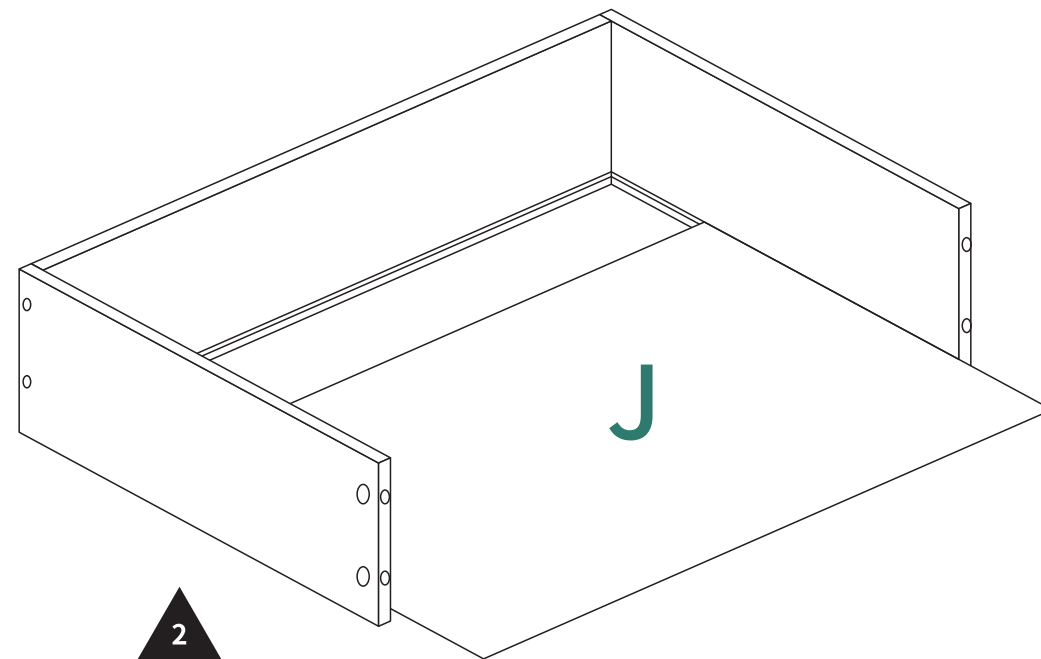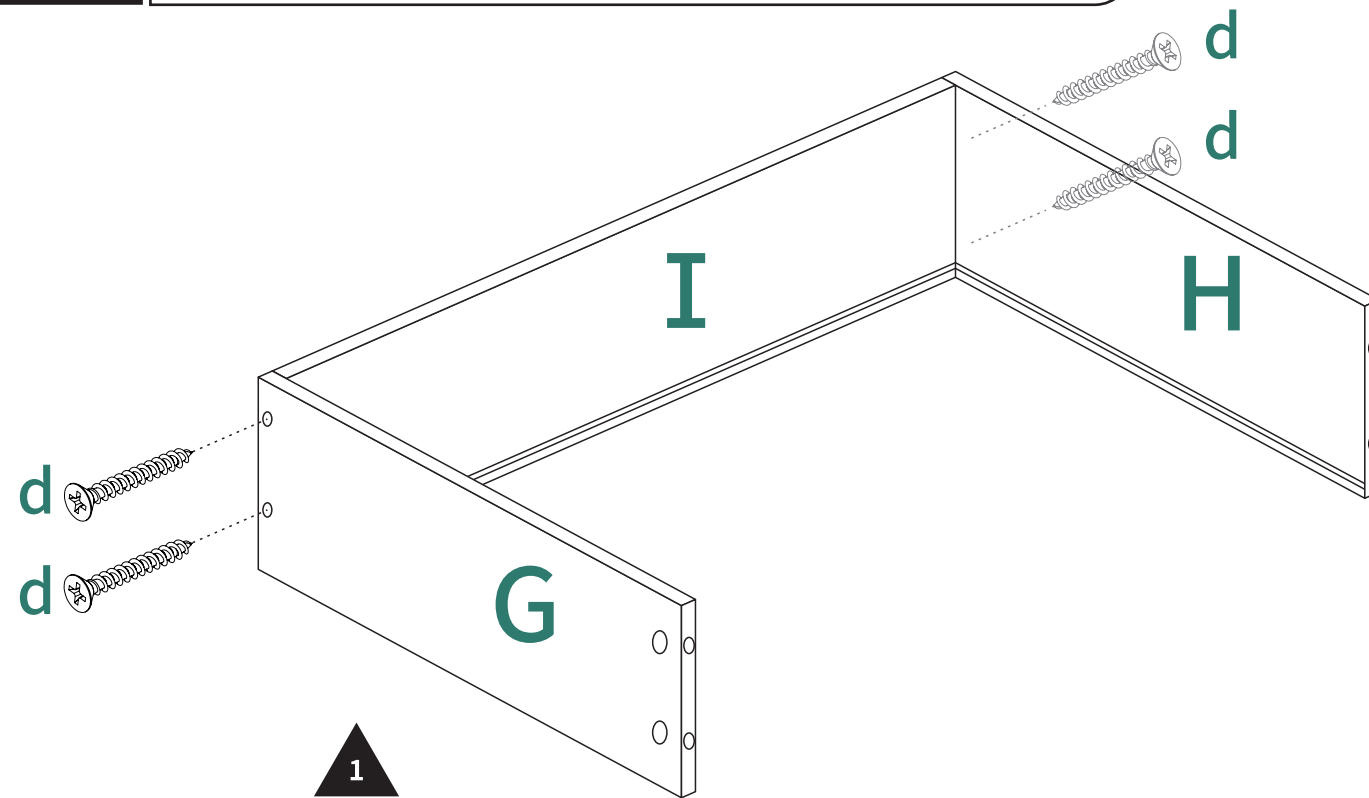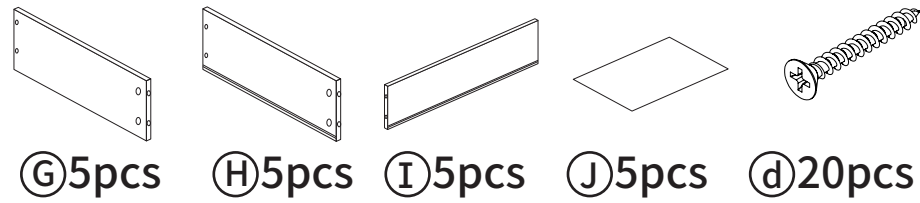

5

2


X5

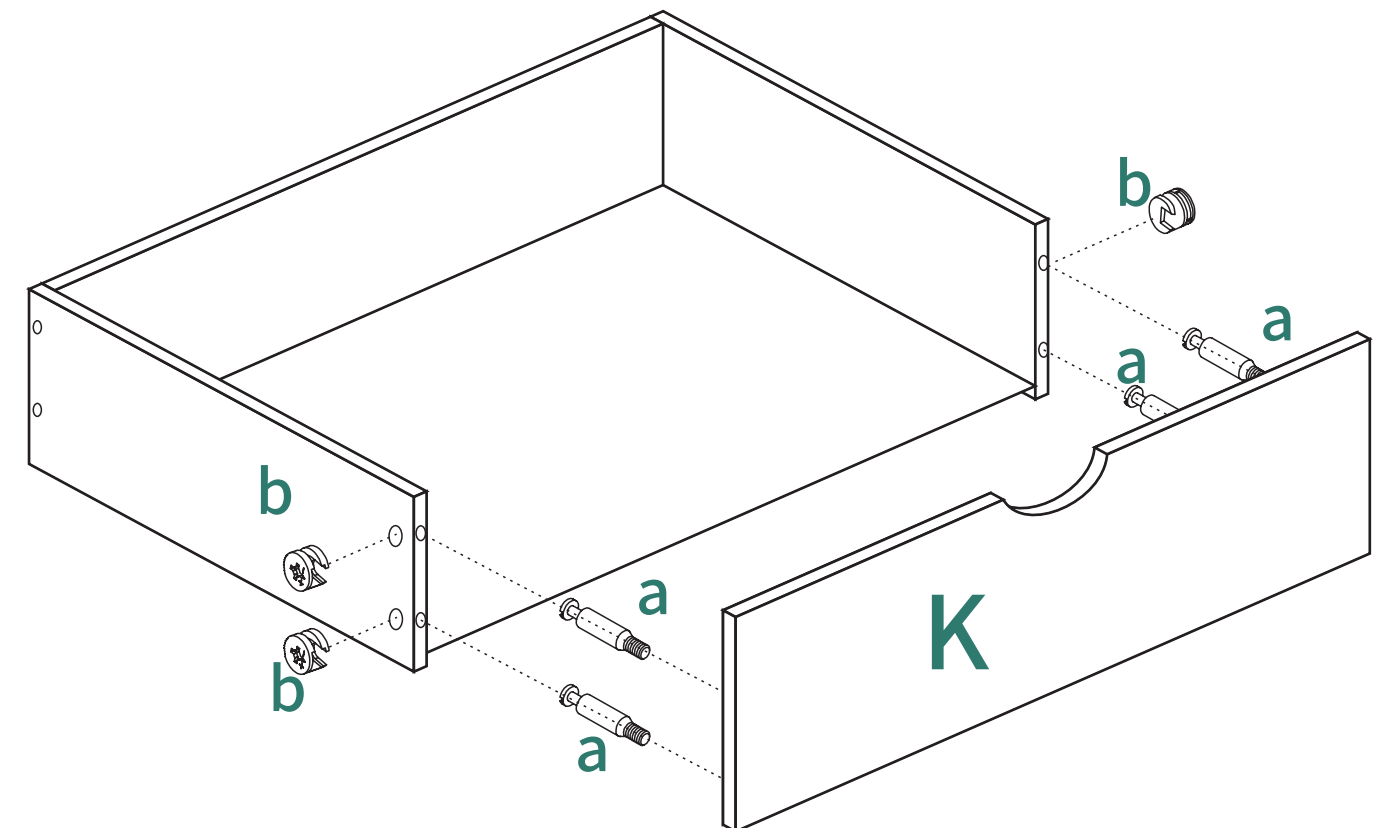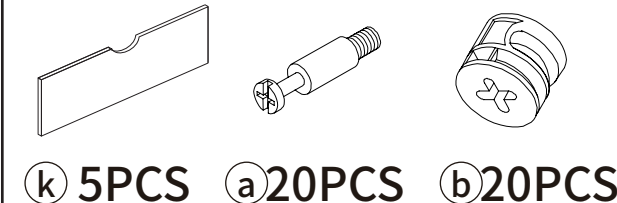


6

3


X5

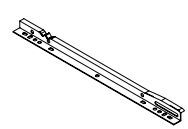




DR5pcs

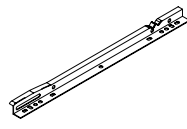


DL5pcs




f30PCS

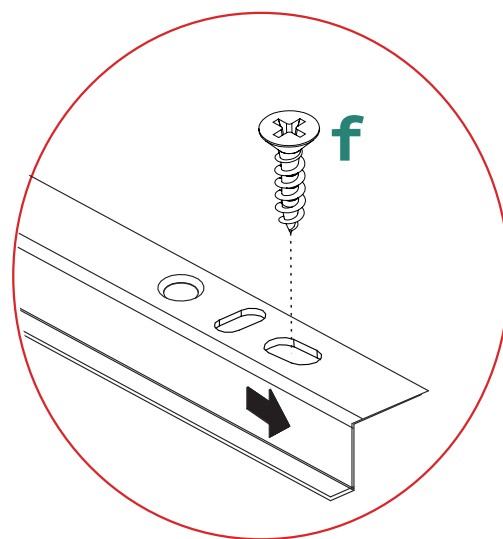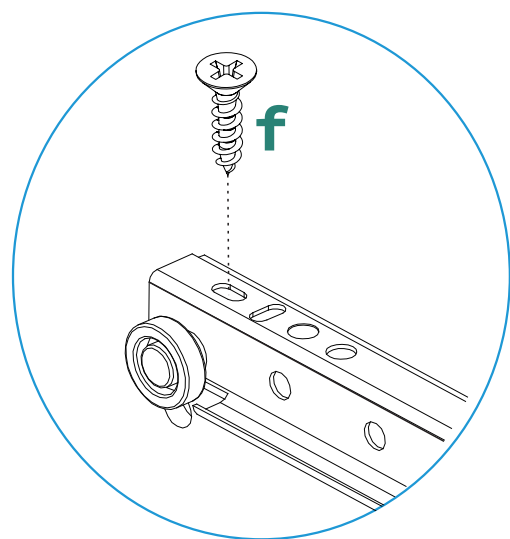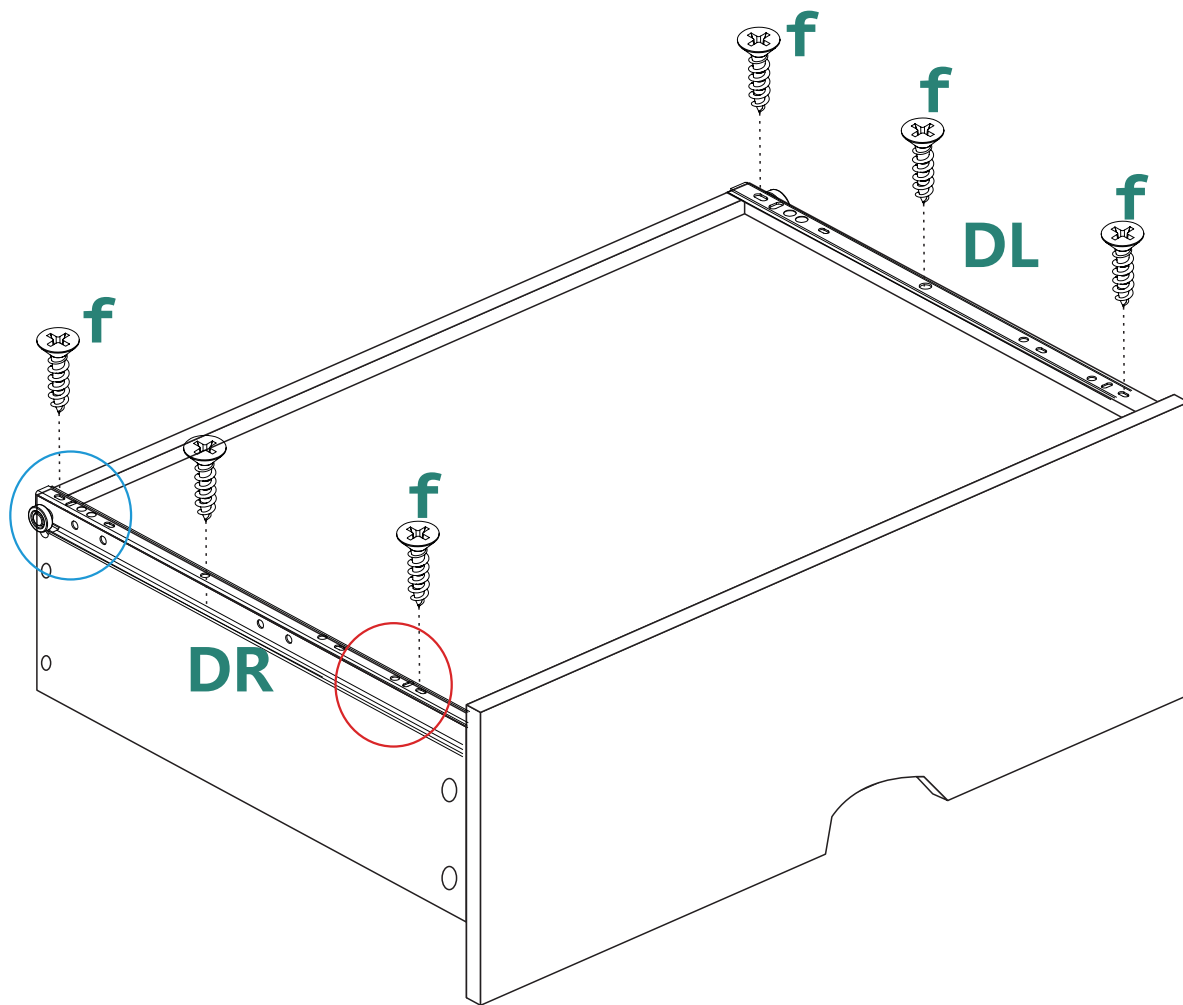


4

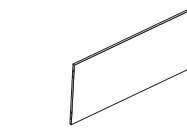


B1pc

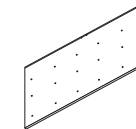


C1pc






CR5pcs











CL5pcs





f30PCS

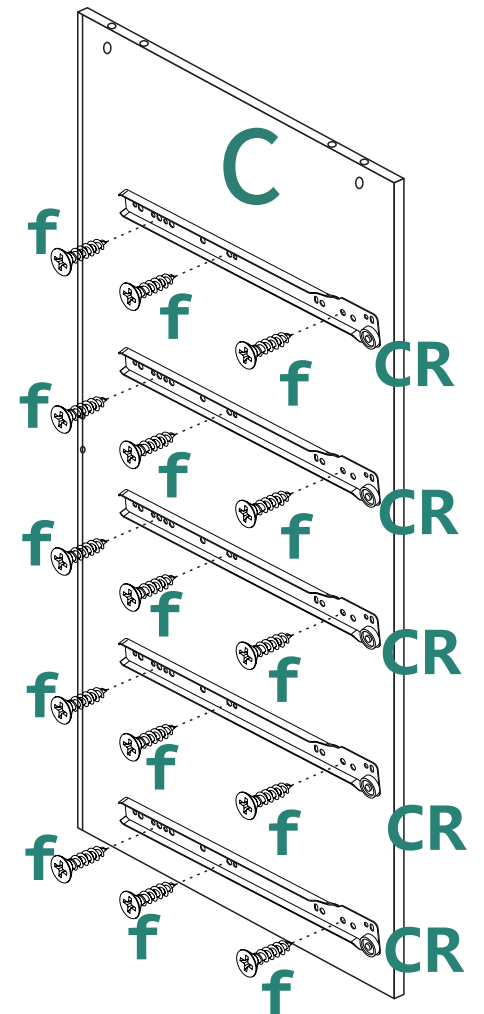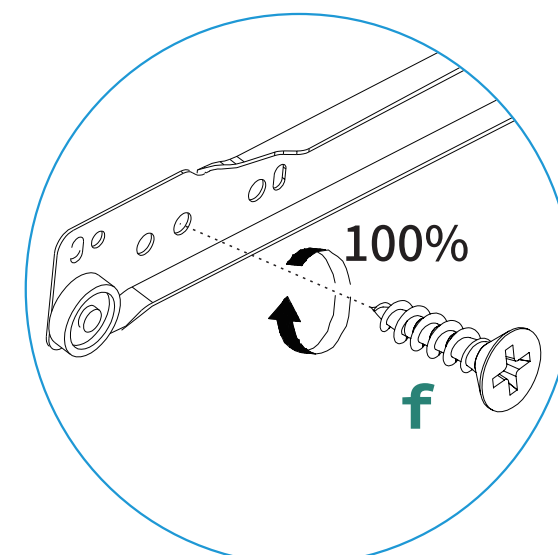
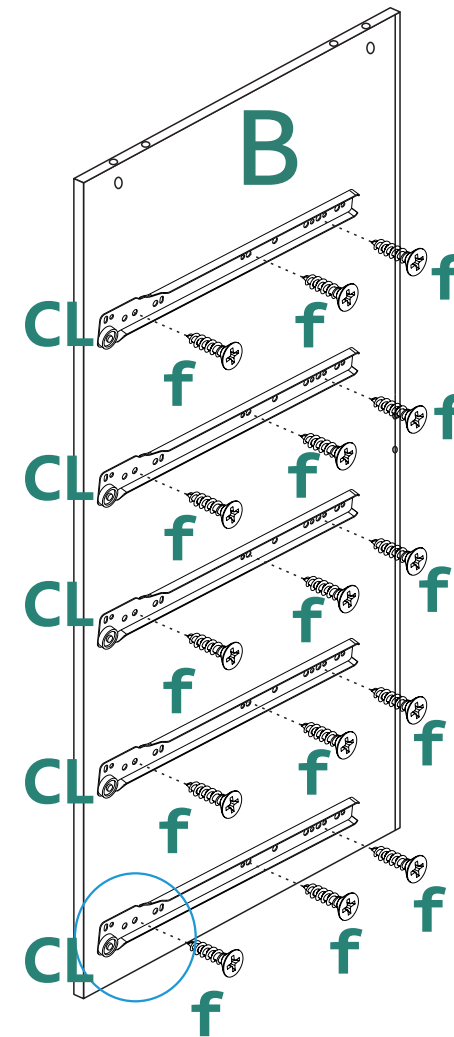


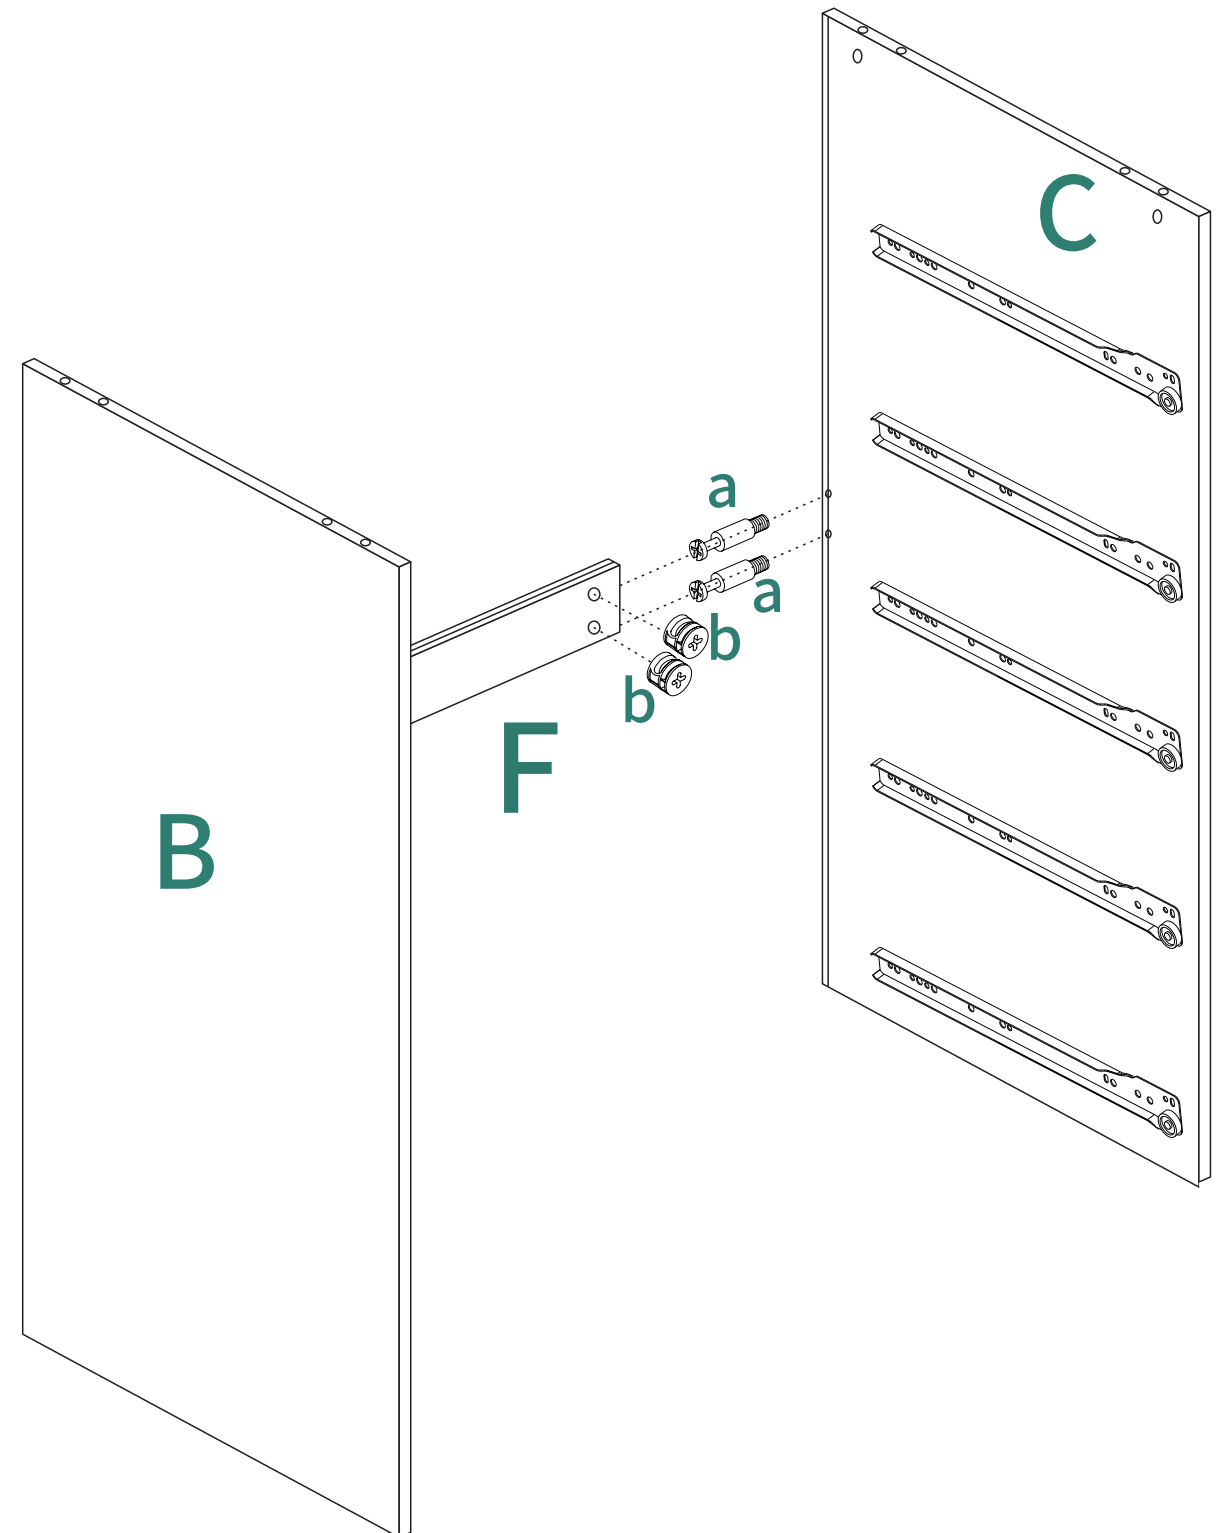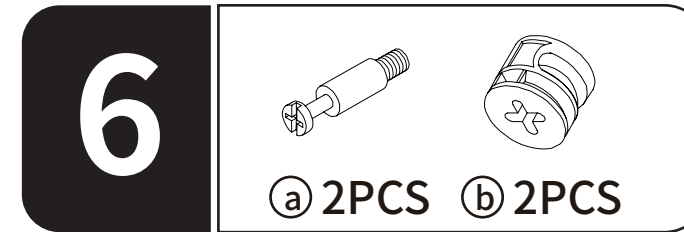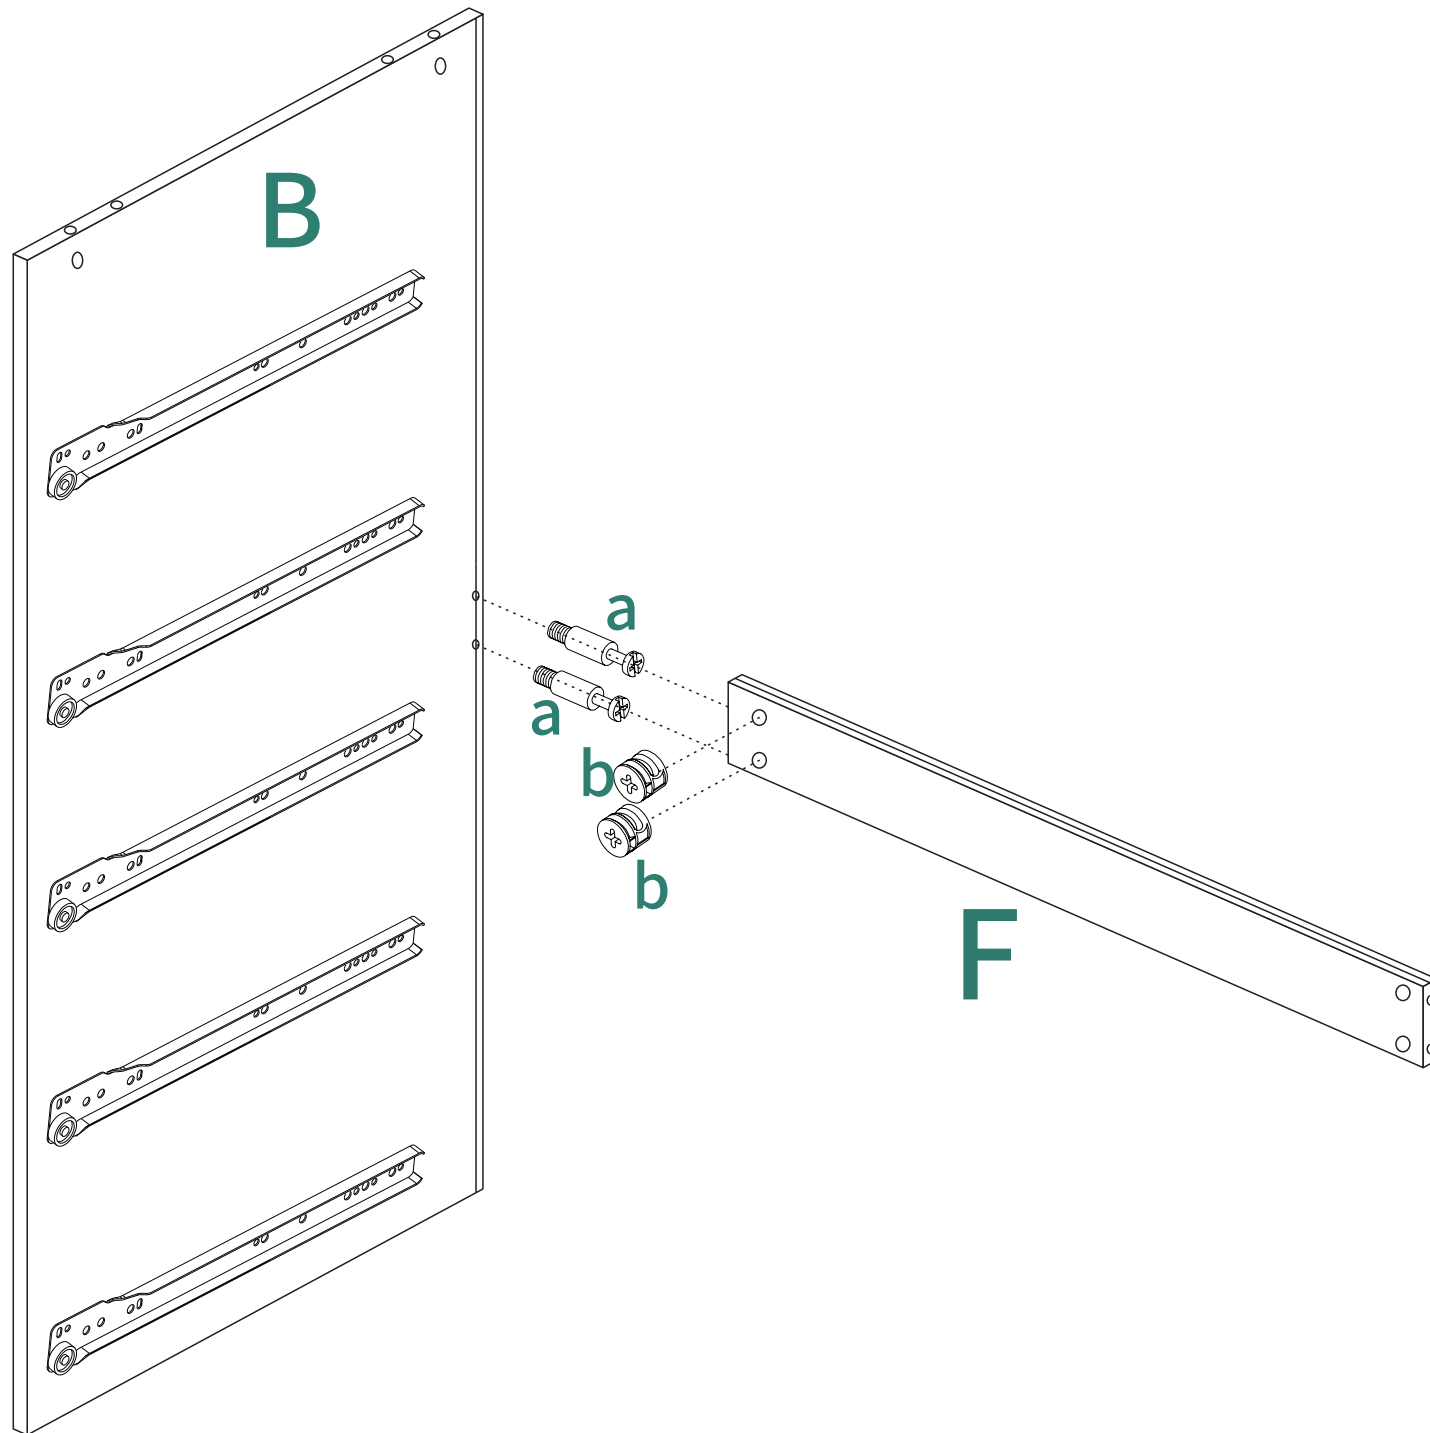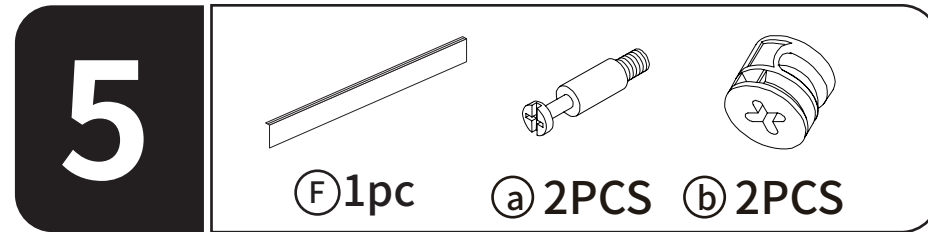

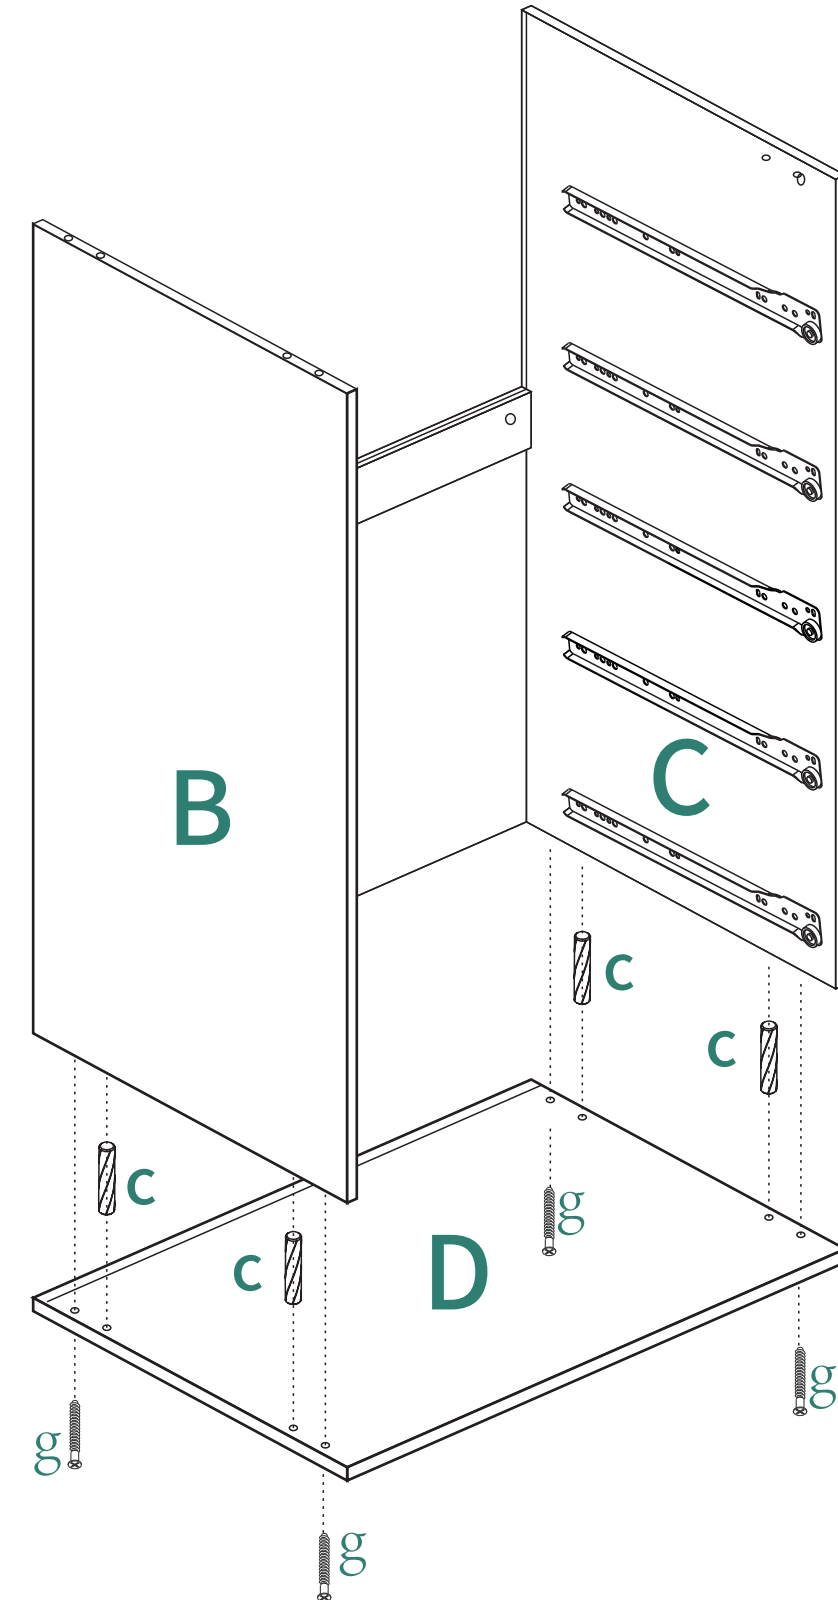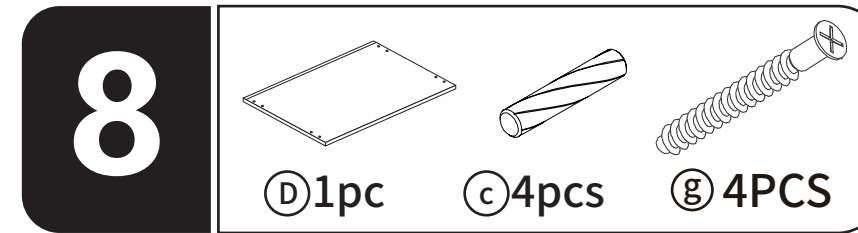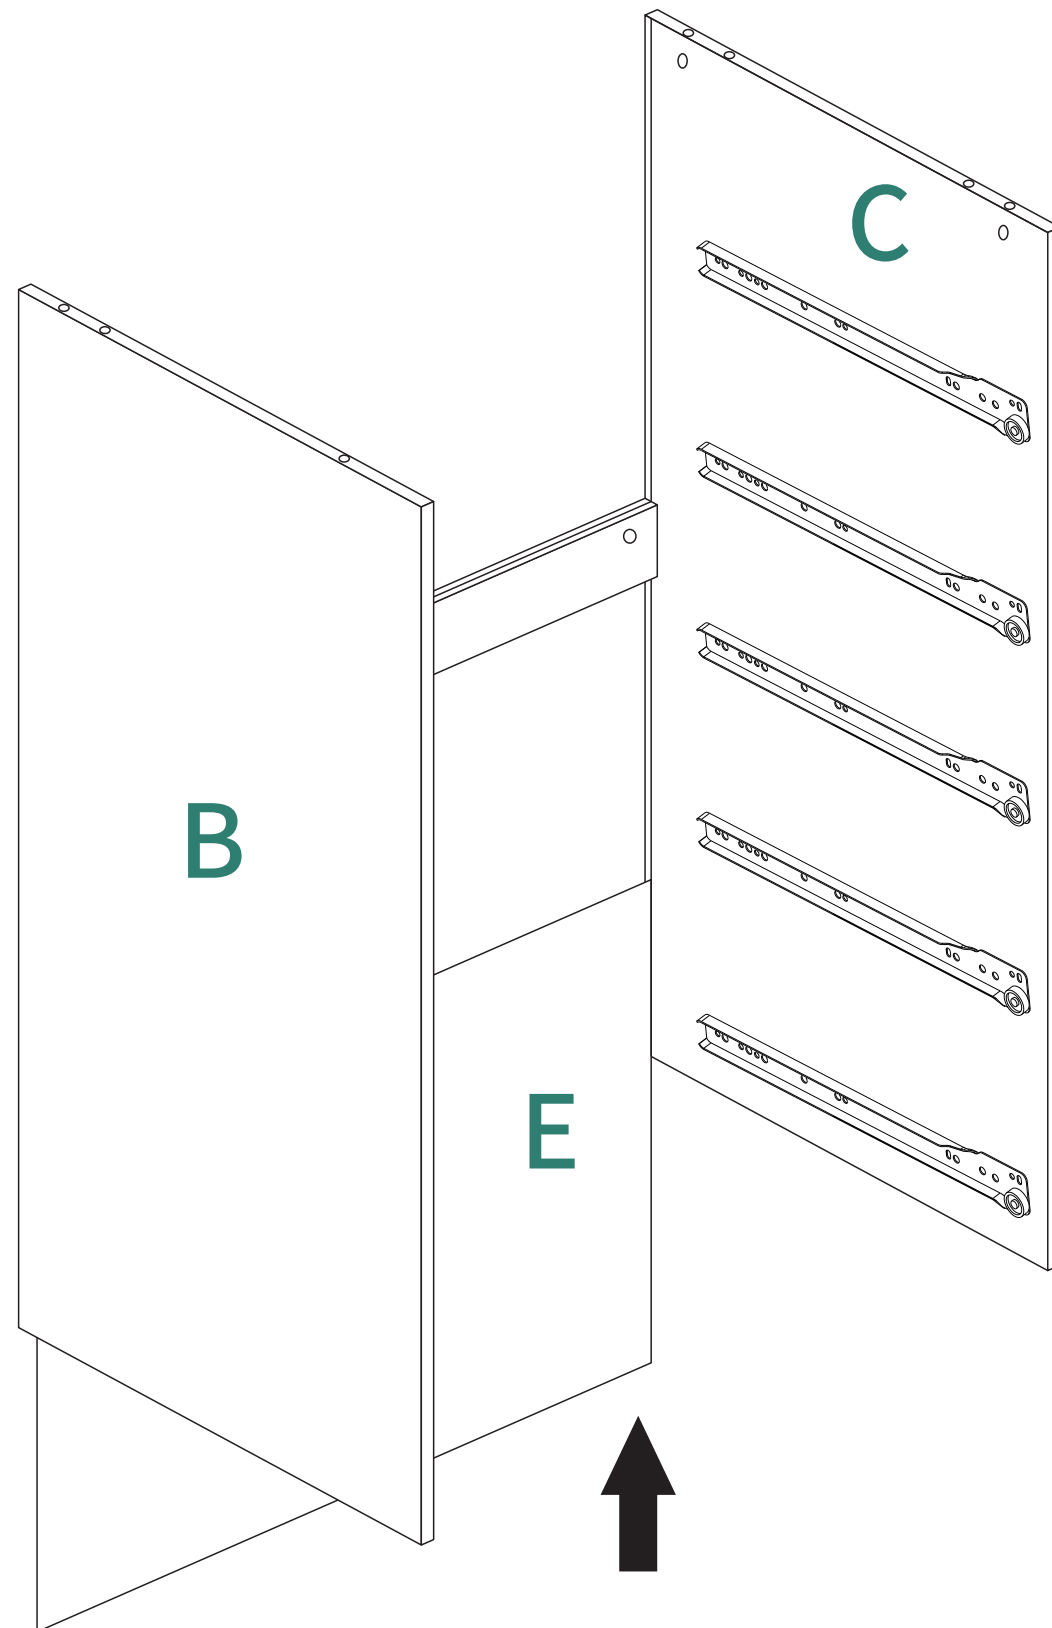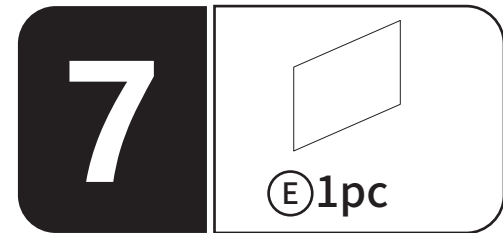

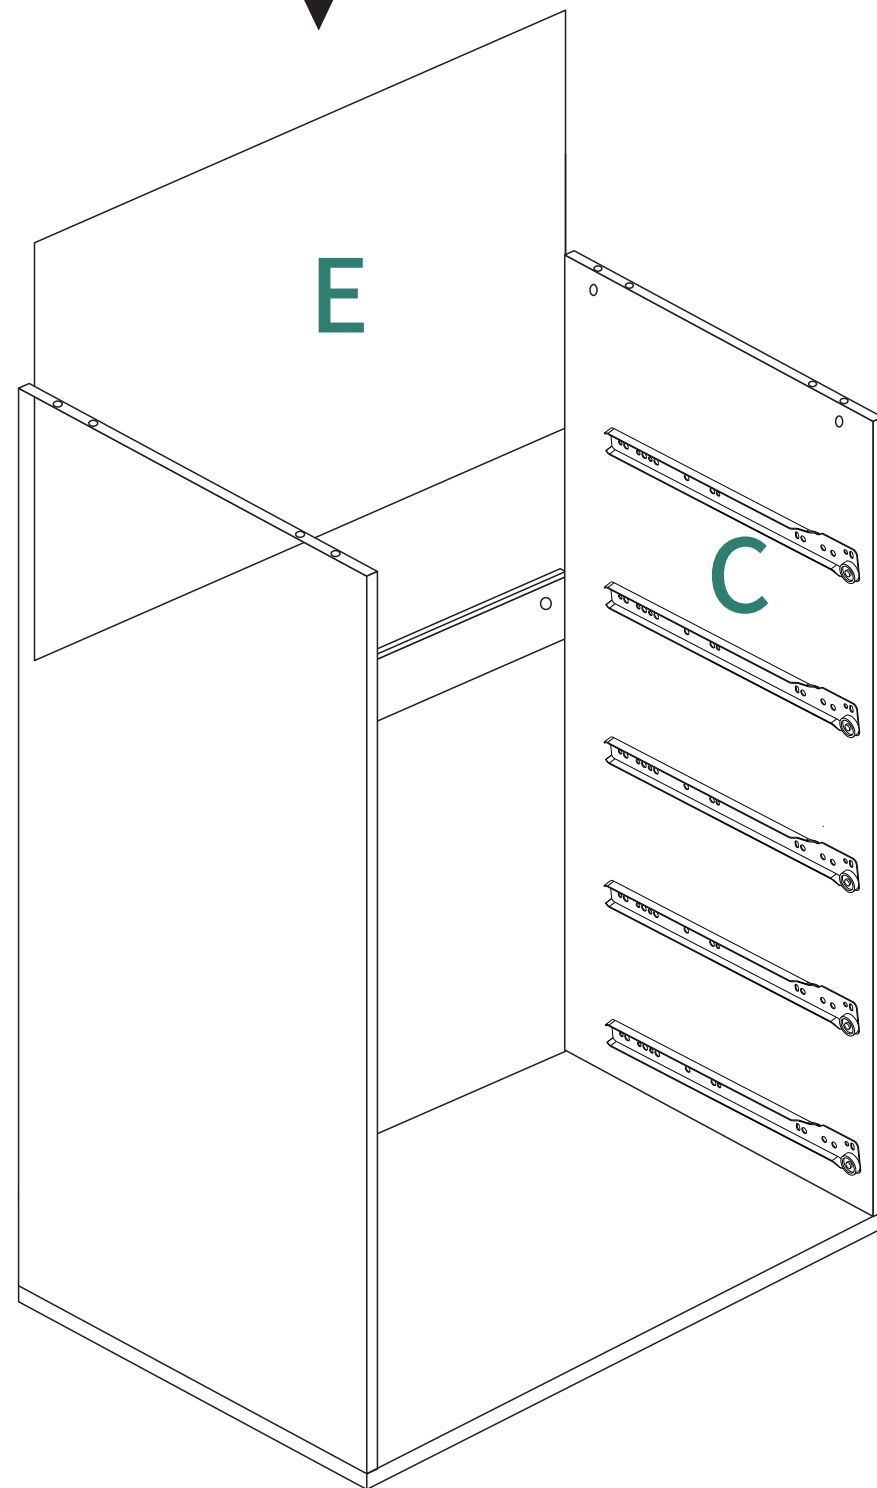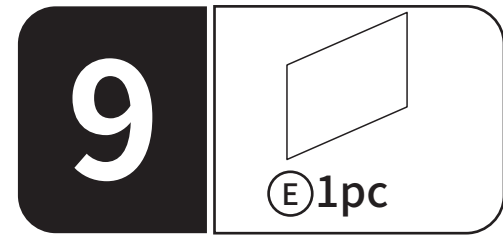


13

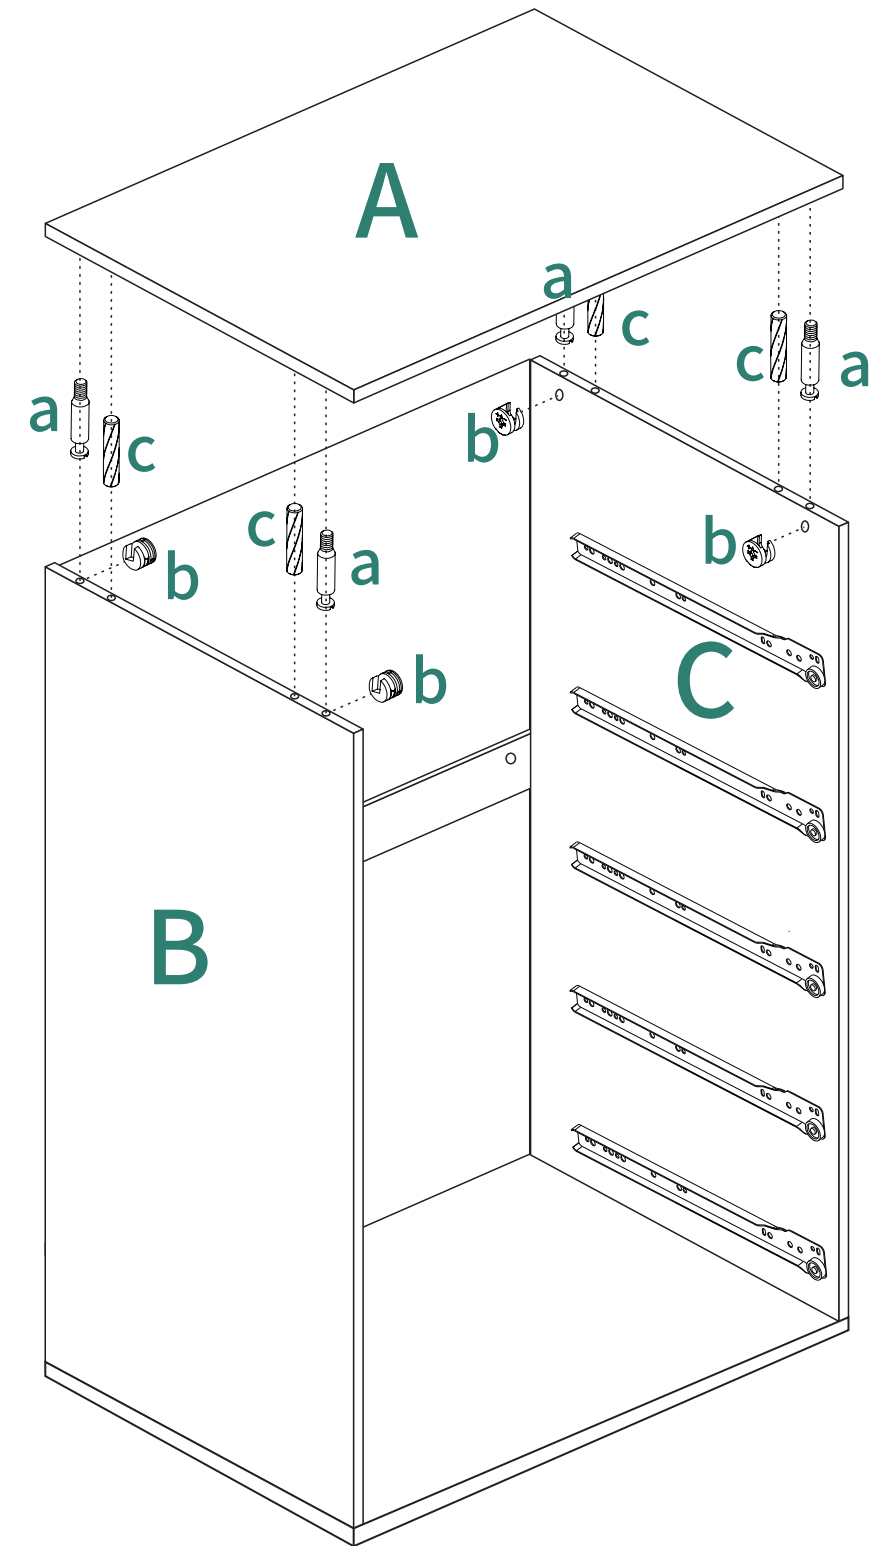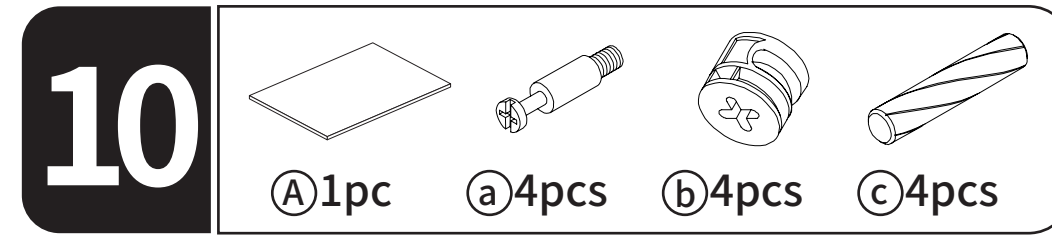



14

11

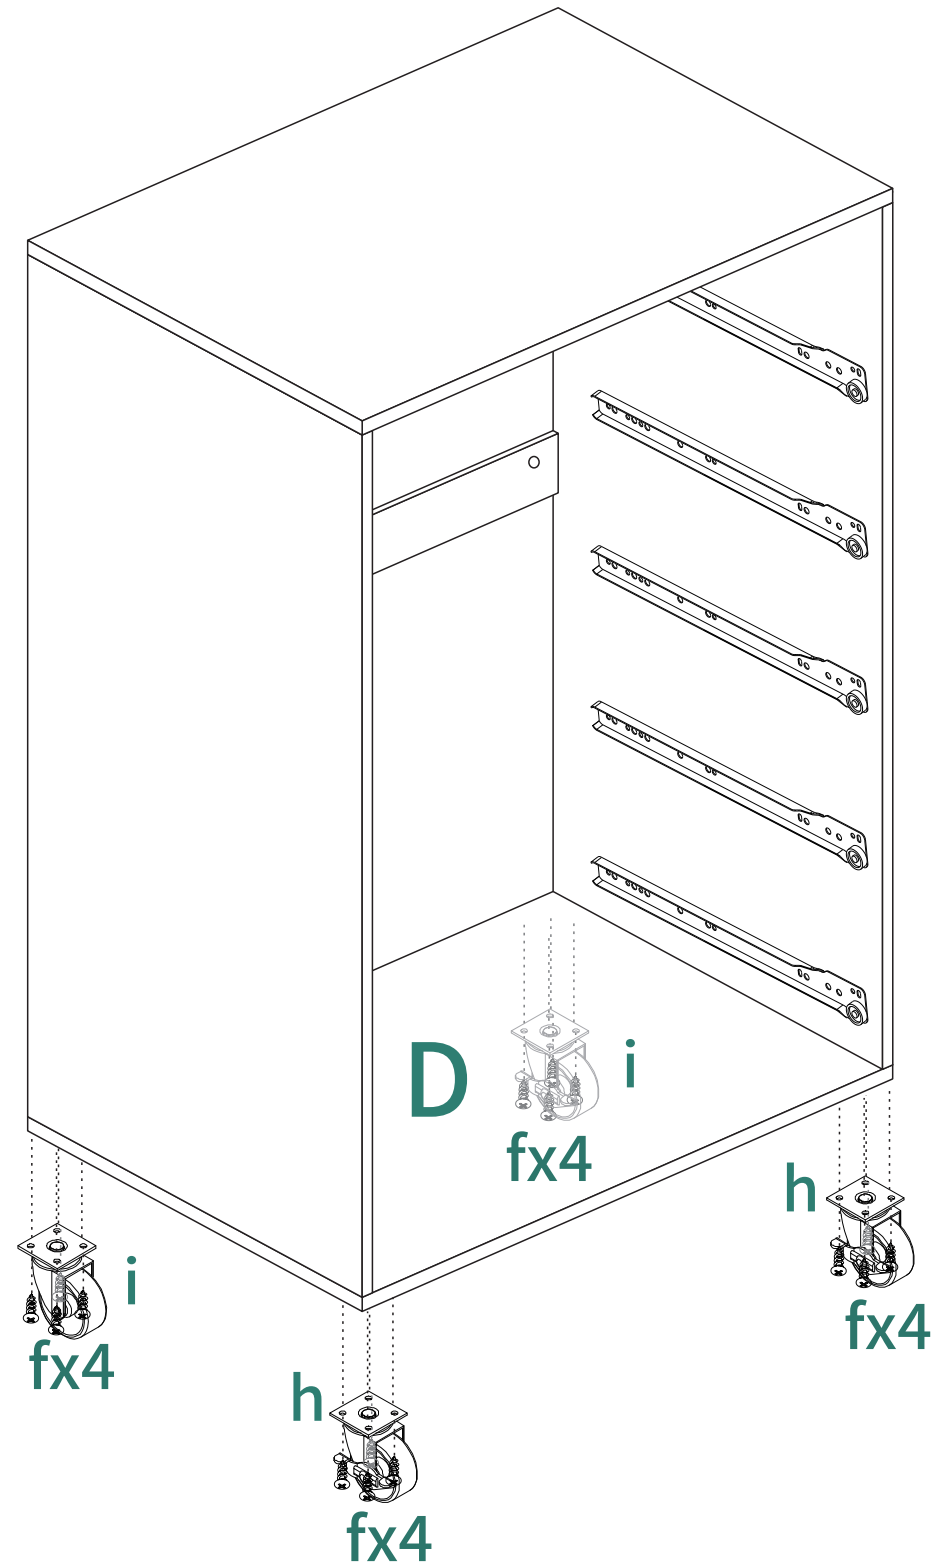


15

12

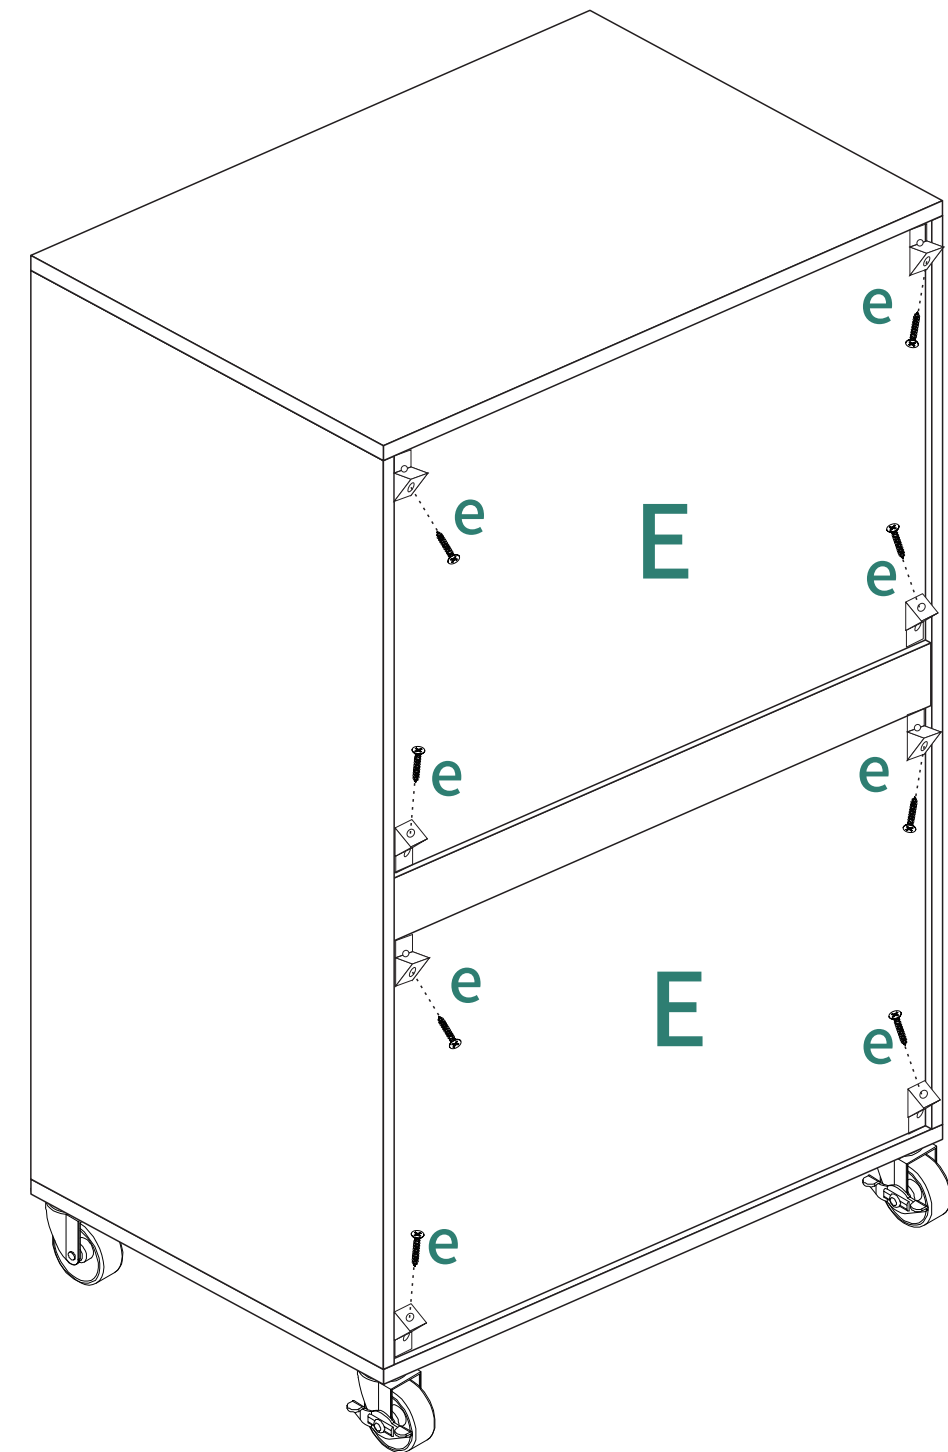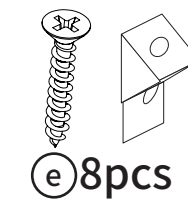

16

13

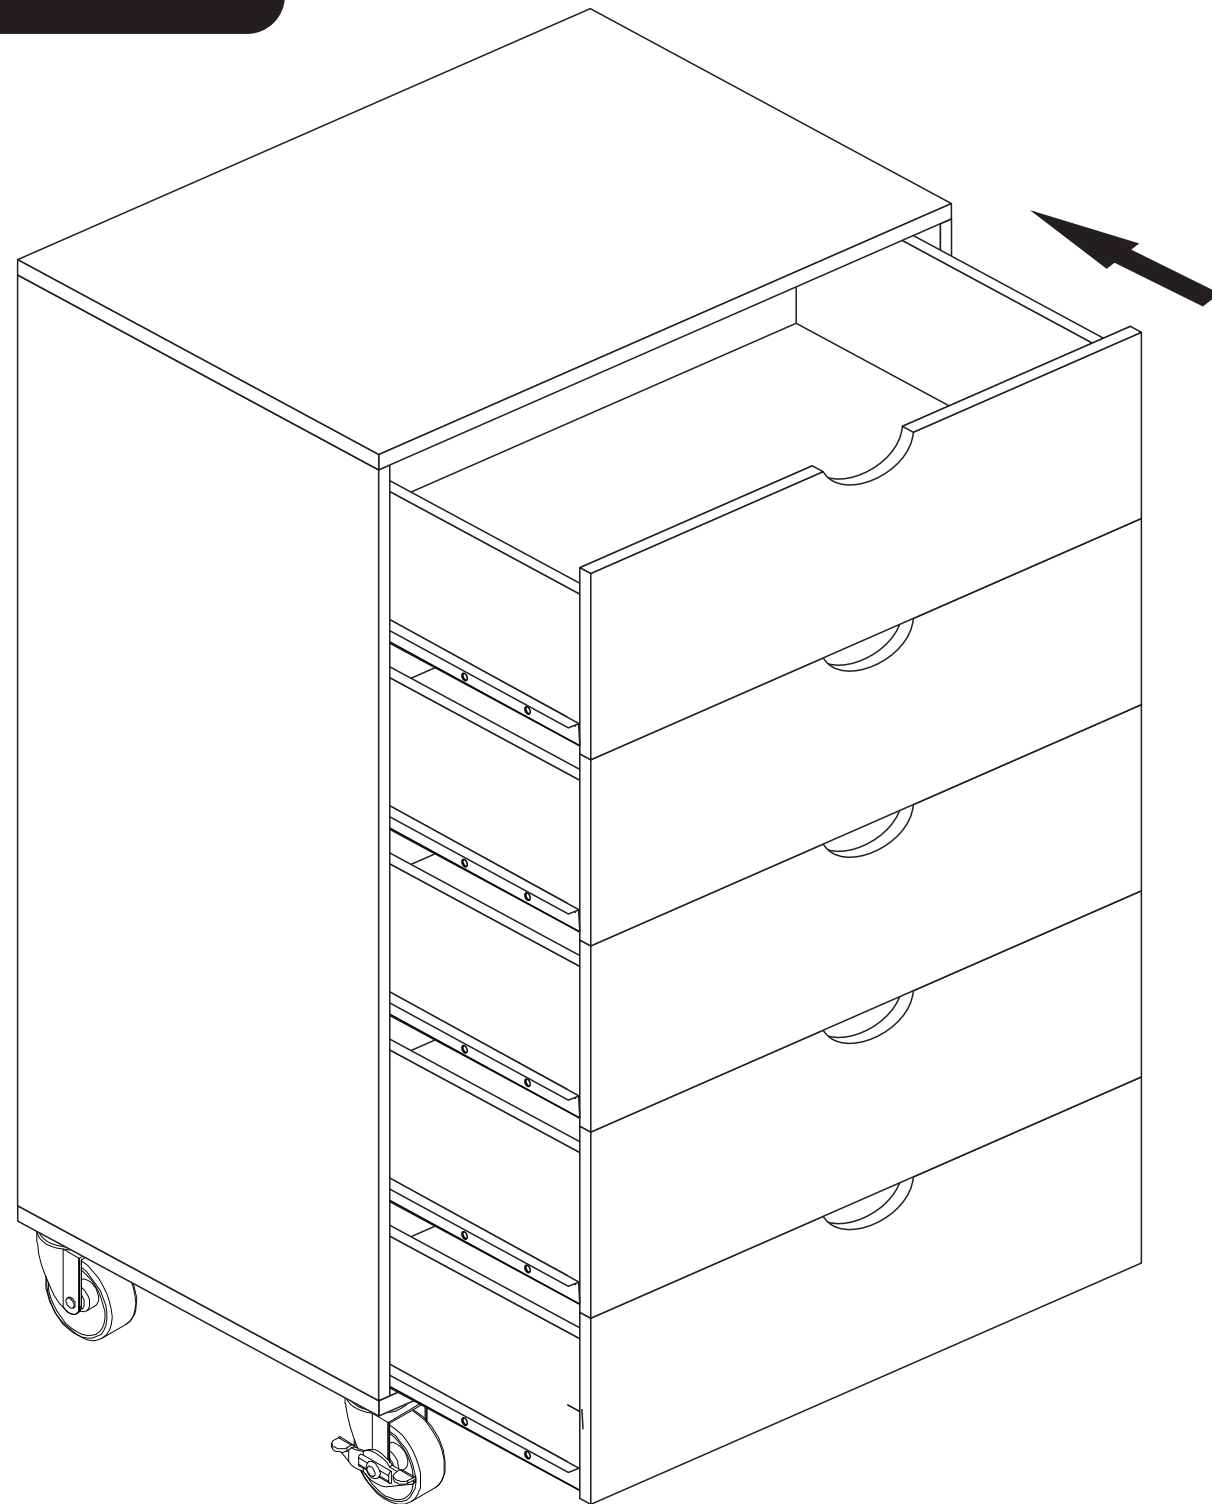

17

14



Complete Installation

18