



STEP 4

Attach Panel (B) to assembled unit and tighten it with Screw (6) using screwdriver.

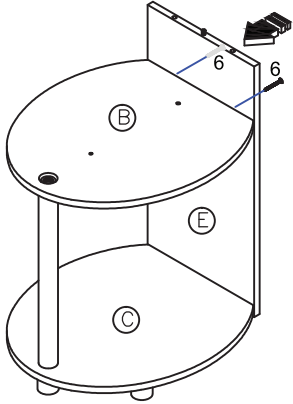


STEP 5

Attach Top Cap (3) to Panel (B) and tighten it with Long Round Pole (2).

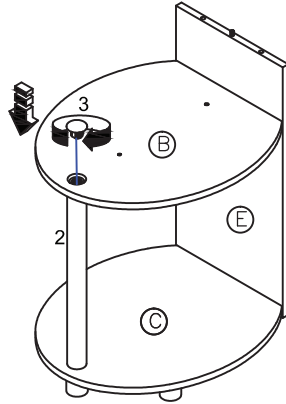


STEP 6

Attach Panel (D) to Panel (B) with Dowel (7) and Screw (6), as shown.

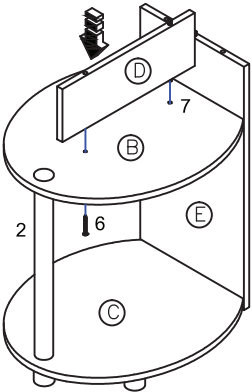


STEP 7

Attach Panel (A) to assembled unit with Mini Fix Bolt/ Cam (1A&1B). Lock Mini Fix Cam (1B) using screwdriver.

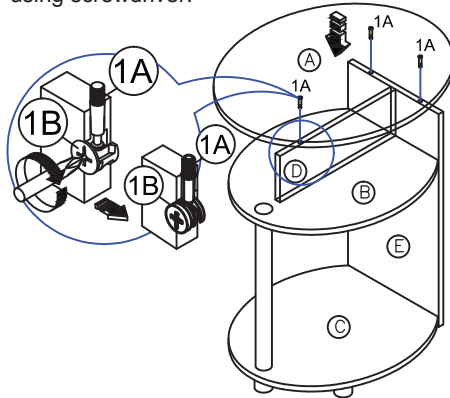

Recommended Maximum Weight

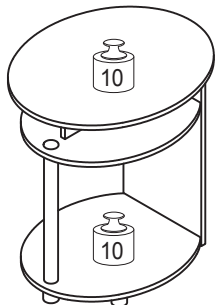

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

Assembly Instruction

Simple Design Oval End Table
(Set of Two)


DIMENSION : 18.9"(W) x 20.3"(H) x 15.5"(D)

00:30


Approx. 30 minutes









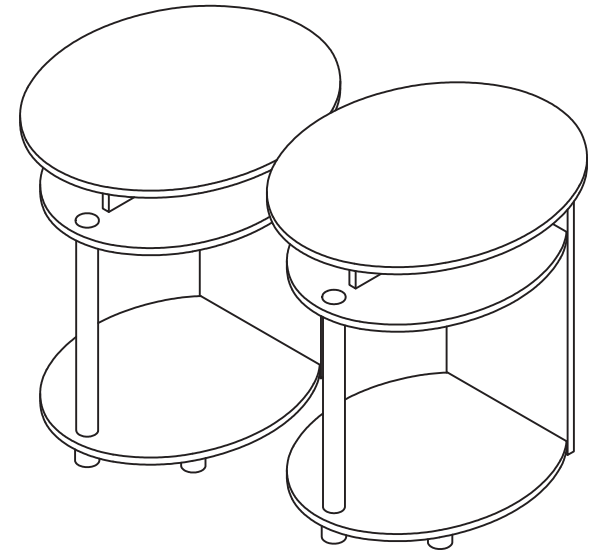






Recomm. 1 Person




Tools Required



No	Hardware List	Qty
1	Mini Fix Bolt& Cam  1A  1B	6pcs
2	Long Round Pole 	2pcs
3	Top Cap 	2pcs
4	Round Leg 	2pcs
5	Plug Round Leg 	4pcs
6	C/B Screw 	10pcs
7	Dowel 	10pcs

No	Parts List	Qty
A	Top Panel 	2pcs
B	Shelf Panel 	2pcs
C	Bottom Panel 	2pcs
D	Center Panel 	2pcs
E	Back Panel 	2pcs

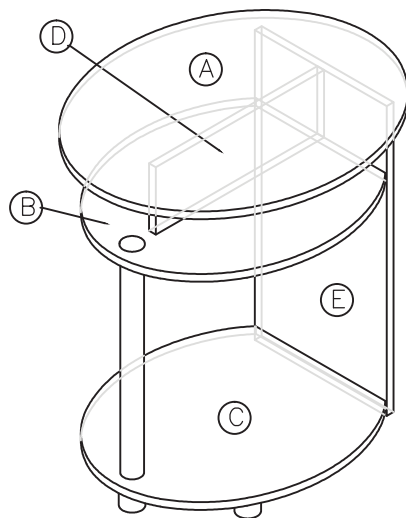


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 1

- 1.1 Screw Mini Fix Bolt (1A) into pre-drill hole on Panel (A) using screw driver.
- 1.2 Insert Dowel (7) to Panel (B)(C)(D)&(E) using hammer.
- 1.3 Attach Plug Round Leg (5) into pre-drill hole on Panel (C).
- 1.4 Insert Mini Fix Cam (1B) to Panel (D&E) as shown.

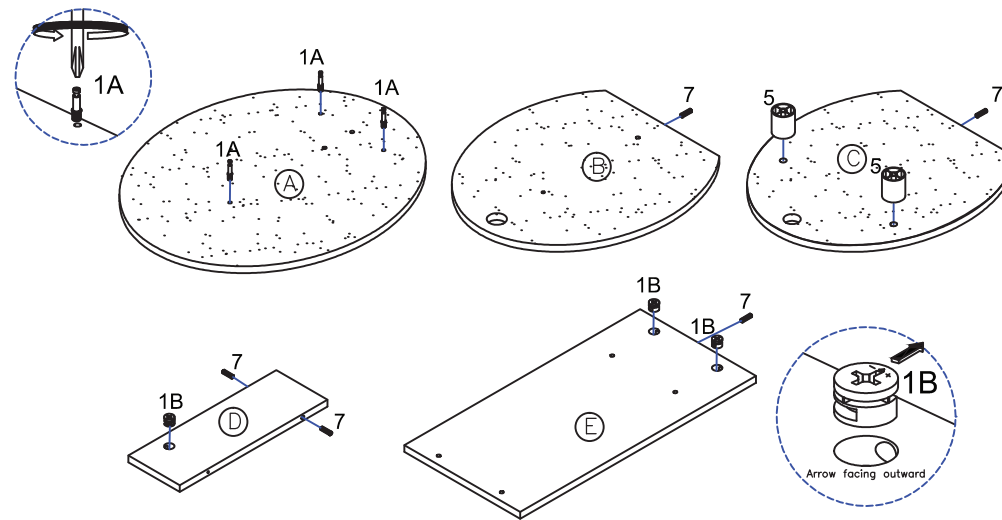

STEP 2

Attach Long Round Pole (2) to Panel (C) and tighten it with Round Leg (4) as shown.

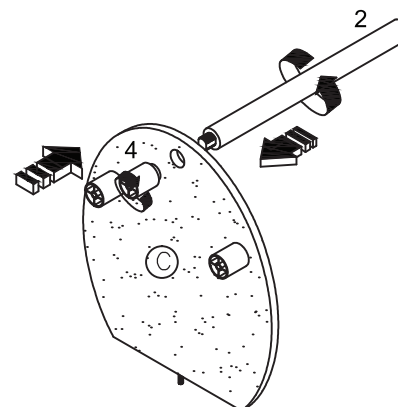

STEP 3

Attach Panel (E) to Panel (C) and tighten it with Screw (6) using screwdriver.

