


WALL MOUNT

ASSEMBLY INSTRUCTIONS

WARNING

Serious or fatal crushing injuries can occur from furniture tip over. To prevent tip over this furniture must be used with the wall attachment device(s) provided. The screw(s) and plug(s) for the wall are not suitable for all wall types. Use screw(s) and plug(s) suitable for your walls. If you are uncertain, seek professional advice. Read and follow each step of the instructions carefully.

This furniture must be installed with the Wall Mount – Anti-Tip Kit to prevent serious or fatal injuries.

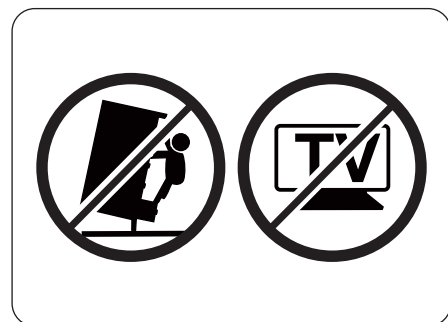

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

WALL MOUNT

ASSEMBLY INSTRUCTIONS



A 2x Straps with Brackets



B 2x Allen Bolt Flat Head 6x30mm



C 2x S10 Fischer Plugs





D 2x Hex Bolt S10



E 1x L Hex Key 4"

Prepare for Installation


- Use an 8mm drill bit (not included) for Step 3.
- Use a 16/17mm wrench (not included) for Step 4. Note: the Hex Bolt head diameter is 10mm.
- Ensure the product is on a flat, level surface. Features may not function properly on sloped or uneven surfaces.
- Wall Mount must be mounted directly into a concrete wall or stud.

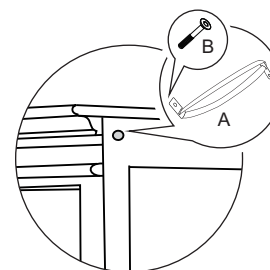

Step 1

Attach the Wall Mount to the Product


- Locate the two holes on the back of the product, one in the top-left corner and one in the top-right.
- Insert Part A and Part B into their respective holes.
- Tighten securely using Part E.

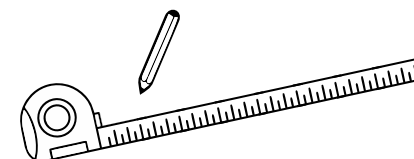

Step 2


Locate the Wall Stud

- Position the product against the wall to determine anchor points.
- Use a stud finder to locate the wall stud and mark the attachment points in pencil.
- Measure to ensure the distance between the marks matches the distance between the straps on the product.

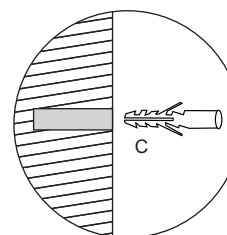

Step 3
Drill Holes


- Drill two holes in the wall aligned with the pencil marks from Step 2.
- These holes will be used to install Part C.

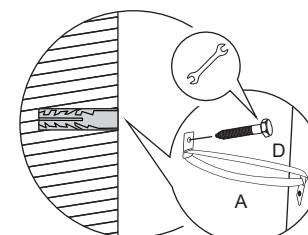

Step 4

Secure the Product to the Wall

Use Part D to securely fasten Part A to the wall from the back of the product. A wrench (not included) will be needed to tighten Part D properly.

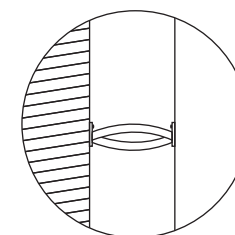

Step 5
Final Check

The wall mount is now installed, and the product is ready for use.