







WALL CABINET

ASSEMBLY INSTRUCTIONS

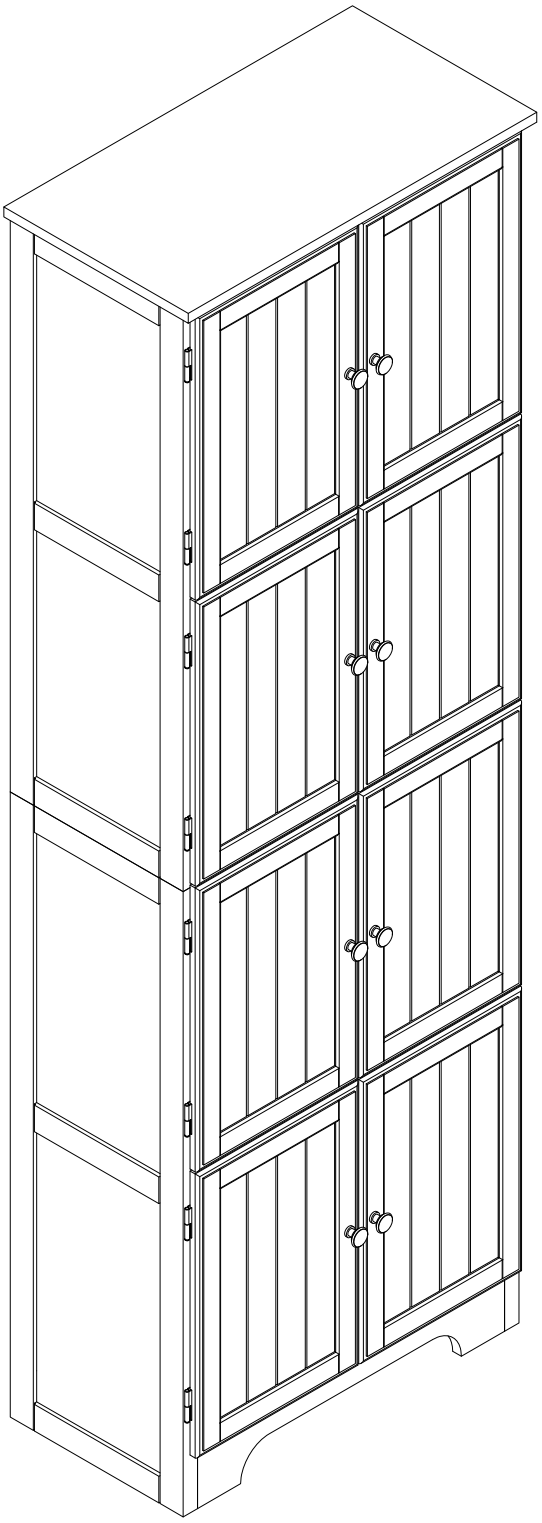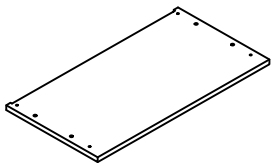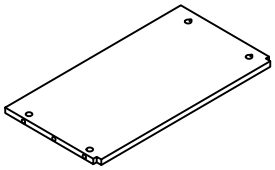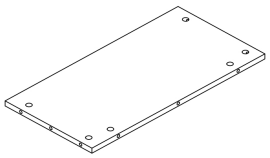
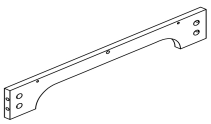
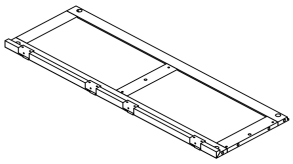
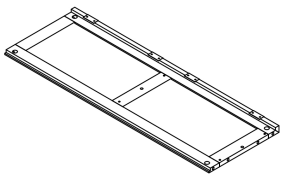
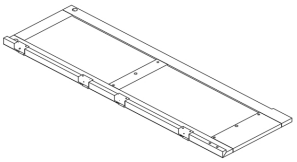


MADE IN CHINA

Part List:



ITEM	DESCRIPTION	PART	QTY
1	Top		1
2	shelf		3
3	Bottom		1
4	Apron		1
5	Upper left side		1
6	Upper right side		1
7	Lower left side		1

Part List:

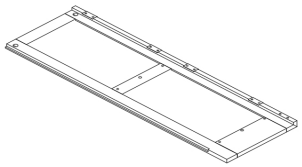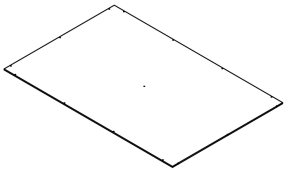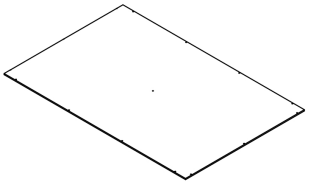
ITEM	DESCRIPTION	PART	QTY
8	Lower right side		1
9	Upper back panel		1
10	Lower back panel		1
11	Left door		4
12	Right door		4

MADE IN CHINA

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		29
B	Camlock bolt		4
C	Camlock		37
D	Short wooden dowel	 Φ8*30mm	20
F	Knob		8
G	Machine screw	 Φ 4*22mm	8

Hardware List:


ITEM	DESCRIPTION	PART	QTY
H	Back screw	 Φ3*15mm	29
I	Short wood screw	 Φ3*15mm	9
J	Magnet		4
K	Safety wall strap		1
L	Plastic anchor		1
M	Mounting screw	 Φ4*38mm	1
N	Sticker for C:Camlock	 Φ 20mm	37


Tip: It is recommended to keep all hardware in a box to avoid loss during installation.

ASSEMBLY INSTRUCTION

* Required screwdriver & mallet, not included.
* Before discarding packing materials, please check to make sure that all parts and hardware is present.
* Two people needed for assembly.
* Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
* Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Guideline For Assembling of Cam Lock(A & B)

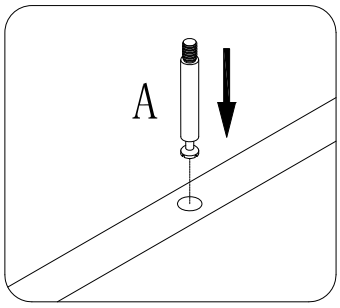


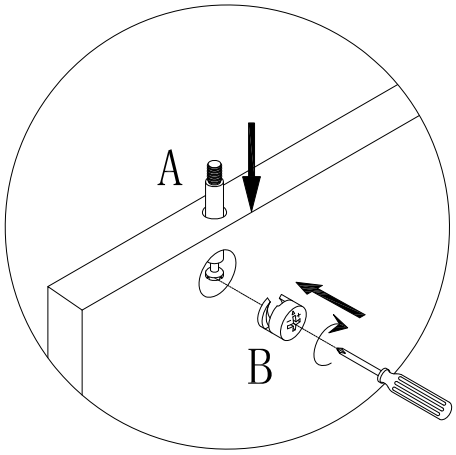


Screw camlock bolt (A) to wood part.
Do not assemble camlock (B) unless instructed.
To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

ASSEMBLY INSTRUCTION


STEP 1

A:  3PCS

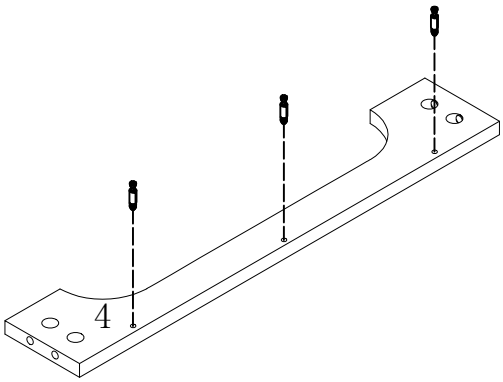

STEP 2

C:  3PCS

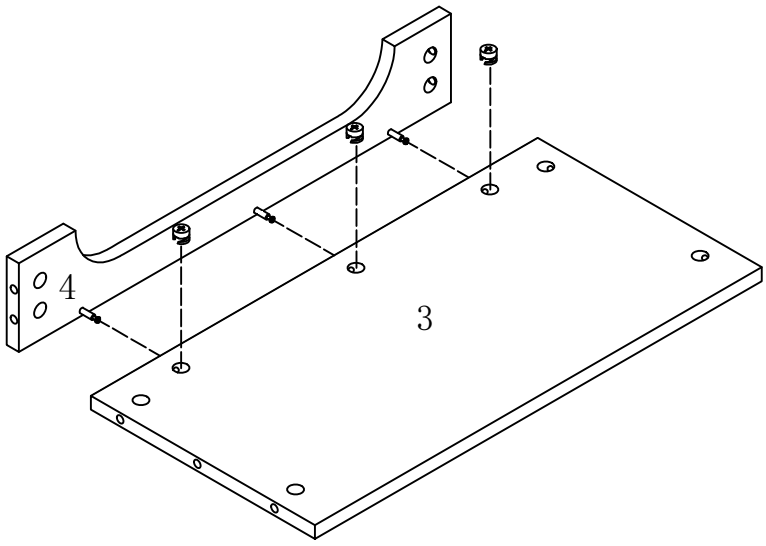


MADE IN CHINA

ASSEMBLY INSTRUCTION

STEP 3


A:	4PCS
J:	1PCS
I:	2PCS

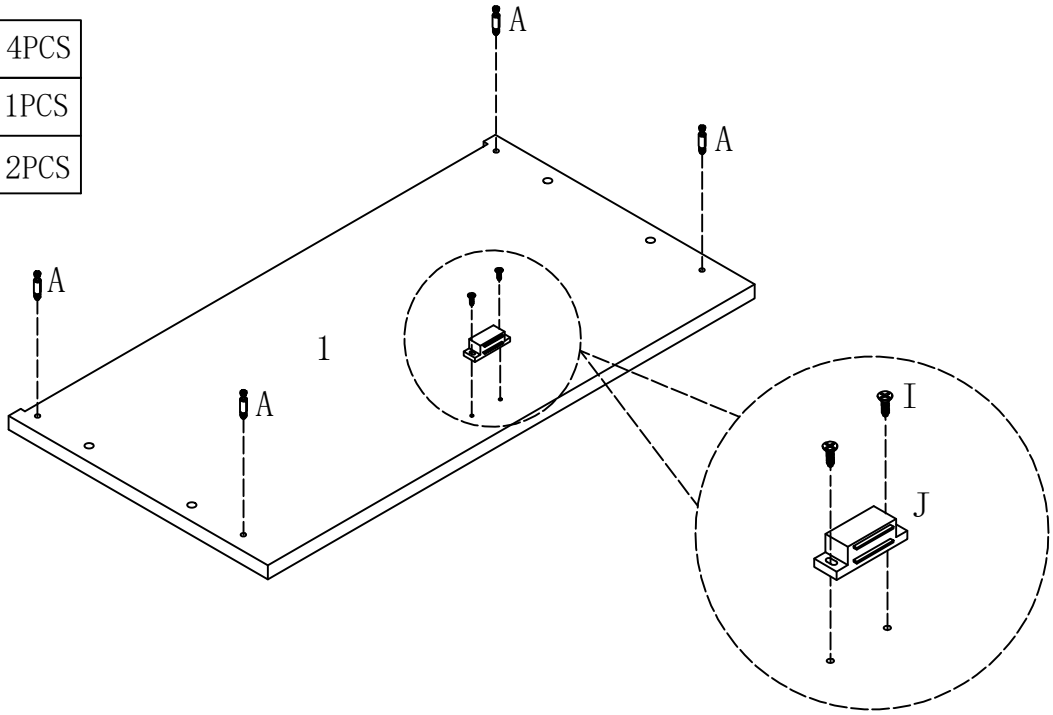

STEP 4

J:	3PCS
I:	6PCS

X3

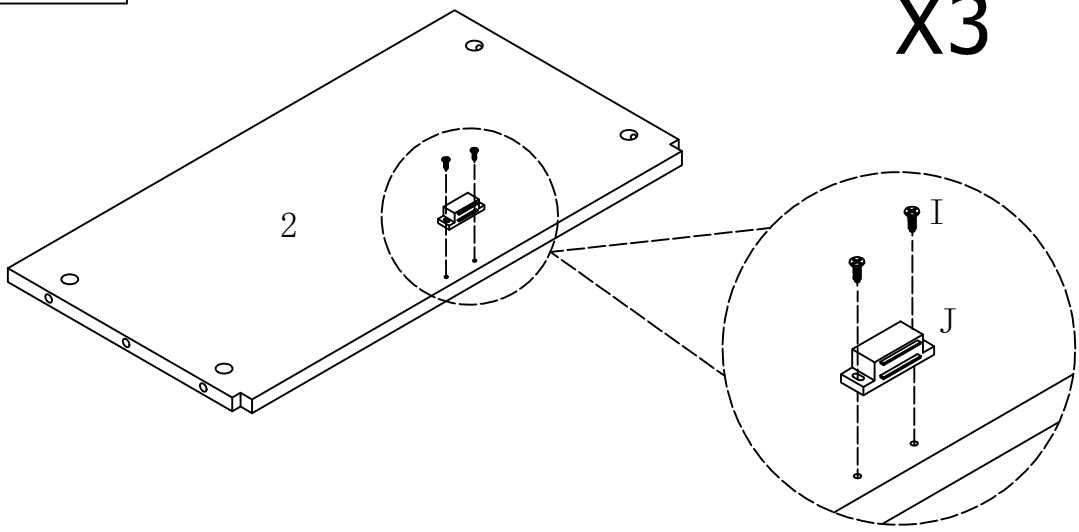


MADE IN CHINA

ASSEMBLY INSTRUCTION


STEP 5

A: 8PCS

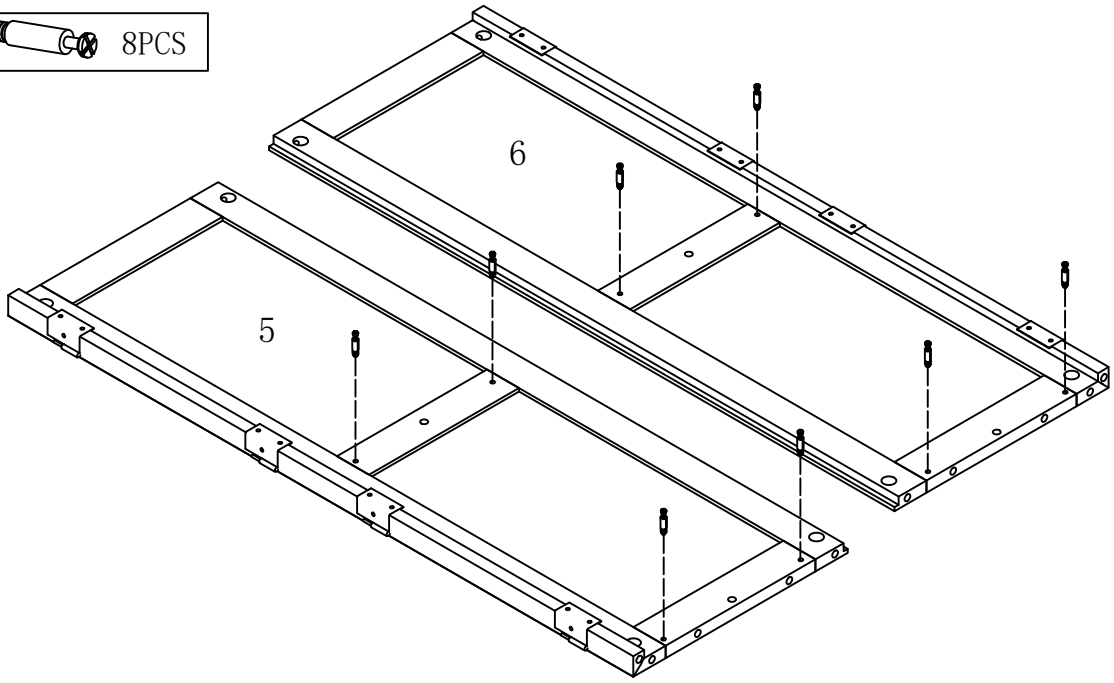

STEP 6

A: 12PCS

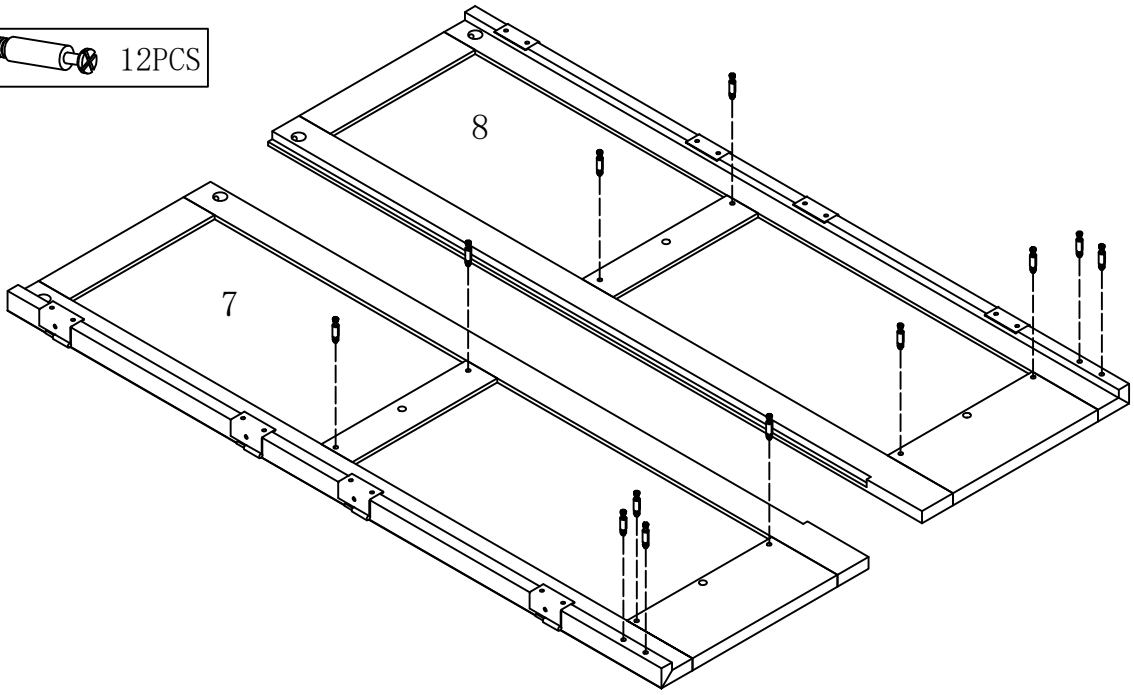


MADE IN CHINA

ASSEMBLY INSTRUCTION


STEP 7

C:		12PCS
D:		4PCS

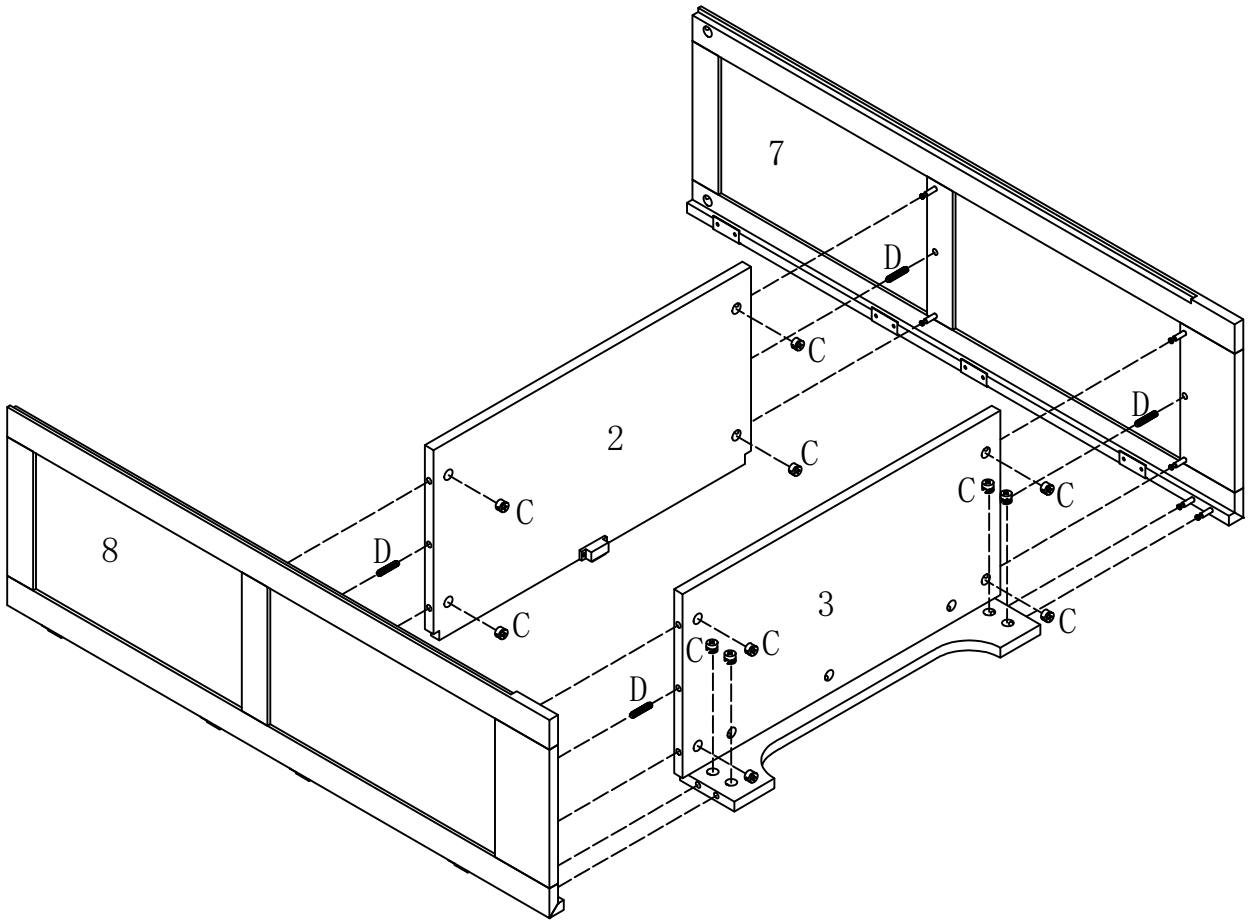

ASSEMBLY INSTRUCTION

STEP 8

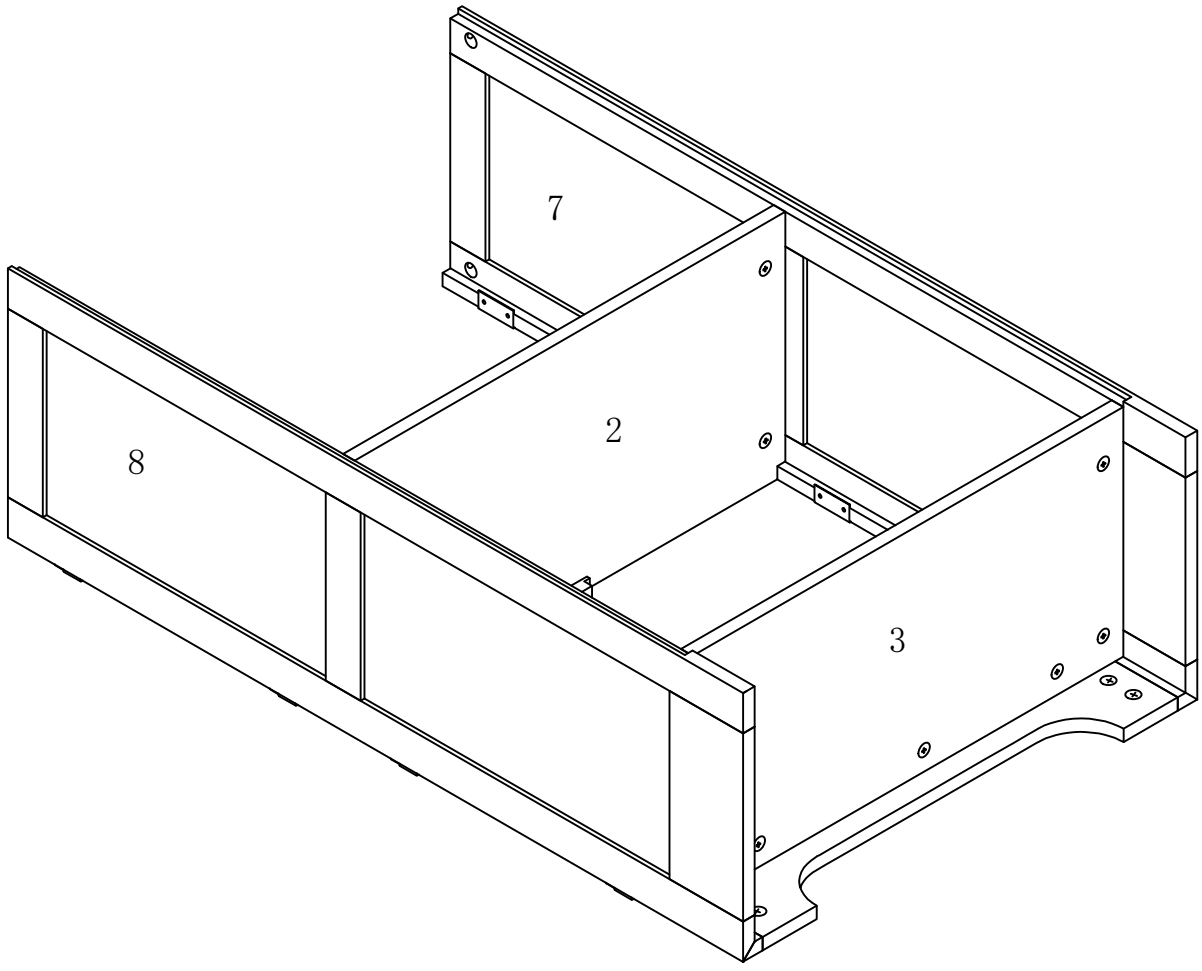


MADE IN CHINA

ASSEMBLY INSTRUCTION


STEP 9


C:		8PCS
D:		4PCS

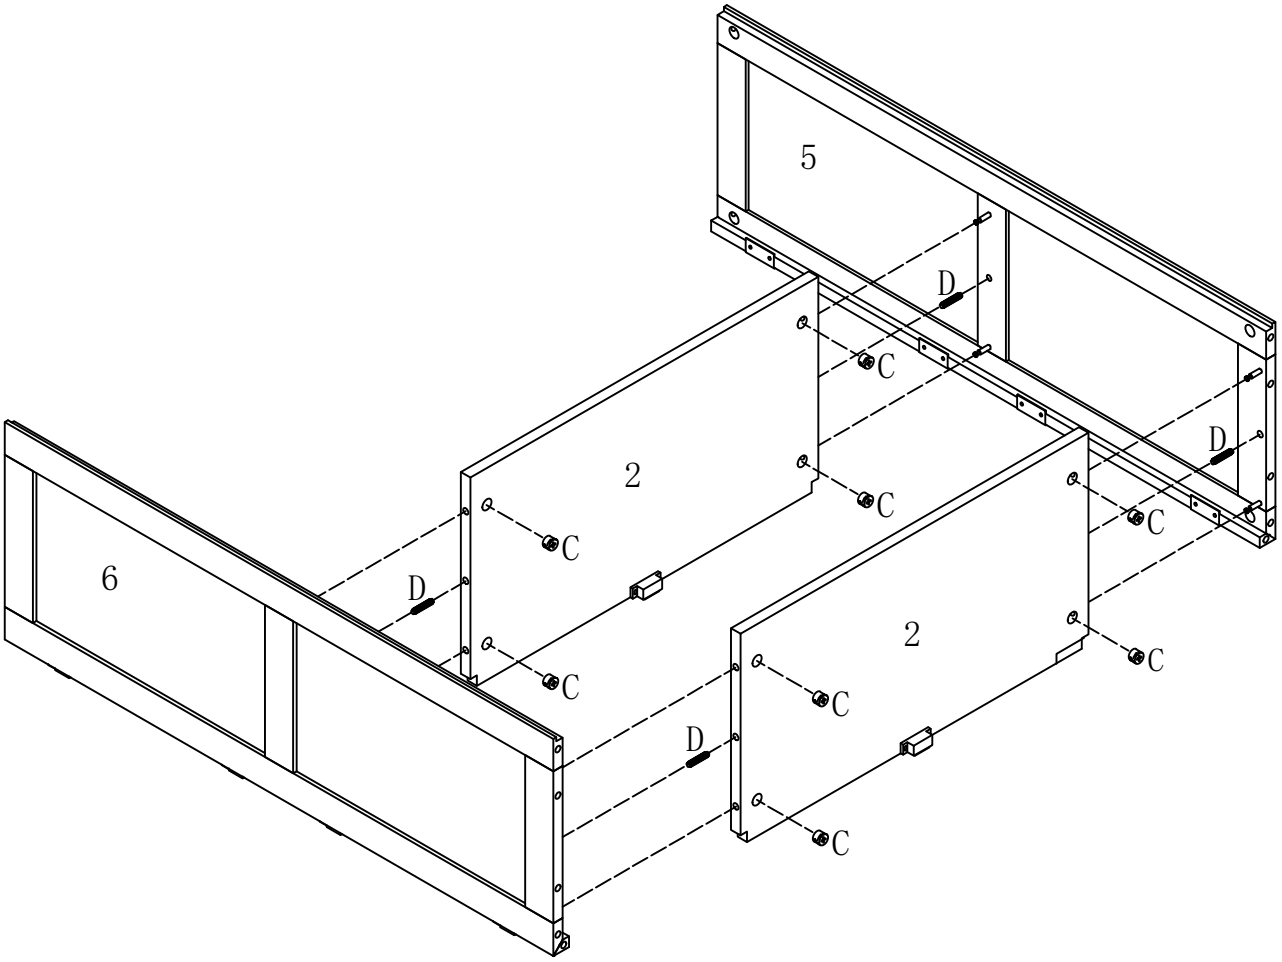

ASSEMBLY INSTRUCTION

STEP 10


B:		4PCS
C:		8PCS
D:		6PCS

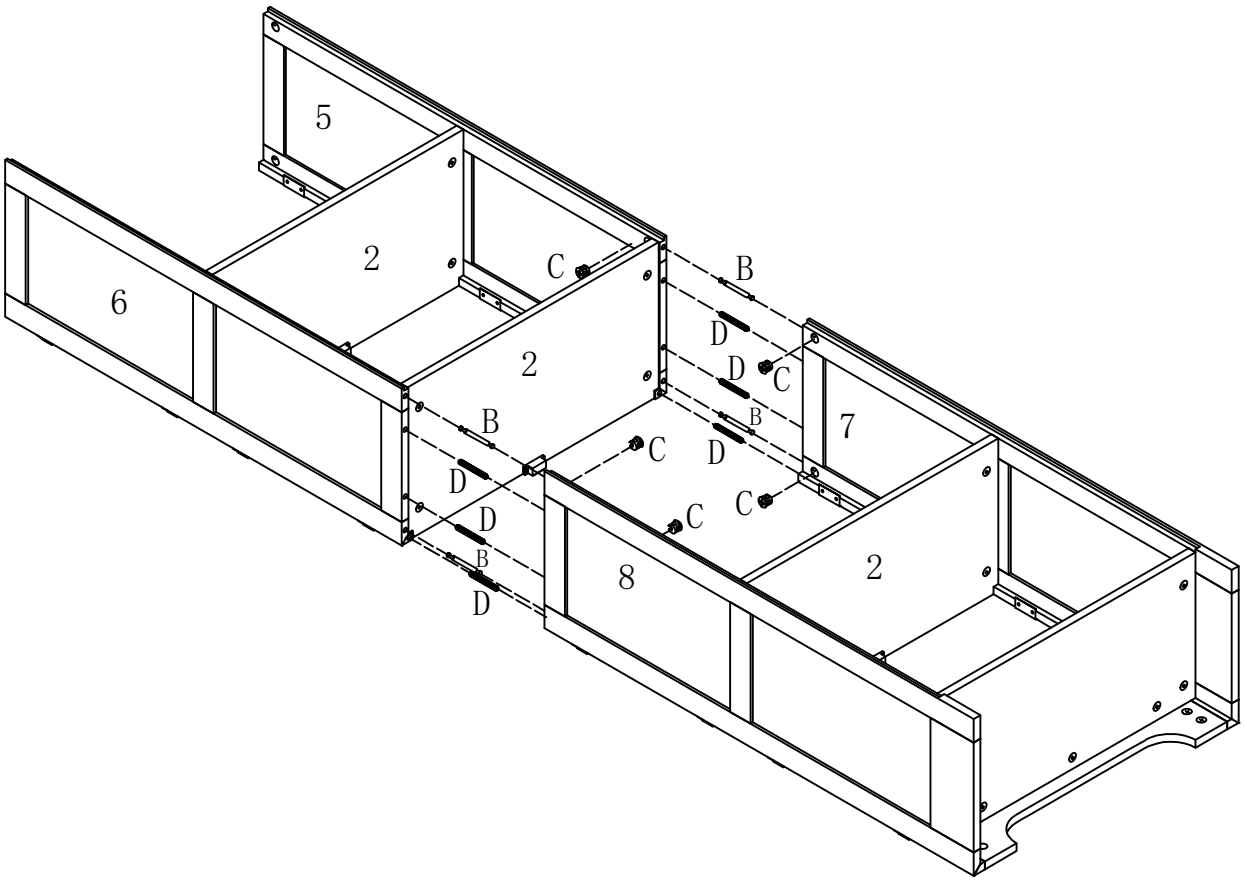


MADE IN CHINA

ASSEMBLY INSTRUCTION

STEP 11

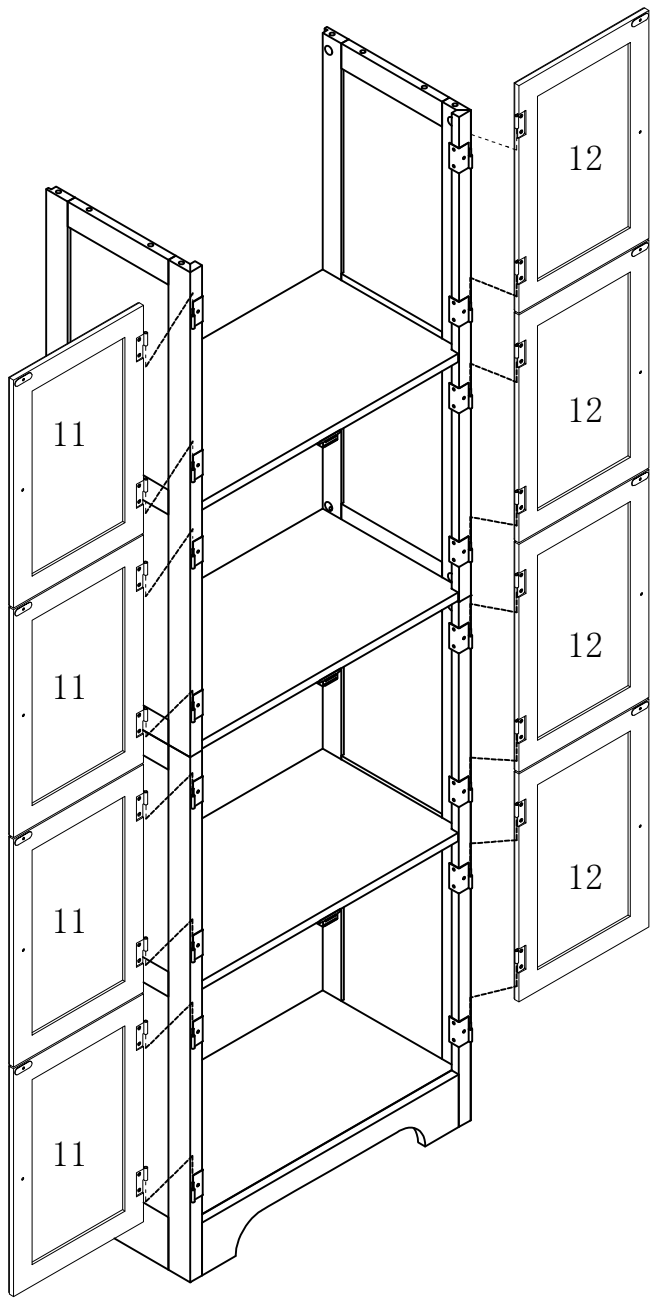


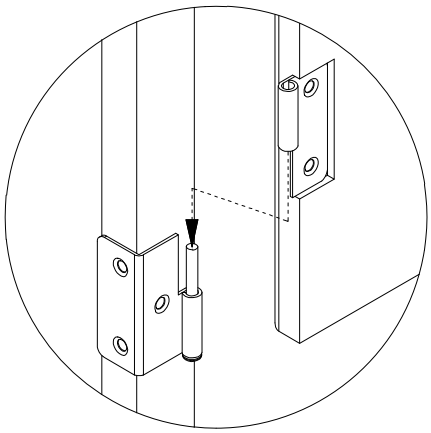

ASSEMBLY INSTRUCTION

STEP 12

C:		4PCS
D:		4PCS
F:		8PCS
G:		8PCS

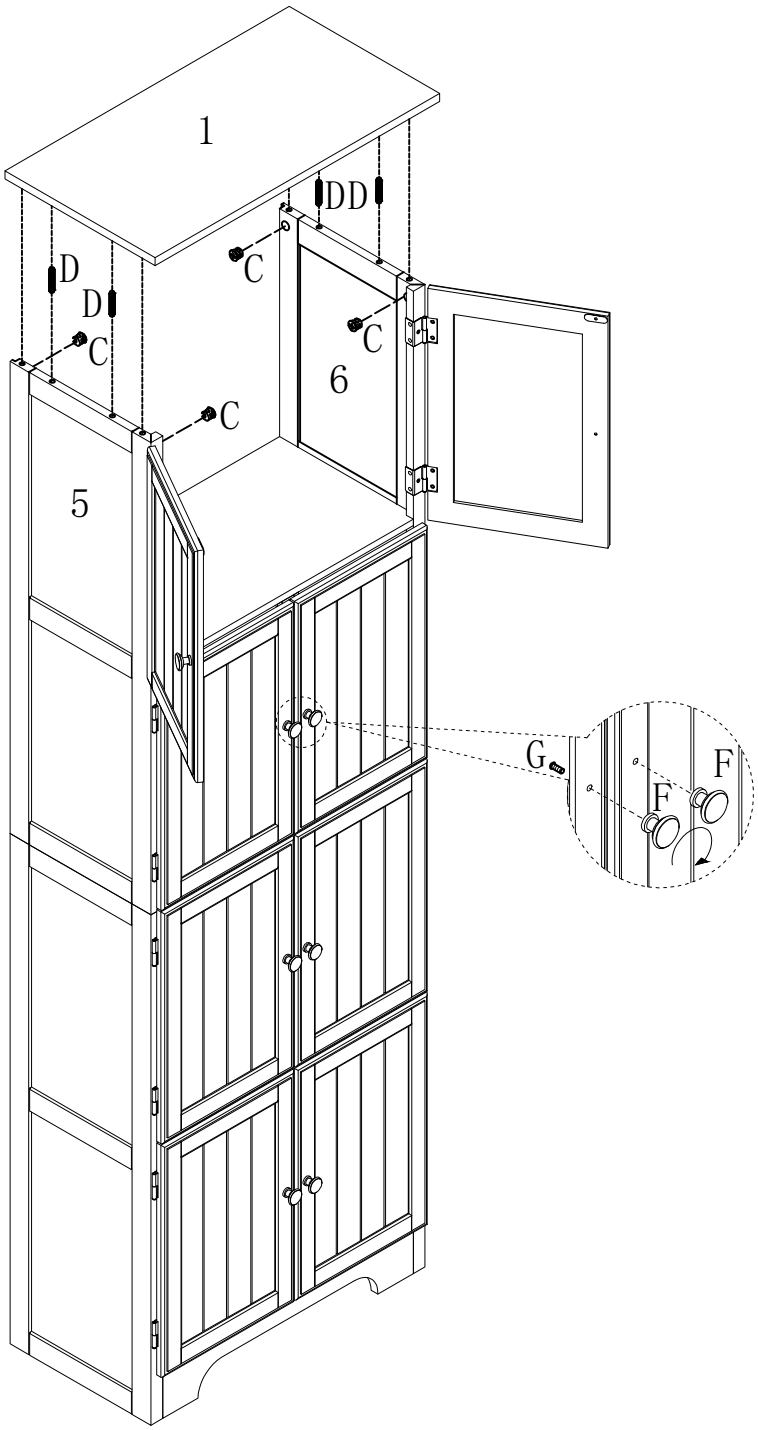


MADE IN CHINA

ASSEMBLY INSTRUCTION

STEP 13

N: 36PCS

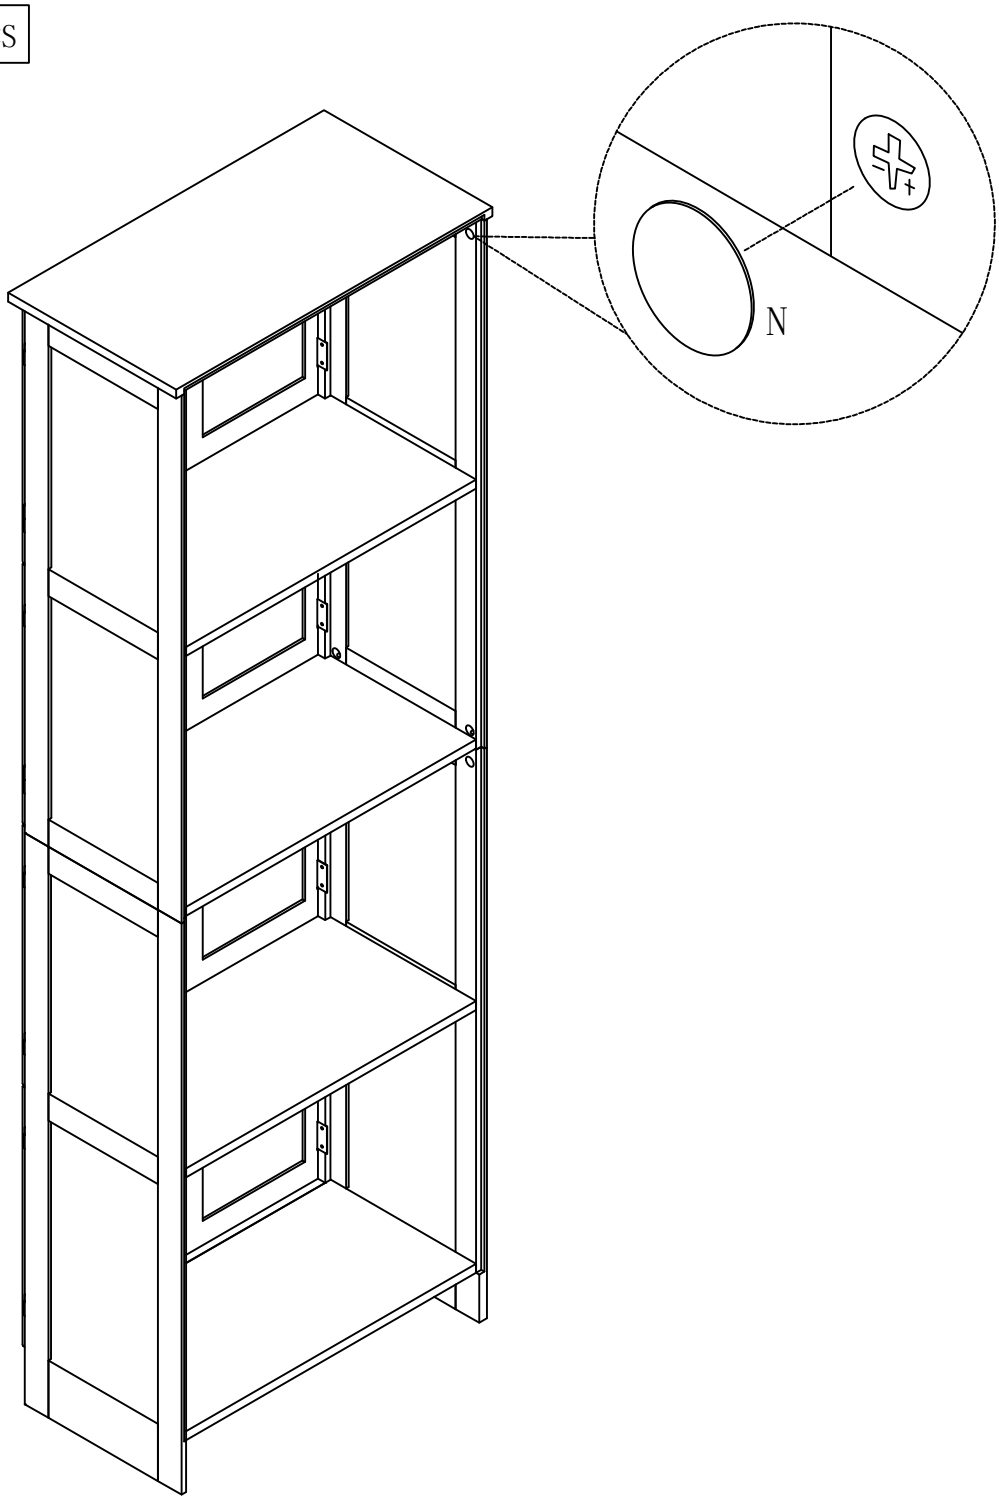


MADE IN CHINA

ASSEMBLY INSTRUCTION

STEP 14

H:		27PCS
K:		1PC

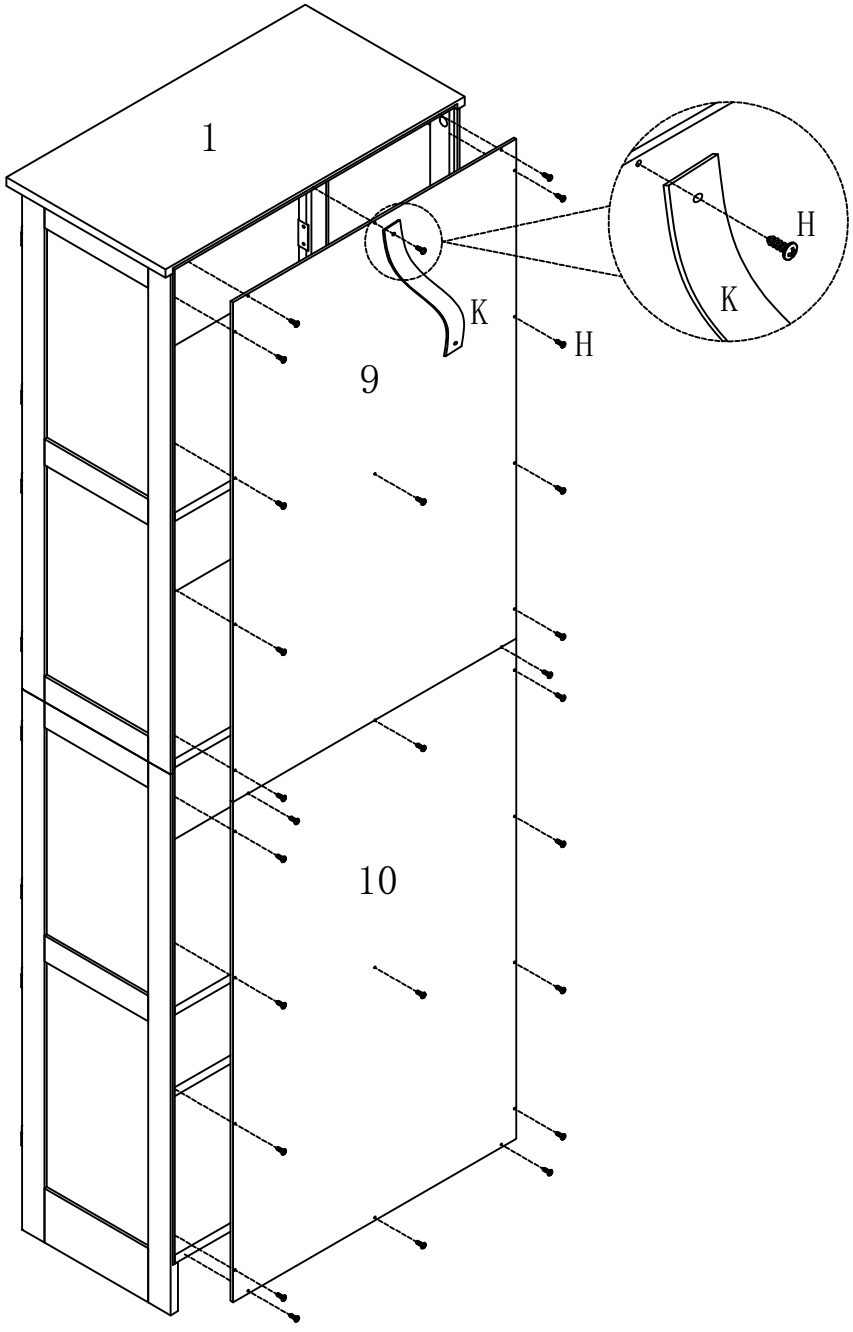

STEP 15

L:	1PC
M:	1PC

