

Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
 - ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  • Do not put hot items directly on furniture surface.
 - ⊘  • Do not clean furniture with harsh cleansers or polish.
 - ⊘  • Do not place furniture under direct sunlight.
 - ⊘  • Do not place furniture near heating or cooling vents.
 - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  • Do not place furniture outside . For indoor use only.
 - ⊘  • Stains may be removed with mild soap solution and damp cloth.
 - ⊘  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

Upholstered Bed

N757P484439/N757P484440

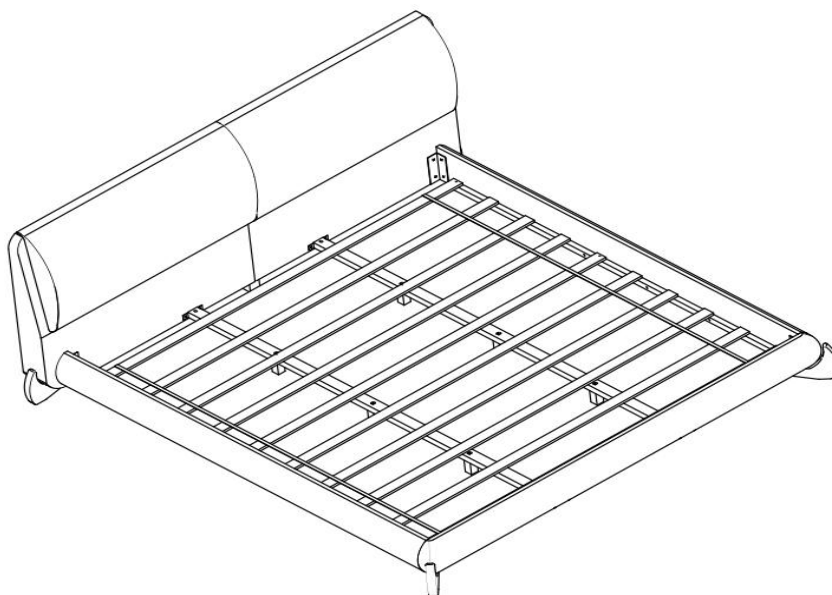





Parts List



N757P484439

Label	Picture	Description	QTY
C		Footboard	1
D		Side rail	2
E		Bed Slat	1
I		Center Rail	2

Parts List


N757P484440

A		Headboard A	1
B		Headboard B	1
F		Backrest cushion-F	1
G		Leg-G	2
H		Leg-H	2
J		Middle support leg	6
K		L-Iron K	2
L		L-Iron L	2
M		Iron Bracket	4
N		Leg-N	1
O		Backrest cushion-O	1

Hardware		N757P484440	
Label	Picture	Description	QTY
①		Bolt Ø1/4"×3/4"	25
②		Bolt Ø1/4"×1-1/4"	6
③		Bolt Ø1/4"×2-1/2"	3
④		Bolt Ø5/16"×2"	5
⑤		Bolt Ø5/16"×1-1/2"	5
⑥		Bolt Ø1/4"×1-1/2"	5
⑦		Flat Washer Ø5/16"×16mm×1.5	9
⑧		Flat Washer Ø1/4"× 16mm× 1.5	8
⑨		Screw #8×1"	7
⑩		Allen Wrench 4.0×21×57	1
⑪		Screwdriver (Not provided)	1

Assembly Preparation

Before
Beginning
Assembly
:

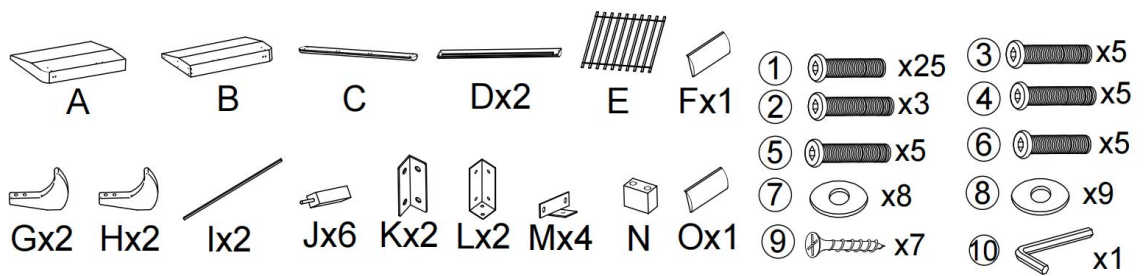

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-





- Save all packaging until finished-

Assembly Steps


Overview

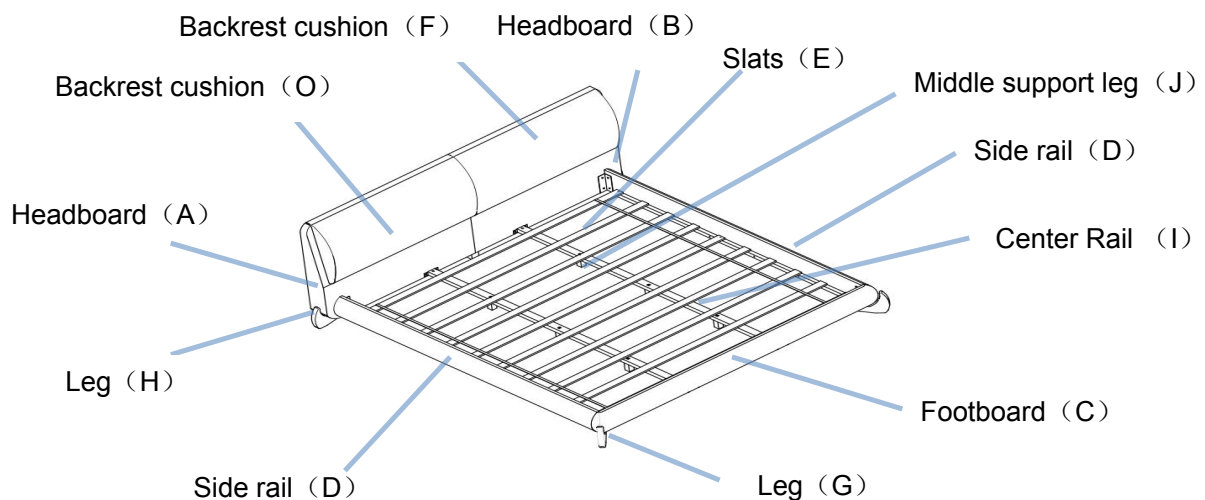

This Upholstered Bed has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Upholstered Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

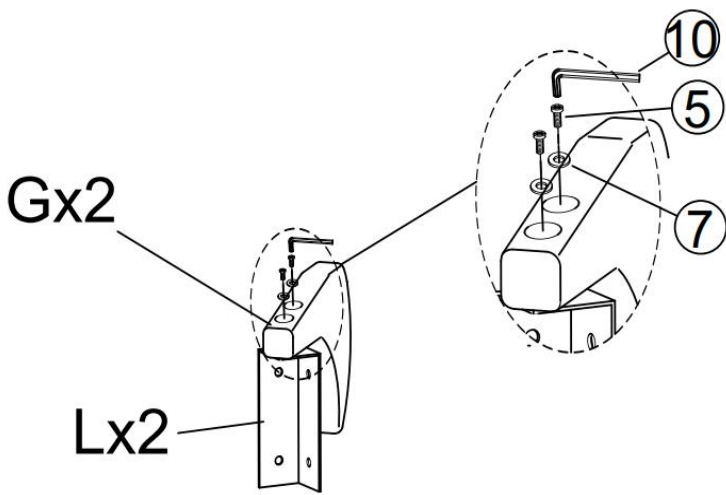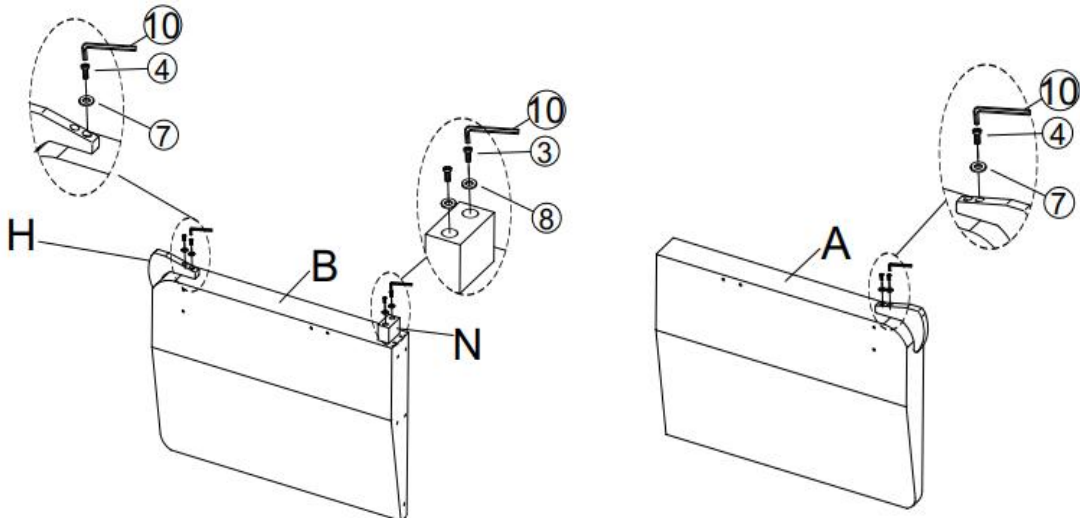
<u>Step 1</u>	
Attach Leg (G) to L-Iron (L) by using Bolt (⑤) , Flat Washer (⑦) and Allen Wrench (⑩) , as pictured above.	
<u>Step 2</u>	
1. Attach Leg (H) to Headboard (B) by using Bolt (④) , Flat Washer (⑦) and Allen Wrench (⑩) ; Attach Leg (N) to Headboard (B) by using Bolt (③) , Flat Washer (⑧) and Allen Wrench (⑩) , as pictured above. 2. Attach Leg (H) to Headboard (A) by using Bolt (④) , Flat Washer (⑦) and Allen Wrench (⑩) , as pictured above.	

Step 3

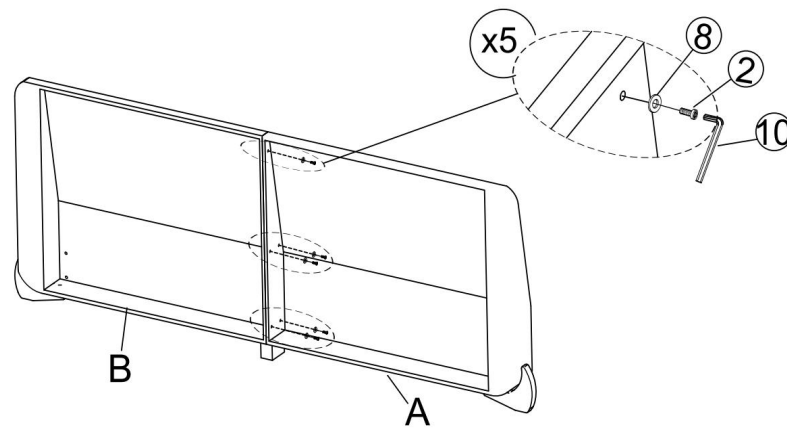


Attach Headboard (A) to Headboard (B) by using Bolt (②) , Flat Washer (⑧) and Allen Wrench (⑩) , as pictured above.

Step 4

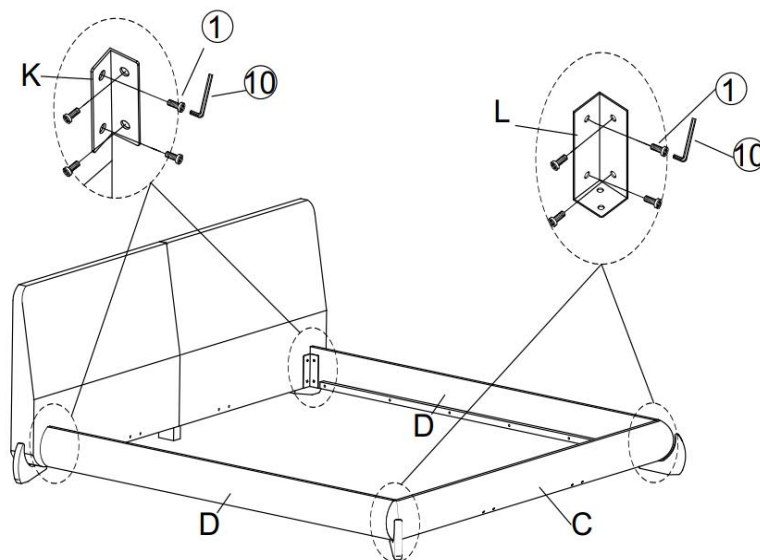


1. Attach L-Iron (K) to Side rail (D) and Headboard (A/B) by using Bolt (①) and Allen Wrench (⑩) ,as pictured above.
2. Attach L-Iron (L) to Side rail (D) and Footboard (C) by using Bolt (①) and Allen Wrench (⑩) ,as pictured above.

Step 5

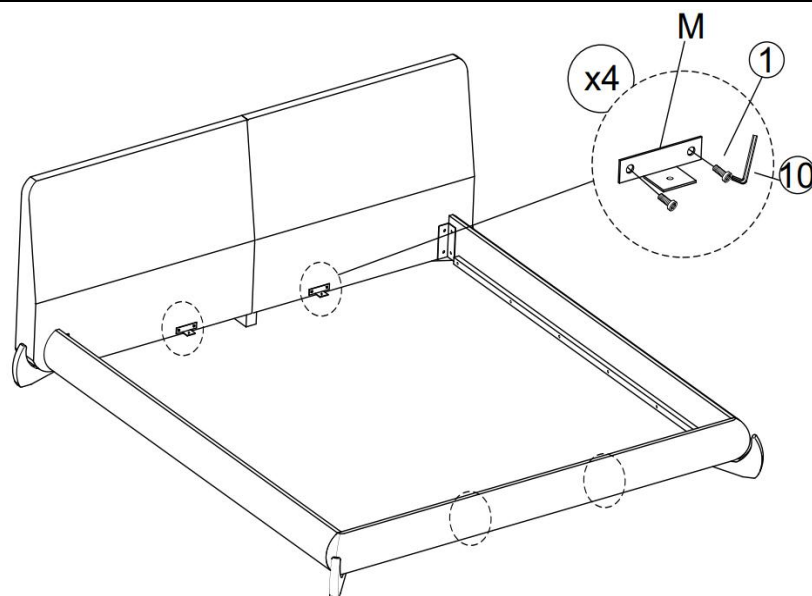


Attach Iron Bracket (M) to Headboard (A/B) and Footboard (C) by using Bolt (①) and Allen Wrench (⑩) , as pictured above.

Step 6

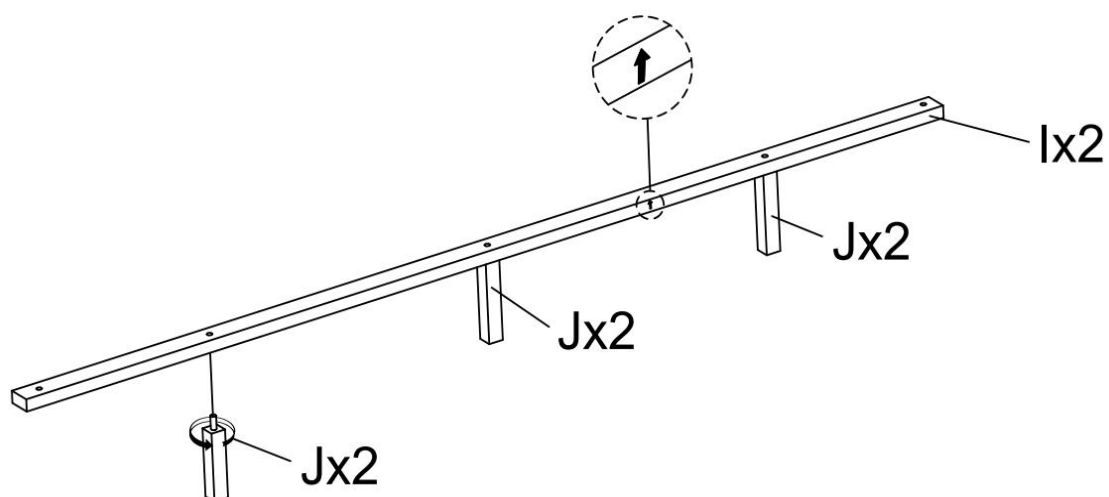


Install Middle support legs (J) on Center Rail (I) , as pictured above.

Step 7

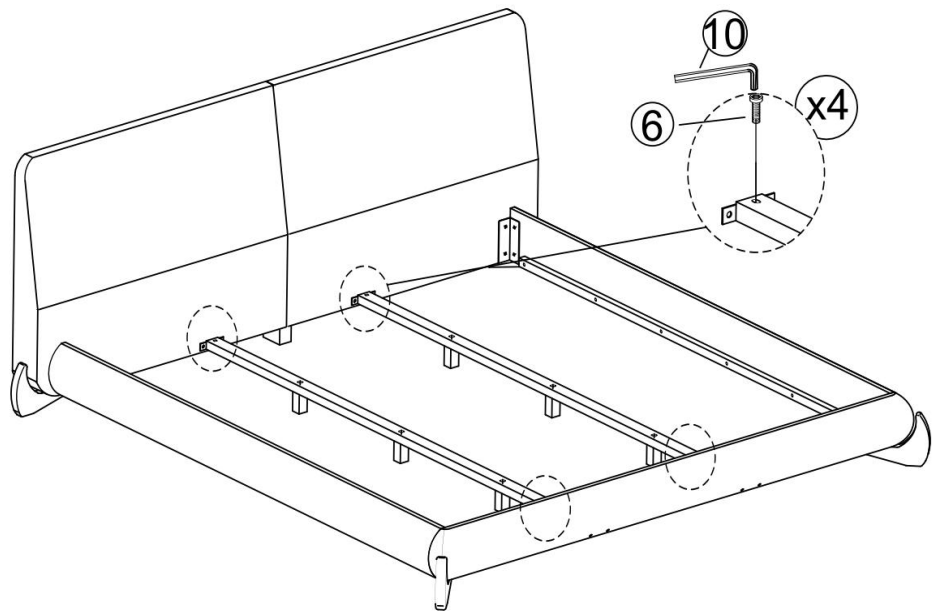


Attach Center Rail (I) to Iron Bracket (M) by using Bolt (⑥) and Allen Wrench (⑩), as pictured above.

Step 8

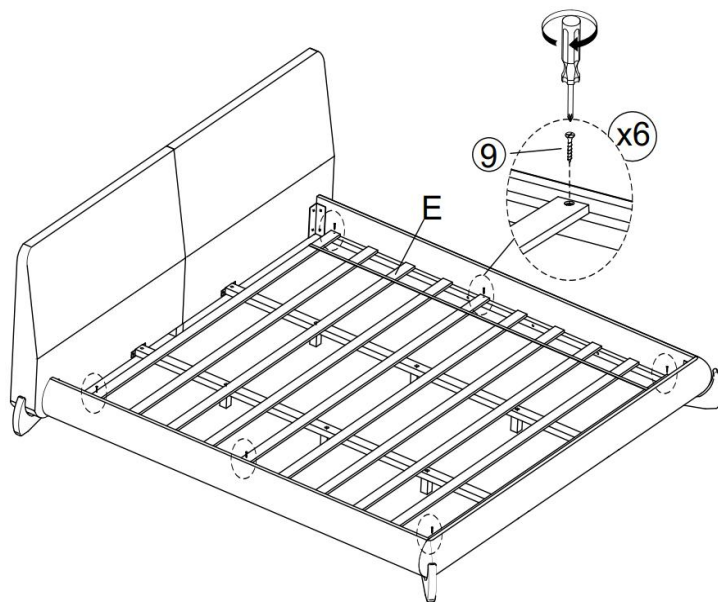


Attach Bed Slat (E) to Side rail (D) by using Screw (⑨) , as pictured above.

Step 9

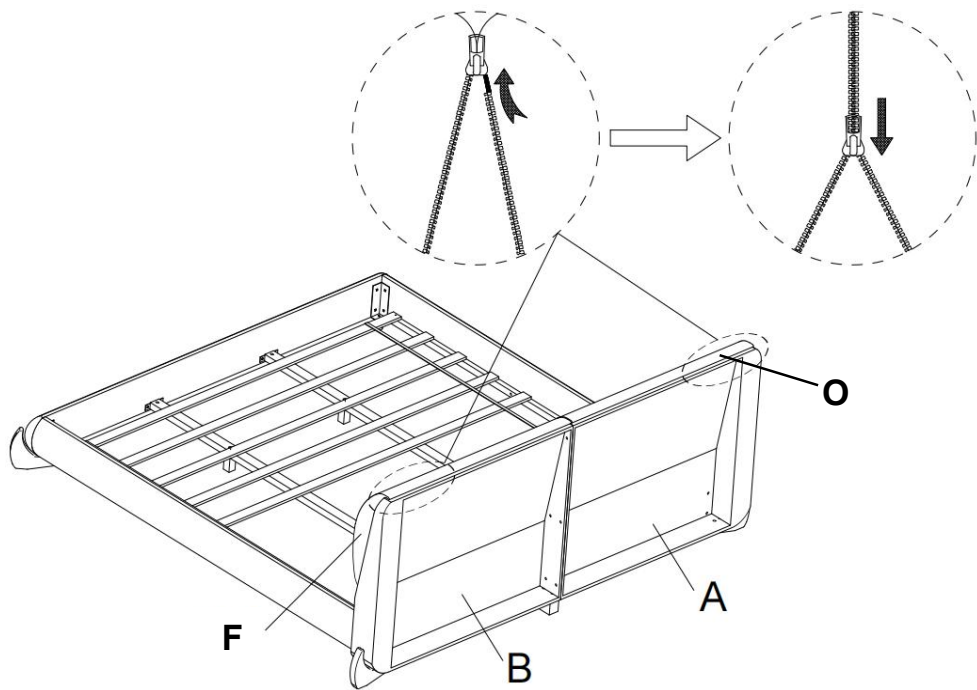

- 1.Align the zipper tapes on both sides of Backrest cushion (F) and Head board (B) , hold the zipper head, and slowly pull the zipper head downwards until it reaches the end, as pictured above;
- 2.Align the zipper tapes on both sides of Backrest cushion (O) and Head board (A) , hold the zipper head, and slowly pull the zipper head downwards until it reaches the end, as pictured above.

Step 10

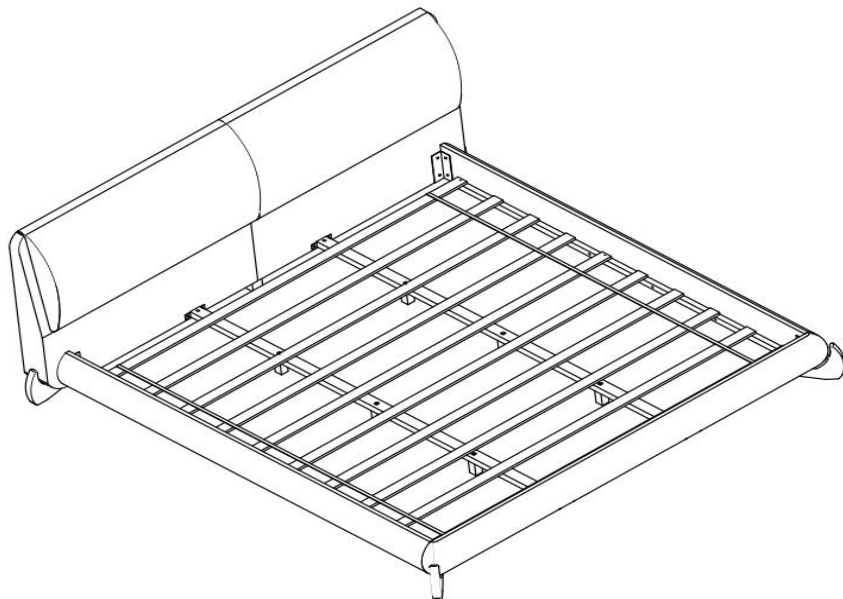

This Upholstered Bed is ready for use.
This Upholstered Bed can only be used on a flat, level surface.