

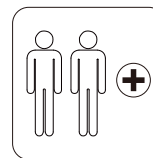
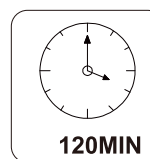
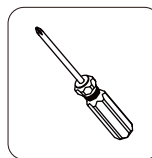
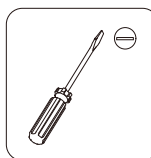


HLG116


Version:1.0

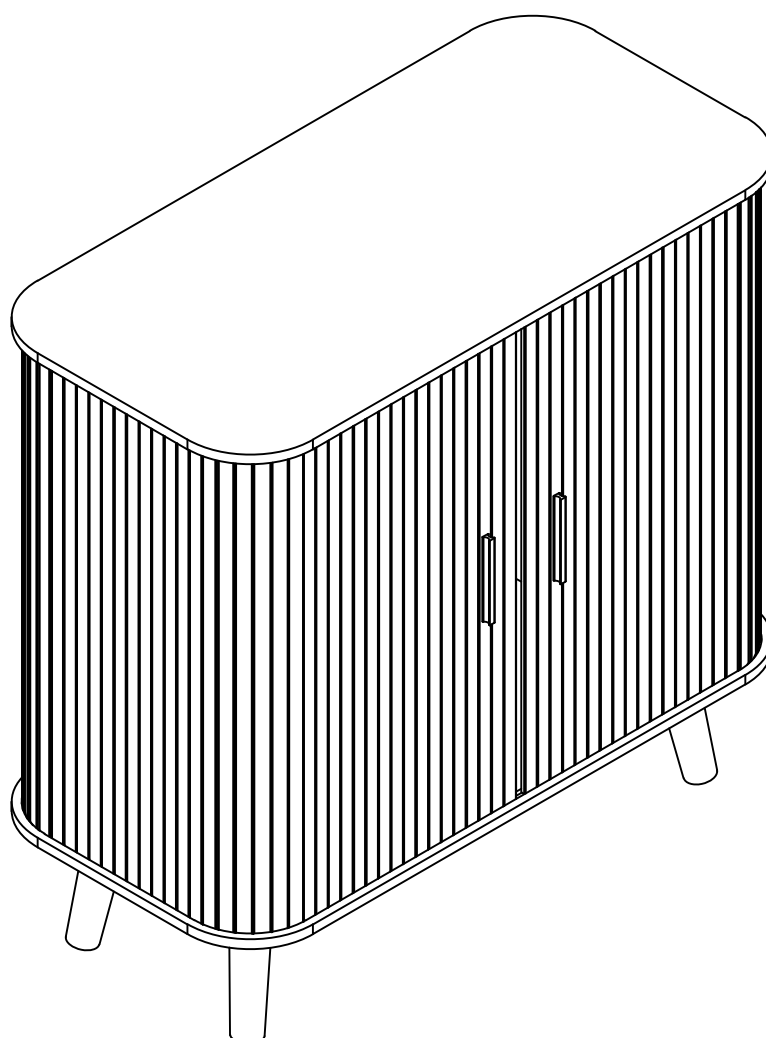


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

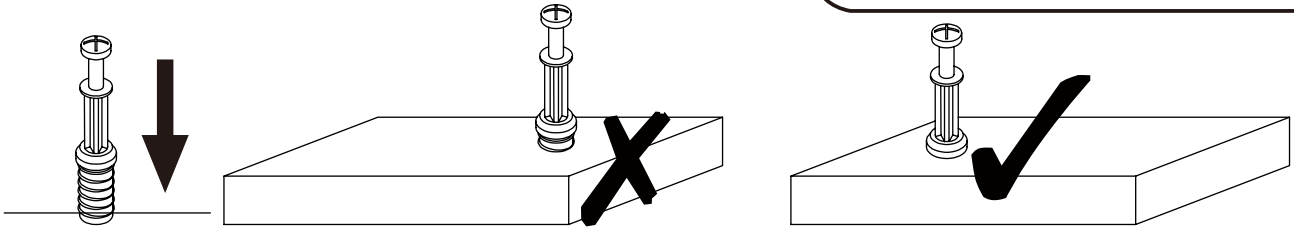


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

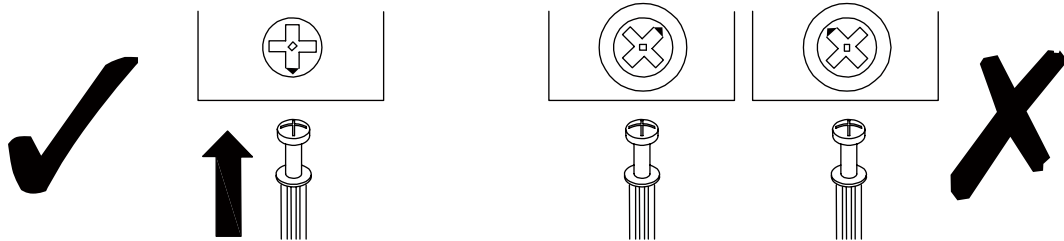

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.





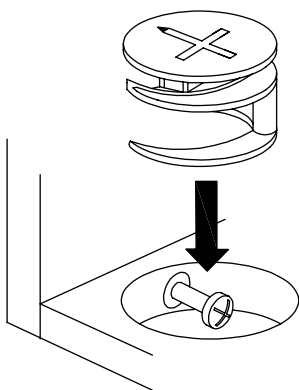


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

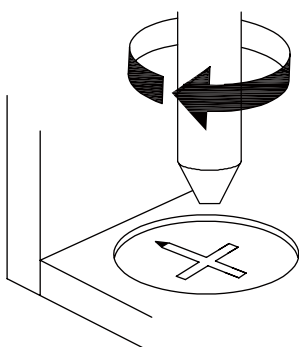


EN_Turn cam lock clockwise to tighten.

PACKING DELALS



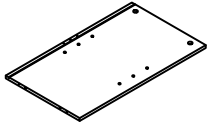
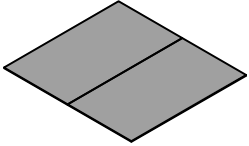
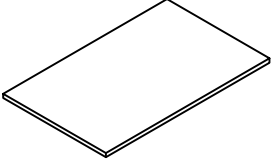

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x1	
⑩		x1	







NO.		QTY	SPARE
	 Hardware Kit	x1	

PARTS

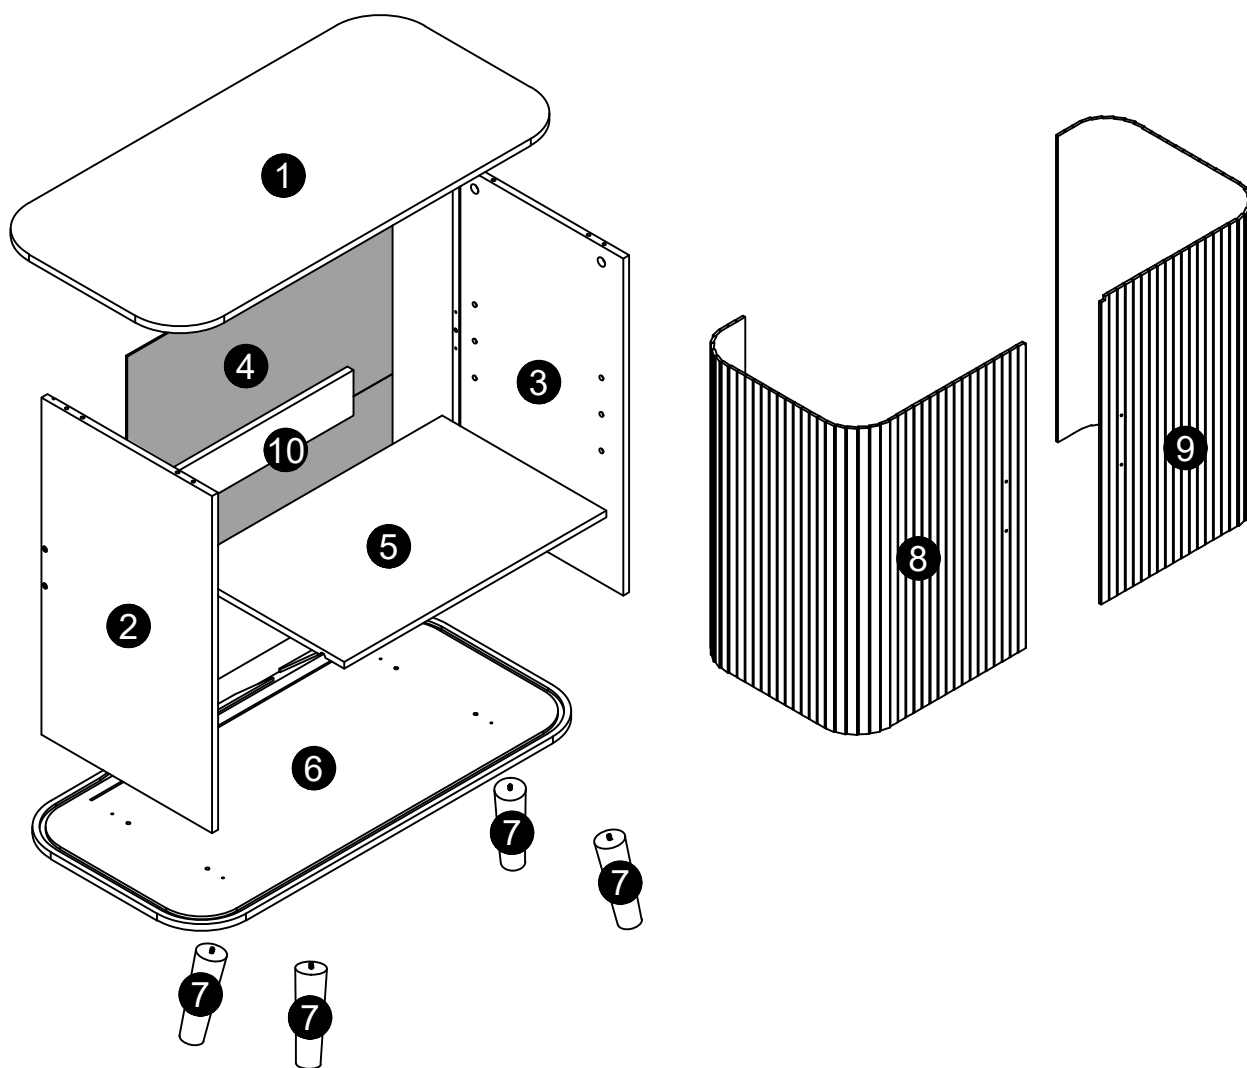

HARDWARE


A x4 $\varnothing 6 \times 35 \text{ mm}$ 	B x4 $\varnothing 15 \times 10 \text{ mm}$ 	C x10 $\varnothing 6 \times 30 \text{ mm}$ +1(spare) 	D x10 $\varnothing 4 \times 35 \text{ mm}$ +1(spare) 	E x4 	F x2 
G x8 $\varnothing 3 \times 16 \text{ mm}$  	H x2 $\varnothing 6 \times 30 \text{ mm}$ 	I x2  	J x4 	K x4 	L x4 
M x20 +2(spare) 					

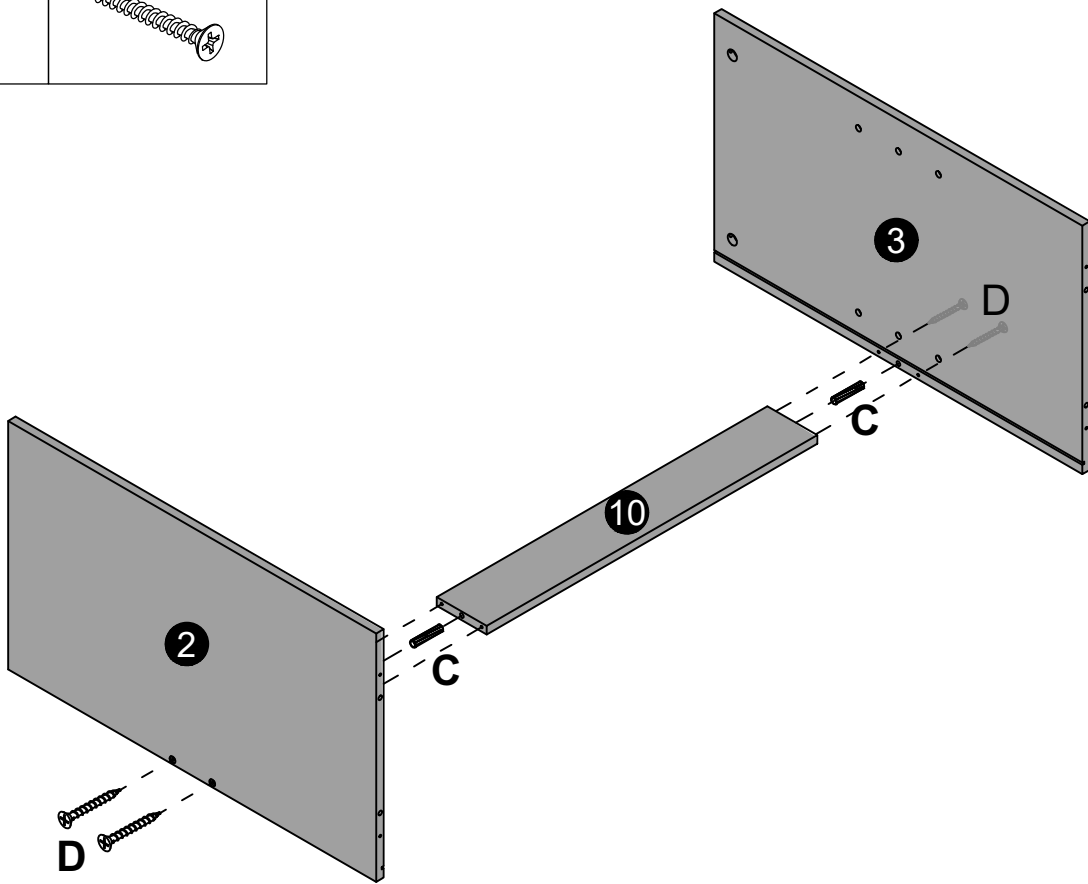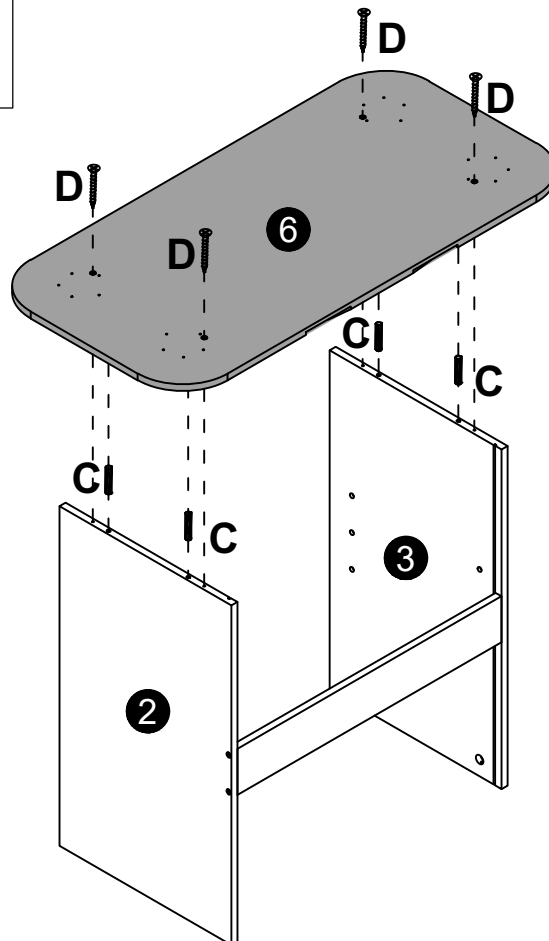01**C** x2**D** x4**02****C** x4**D** x4


L x20

M x4

03

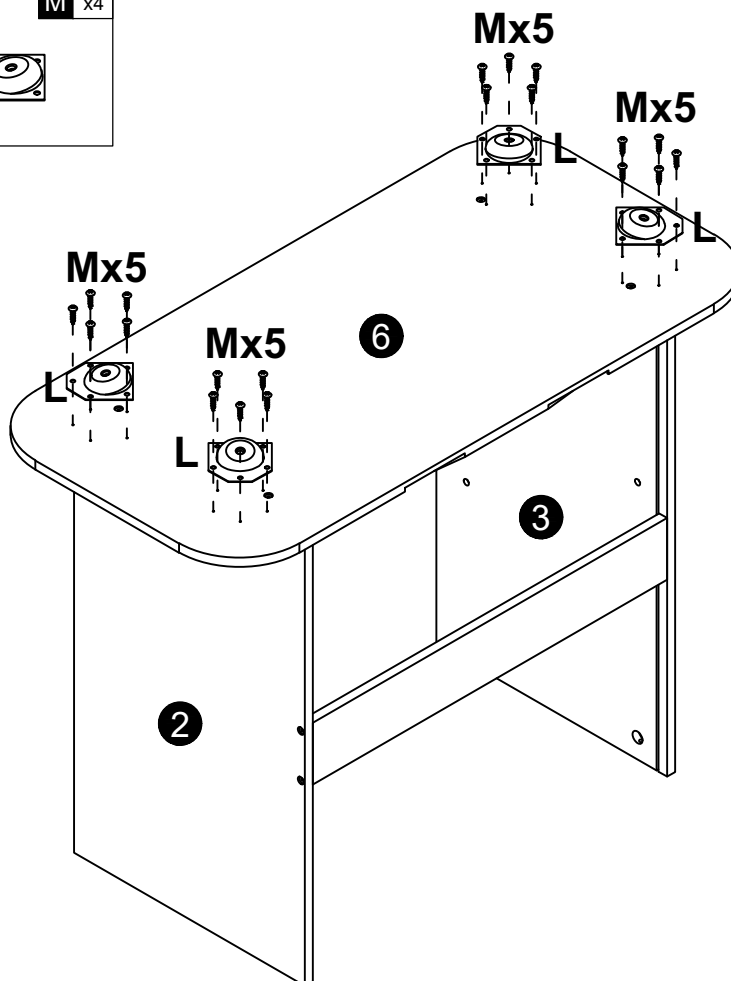


04

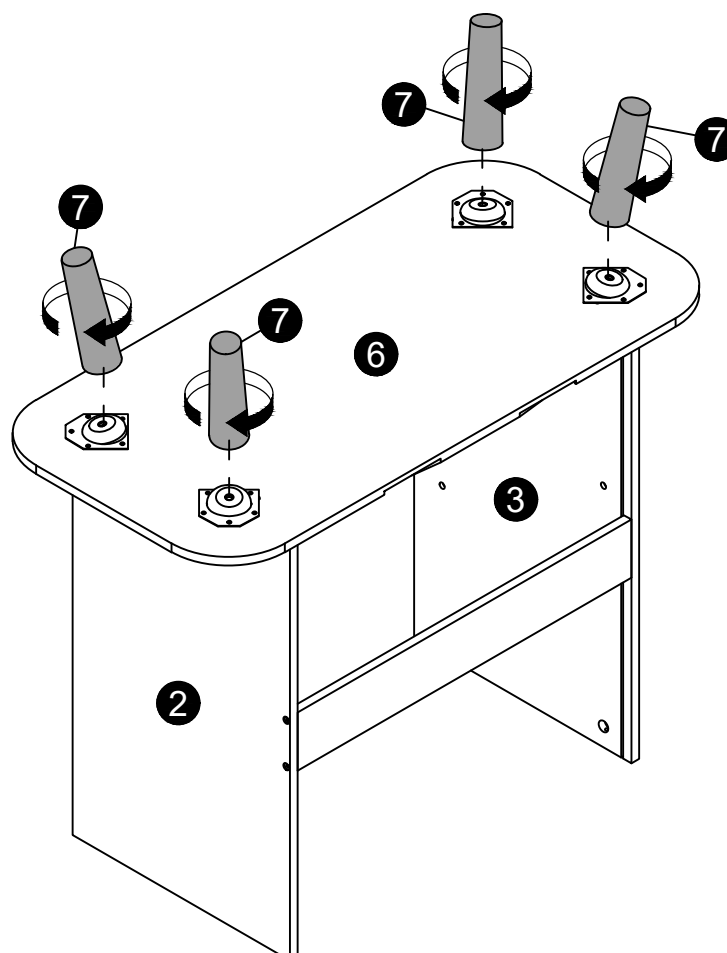


J x4


05

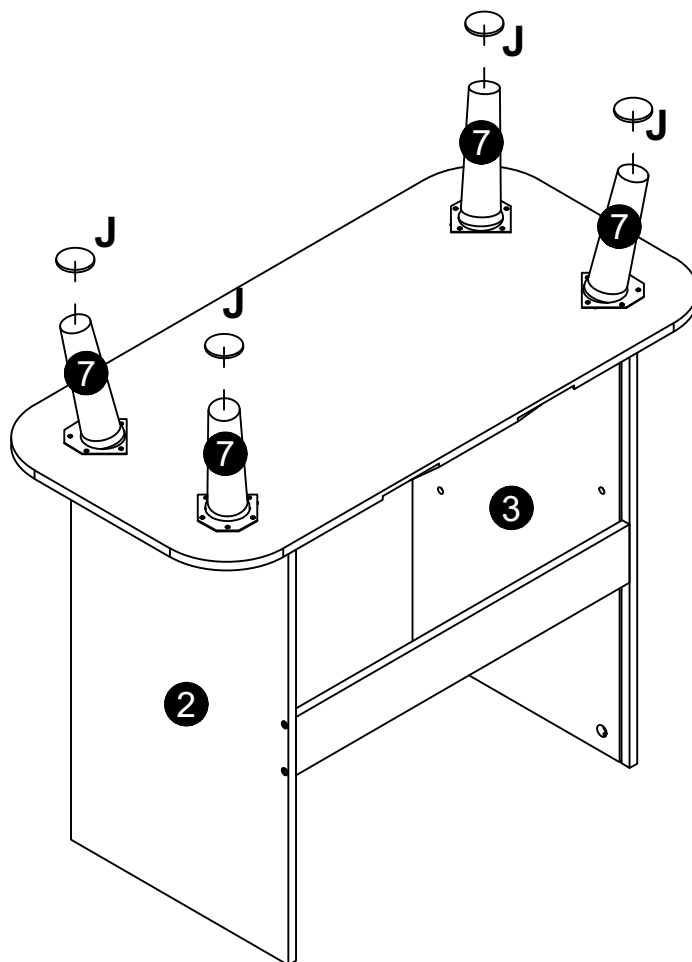


06

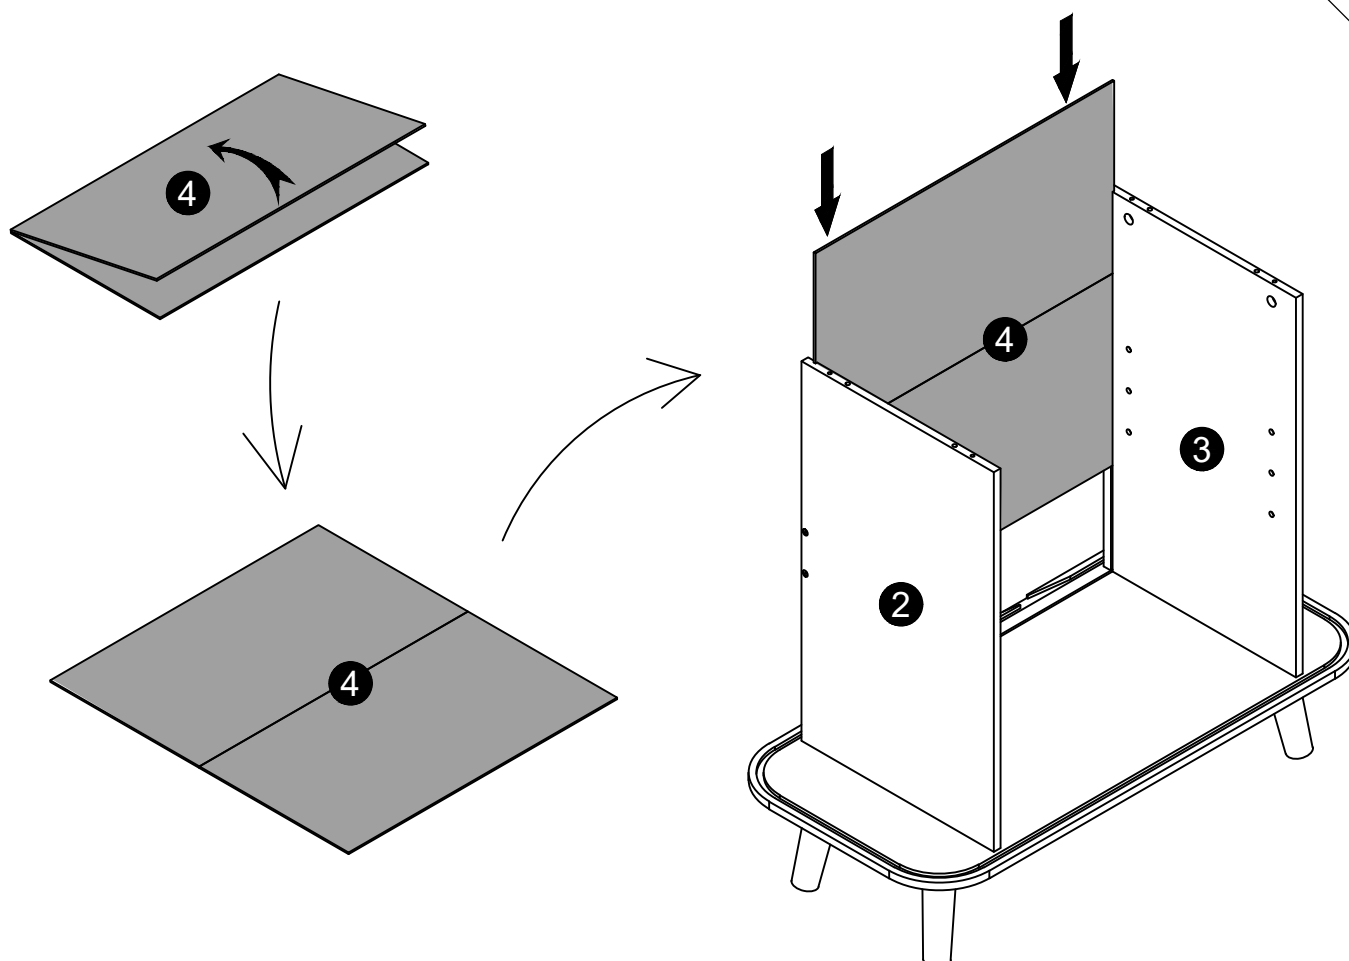

A x4



07

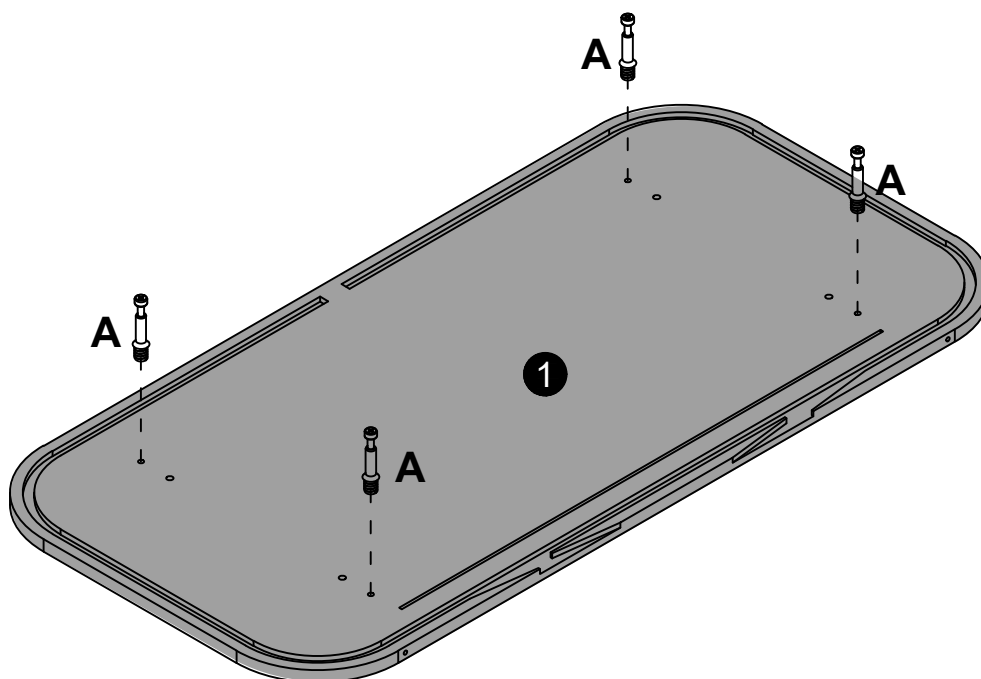


B x4



C x4




08

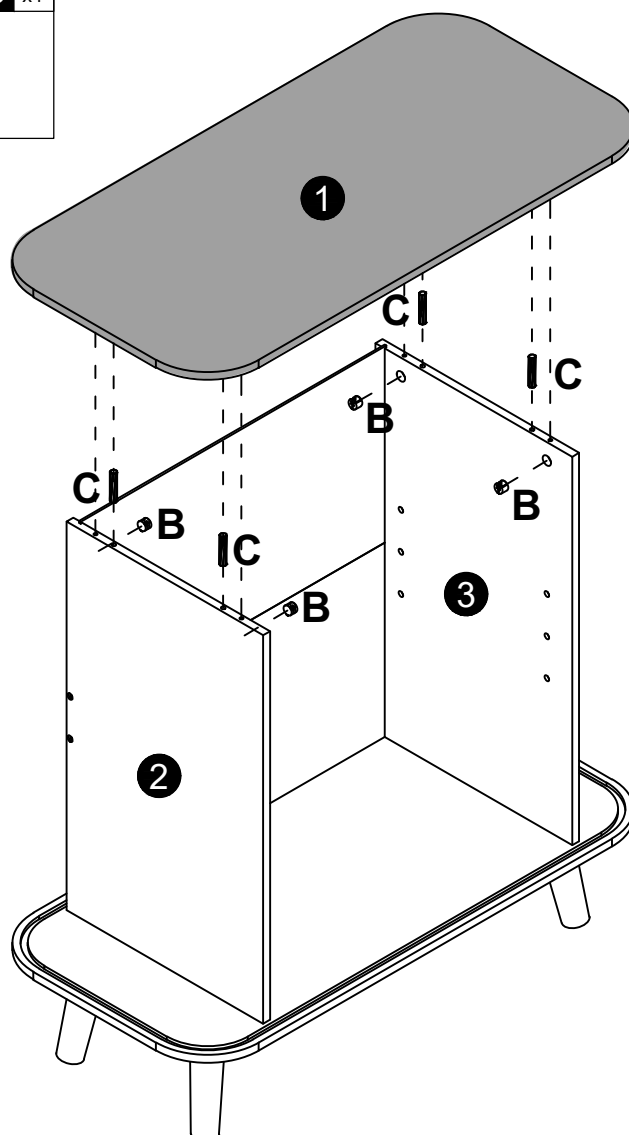

E x4


09

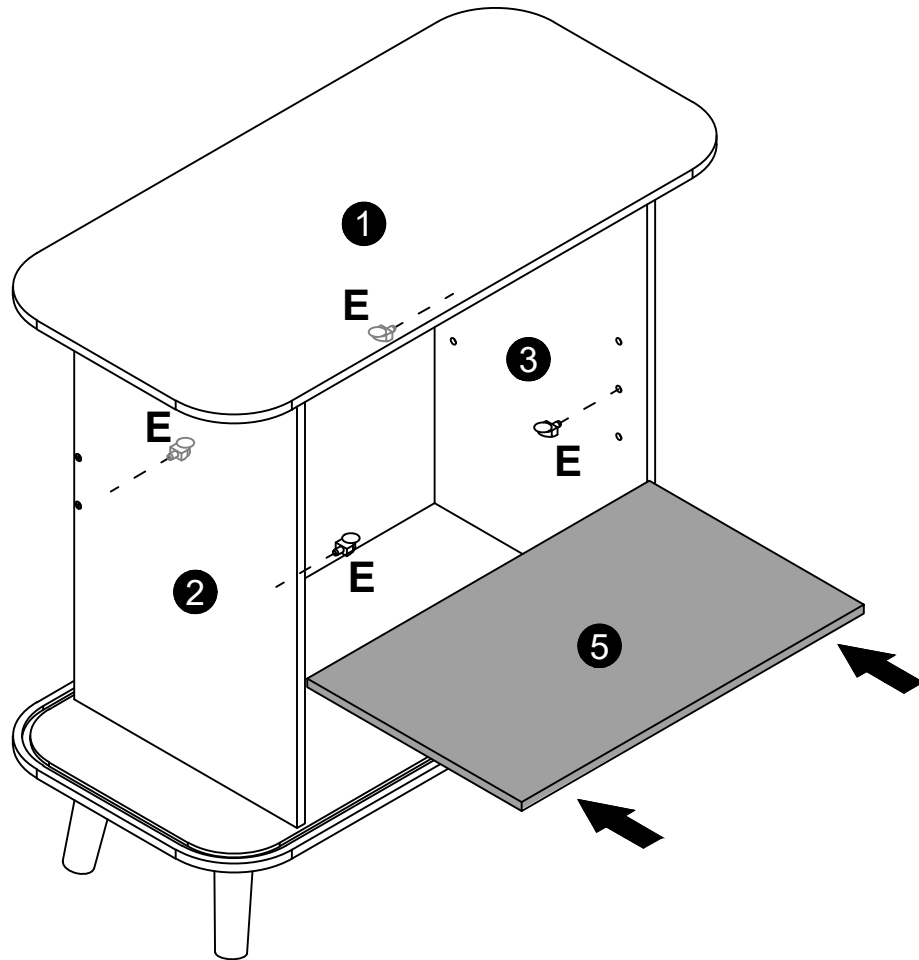


F x2



K x4

10



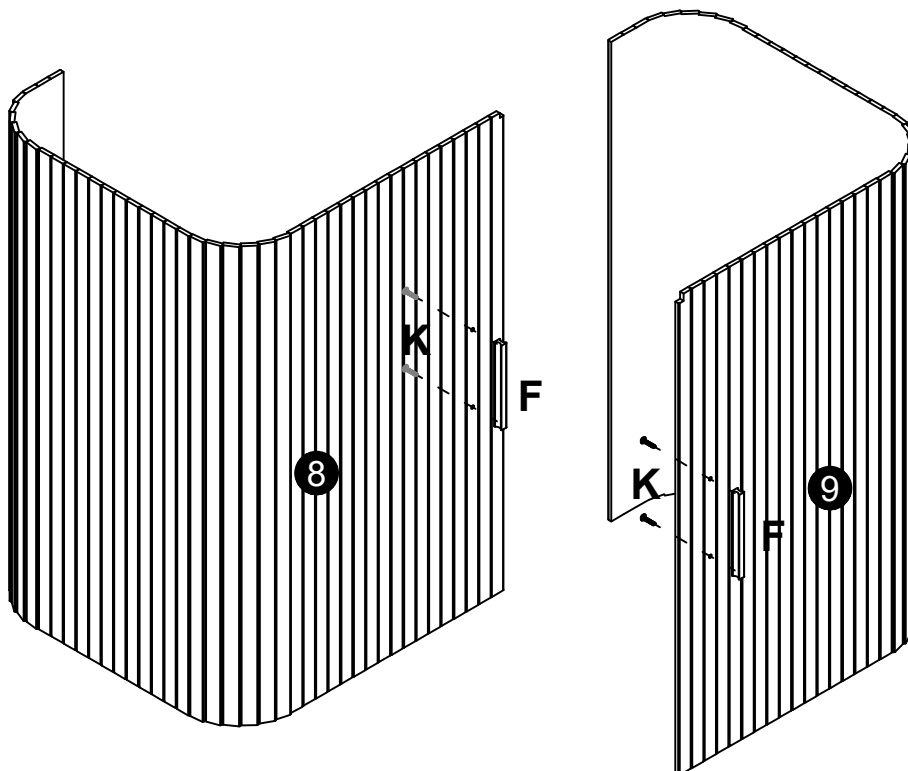


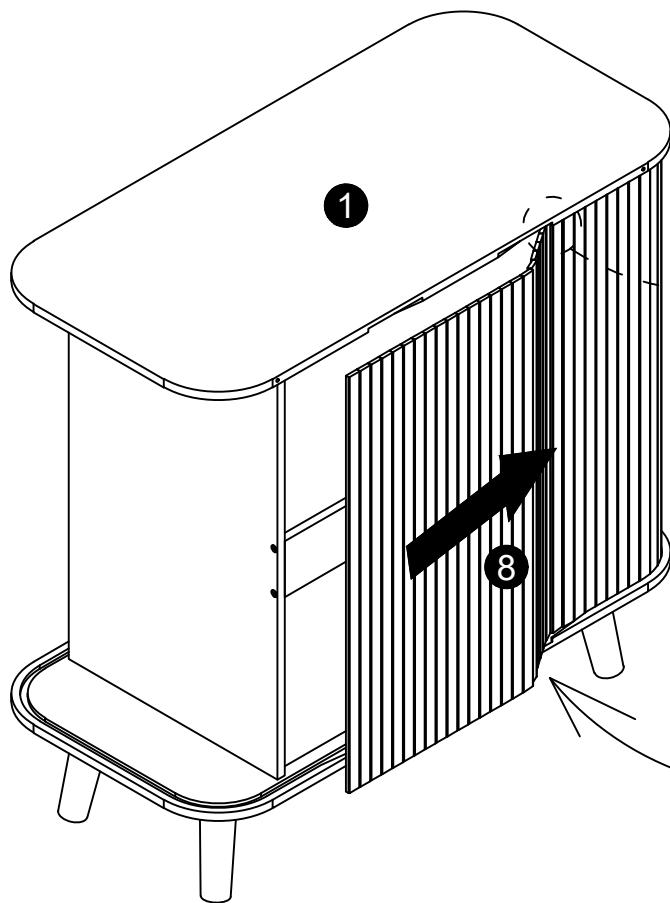



Note:The notched side of Panel No. 8 should face upward.

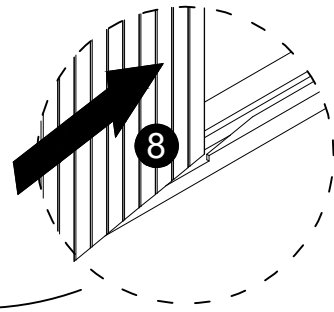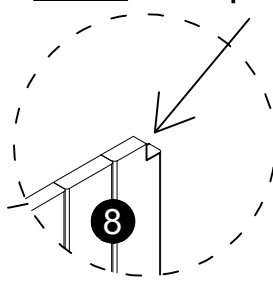

Note:The notched side of Panel No. 9 should face upward.

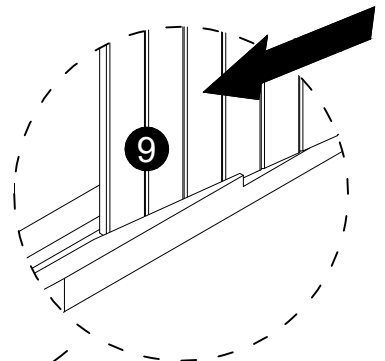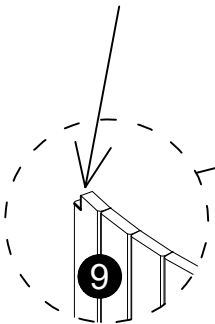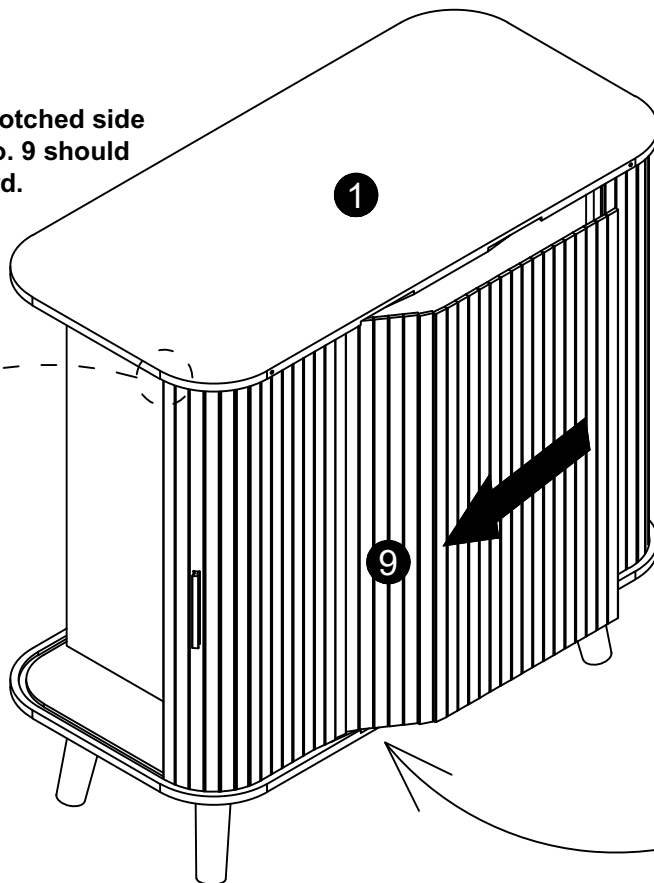

G x8

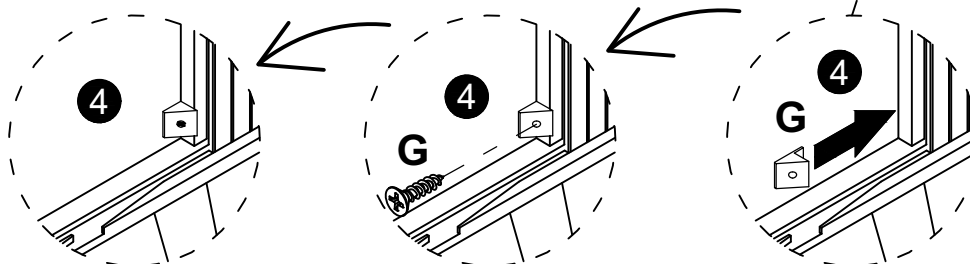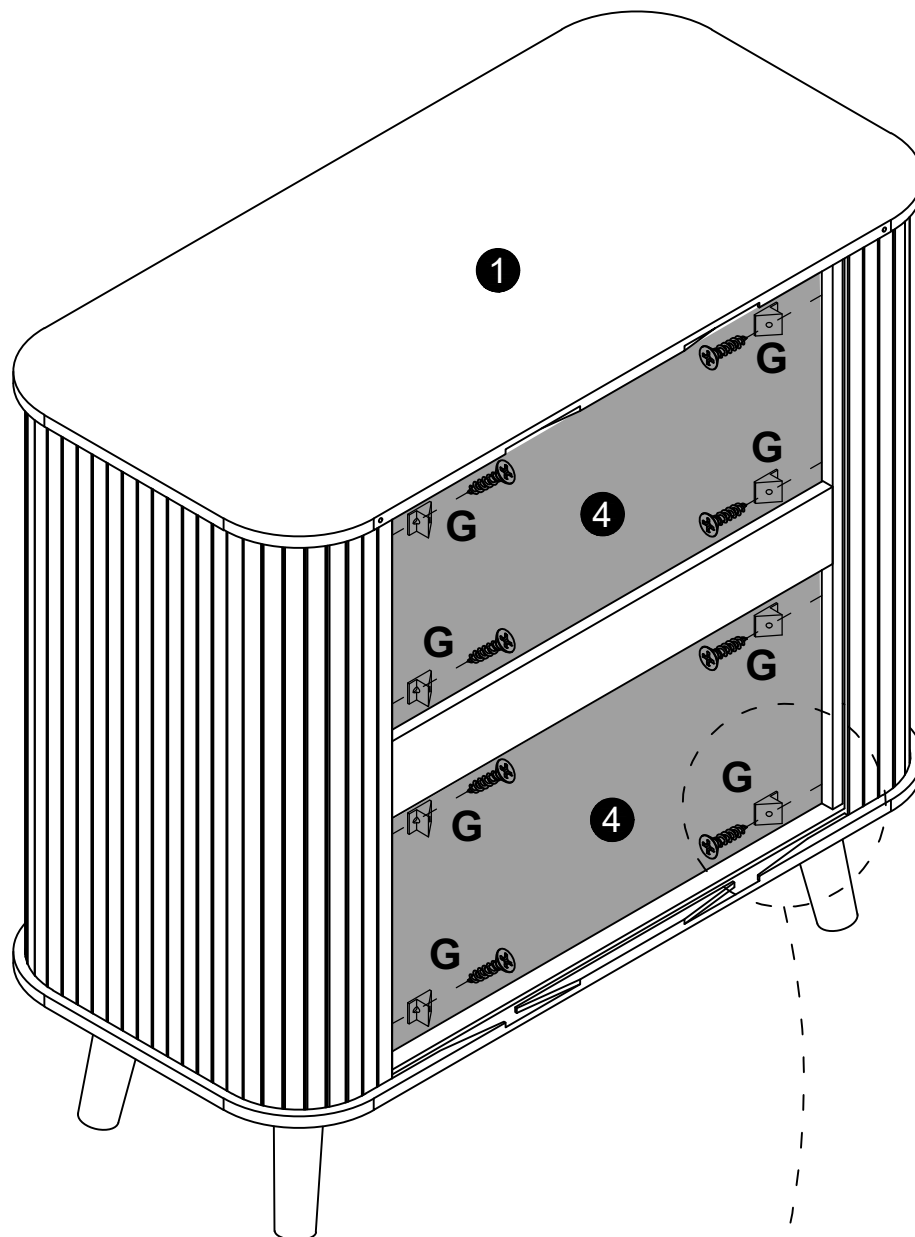


D x2



H x2




I x2

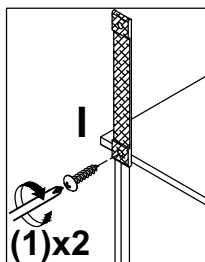


(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

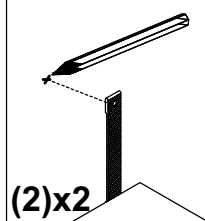


(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

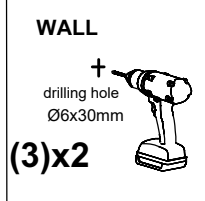


(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

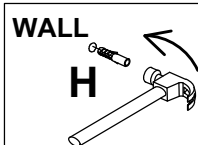

(4)x2

Then, put the expansion bolt into the hole

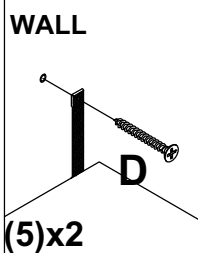

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

