

INSTRUCTION

Step 1

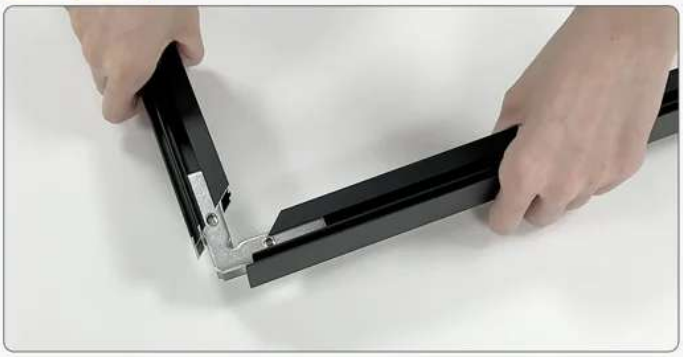

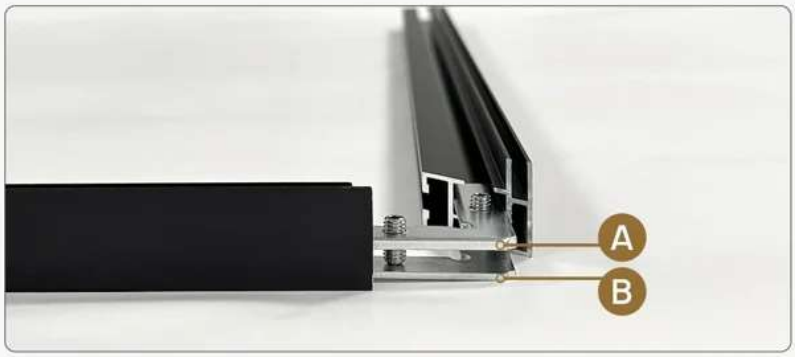

Lay out the frame pieces, fat side down. Show the channel facing upward.

Insert corner connectors into two frame pieces, bringing the sides of the frames together.

For 1" depth Infinity frames, there will be 8 total corner connectors: (4 Part A's and 4 Part B's).

Stack Part A over each Part B corner connector before joining the sides of the frame.

Use the allen key to tighten, repeat to the closest corner. Insert the last two corner connectors info the remaining sides of the frame.
Do not over-tighten corners.



Step 2

Slide support bars with open state indication (dot towards bolt by default) upward into connected infinity frame in cross shape& tighten them 180'clockwisaly with torx key.



(Only required for 46" x 46" frames)



(Only required for 60" x 60", 72" x 72" frames)

Insert last two corner connectors into remaining infinity frame, slide into connected one & tight them with allen key & torx key.