


Modern Extendable TV Stand

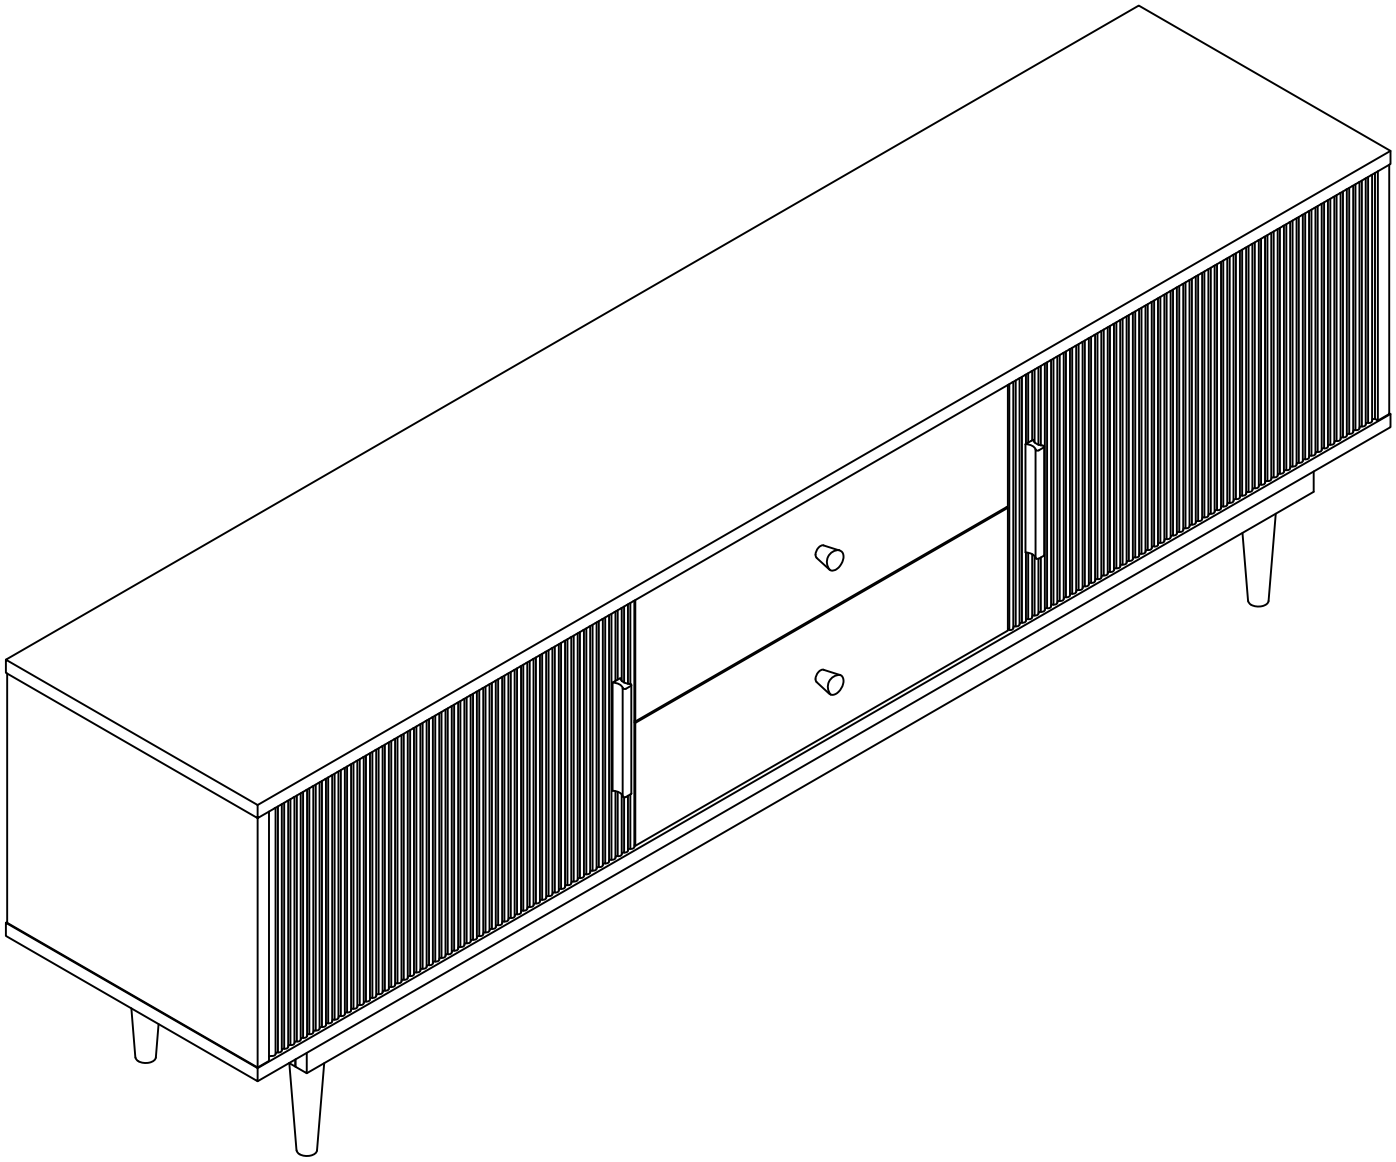

NEW-2M-jinjiao

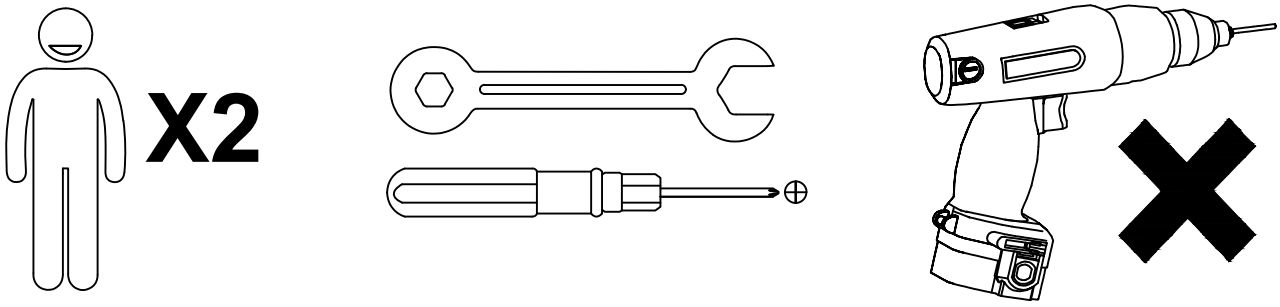


We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

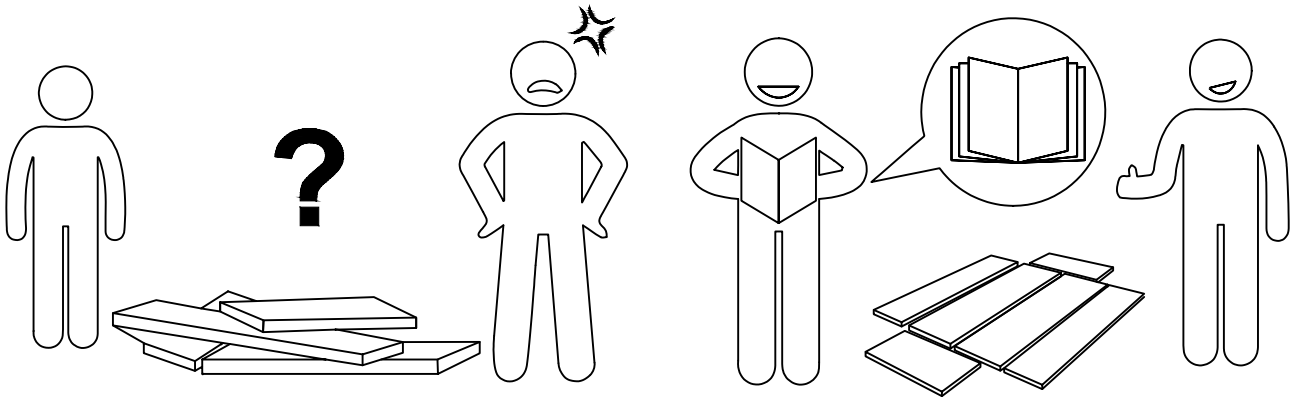

Warm Tips

















1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

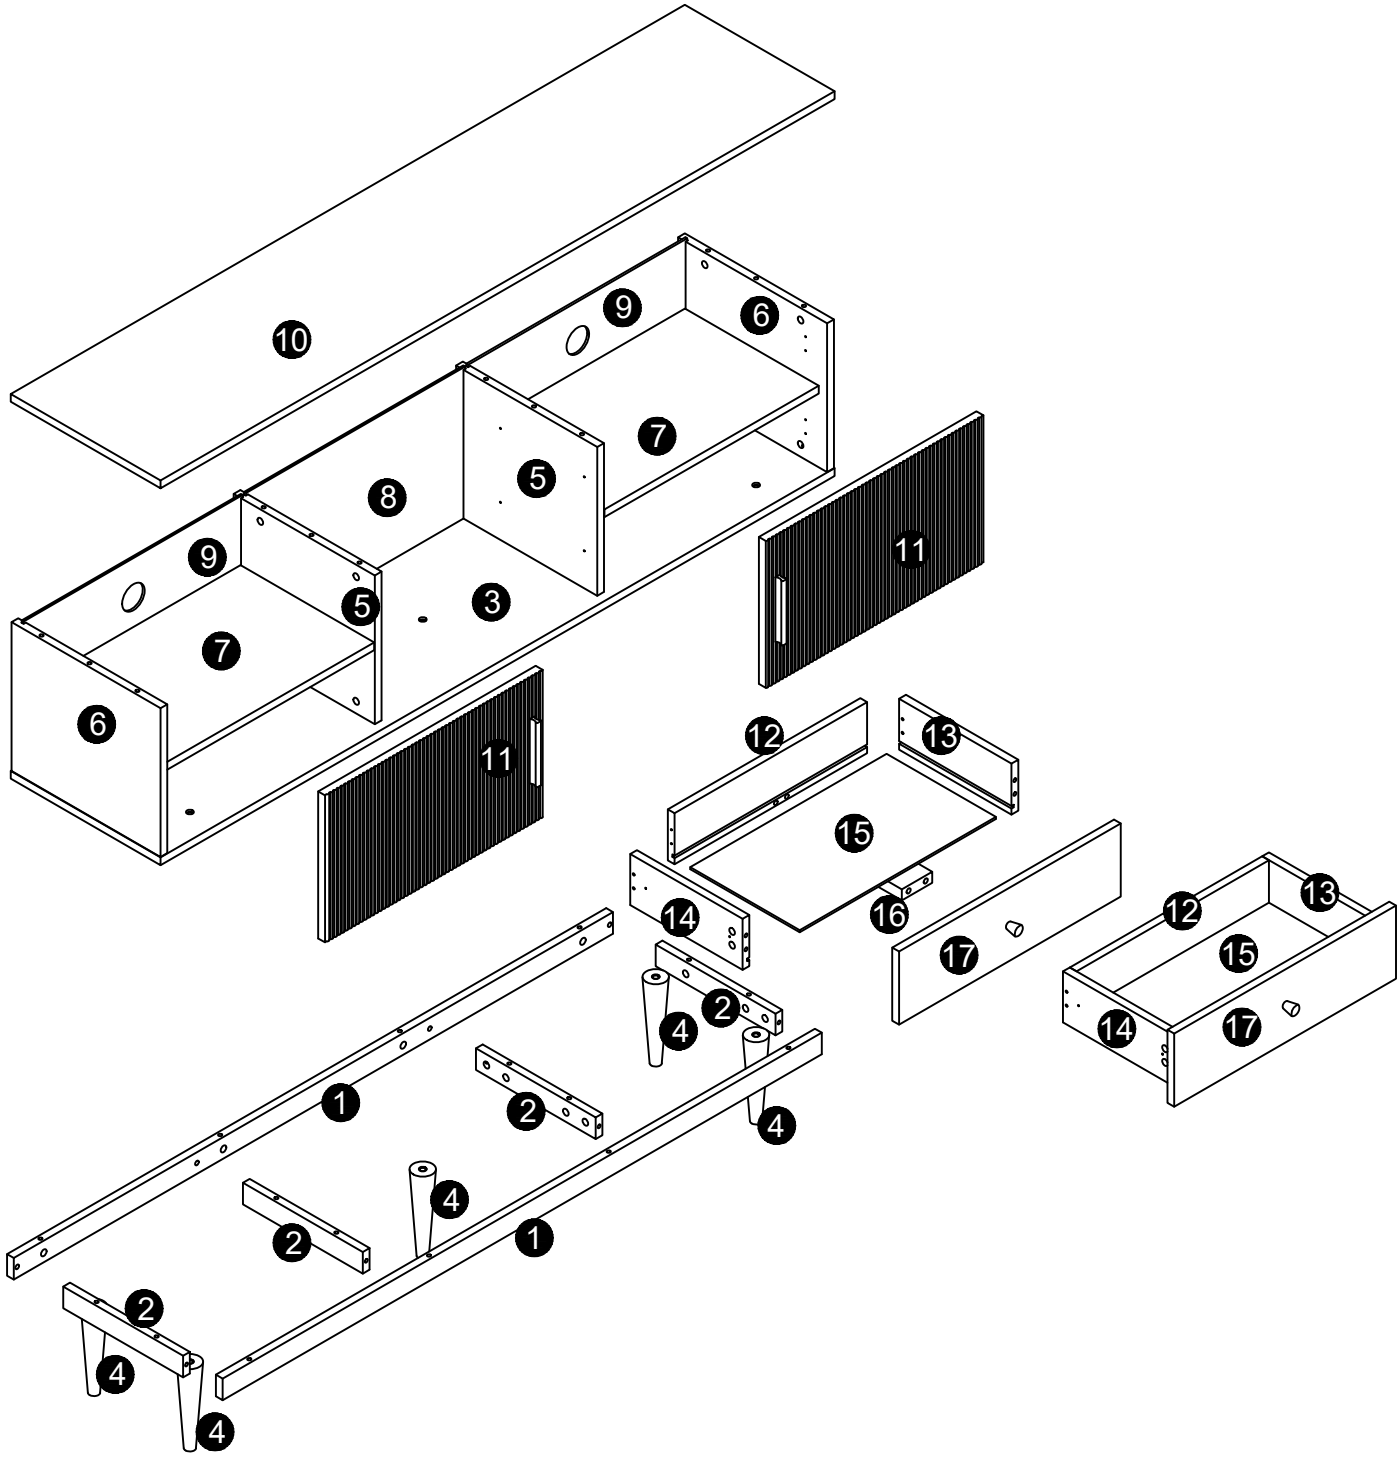







⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

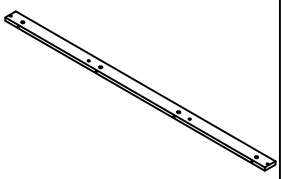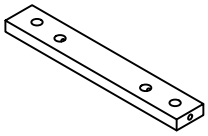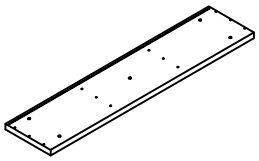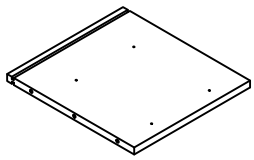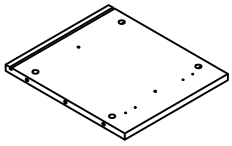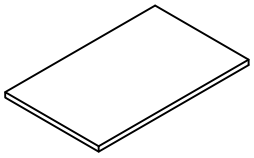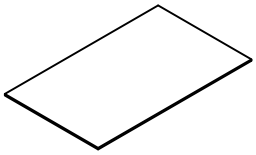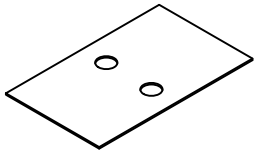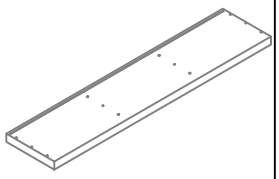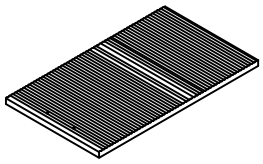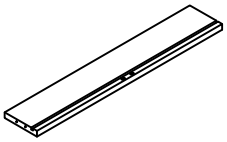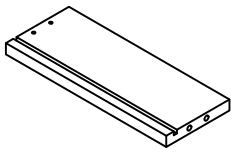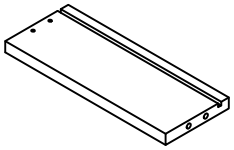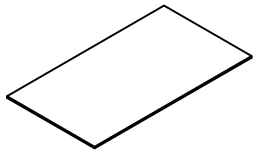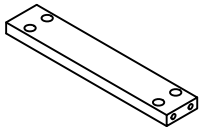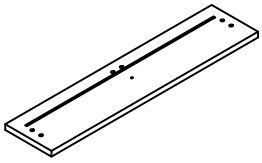
❶  2 pcs	❷  4 pcs	❸  1 pc	❹  5 pcs	❺  2 pcs
❻  2 pcs	❼  2 pcs	❽  1 pc	❾  2 pcs	❿  1 pc
⓫  2 pcs	⓬  2 pcs	⓭  2 pcs	⓮  2 pcs	⓯  2 pcs
⓰  2 pcs	⓱  2 pcs			

Hardware List

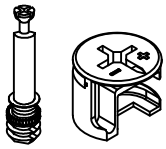
A	B	C	D	E	F
 M6X35mm	 Ø8x30mm	 Ø8x35mm		 ϕ3. 5*14mm	 ϕ3. 5*35mm
60 pcs	8 pcs	5 pcs	8 pcs	58pcs	8 pcs
G	**H**	**I**	**J**	**K**	**L**
 Ø4x22mm(4pcs)	 Ø4x25mm Spare hardware		 Ø4x22mm	 14X12X10mm	 Screwdriver
2 pcs	4 pcs	2 pcs	2 pcs	12 pcs	1 pc
M	**N**	**O**	**P**		
					
48 pcs	4 pcs	2 sets	4 pcs		

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

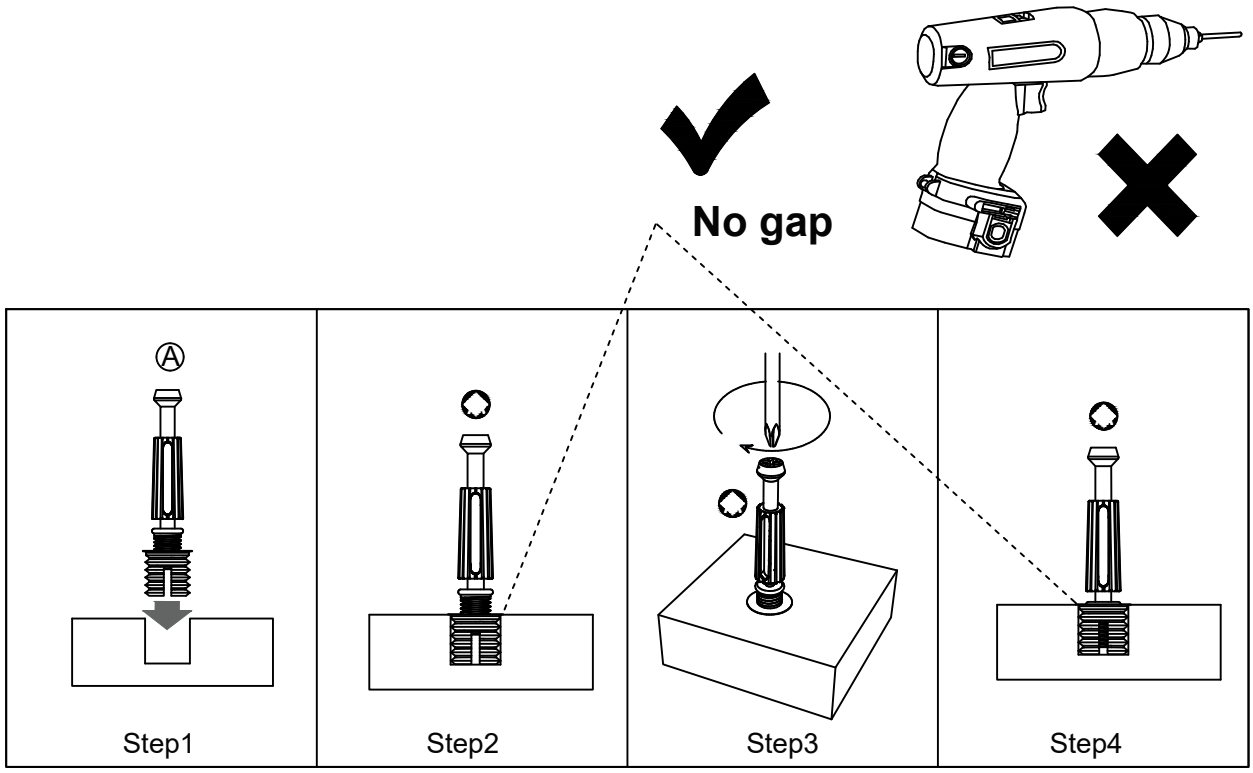


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

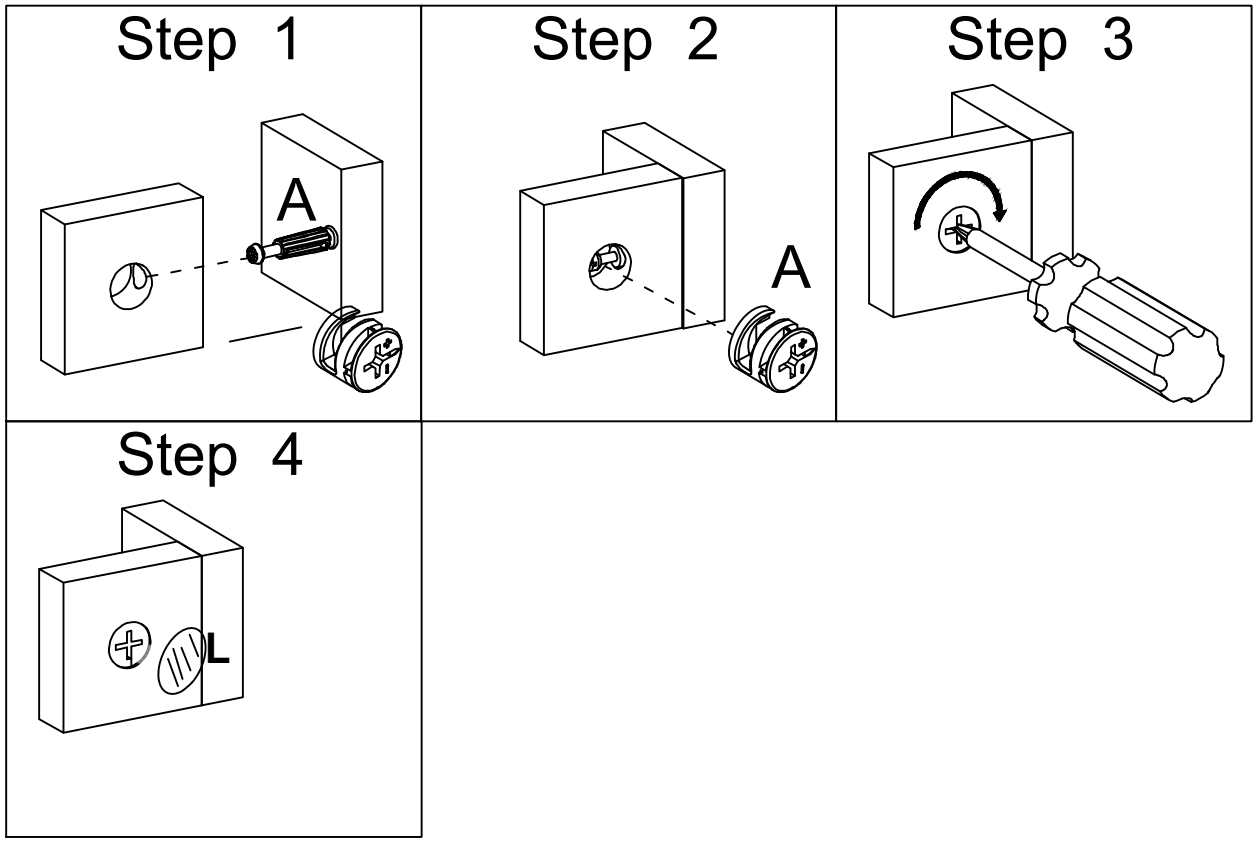


Please split component “O”into “O-1” and “O-2” before assembling the slide and then proceed to the next step of assembly

Step 1

Pull apart component "O" to each side, and then gently push up the lever of component "O-2"

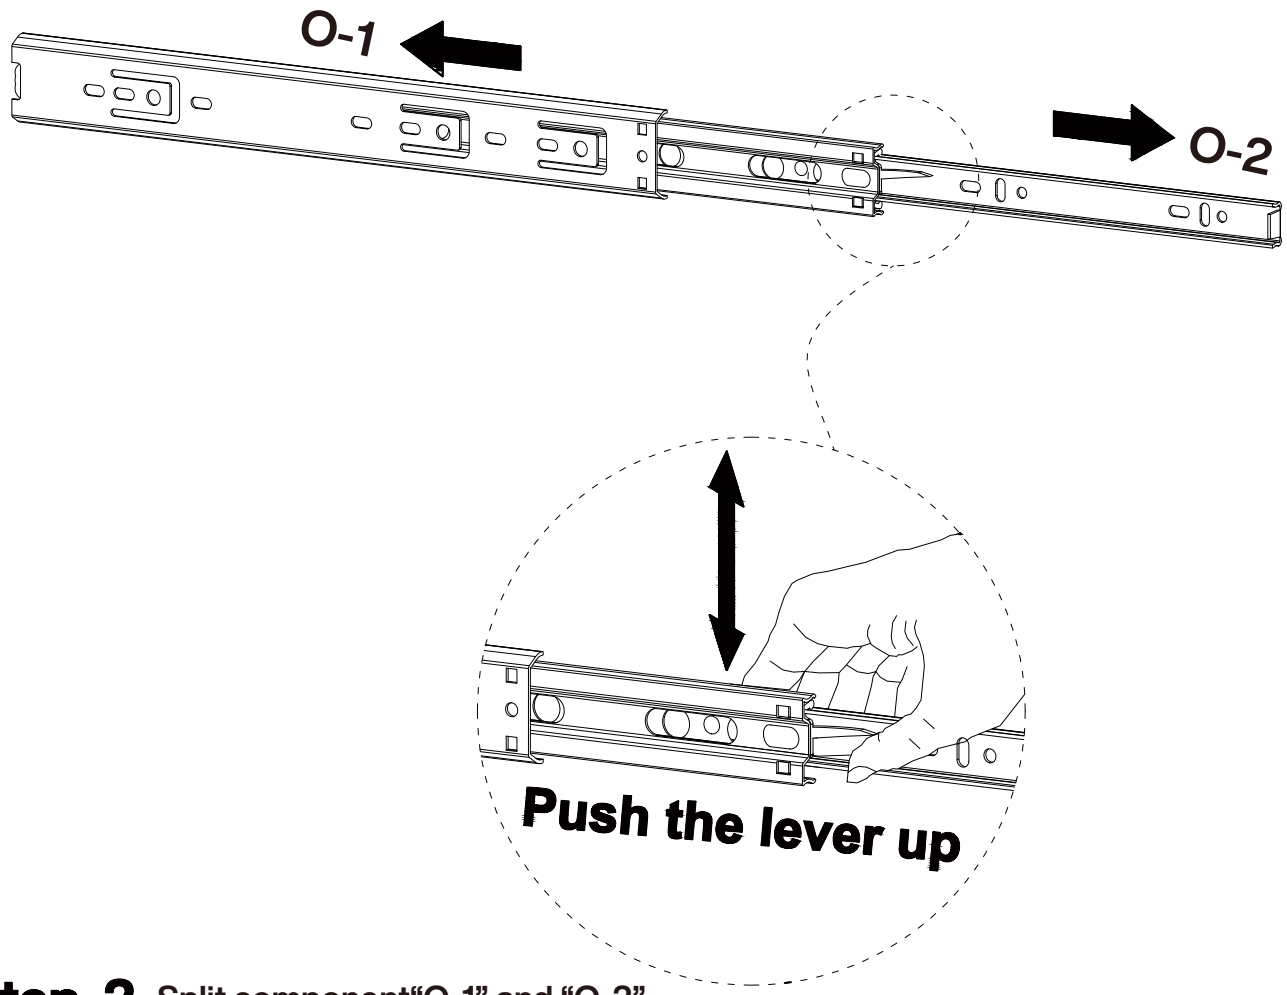


Step 2 Split component“O-1” and “O-2”

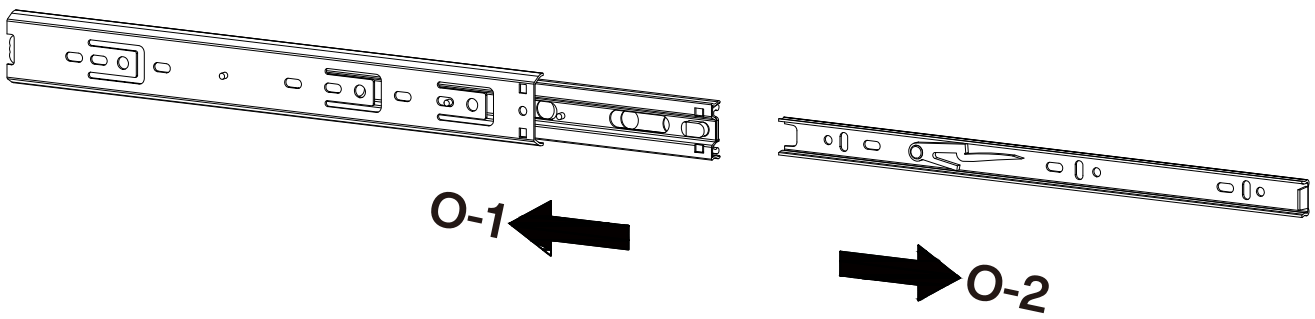


1

A

M6x35mm
20 pcs

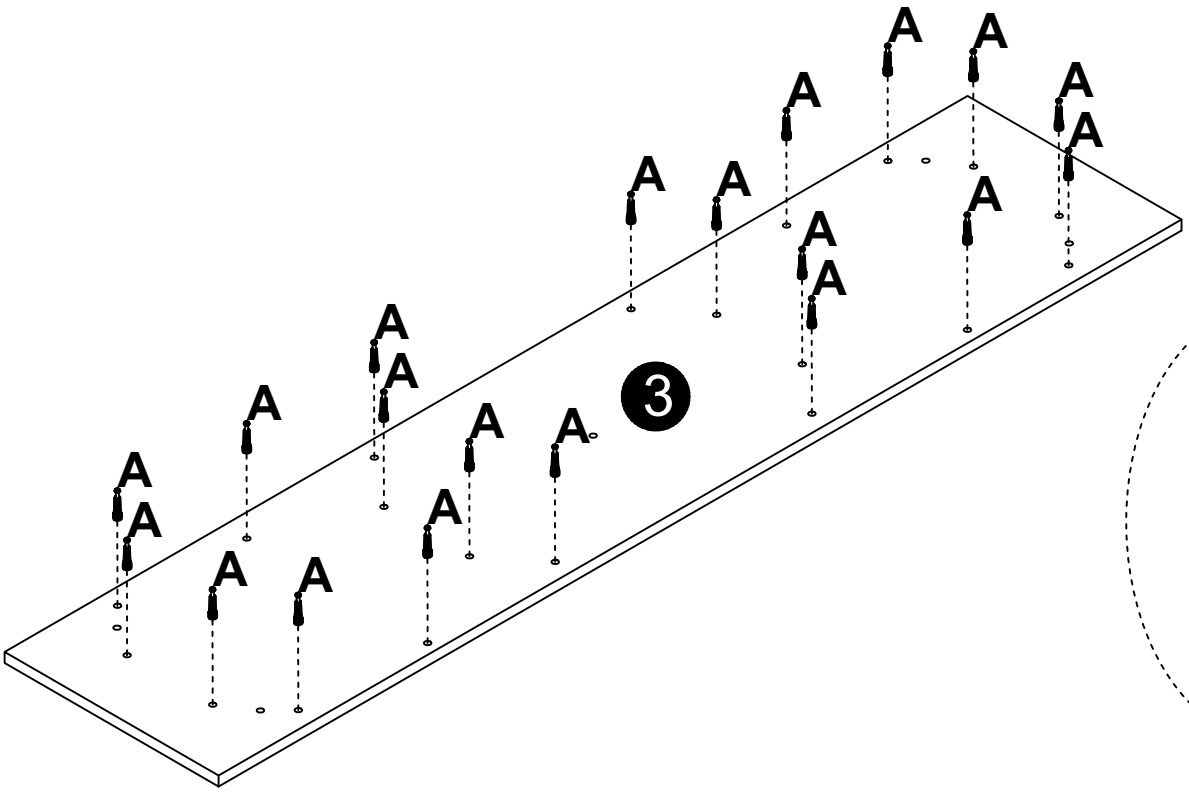


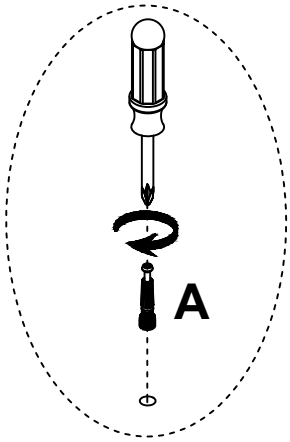


2

A

M6x35mm
8 pcs

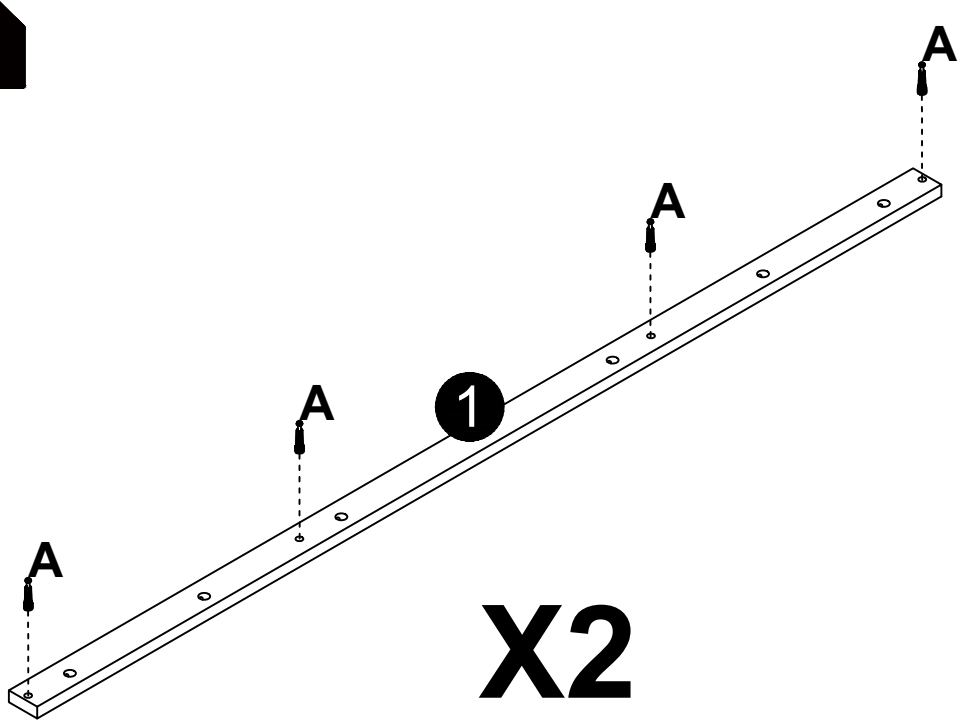


X2

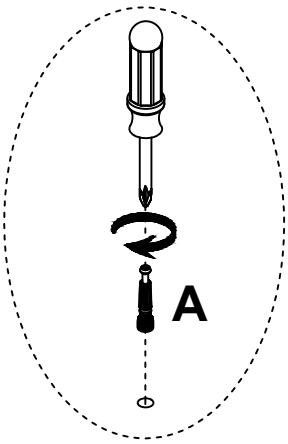


3


A

Ø15x12mm
8 pcs

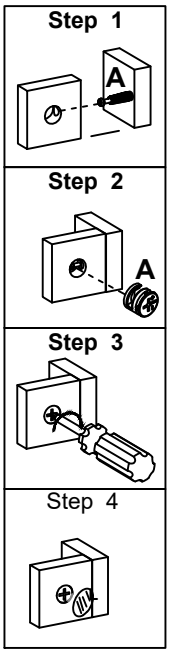

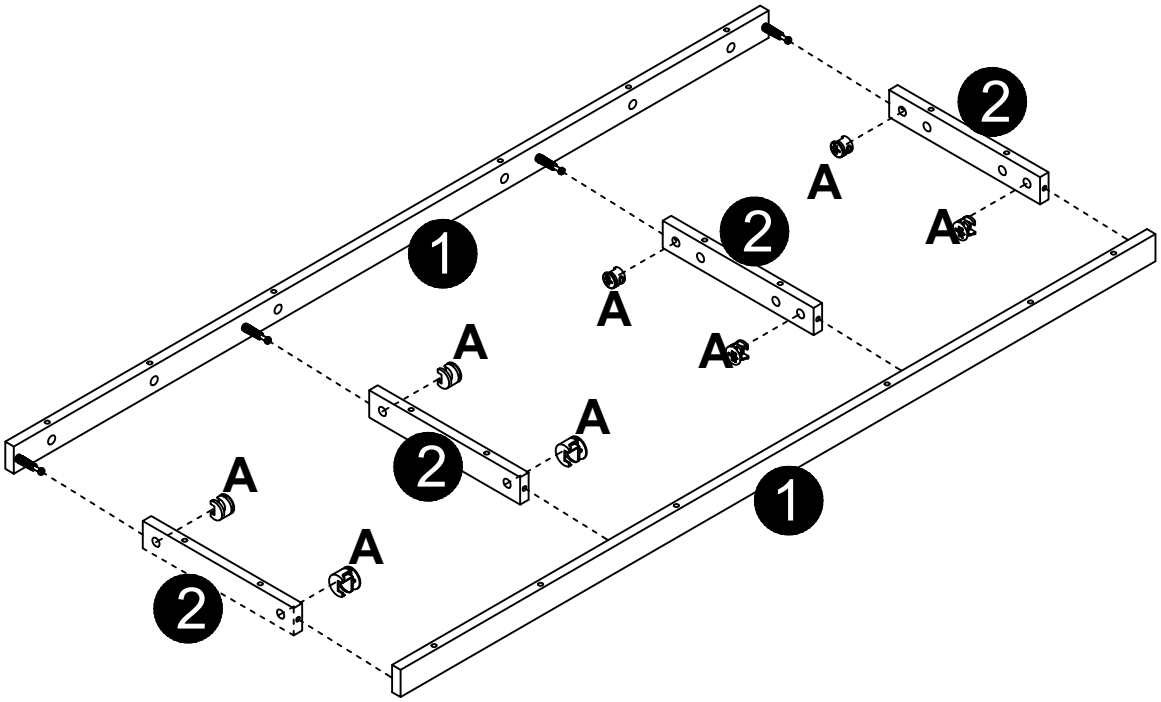


4

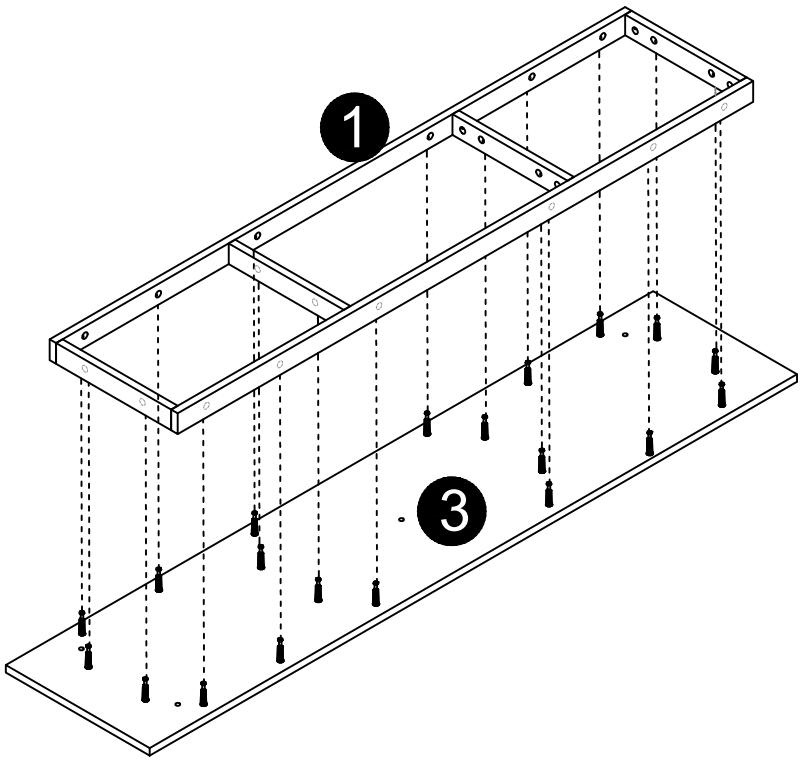


5

A

Ø15x12mm
20 pcs

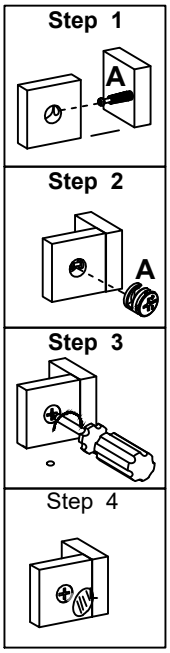


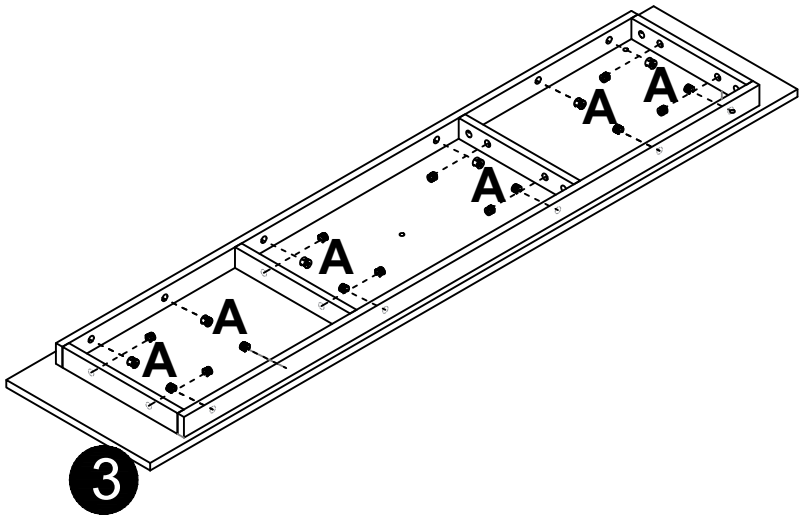


6

C

Ø8x35mm
5 pcs

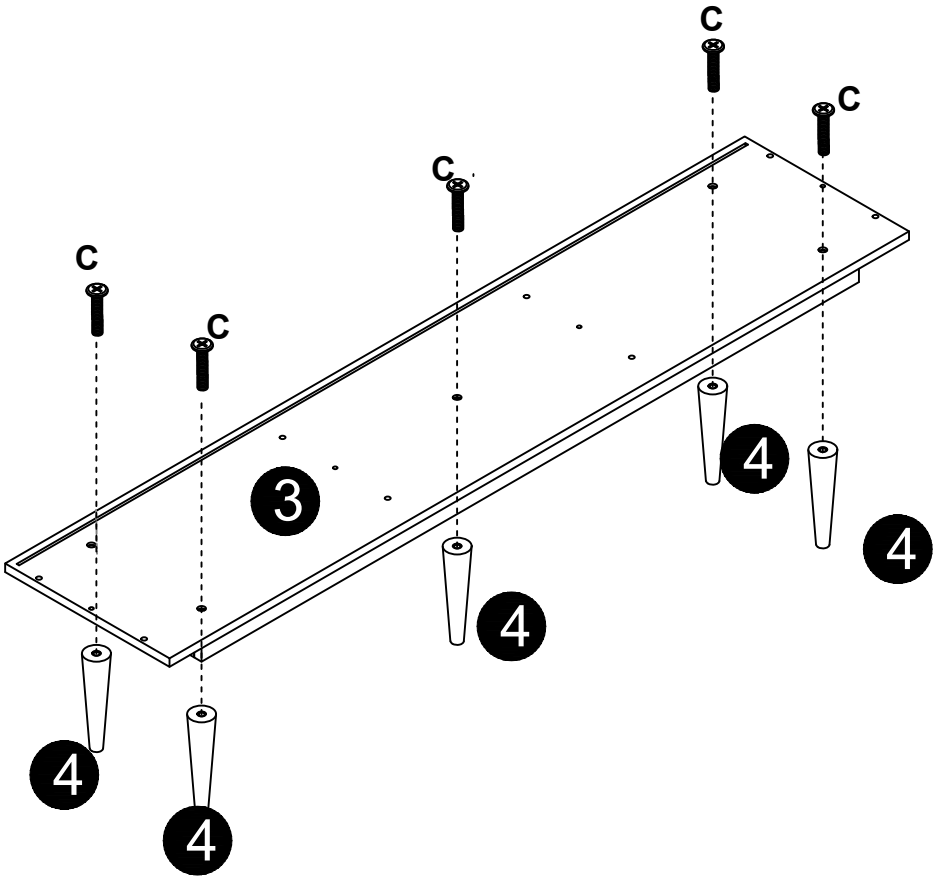

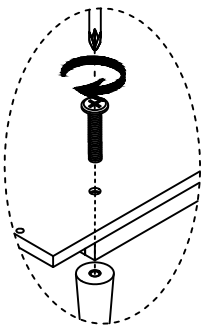



7

A	B
	
M6x35mm	Ø8x30mm
8 pcs	4 pcs

8

O	E
	
300mm	Ø3.5x14mm
4 pcs	8pcs

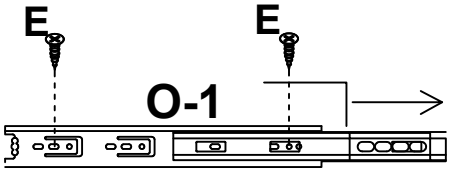

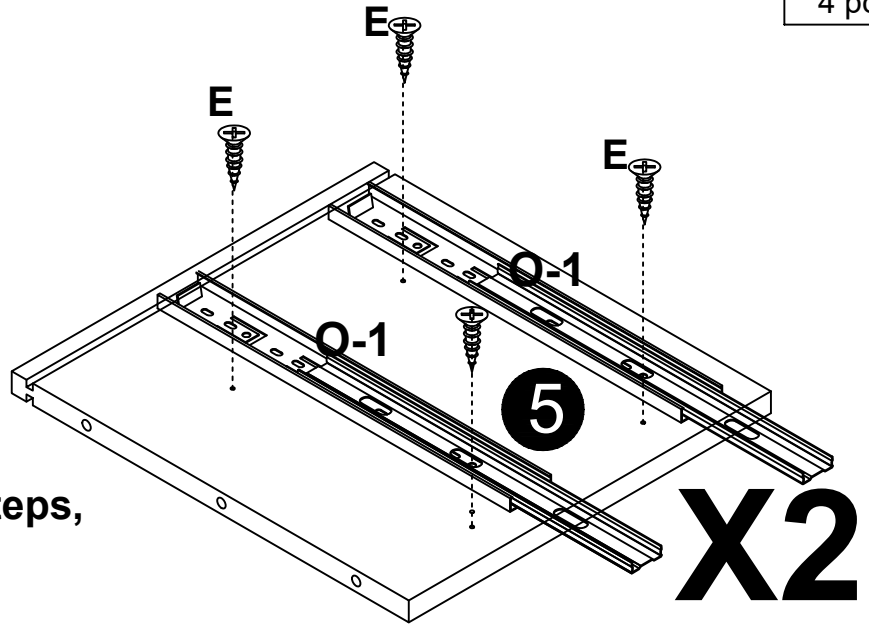



For detailed steps, see page P-06

9


A

Ø15x12mm
8 pcs

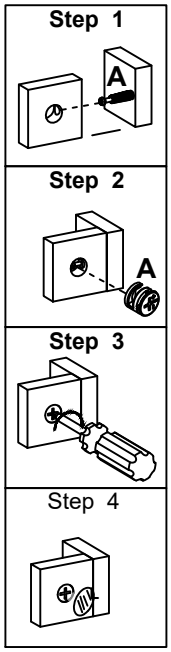

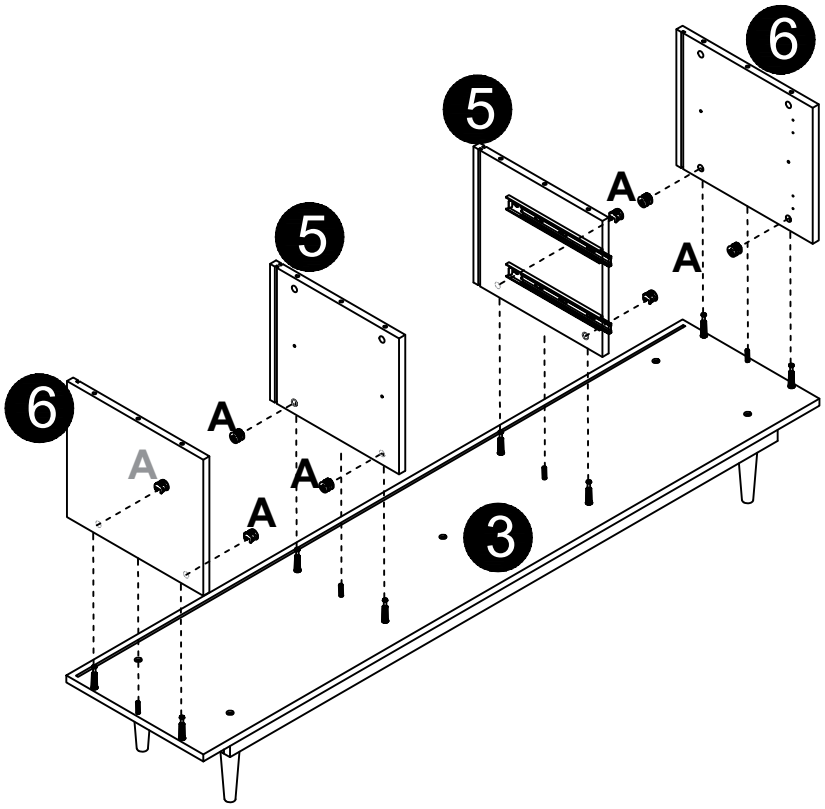



10

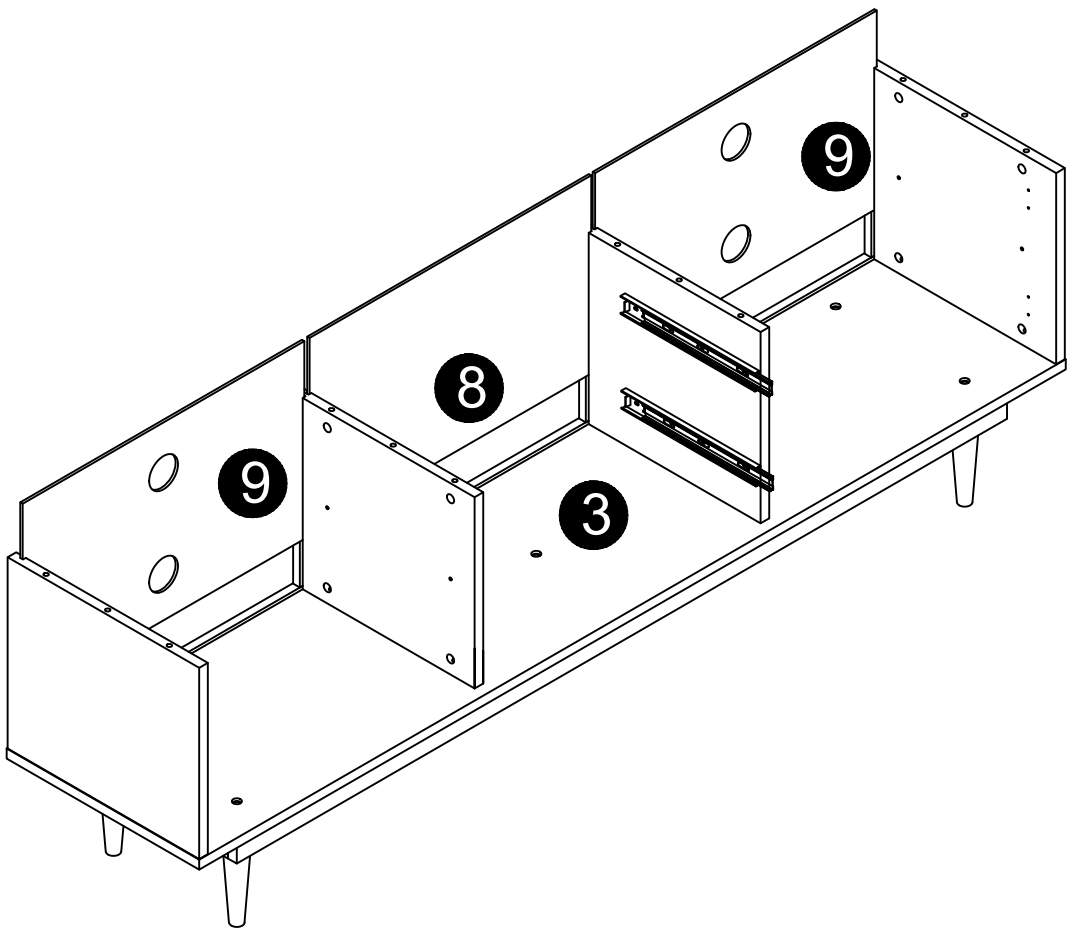

11

A	B
	
M6x35mm	Ø8x30mm
8 pcs	4 pcs

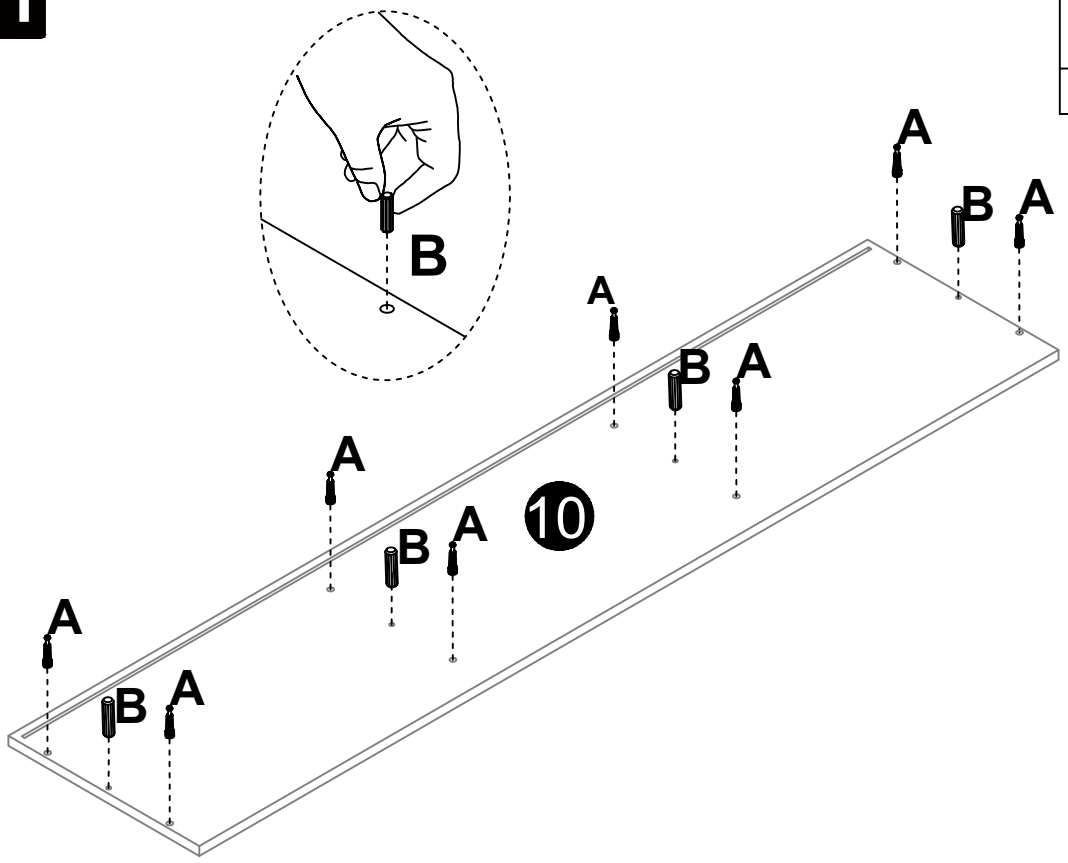


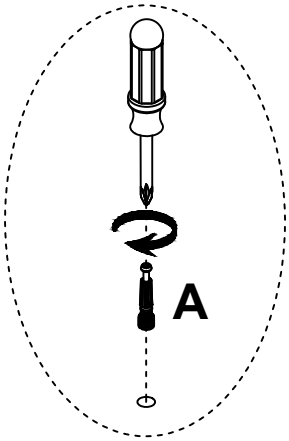


12


A

Ø15x12mm
8 pcs

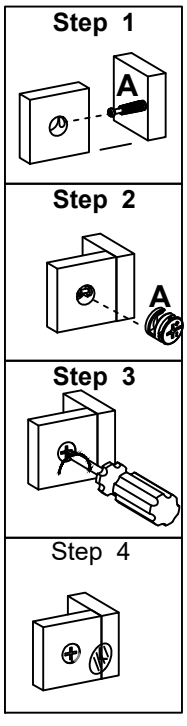


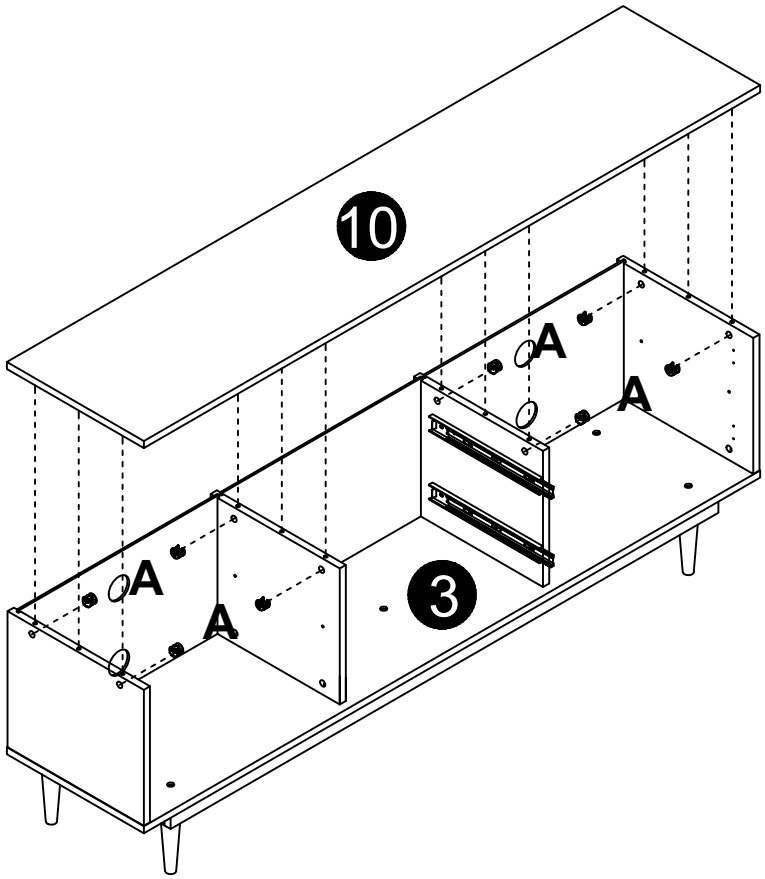


13

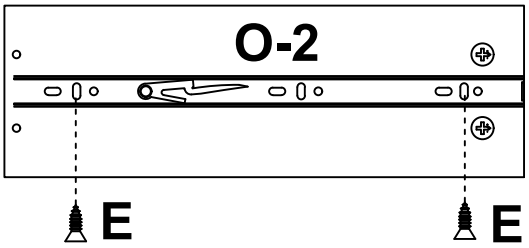


O	E
	 Ø3.5x14mm
4 pcs	8 pcs

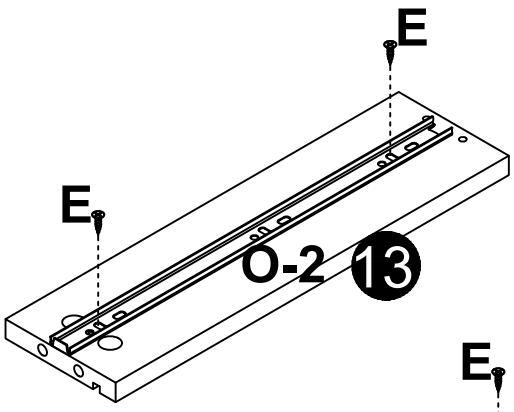

X2

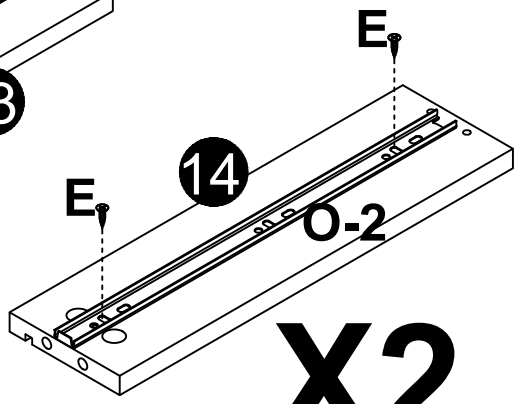


X2

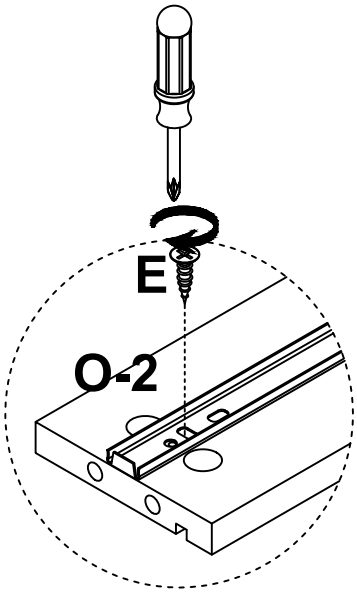


14

A
 M6x35mm
4 pcs

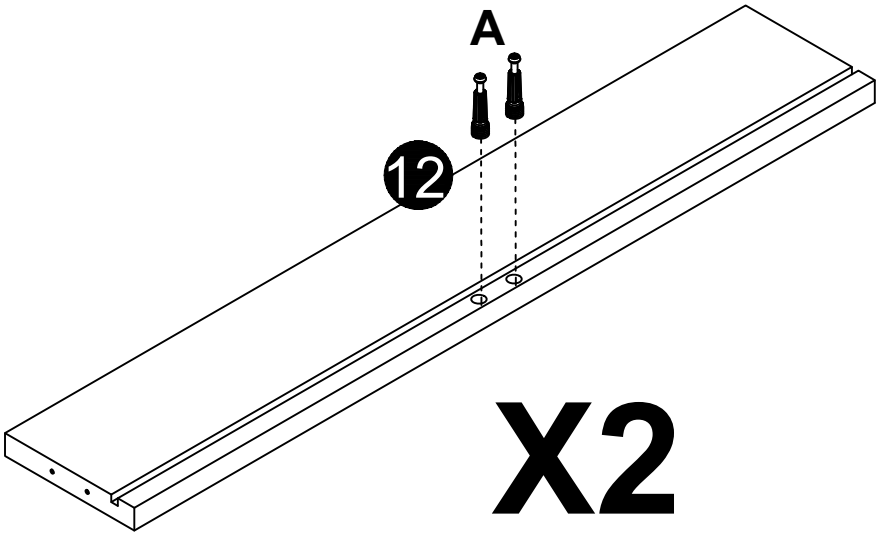


X2

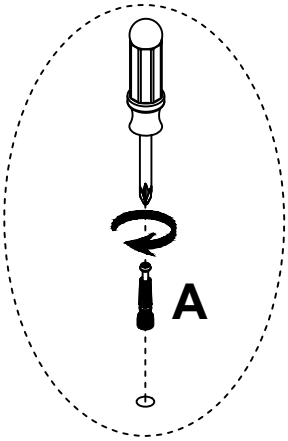

15

F

Ø3.5x35mm
8 pcs

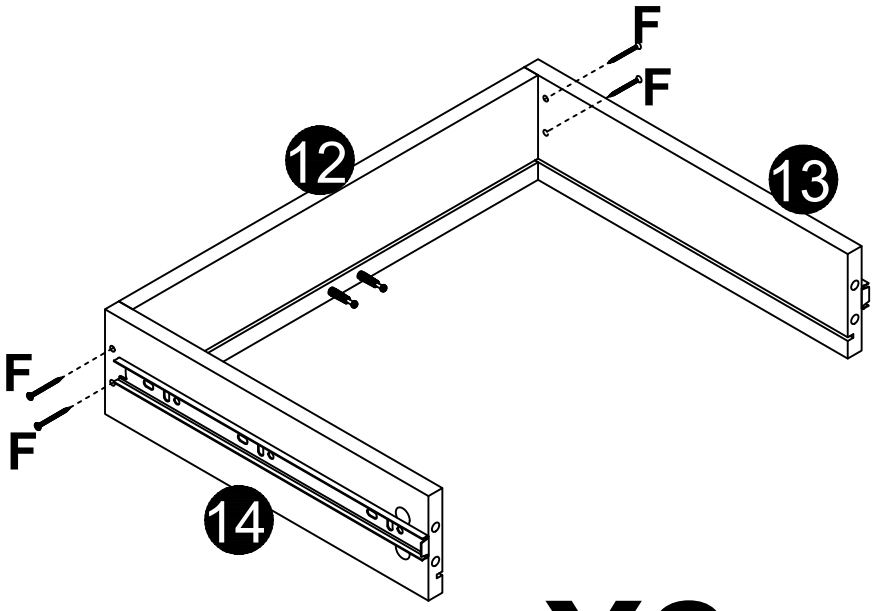



X2

16

A


Ø15x12mm
12 pcs

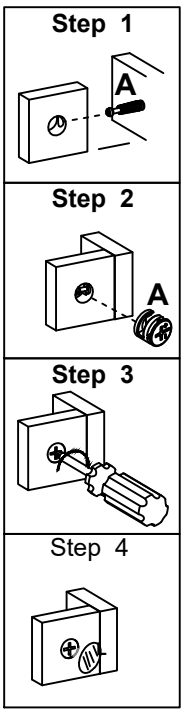

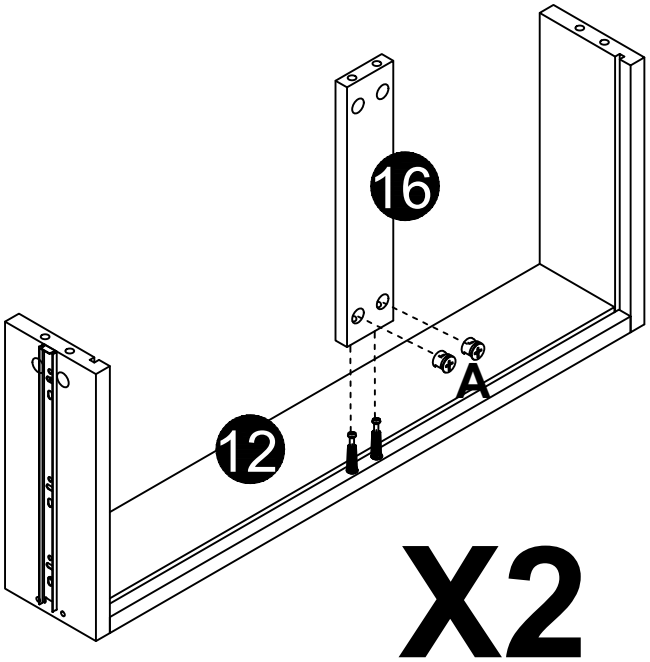


X2

17

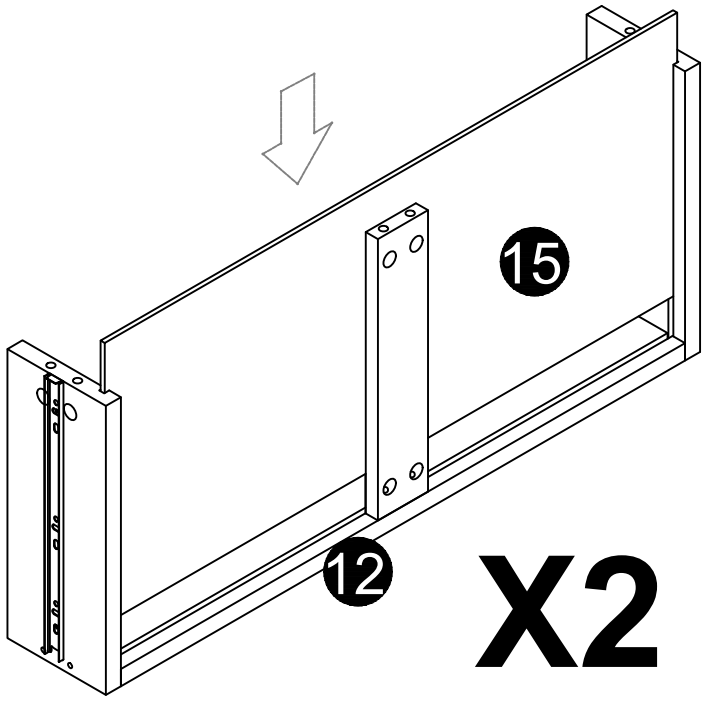

18


A	I
 M6x35mm	
12 pcs	2 pcs
J	
 M4x22mm	
2 pcs	

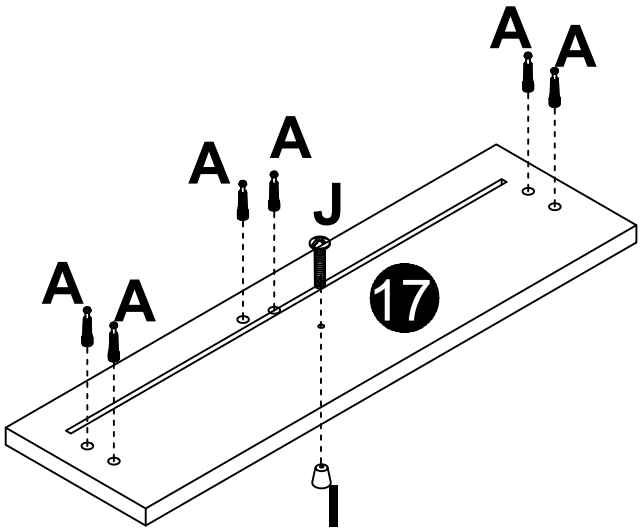


19

A

Ø15x12mm
12 pcs

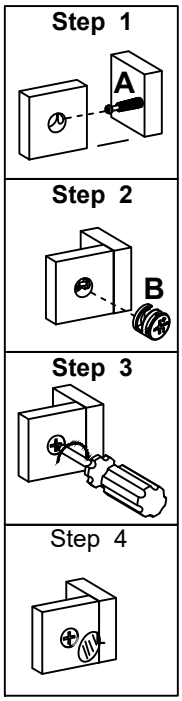

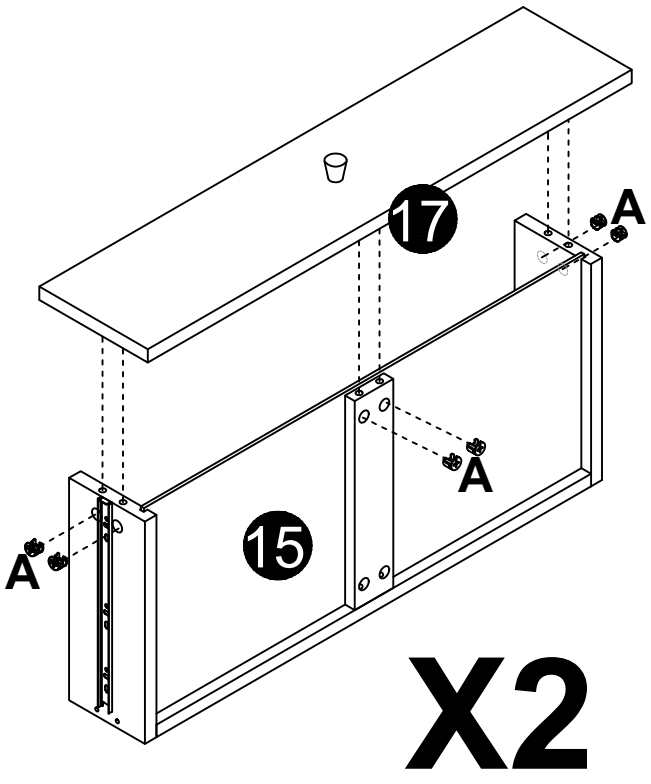



X2

20


D

8 pcs

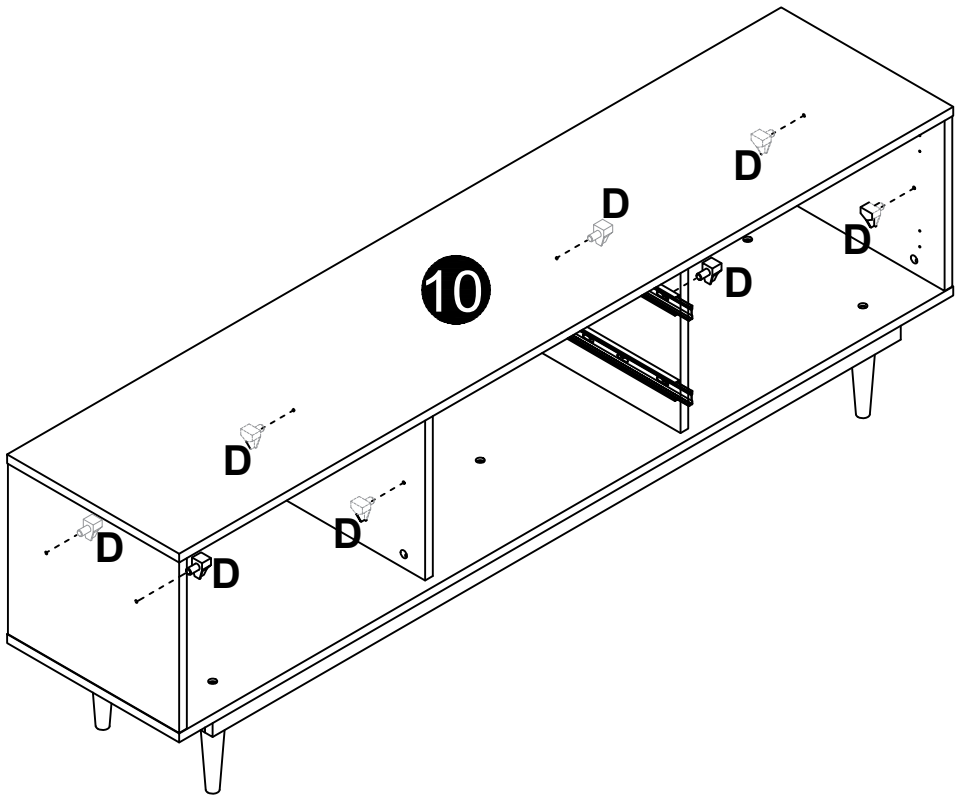


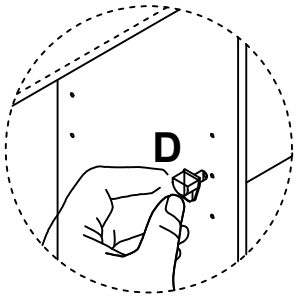


19

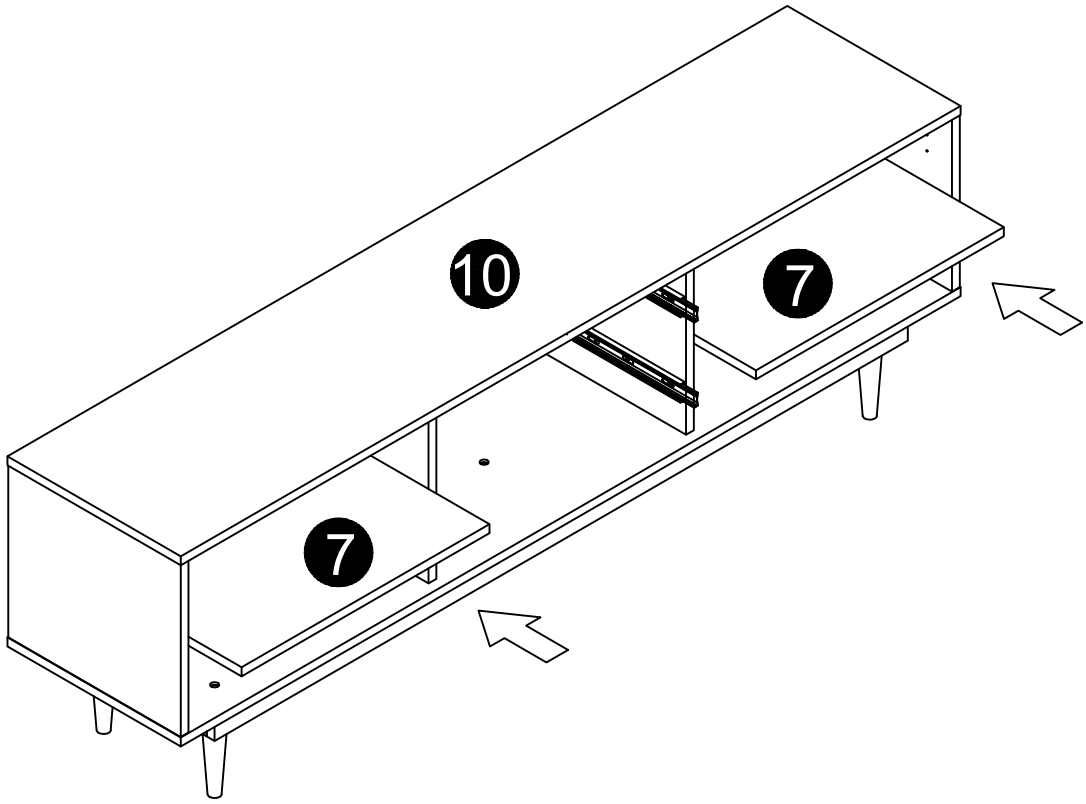

20

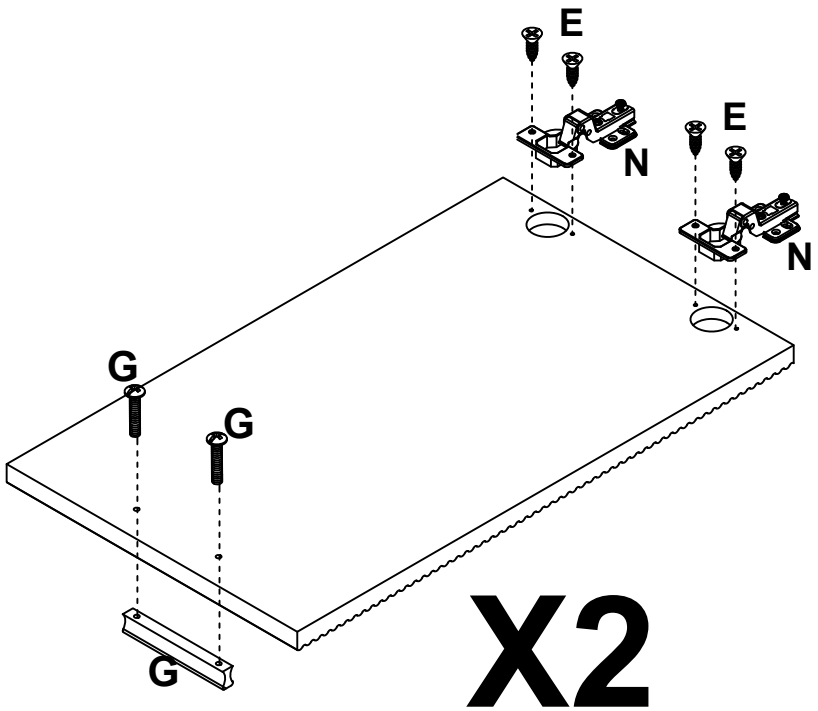


X2

E	N
 M3.5x14mm	
8 pcs	4 pcs
G	G
M4x22mm	
4 pcs	2 pcs

21

E


M3.5x14mm
16 pcs

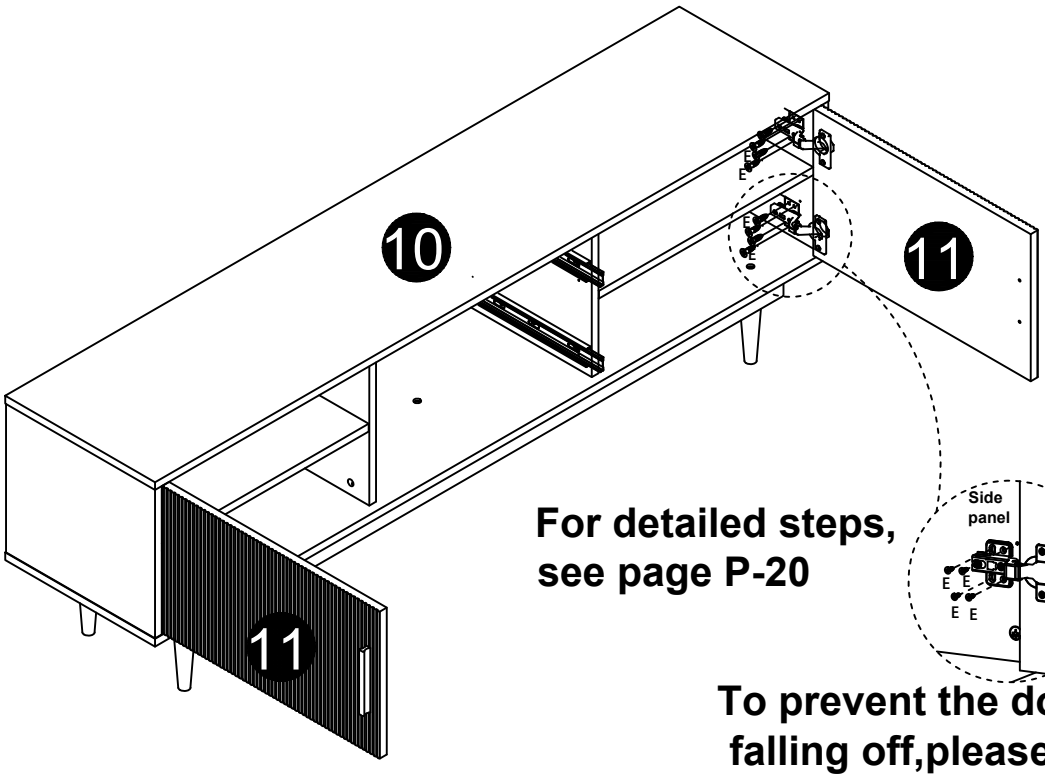

For detailed steps, see page P-20

To prevent the door hinge from falling off,please install 4 screws


22

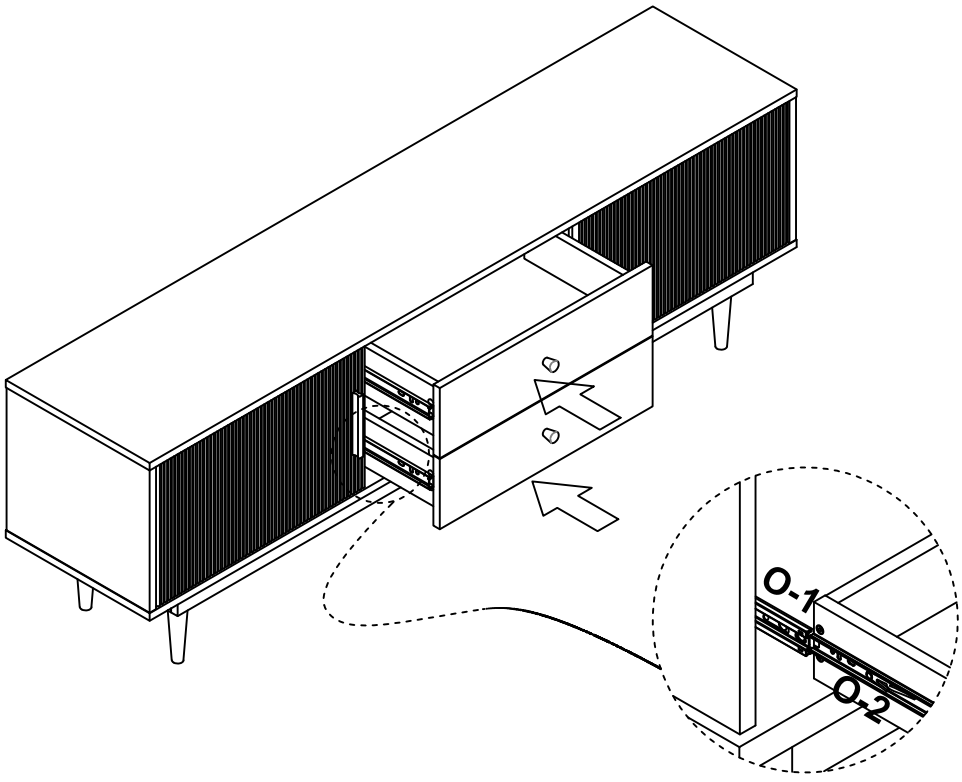

Align the "O-2" with the "O-1" guideway and gently push it in to complete the assembly

23


P	K	E
		 Ø3.5x14mm
2 pcs	12 pcs	12 pcs

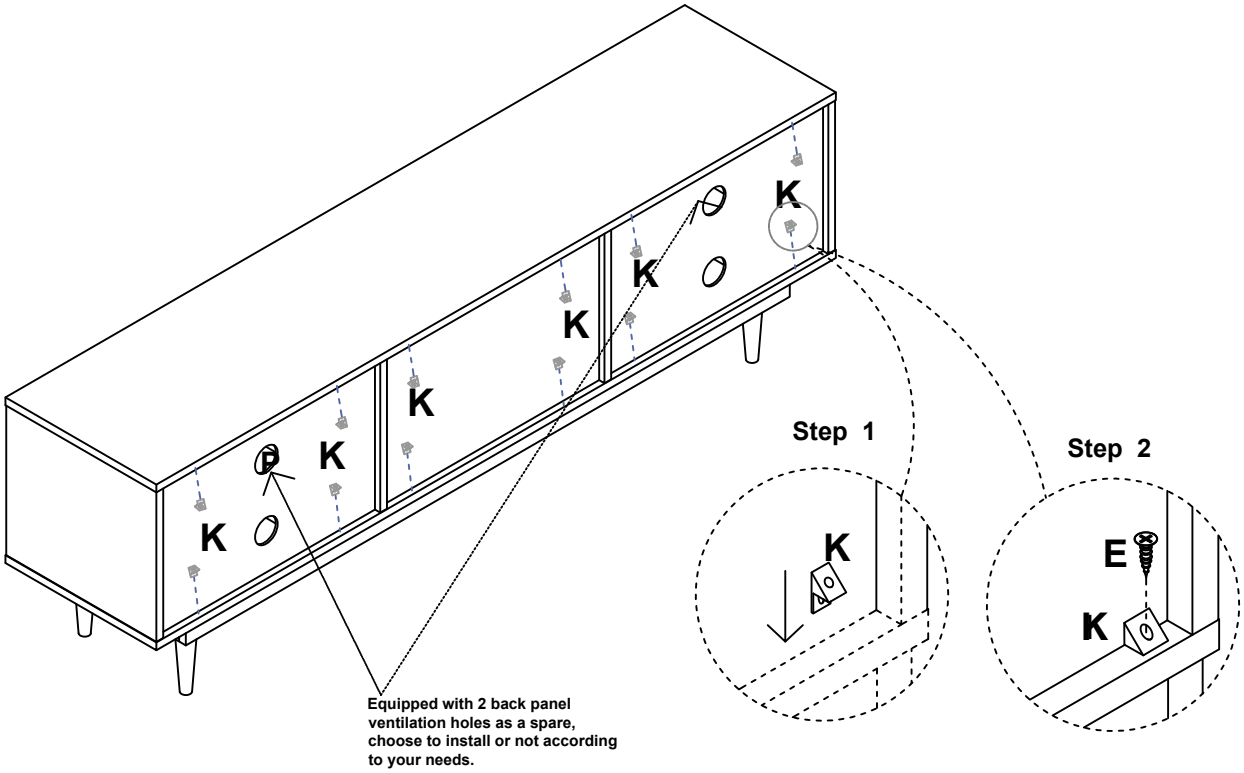

TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


Step 1

Open the door.

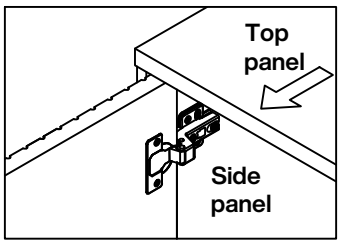


Step 2


Adjust the door panel to be flush with side panel and top panel edge.

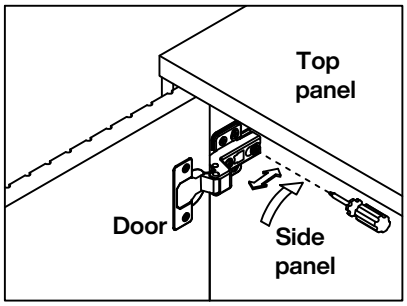

Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.


Step 2a MOVE DOOR OUT

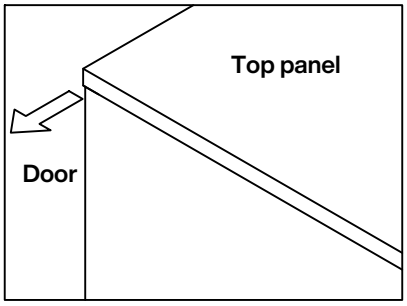


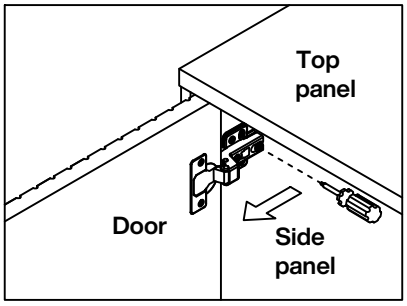

Pull the hinge forward a little.

Step 2b MOVE DOOR INSIDE

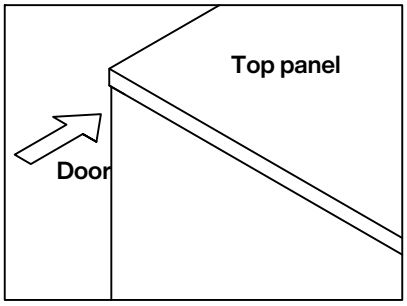


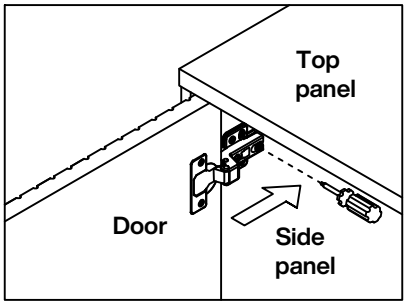

Pull the hinge back a little.


Step 3


Adjust the gap betweem door panel and side panel.

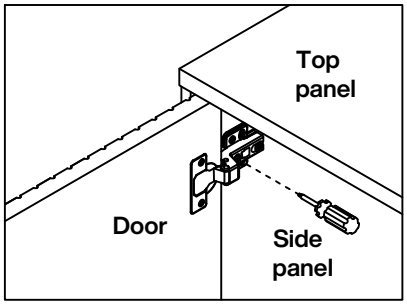

Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position (see step 3a & 3b).


Step 3a MOVE DOOR LEFT

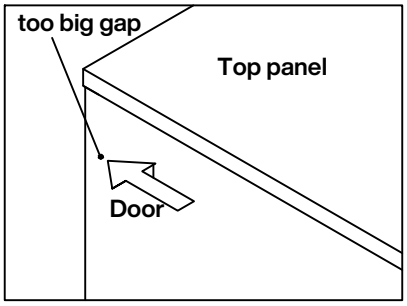


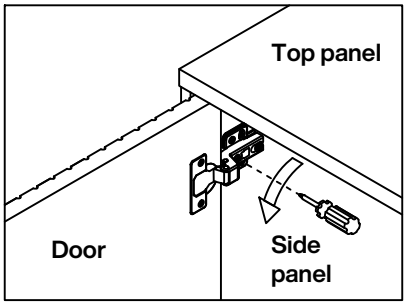

Turn the screw clockwise a little as shown to make the gap small.

Step 3b MOVE DOOR RIGHT

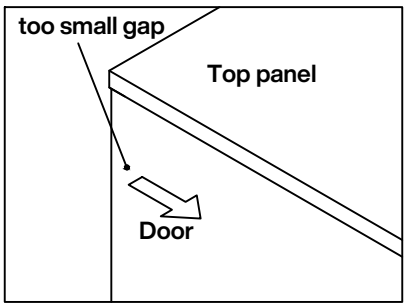

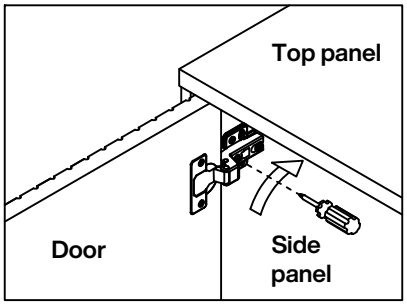

Turn the screw counterclockwise a little as shown to make the gap big.

Thank you for your support!

