


HJMSBBWCC-1682505


Storage cabinet

Installation Instructions

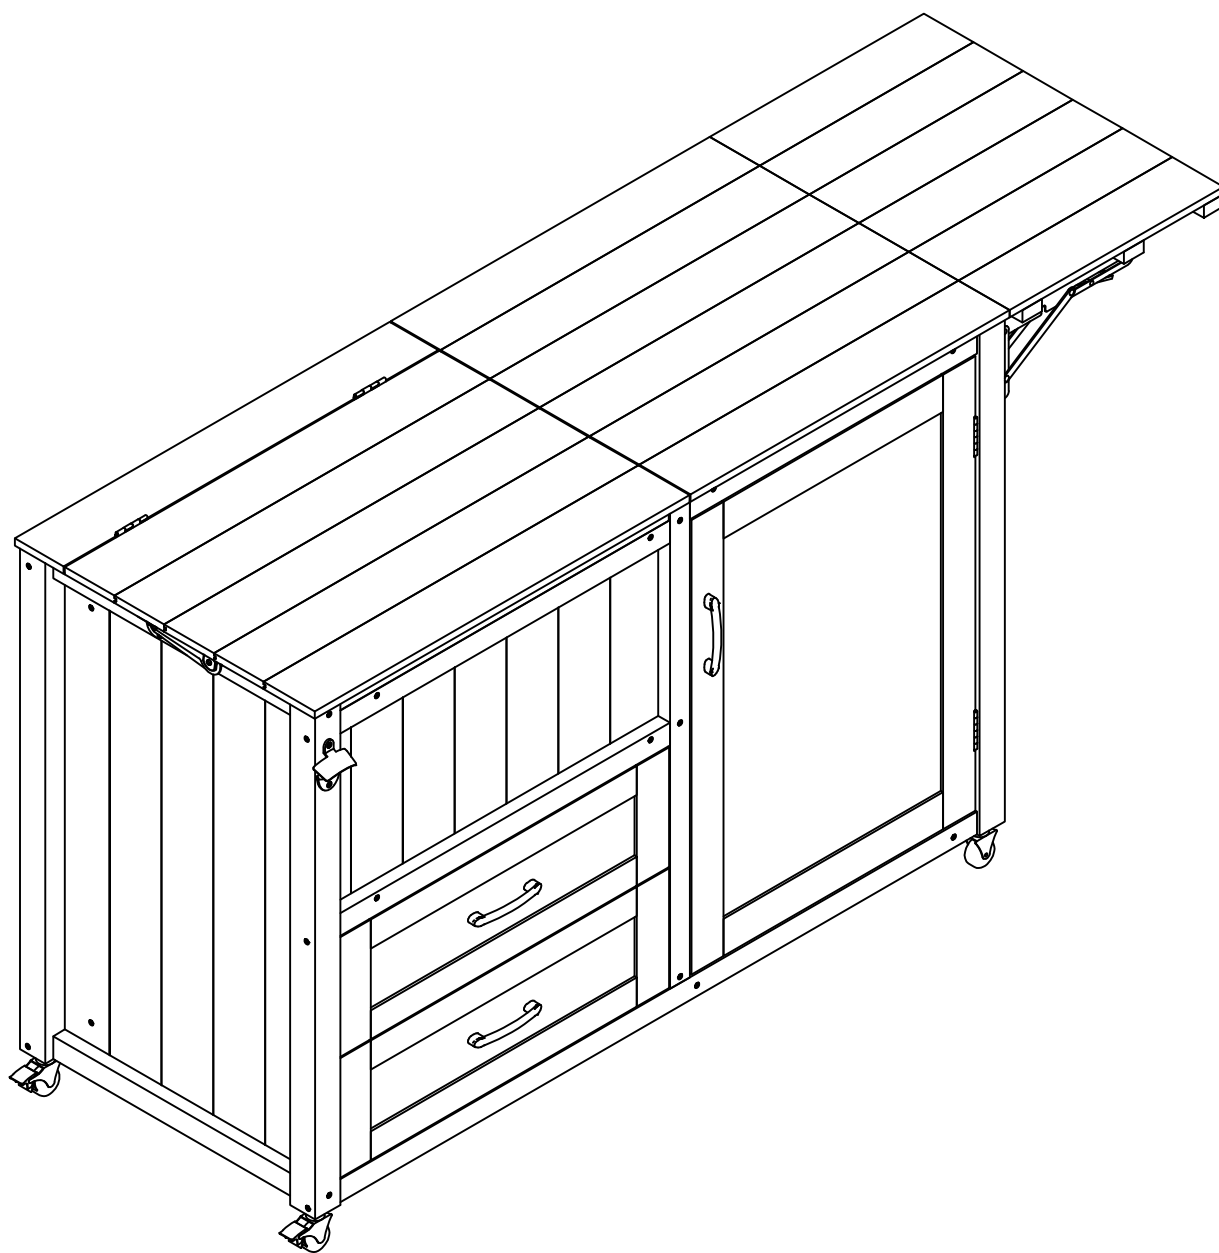


Board Identification


Not actual size

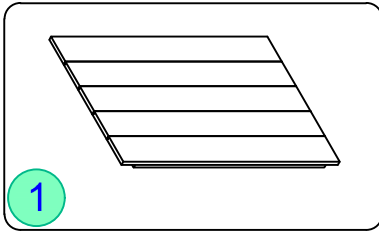


1
Left turning plate
Qty:1

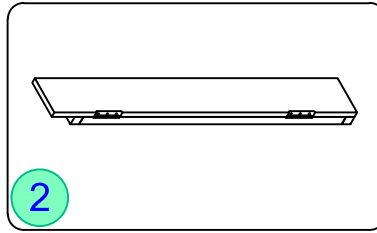


2
Left rear panel
Qty:1

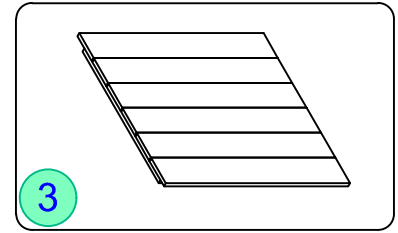


3
Middle panel
Qty:1

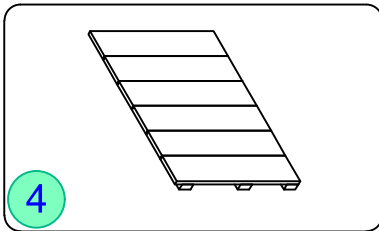


4
Right folding plate
Qty:1

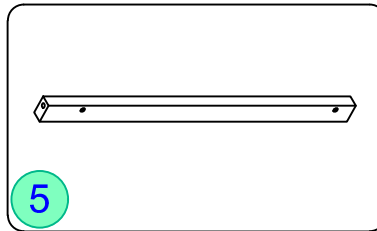


5
Upper left front bar
Qty:1

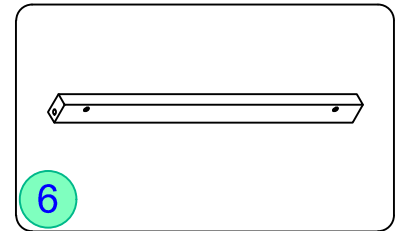


6
Upper right front bar
Qty:1

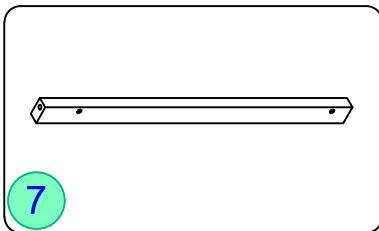


7
Middle left front bar
Qty:1

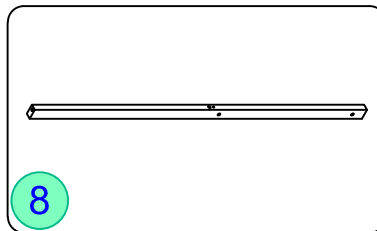


8
Lower front bar
Qty:1

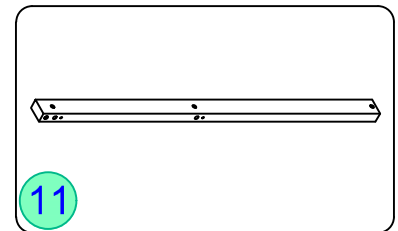


11
Middle front vertical bar
Qty:1

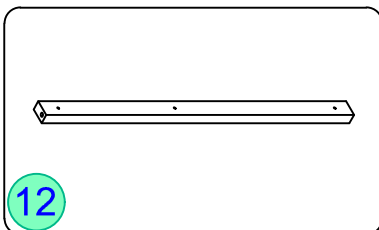


12
Middle rear vertical bar
Qty:1

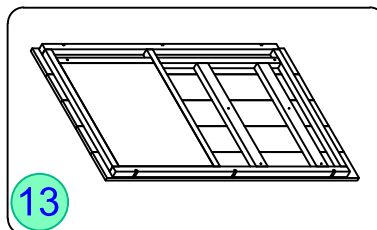


13
Left side frame
Qty:1

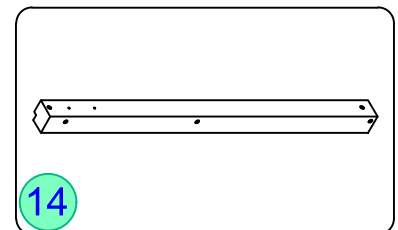


14
Front left upright post
Qty:1

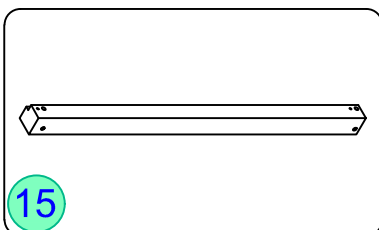

15
Rear left upright post
Qty:1

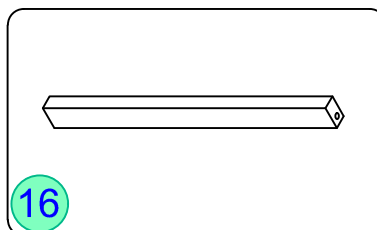


16
The lower left - outer horizontal bar
Qty:1

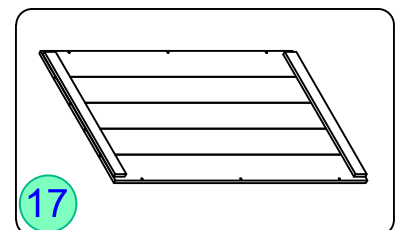

17
Right side frame
Qty:1


Board Identification

Not actual size

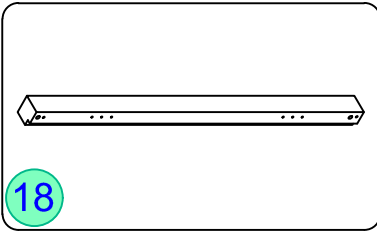


18

Front right upright post
Qty:1

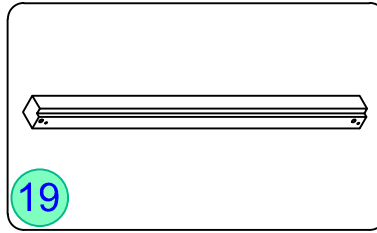


19

Rear right upright post
Qty:1

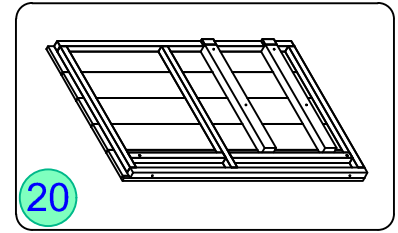


20

Middle side frame
Qty:1

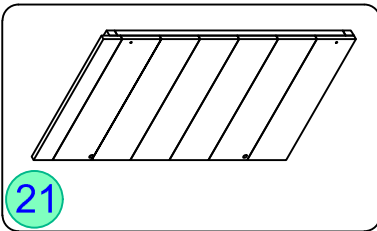


21

Left front frame
Qty:1

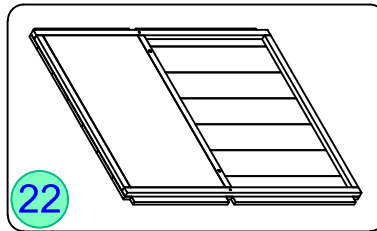


22

Left rear frame
Qty:1

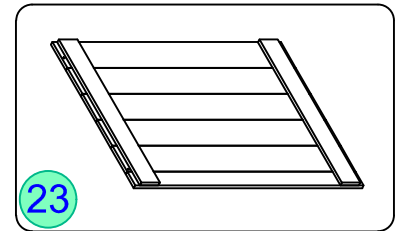


23

Right rear frame
Qty:1

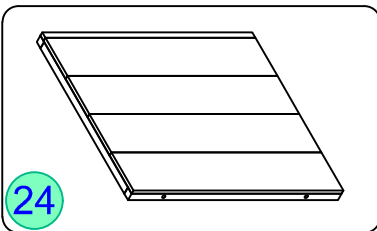


24

Base plate frame
Qty:1

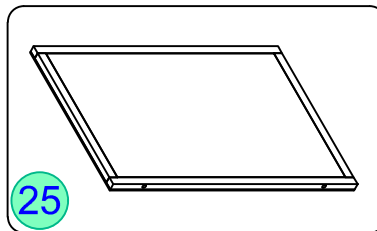


25

Laminate frame
Qty:1

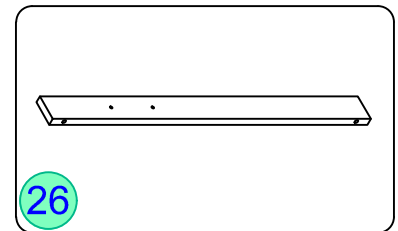


26

Left vertical bar of the door
Qty:1

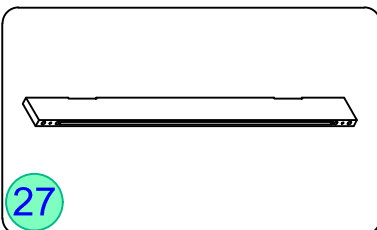


27

Right vertical bar of the door
Qty:1

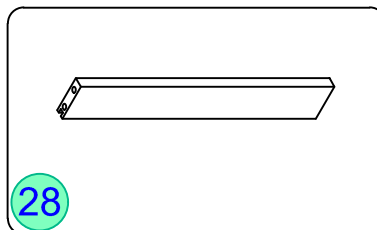


28

Upper vertical bar of the door
Qty:1

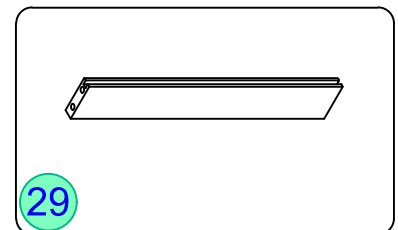


29

Lower vertical bar of the door
Qty:1

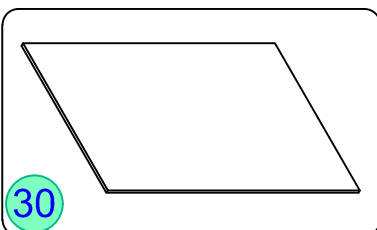


30

Door core panel
Qty:1

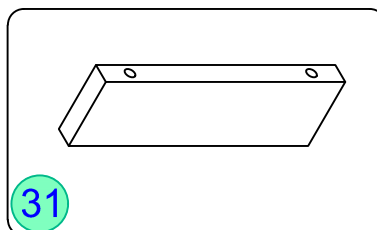

31

Left vertical bar of the drawer
Qty:2

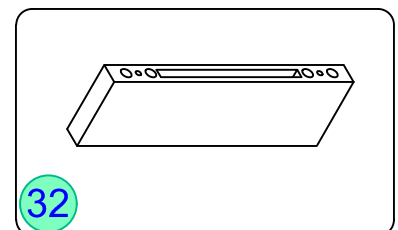


32


Right vertical bar of the drawer
Qty:2

Board Identification


Not actual size

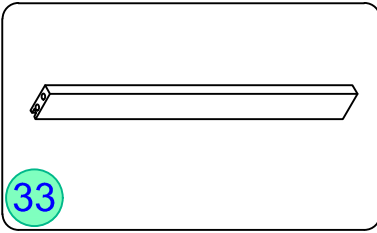


Drawer face horizontal bar
Qty:4

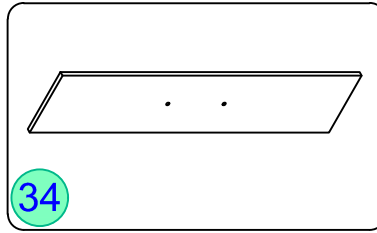


Drawer face core board
Qty:2

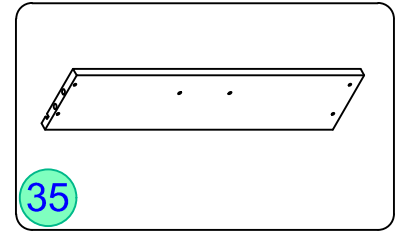


Drawer front panel
Qty:2

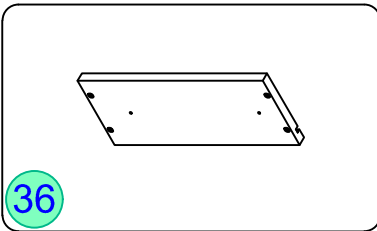


Drawer left side panel
Qty:2

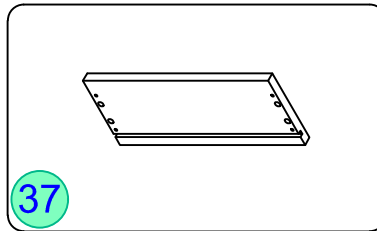


Drawer right side panel
Qty:2

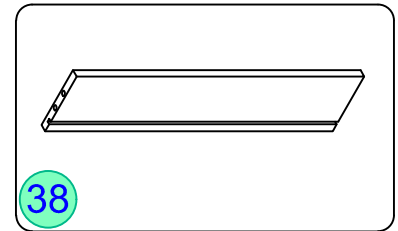


Drawer rear panel
Qty:2

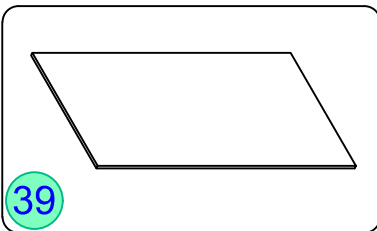


Drawer bottom board
Qty:2

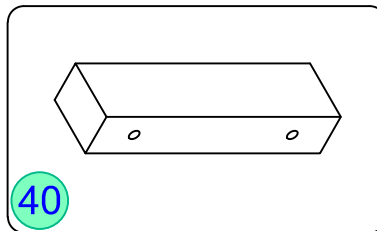


Door suction fixing strip
Qty:1

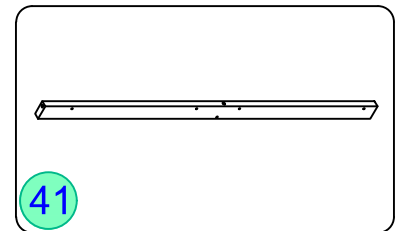


Upper rear bar
Qty:1

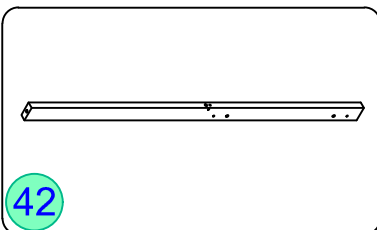


Lower rear bar
Qty:1

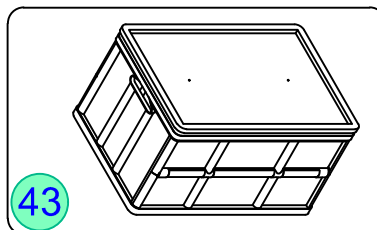

Insulated box
Qty:1

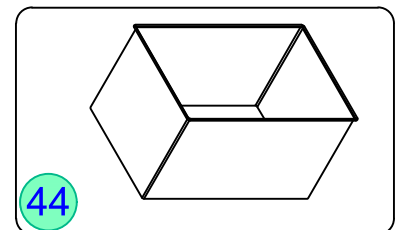


Insulated bag
Qty:1

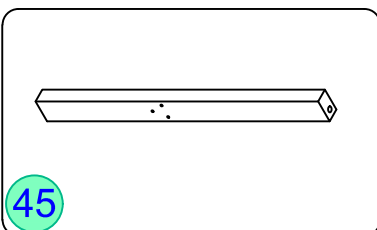


The upper left - outer horizontal bar
Qty:1

Hardware Identification


Not actual size

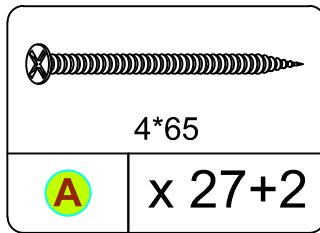


Screw

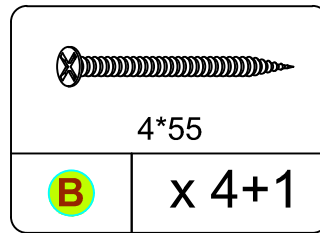


Screw

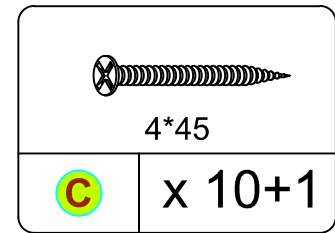


Screw

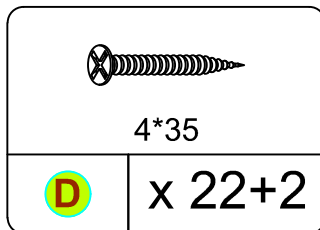


Screw

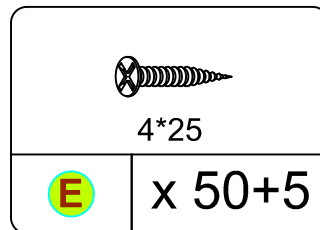


Screw

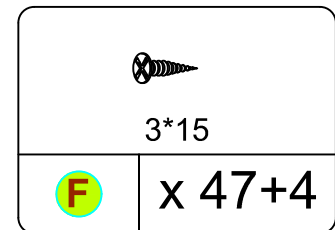


Screw

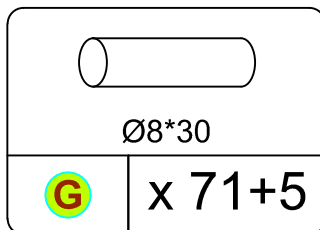


Wood dowel

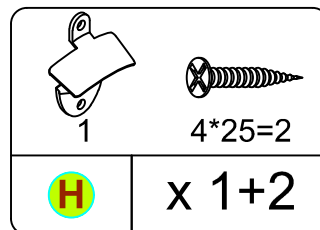


Bottle opener+Screw(Black)

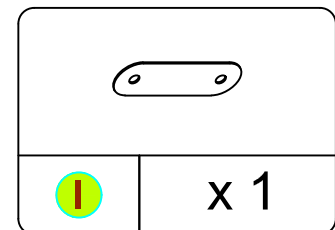


Caster

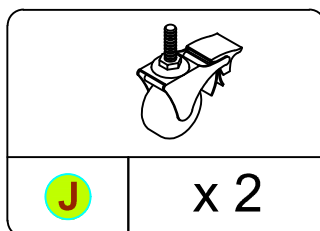


Brake caster

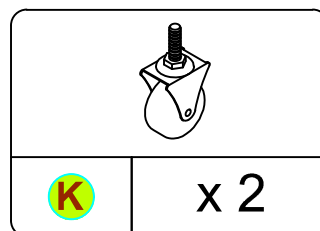


Caster

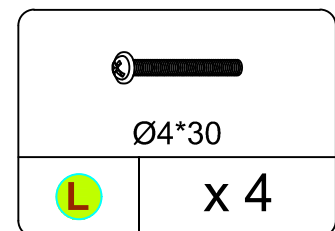


Handle screw

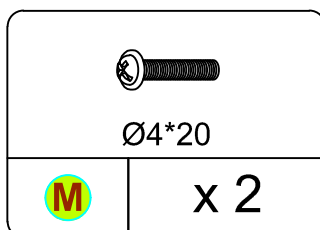

Handle screw

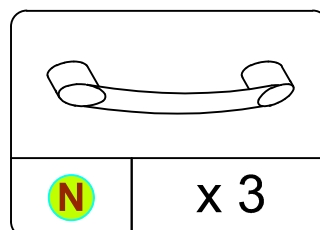


Handle

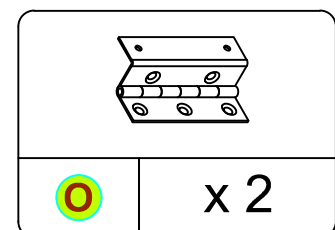


Bent hinge

Hardware Identification


Not actual size

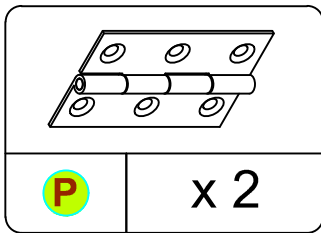


Regular hinge

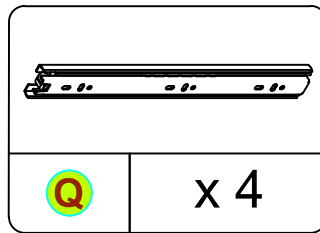


Three - section slide rail

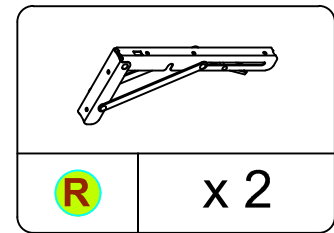

Foldable stand

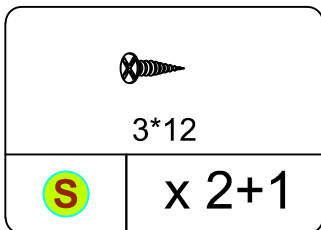


Screw



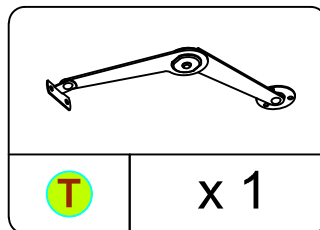


Adjustable - stop support rod




Explosion diagram

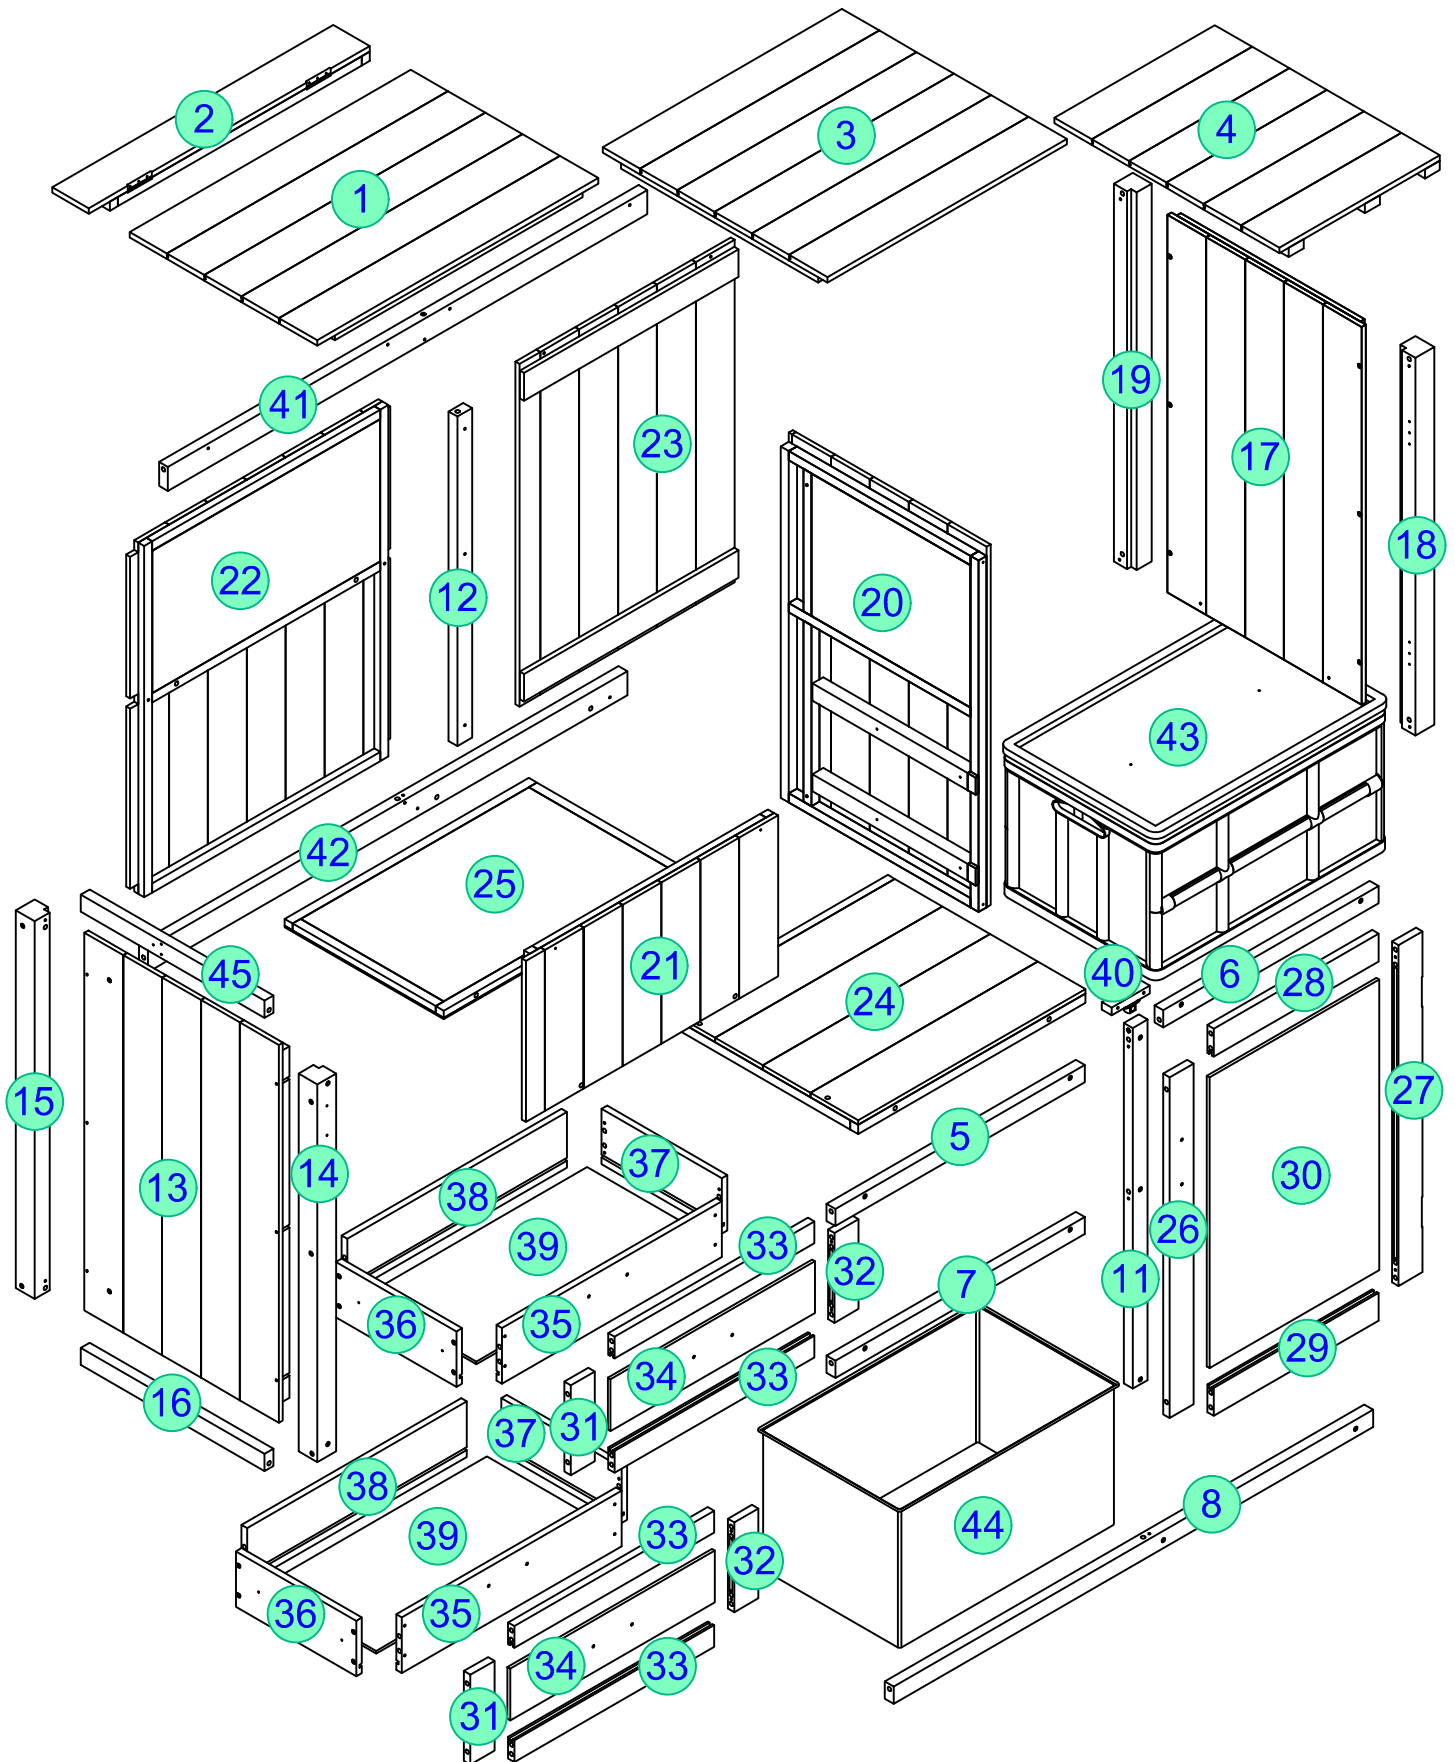

Step 1

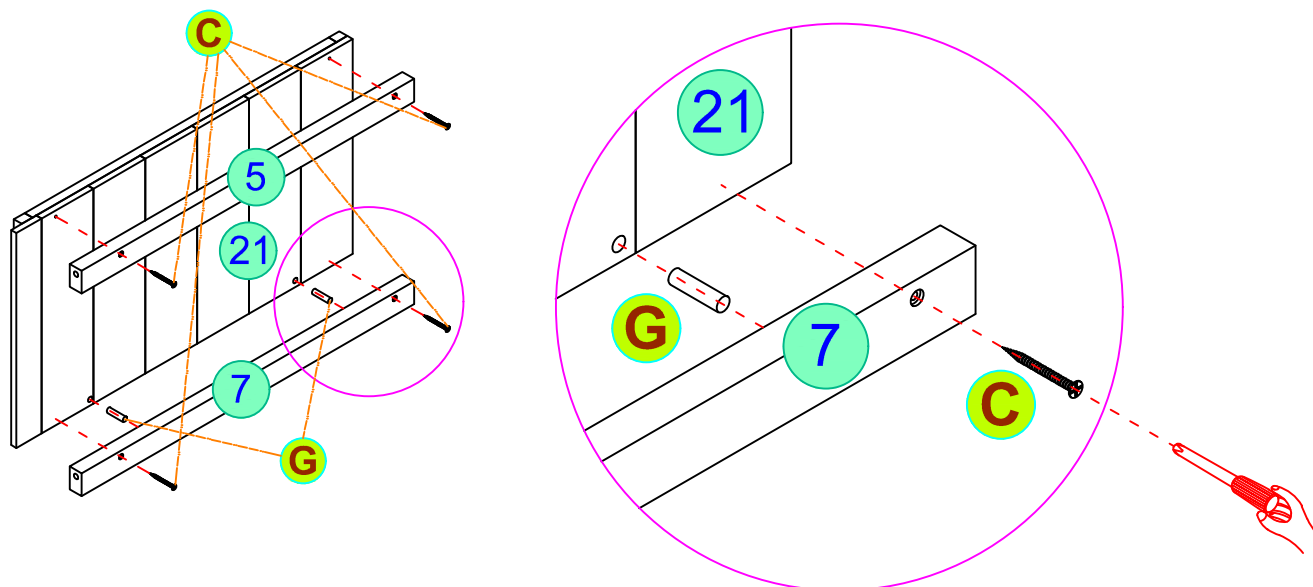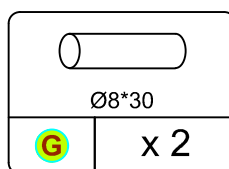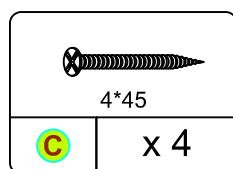


Step 2

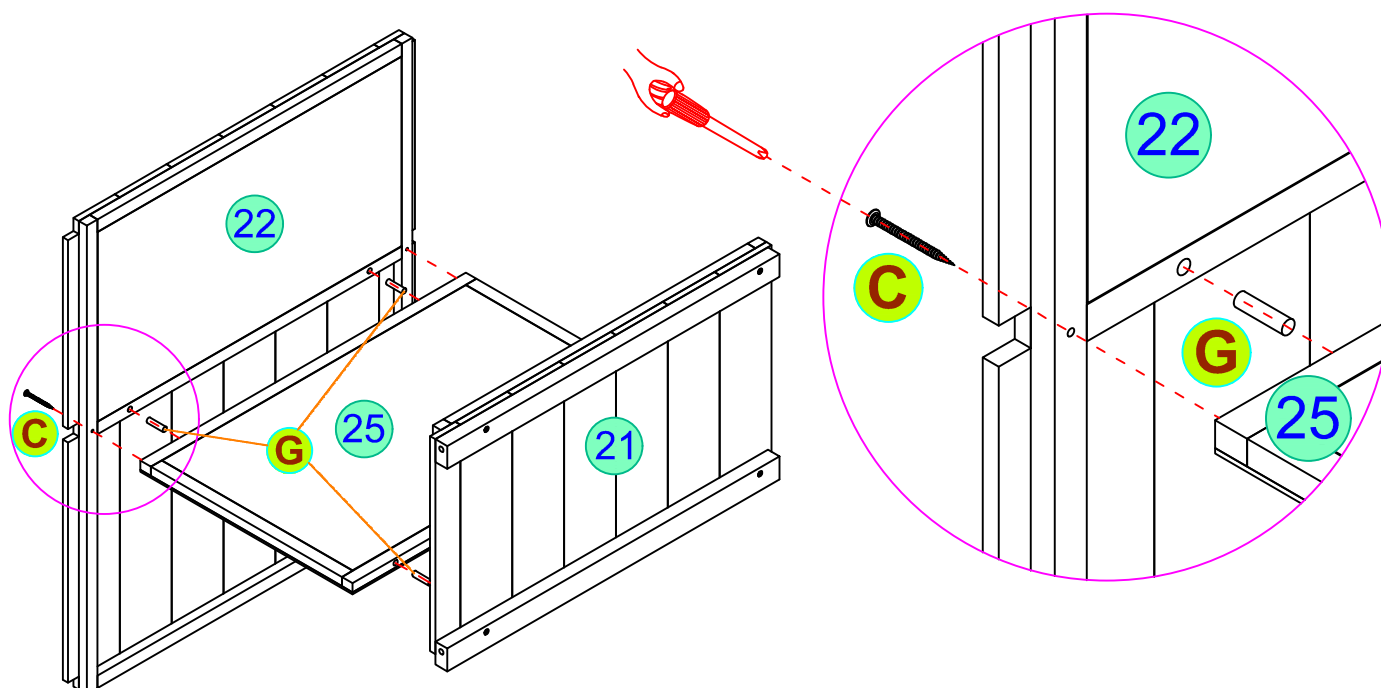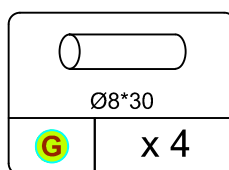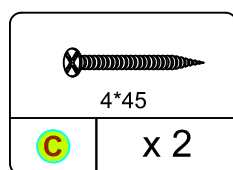


Step 3


	
4*35	
D	x 6

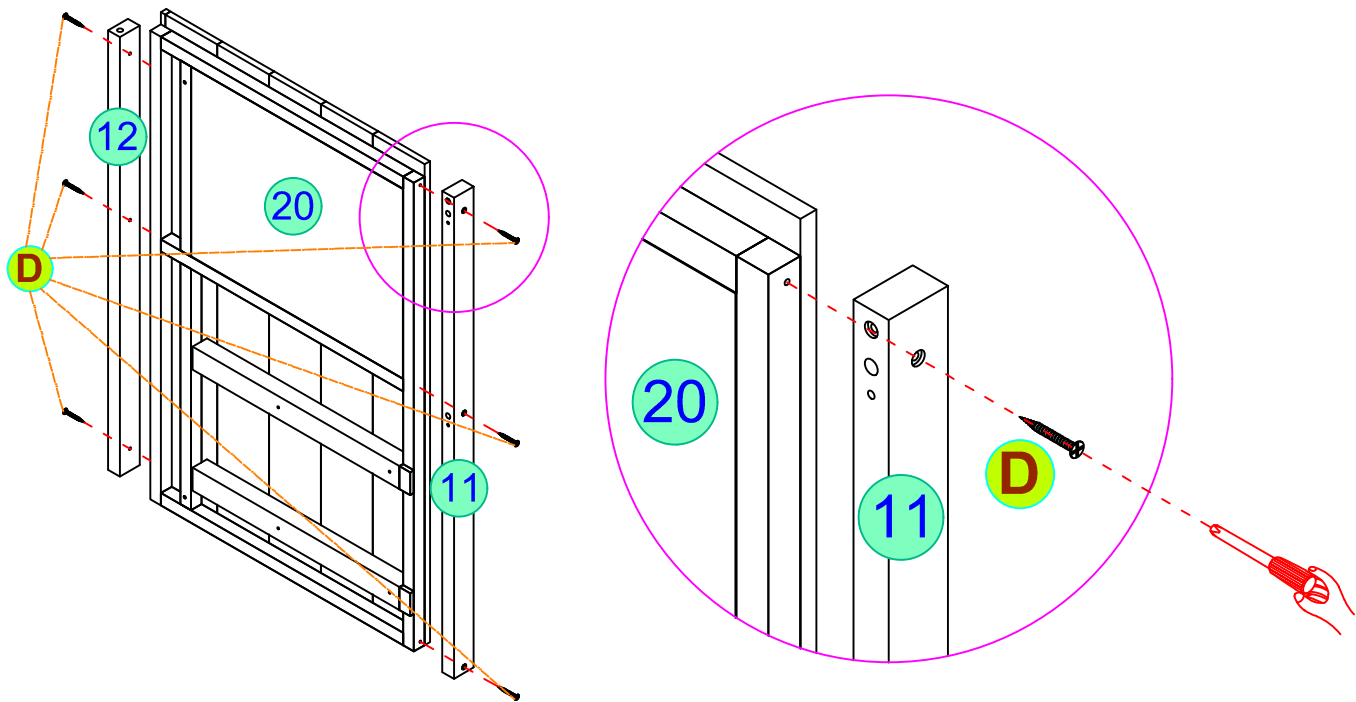


Step 4

	
4*35	
D	x 4


	
Ø8*30	
G	x 4

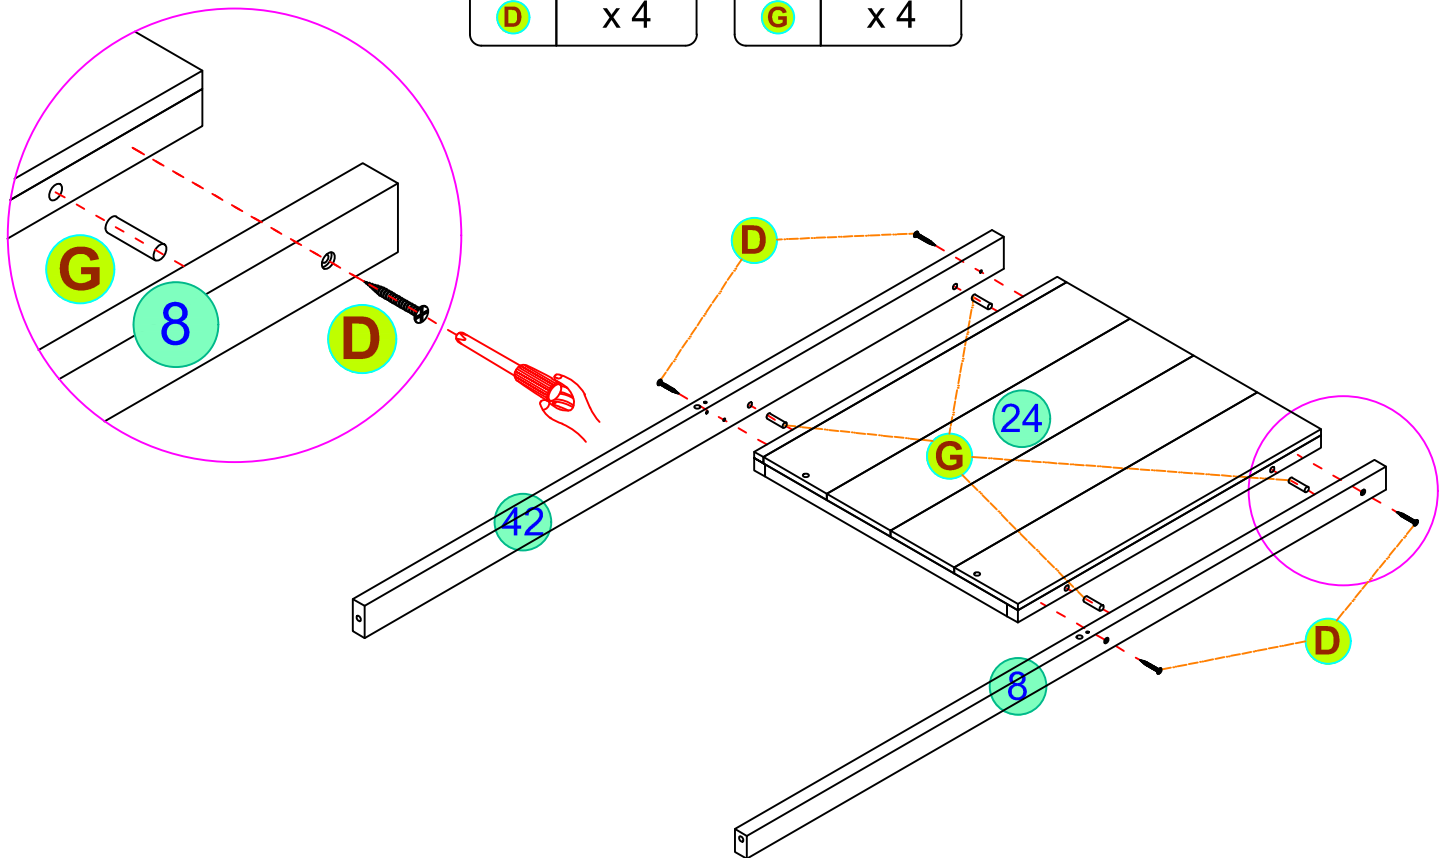





Step 5

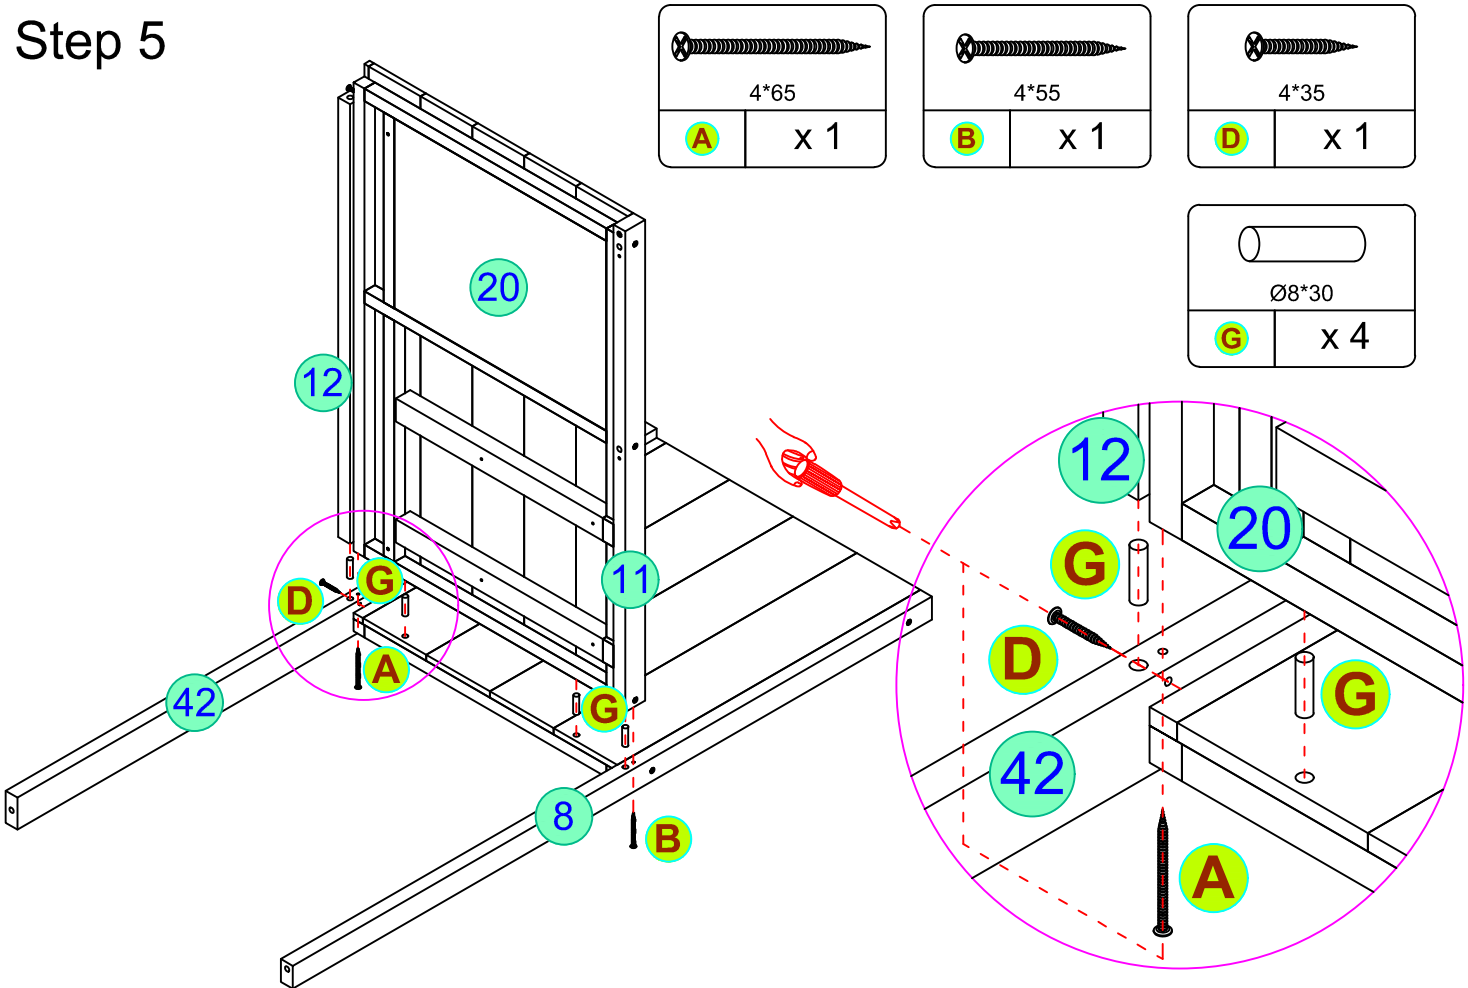





Step 6

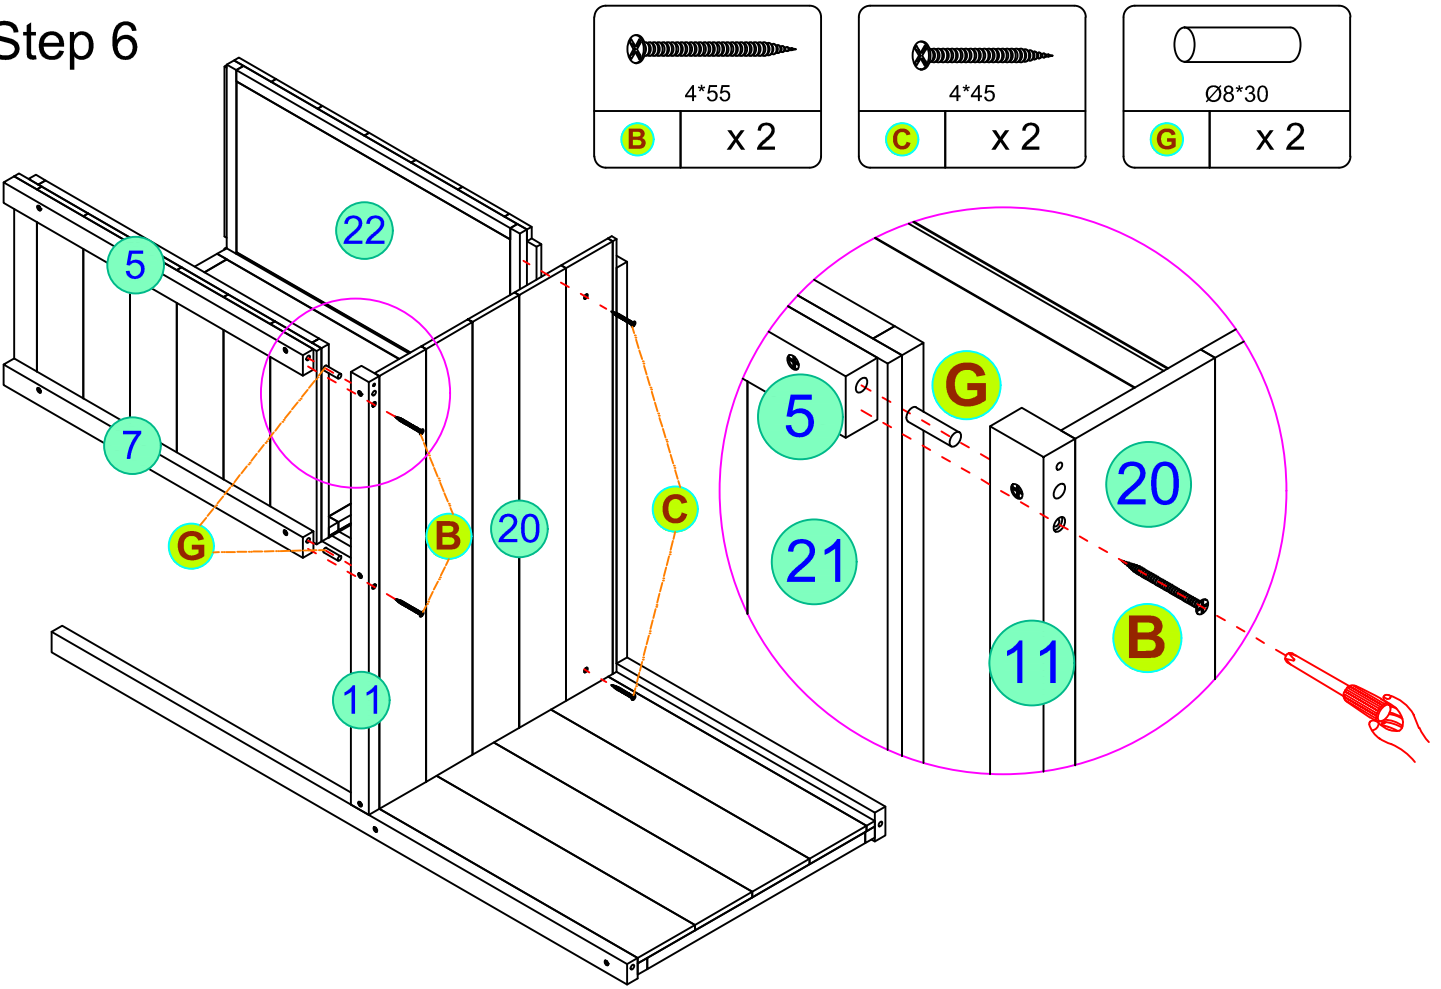




Step 7

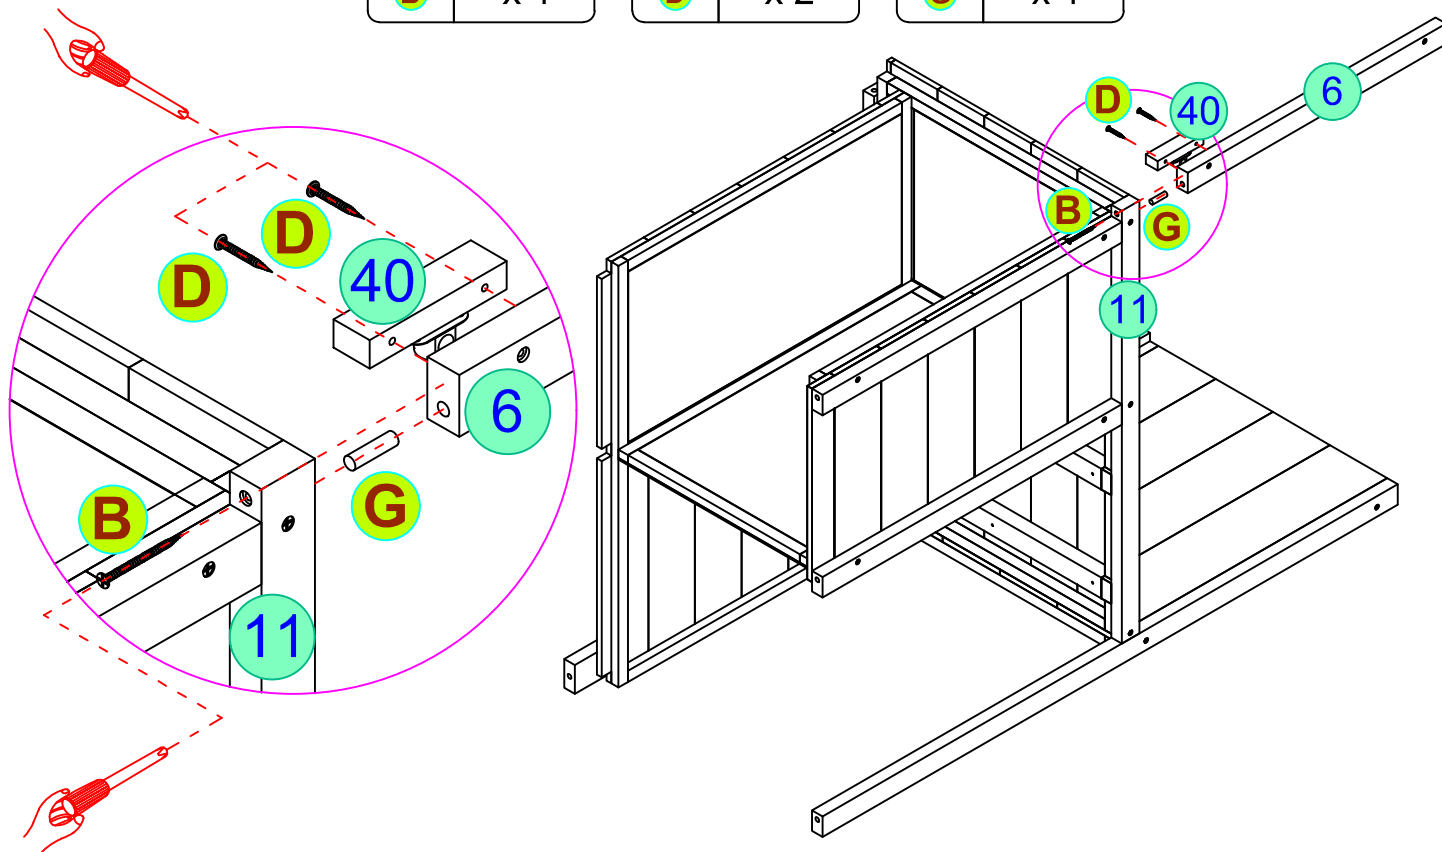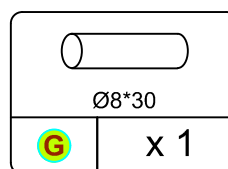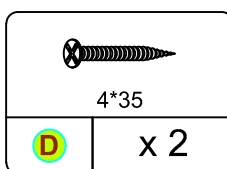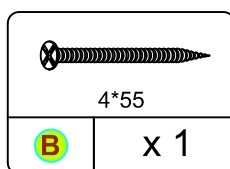



Step 8

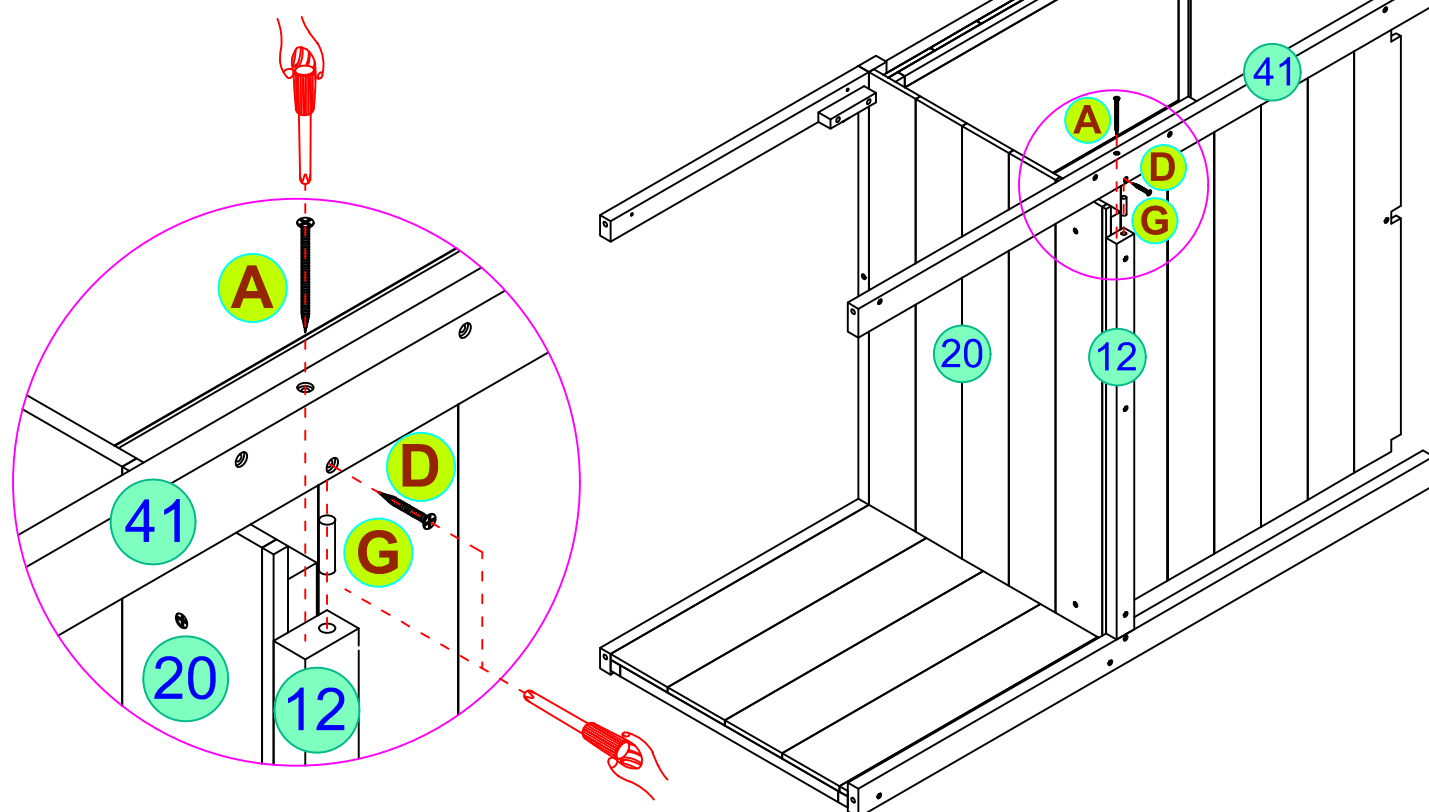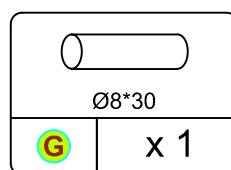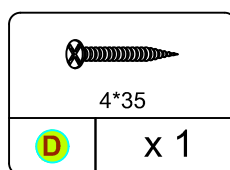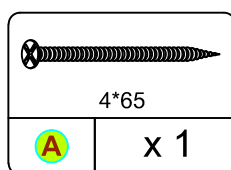

Step 9

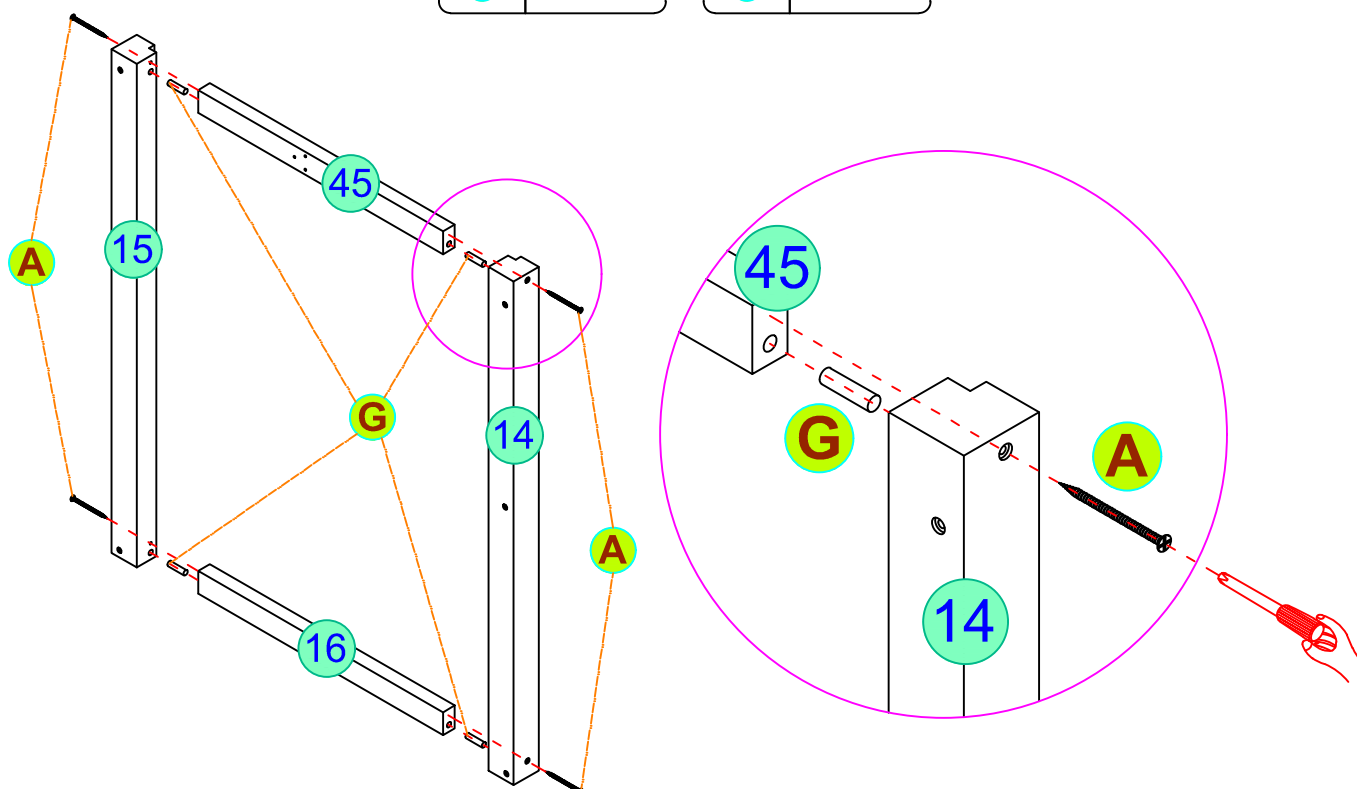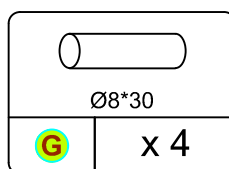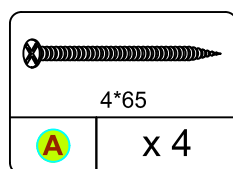


Step 10

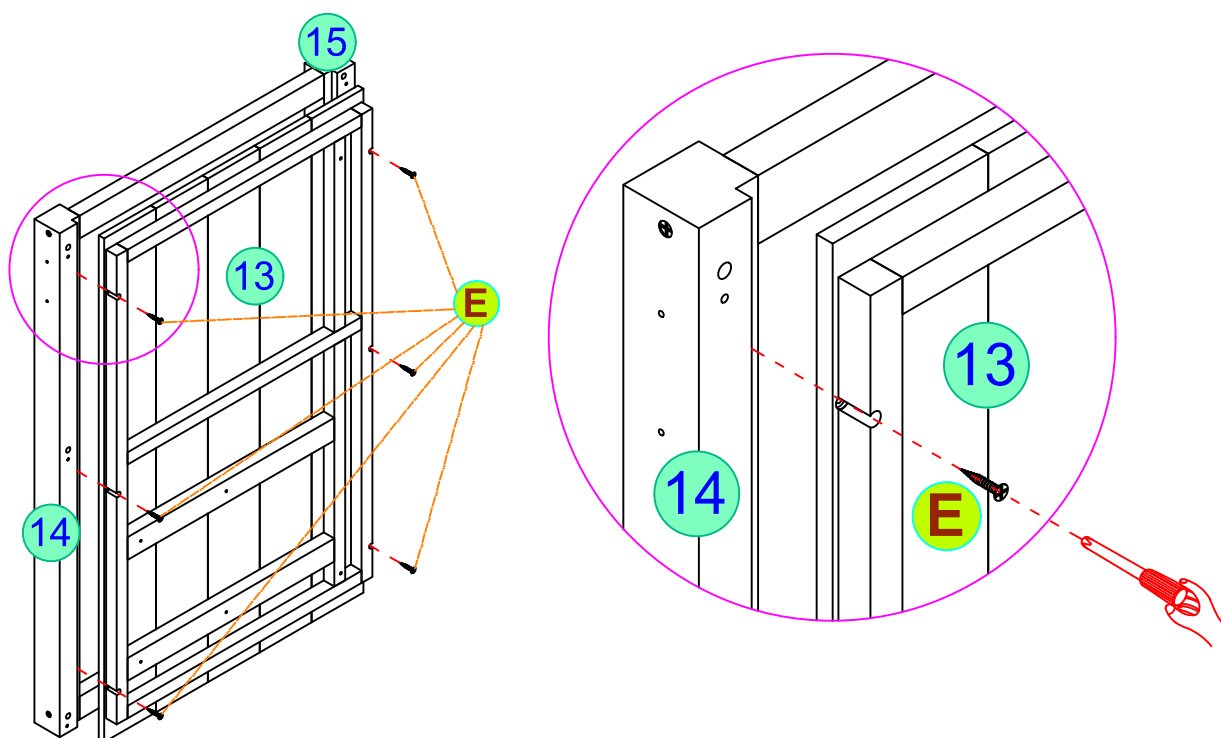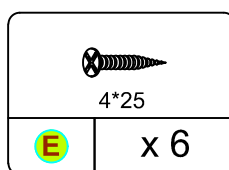

Step 11

 4*25	
E	x 6

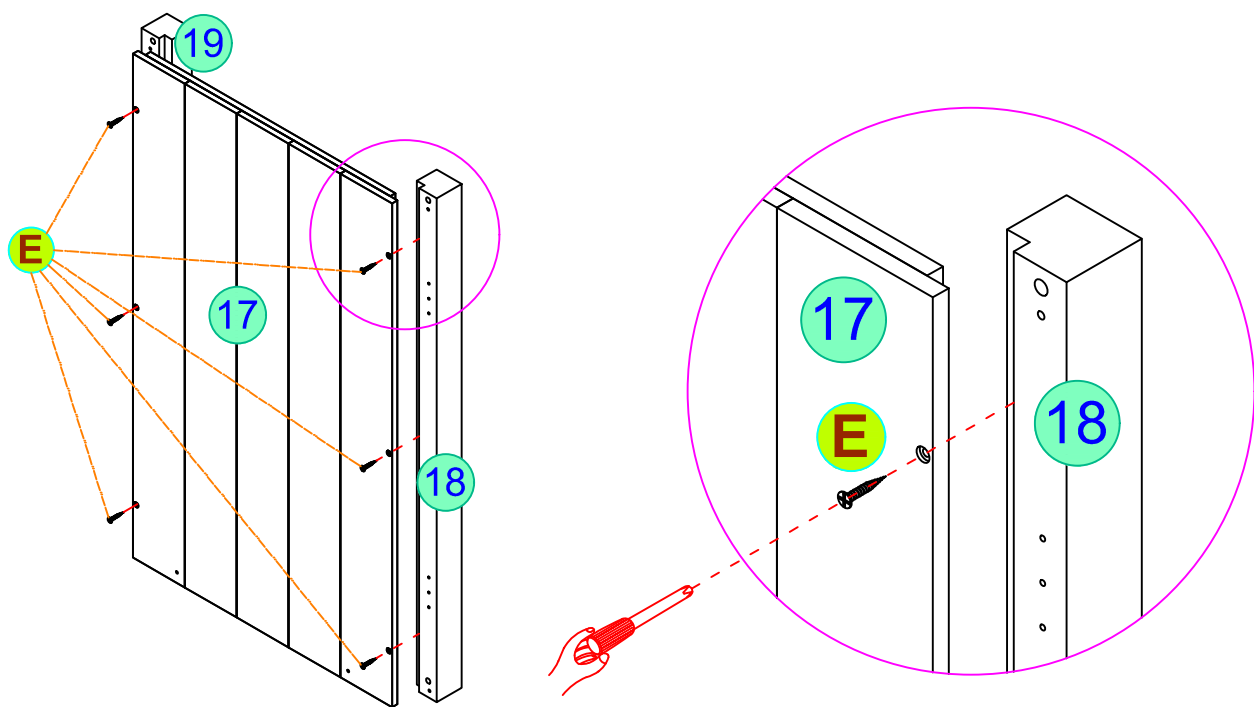


Step 12





 4*65	
A	x 4

 Ø8*30	
G	x 4





 4*35	
D	x 2

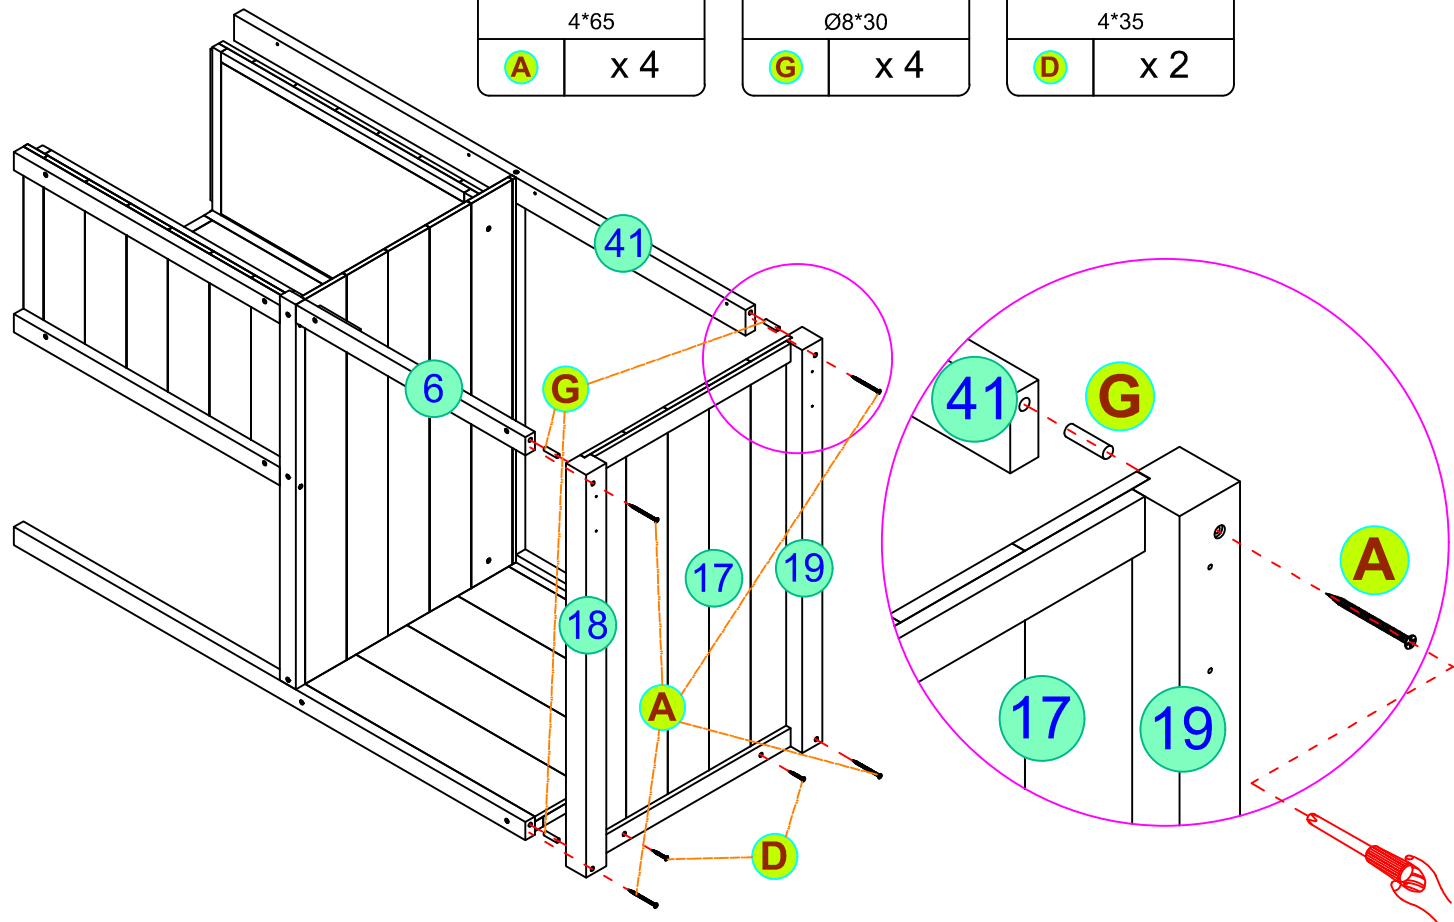




Step 13

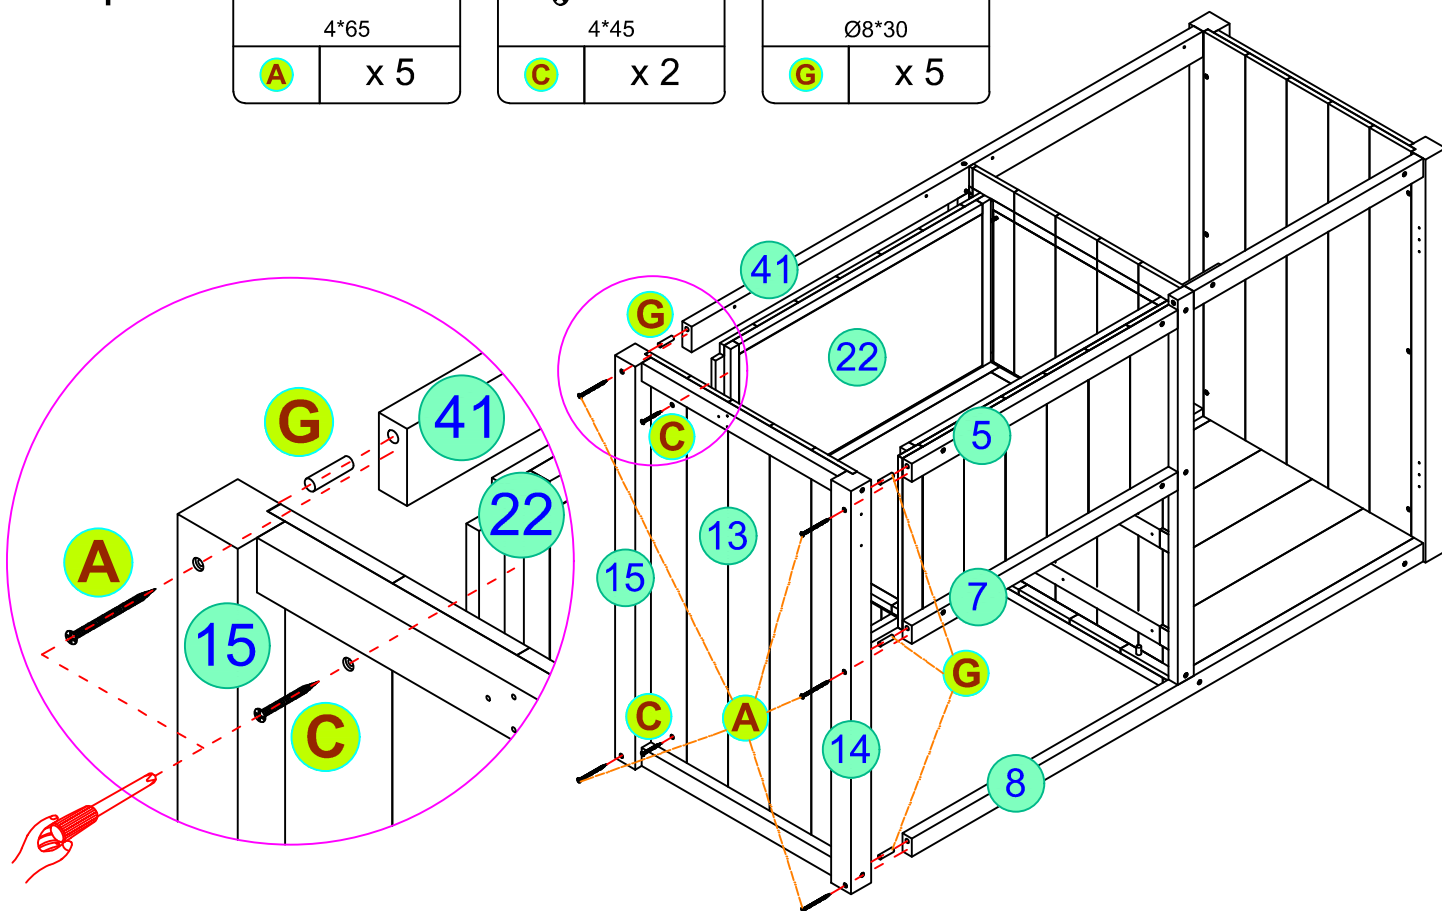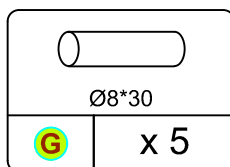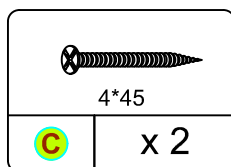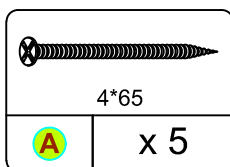





Step 14

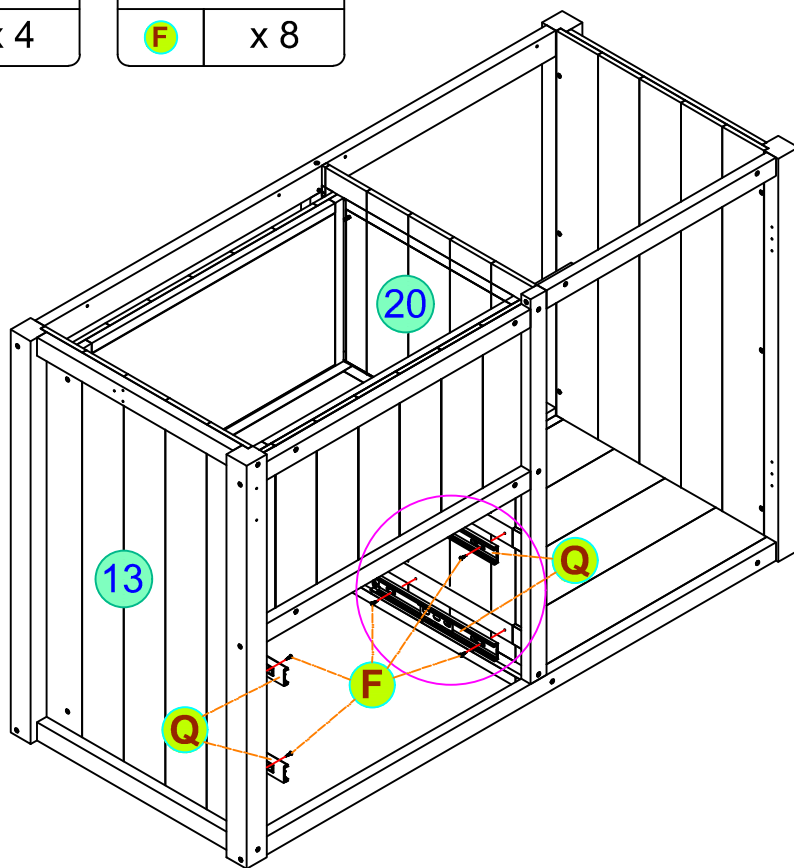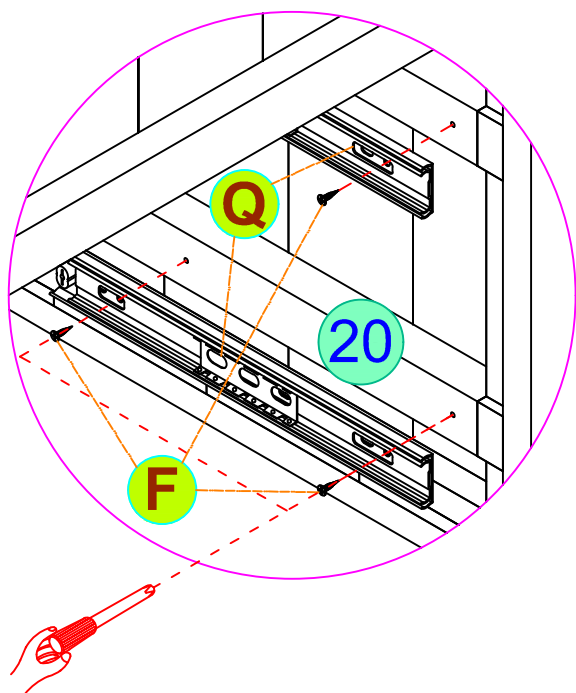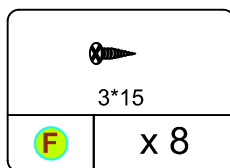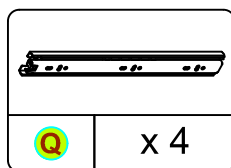



Step 15

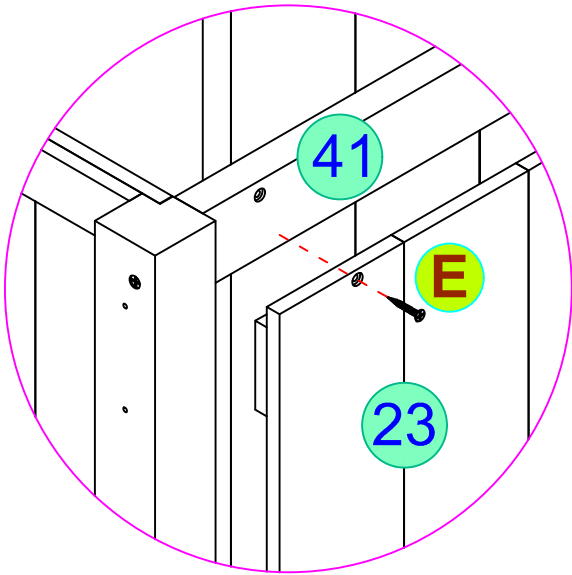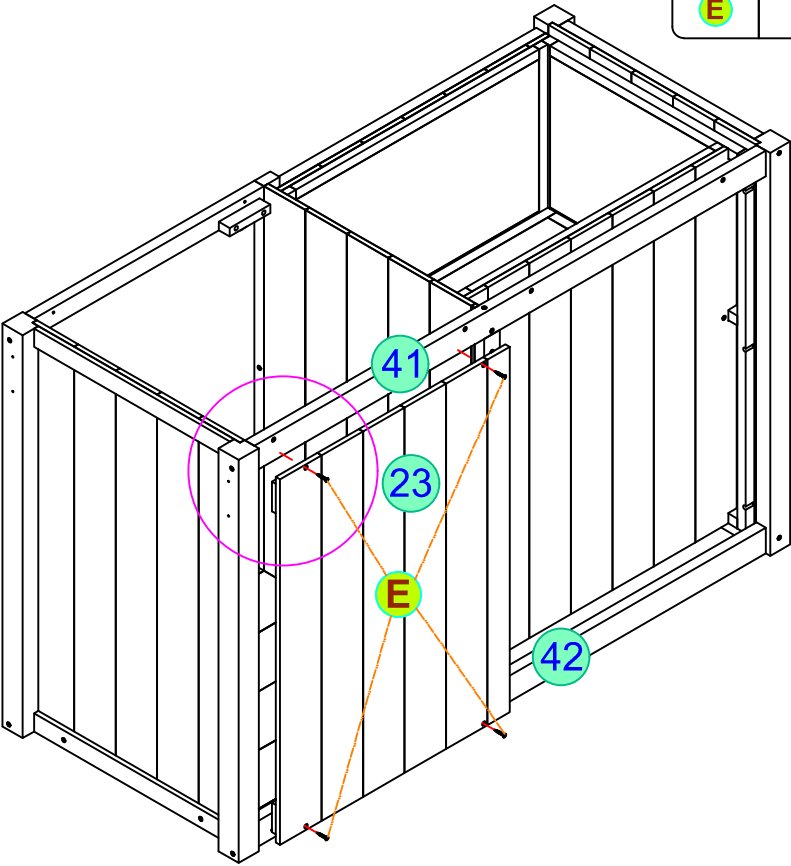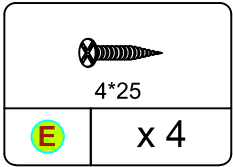


Step 16

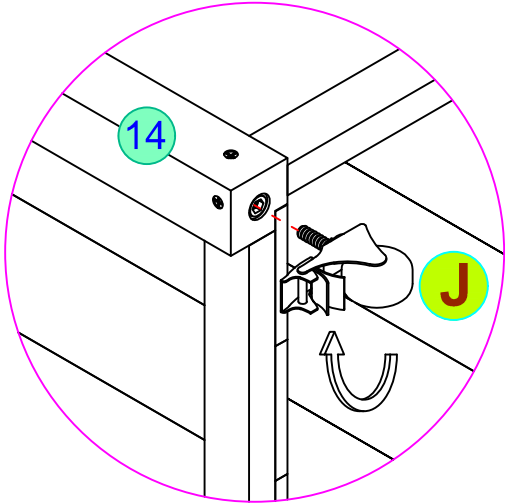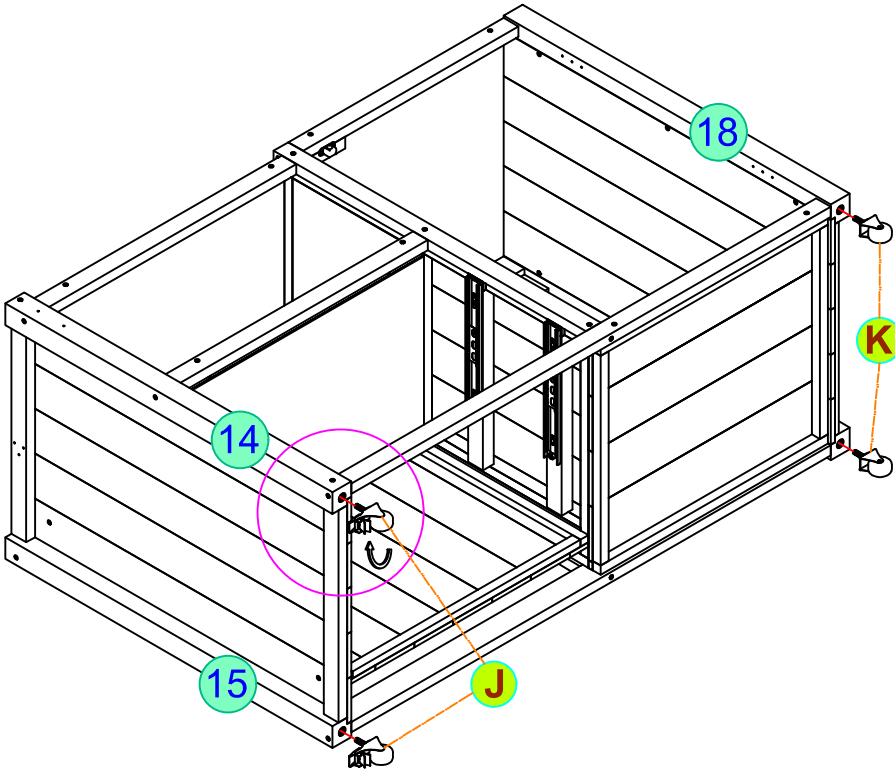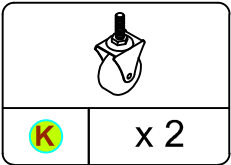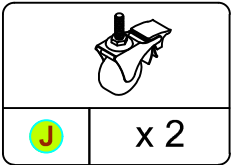



Step 17

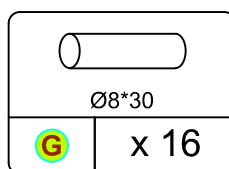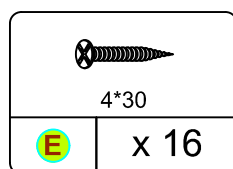


2 Drawers

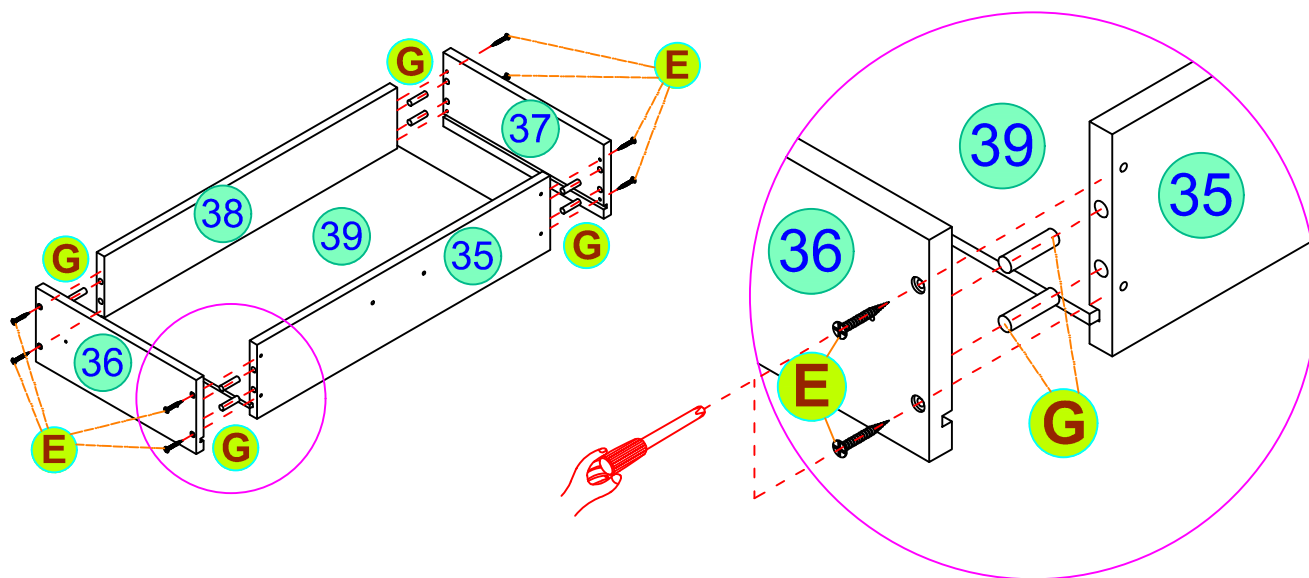



Step 18

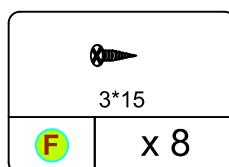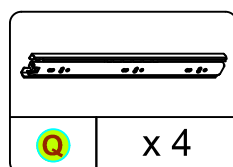


2 Drawers

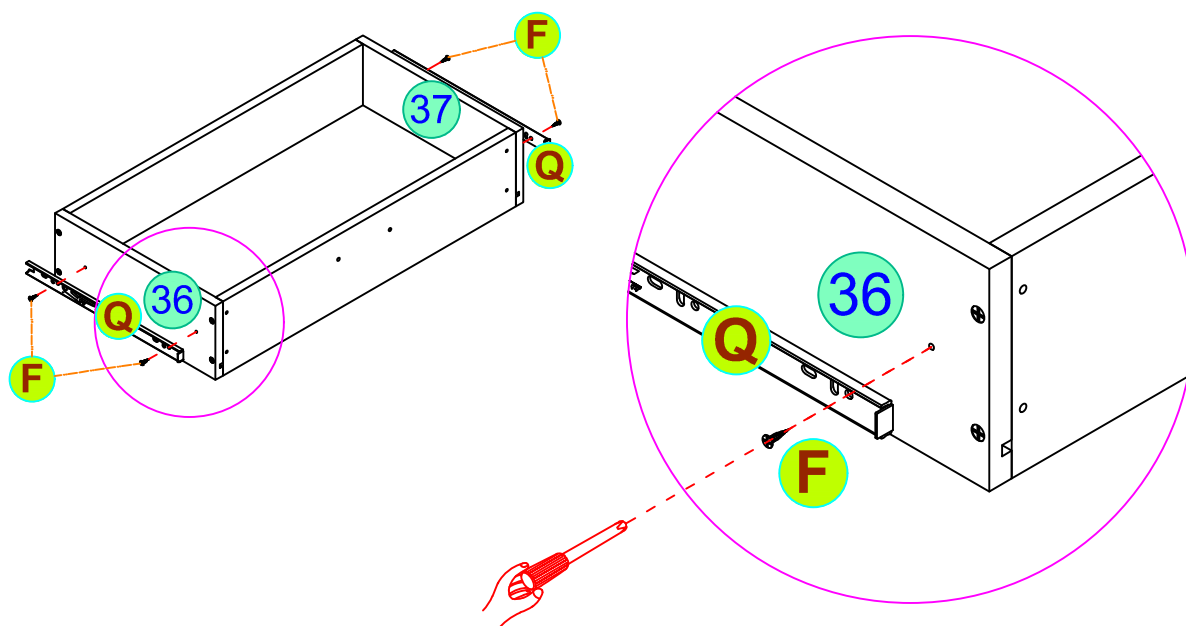




Step 19

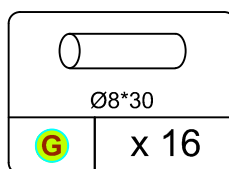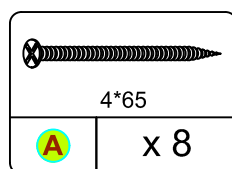


2 Drawers

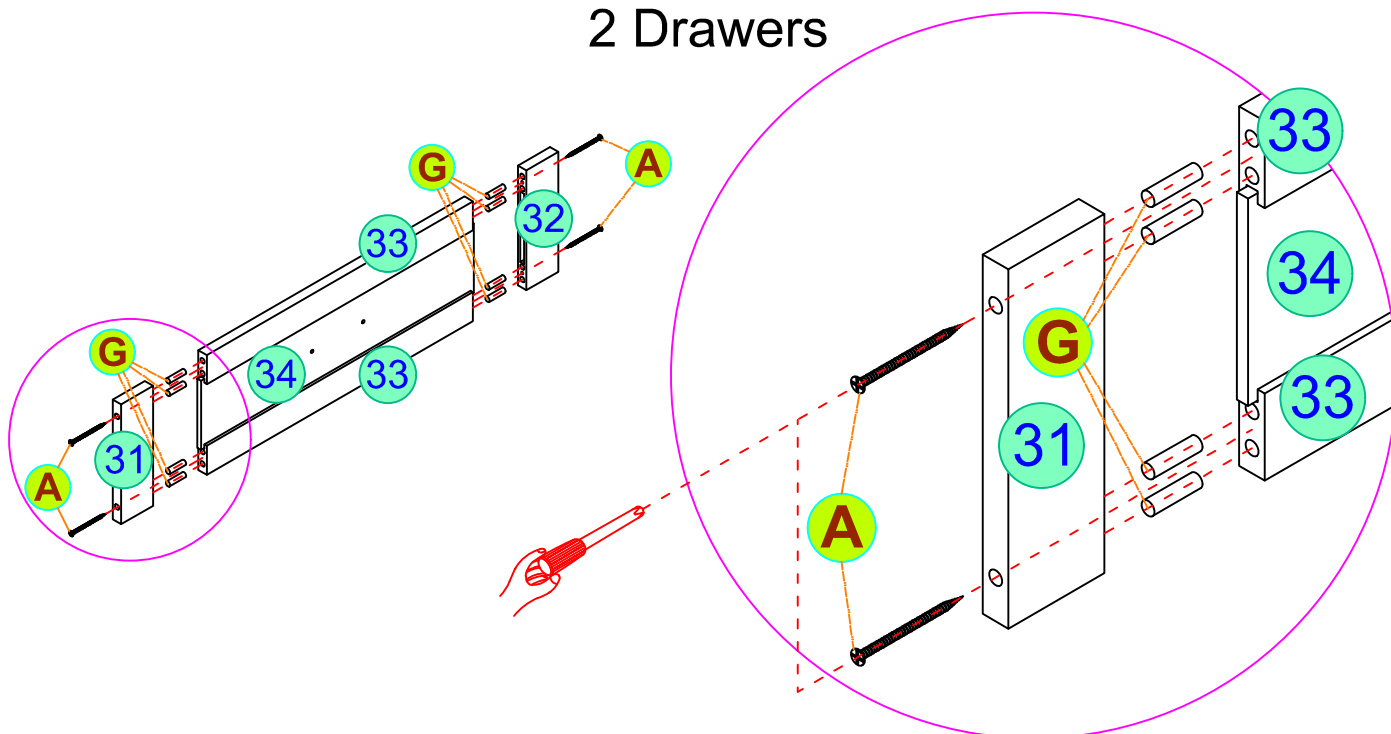




Step 20

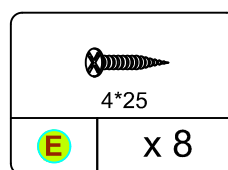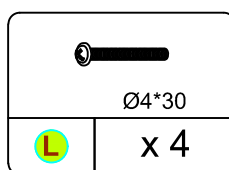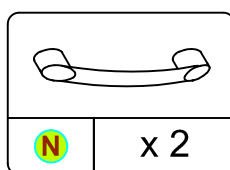





2 Drawers

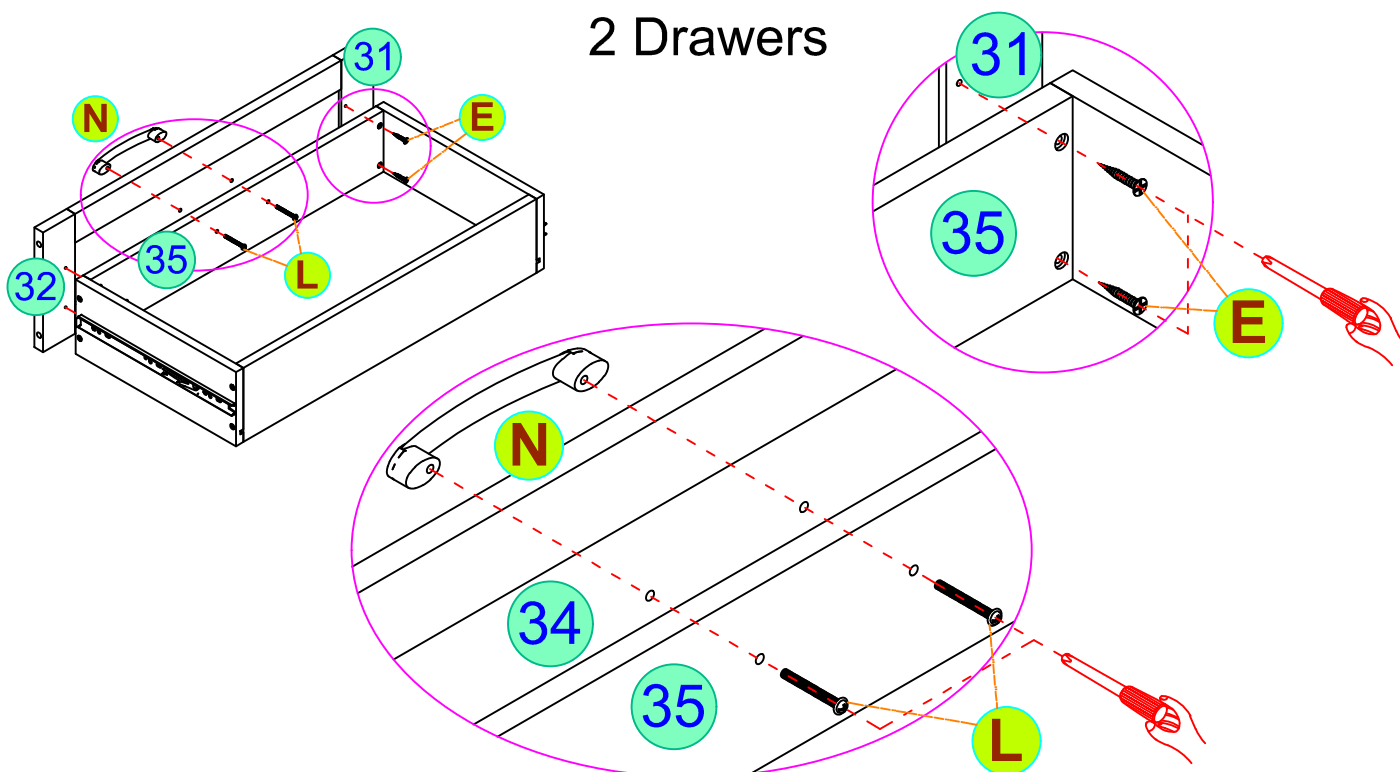




Step 21

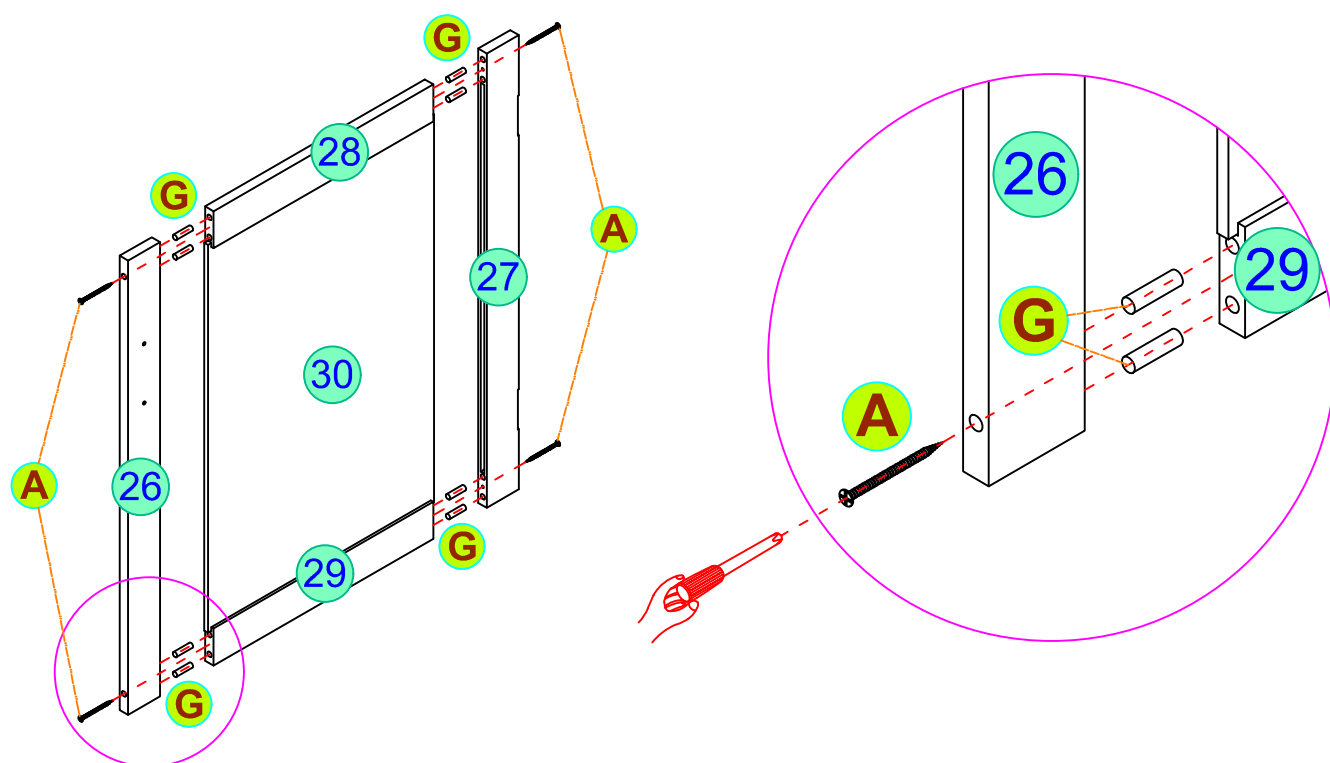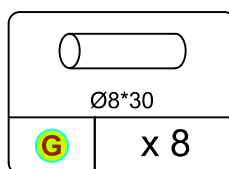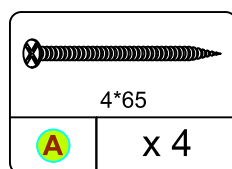



Step 22

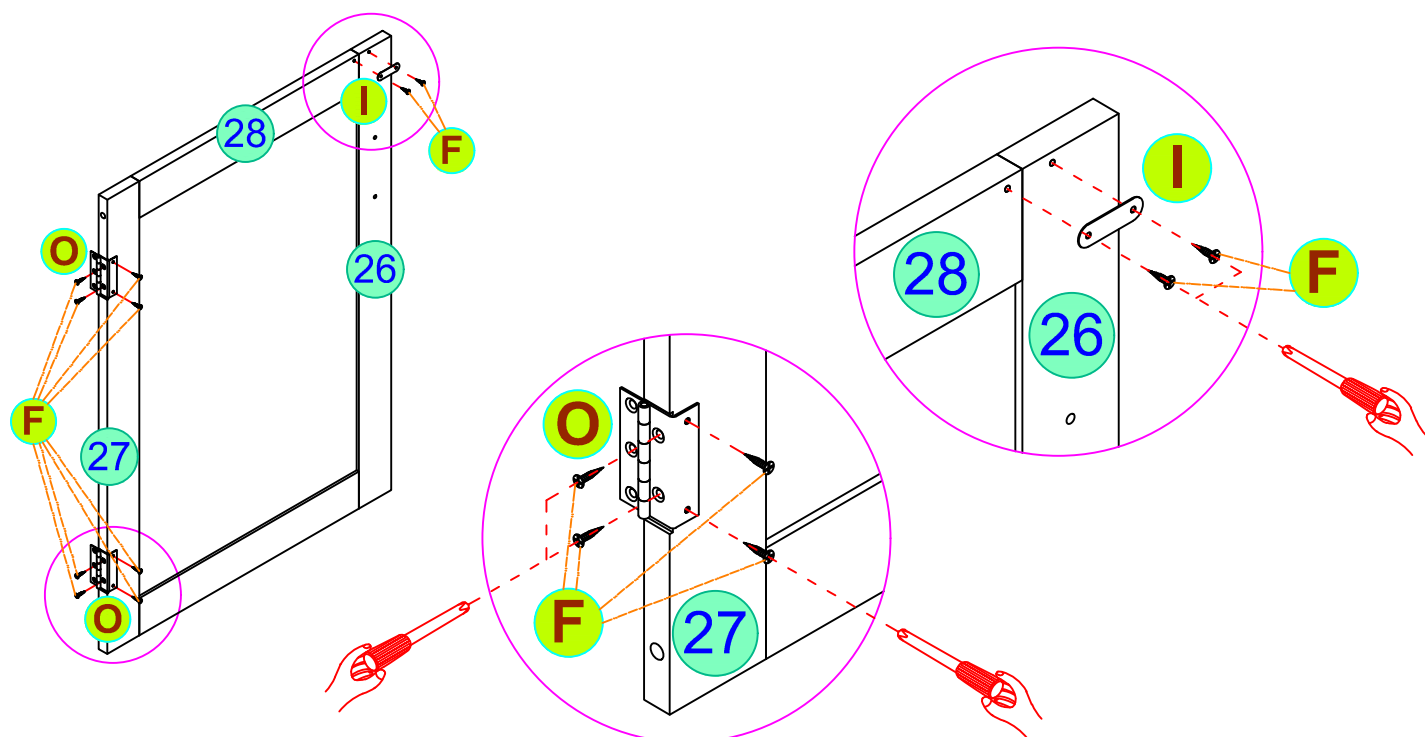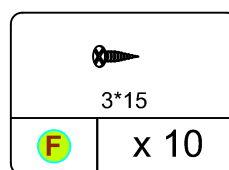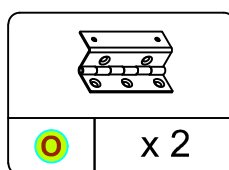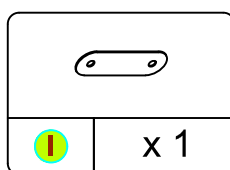



Step 23

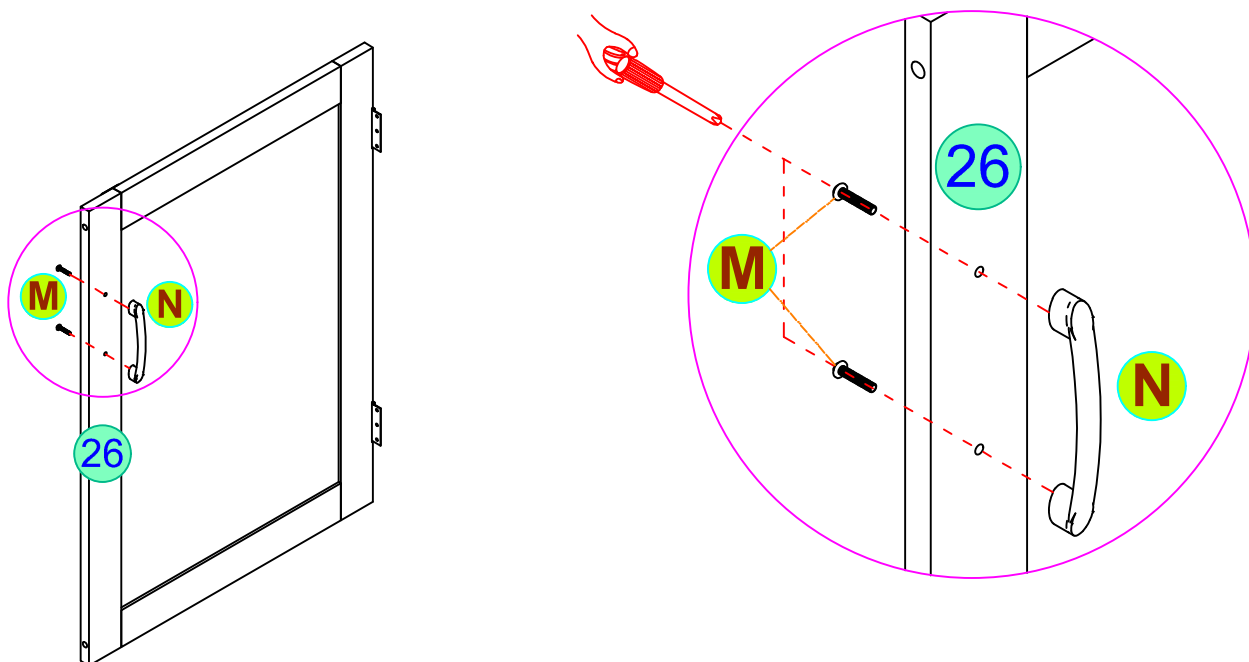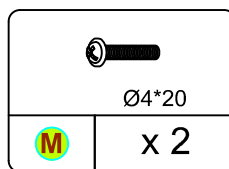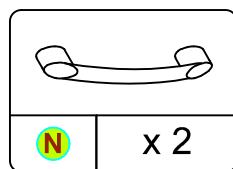




Step 24

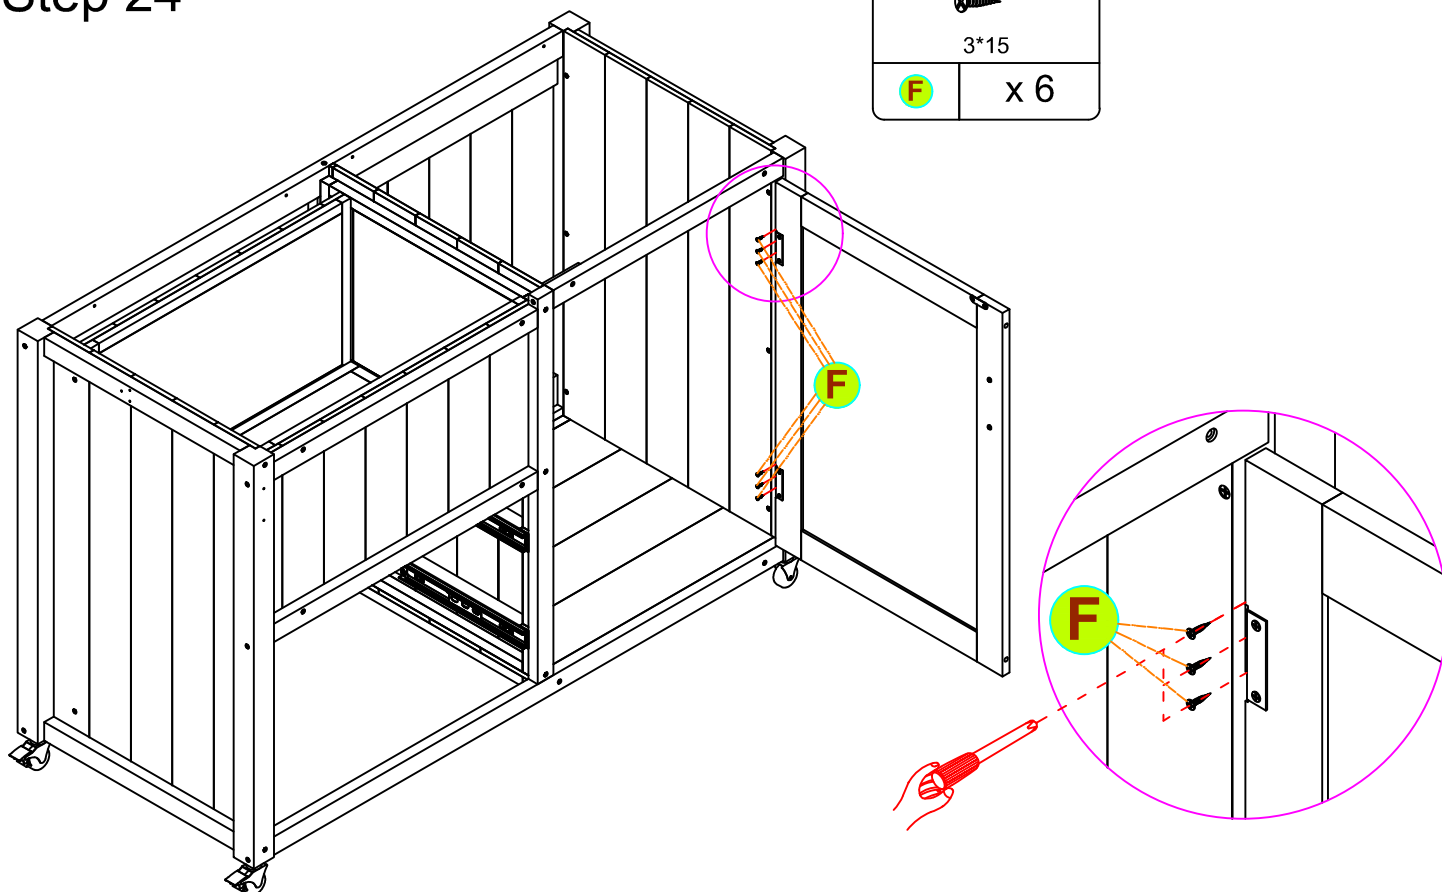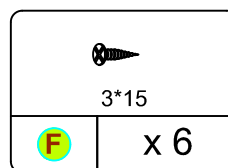





Step 25

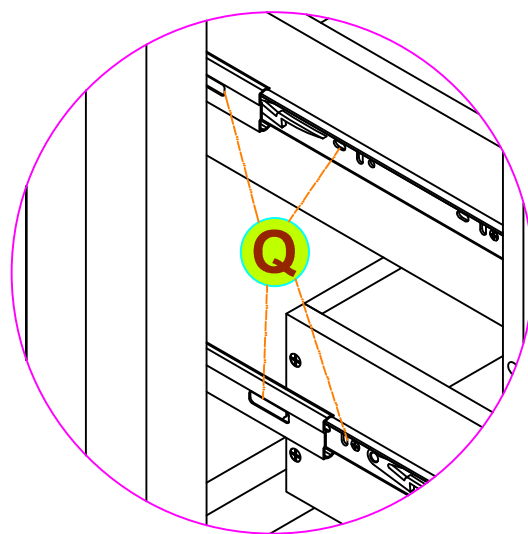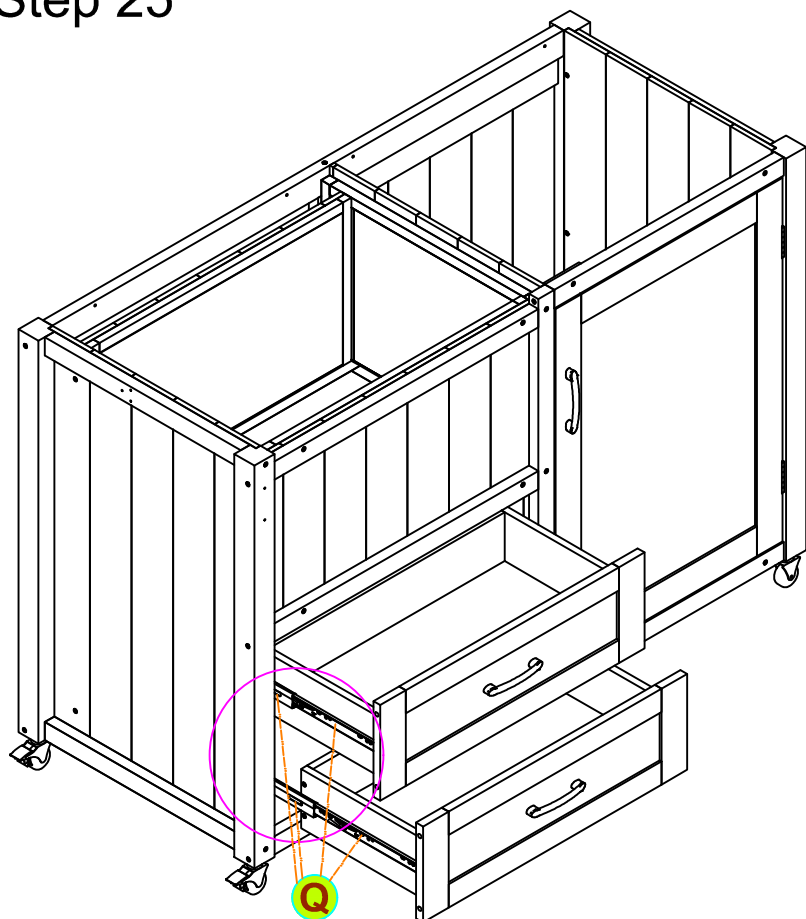





Step 26

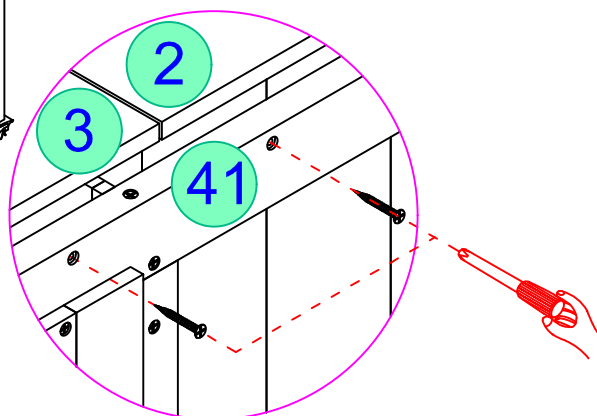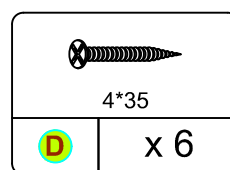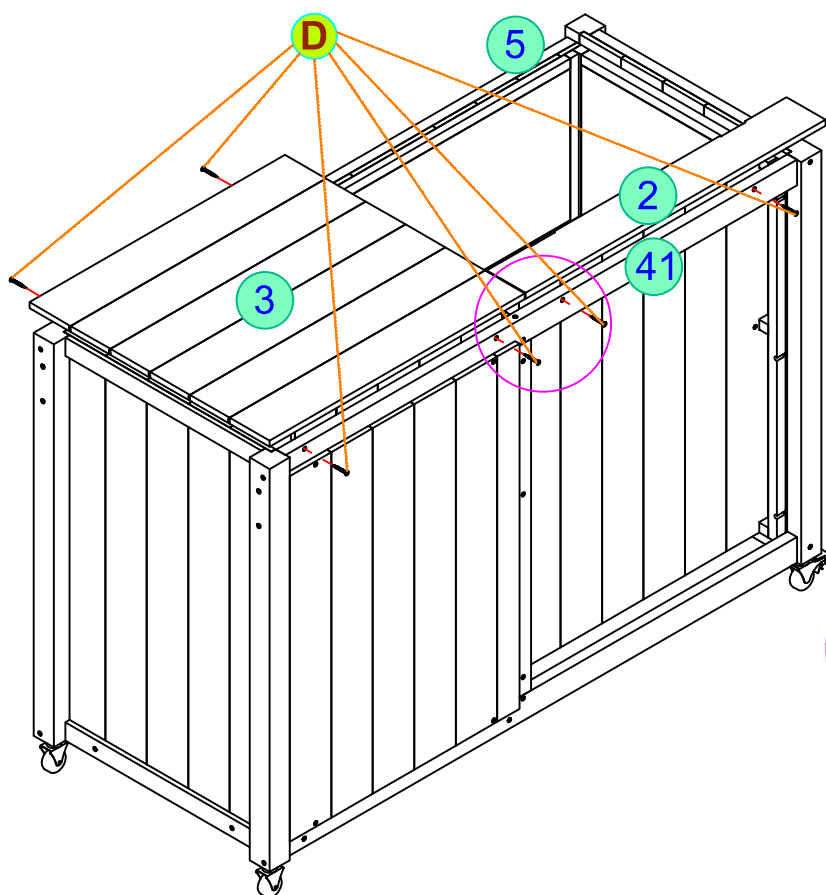





Step 27

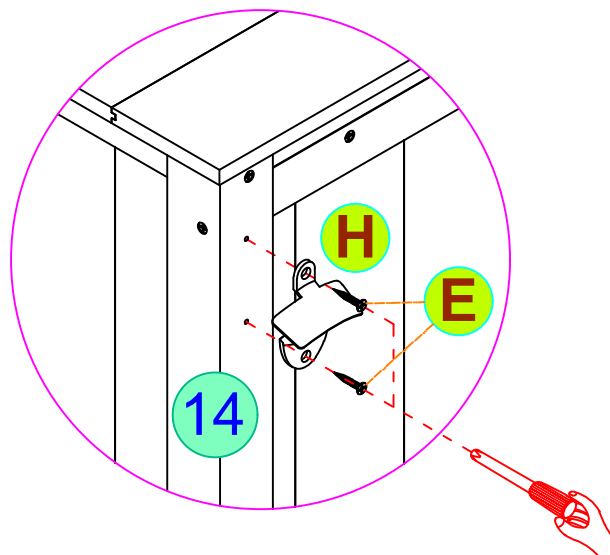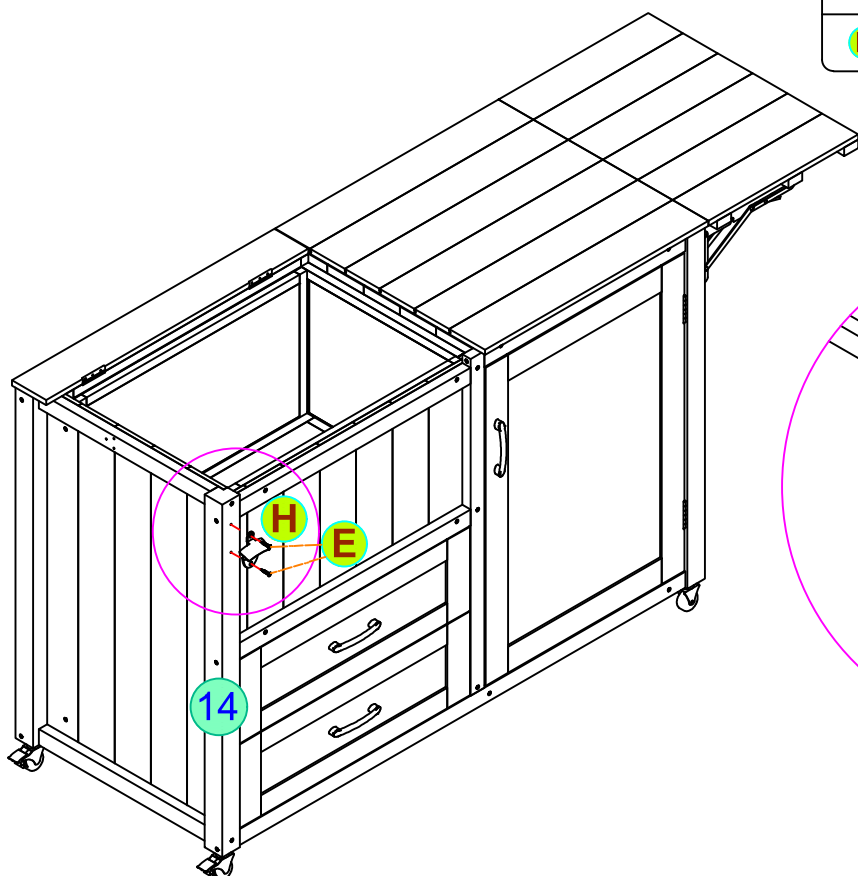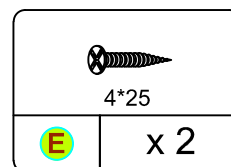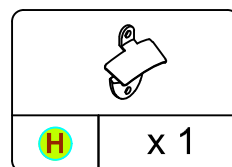




Step 28

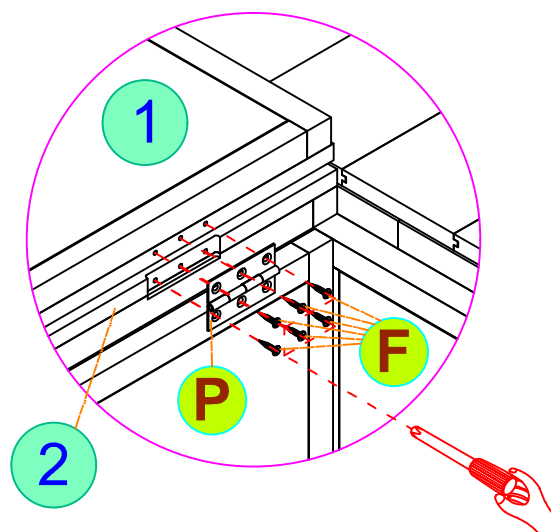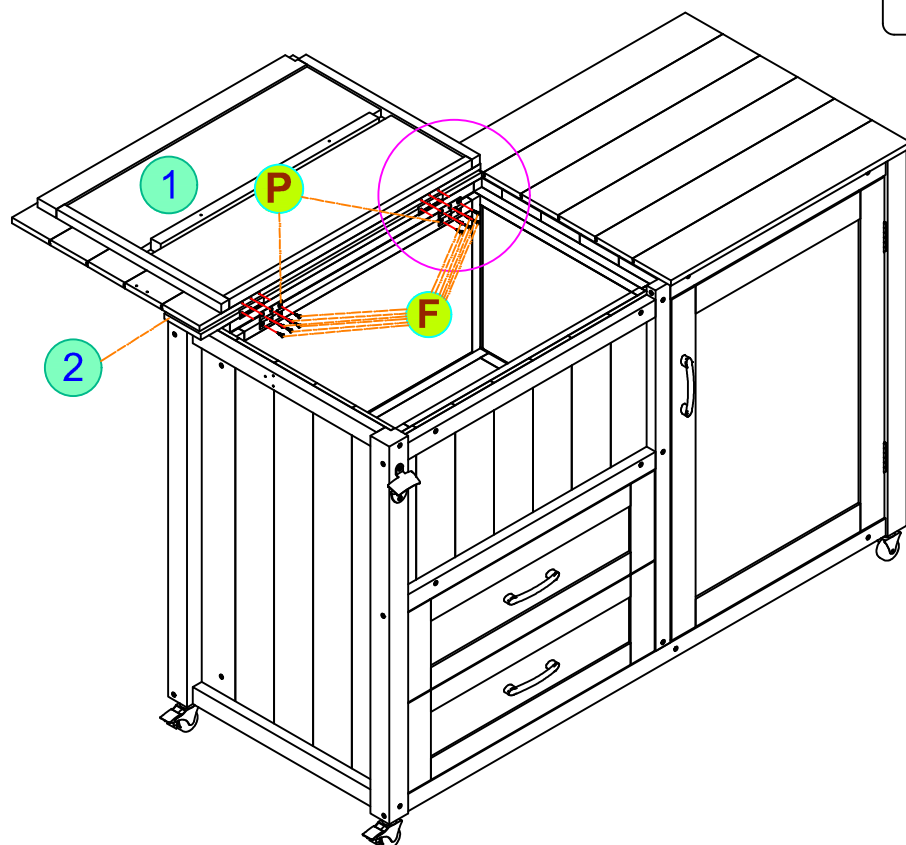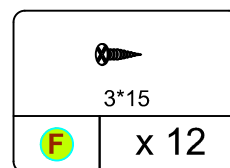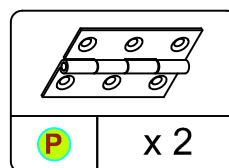


Step 29

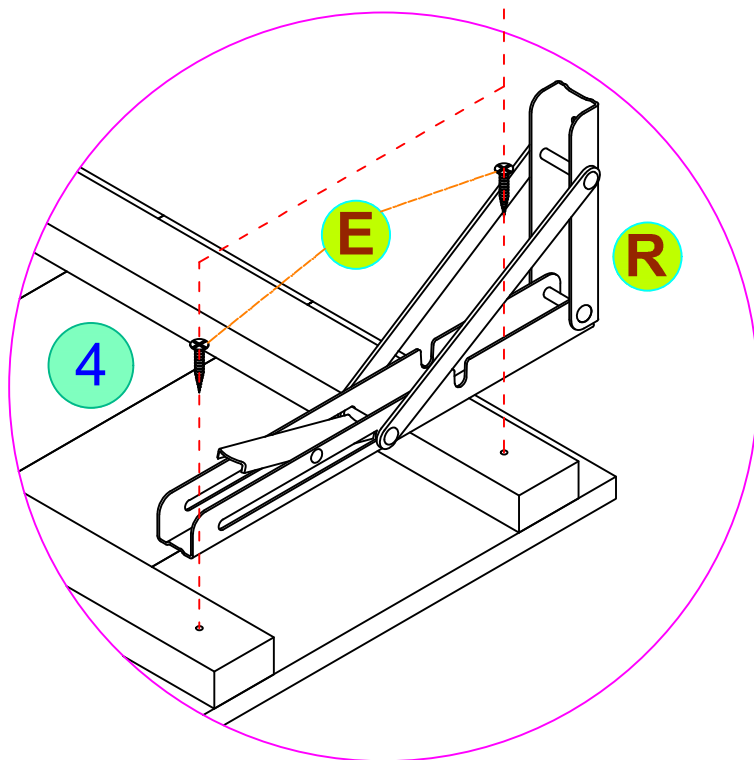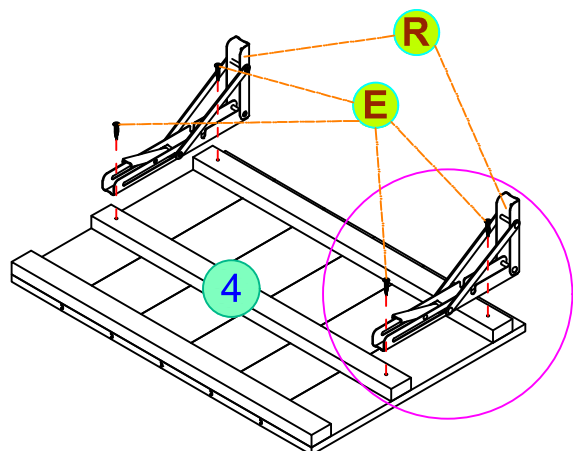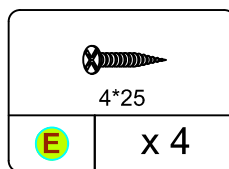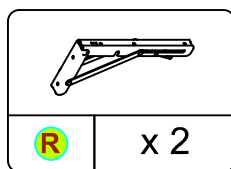


Step 30

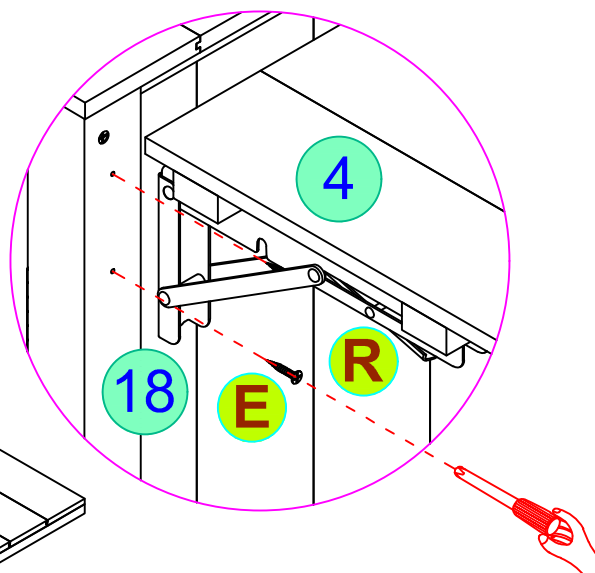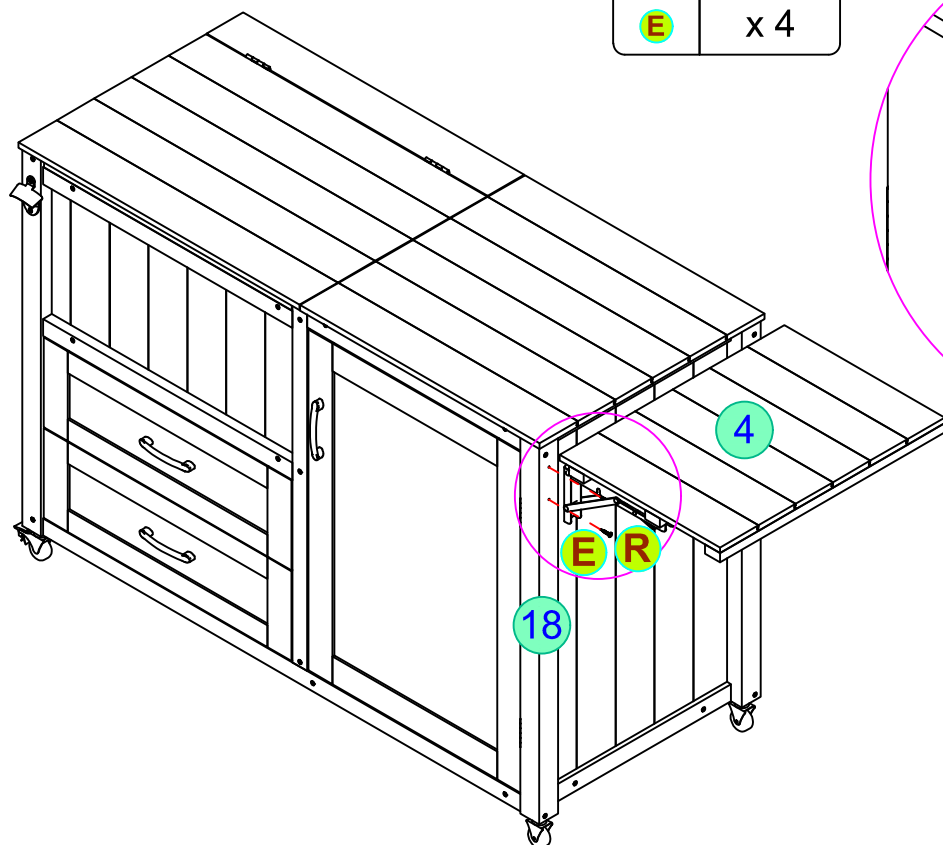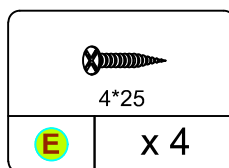




Step 31 Open the flap and put the insulated box into the cabinet.

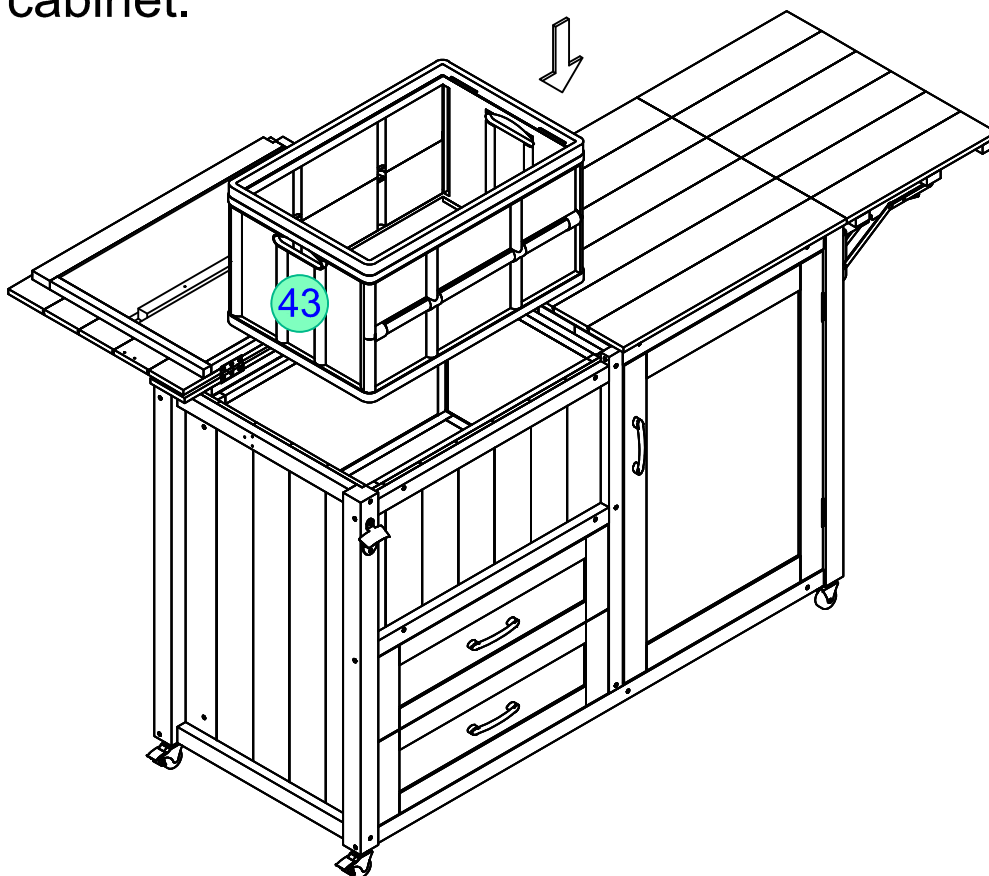

Step 32 Put the thermal bag into the insulated box.

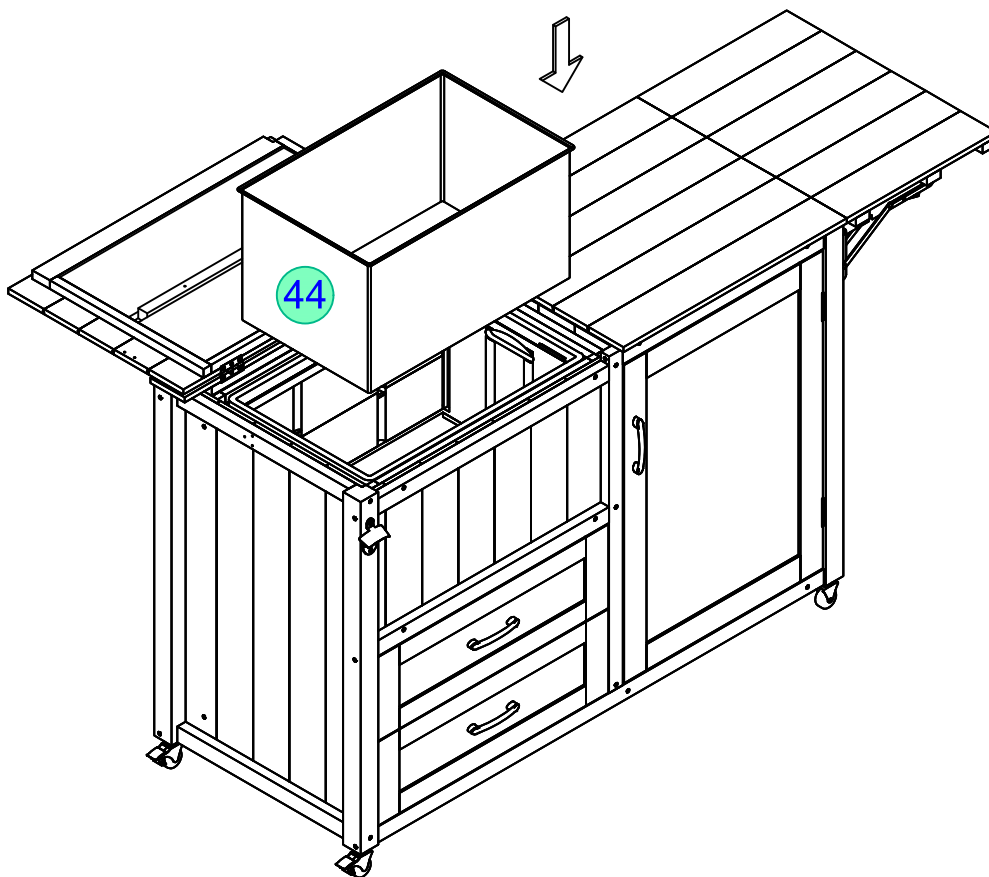

Step 33

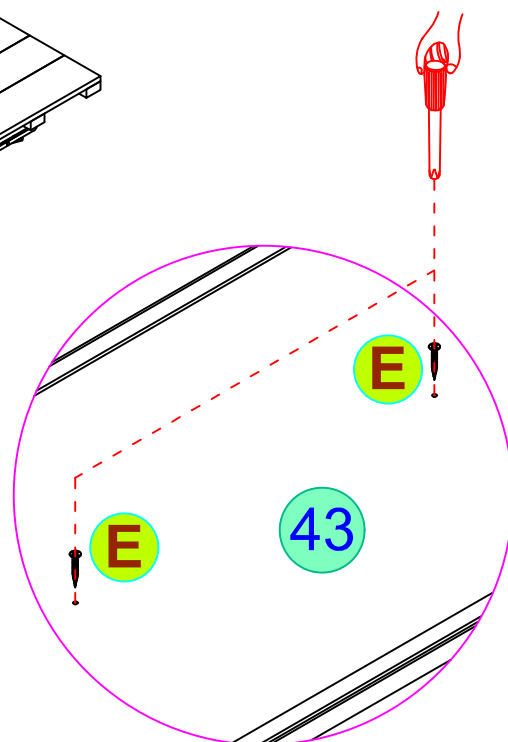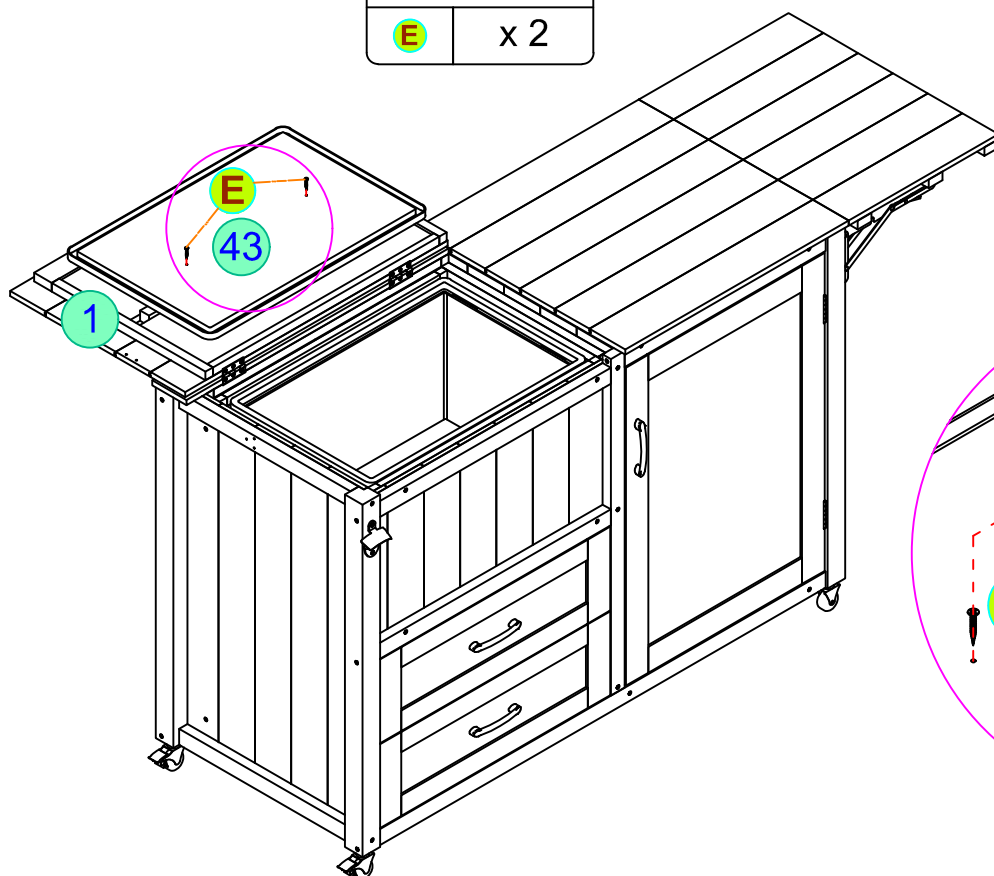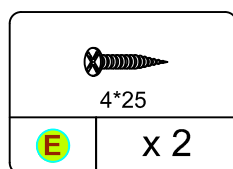

Step 34

