

THE URBAN PORT


UPT-353388
ASSEMBLY INSTRUCTIONS

Ax1	Bx1	Cx1
		

STEP - 01 Match the B metal Rod on the C Metal Plate revolve the rod properly.

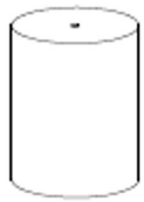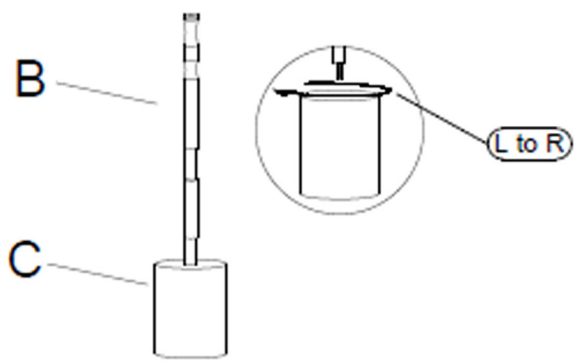

STEP - 02 Match the metal rod B with Marble top A as shown in the picture and left to right in a clockwise direction until it is fully tighten

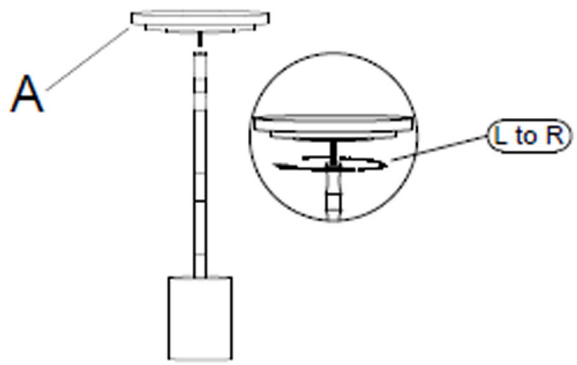

FINAL STEP

