


ASSEMBLY INSTRUCTION

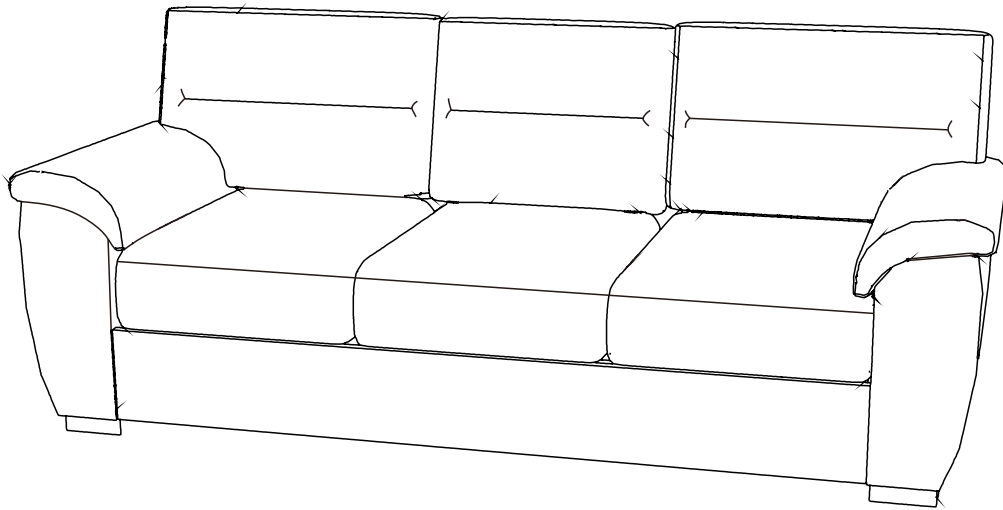


PARTS LIST




Backrest

x1



Seat cushion

x3

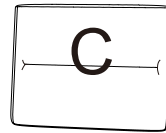


x1



Base Frame Front Panel

x1

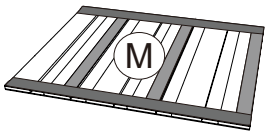

Slats

x2

HARDWARE LIST



1/4*2.2cm

x16




5/16*8cm

x4




19mm

x4




40mm*100mm

x1




x4




x4

PARTS LIST

BOX-ARM

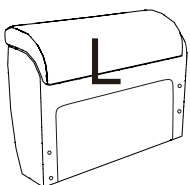

x1

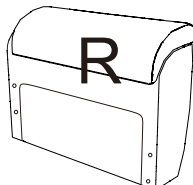

x1



x1





x1

BEFORE ASSEMBLY



Open up Velcro of Non-Woven Fabric cover on the bottom to remove hardware, legs and parts.

1. Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.
2. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.
3. Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

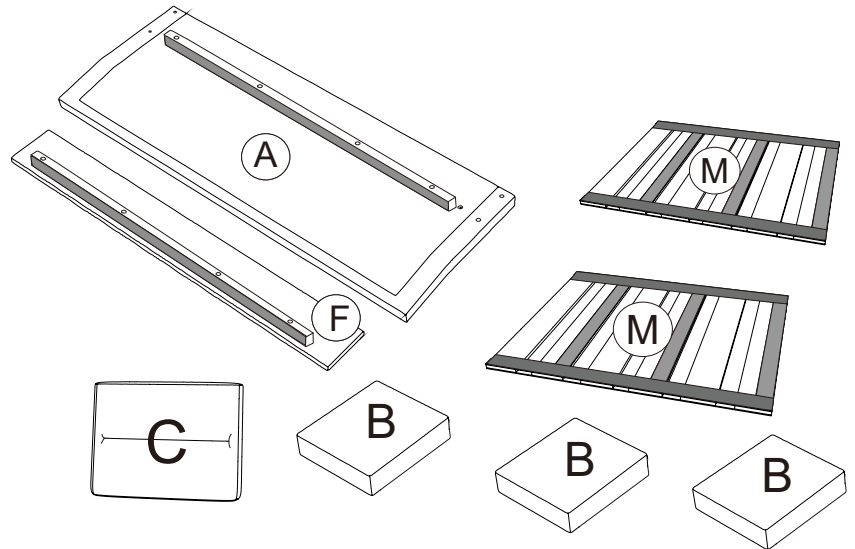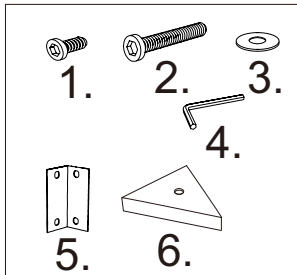


Open up Velcro of Non-Woven Fabric cover on the bottom to remove hardware, legs and parts.


1. Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.
2. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.
3. Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

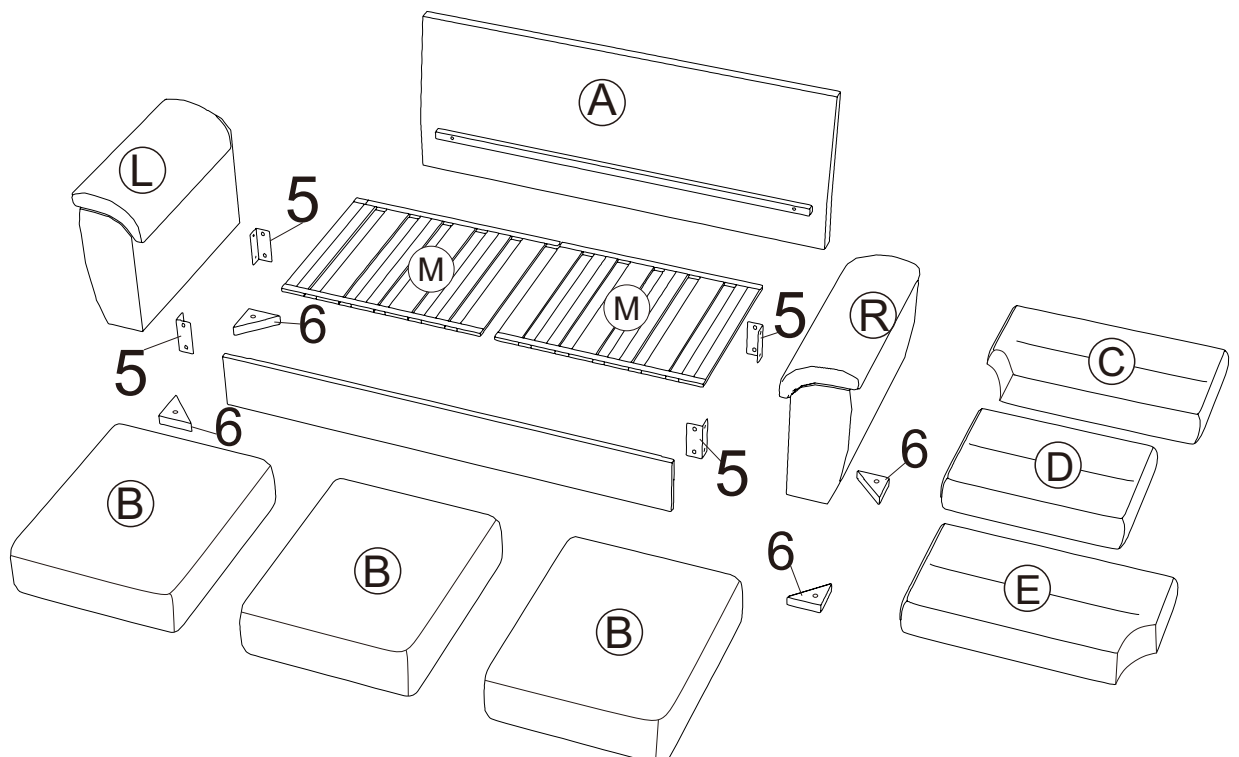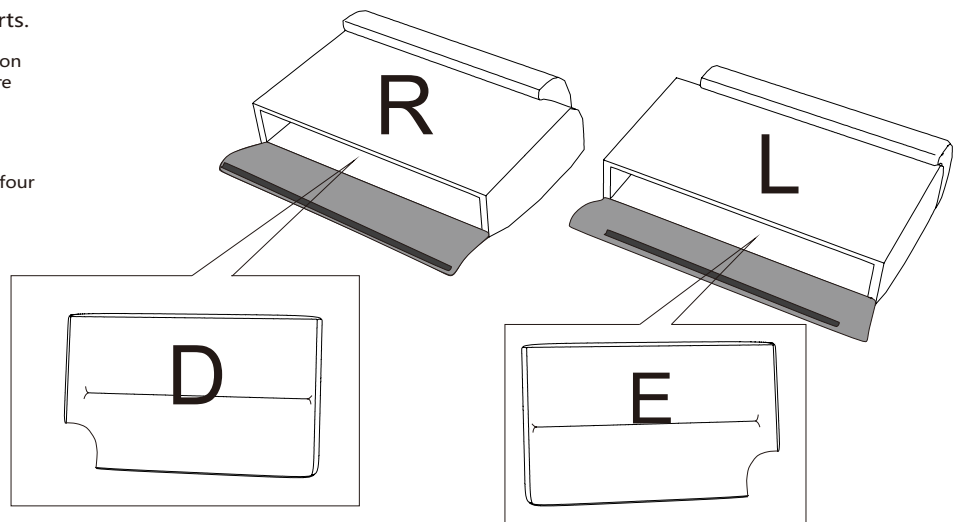


Step1

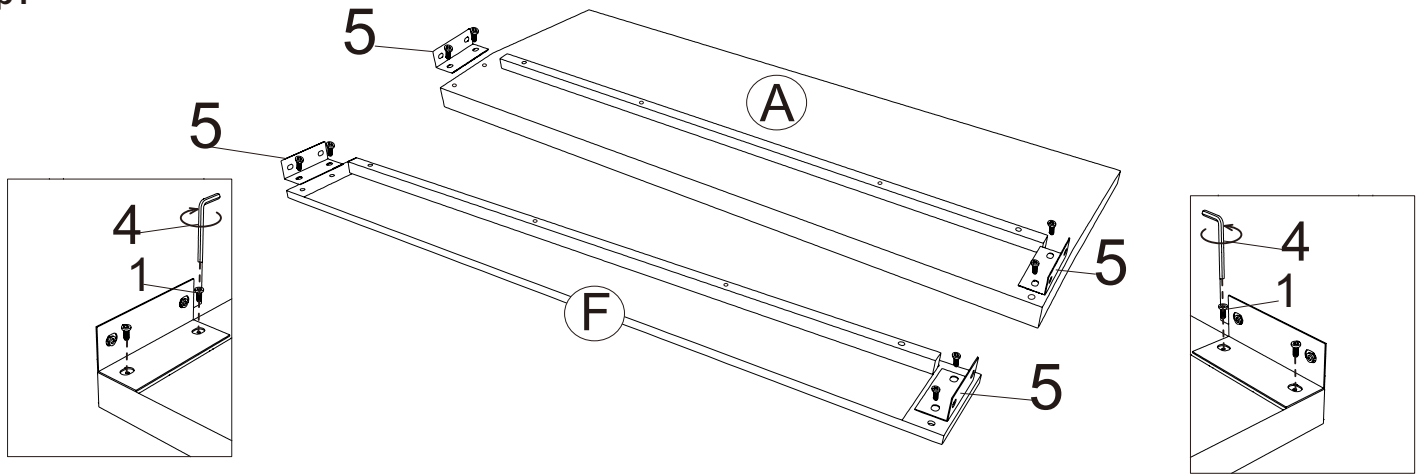


Step2

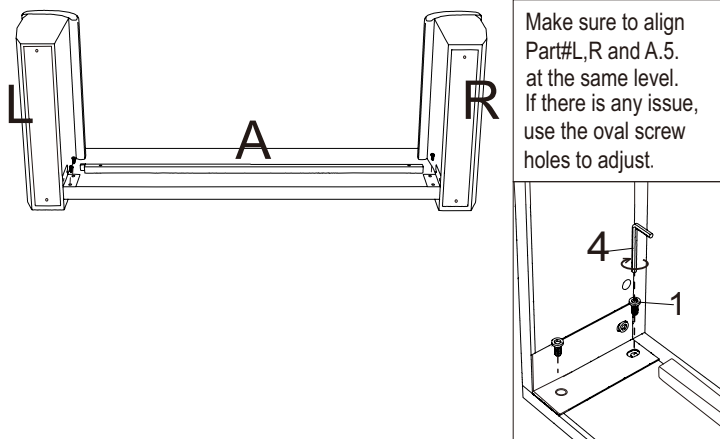


Step3

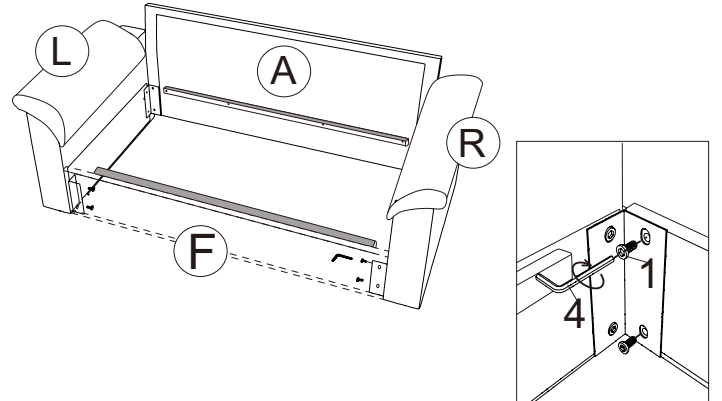

Step4

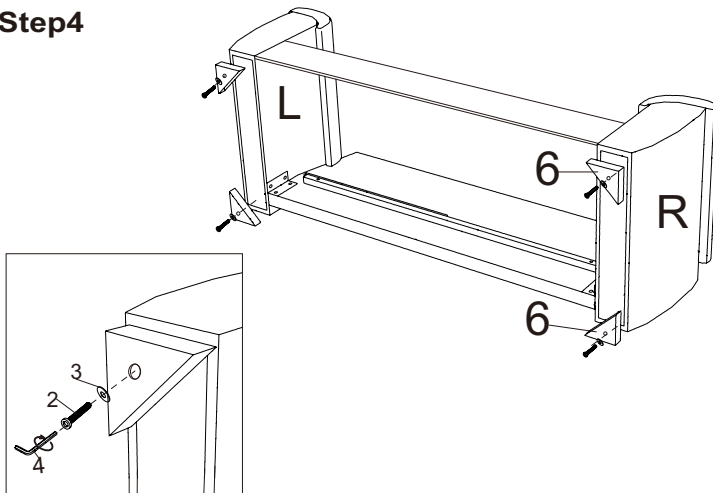

Step5

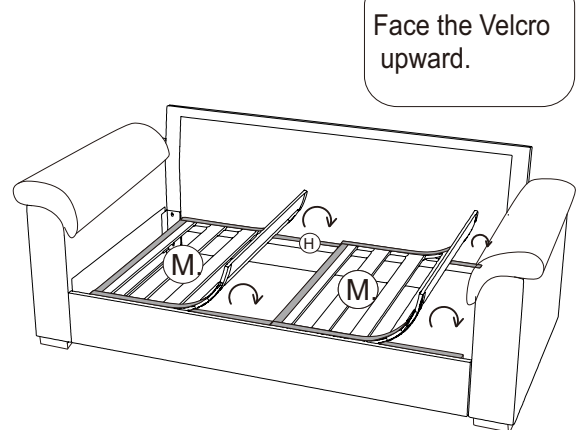

Step6

