








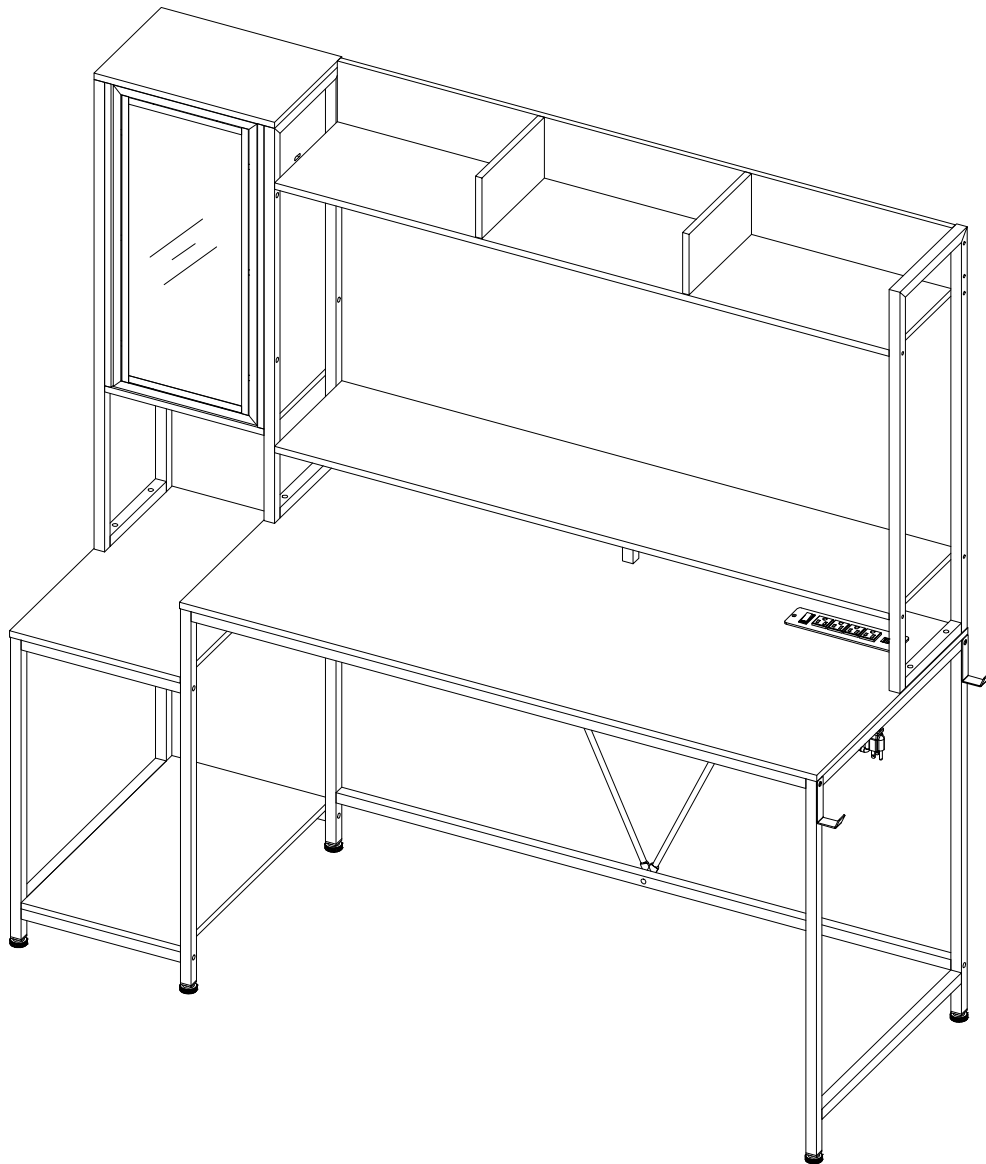










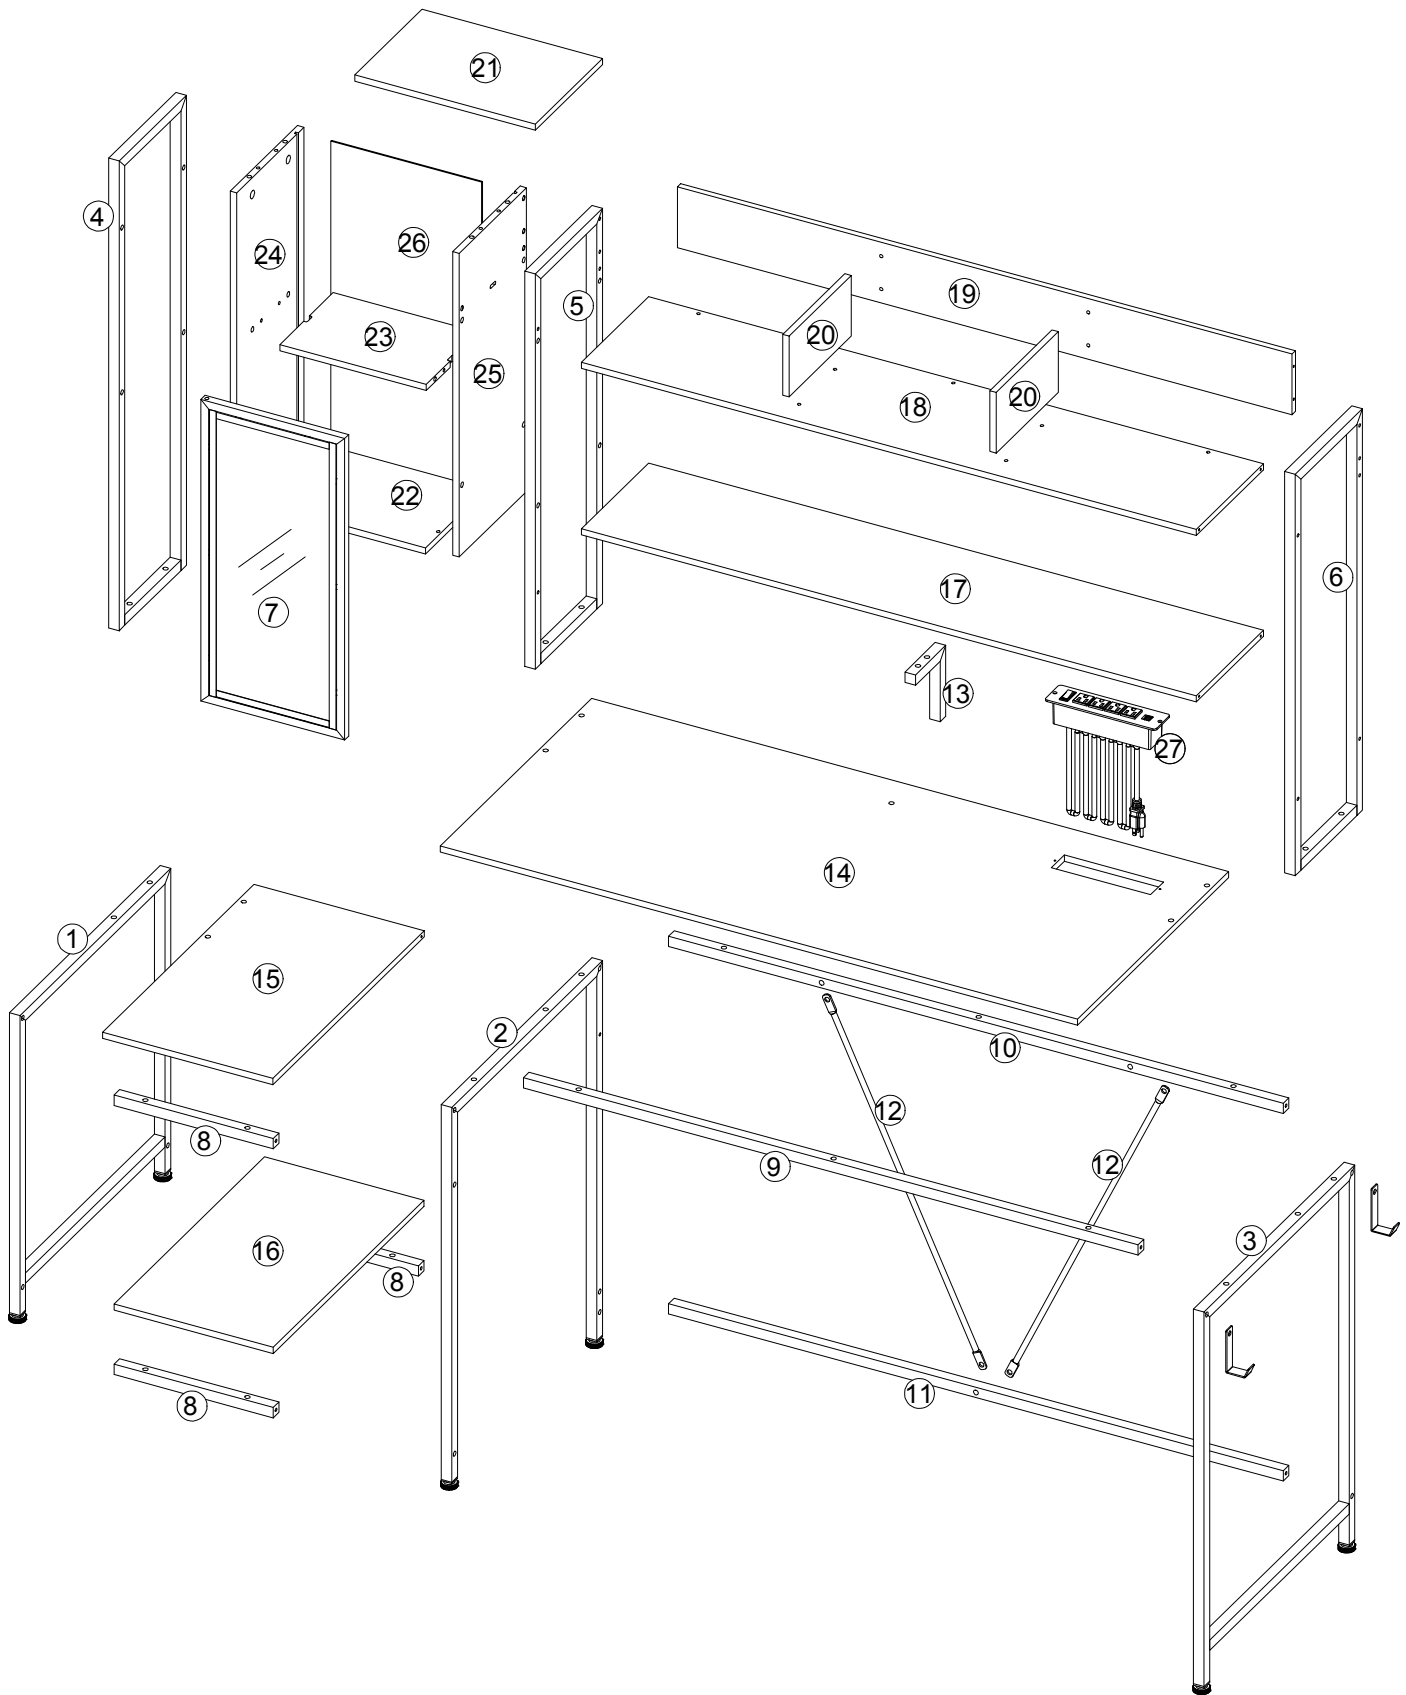






Computer Desk



ASSEMBLY INSTRUCTION




ASSEMBLY INSTRUCTION

A M6*40mm  X12+1	B M6*30mm  X4	C M6*25mm  X24+2	D M5*40mm  X28+2
E M6*40mm  X1	F M3.5*12mm  X4		G M6*12  X9+1
 9.5 X1	 X1	H Ø6*35mm  X8+1	
J  X2	K M8  X6	L M6*60mm  X6	M  X6
N M3.5*14mm  X8+2	P  X2	Q  X6+1	 8 X1
 X1	 X1	 4# X1	 3# X1


ASSEMBLY INSTRUCTION

1

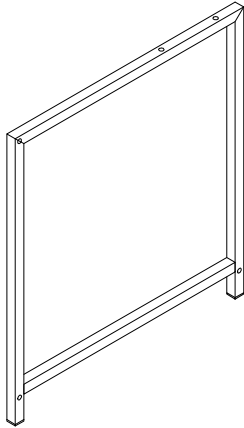


X1

2

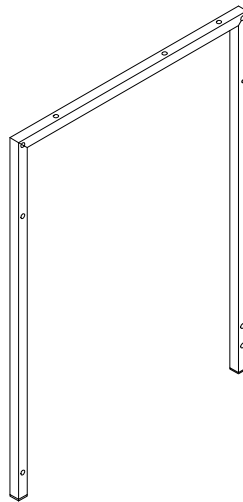


X1

3

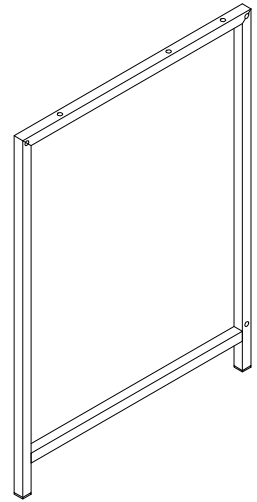


X1

4




X1

5




X1

6




X1

7

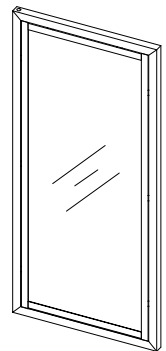


X1

8




X3

9

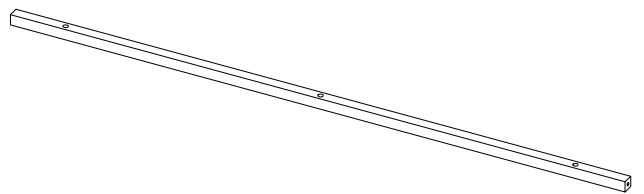


X1

10

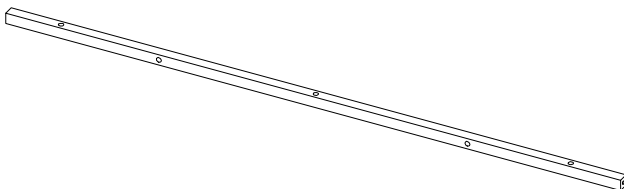


X1

11

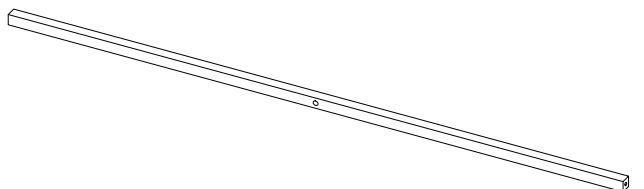


X1

12

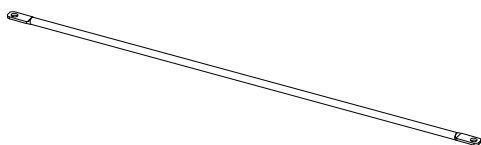

X2


13



X1


ASSEMBLY INSTRUCTION

14

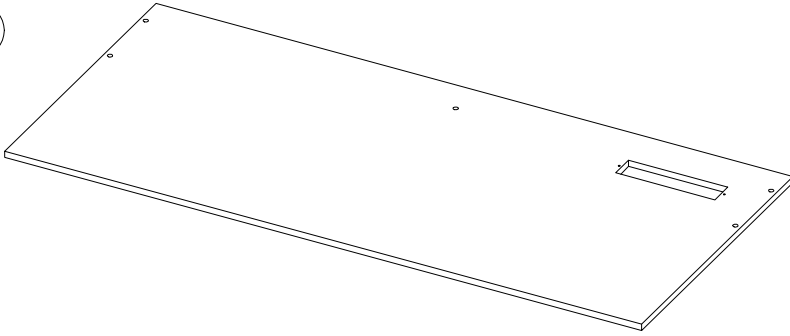


X1

15

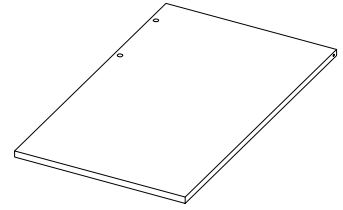


X1

16

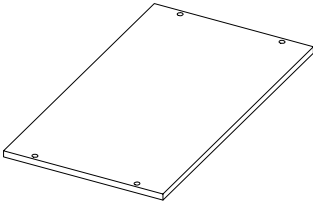


X1

17

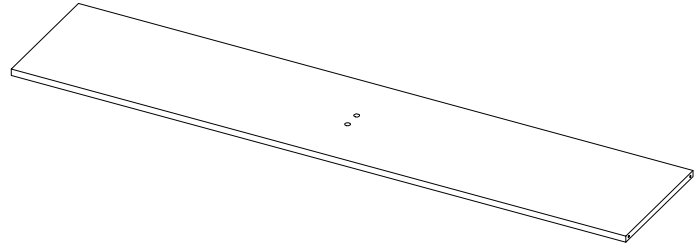


X1

18

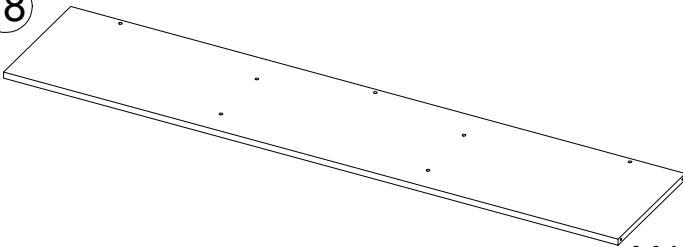


X1

19

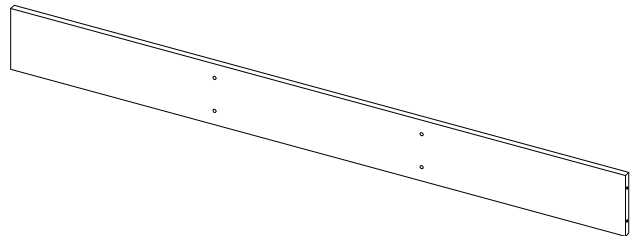


X1

20

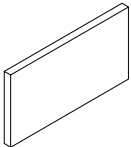


X2

21

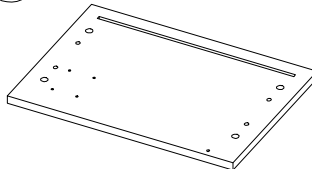


X1

22

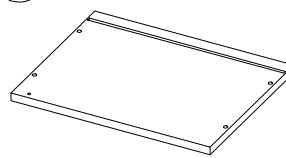


X1

23

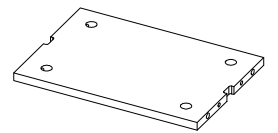

X1

24



X1

25




X1

26




X1

27

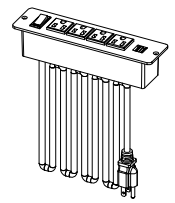

X1


28

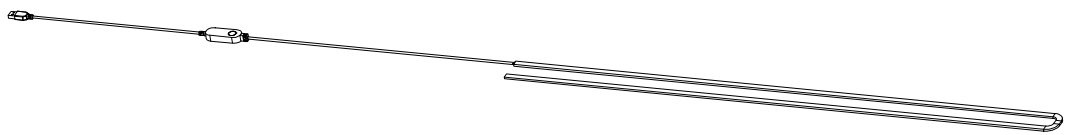


X1

ASSEMBLY INSTRUCTION


1. Matters needing attention

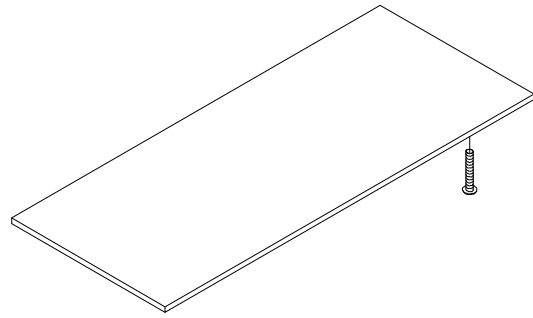

Be sure to use the proper screws to avoid damaging the parts

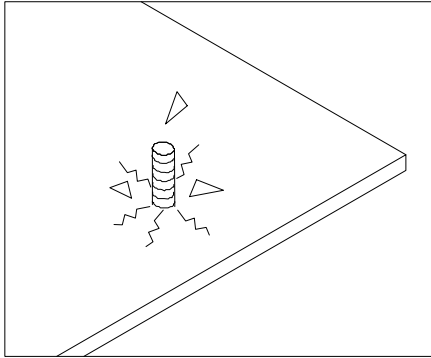

Wrong screws can cause the plank to crack




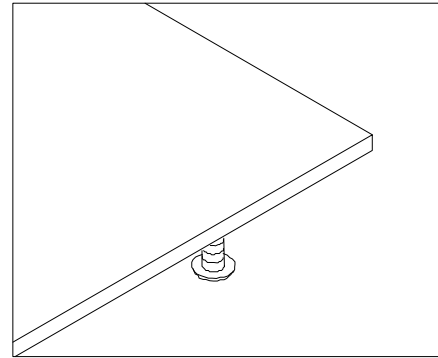


The right screw is the right size


ASSEMBLY INSTRUCTION

Matters needing attention

- (1) When installing the screws in the installation step, the screws do not need to be tightened.
After this installation step is confirmed and the holes are aligned, then tighten all the screws.
- (2) If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations.

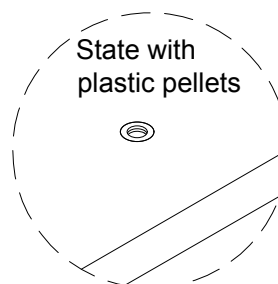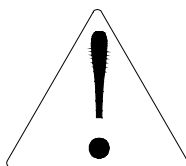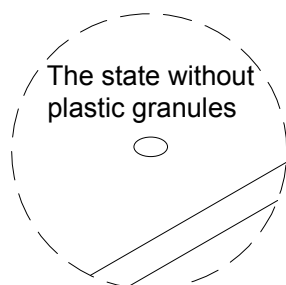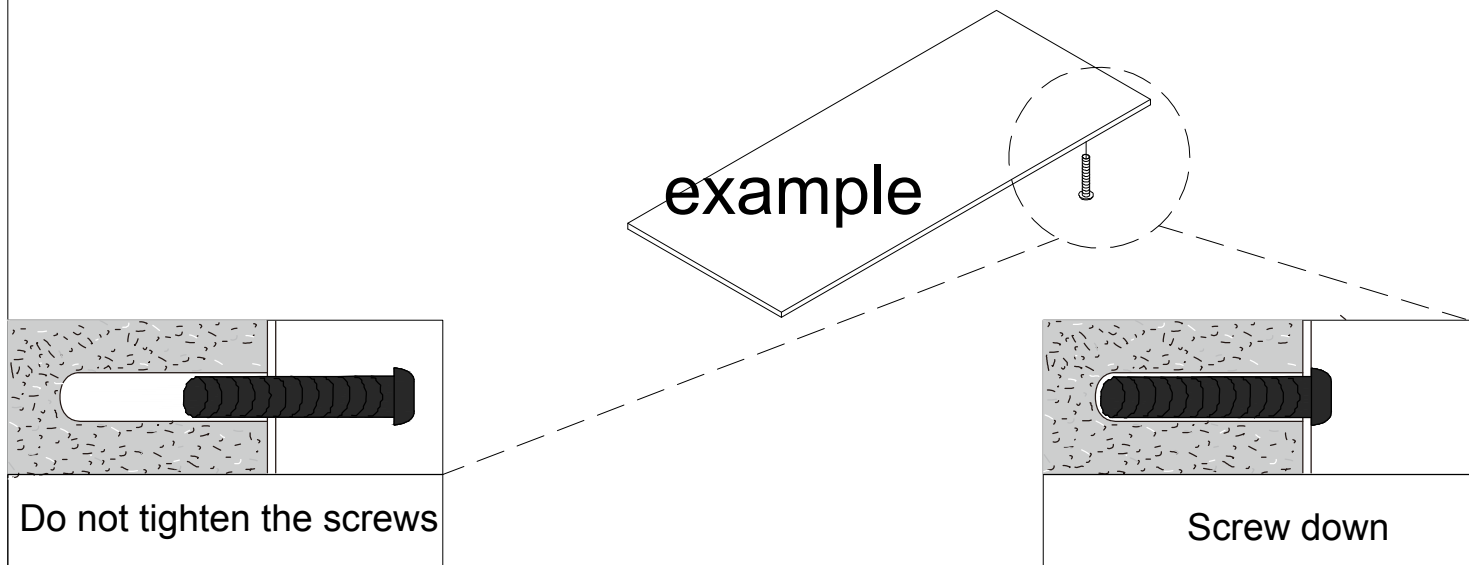


Note that if you find that there are no plastic granules on the wooden block, the table cannot be assembled, please don't worry, please use the spare plastic granules in the screw bag

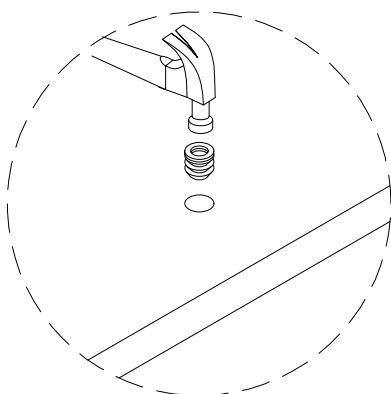


Note, please use a tool to carefully align the plastic pellets with the holes and then knock them down


ASSEMBLY INSTRUCTION

STEP 1

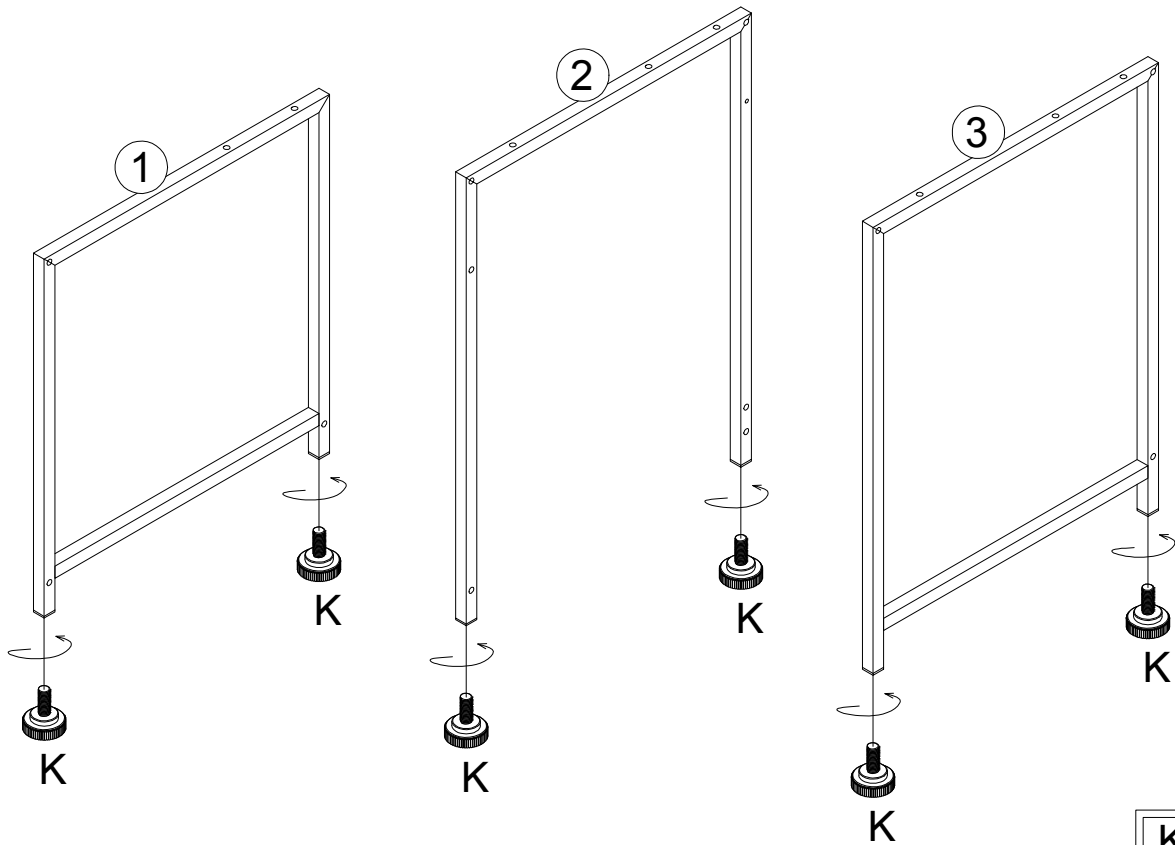



K	M8
	X6

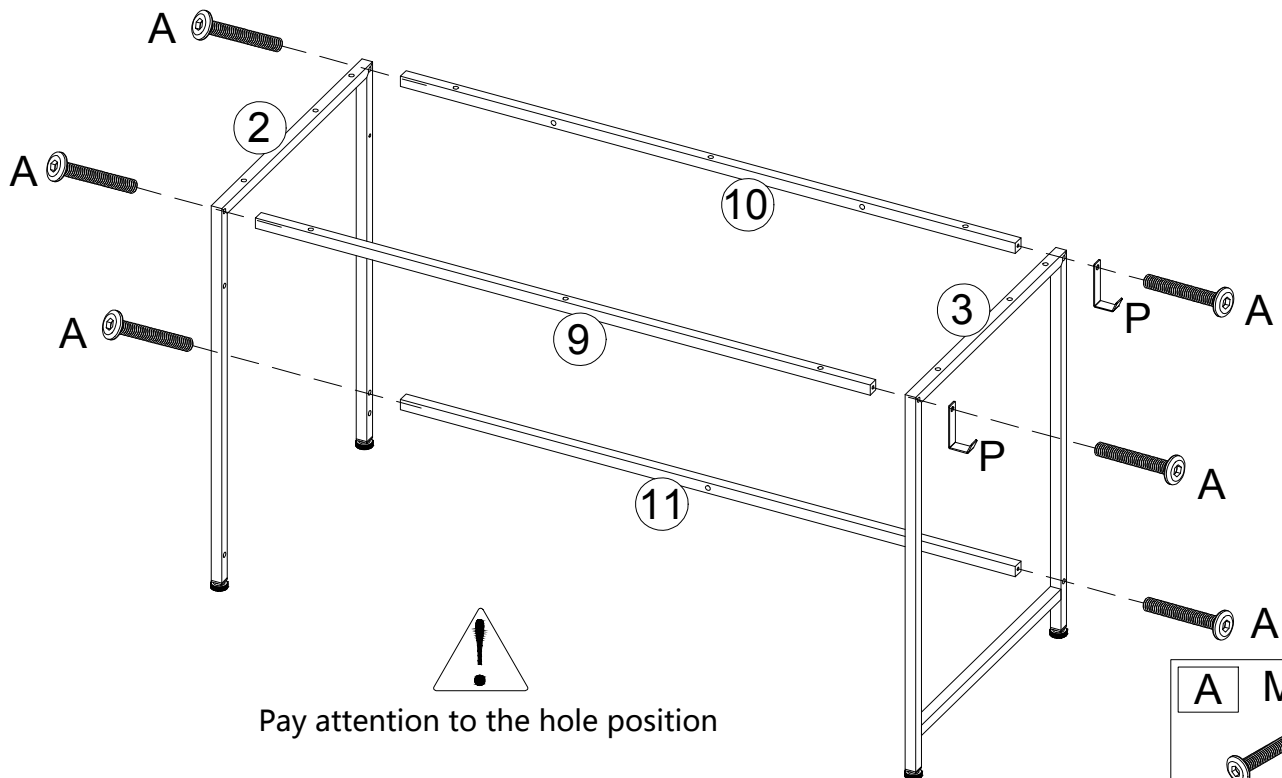STEP 2





Pay attention to the hole position

A	M6*40
	X6
P	
	X2


ASSEMBLY INSTRUCTION


STEP 3

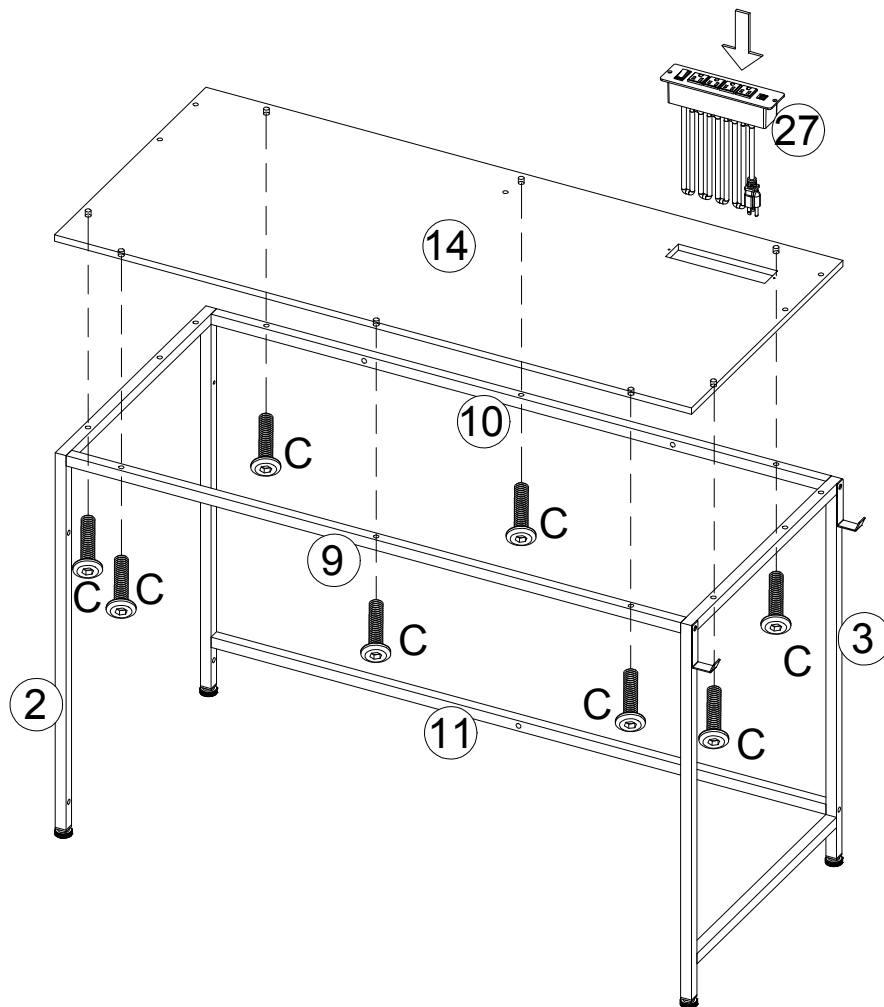

C	M6*25
	X8



STEP 4

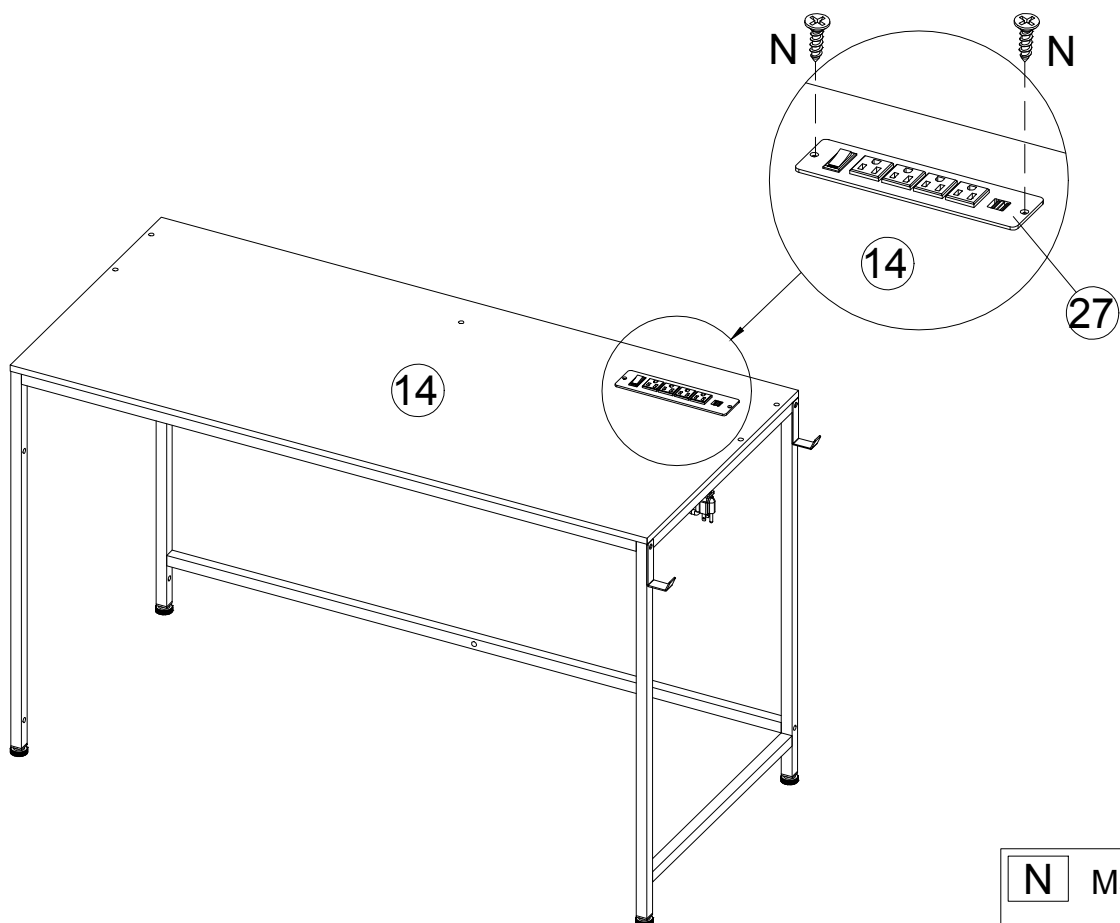

N	M3.5*14
	X2


ASSEMBLY INSTRUCTION

STEP 5

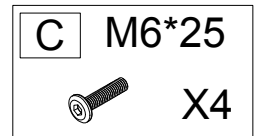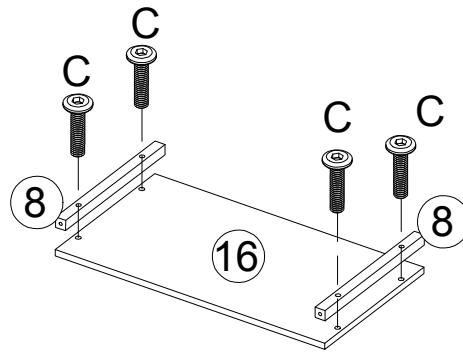


STEP 6

Pay attention to the direction of the socket

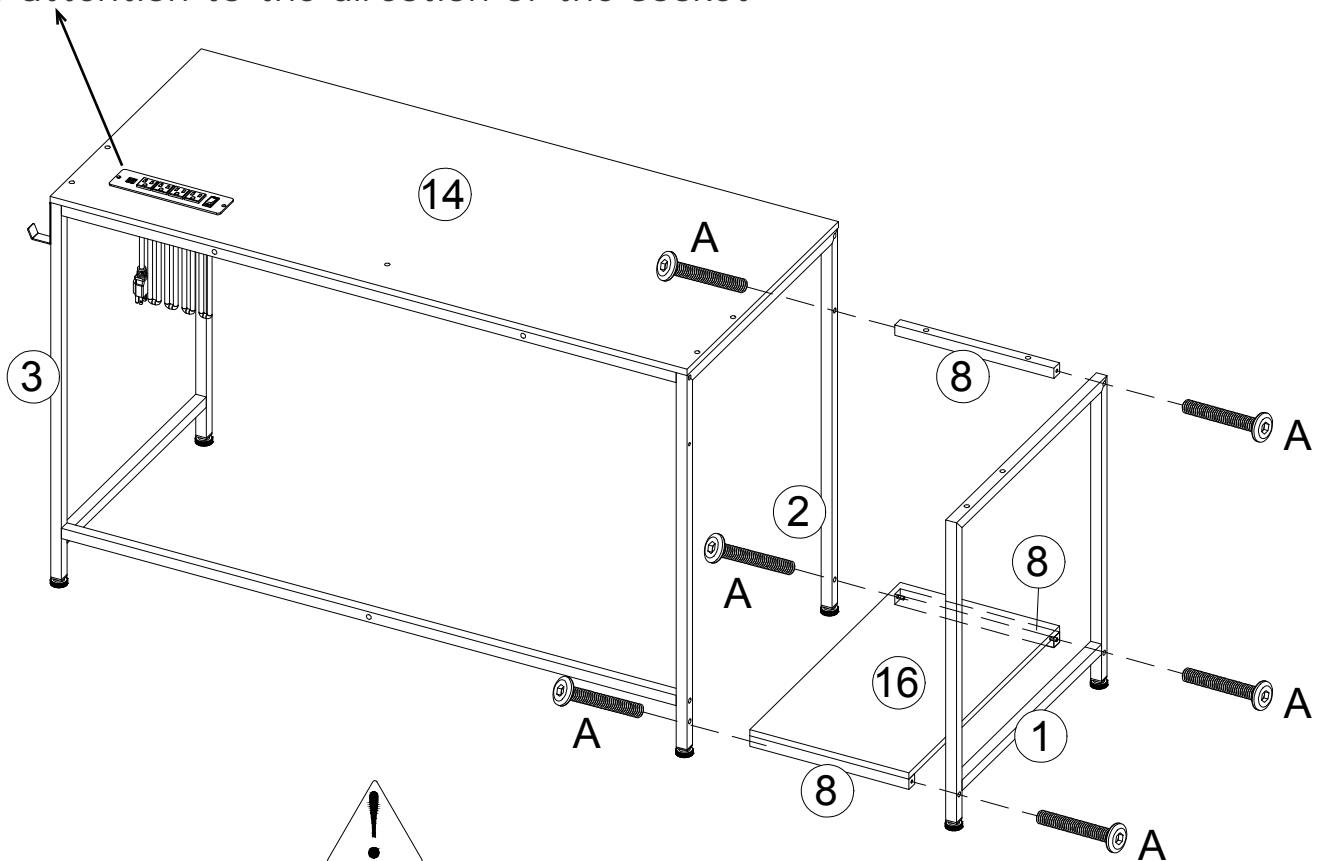



Pay attention to the hole position

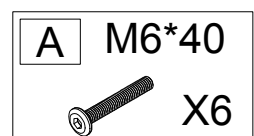


ASSEMBLY INSTRUCTION

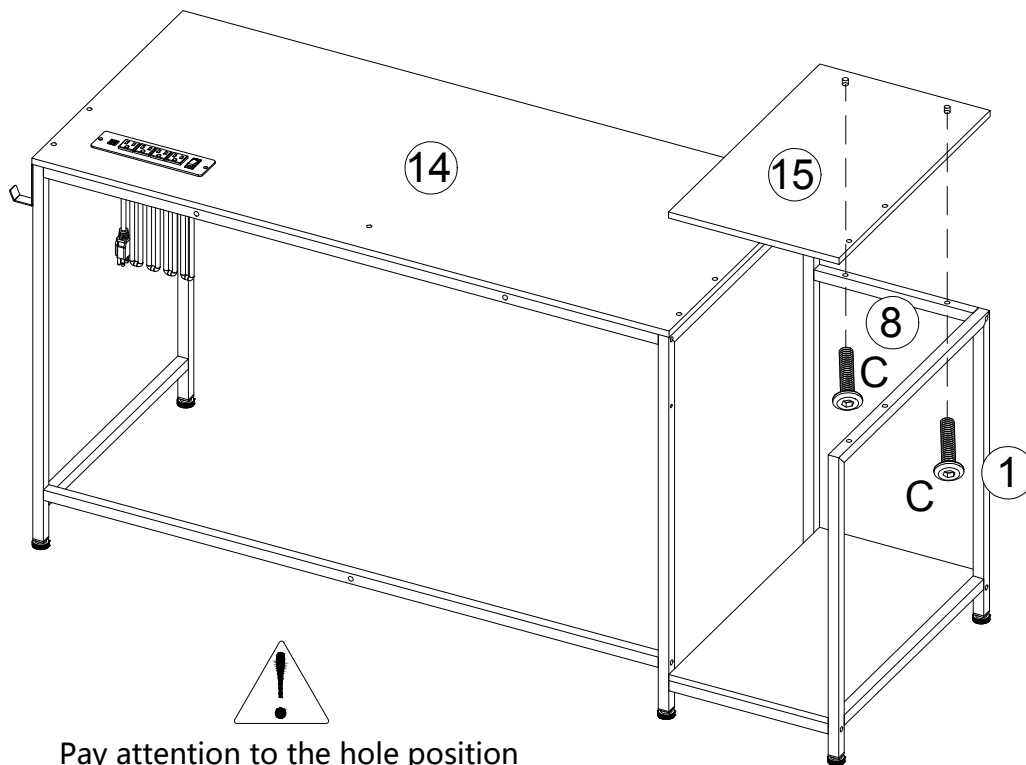


STEP 7



C	M6*25
	X2

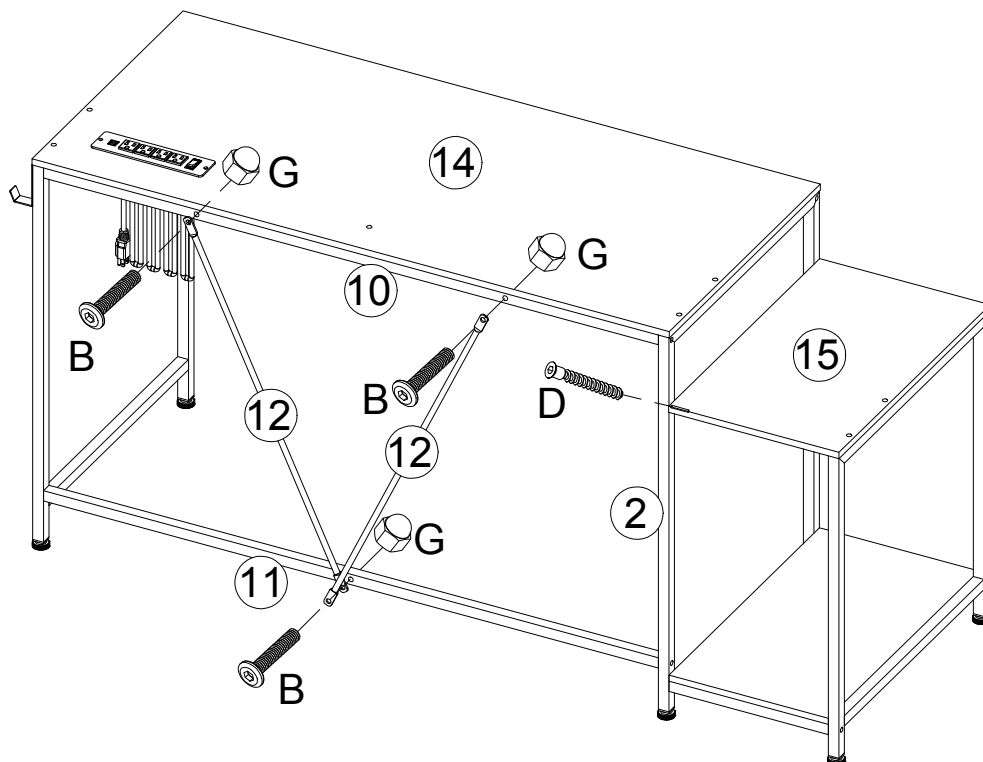
STEP 8




B	M6*30
	X3
D	M5*40
	X1
G	M6*12
	X3

ASSEMBLY INSTRUCTION

STEP 9

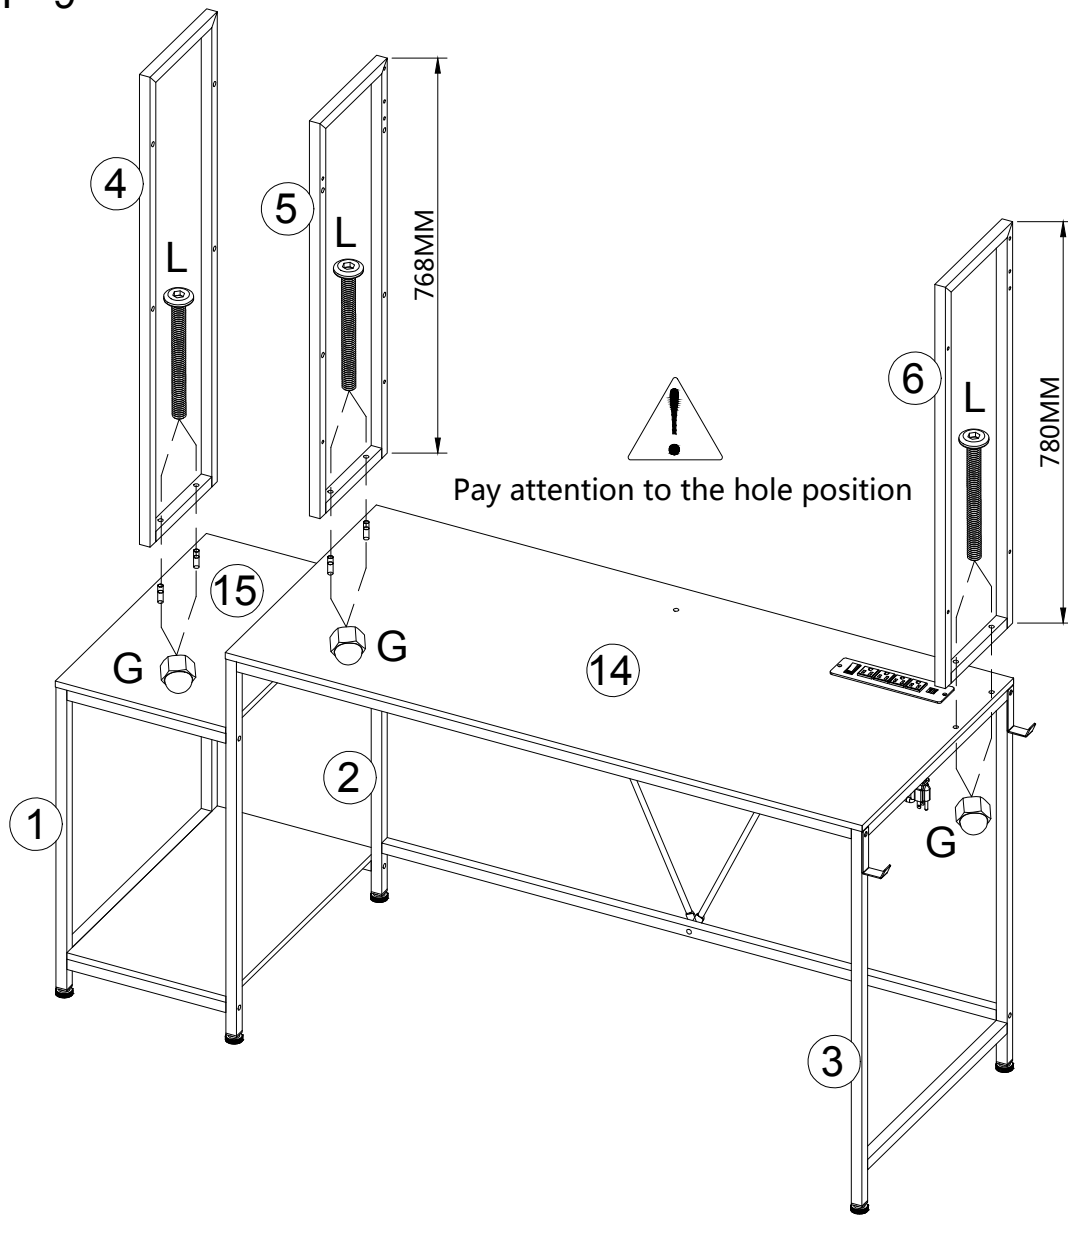

STEP 10

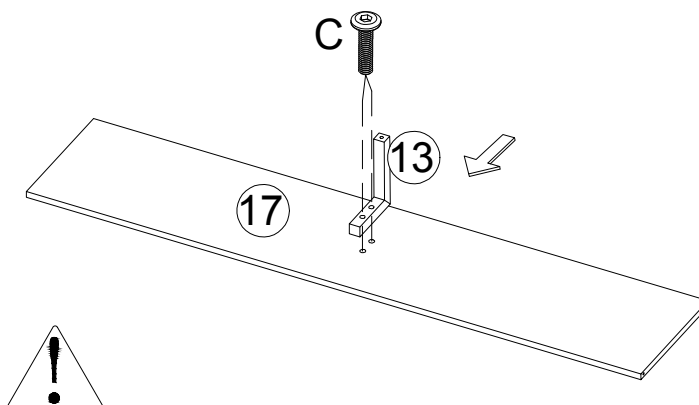


Note the direction of Iron Piece No. 13


C	M6*25
	X2

ASSEMBLY INSTRUCTION

STEP 11

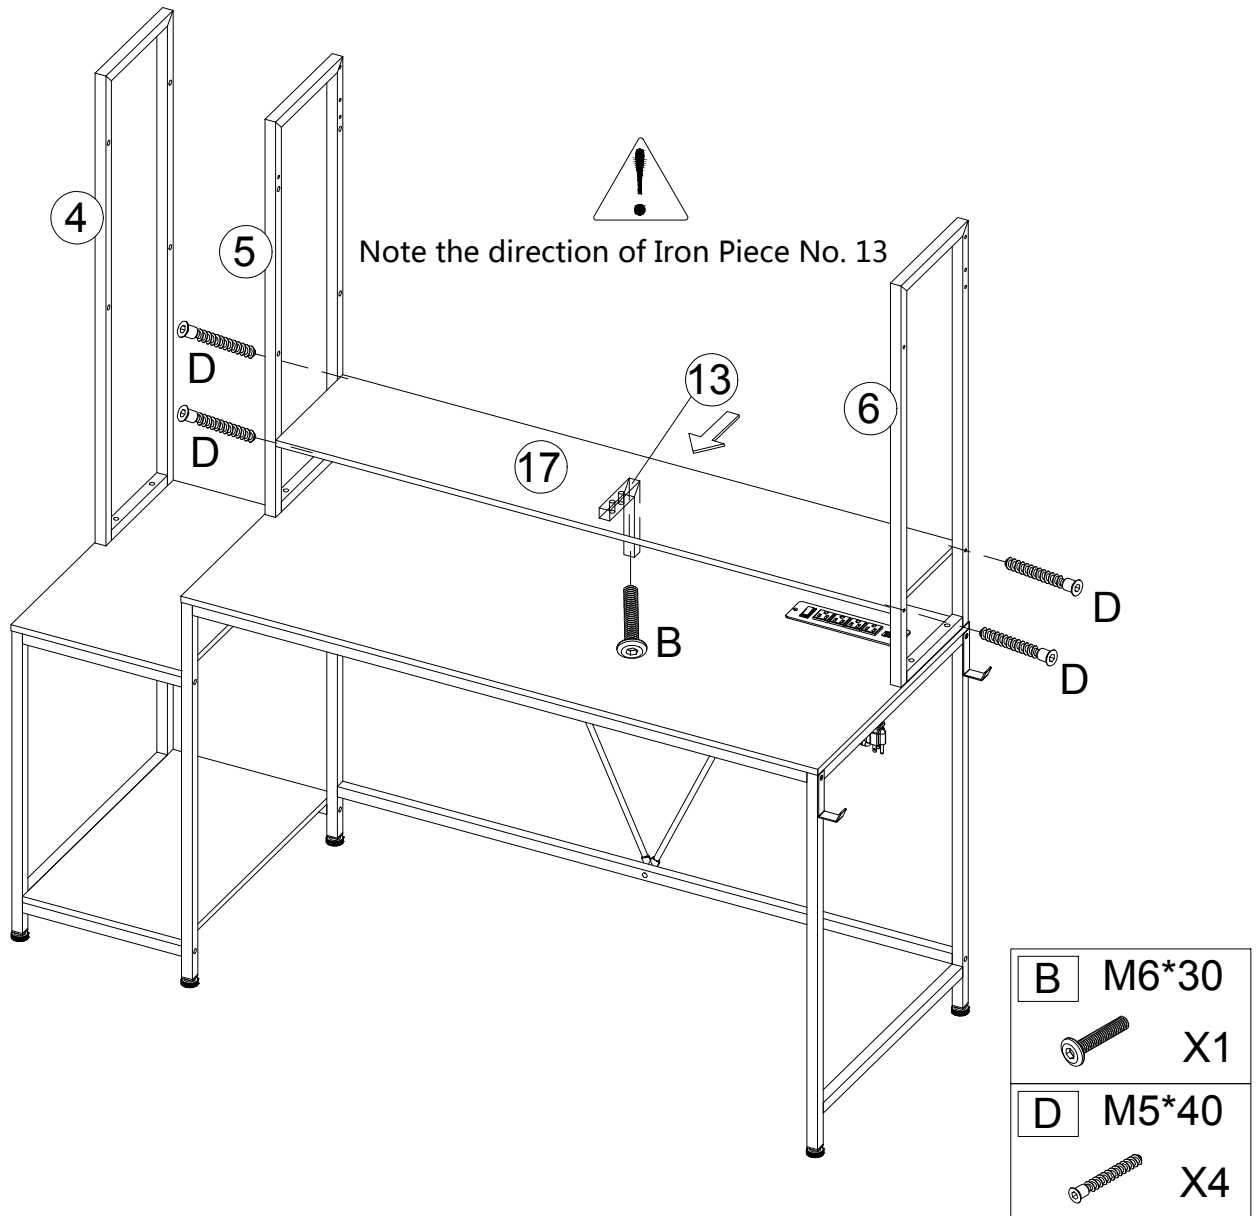


STEP 12

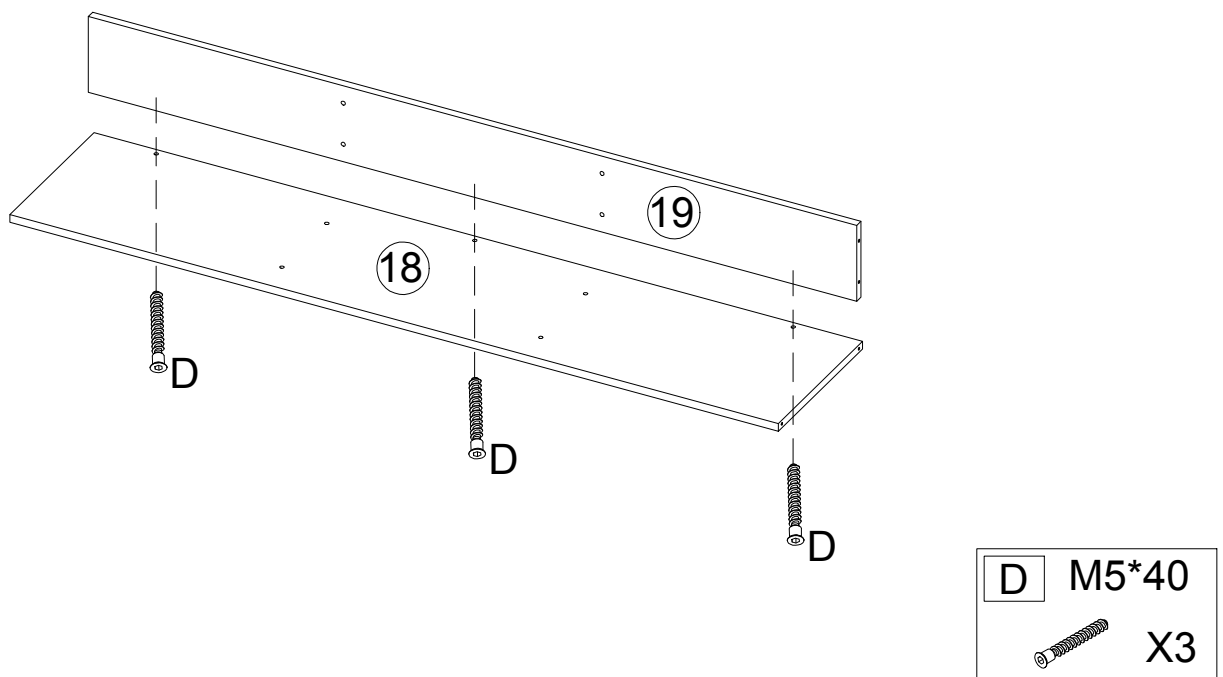

ASSEMBLY INSTRUCTION


STEP 13

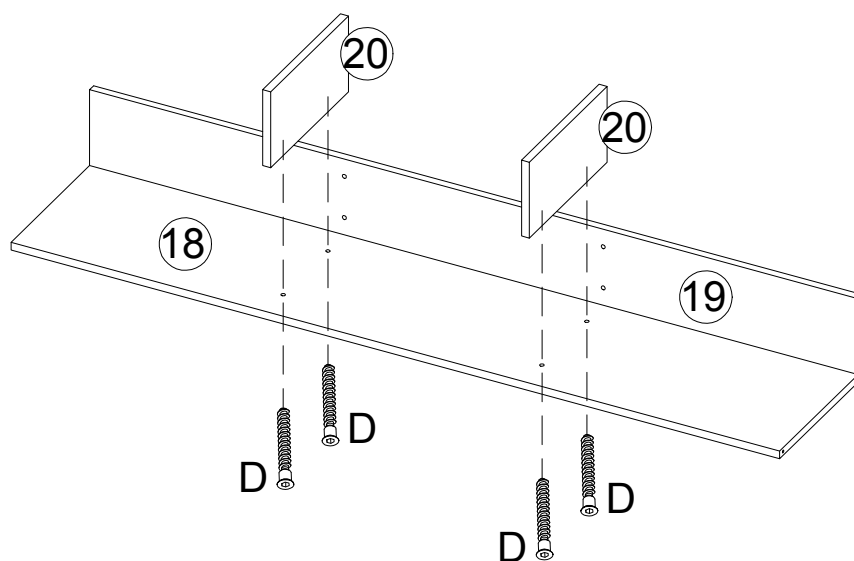

D M5*40

X4

STEP 14

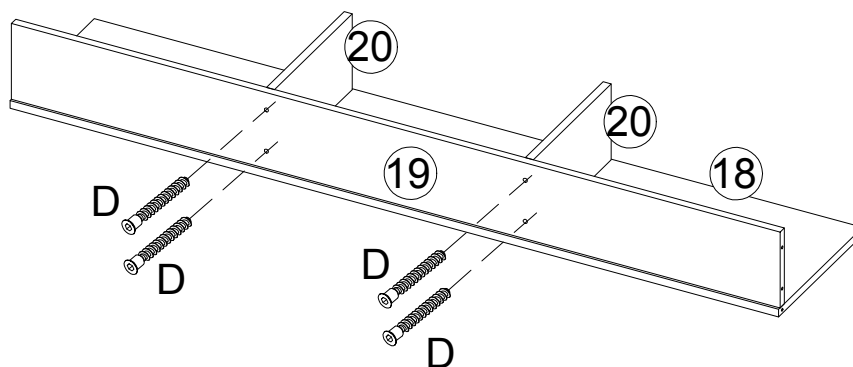


D M5*40

X4

ASSEMBLY INSTRUCTION



STEP 15

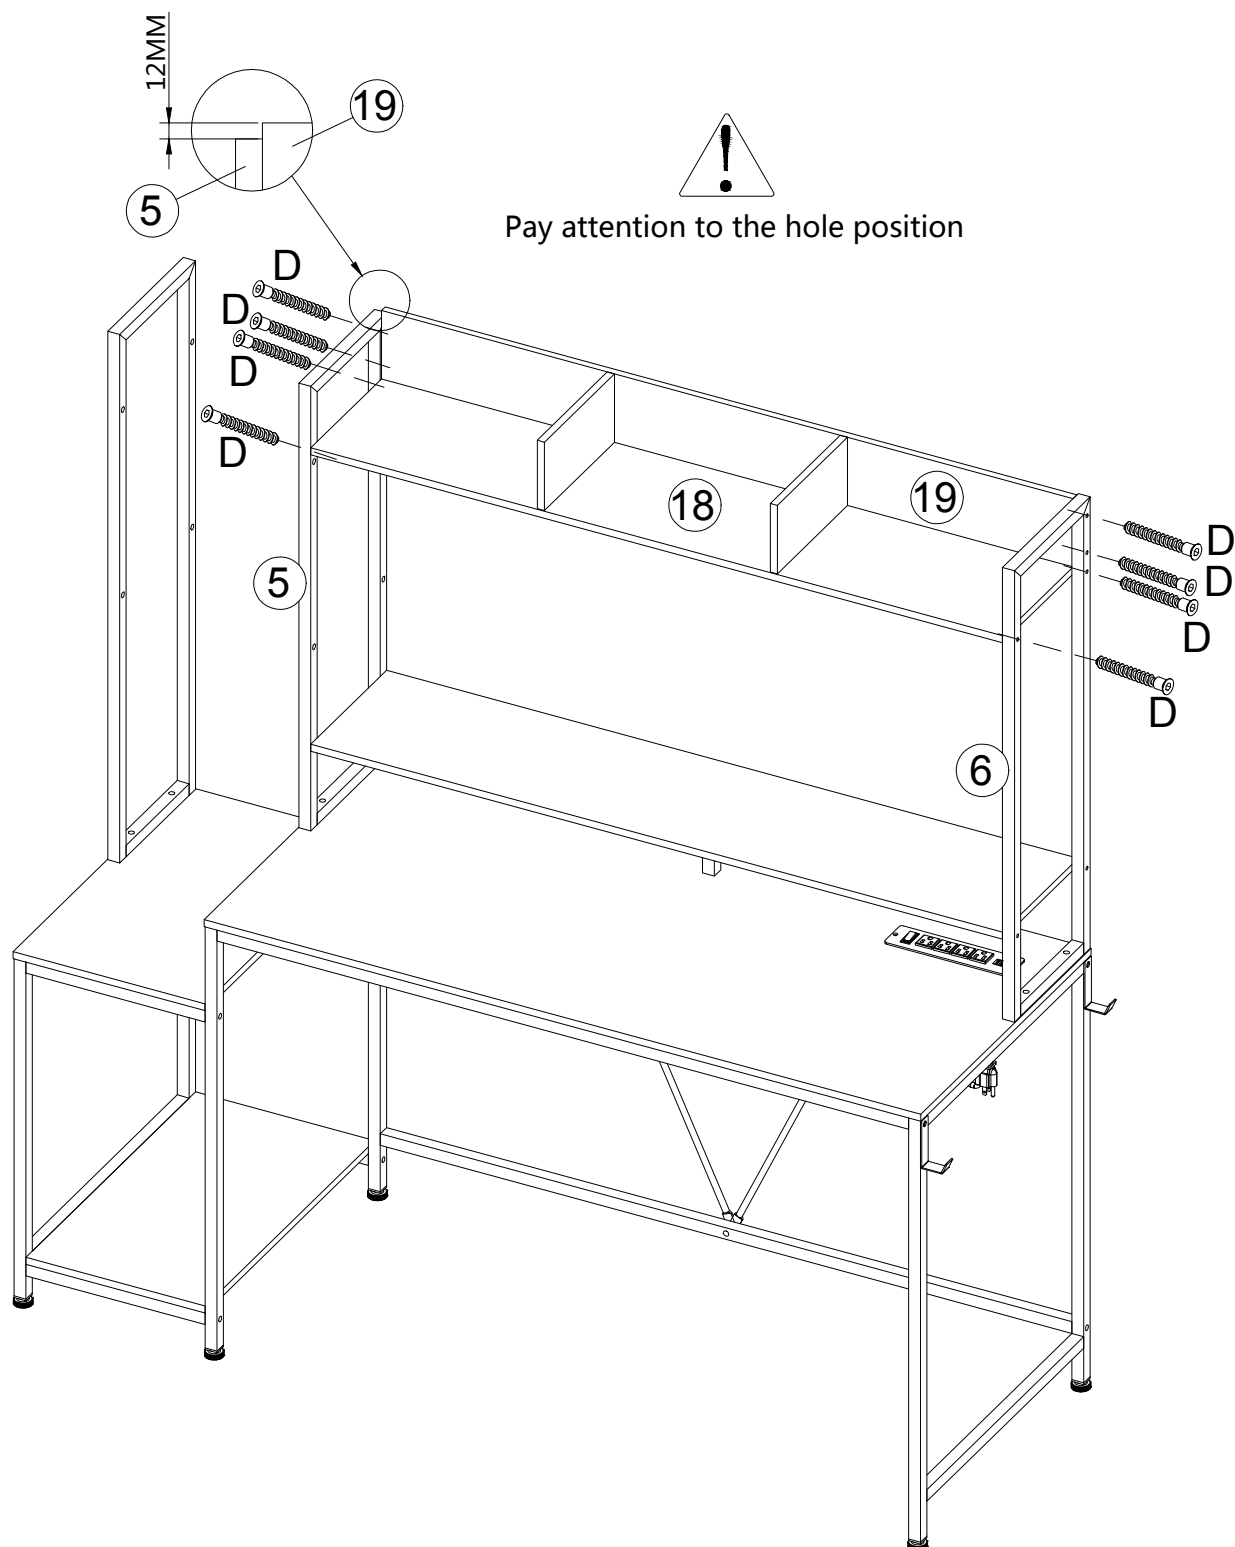



D M5*40
X8

ASSEMBLY INSTRUCTION



STEP 16

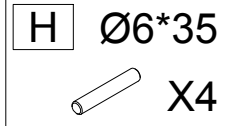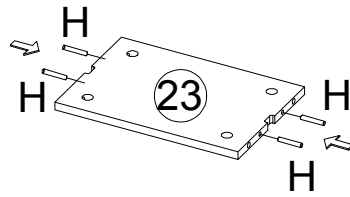

STEP 17

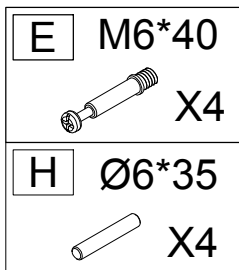
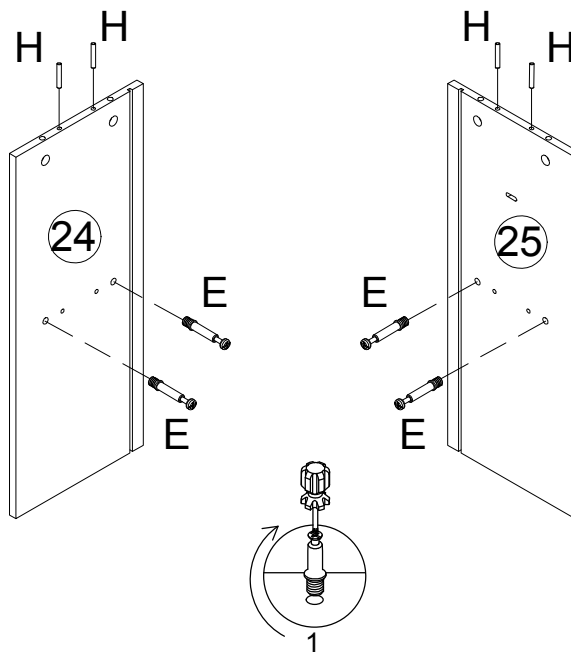


STEP 18

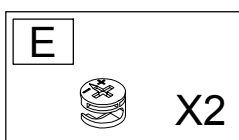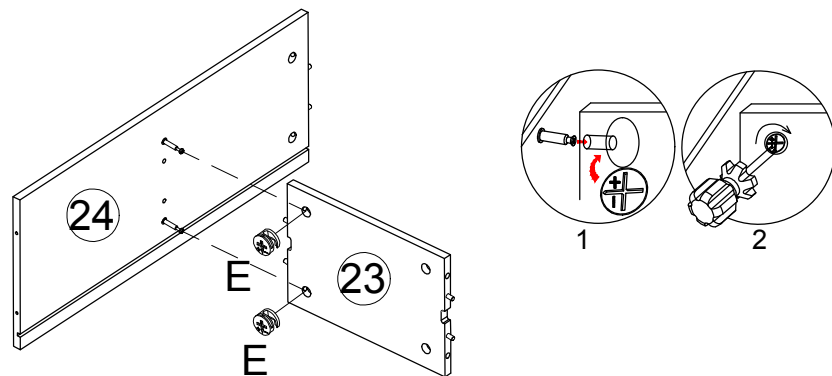


ASSEMBLY INSTRUCTION


STEP 19

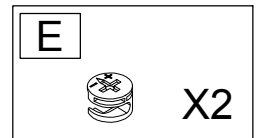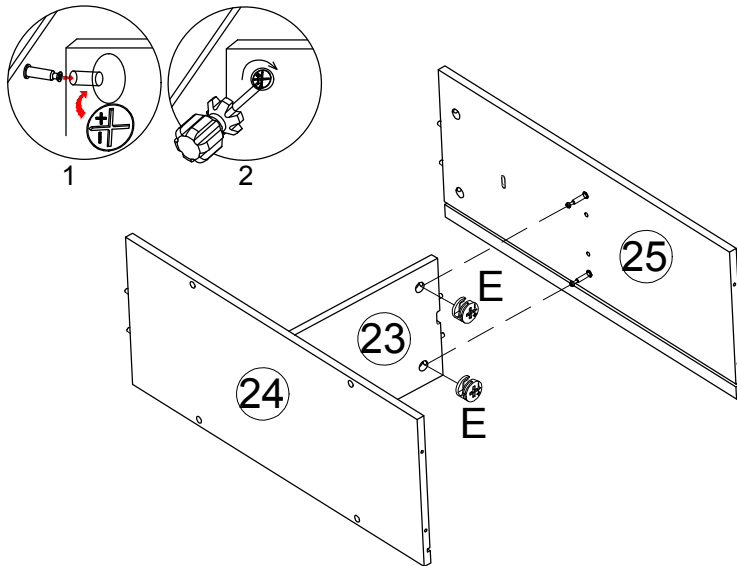


STEP 20

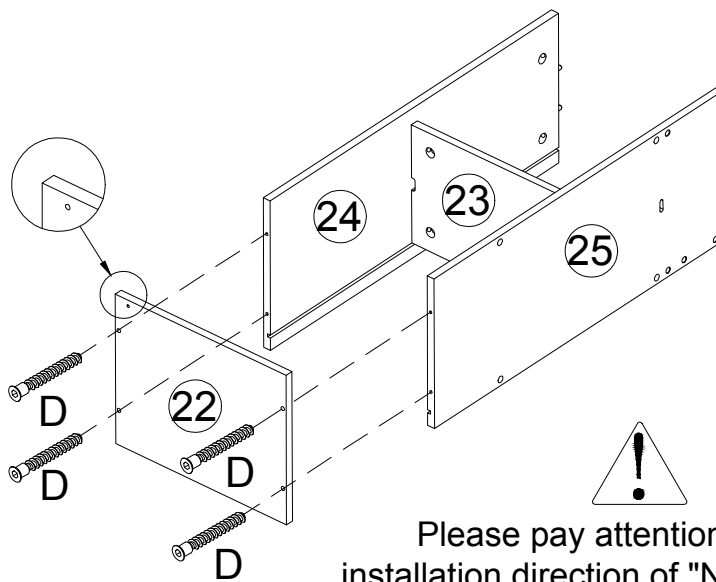

Please pay attention to the
installation direction of "No. 22" plate

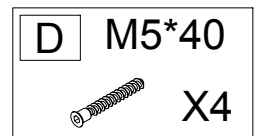




STEP 21

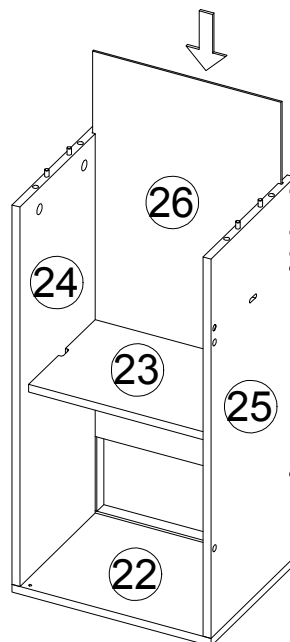



ASSEMBLY INSTRUCTION


STEP 22

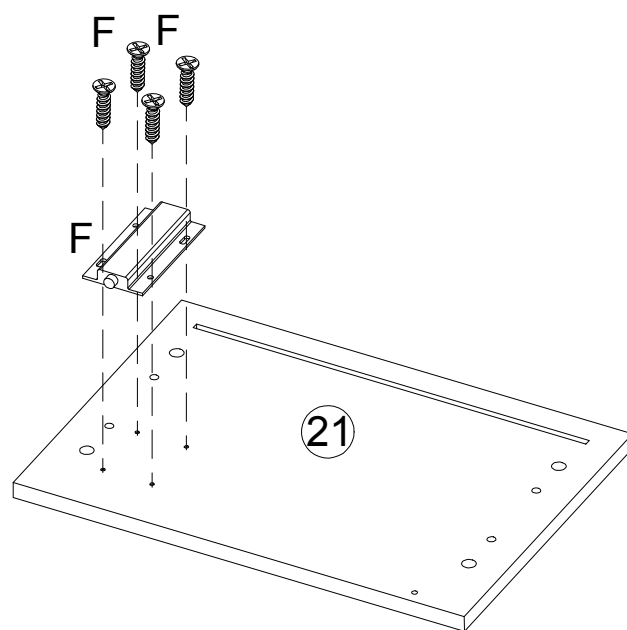

F	M3.5*12	F	
	X4		X1


STEP 23

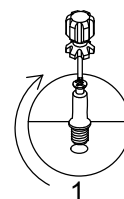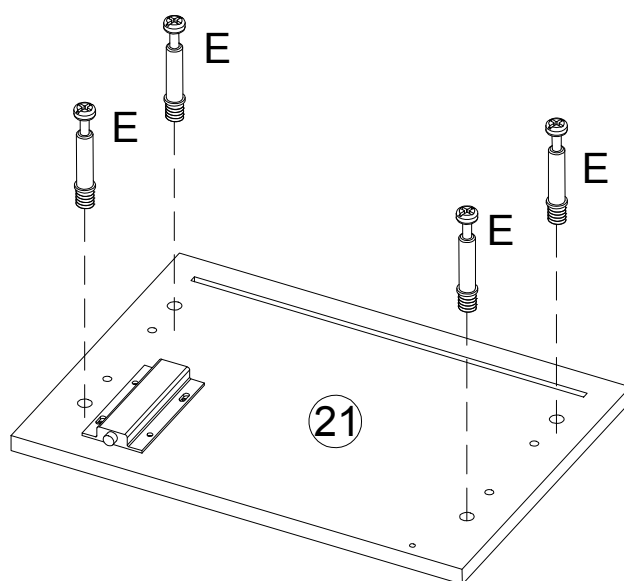


E	M6*40
	X4

ASSEMBLY INSTRUCTION

STEP 24

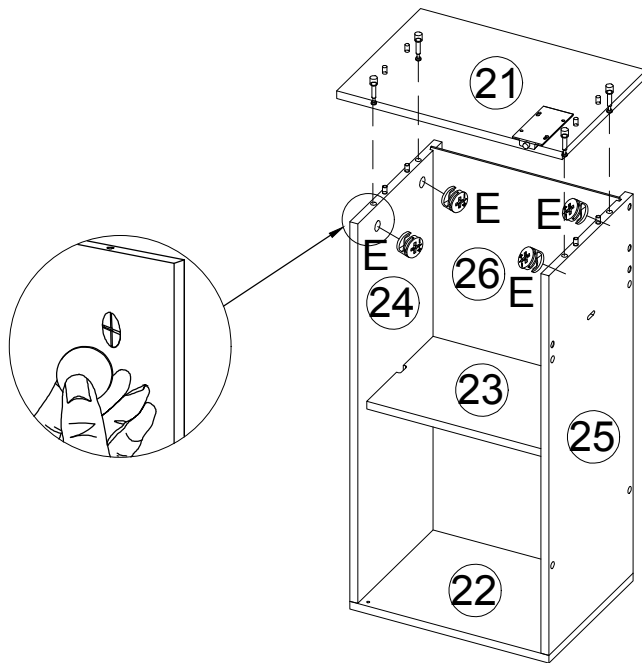


Please pay attention to the installation direction of "No. 21" plate

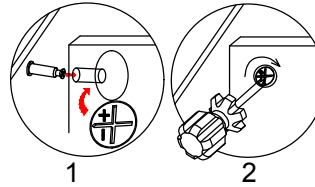


E	
	X4
	X1


STEP 25

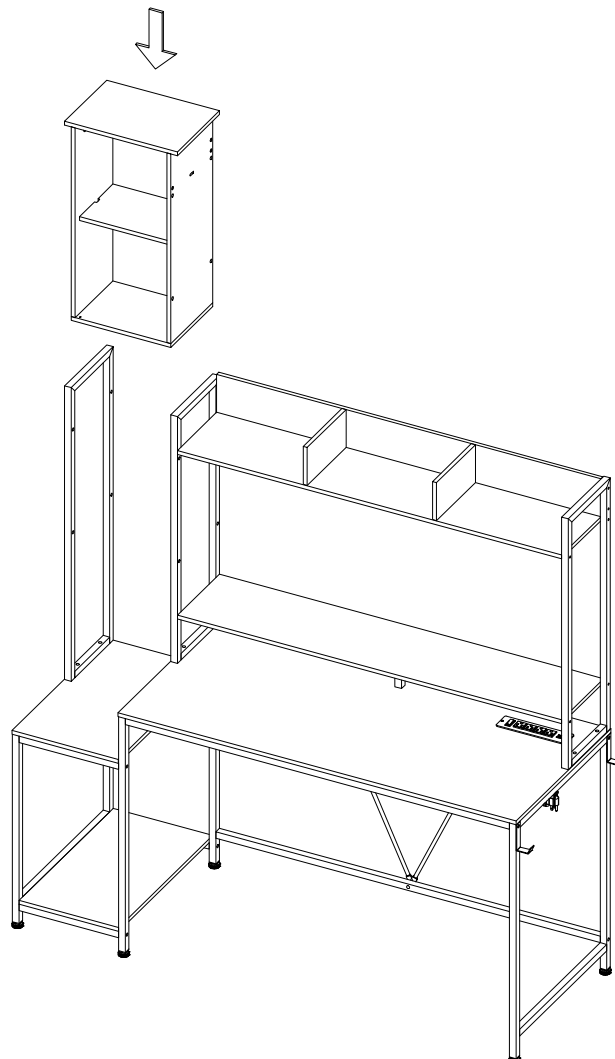


ASSEMBLY INSTRUCTION


STEP 26

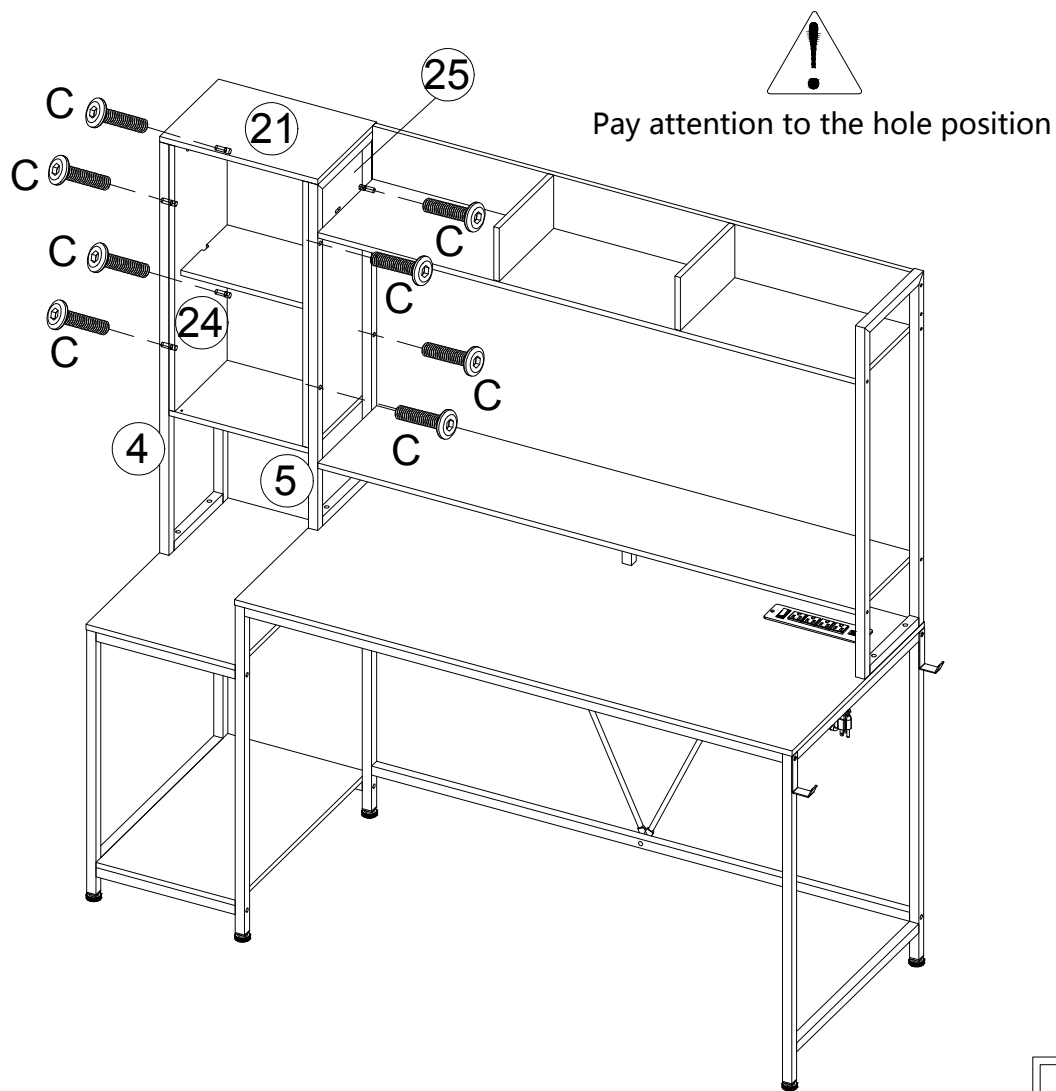

C	M6*25
	X8


STEP 27

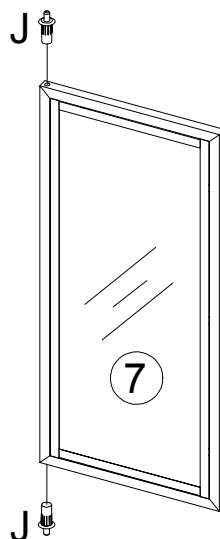

J	
	X2



ASSEMBLY INSTRUCTION

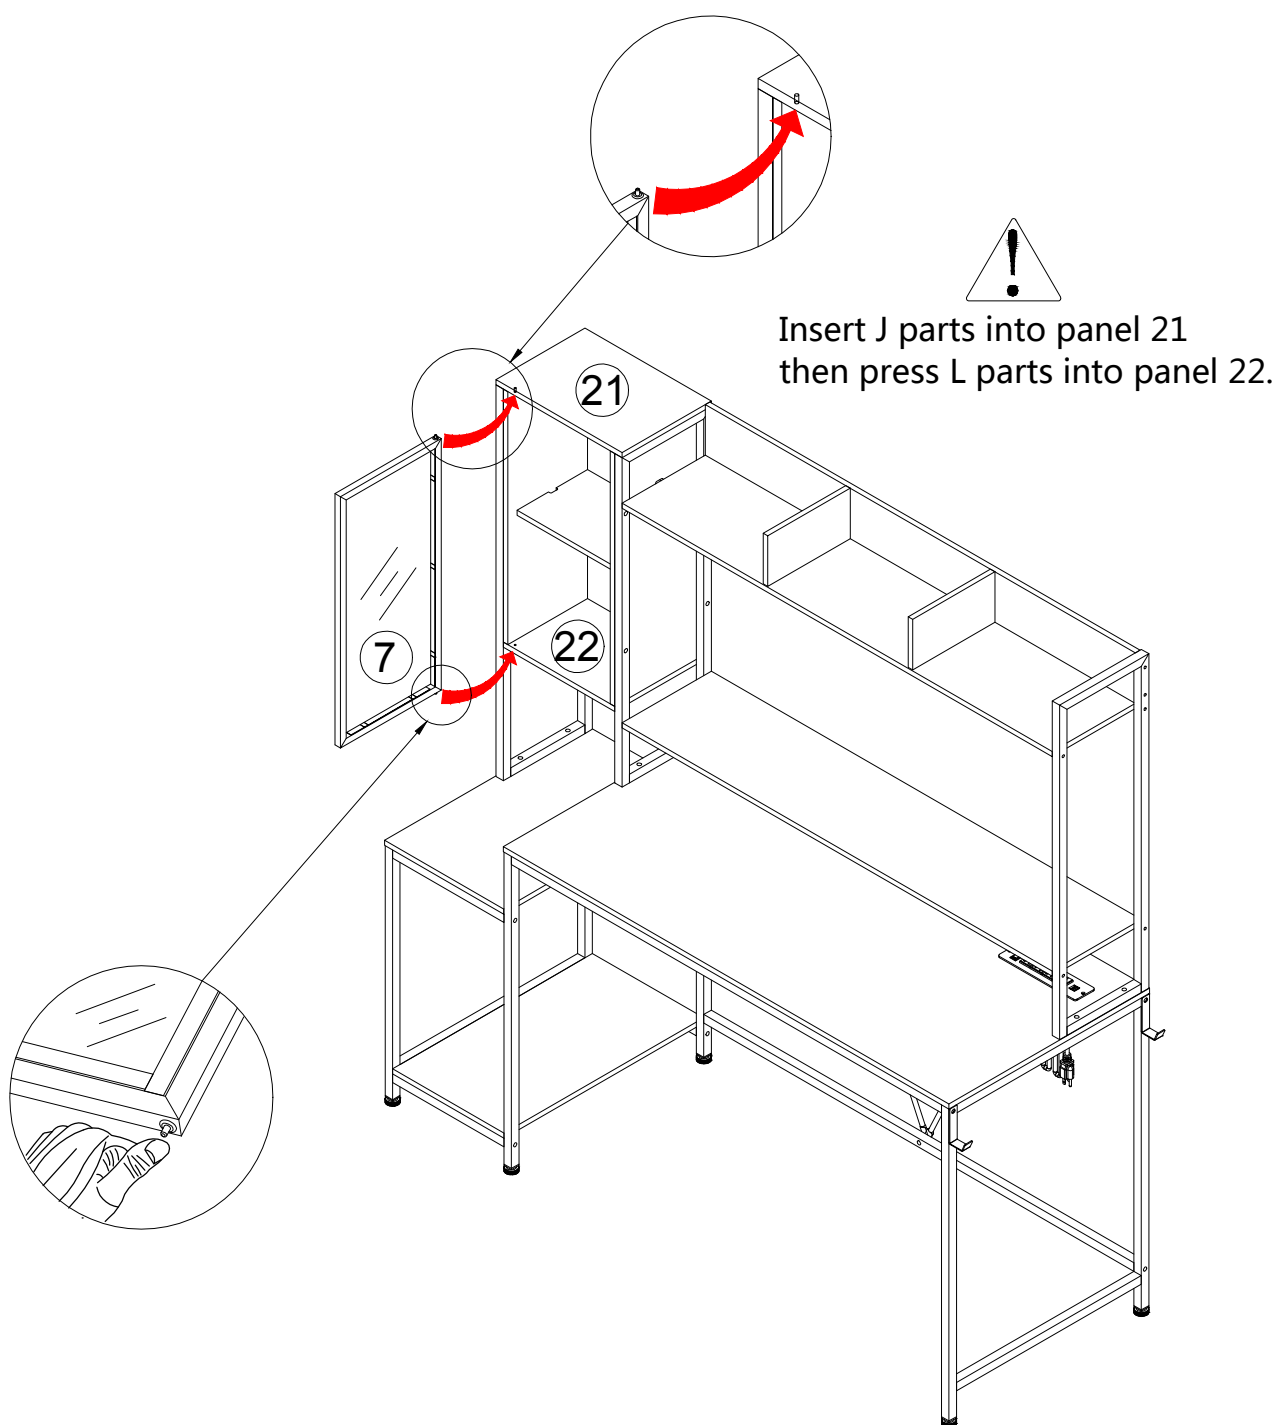

STEP 28



ASSEMBLY INSTRUCTION

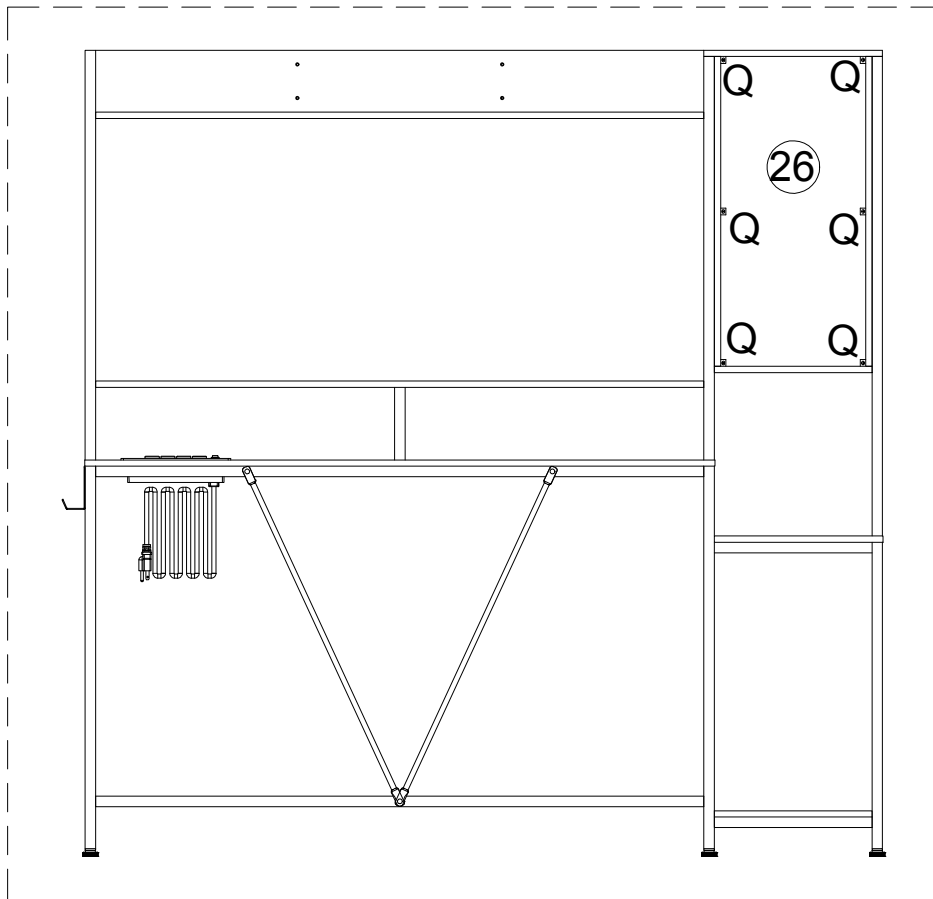
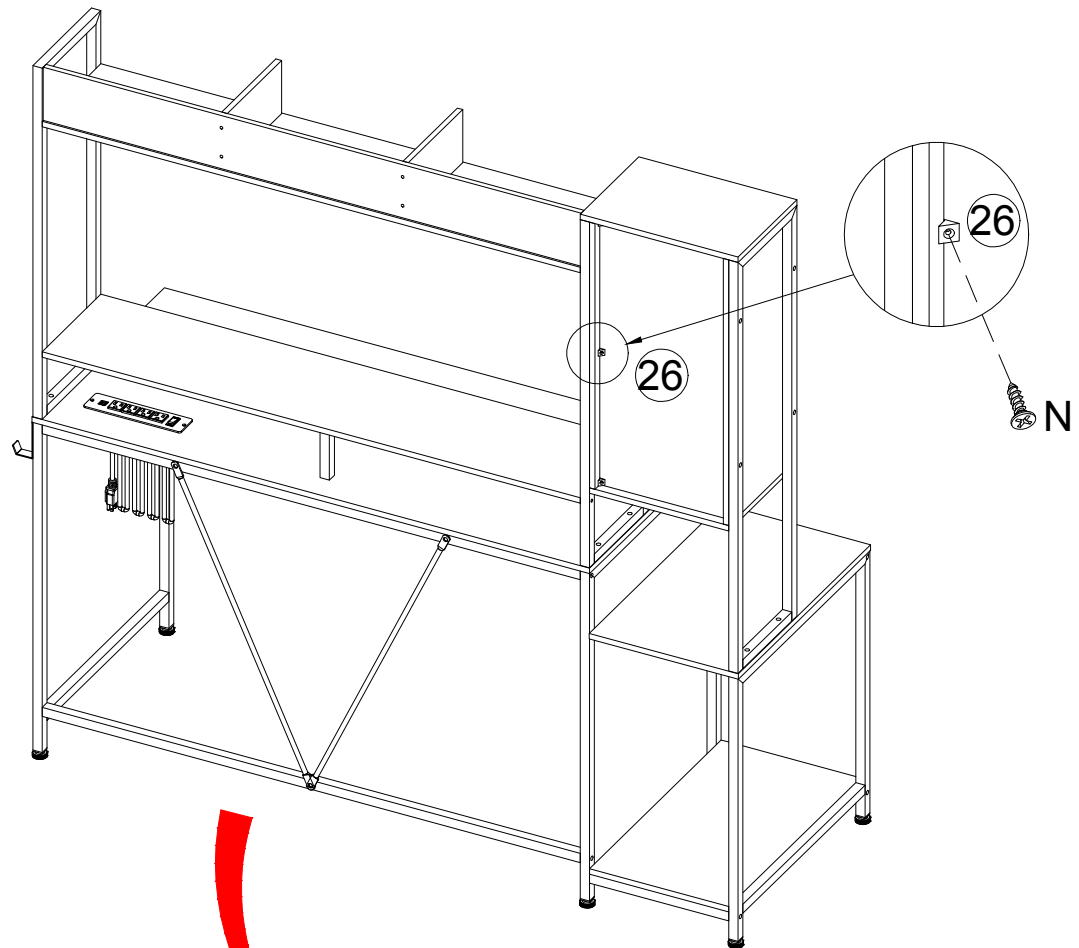
STEP 29



N	M3.5*14
	X6
Q	
	X6


ASSEMBLY INSTRUCTION

STEP 30

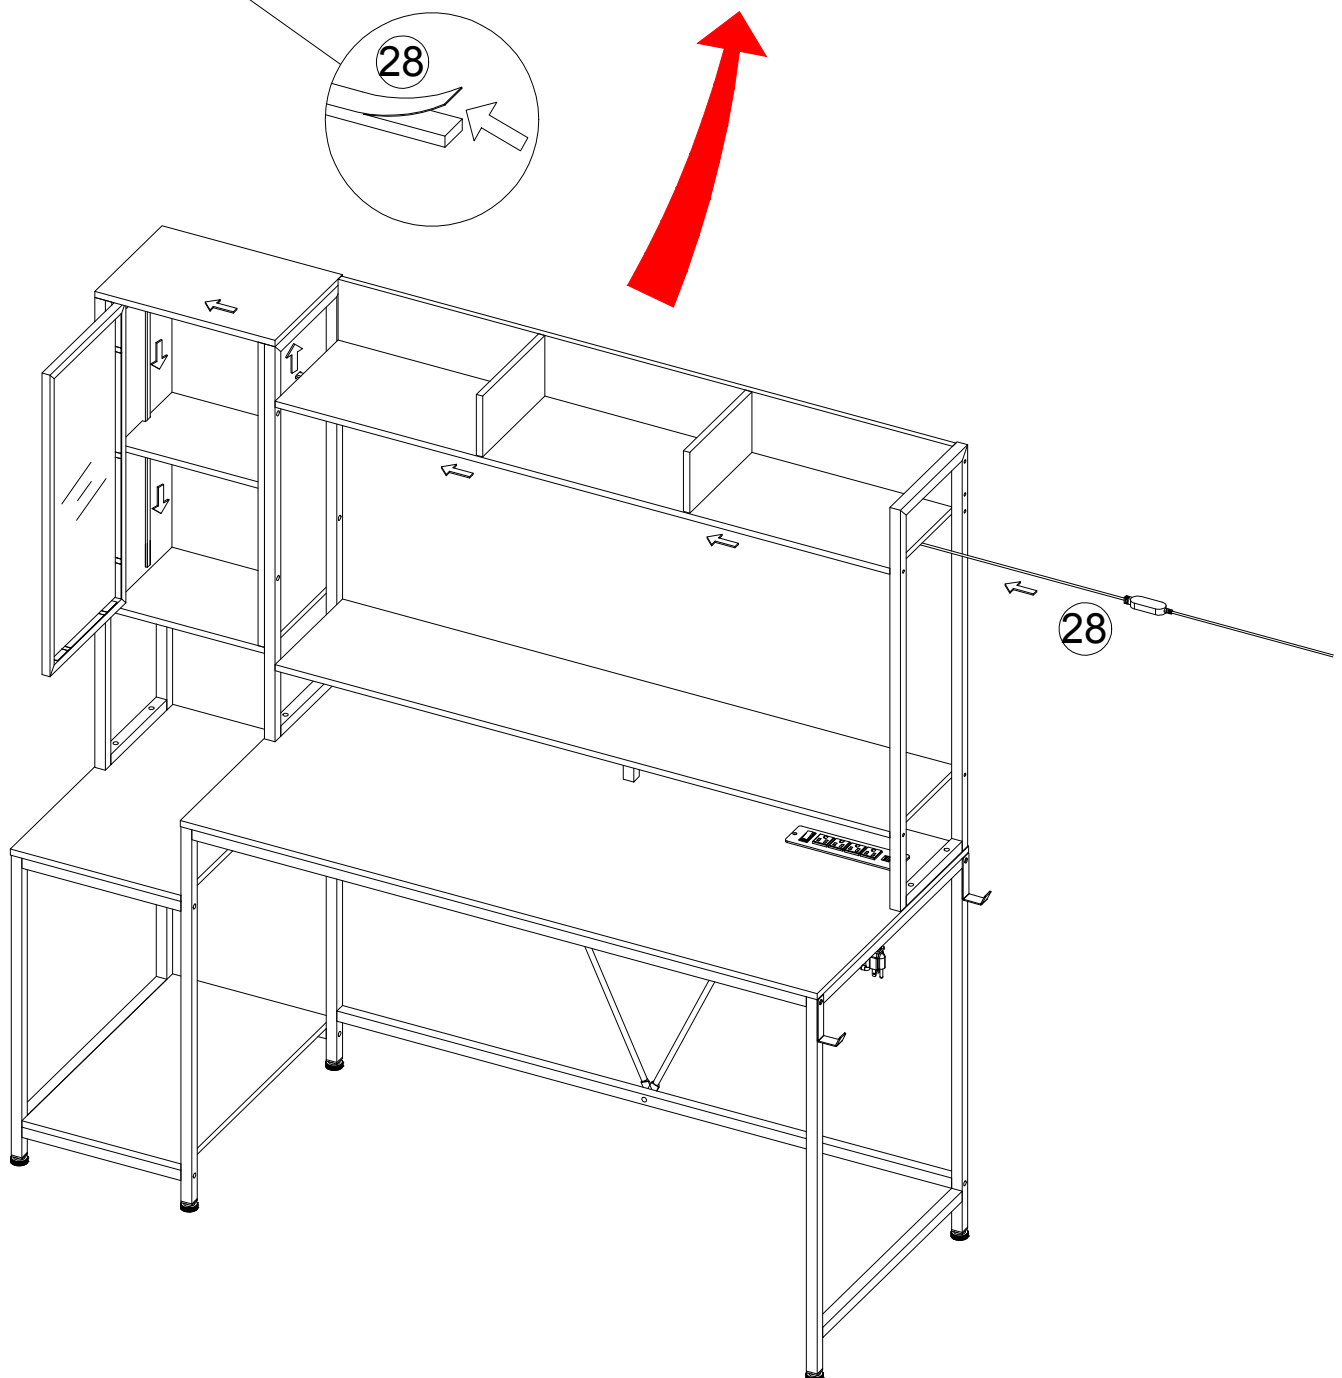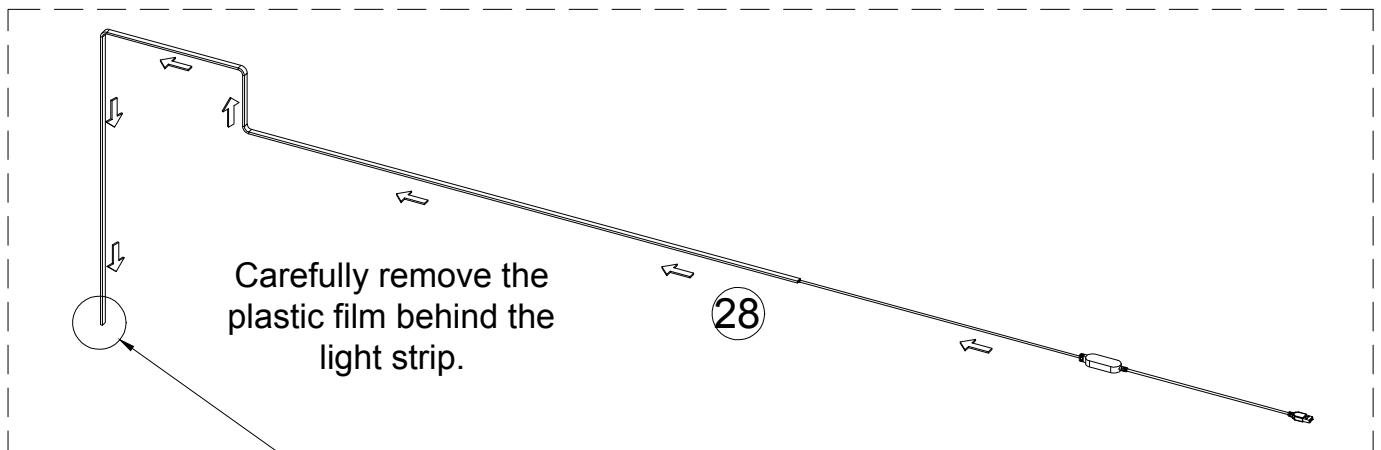


ASSEMBLY INSTRUCTION


STEP 31

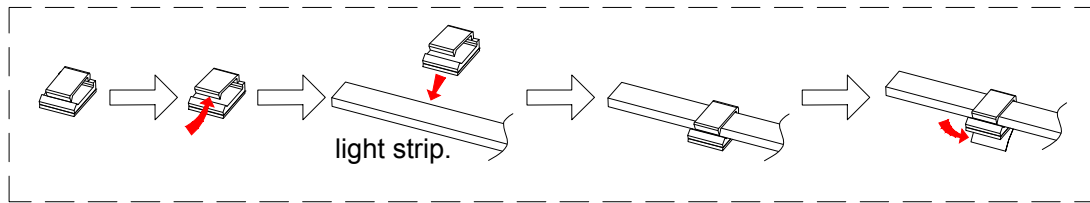

The light strip can be pasted to the desired position according to your own needs.

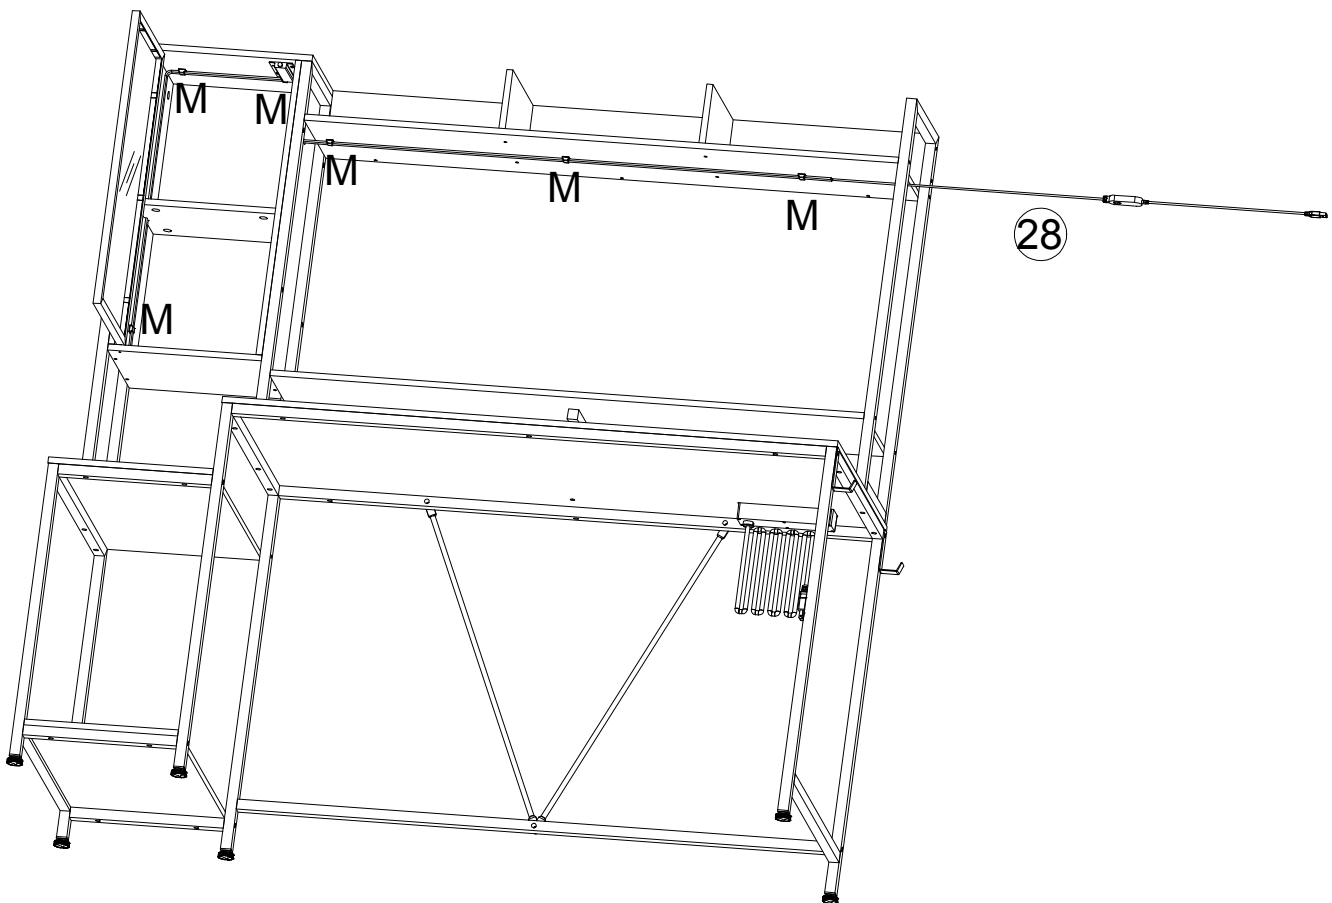

Note that M can be installed or not according to personal needs. M is used for the stick-off configuration of the light strip.

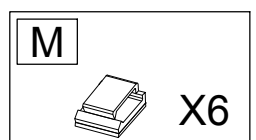

ASSEMBLY INSTRUCTION

STEP 32

