



Assembly Instructions

4', 6' & 8' Oriental & Acorn Bridge




*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 866-896-5747

PARTS (included)

- Ⓐ Bridge (1)
- Ⓑ Bridge Boards (2)
- Ⓒ Rail Boards (2)
- Ⓓ End Posts (4)
- Ⓔ Center Posts (2)

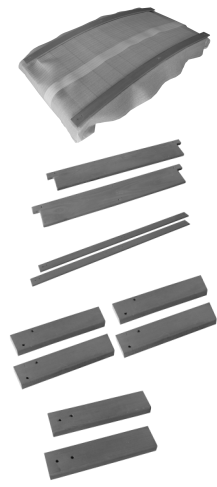

HARDWARE (included)

- Ⓐ $\frac{5}{16}$ " x $\frac{3}{4}$ " Bolts (12)
- Ⓑ $\frac{5}{16}$ " Nuts (12)
- Ⓒ $2\frac{1}{2}$ " Wood Screws (24)
- Ⓓ Square Drive Bit (1)



TOOLS NEEDED

$\frac{1}{2}$ " Wrench or Socket
Screw Gun

STEP 1

Remove the rail boards from the bridge using a screw gun & the square drive bit. Remove the screws at each end of the rails. (See photos 1 & 2.) Note: You may discard these screws as they will not be needed in assembly.

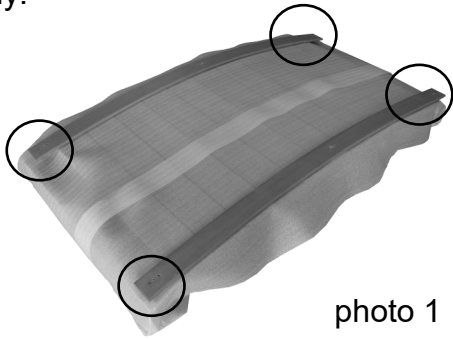


photo 1

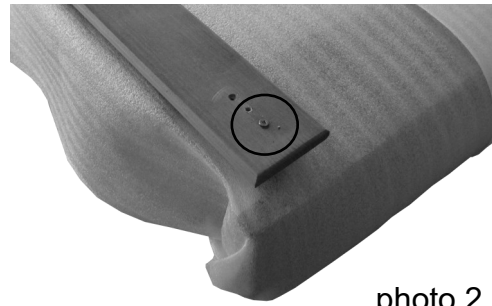


photo 2

STEP 2

Fasten the bridge boards to the bridge. Using a screw gun & the square drive bit, screw six $2\frac{1}{2}$ " wood screws through the predrilled holes in the bridge boards to the bridge. (See photos 3 & 4.)

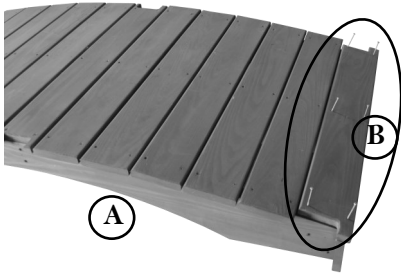


photo 3



photo 4

STEP 3

Attach the posts to the bridge using the $\frac{3}{4}$ " bolts & nuts. Tighten the nuts using a $\frac{1}{2}$ " wrench or socket. (See photos 5, 6 & 7.)

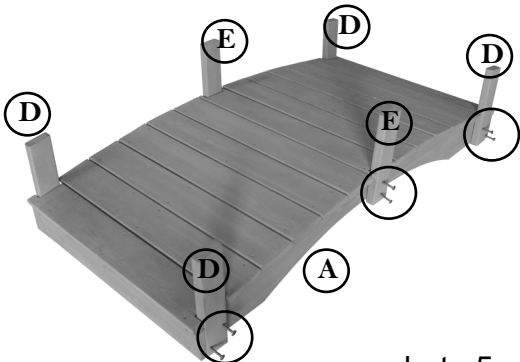


photo 5

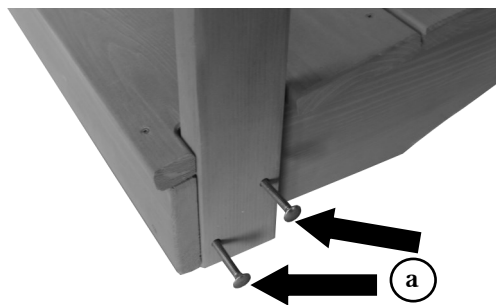


photo 6

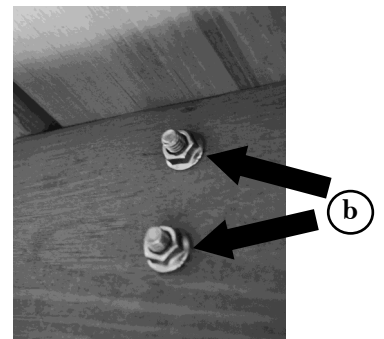


photo 7

STEP 4

Attach the rails to the center post with the 2½” screws in the predrilled holes, center the screws on the post and fasten using a screw gun & the square drive bit. Push the ends of the rail down on the end post and fasten with 2½” screws. Note: Another person may be needed so both ends can be pushed down & centered on the posts at the same time. (See photos 8 & 9.)

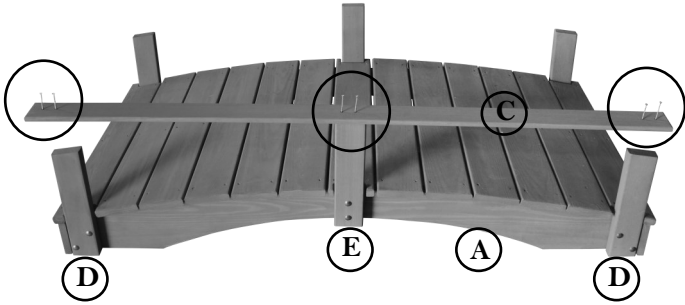


photo 8

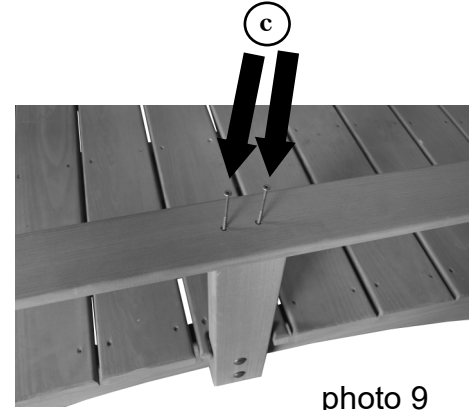



photo 9

If you received an Acorn Bridge, Step 5 below is needed.

PARTS (included)

ⓕ Acorns (6) 

STEP 5

A predrilled hole will be in the rails on top of each post for the acorns. Screw the acorns through the rail and into the posts by pushing down on the acorn and turning by hand until tight. (See photos 10, 11 & 12.)

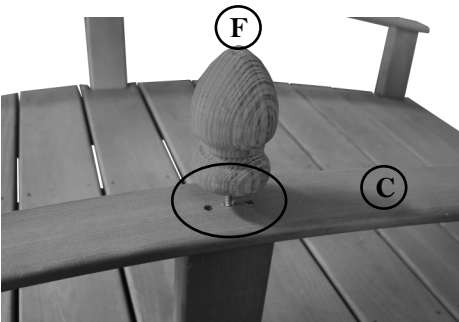


photo 10

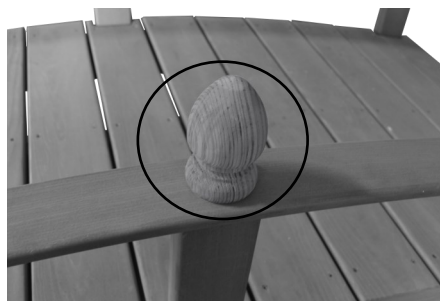


photo 11



photo 12