


TOOLS

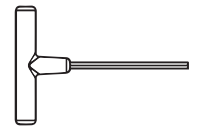


4mm T-handle
hex key (included)




4mm hex for drill
(included)

PARTS

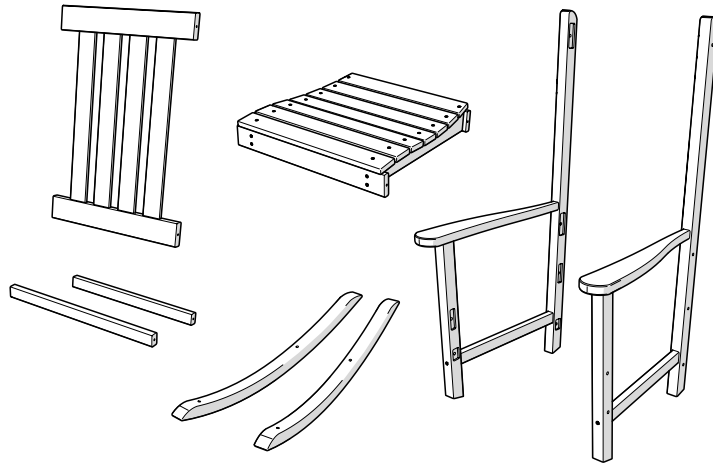


A x8

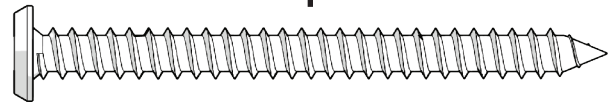

3" Screw - H.27X3

B x8

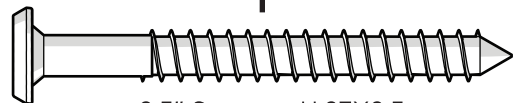


2.5" Screw - H.27X2.5

Something missing?
Visit help.polywood.com


1

Learn more:
Video: POLYWOOD Rocking Chair
Assembly Video

Some may find this easier
to assemble with a friend

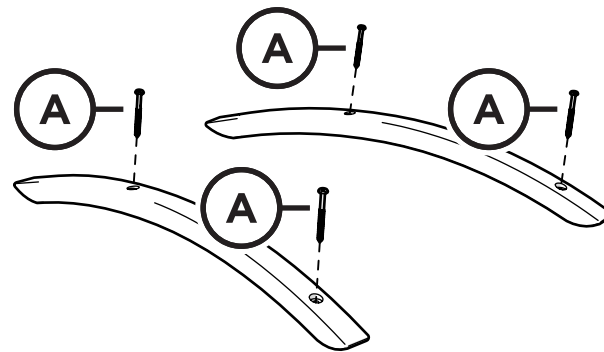


2

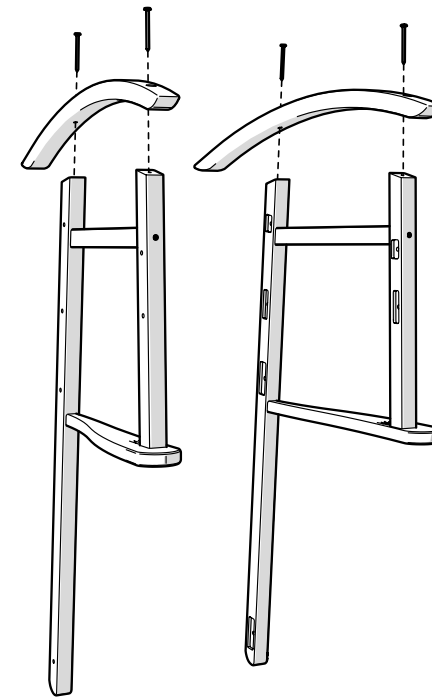


Partially thread each screw into pilot
holes by hand before fully tightening.


3

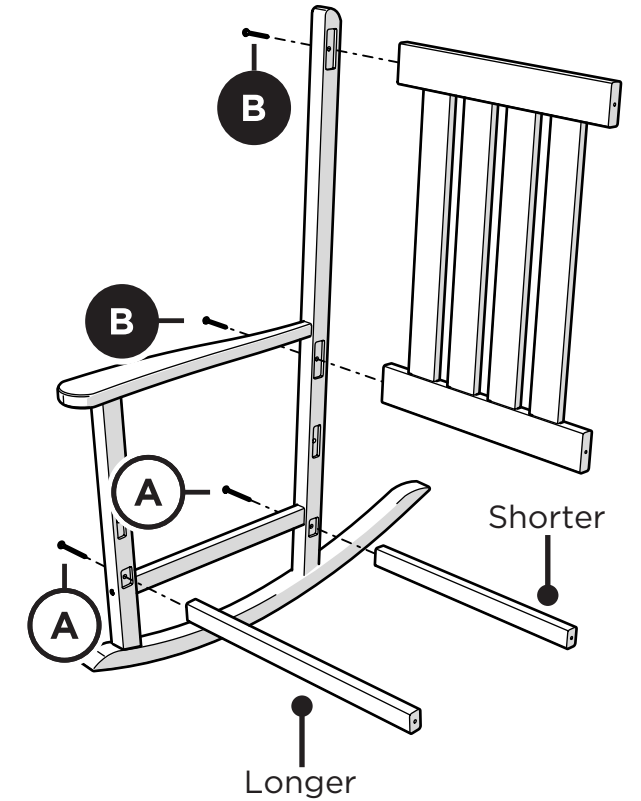


4

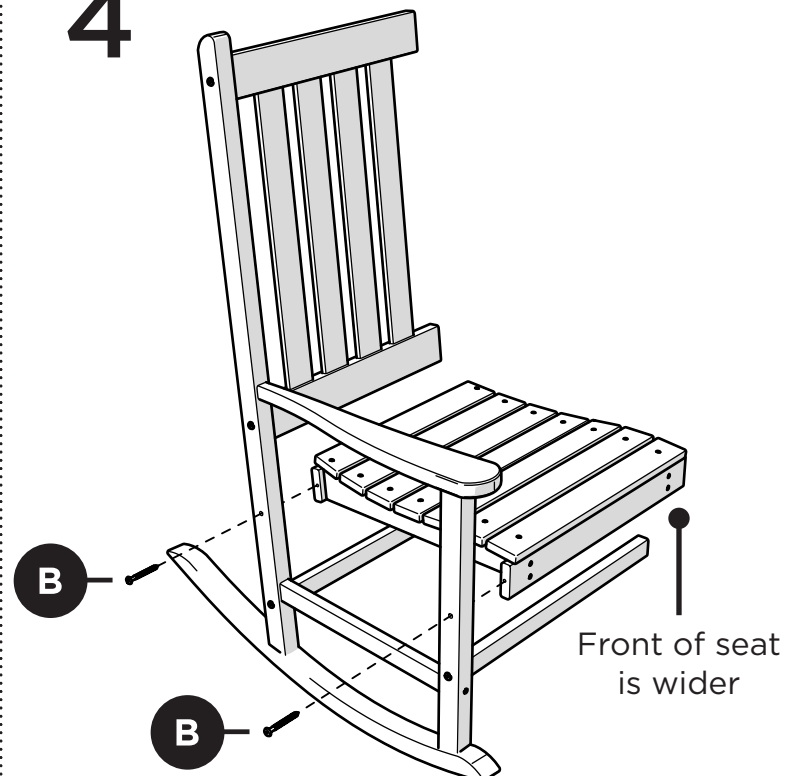

5

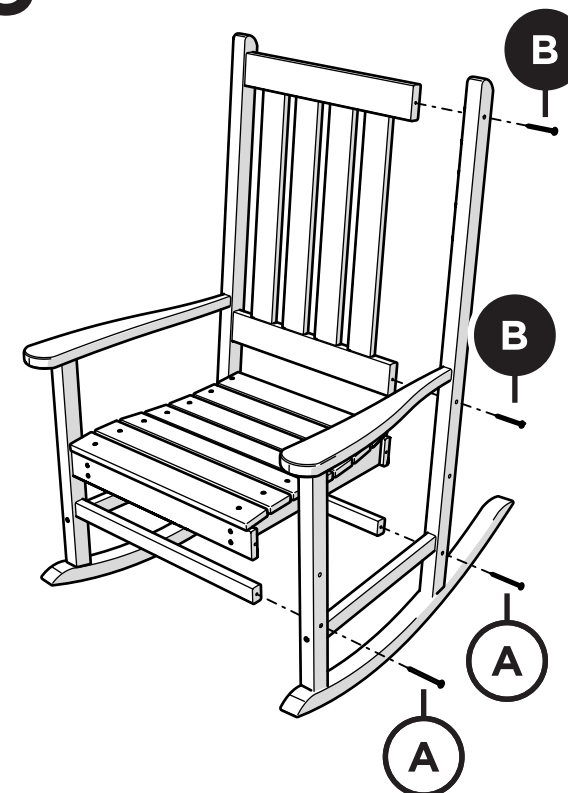

6

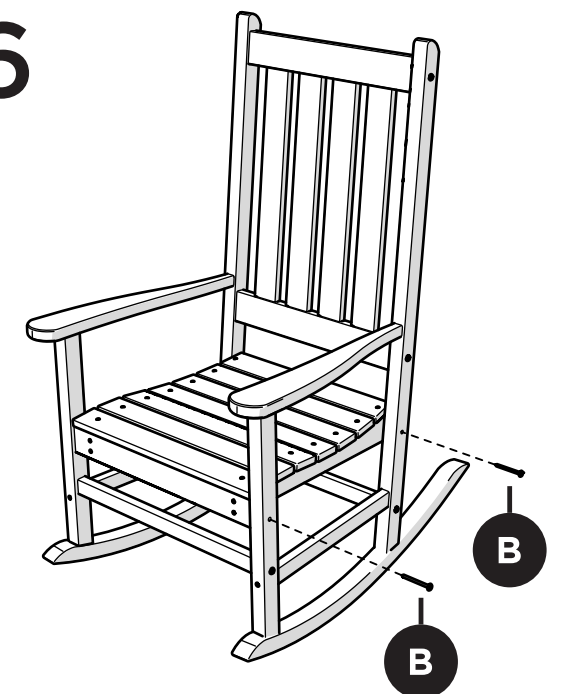

! Remove protective plastic
film from the logo medallion.