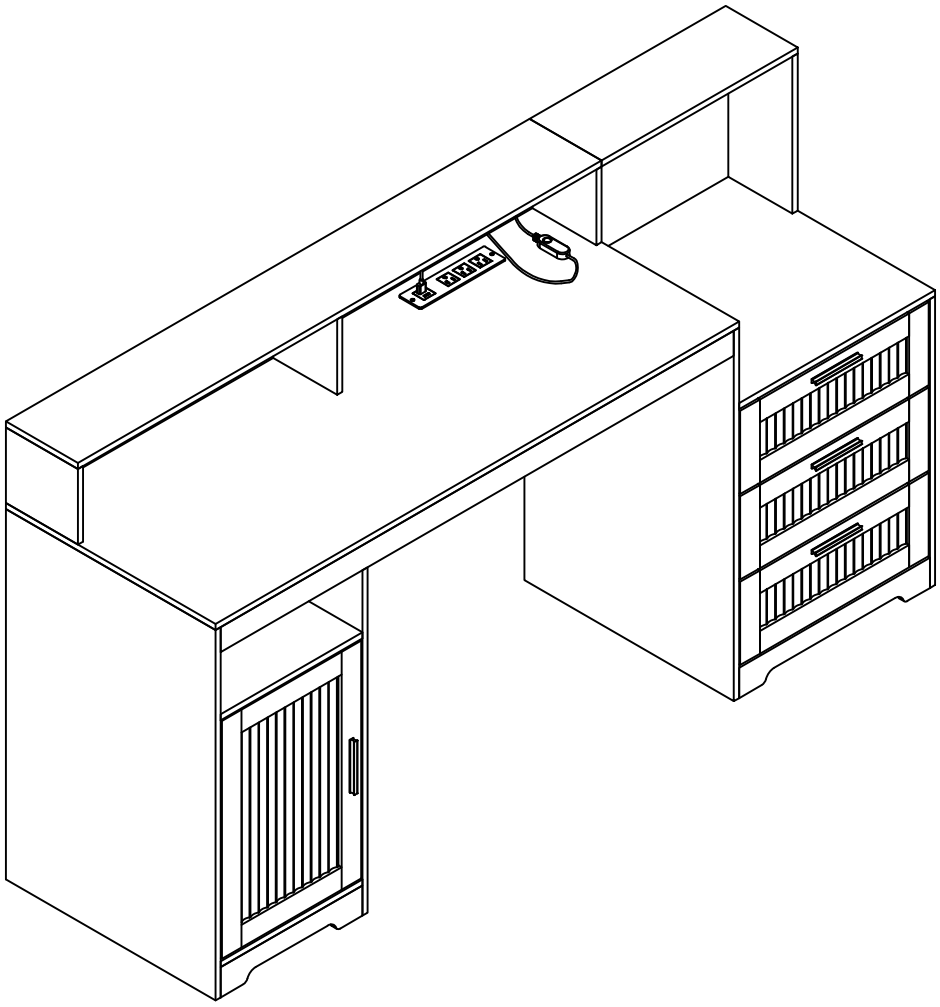
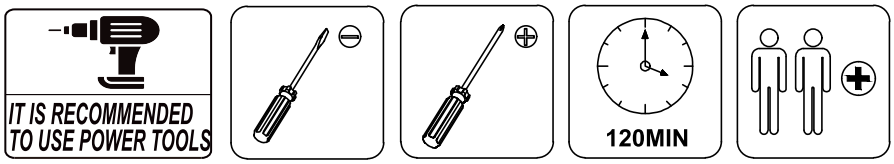
HLG256

Version:1.0





***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

.THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!

---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!

If you're experiencing any issues—whether due to shipping, assembly, or any other reason —we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.

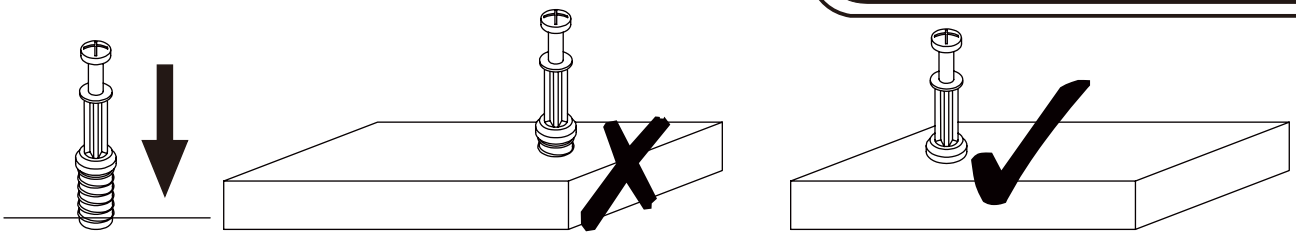
WhatsApp

Email: support@anymaple.com

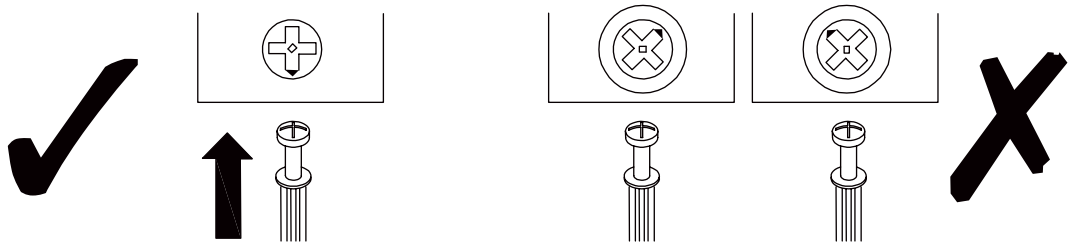
WANT TO CONTACT US THROUGH AMAZON?

- Log in to your Amazon account.
- Go to “Your Orders" and locate your furniture order.
- Click on“Get Help with Order” to send us a message directly.

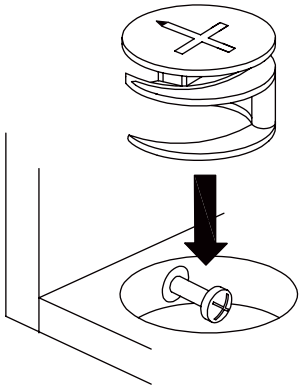
Our customer support team is ready to assist you and we will respond within 12-24 HOURS to resolve your concerns quickly!



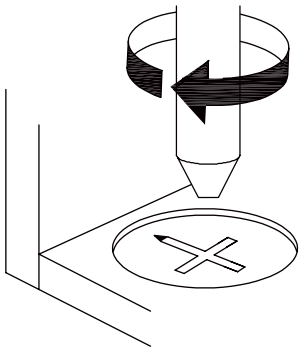
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



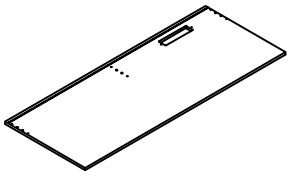
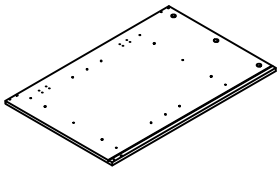
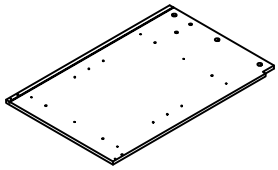
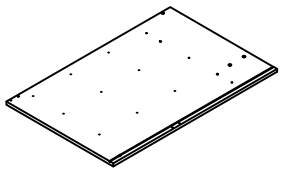
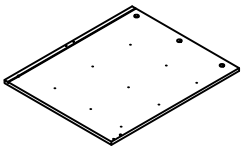
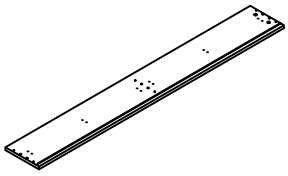
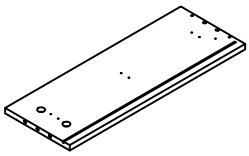
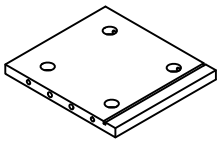
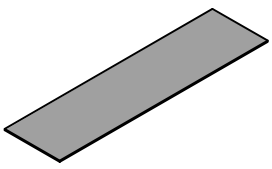
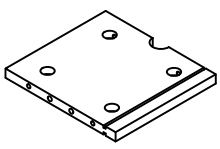
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

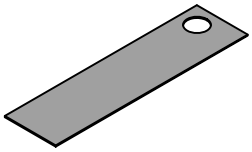
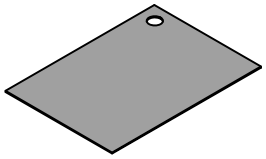
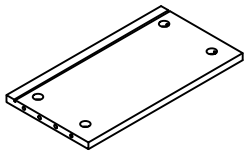
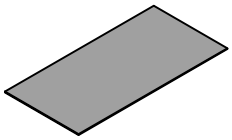
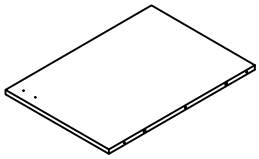
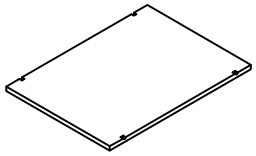
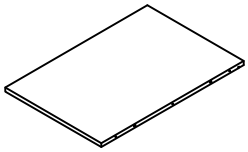
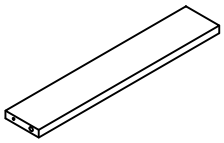
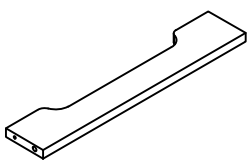
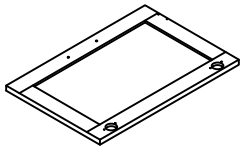


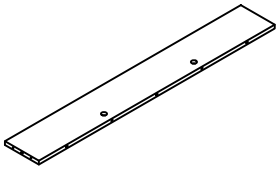
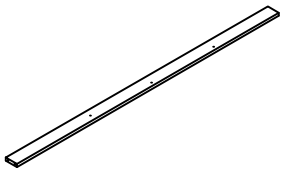
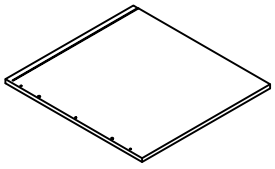
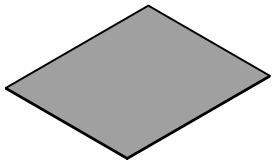
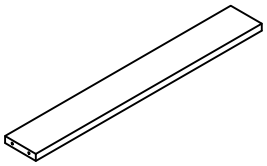
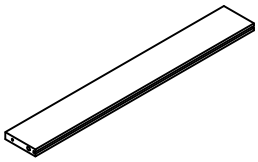
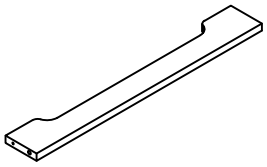
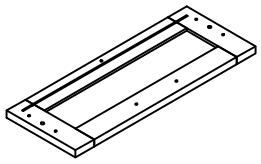
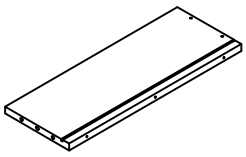
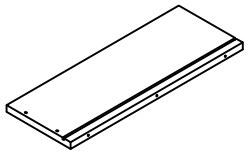
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

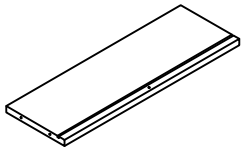
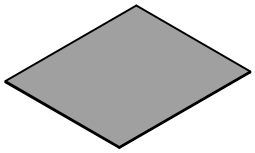
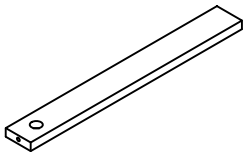


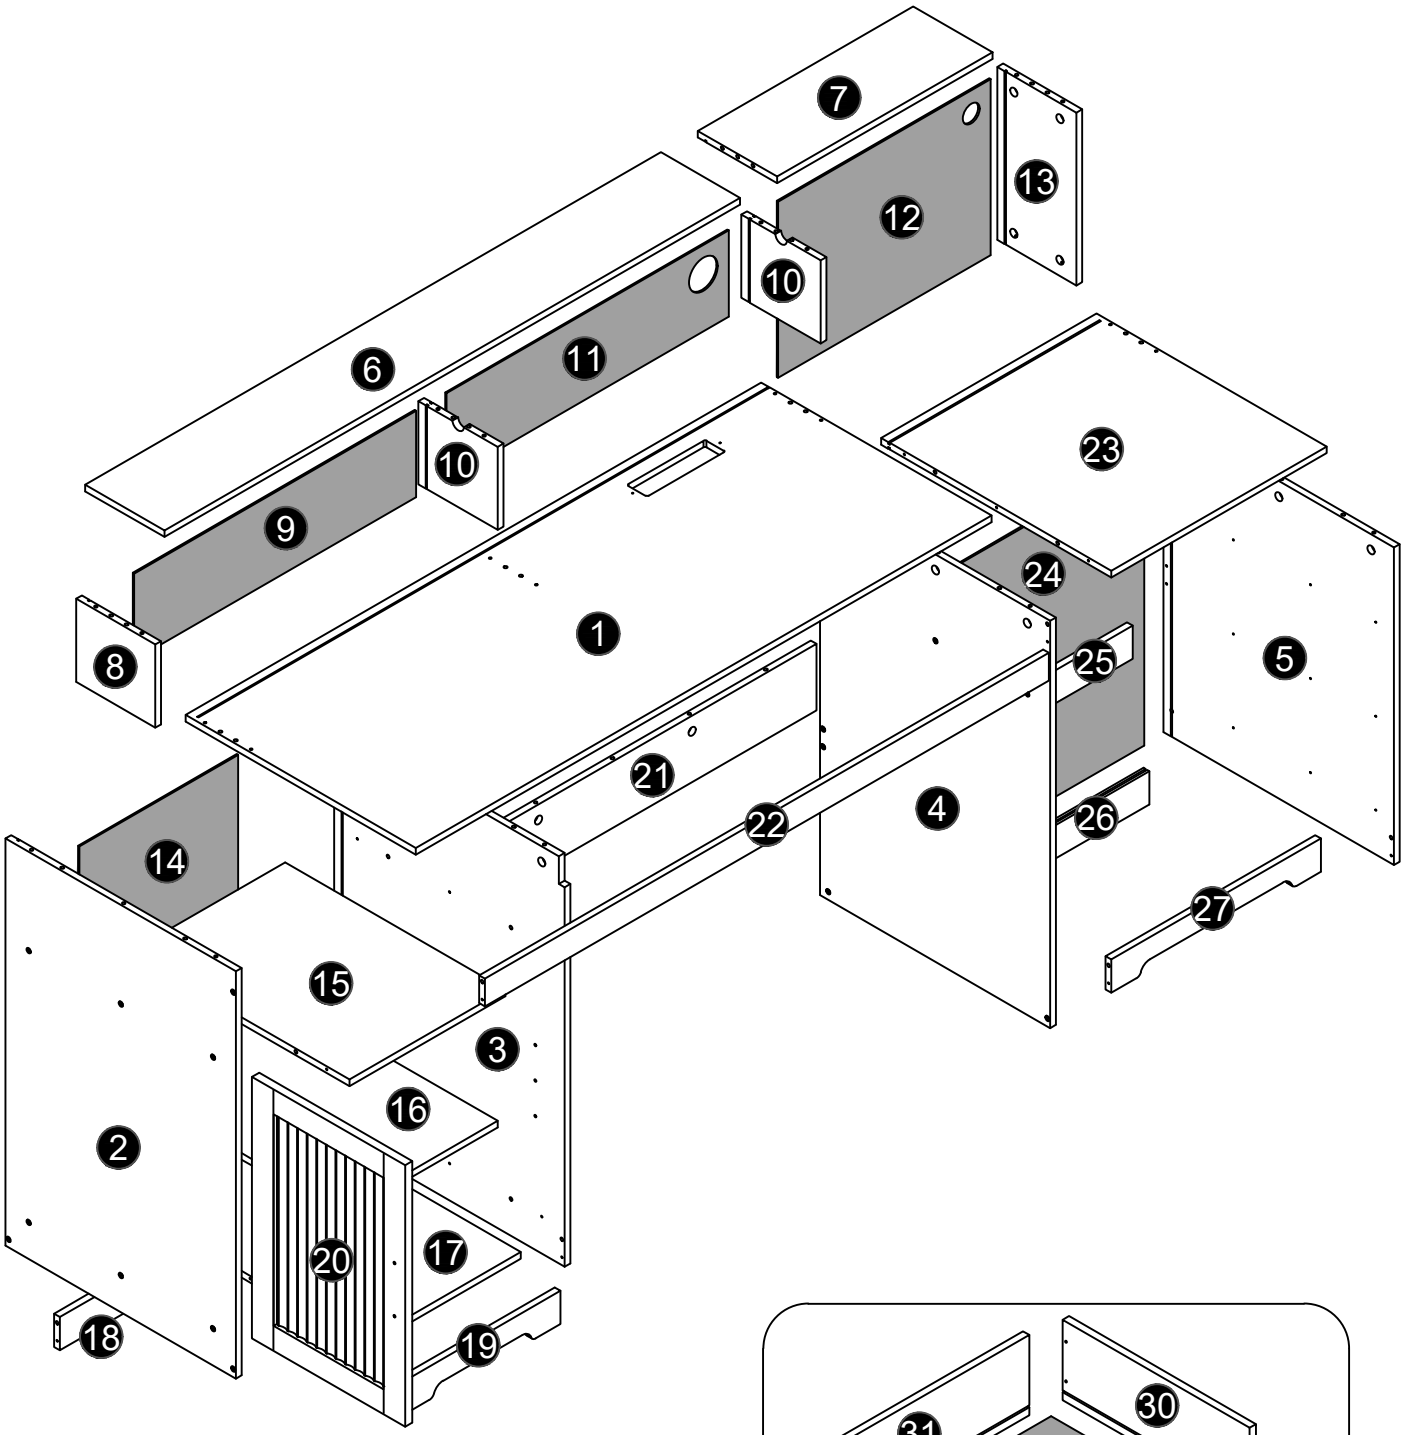
EN_ Turn cam lock clockwise to tighten.

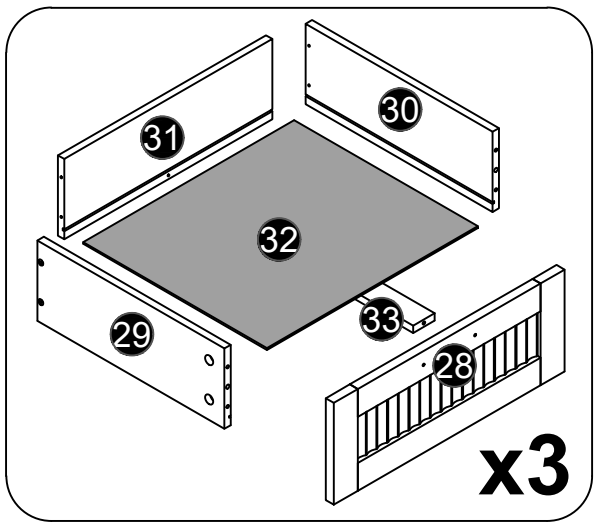
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x2	

NO.		QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x1	
⑲		x1	
⑳		x1	

NO.	PARTS	QTY	SPARE
㉑		x1	
㉒		x1	
㉓		x1	
㉔		x1	
㉕		x1	
㉖		x1	
㉗		x1	
㉘		x3	
㉙		x3	
㉚		x3	

NO.		QTY	SPARE
㉛		x3	
㉜		x3	
㉝		x3	
	 Hardware Kit		


7
13
12
10
6
11
10
23
9
24
1
8
25
5
21
4
22
26
14
27
15
3
16
2
20
17
18
19

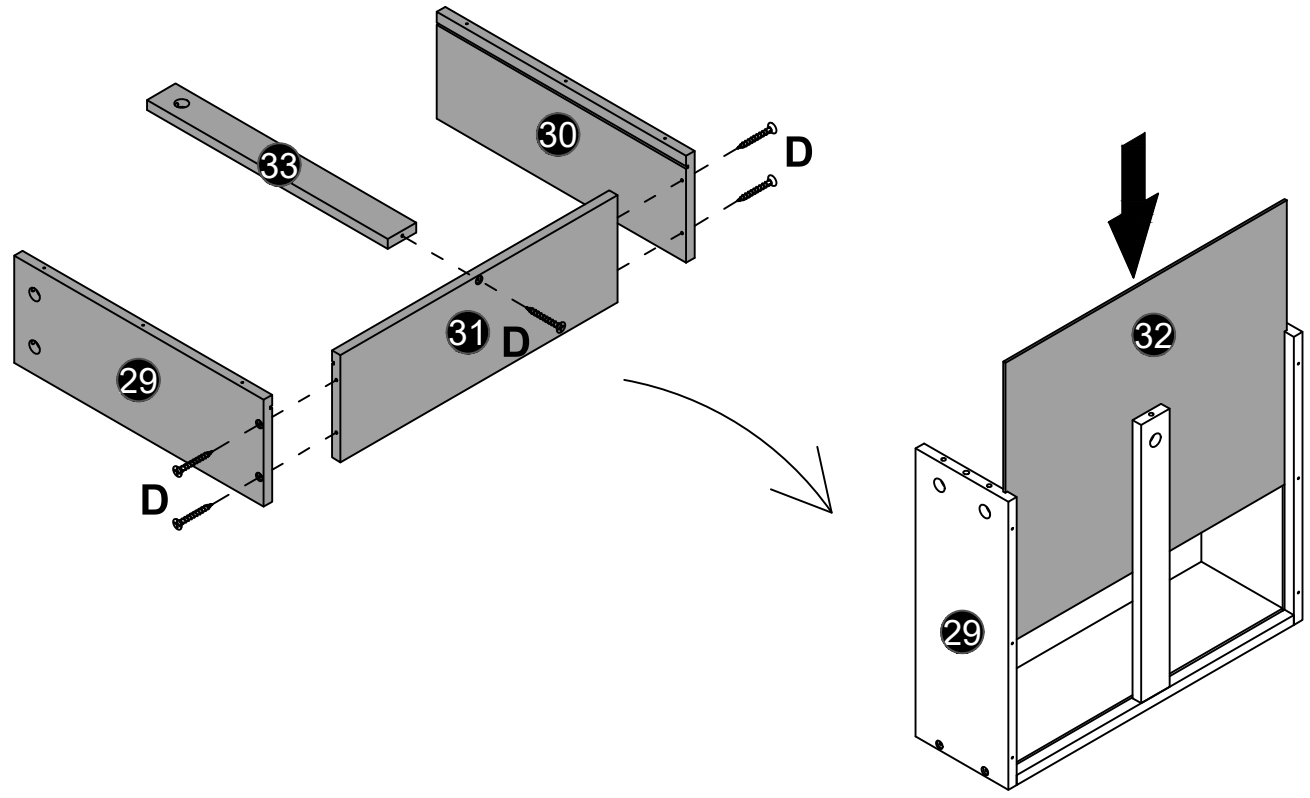

31
30
32
33
29
28
x3

A x45 Ø6x35mm +3(spare)	B x47 Ø15x10mm +3(spare)	C x56 Ø6x30mm +3(spare)	D x48 Ø4x35mm +3(spare)	E x65 Ø3.5x12mm +3(spare)	F x4
G x8	H x1 Ø3x14mm	I x1	J x4	K x22 Ø3x16mm +2(spare)	L x3
M x1	N x2 Ø3.5x12mm	O x2	P x1	Q x9	R x1
S x49 +4(spare)	T x2				
CL x3 L350mm	CR x3 L350mm	DL x3 L350mm	DR x3 L350mm		



D x15


01

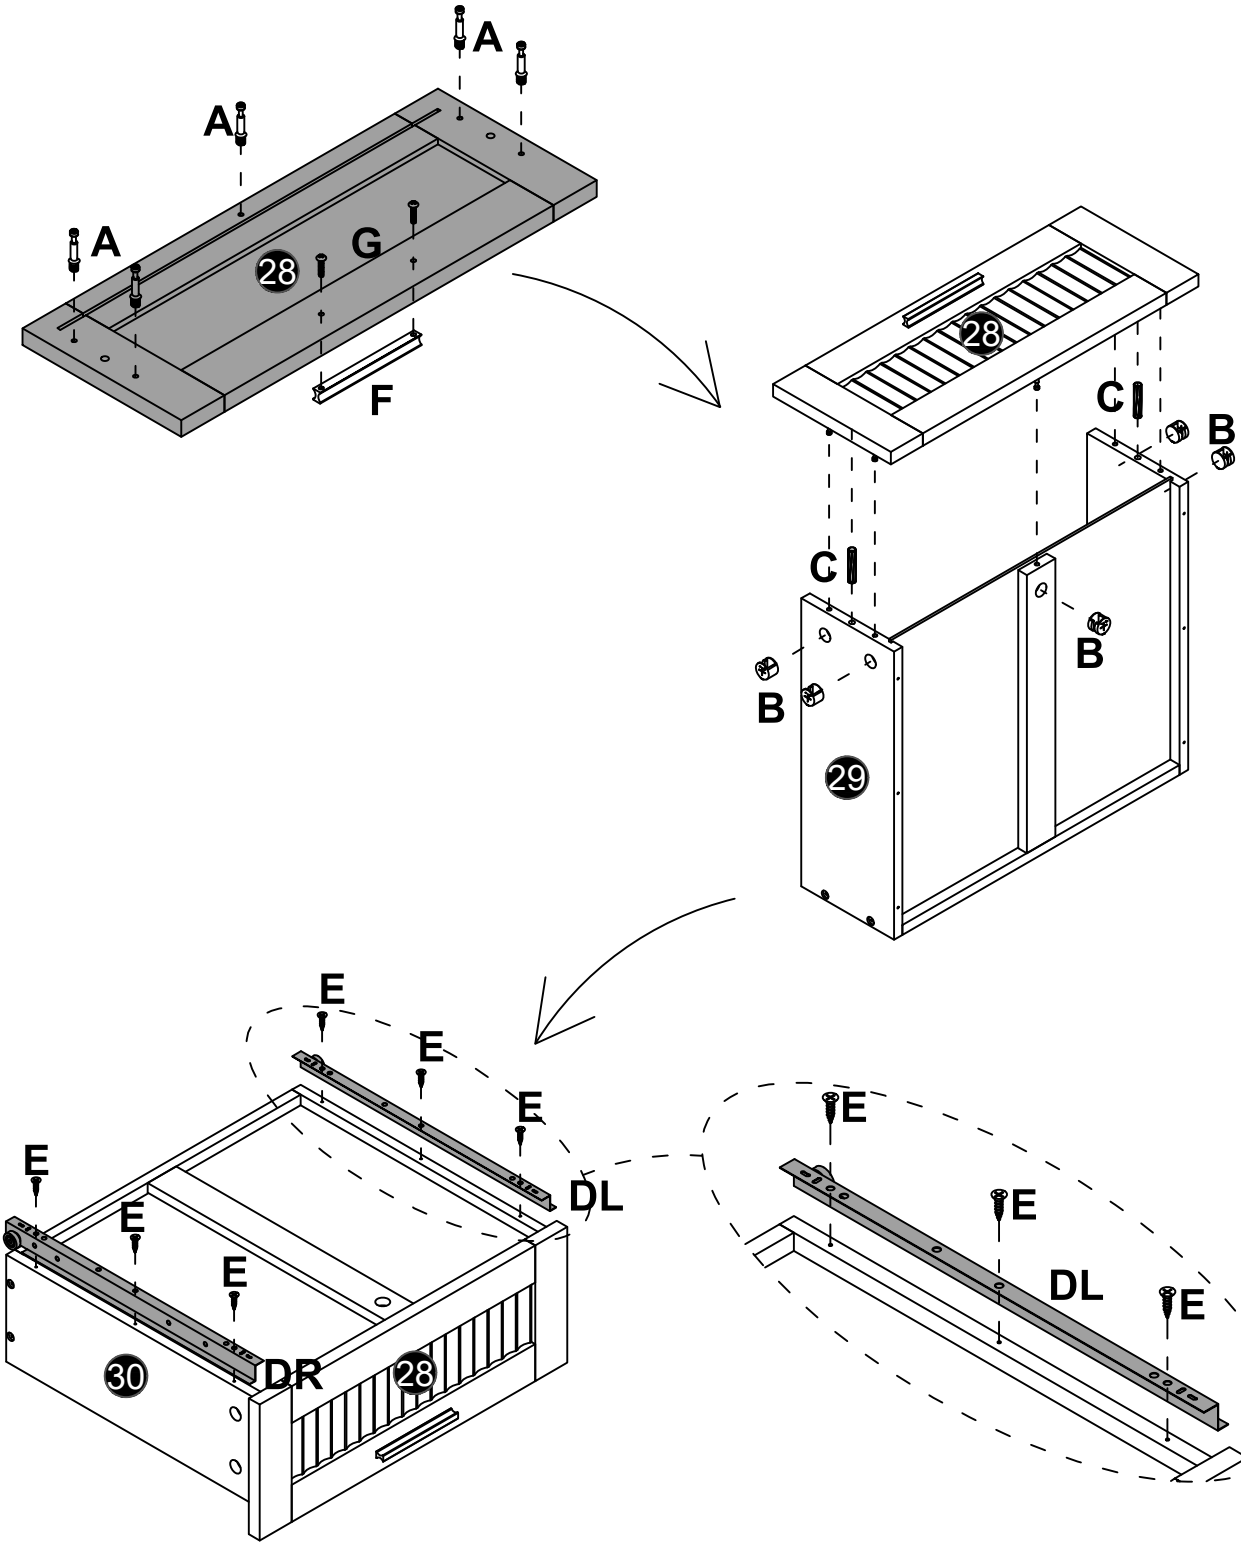
x3

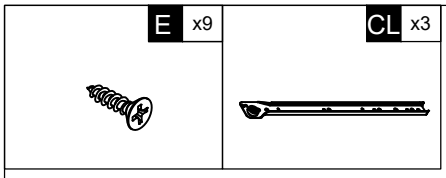


x3

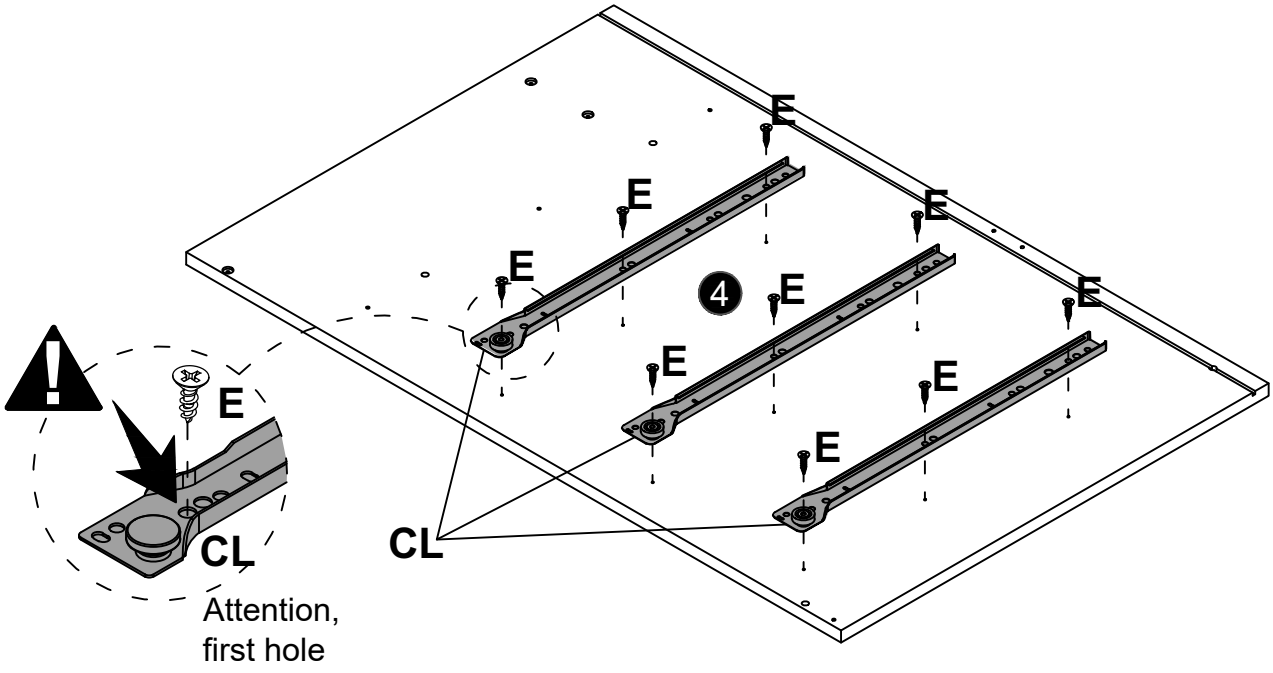
A x15	B x15	C x6	E x18	F x3
				

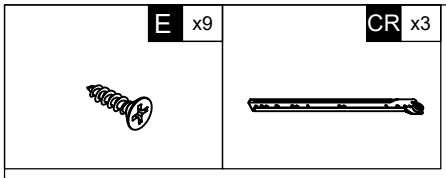
G x6	DL x3	DR x3
		



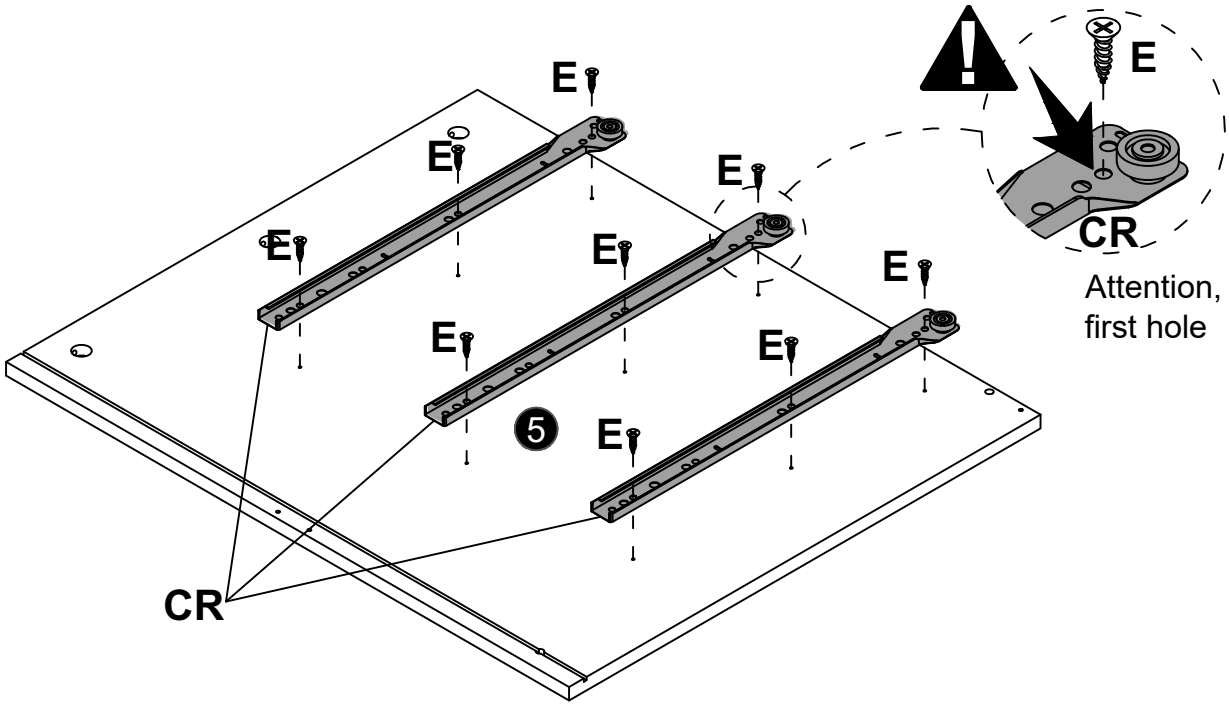

E x9
CL x3

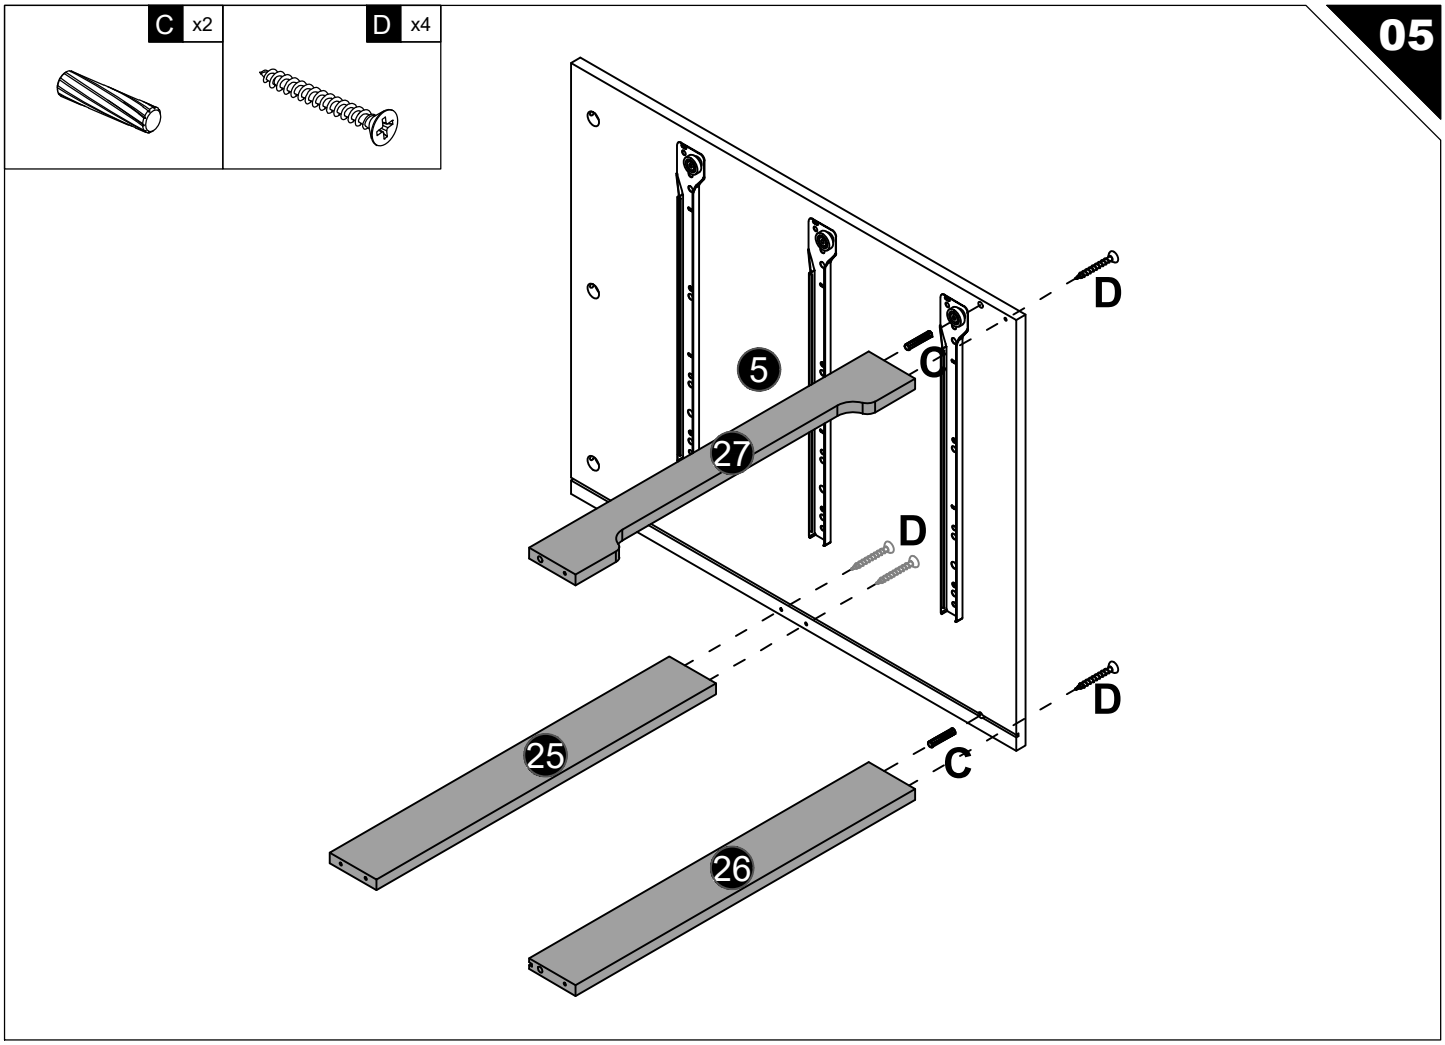
03

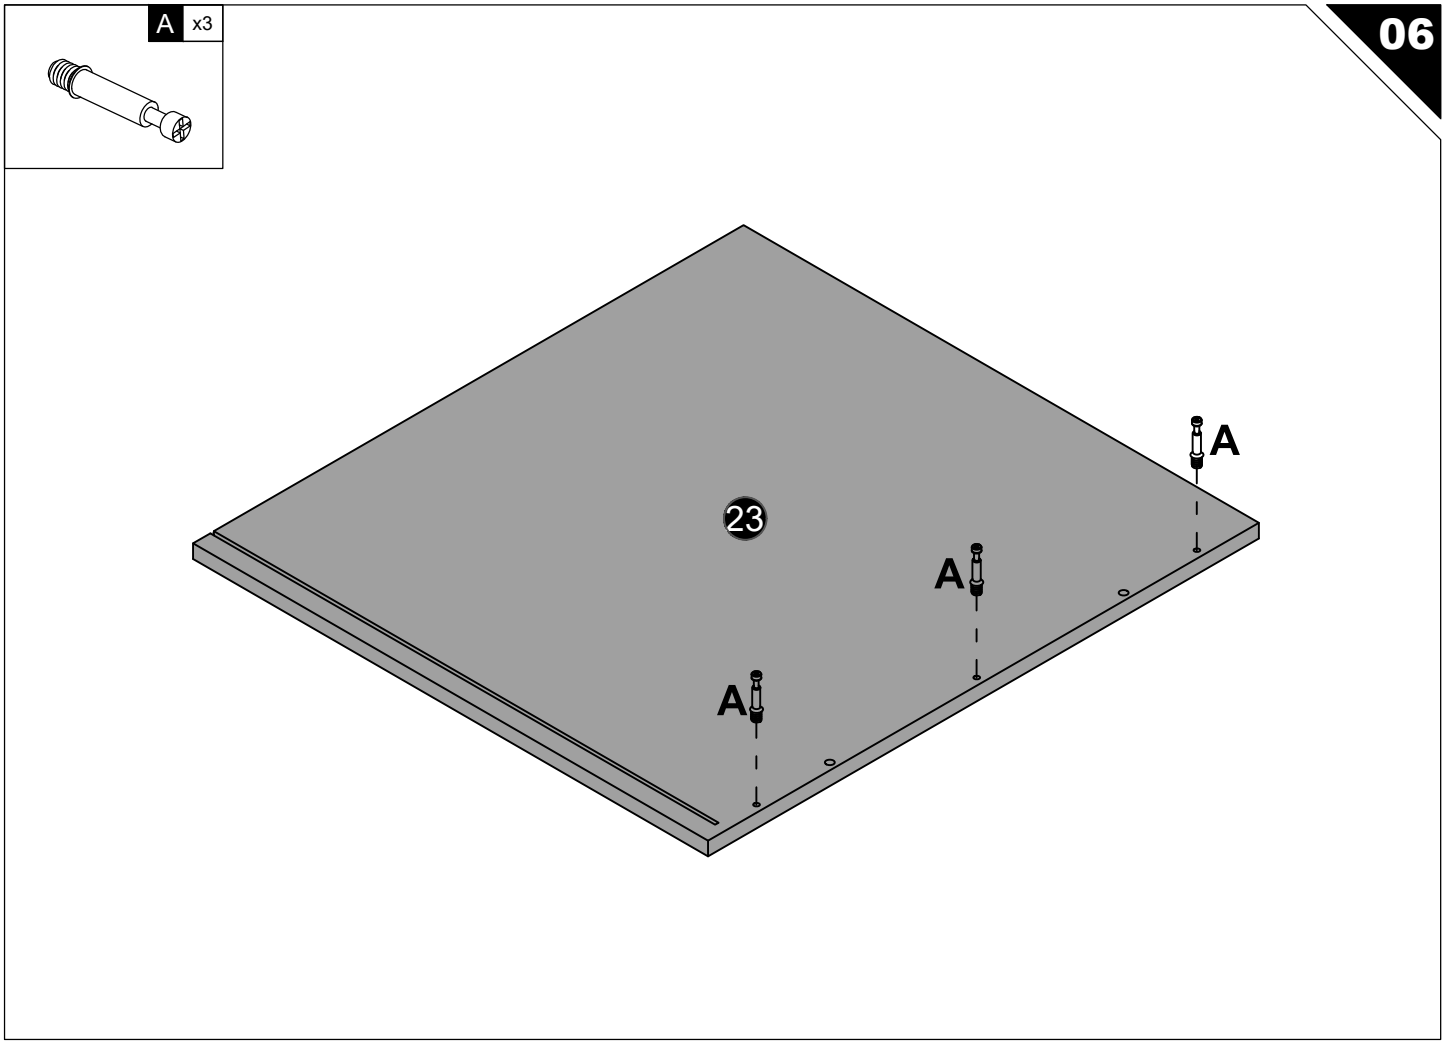

E
E
E
E
4
E
E
E
E
E
E
CL
CL
Attention,
first hole

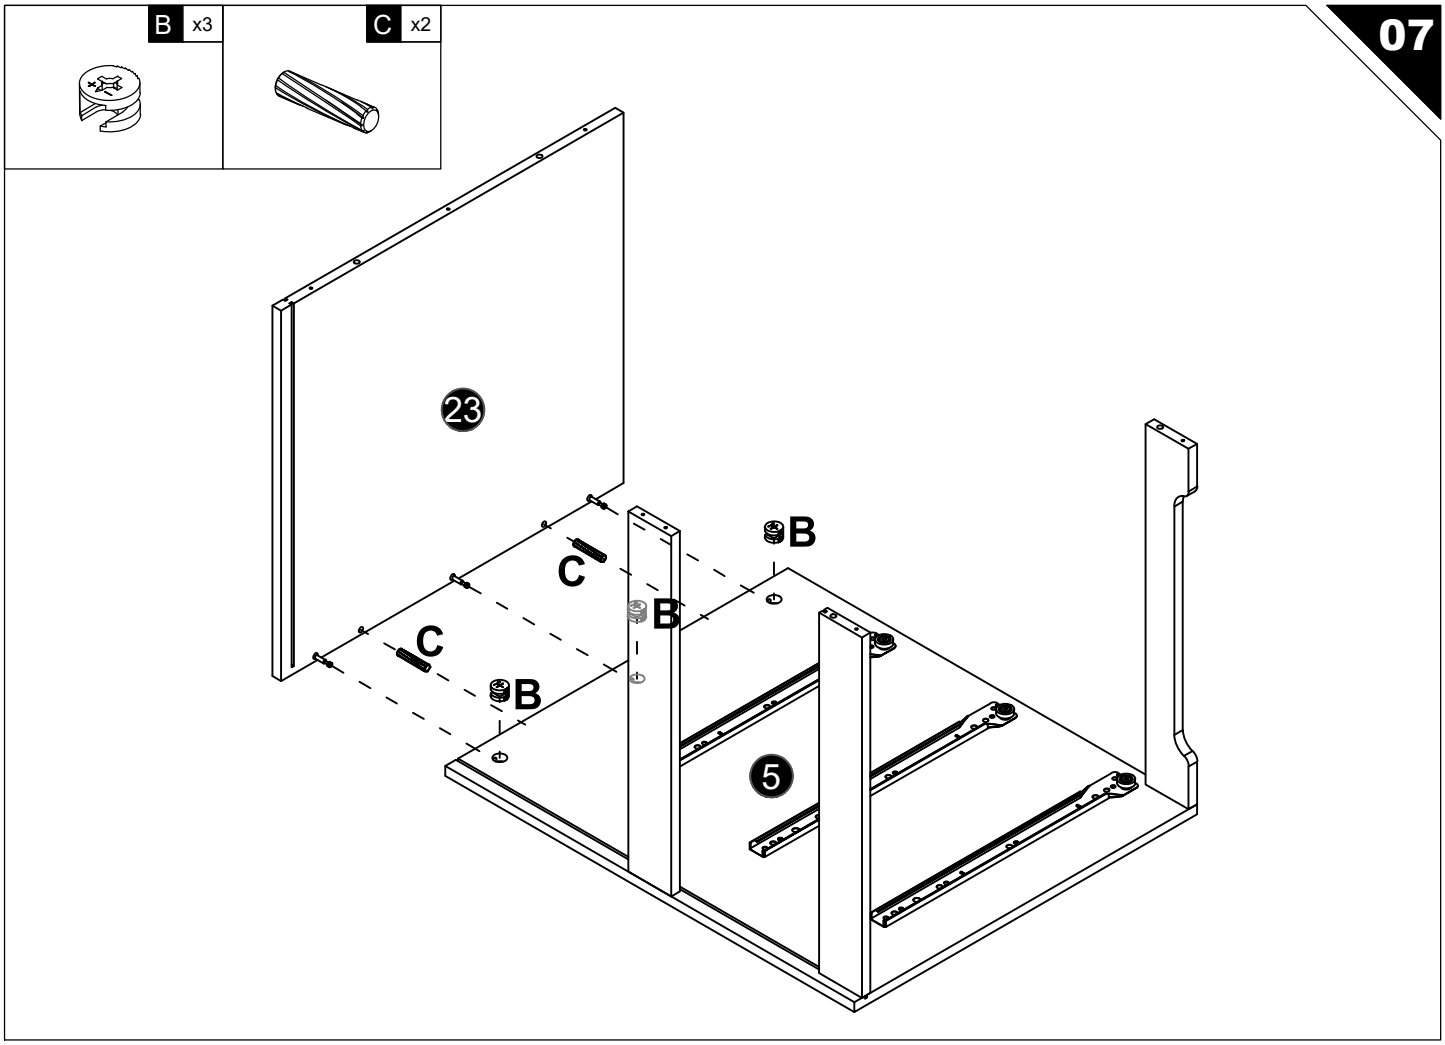

E x9
CR x3

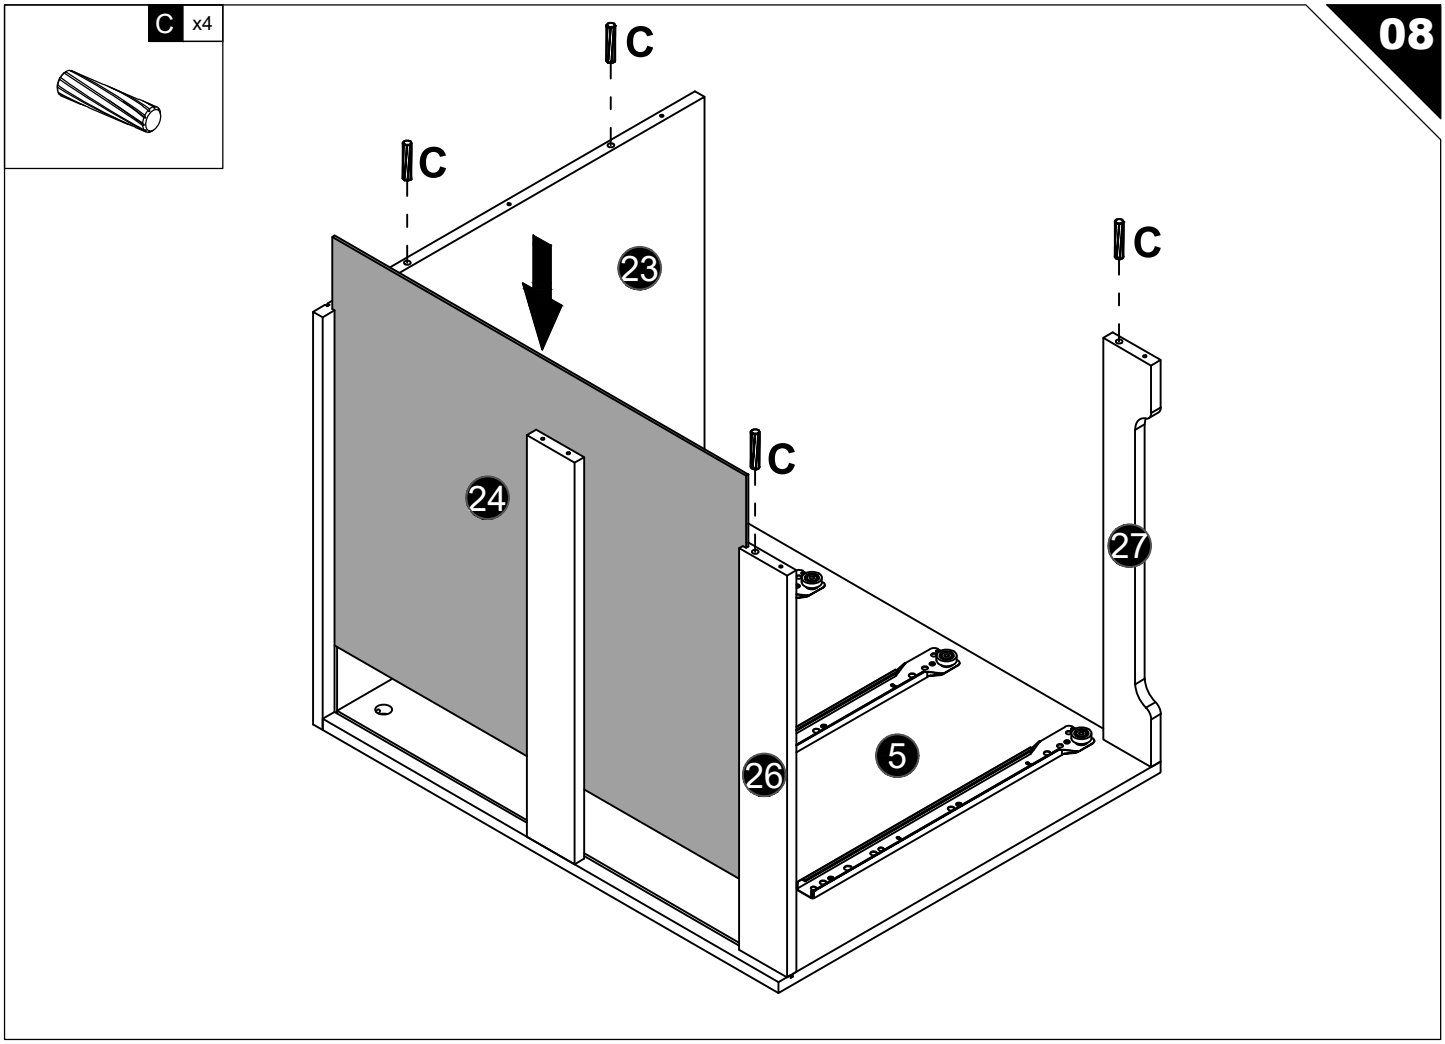
04


E
E
E
E
E
E
E
E
E
5
E
CR
E
CR
Attention,
first hole



C x2
D x4
05
D
5
C
27
D
D
25
C
26


A x3
06
A
23
A
A

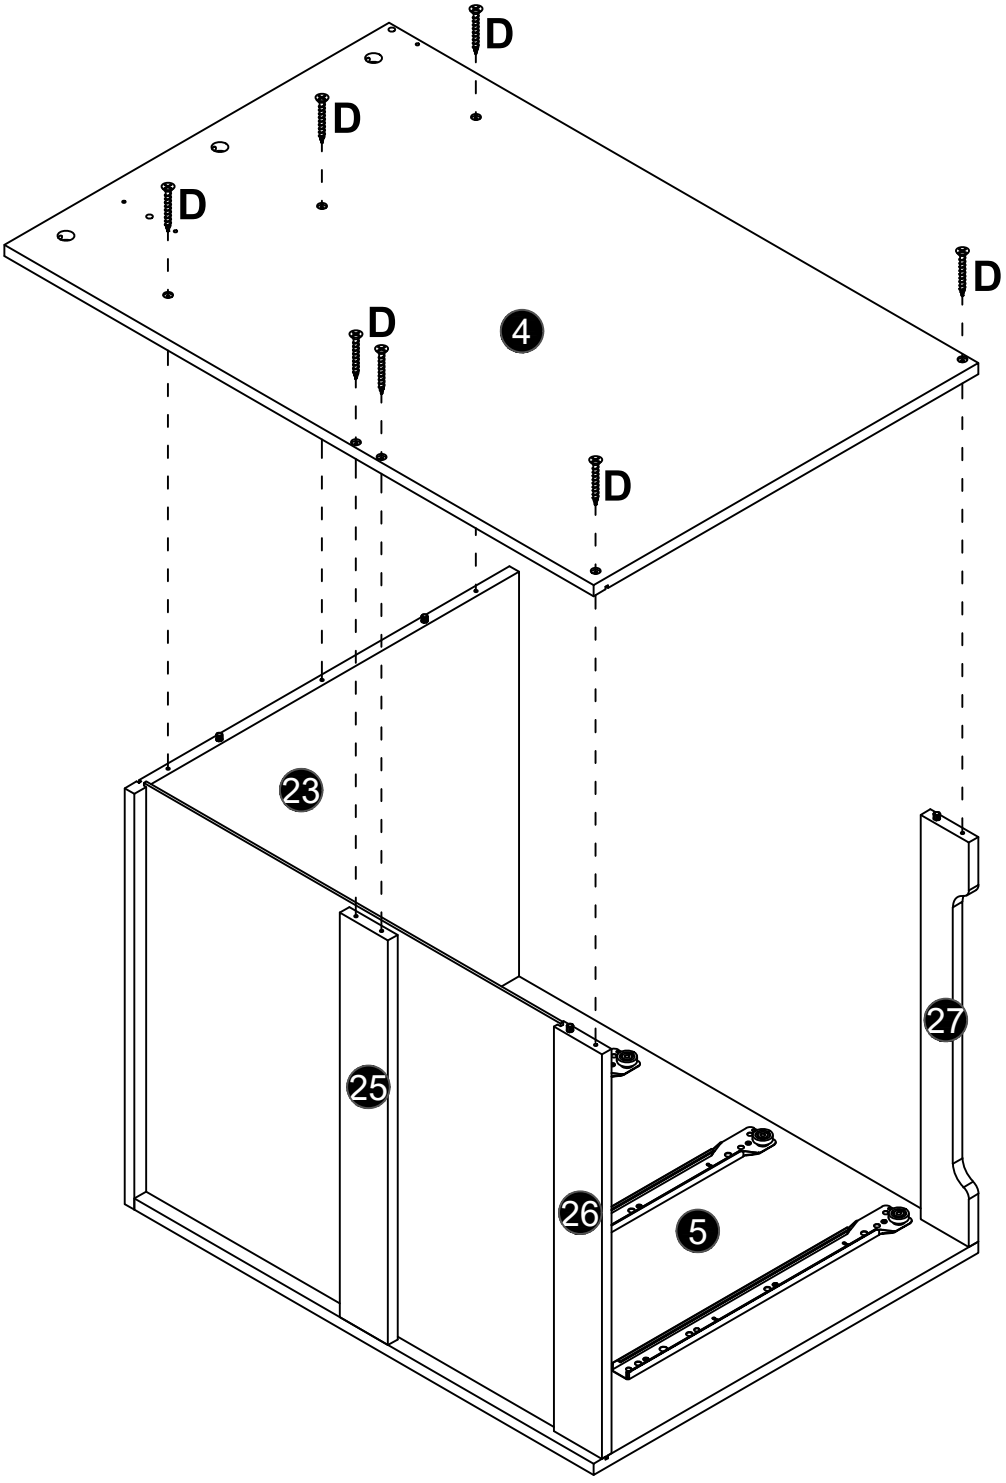

B x3
C x2
07
23
B
C
C
B
B
5

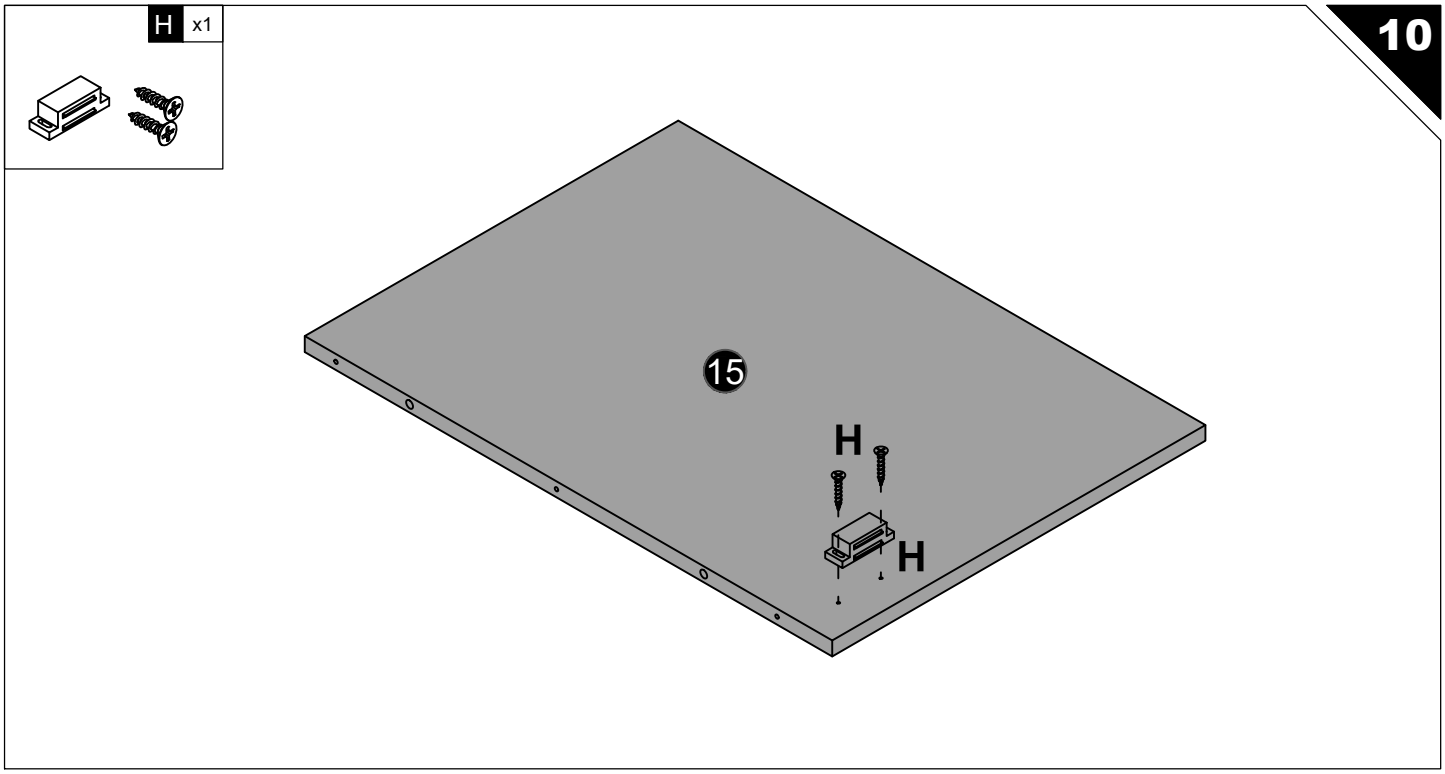

C x4
08
C
C
C
23
C
24
27
26
5

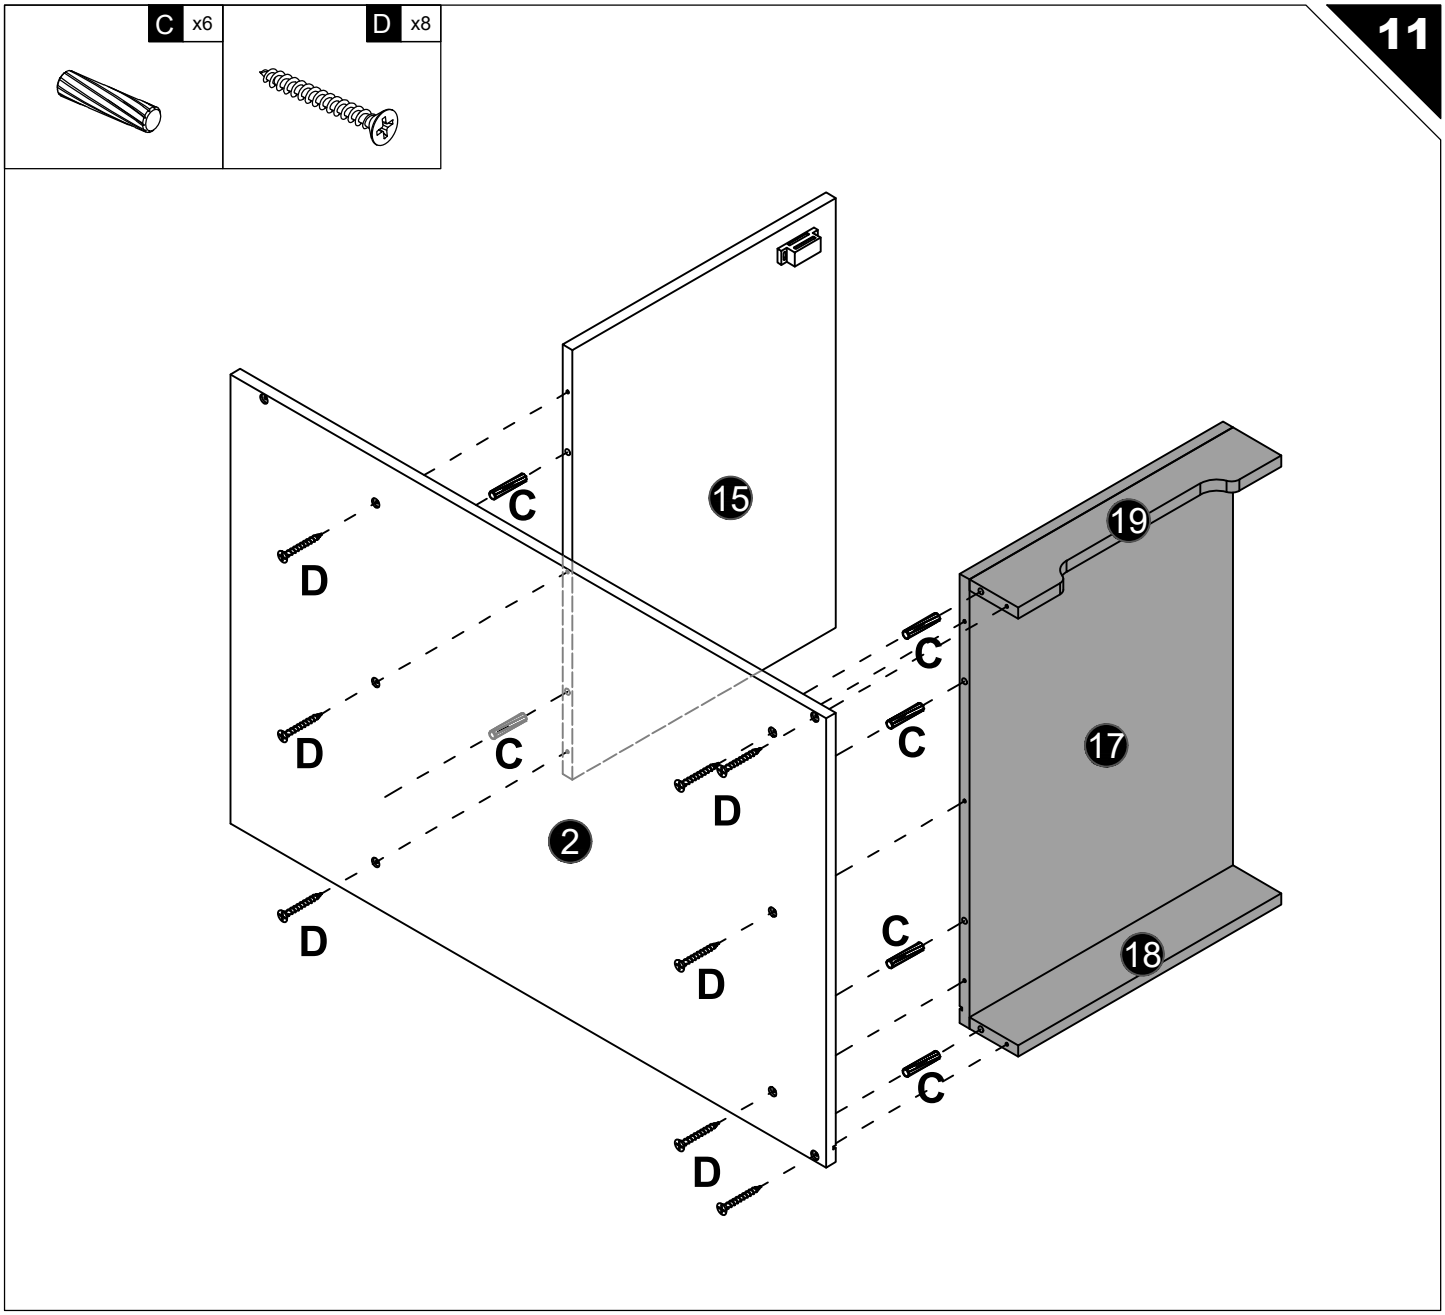
D x7

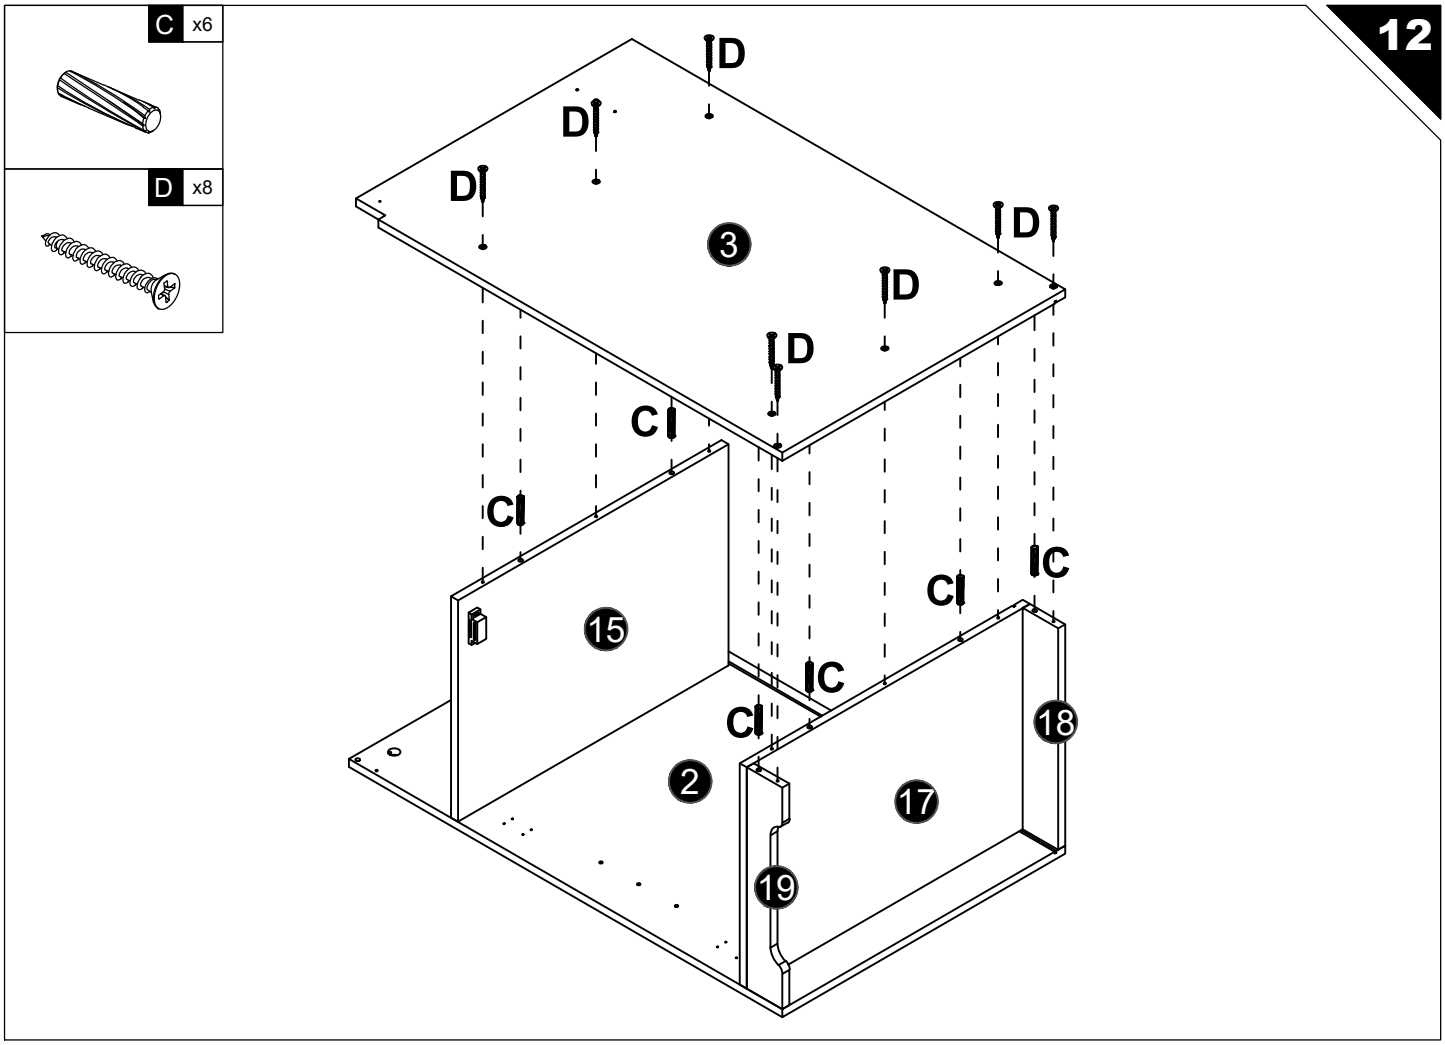


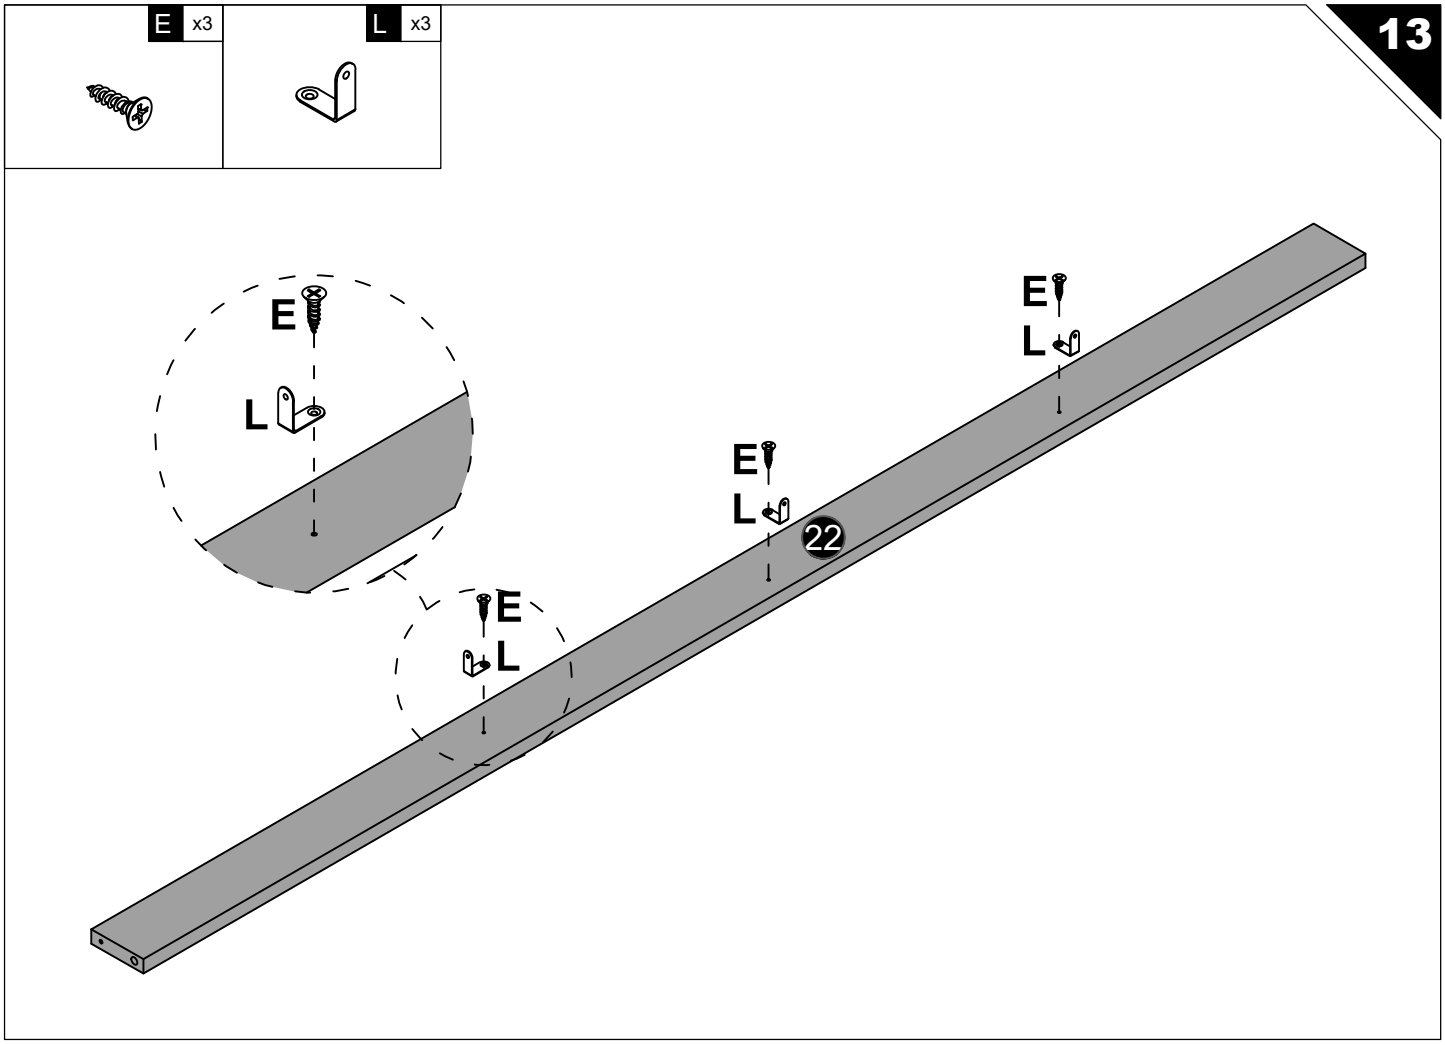
09

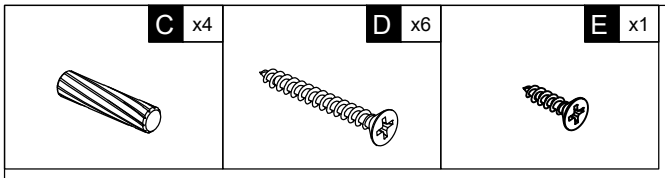


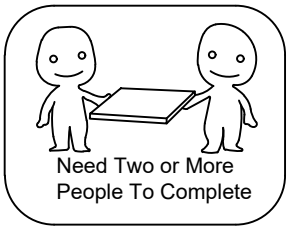

H x1
10
15
H
H

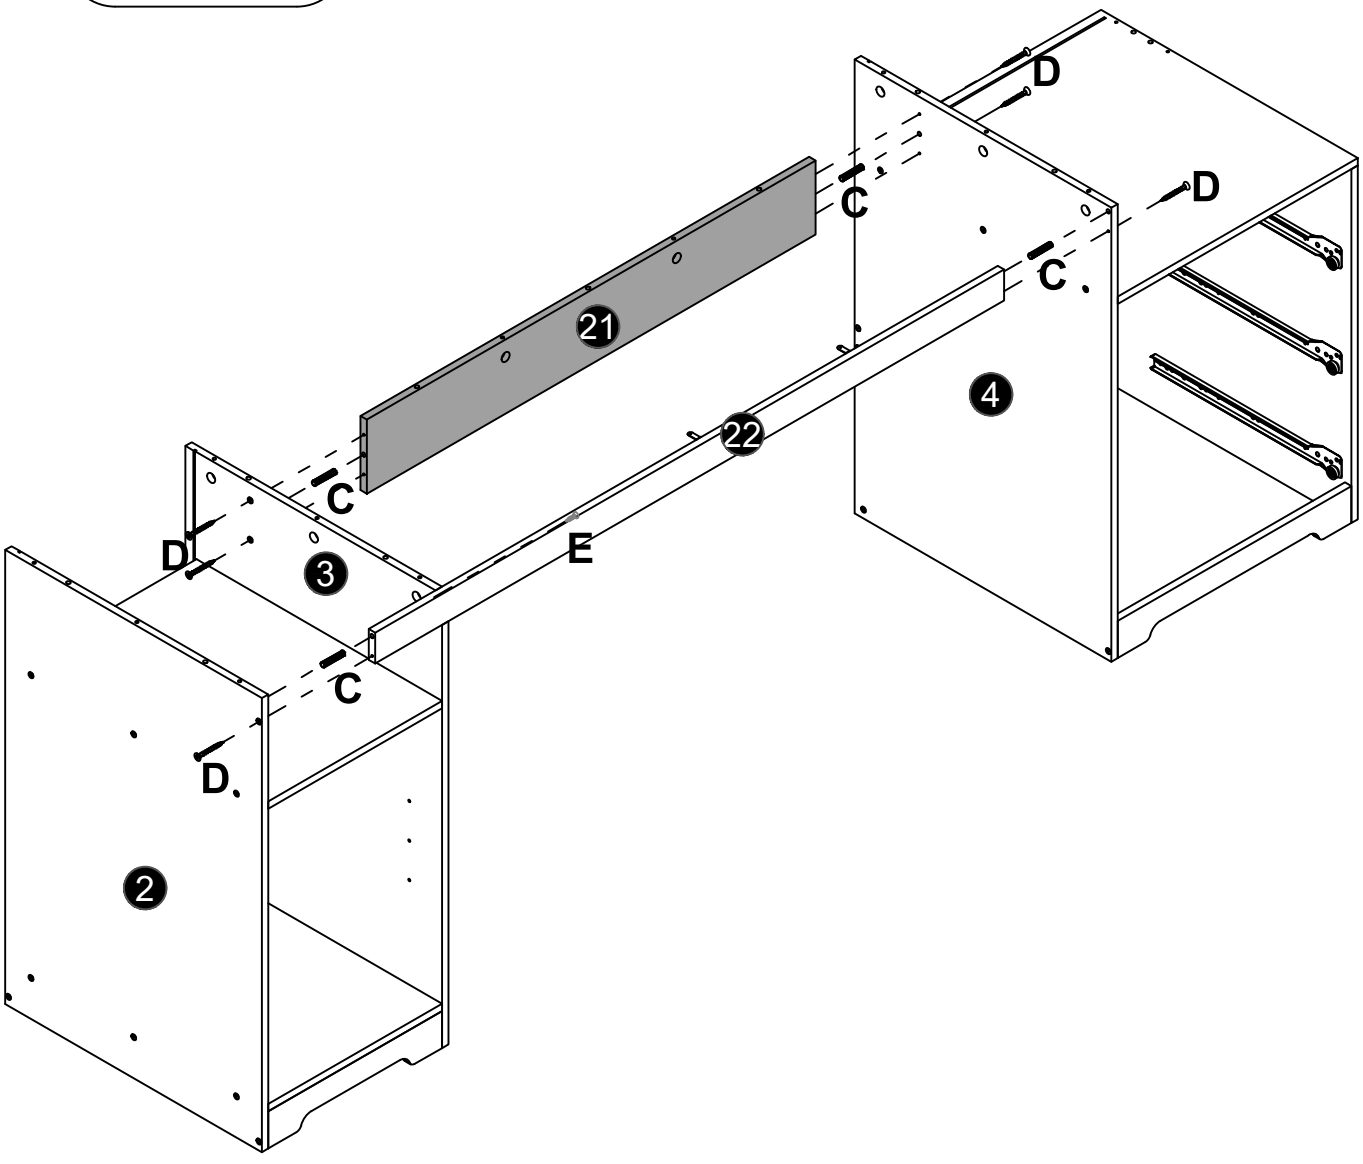

C x6
D x8
11
15
C
D
D
C
D
2
D
D
C
C
19
17
C
18
C
D


12
C x6
D x8
D
D
D
3
D
D
D
C
C
C
C
15
C
18
2
17
19



13
E x3
L x3
E
L
E
L
E
L
E
L
22
E
L

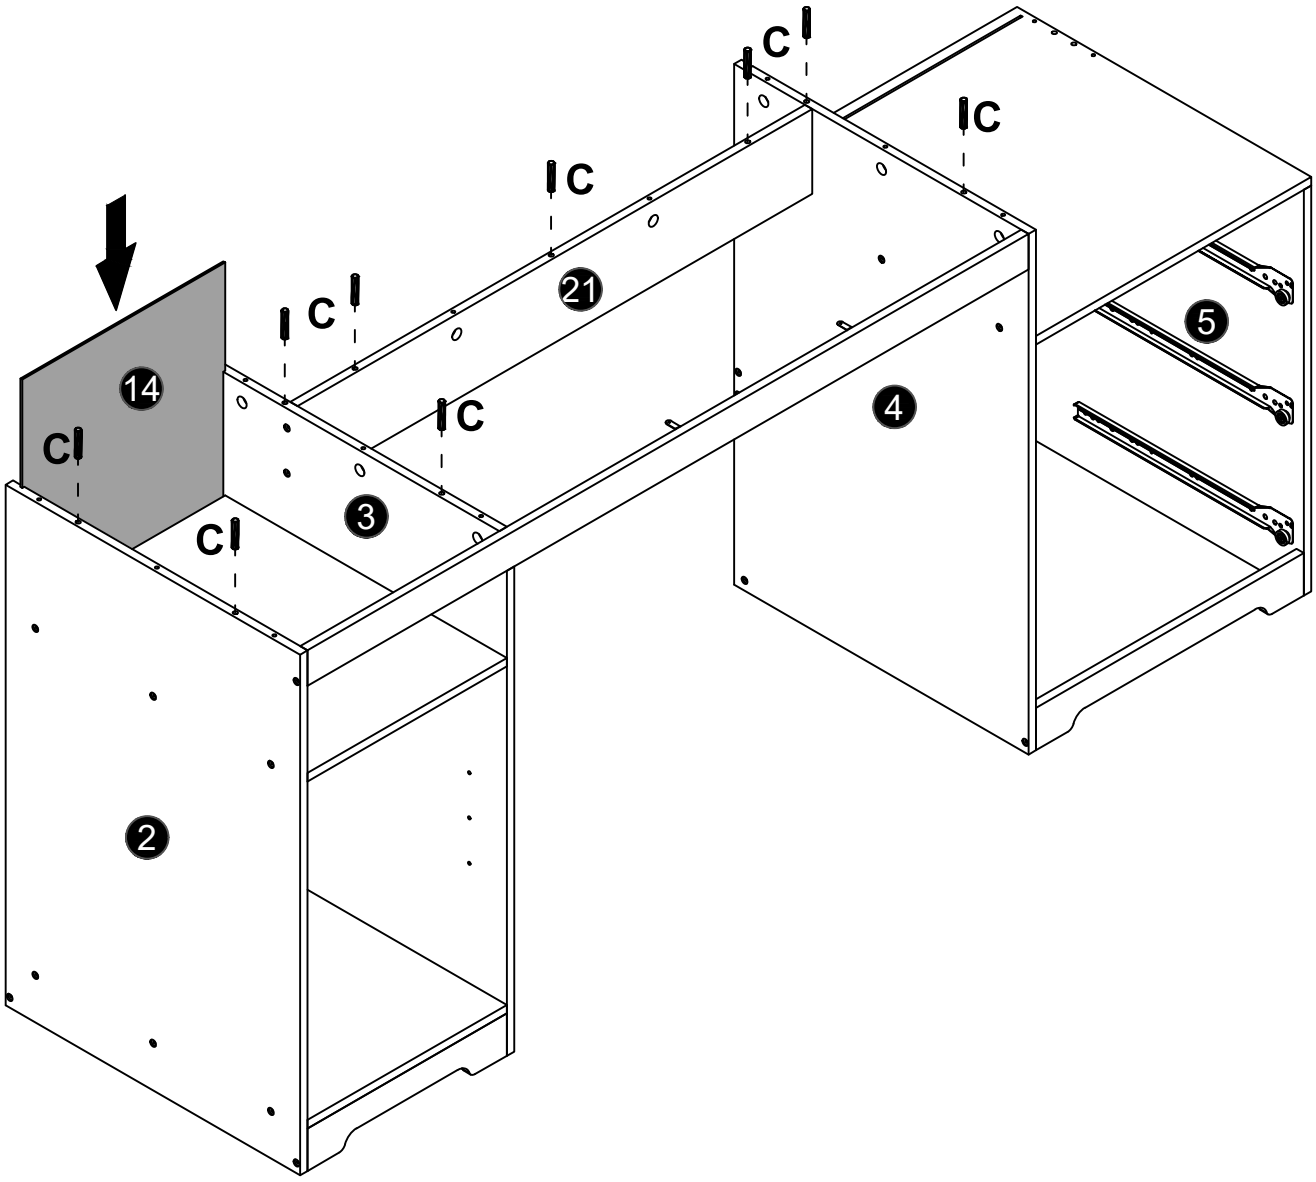

C x4
D x6
E x1

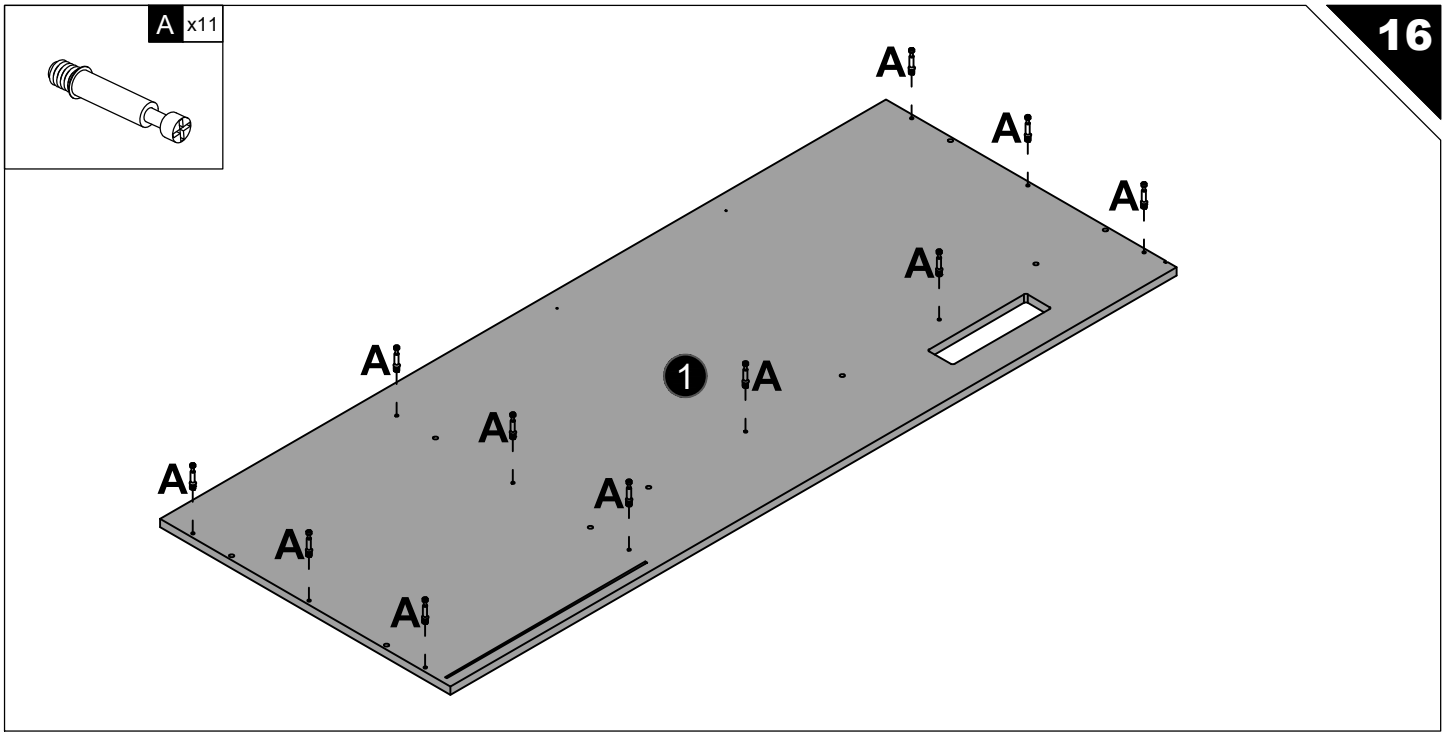

Need Two or More
People To Complete

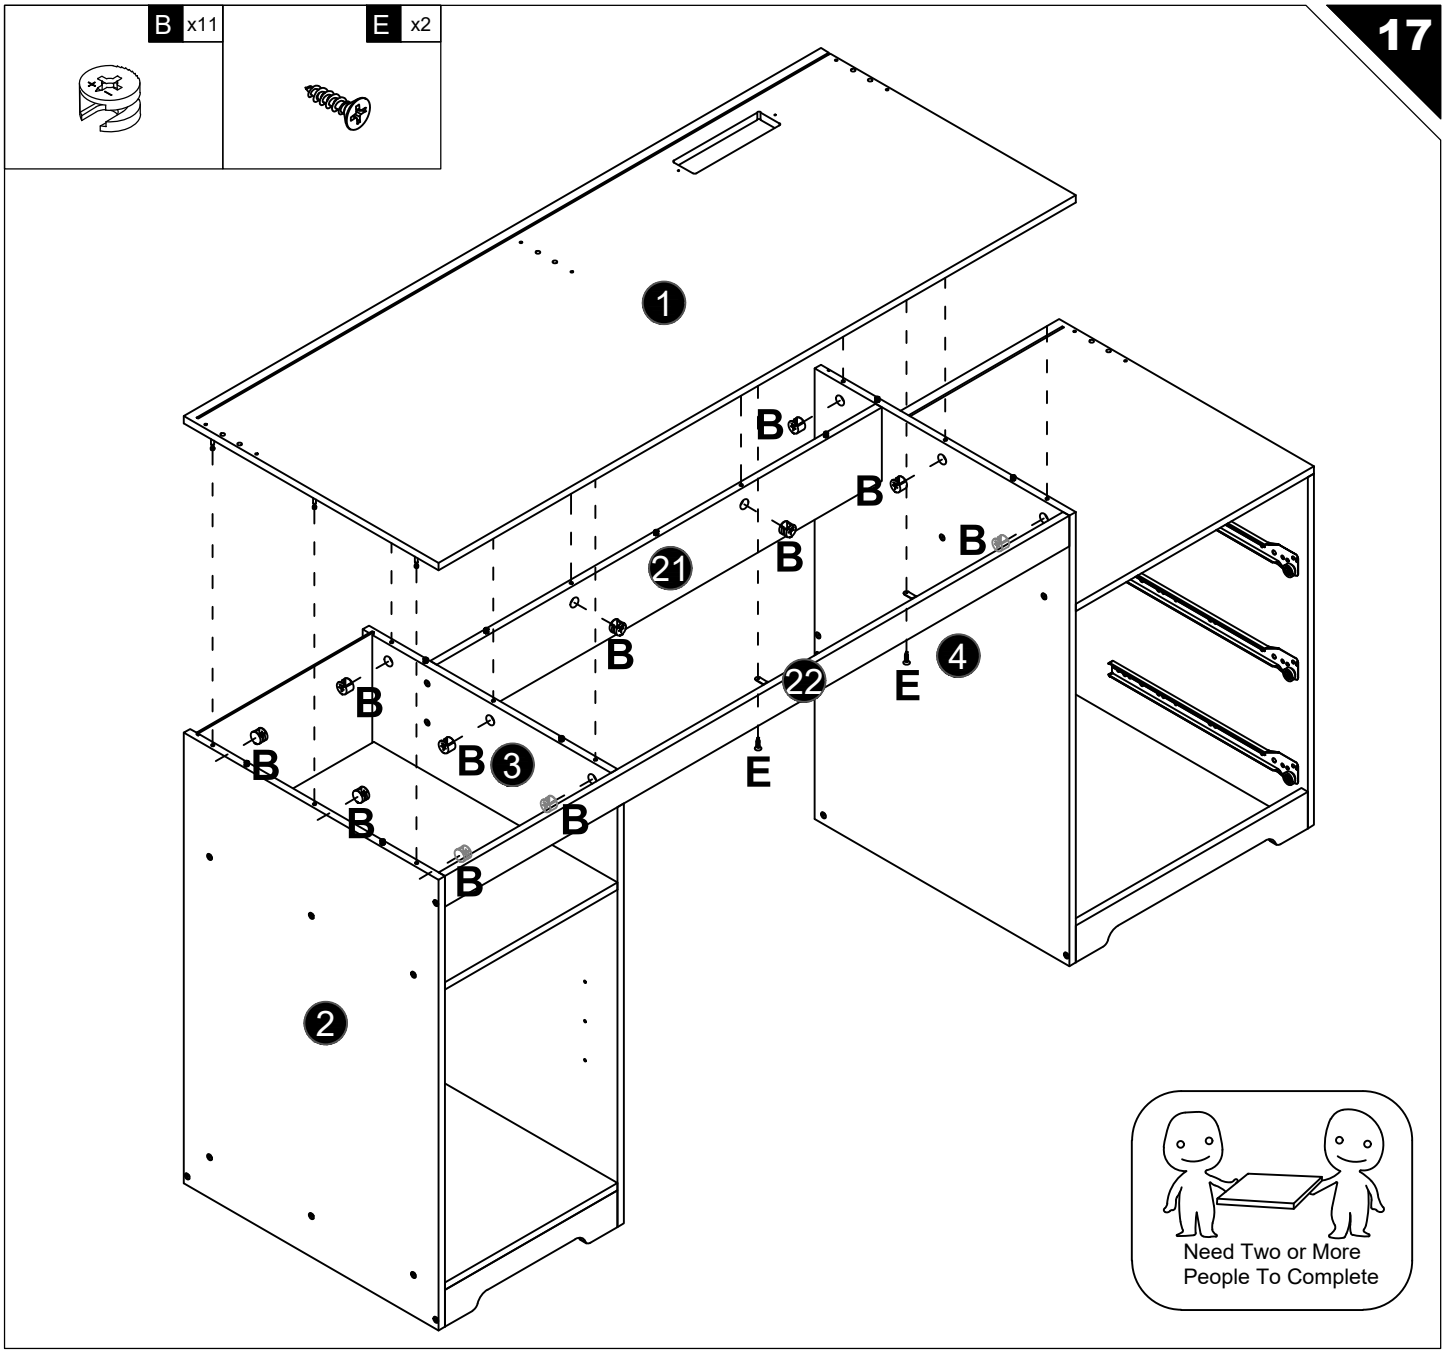

D
C
D
C
21
4
22
C
E
D
3
C
D
2



C x9

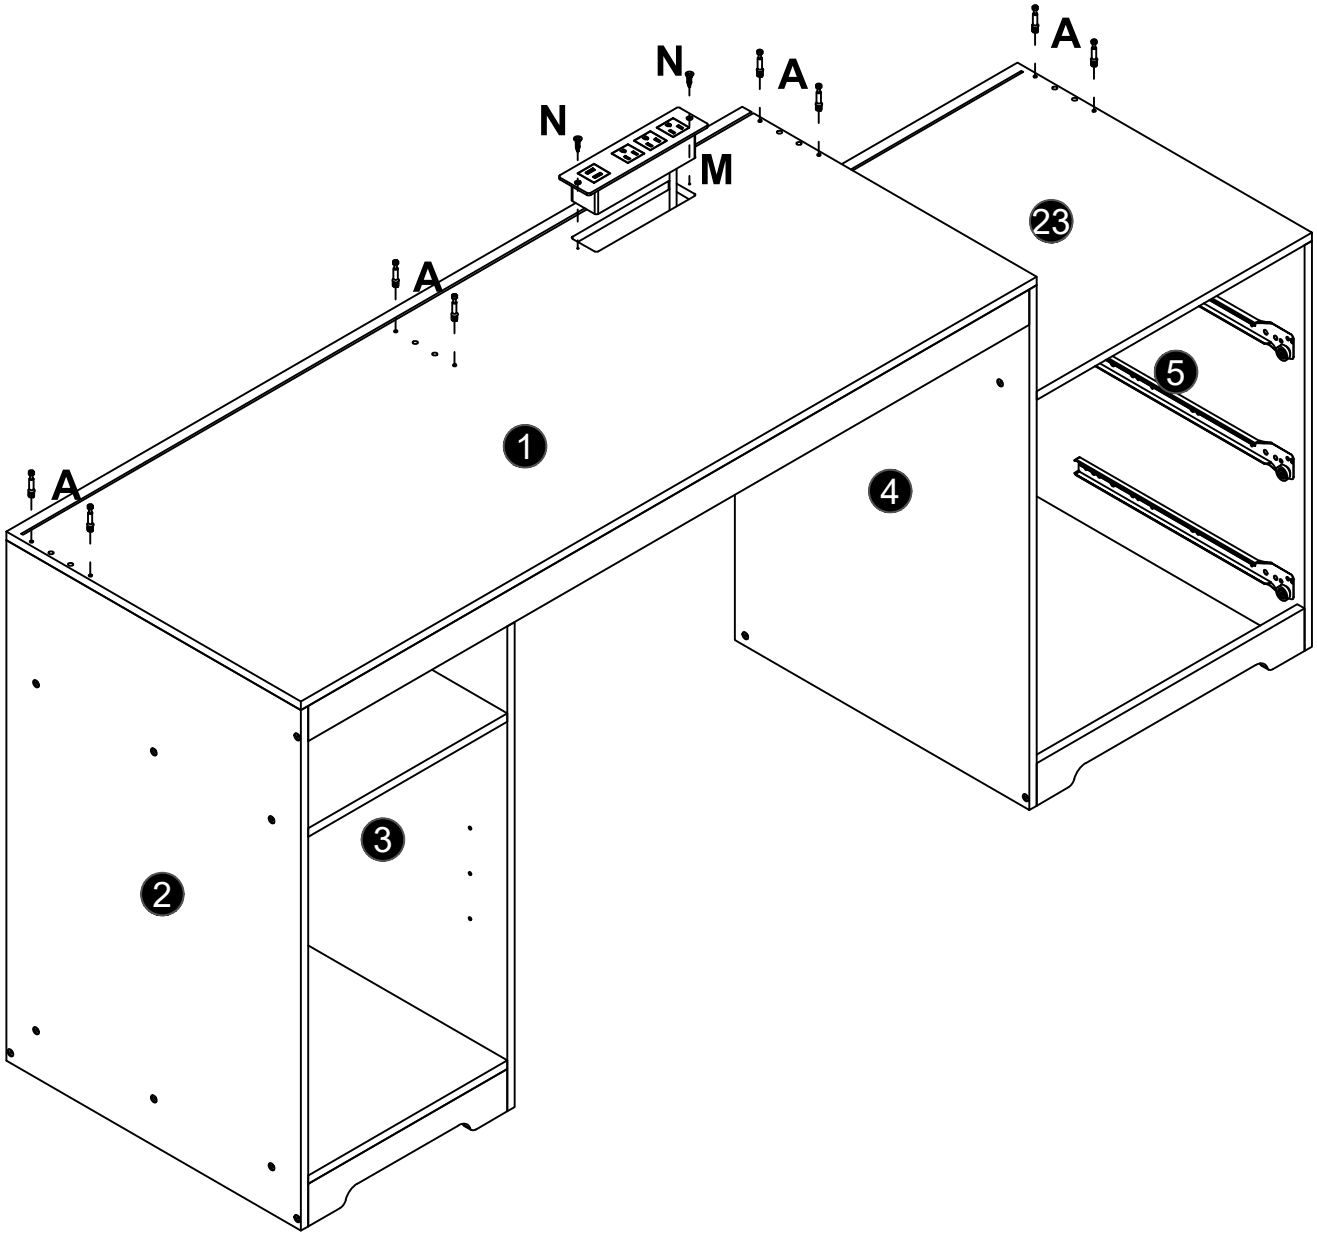


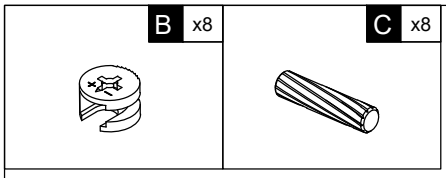


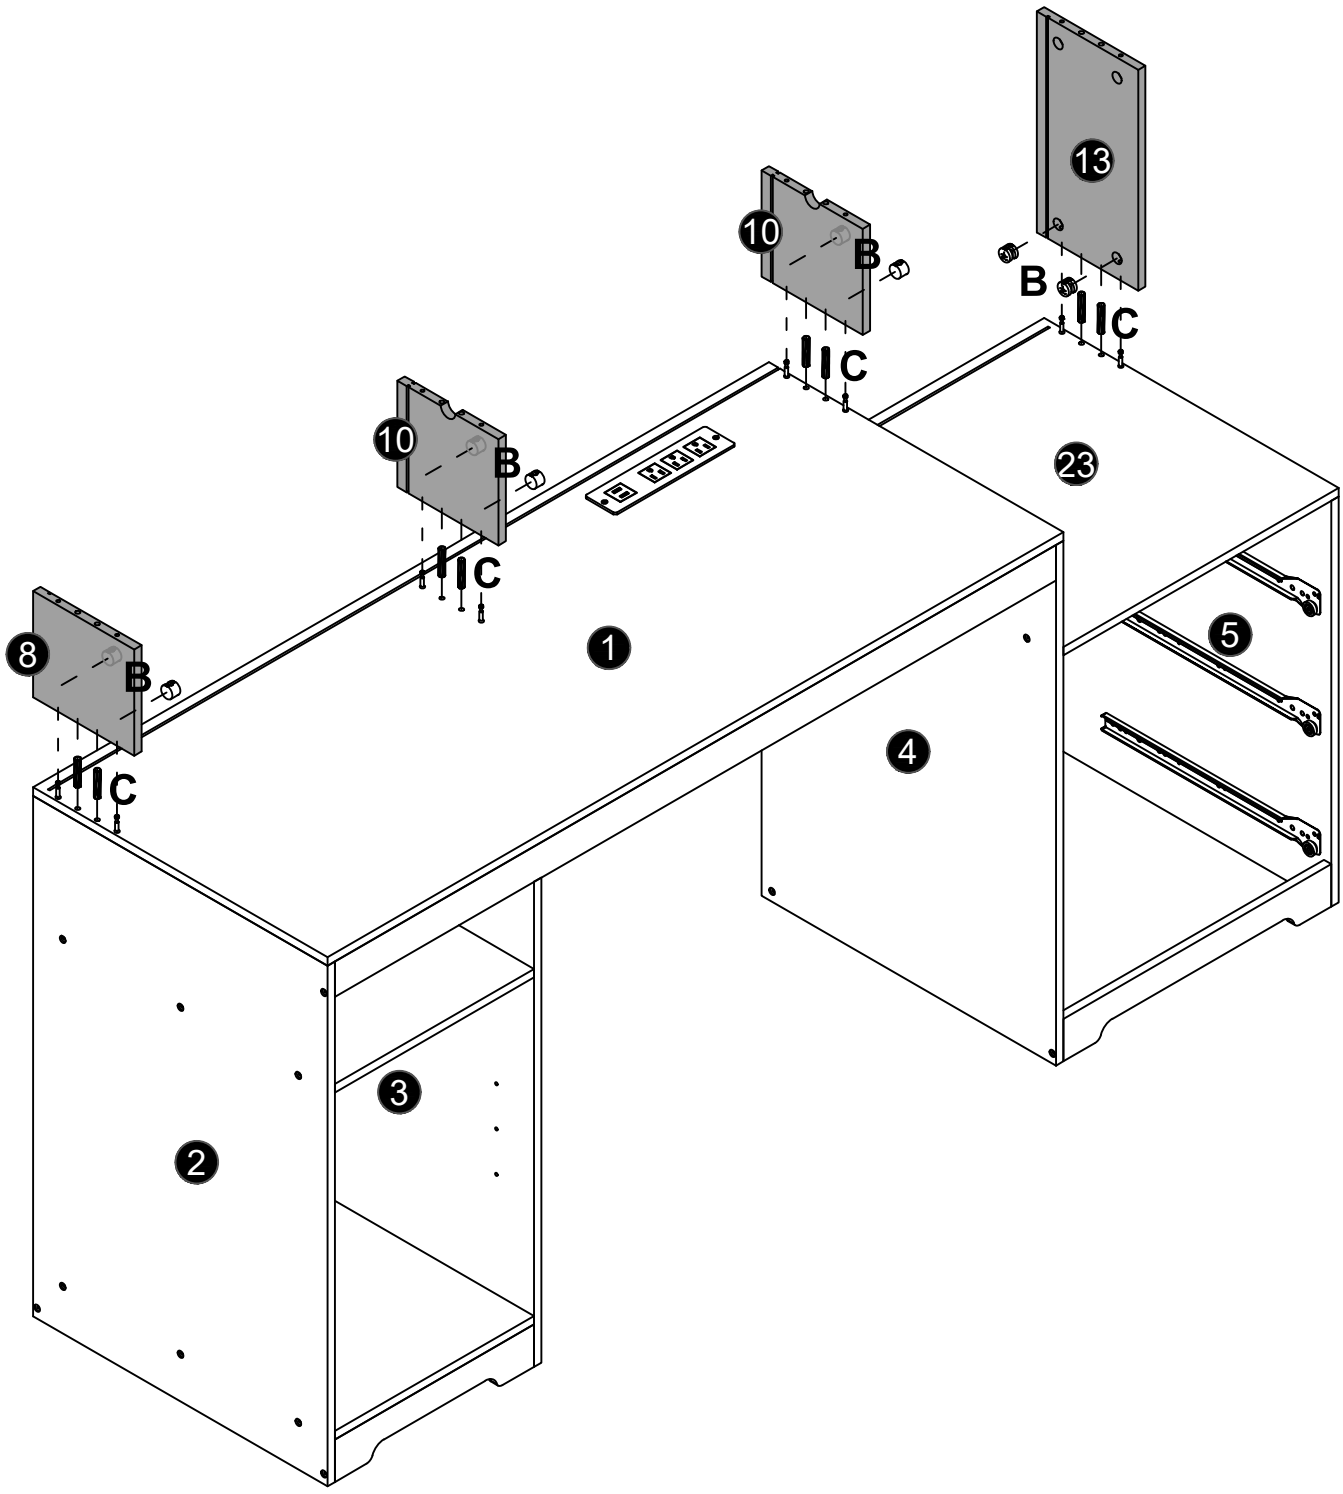

A x11
16
A
A
A
A
A
A
A
A
A
A
1

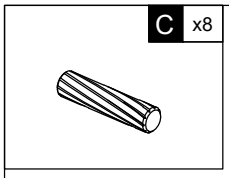

B x11
E x2
17
1
B
B
B
B
21
B
22
E
4
E
B
B
B
B
B
B
3
2
Need Two or More
People To Complete

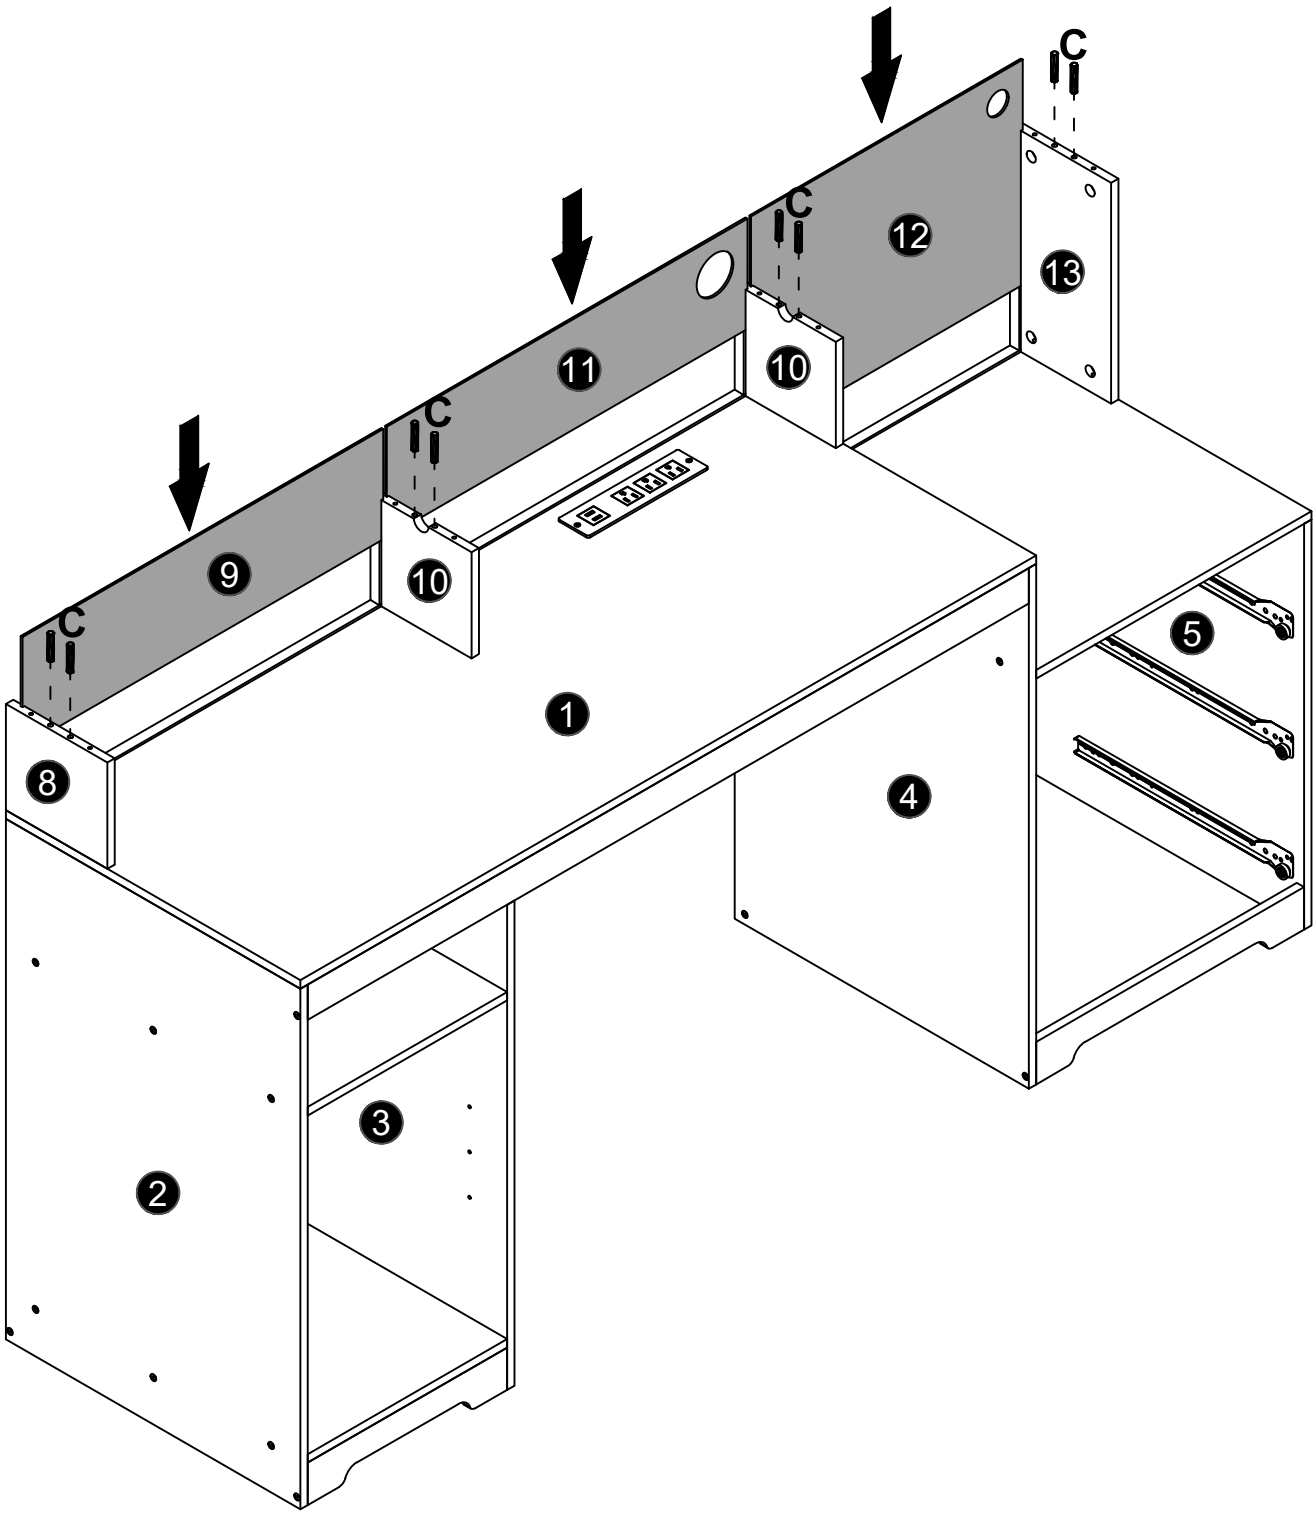
A x8	M x1	N x2
		




B x8
C x8



13
10
B
B
C
10
B
C
23
8
B
C
1
5
4
3
2

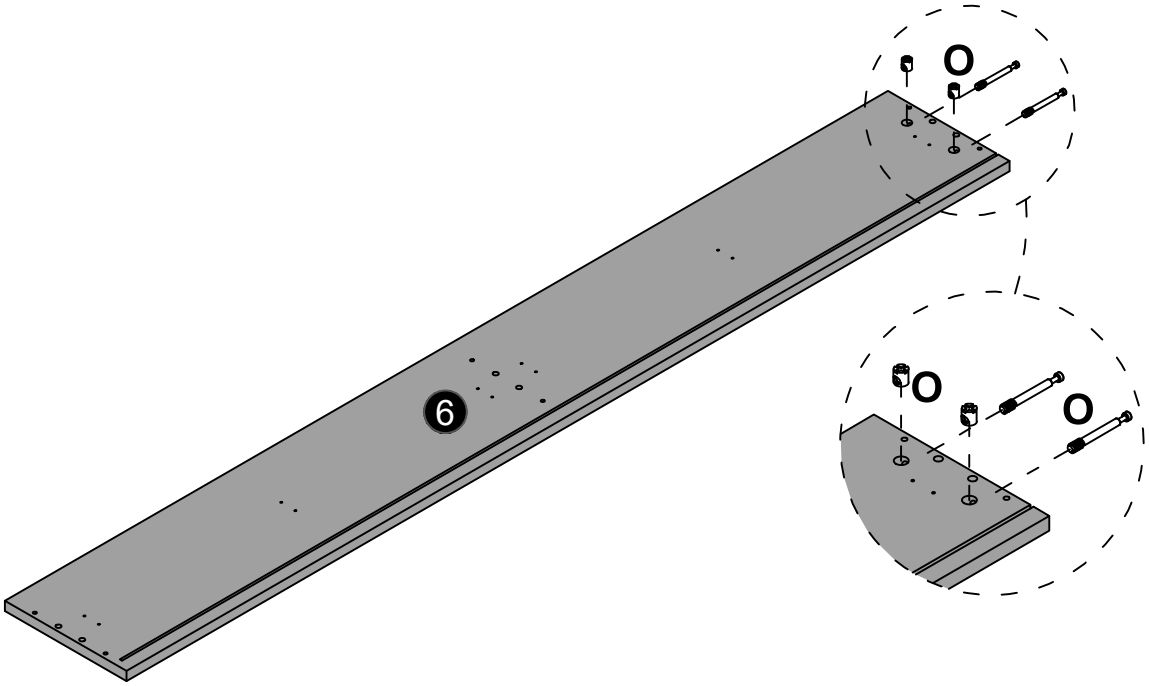

C x8


C
C
C
C
1
2
3
4
5
8
9
10
10
11
12
13

21

O x2






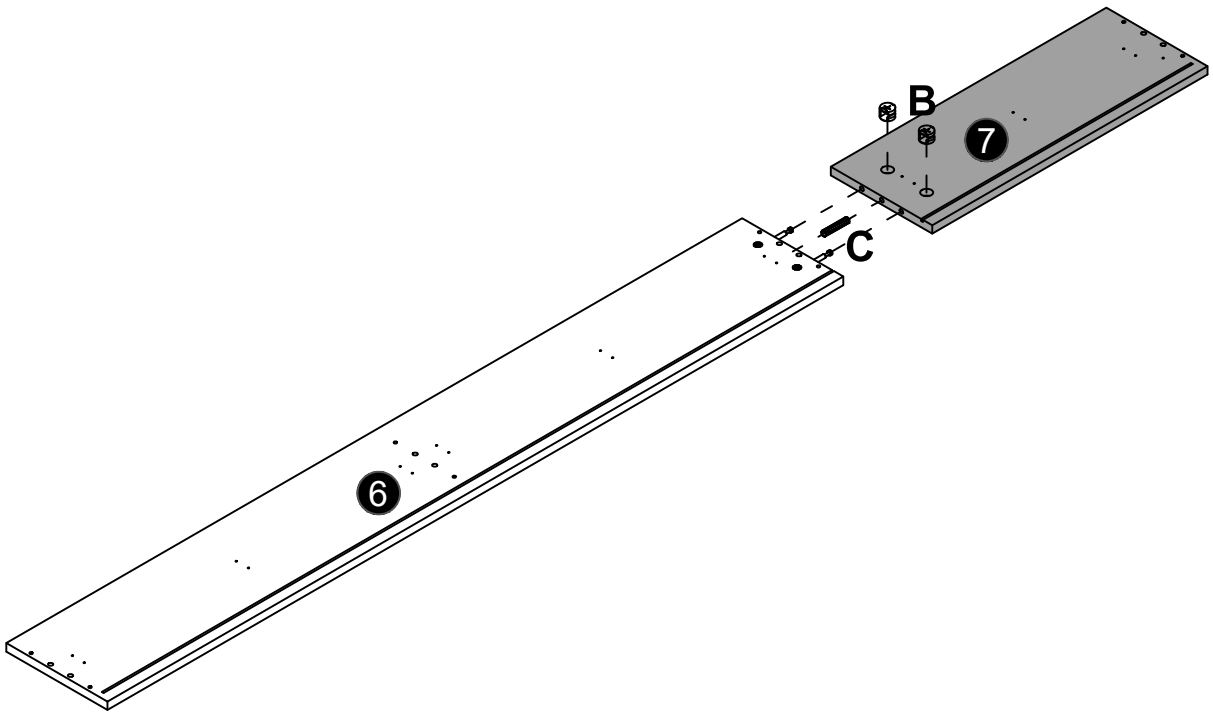
22

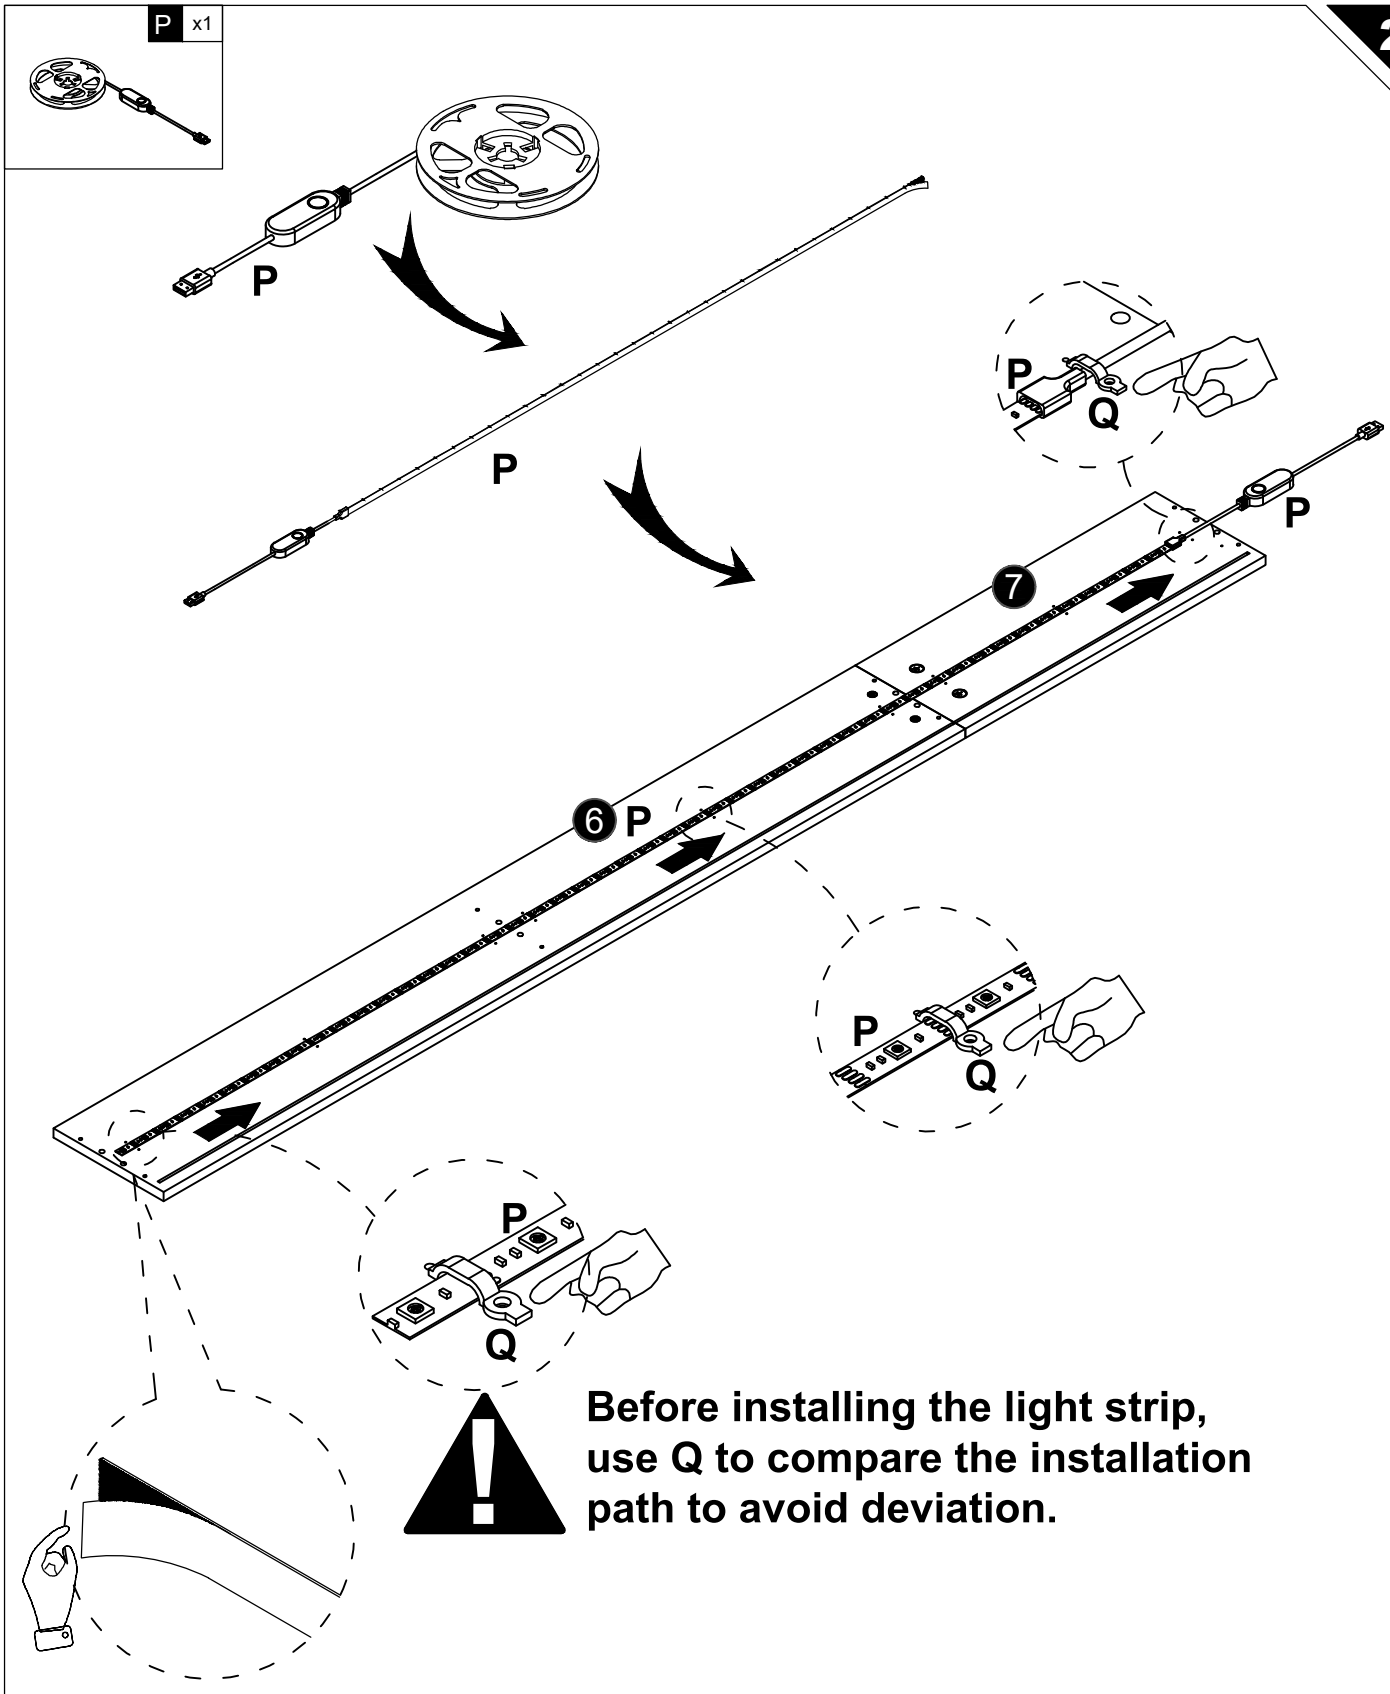
B x2



C x1

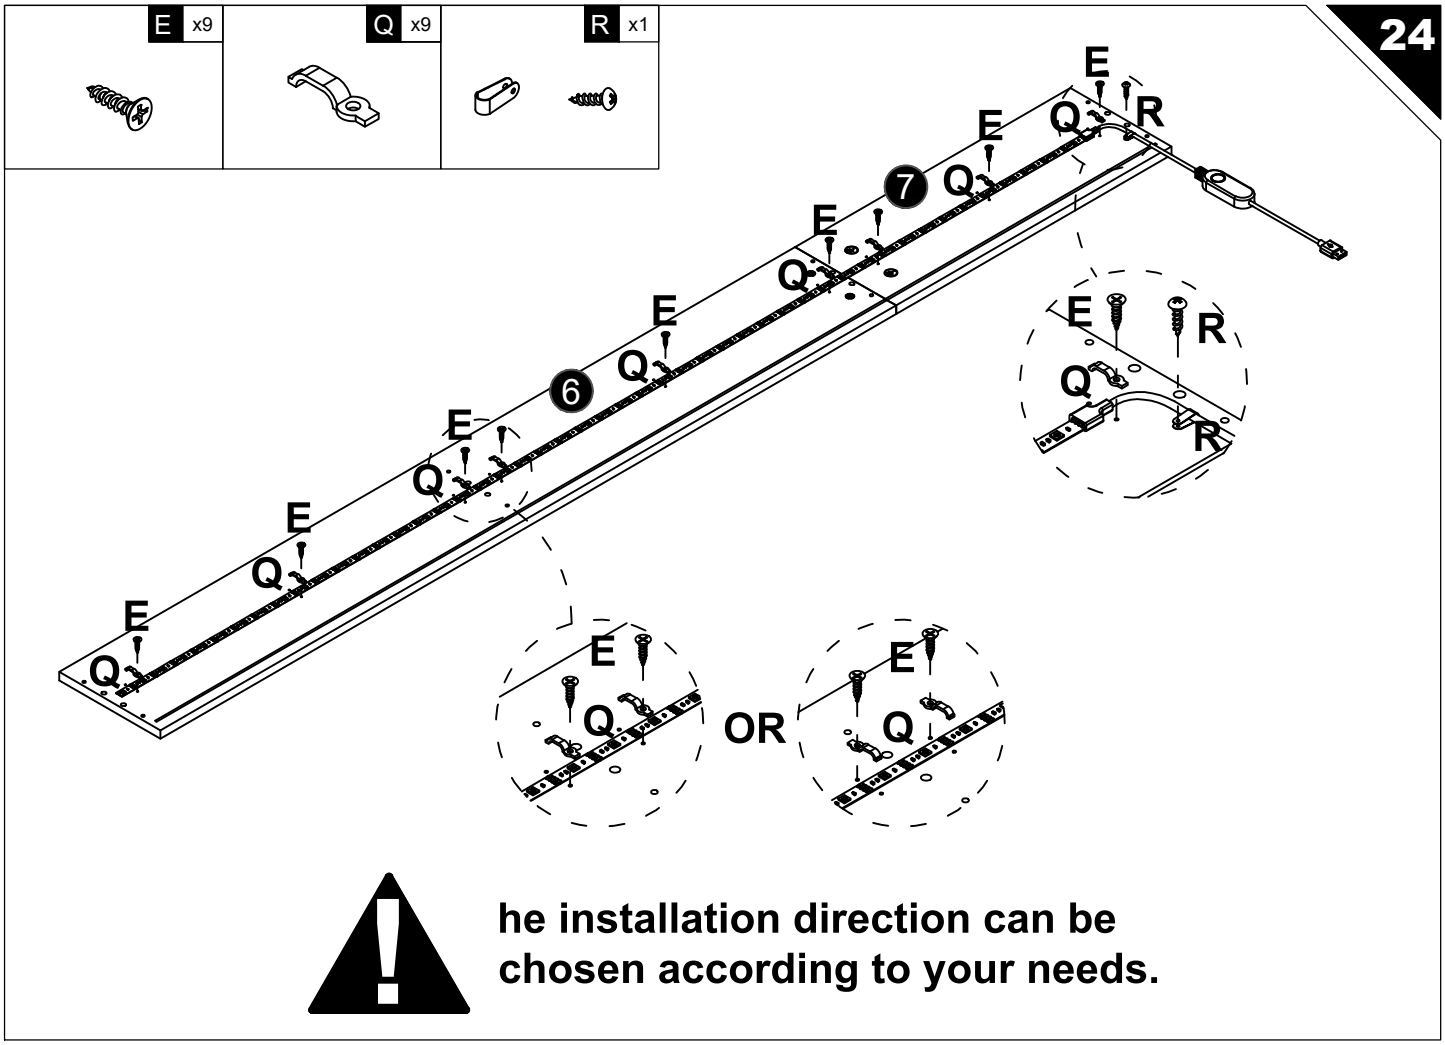


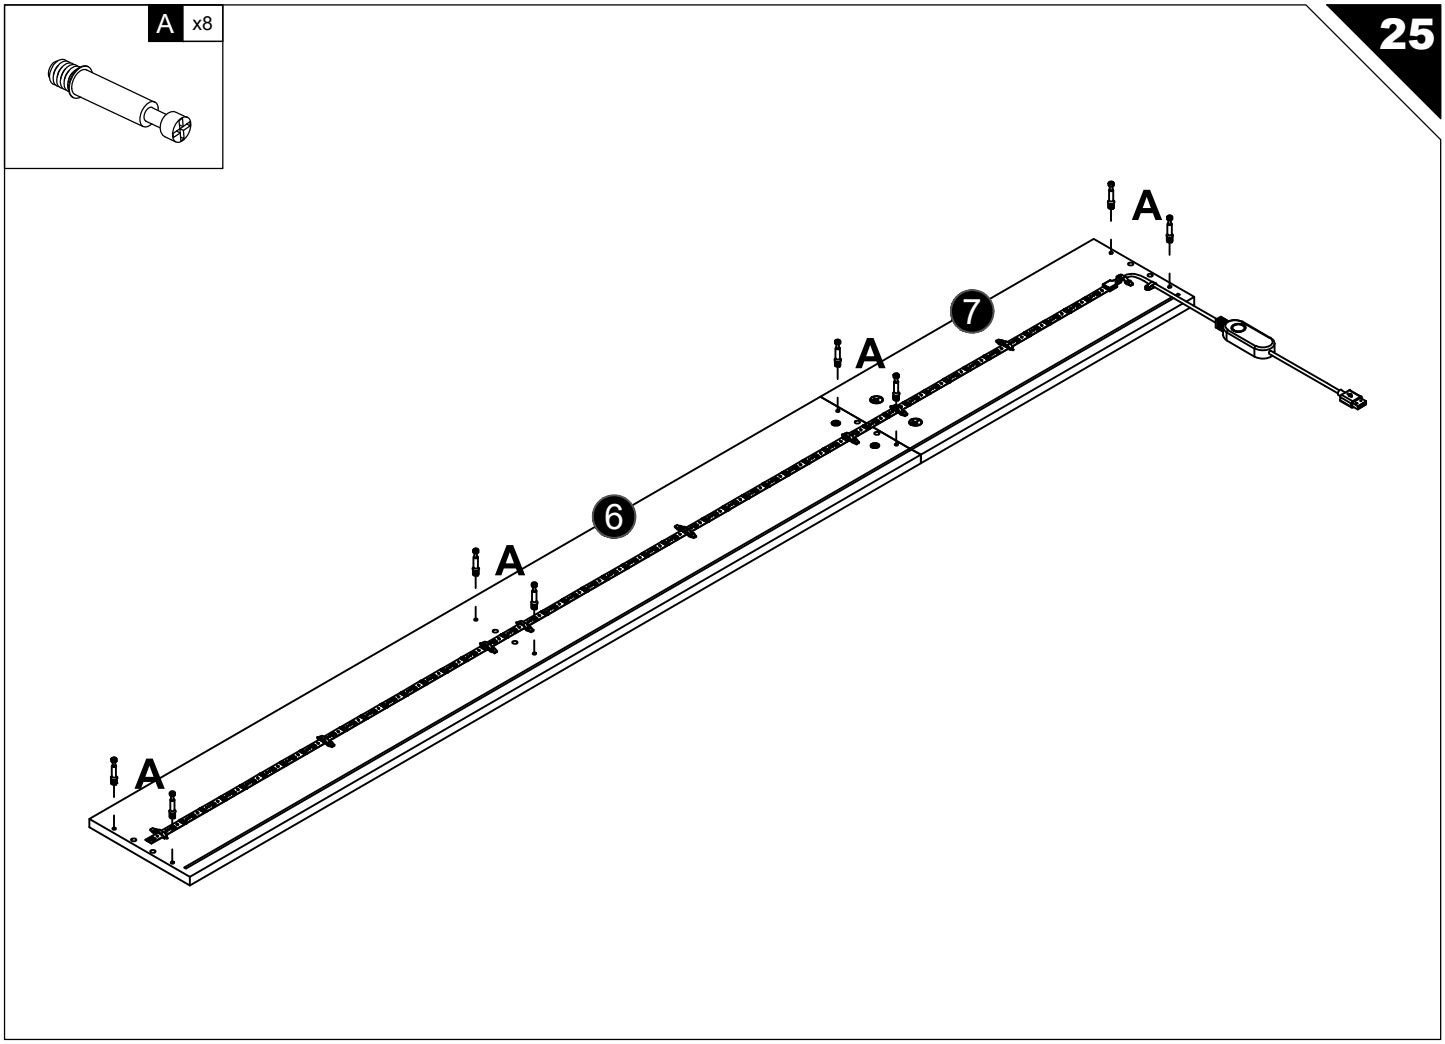




Before installing the light strip, use Q to compare the installation path to avoid deviation.

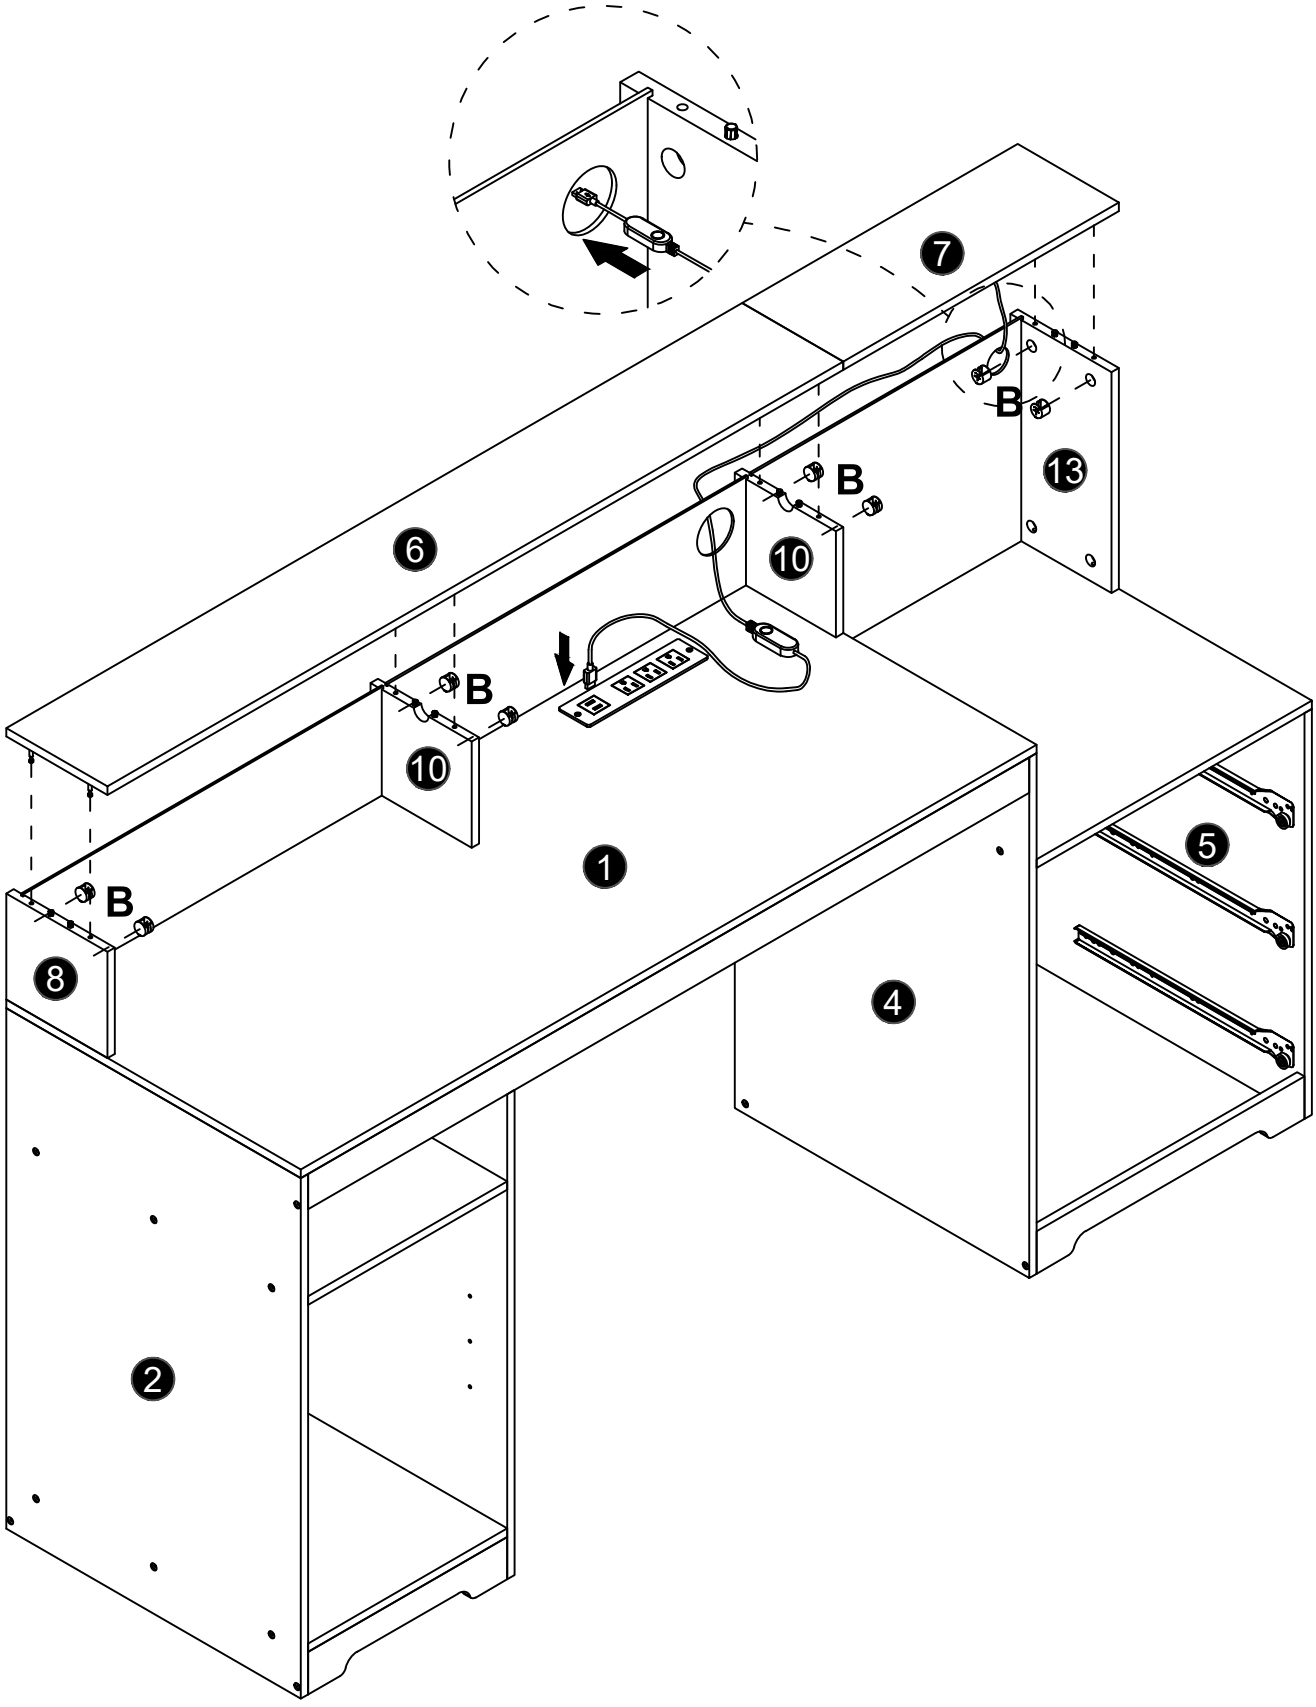
After comparing the installation path, peel off the backing paper slowly. It is recommended to peel along the path while installing the light strip, rather than removing it all at once, to prevent dust from sticking to the light strip, which may cause the adhesive to fail.

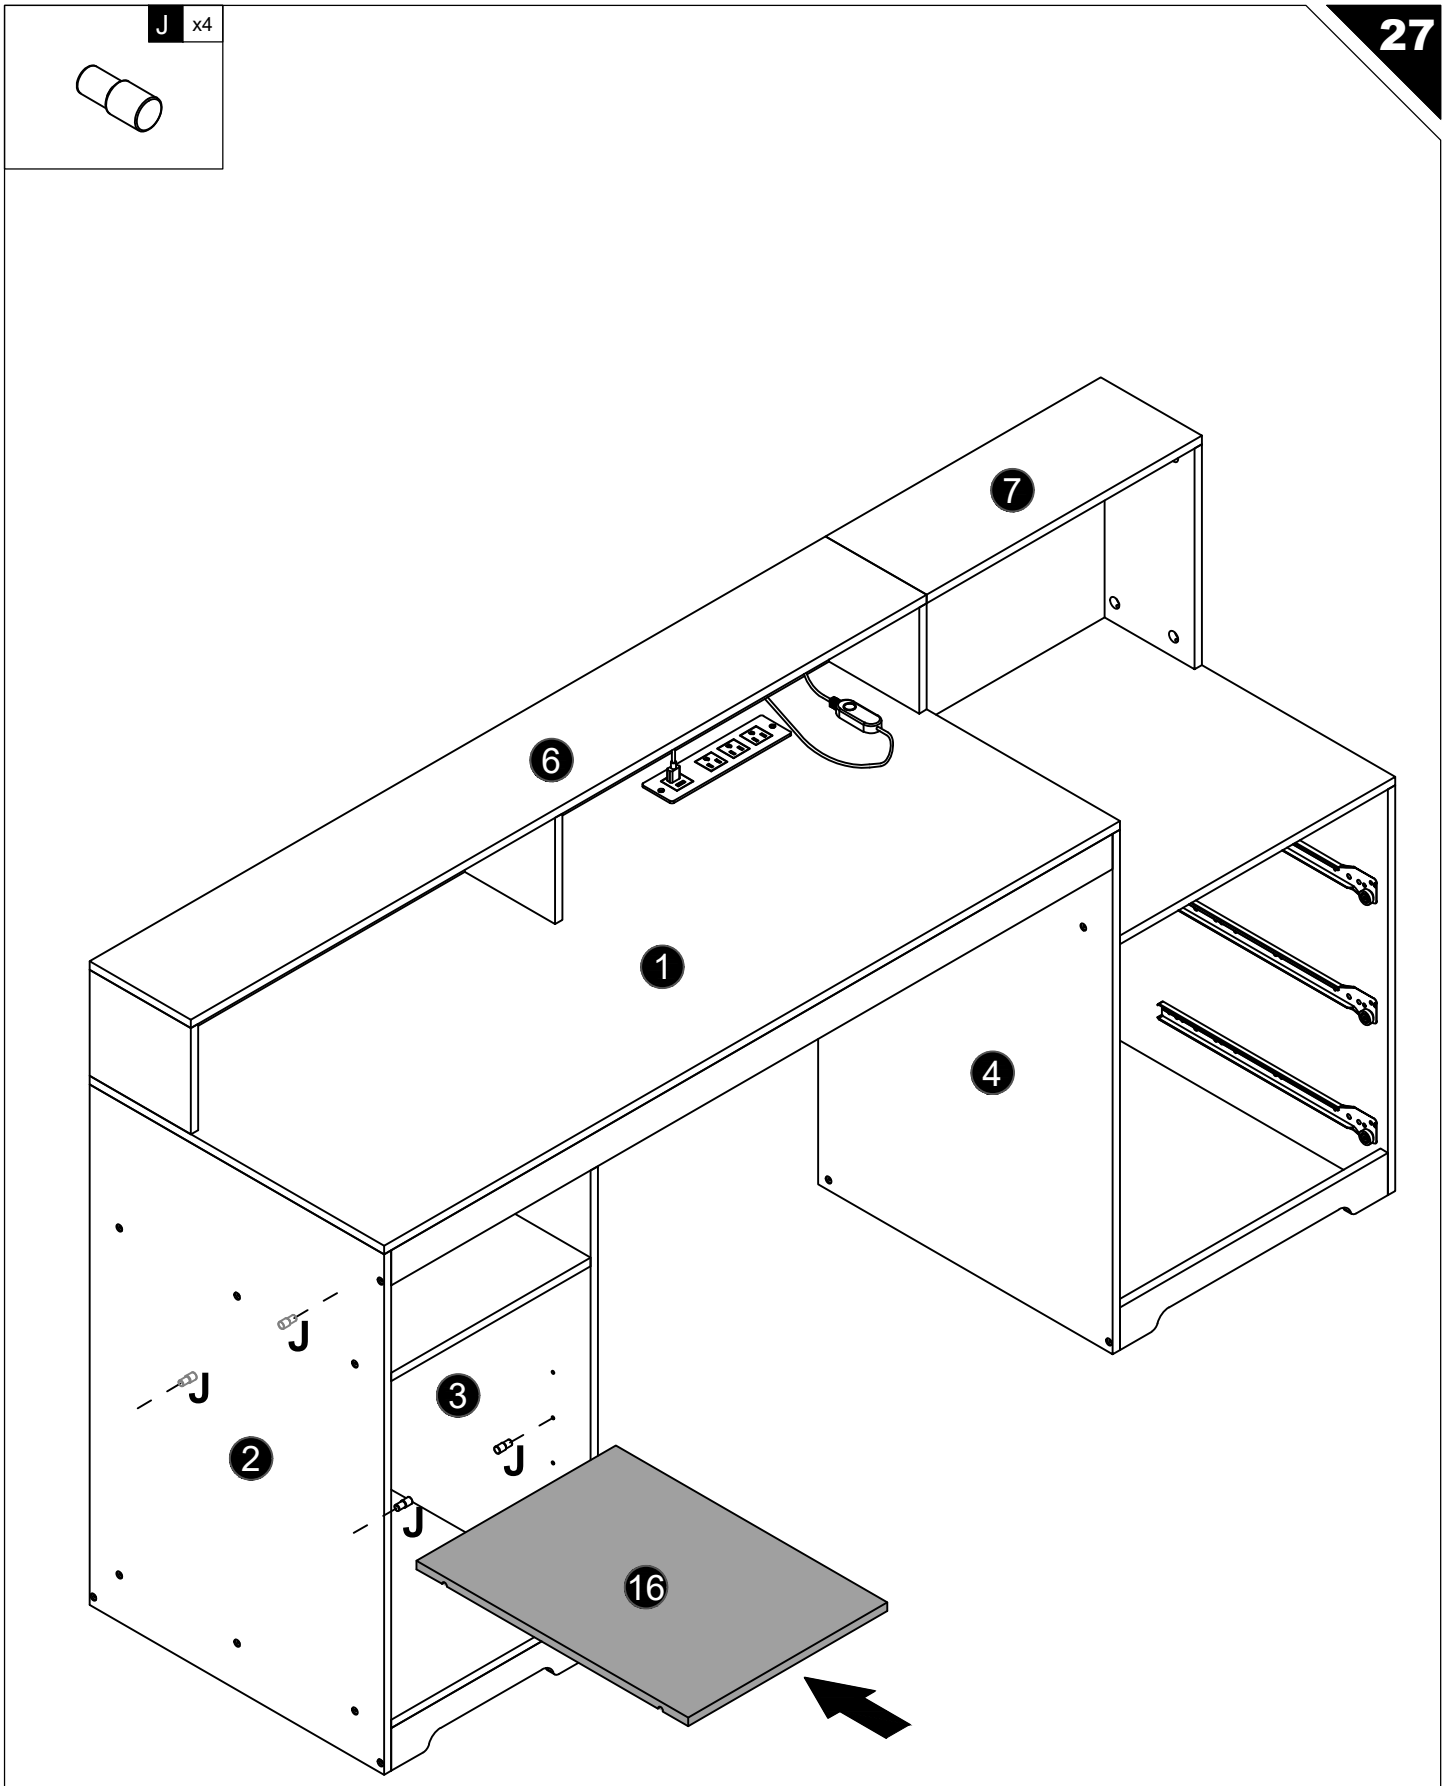

E x9
Q x9
R x1
24
E
Q
R
7
6
OR
he installation direction can be
chosen according to your needs.

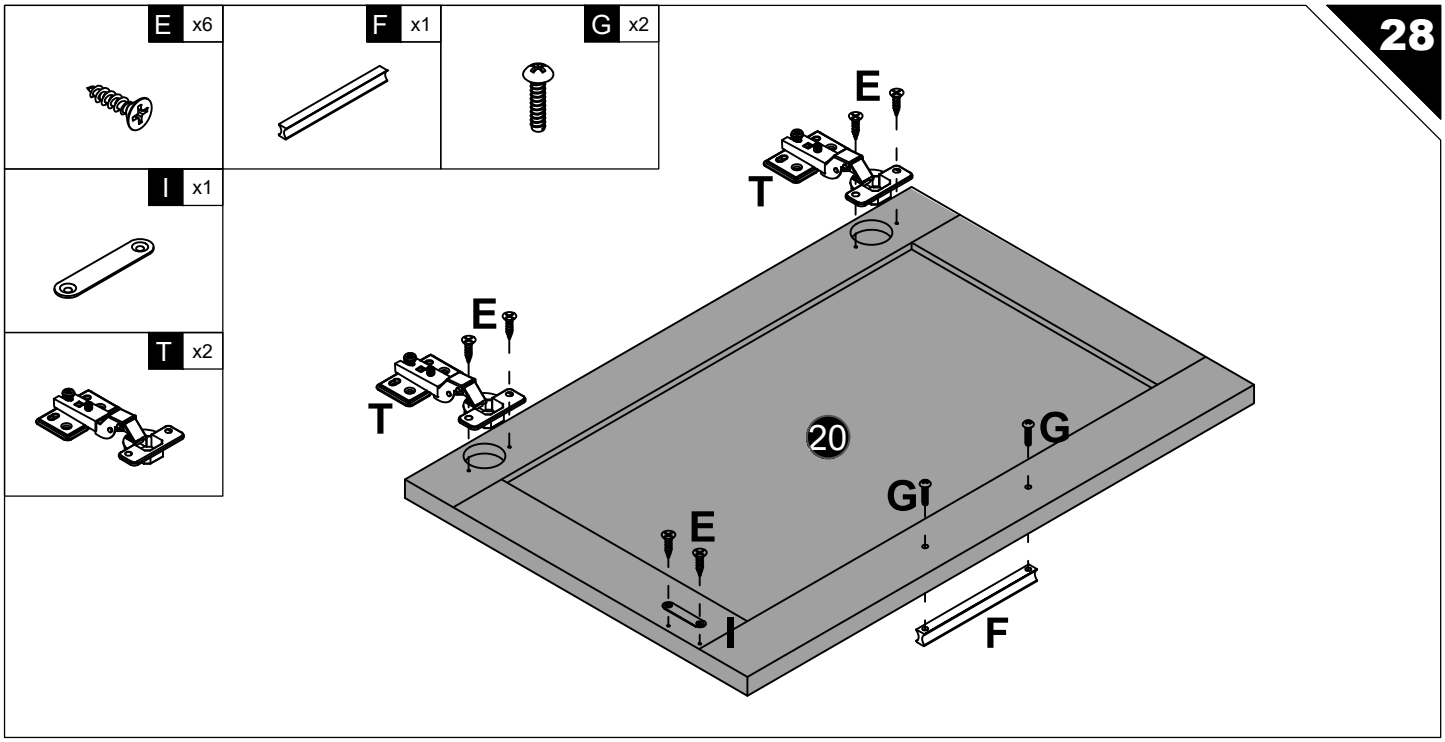

A x8
25
A
7
6

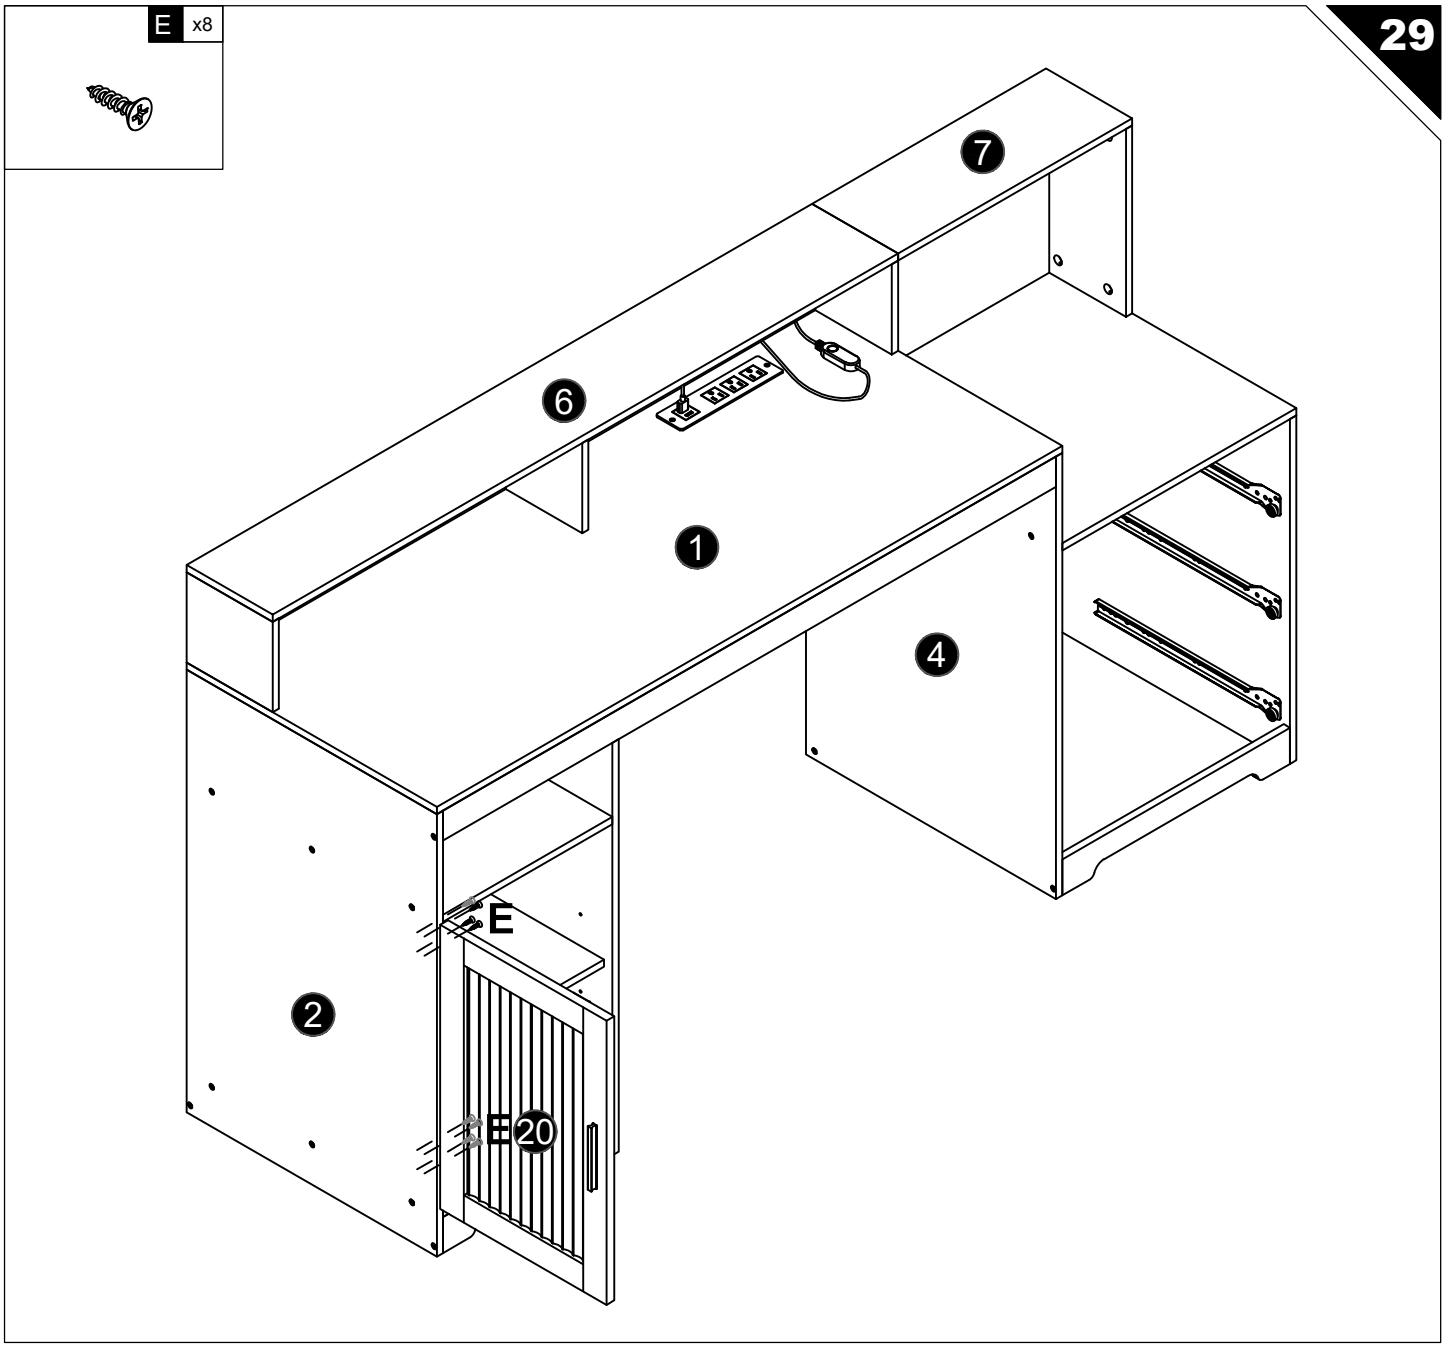
B x8

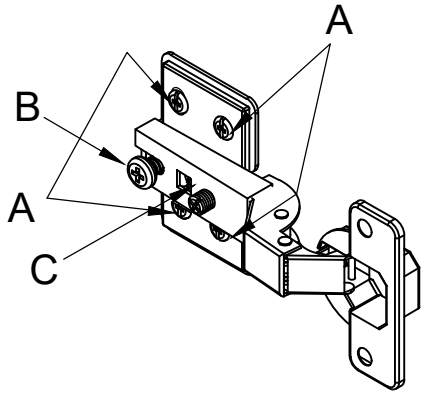


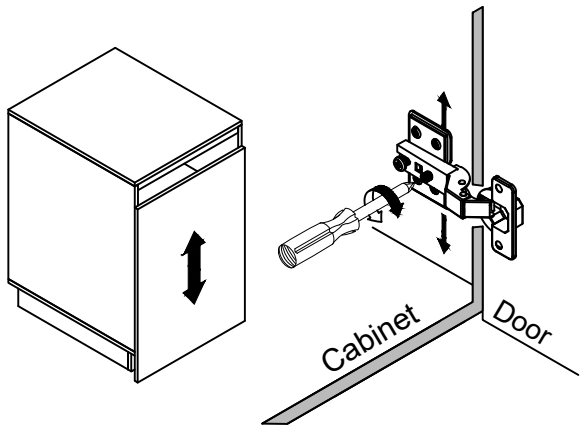



J x4
7
6
1
4
J
J
3
2
J
J
16

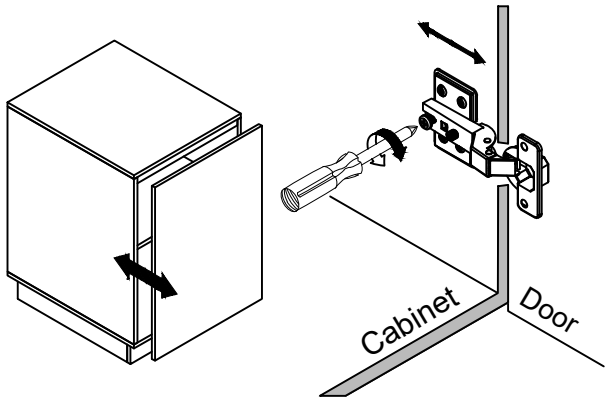

E x6
F x1
G x2
I x1
T x2
28
E
T
E
T
20
G
G
E
I
F


E x8
29
7
6
1
4
E
2
E
20

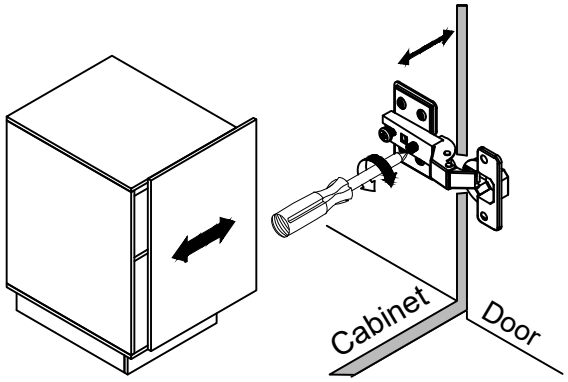




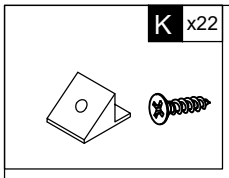
To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

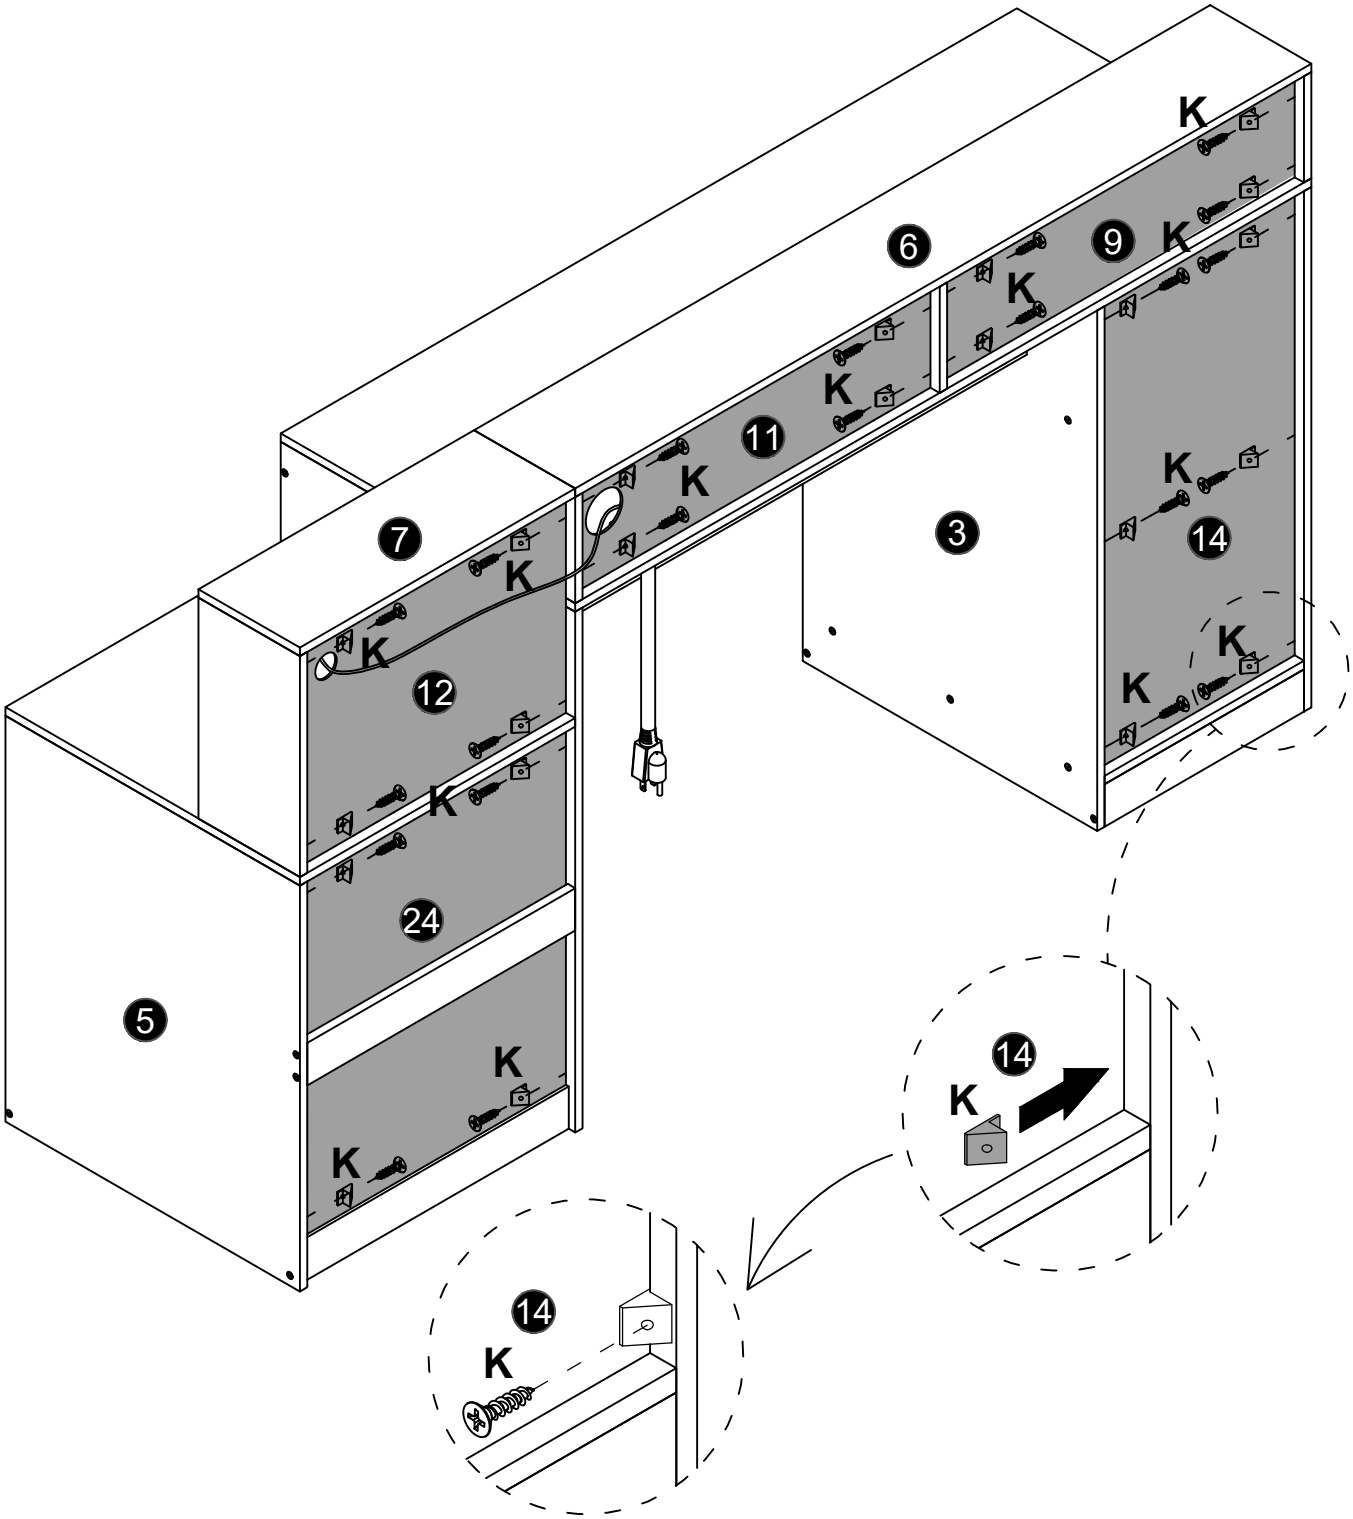


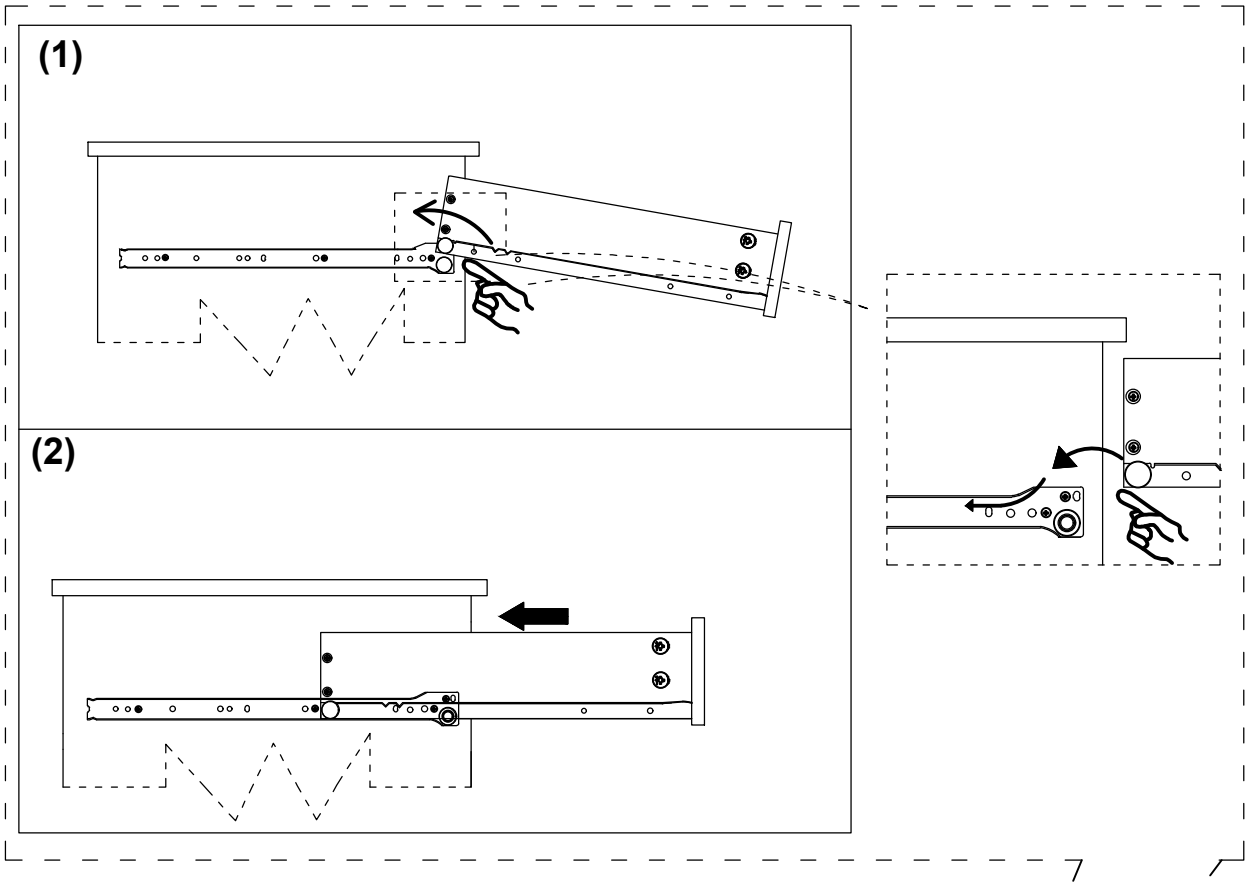
To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

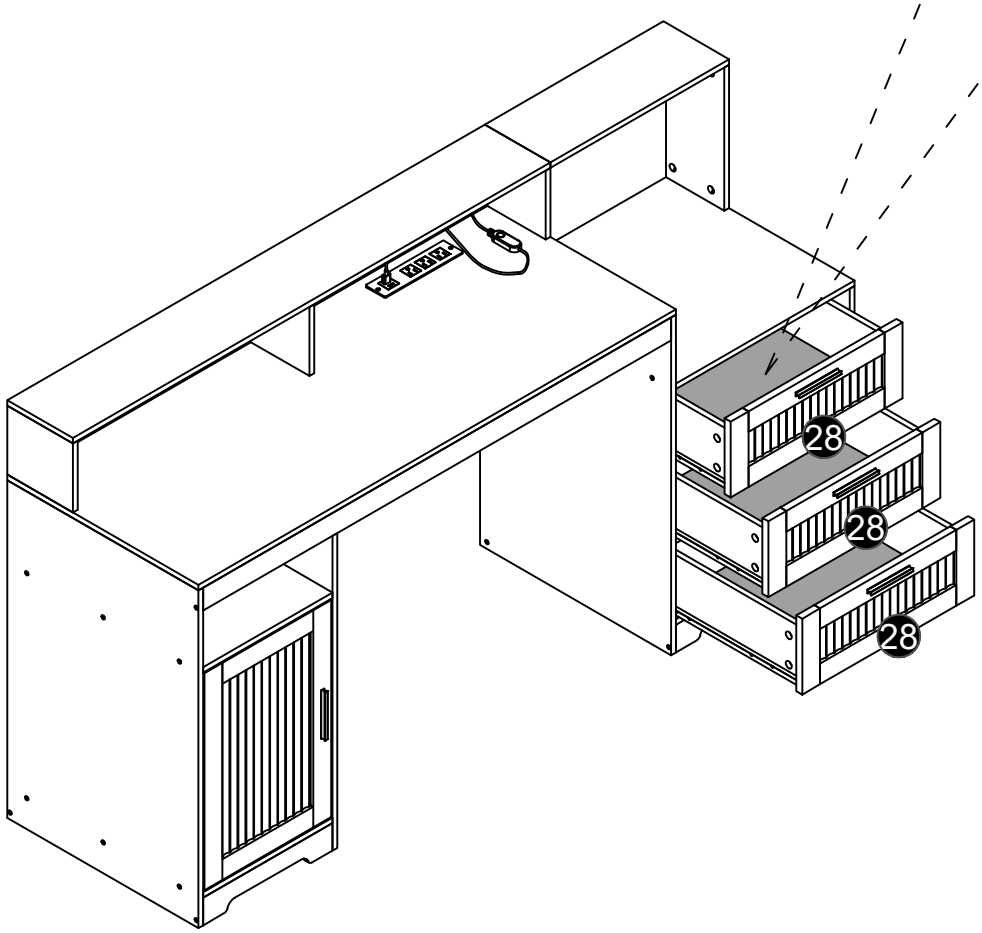


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

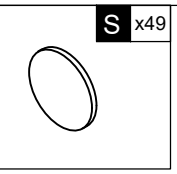

K x22


K
6
9
K
K
11
K
K
7
K
3
14
K
K
12
K
K
24
5
K
14
K
K
14
K

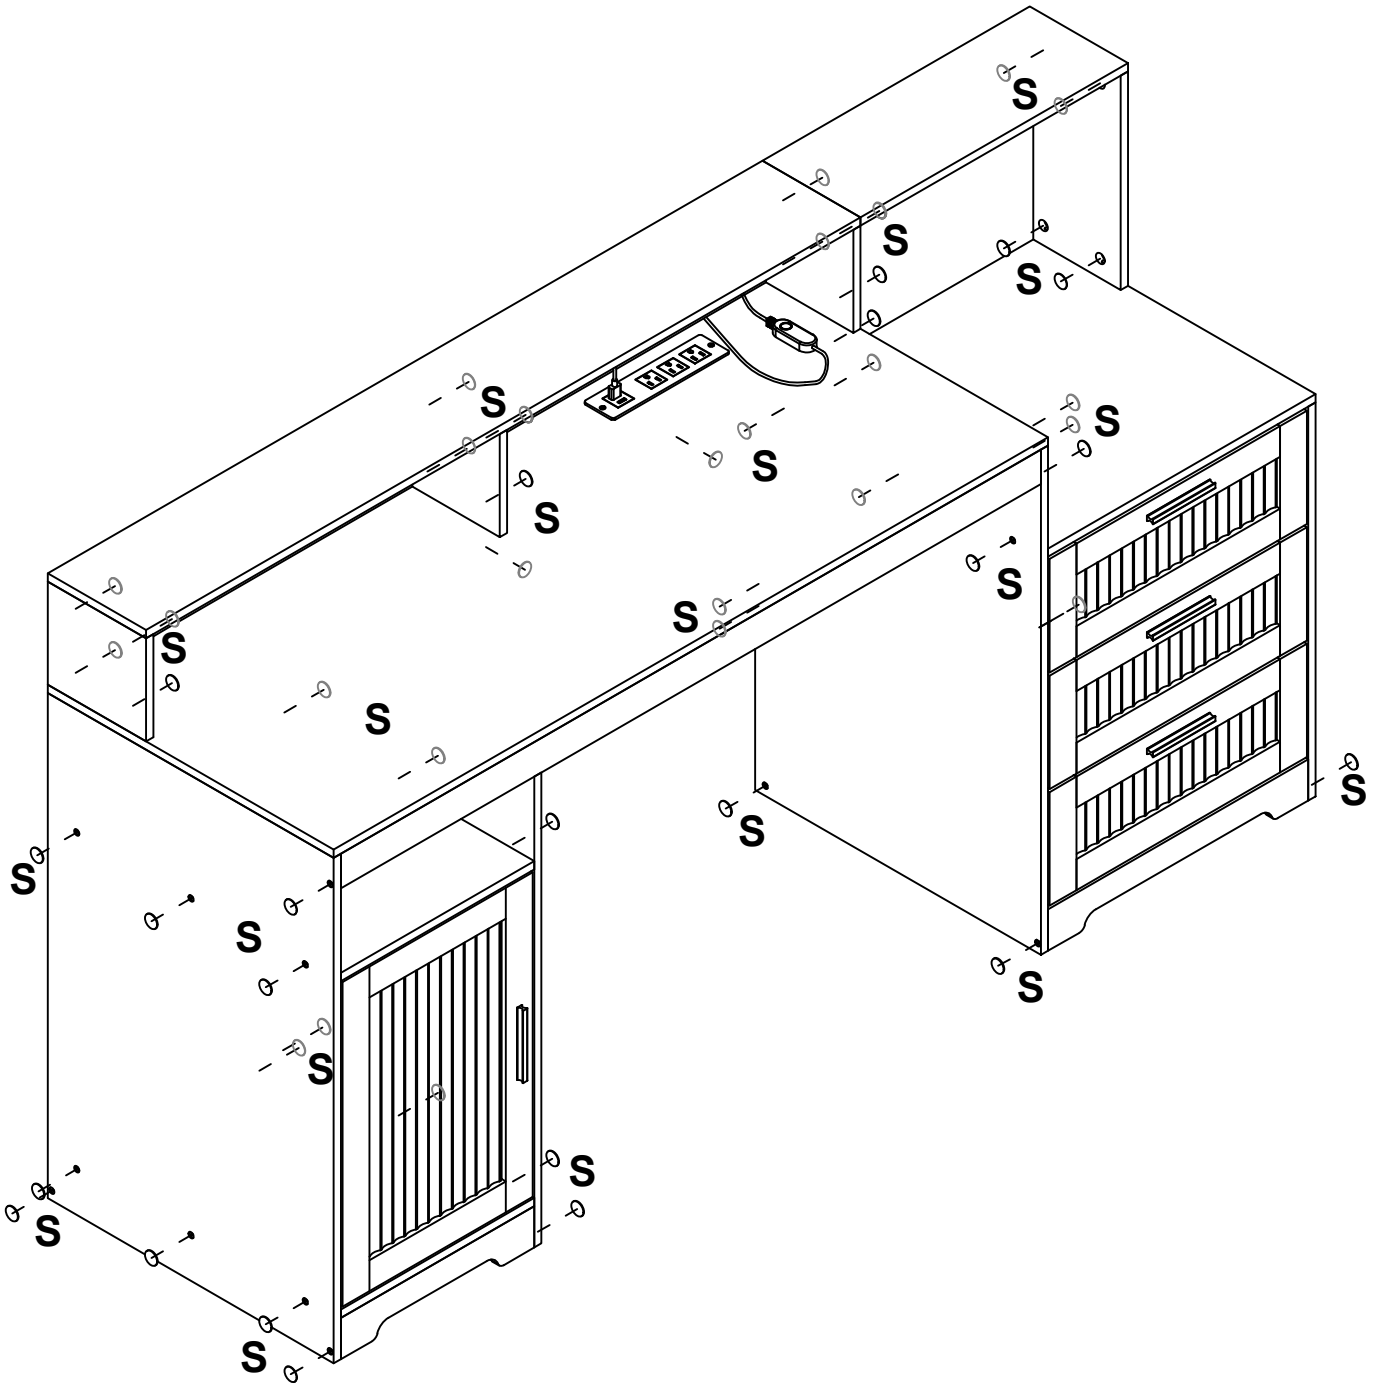

(1)
(2)


28
28
28

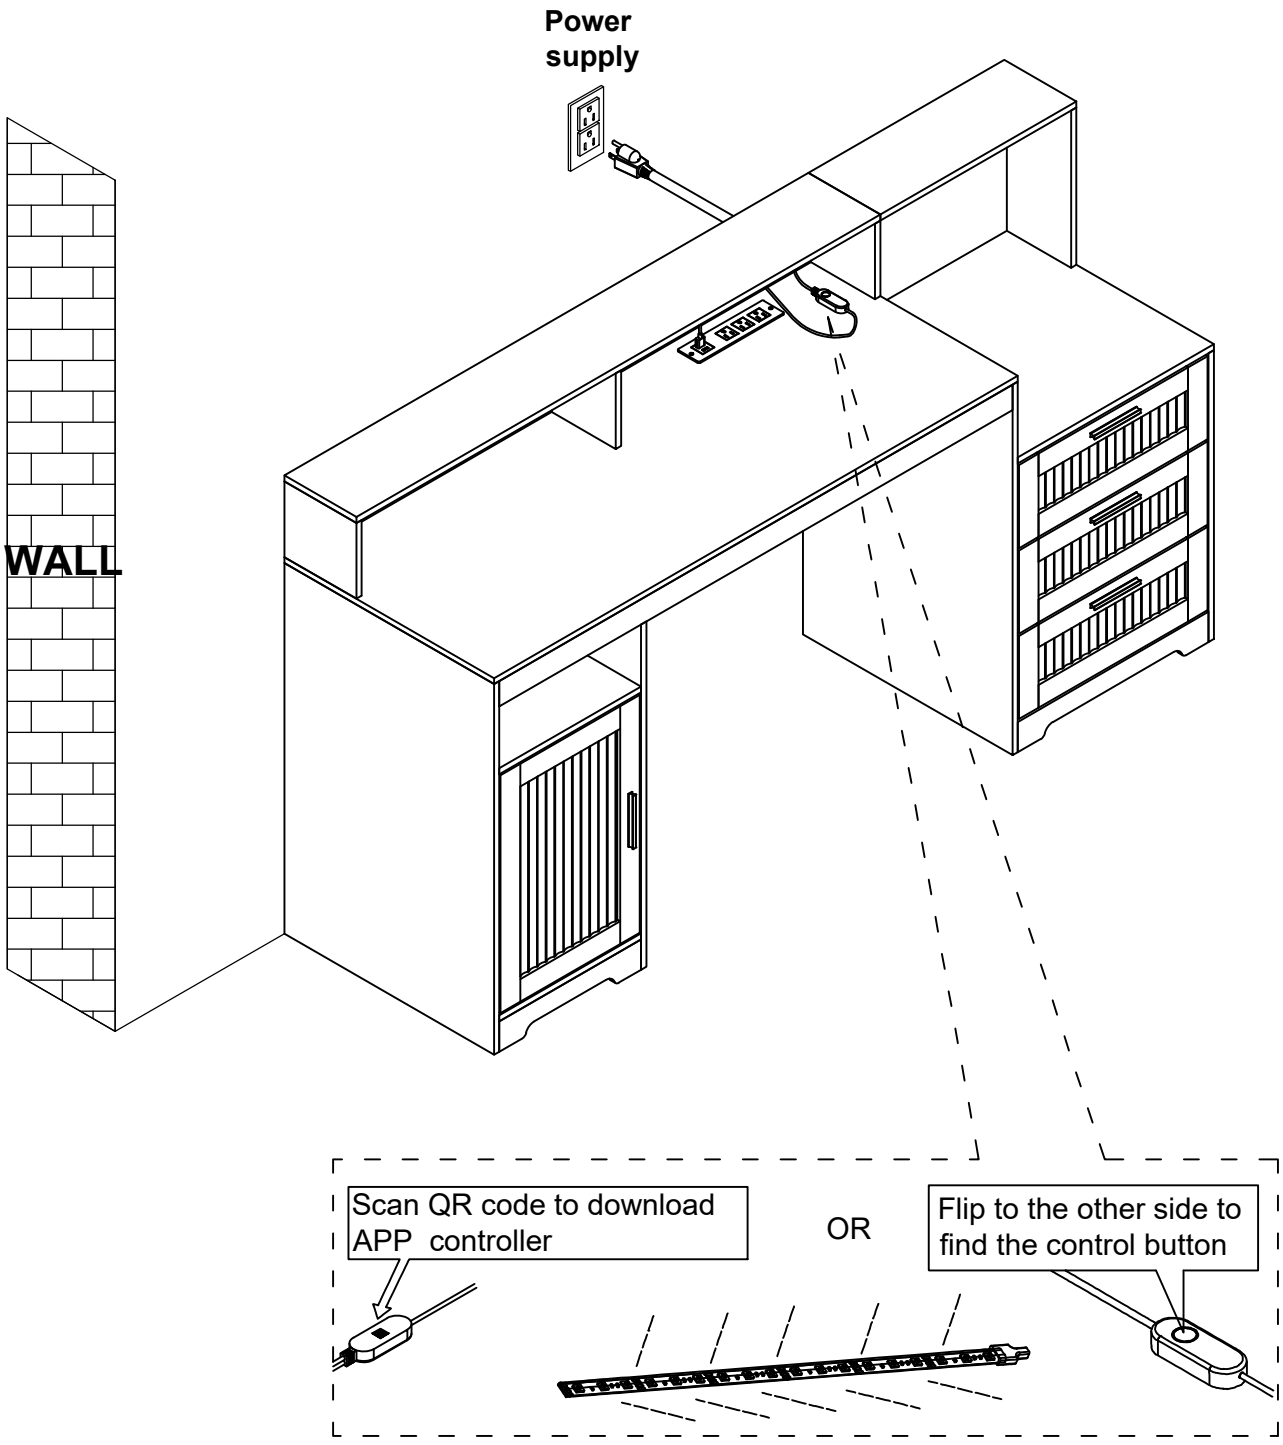
S x49



33



Done


Power
supply
WALL
Scan QR code to download
APP controller
OR
Flip to the other side to
find the control button