

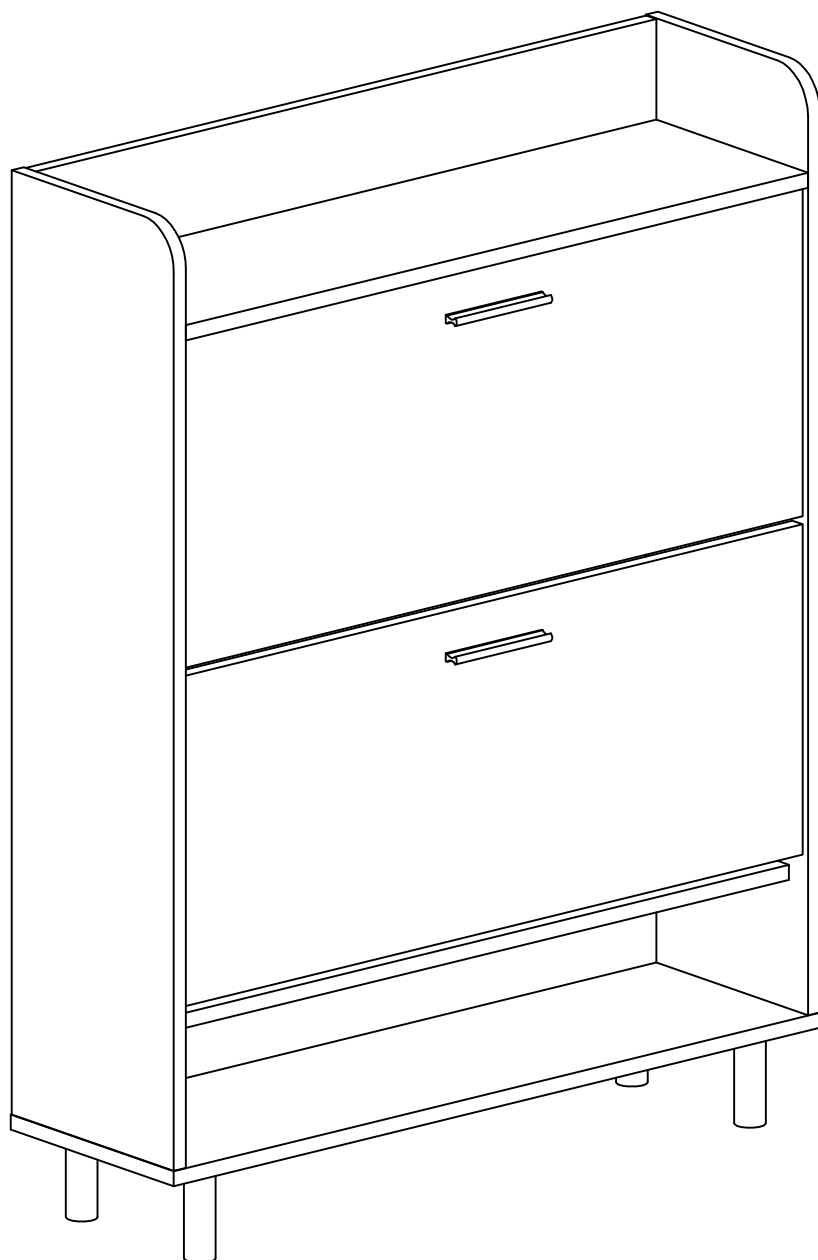


Installation Instructions

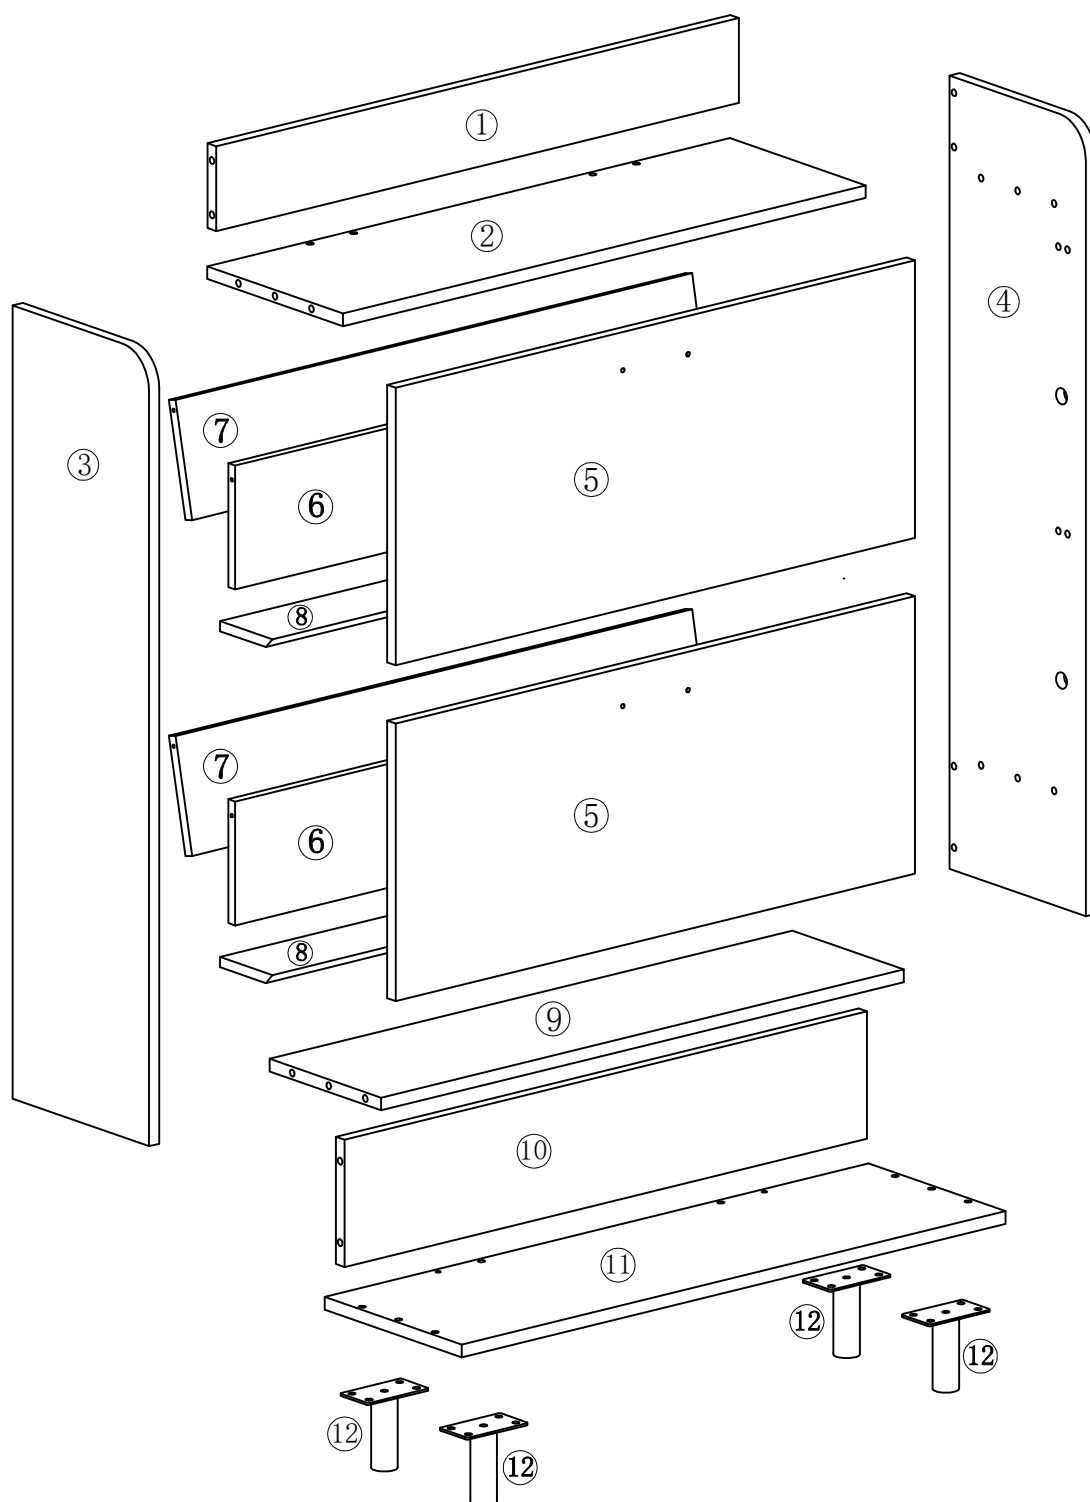





A	X16+1	B	X16+1	C	X10+1	D	X28+1	E	X1+1	F	X8+1	G	X1	H	X17+1	I	X4+1
																	
Φ 6X35		Φ 15X12		Φ 8X30		3.5*14mm		Ø4*35mm		Φ 7X47		M4X55		M6*12mm		M4*18mm	

J	X2	K	X1	L	X4	M	X1	N	X4	O	X4	P	X4	Q	X2	R	X2
																	
106*16*8mm		Ø8*40mm		M8*32mm		60*25*20		27*10*19		Φ 23*12		Φ 18*13mm		290*197*24		290*197*24	

STEP 1

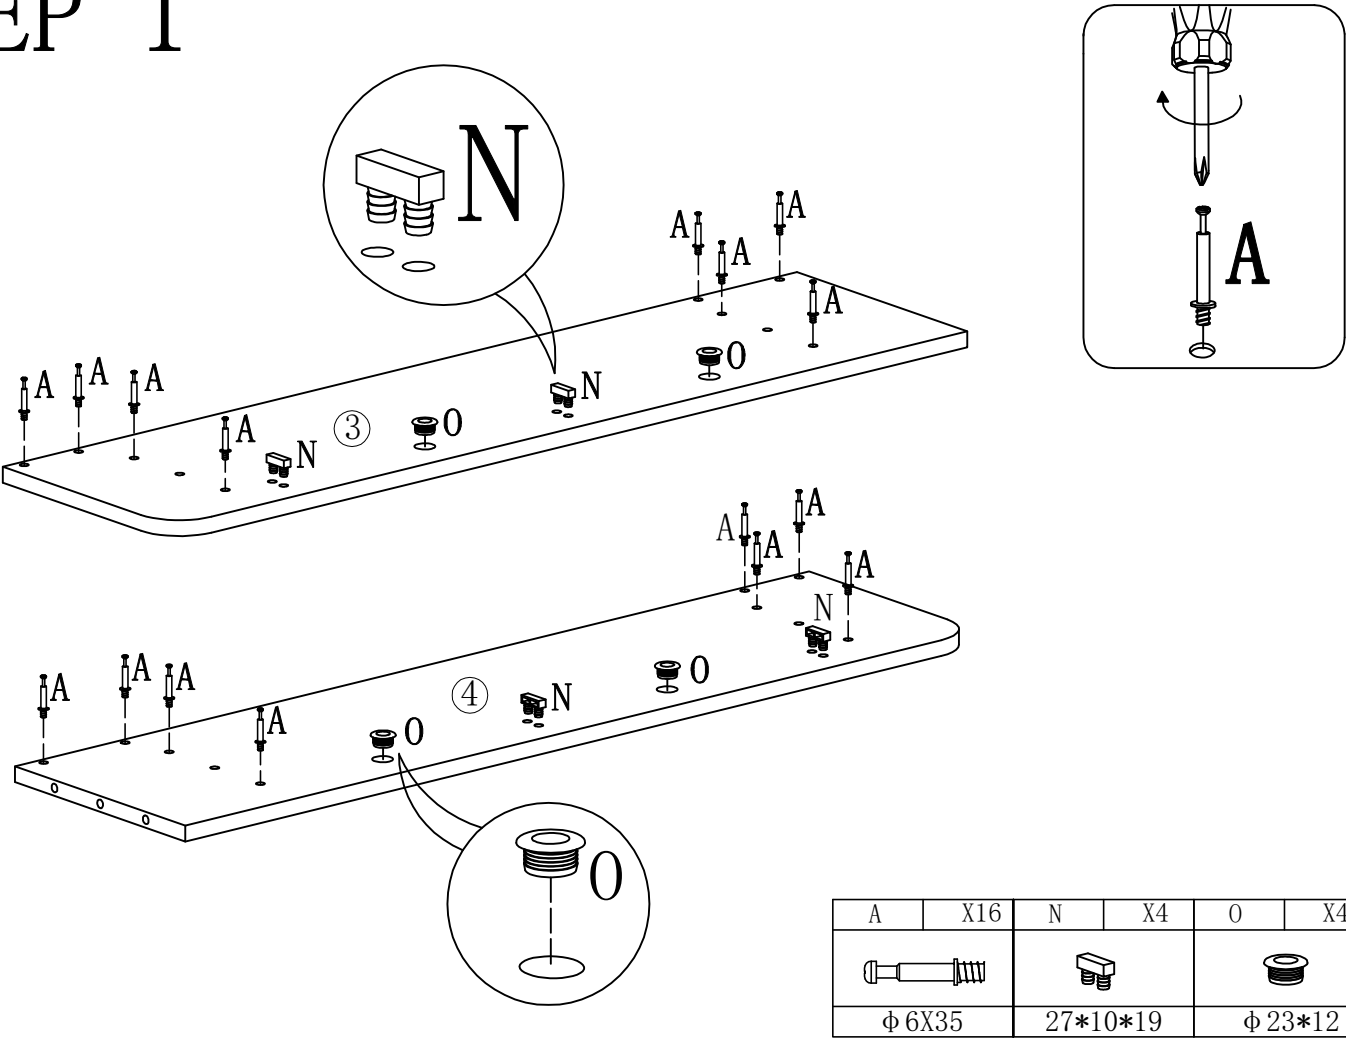



STEP 2

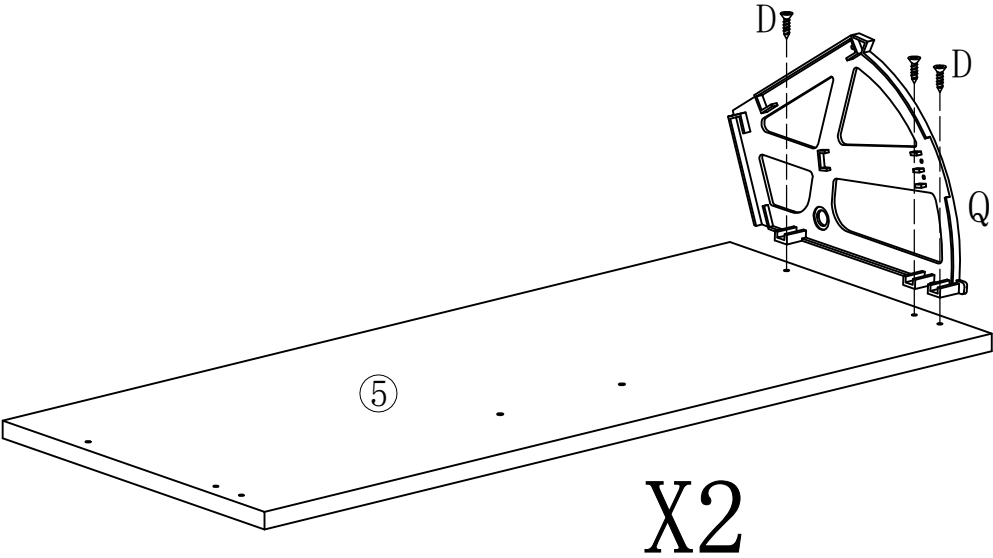


D	X6	Q	X2
3. 5*14mm		290*197*24	

STEP 3

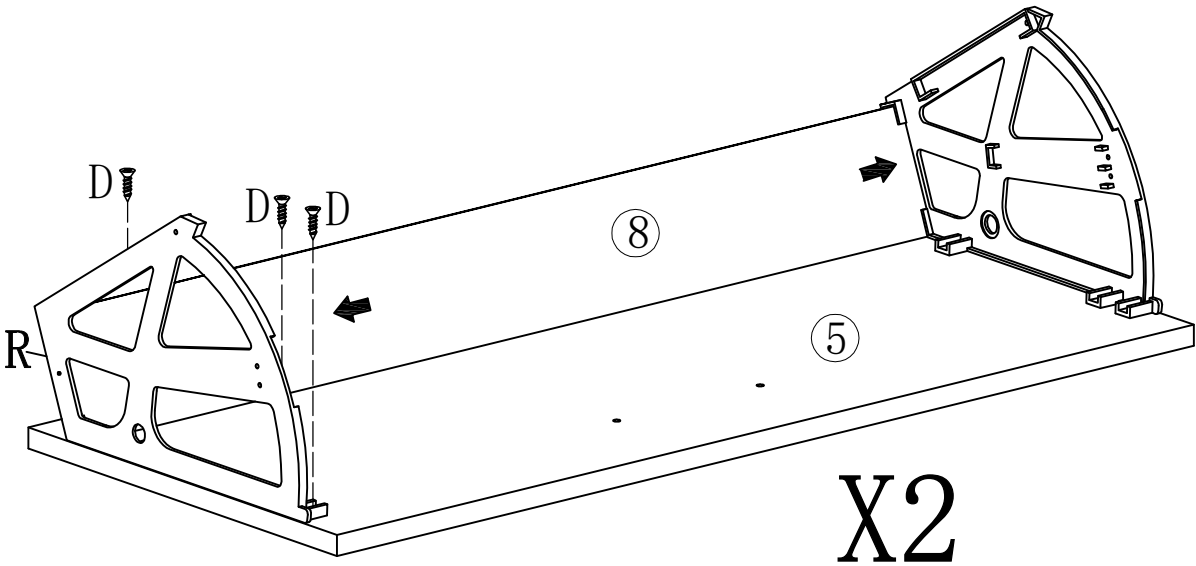


D	X6	R	X2
			
3. 5*14mm		290*197*24	

STEP 4

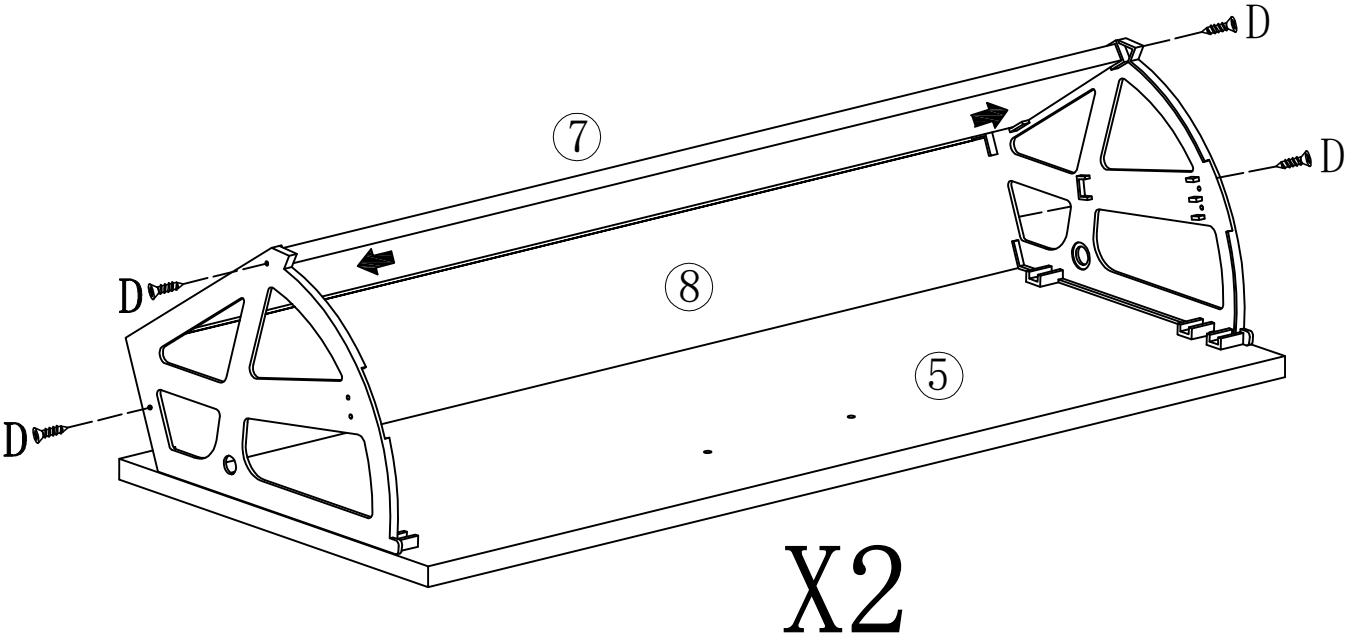


D	X8
	
3. 5*14mm	


STEP 5

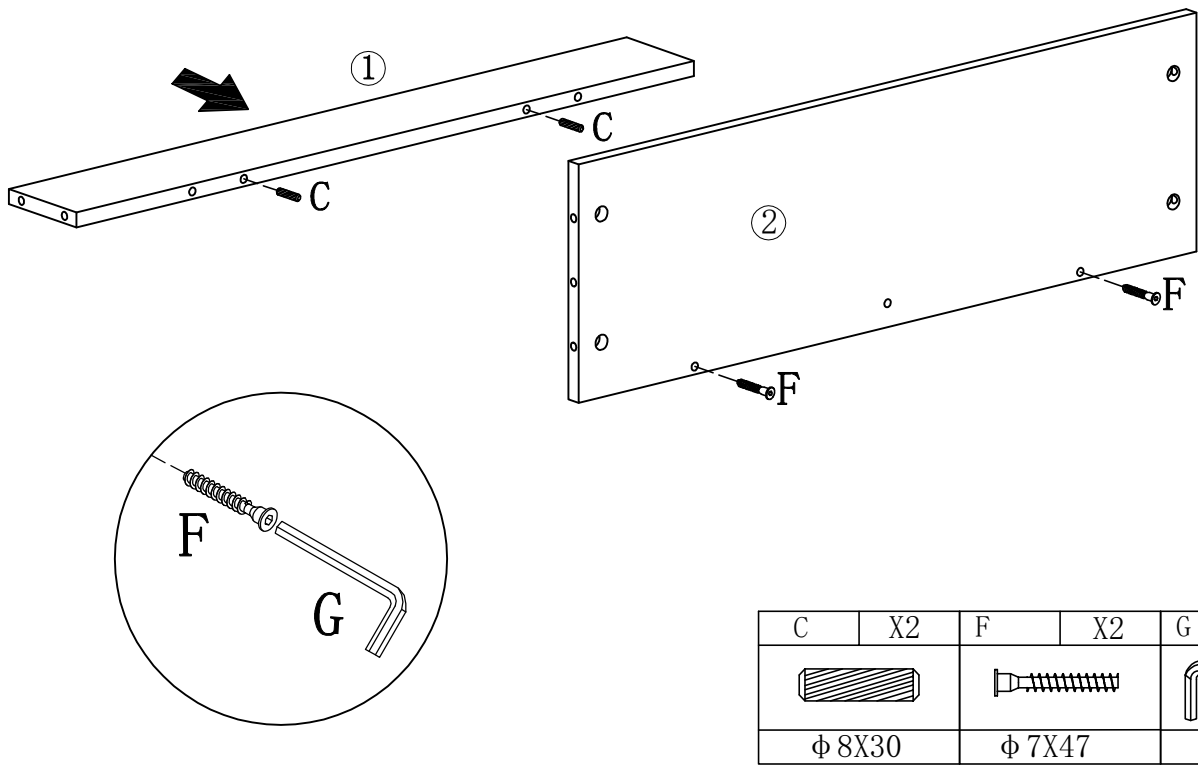

STEP 6


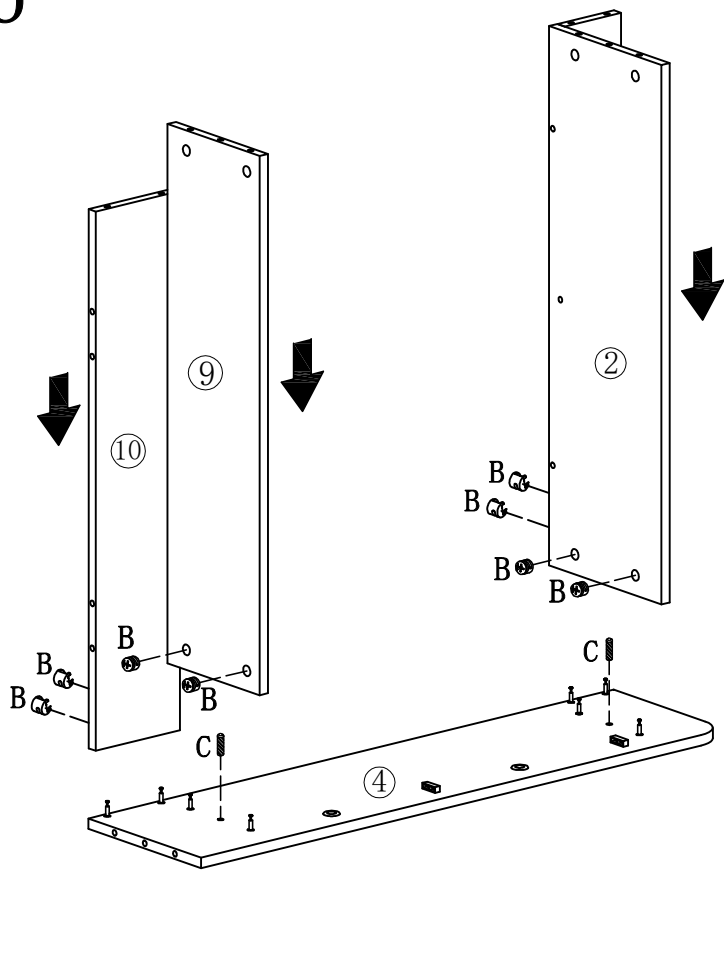



STEP 7

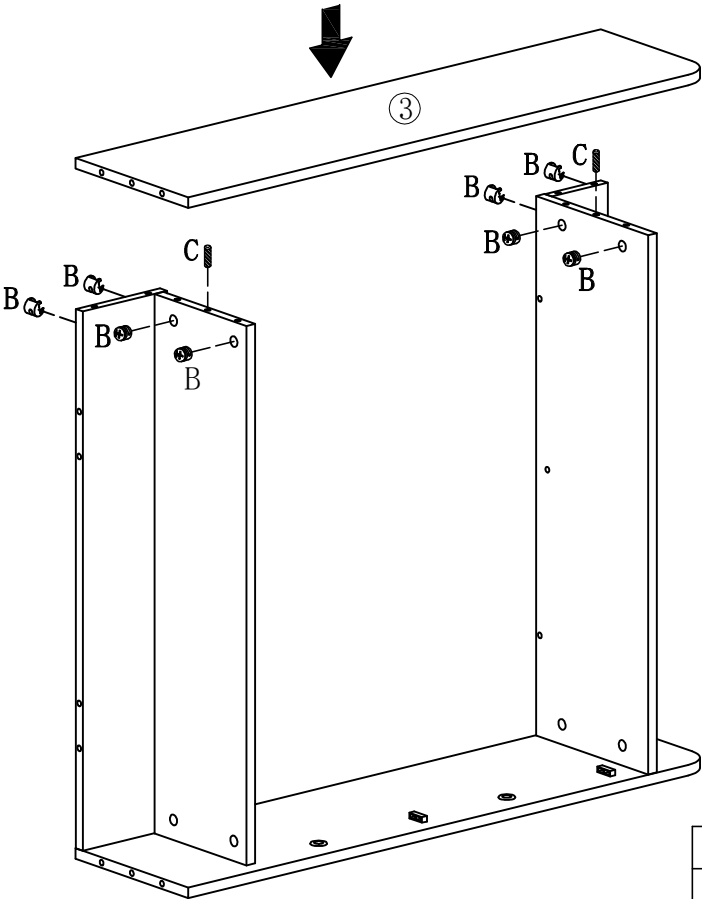


B	X8	C	X2
			
Φ 15X12		Φ 8X30	

STEP 8

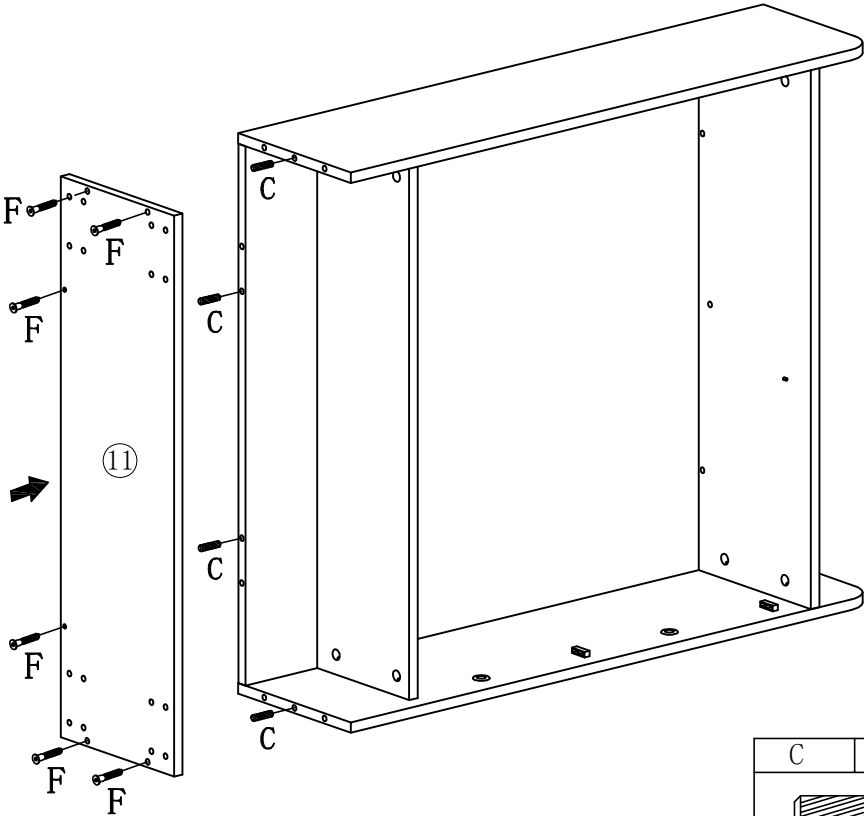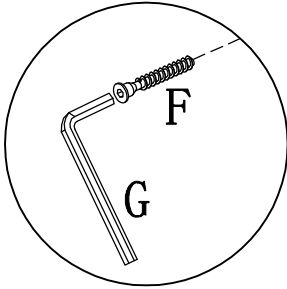


C	X4	F	X6
			
Φ 8X30		Φ 7X47	


STEP 9

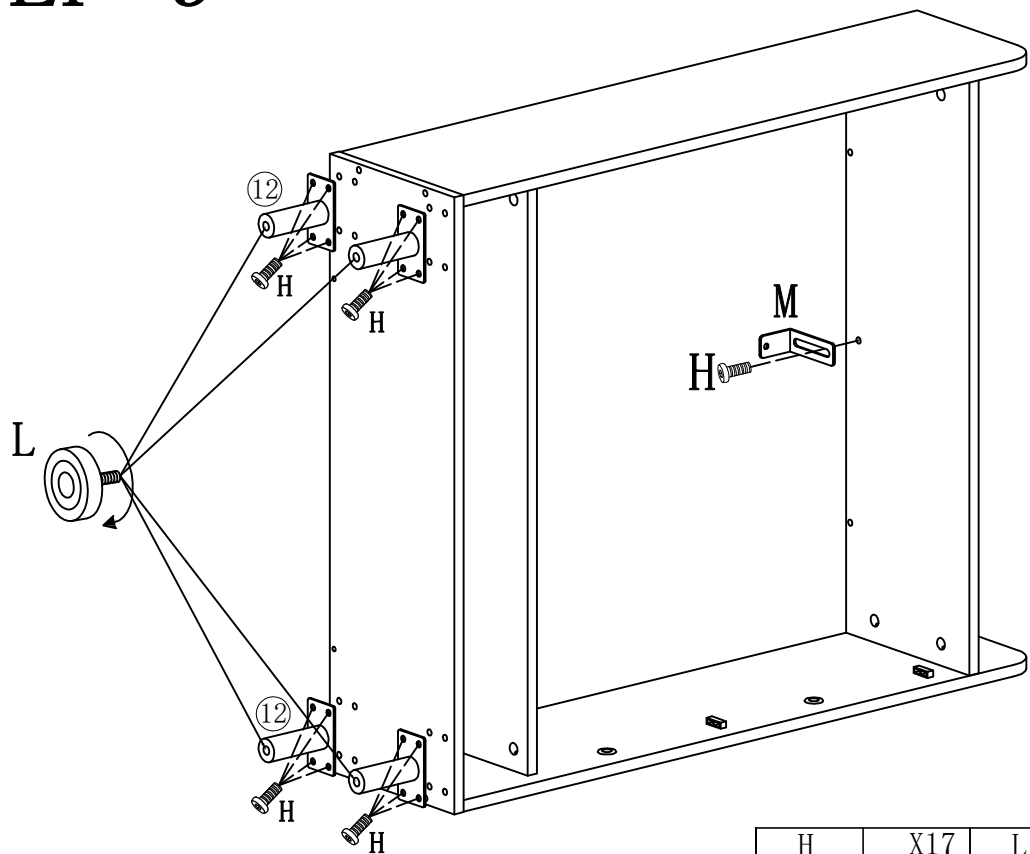


H	X17	L	X4	M	X1
					
M6*12mm		M8*32mm		60*25*20	

STEP 10

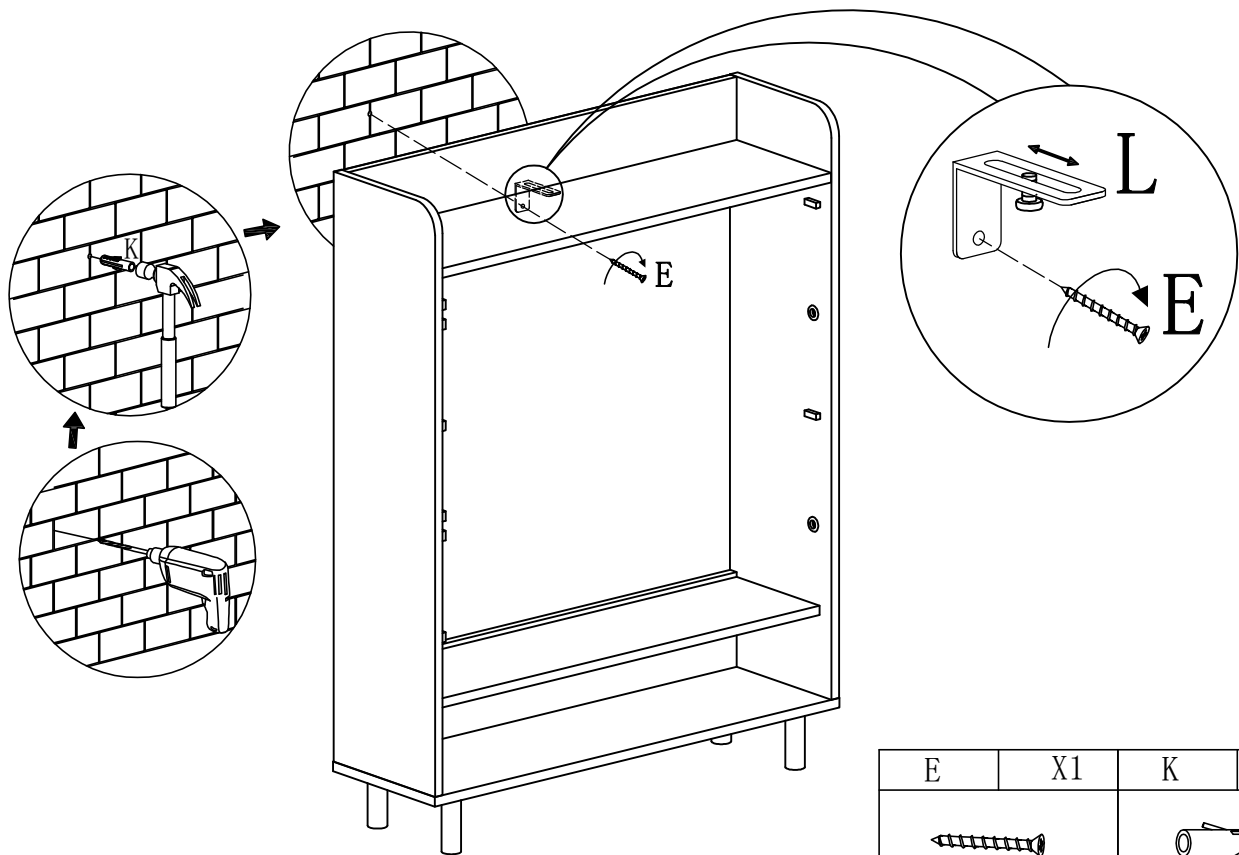


E	X1	K	X1
			
Φ 4X45mm		Ø 8*40mm	

STEP 11

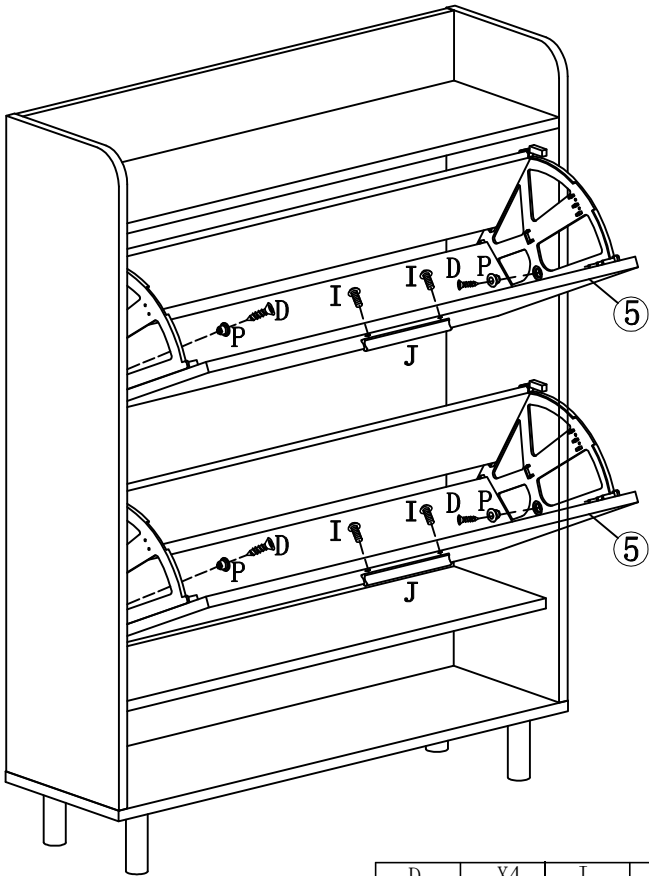


D	X4	I	X4	J	X2	P	X4
							
3. 5*14mm		M4*18mm		106*16*8mm		φ 18*13mm	

STEP 12

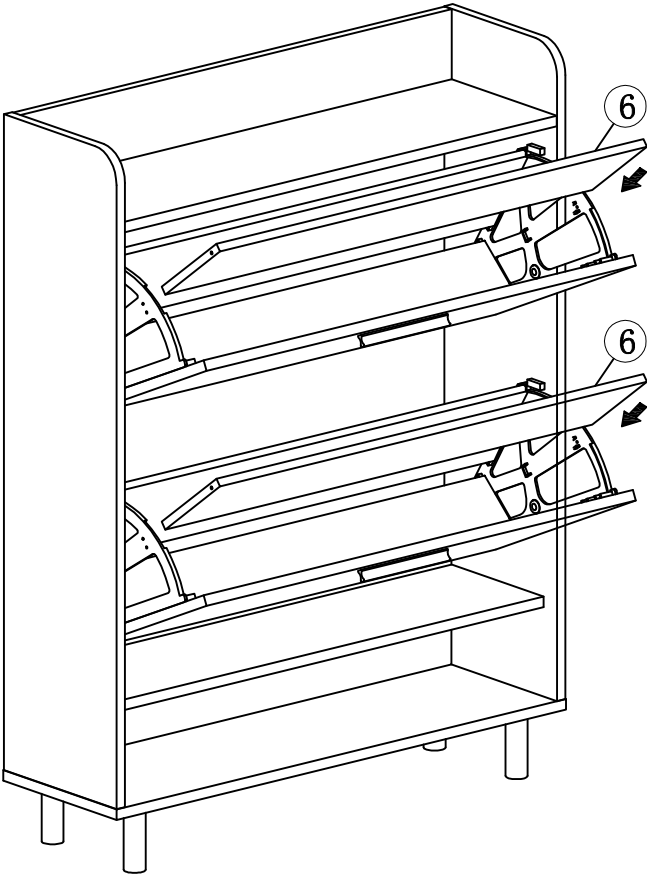

STEP 13

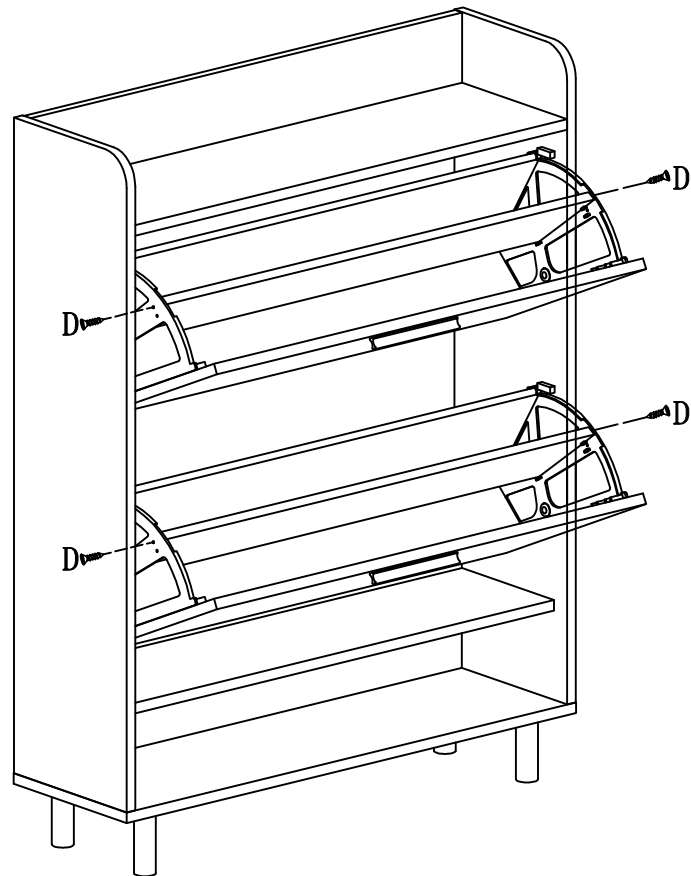

D	X4
	
3.5*14mm	

STEP 14

