



CT-40088 ASSEMBLY INSTRUCTIONS

PARTS

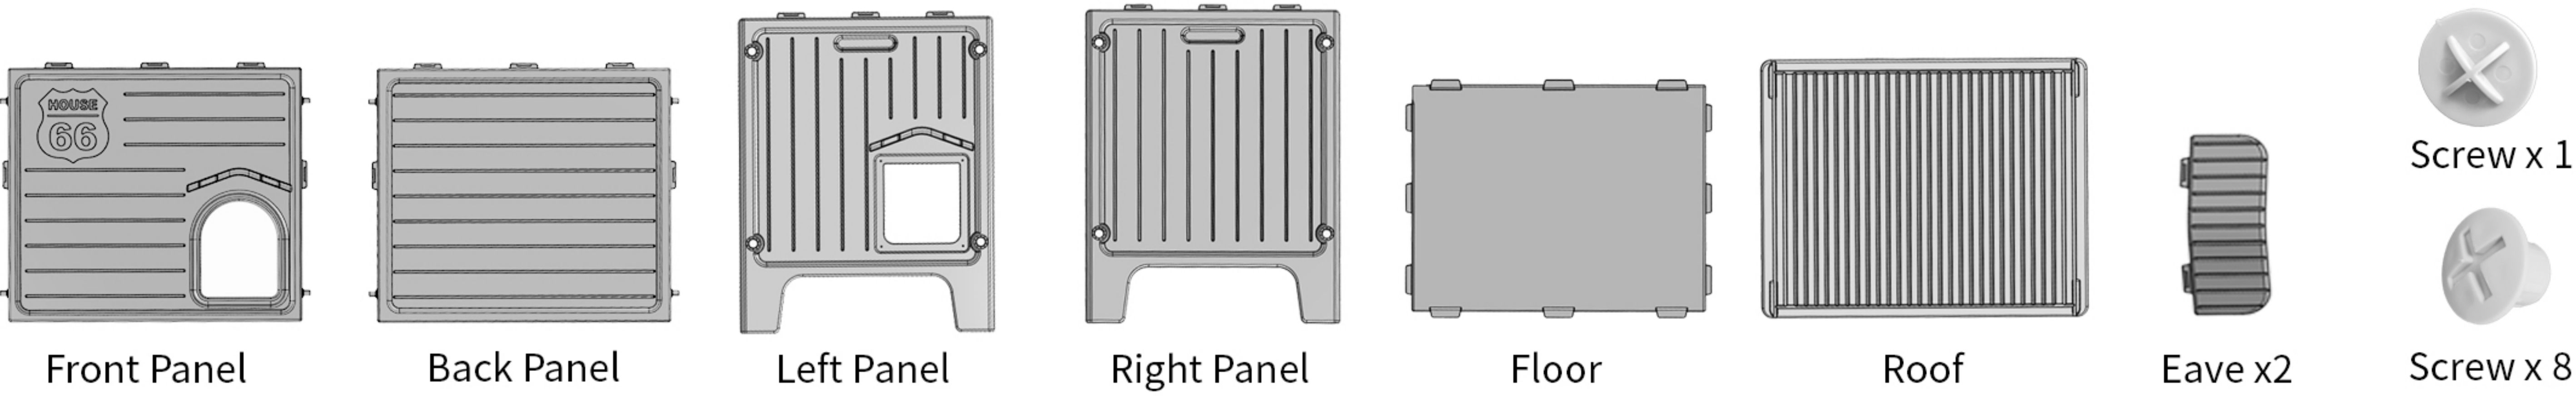

INSTRUCTIONS

- 1 Insert the eaves to front panel and left panel.
- 2 Fix floor to right panel.
- 3 Fix front&back panels.

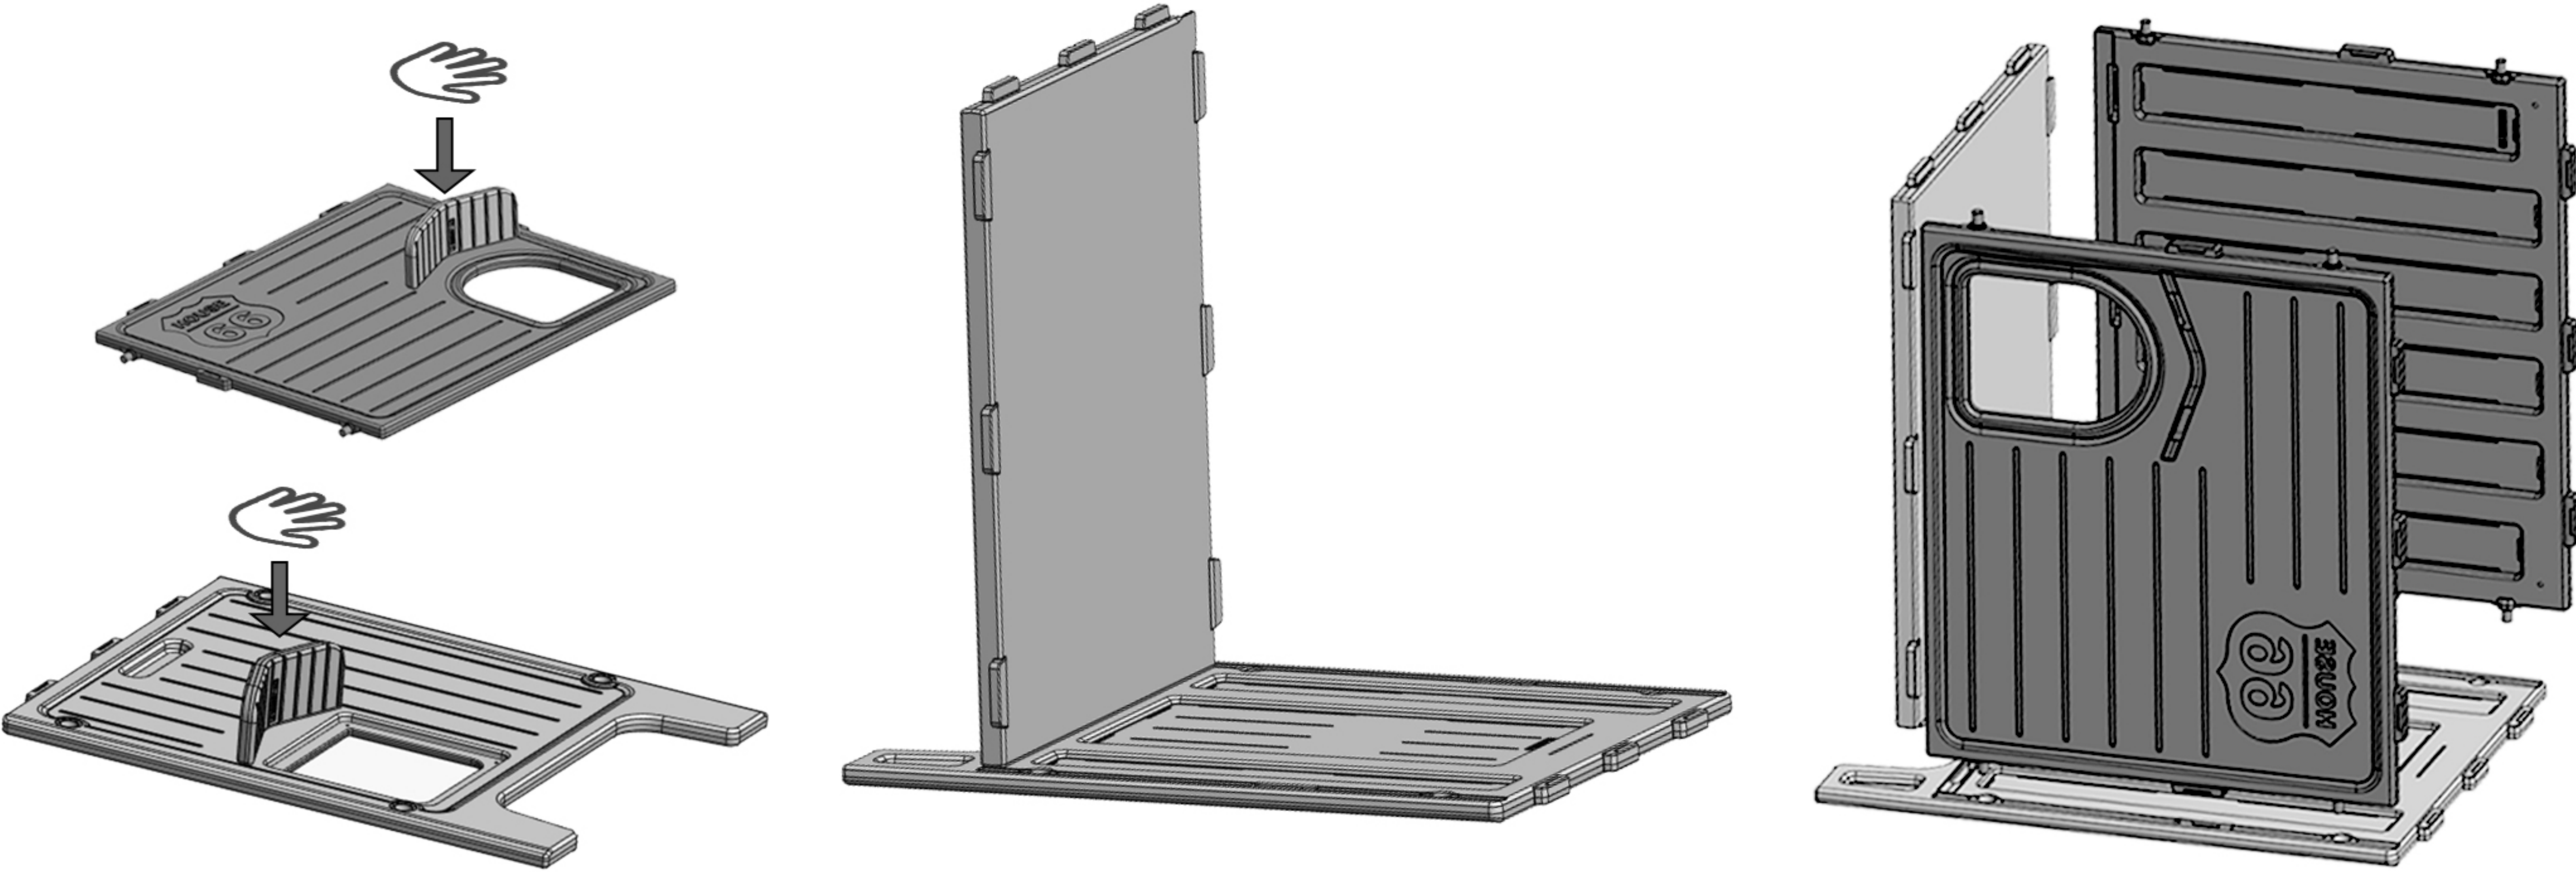

- 4 Fix left panel and roof, reinforce the screws. Perfect finished.



Pet Freindly Design on Floor

A triangle hole design at the floor by the side of escape door. The thin plastic cover could be fold up to go through electric mat wire. It could be keep flat after use also.



Four Functional Escape Door Opening Methods:

