


ASSEMBLY INSTRUCTIONS

Console Table

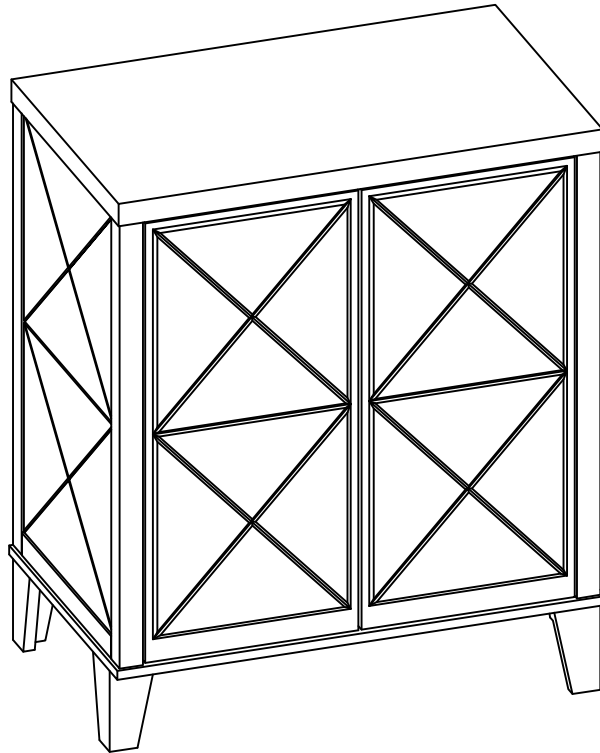

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)


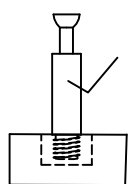


Diagram A

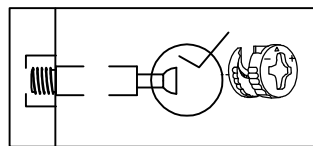

1. Insert cam screw into hole as shown in diagram A .


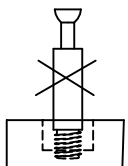


Diagram B

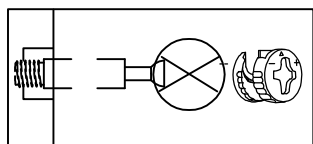

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



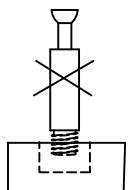



Diagram C

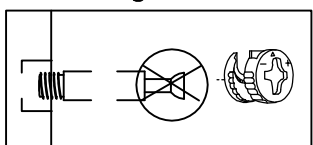

Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

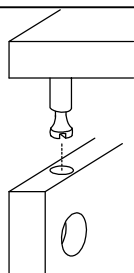


2. Connect the panels together.

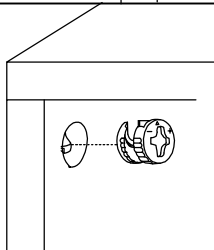

ARROW SIGN




3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

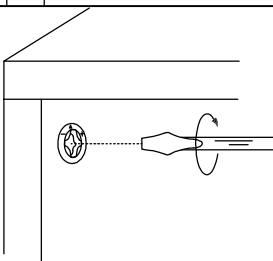

4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.









NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.

Tools Required










Phillips screwdriver(Not included)

Part List

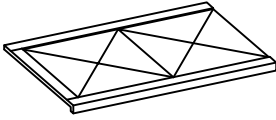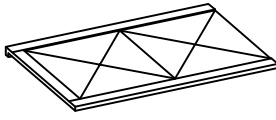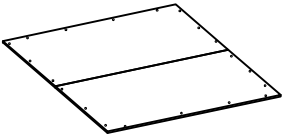
A1. Quantity of 1  Top Panel	A2. Quantity of 1  Side Panel (Left)	A3. Quantity of 1  Side Panel(Right)	A4. Quantity of 1  Bottom Panel
A5. Quantity of 1  Back Panel	A6. Quantity of 4  Leg	A7. Quantity of 1  Adjustable Shelf	A8. Quantity of 1  Door(Right)
A9. Quantity of 1  Door(Left)			

Hardware List

B1. Quantity of 16  Wood Dowel	B2. Quantity of 8  Cam-Bolt	B3. Quantity of 8  Cam- Lock	B4. Quantity of 4  Flat Washer	B5. Quantity of 4  Spring Washer
B6. Quantity of 4  Bolt	B7. Quantity of 1  Allen Wrench	B8. Quantity of 20  Screw	B9. Quantity of 4  Shelf Support	B10. Quantity of 4  Door Pin
B11. Quantity of  Magnet	B12. Quantity of 4  Screw	B13. Quantity of 1  Anchor with screw	B14. Quantity of 1  Anti-tip Kit	

Step 1:


B2:		8pcs
B1:		8pcs
B11:		1pc
B12:		4pcs

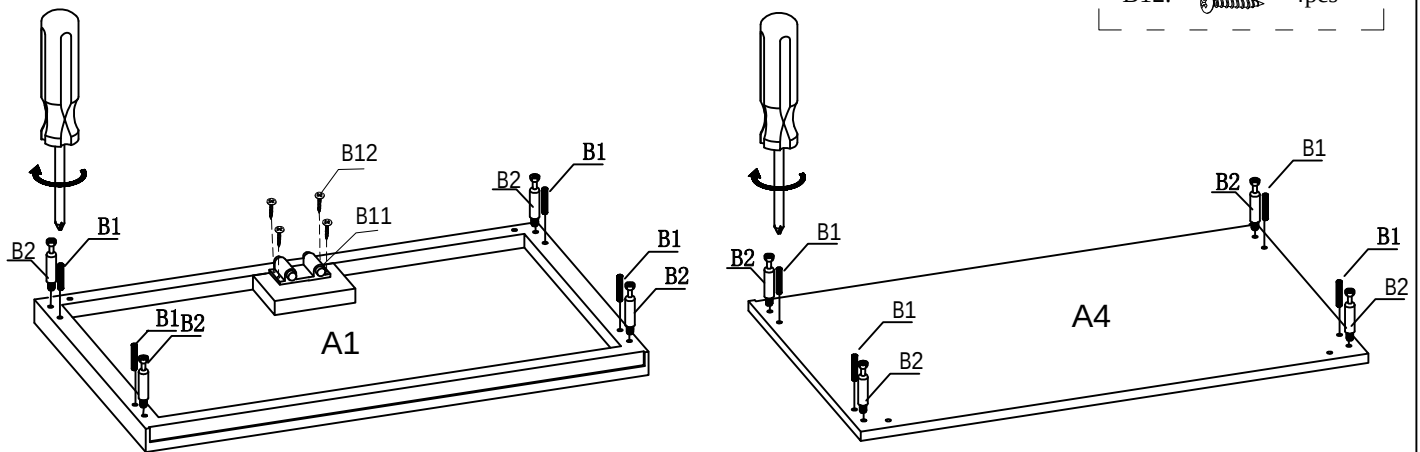

- 1). Insert Cam-Bolt (B2) & Wood Dowels (B1) into the holes on Bottom Panel (A4) and Top Panel (A1), then tighten Cam-Bolt (B2) with a Philips screwdriver.
- 2). Attached Magnets B11 to the bottom of Top Panel A1 using Screws B12.(There are pre-drilled holes).


Step 2:

B3:		8pcs
-----	---	------

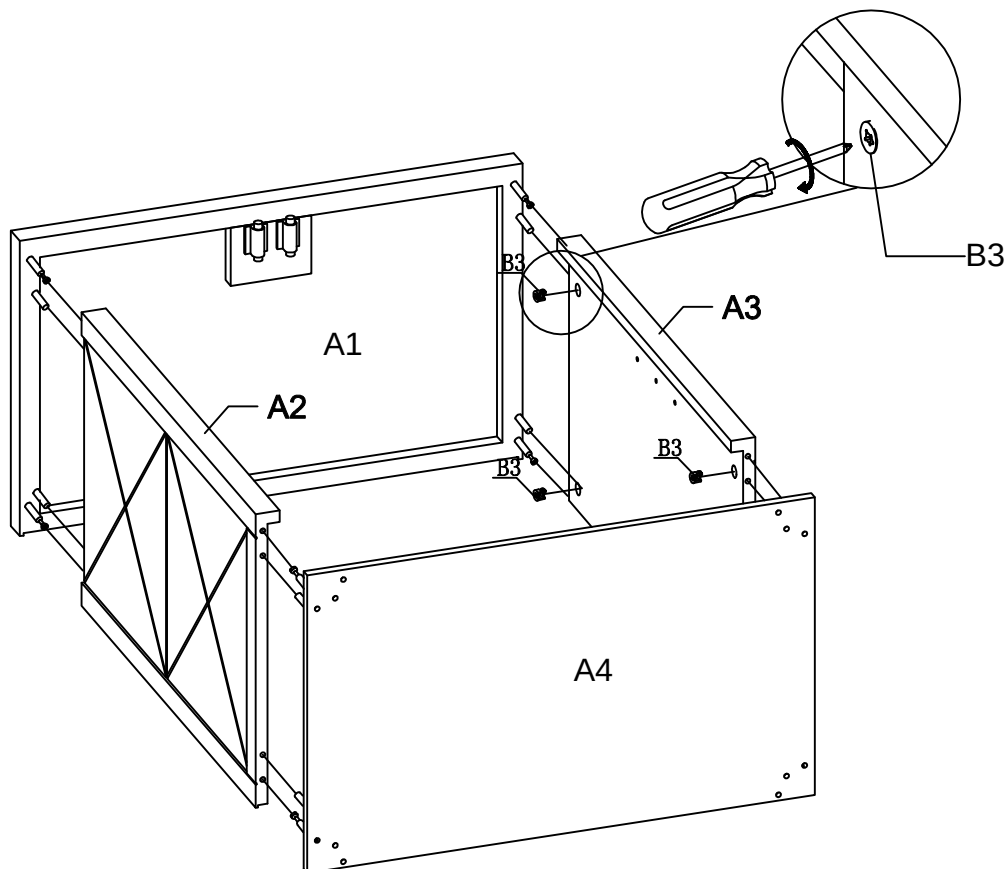


Attach Top Panel (A1) and Bottom Panel (A4) to Side Panels (A2&A3) by assembled Cam-Bolts (B2), Wood Dowel (B1) , then insert Cam-Locks (B3) into the holes of Side Panels(A2&A3)and tighten them with a Philips screwdriver.

Step 3:

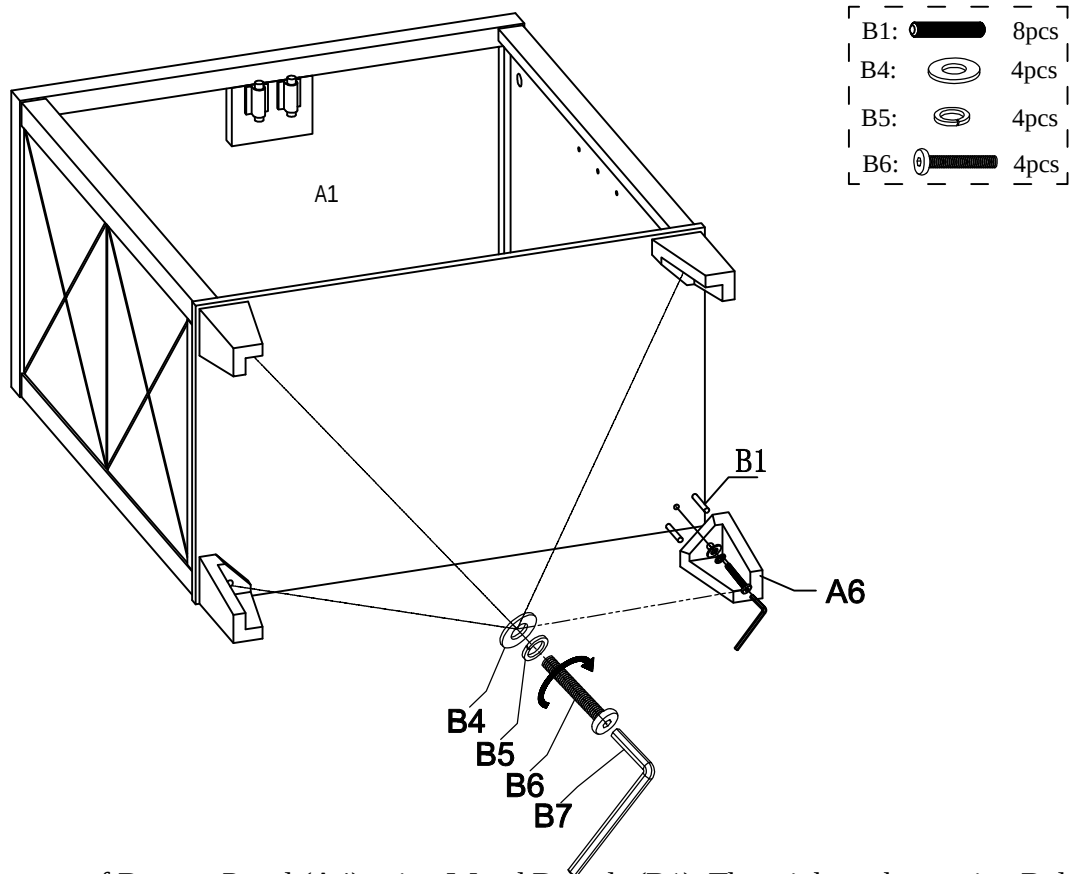


Attach Legs (A6) to the bottom of Bottom Panel (A4) using Wood Dowels (B1). Then tighten them using Bolts (B6) with Flat Washers (B4) and Spring Washers (B5) with Allen Wrench (B7).

Step 4:

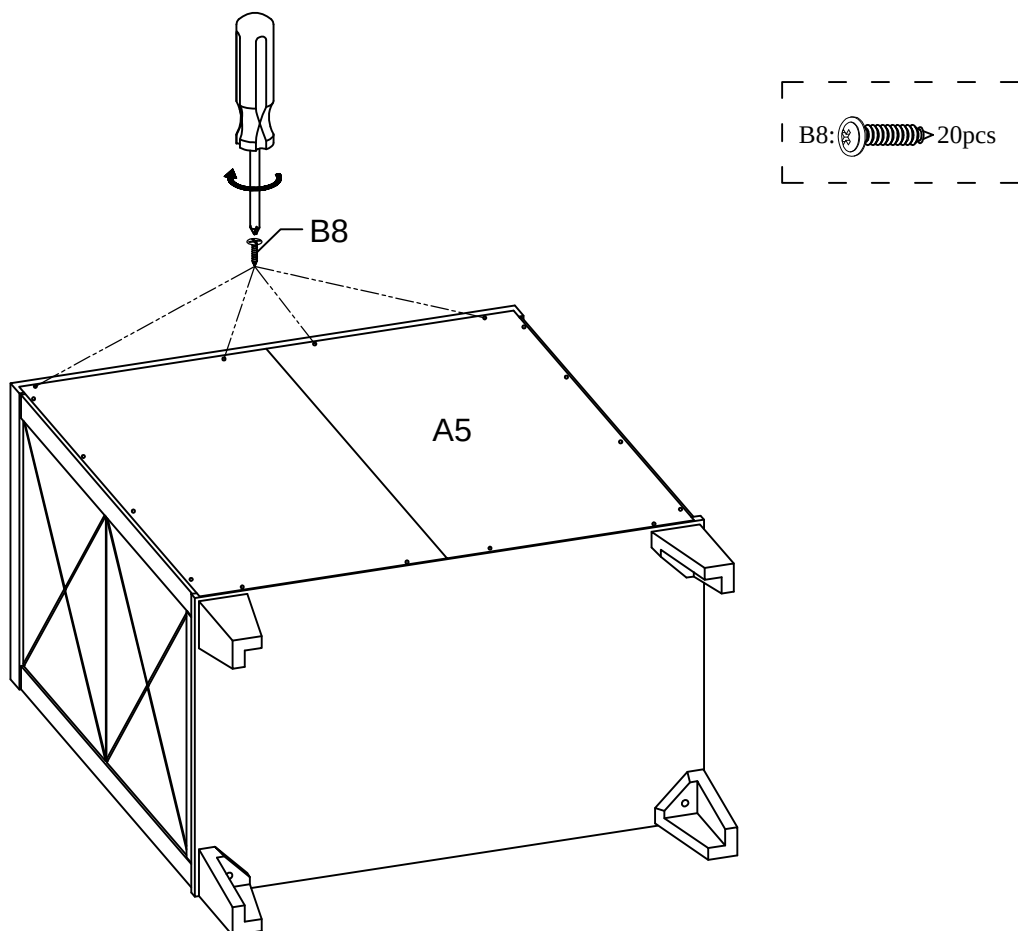


Assemble Back Panel (A5) to the back of this unit using Screws (B8) with a Philips screwdriver.

Step 5:

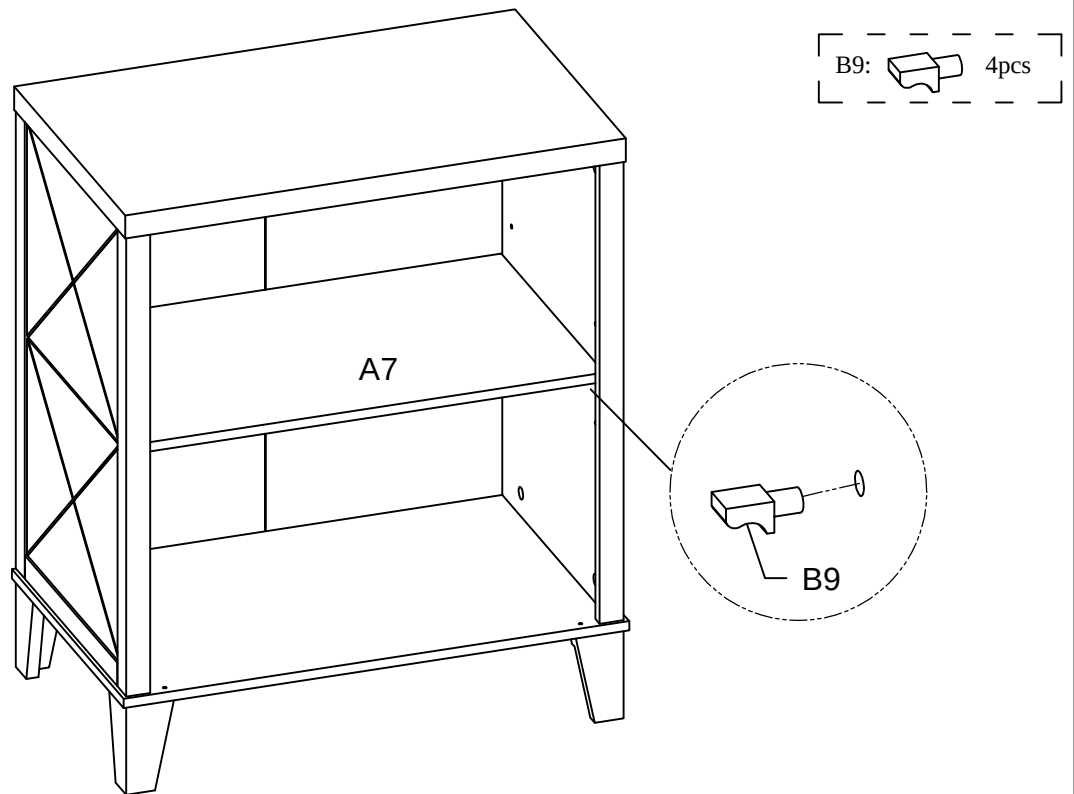


Insert Shelf Supports (B9) into the holes on Side Panels (A2&A3), then put Adjustable Shelf (A7) onto Shelf Supports (B9), please note holes are pre-drilled.

Step 6:

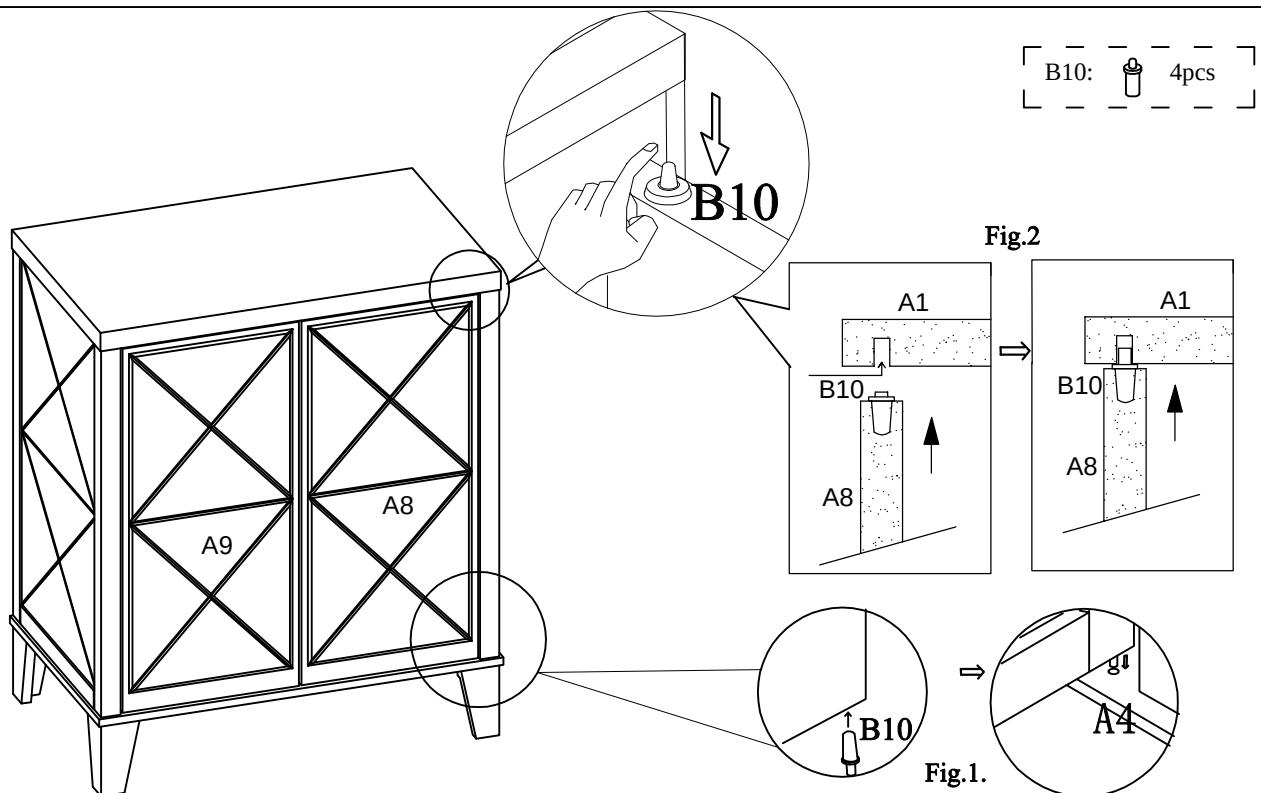

- 1). Insert Door Pin (B10) into the hole on the bottom of Door Panel A8, then connect Door Panel (A8) to Bottom Panel A4 as drawing Fig.1.
- 2). Insert Door Pin B10 into the hole on the top of Door Panel (A8), then press down Door Pin B10 (see Fig.2.) and hold the door panel carefully into the cabinet with the door pin popping up into the hole of Top Panel (A1).
- 3). Repeat the above steps to assemble the other door panel (A9).

Step 7:

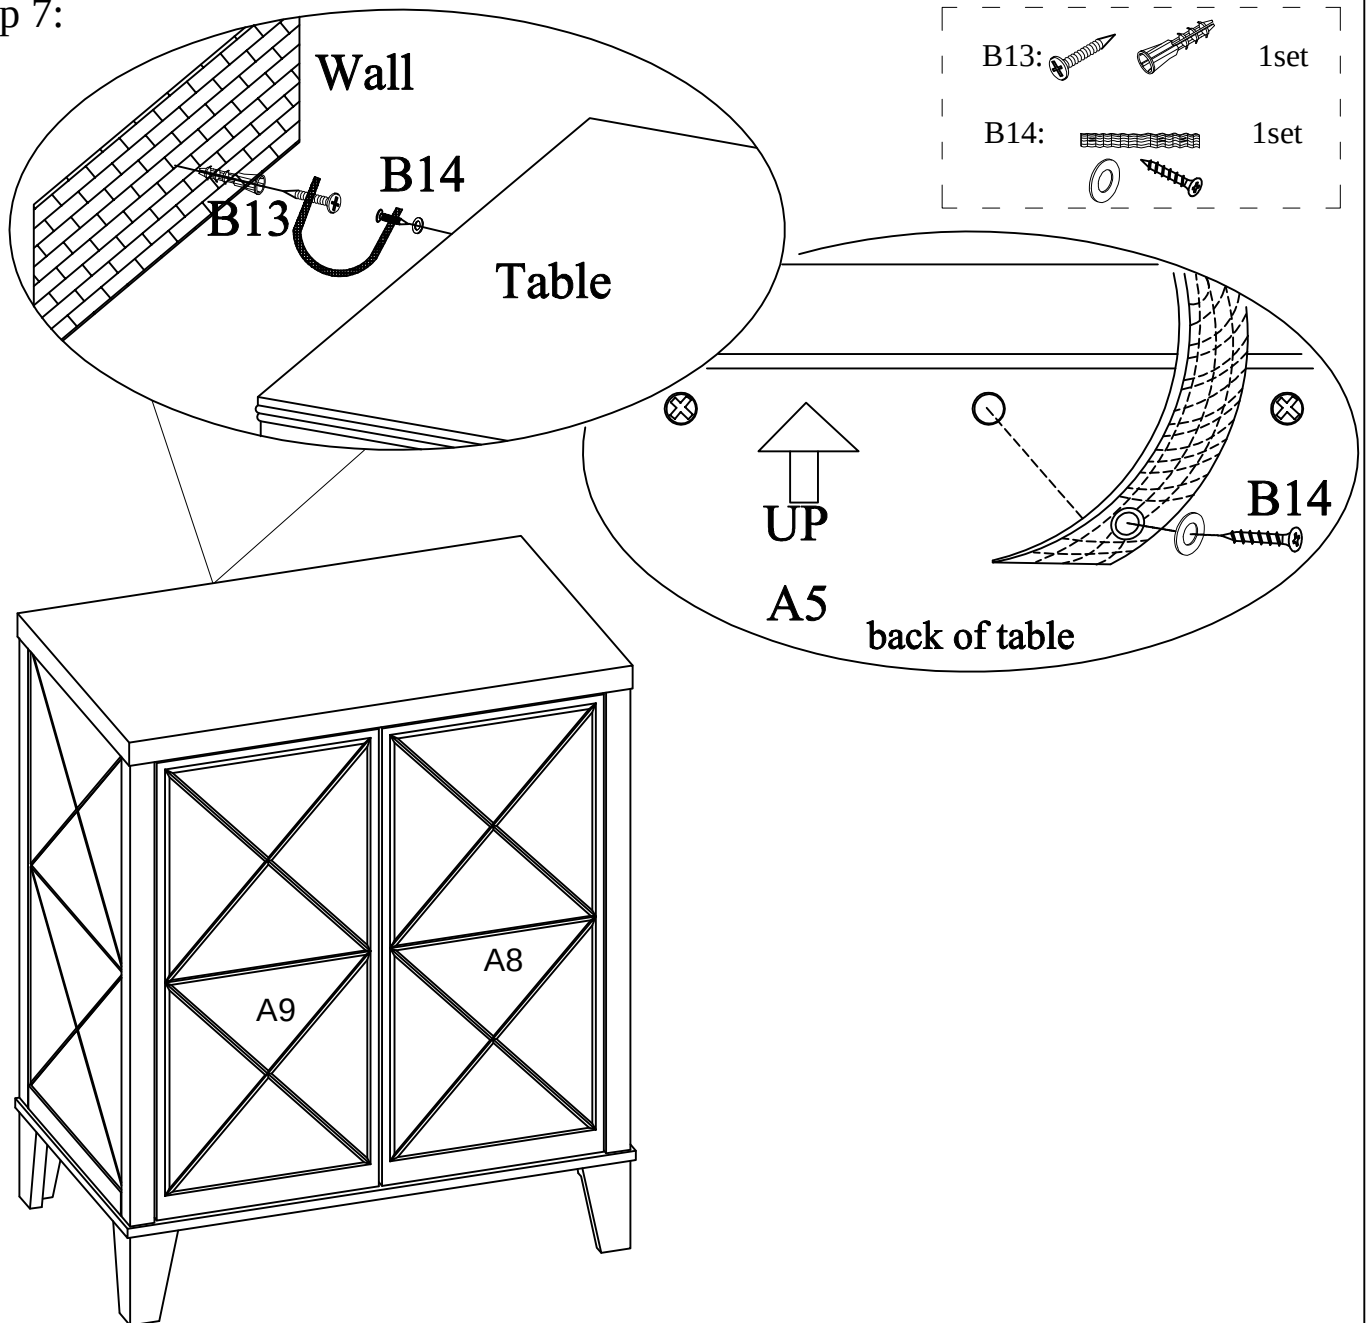

For your safety, please attach this unit to the wall by Anti-tip Kit B14 and Anchor with screw B13.

B1.	B2.	B3.	B4.
B5.	B6.	B8.	B12.