



HJMSBSC-1682501 Washbasin Cabinet

Installation Instructions

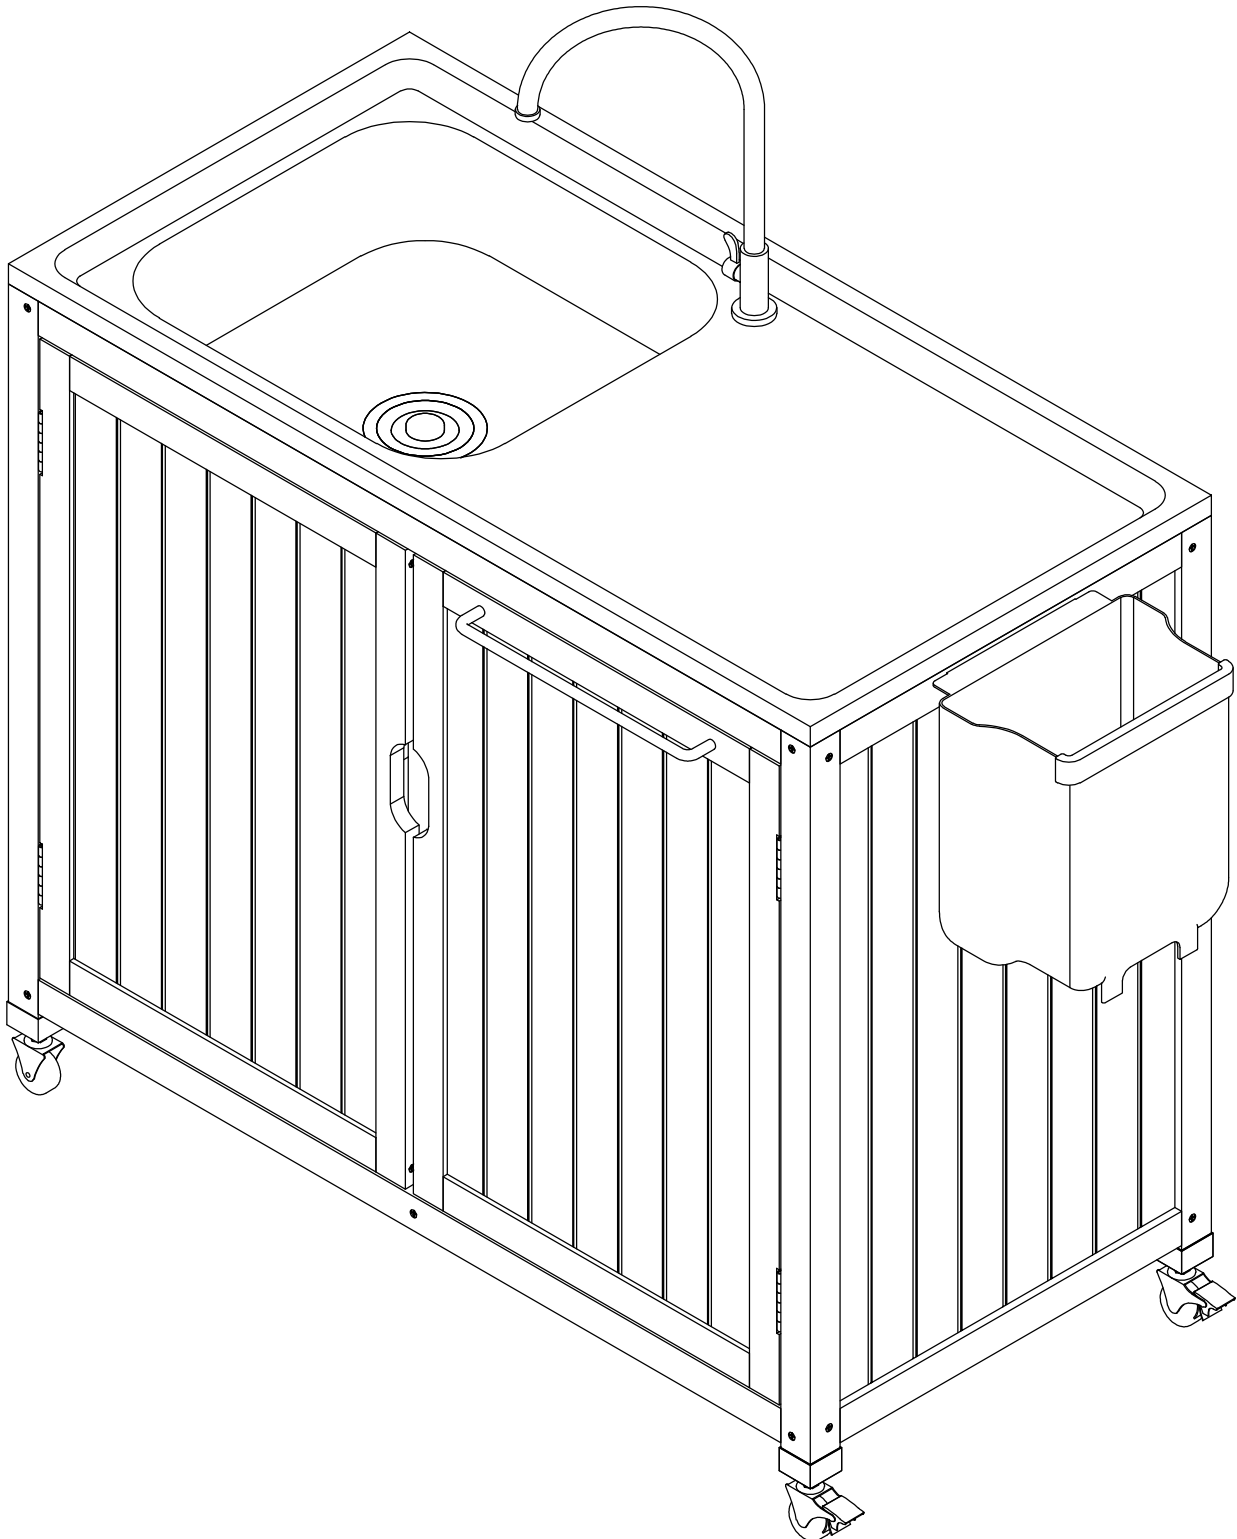


Board Identification


Not actual size

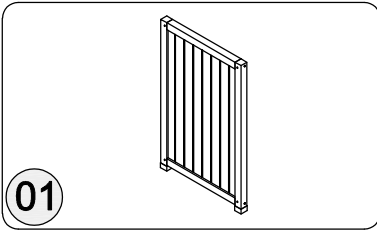


01
Left side frame
Qty:1

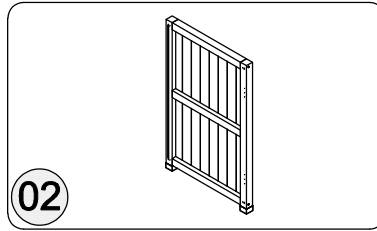


02
Right side frame
Qty:1

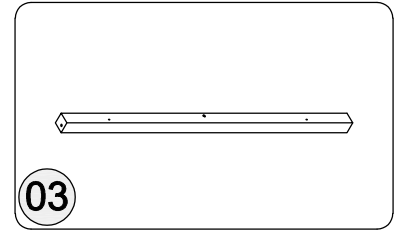


03
Upper front crossbar
Qty:1

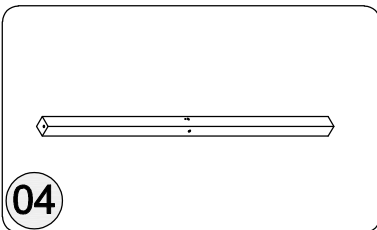


04
Lower front crossbar
Qty:1

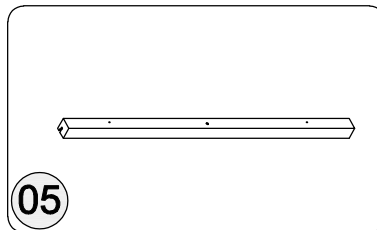


05
Upper rear crossbar
Qty:1

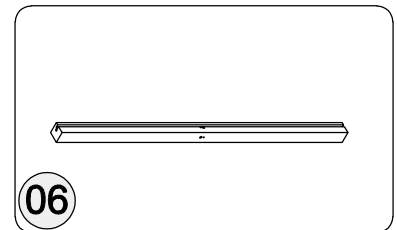


06
Lower rear crossbar
Qty:1

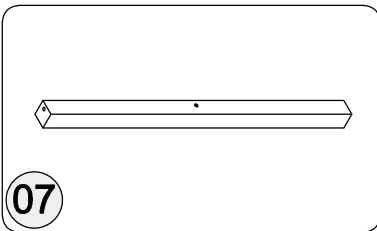


07
Mid front vertical bar
Qty:1

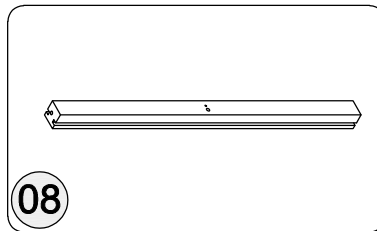


08
Mid rear vertical bar
Qty:1

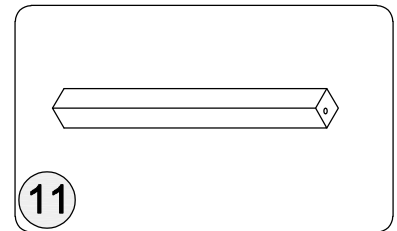


11
Bottom pull bar
Qty:1

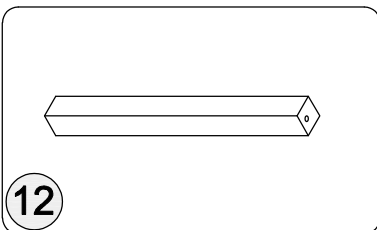


12
Mid pull bar
Qty:1

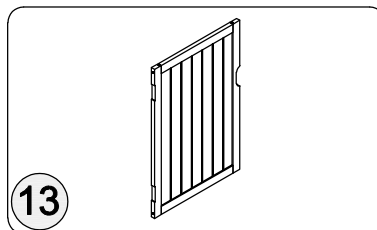


13
Left door frame
Qty:1

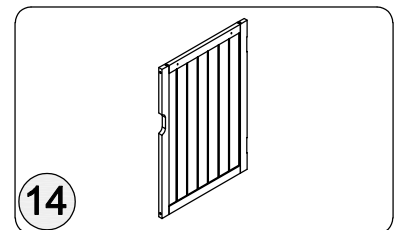


14
Right door frame
Qty:1

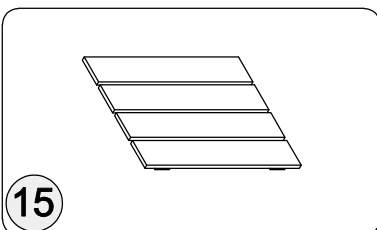

15
Shelf frame
Qty:1

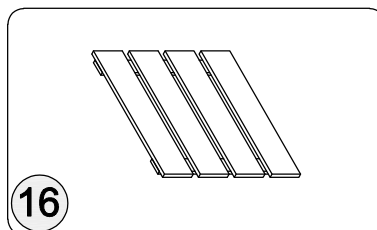


16
bottom plate frame
Qty:2

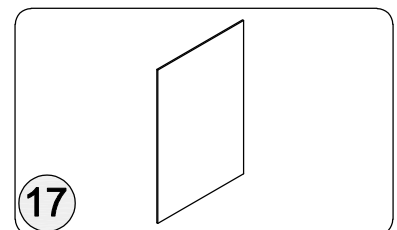


17
Left rear panel
Qty:1

Board Identification


Not actual size

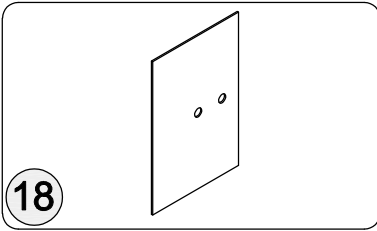


Right rear panel
Qty:1

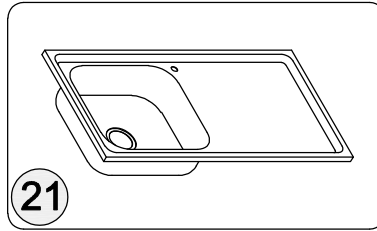

Stainless steel basin
Qty:1

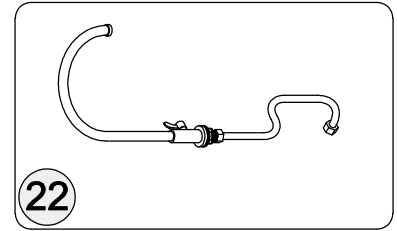


Faucet + Inlet pipe
Qty:1

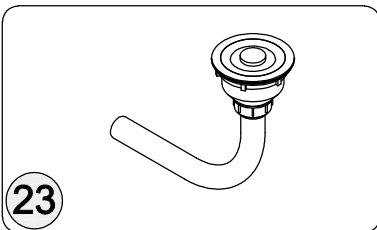


Fixing parts + Drain pipe
Qty:1

Hardware Identification


Not actual size

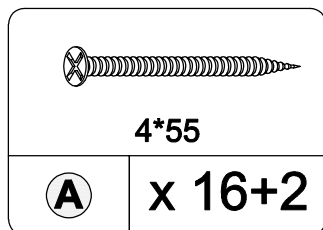


Screw

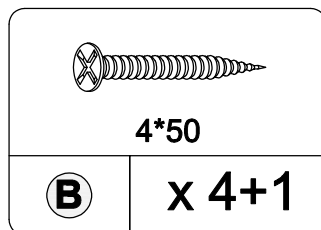


Screw

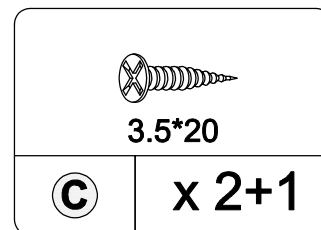


Screw

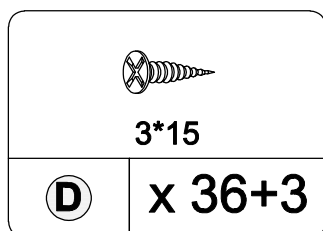


Screw

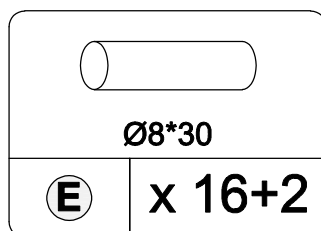


Wood dowel

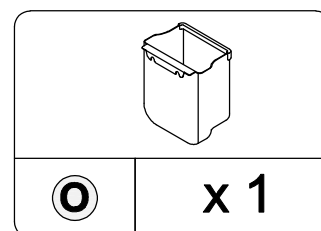


Foldable trash bin

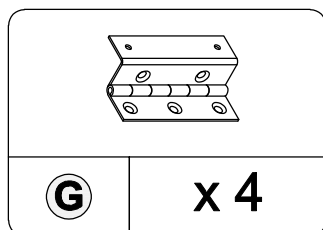


Hinge

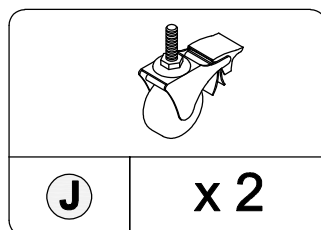


Brake caster

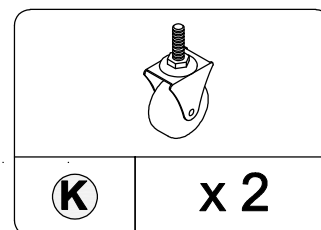


Caster

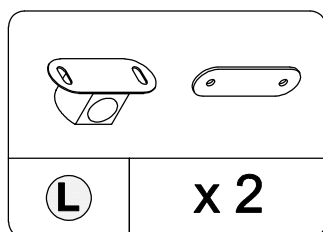

Magnetic suction

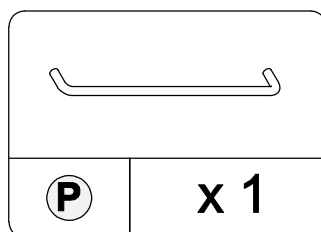


Towel rack


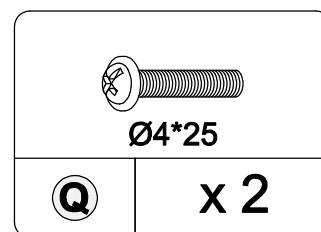


Towel rack screw


Explosion diagram

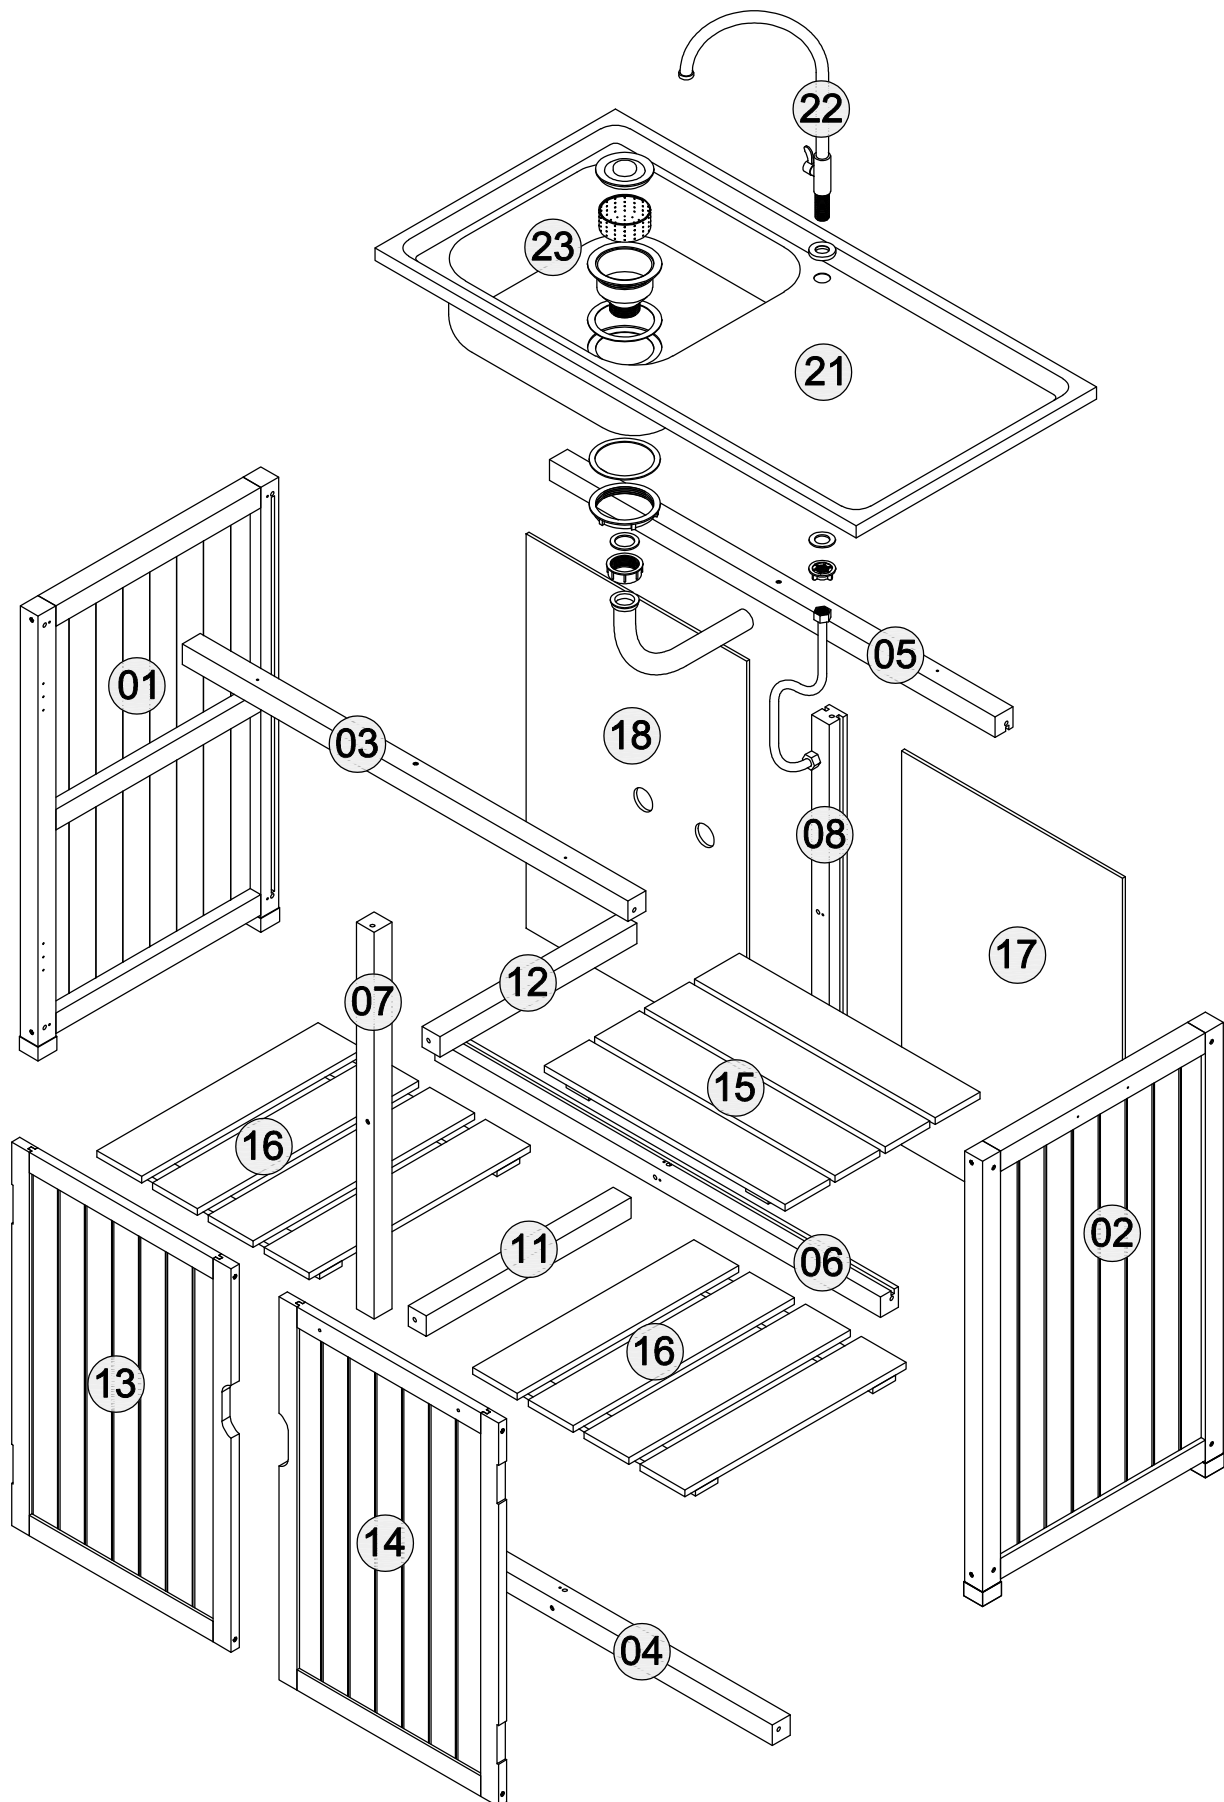



Step 1

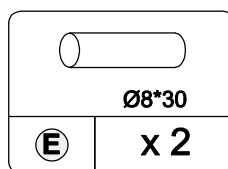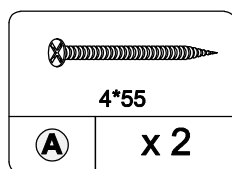


⚠ Pay attention to the hole position.

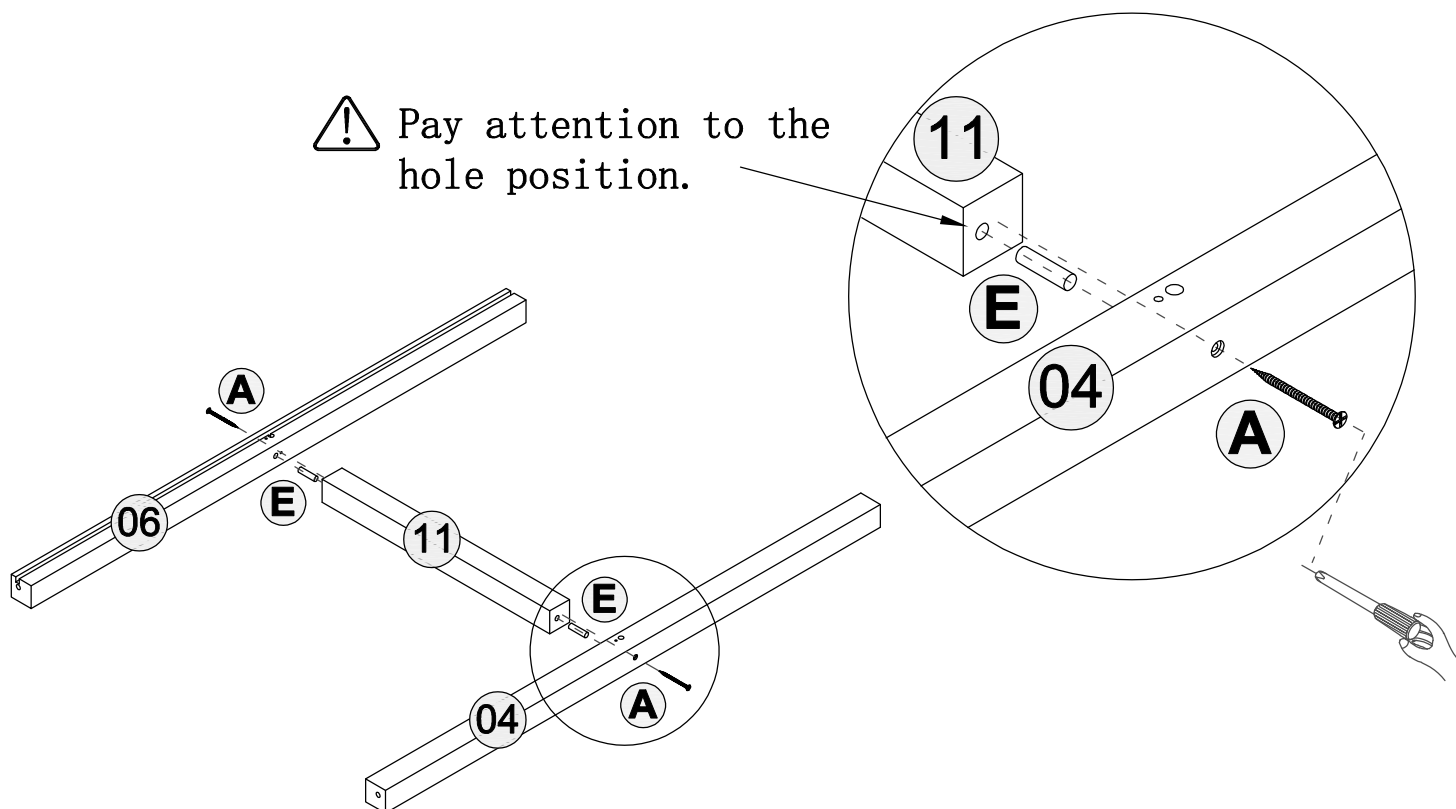


Step 2

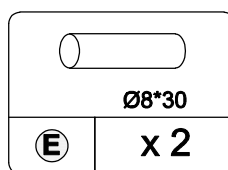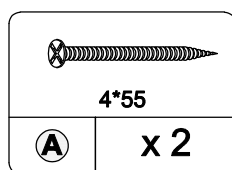


⚠ Pay attention to the hole position.

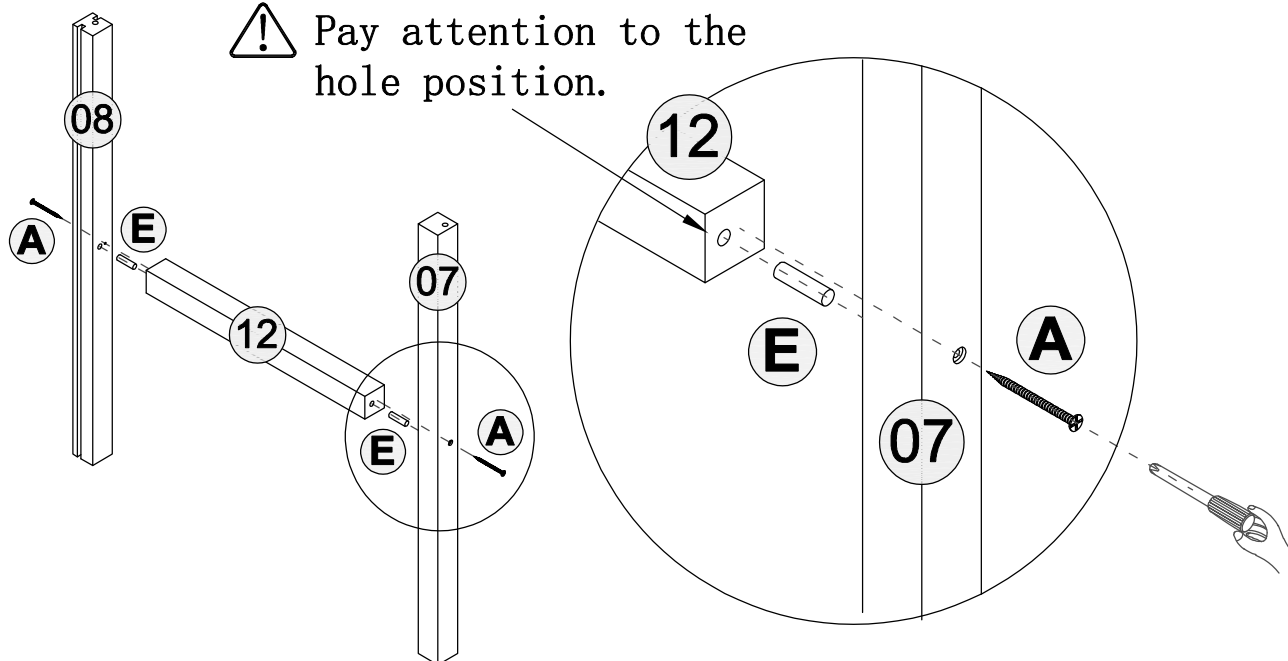


Step 3

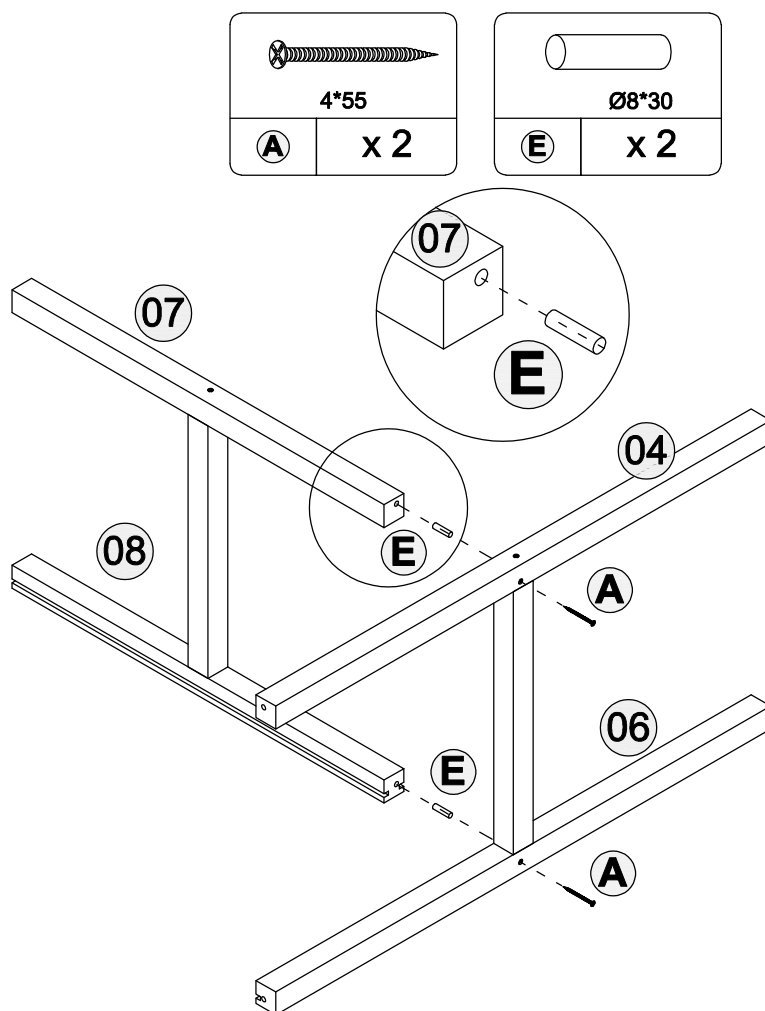



Step 4

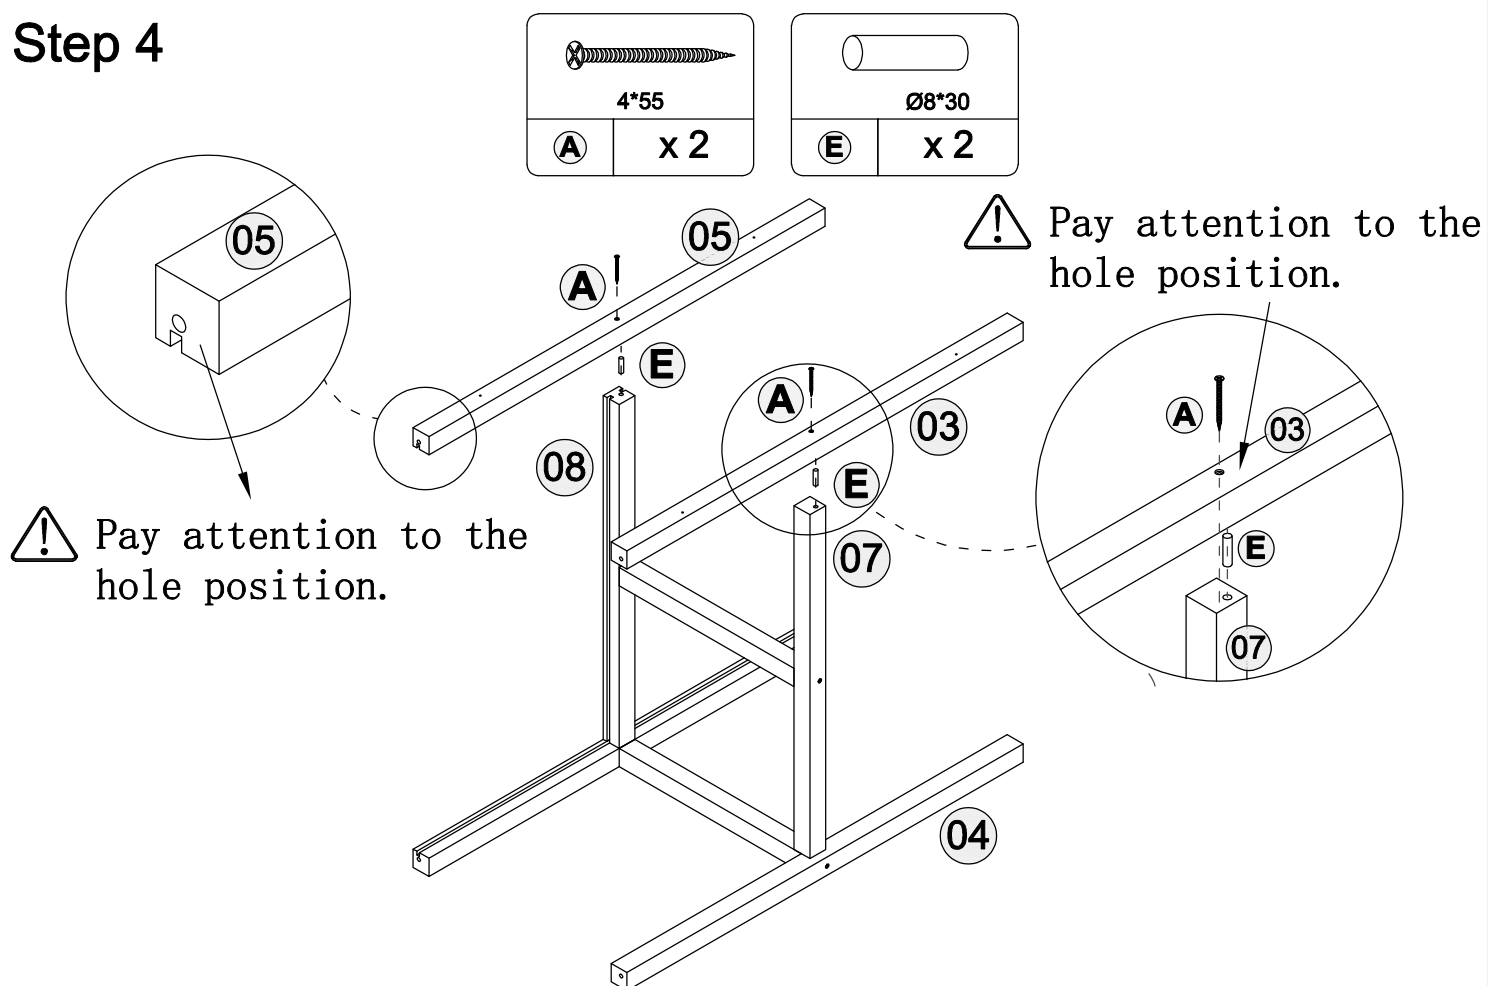

Step 5

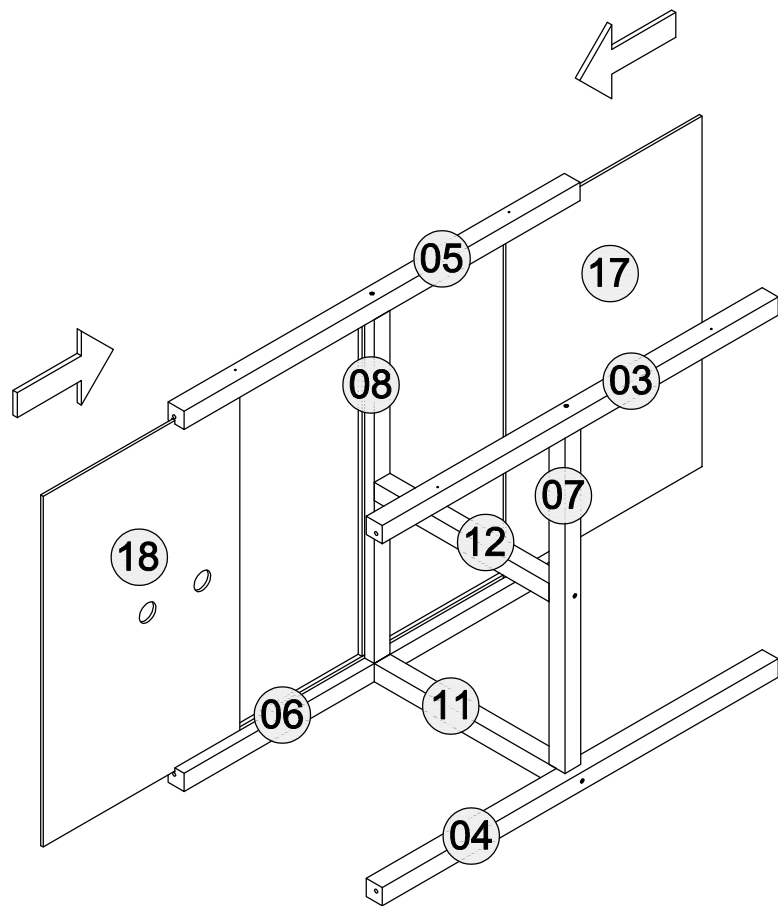



Step 6

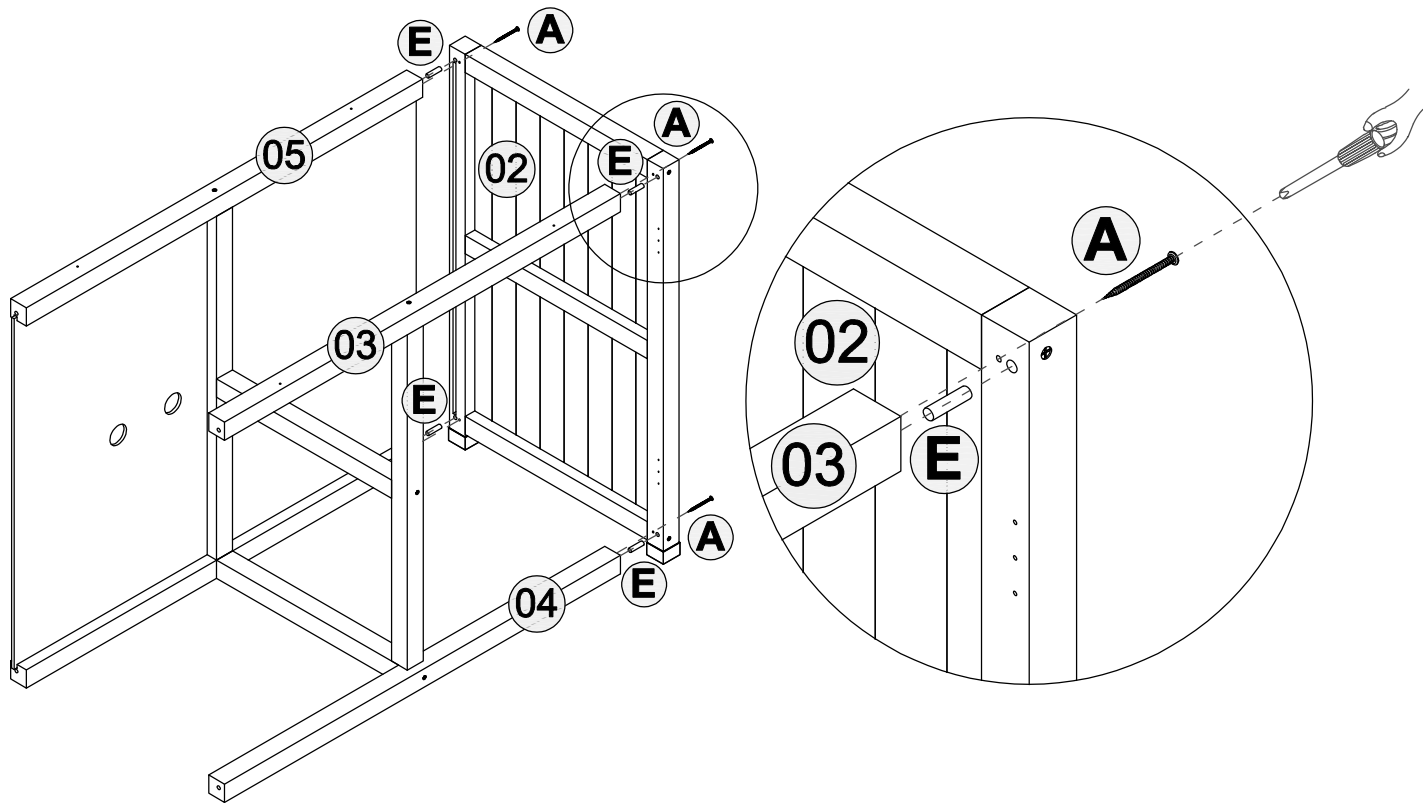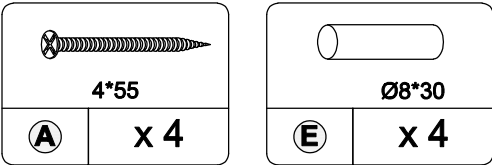

Step 7

	
4*55	
A	x 4


	
Ø8*30	
E	x 4

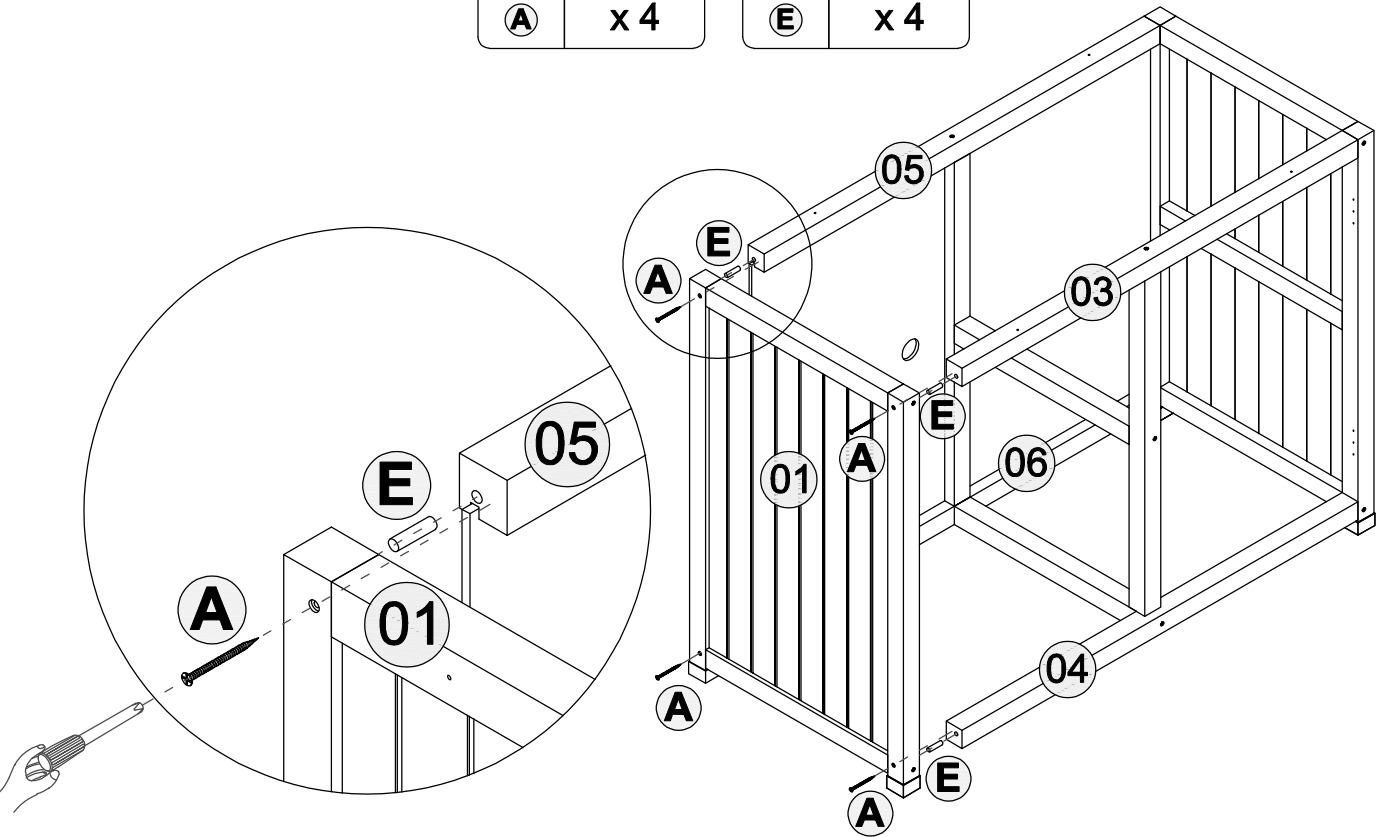

Step 8



	
J	
x 2	

	
K	
x 2	

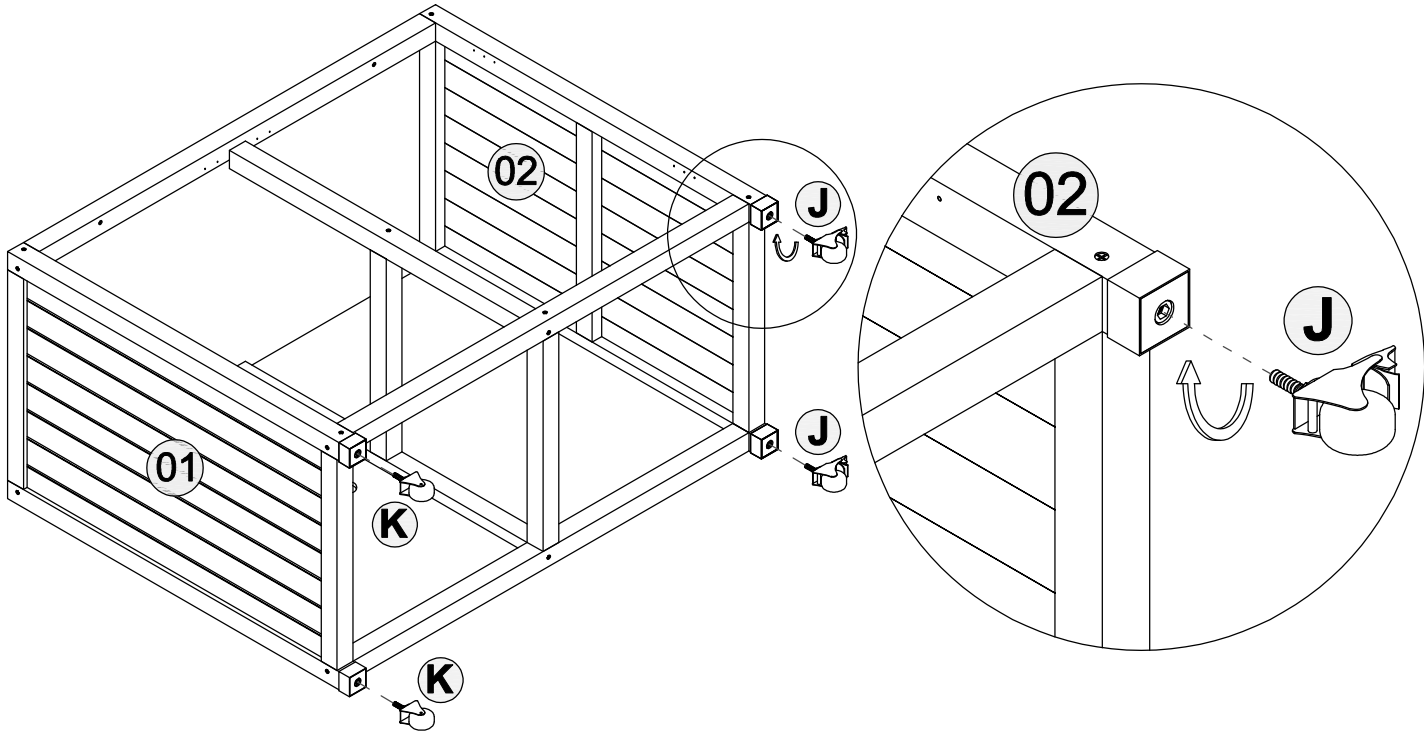


Step 9


			
3*15			
L	x 2	D	x 4

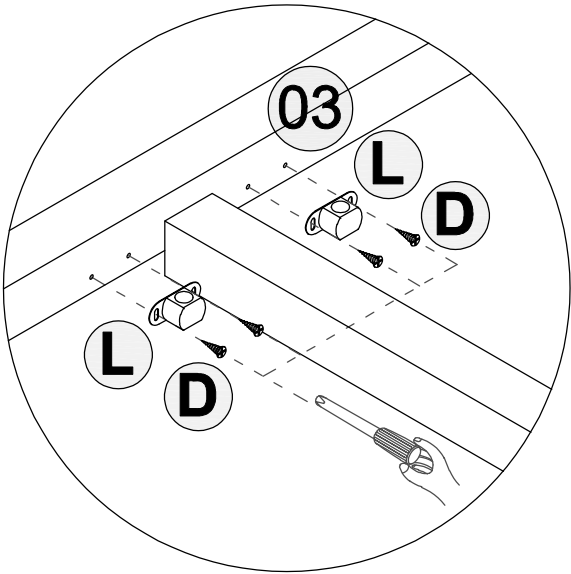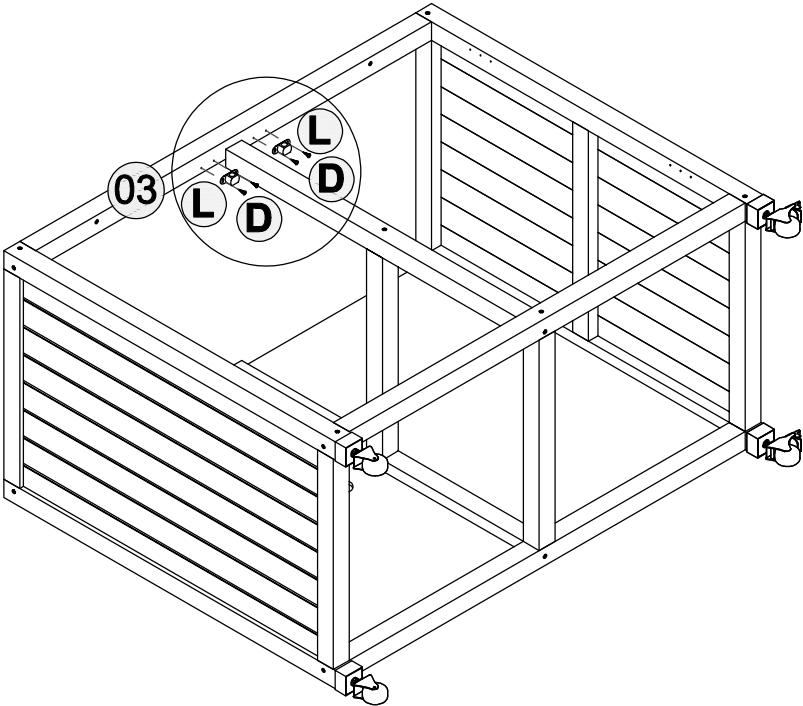


Step 10

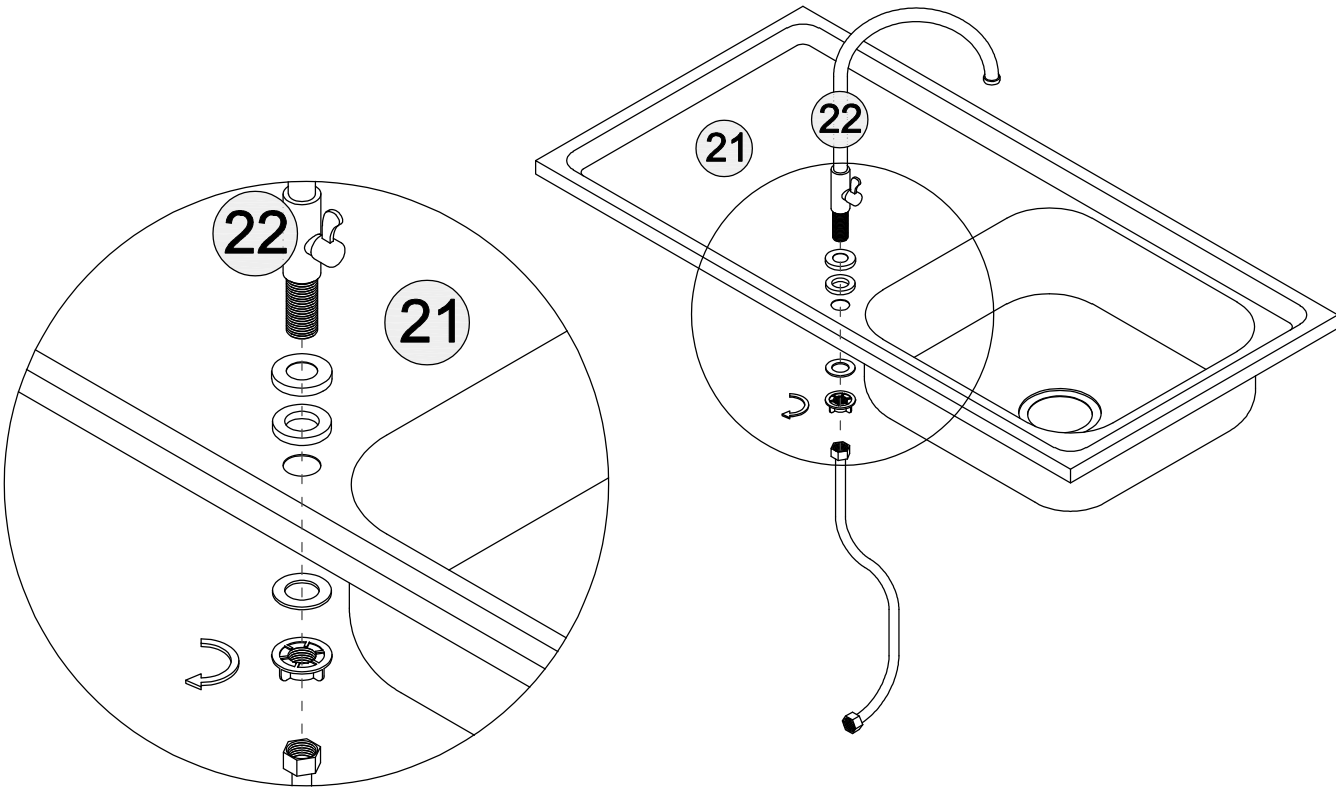


Step 11

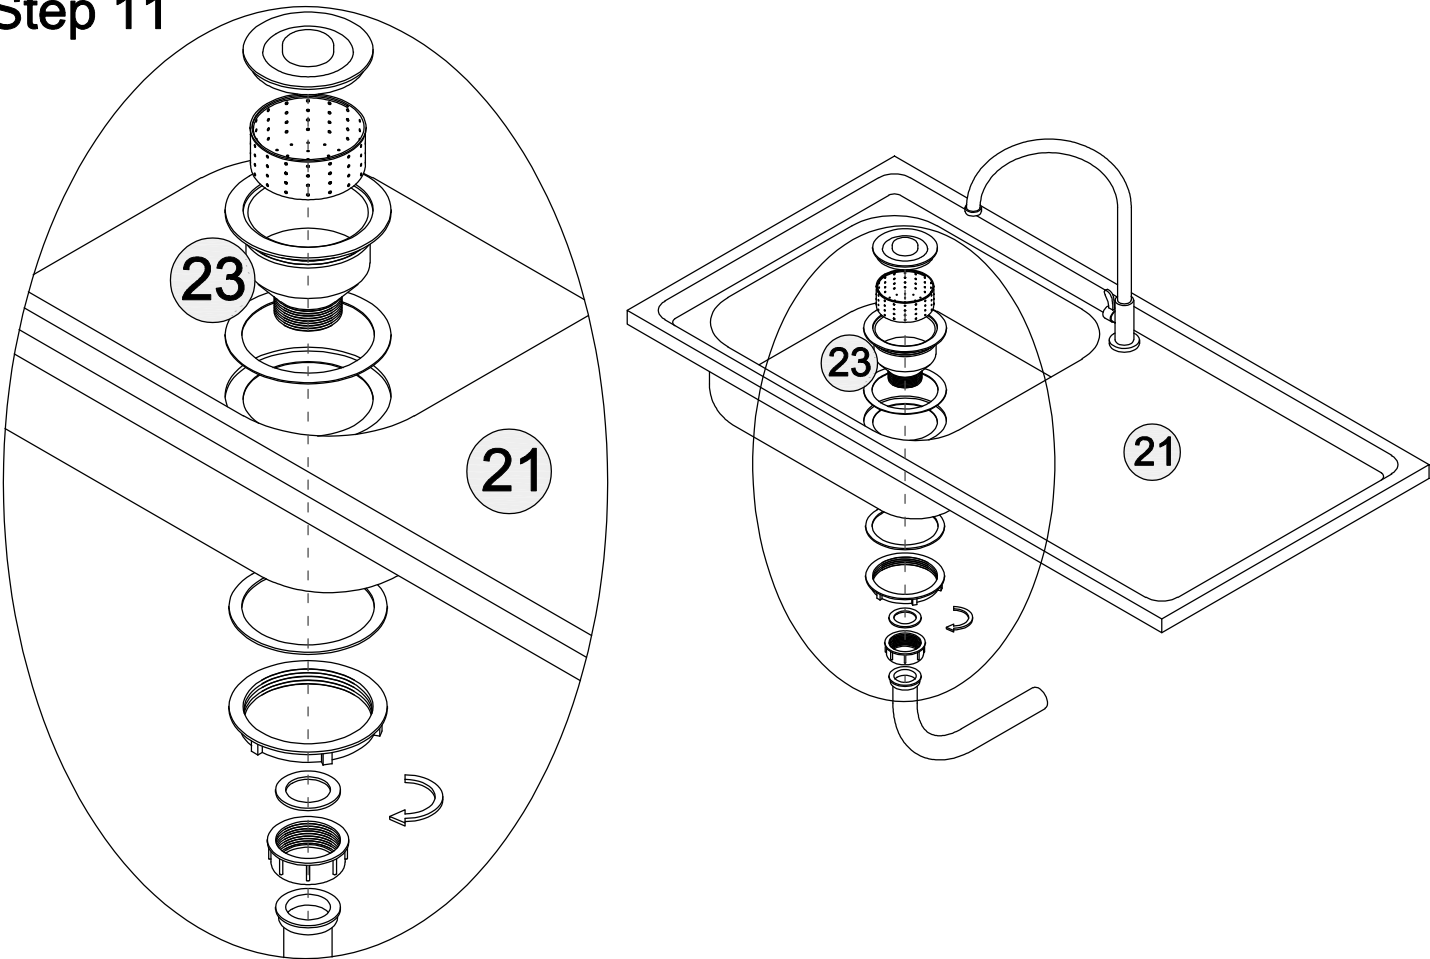


Step 12

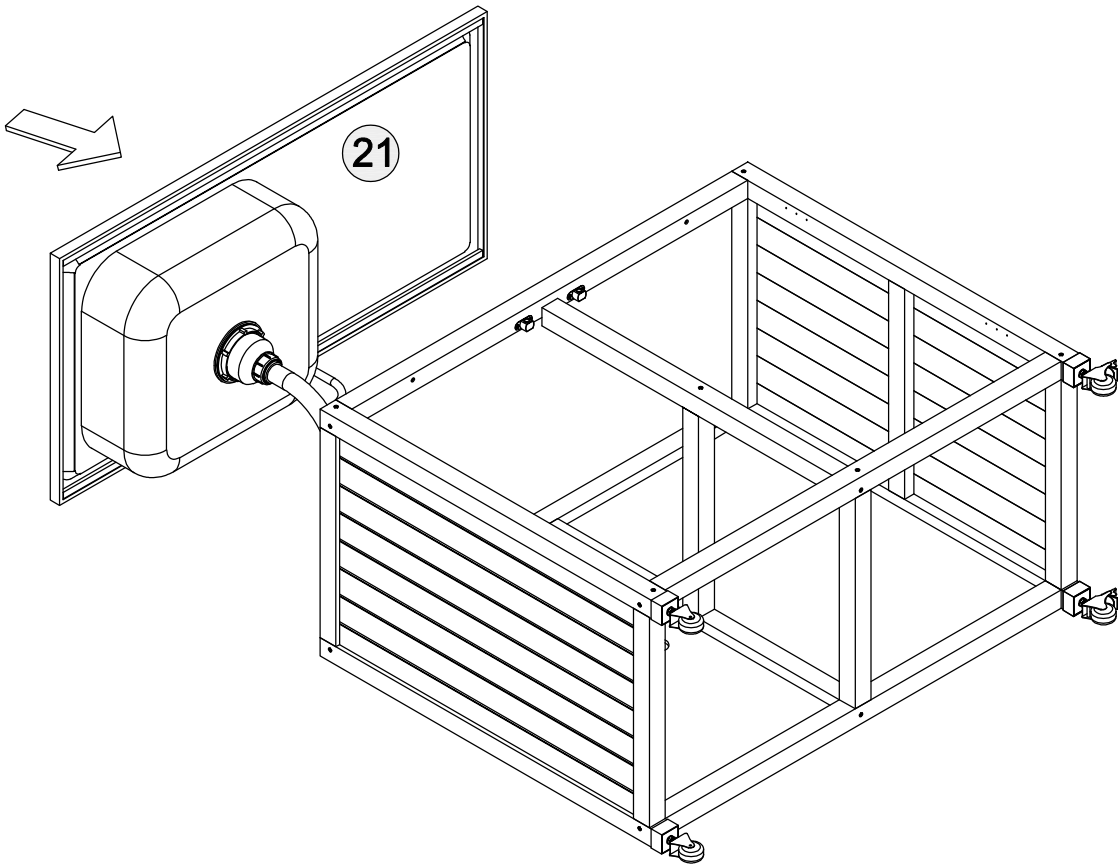


Step 13


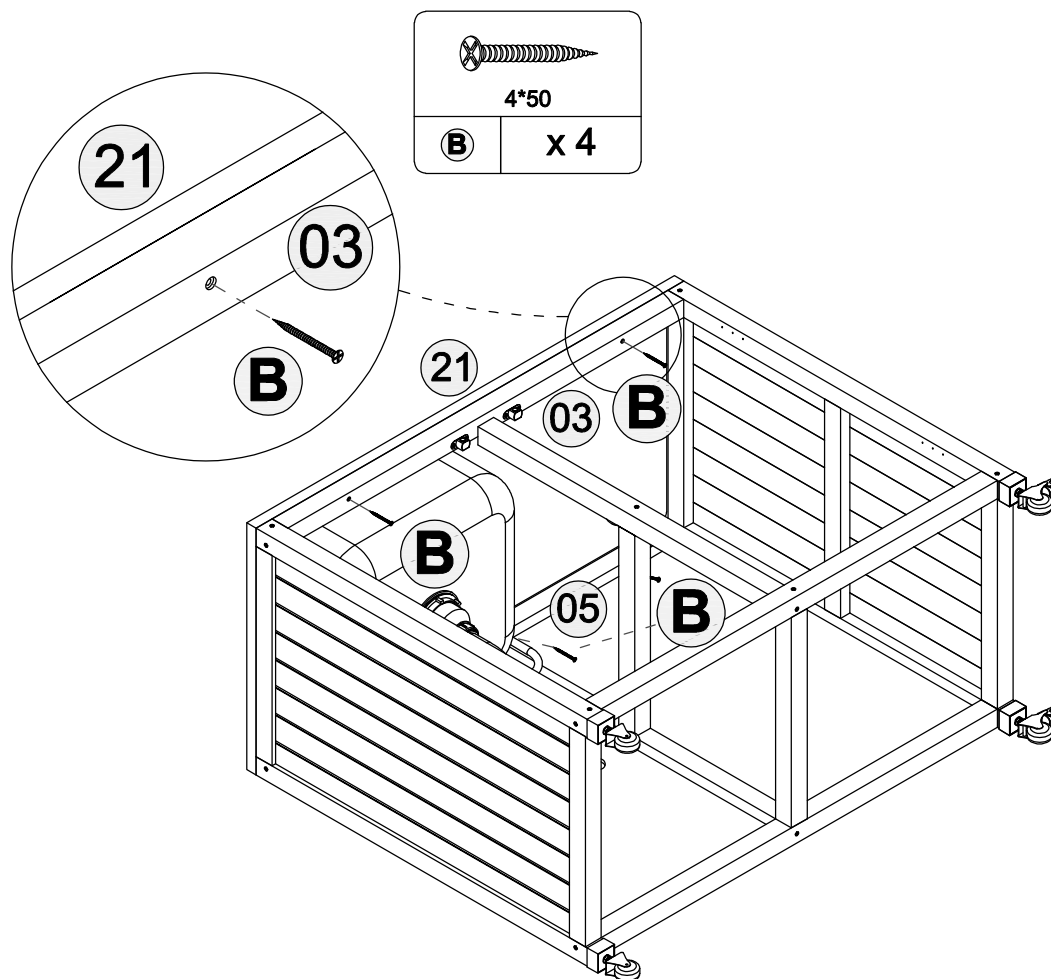


Step 14 Put the laminate and bottom board into the cabinet at an inclination of 30 degrees and lay them flat.

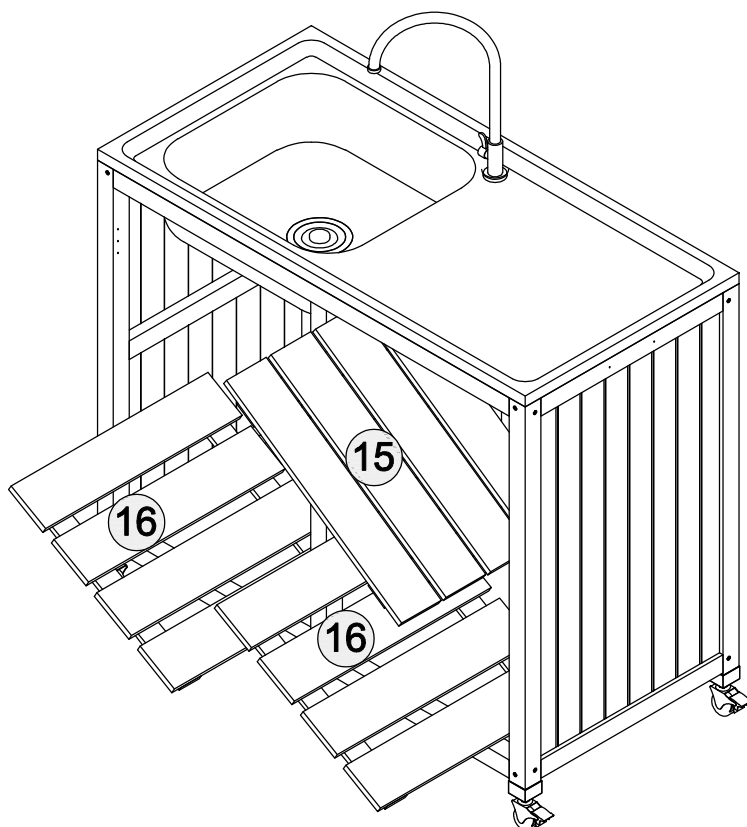



Step 15

	
G	x 4
	
D	x 8

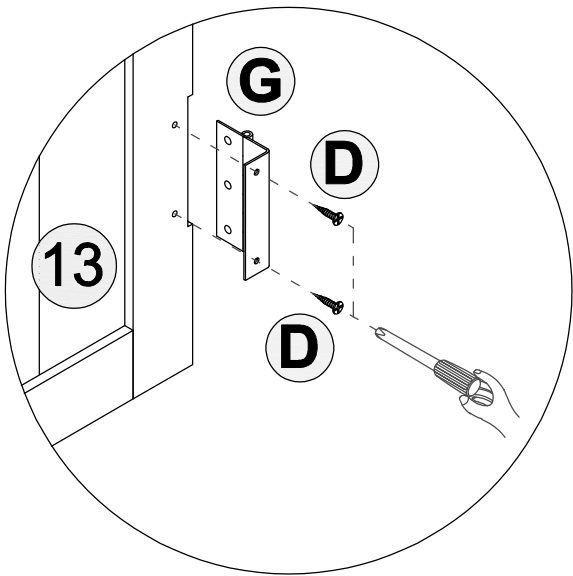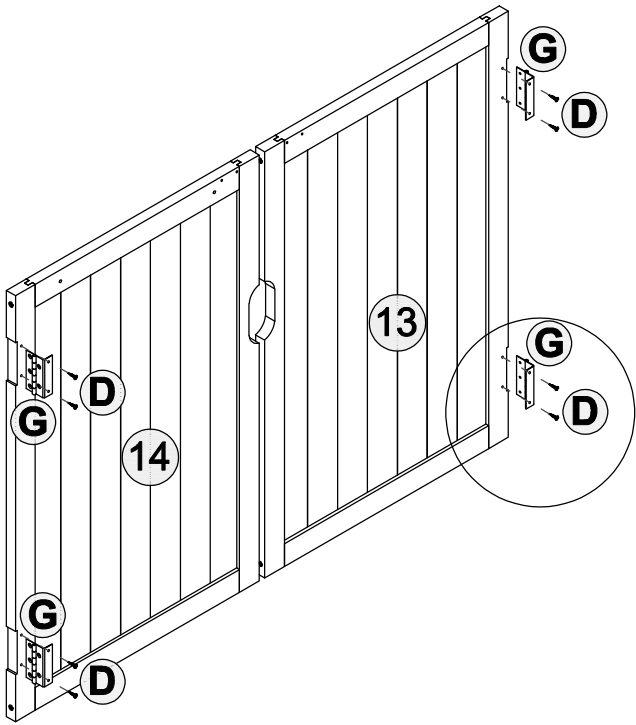


Step 16

	
3*15	
D	x 8

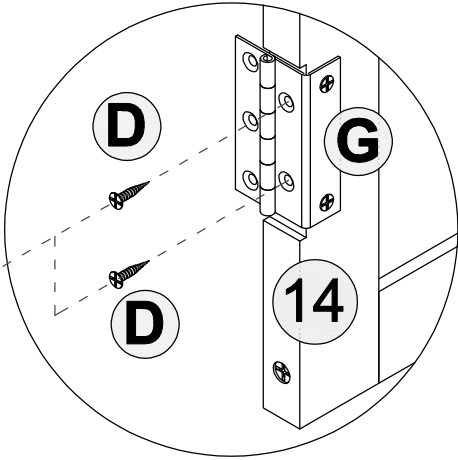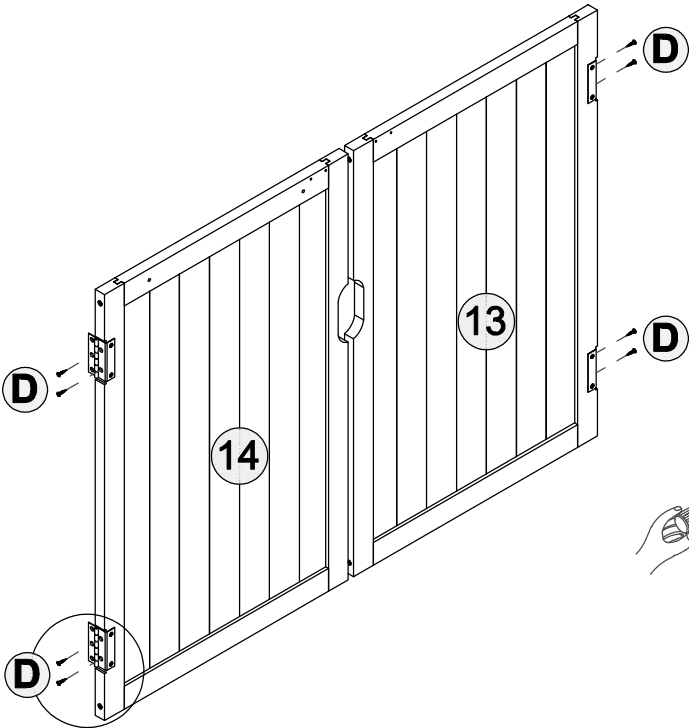


Step 17

							
L		3*15		P		Ø4*25	
x 2		x 4		x 1		x 2	

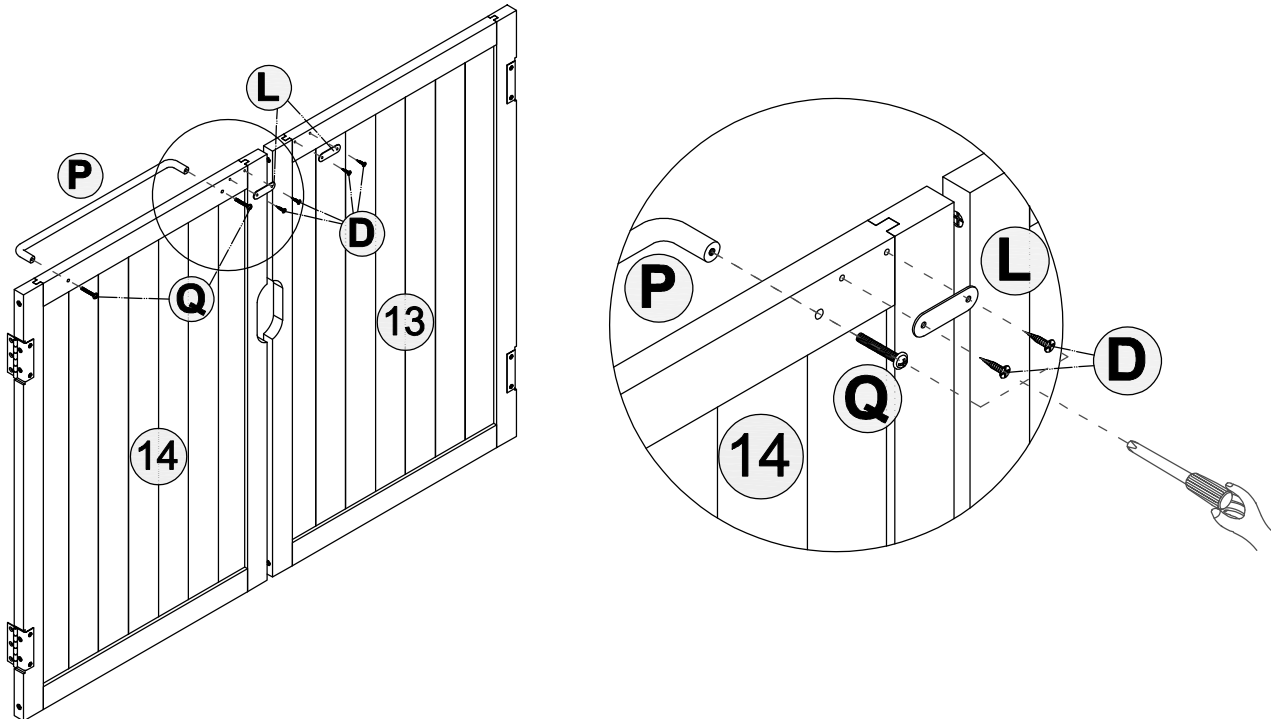



Step 18

	
3*15	
D	x 12

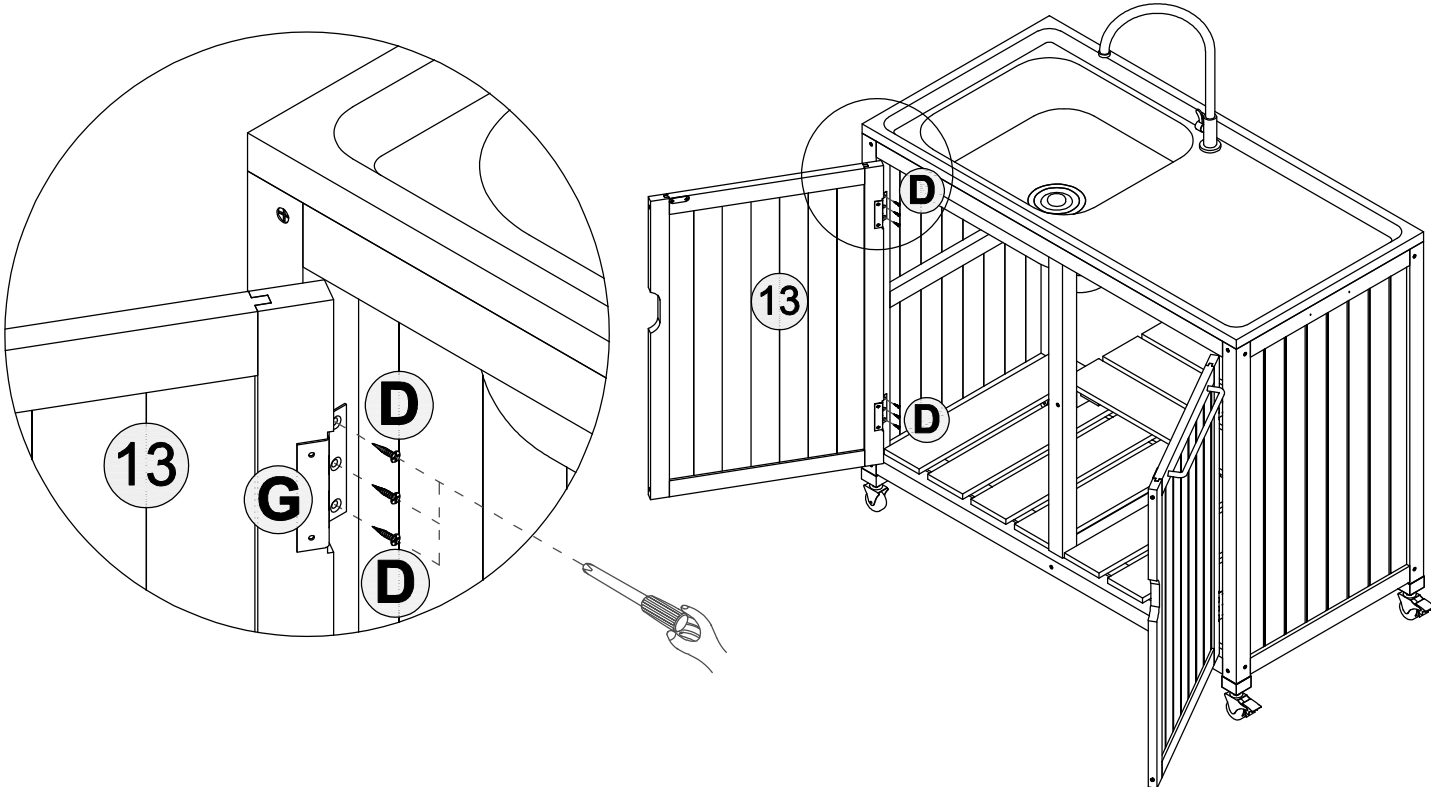

Step 19

 3.5*20	
C	x 2

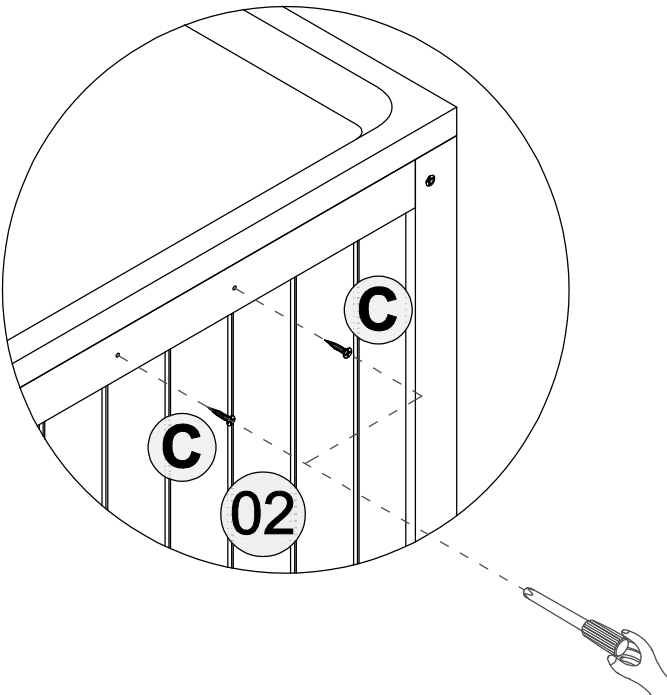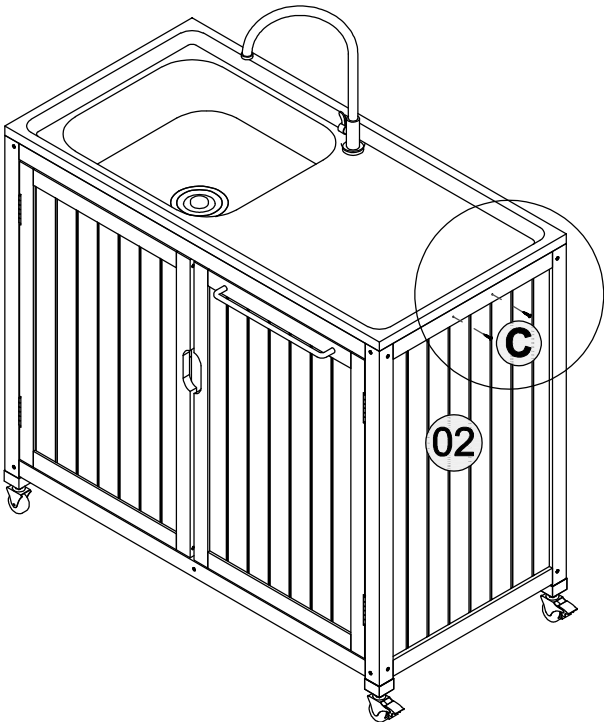

Step 20

	
O	x 1

