


FG0C004-DA1



FG0C004-CK1

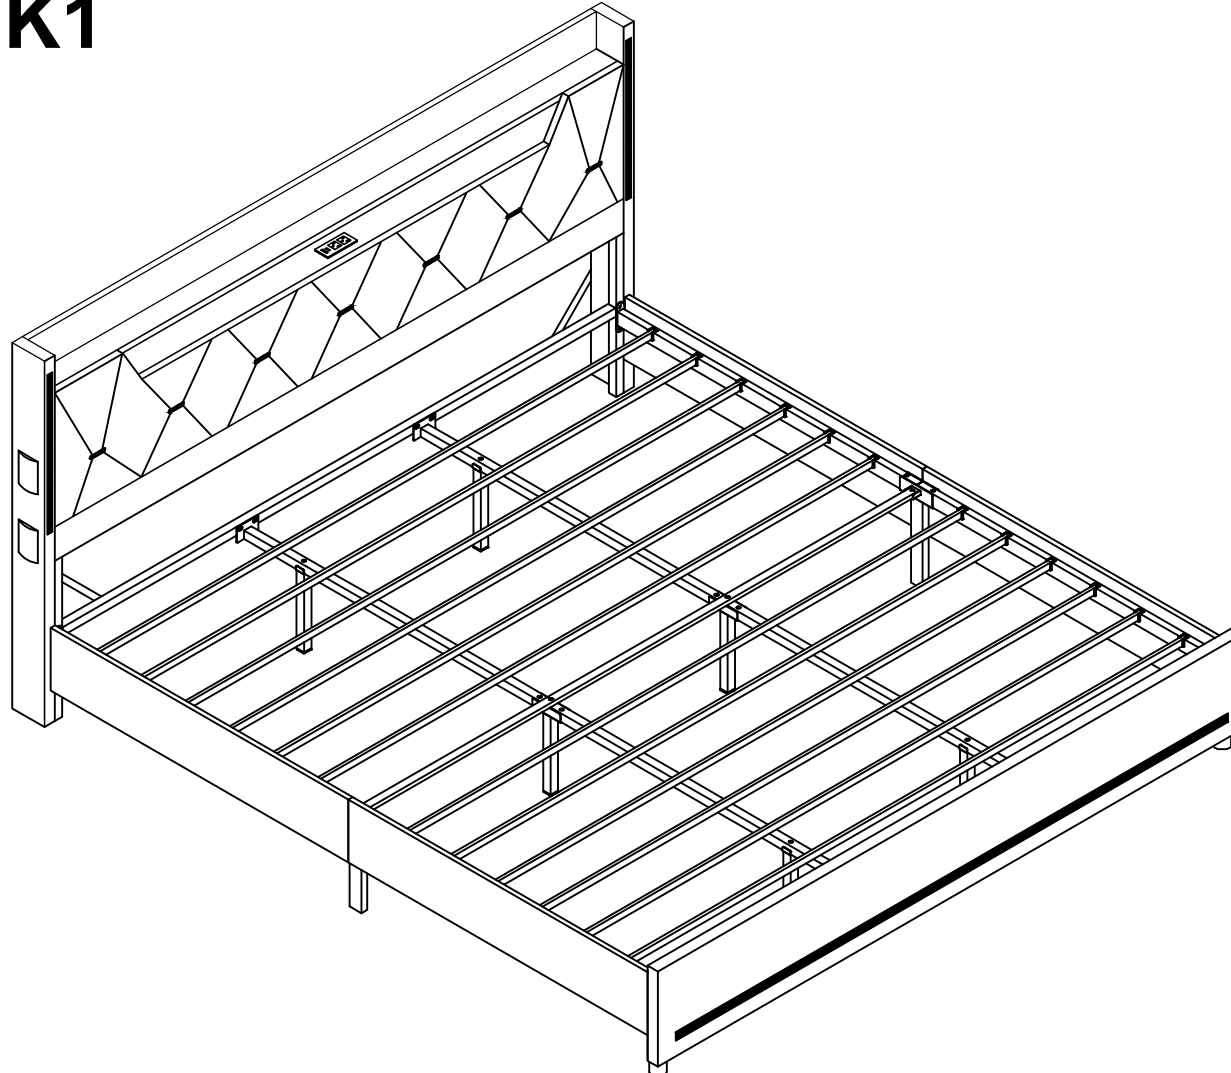


Note:

- 1.Should be assembled on flat ground to keep balance.
- 2.Before completing the installation,do not fully tighten the screws.
- 3.This product should be assembled by at least 2 people.


Version:2.0

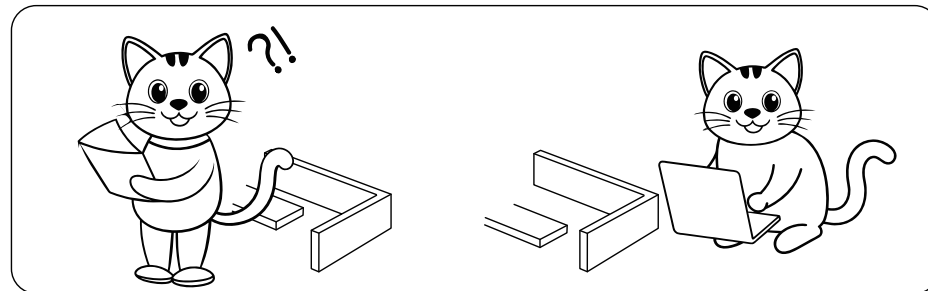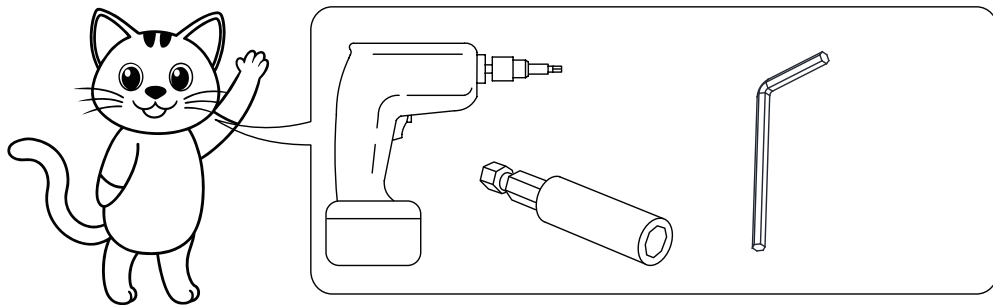


Please E-mail us if you need help

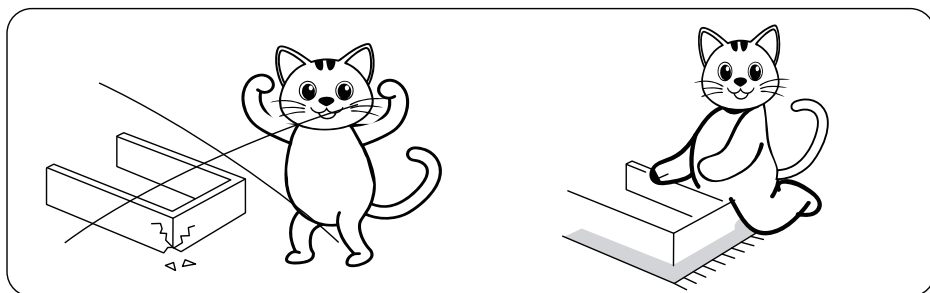

Violent installation is prohibited

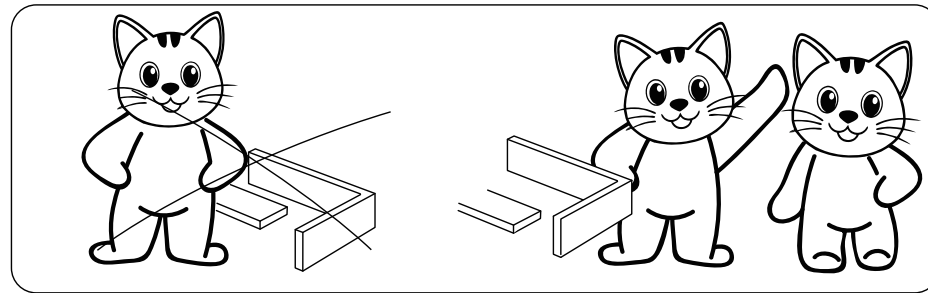

Multi-person cooperation is recommended

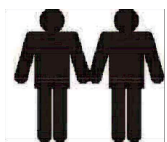

Two people at least is needed for assembling the product.




The whole manual instruction needs to be read before the assembly begins.

Notes:


1. Assemble on flat ground to keep the balance.
2. Do not tighten all the screws before the installation completed.

Assembly Instruction

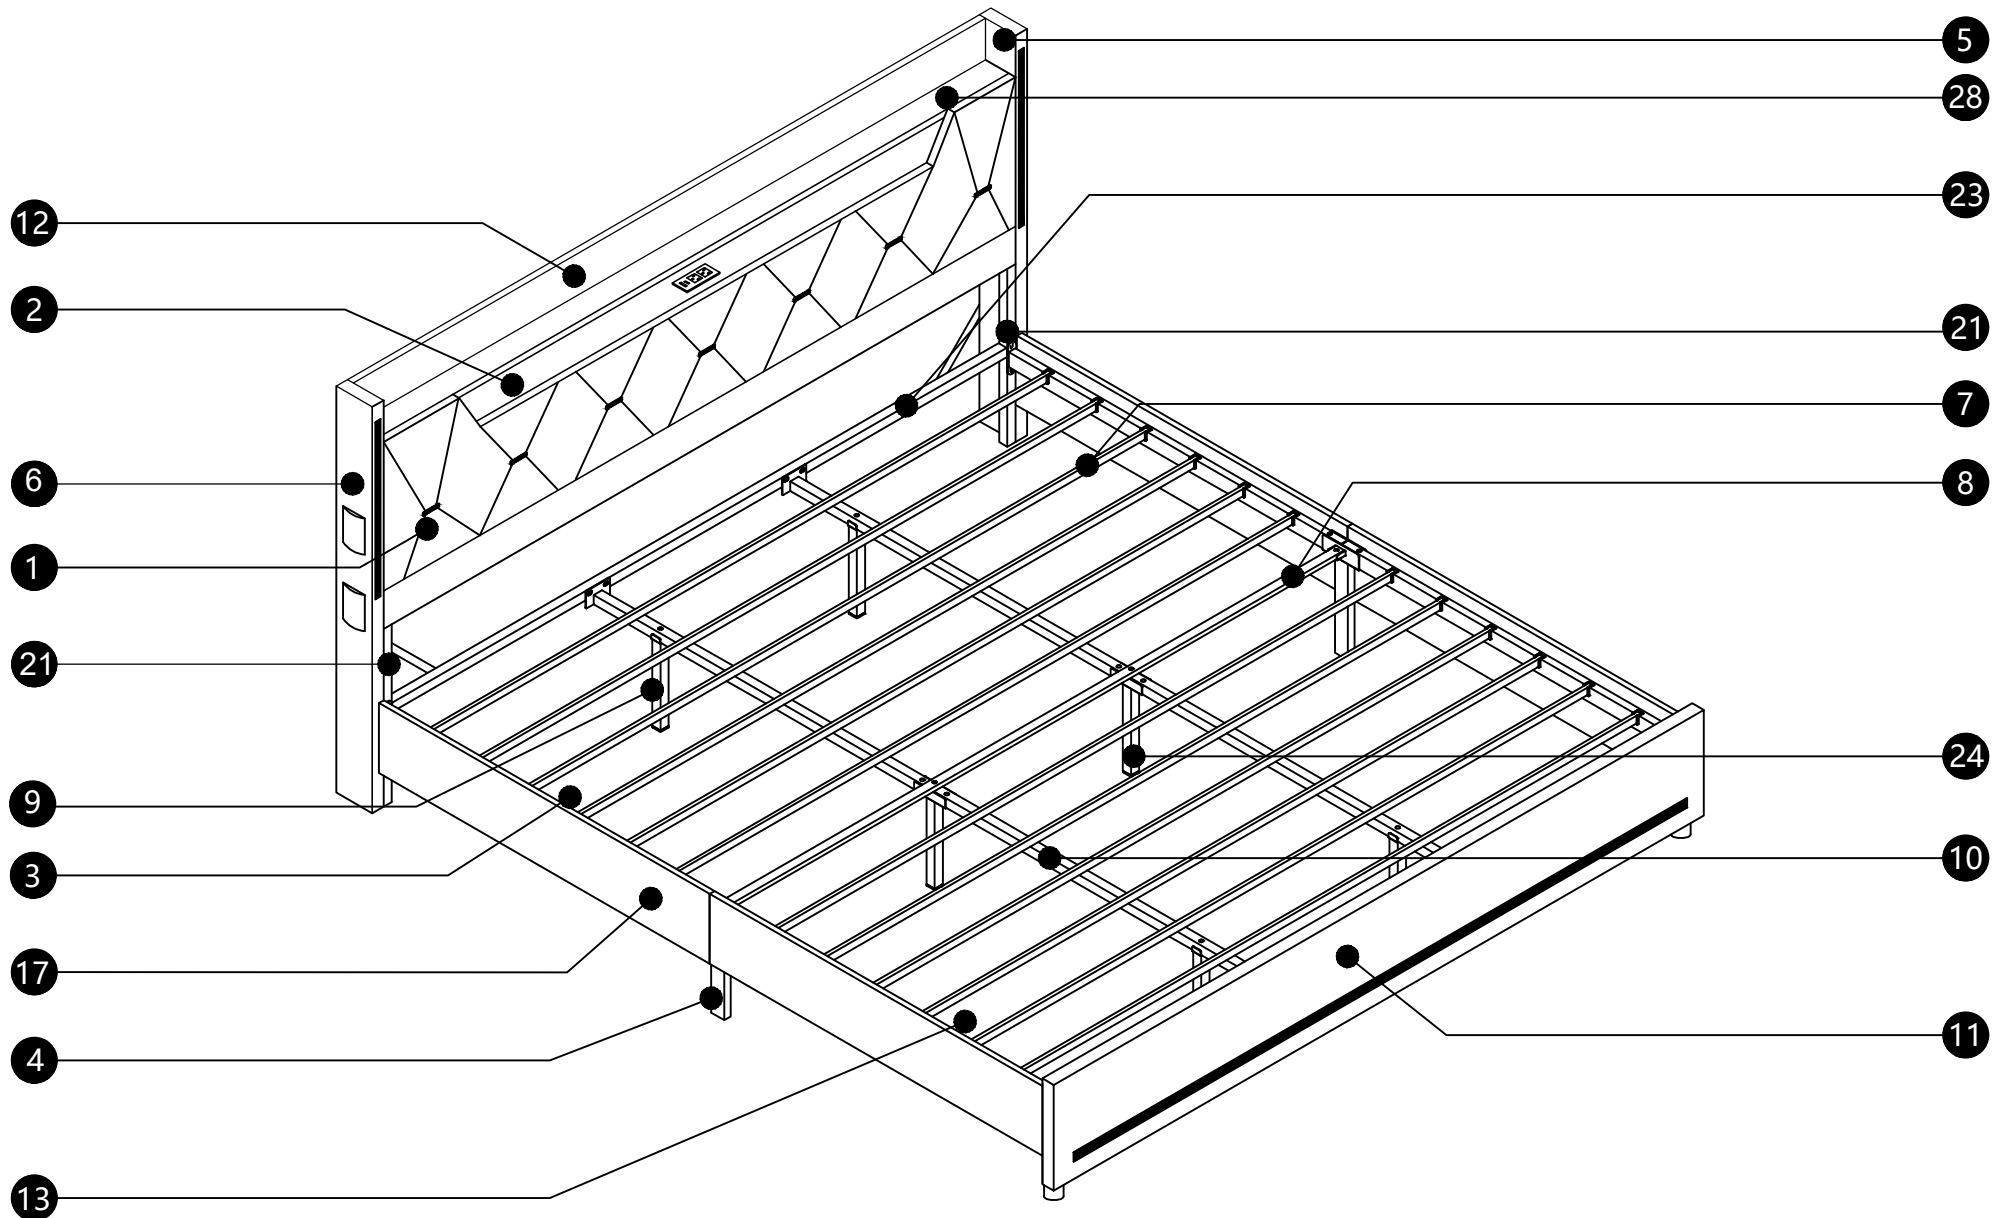


Assembly Instruction

Hardware parts

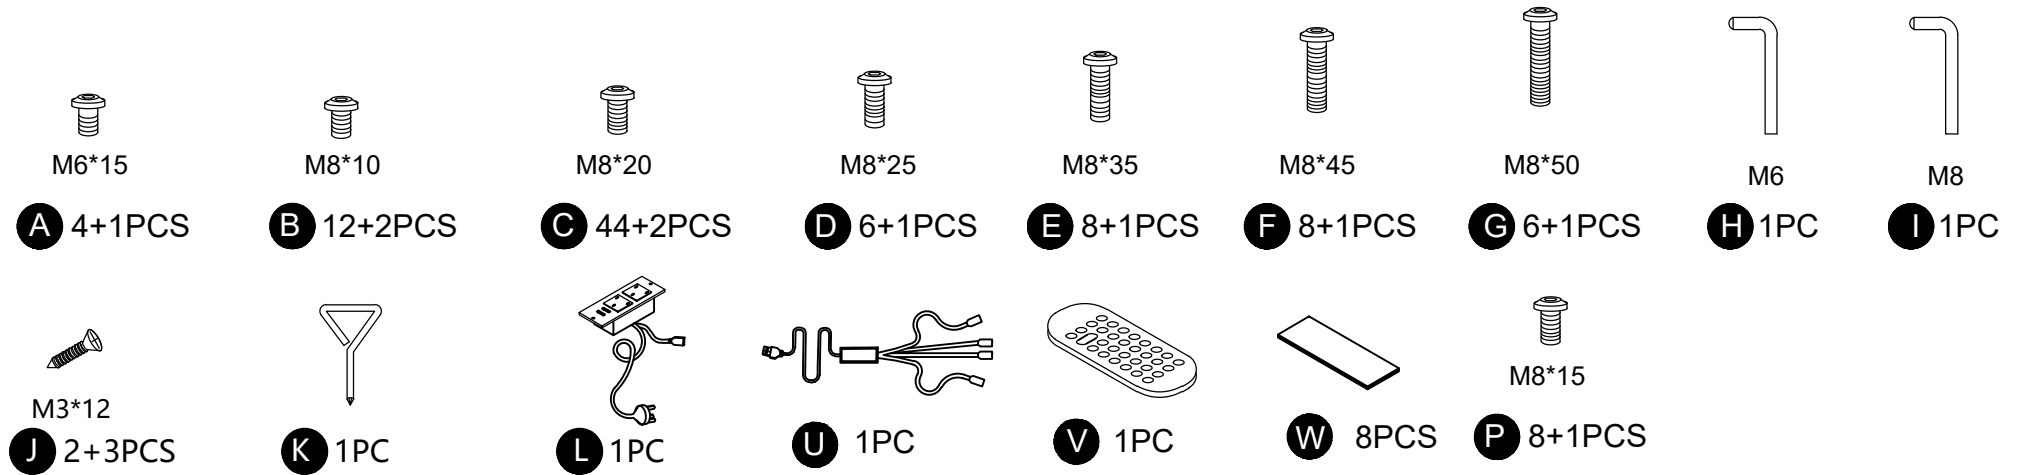


Part list

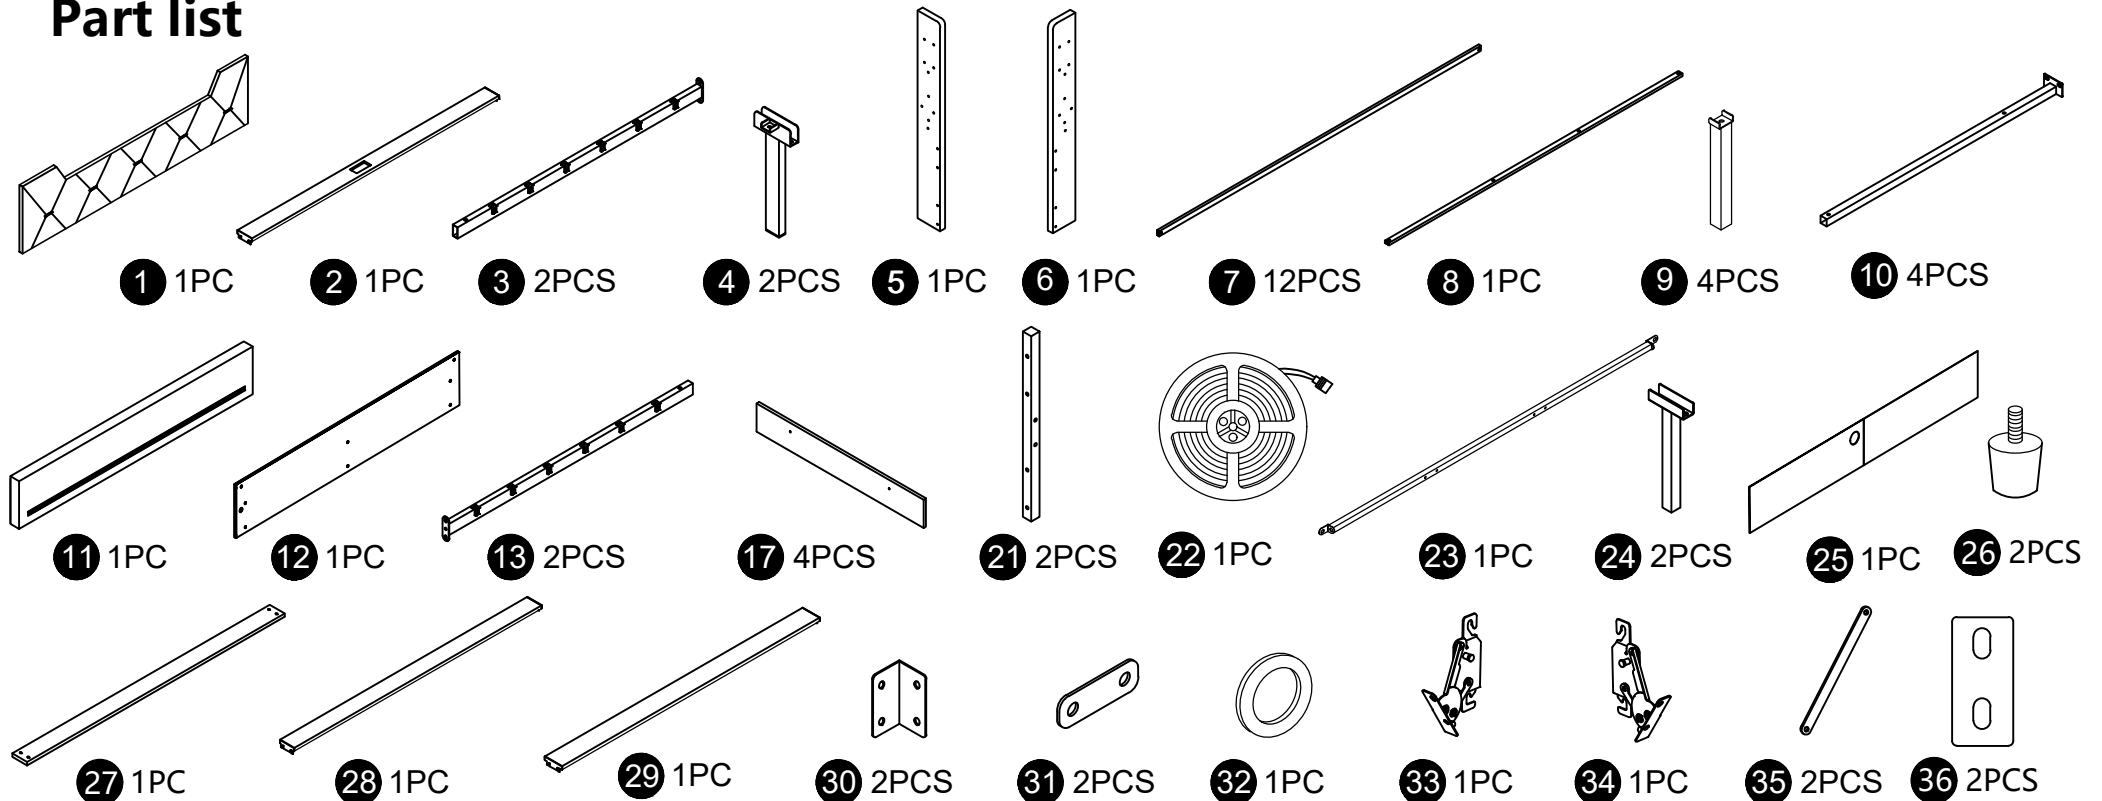

Assembly Instruction


Step 1

 **F** X8PCS
M8*45

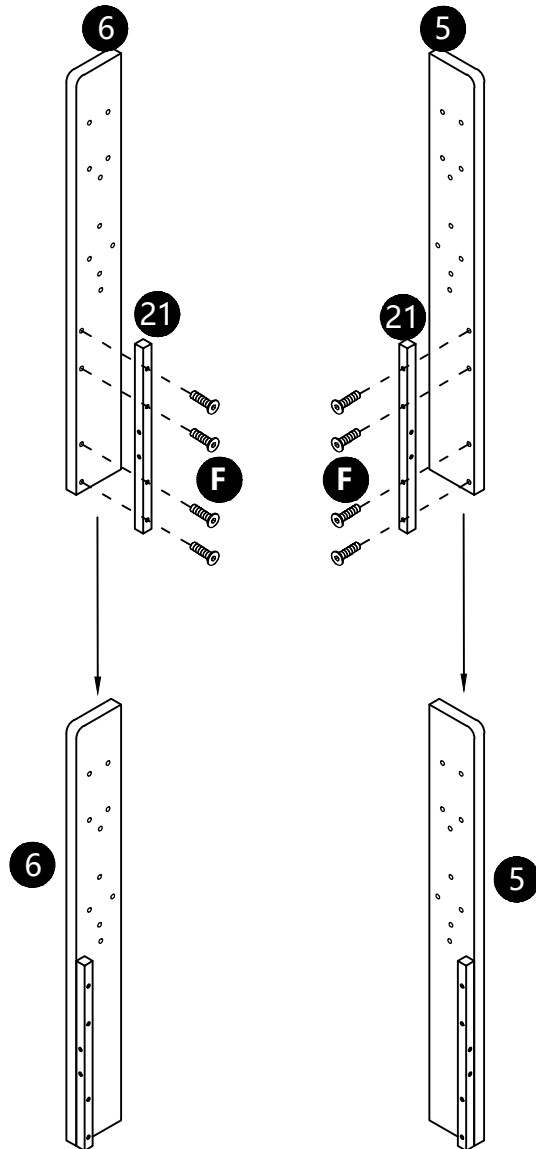

Step 2

 **B** X8PCS
M8*10

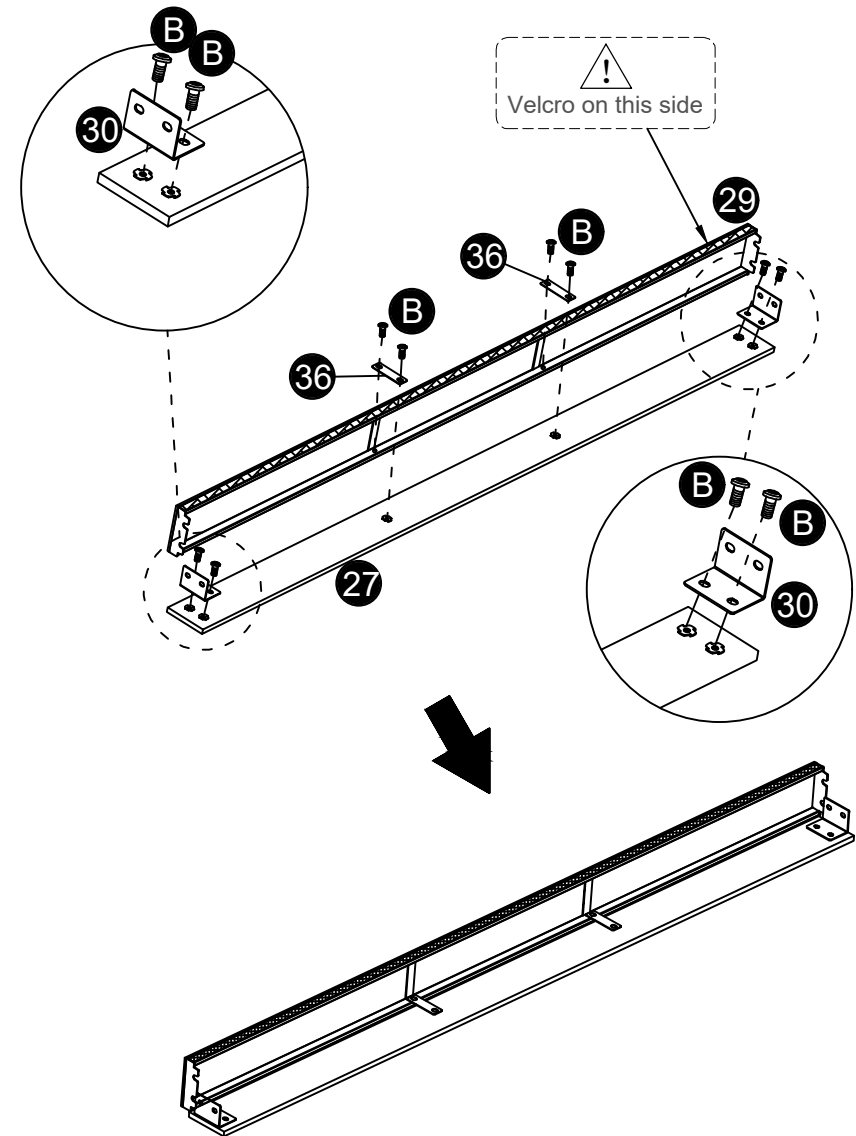


Assembly Instruction

Step 3


 **C** X16PCS
M8*20

 **J** X2PCS
M3*12

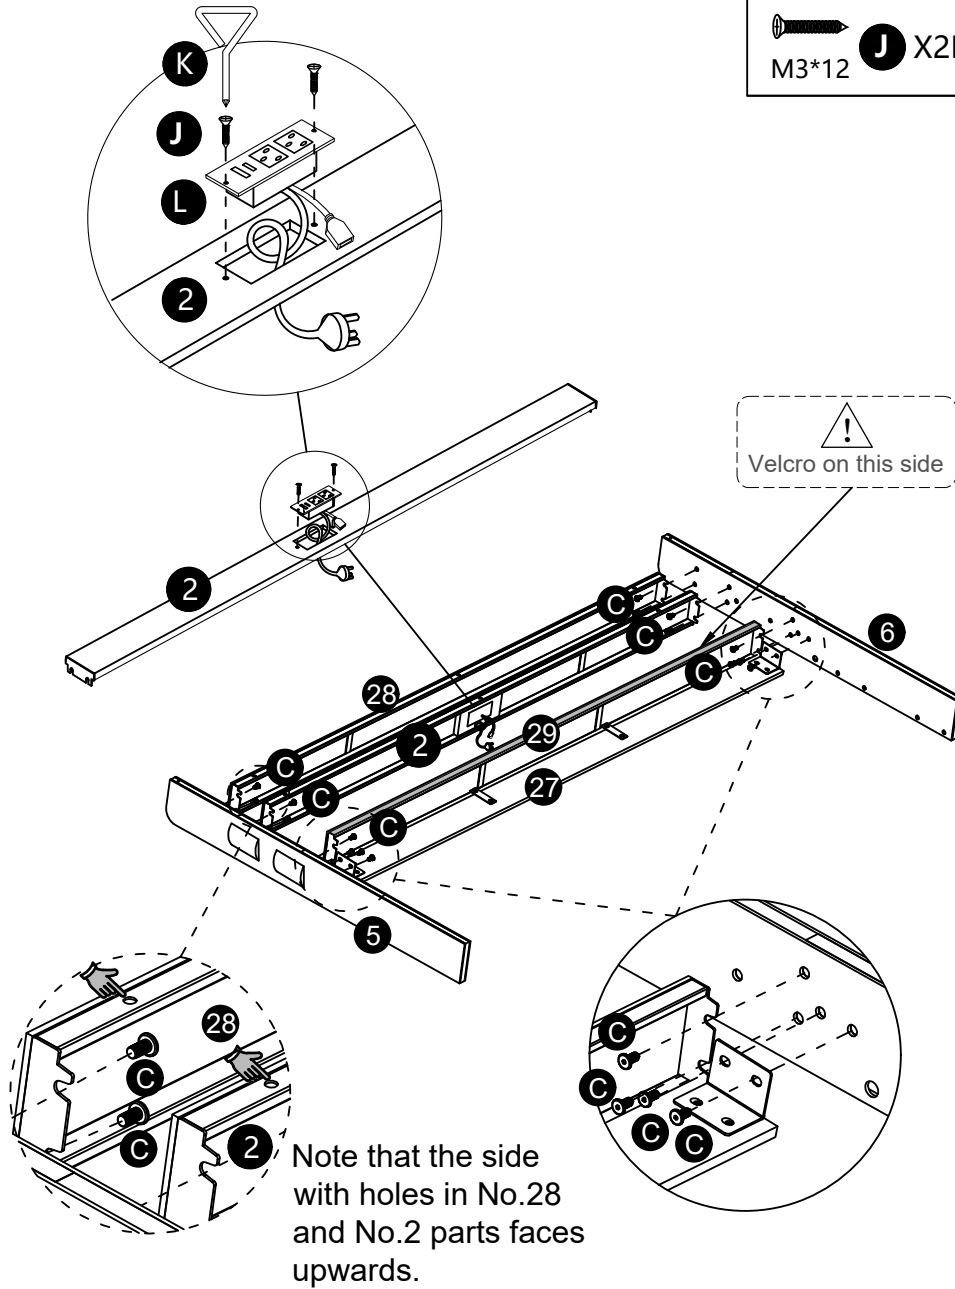

Step 4


 **D** X6PCS
M8*25

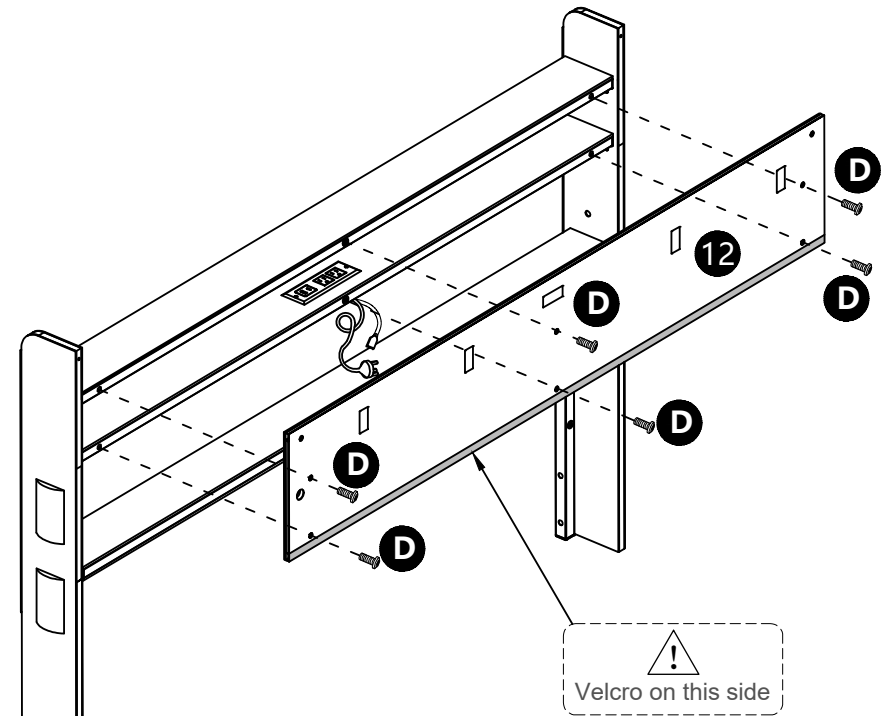

Assembly Instruction of bed


Step 5

 M8*20 **C** X2PCS

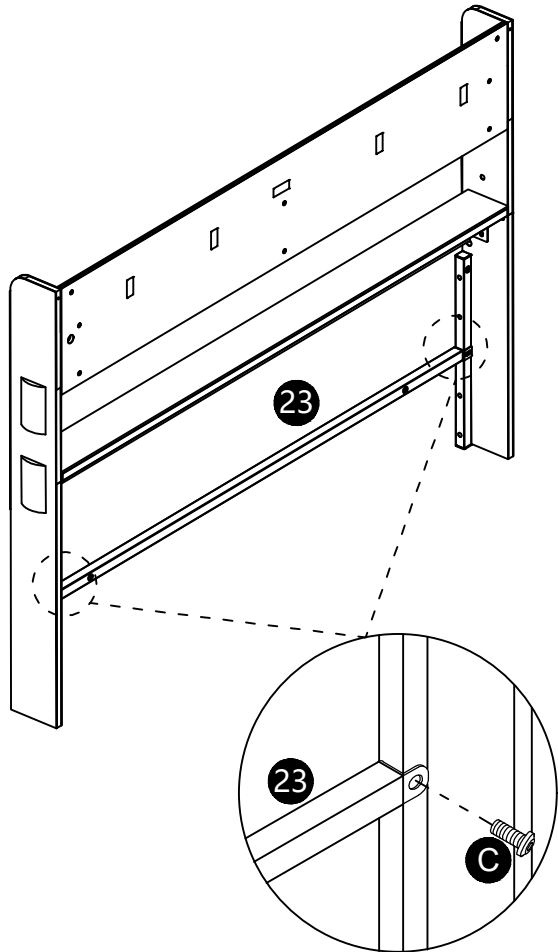

Step 6


 M8*20 **C** X4PCS

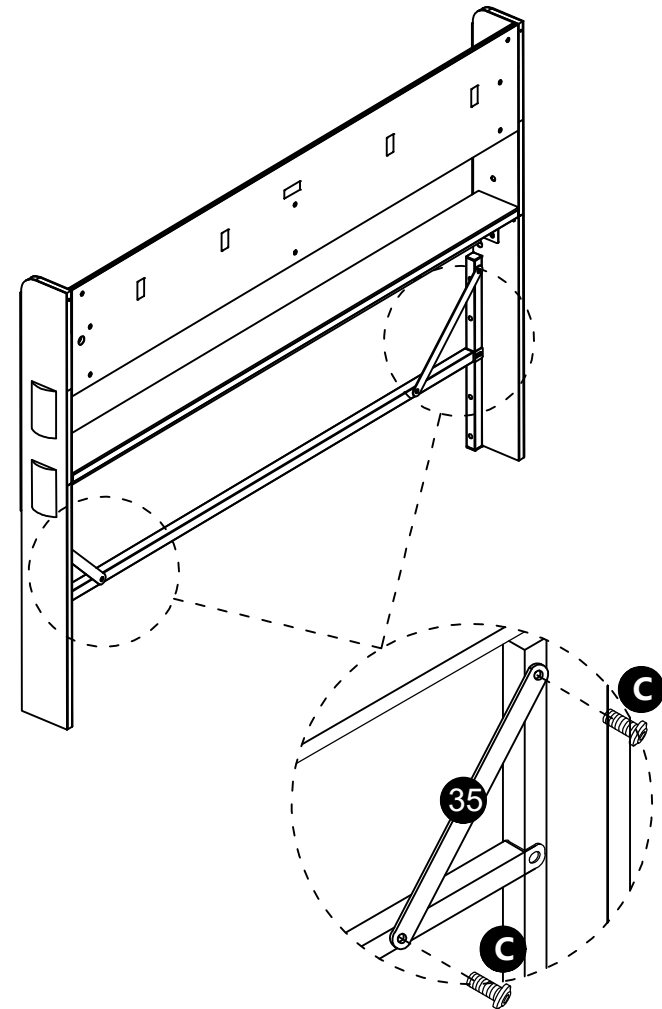

Assembly Instruction of bed


Step 7

 **B** X4PCS
M8*10

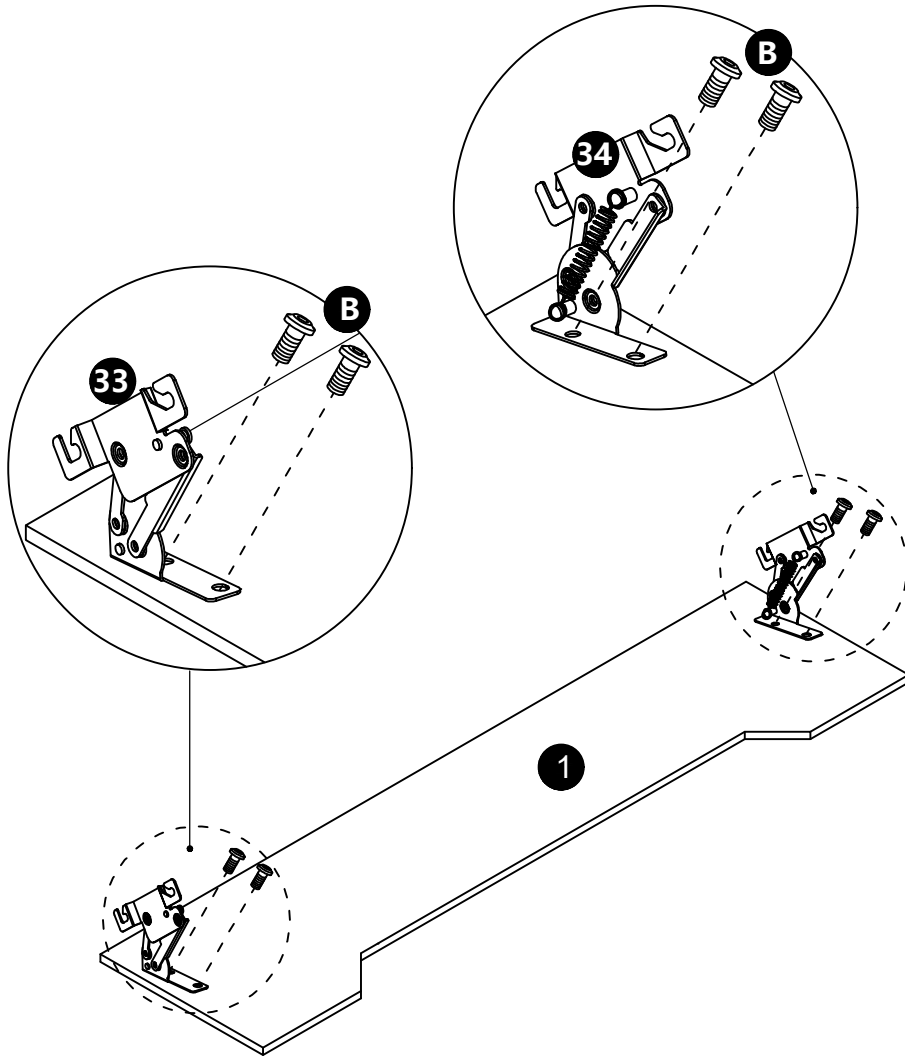


Step 8

 **C** X4PCS
M8*20

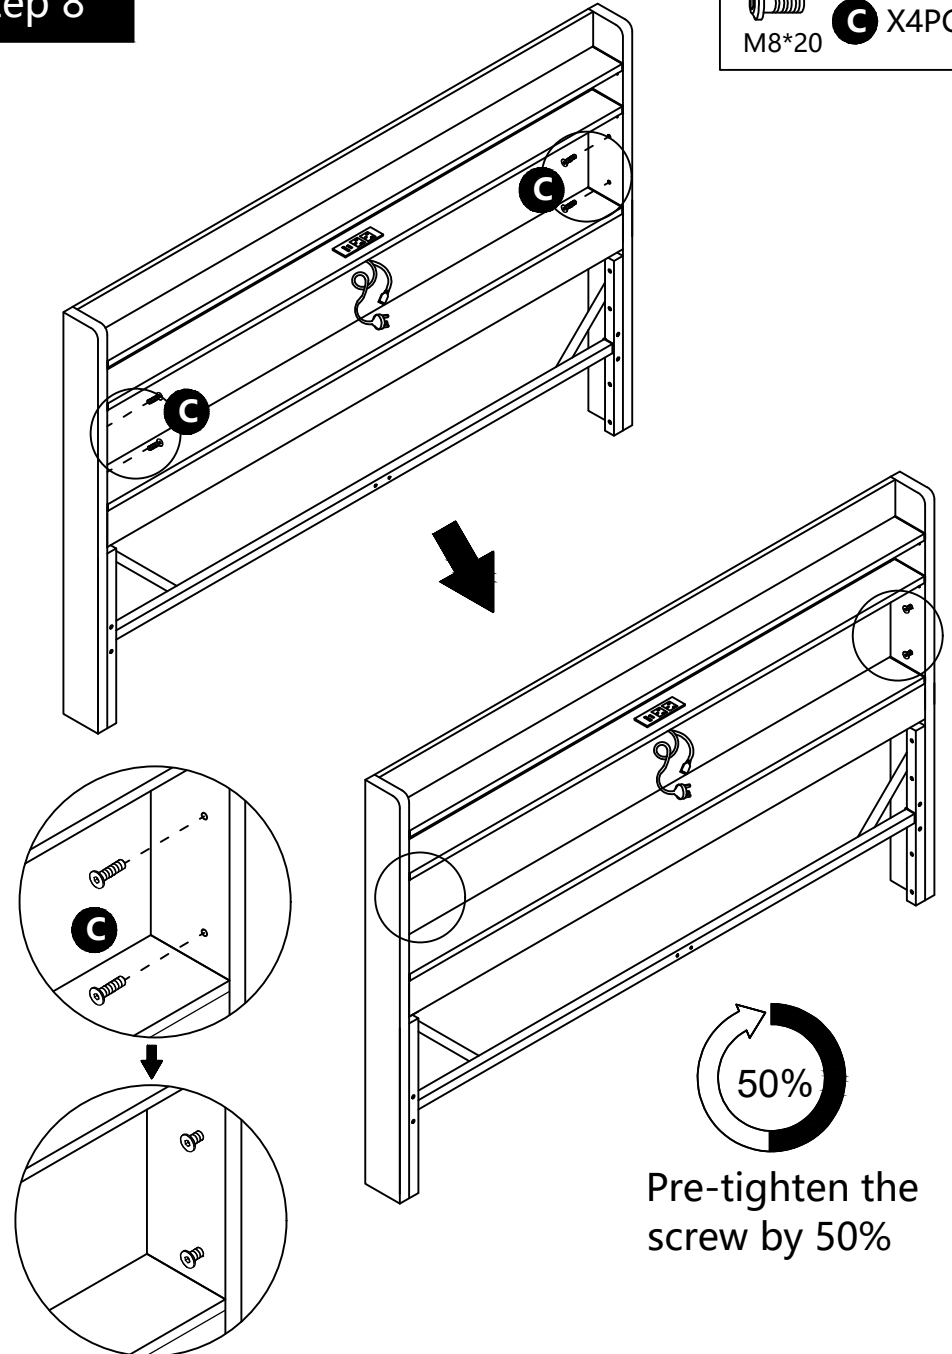

Assembly Instruction of bed

Step 9

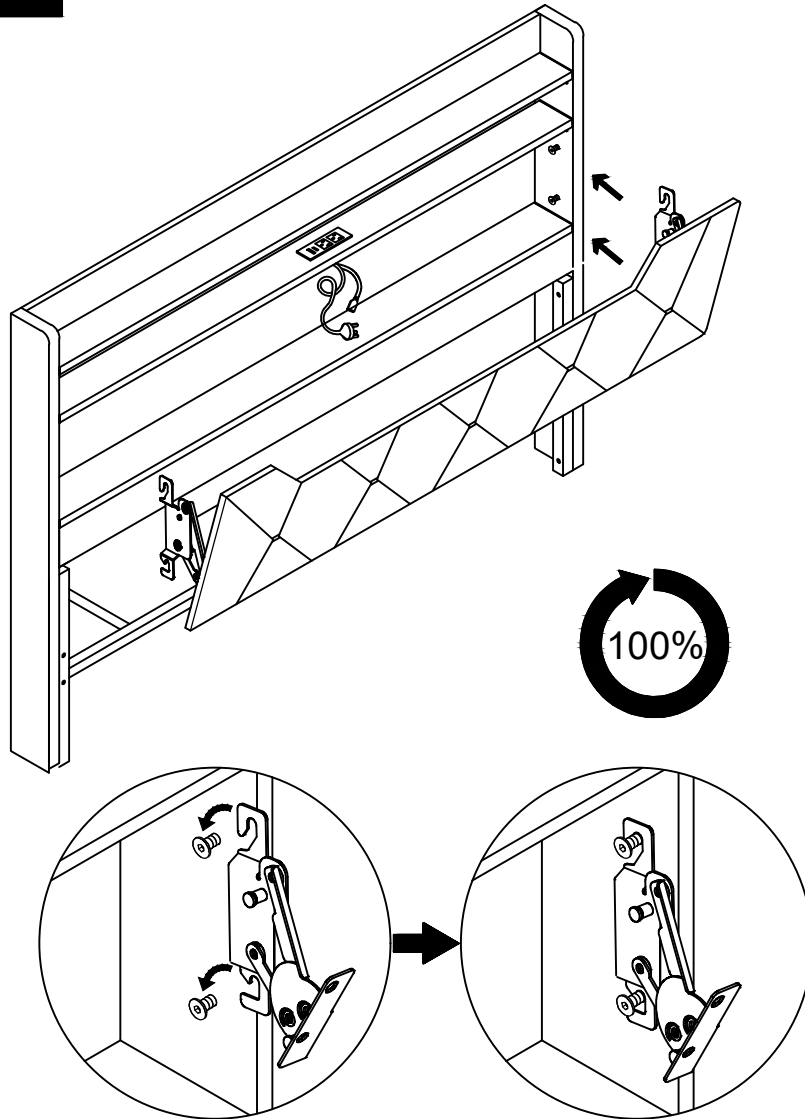


1 First, align the screw from the top and insert it, then buckle it in from the bottom

2 After all are inserted, tighten the screws 100%

Step 10

M6*15 **A** X4PCS

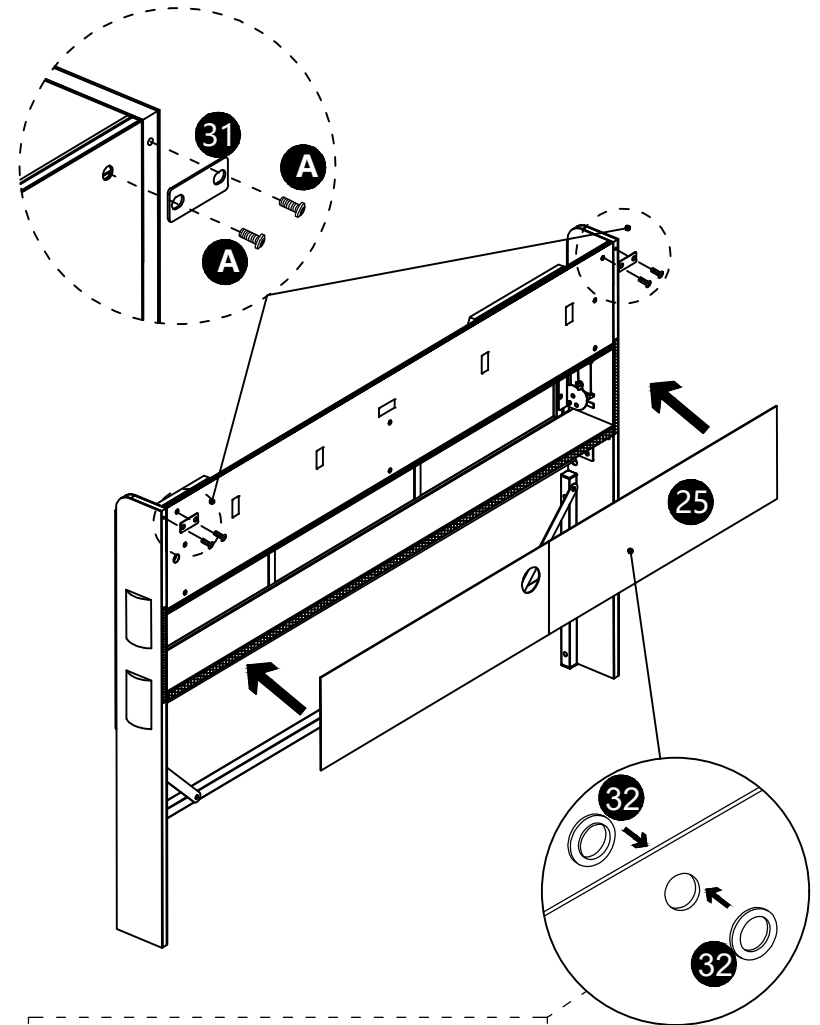


NO.1 Open accessory(**32**)

NO.2 Place them separately on the front and back of the (**25**) hole and press them tightly

Assembly Instruction

Step 11

M8*50 **G** X 4PCS

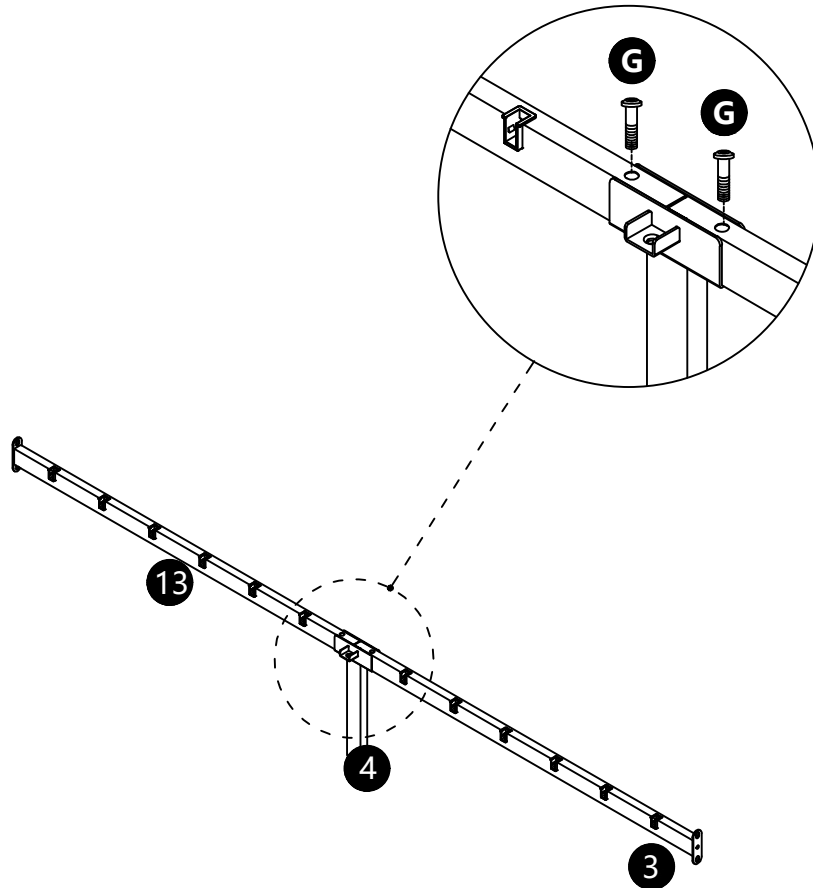


X2

Step 12

M8*20 **C** X 8PCS



Pay attention to paste the light strip on the end of bed No.11 first to prevent it from breaking during installation.

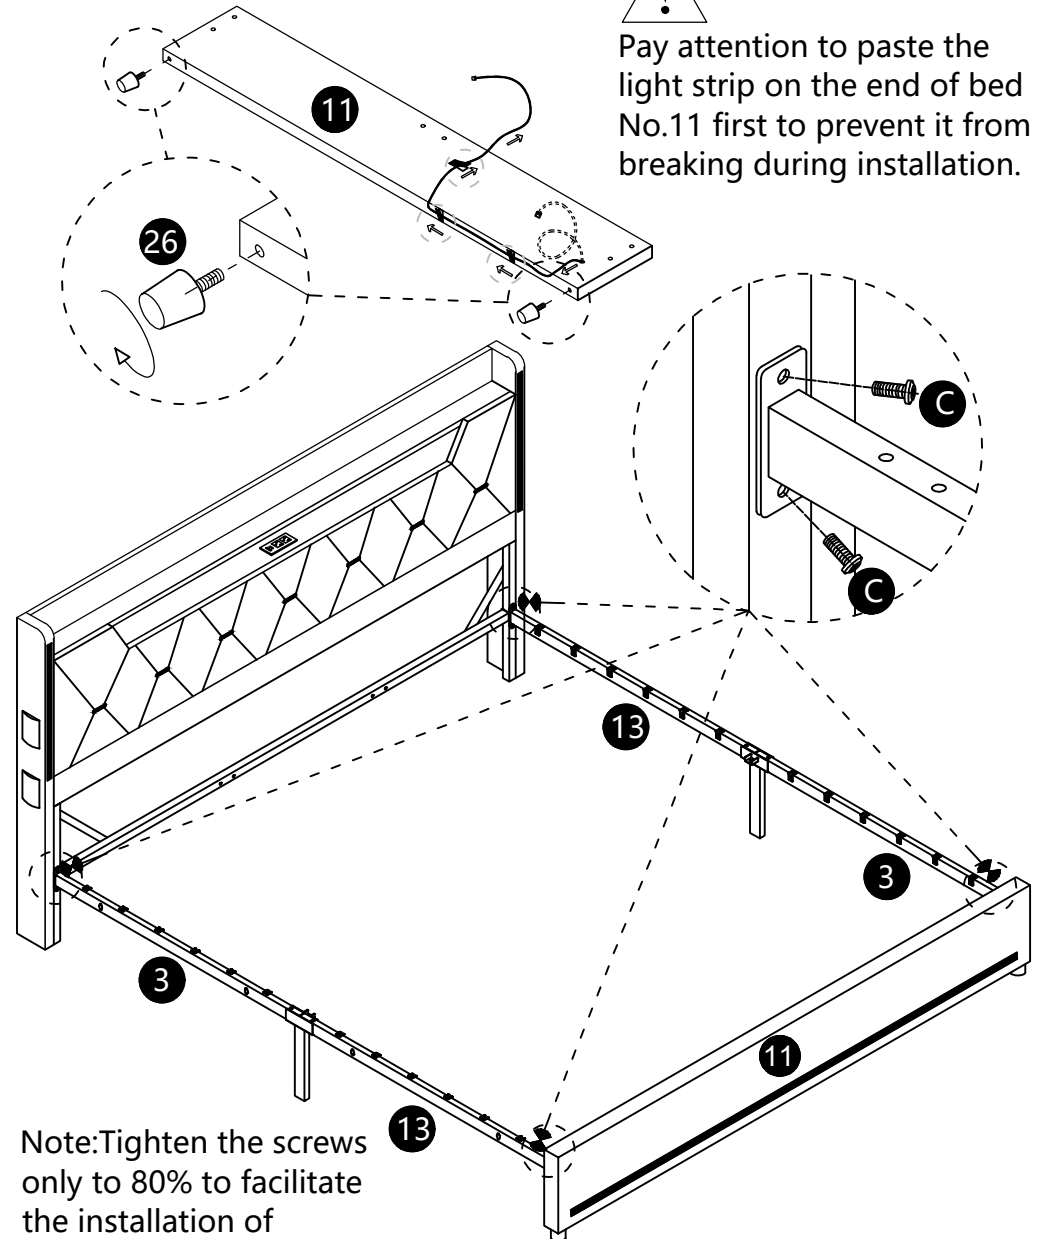


Note: Tighten the screws only to 80% to facilitate the installation of subsequent accessories.




Assembly Instruction

Step 13

 **E** X 8PCS
M8*35

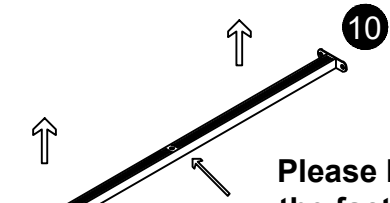


Please be sure to pay attention to the fact that there are mute stickers facing upwards during assembly, and the material feels soft to the touch

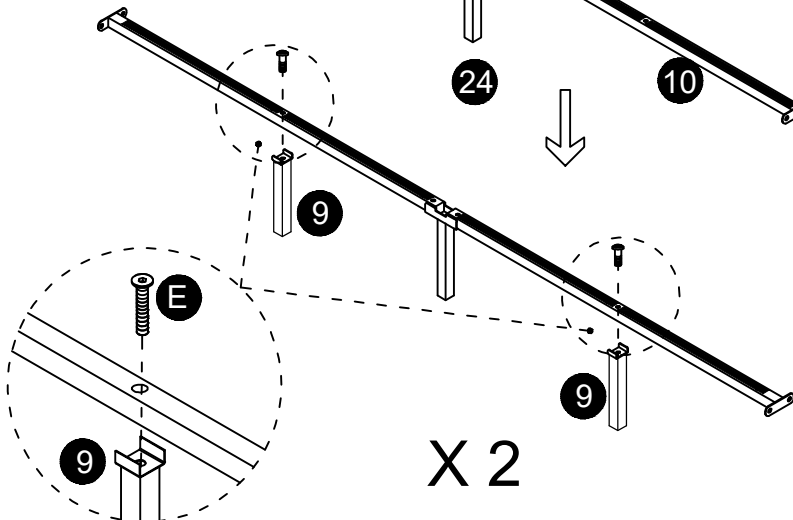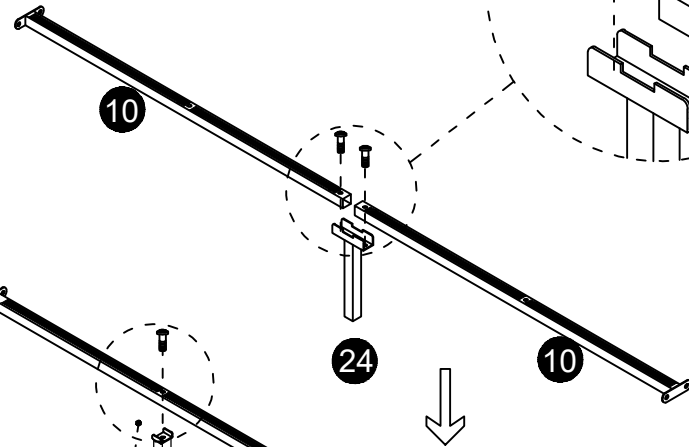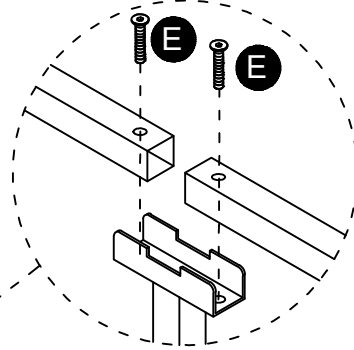

Step 14


 **C** X 8PCS
M8*20

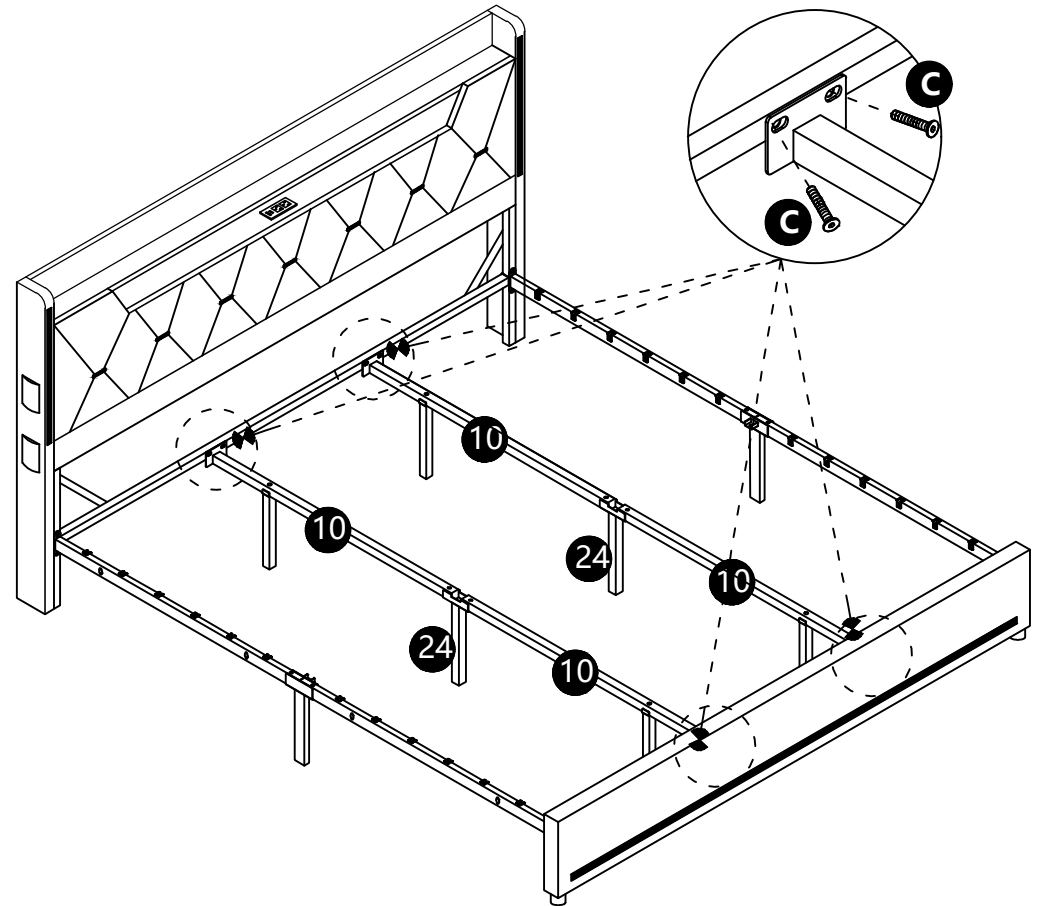

Assembly Instruction

Step 15


 **C** X 2PCS
M8*20

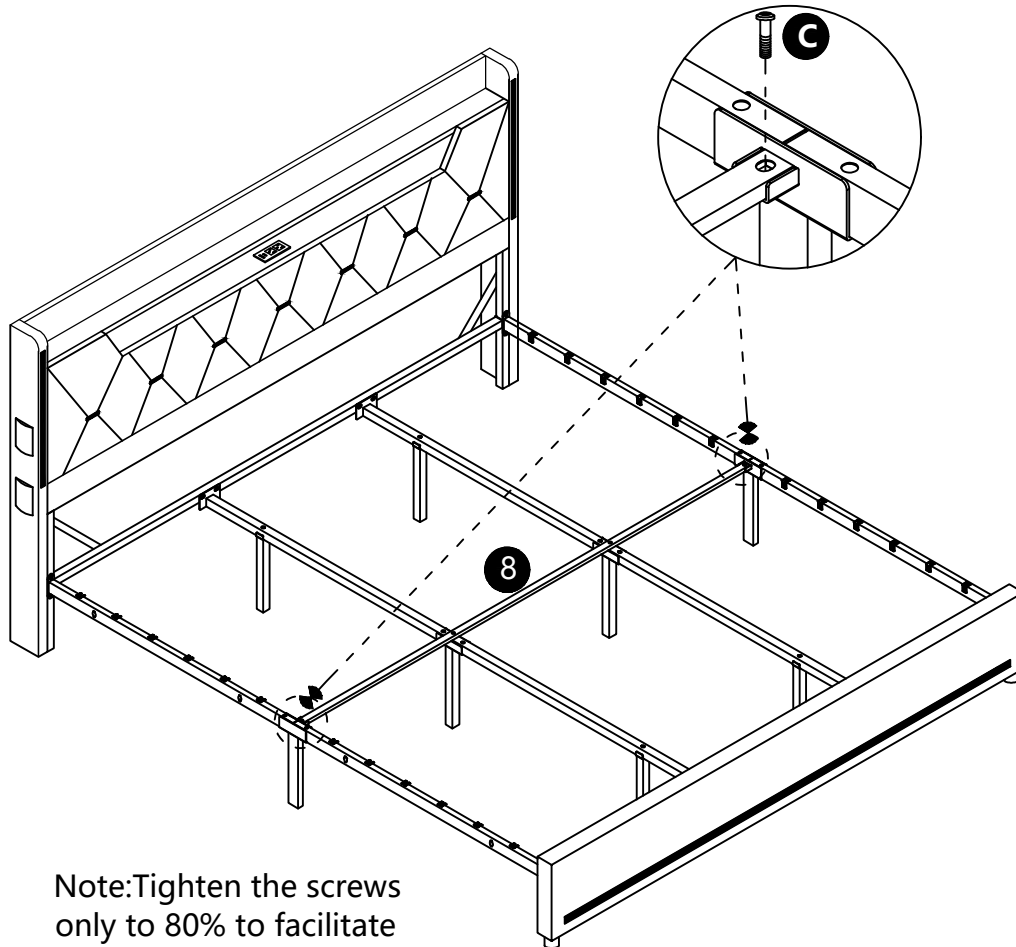

Note: Tighten the screws only to 80% to facilitate the installation of subsequent accessories.

Step 16

 **G** X 2PCS
M8*50

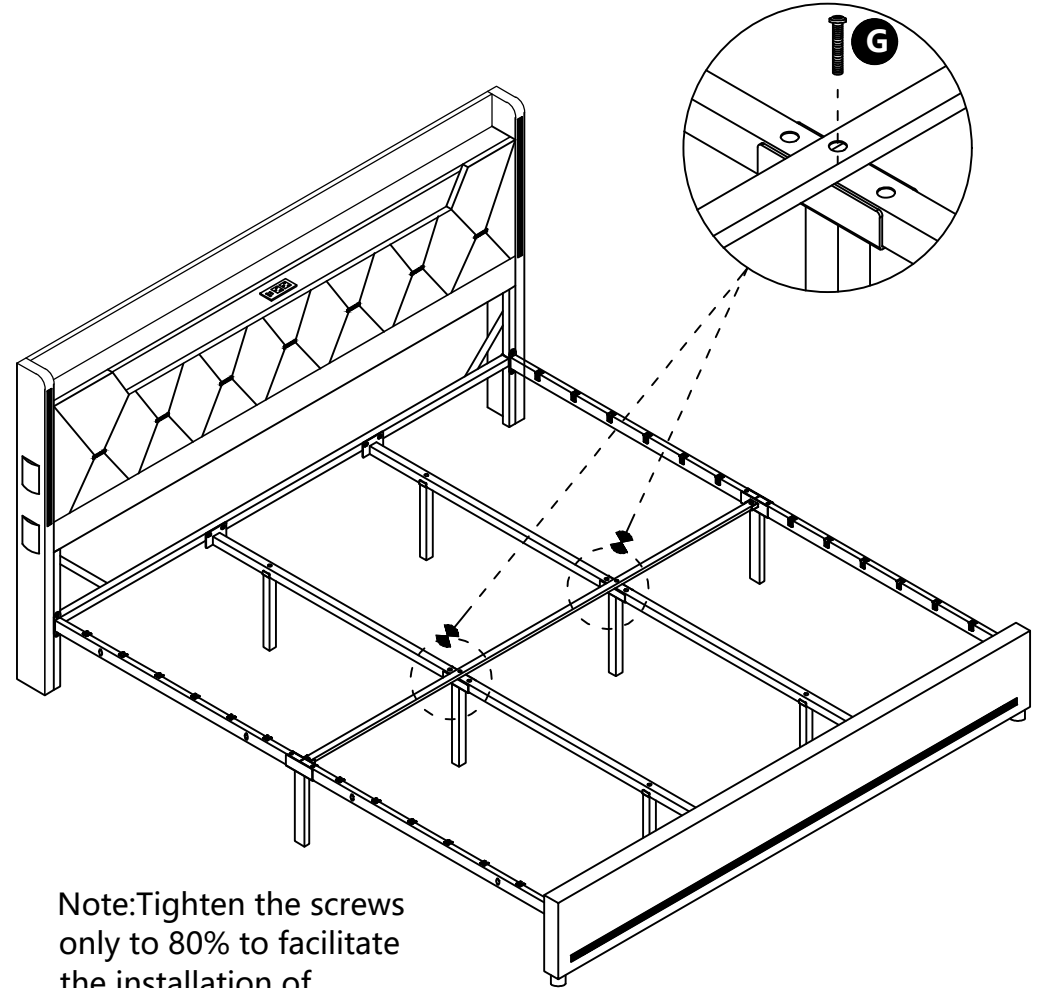


Note: Tighten the screws only to 80% to facilitate the installation of subsequent accessories.


Assembly Instruction of LED light bar

Step 17


Put the long wire along the wire buckle and fix it

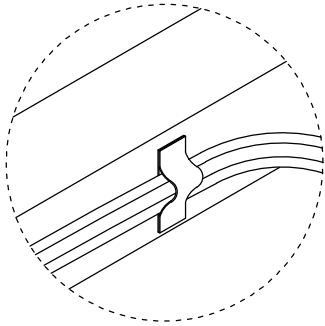

There is glue on the back of the Strap magic tape, tear off the anti-stick strip, you can paste

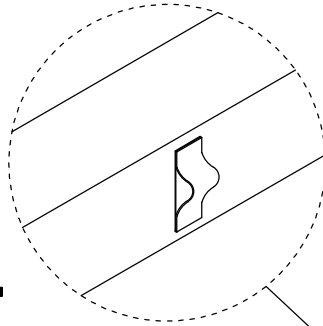

The wire at the end of the bed foot was spread out and led to the head of the bed

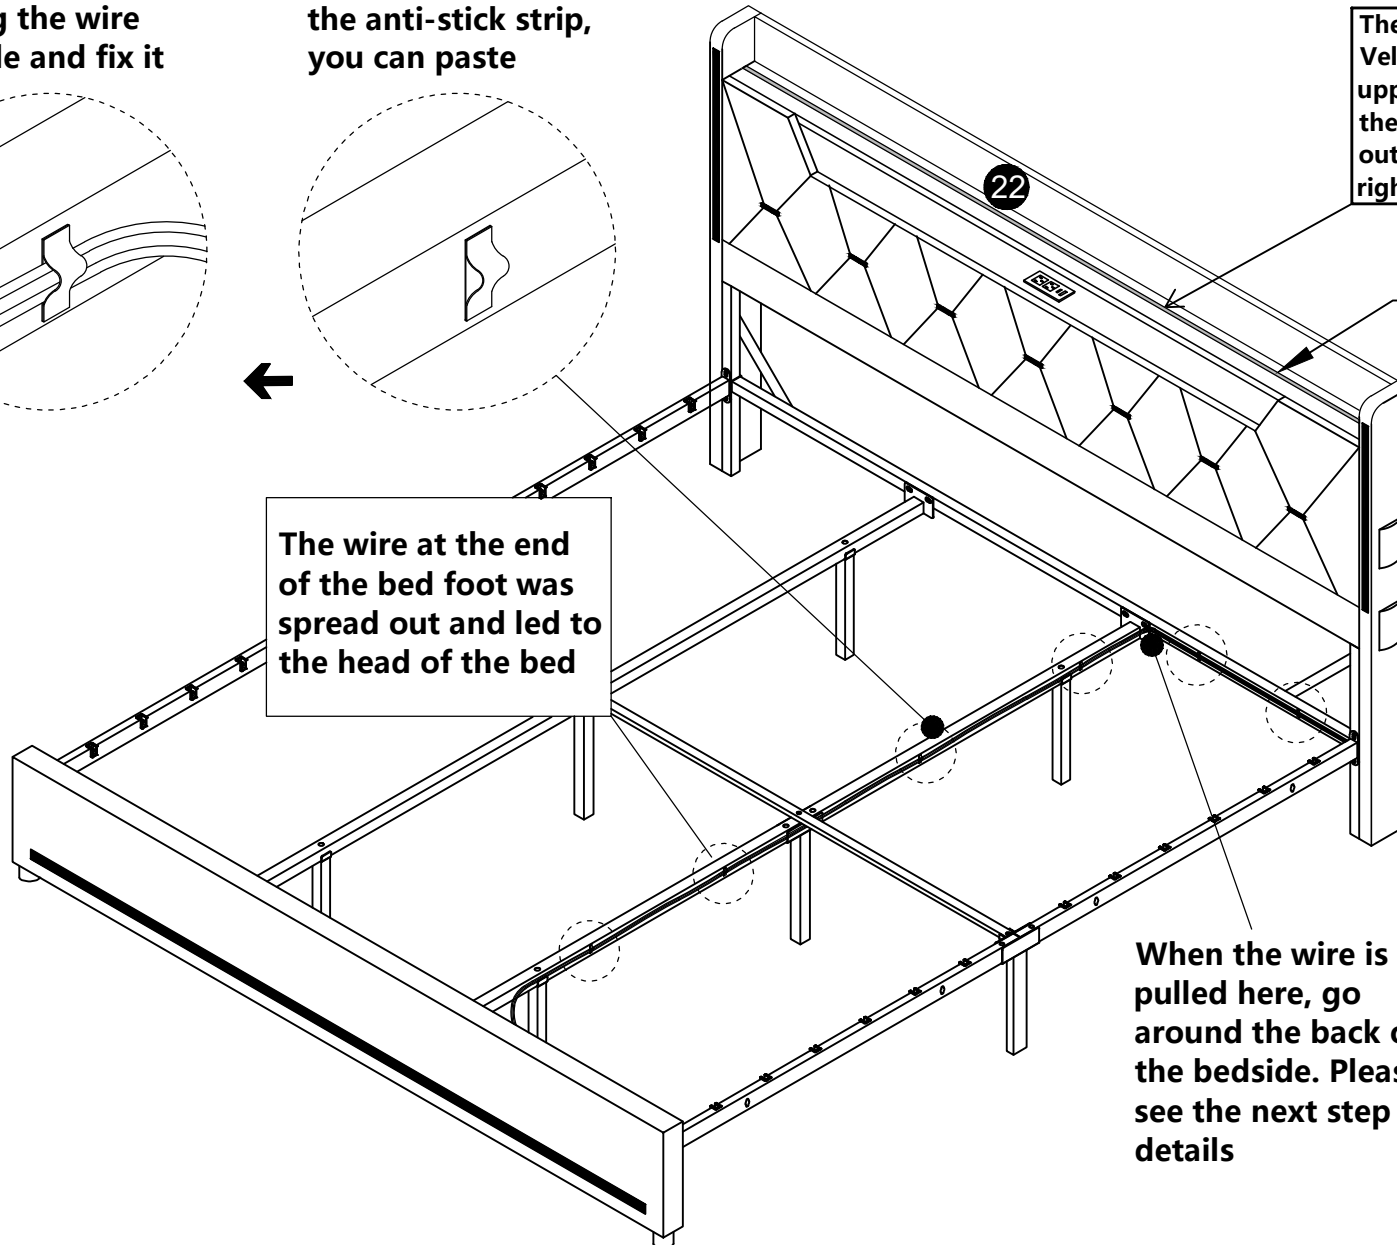


There is a corresponding Velcro at the bottom of the upper board that can attach the light strip and thread it out through the hole on the right side

Short Light Strip

When the wire is pulled here, go around the back of the bedside. Please see the next step for details





When the wires are disordered, tear off the anti stick paper, paste it on the place where the wires pass, and then bind the wires.

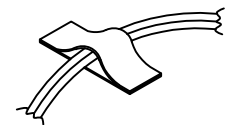

Assembly Instruction of LED light bar

Step 18

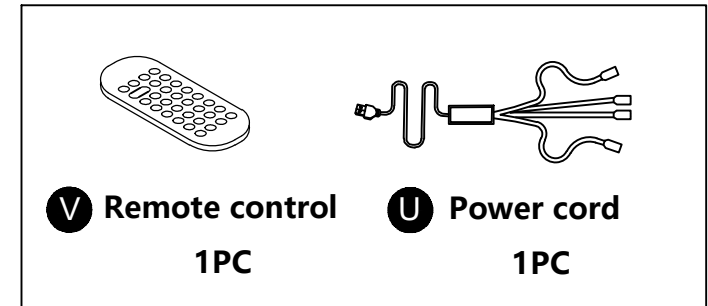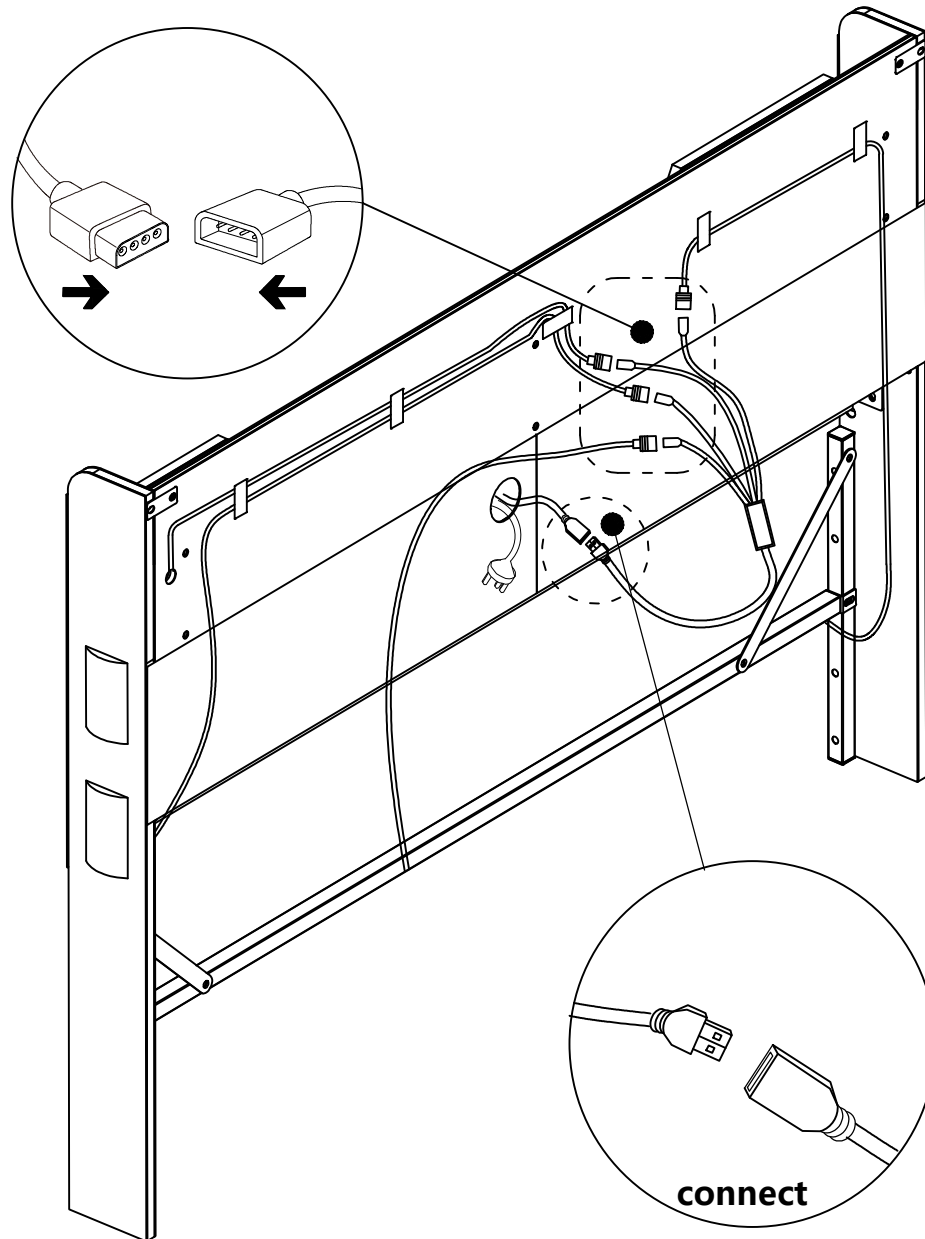


1. After all wires are connected, except for the large power plug that must be connected to the power supply, other wires can be folded and tied into the large magic tape on the back.

2.If you feel that the magic tape is not enough, we also provided adhesive Velcro stickers, but they cannot be used on the cloth surface. Can be used behind the bedside cabinet

Assembly Instruction


Step 19

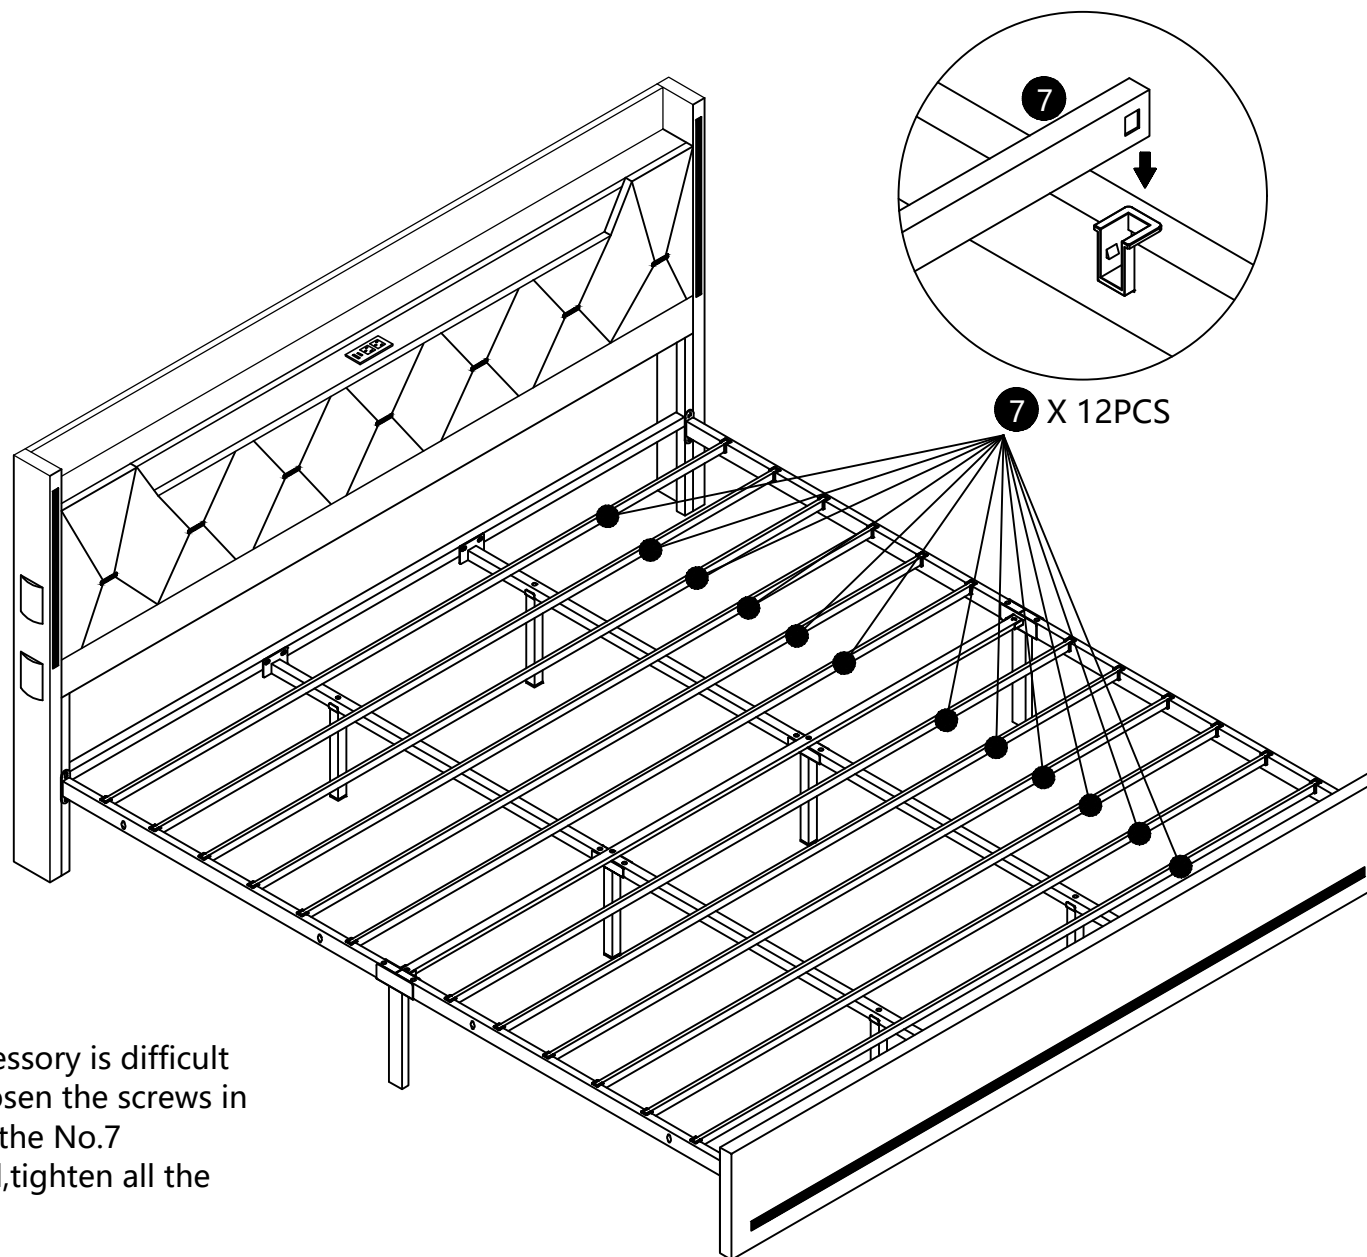

Note: If the No.7 accessory is difficult to install, you can loosen the screws in Steps 12 to 13. After the No.7 accessory is installed, tighten all the screws completely.

Assembly Instruction

Step 20

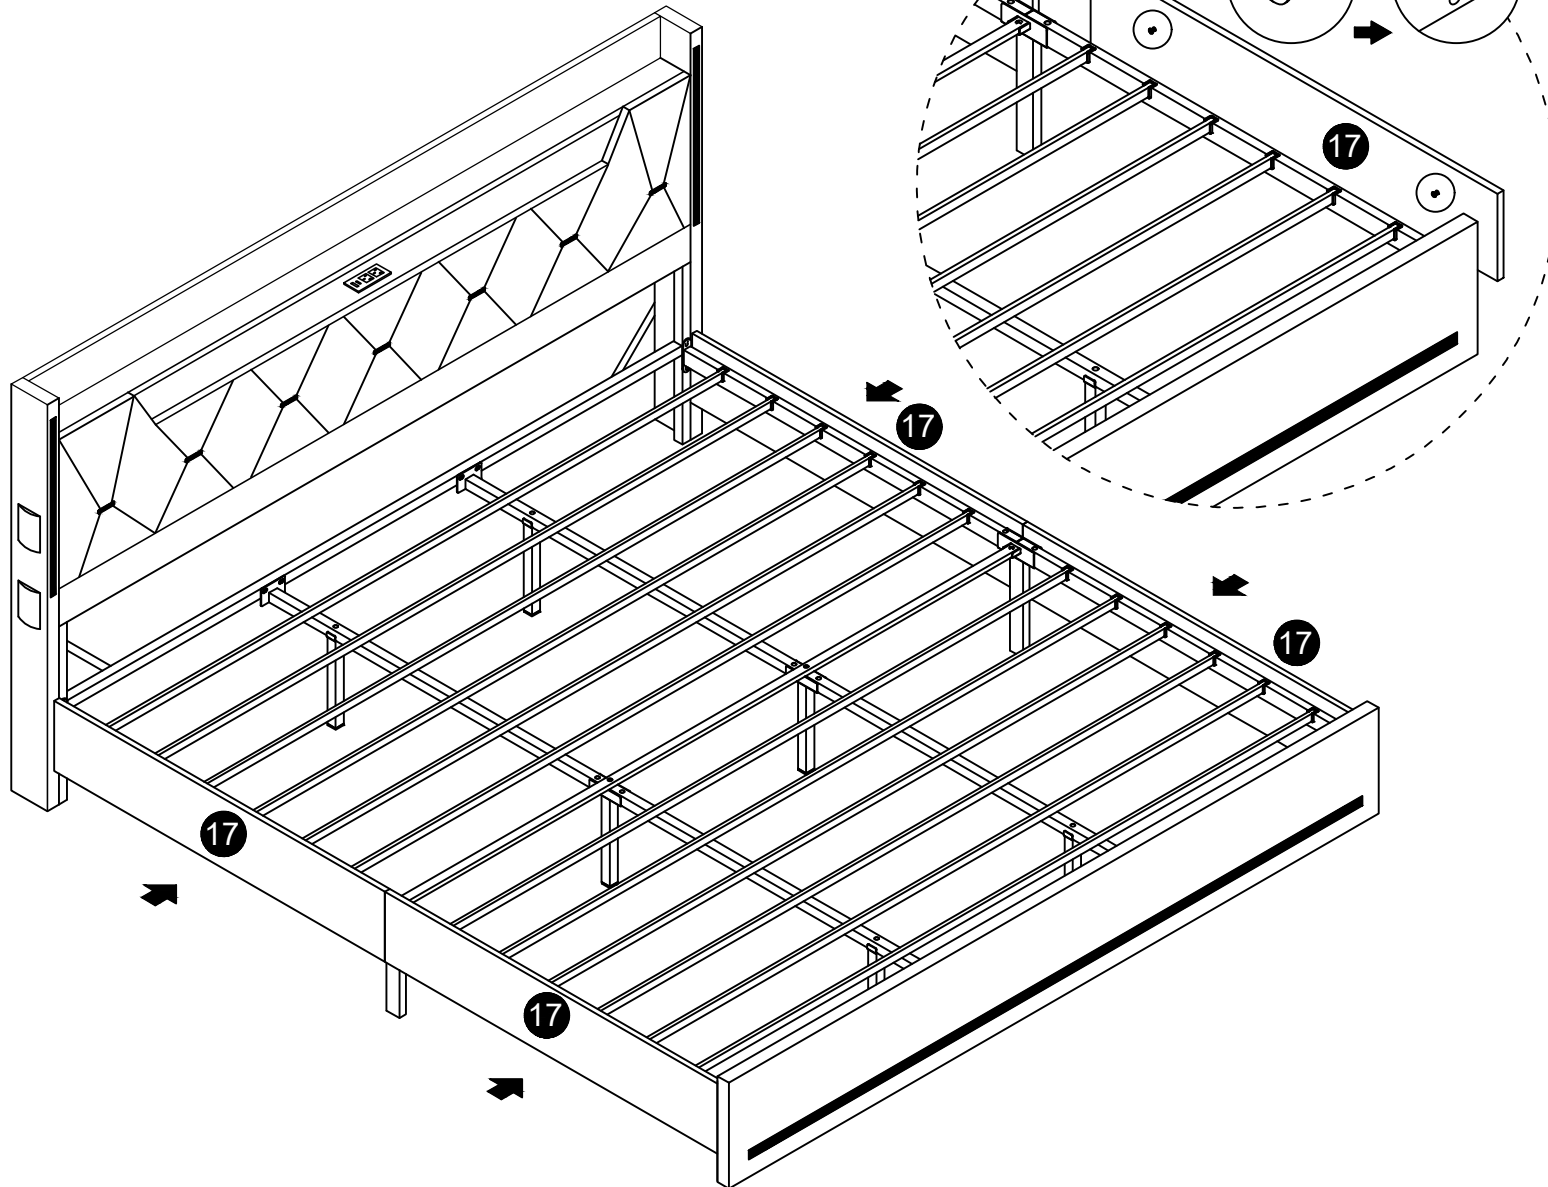

M8*15 **P** X8PCS