

# Installation instruction

## List of accessories:



Top panel\*1



Middle large laminate\*1



Bottom panel\*1



Right side panel\*1



Bracket top panel\*1



Left side panel\*1

Backplane Strip\*1



Middle partition\*1



Middle small laminate\*1



Door panel\*2



Short backplane\*1



Long backplane\*1



Bracket\*2



Long screw\*12

Tip screws\*4

Handle screws\*4

Plug\*8

Round screw set\*4

Handle\*2



Remove handle screws, door panel and handle



Attach the handle to the door panel with the handle screws



Tighten the handle screws



1. Remove the bottom and right side panels



2. Installation with long screws



3. Install the middle partition with long screws



4. Insert the short backplane along the groove



5. Install the top plate with long screws




6. Turn the cabinet over (as shown)



7. Insert the long backplane along the grooves between the laminates



8. Installation of backplane strips and another long backplane

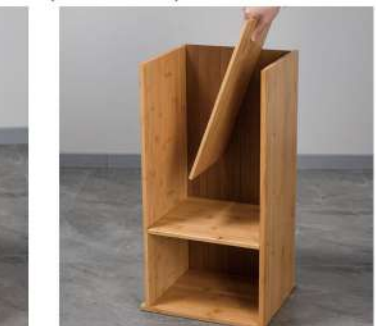

9. Place the large center laminate into the cabinet (note: no installation is required for the time being)



10. Insert the door panel along the groove between the bottom and top panels (note the door panel orientation)



11. Insert the other door panel (note the orientation of the door panel)



12. Install the left side panel with long screws



19. Insert the plug in turn (as shown)



20. Place the large center laminate from step 9 on the plug



21. Insert the plug in turn (as shown)



13. Remove bracket laminate and bracket



14. Install the left bracket with tip screws



15. Continue to install the right bracket with tip screws



22. Place the middle small laminate ply on the plug



23. Laminate placement is completed as shown



24. Installation completed



16. Mounting bracket and cabinet with round screw combination



17. Bracket installation completed



18. Turn the cabinet over (as shown)