



Furniture Co.

Assembly Instructions

Harmony Home Adult Bed (Twin, Full or Queen)




*Thank you for choosing **A&L Furniture Co.***

We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture,
or if you have missing hardware, please email us at
help@aandlfurniture.com or call us at 814-349-8203

PARTS (included)

- (A) Headboard (1)
- (B) Footboard (1)
- (C) Headboard Posts (2)
- (D) Side Rails (2)
- (E) Mattress Boards (5)

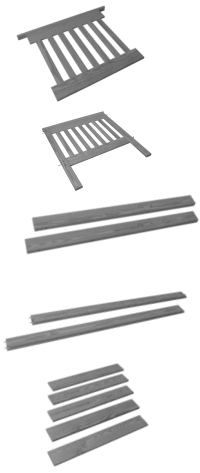

HARDWARE (included)

- (a) 4³/₄" Bolts (4)
- (b) Joint Connector Bolts (8)
- (c) 1³/₄" Woodscrews (20)
- (d) Allen Wrench (1)
- (e) Square Drive Bit (1)



TOOLS NEEDED

Screwgun

STEP 1

To attach the headboard posts to the headboard, insert the screw attached to the post into the headboard cap & slide in against the headboard. (See photo 1.) If the screw is too tight or too loose you can adjust it with the Allen wrench. Next insert the 4³/₄" bolts through the posts & screw into the headboard. Tighten the bolts using the Allen wrench. (See photos 2 & 3.) Note: Make sure the notches in the posts are on the same side.

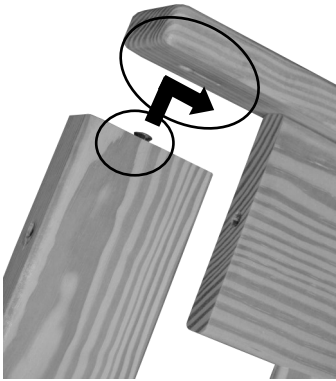


photo 1

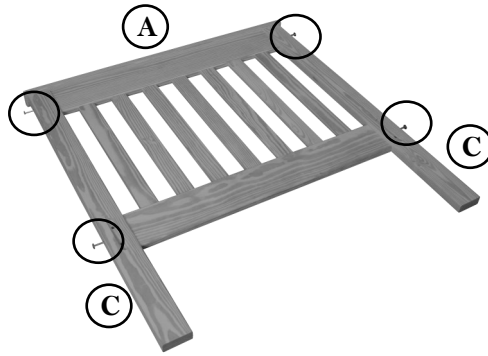


photo 2

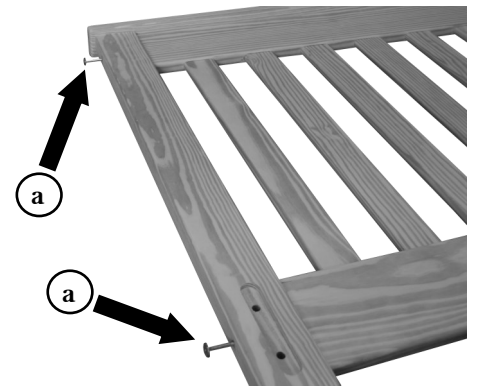


photo 3

STEP 2

Attach the side rails to the headboard & footboard. Place the side rails in the notch in the posts with the hanger bolts going in the predrilled holes & fasten with the 8 joint connector bolts. Tighten with the Allen wrench. (See photos 4 & 5.)

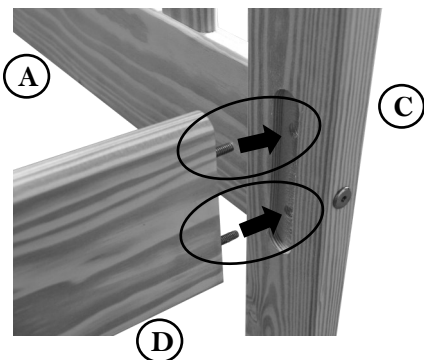


photo 4

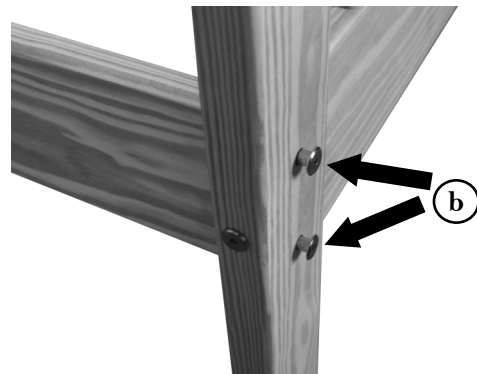


photo 5

STEP 3

Evenly space the mattress boards on the side rails. (See photo 6.) Screw the 1³/₄" woodscrews through the mattress board into the side rails using a screwgun & square drive bit. (See photos 7 & 8.)

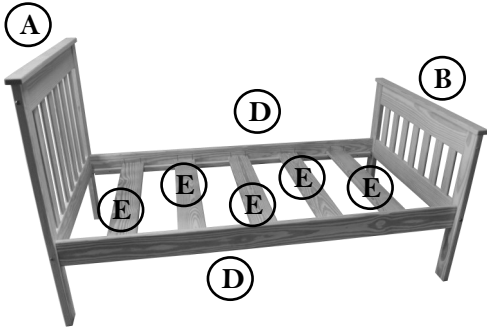


photo 6

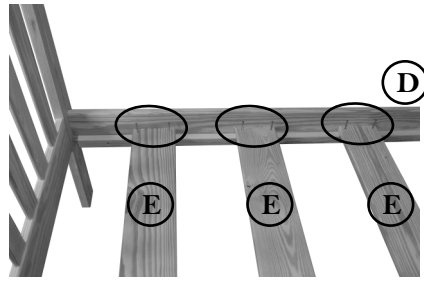


photo 7

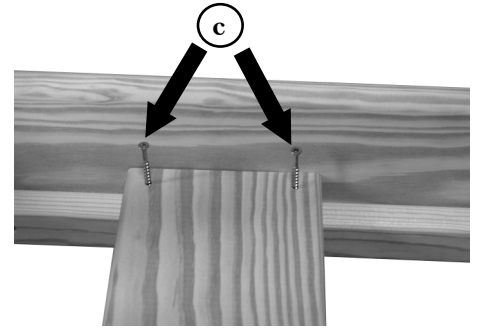


photo 8