


Hardware



Tools Required

Power tools NOT recommended

NO.	Quantity	Accessory
A	4	 Metal Support A
B	4	 Metal Support B
C	8	 Screw 8X70 mm
D	32	 Screw 8X20 mm
E	16	 Screw 5X40 mm
F	4	 Screw M8
G	1	 Allen Wrench 5mm
H	6	 Plastic Foot 4cm
I	3	 Center Leg

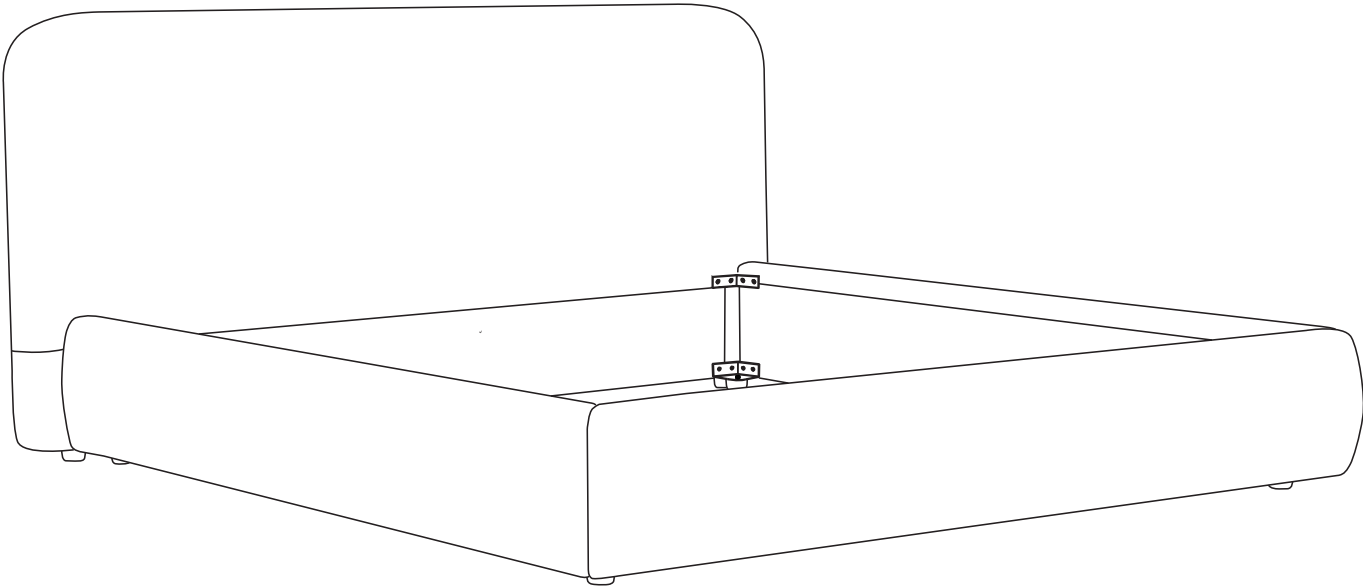

- 1 Install plastic foot G to headboard, siderails

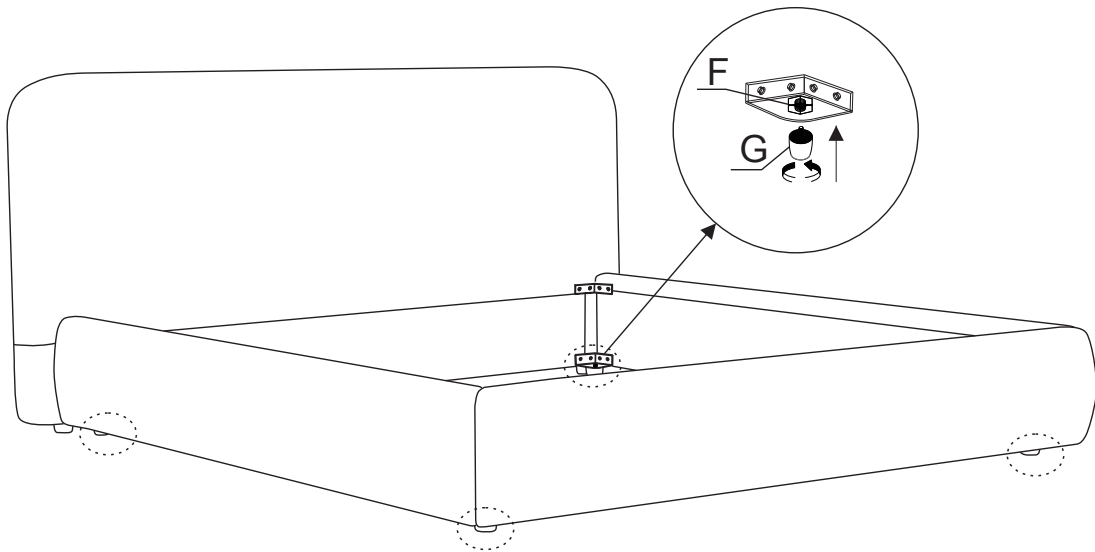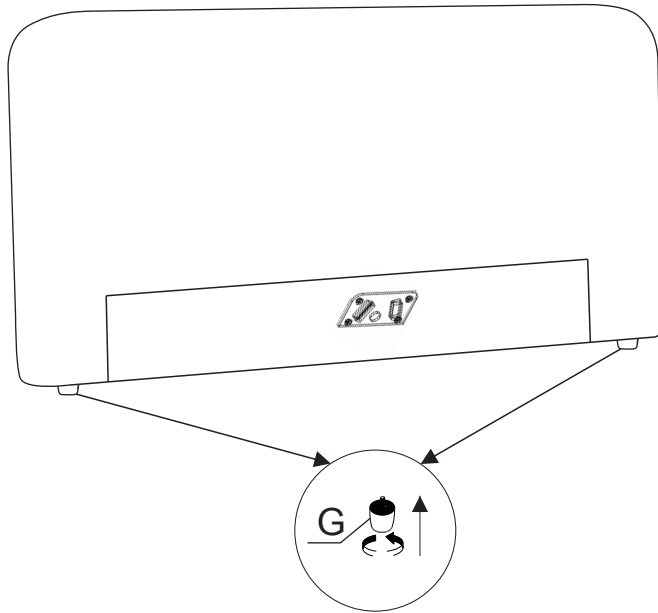


Hardware


Tools Required


Power tools NOT recommended

- 2 Instal Metal support A with screw D to fix headboard, siderails and footboard.

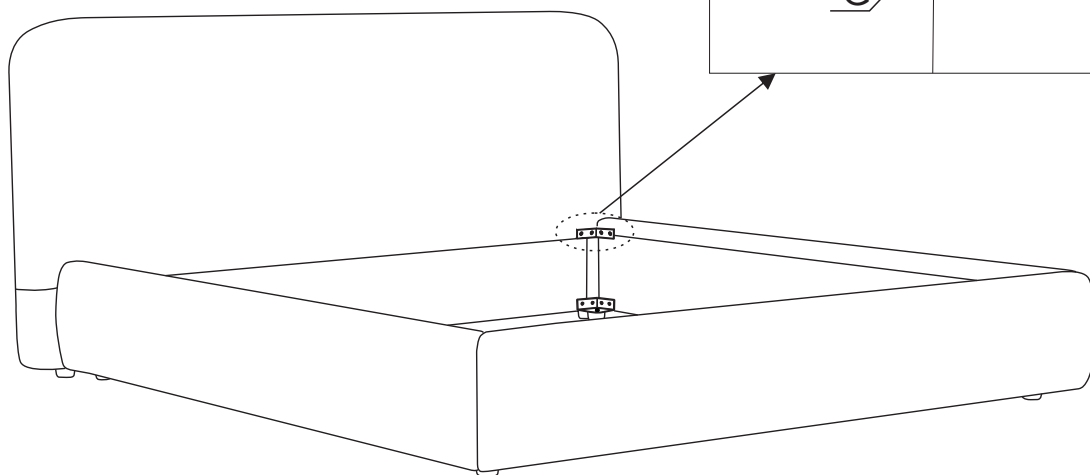

- 3 Instal Metal support B with screw D to fix headboard, siderails and footboard.

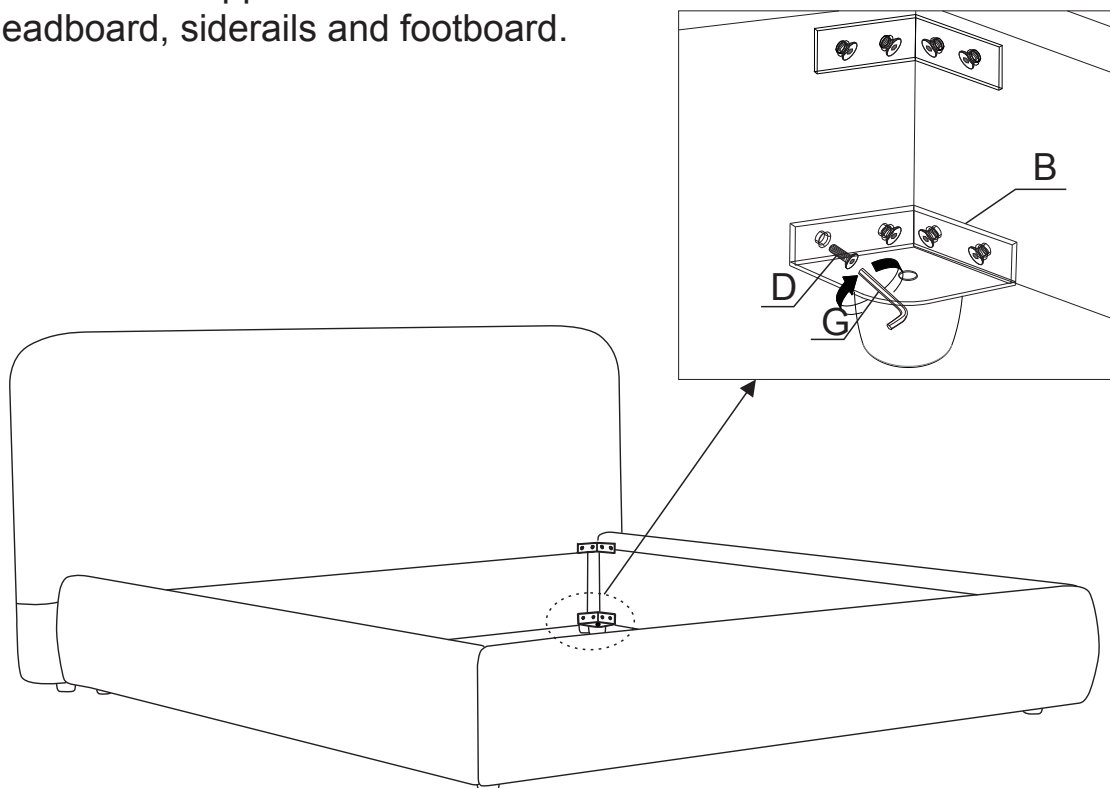

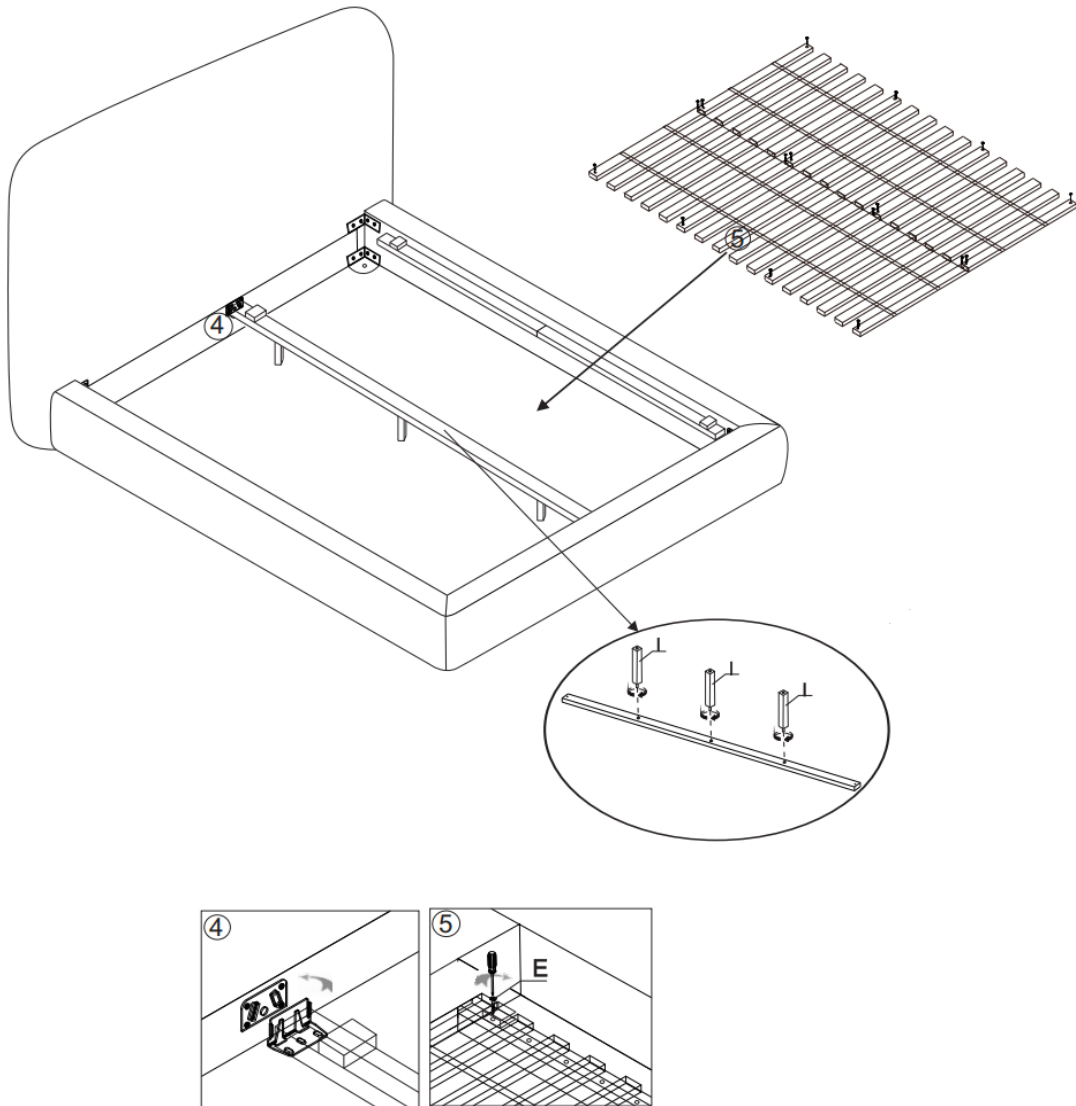

- ④ Instal Center legs I and place securely between the headboard and the footboard.

- ⑤ Place the slats evenly across the bed frame. Secure the slates using the screws E.

The bed is fully assembled and ready to use.