




Product Installation Instructions

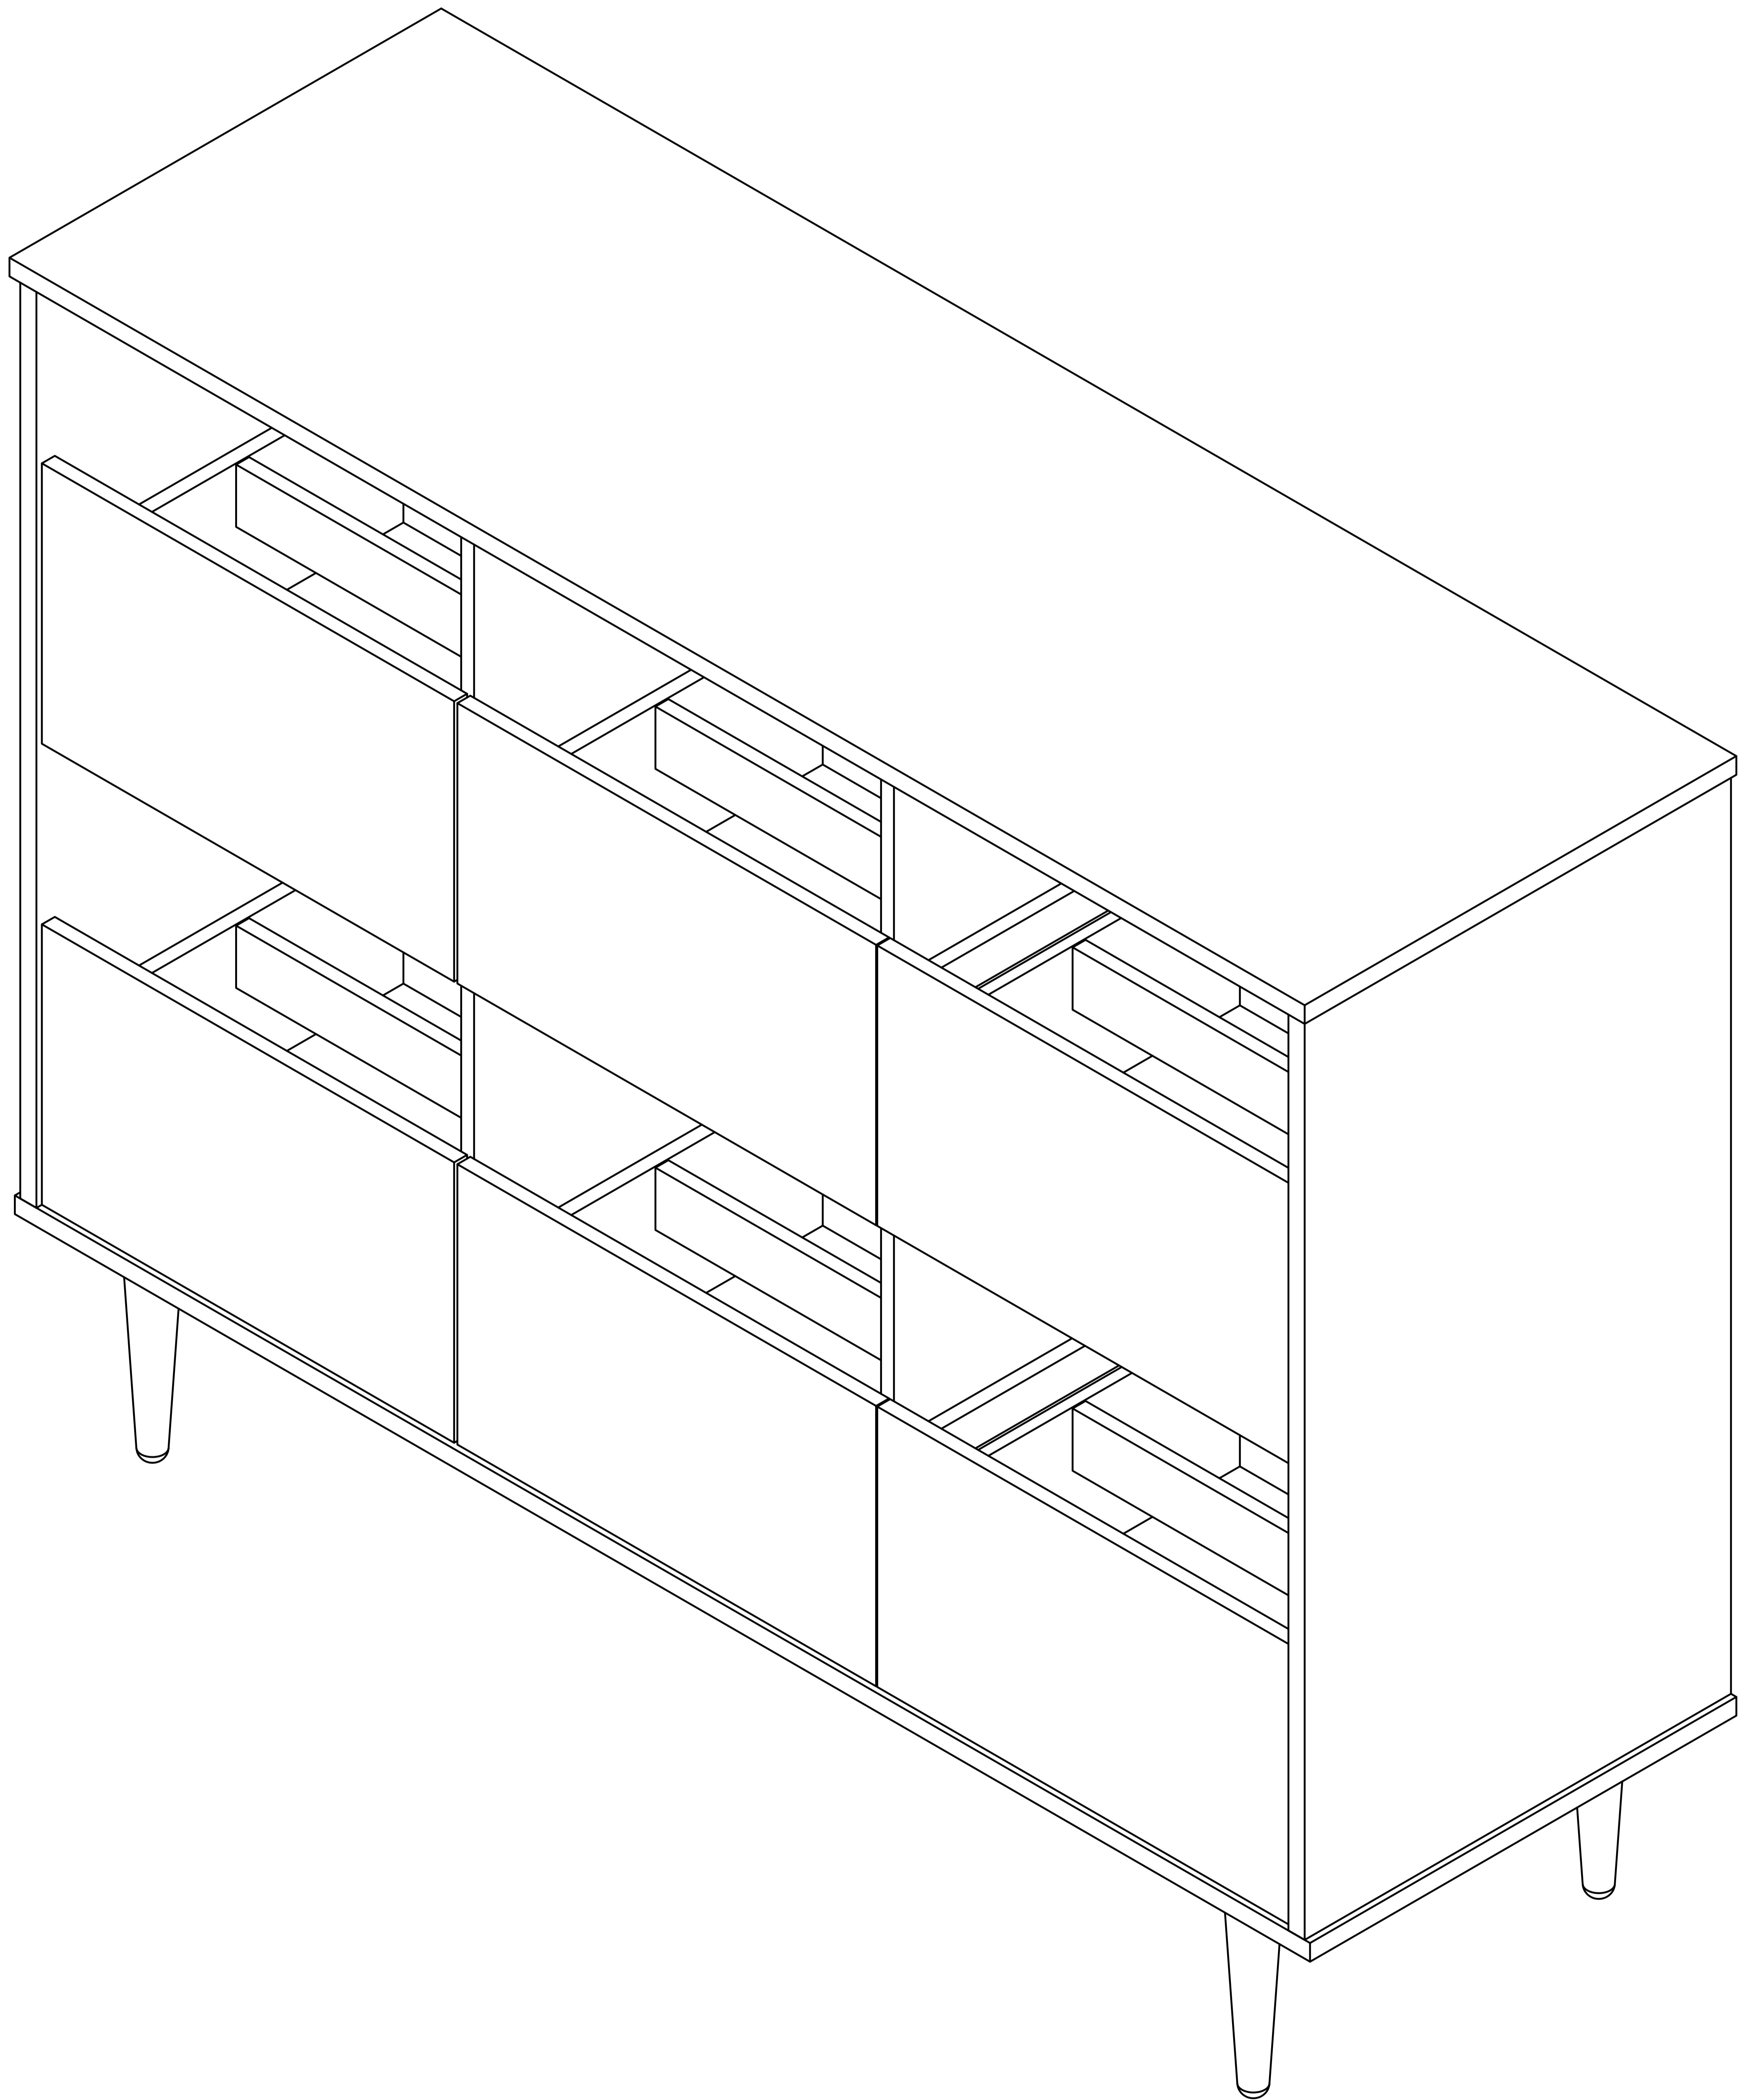


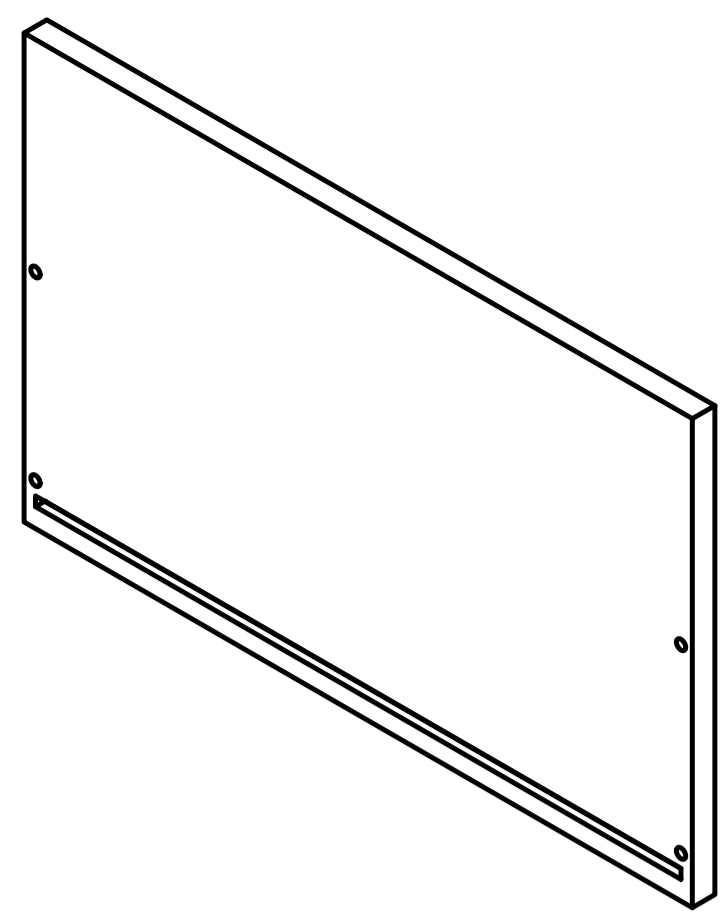


A x6

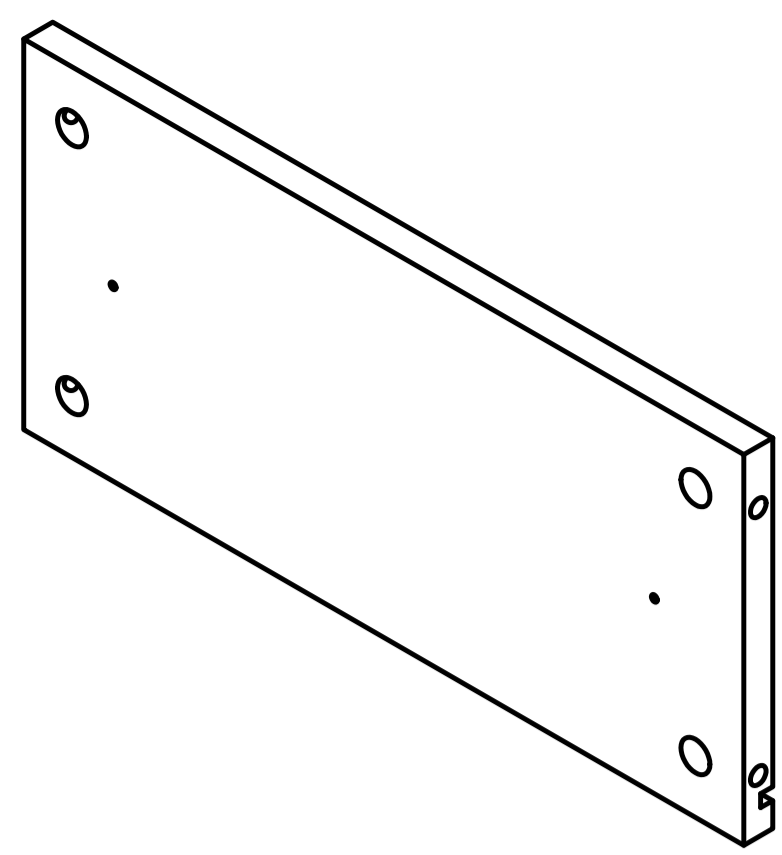


Bx12

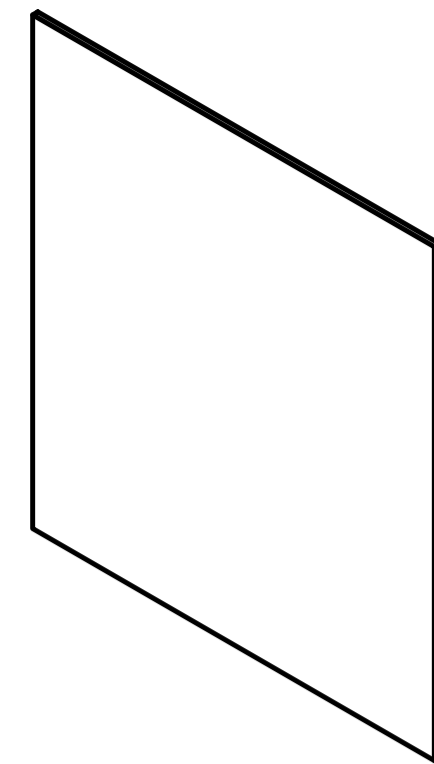


C x6

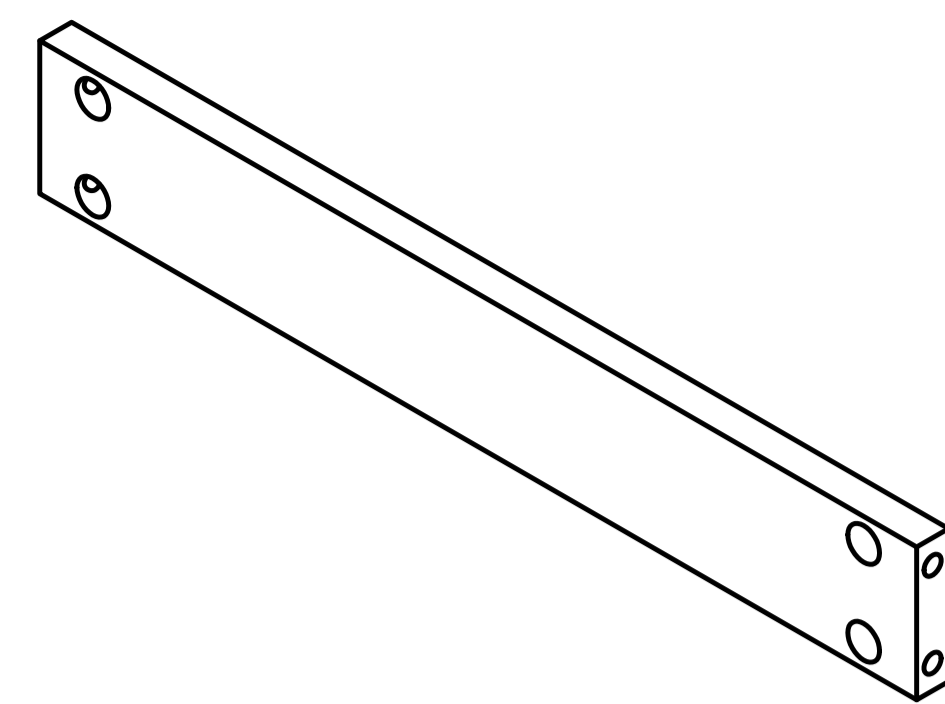


D x6

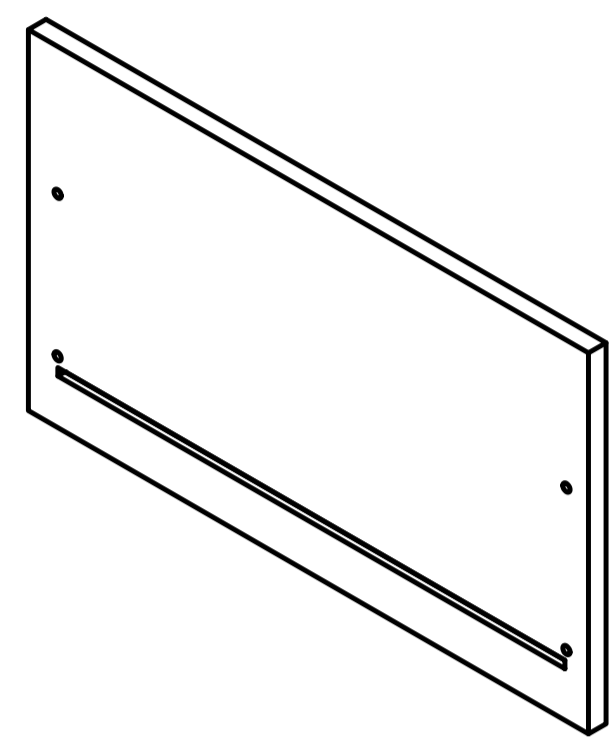


E x2

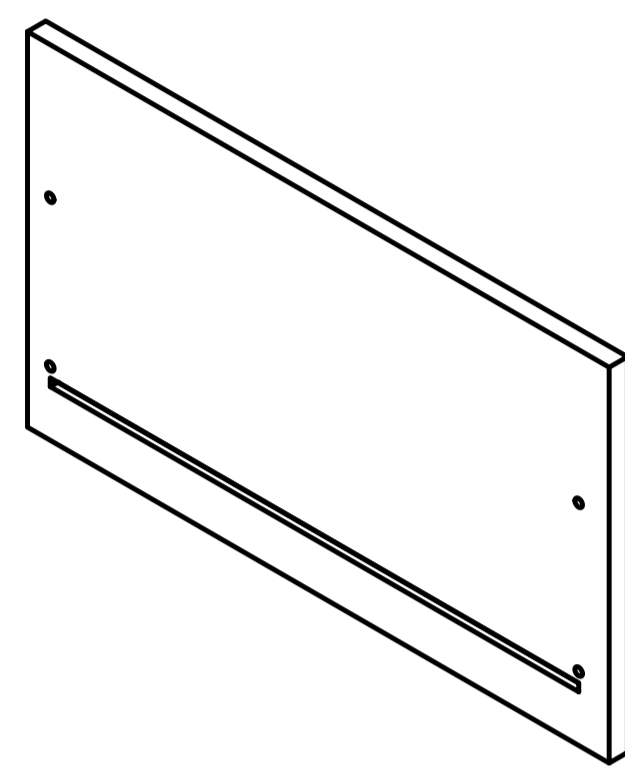


F x2

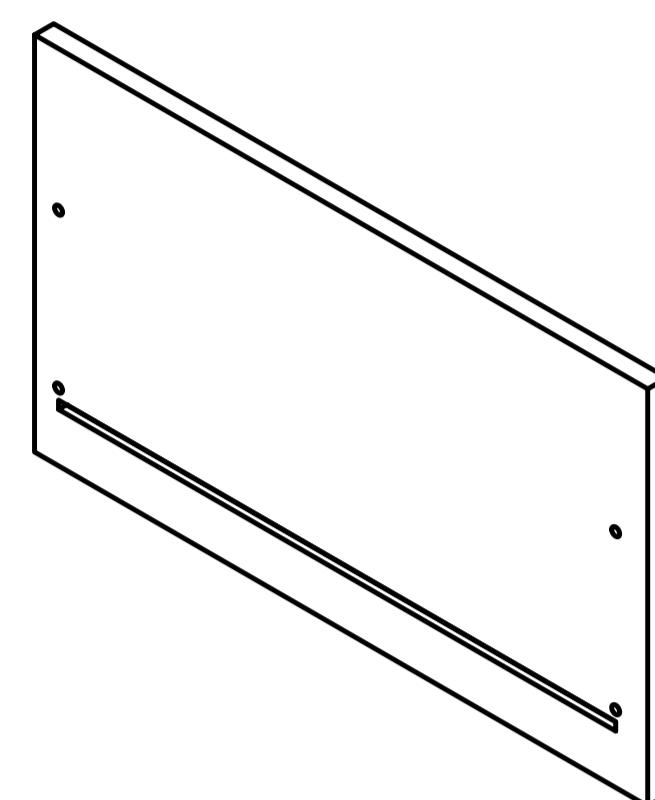


G x2

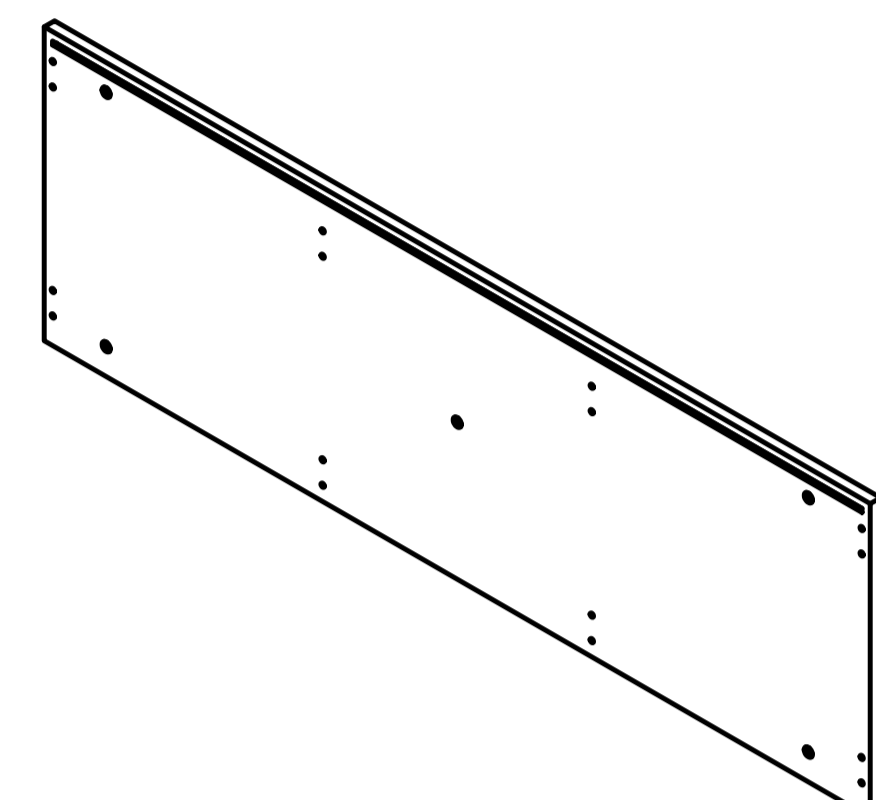


H x1

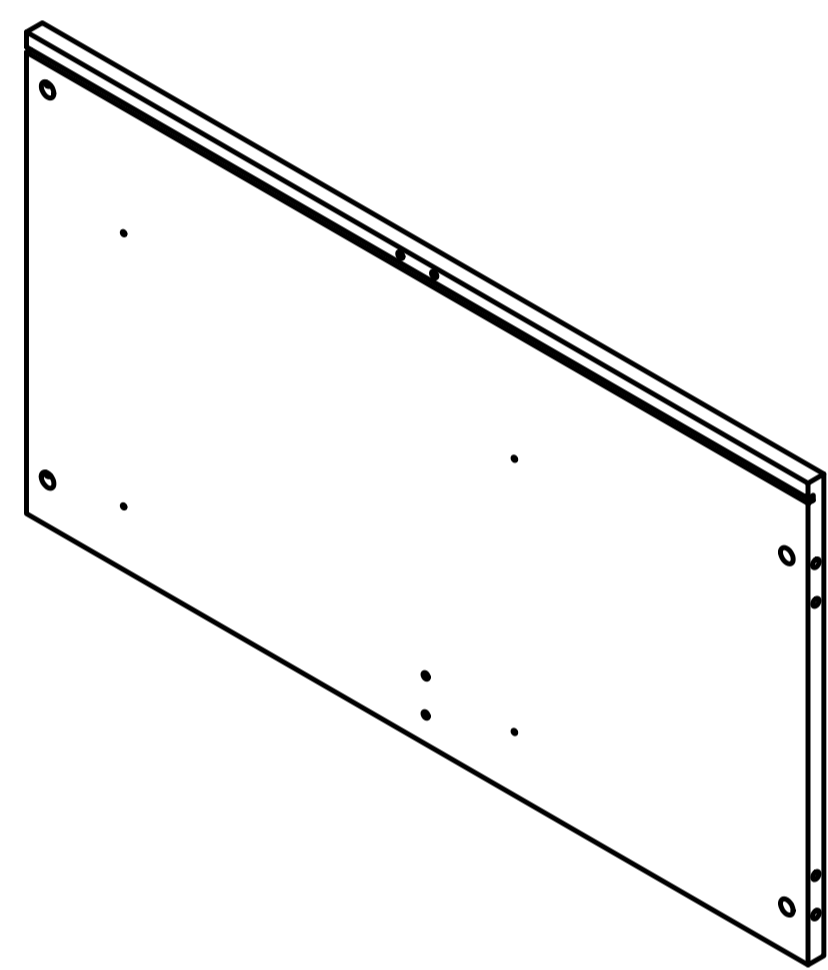


J x1

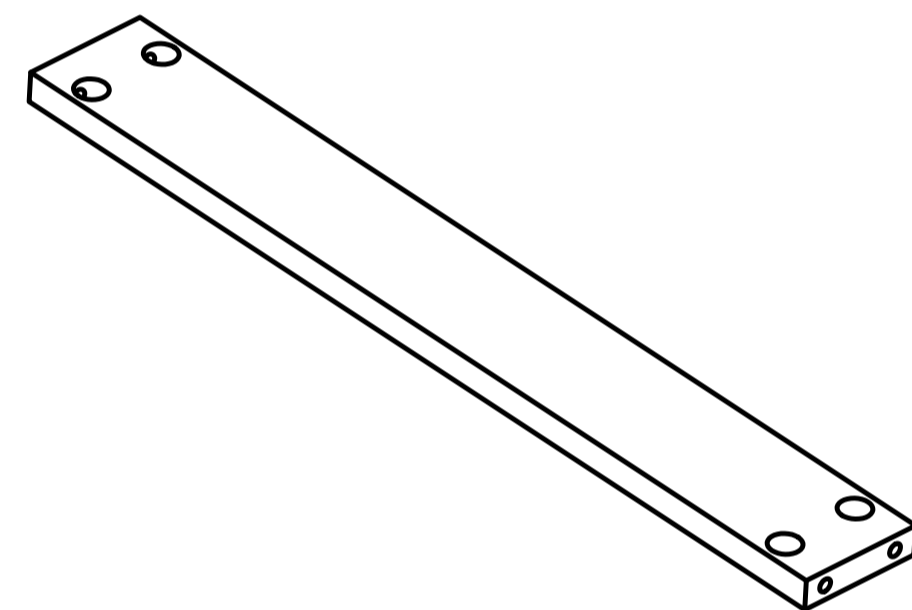


K x2

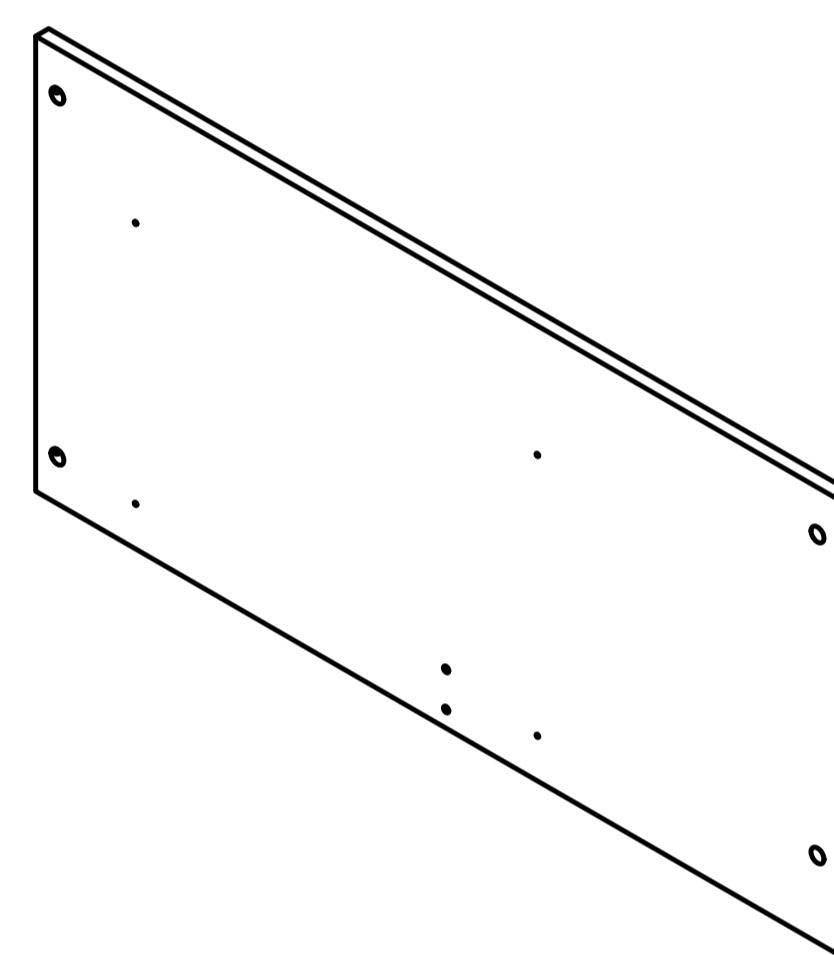


L x1

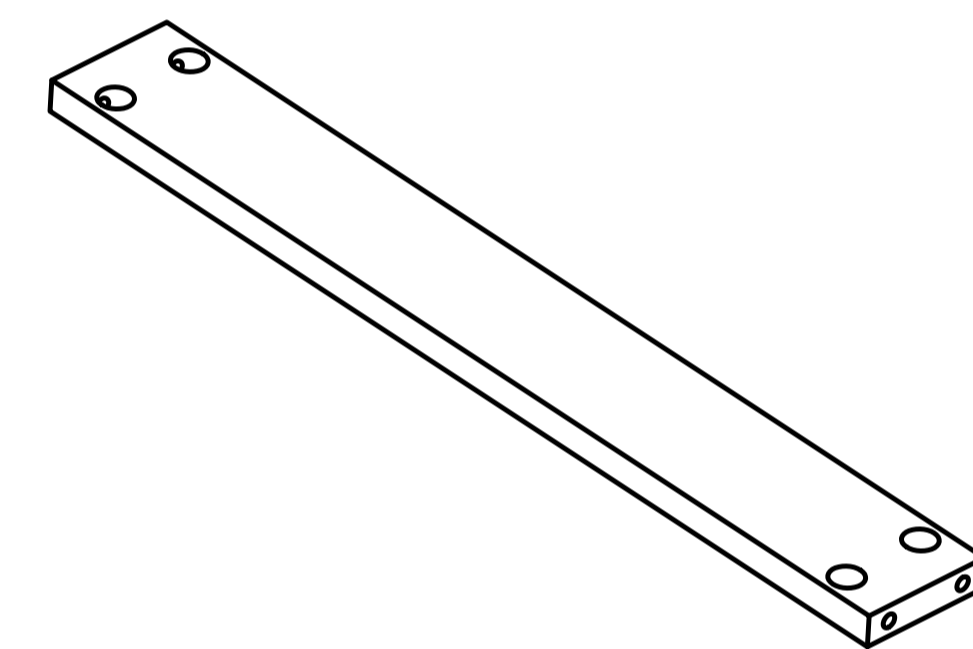


Mx1

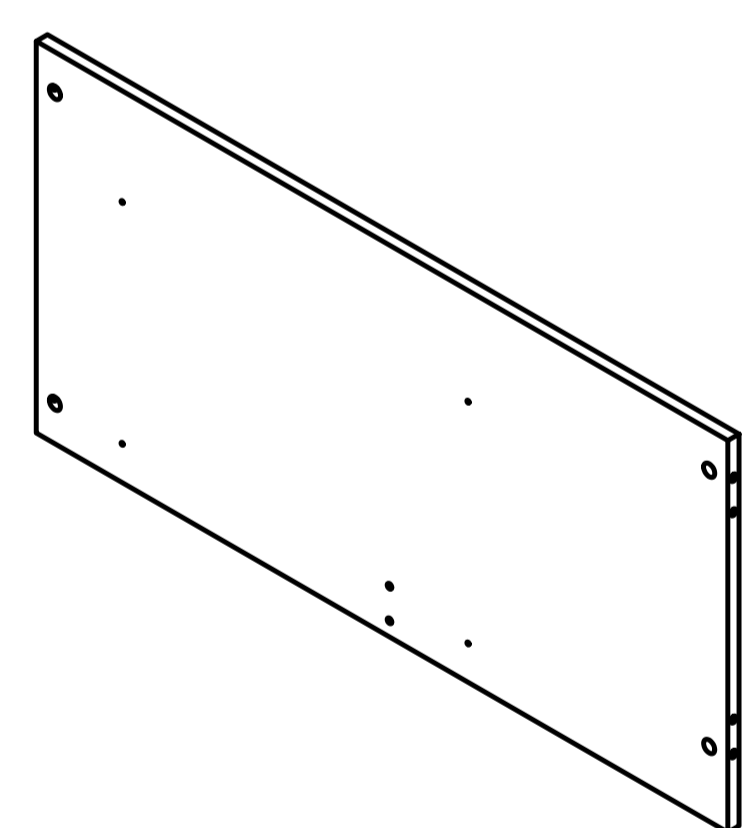


N x1

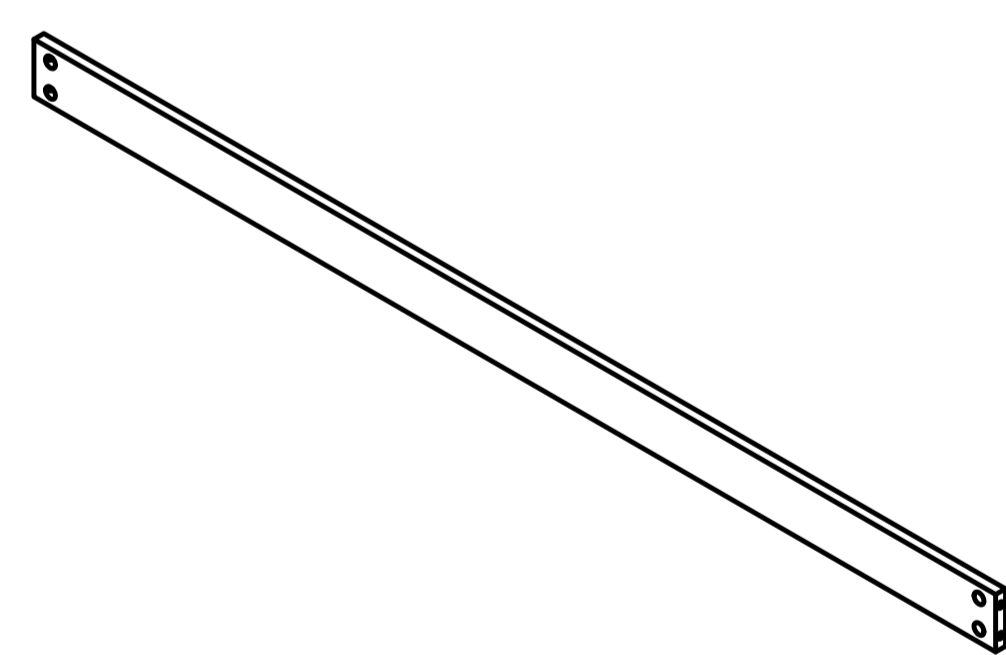


Ox1

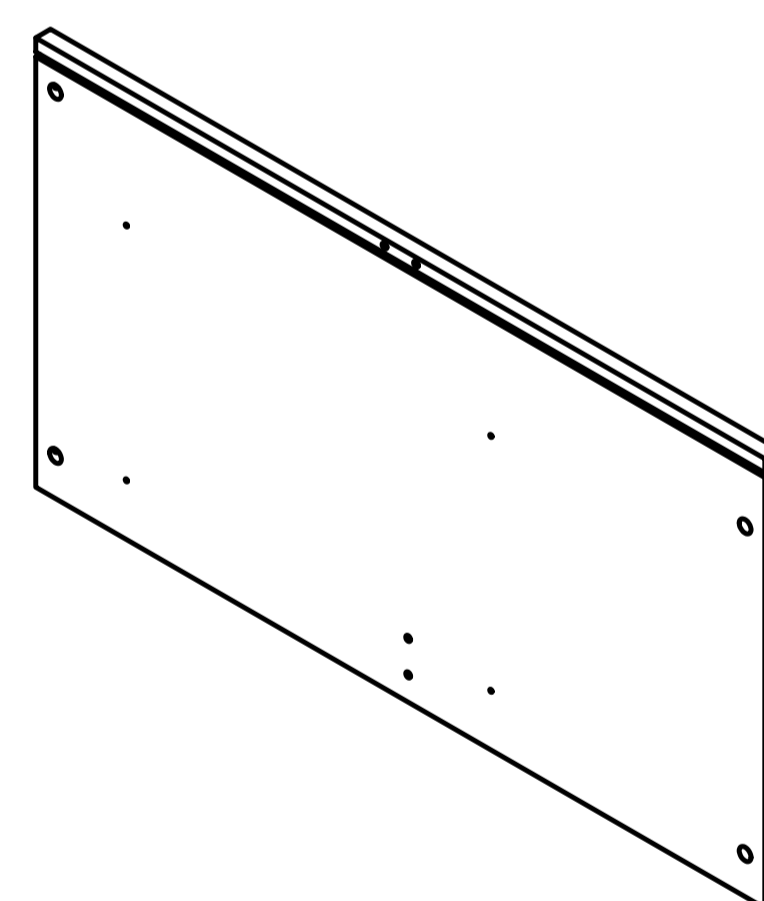


P x1

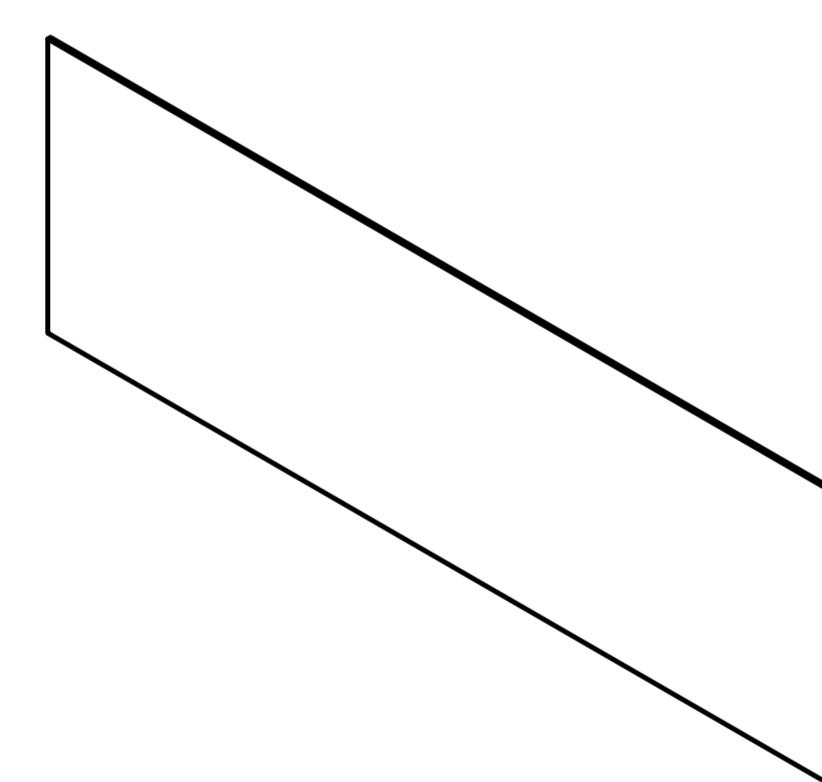




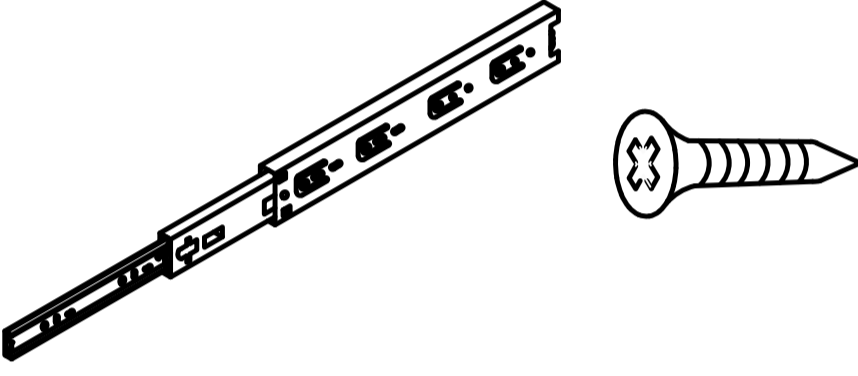
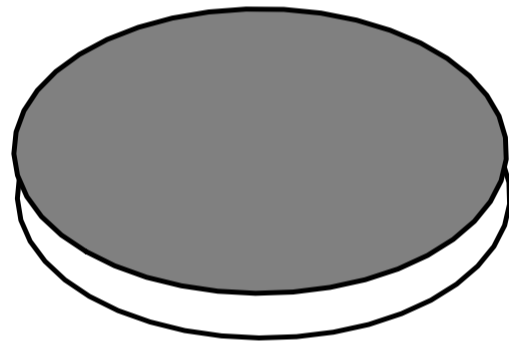

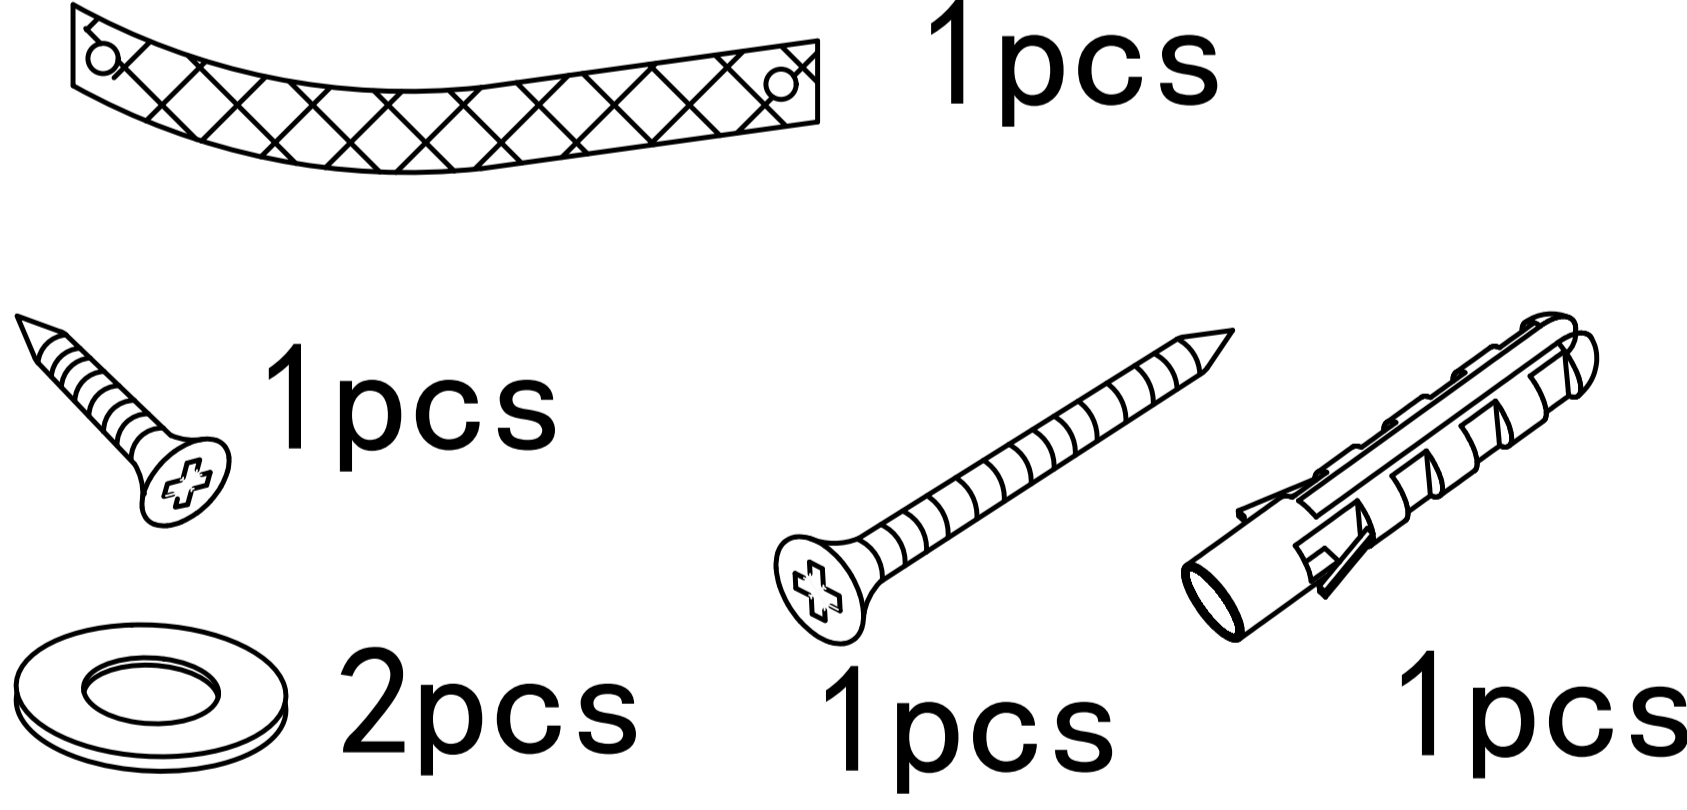
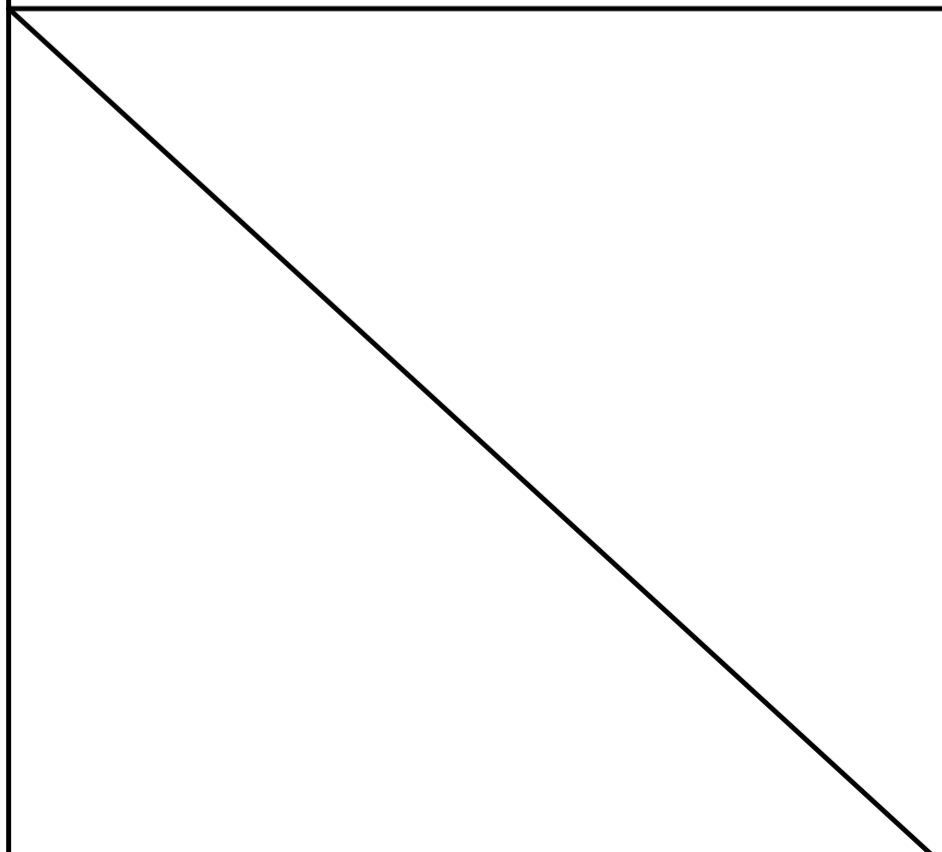
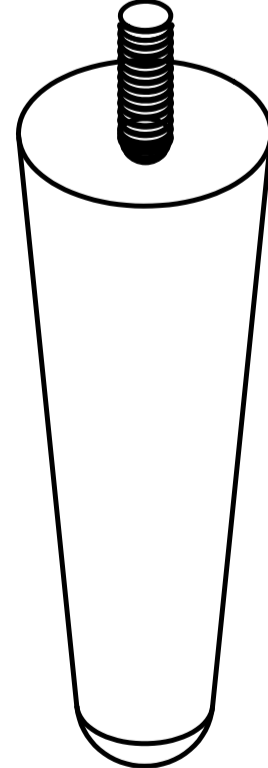
Qx2


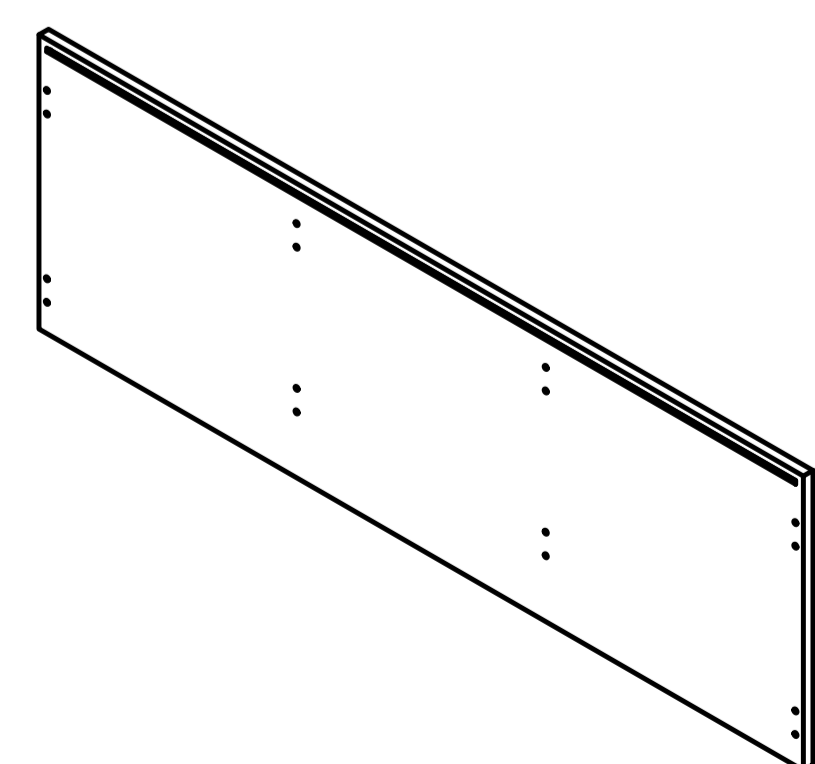


R x1

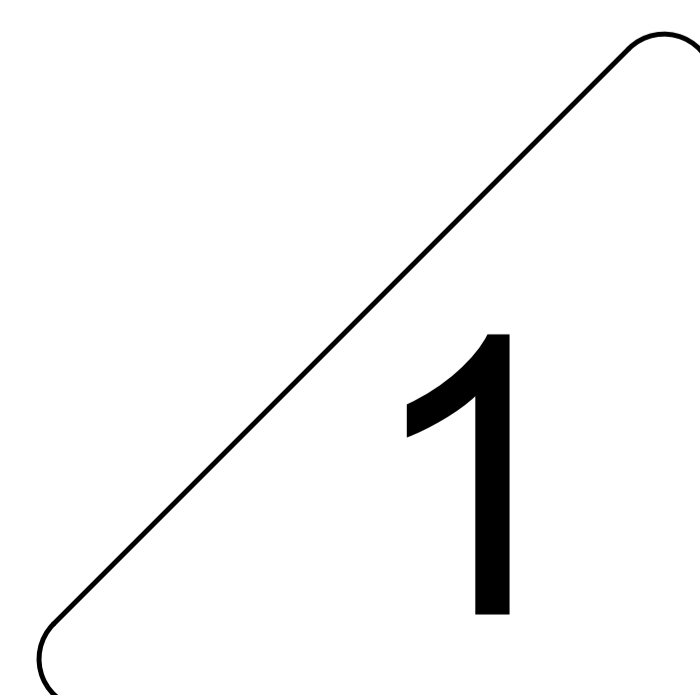


Accessories list

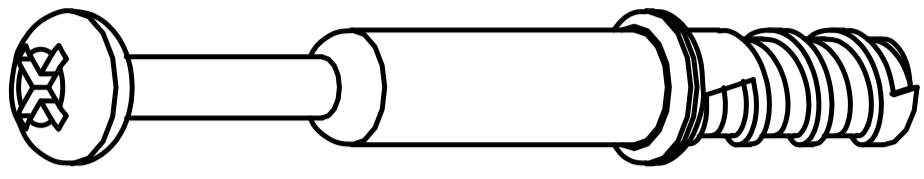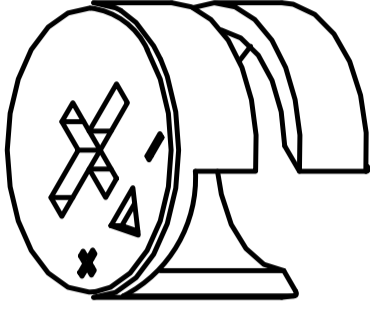
<p>①</p>		<p>Two In One Screw (6x28mm)</p>	<p>104pcs +10pcs</p>
<p>②</p>		<p>Two In One Nut (10x12mm)</p>	<p>104pcs +10pcs</p>
<p>③</p>		<p>Wood Chipping (6x30mm)</p>	<p>16pcs +3pcs</p>
<p>④</p>		<p>Guide rails & screws (3x12mm) 29cm</p>	<p>60pcs +12pcs 12pcs</p>
<p>⑤</p>		<p>Non-slip pads (φ12x2mm)</p>	<p>5pcs +1pcs</p>
<p>⑥</p>		<p>Fixing Clip & Screw (3x16mm)</p>	<p>12pcs +1pcs</p>
<p>⑦</p>		<p>anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)</p>	<p>1pcs</p>
		<p>wooden foot</p>	<p>5pcs</p>

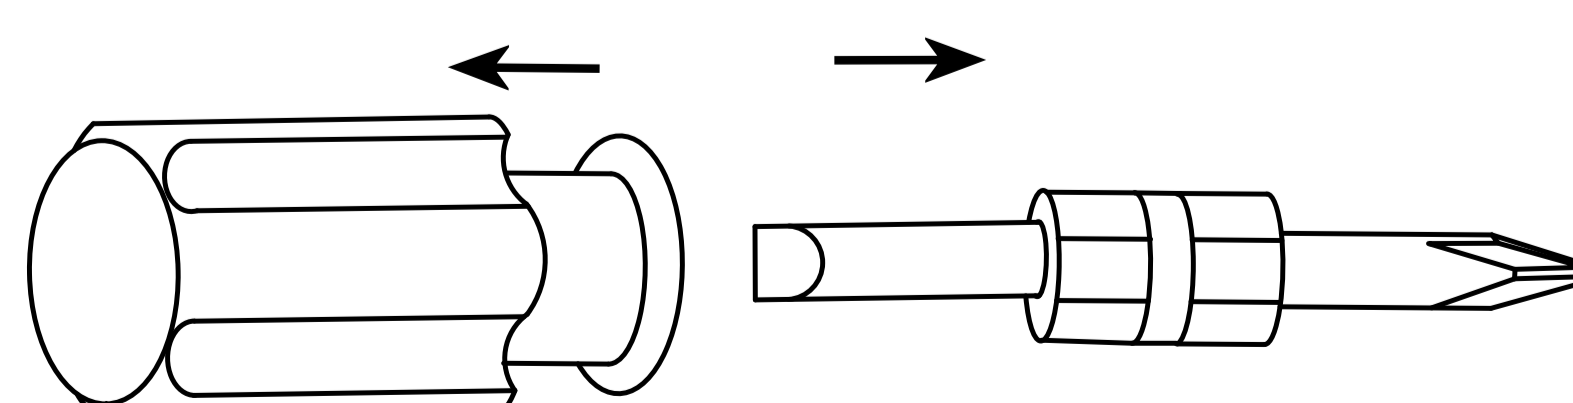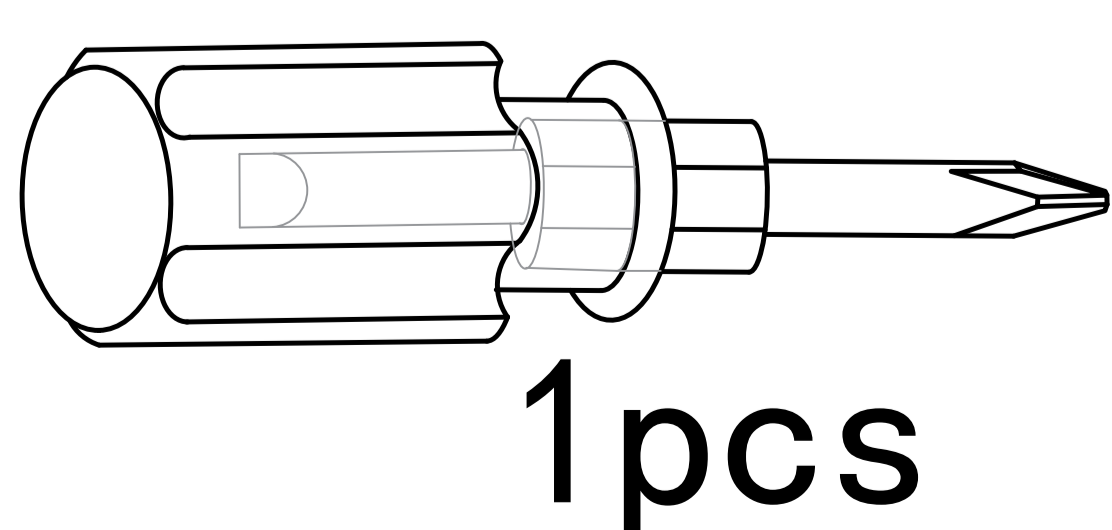

Double-head screwdriver, use as required

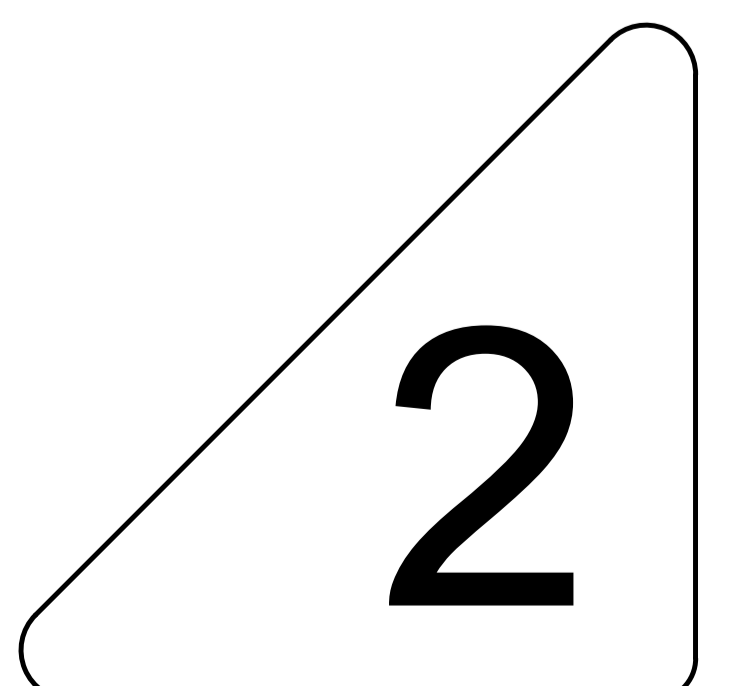


Product structure decomposition

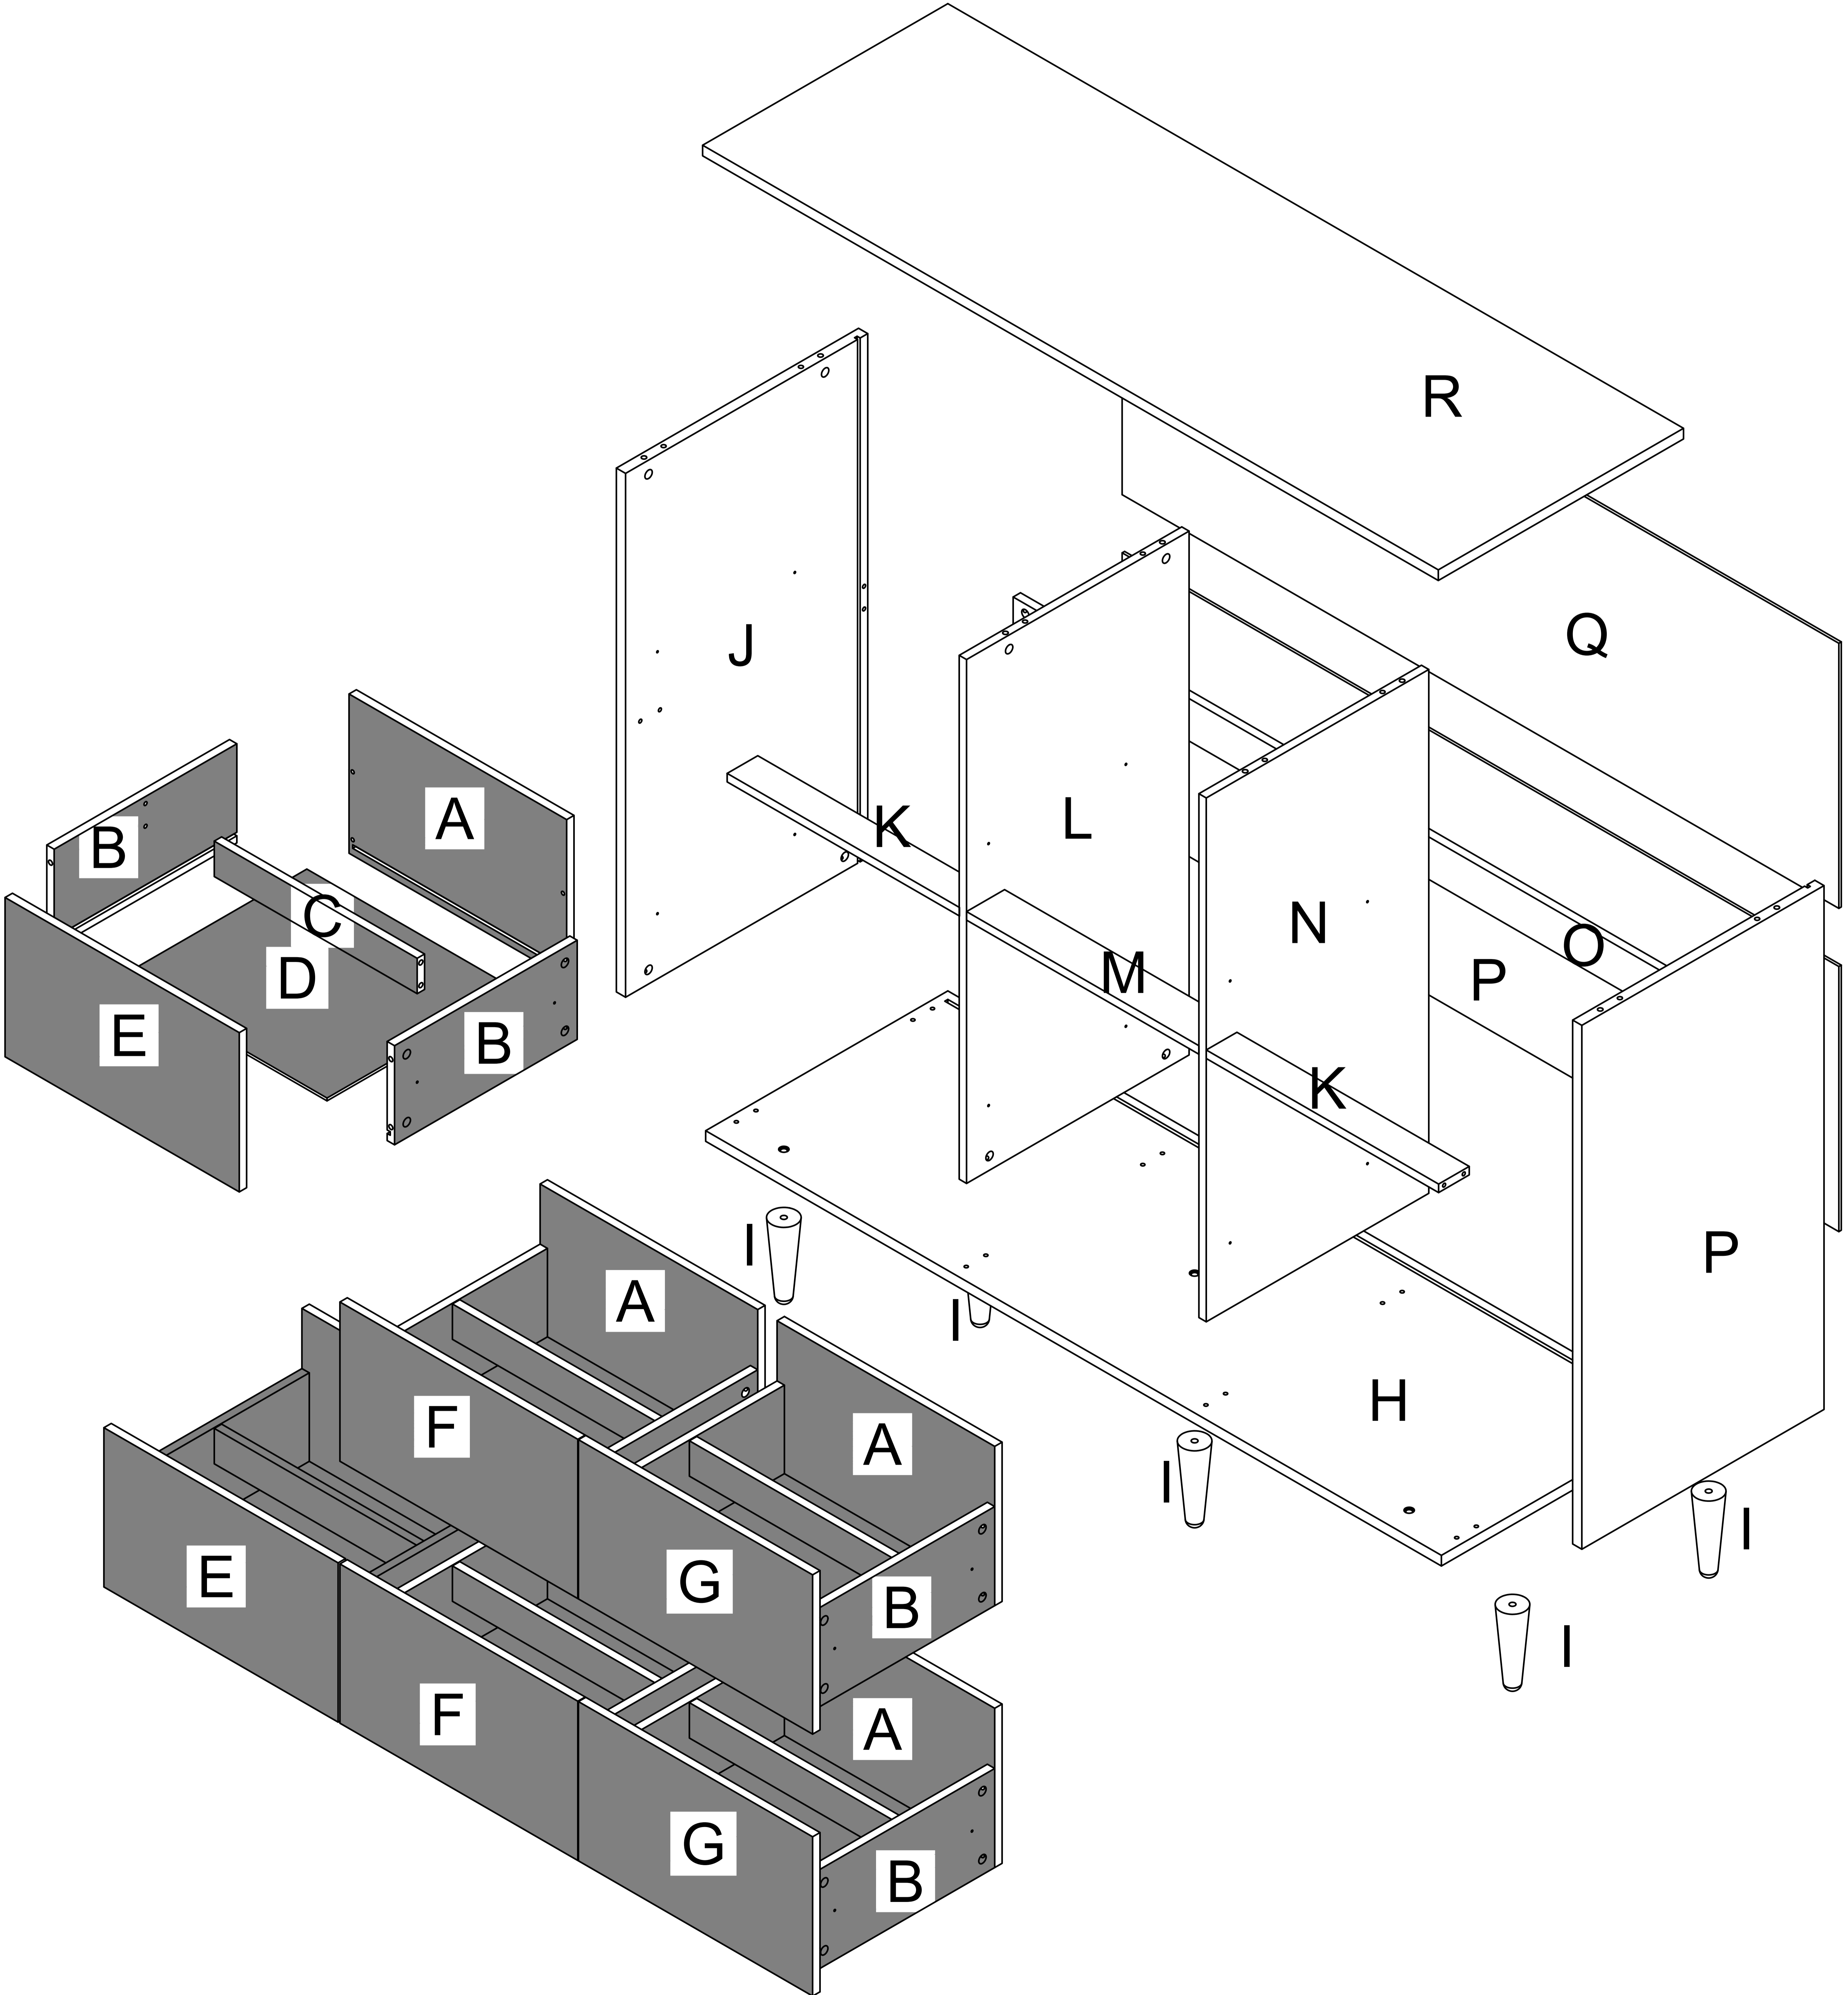


Use parts ① and ②




Step 1

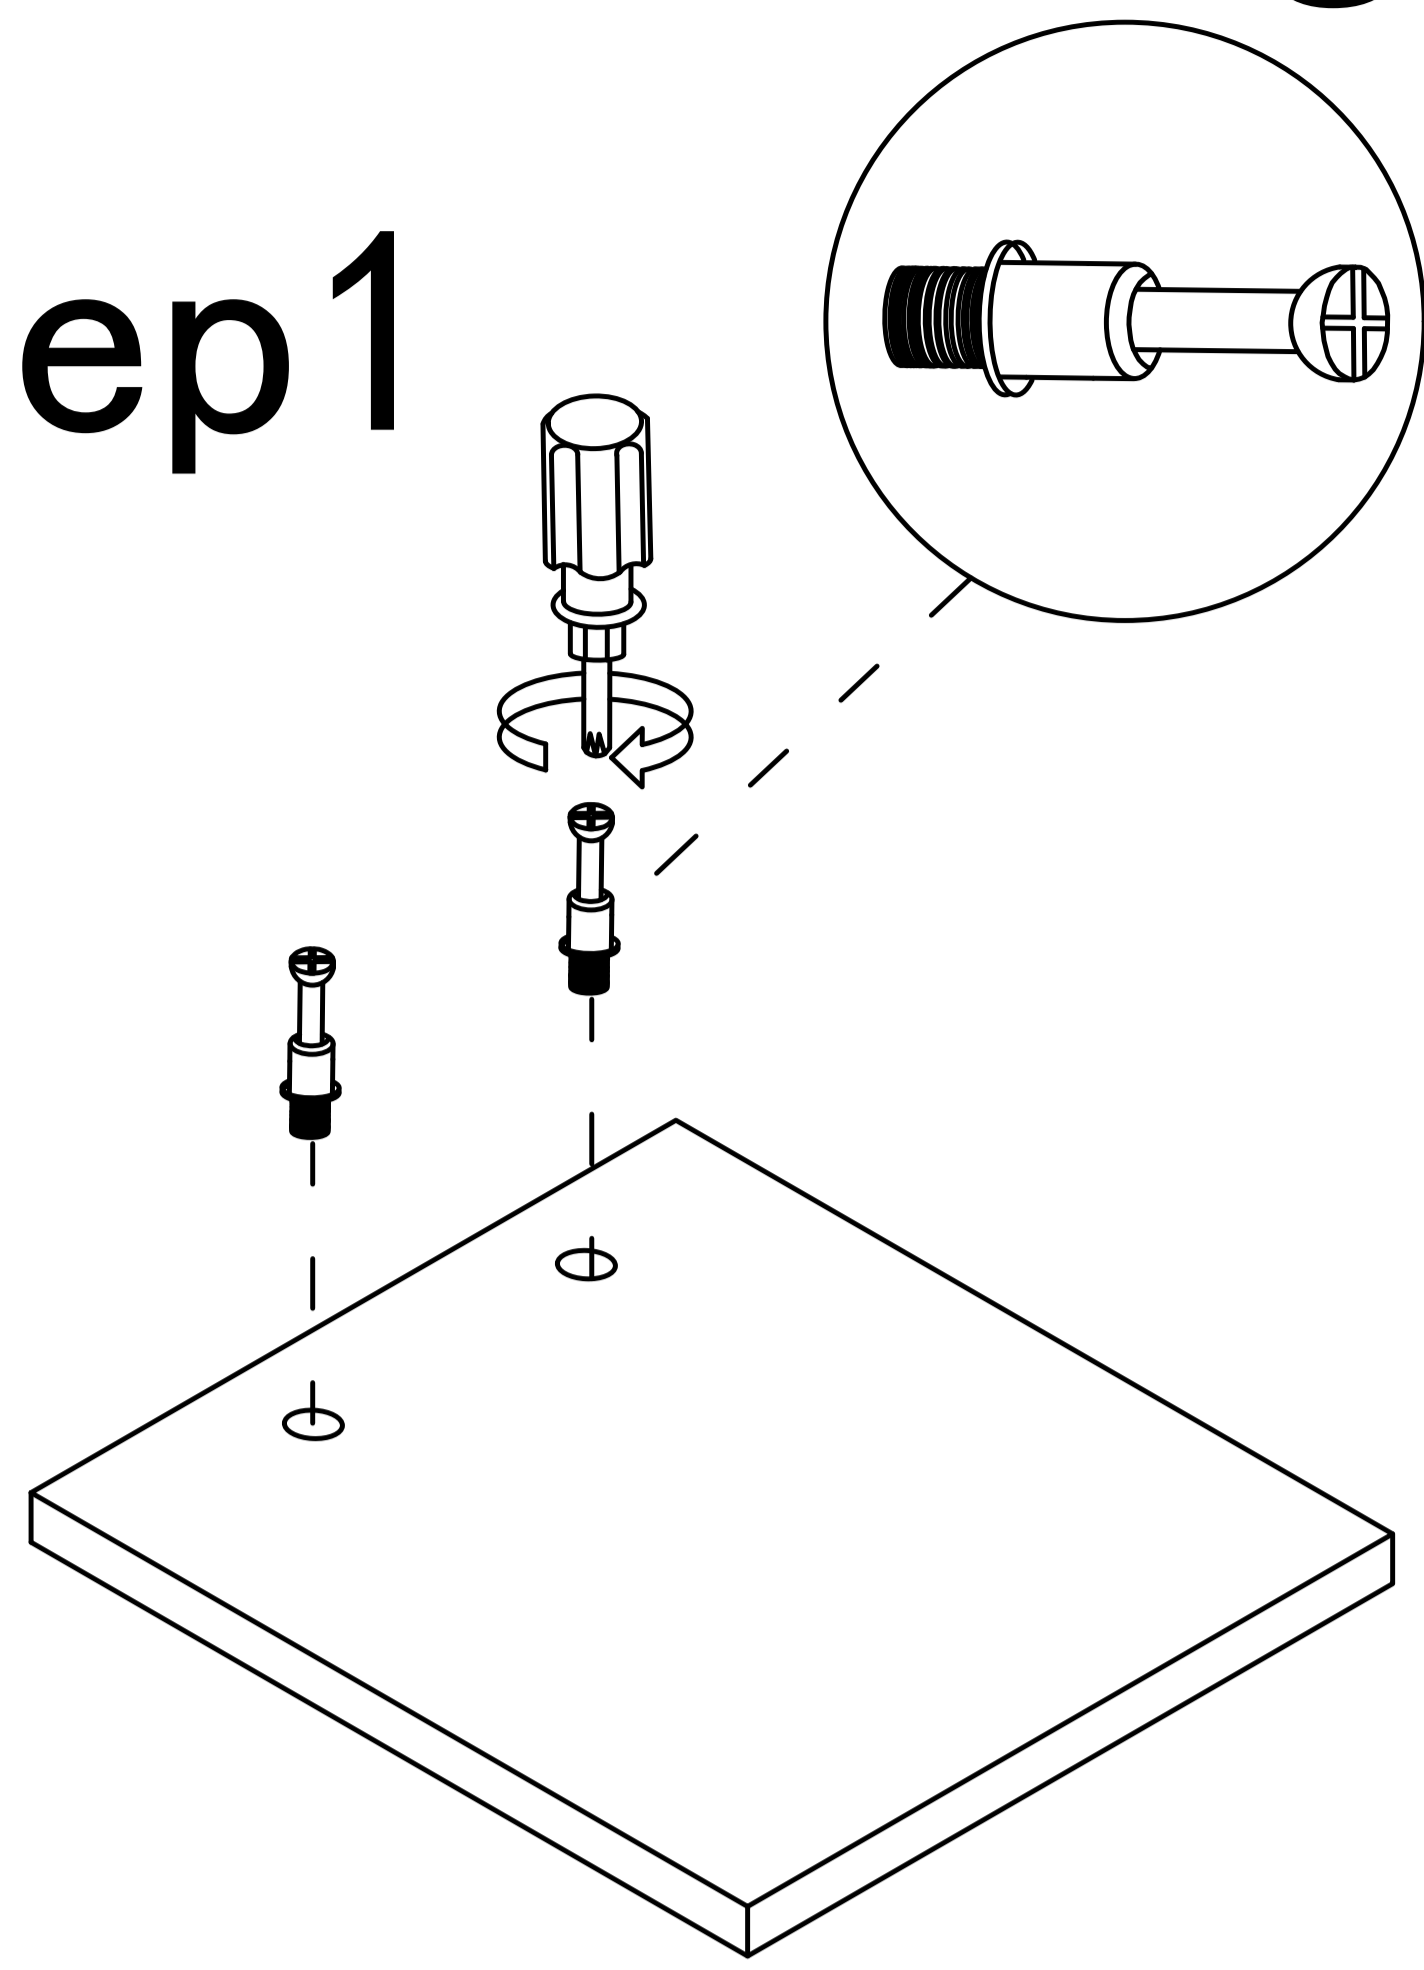

Step 2

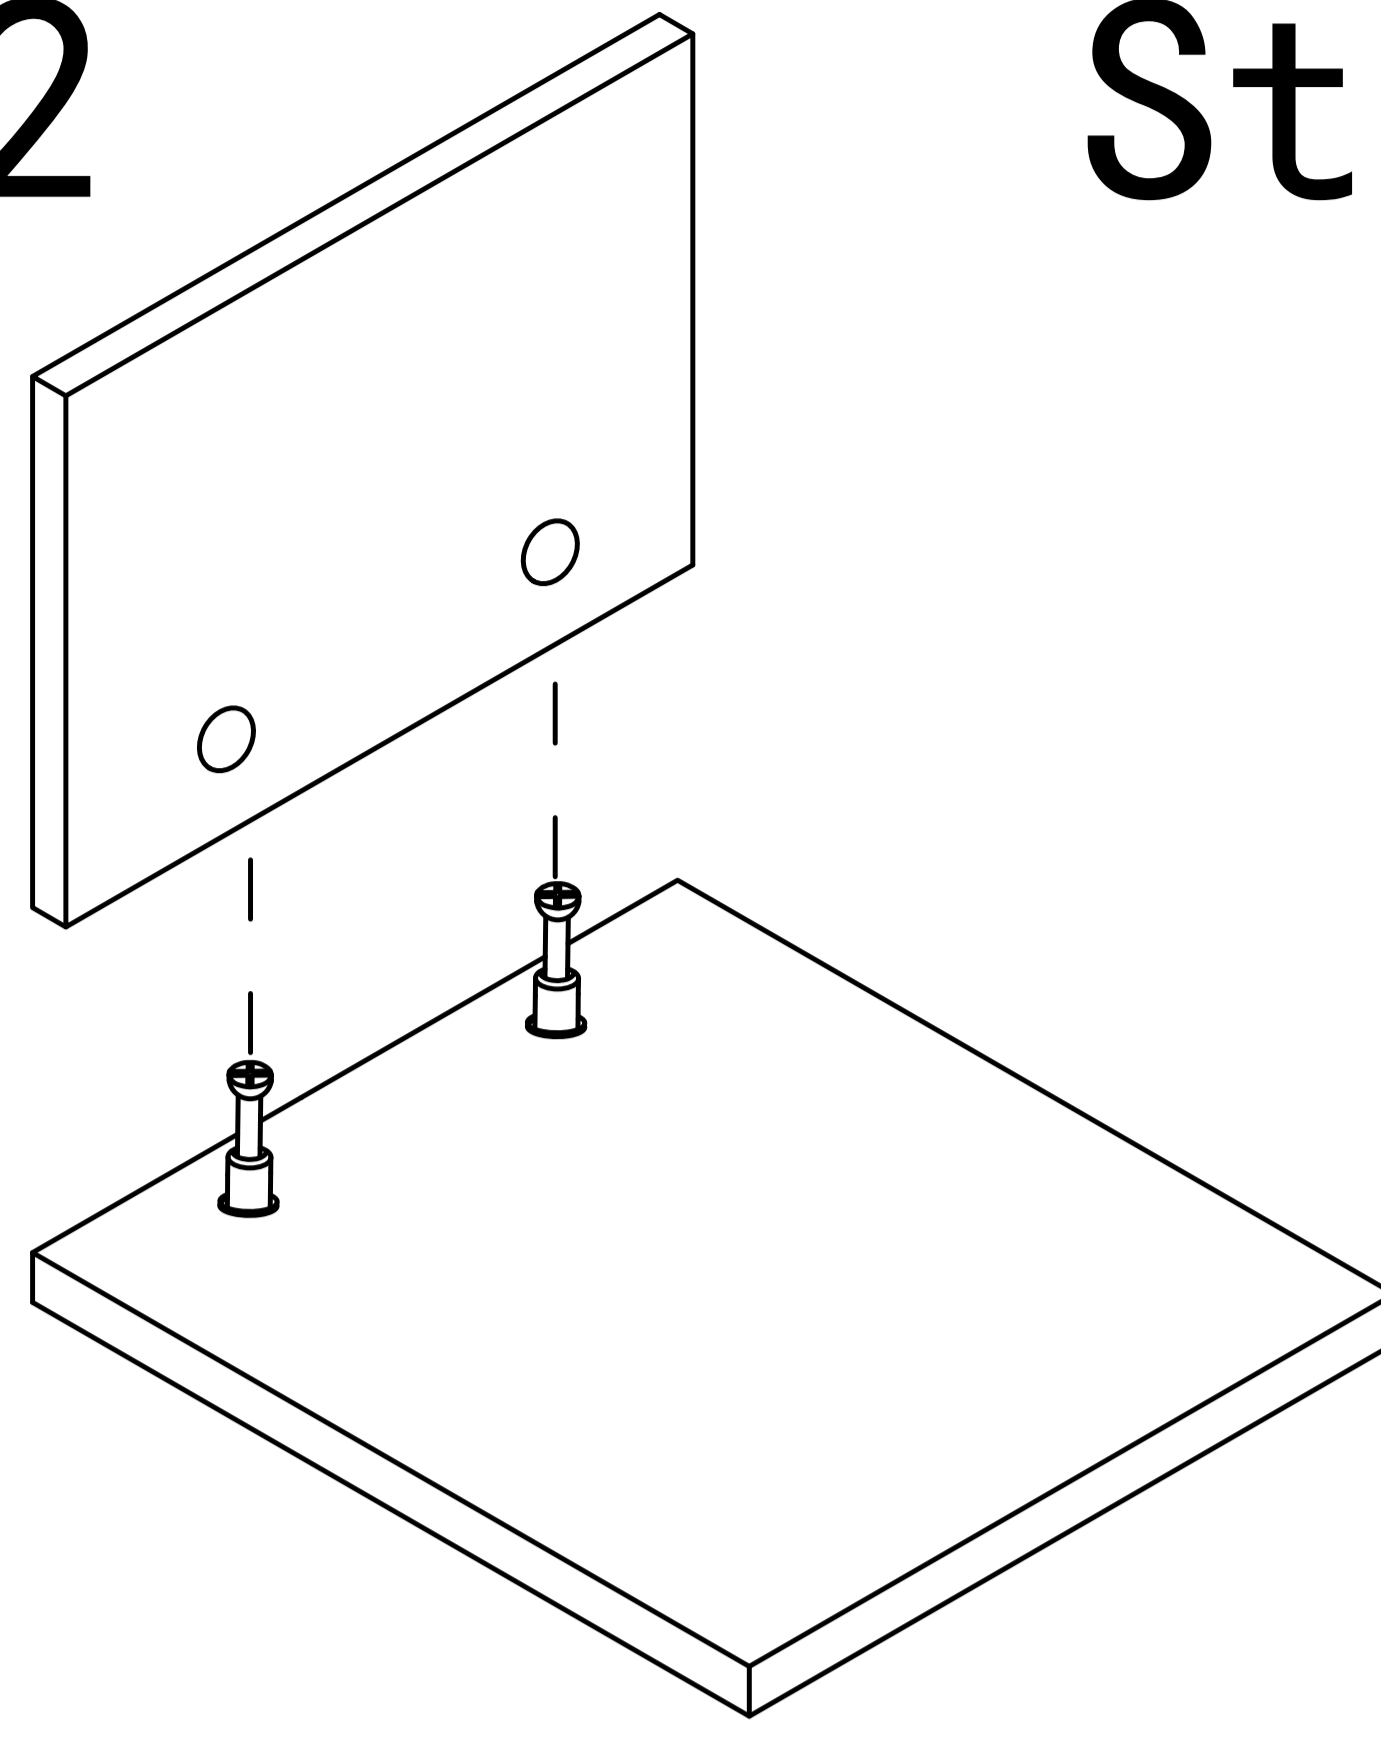



Step 3

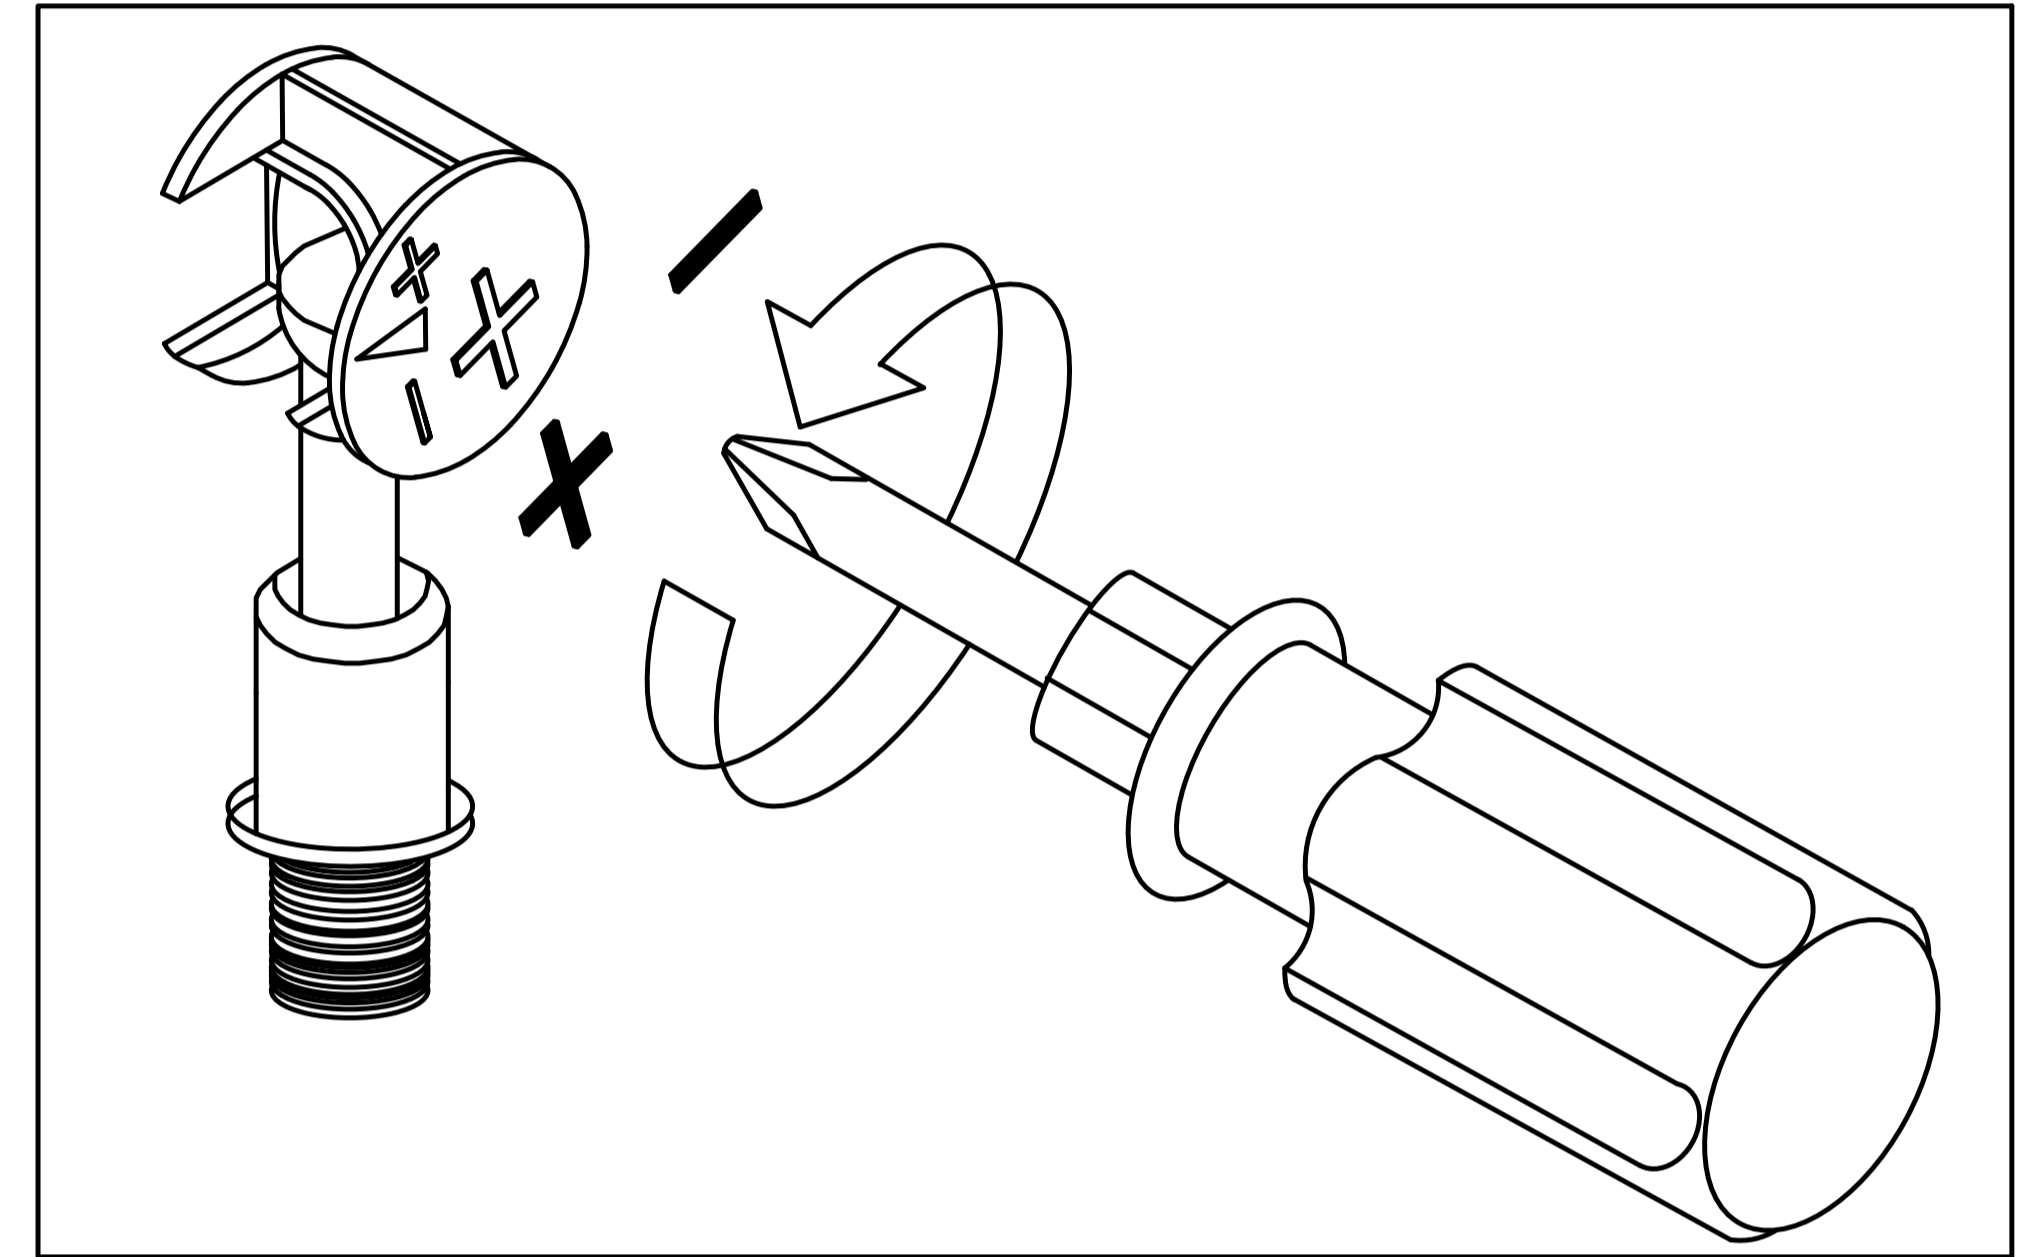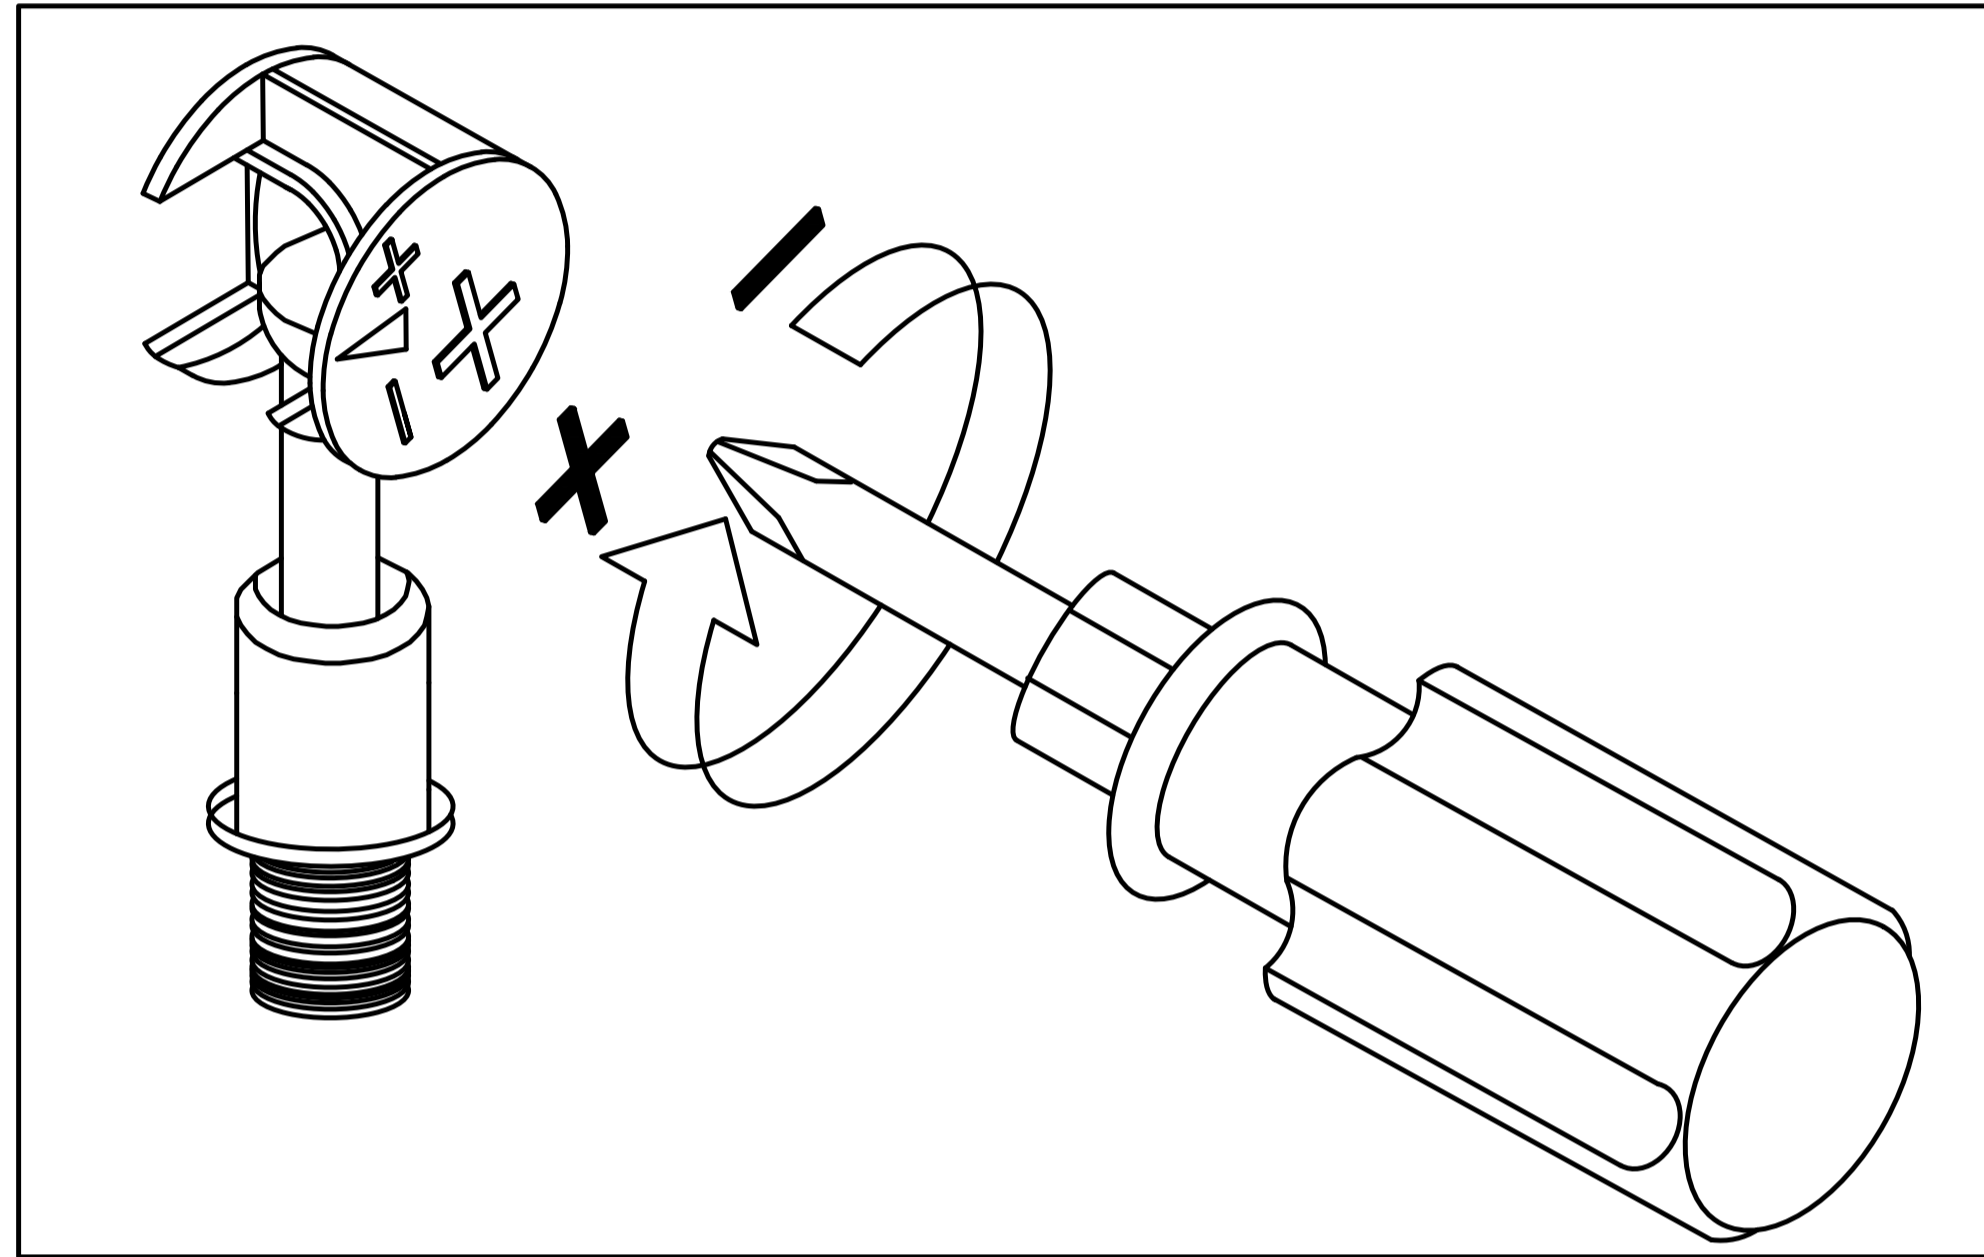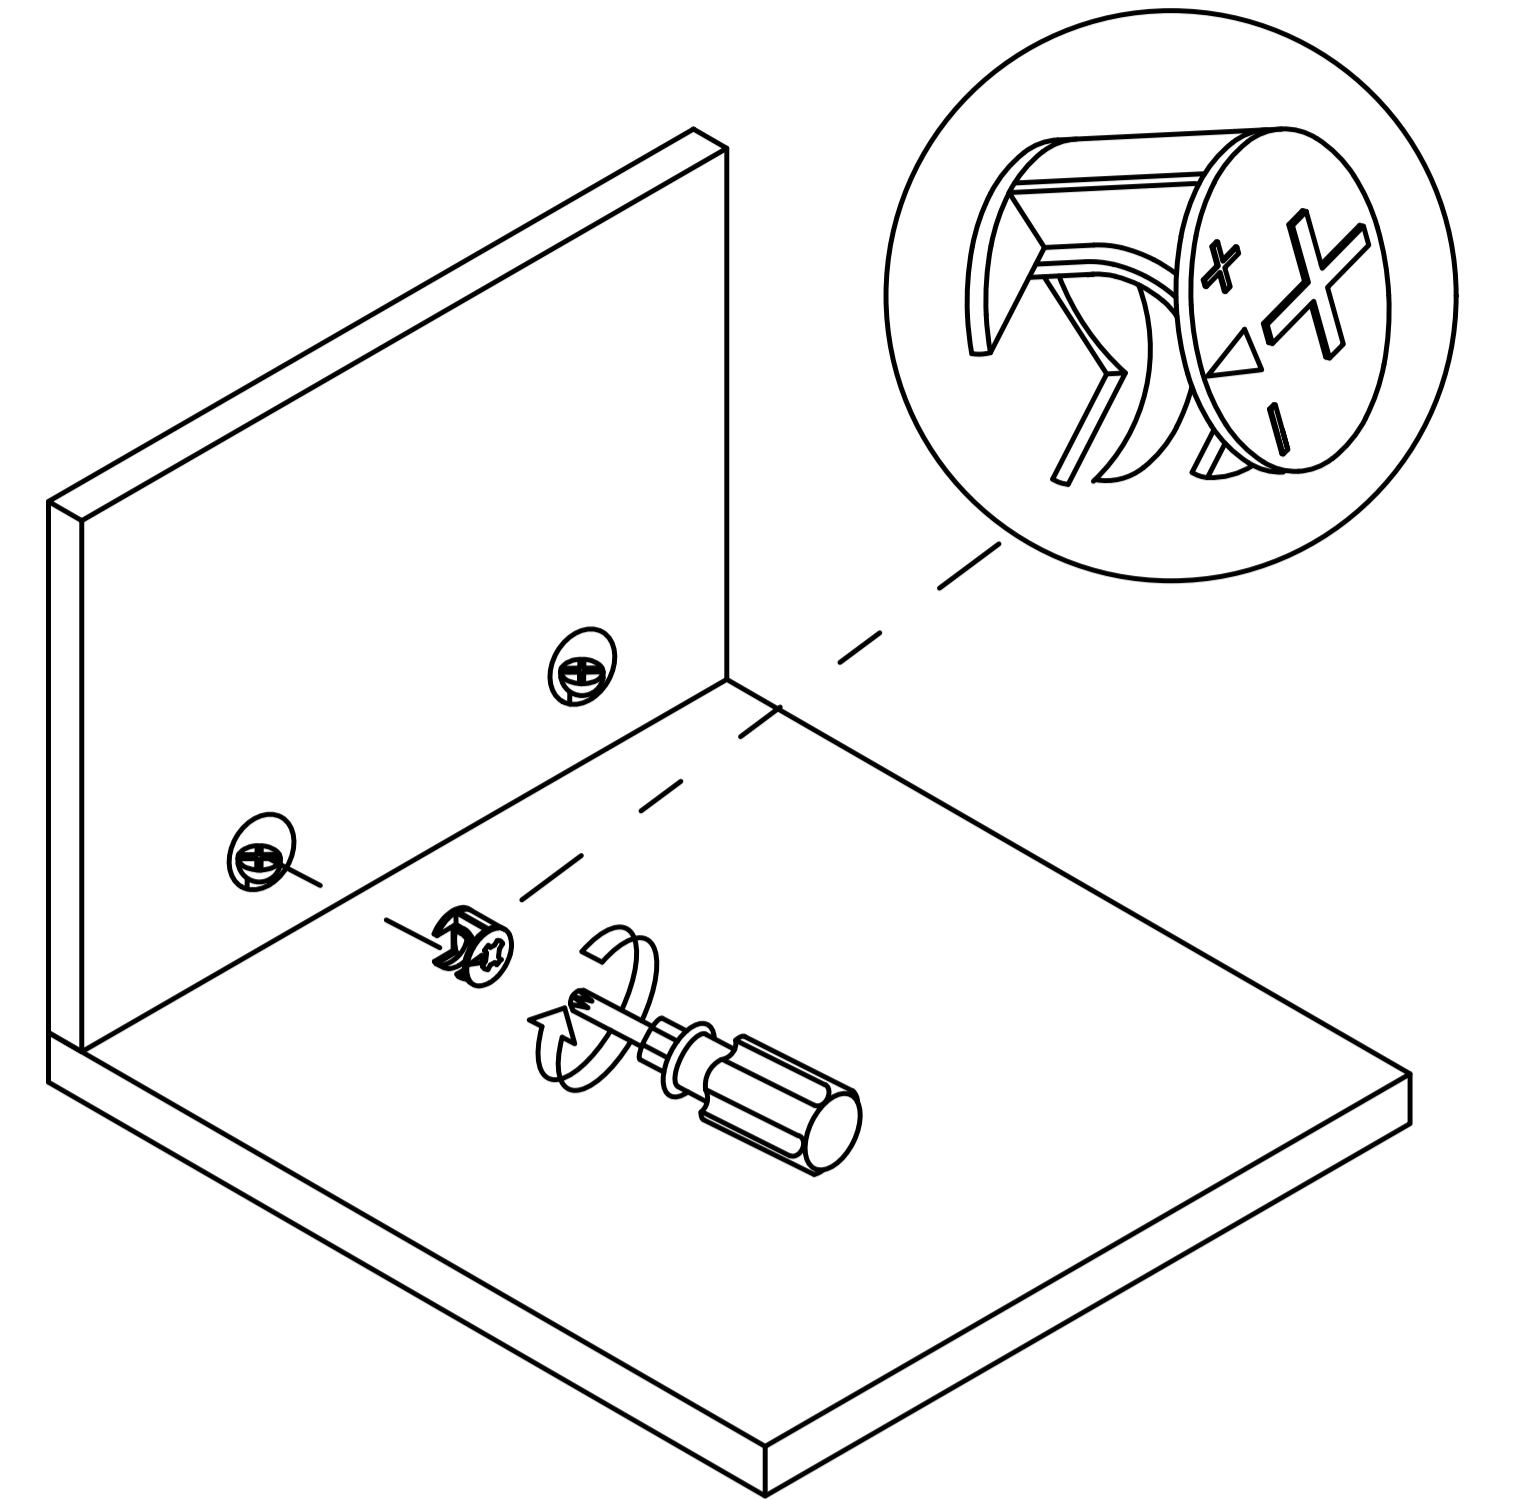



Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

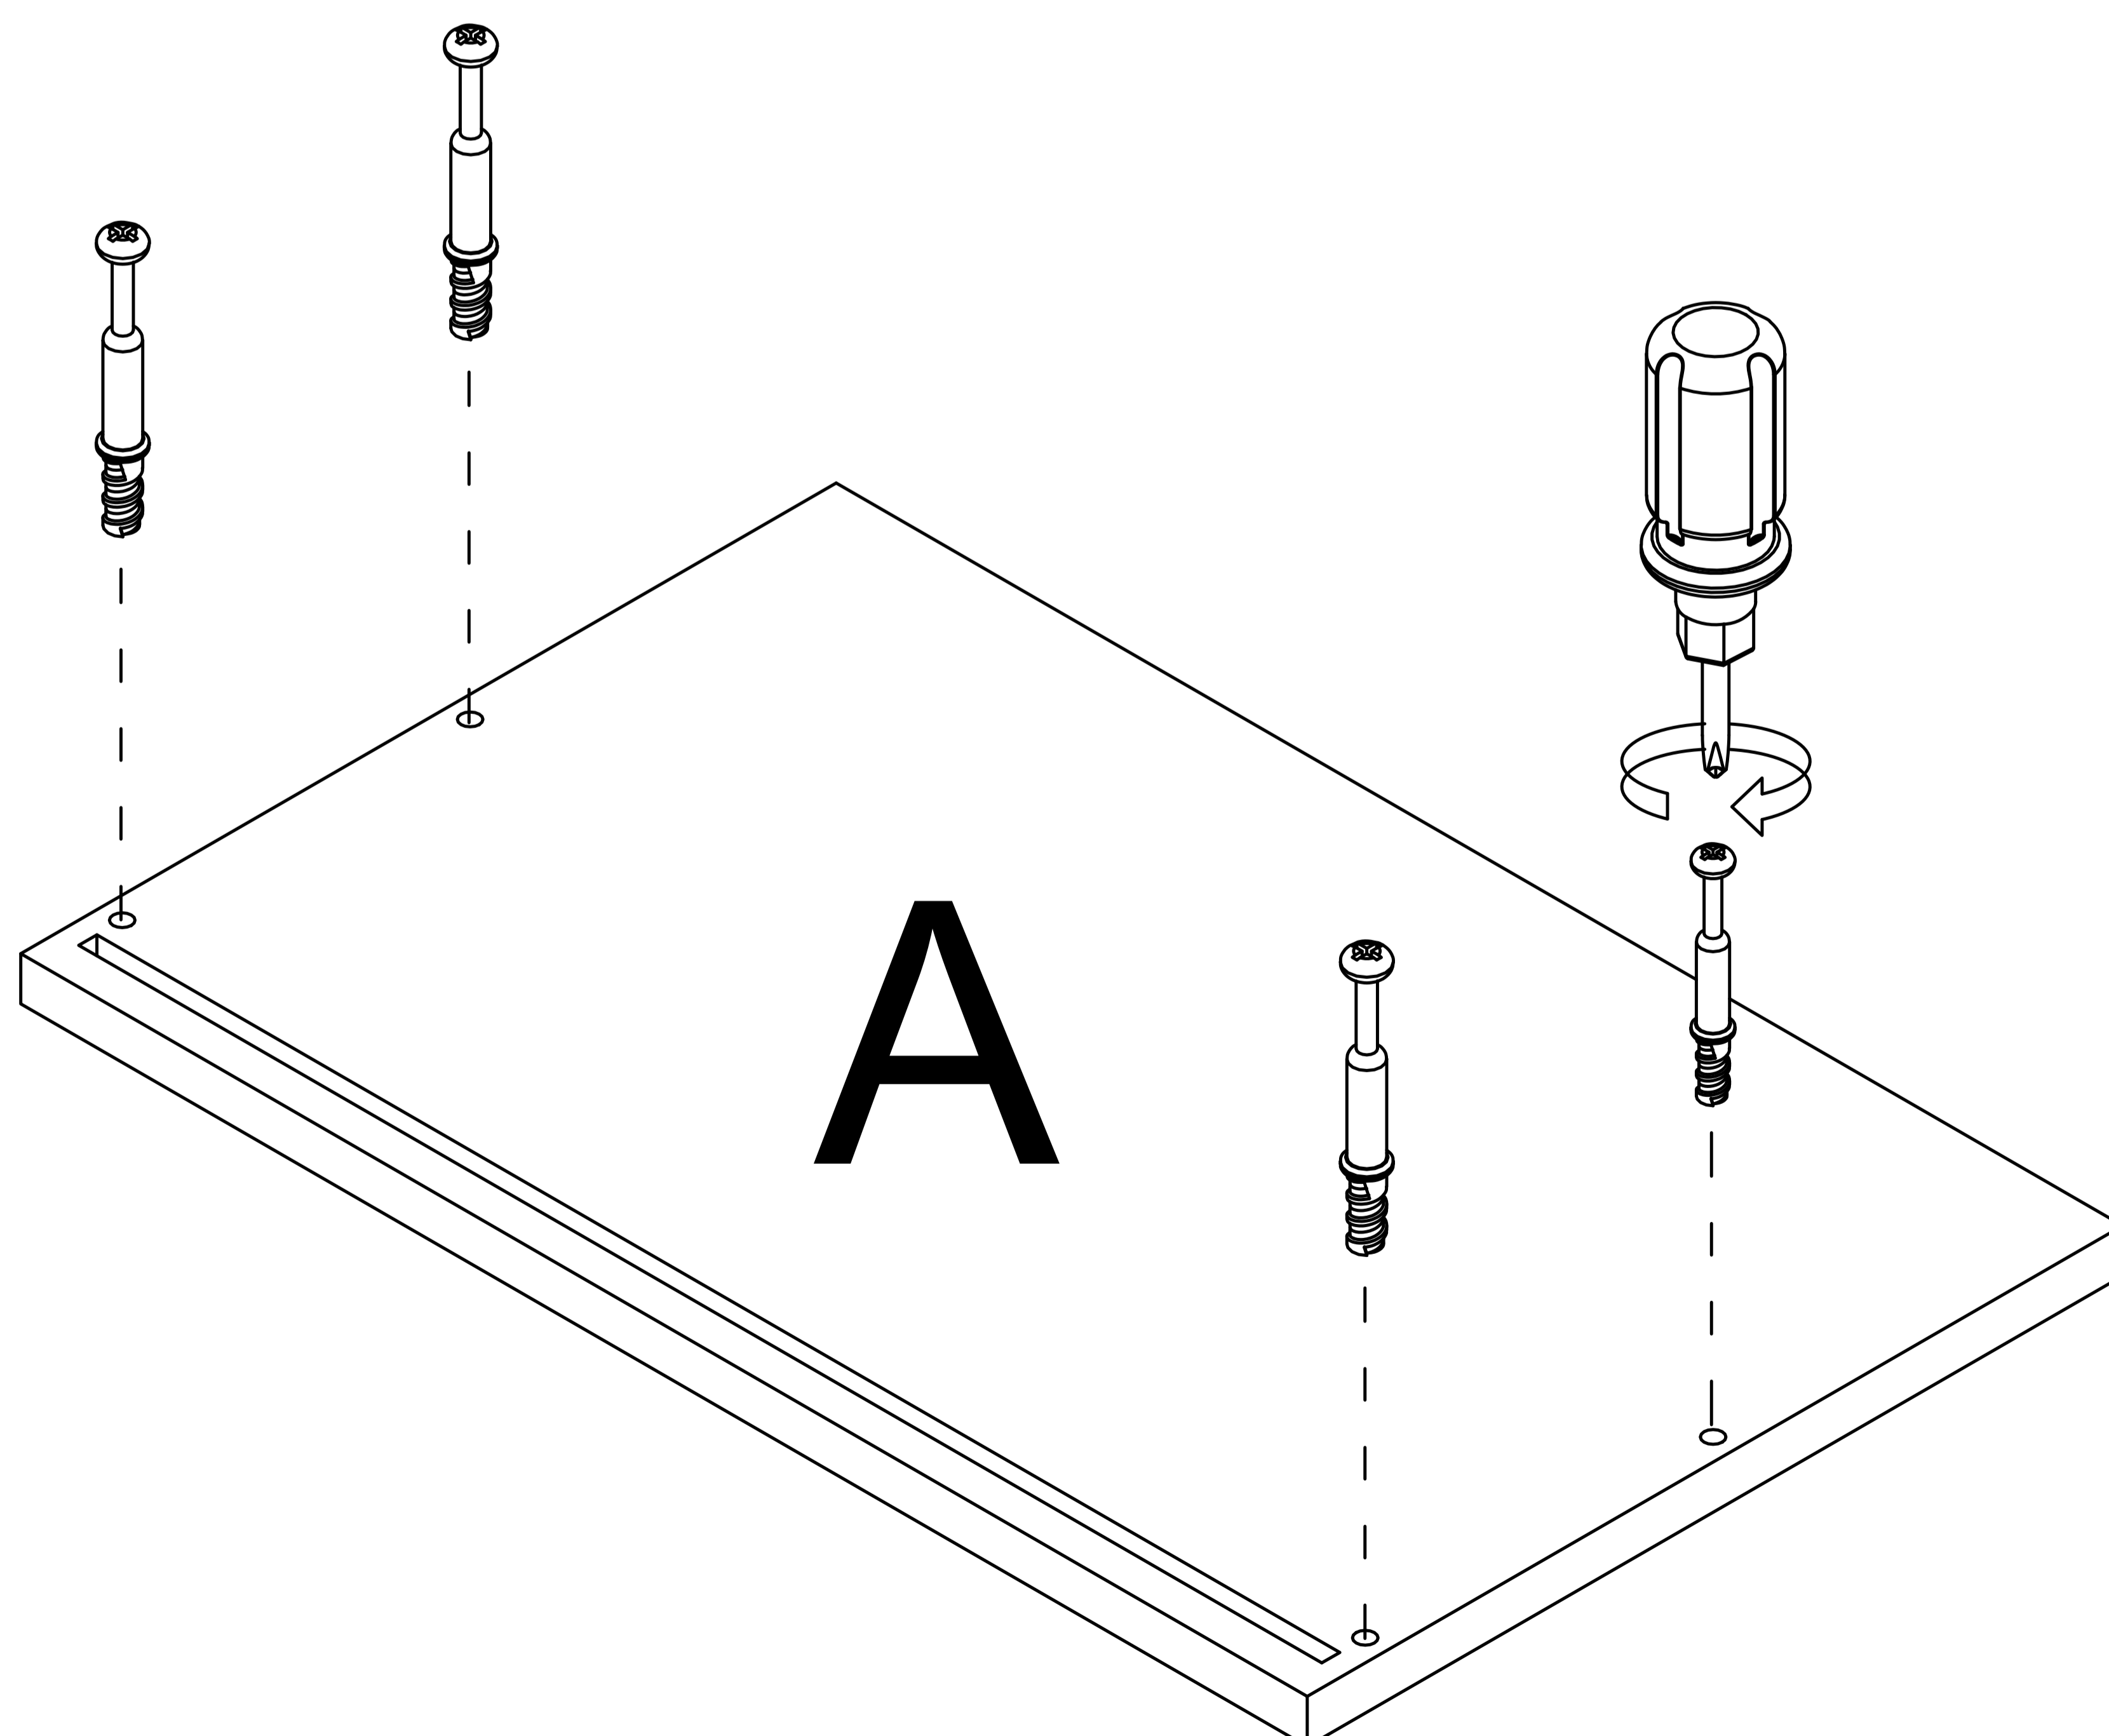
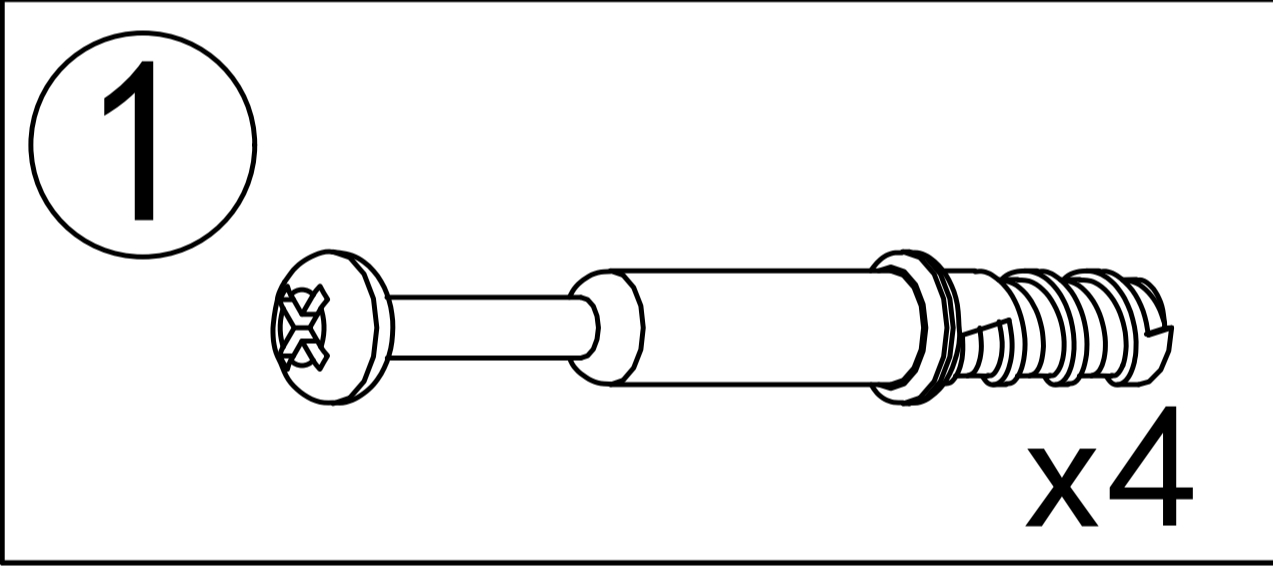


Step 2

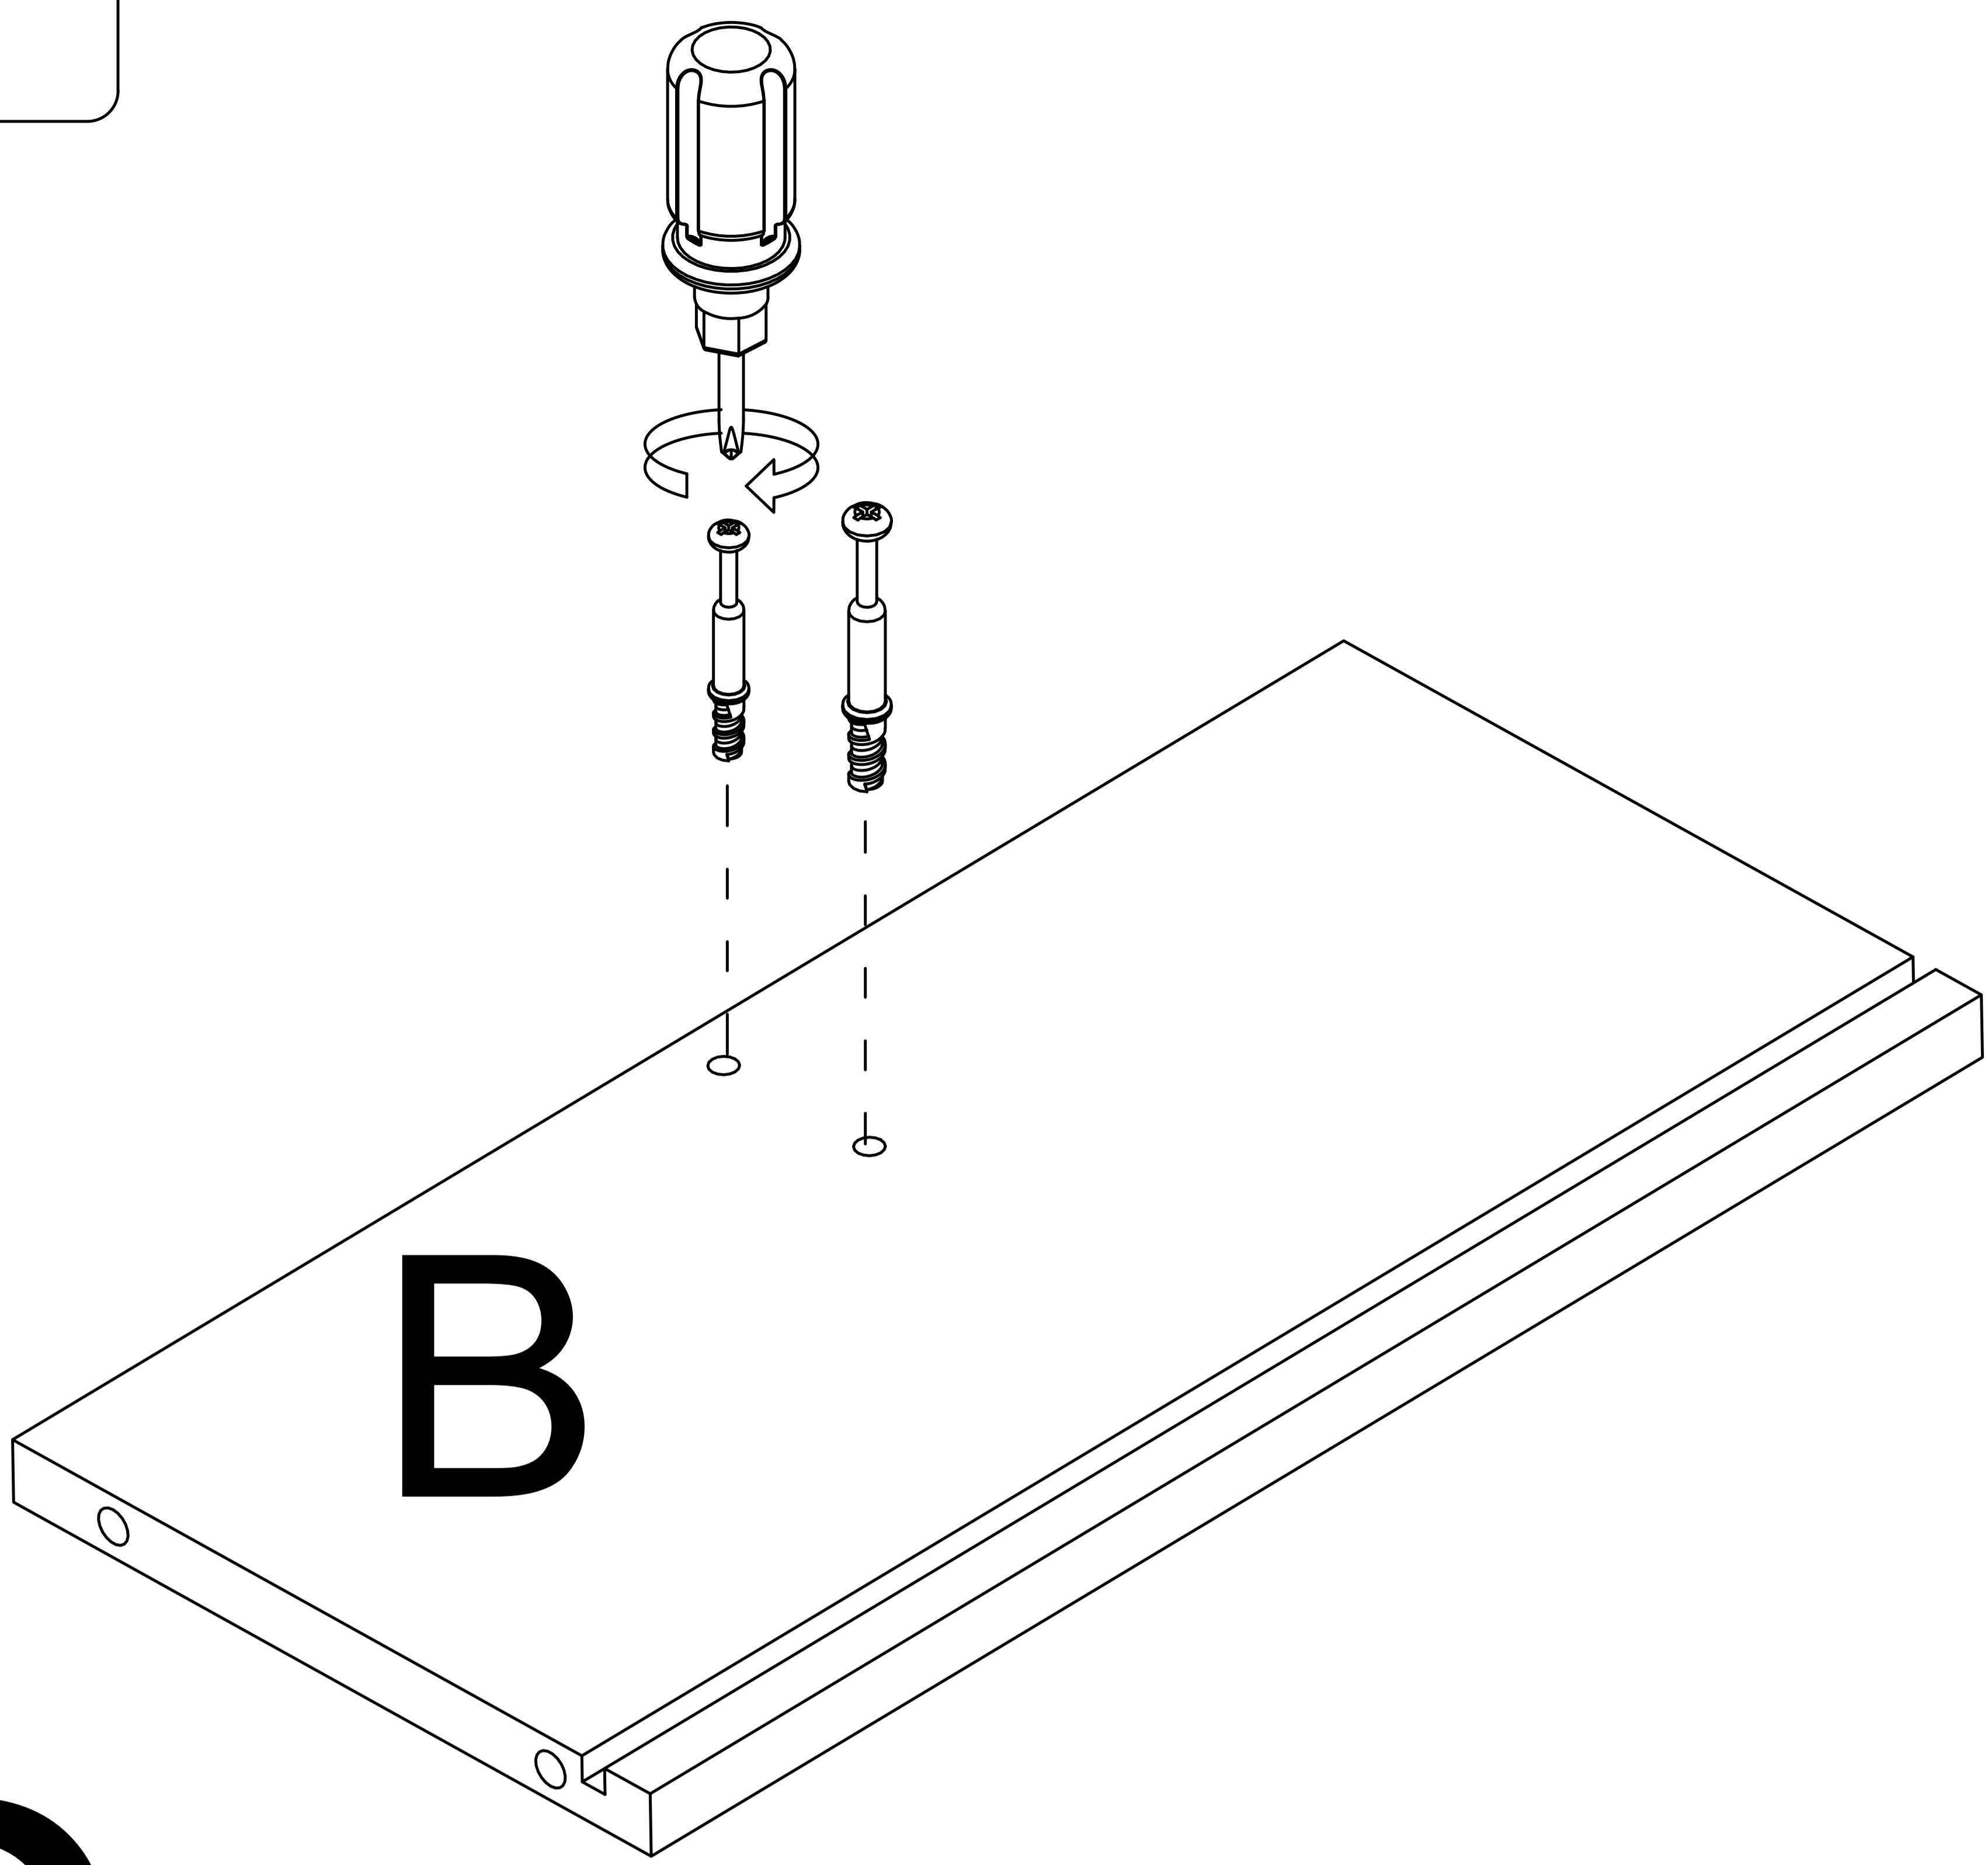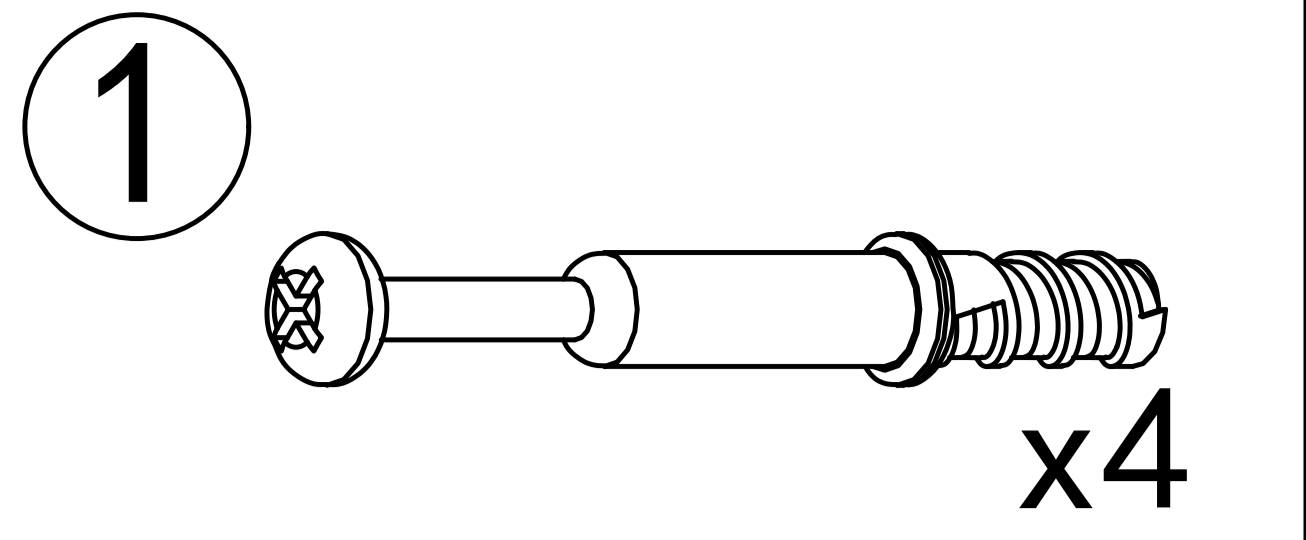


x 2



Step 3

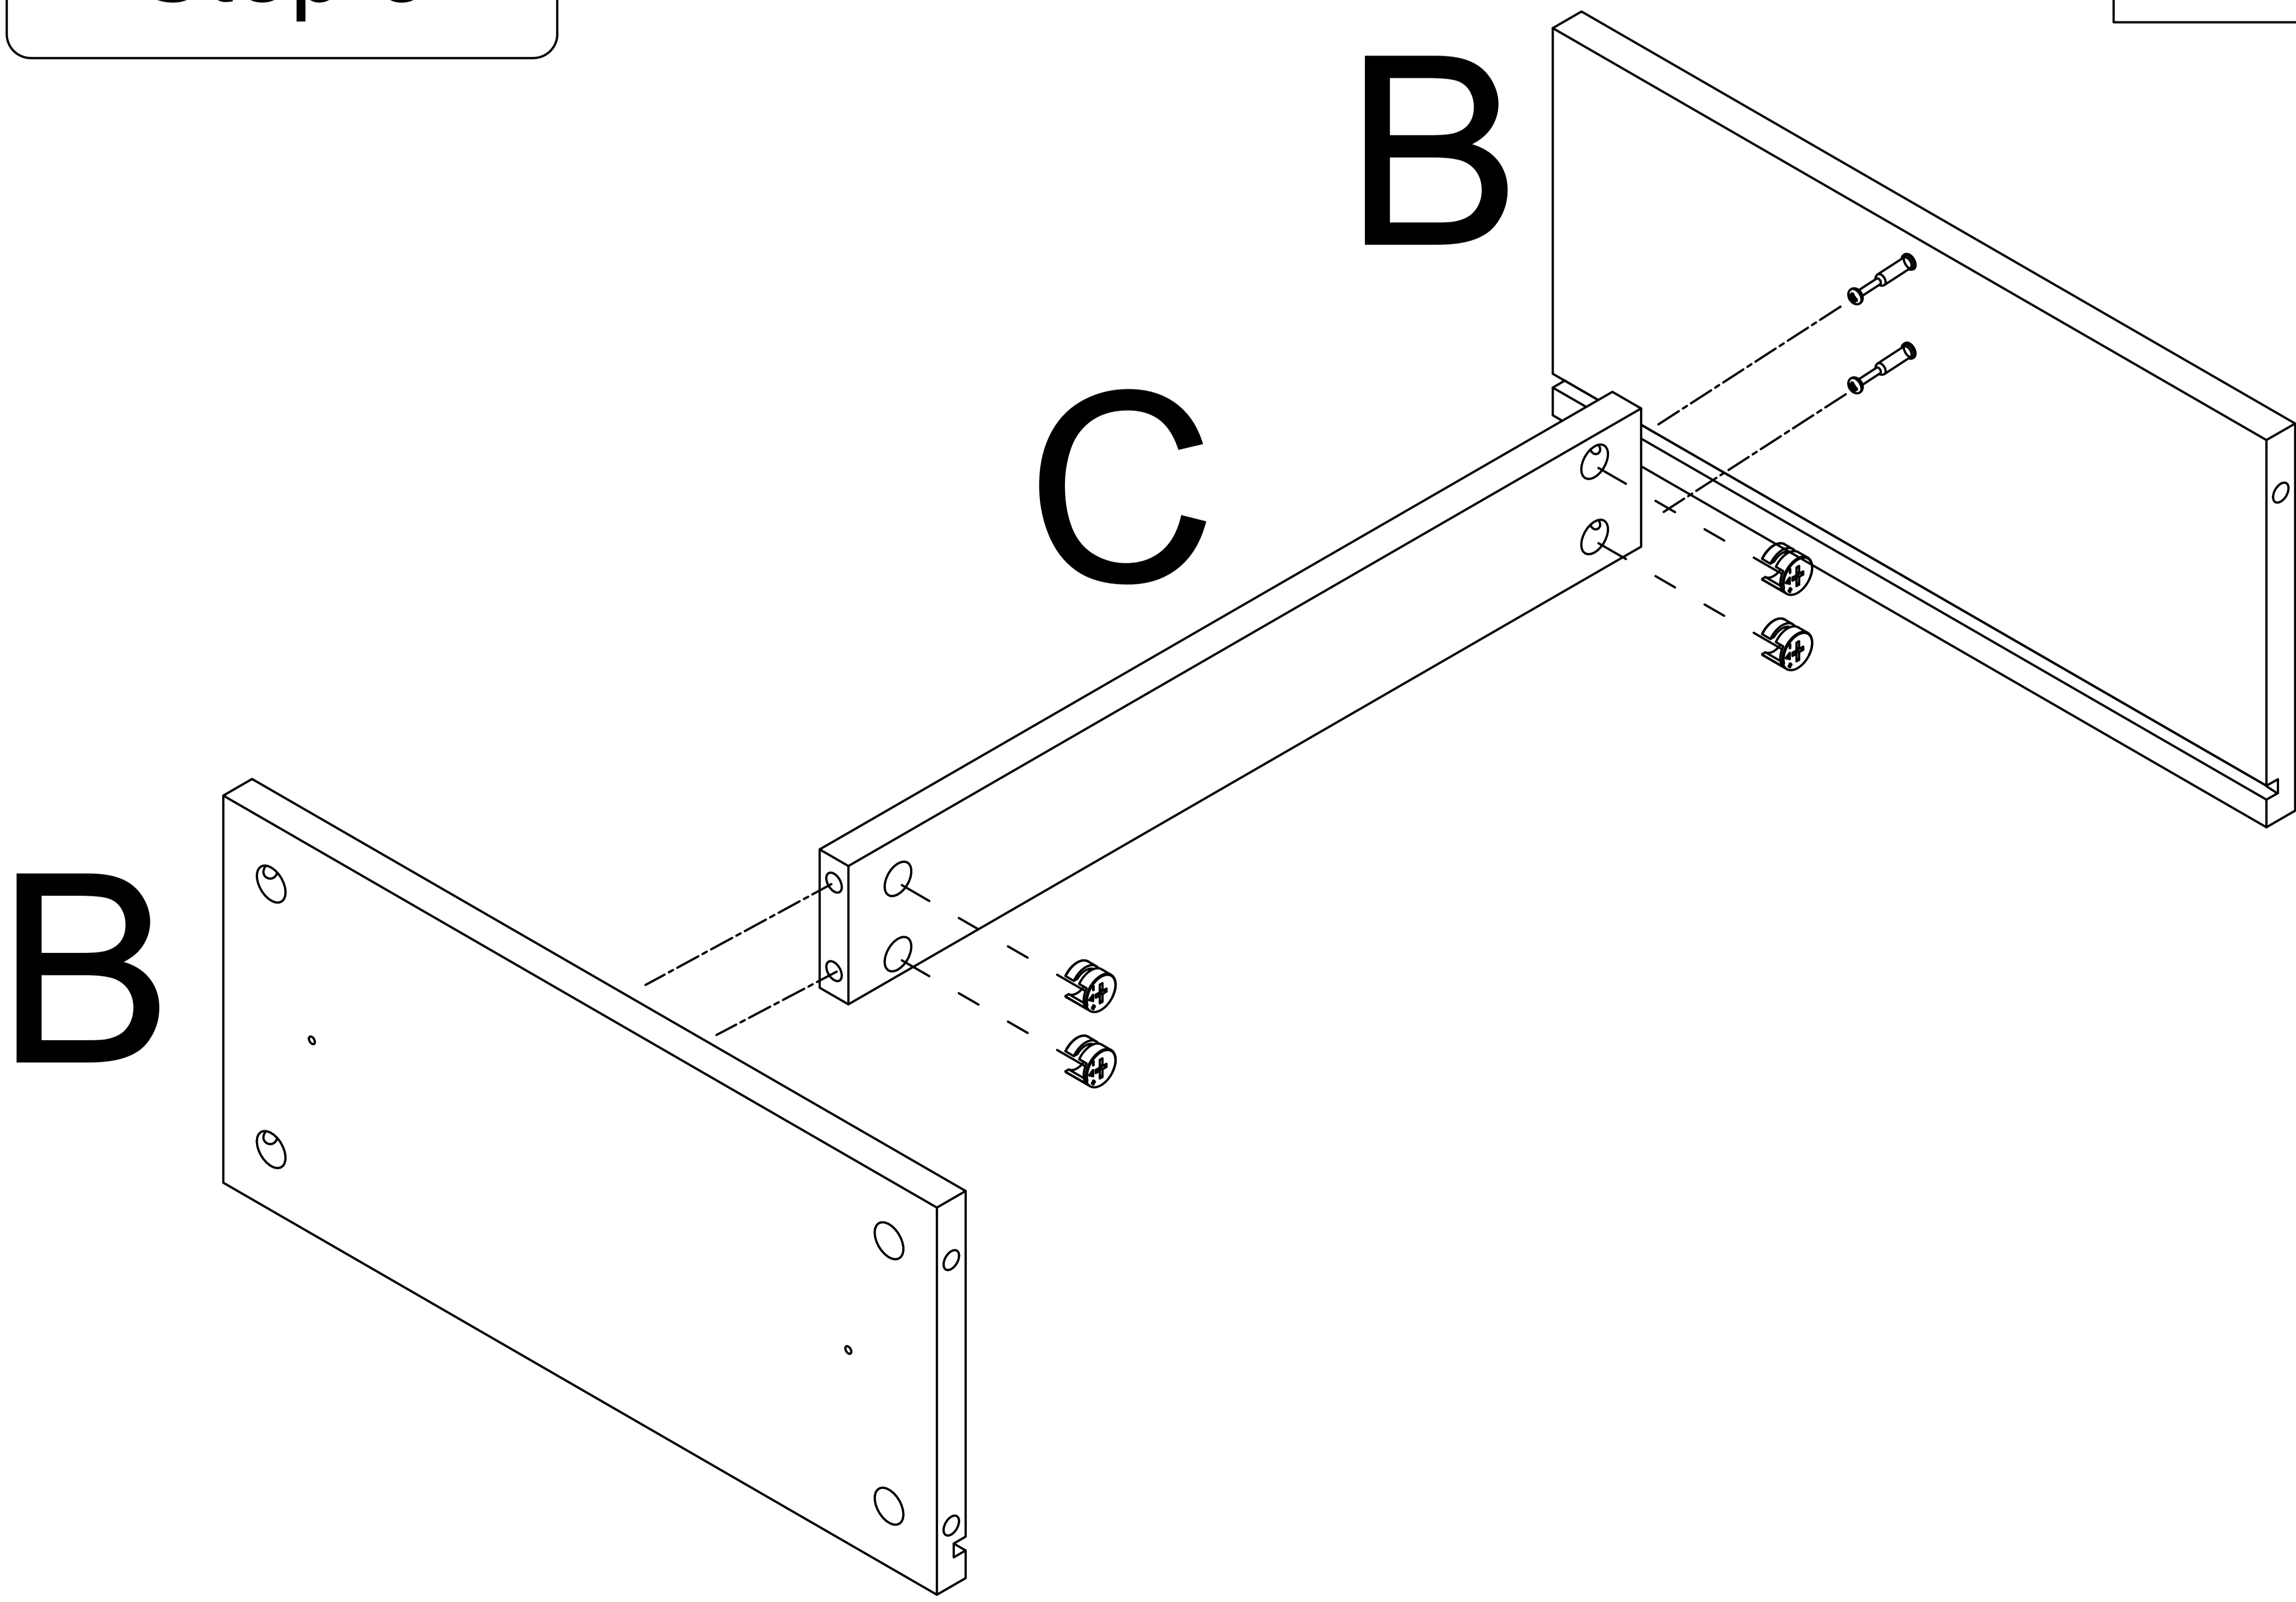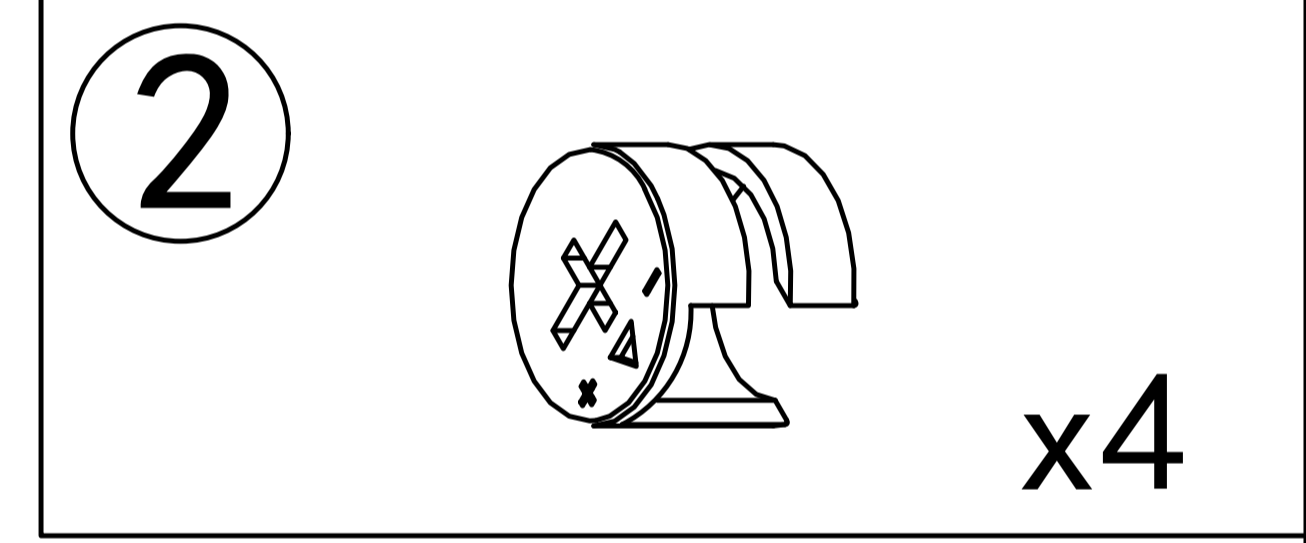

Step 4

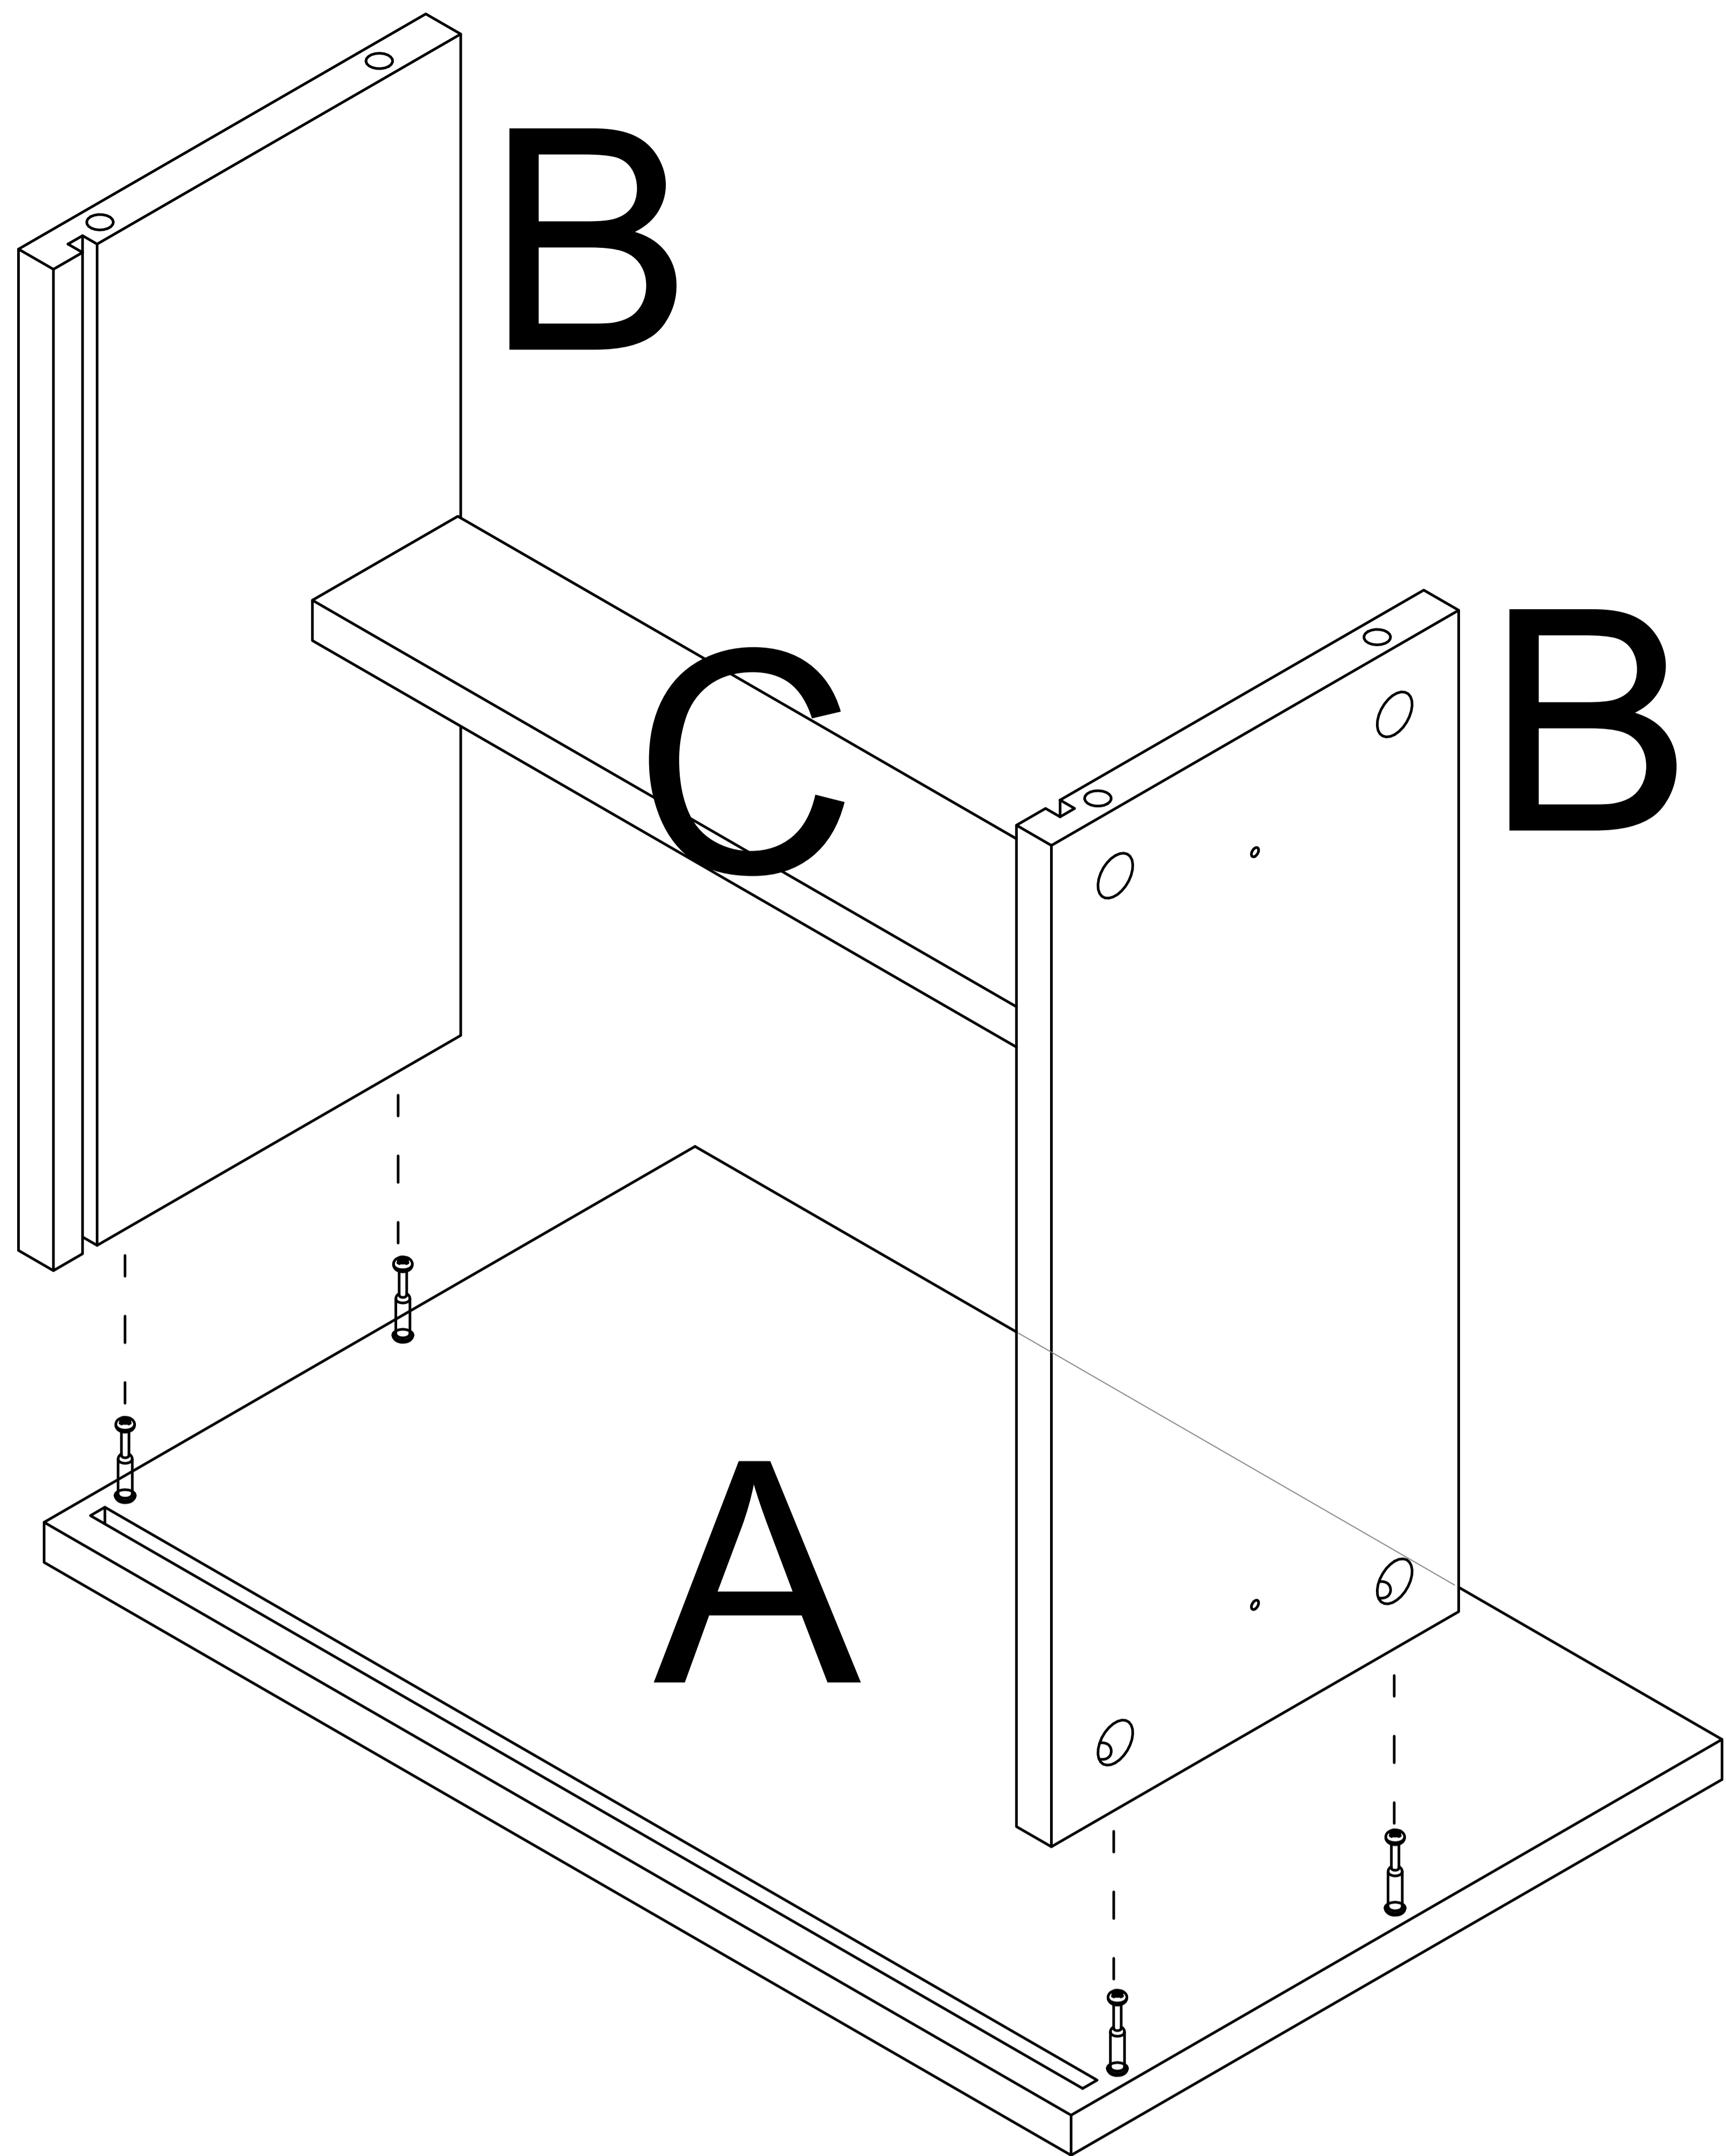



Step 5

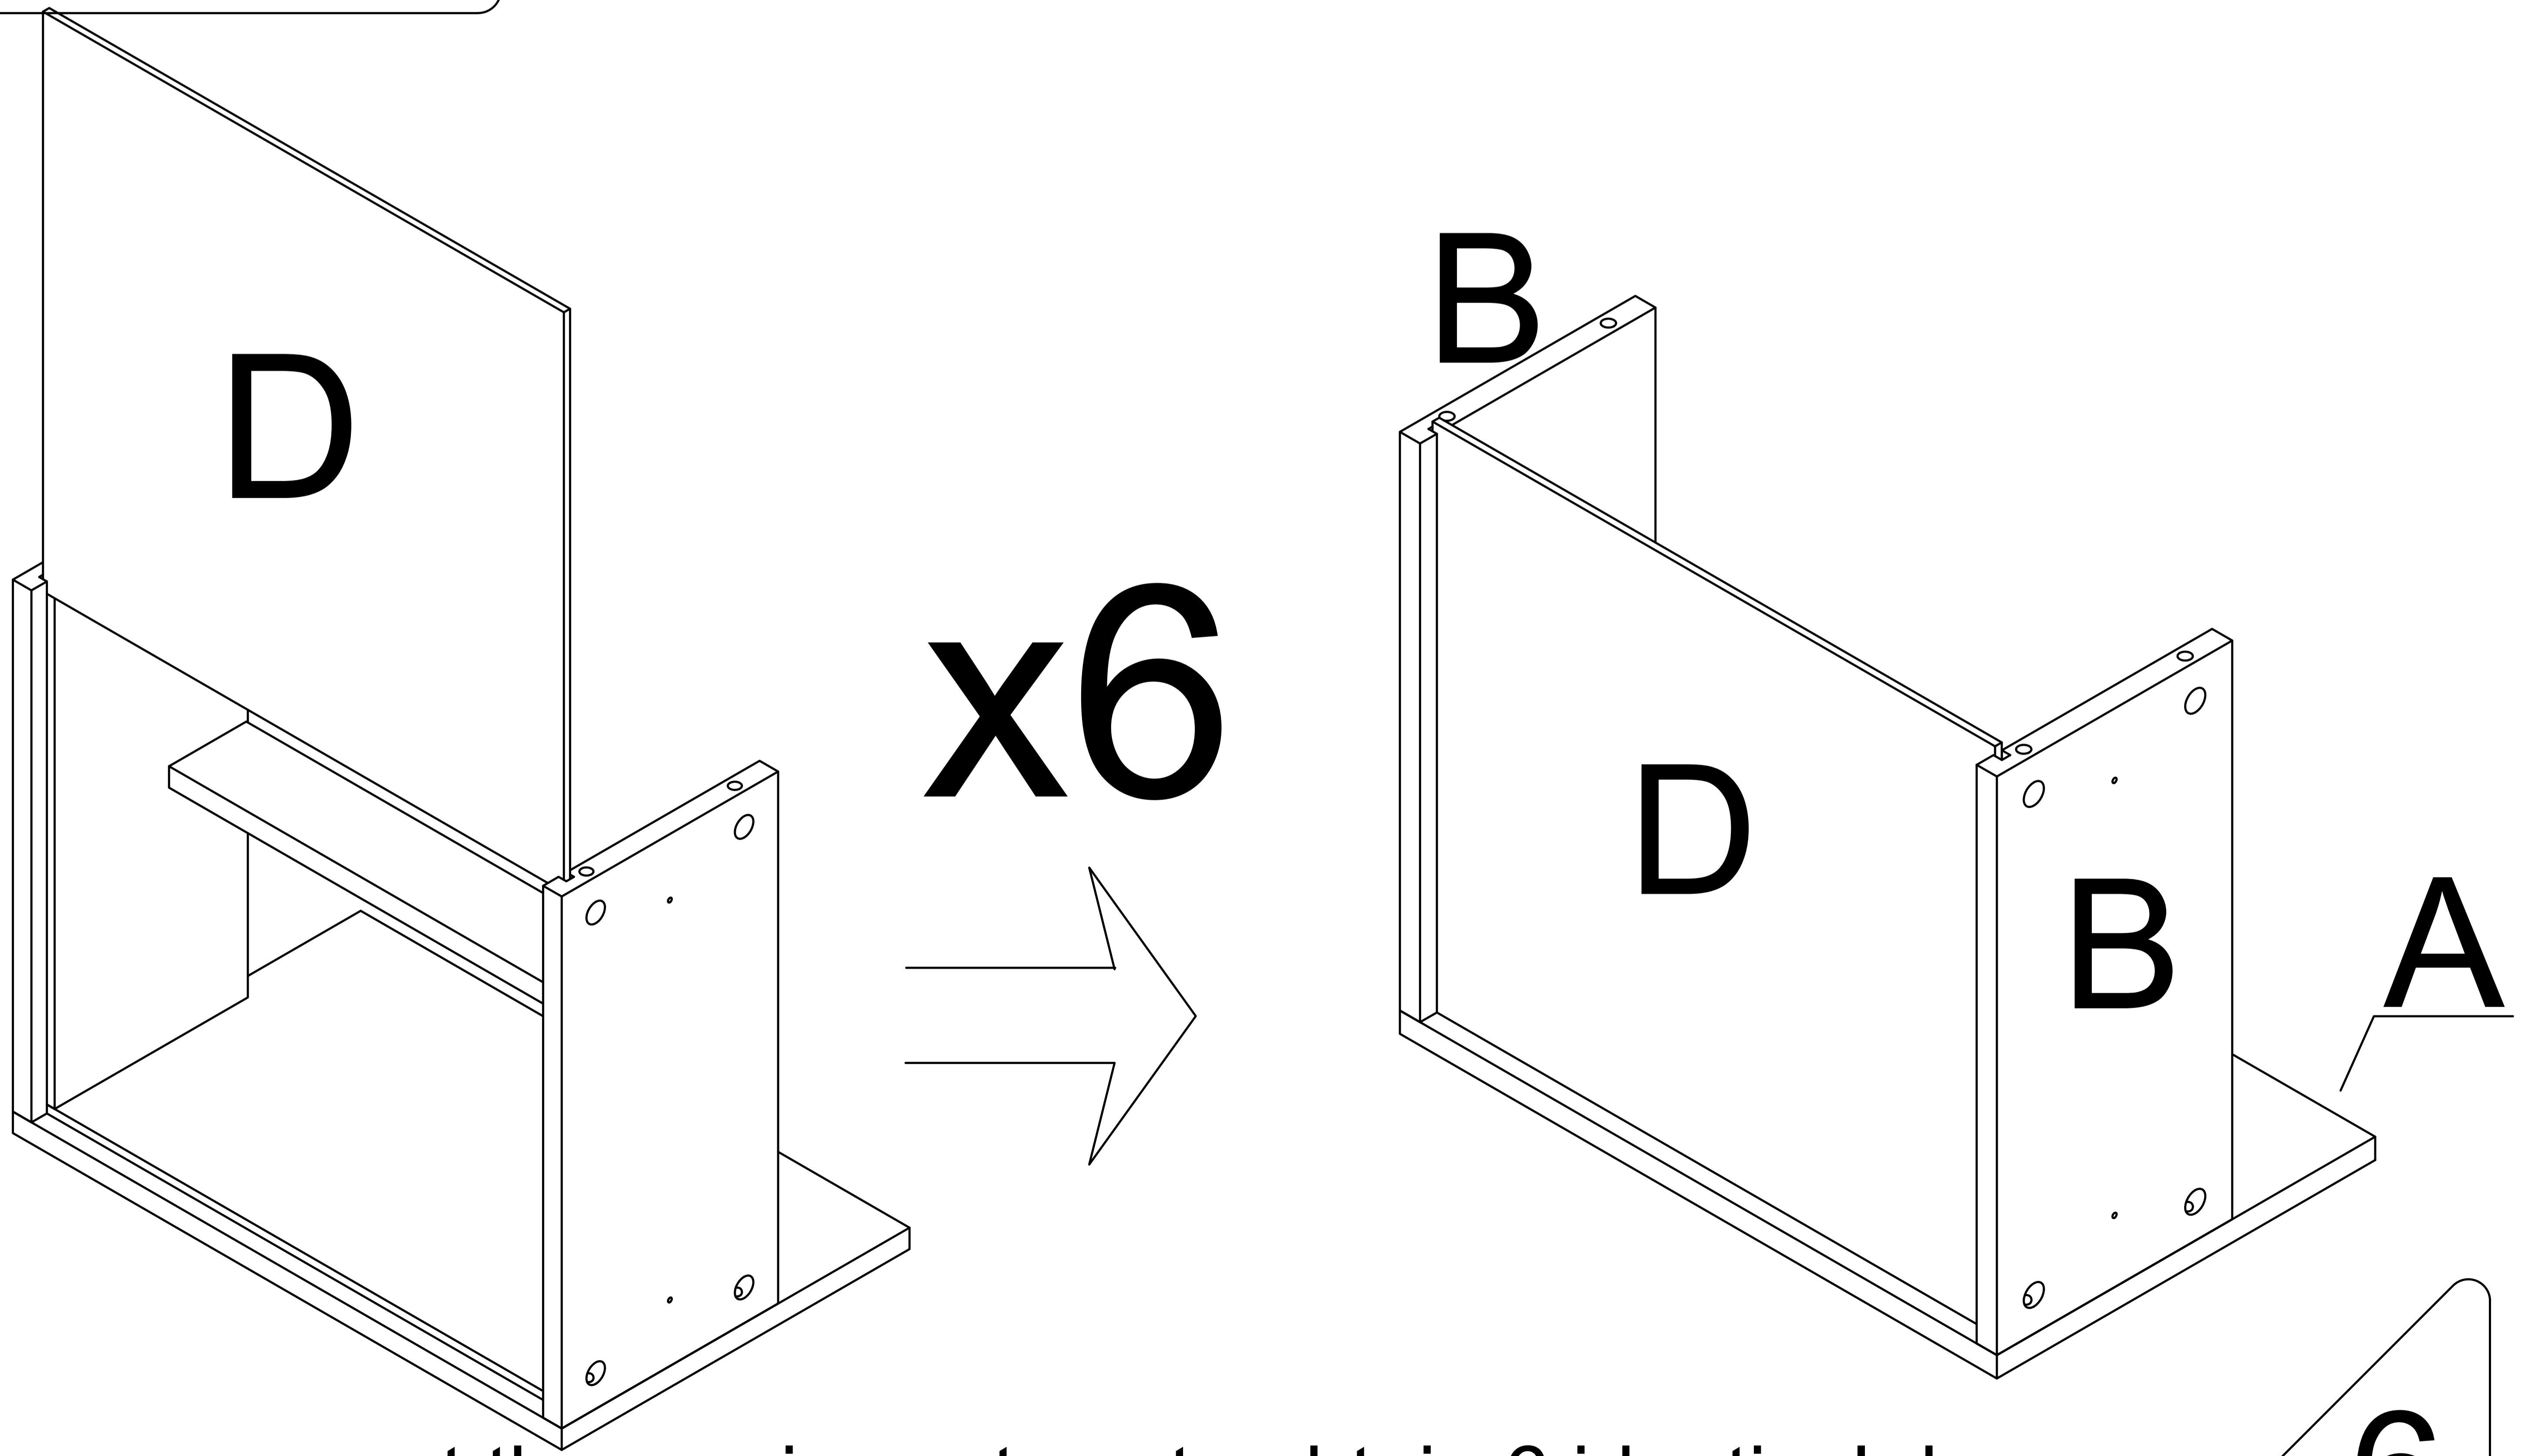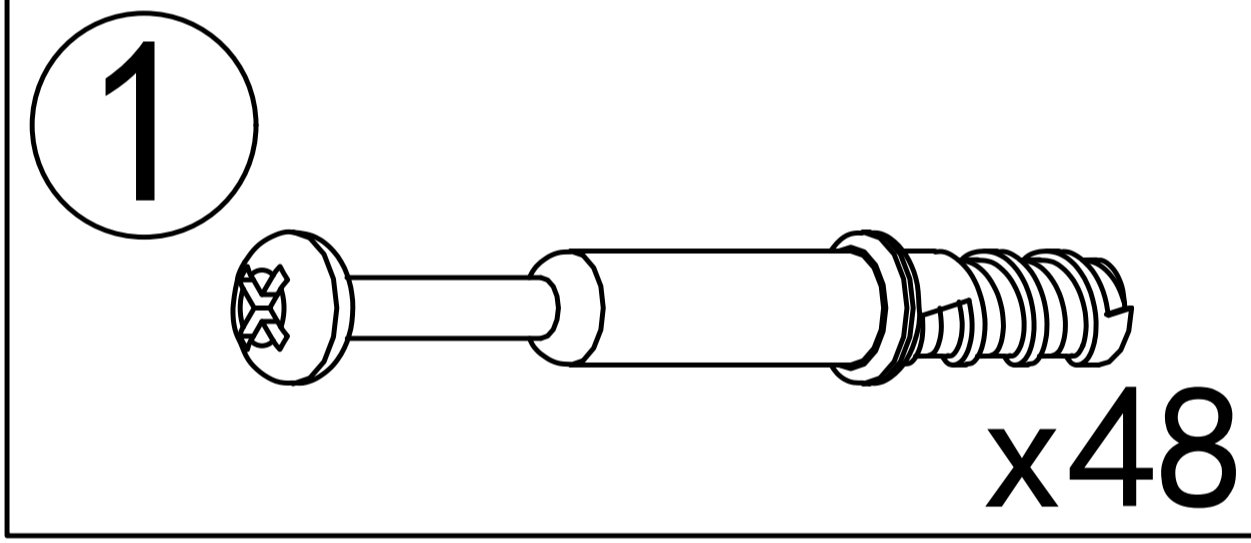

You can repeat the previous steps to obtain 6 identical drawers.

Step 6


1

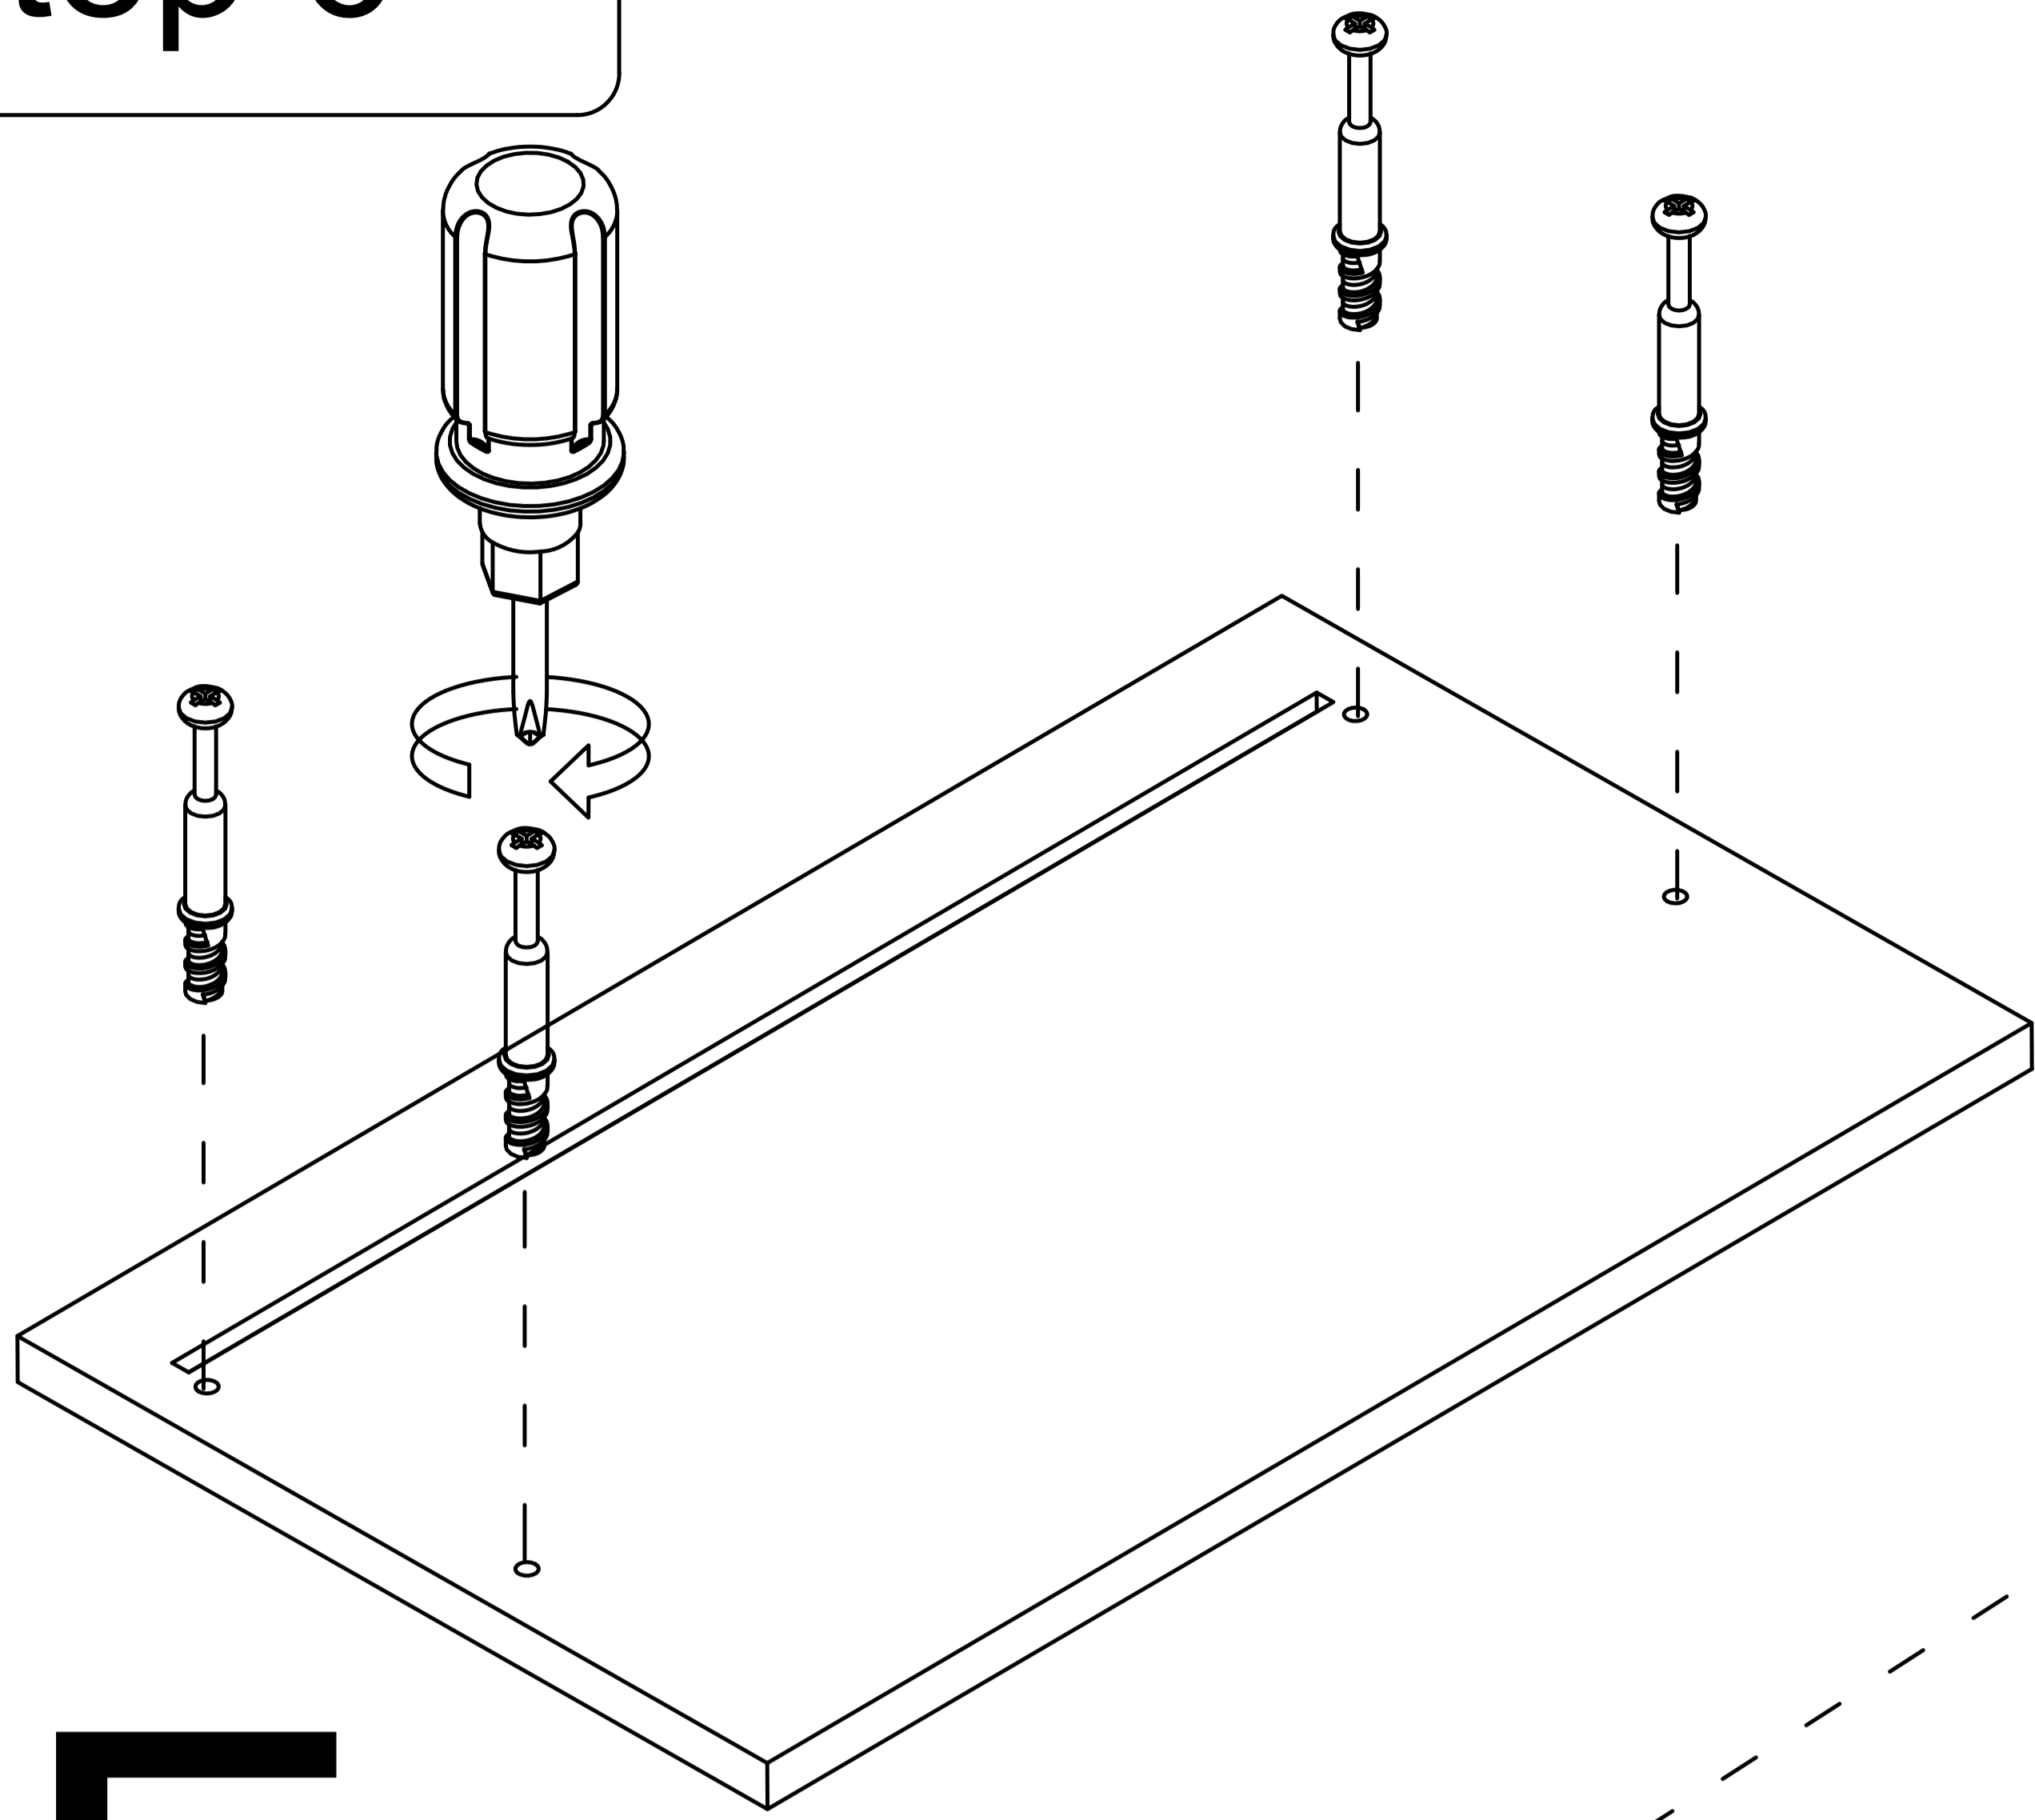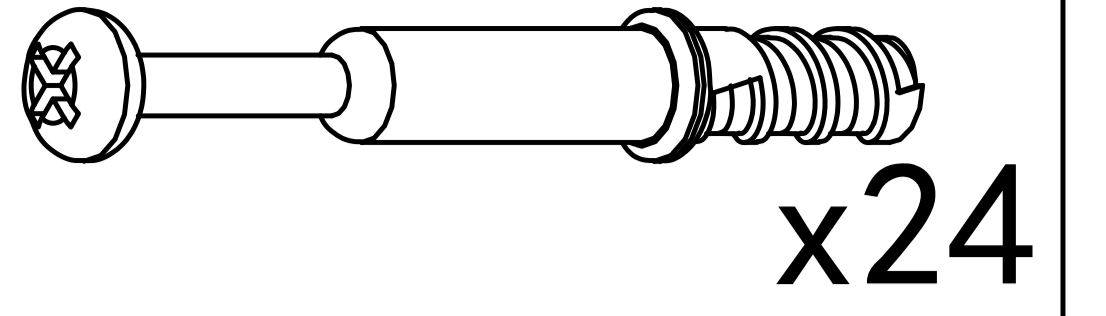


F

X 2


F



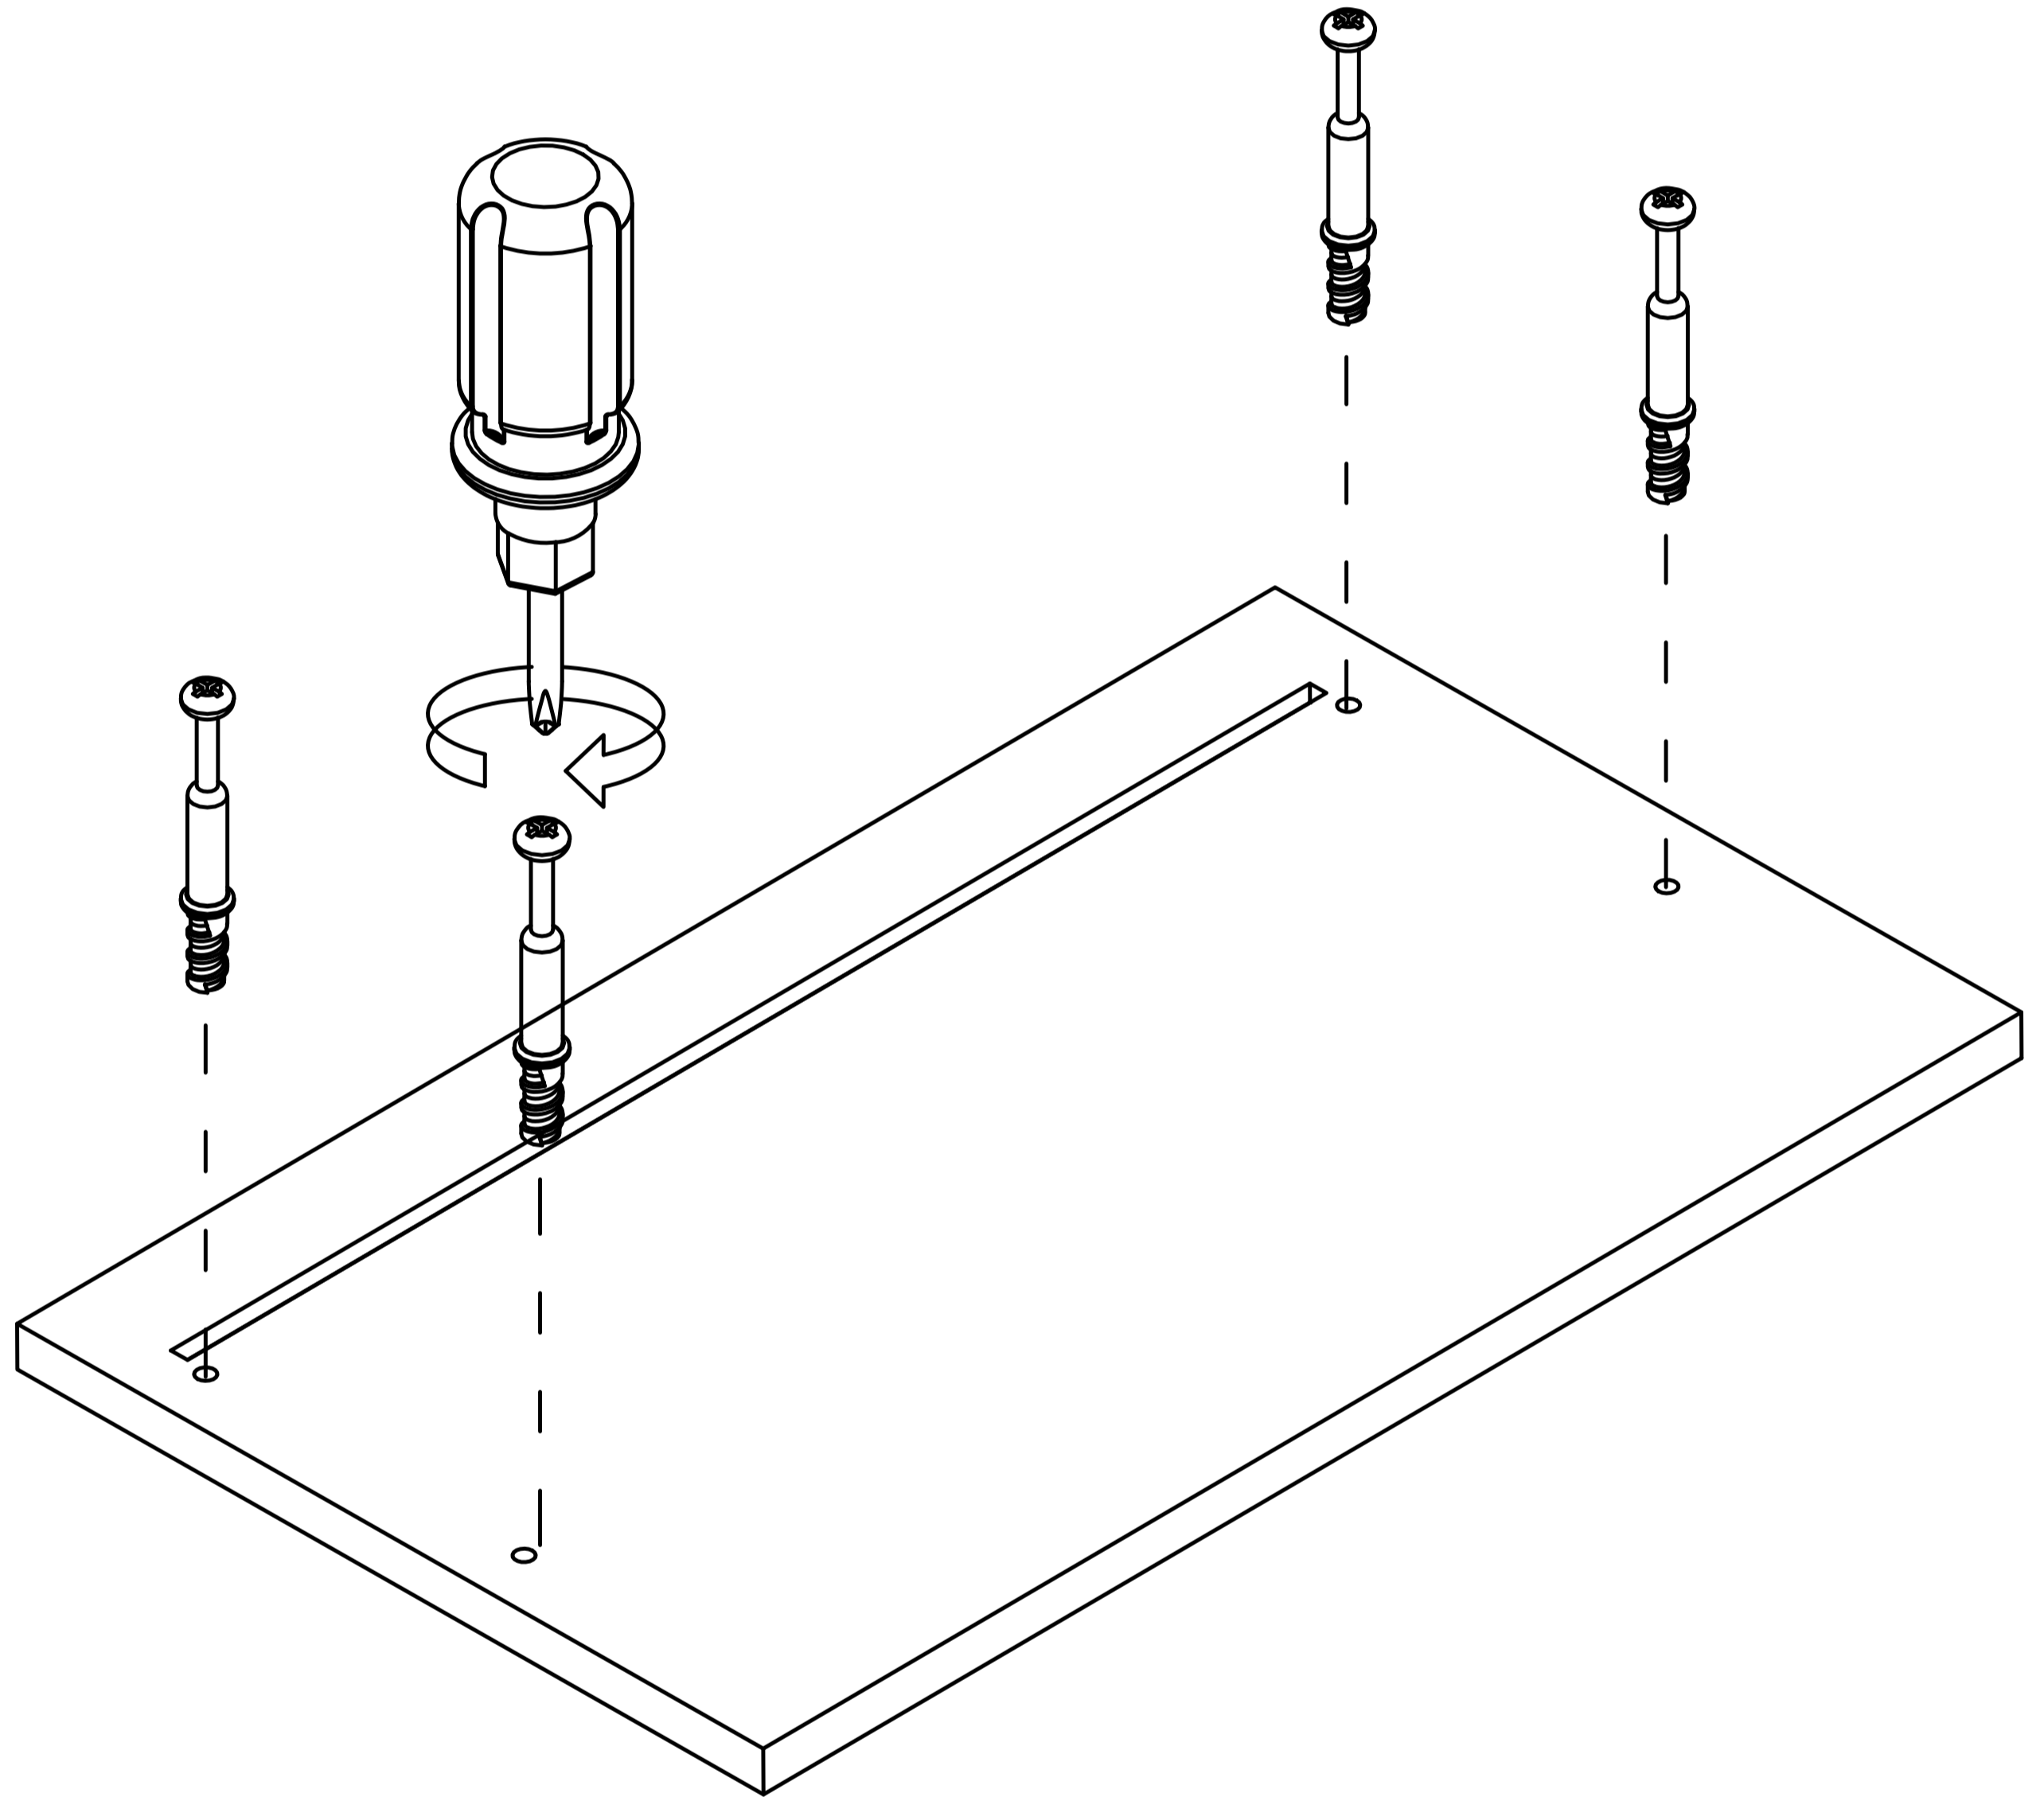


G

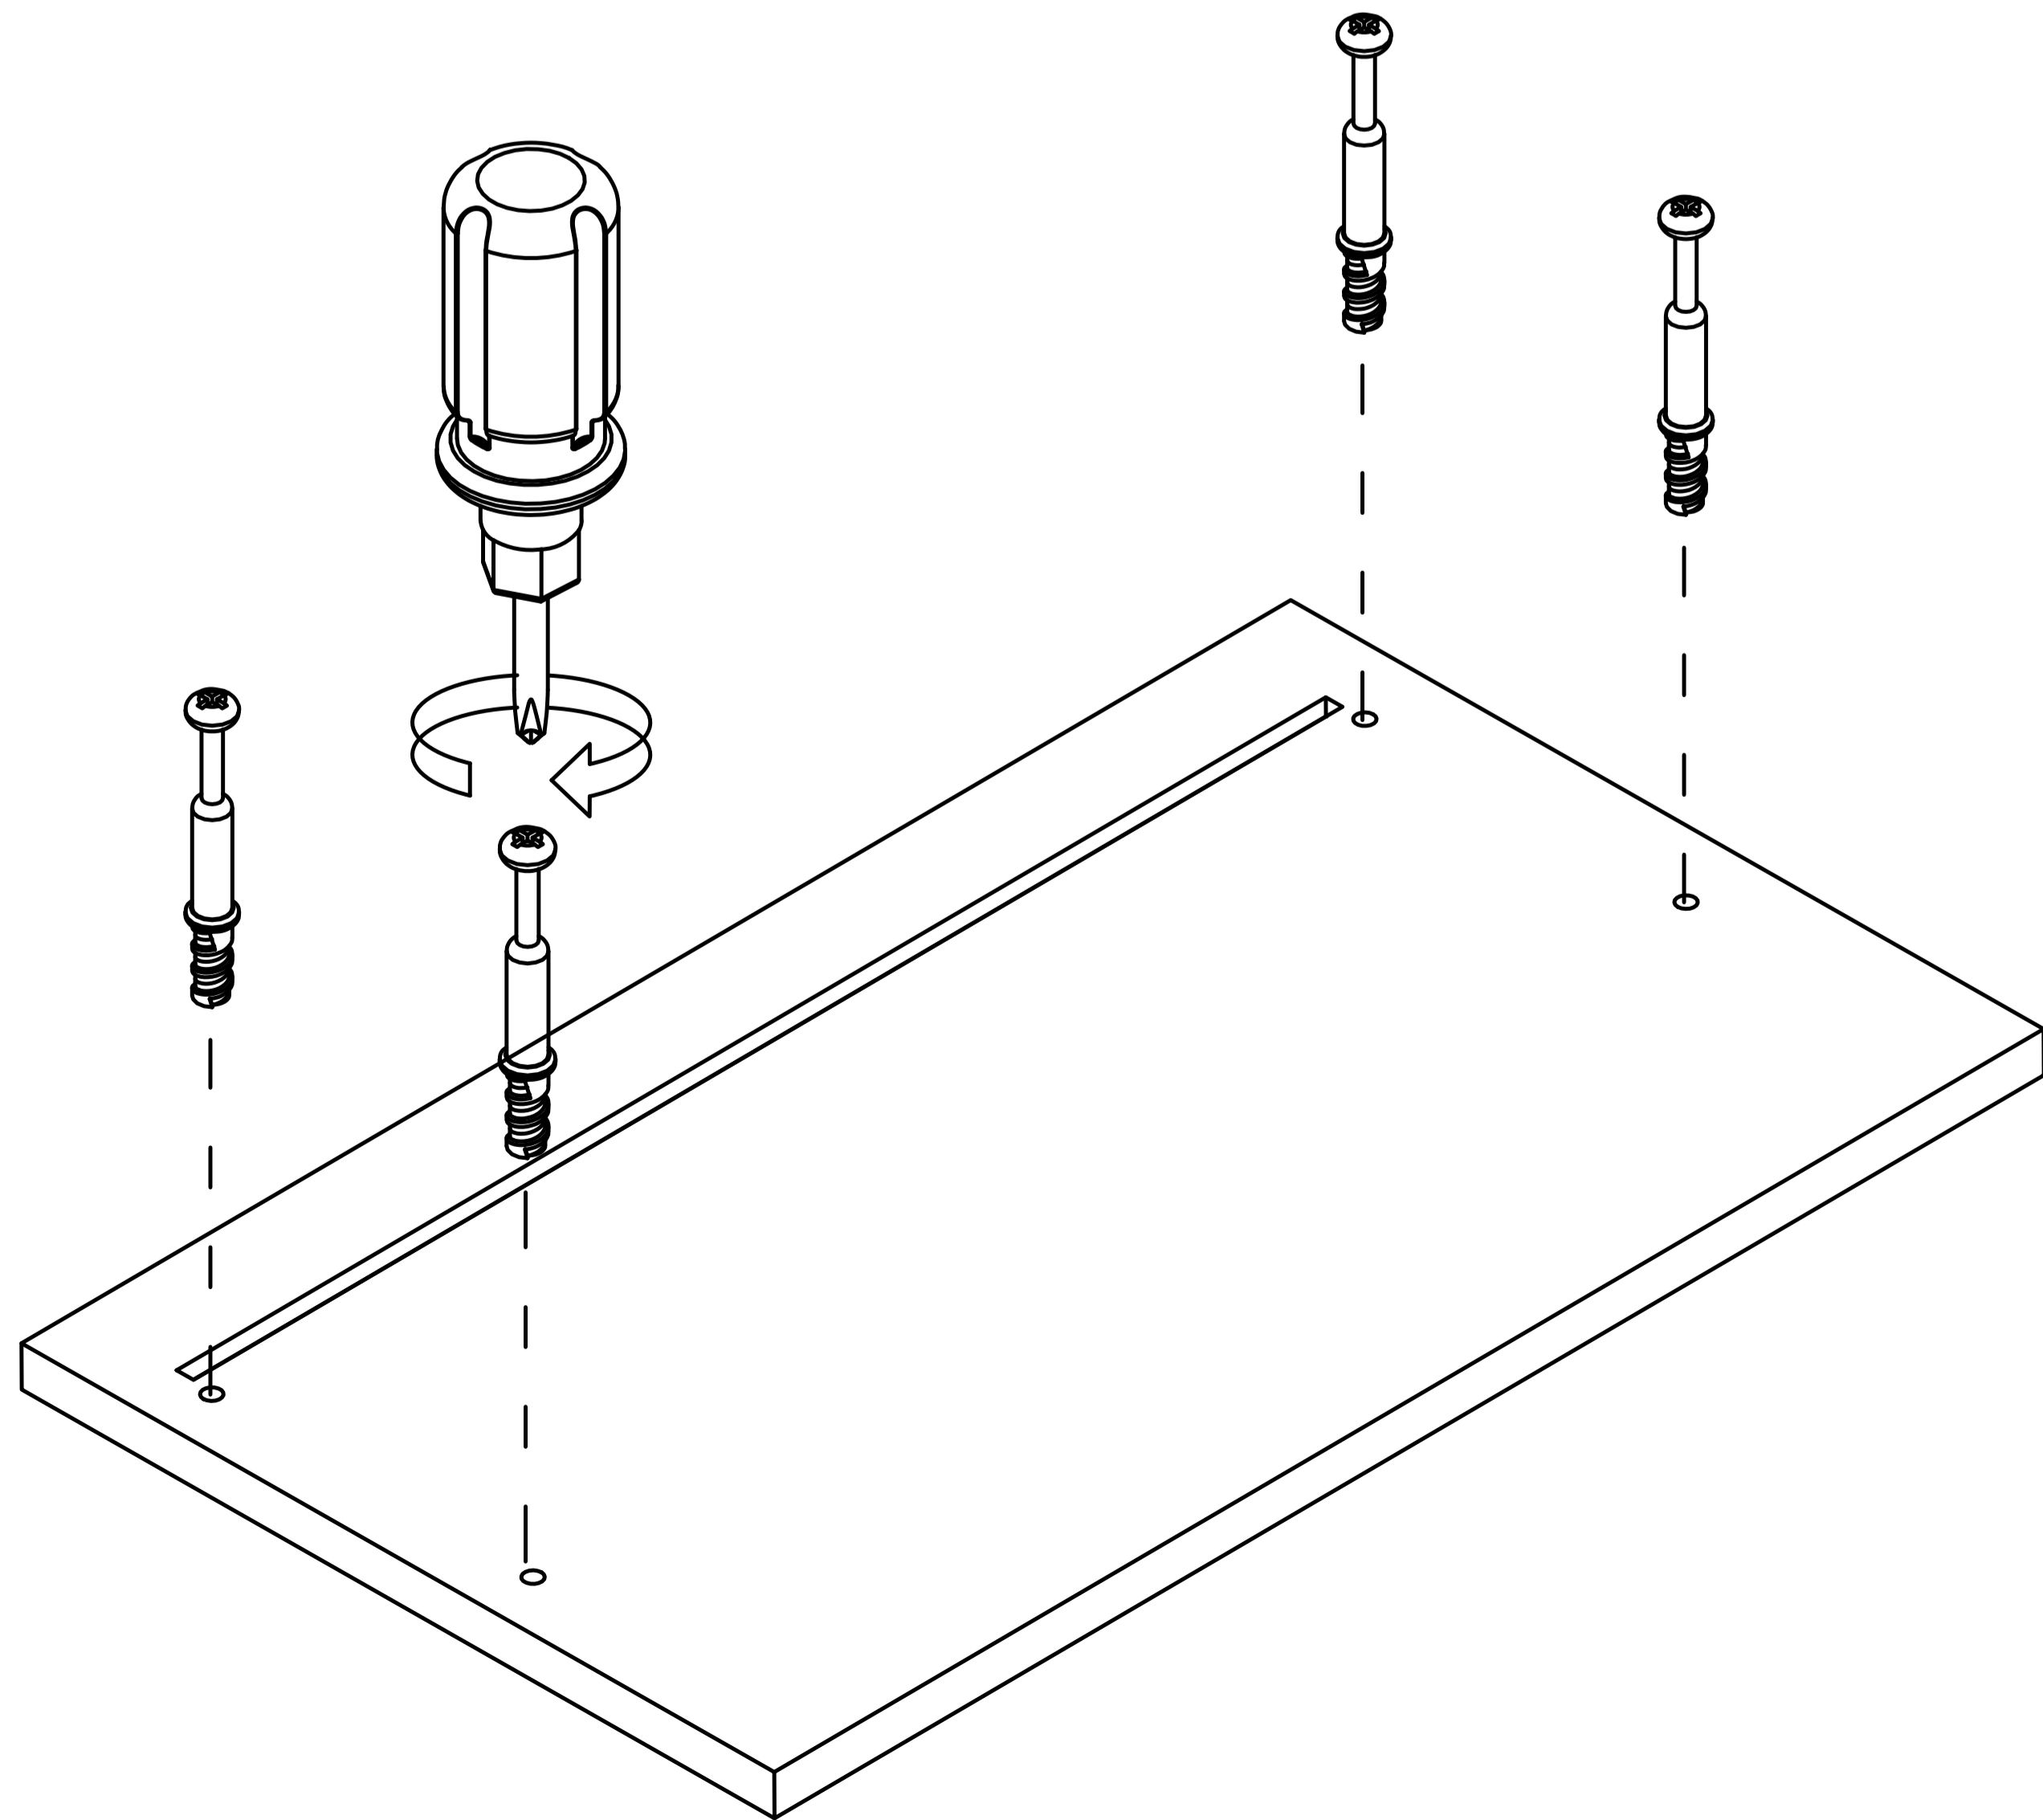


Step 7

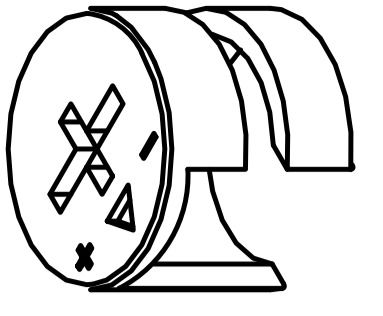
2  x68

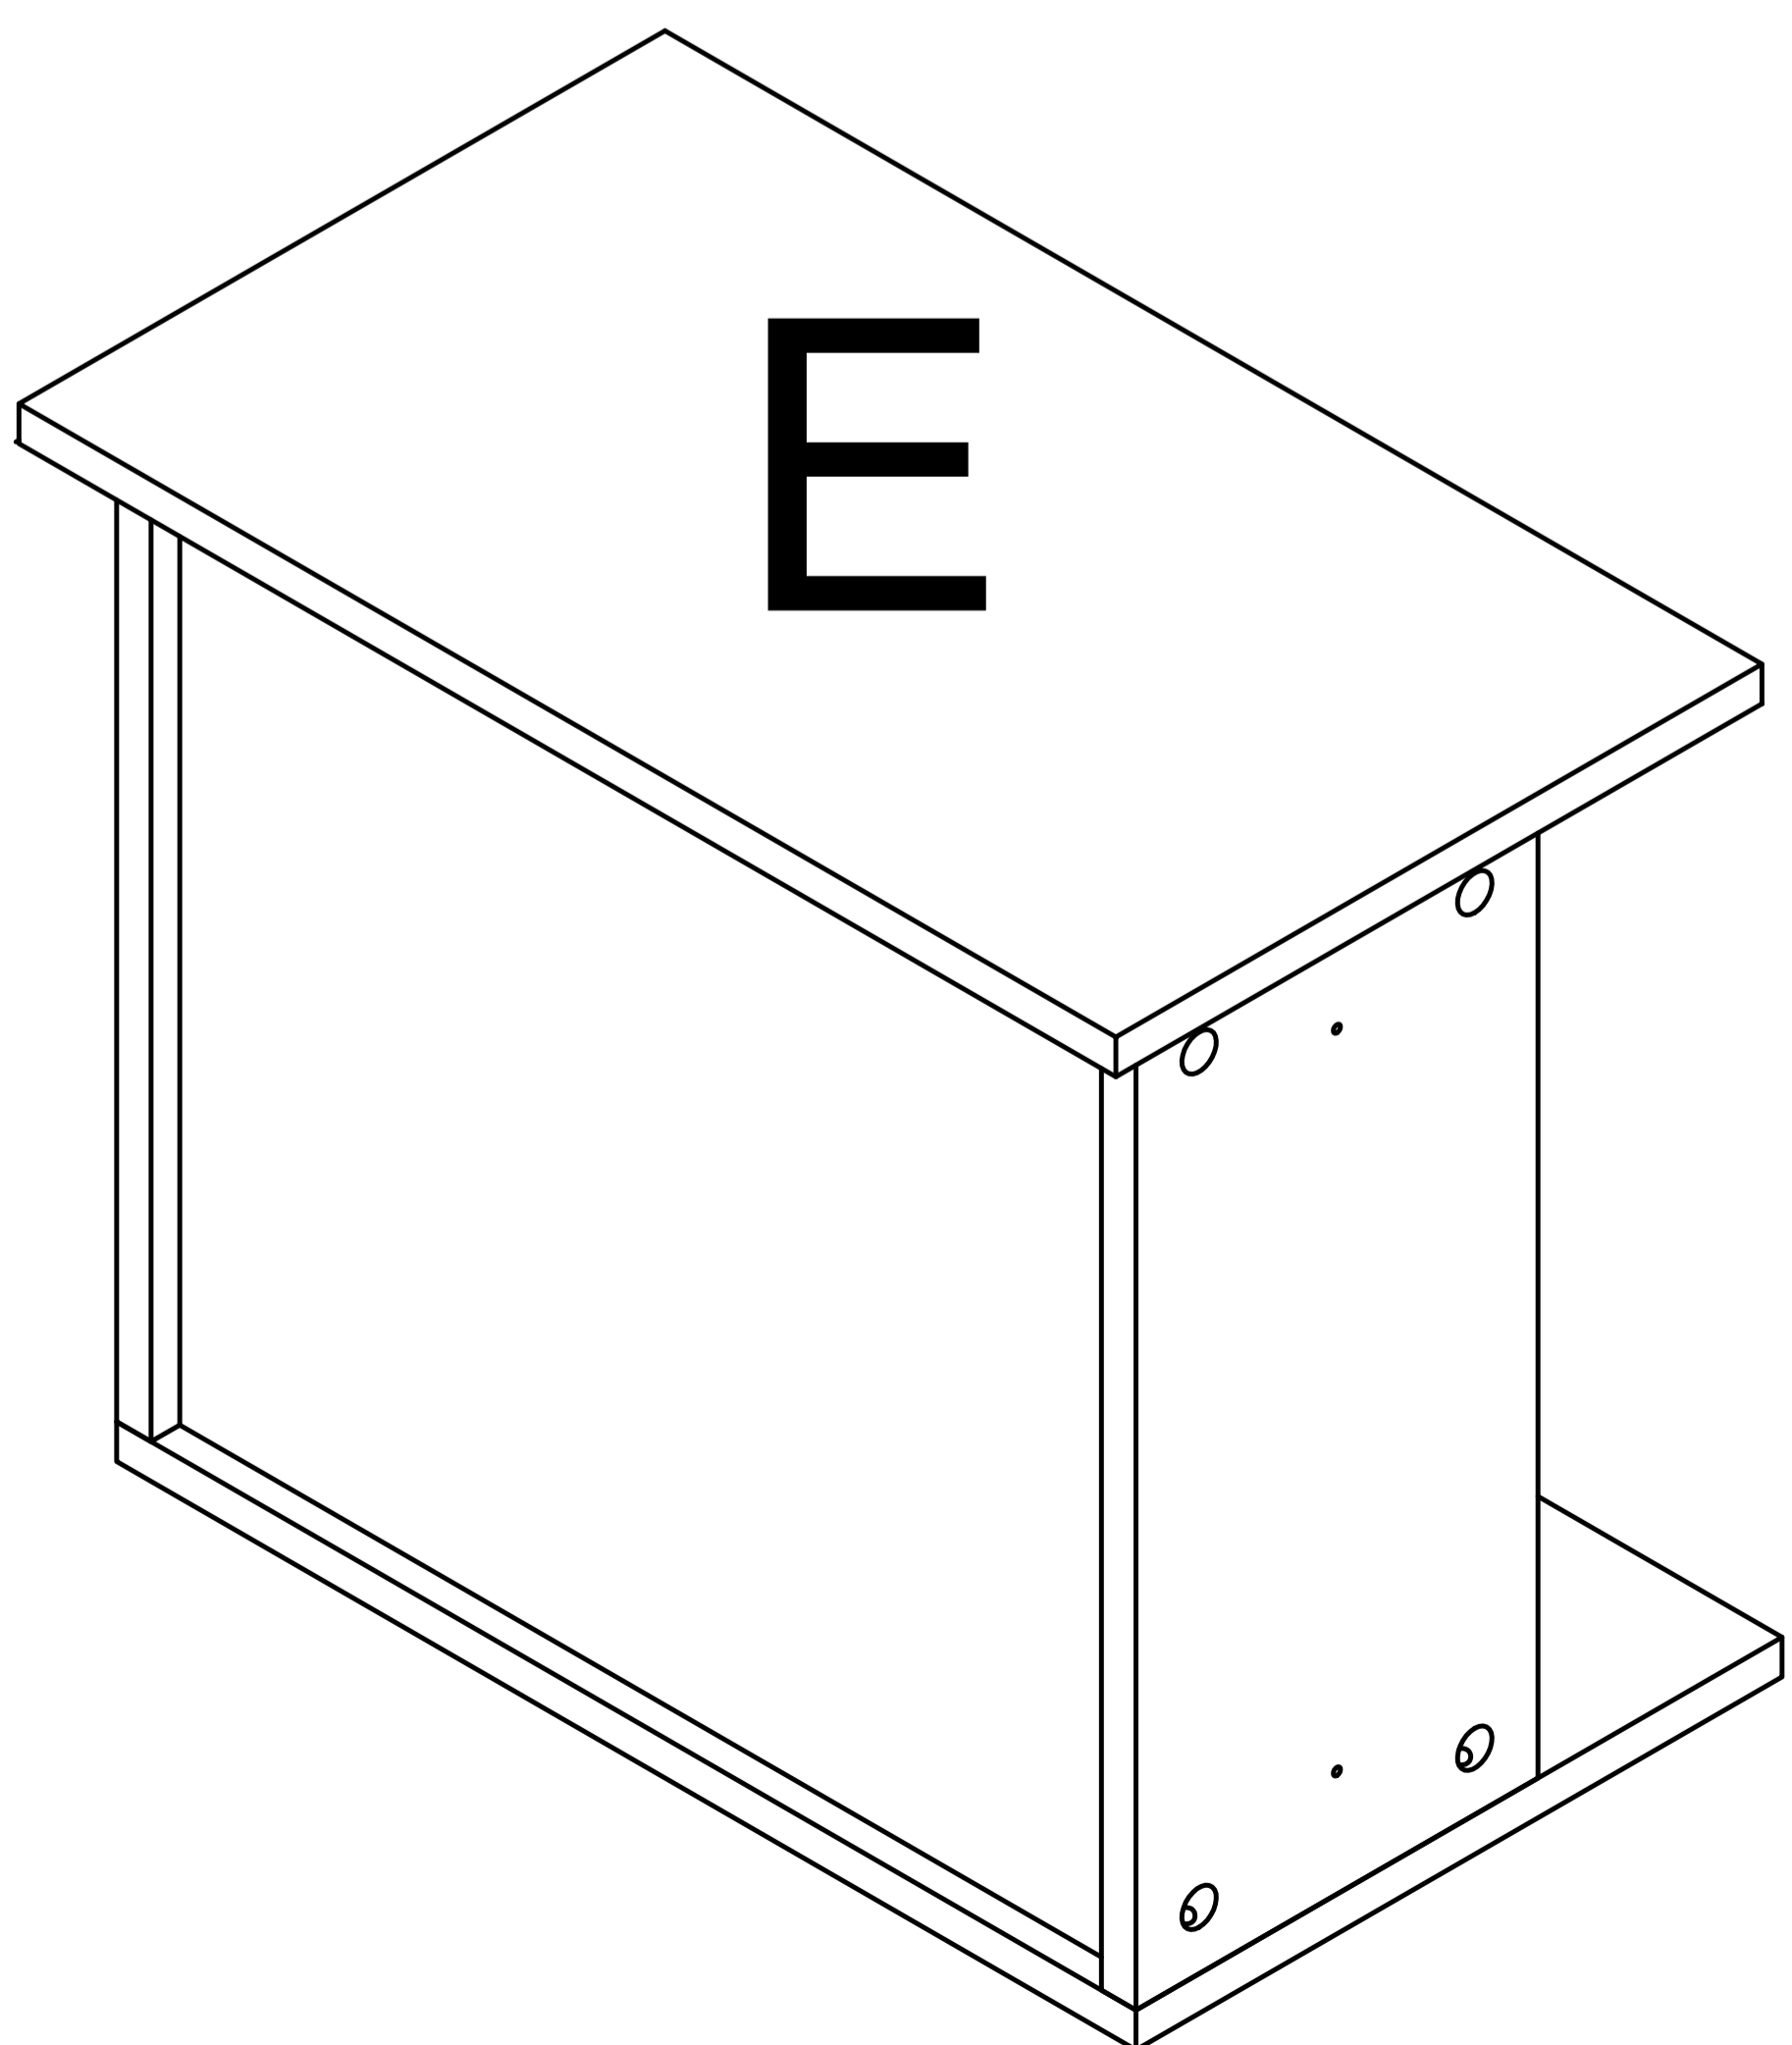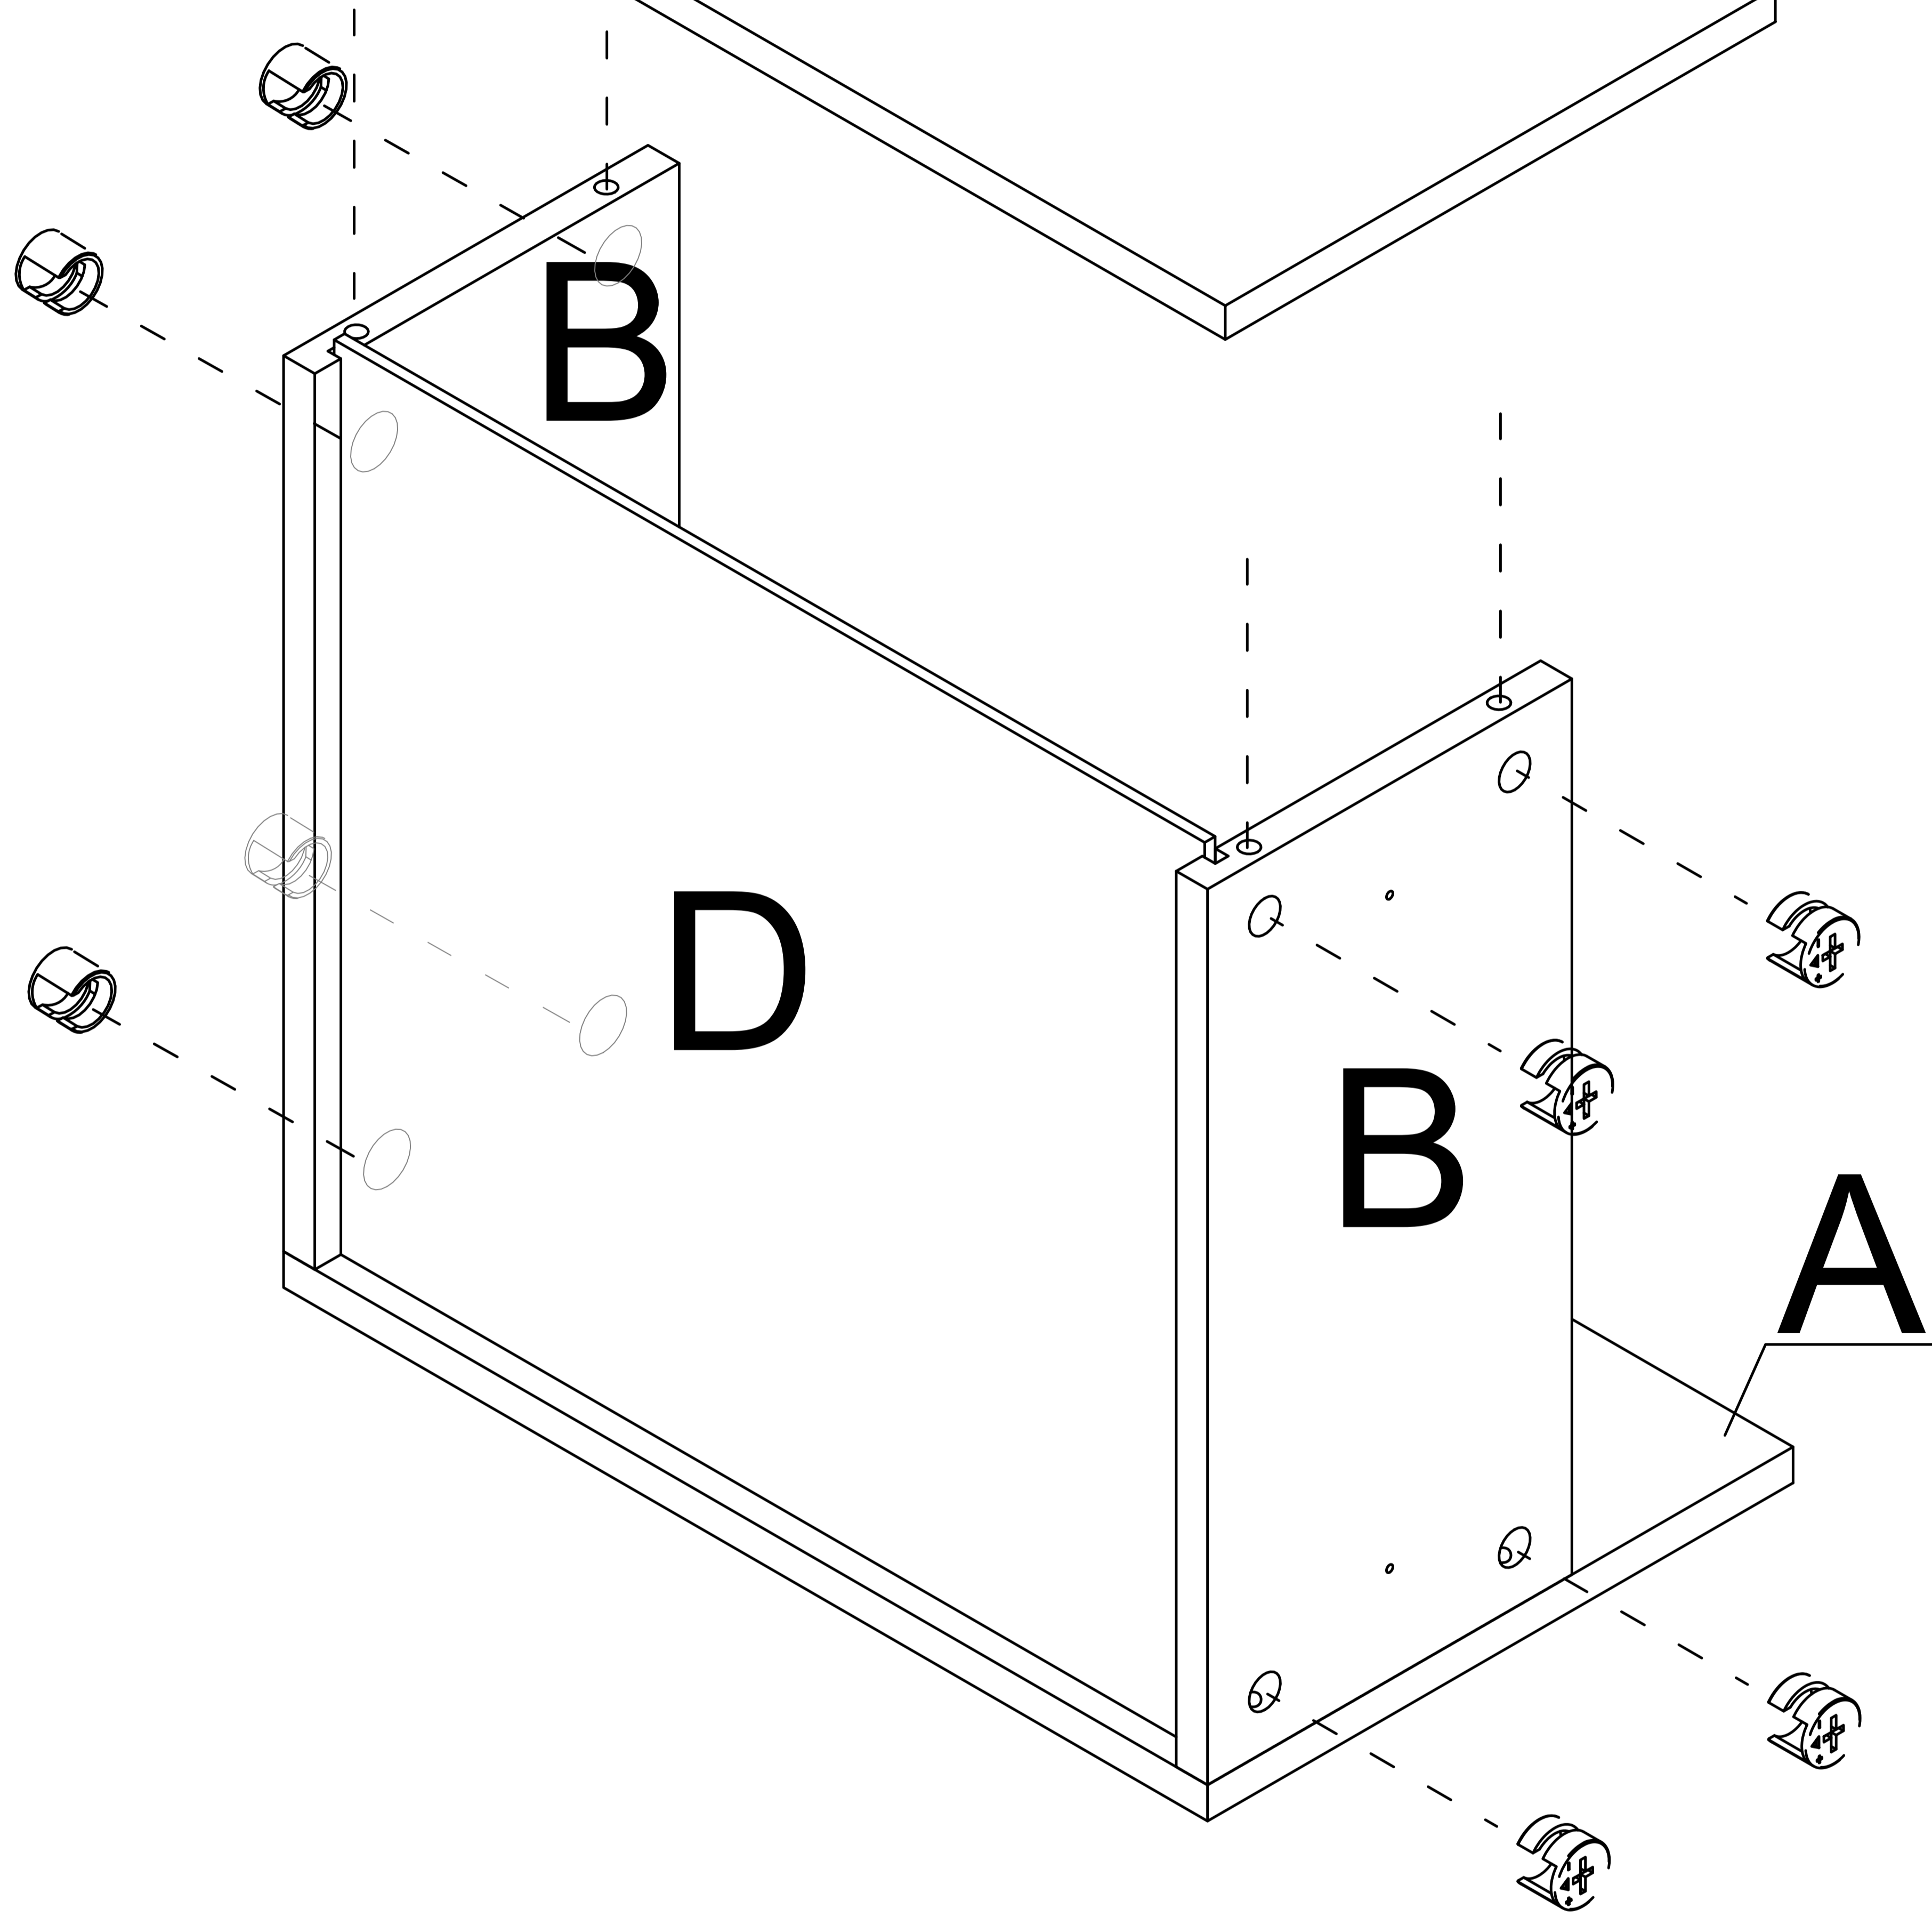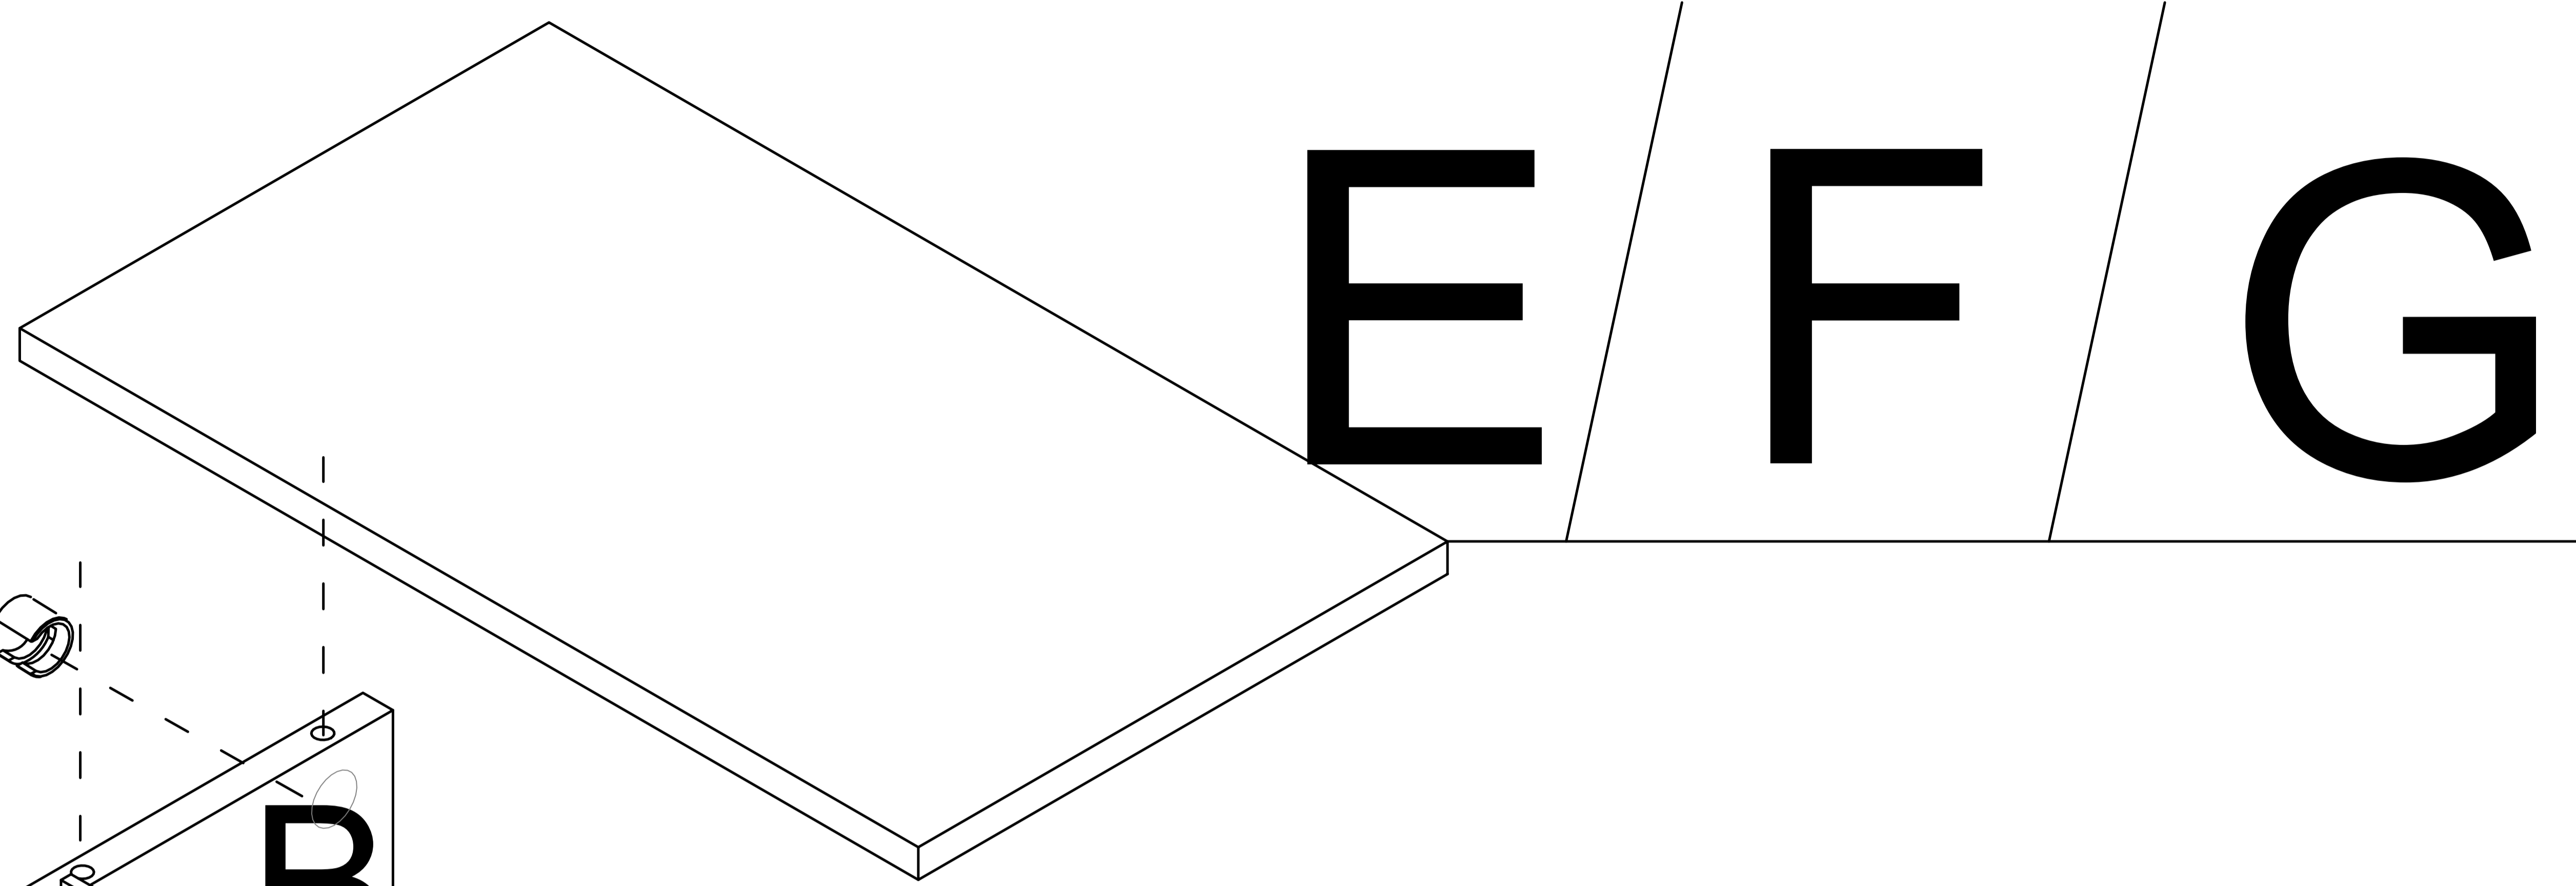


x 2

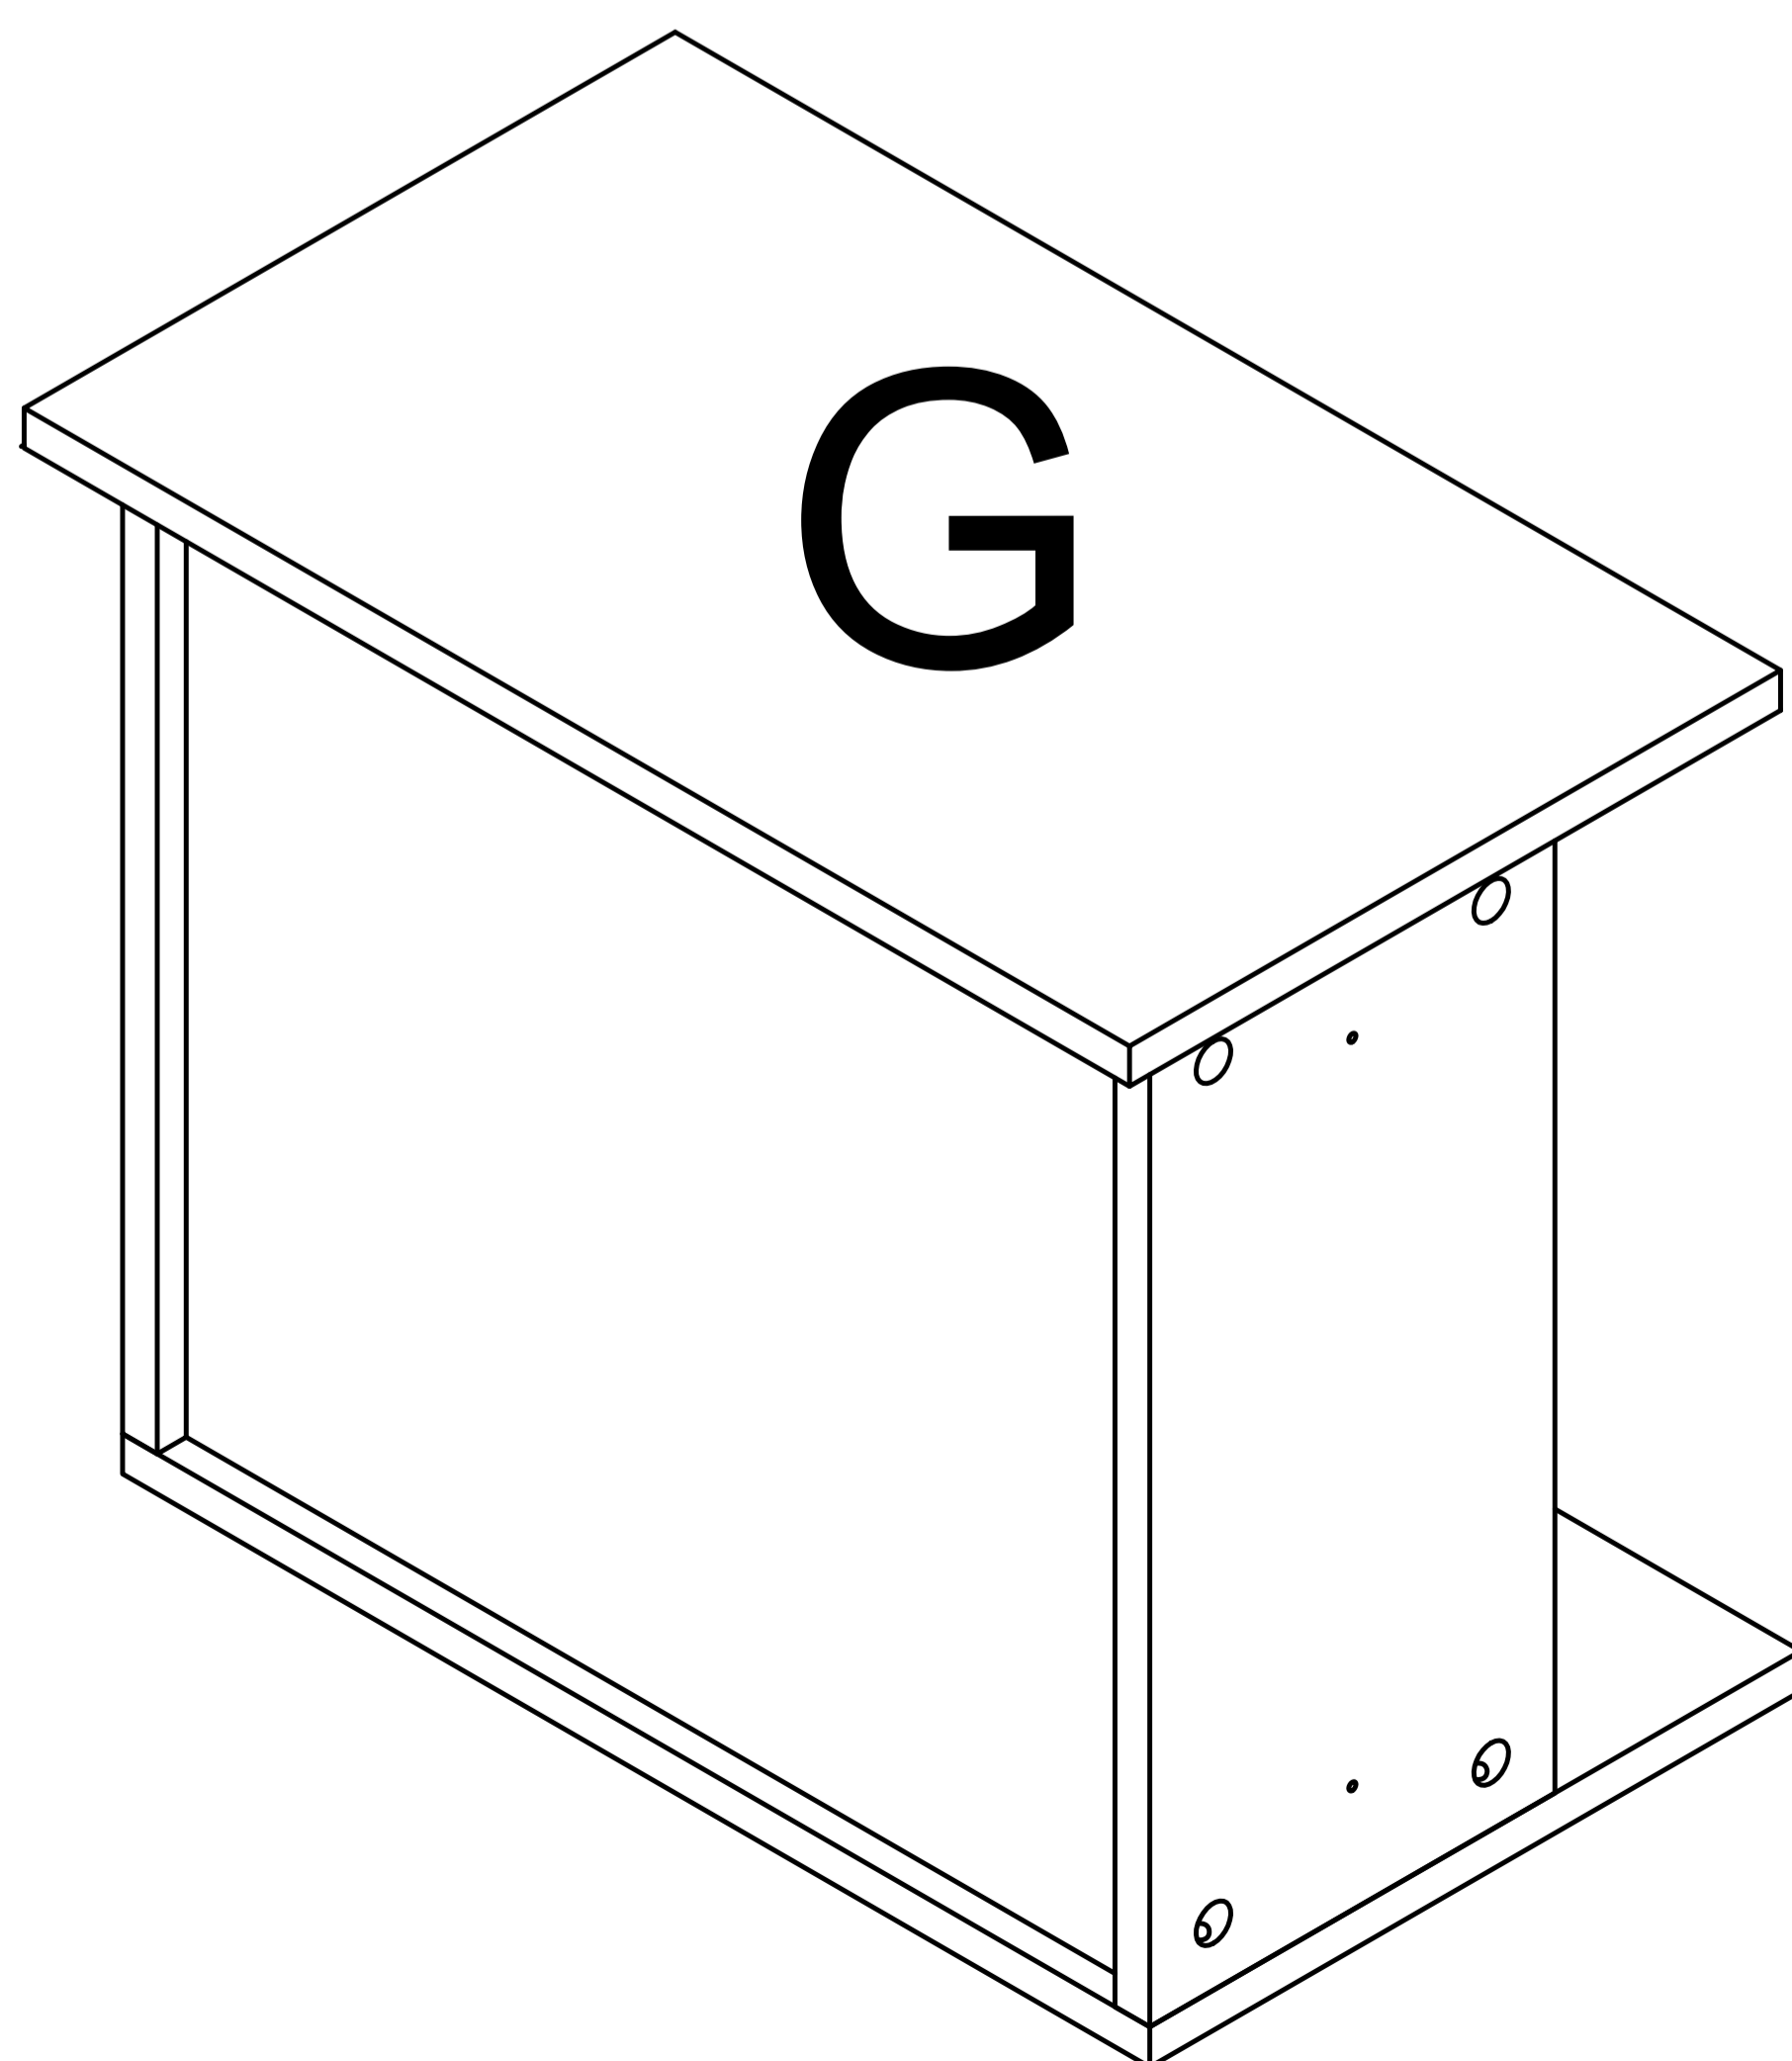


x 2

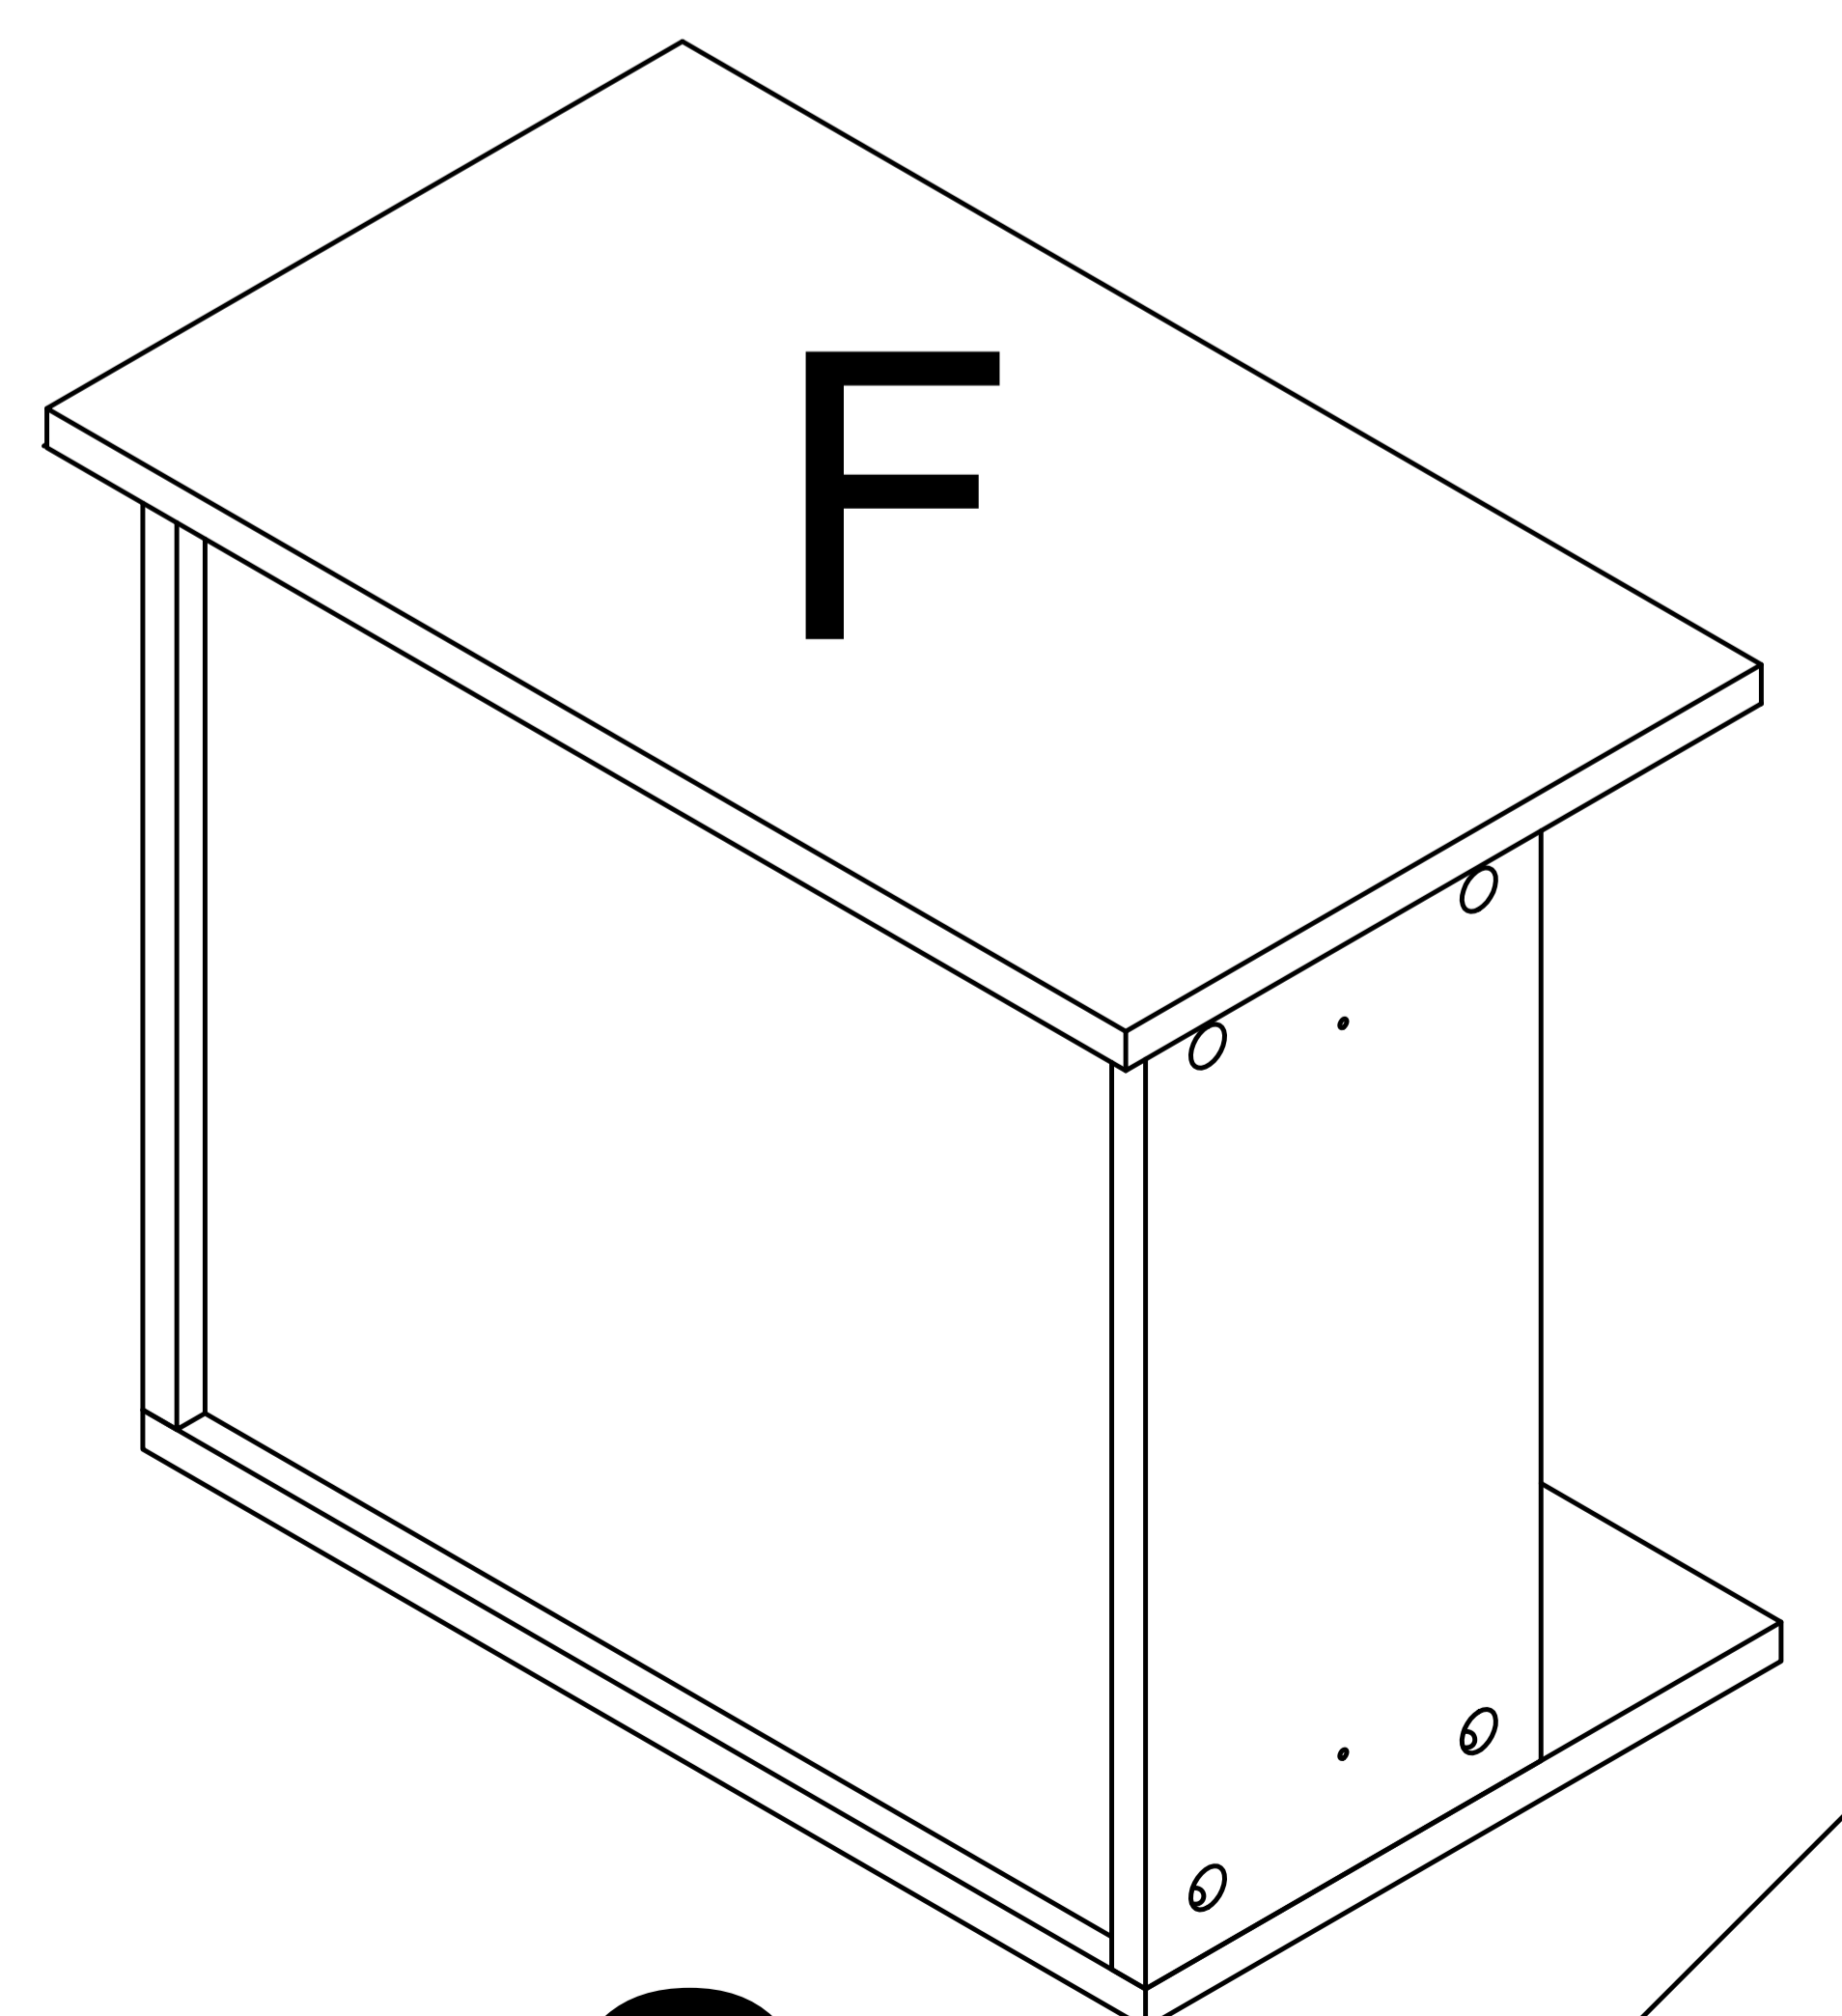

x 2

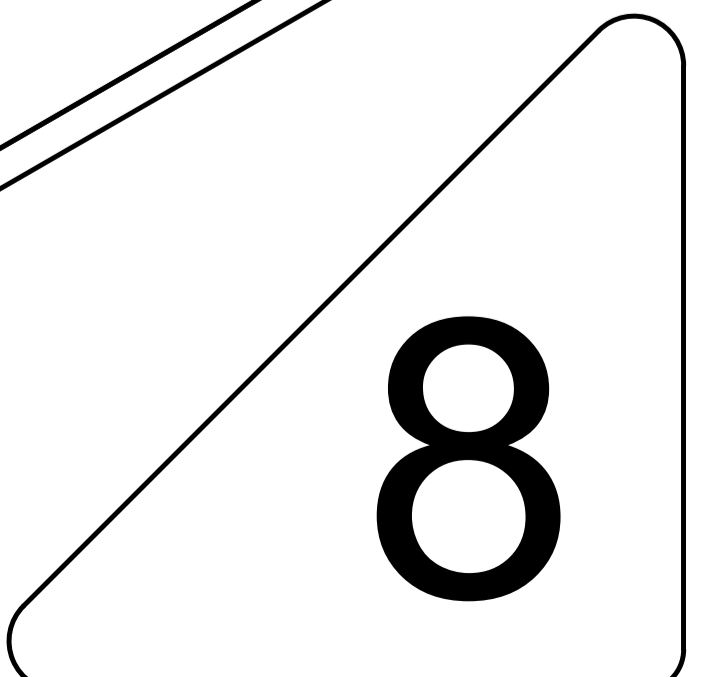


Drawer rail breakdown diagram

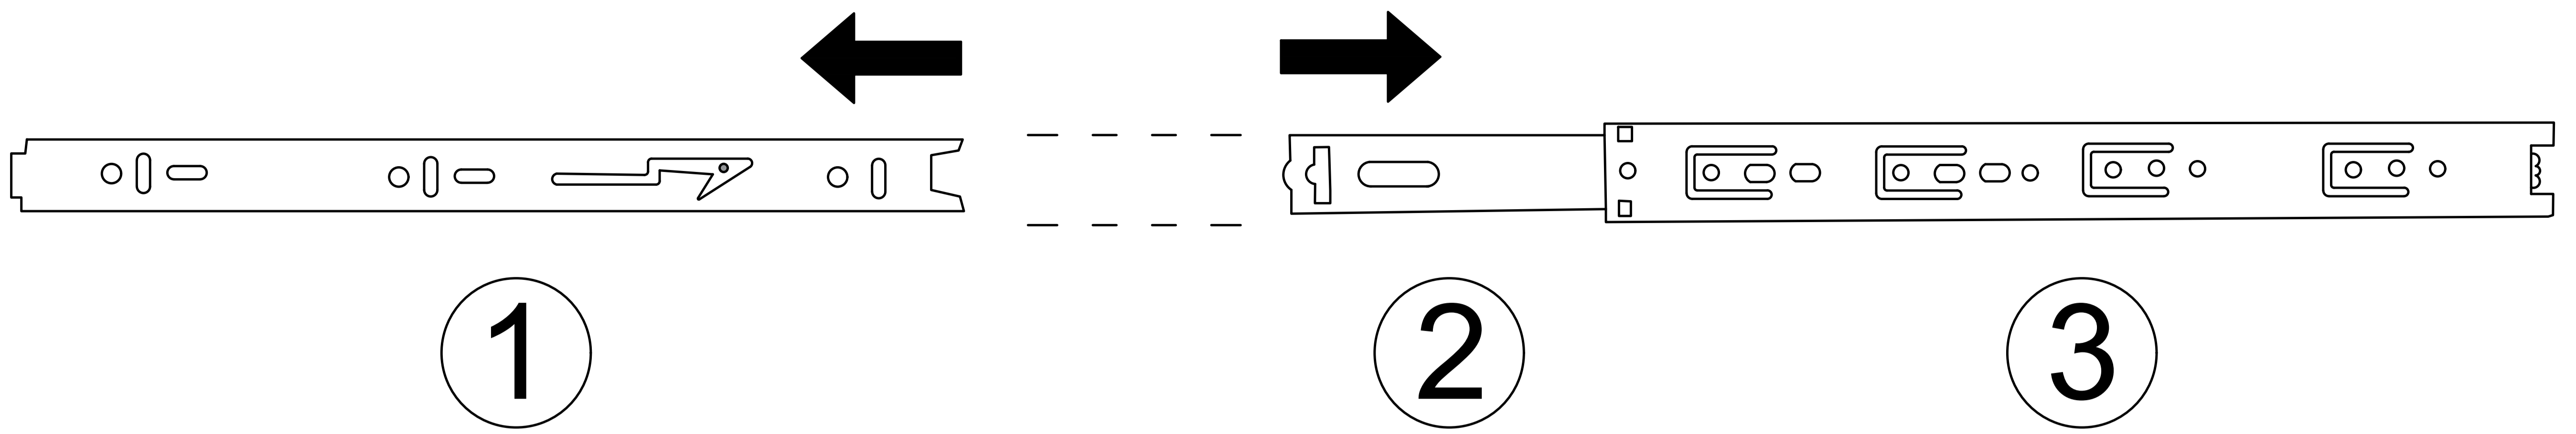


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

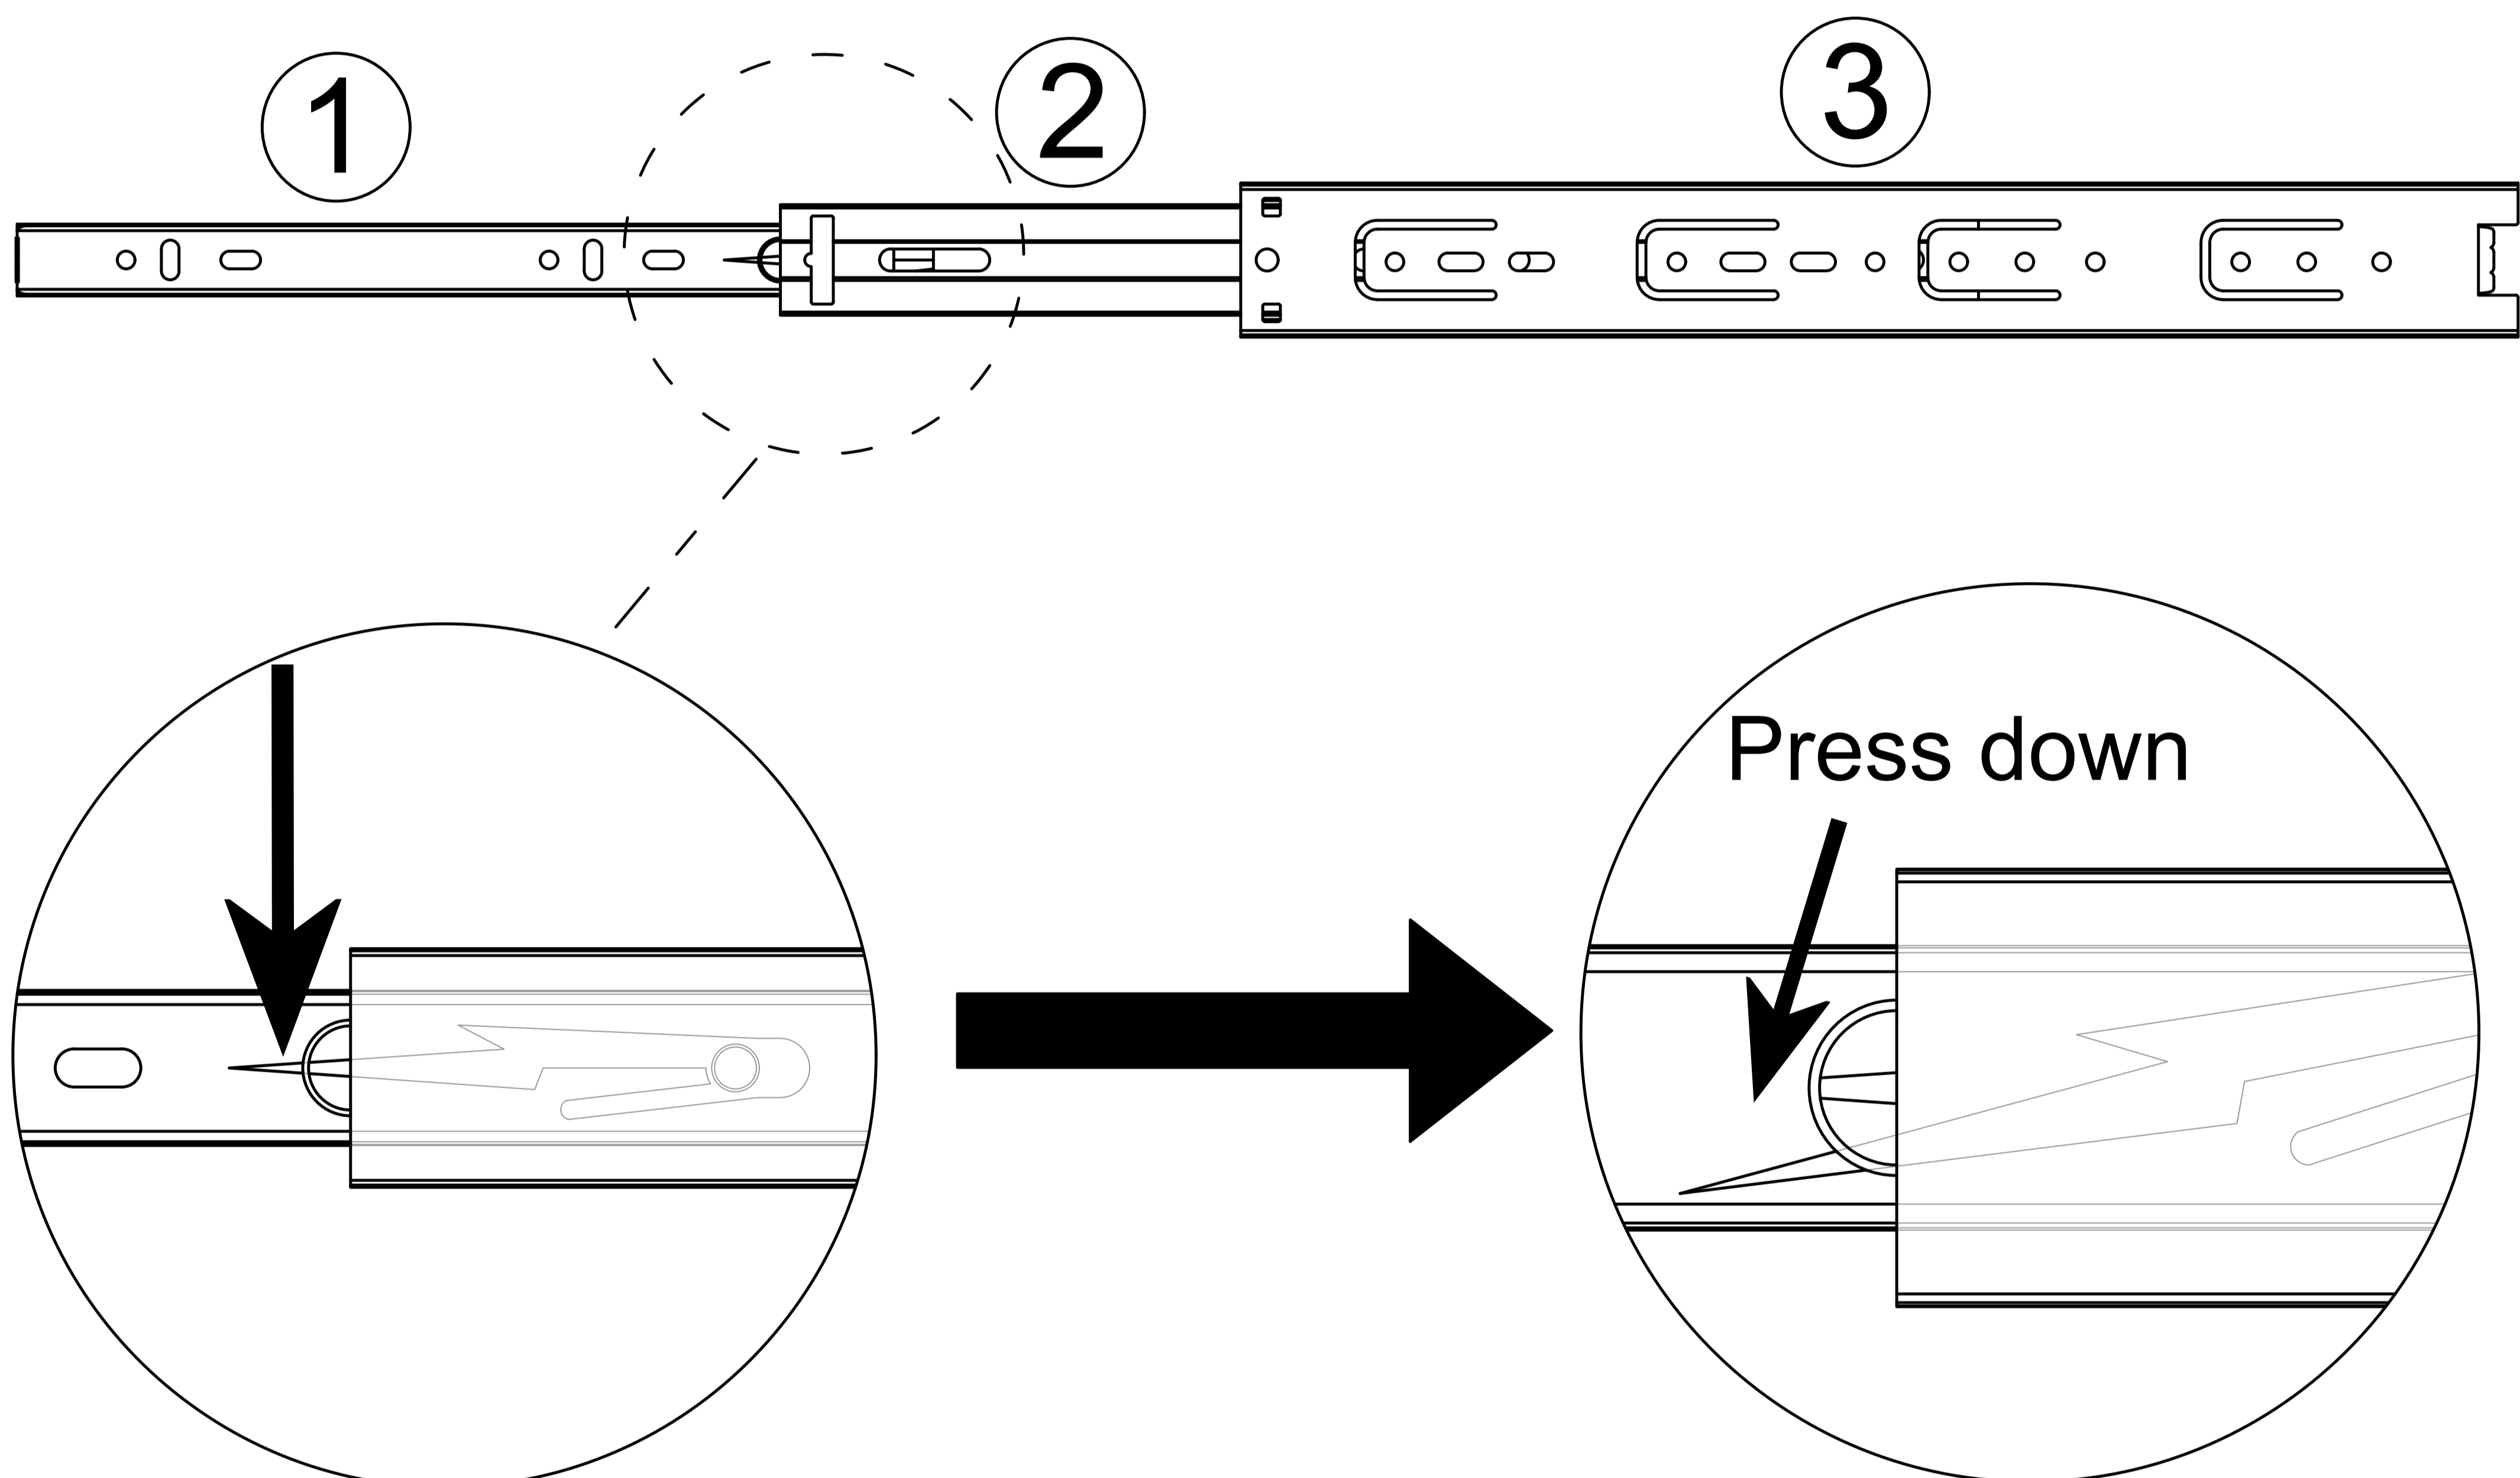

Step 2 : Press the nylon button and pull out ①.


Drawer rail decomposition completed schematic diagram

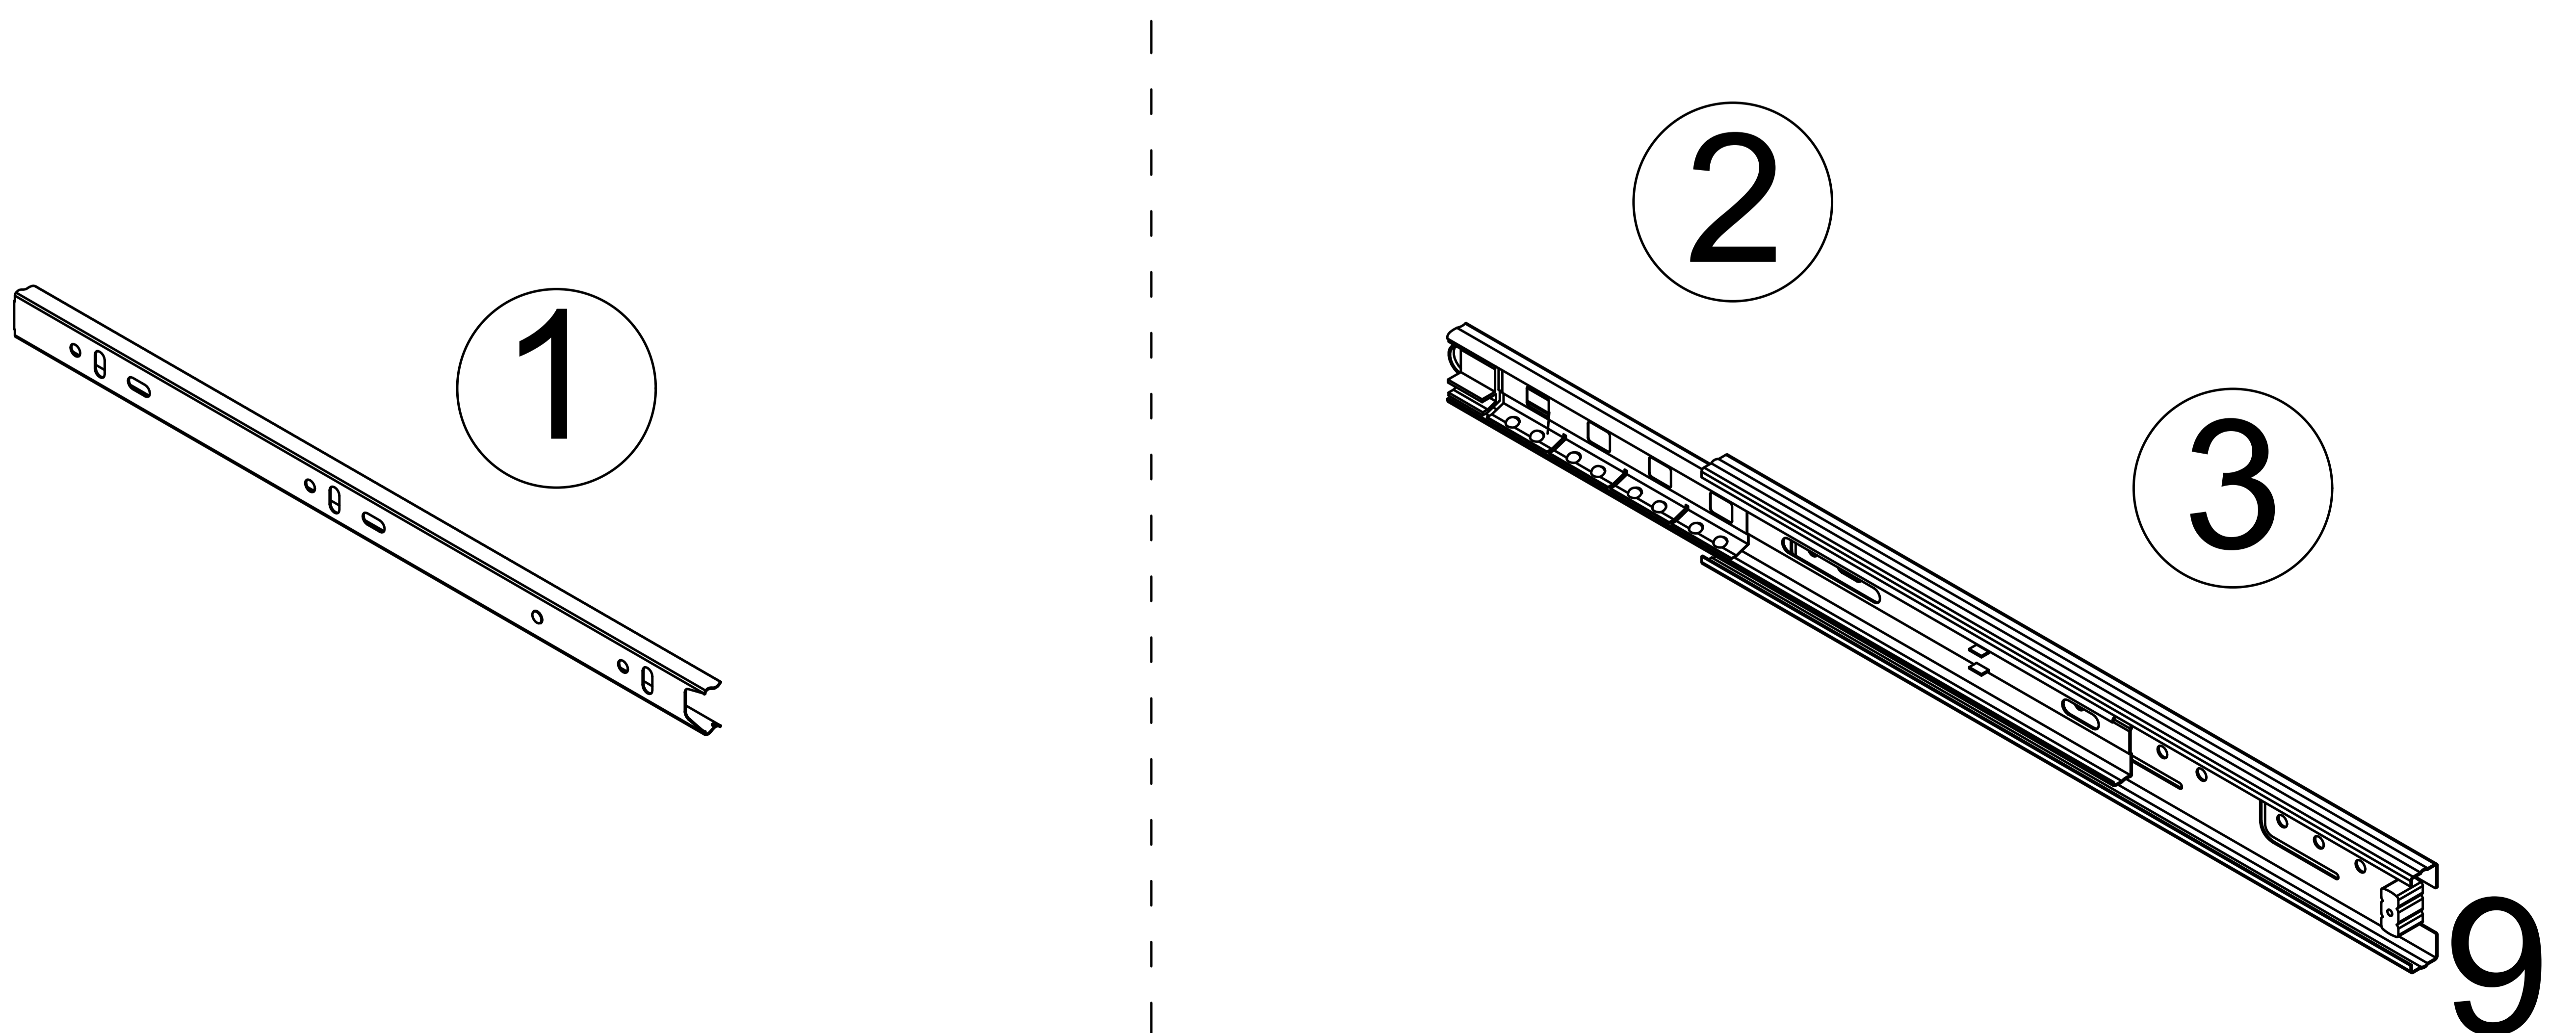



Step 8

4

x12


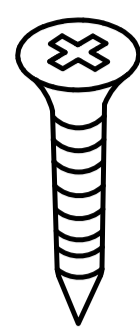


x24

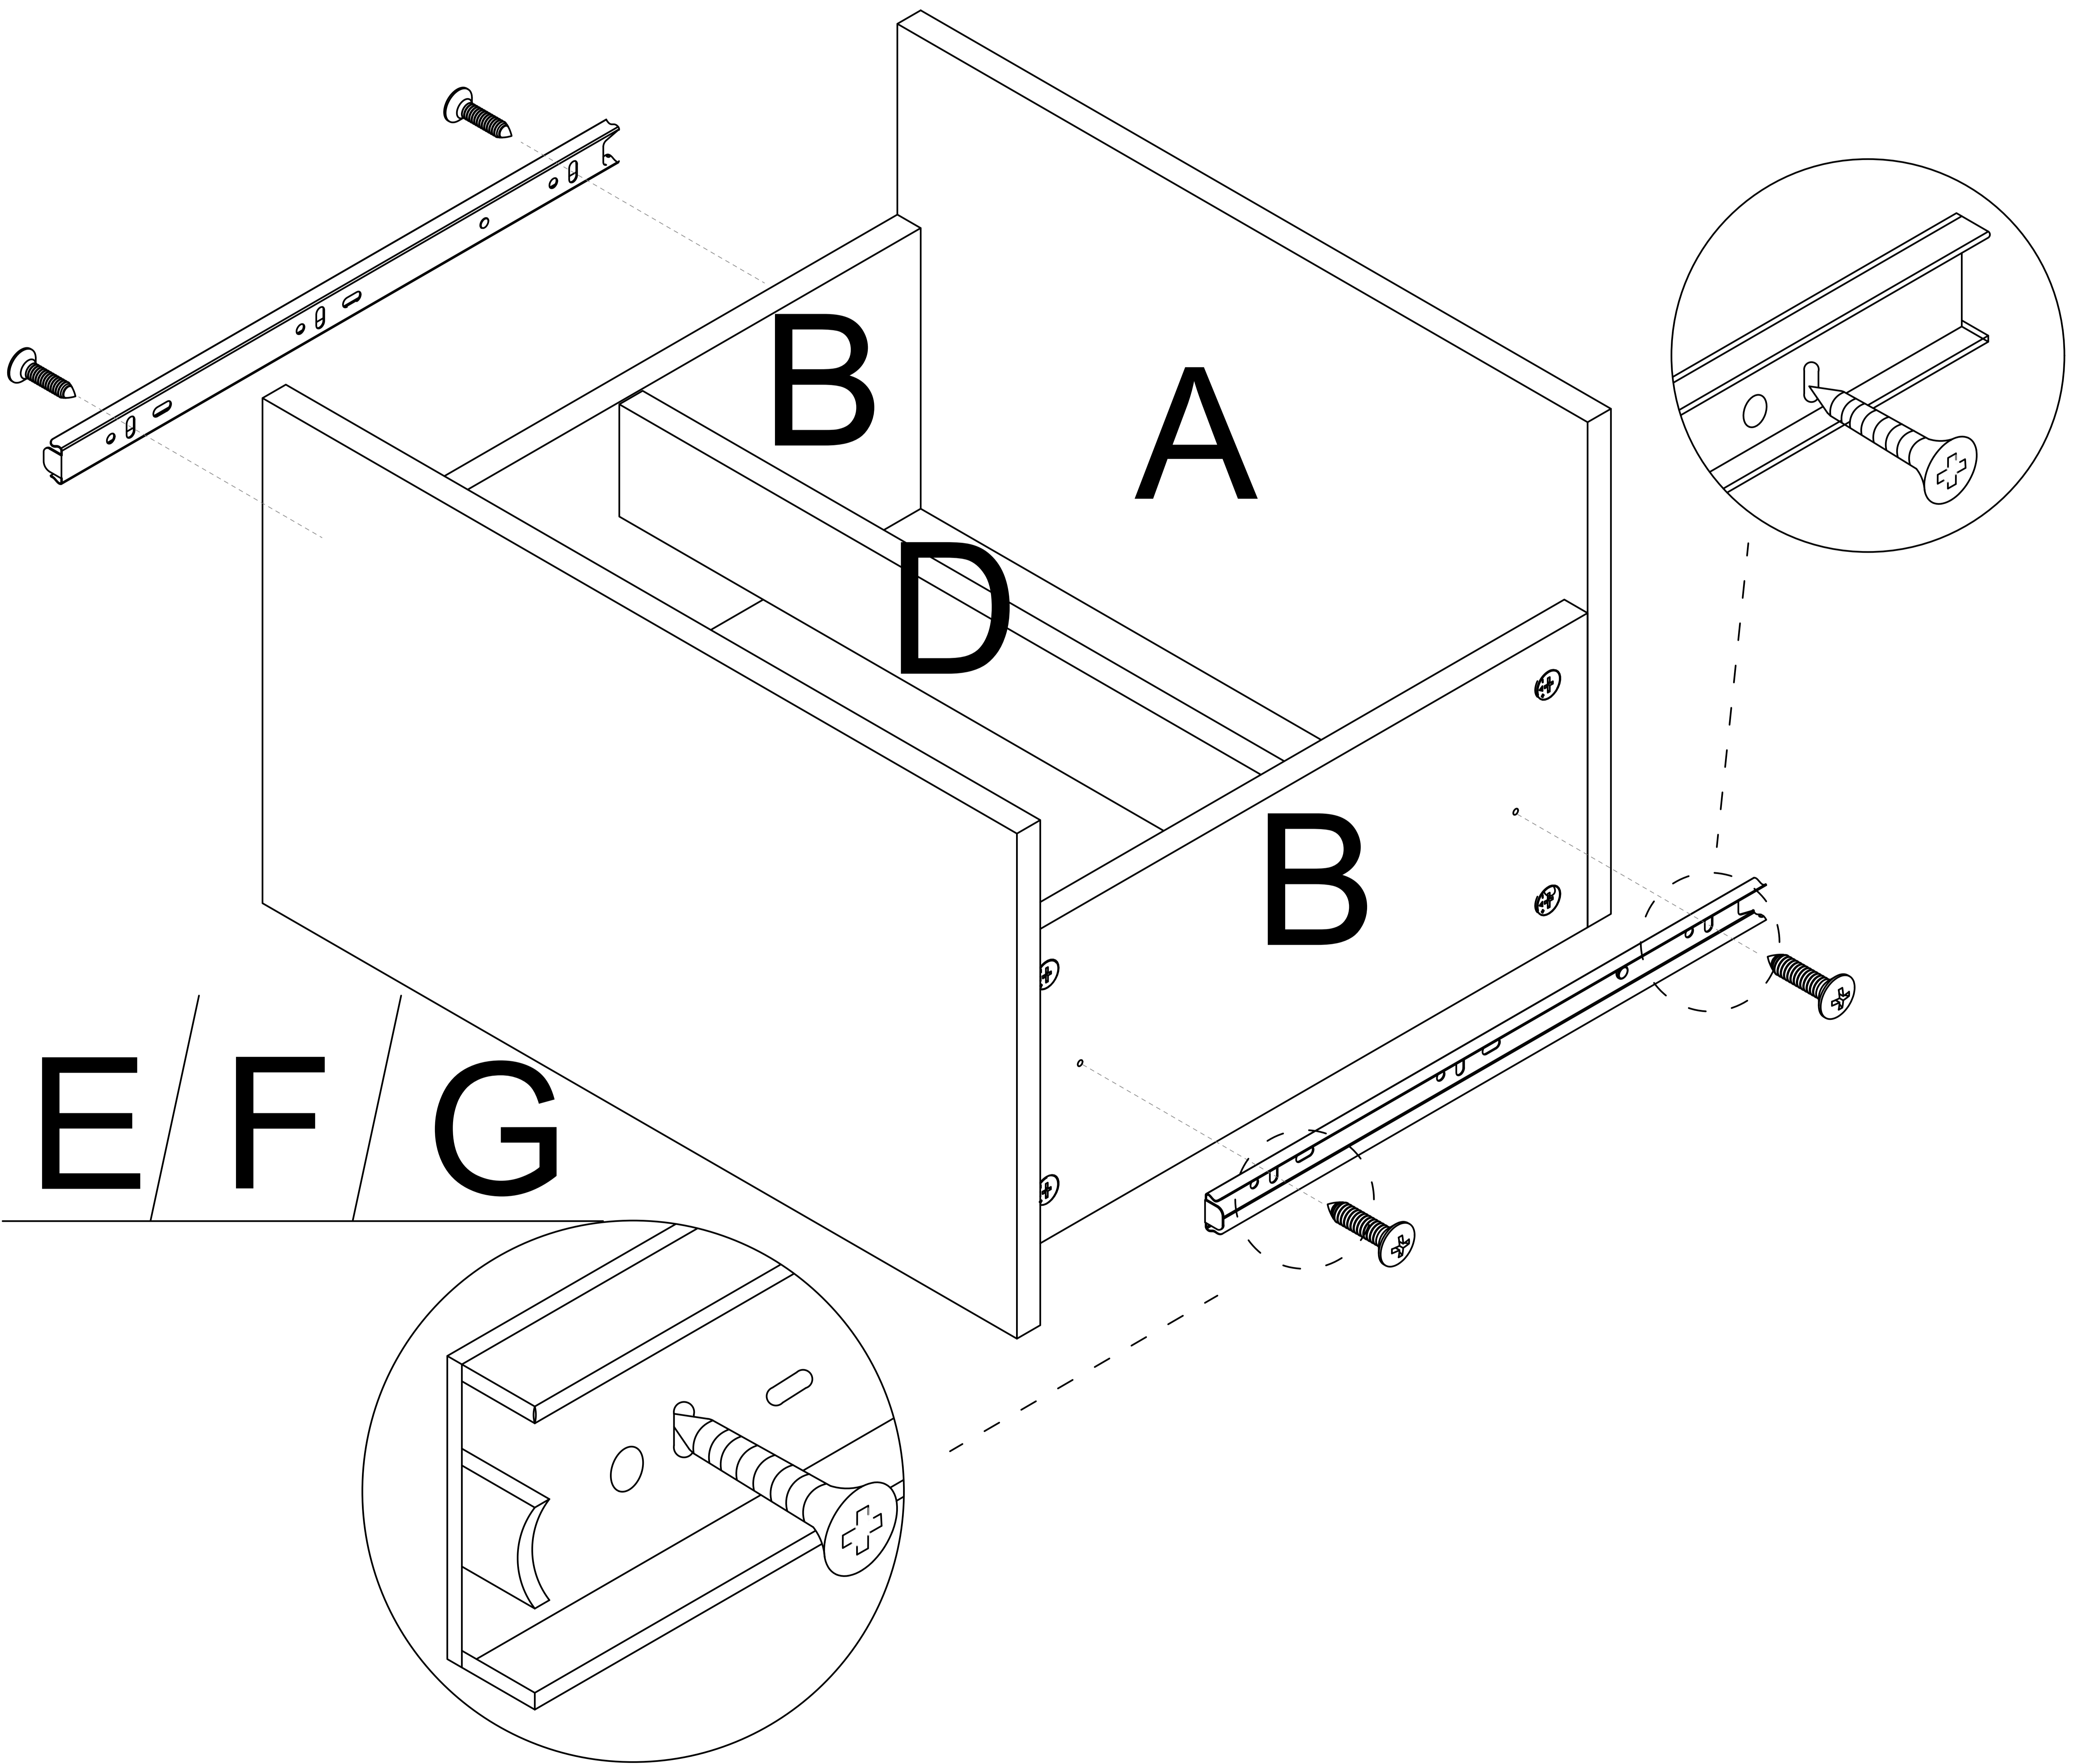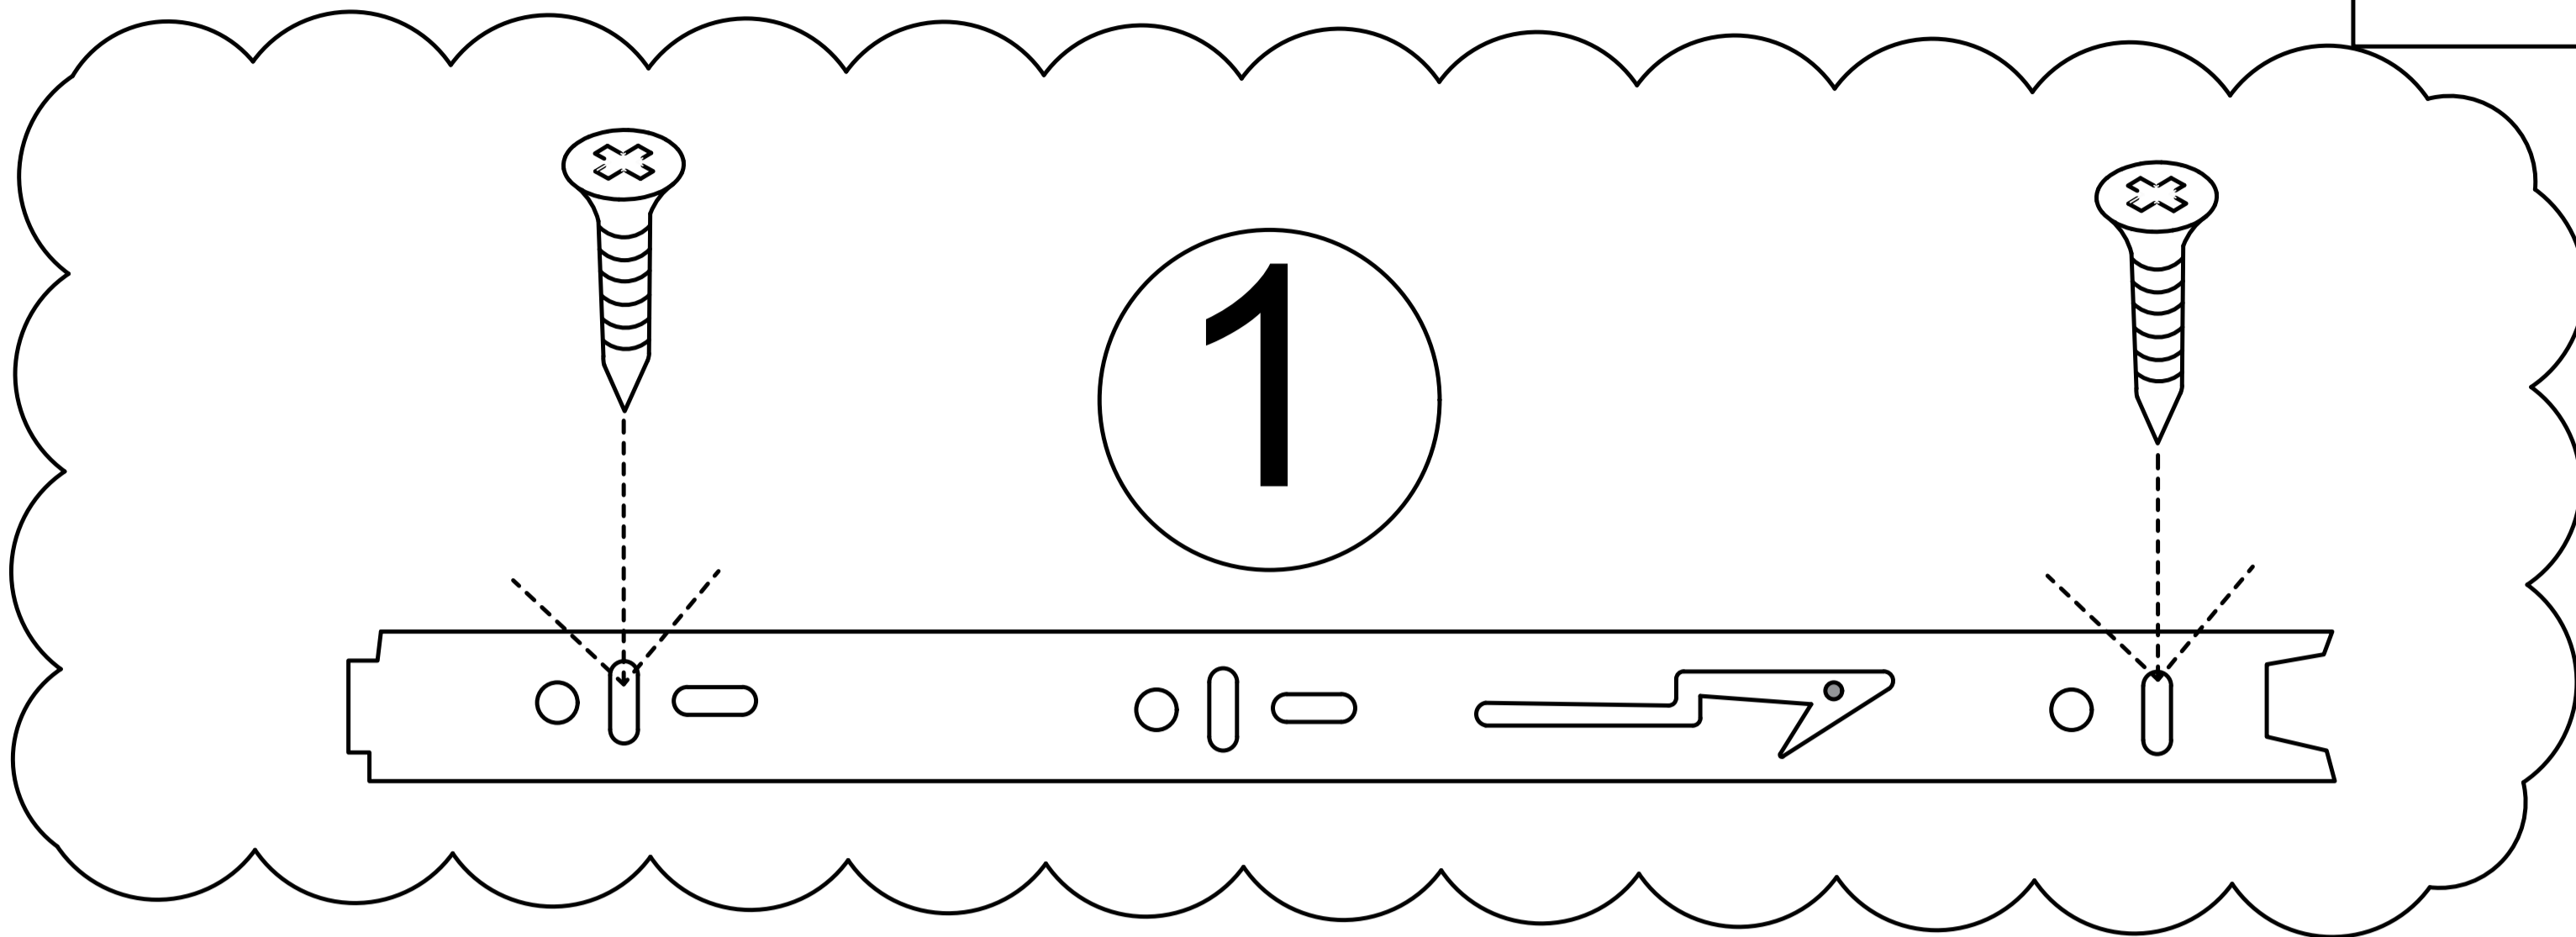



You can repeat the previous steps to obtain 6 identical drawers.

Step 9

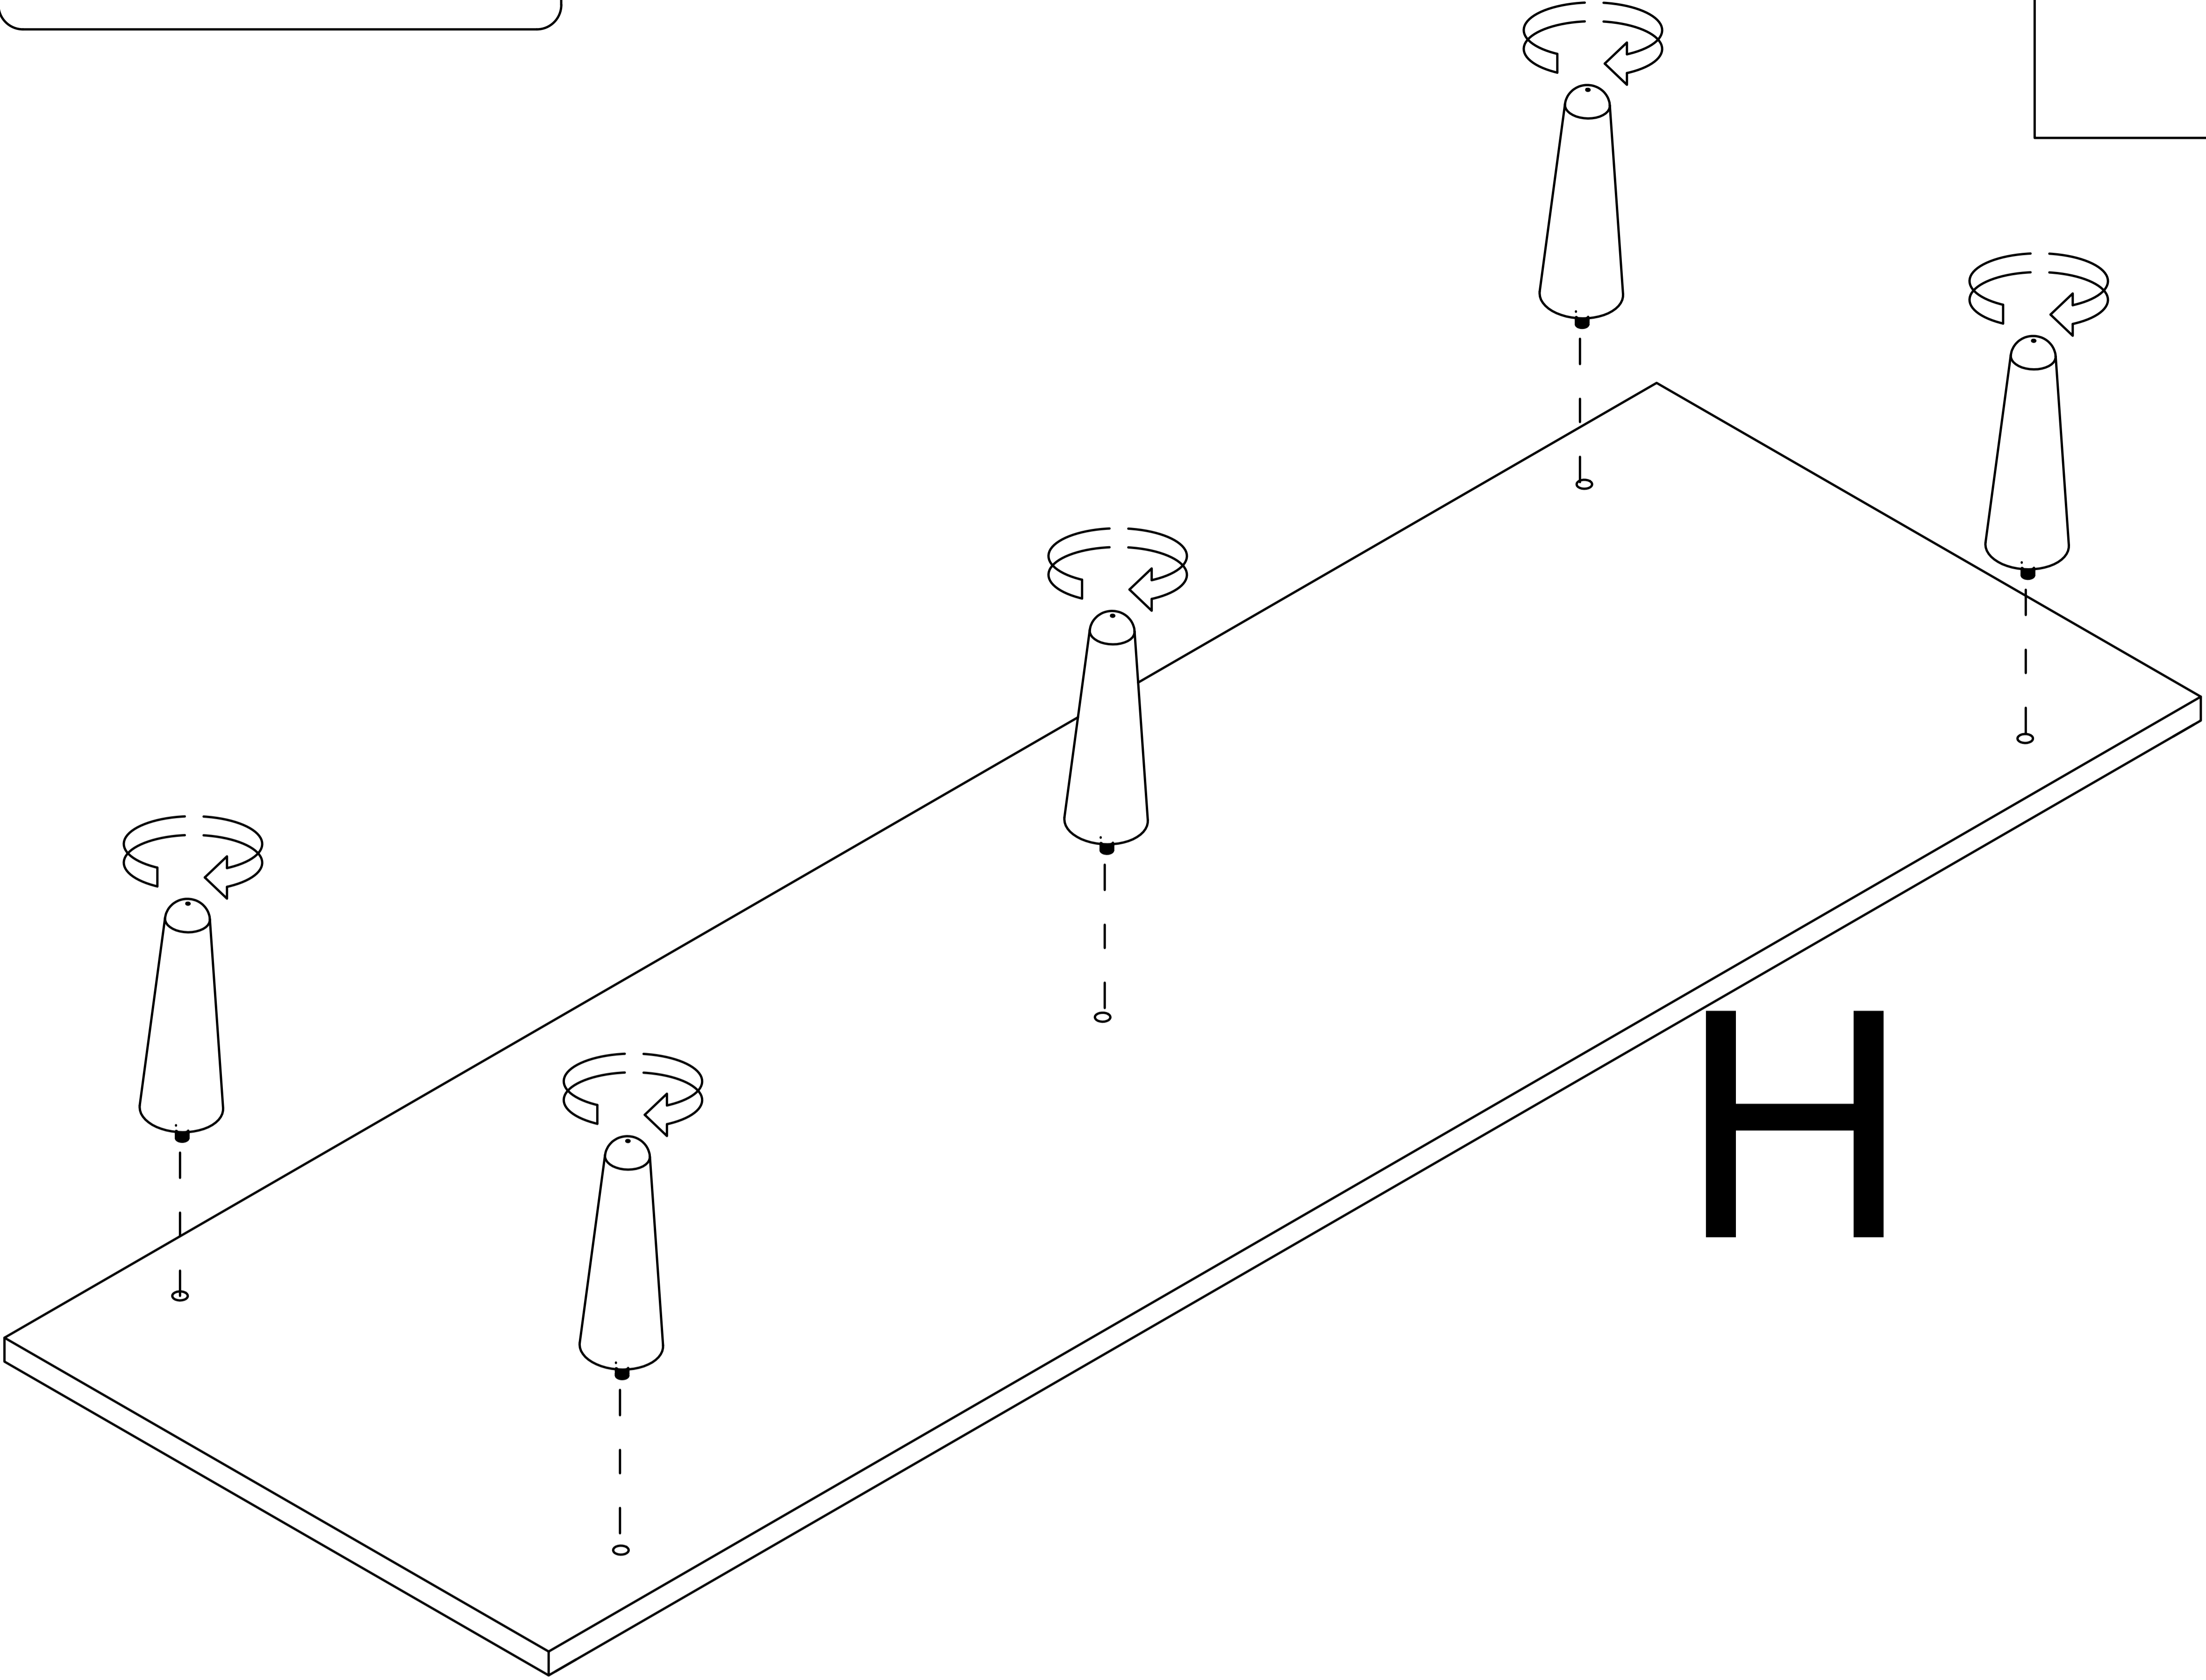
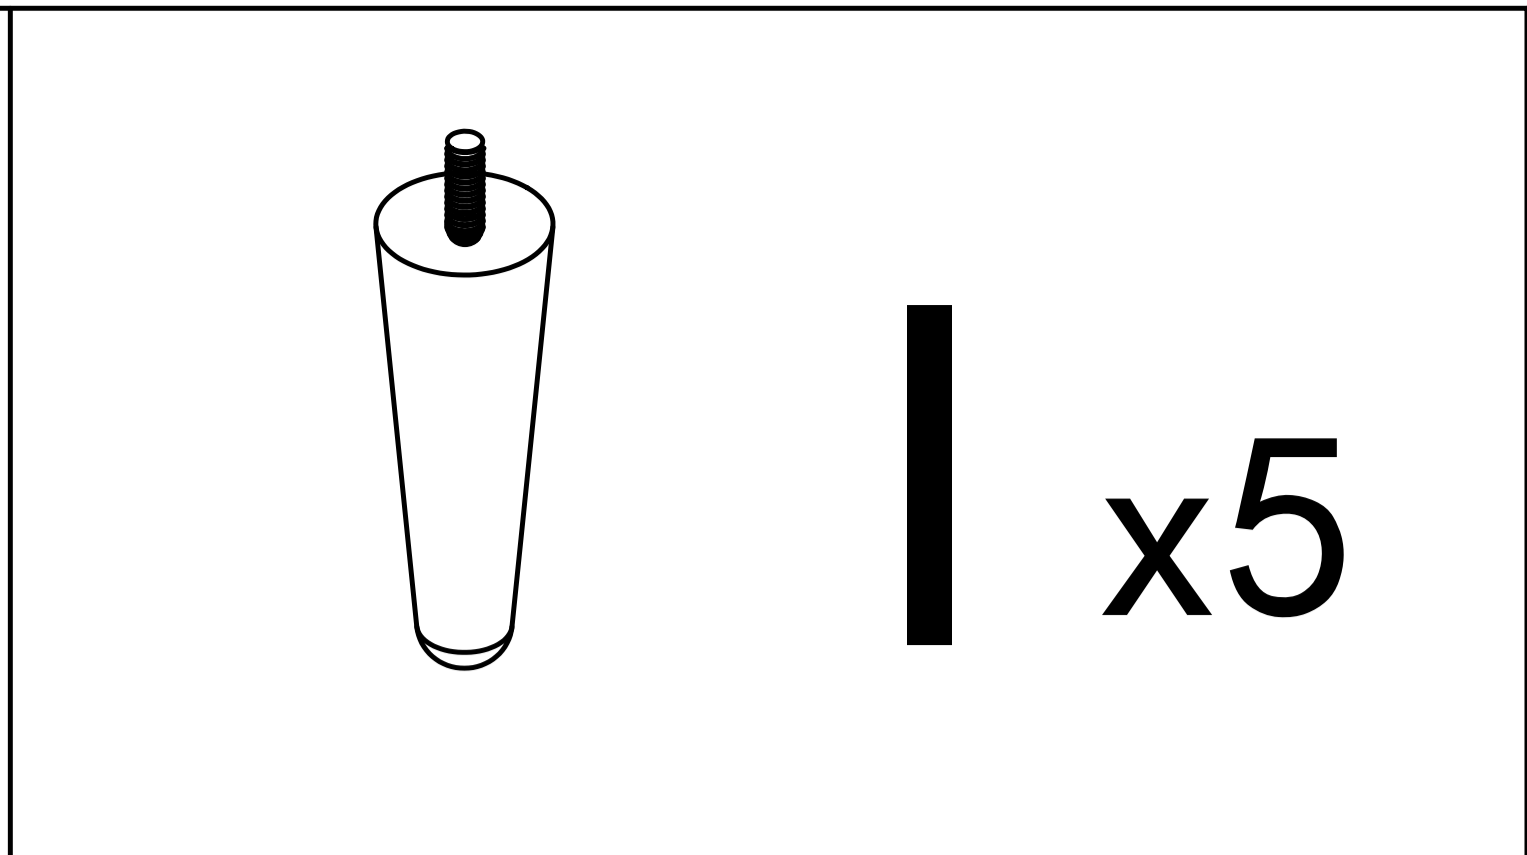


Step 10






Tear off release paper and stick the black foot pad on the board

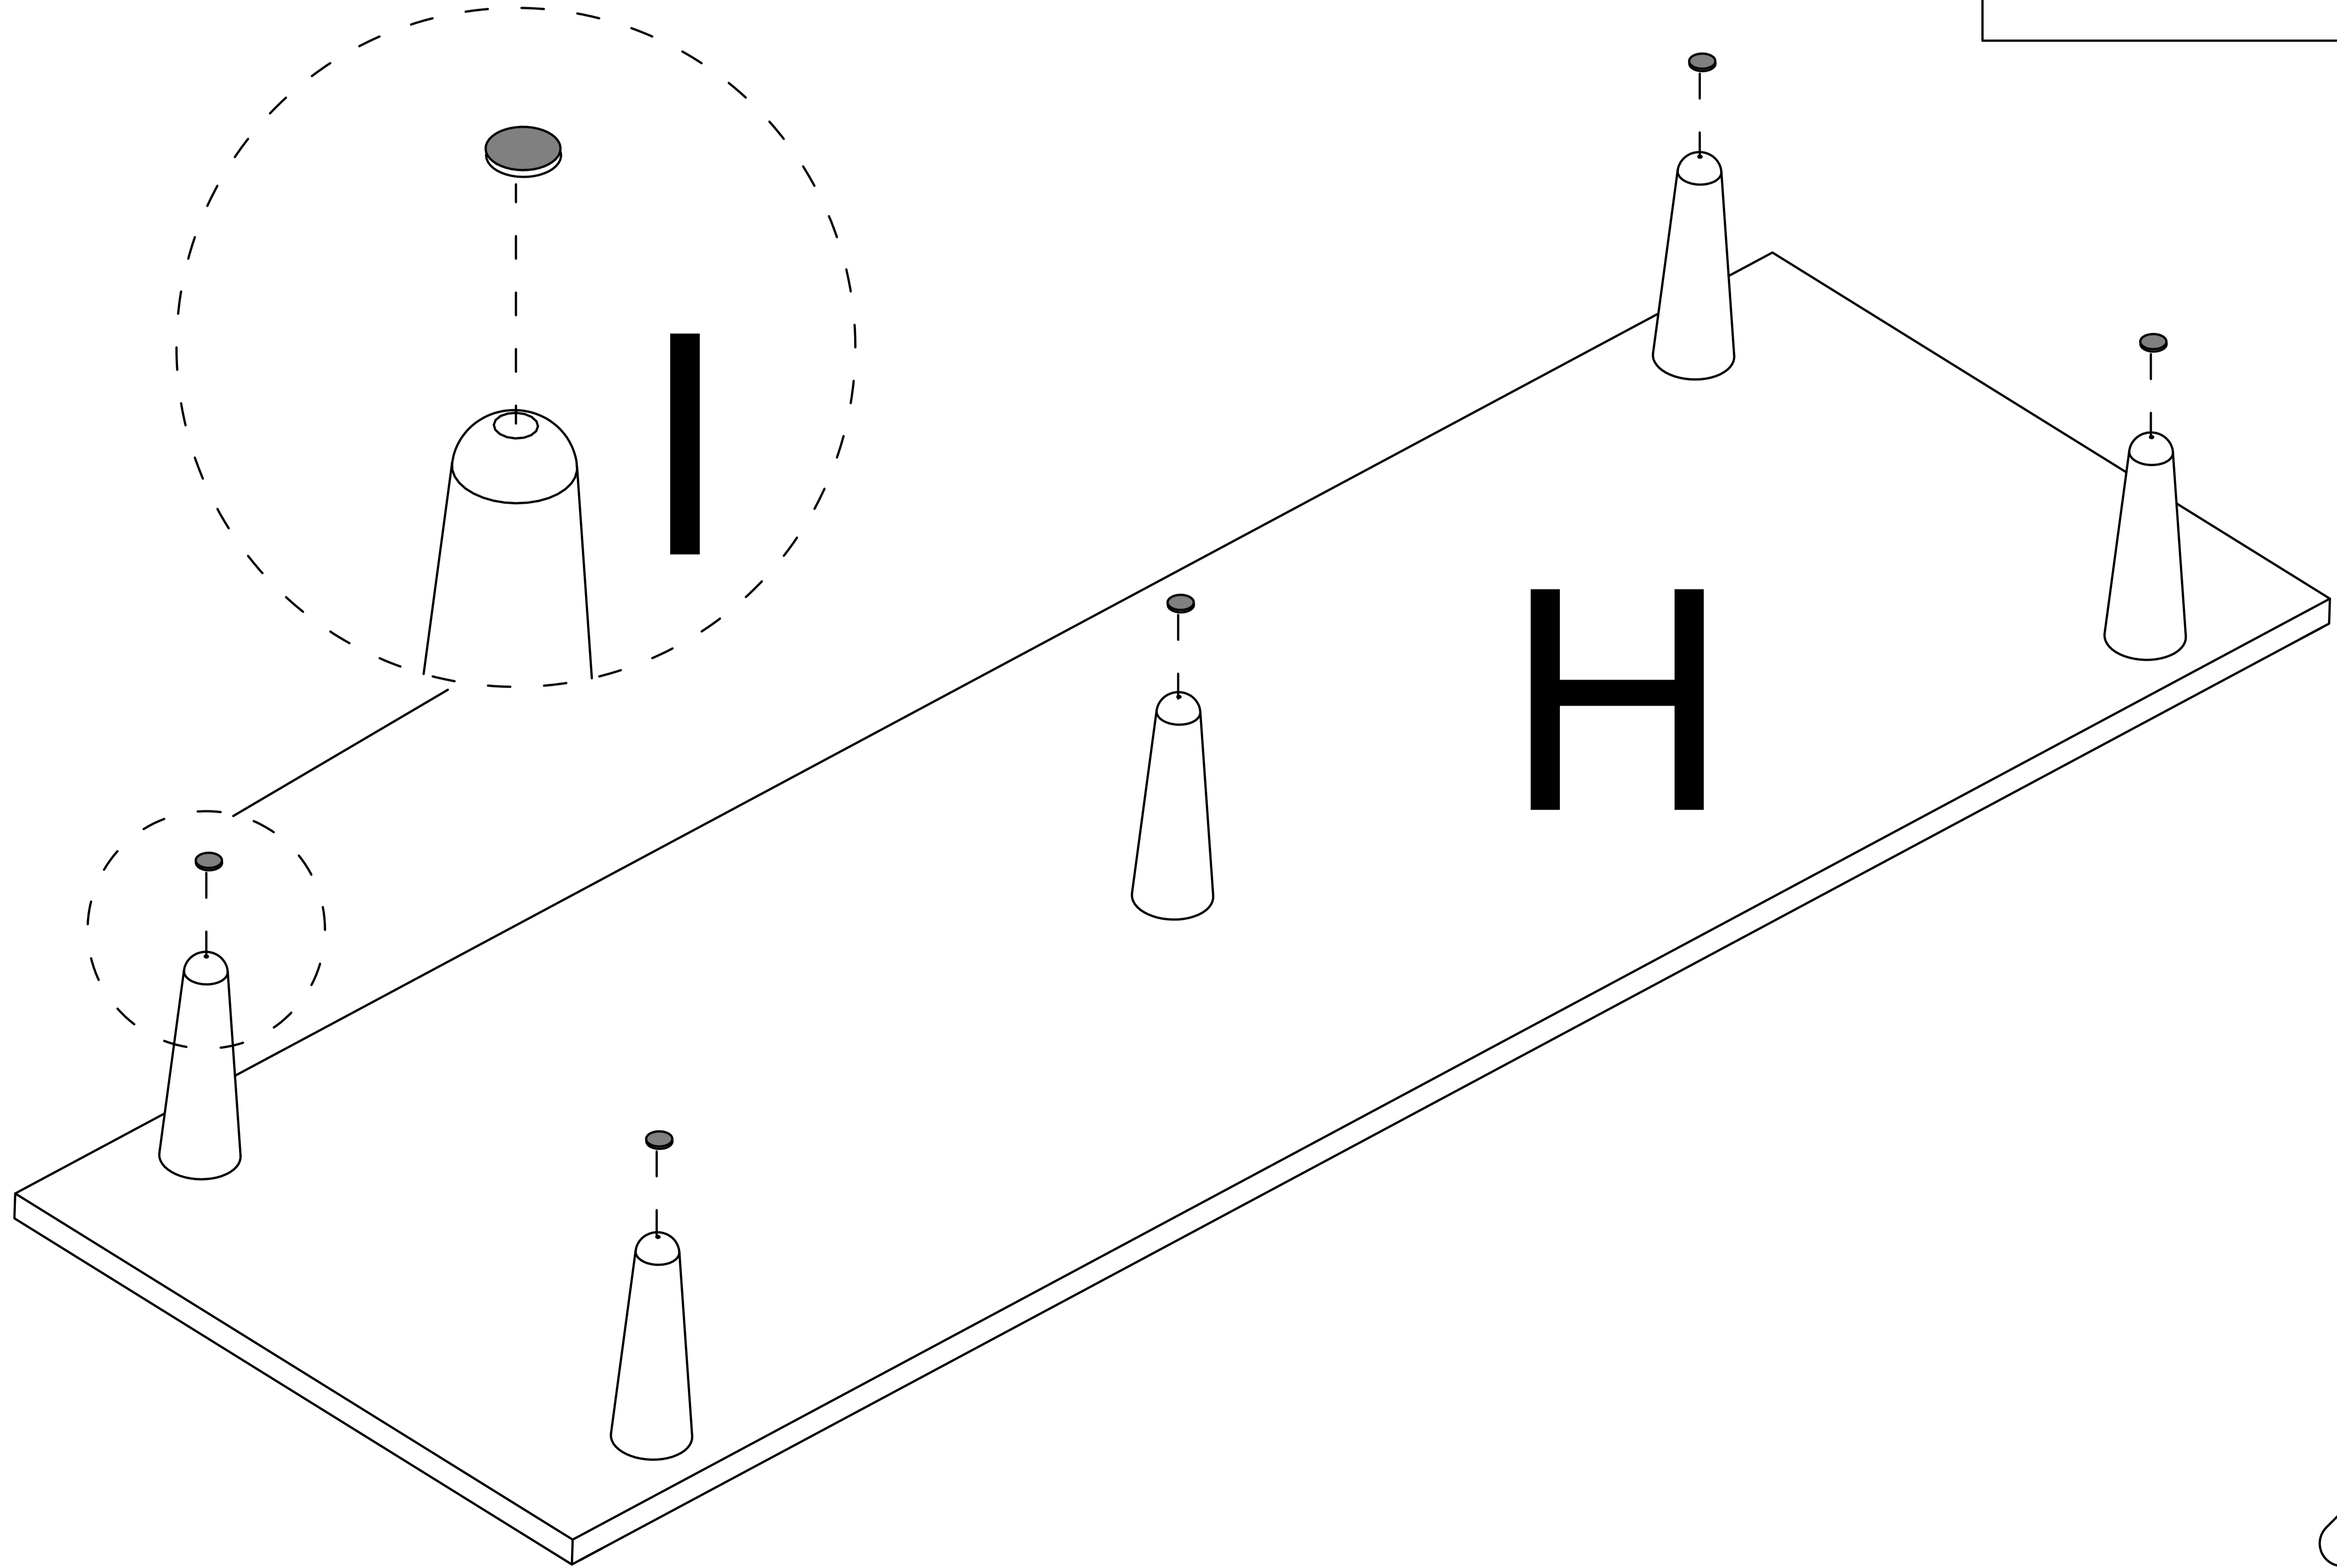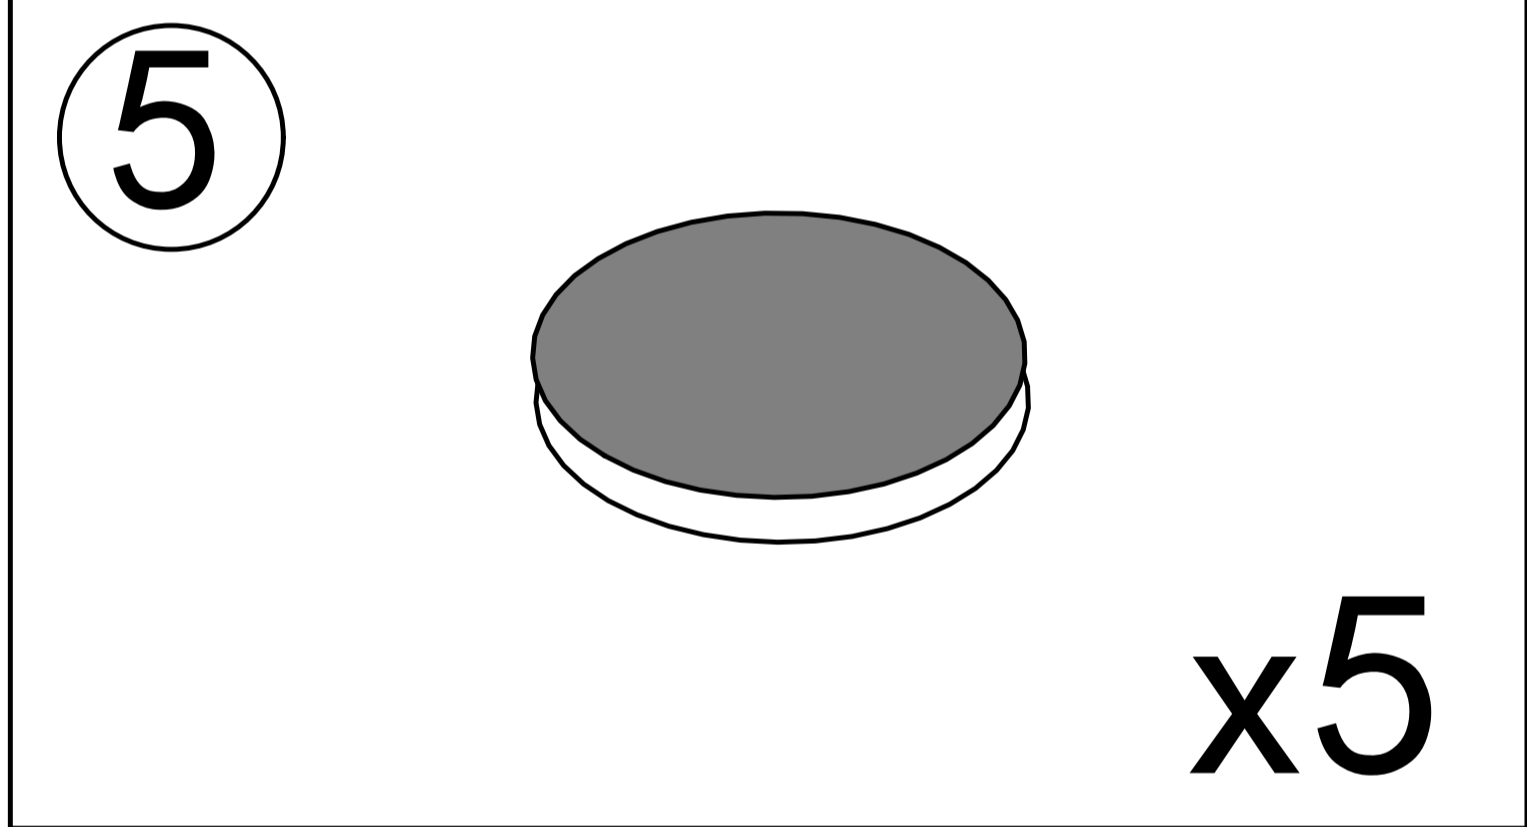


Step 11

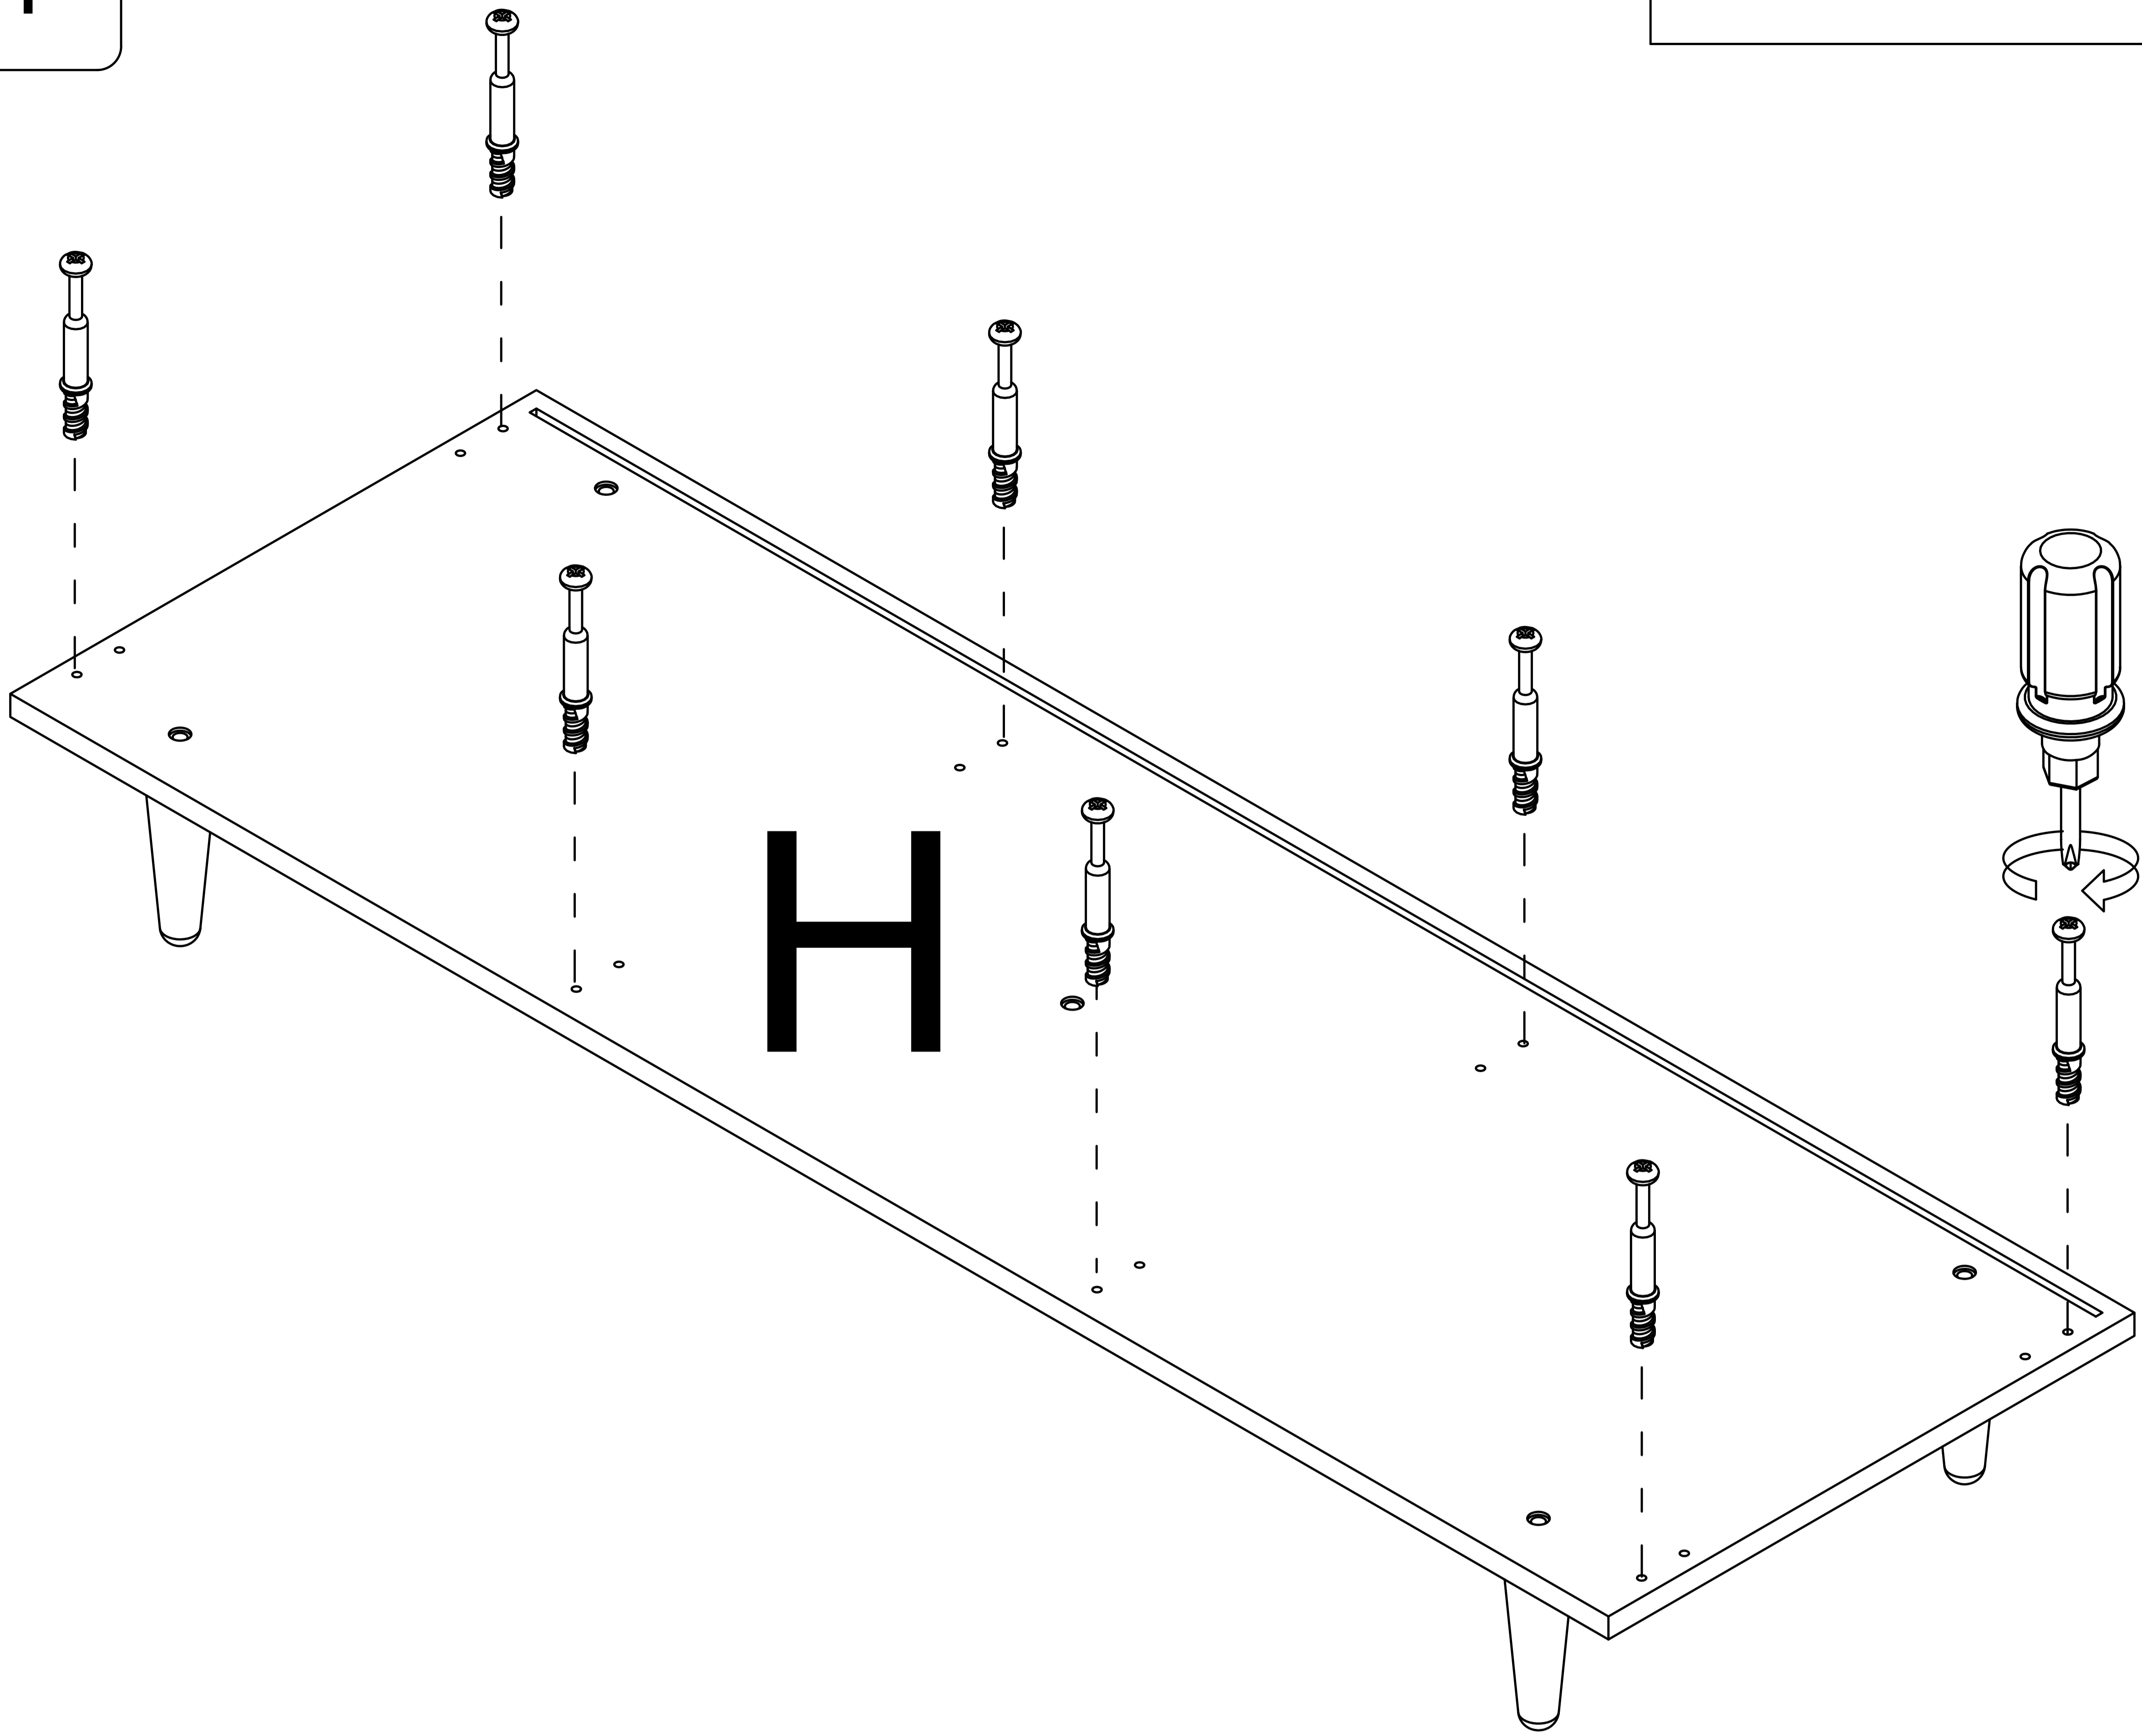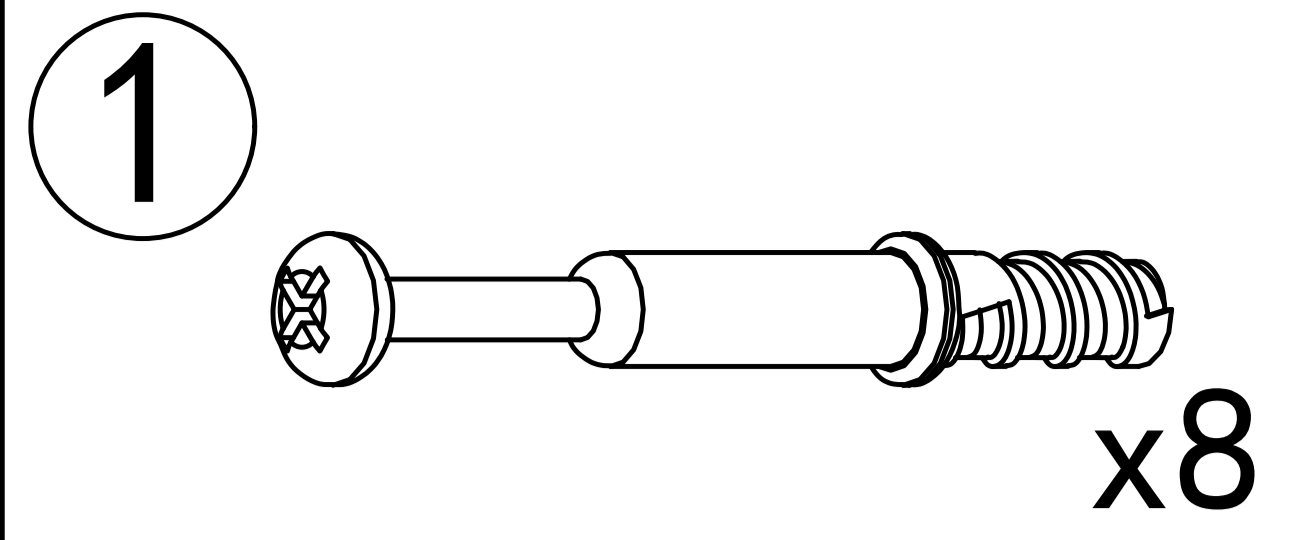



Step 12

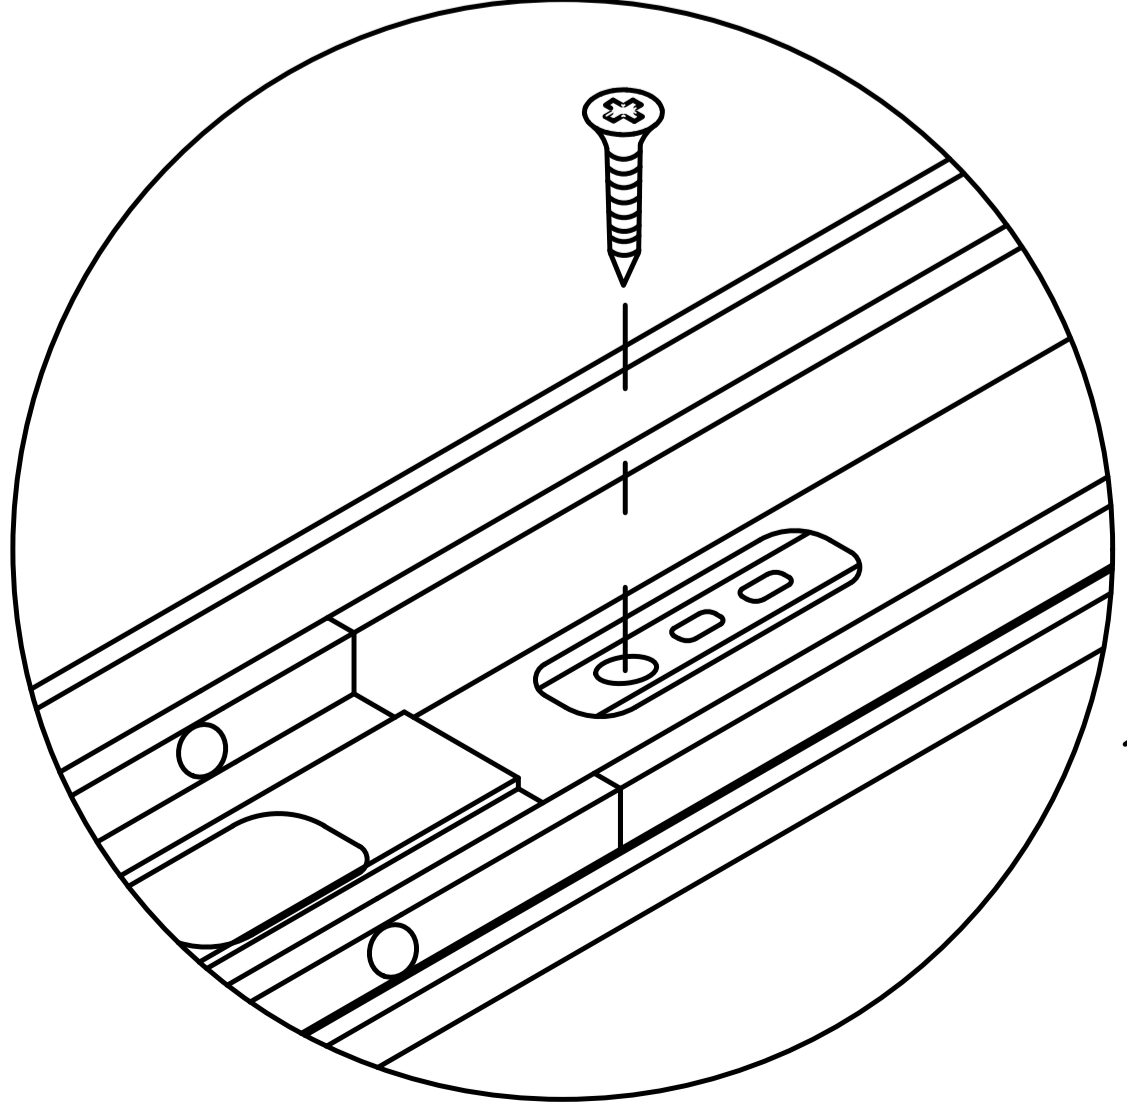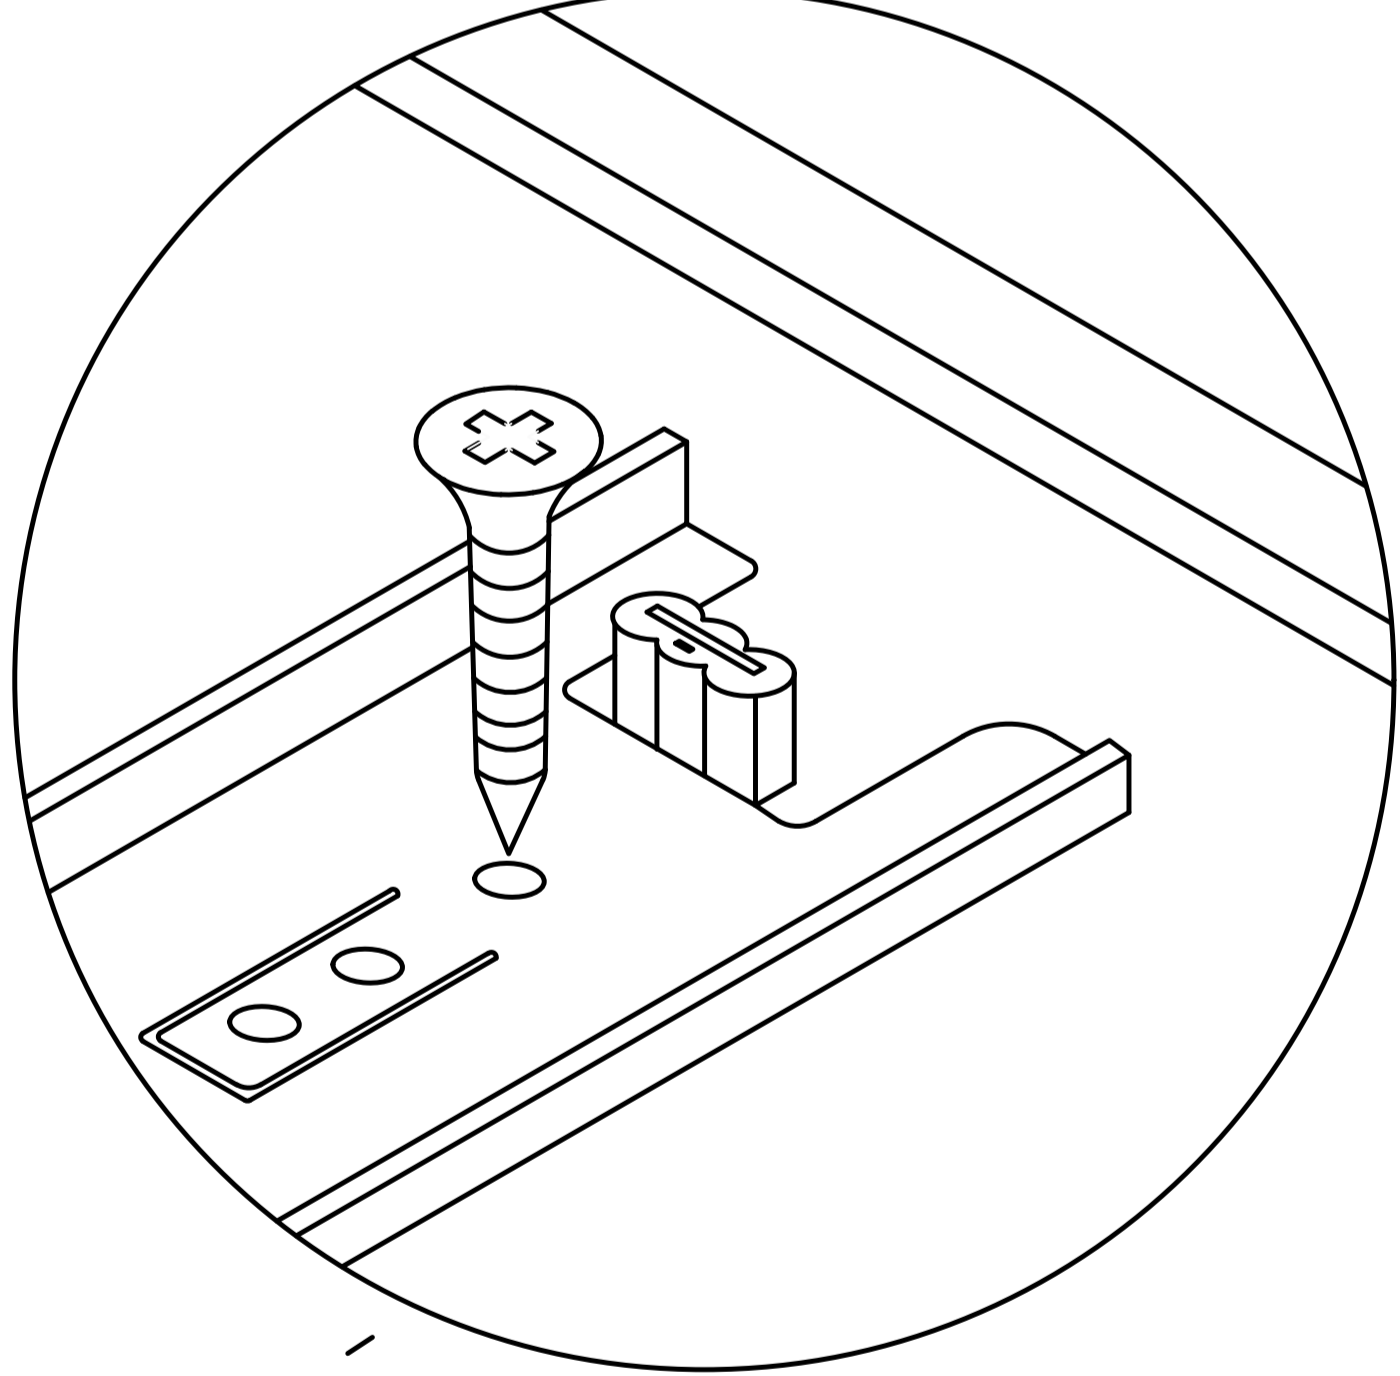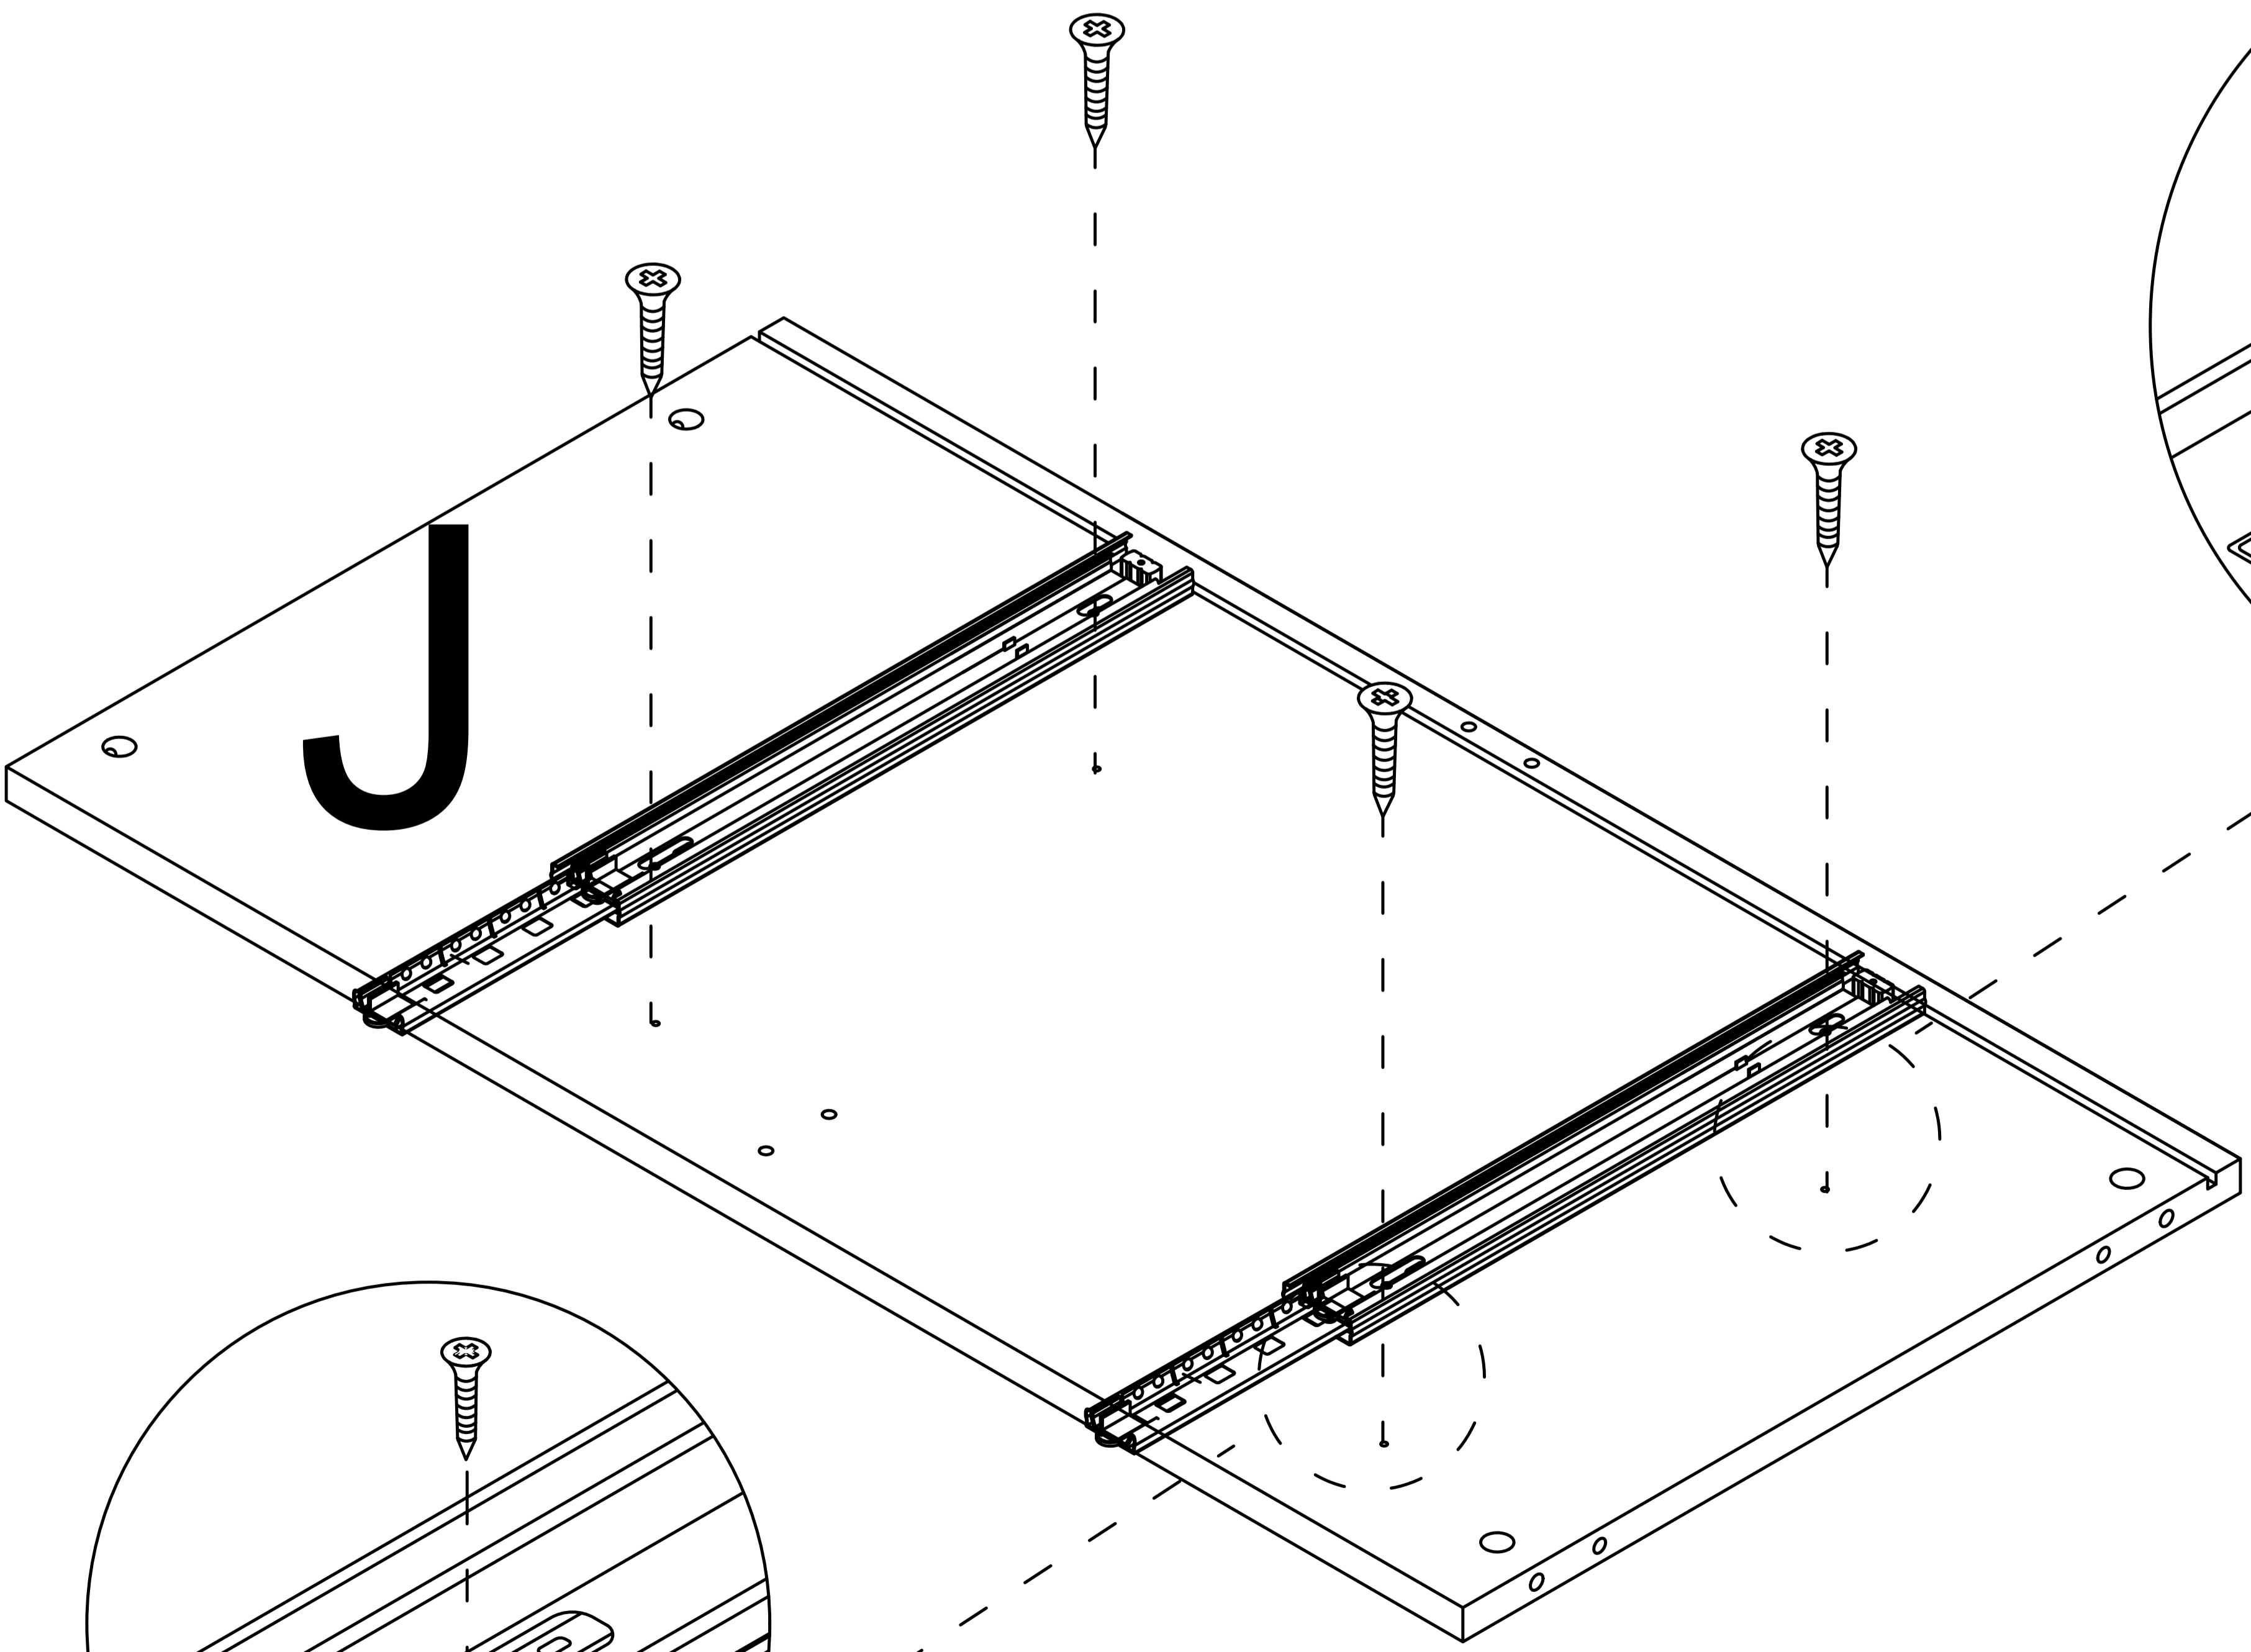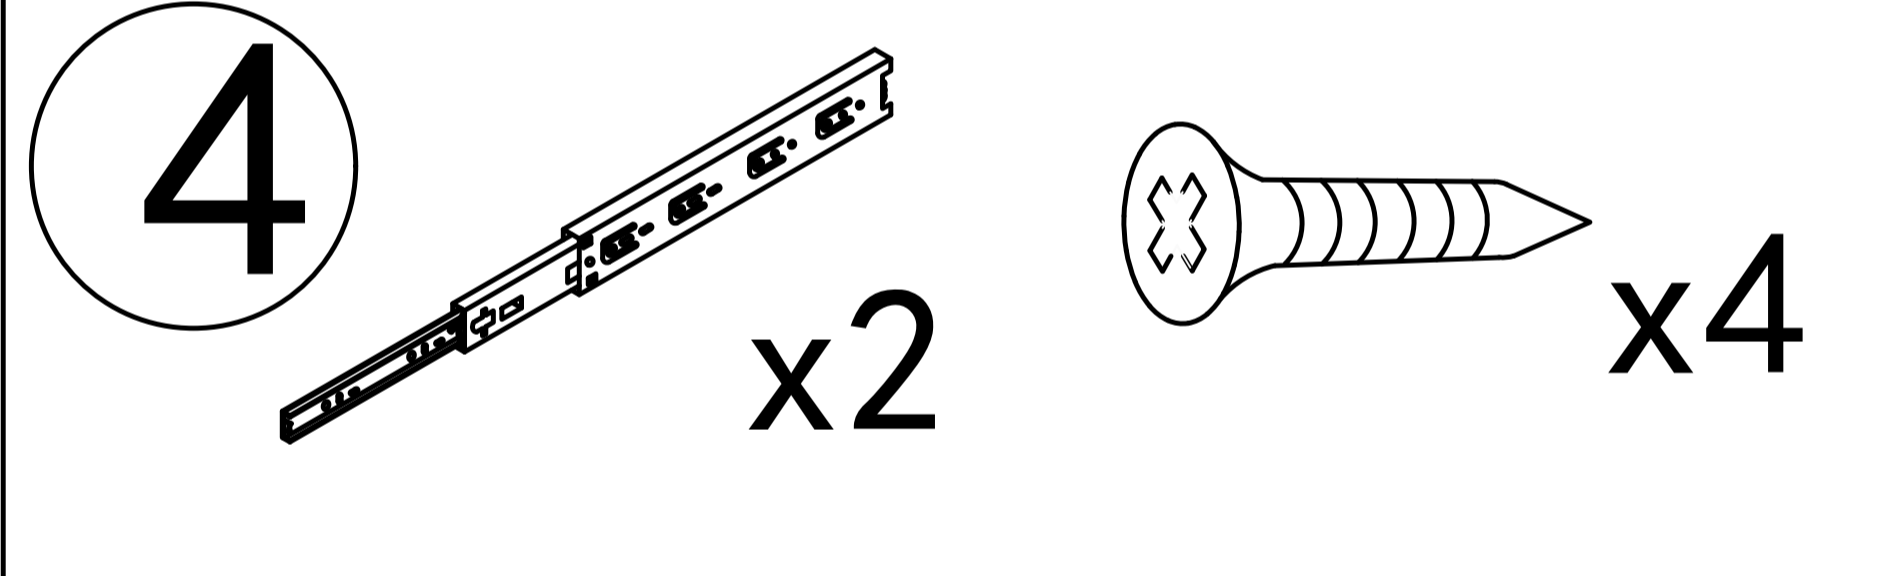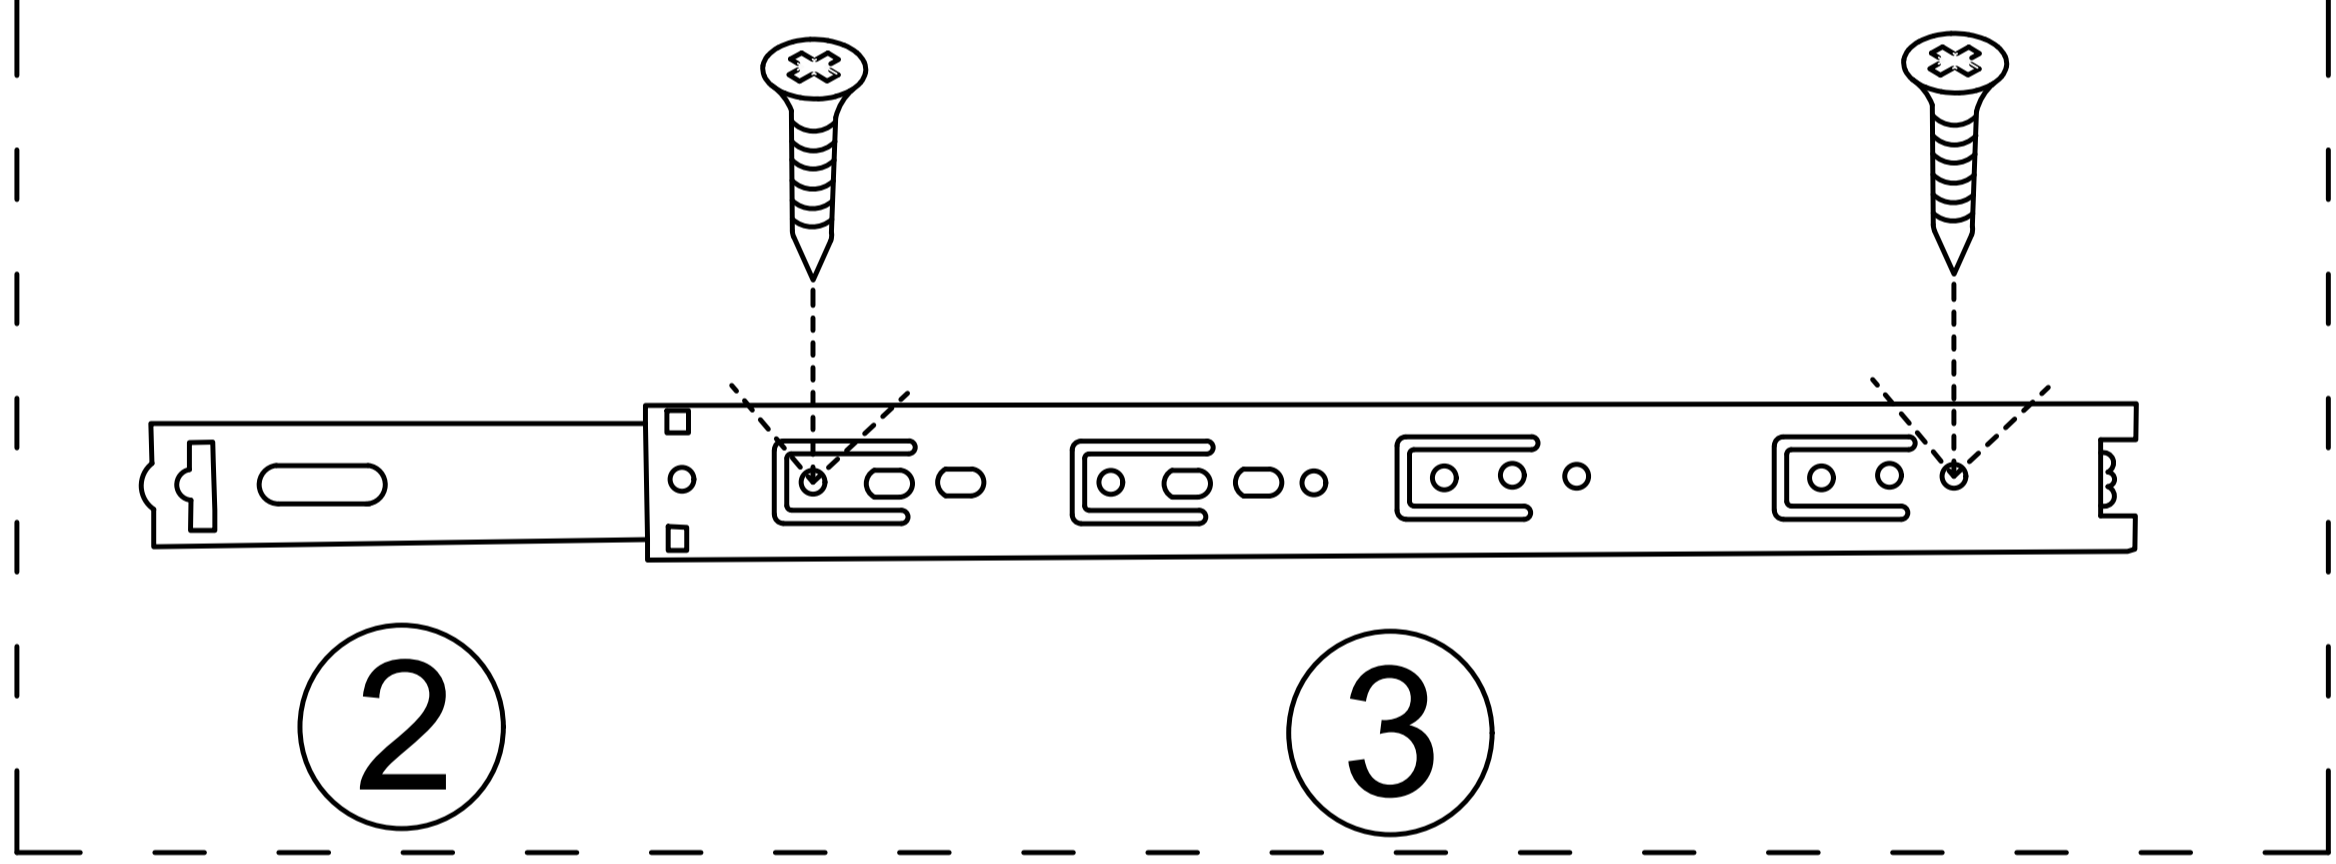

Step 13

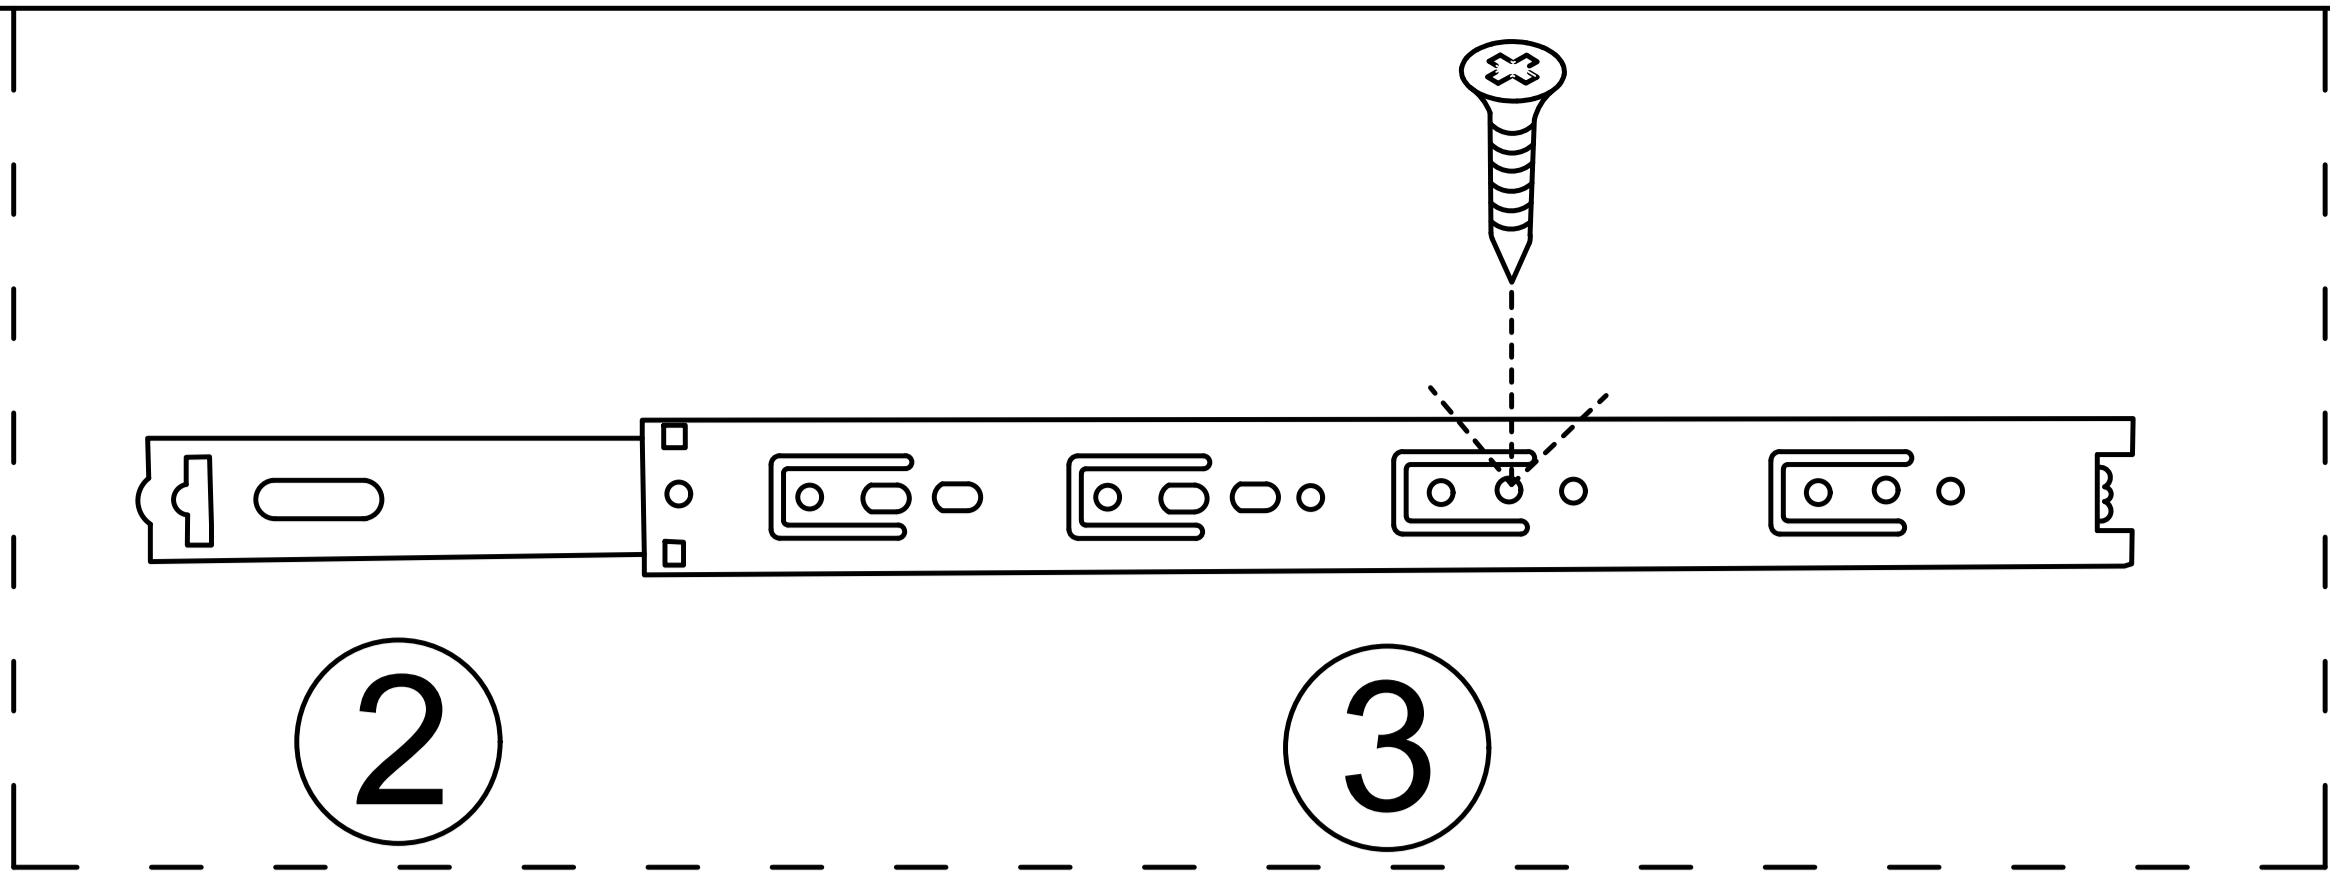



4

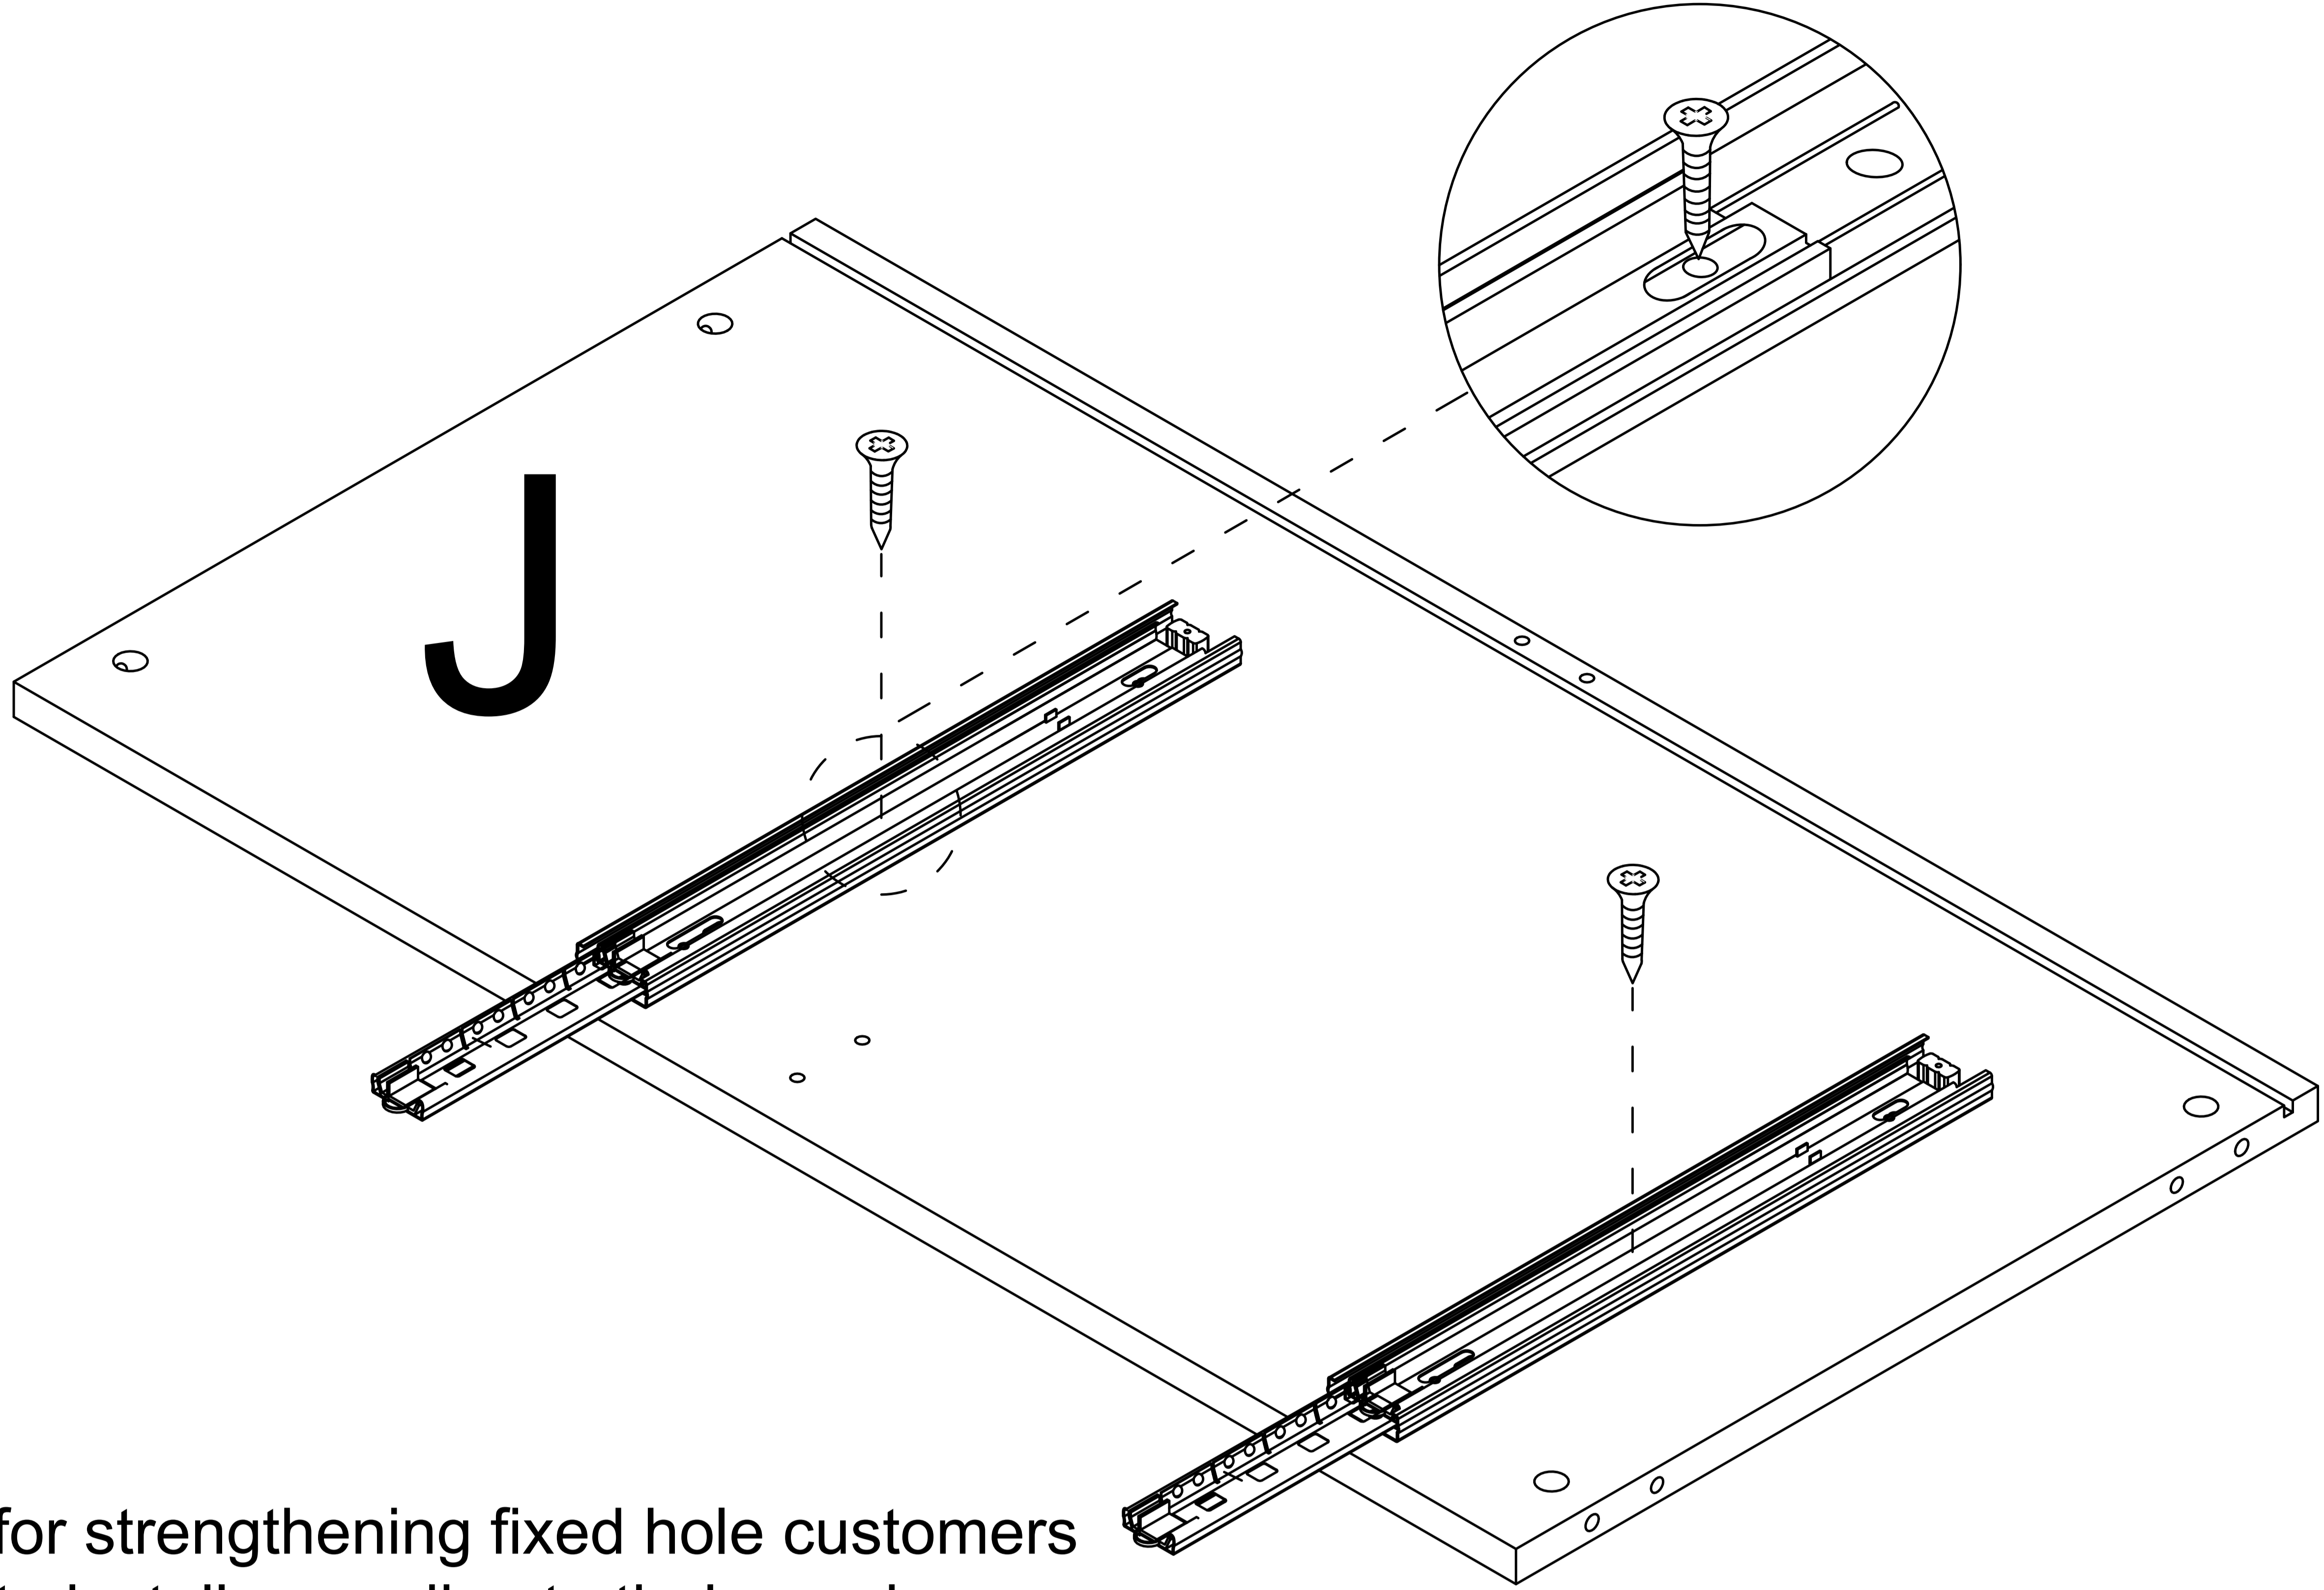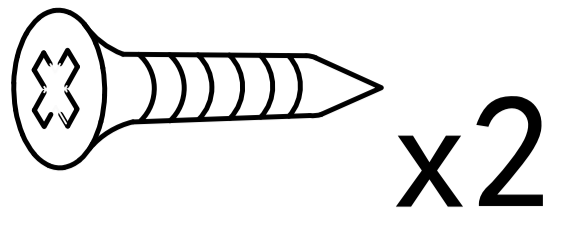


This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 14

1

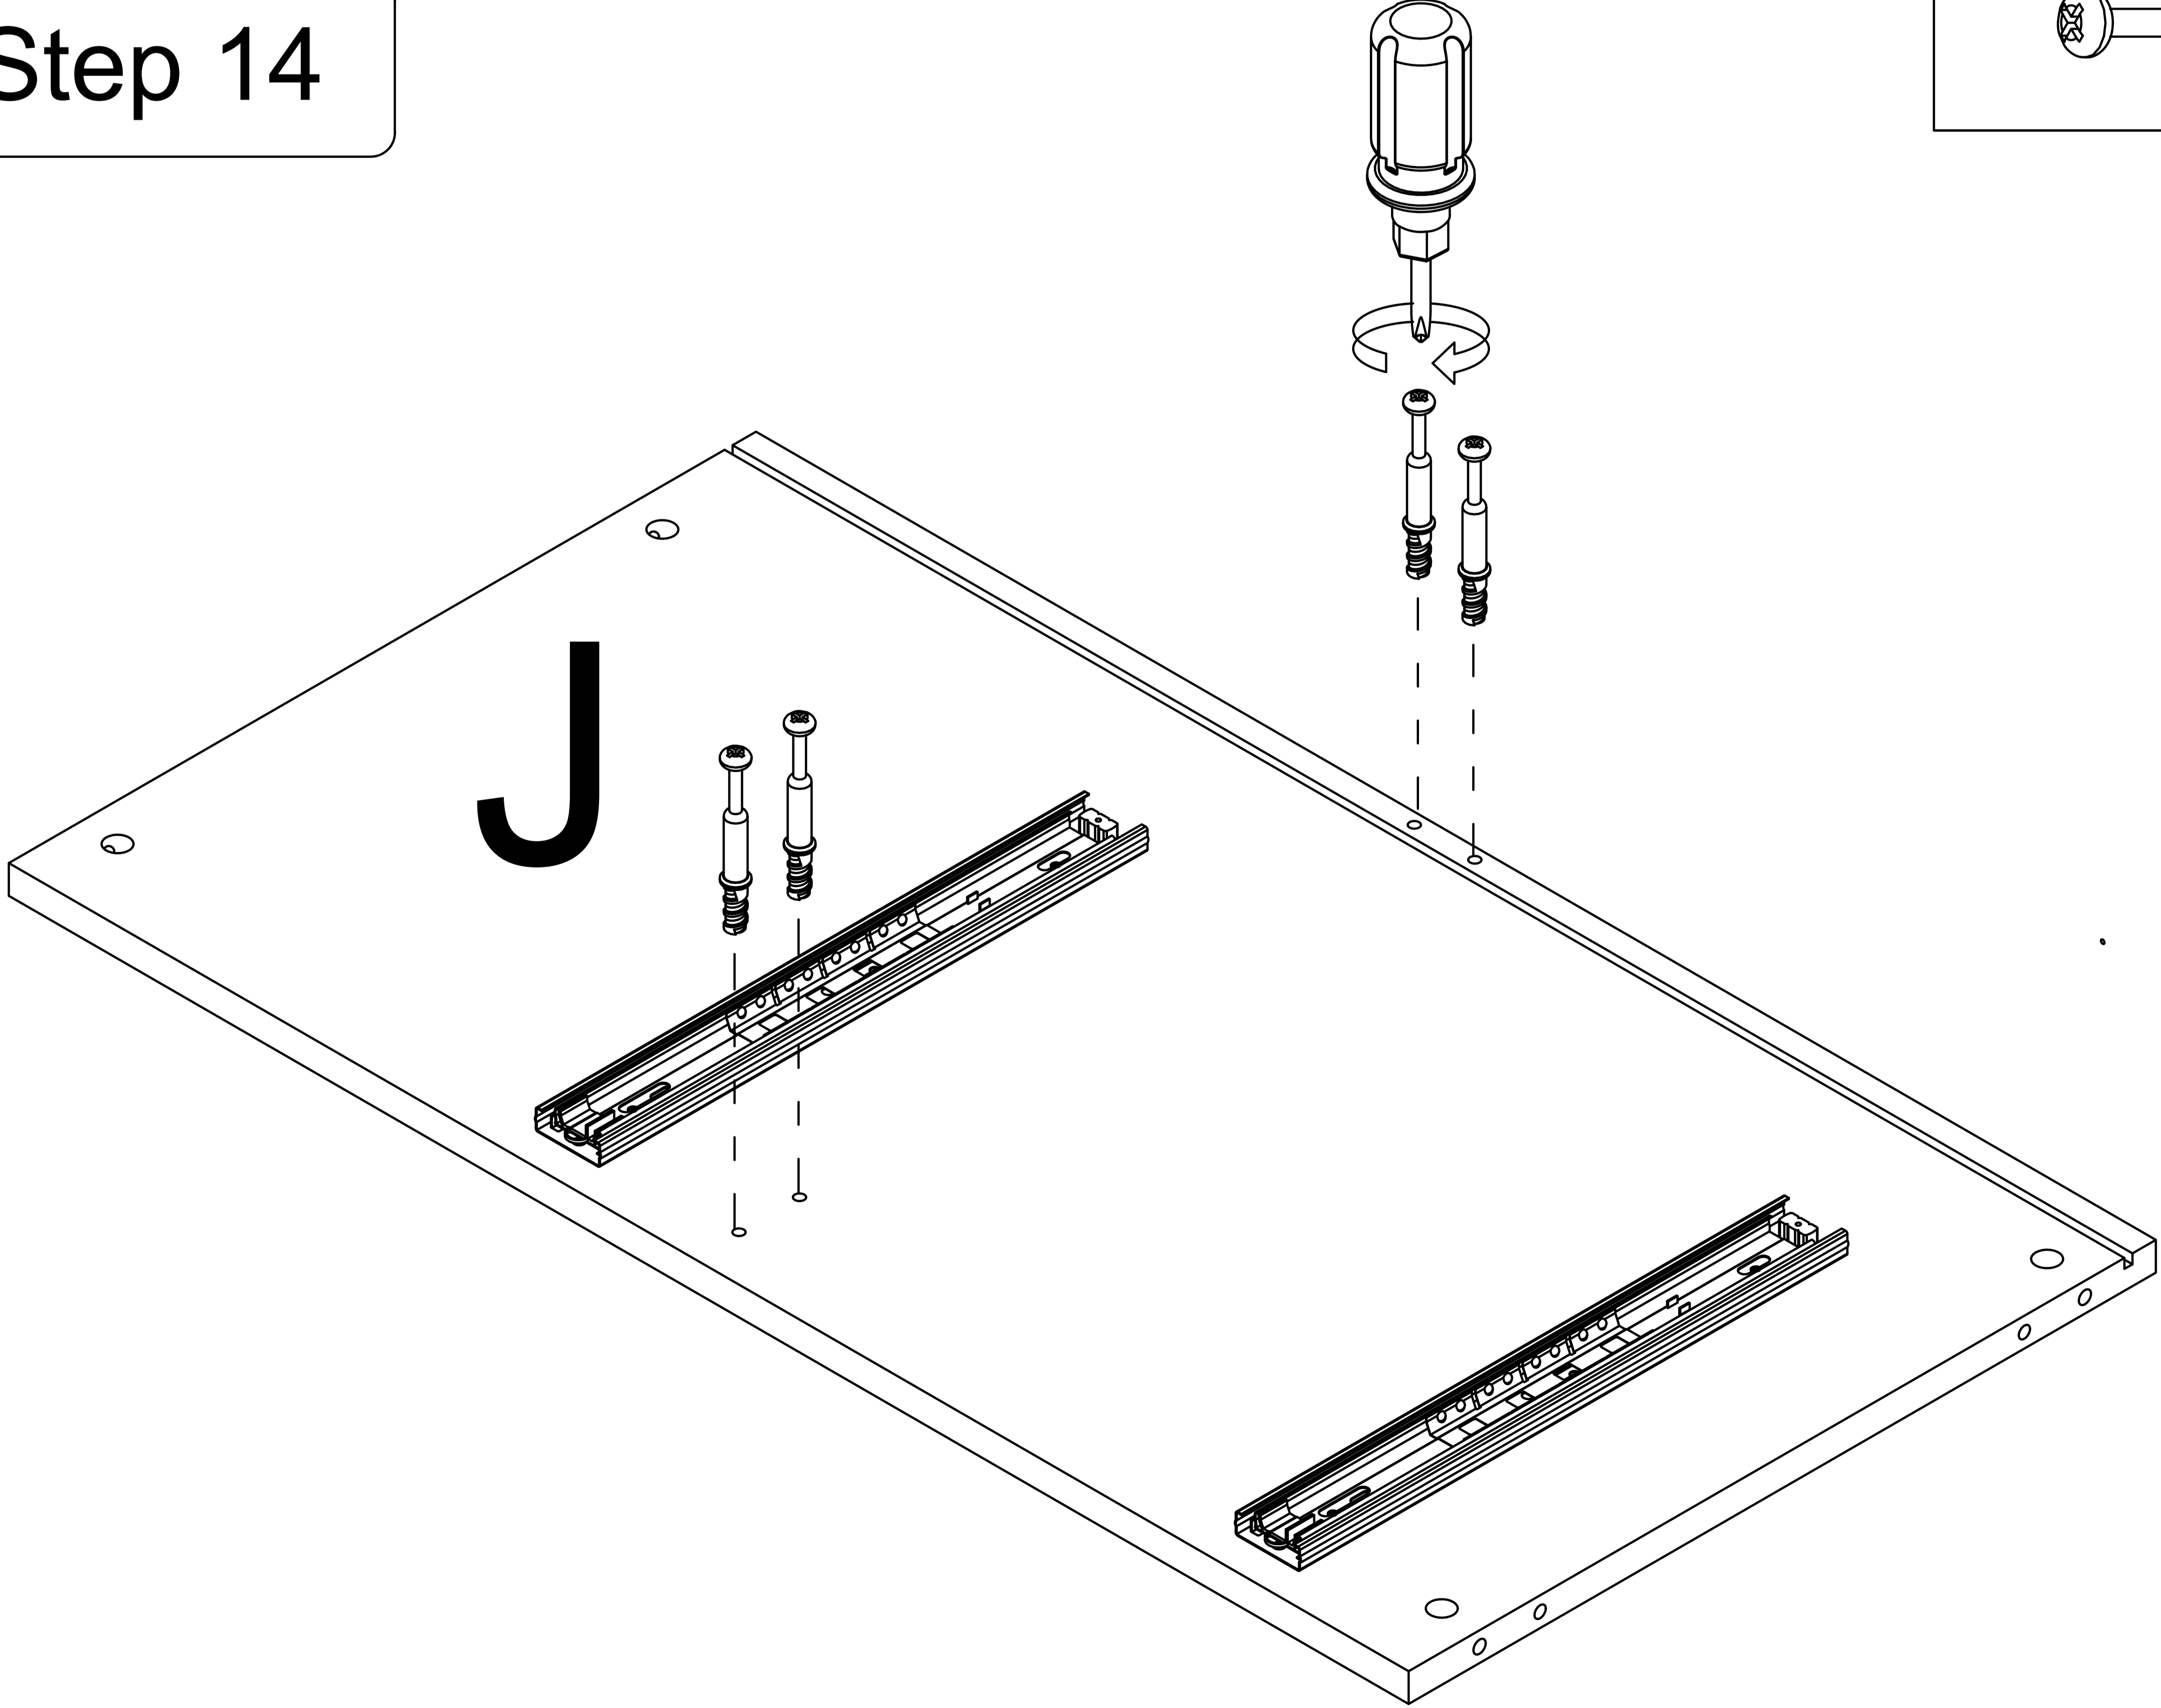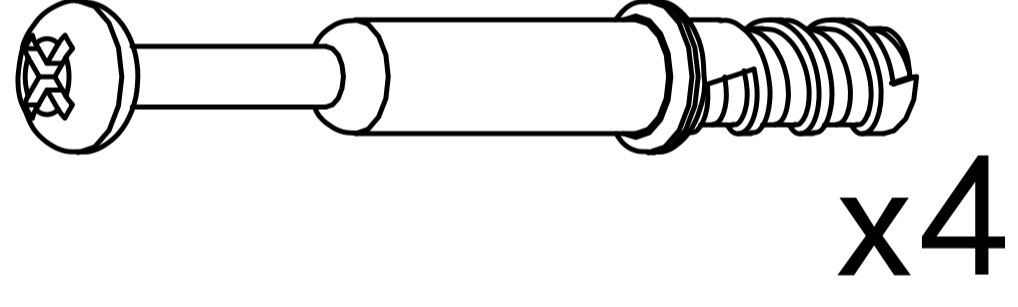



Step 15

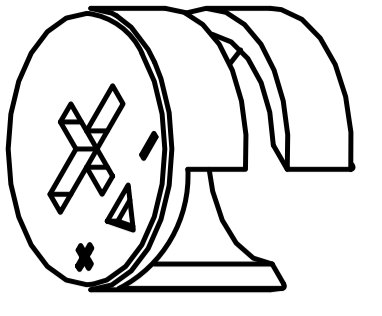
2  x2

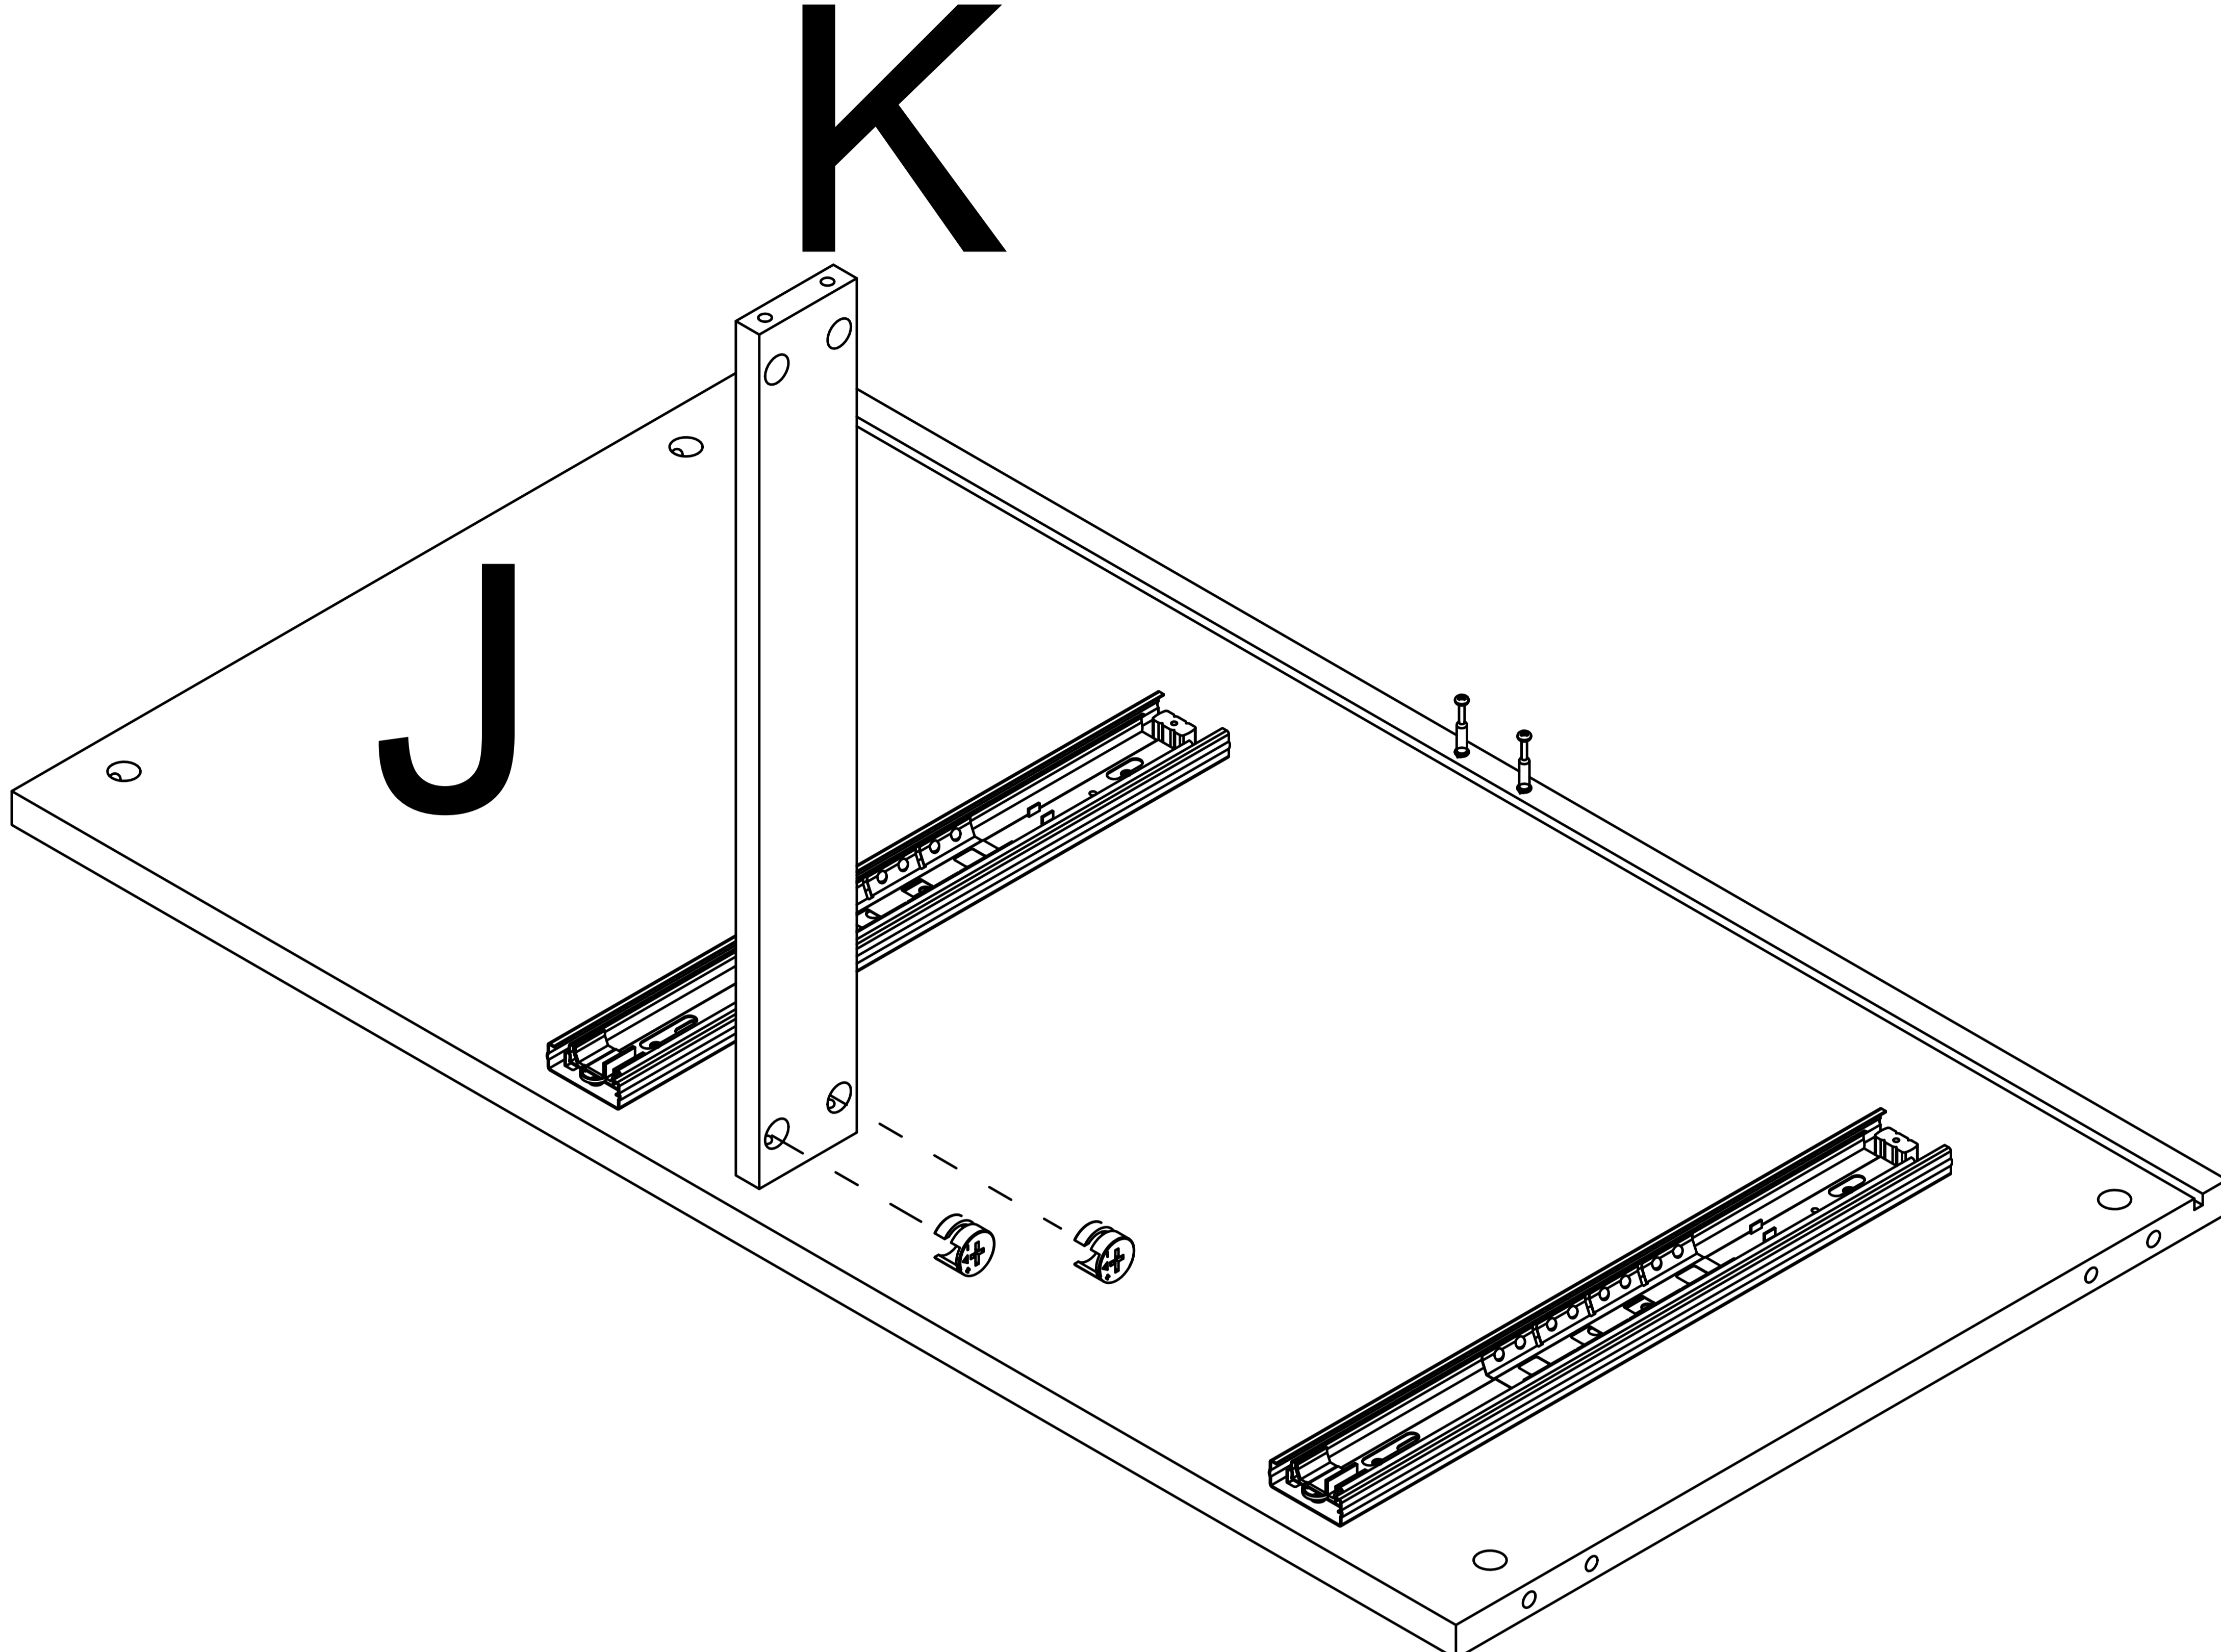



Step 16

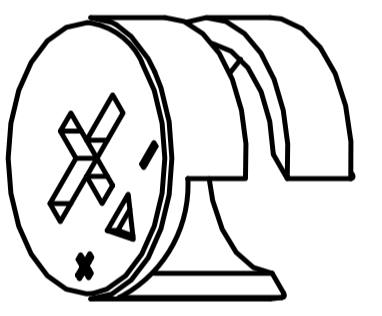2  x2


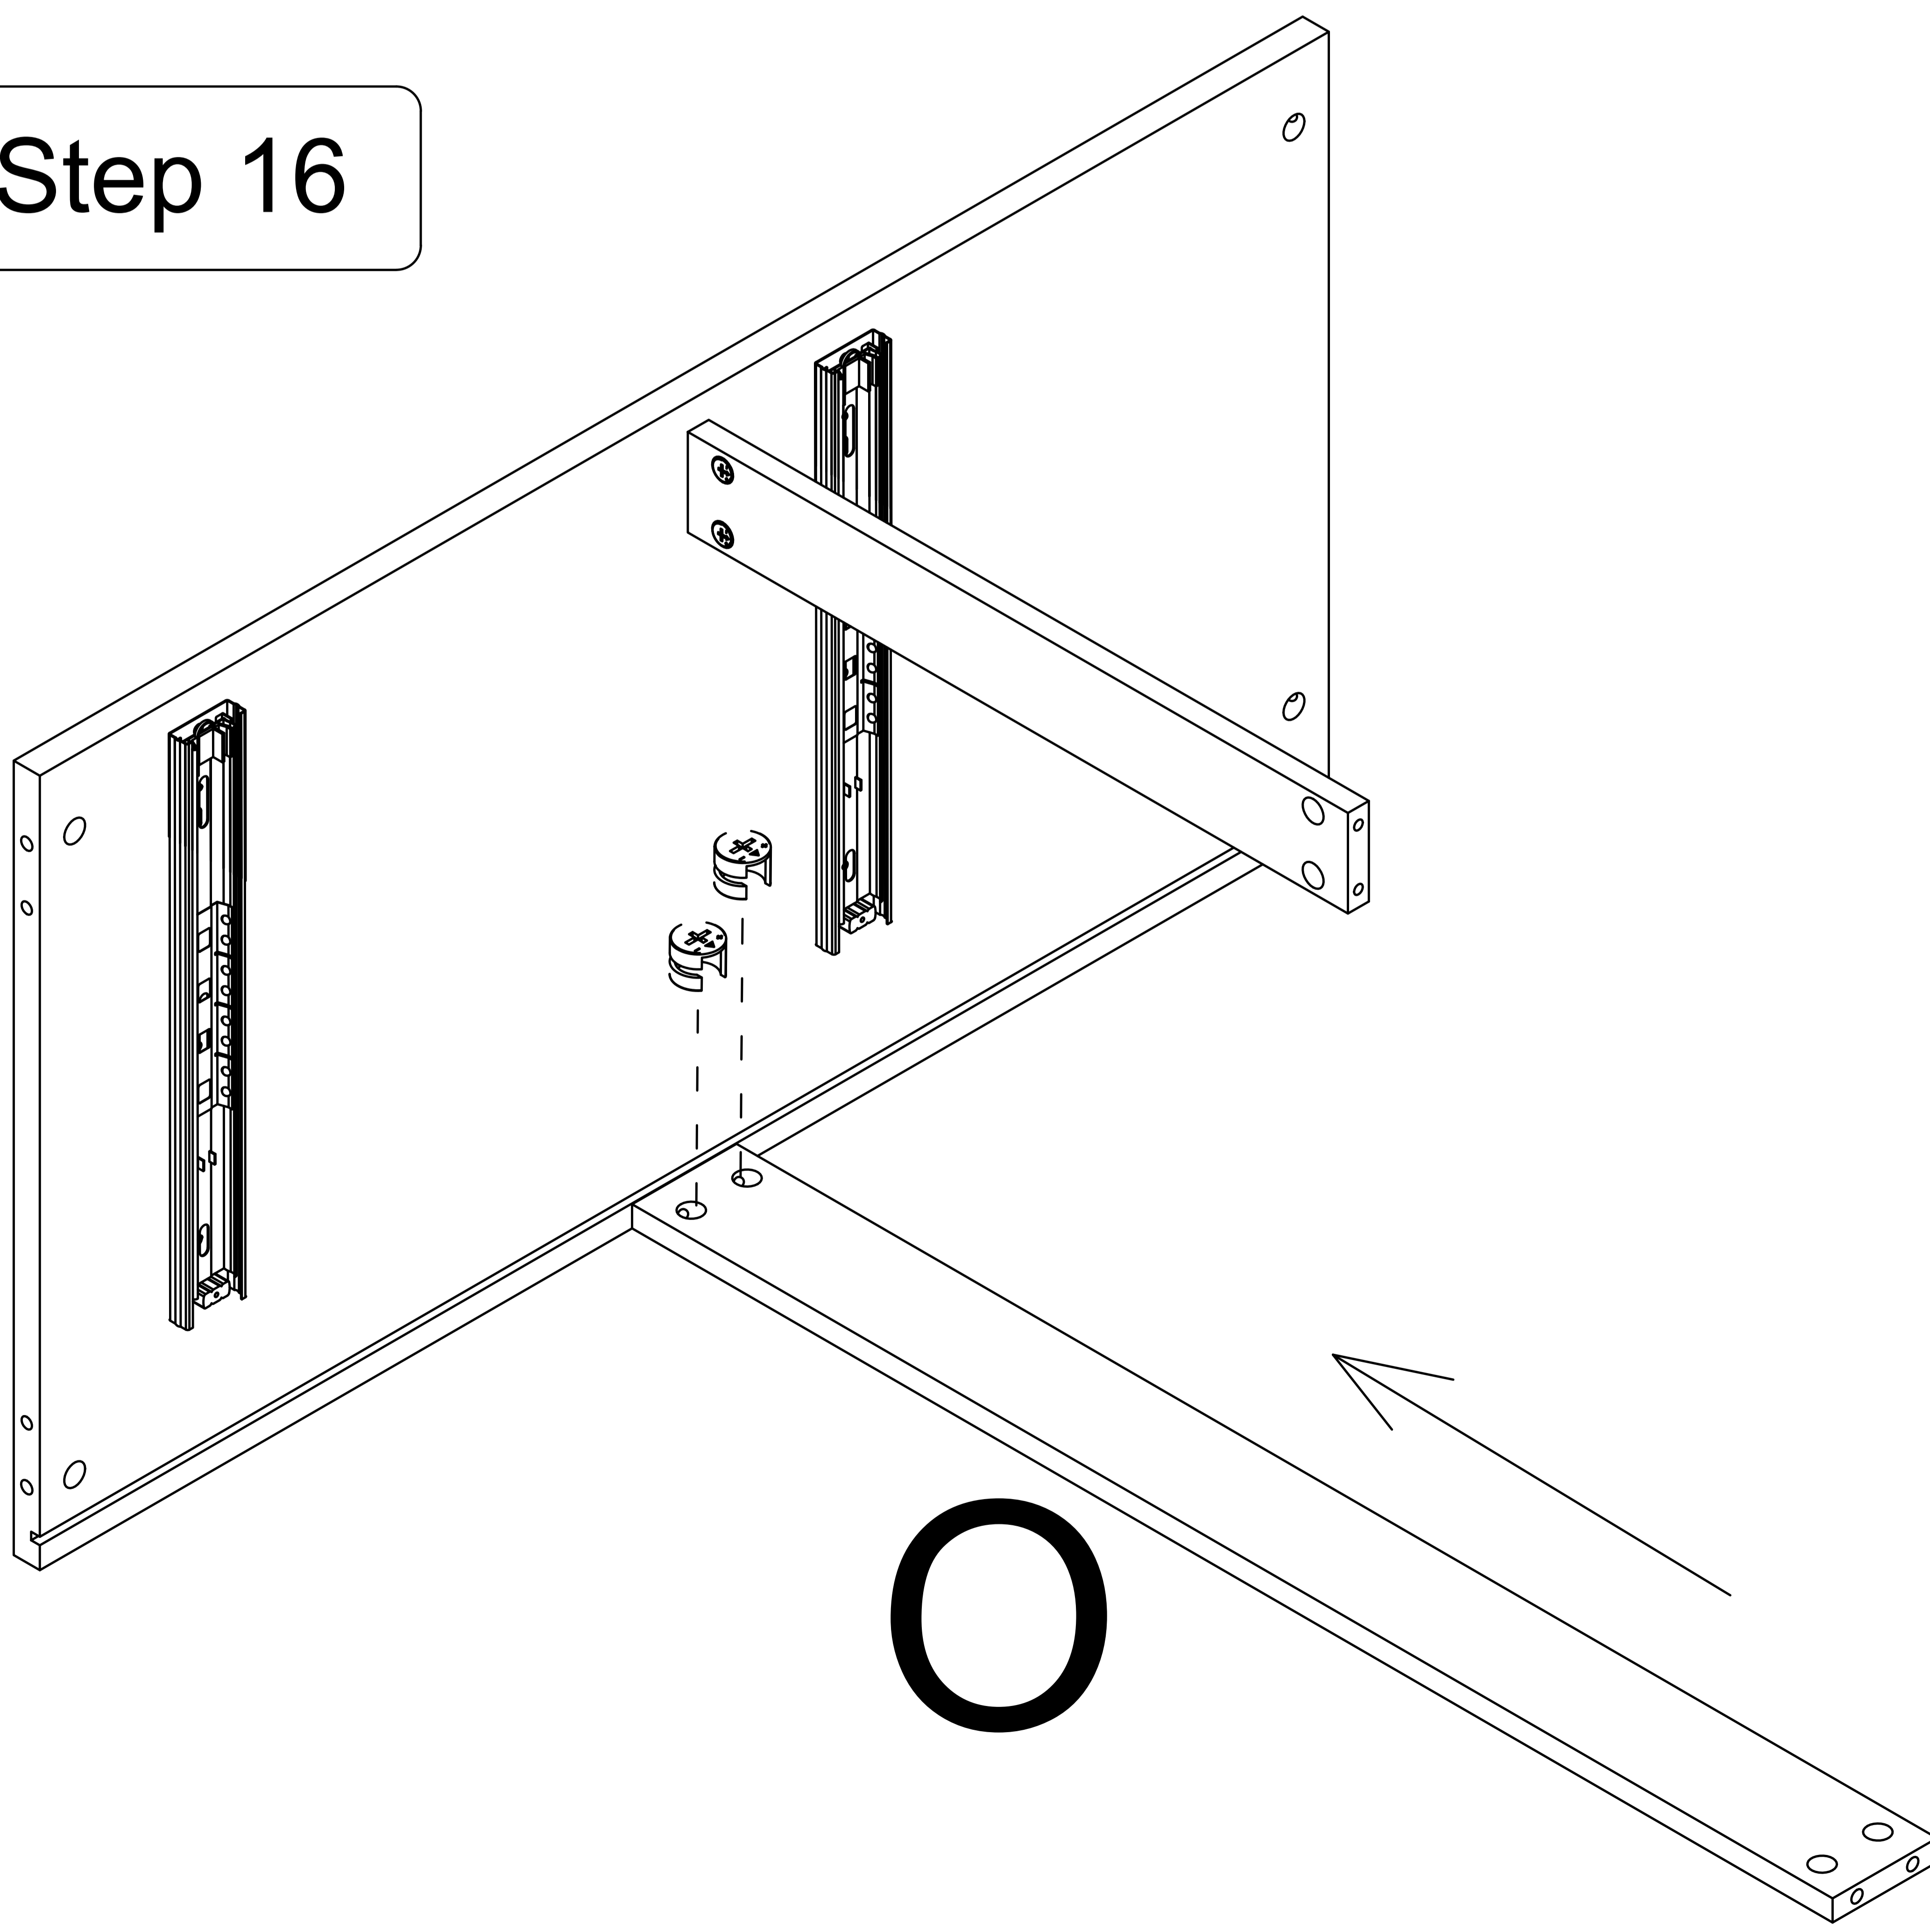


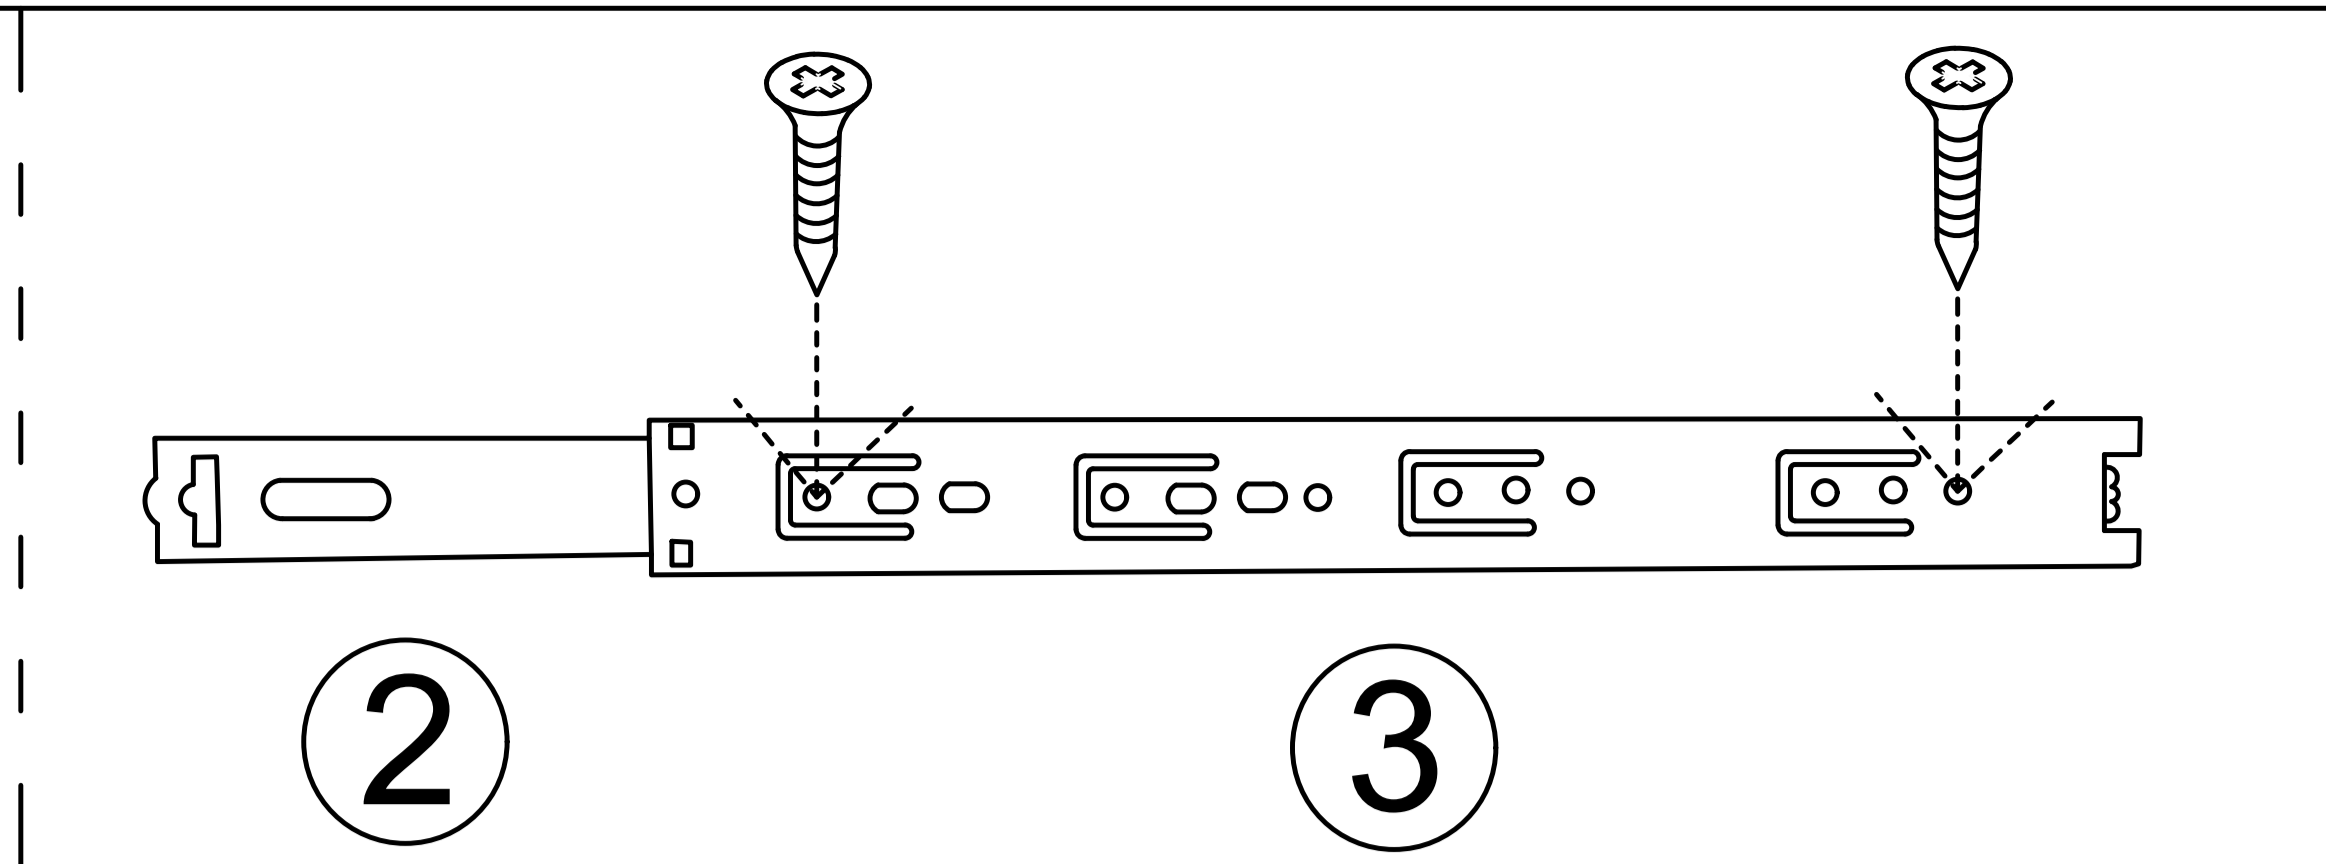


4

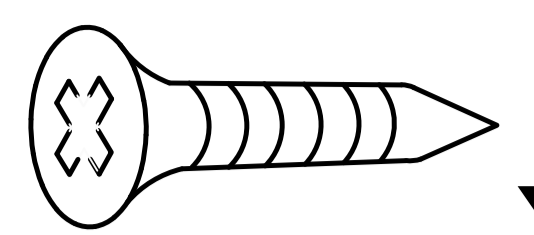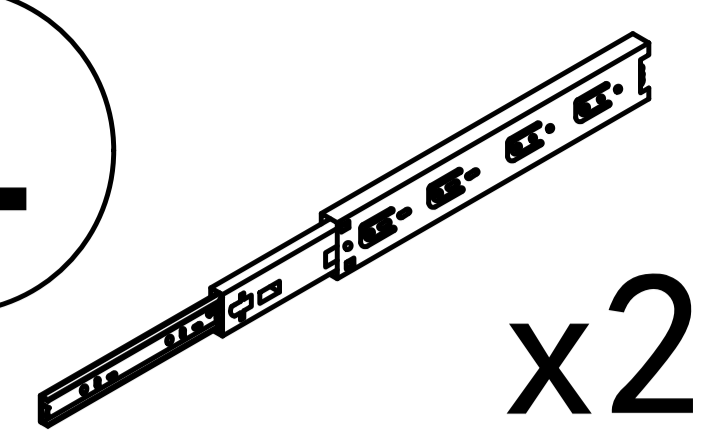


x4

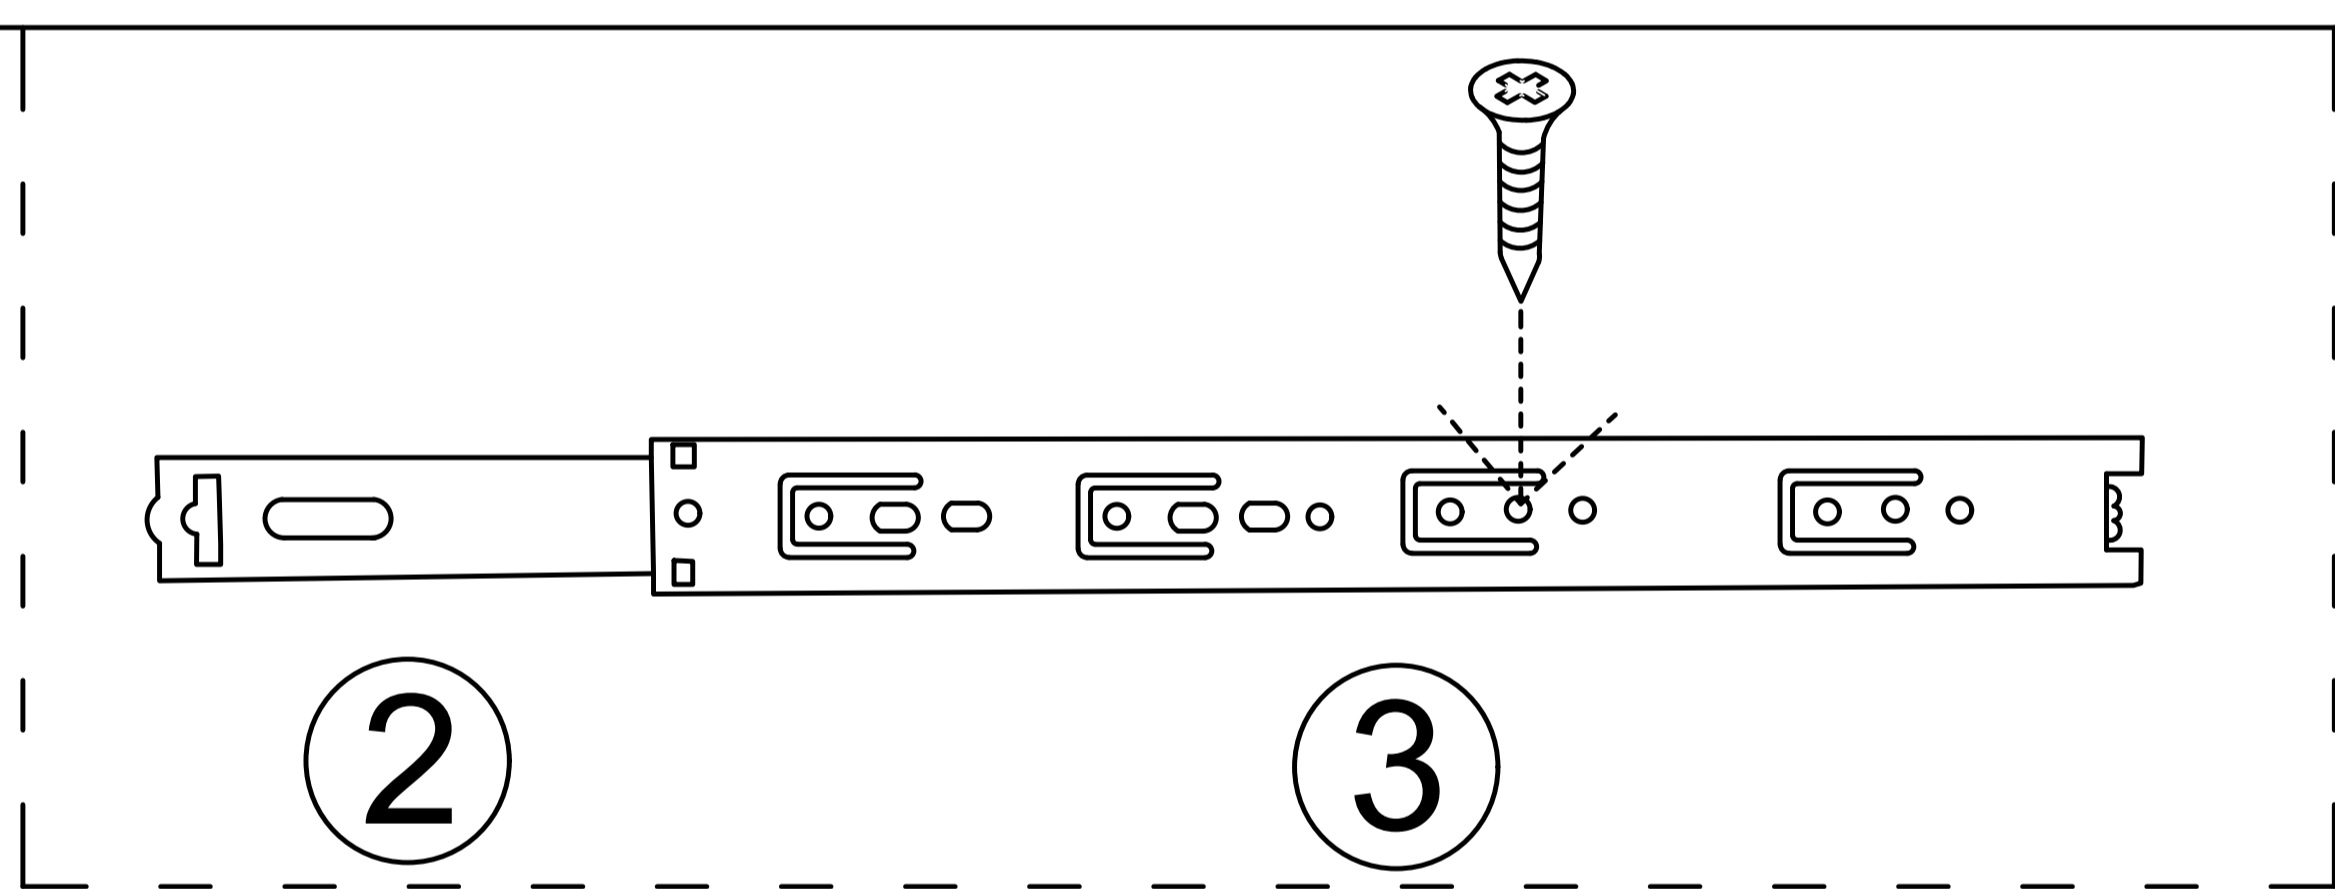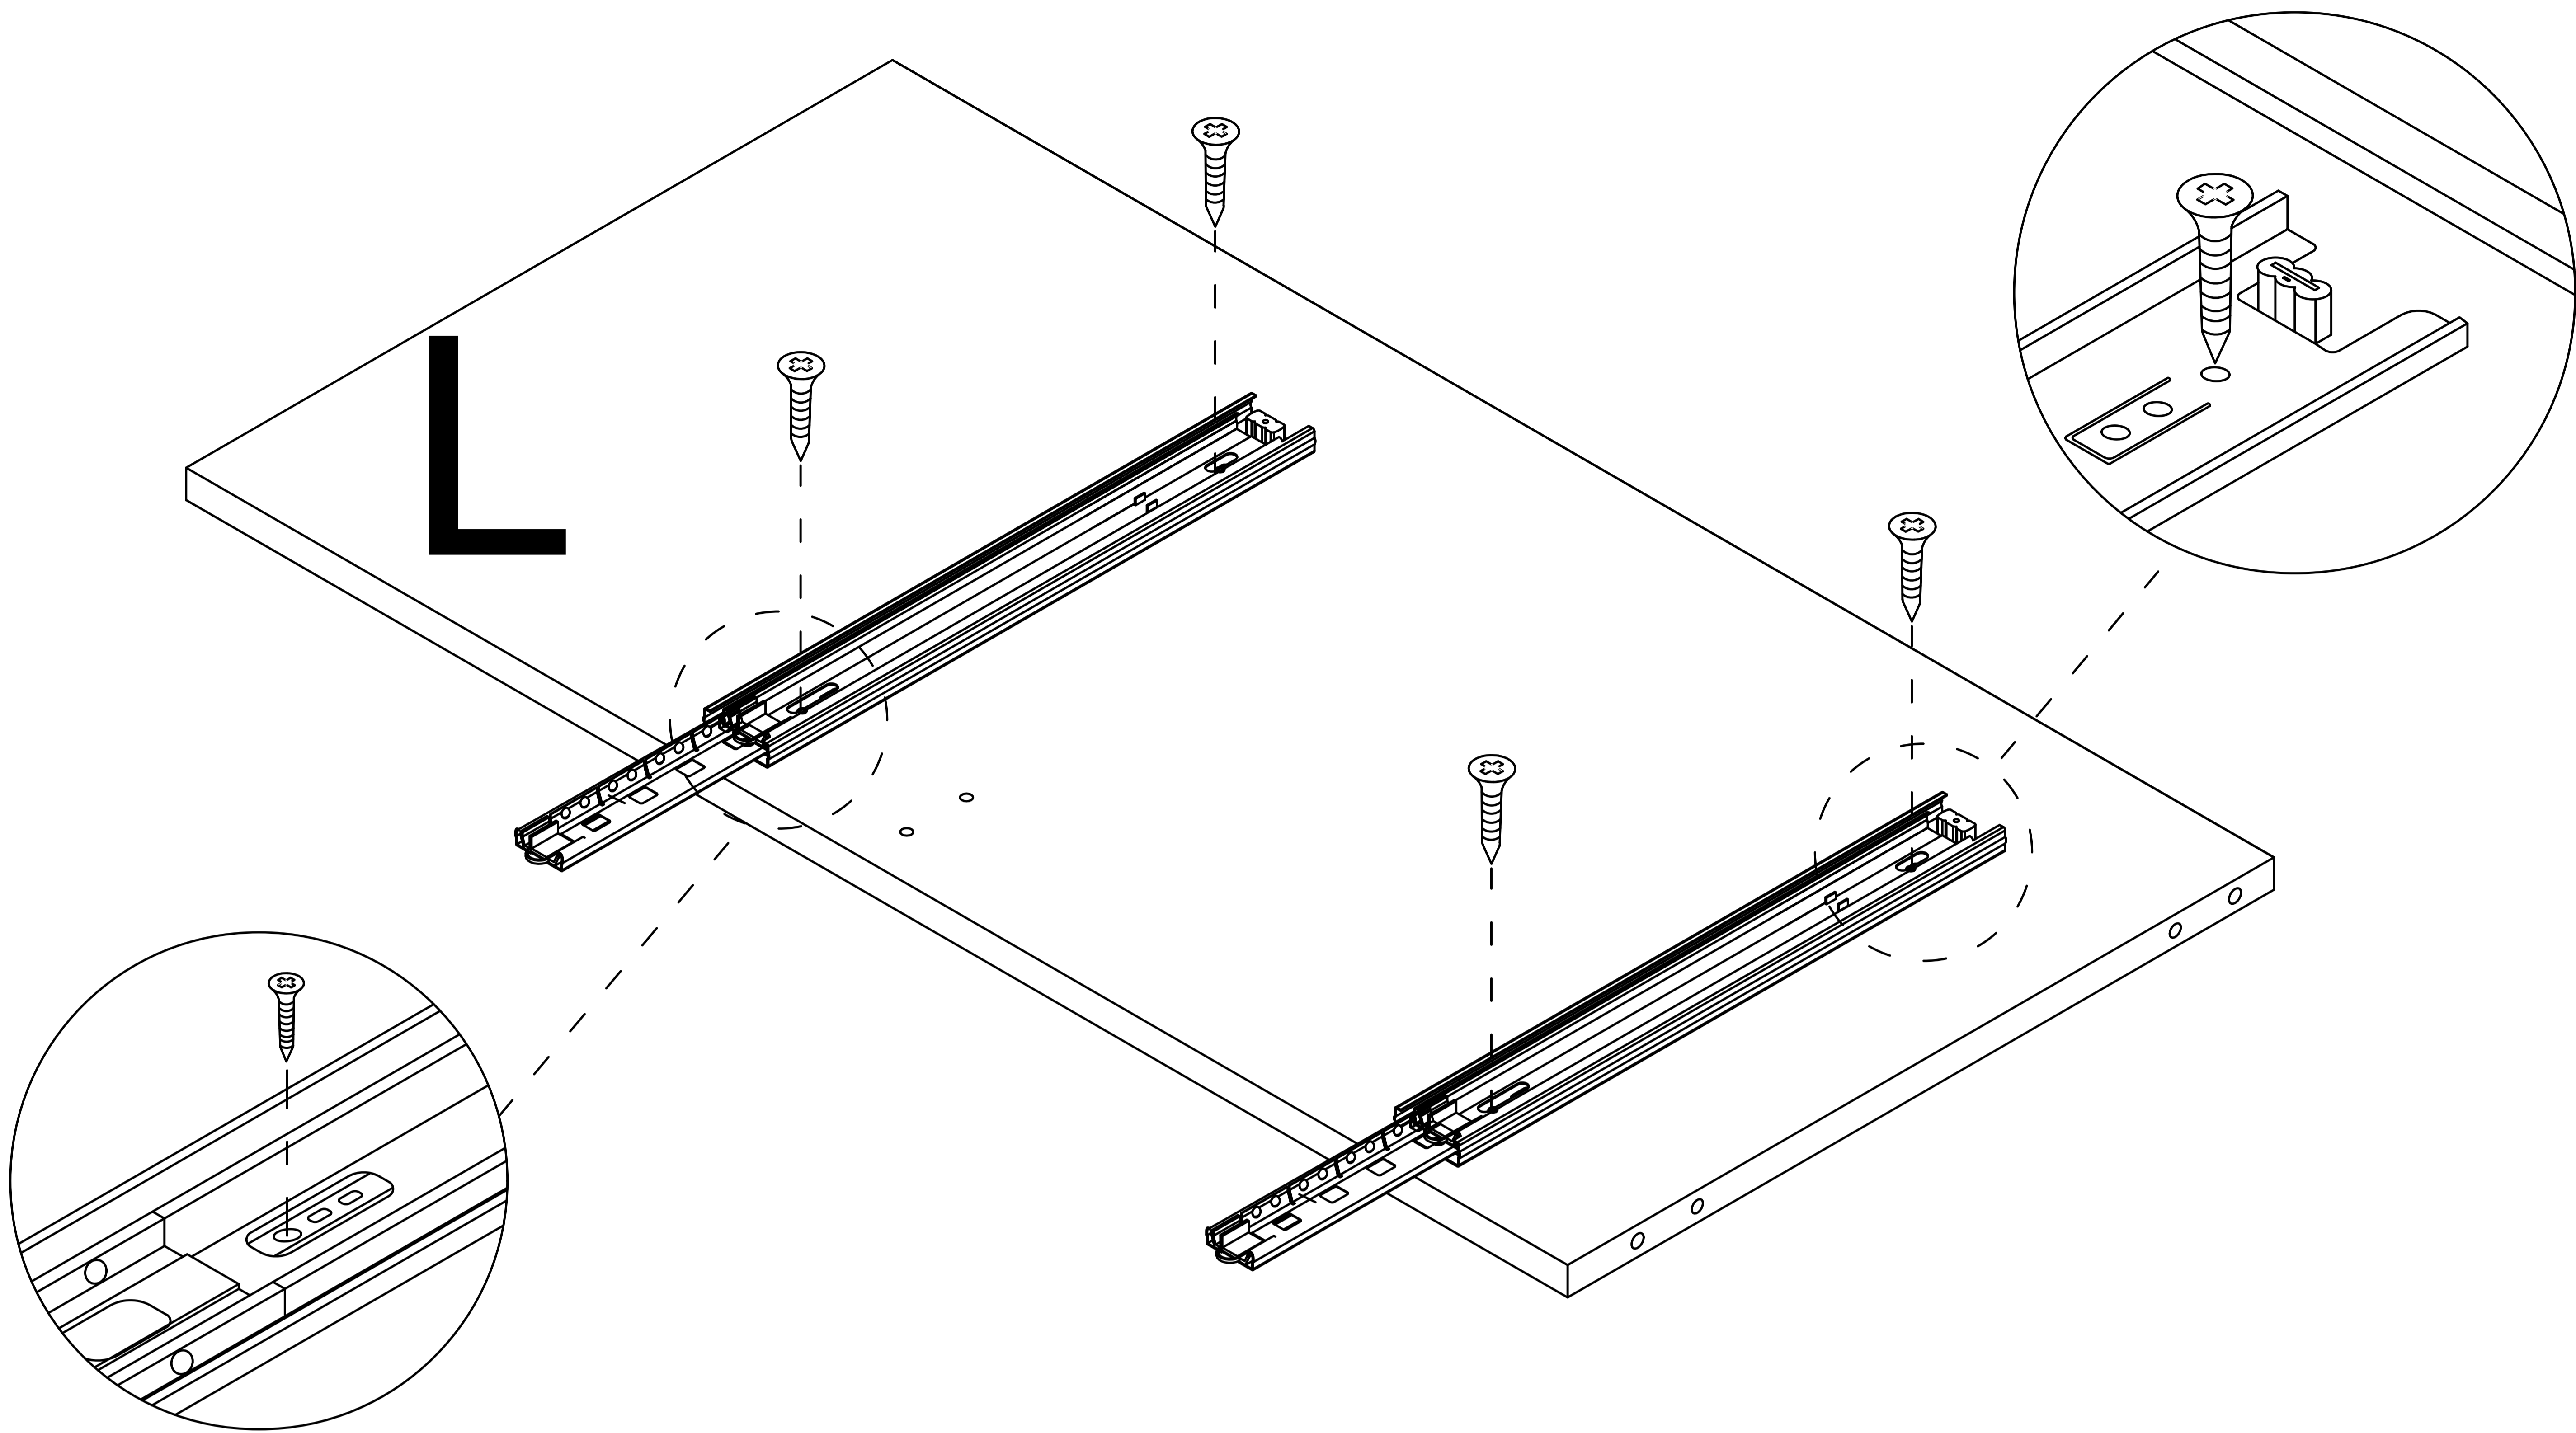






4

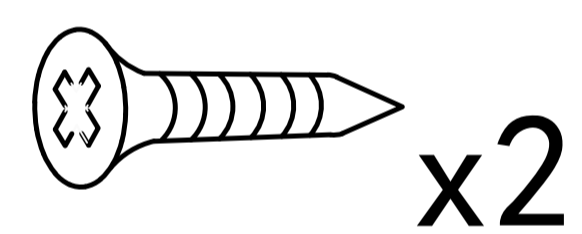





x2

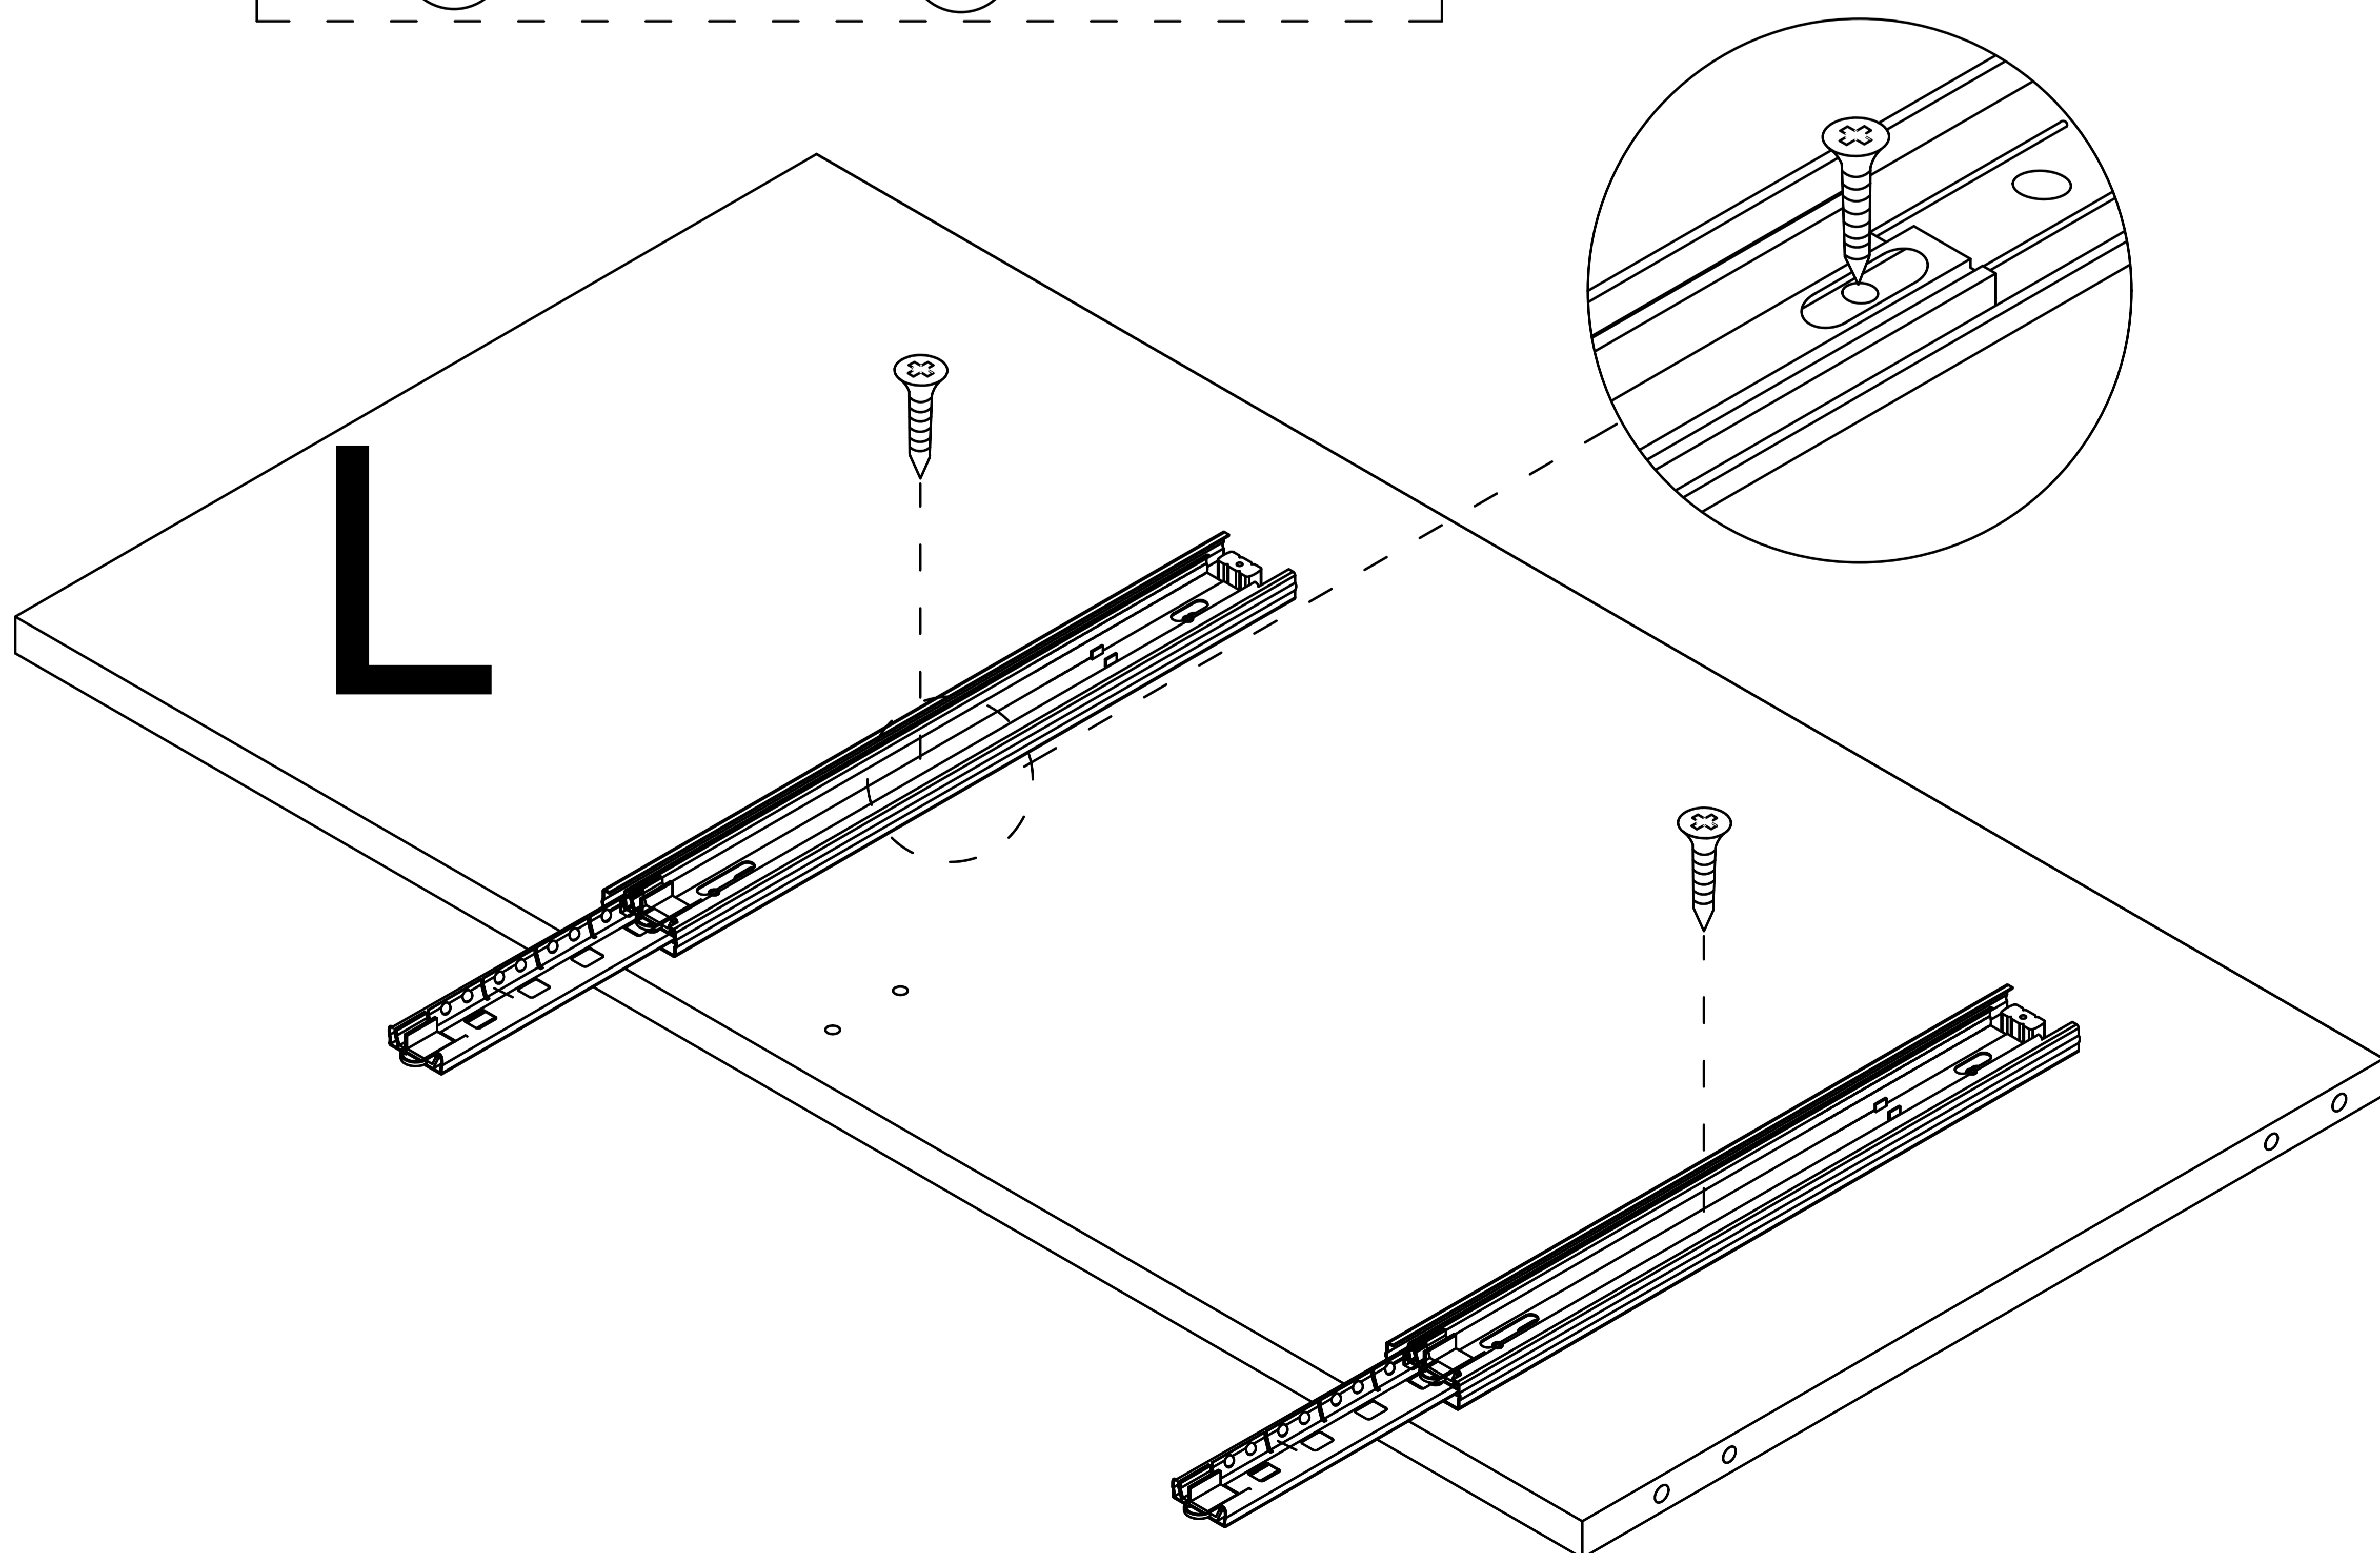



Step 17

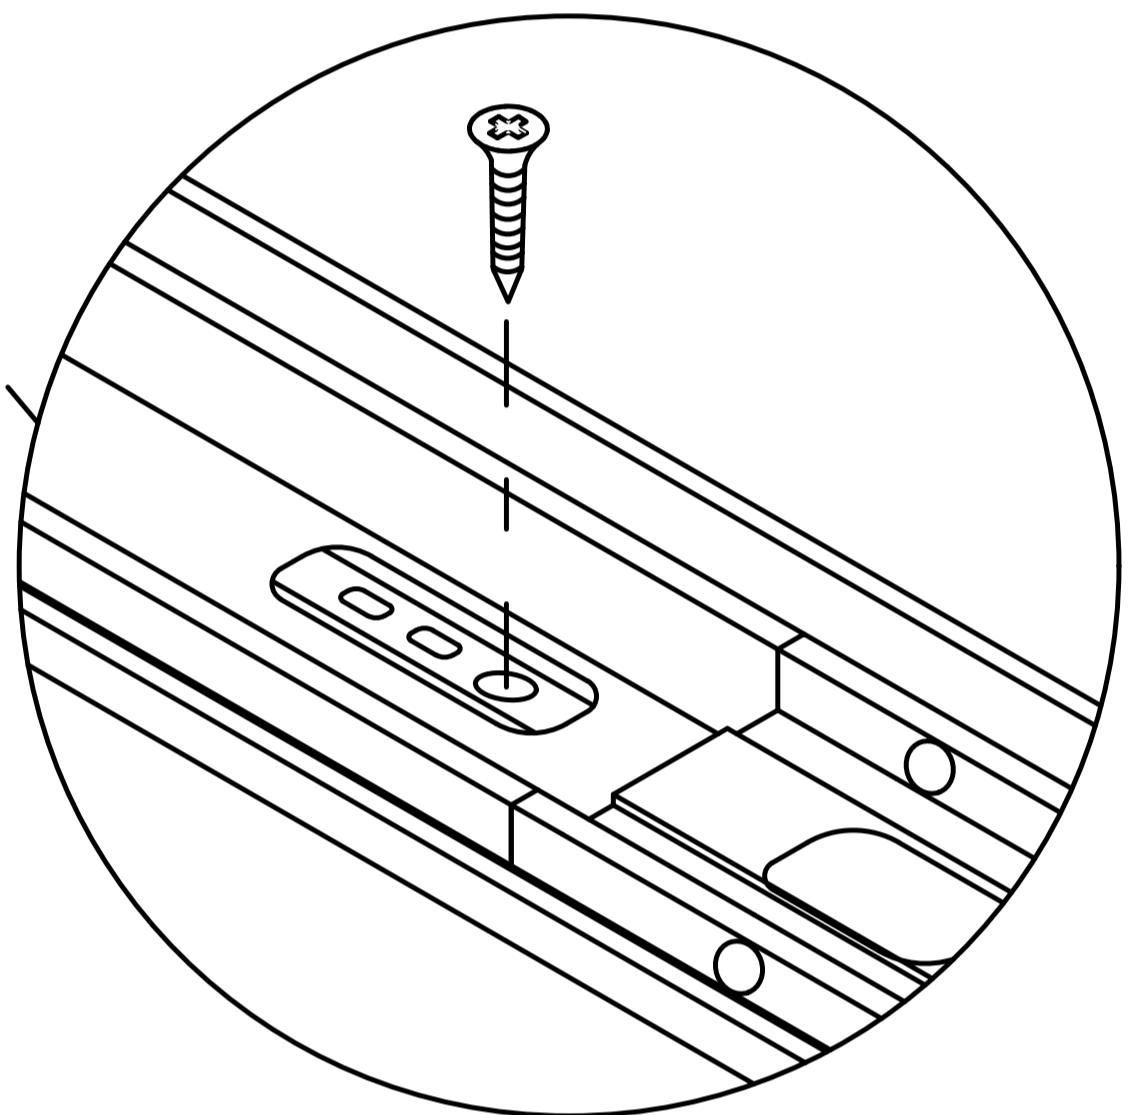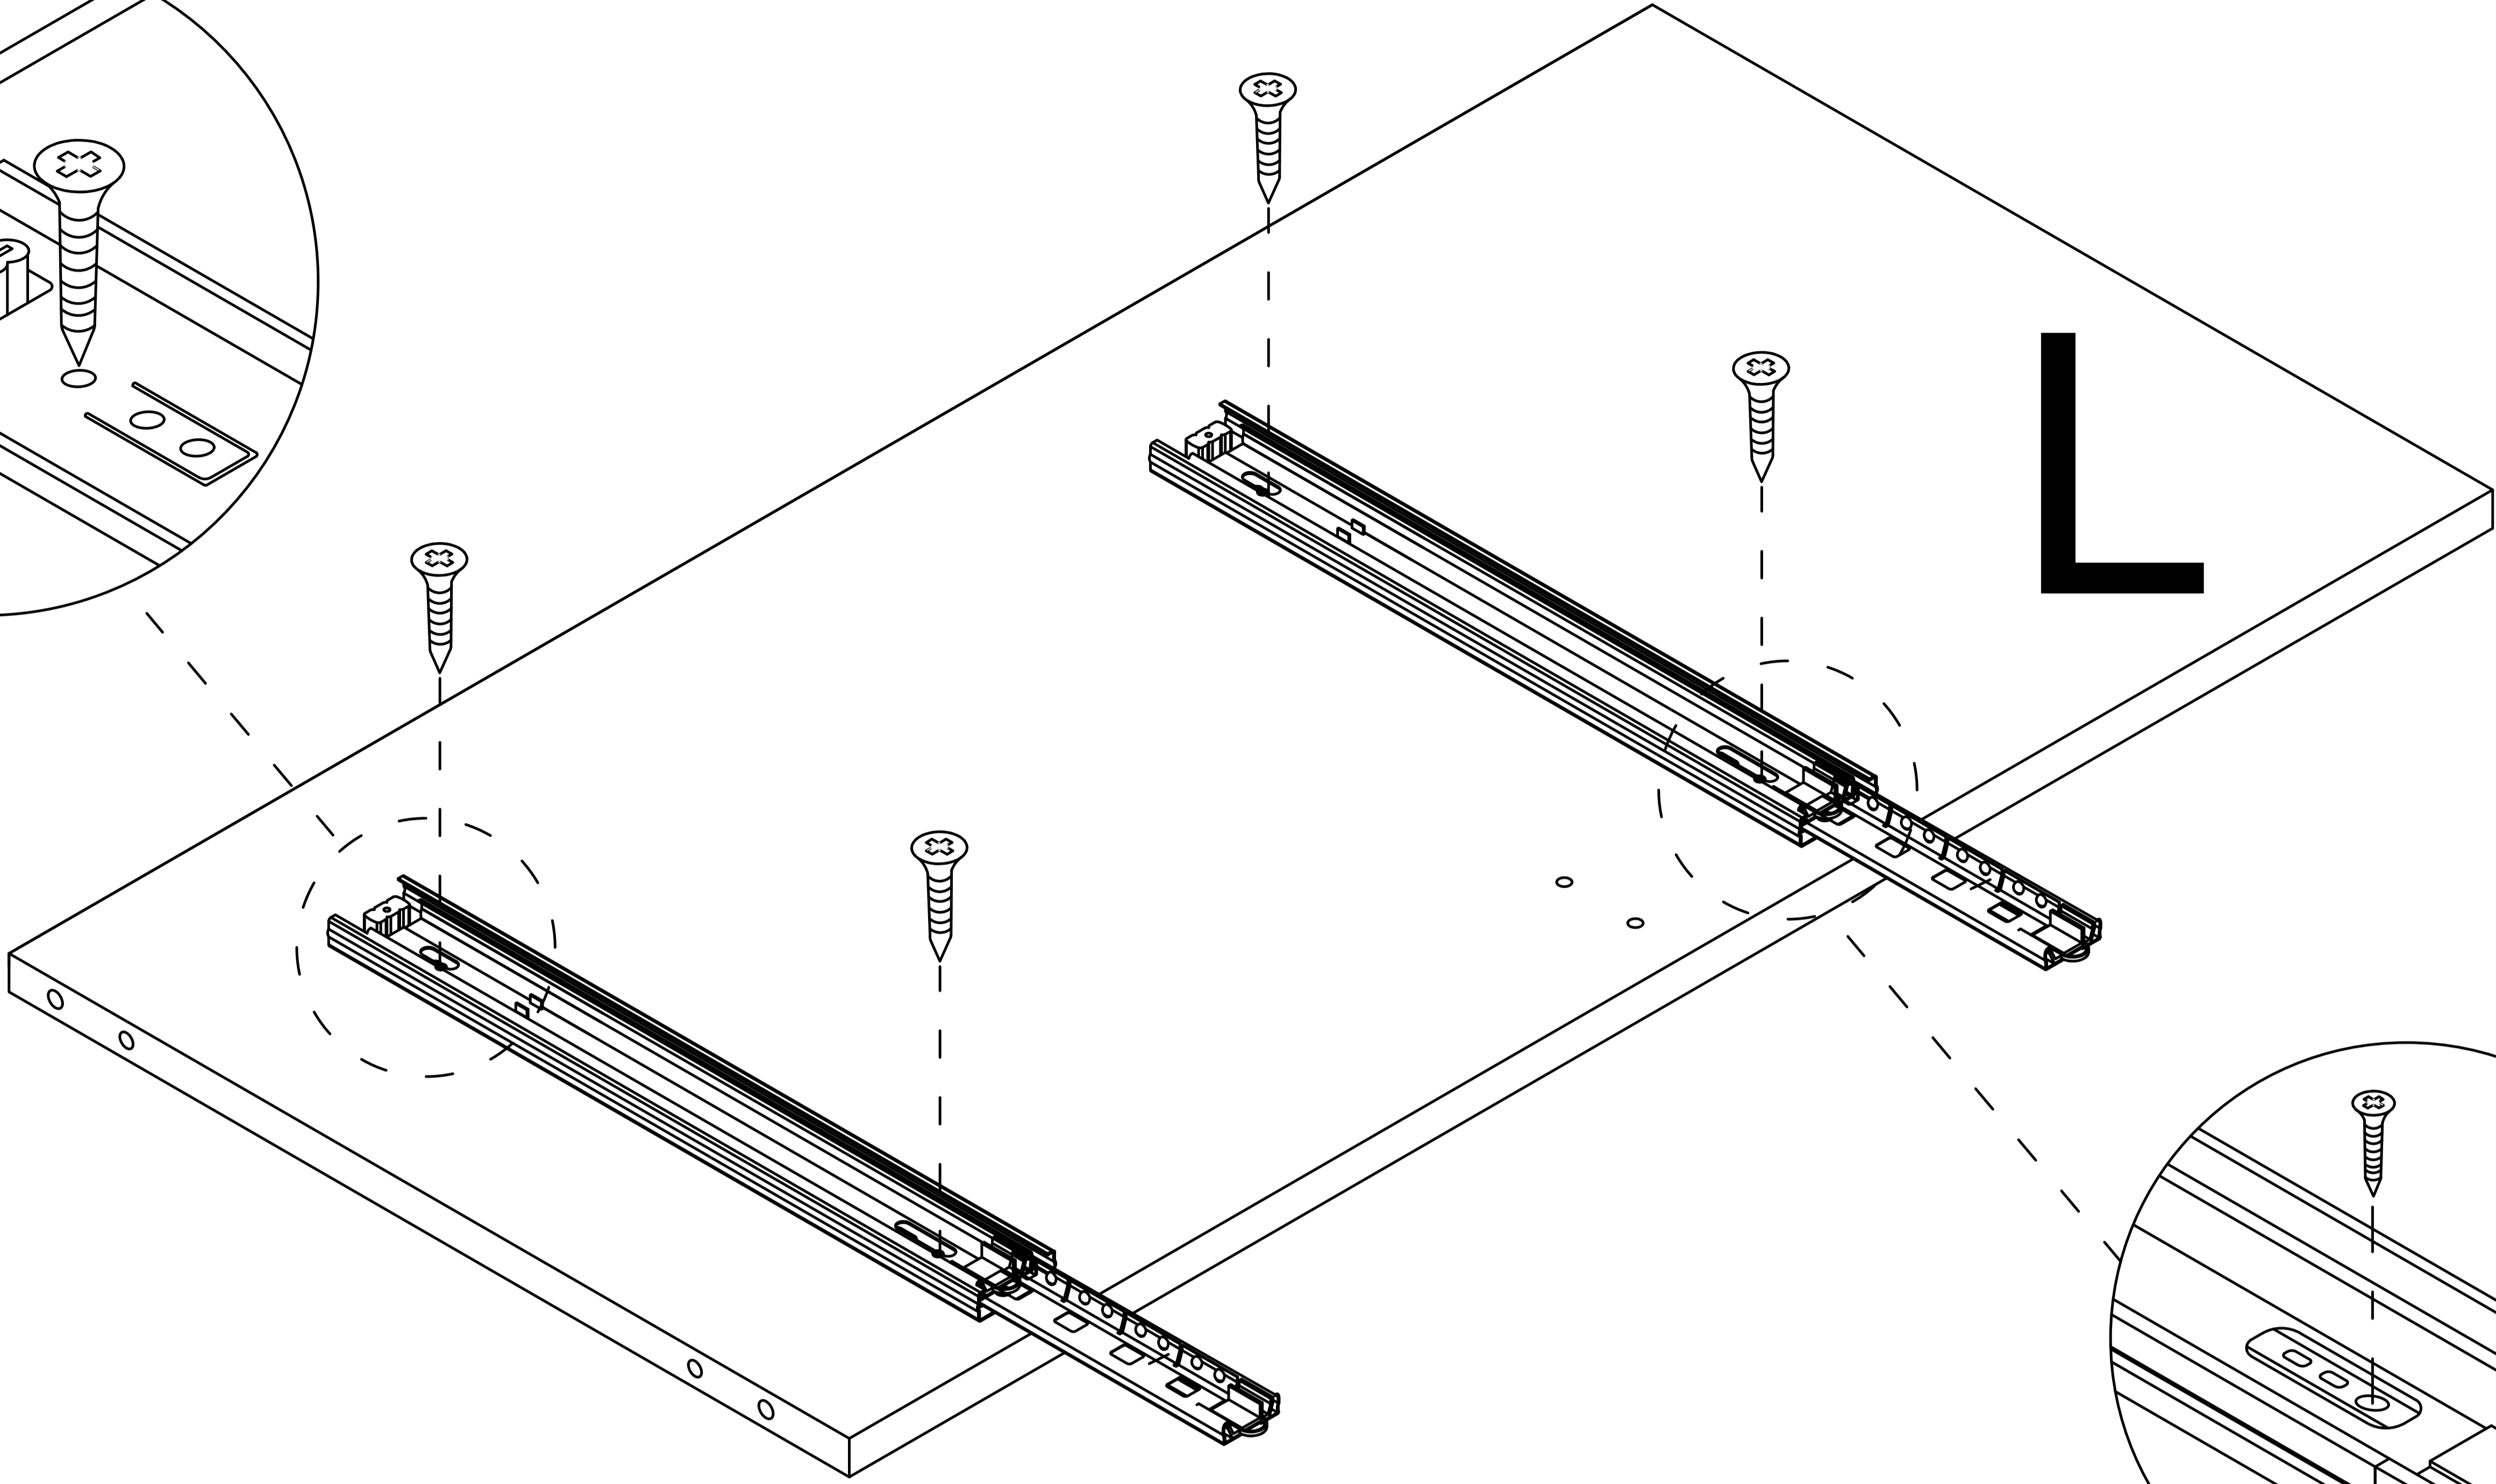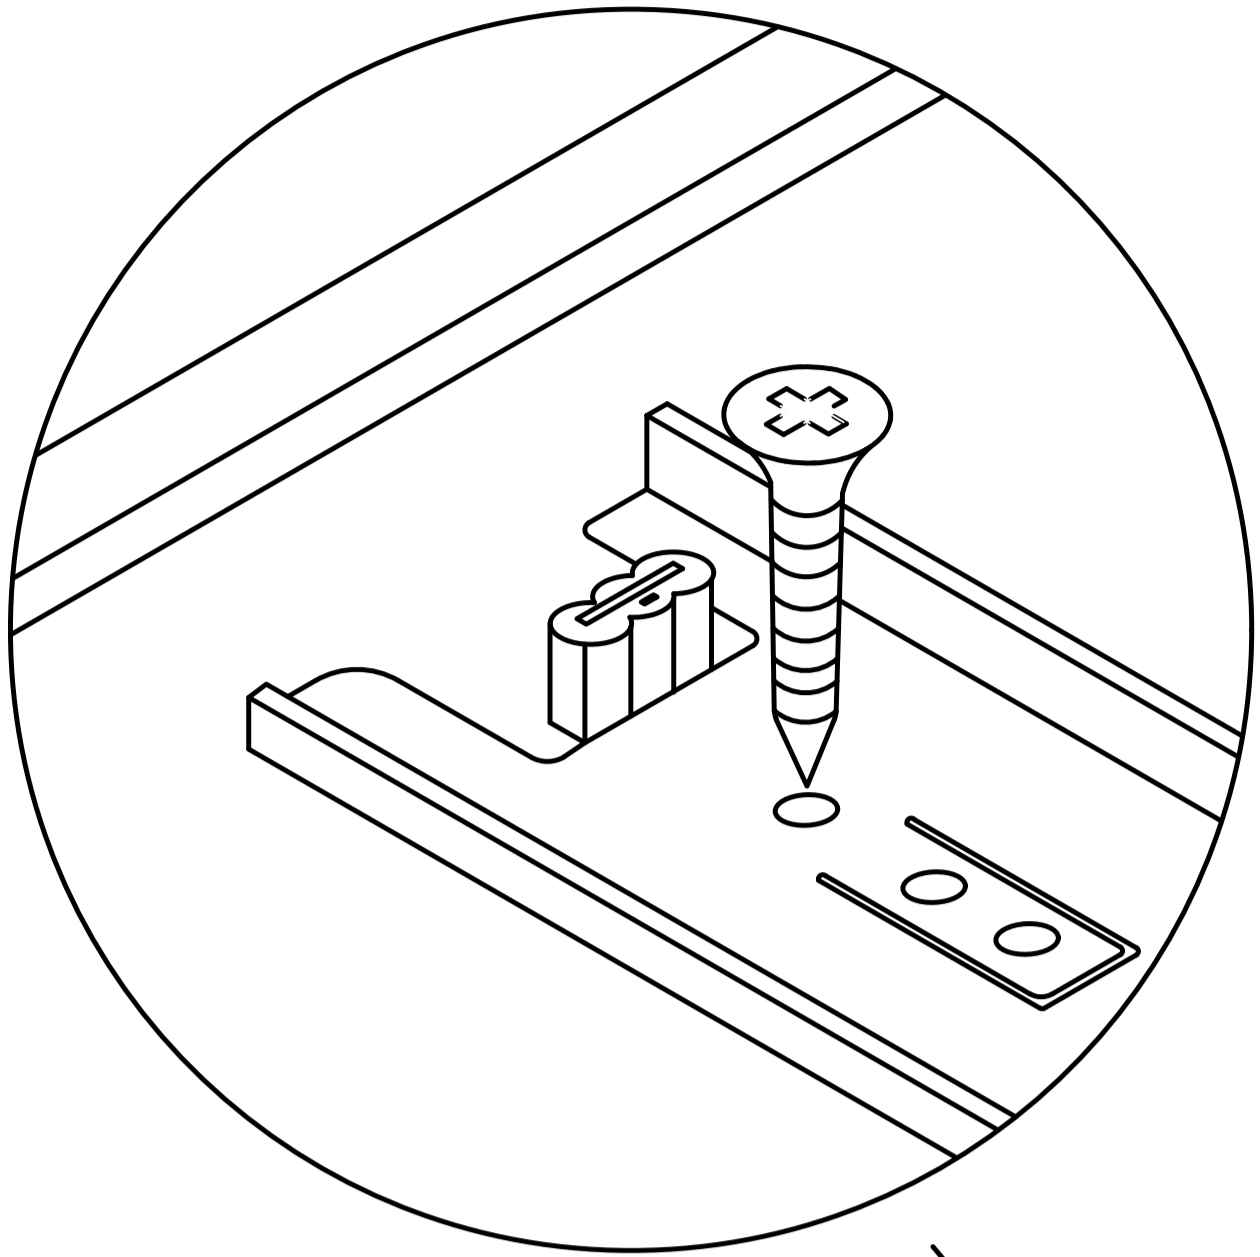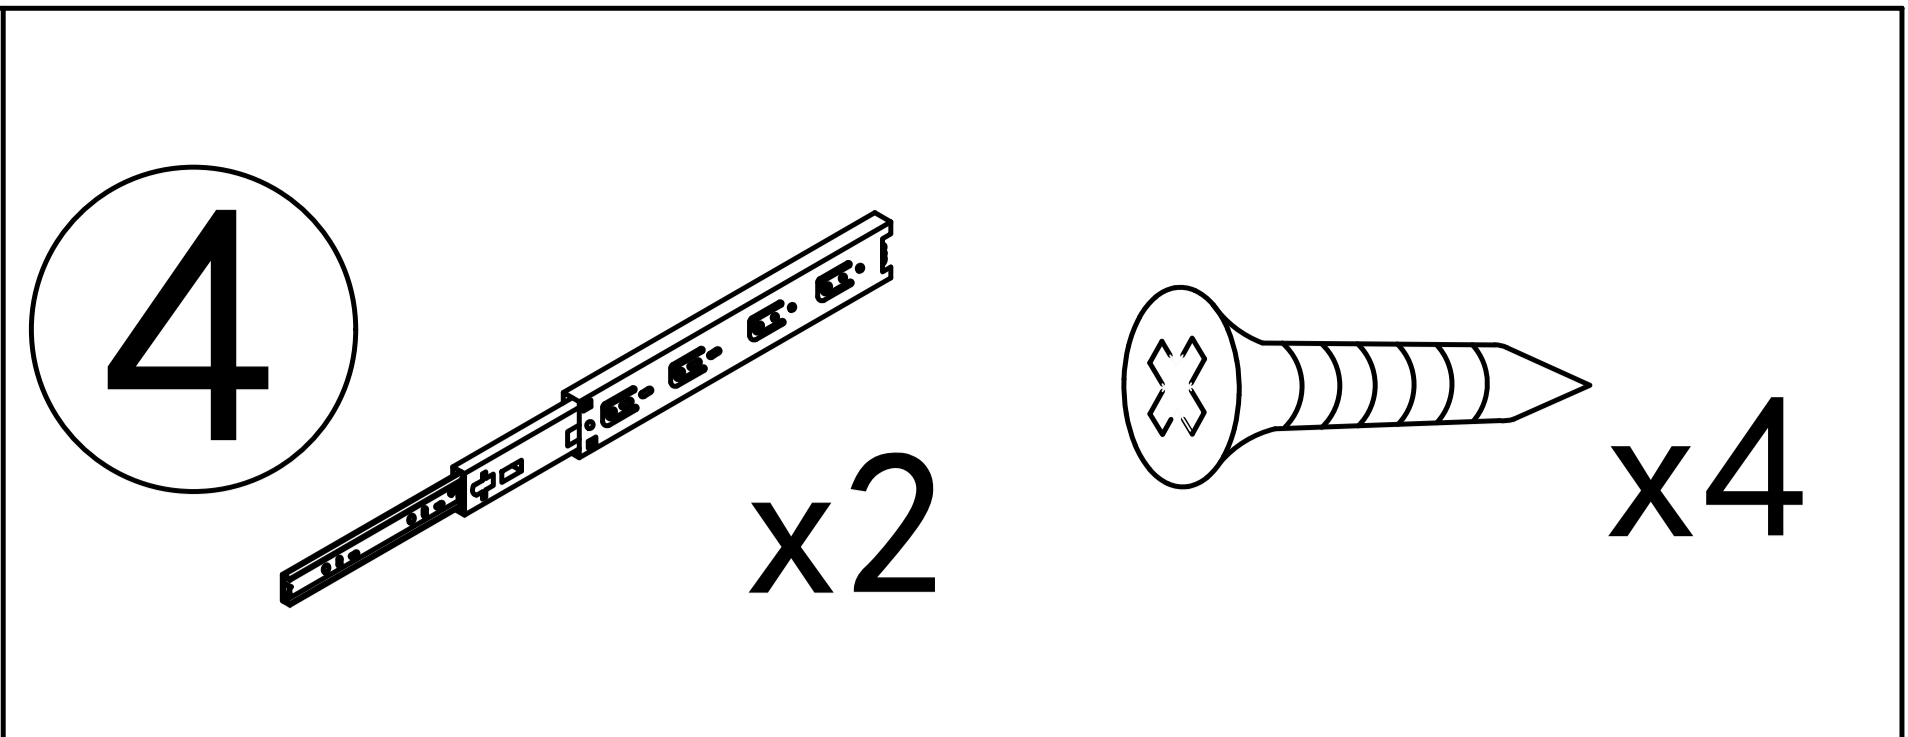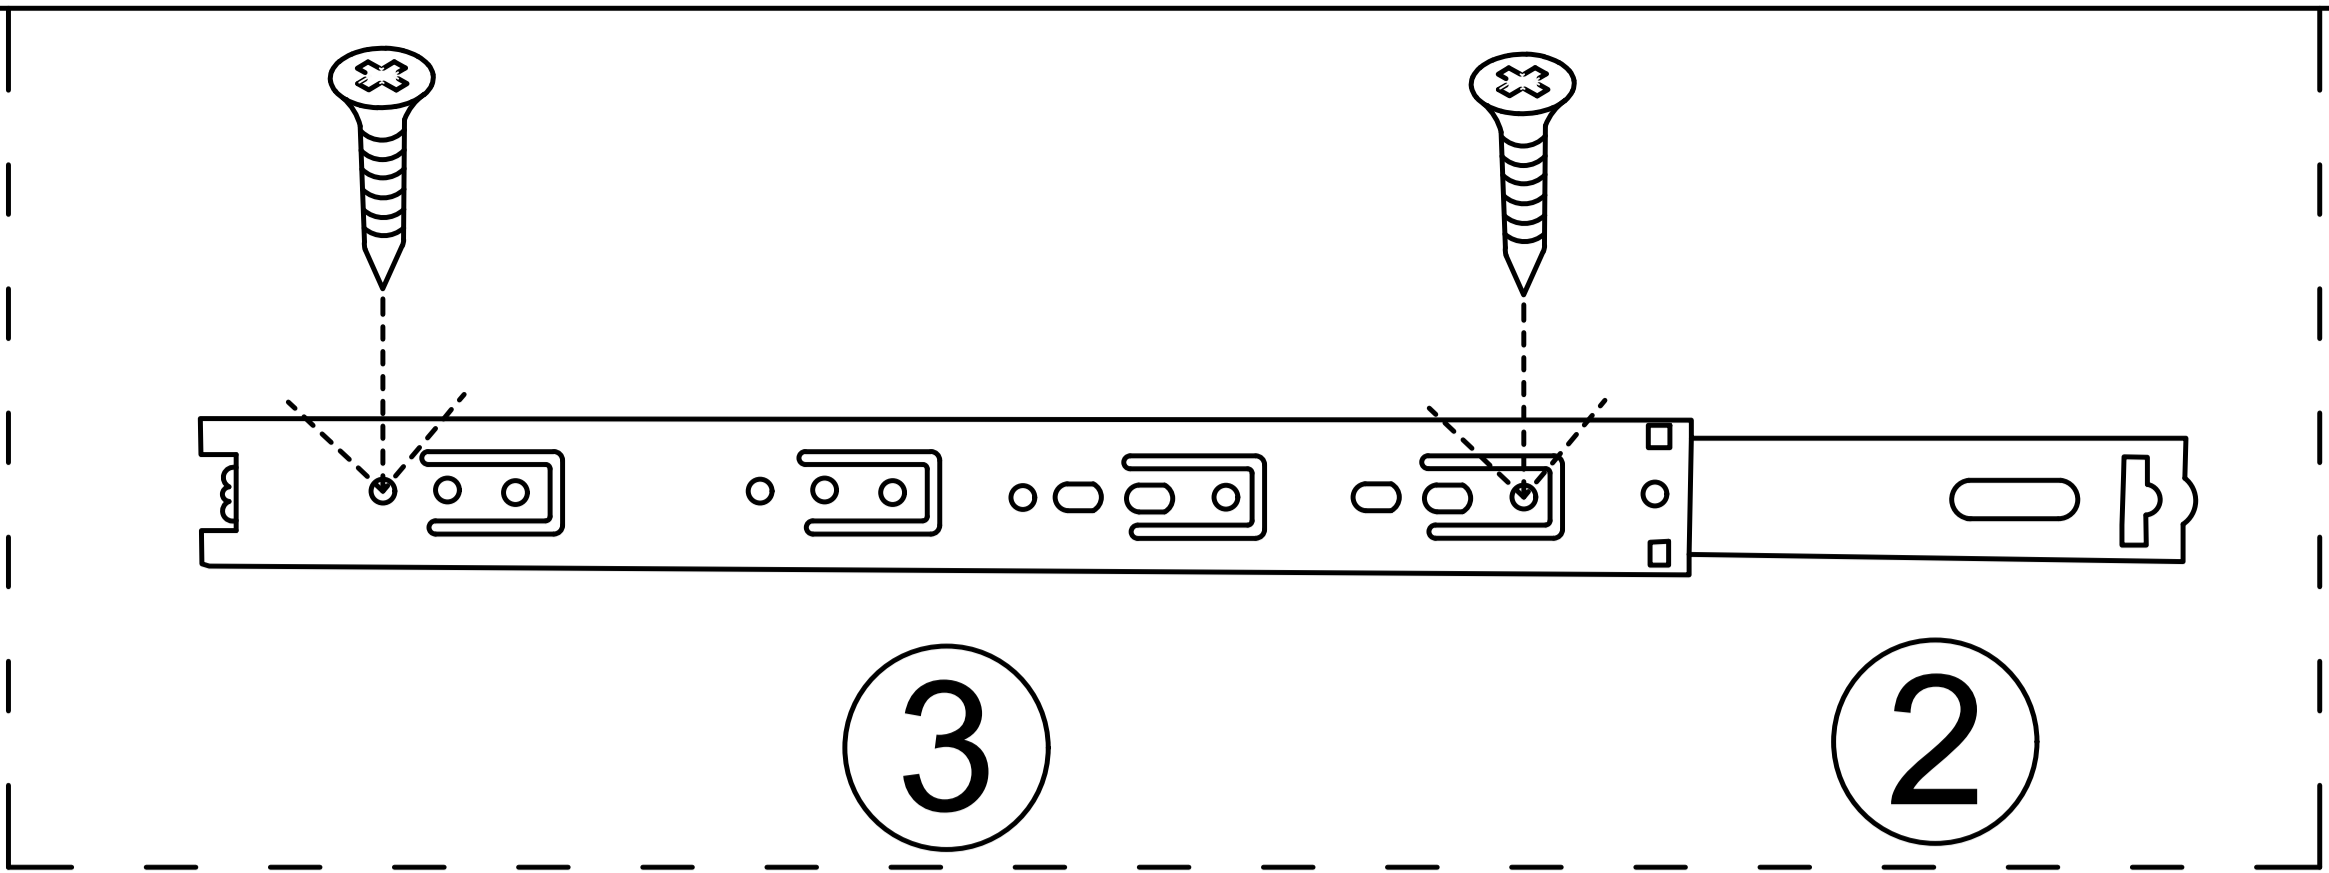



Step 18

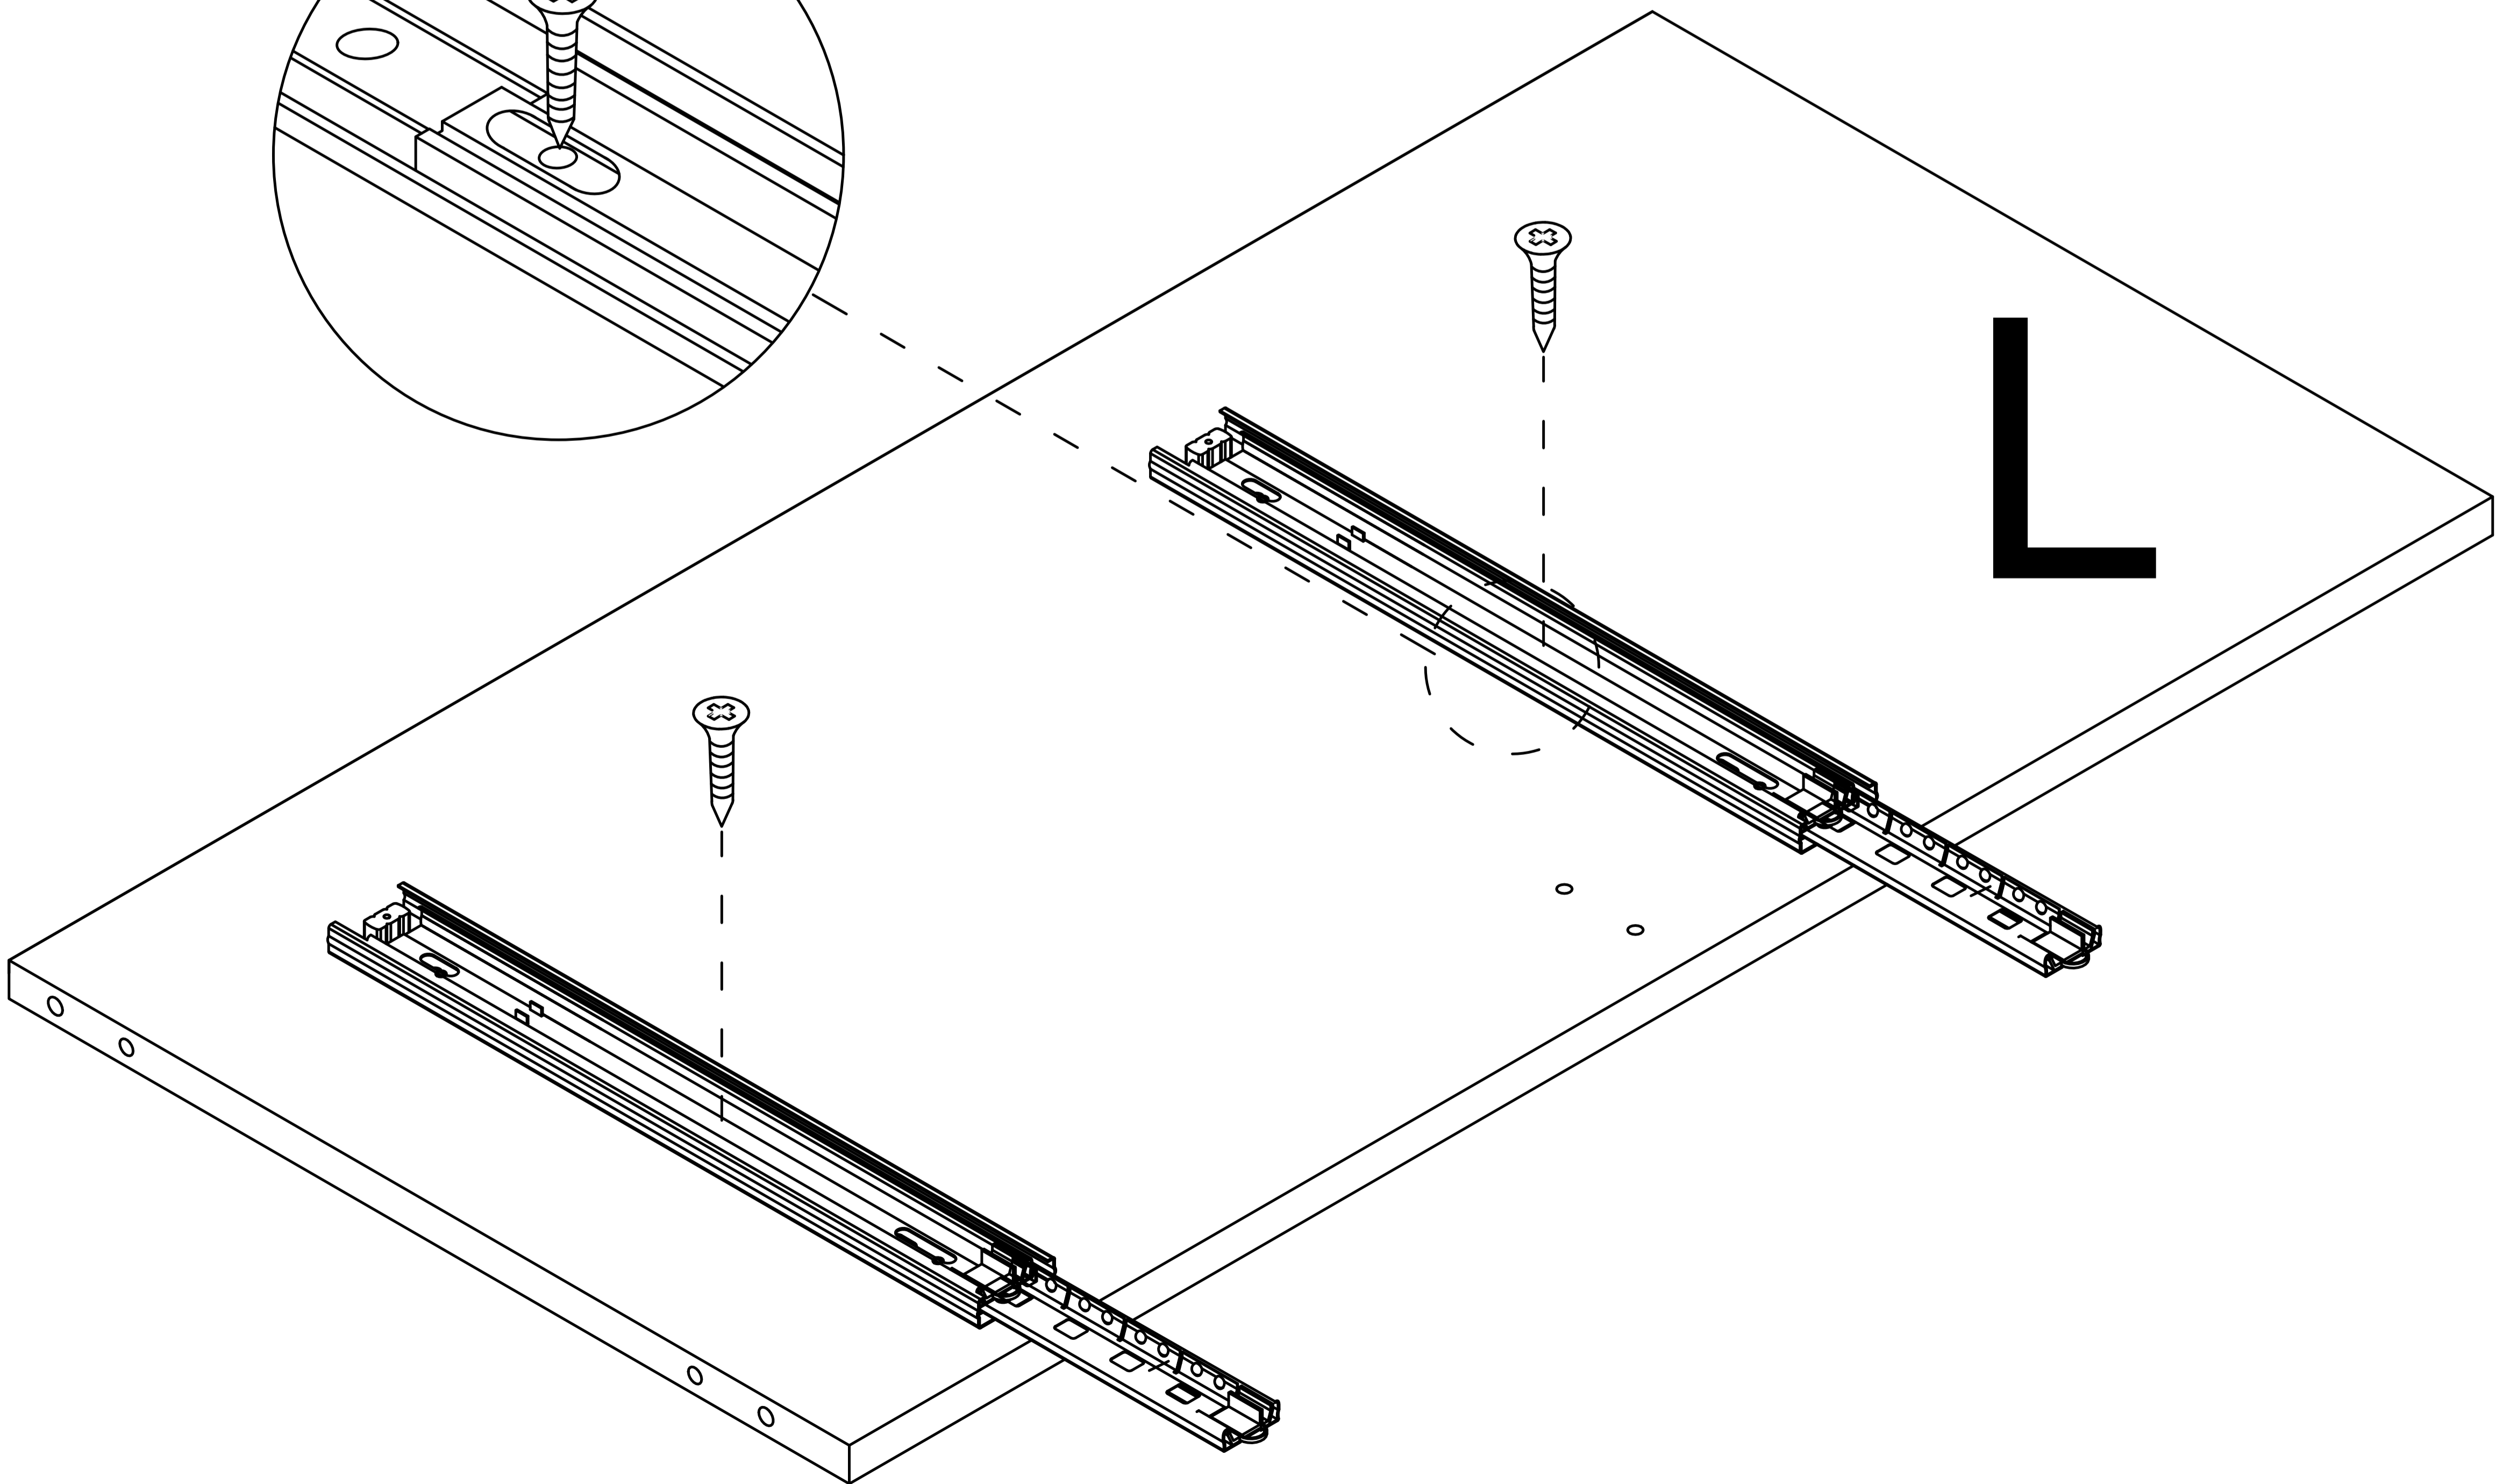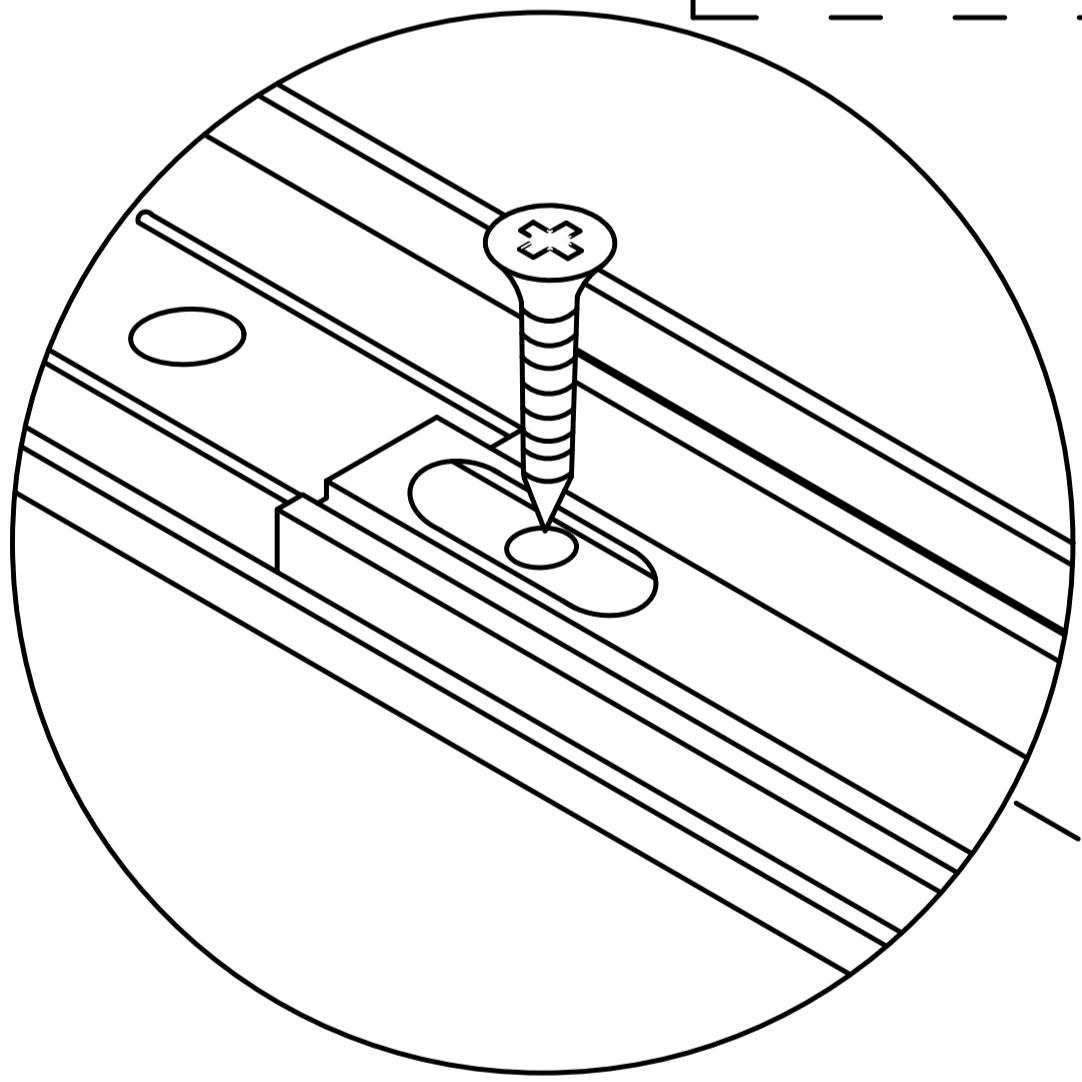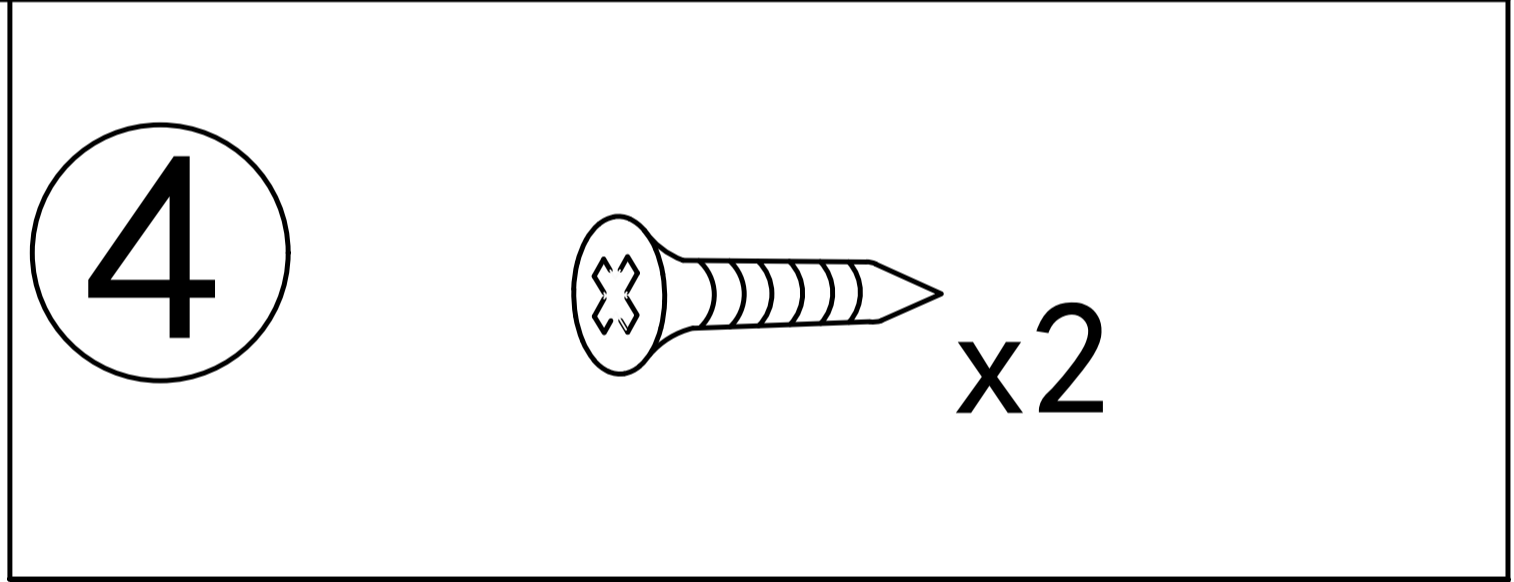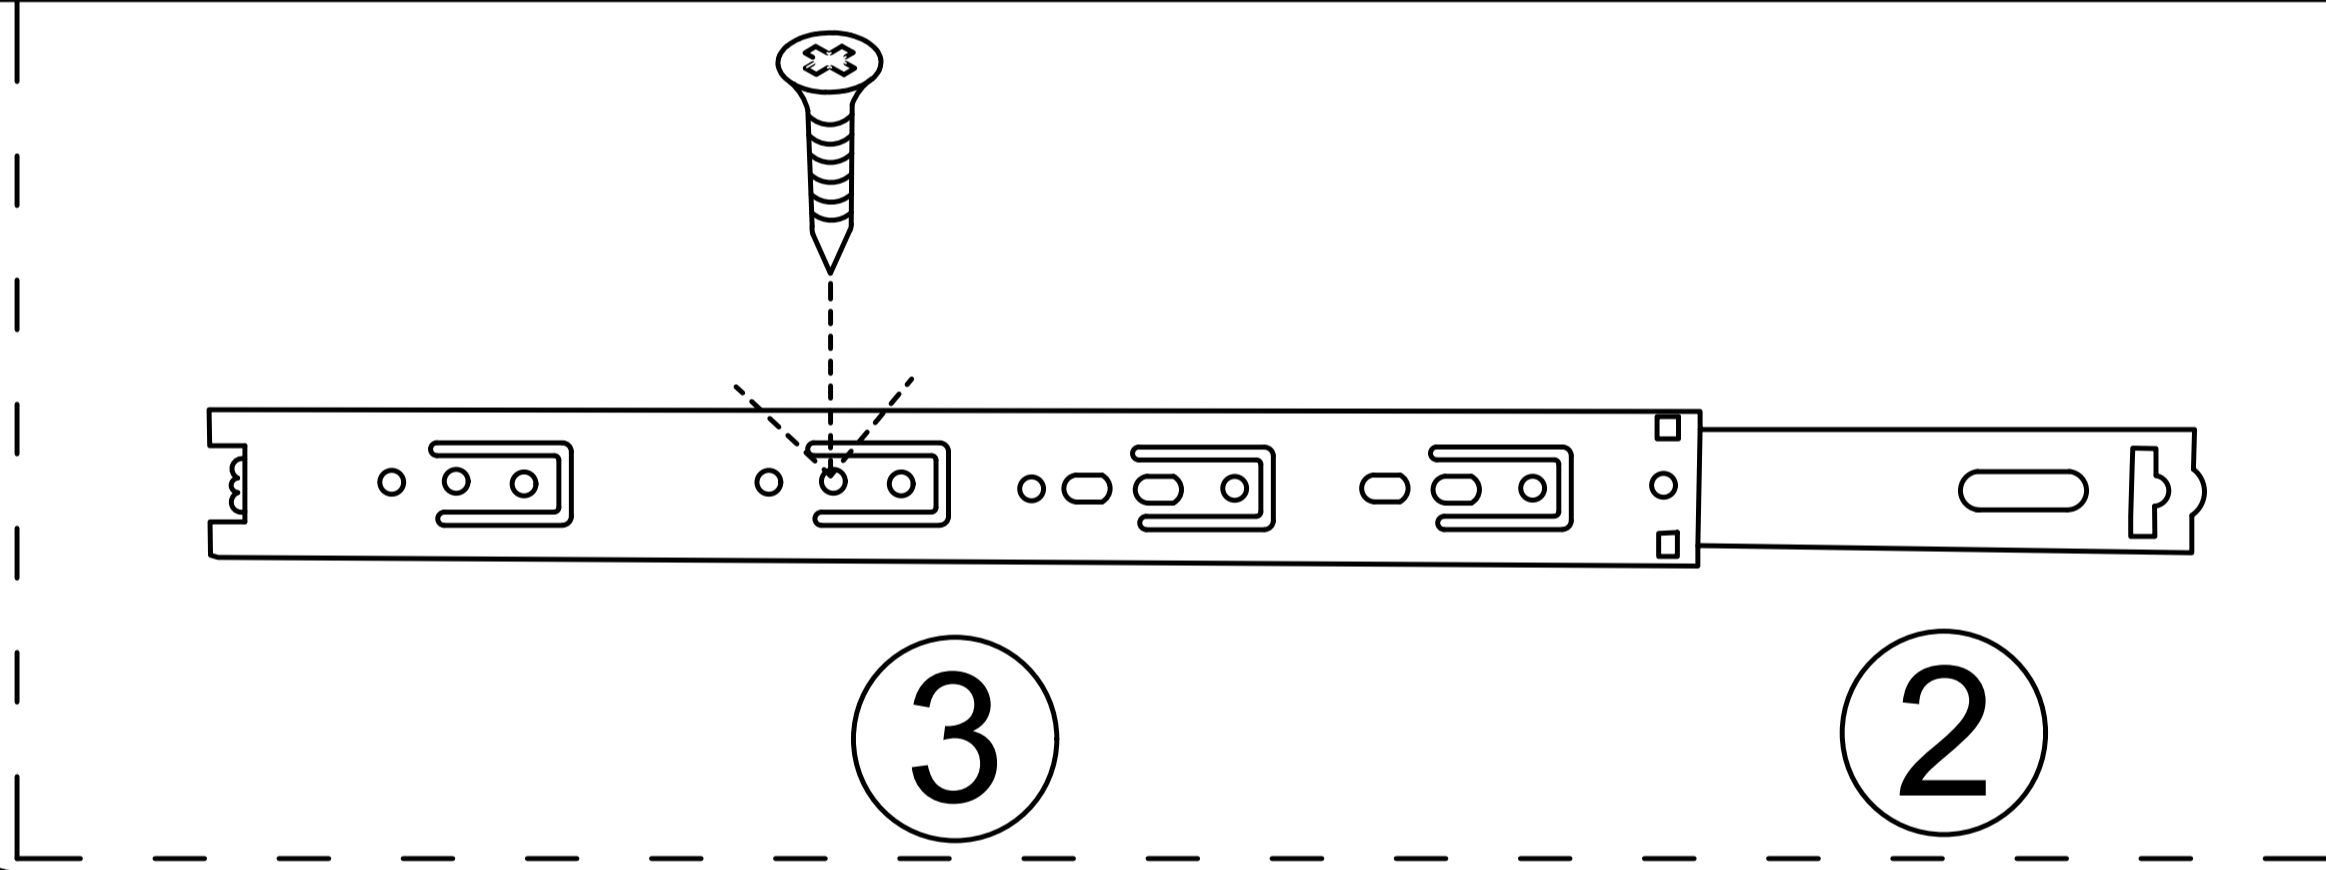



Step 19

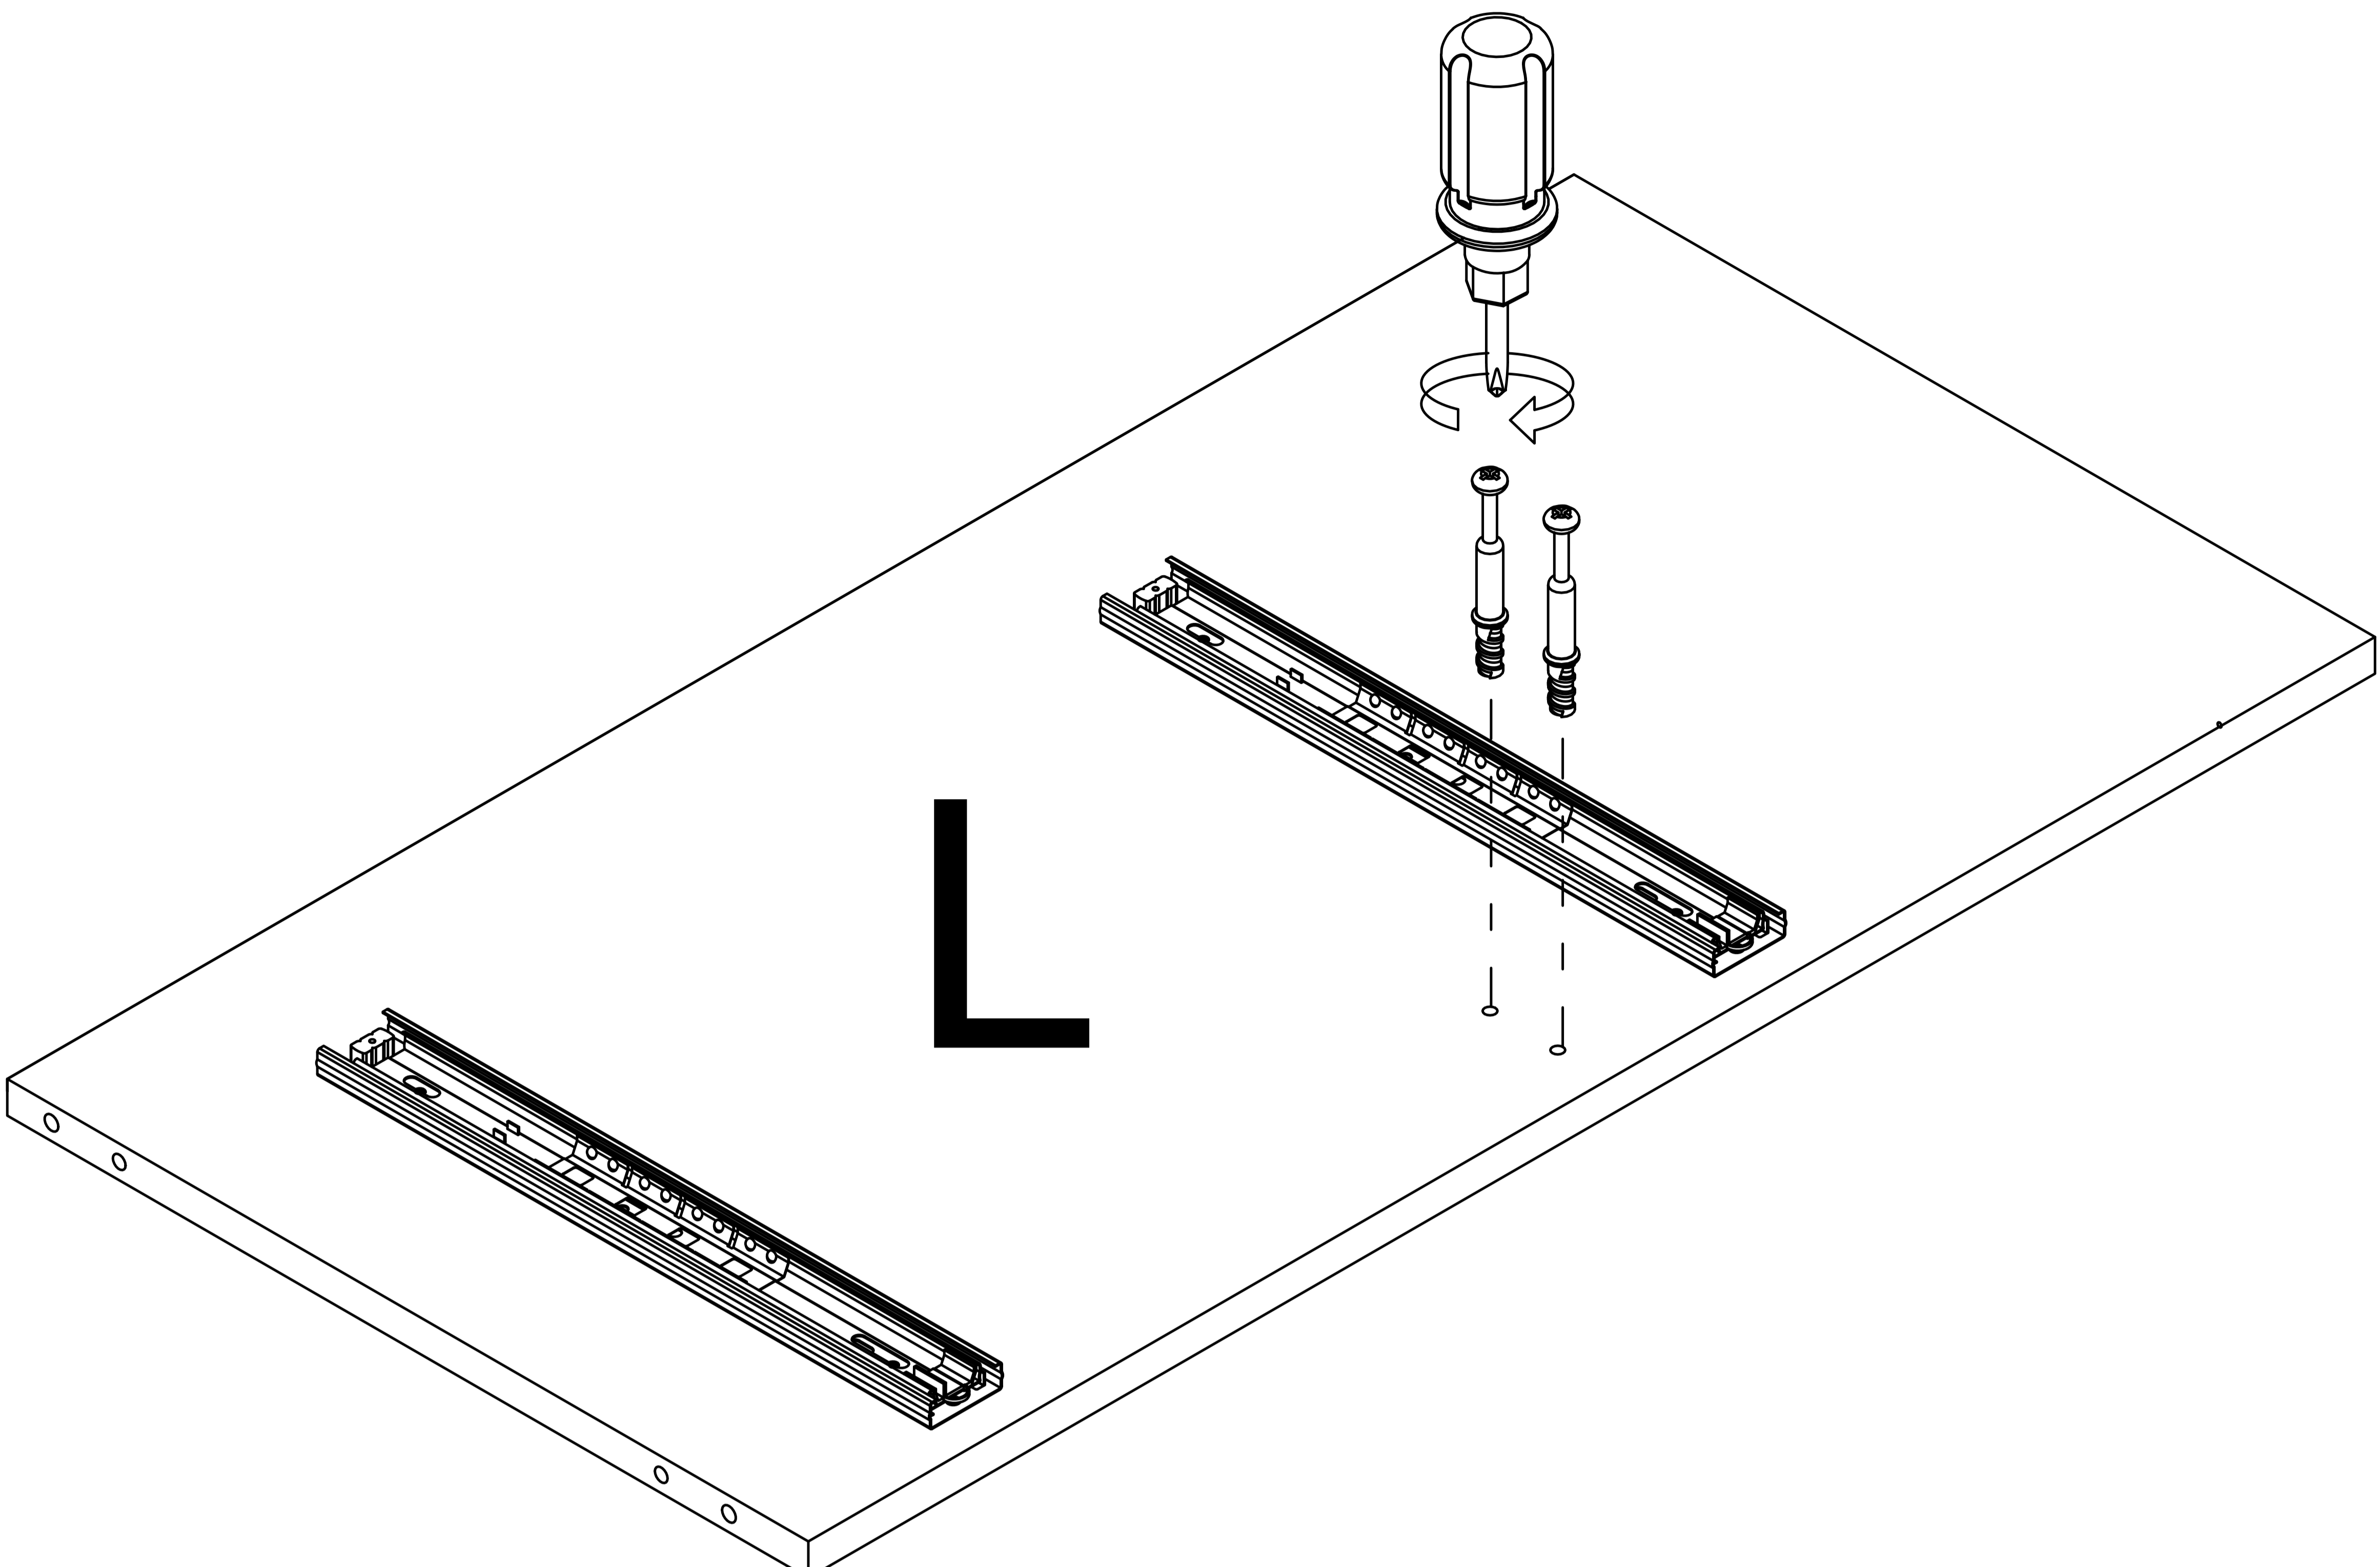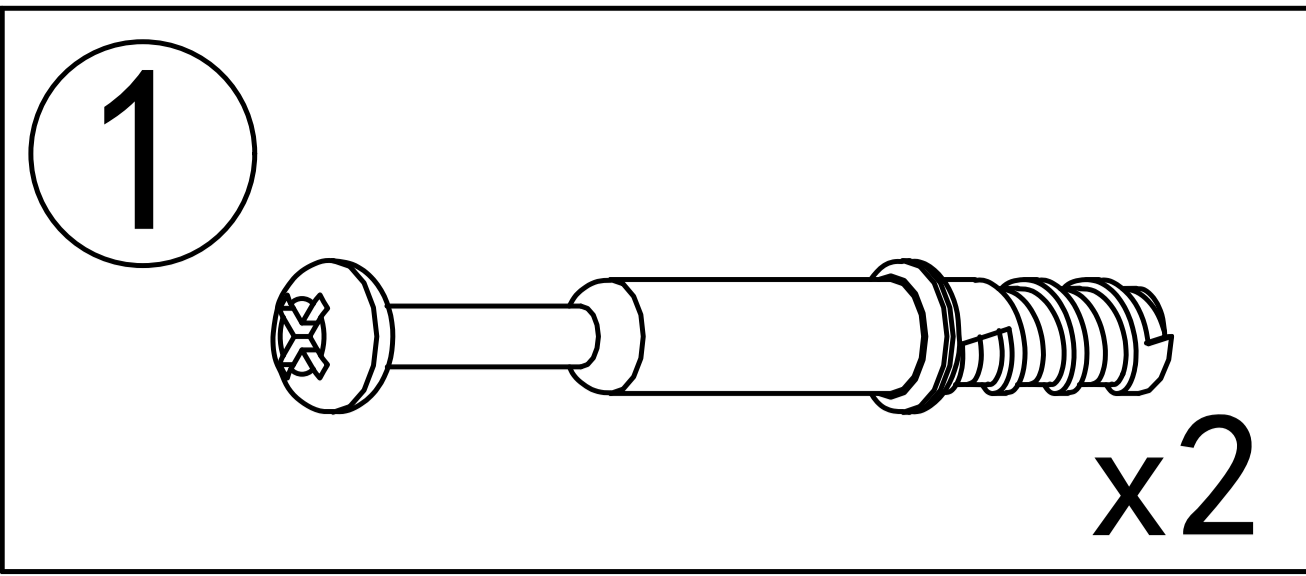



Step 20

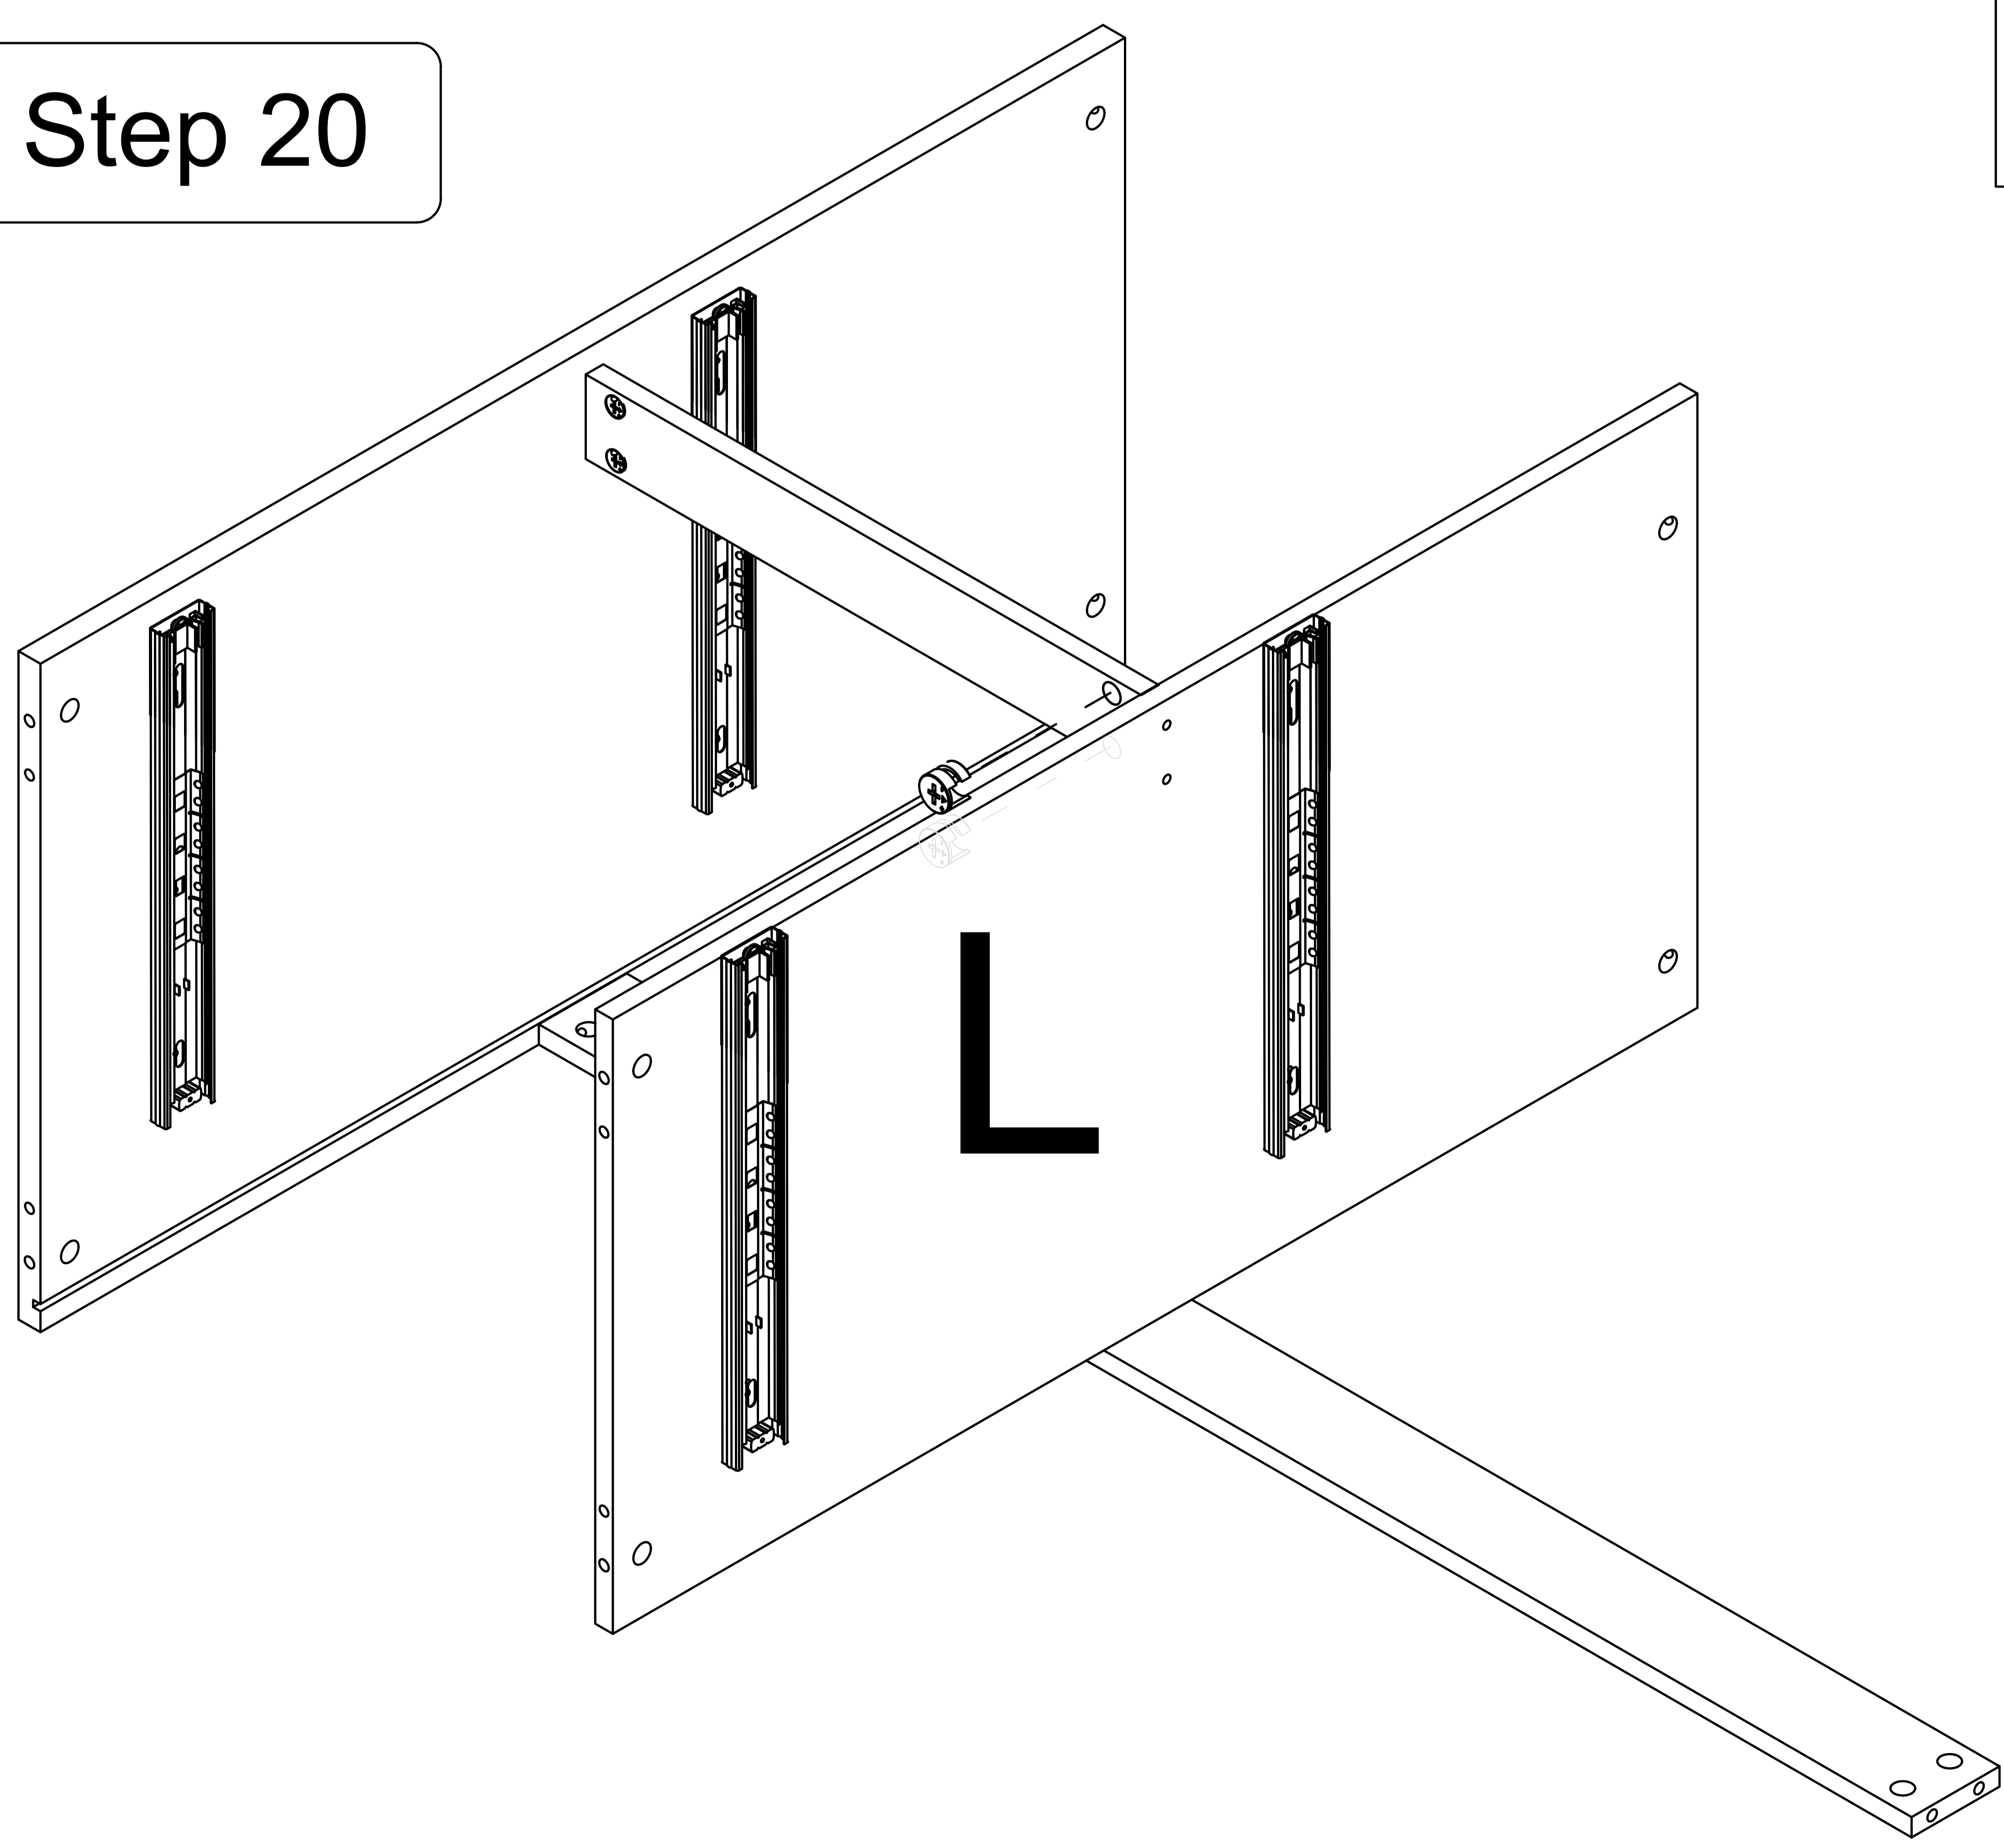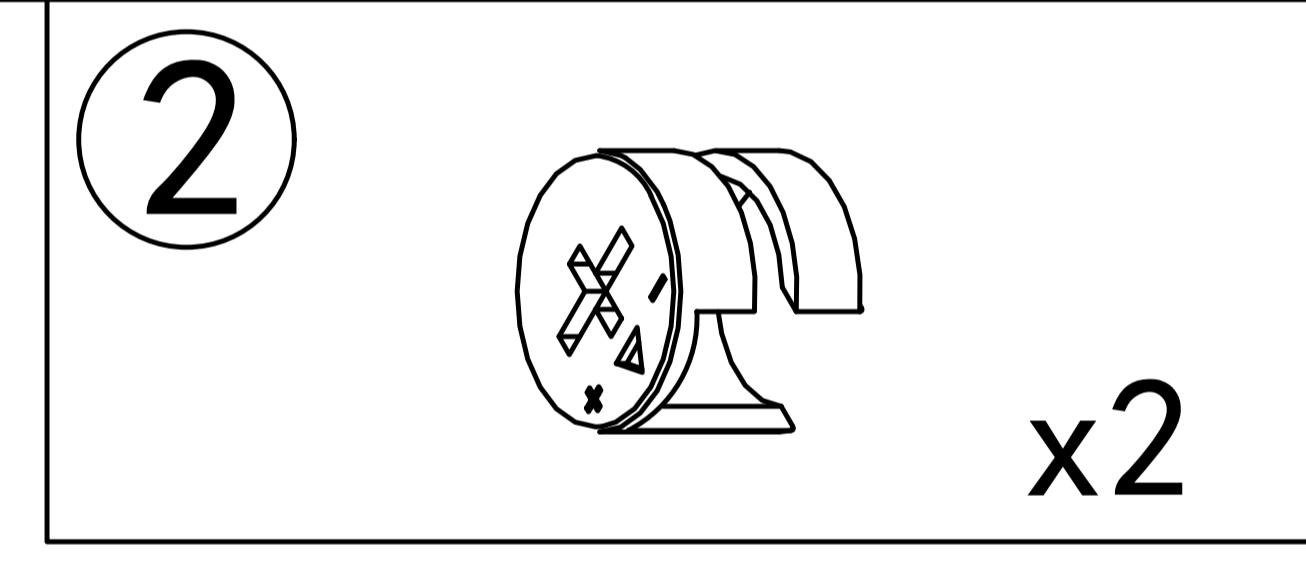




Step 21

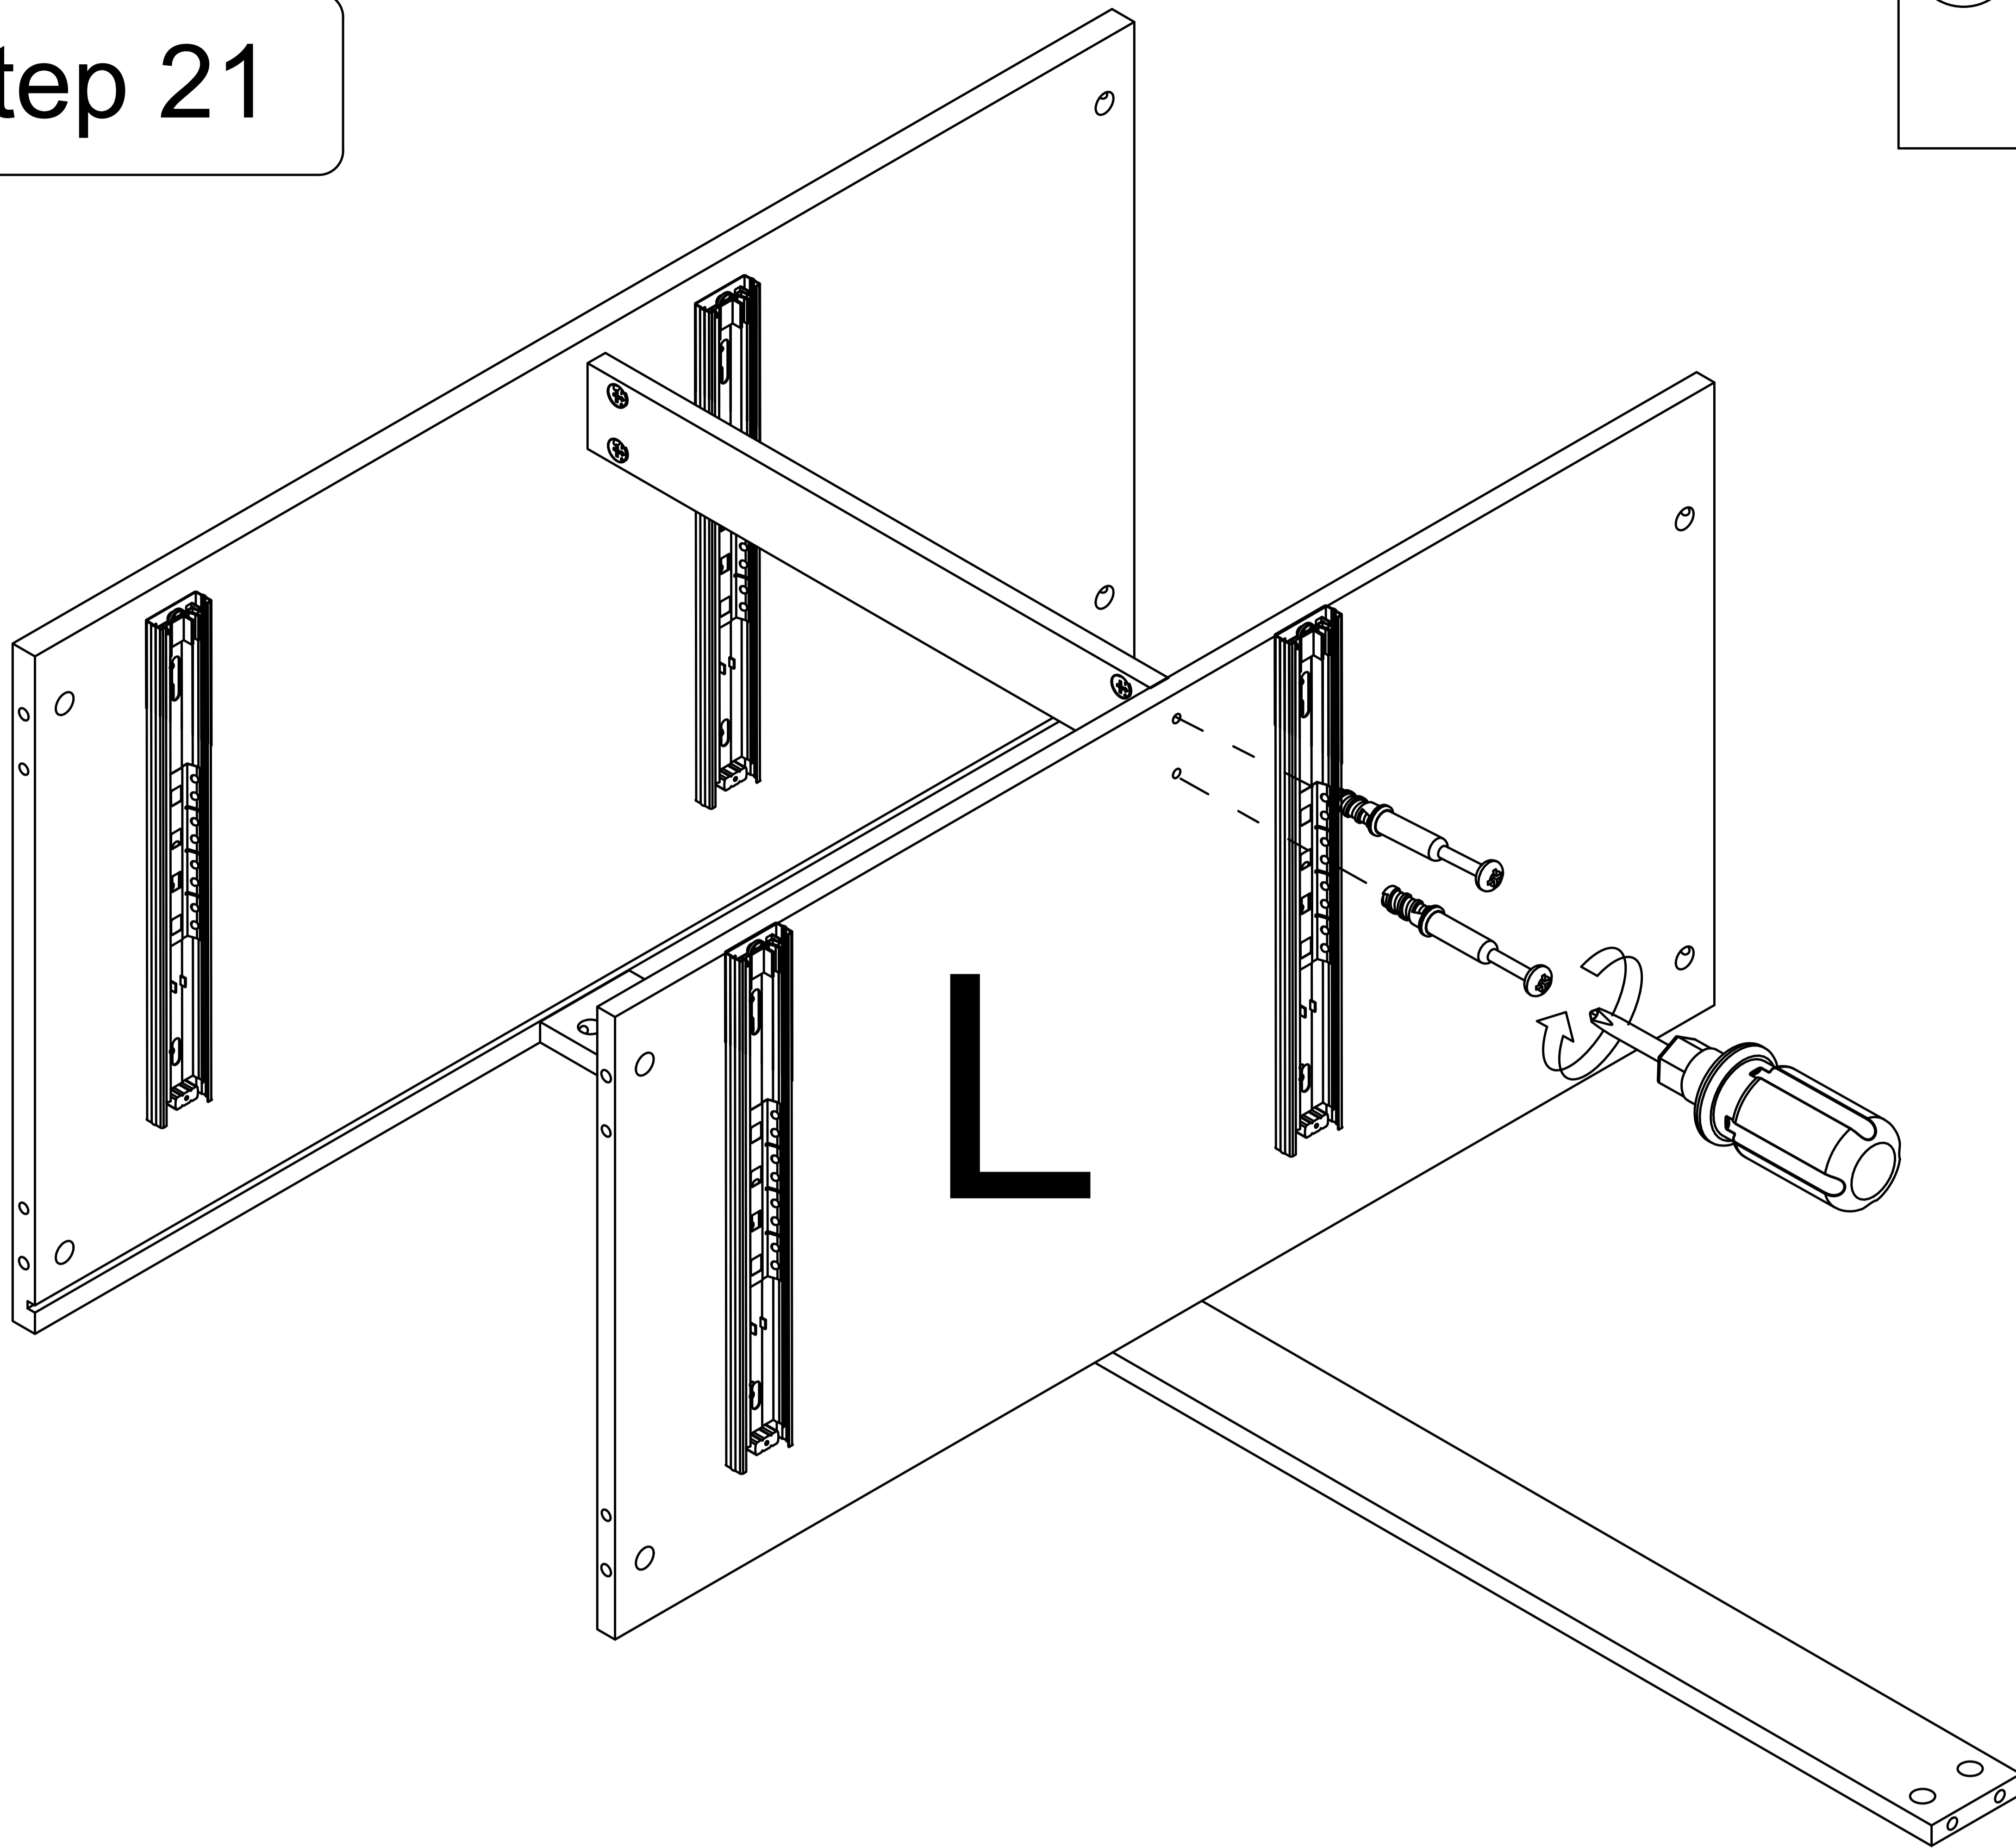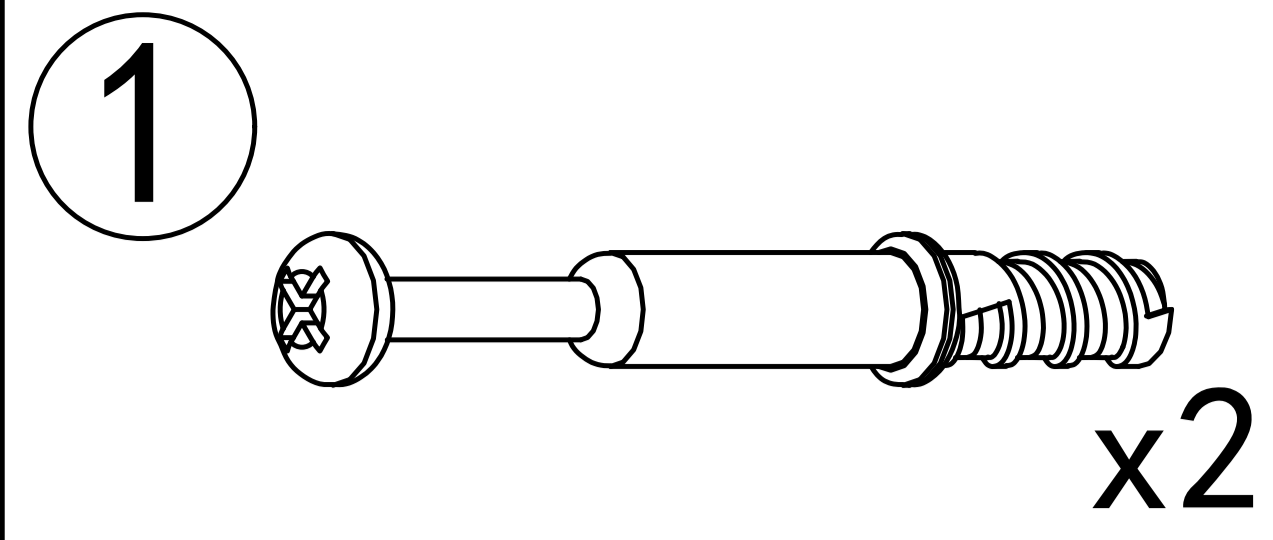




Step 22

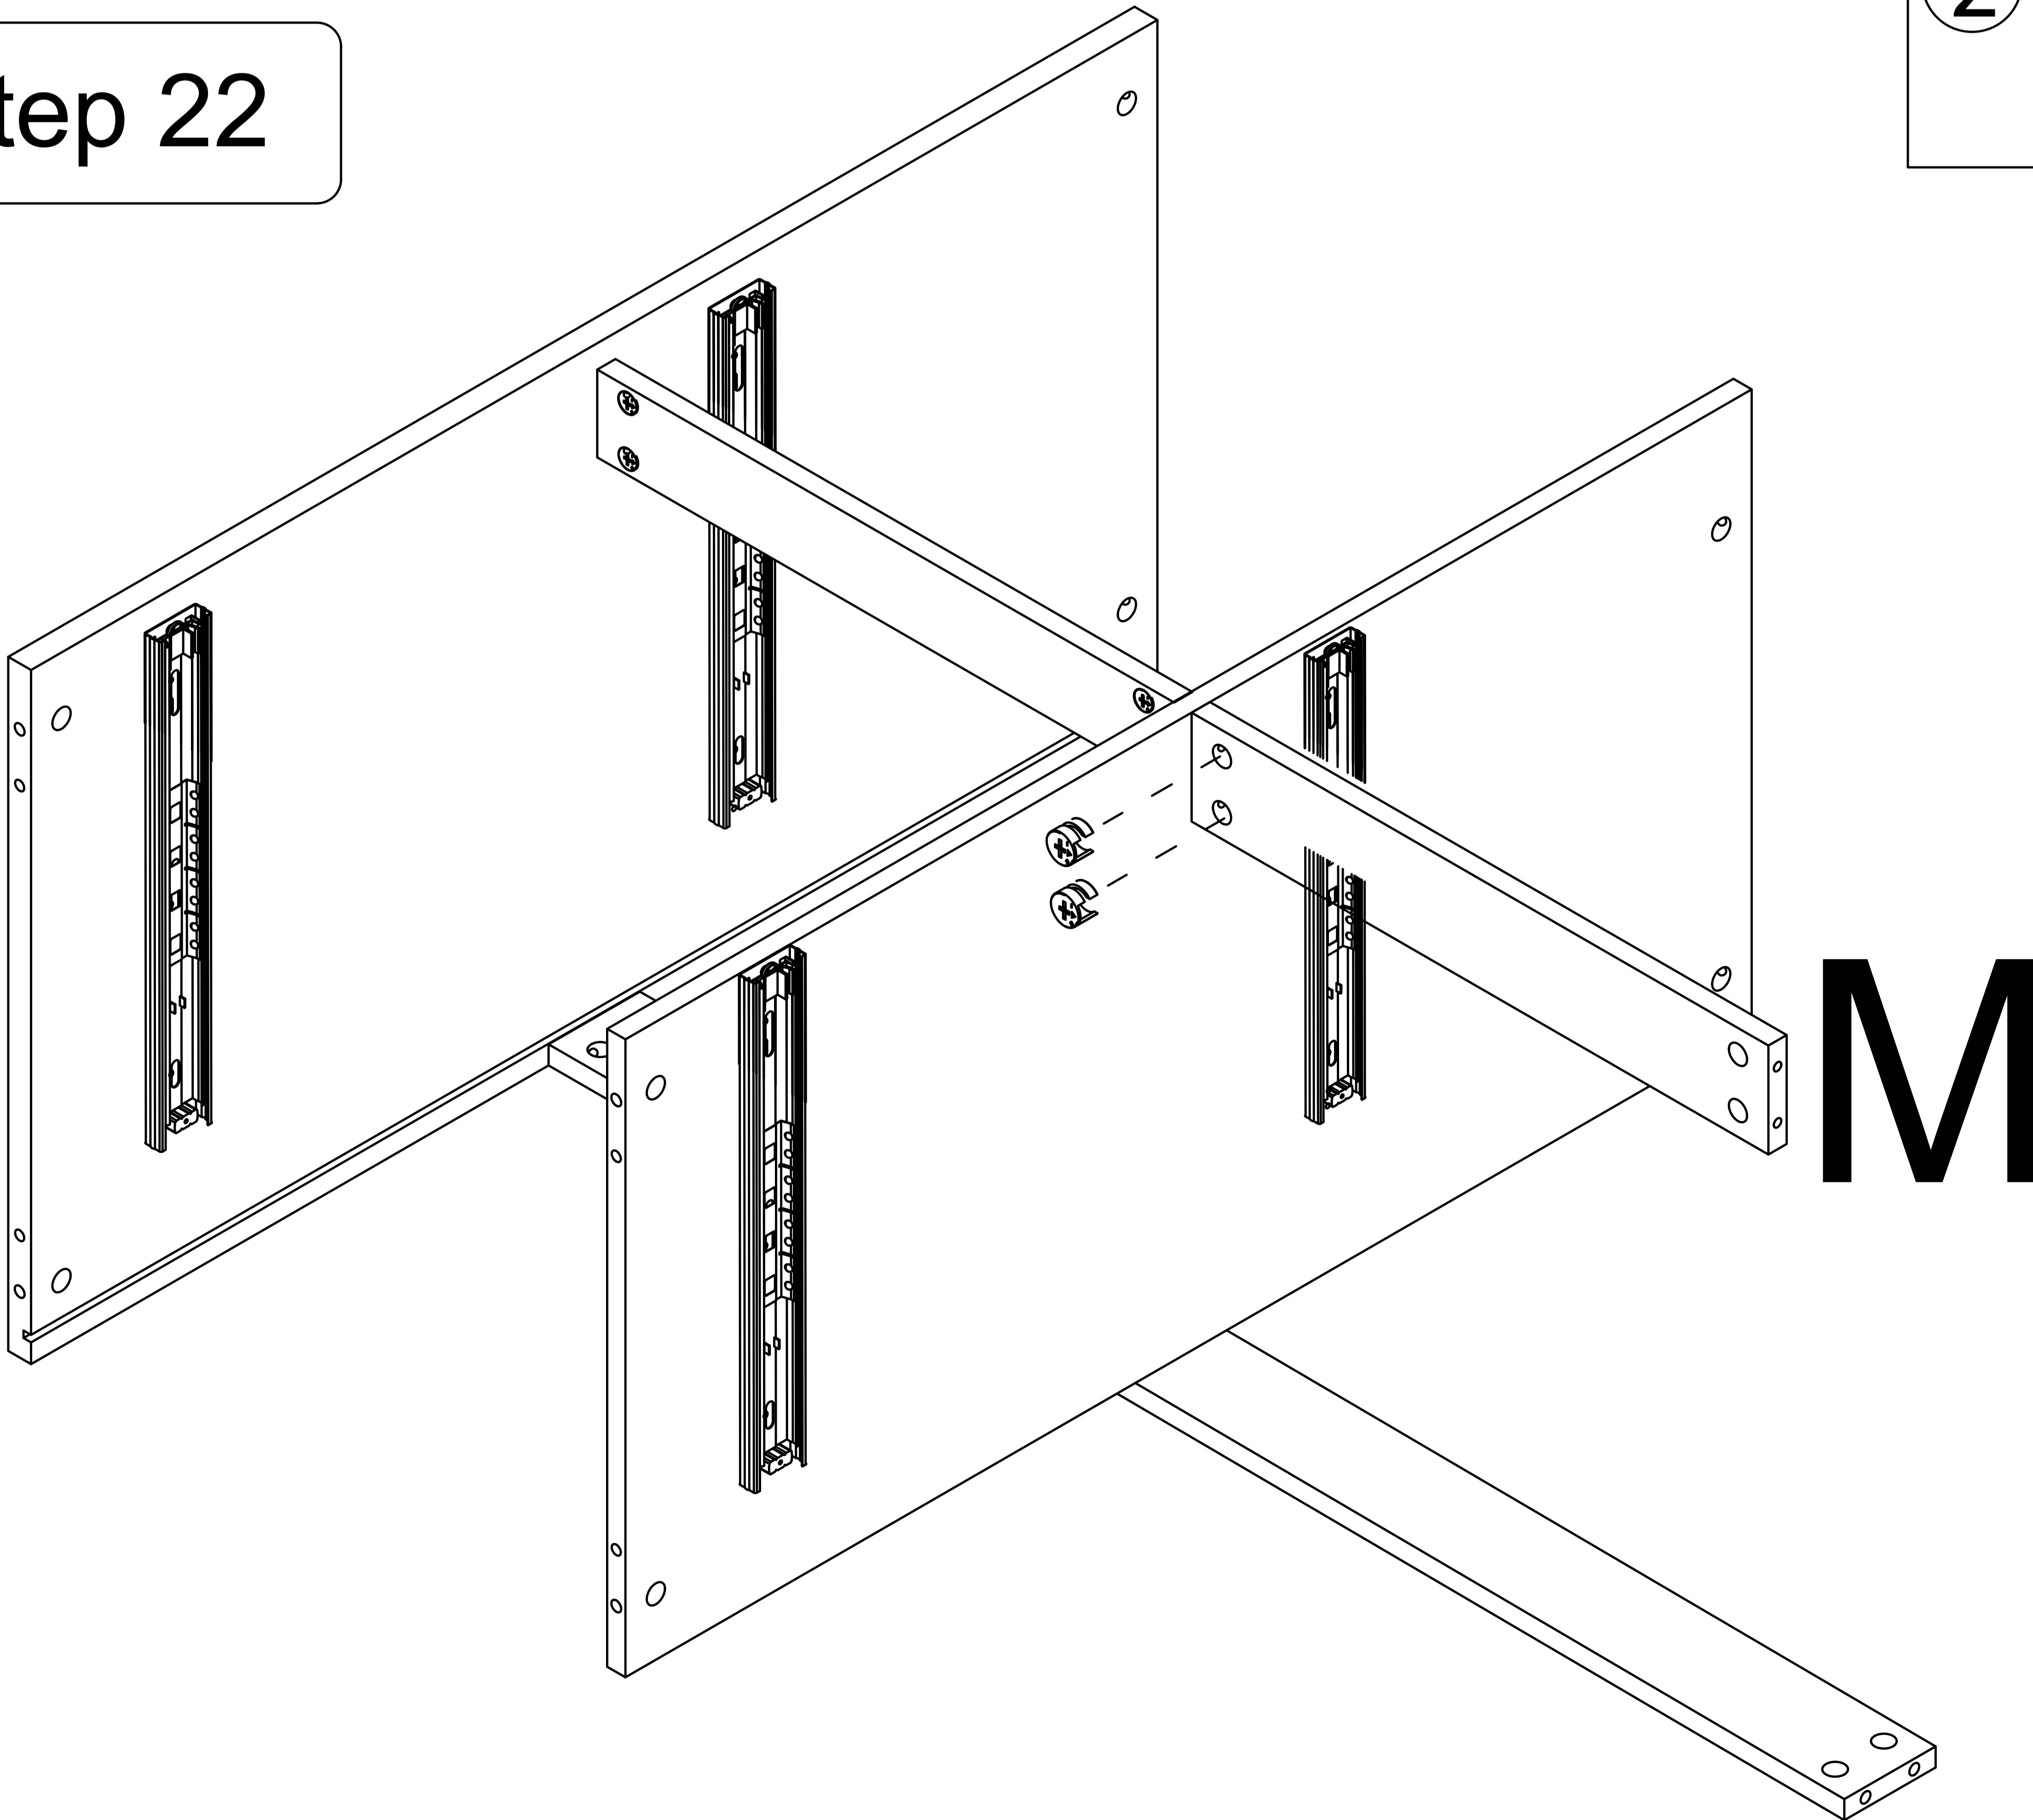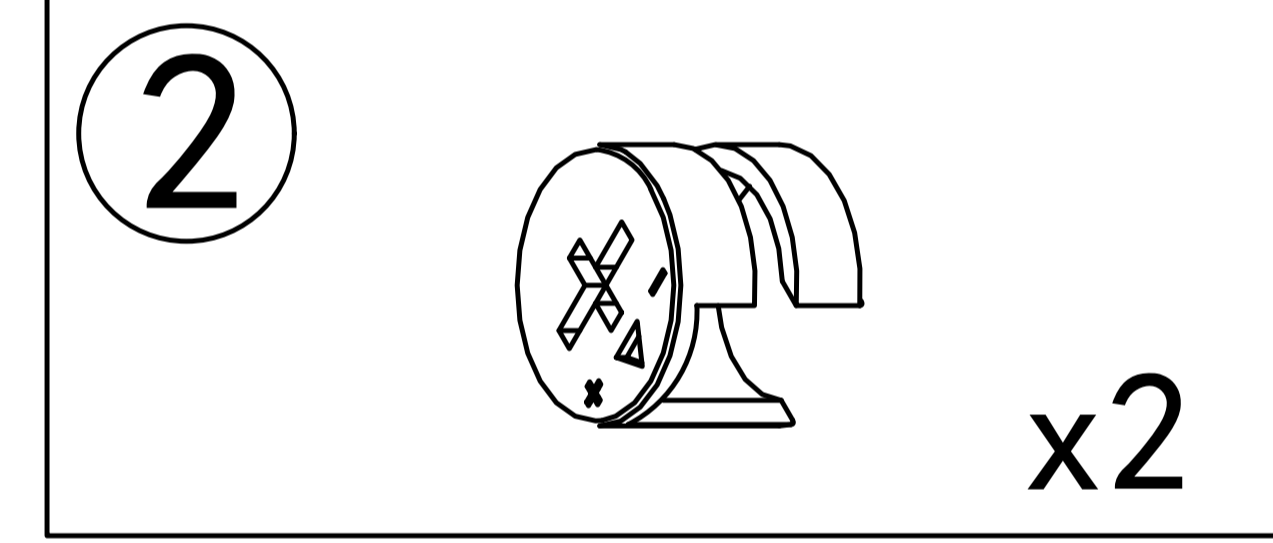





Step 23

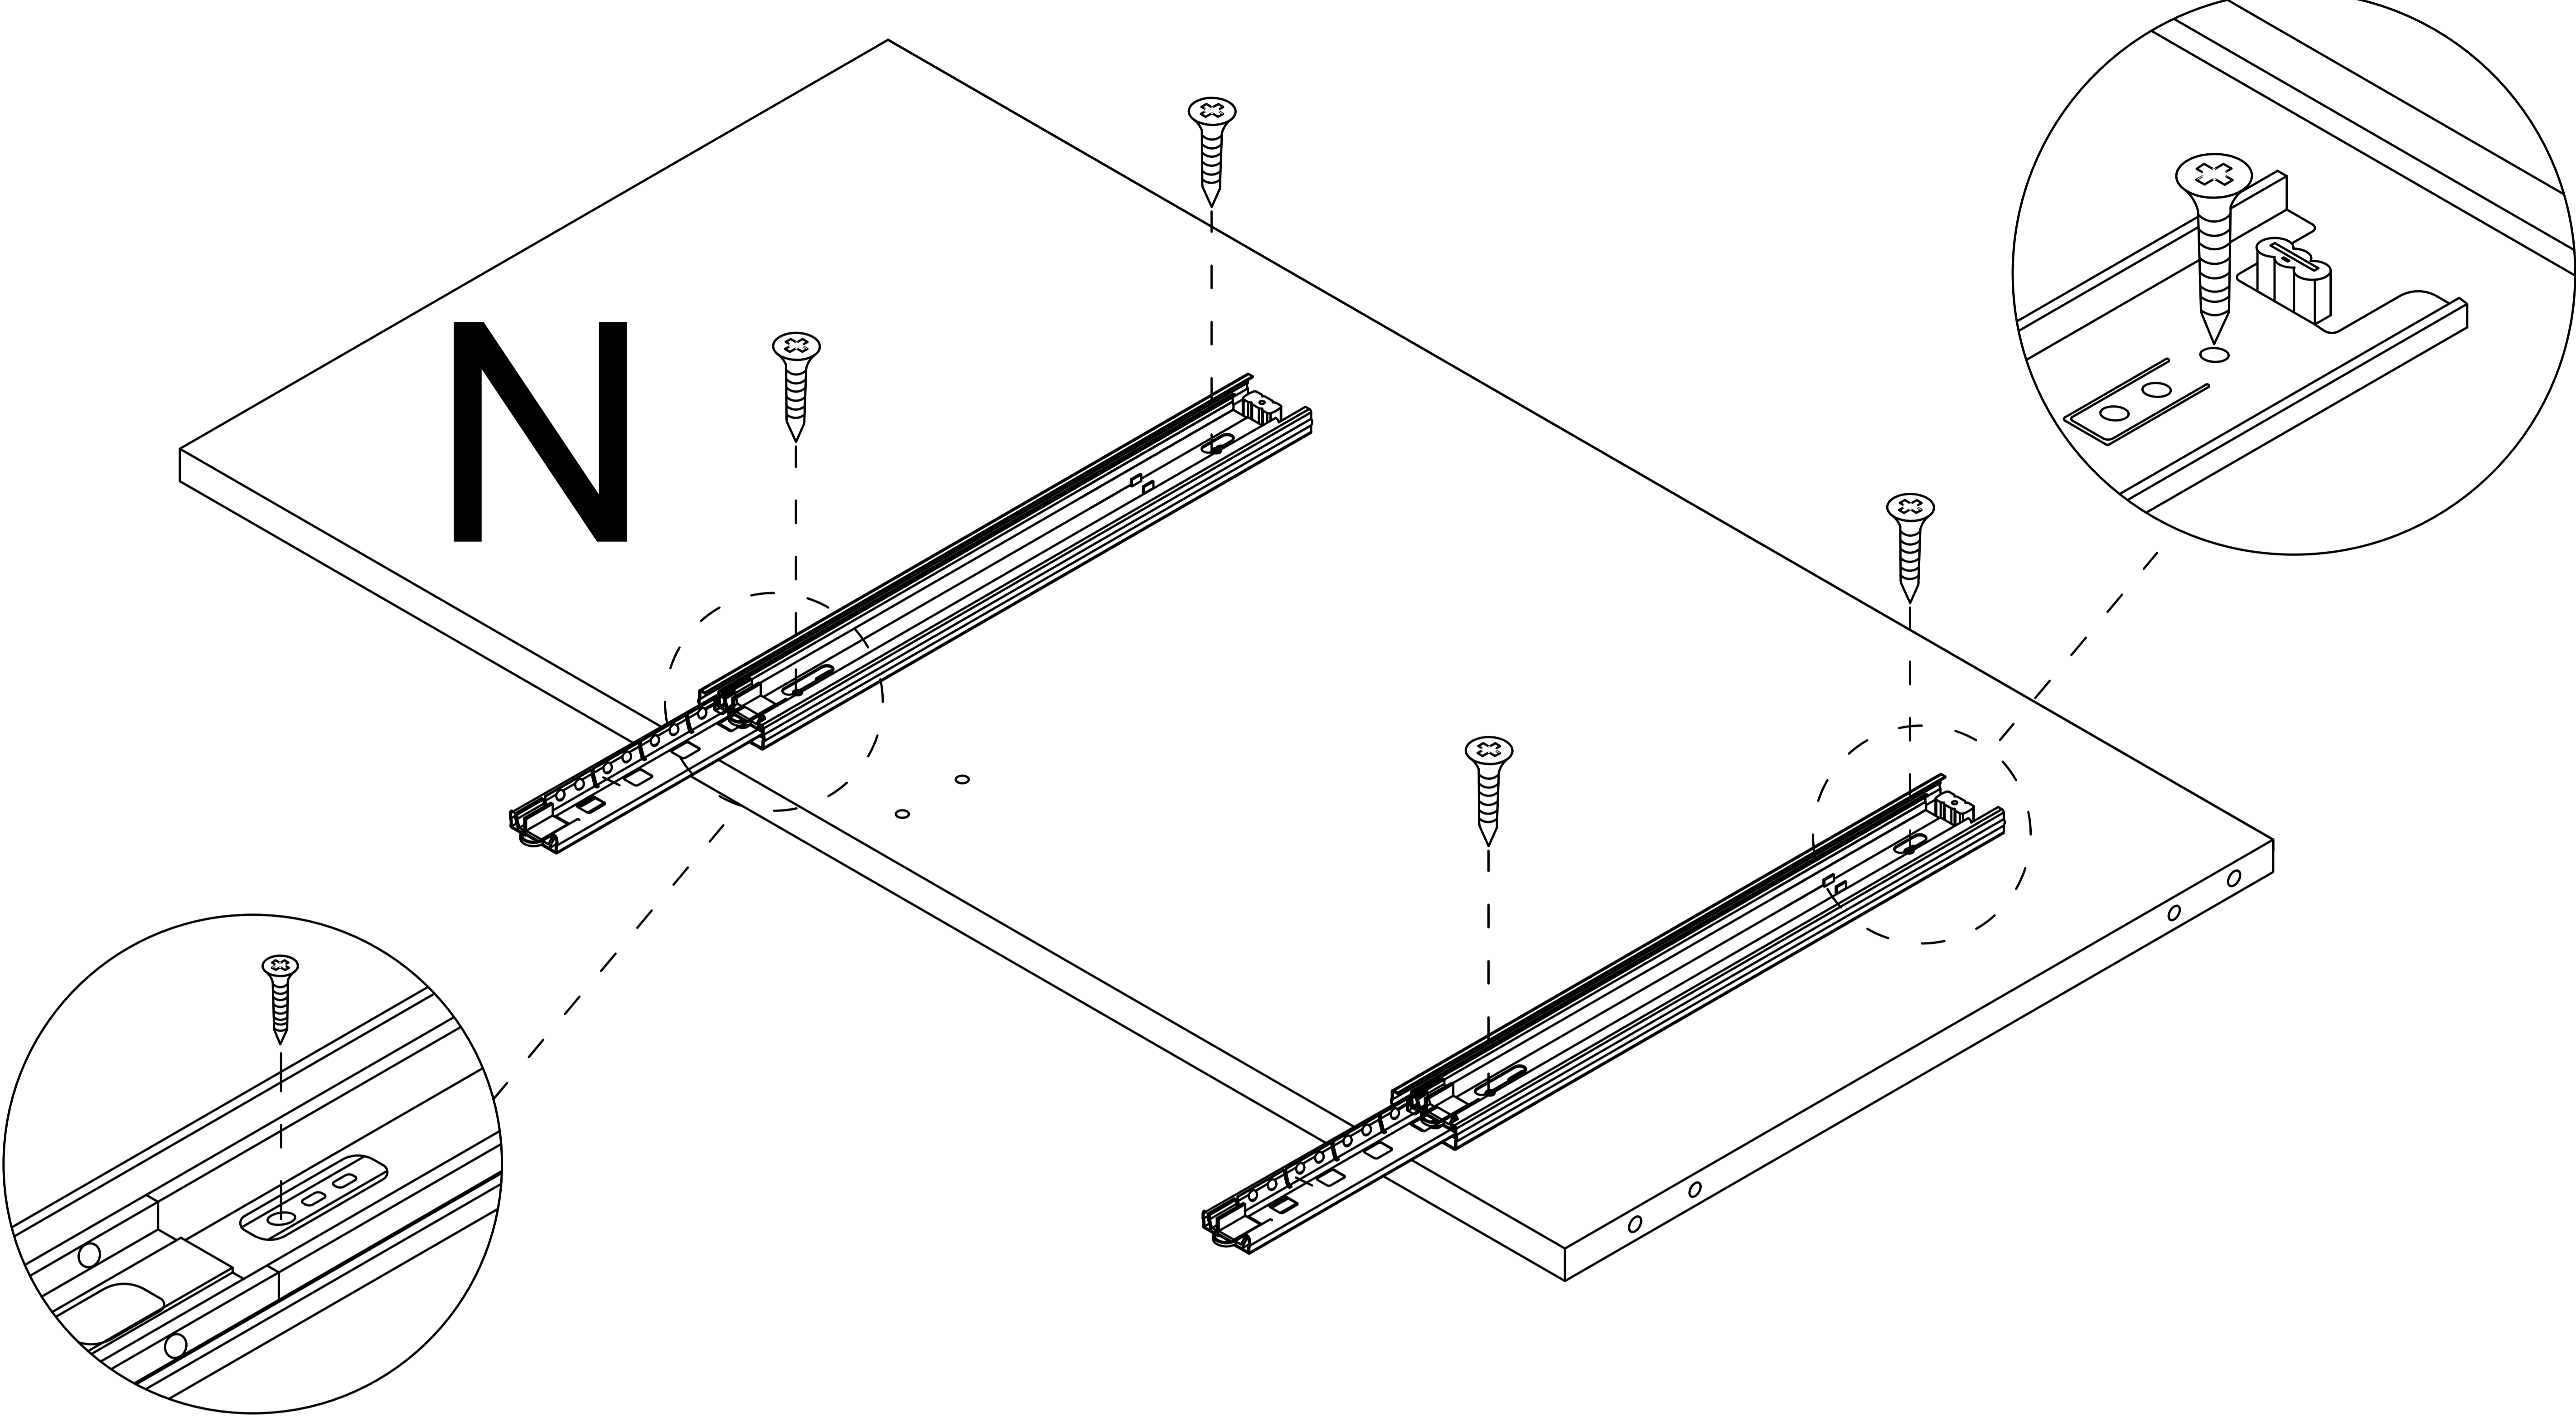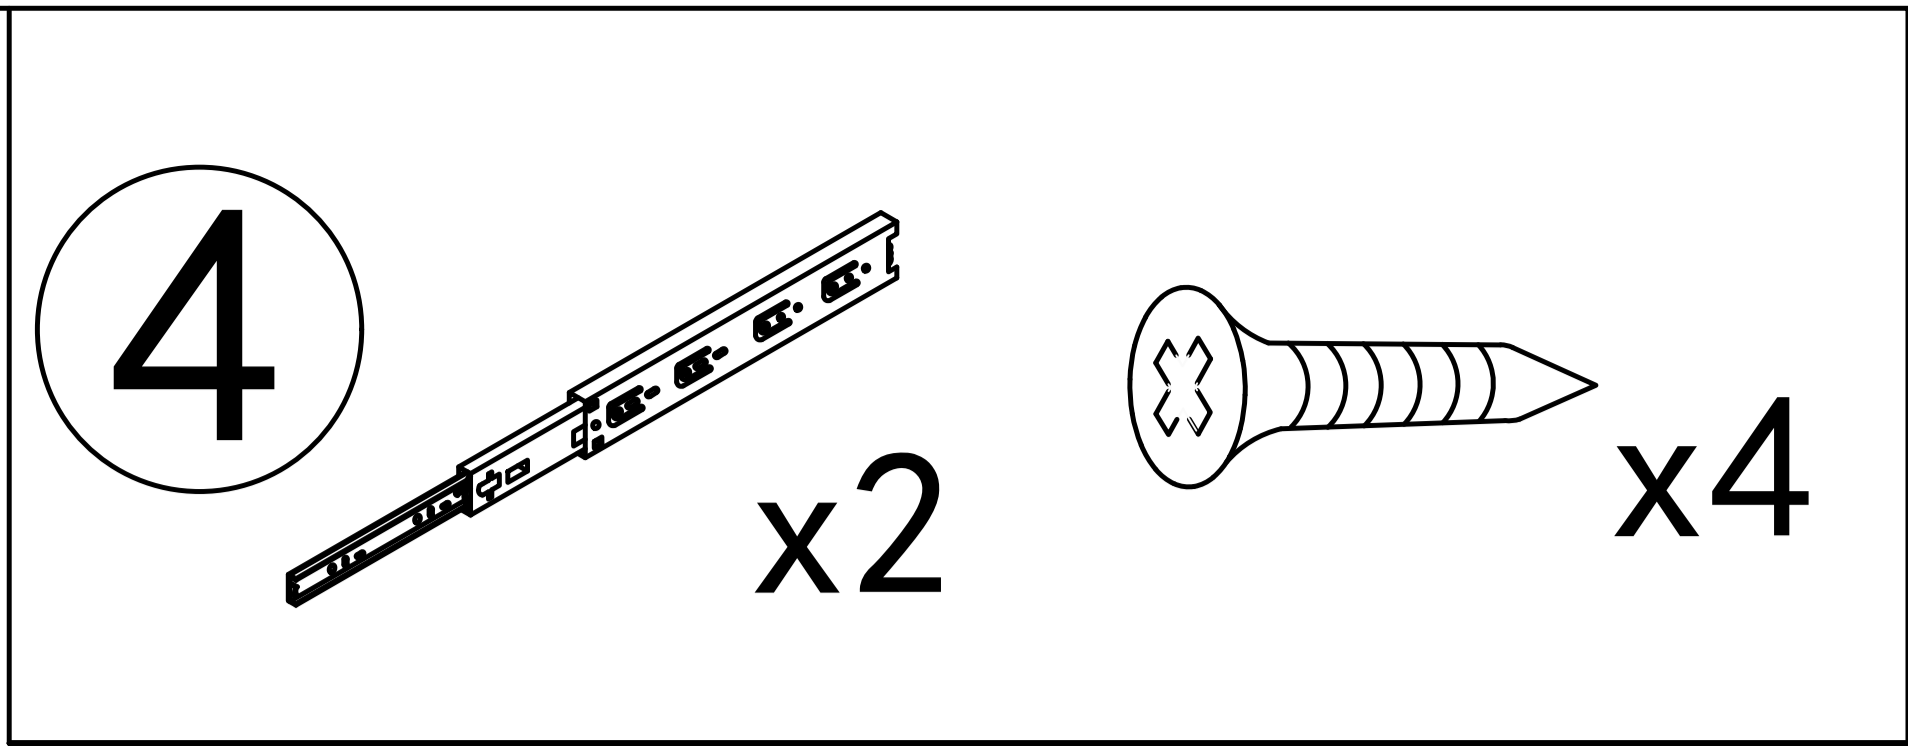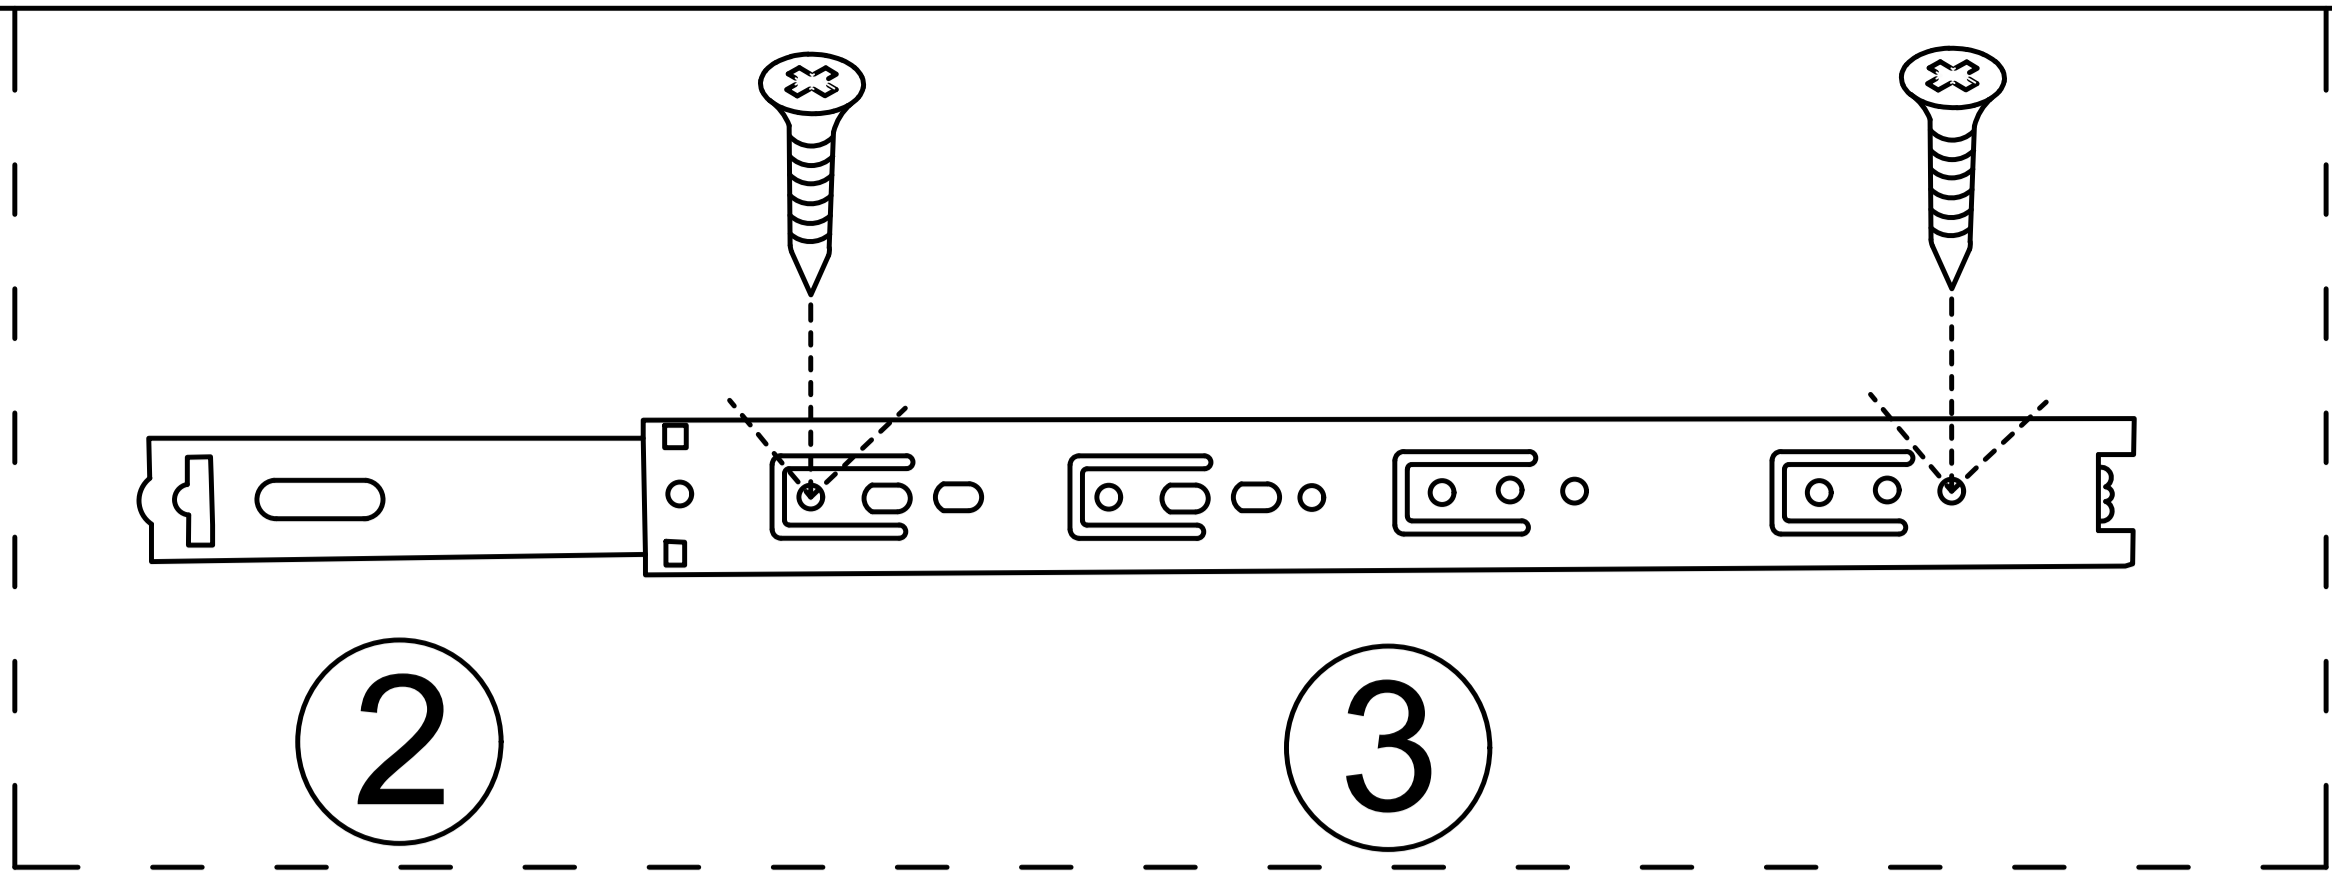





Step 24

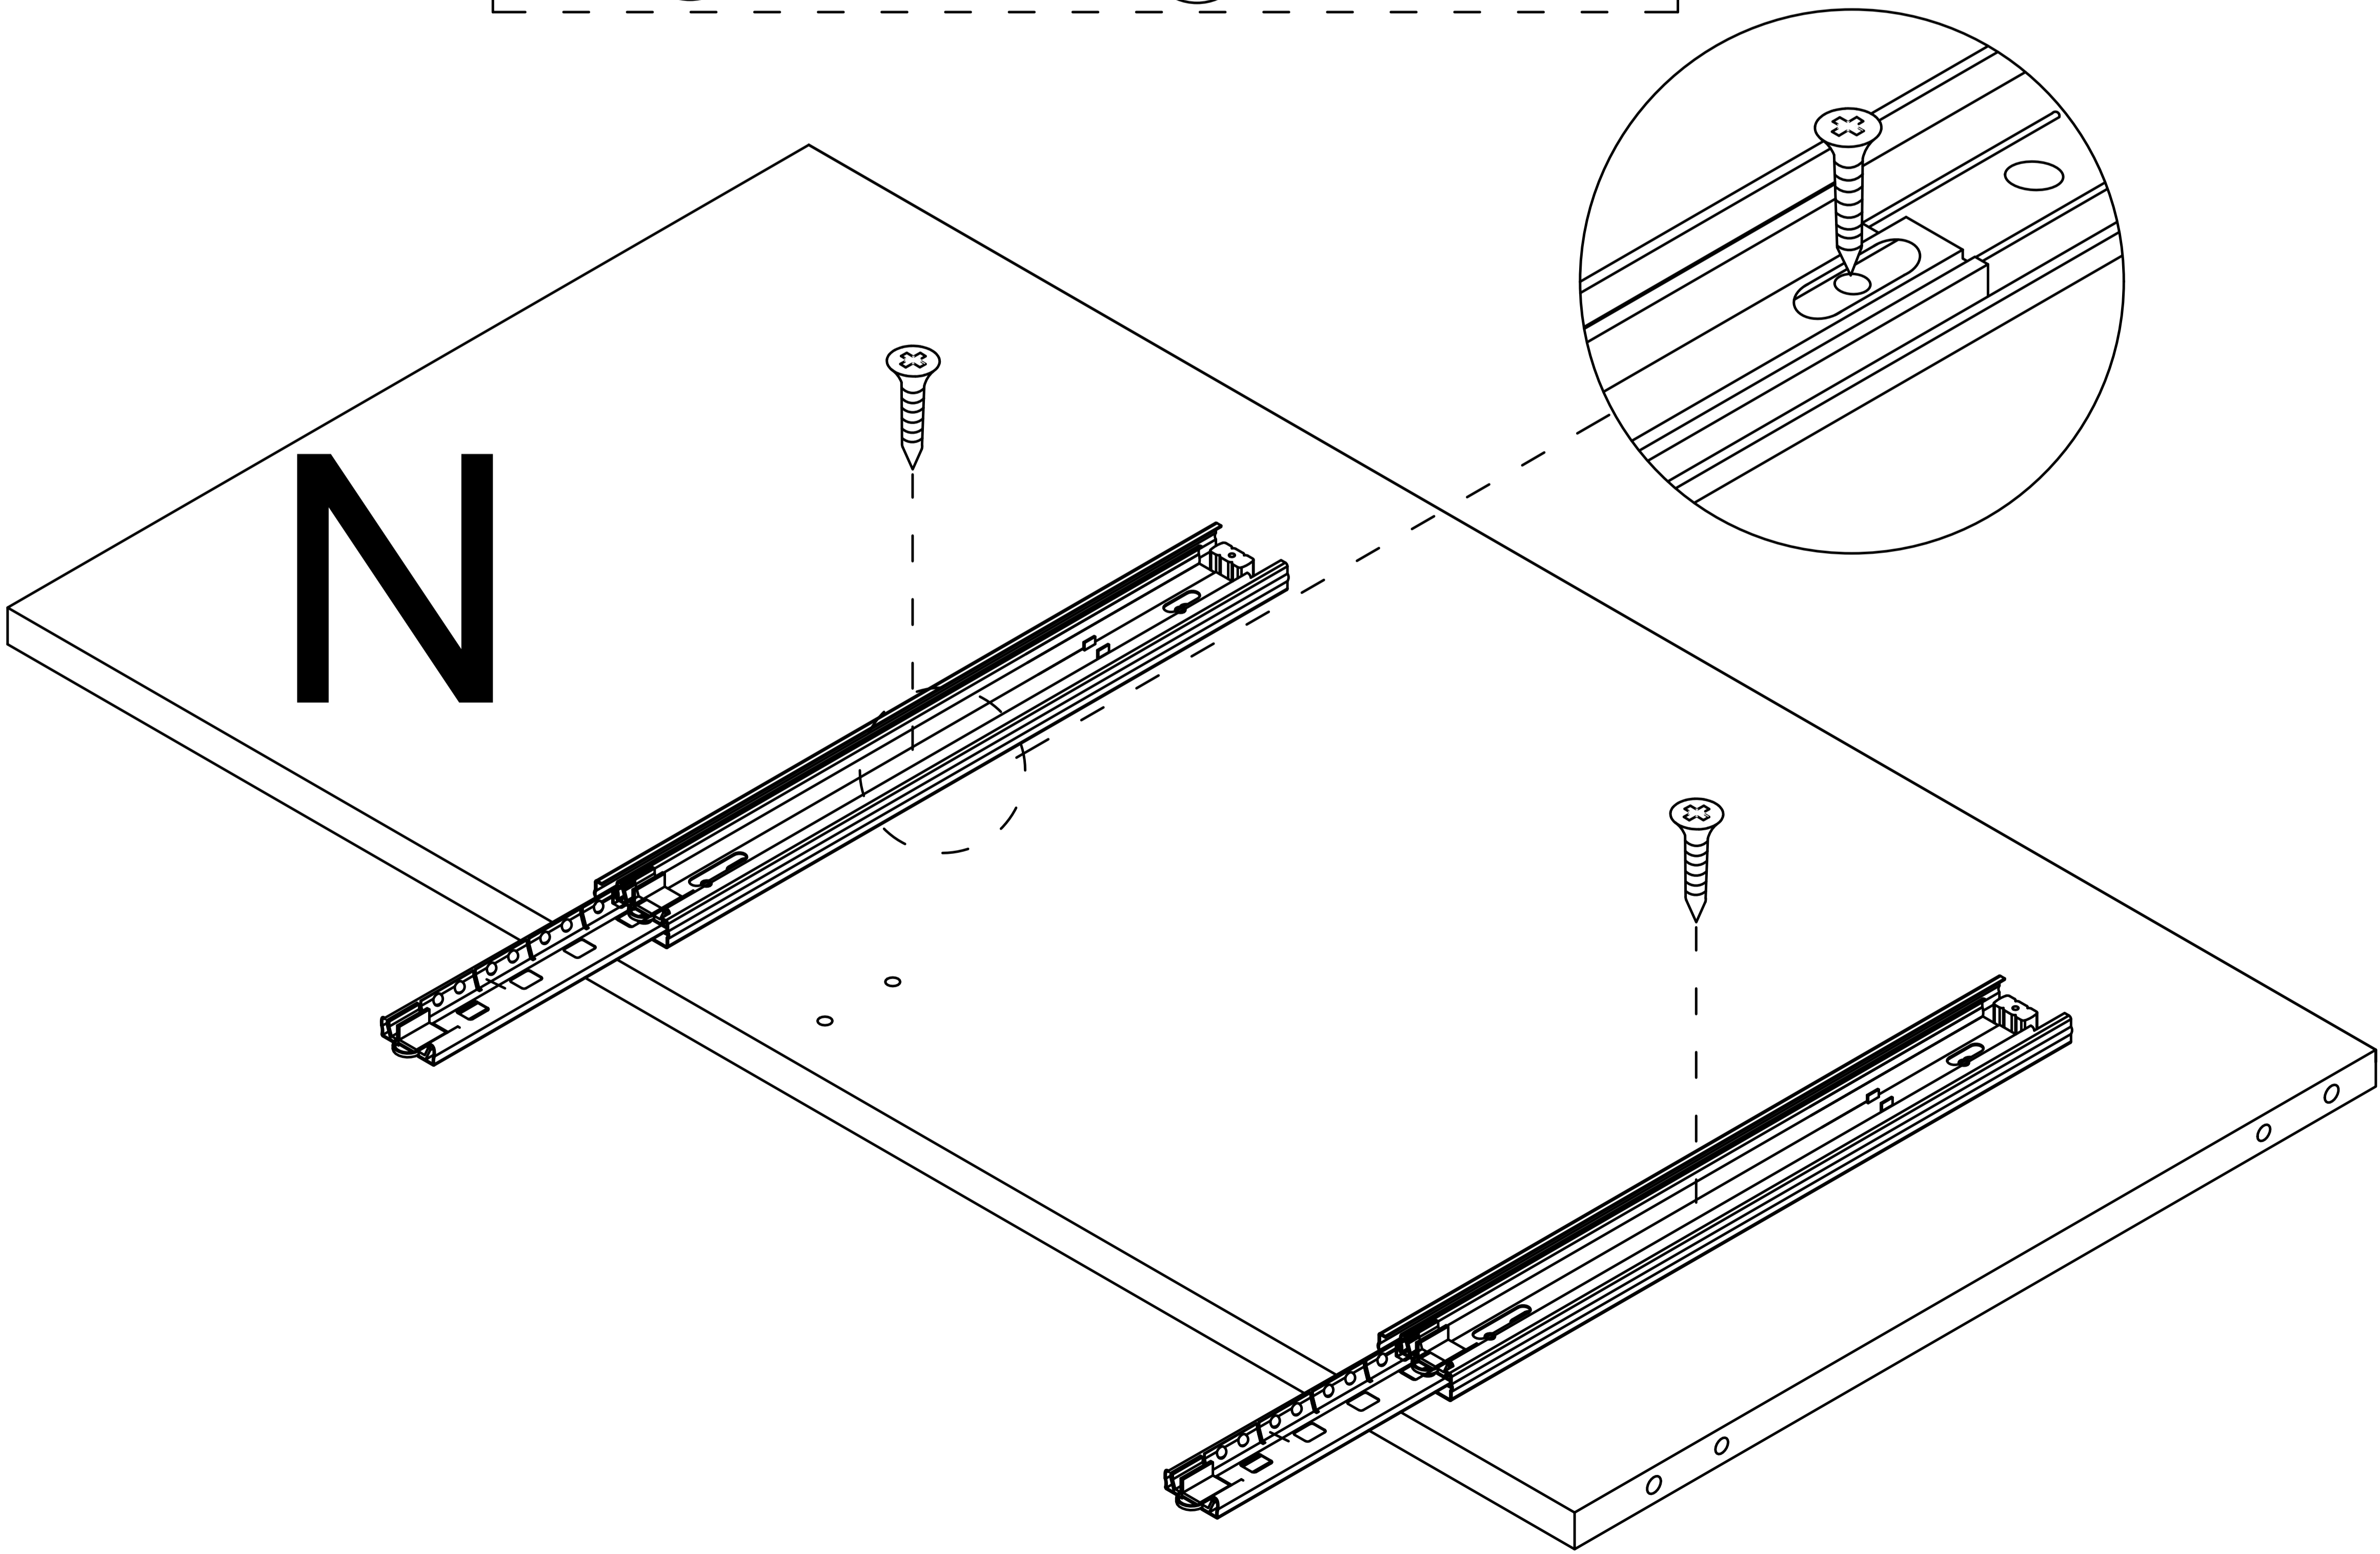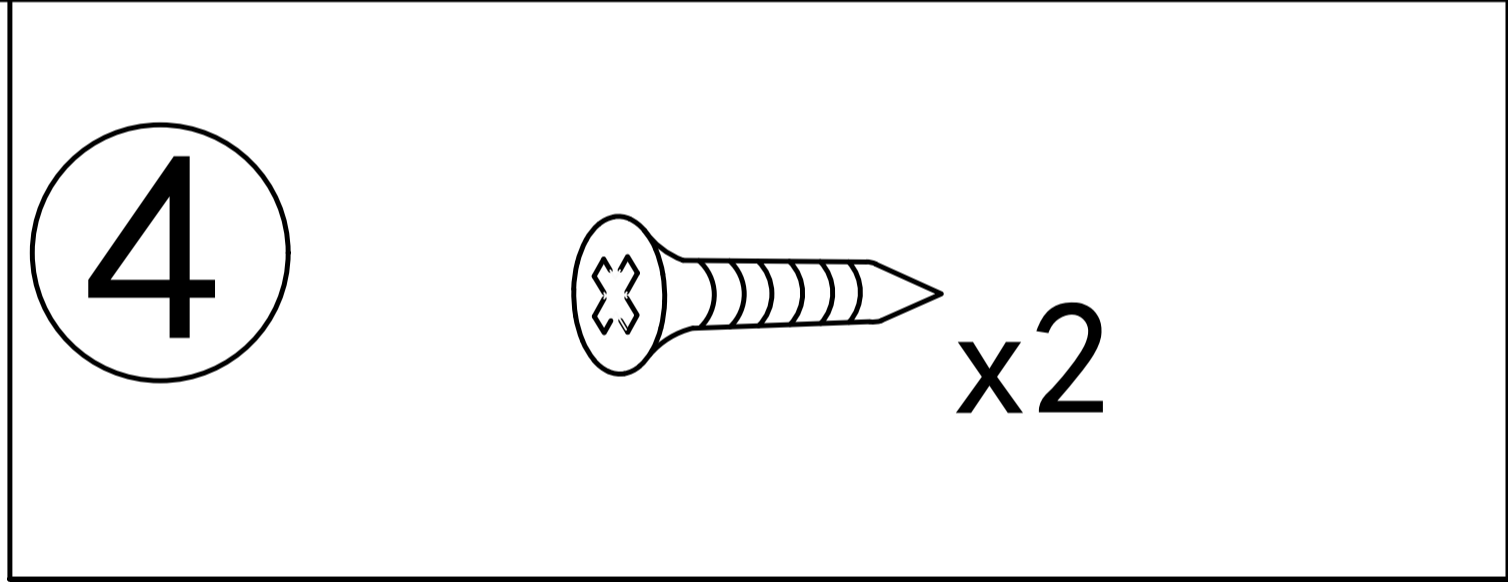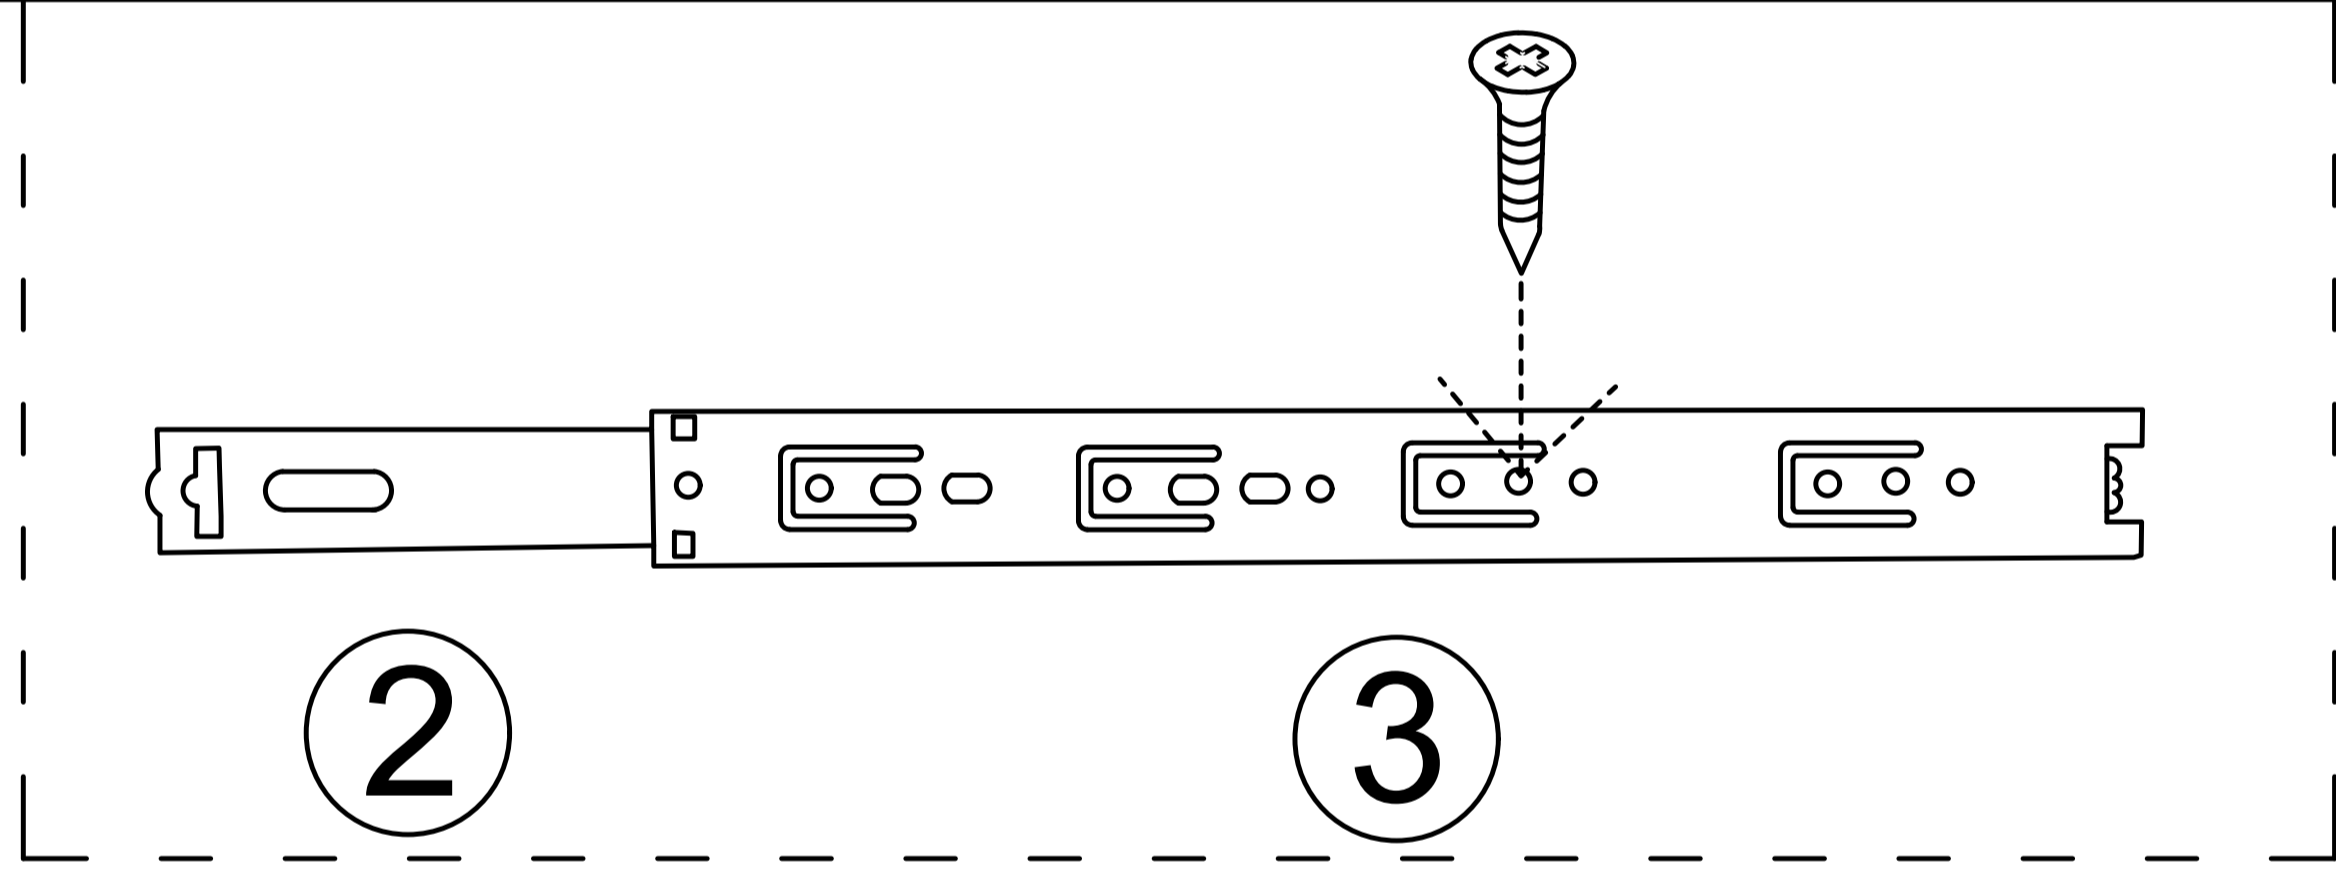



Step 25

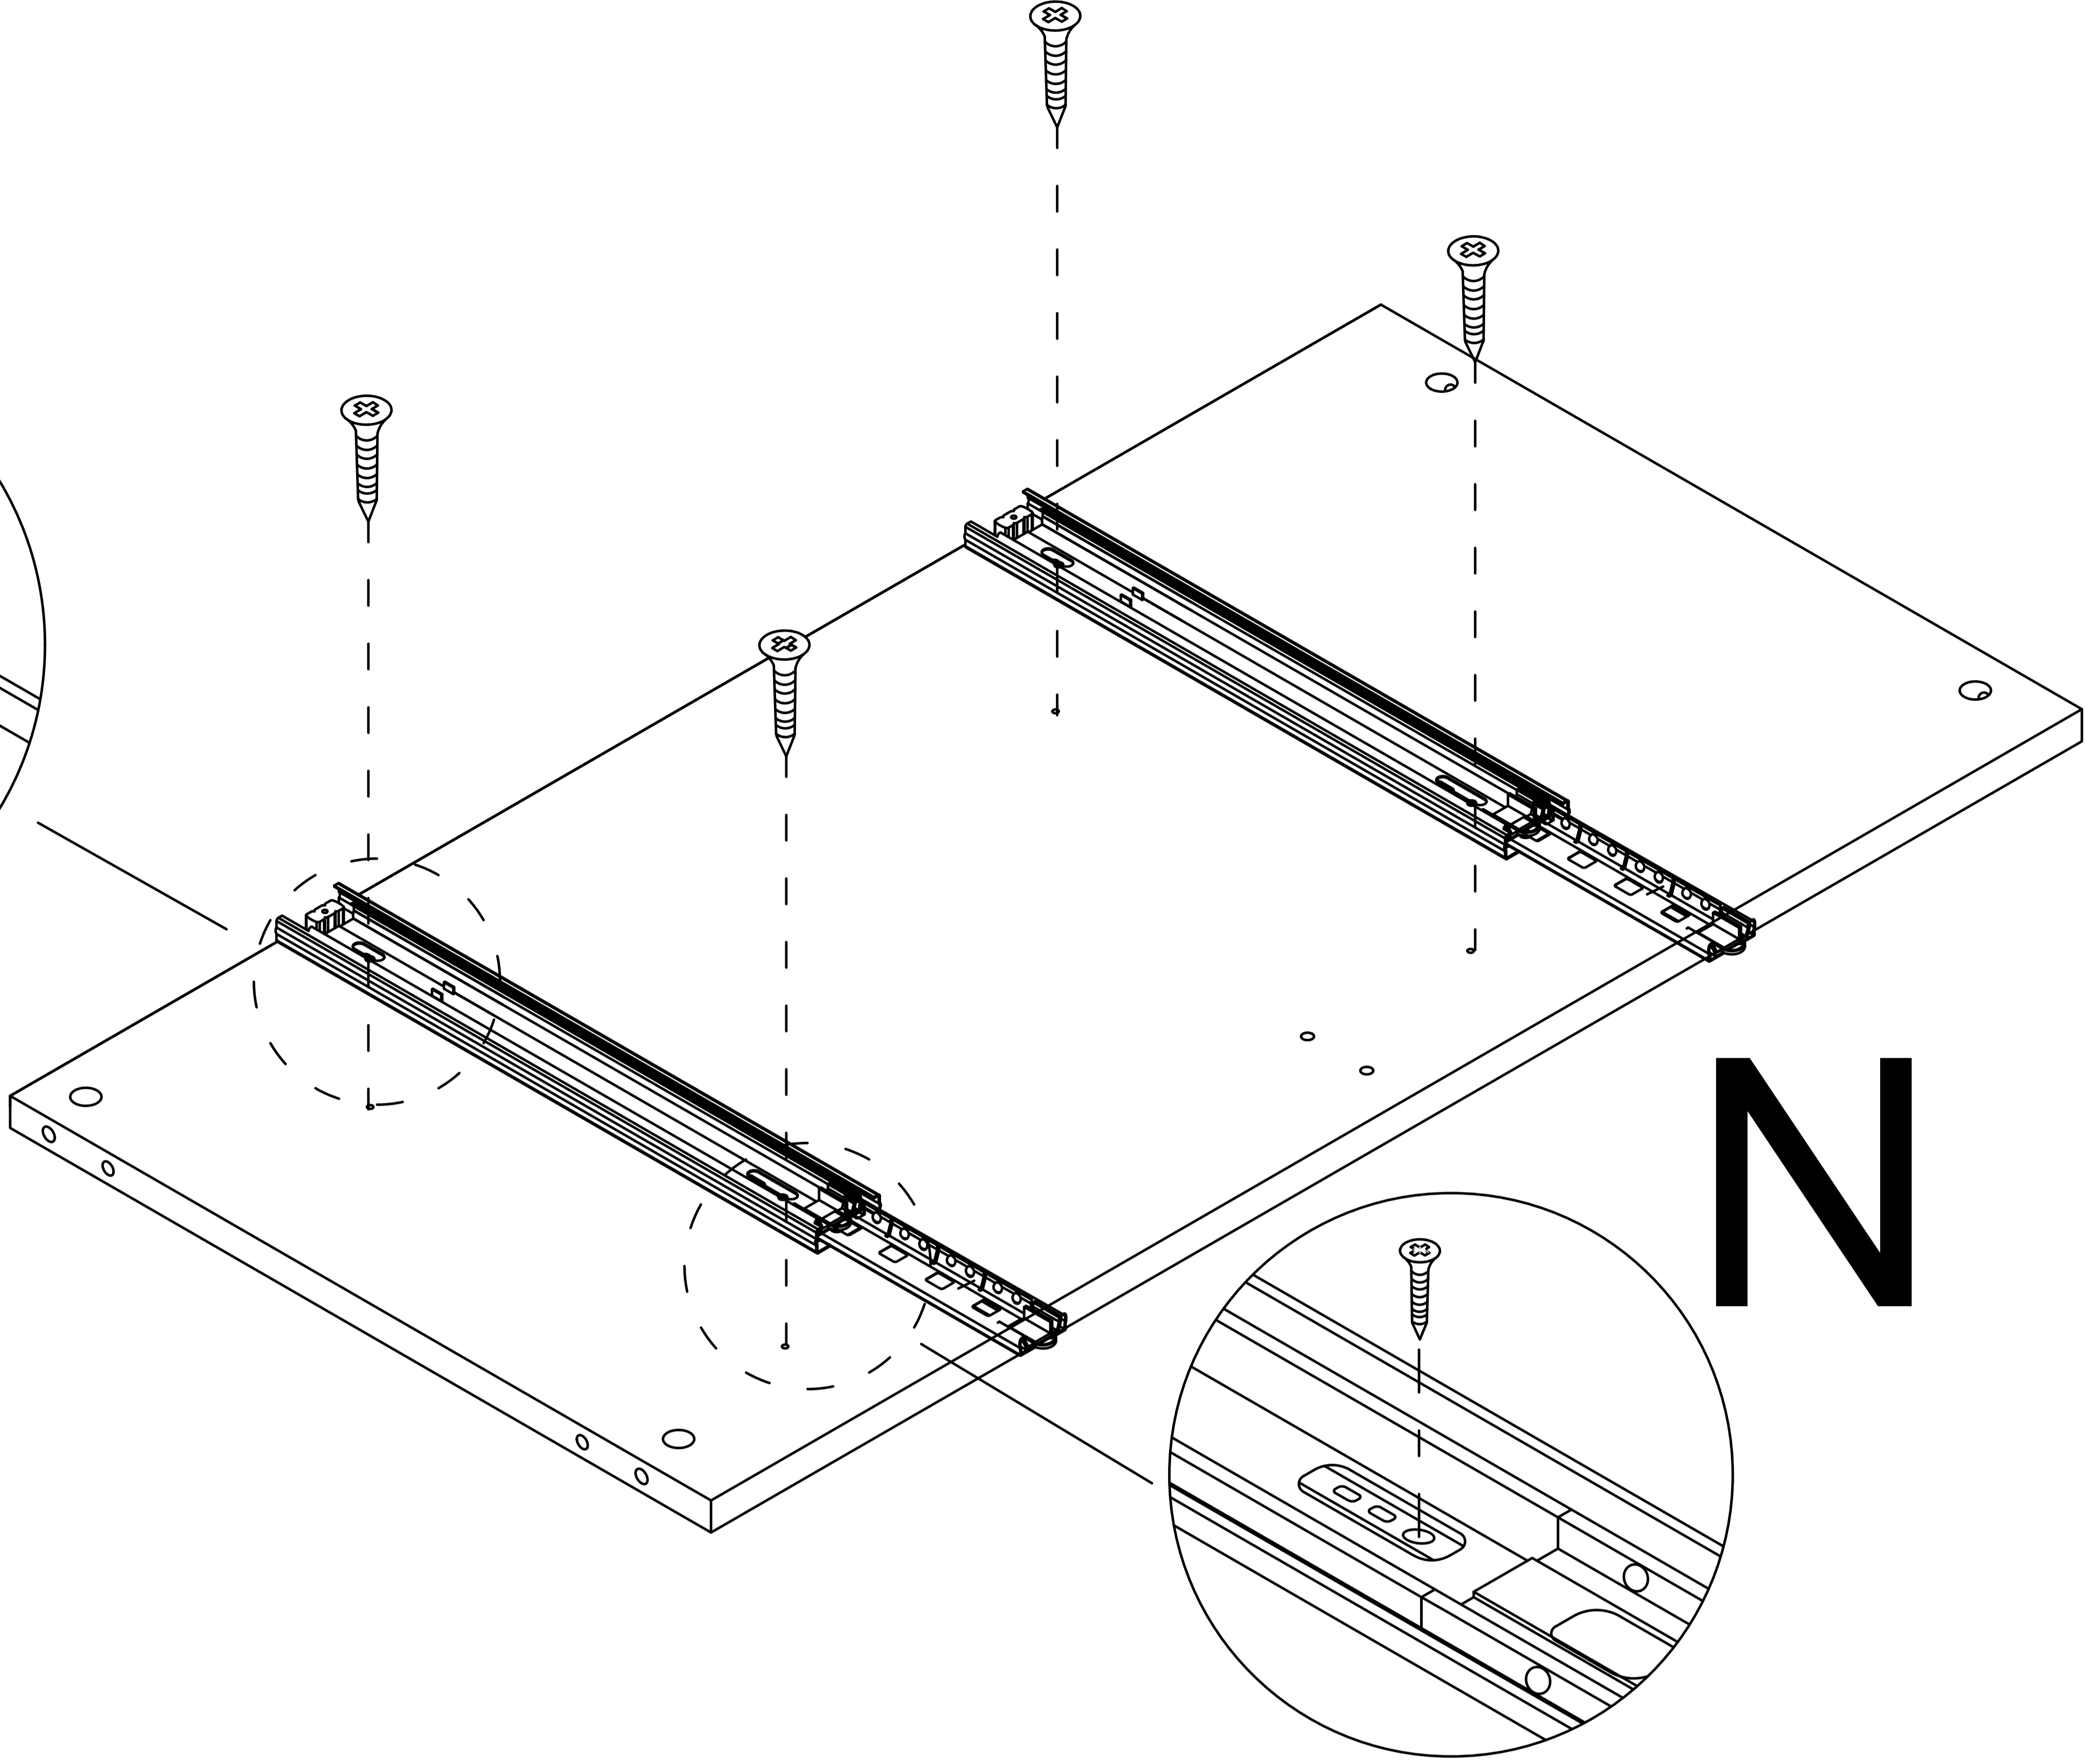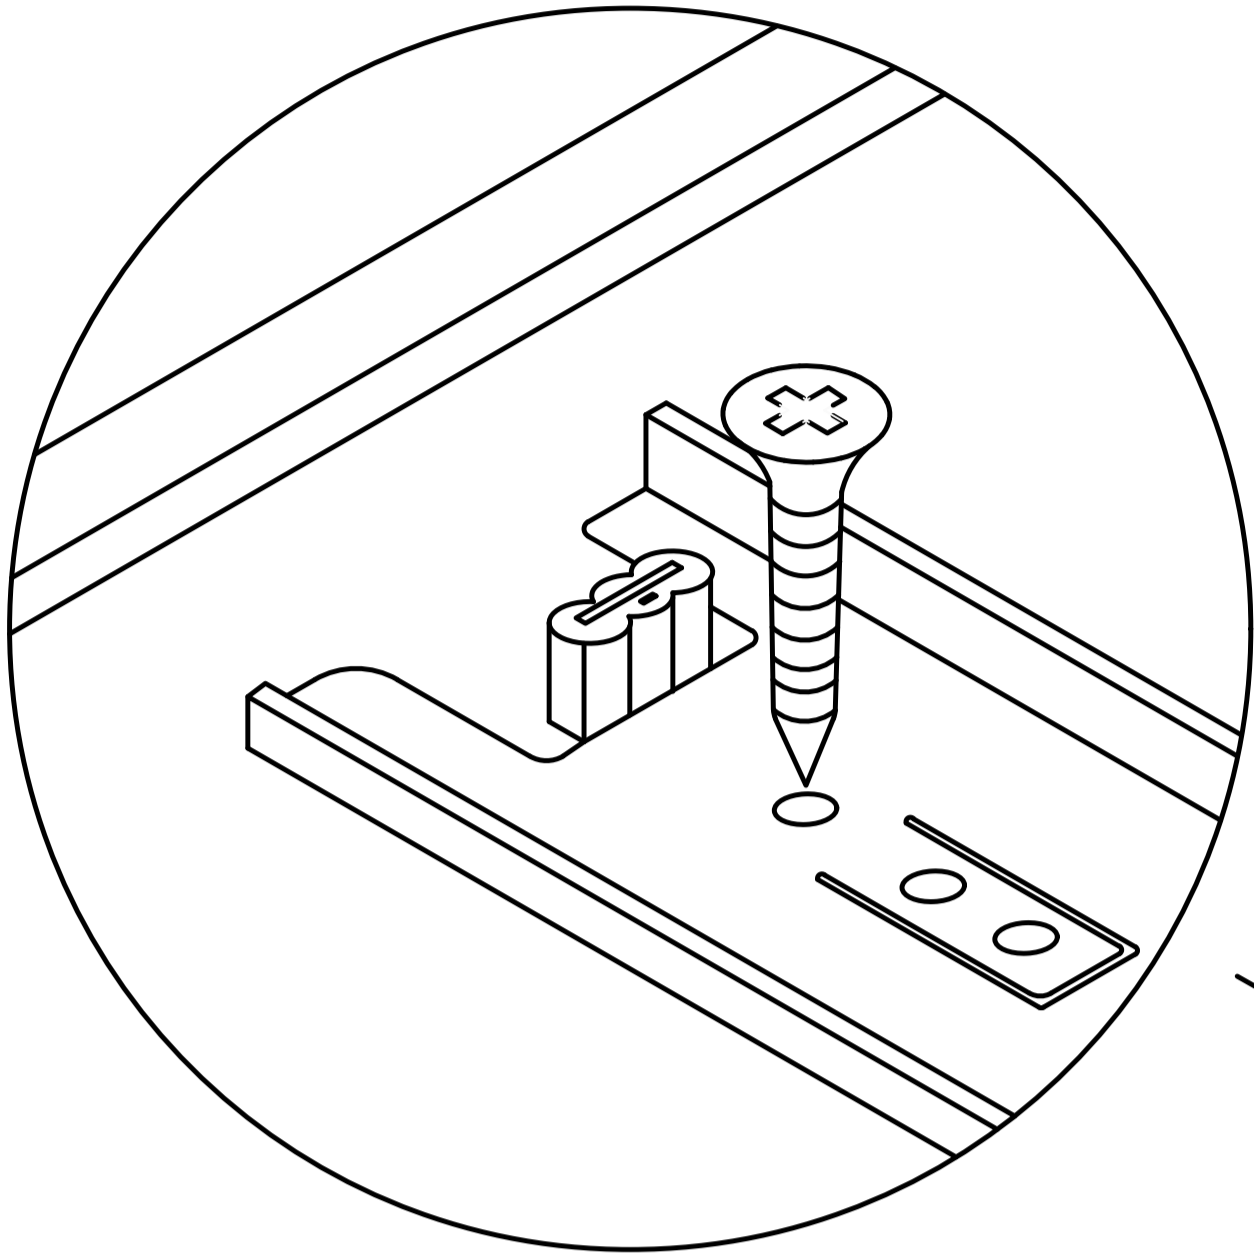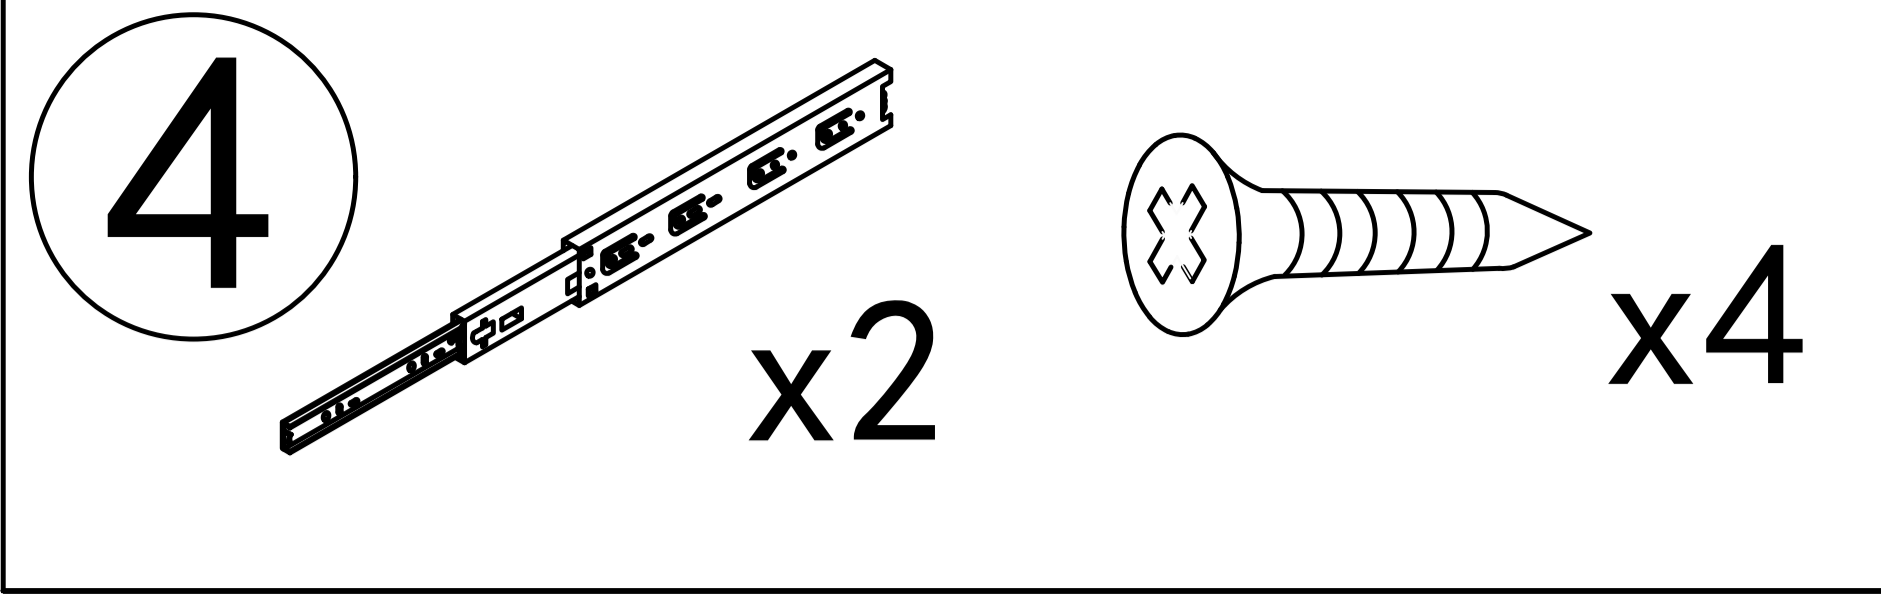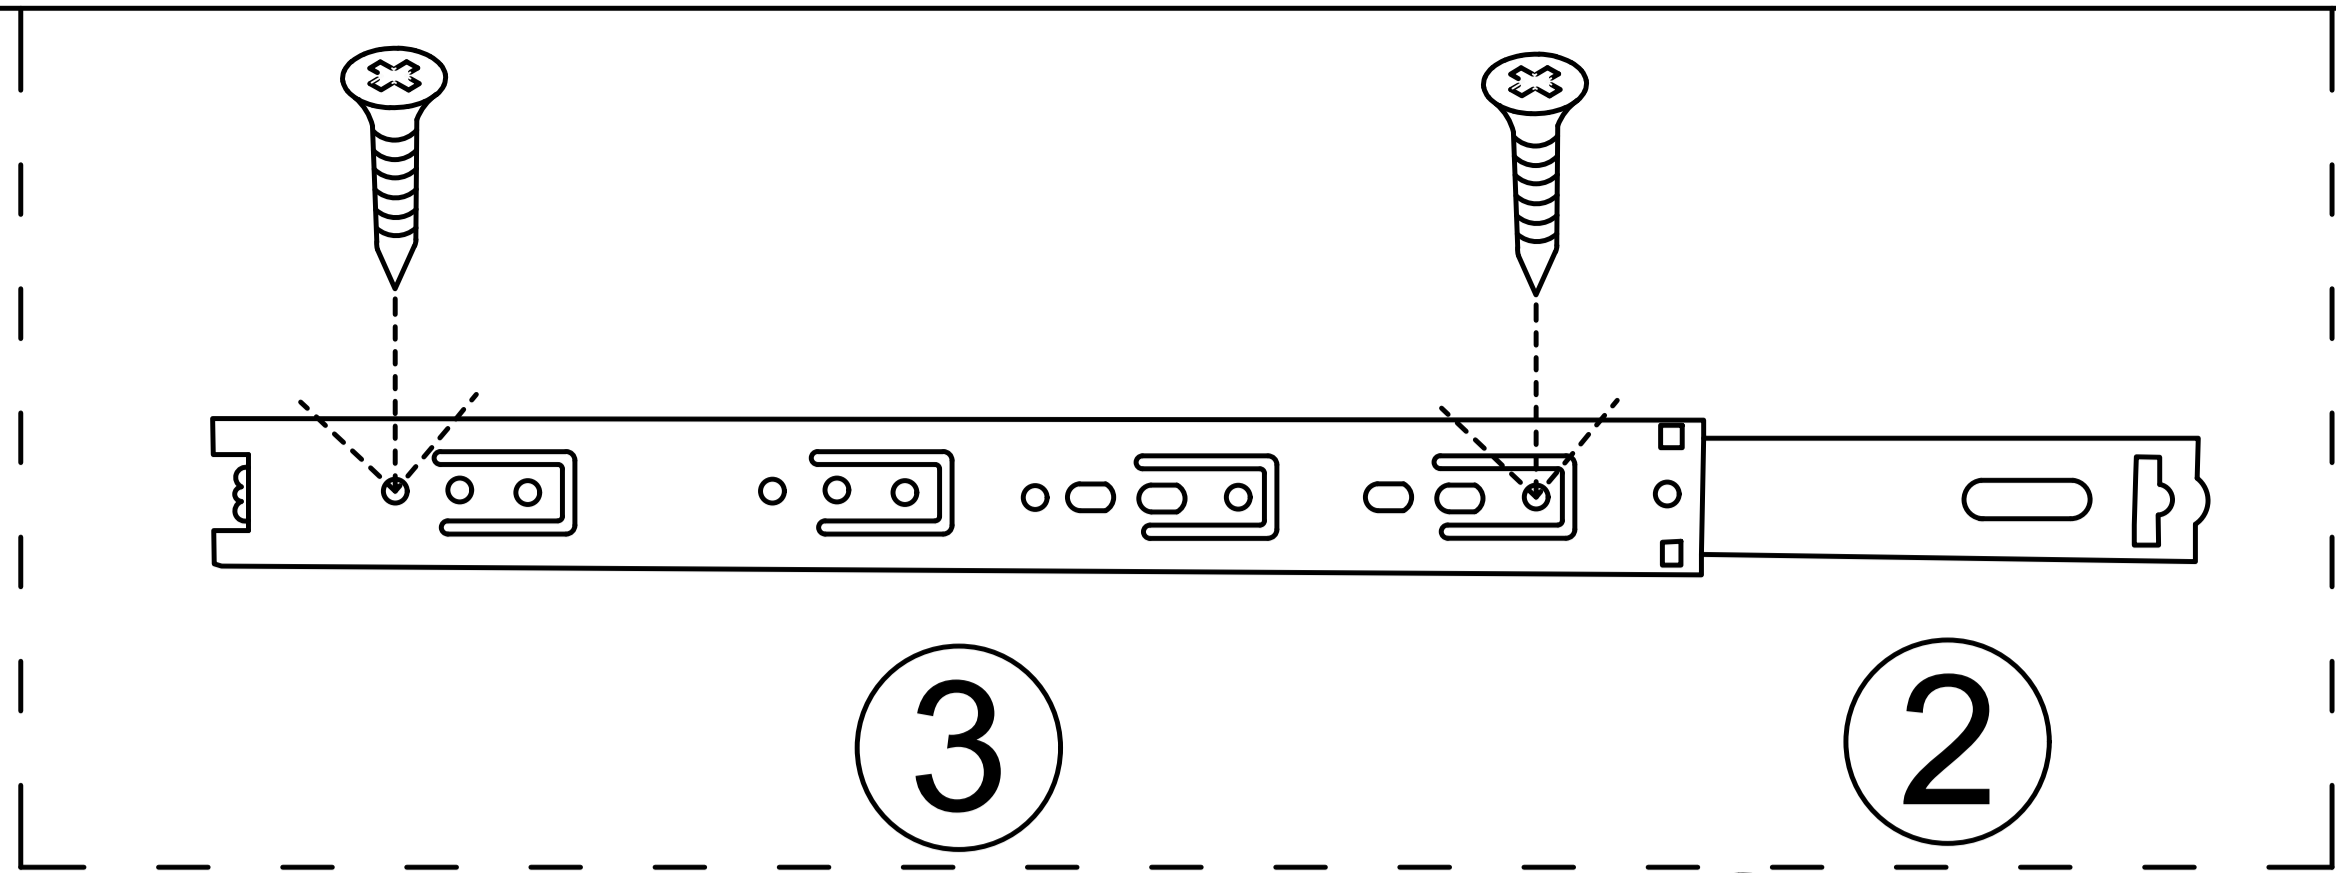



Step 26

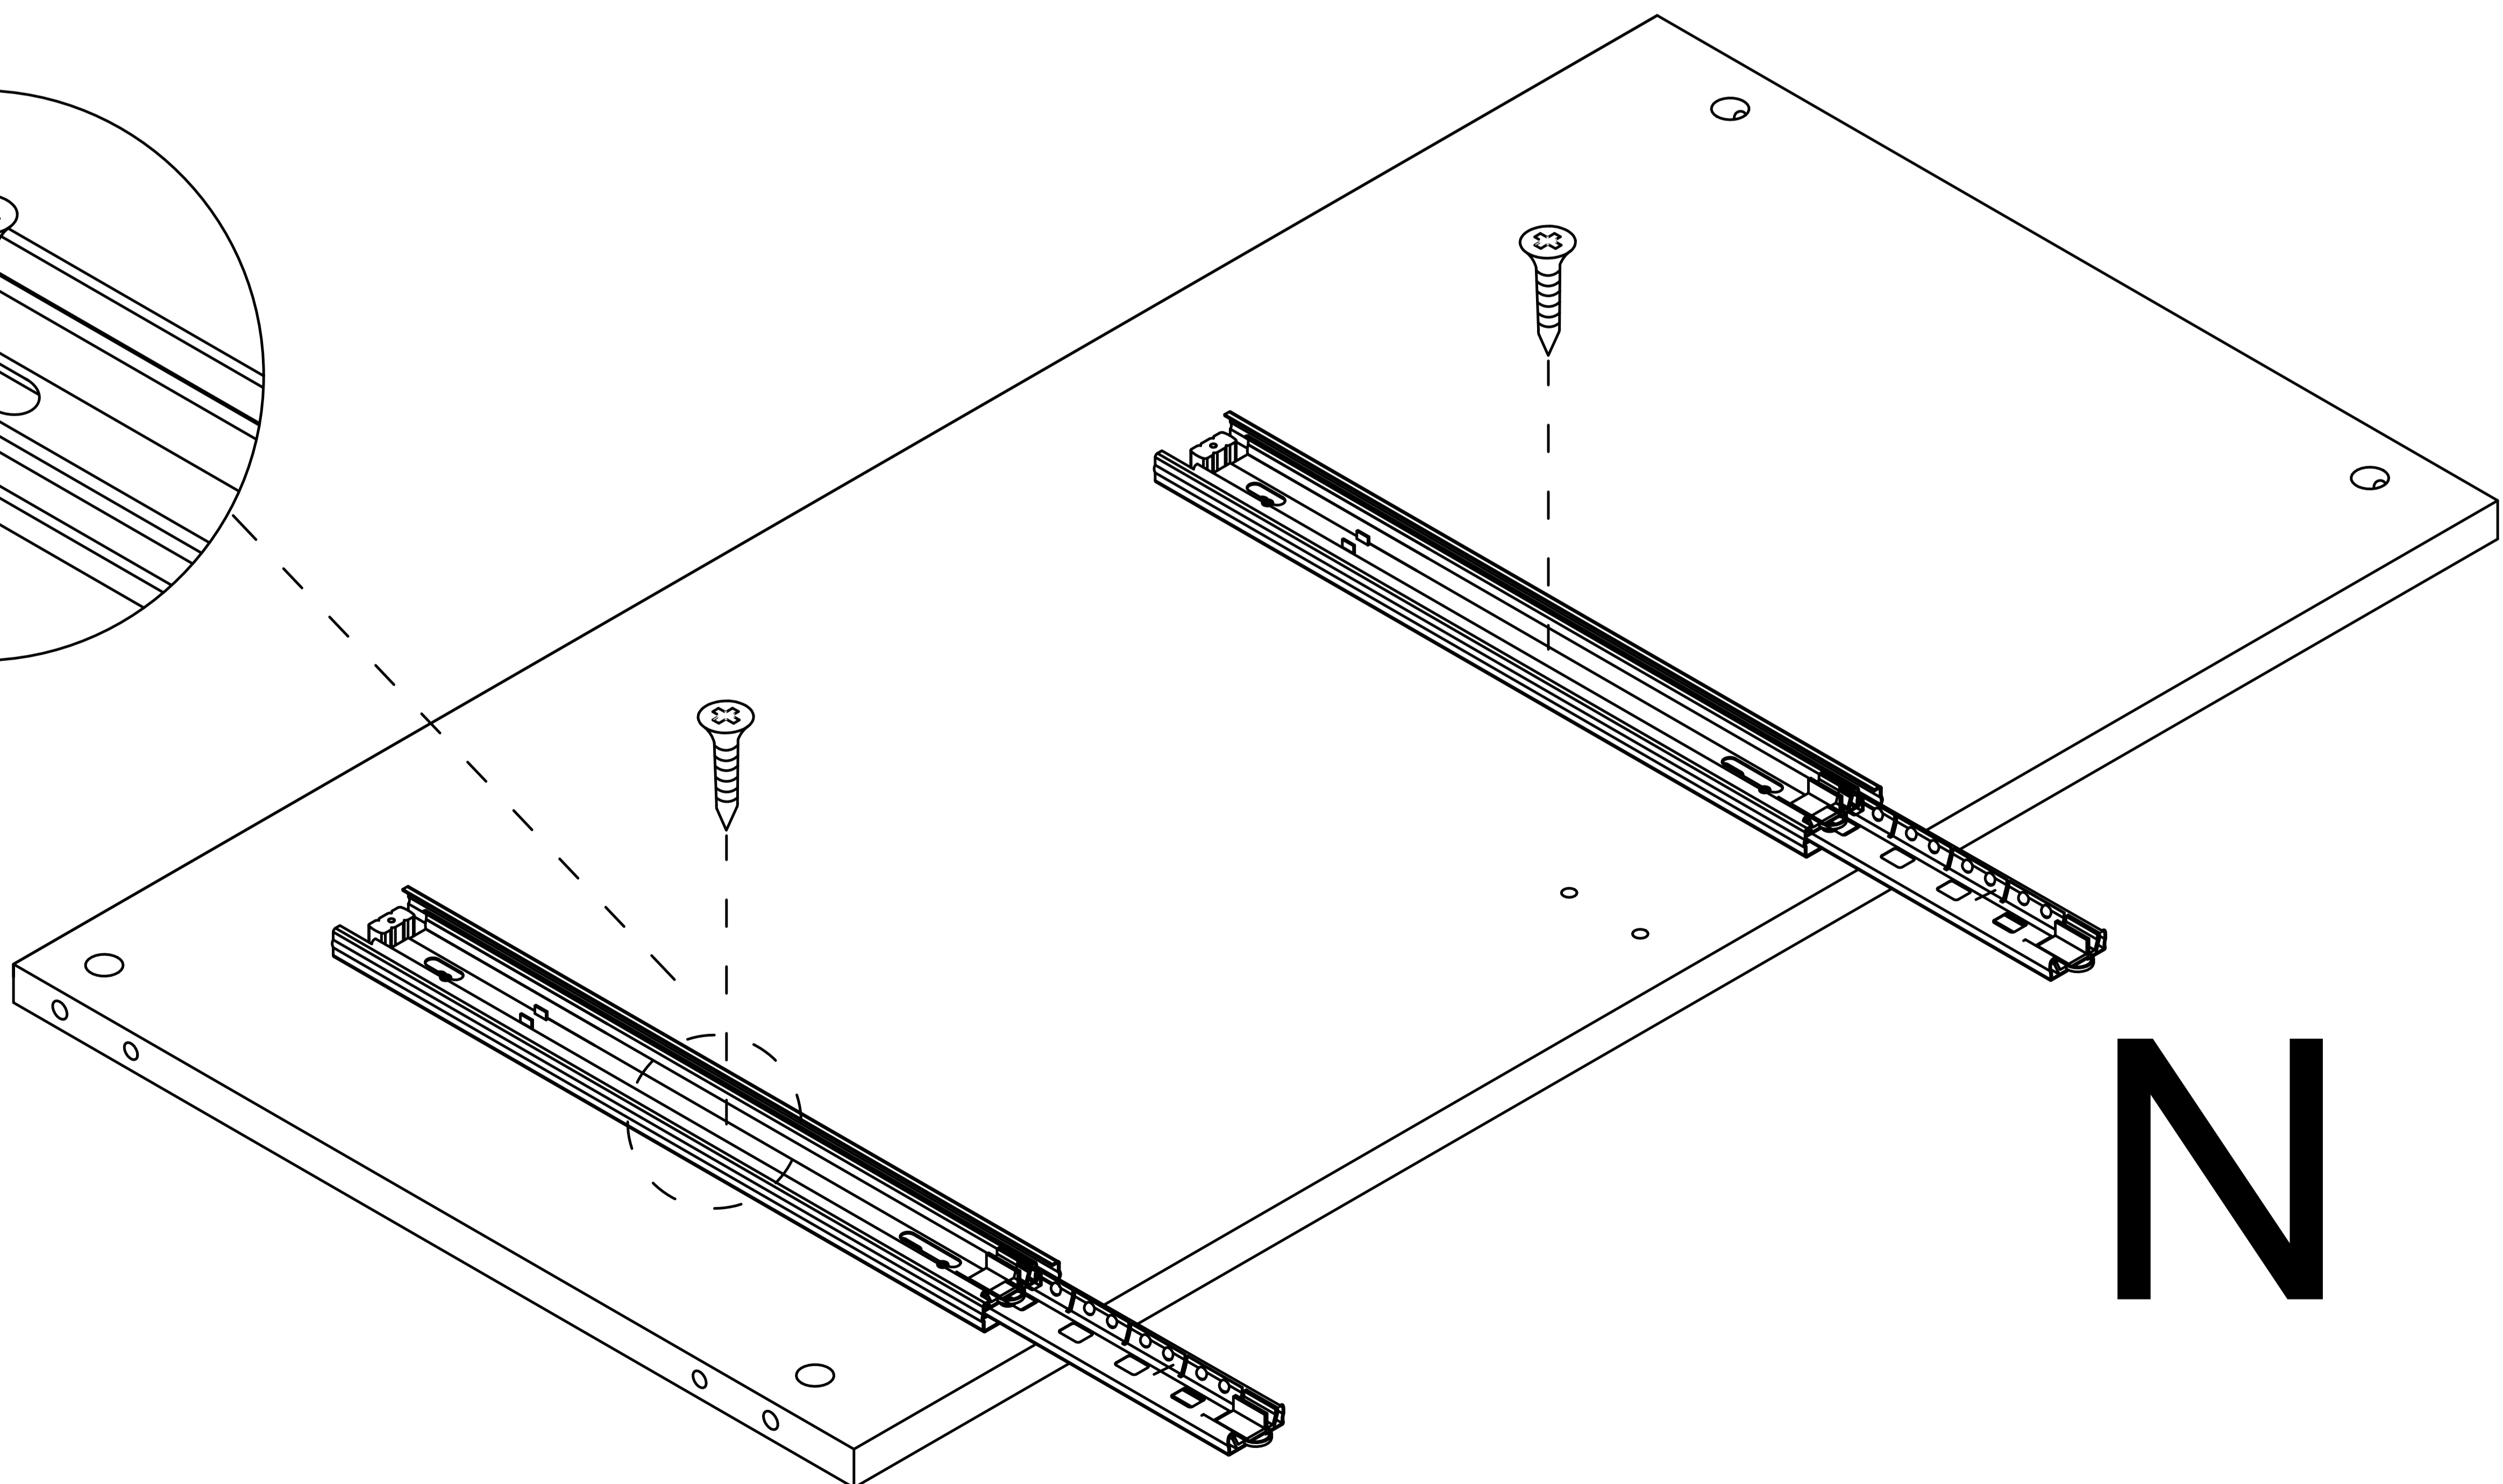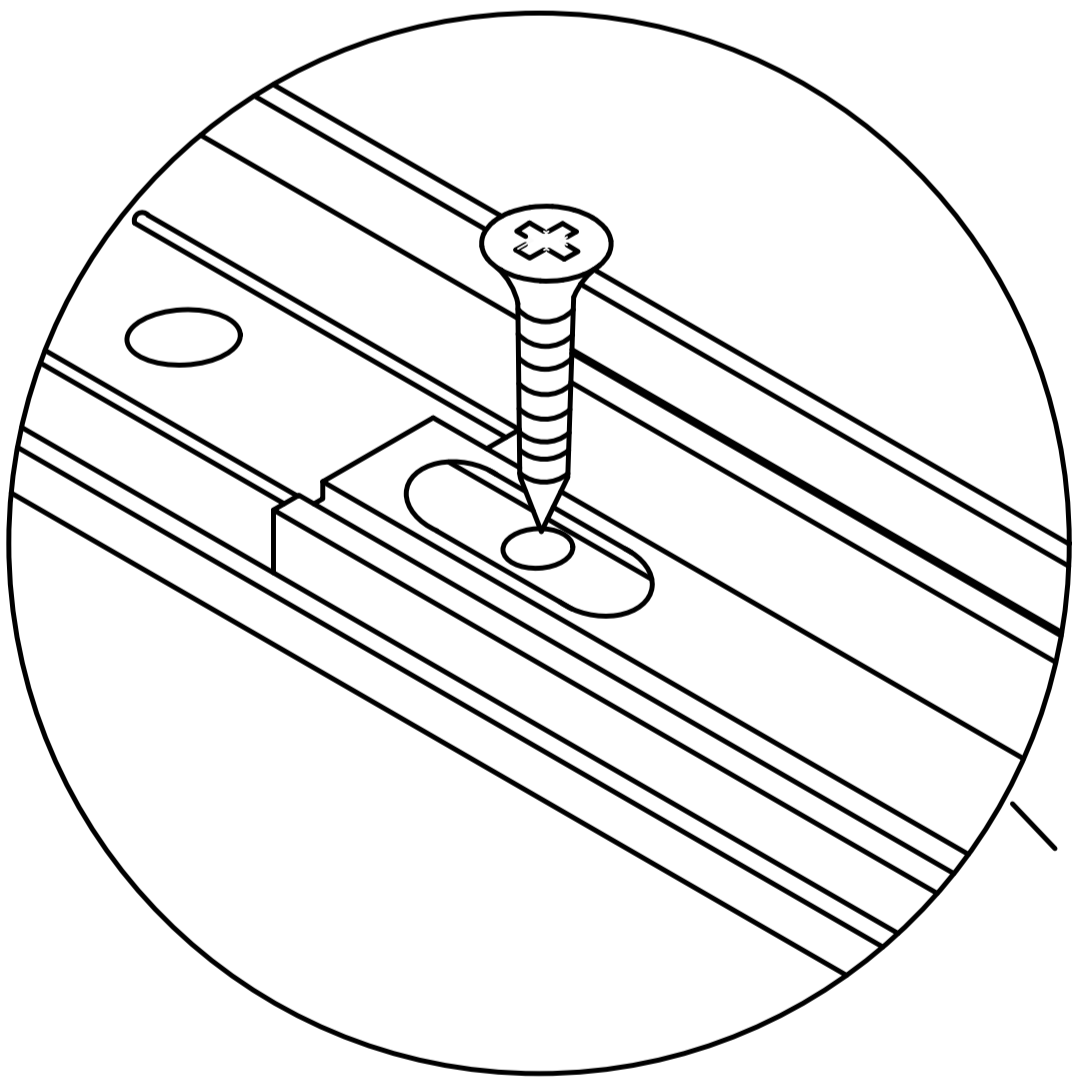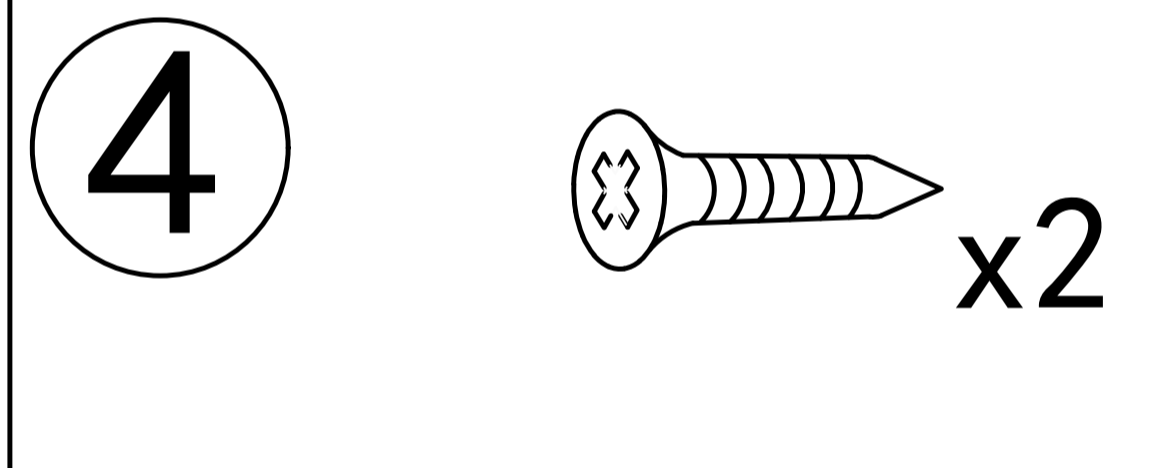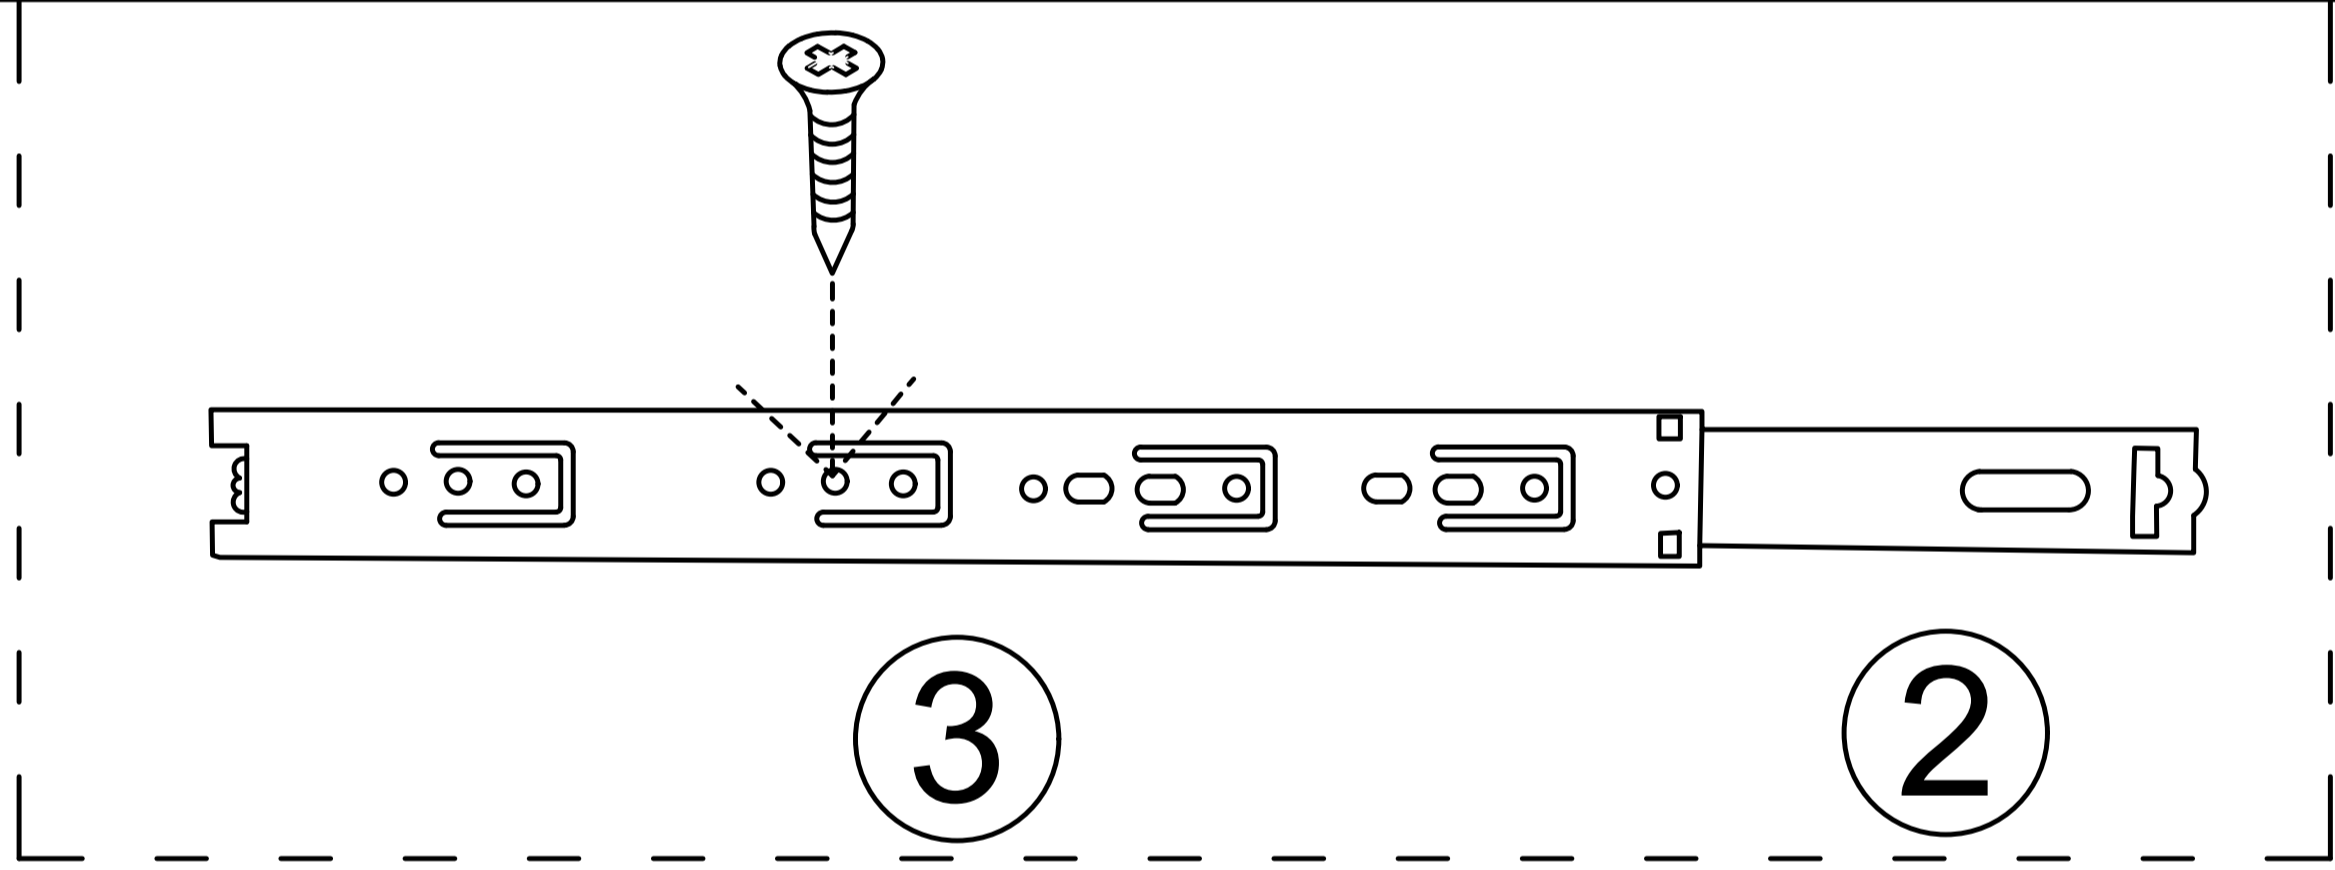



Step 27

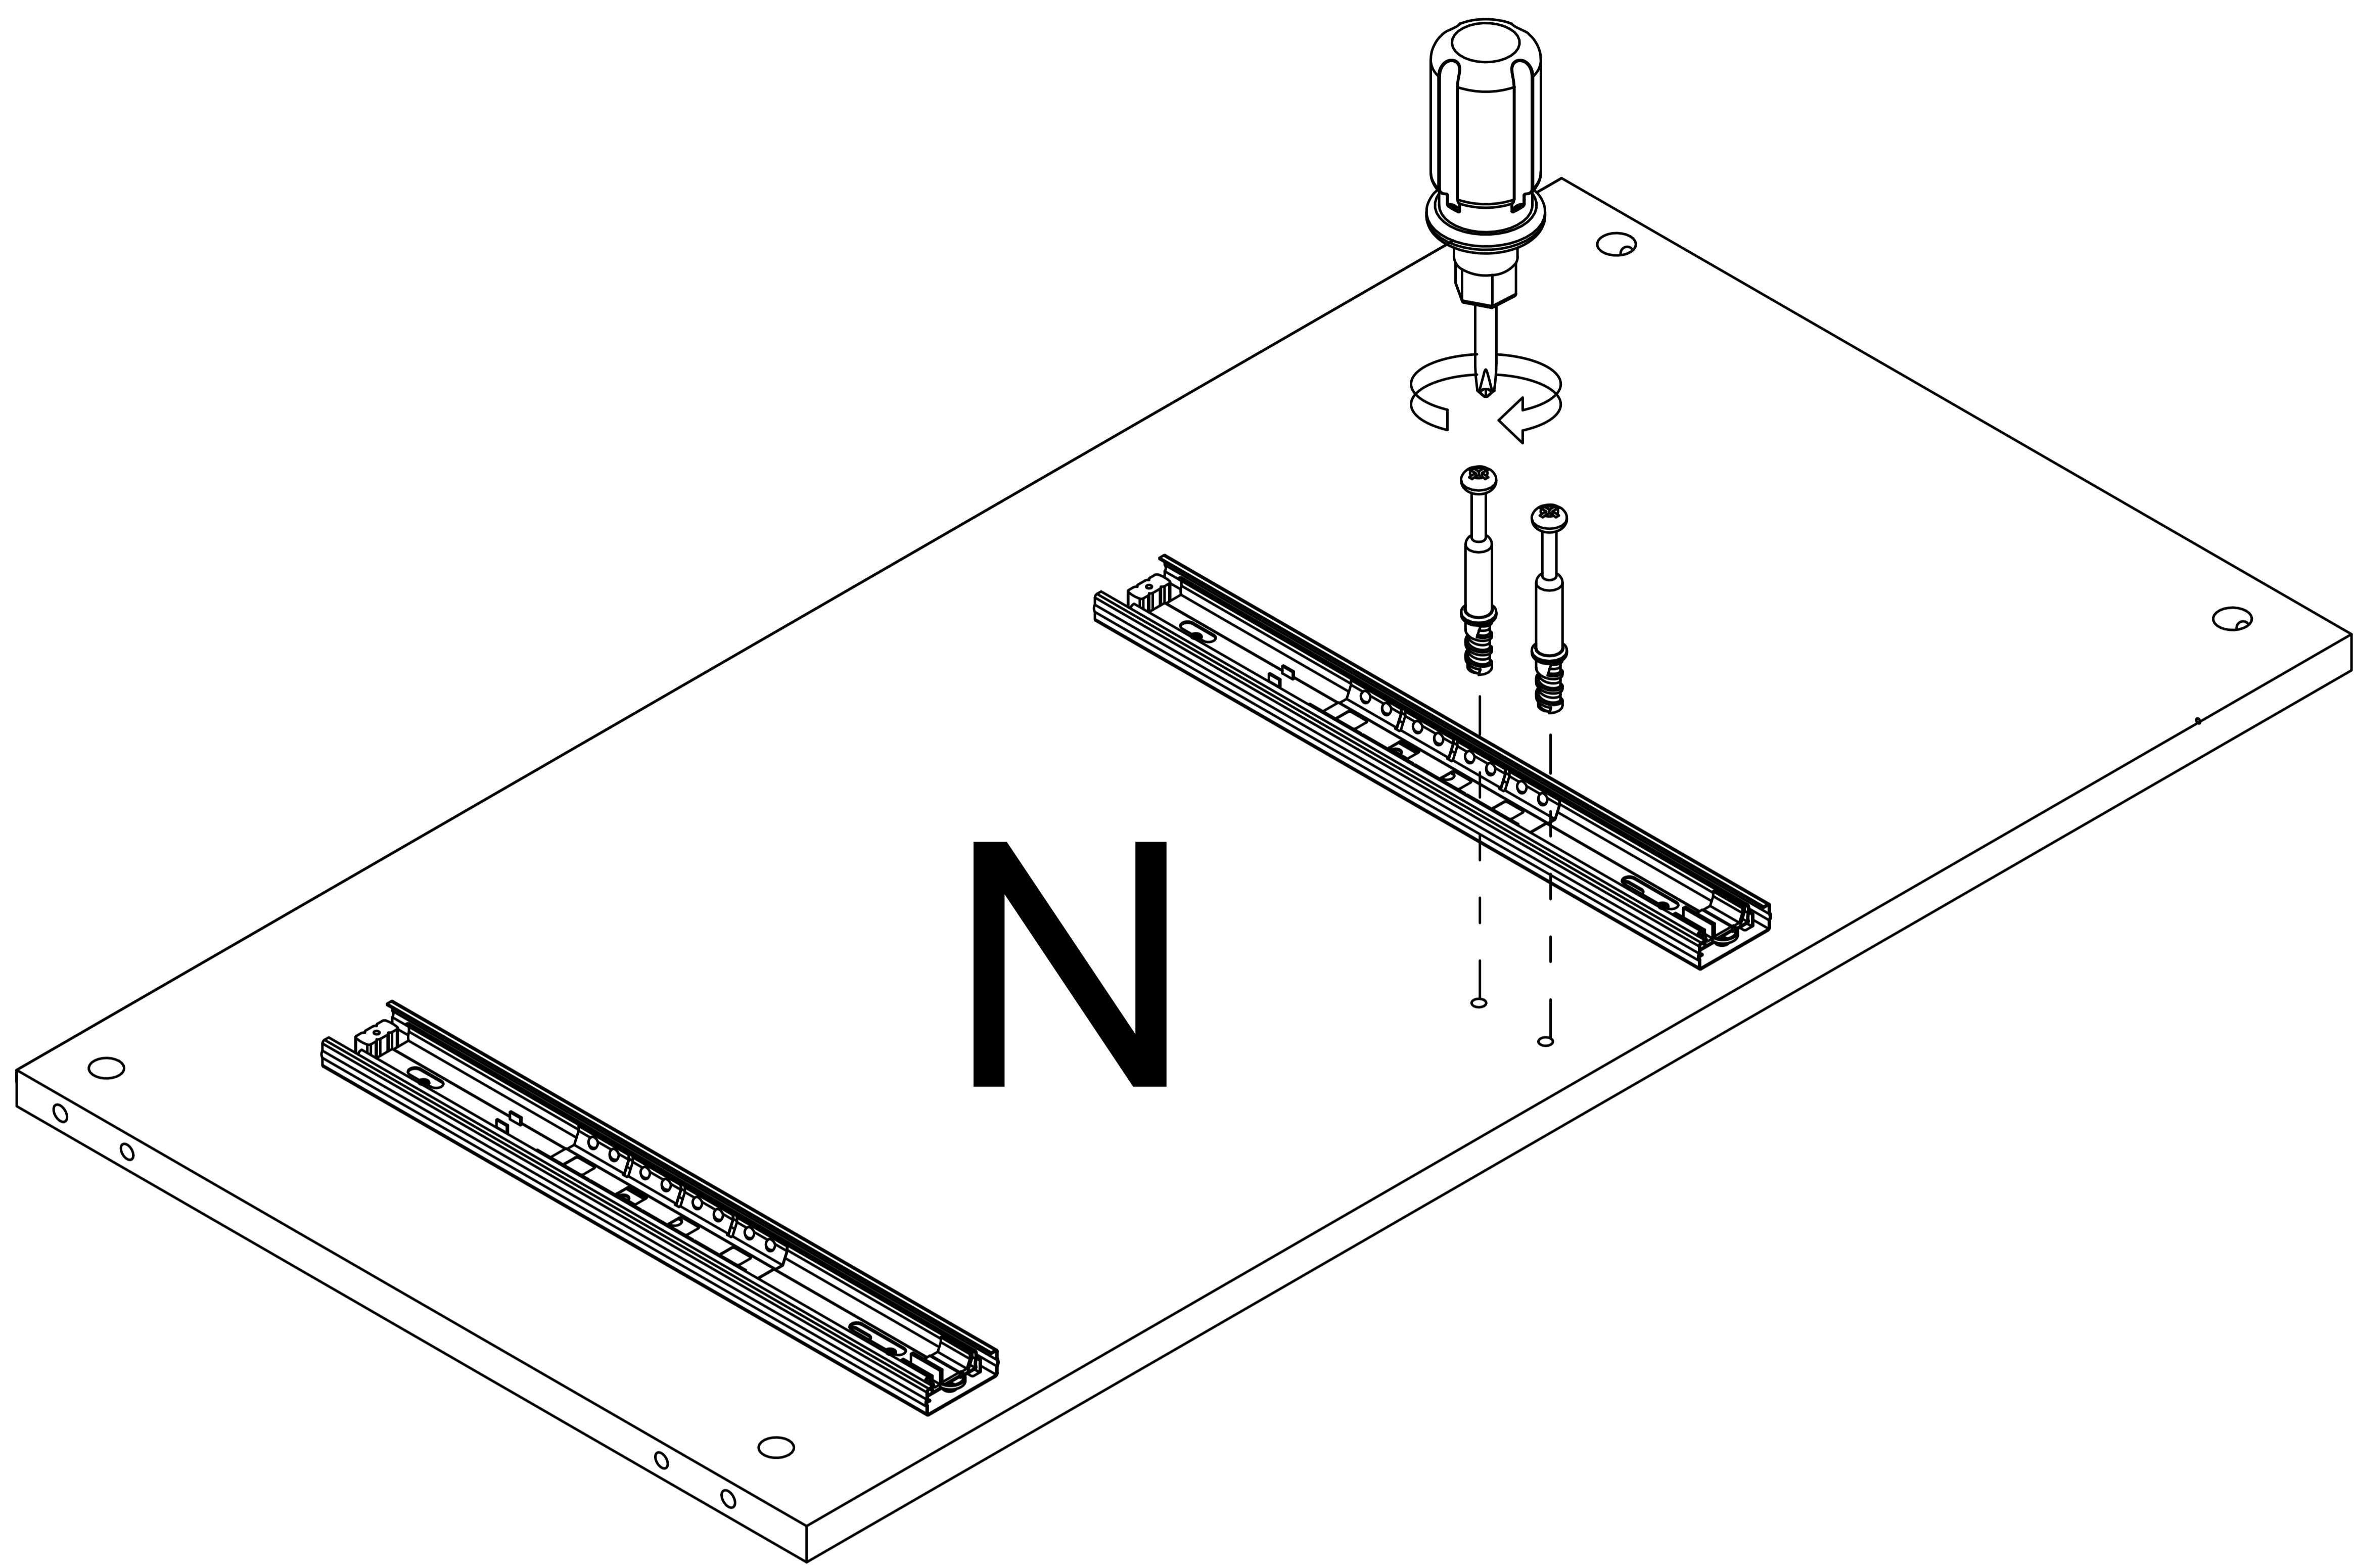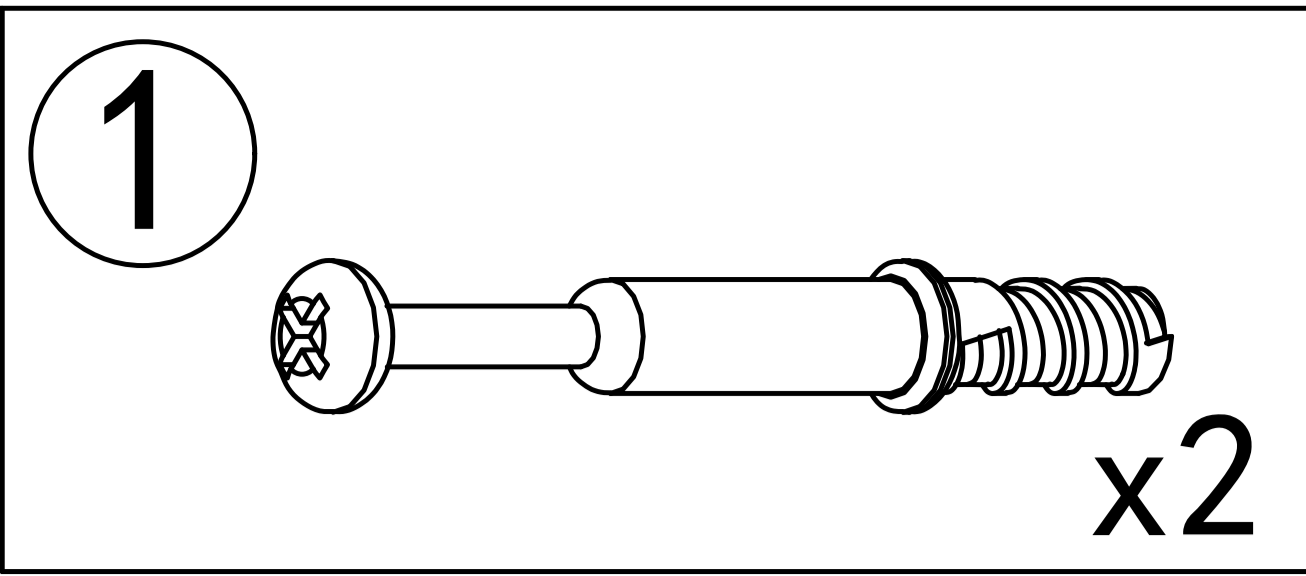



Step 28

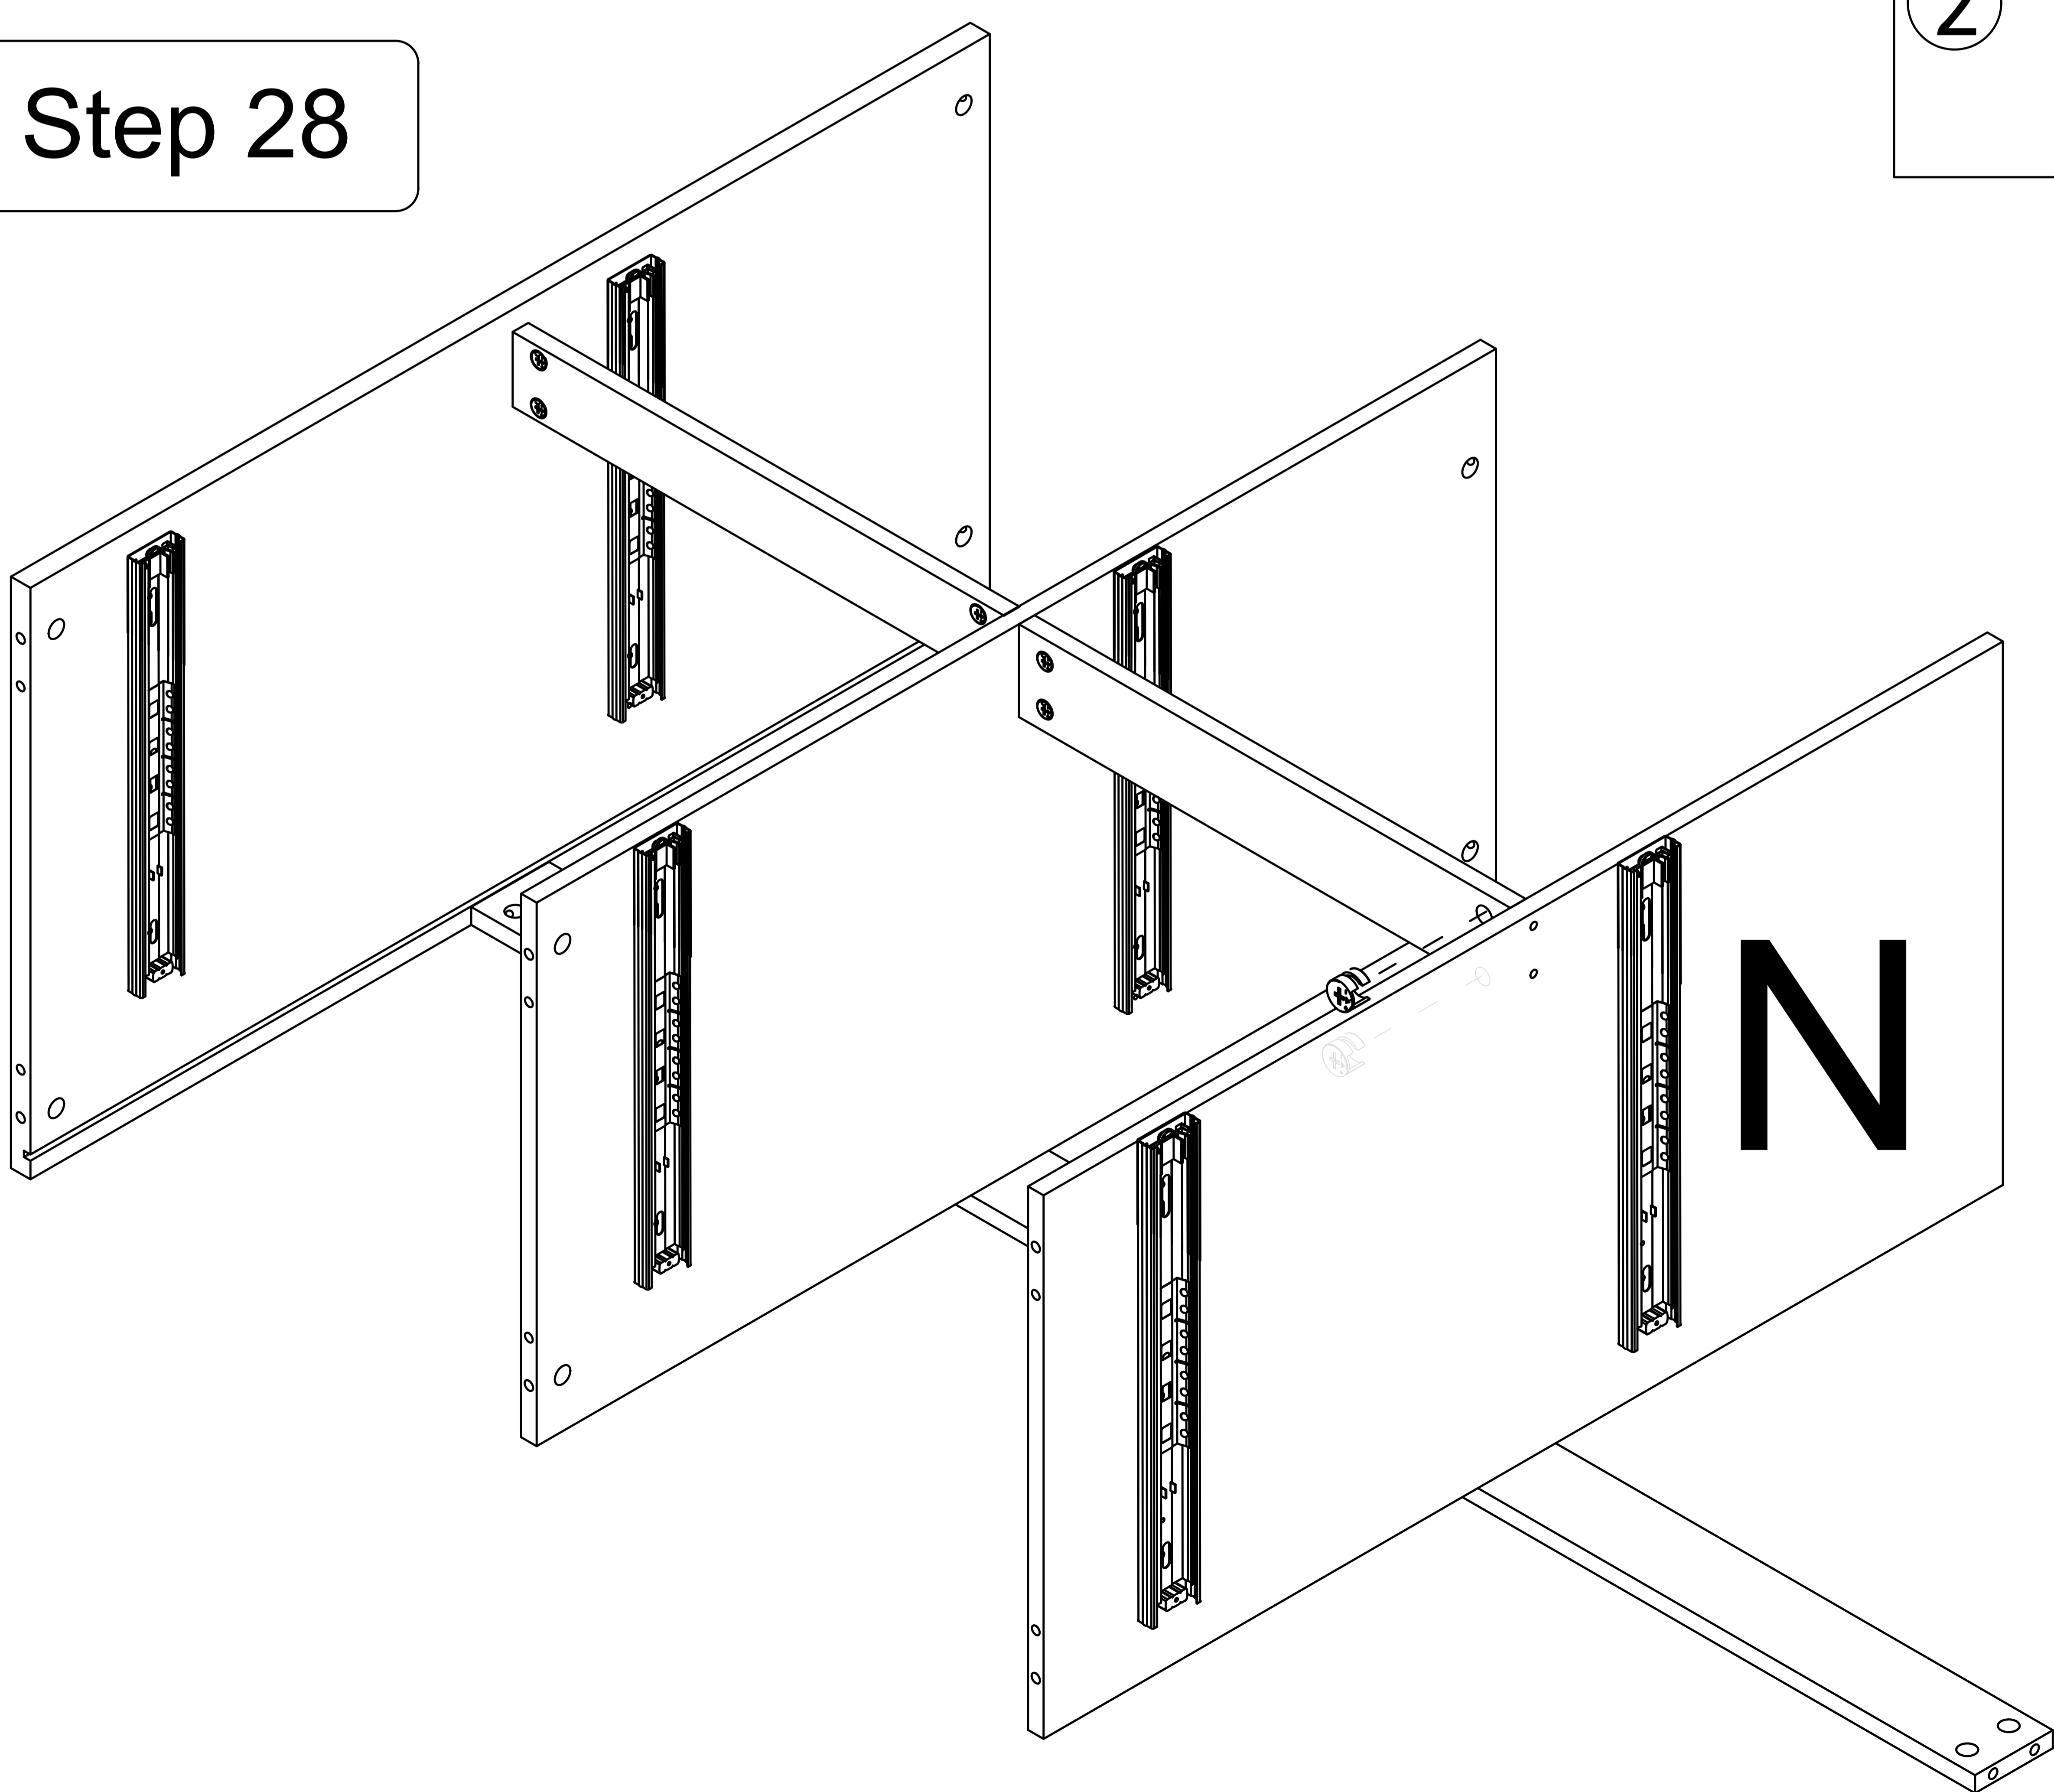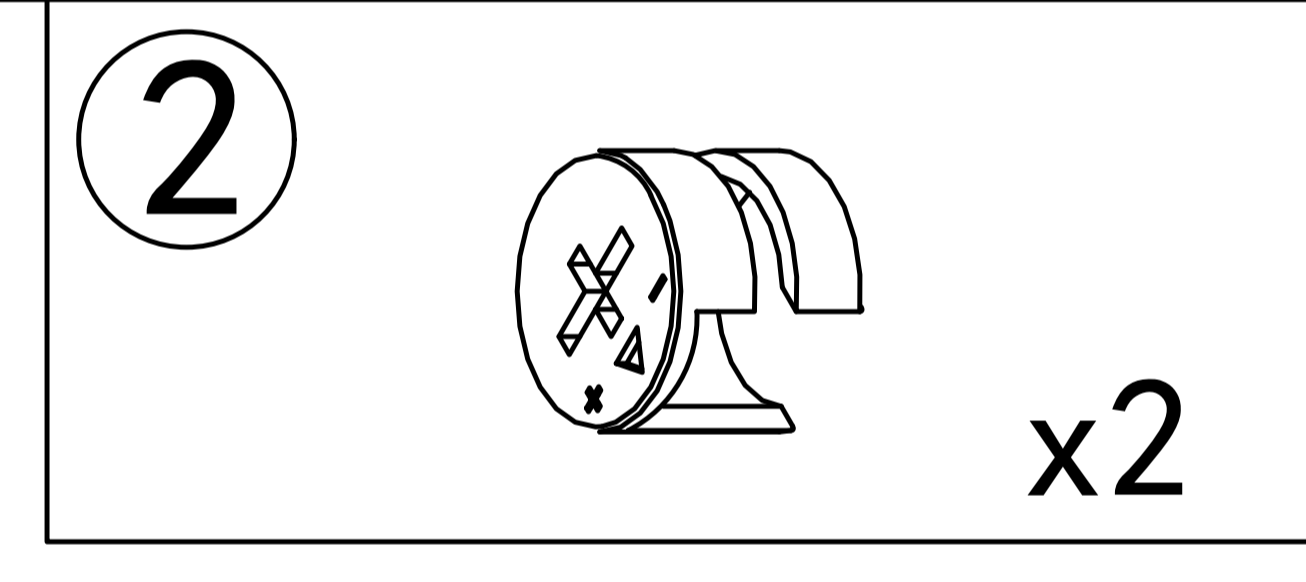






Step 29

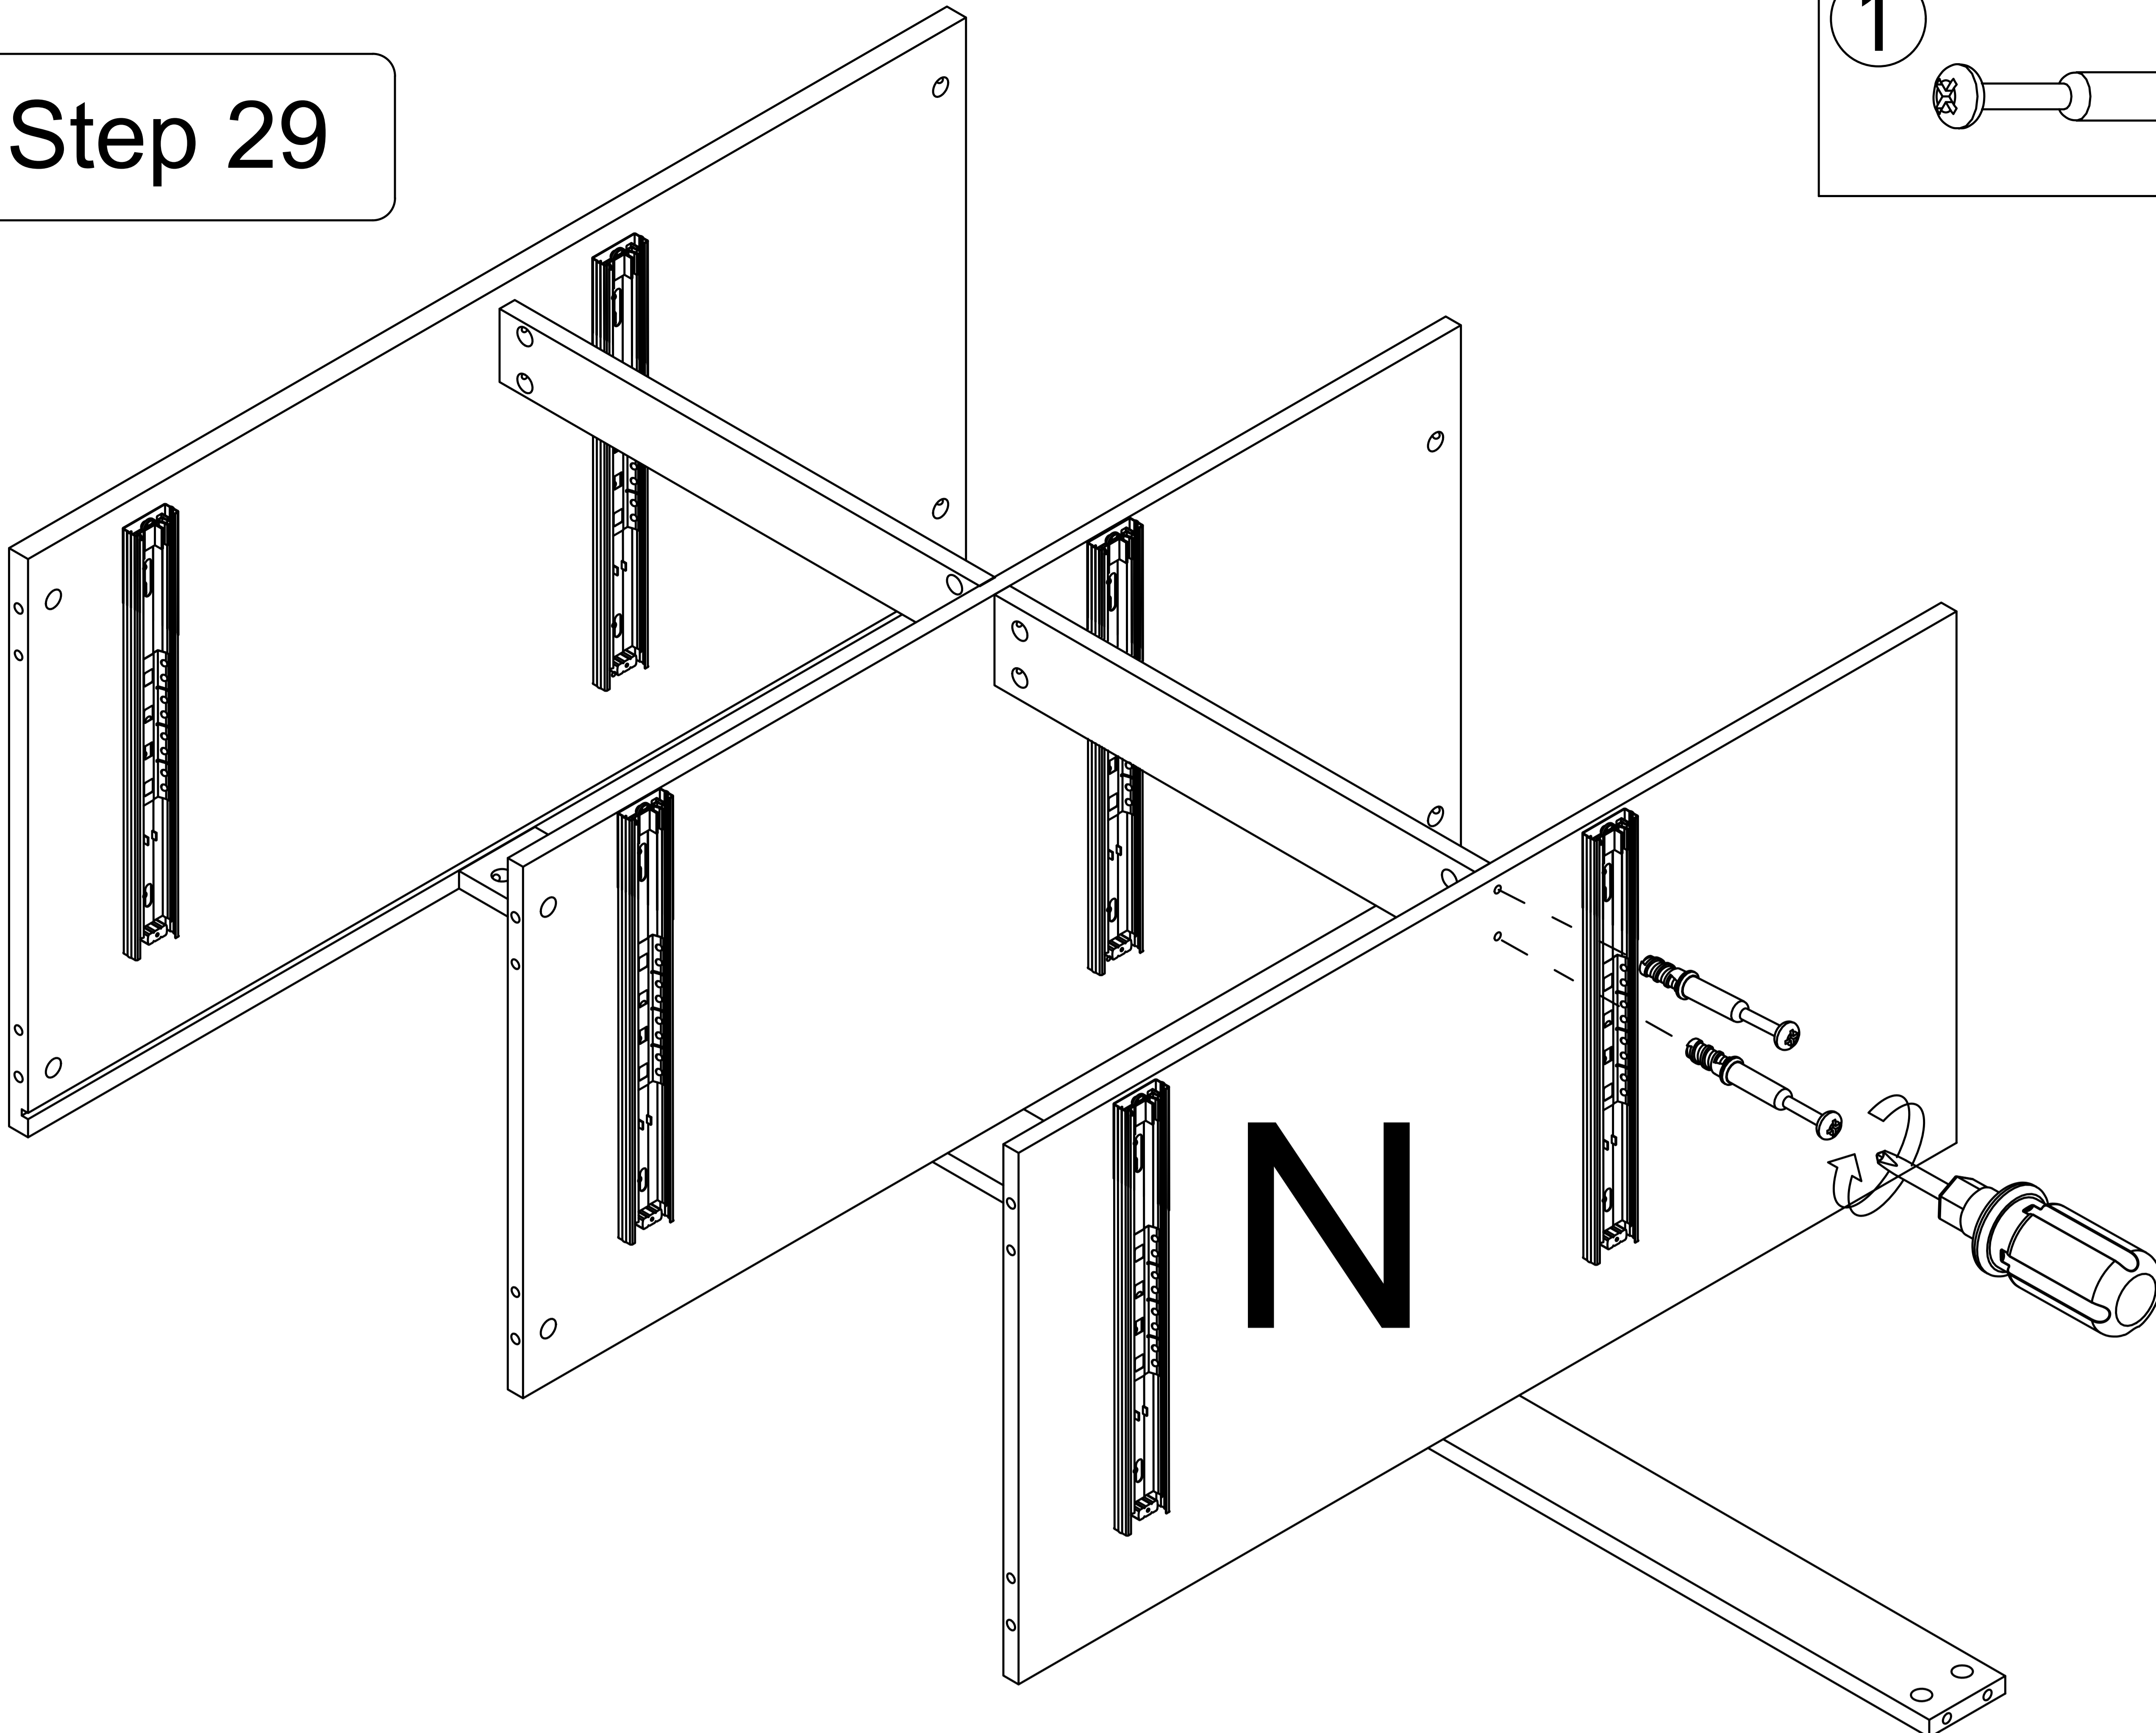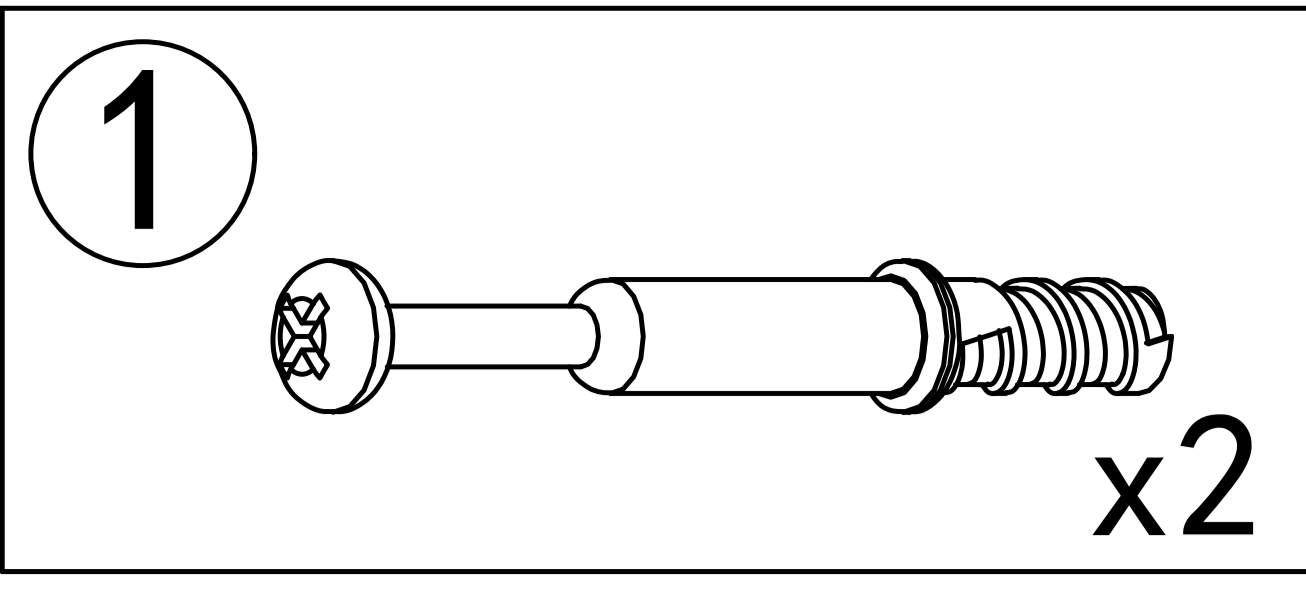

Step 30

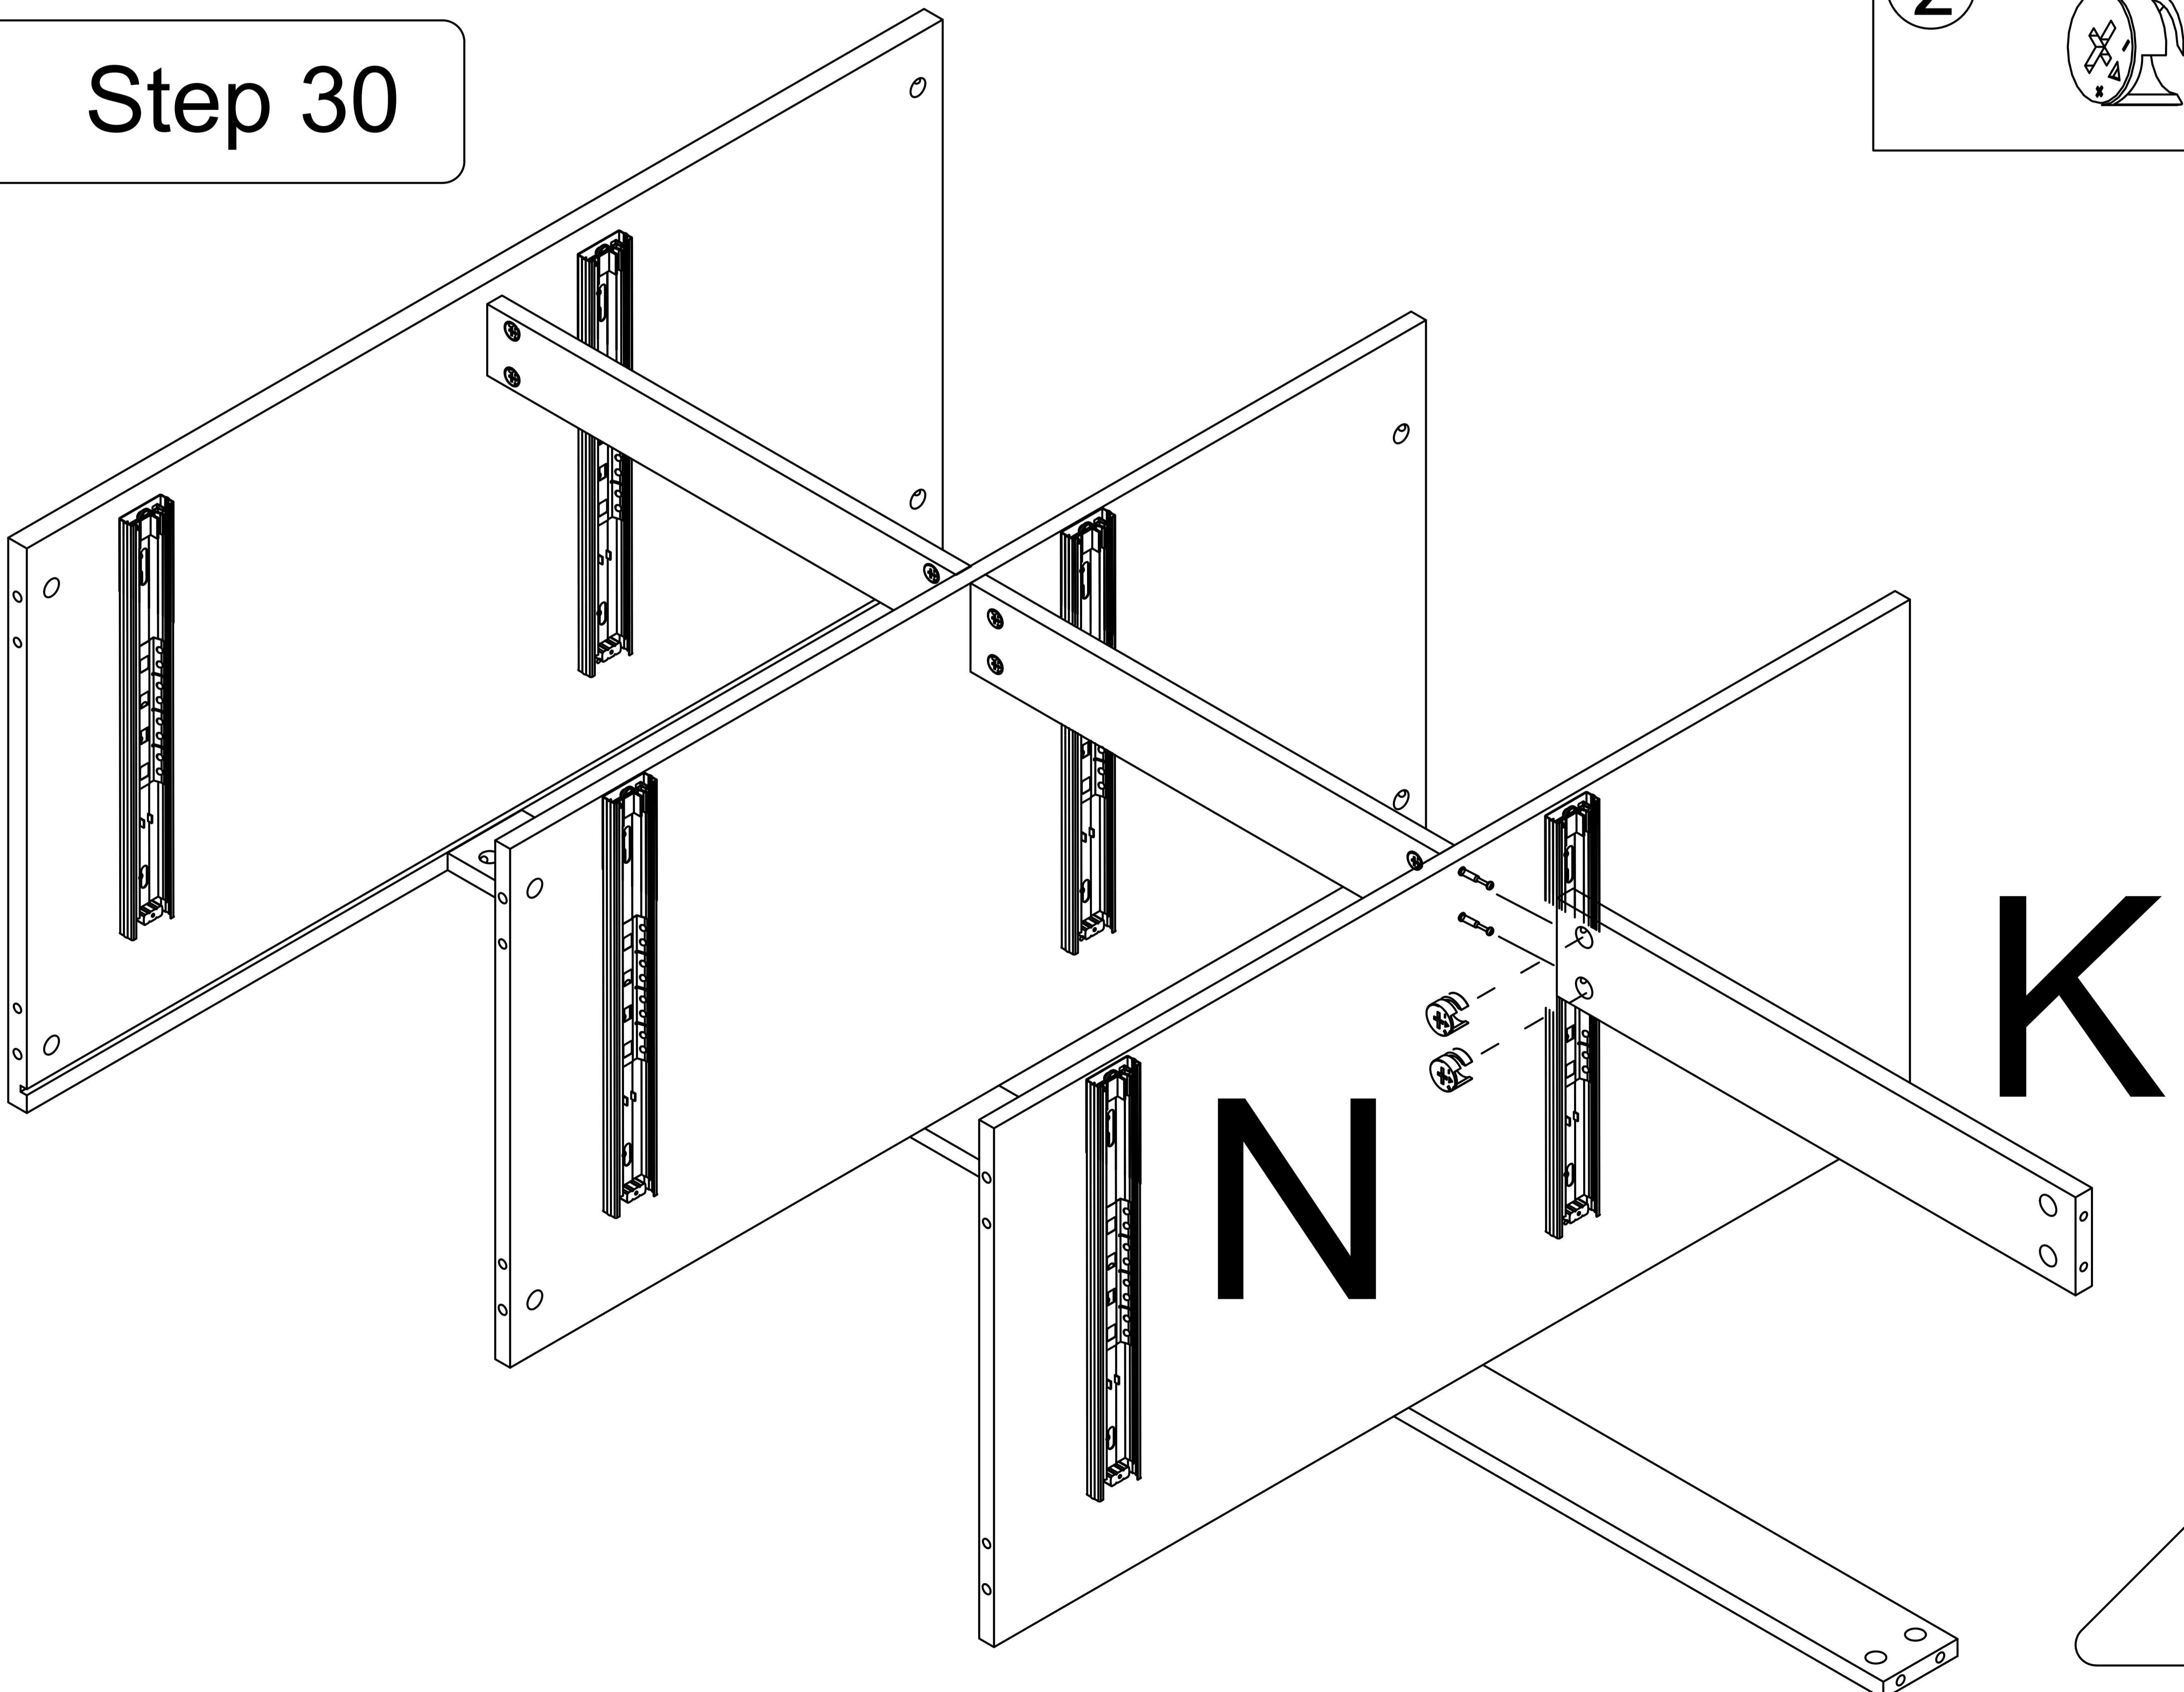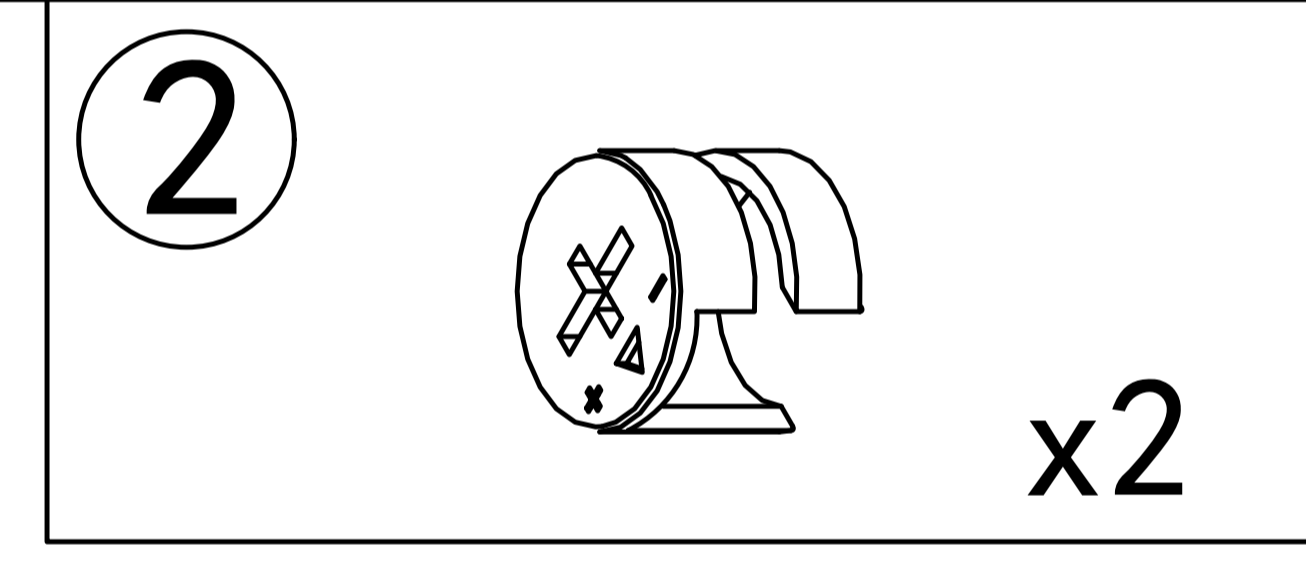


Step 31

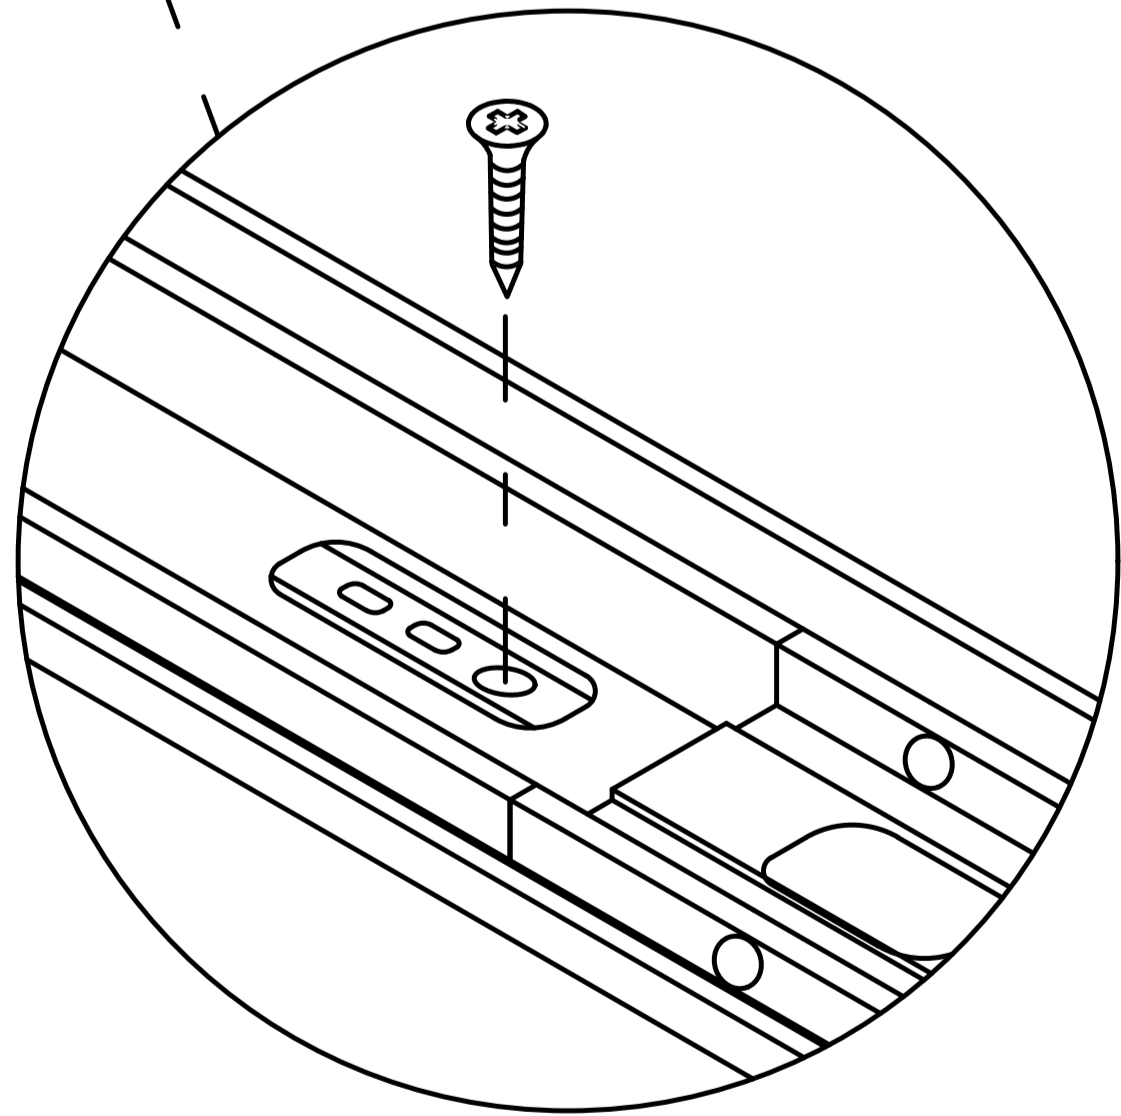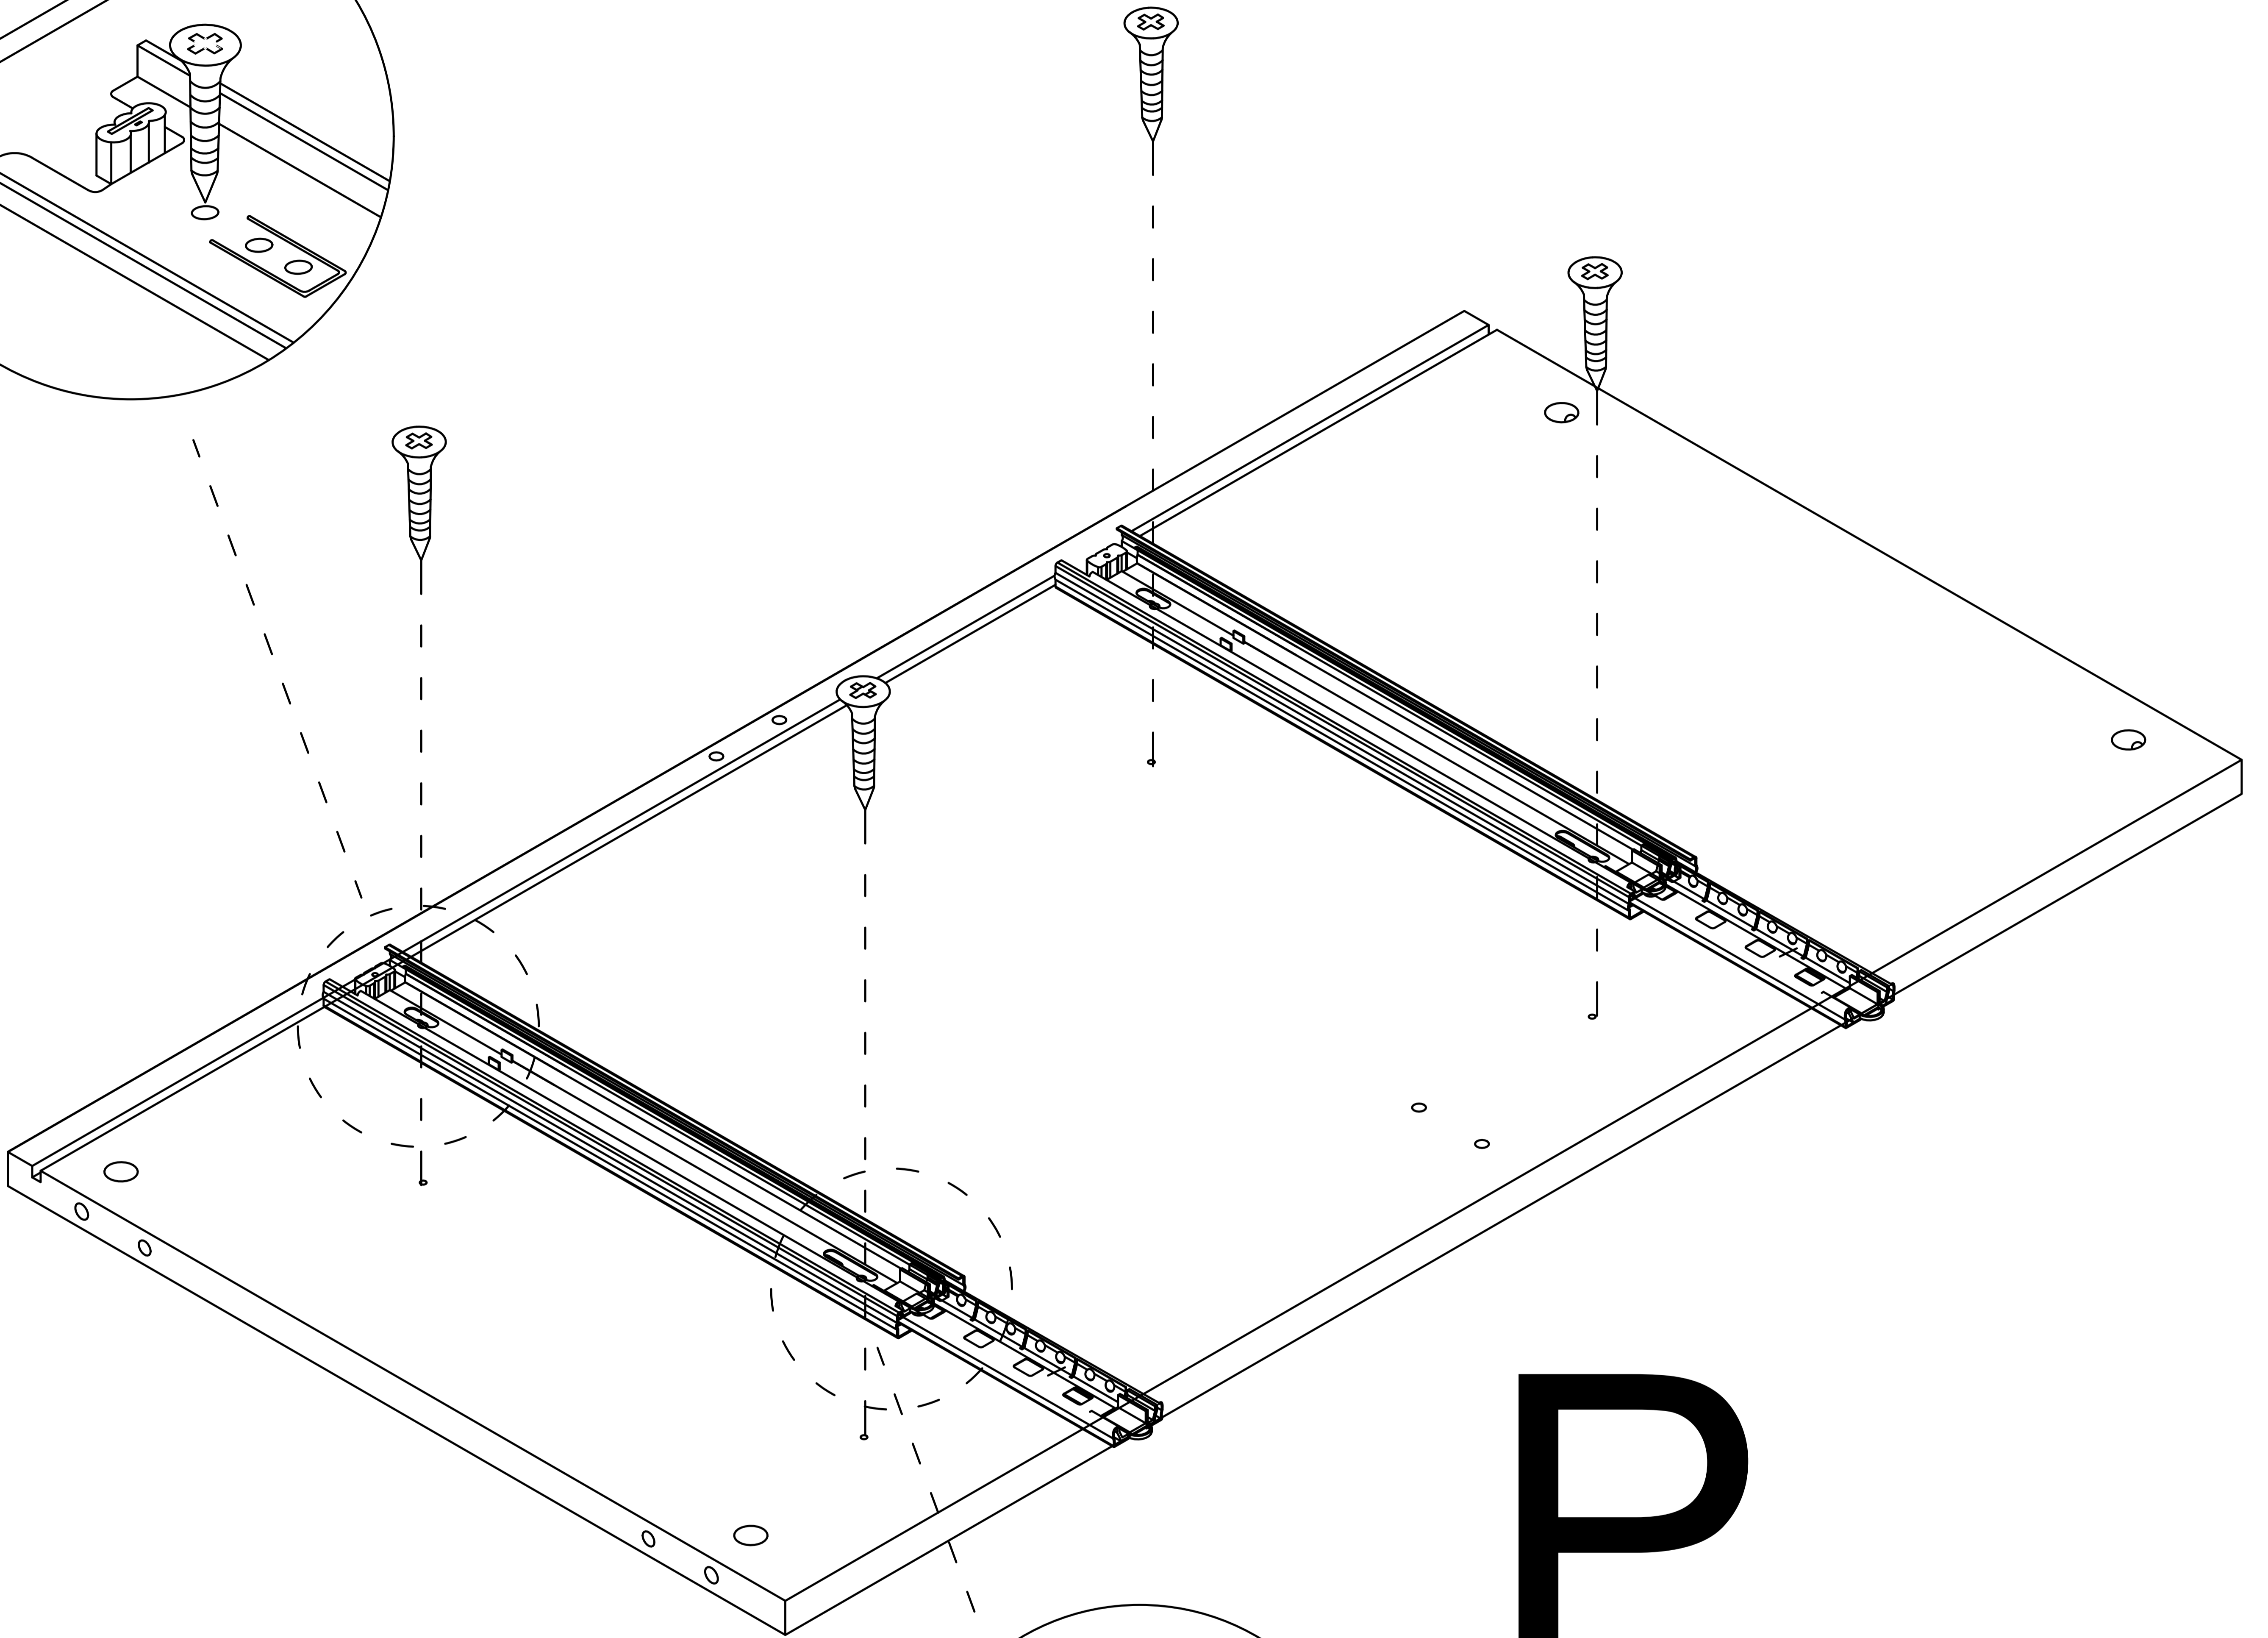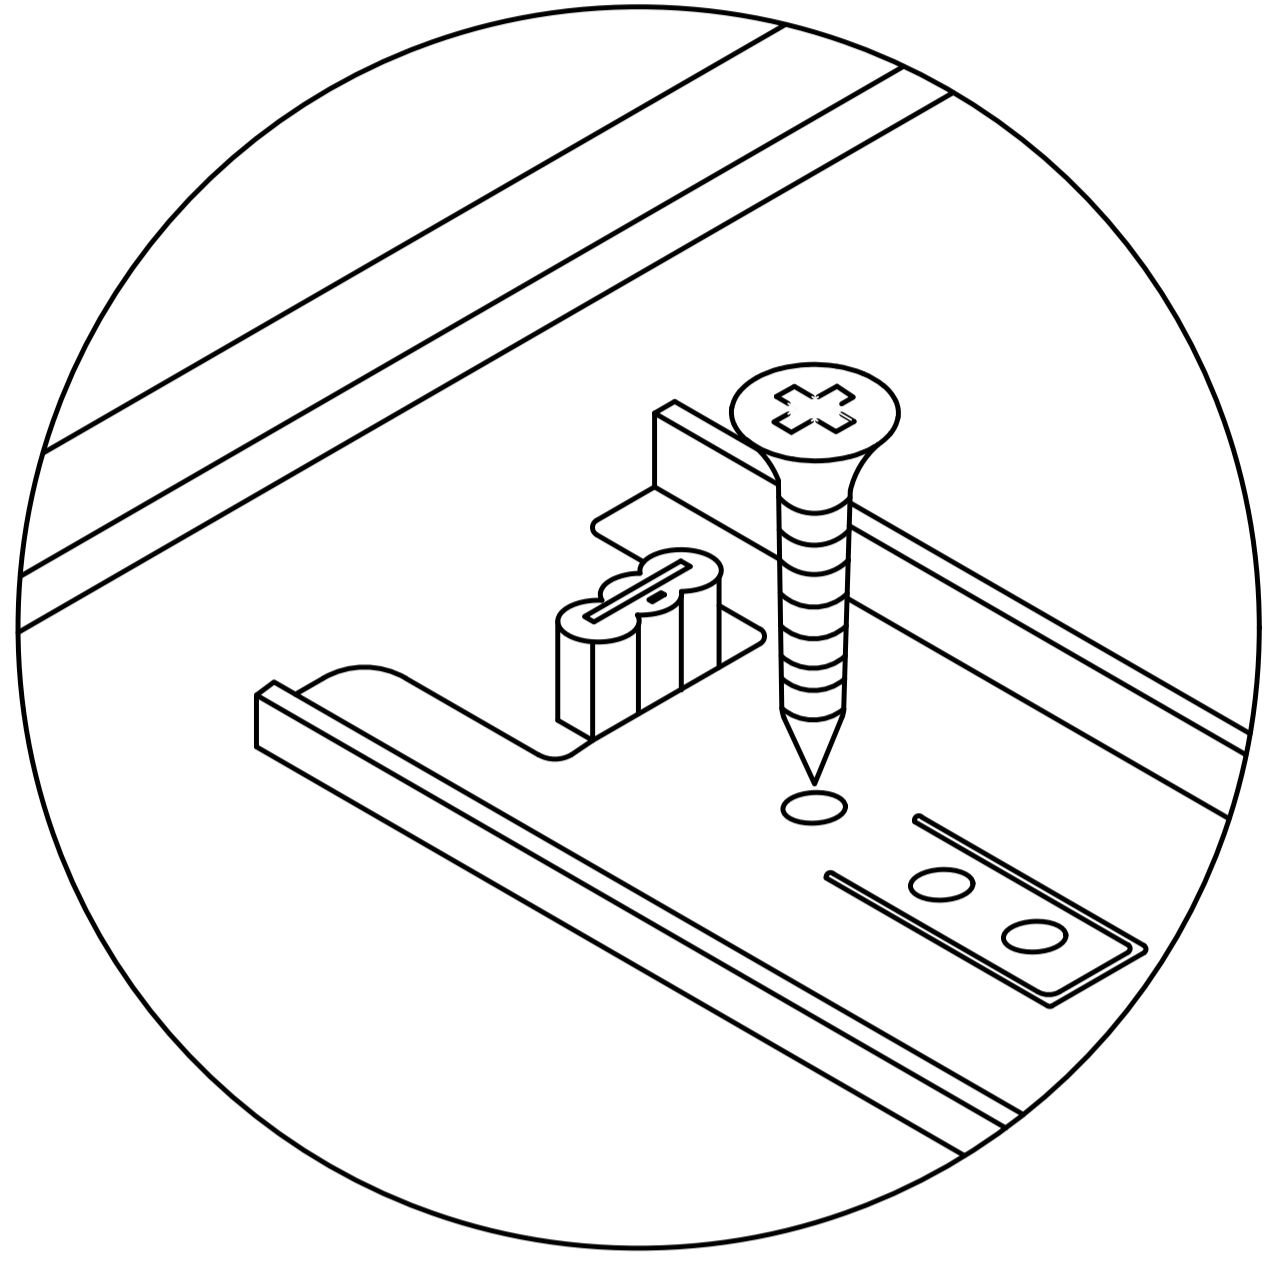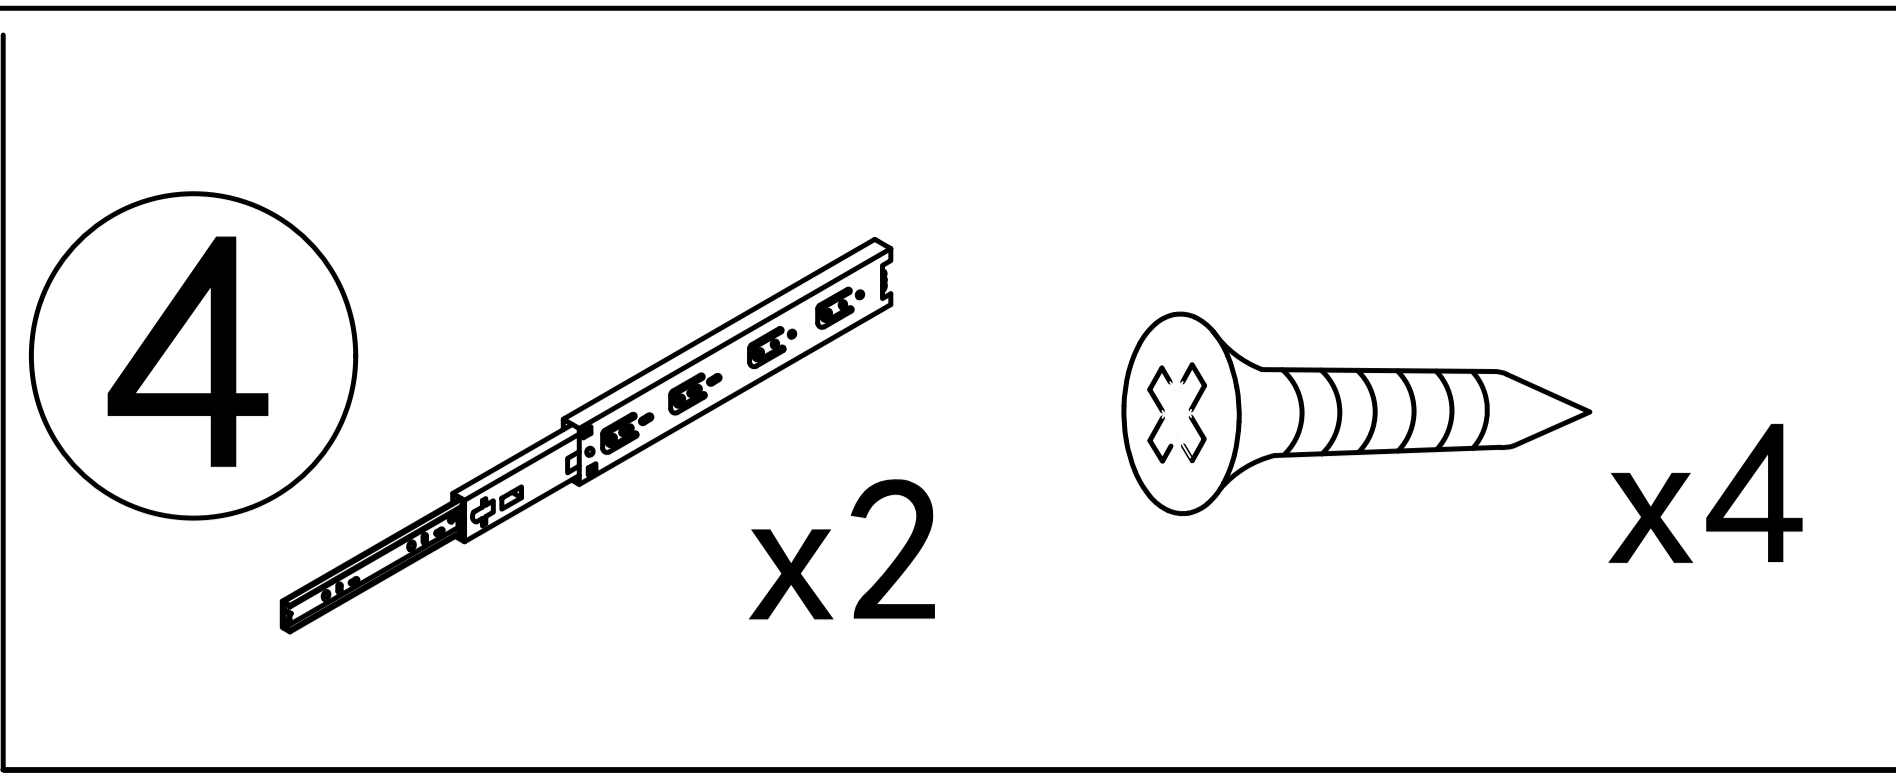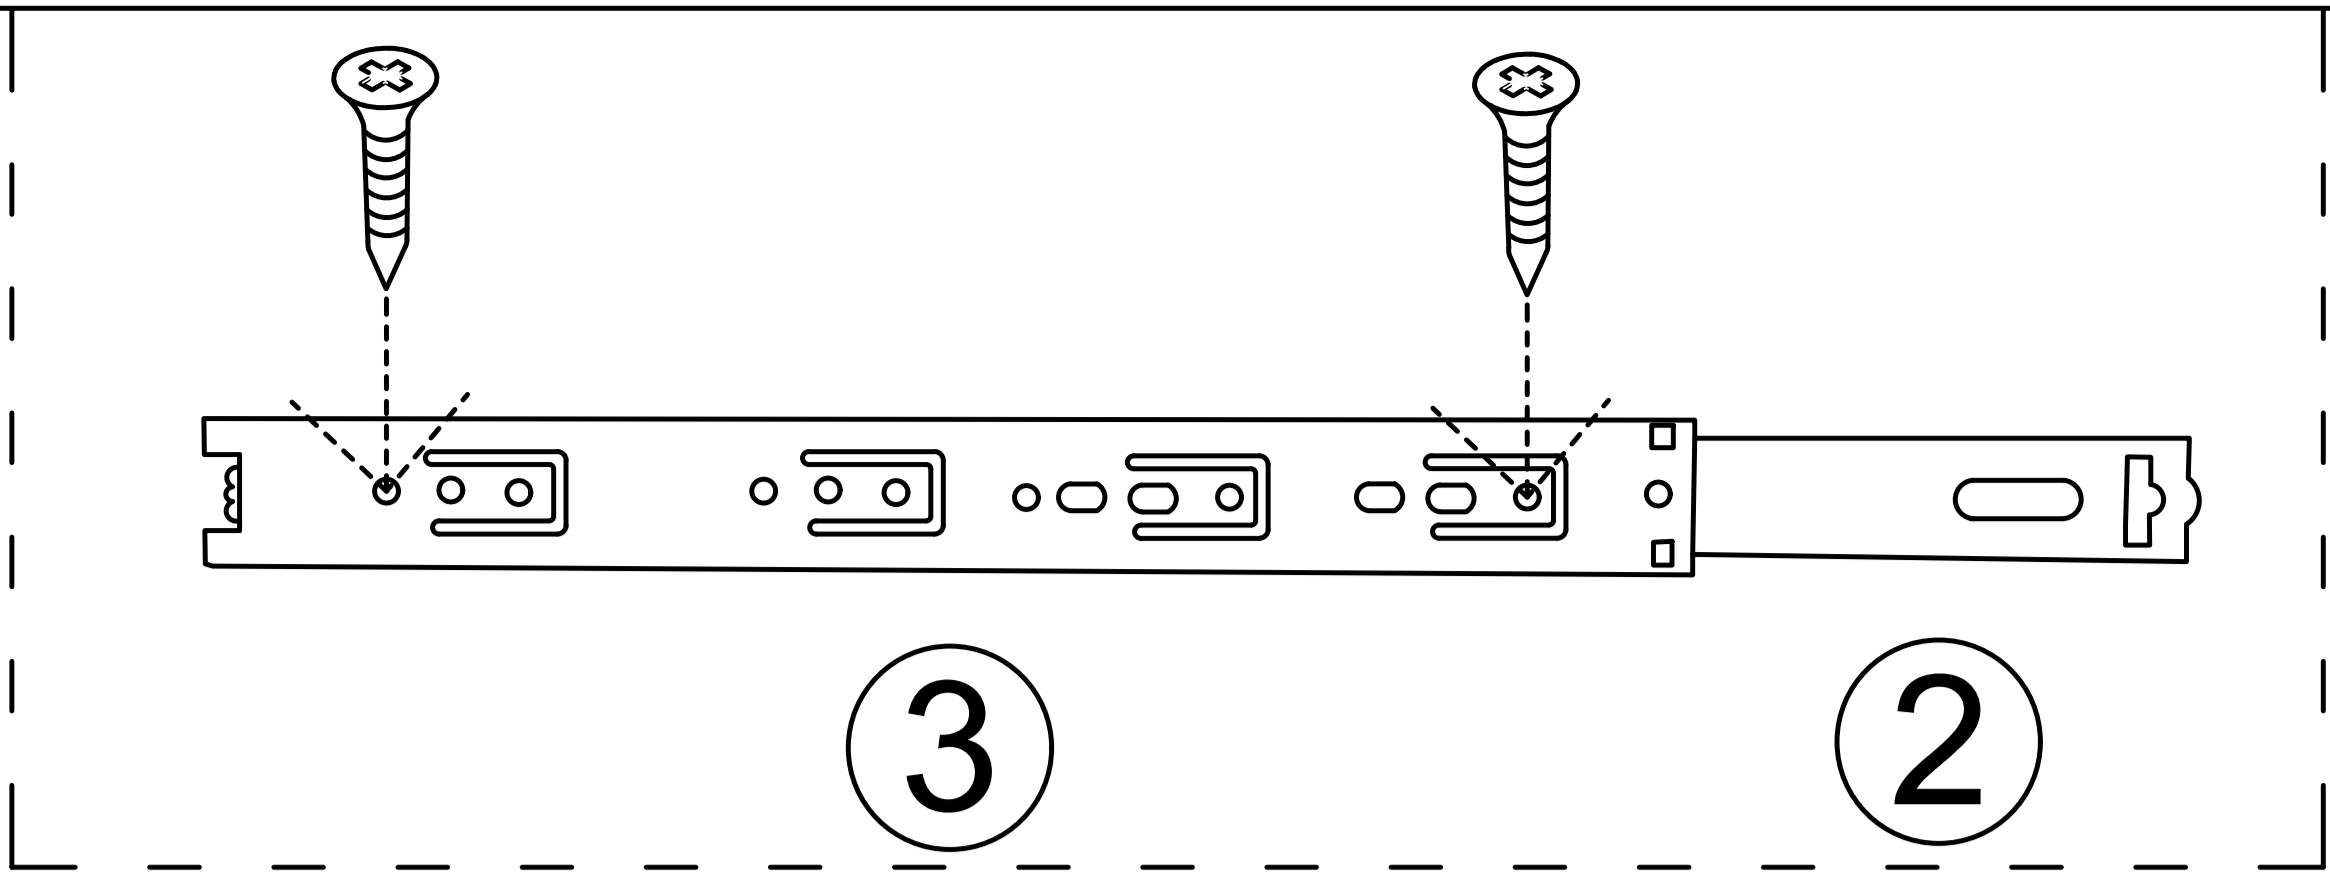

P



Step 32

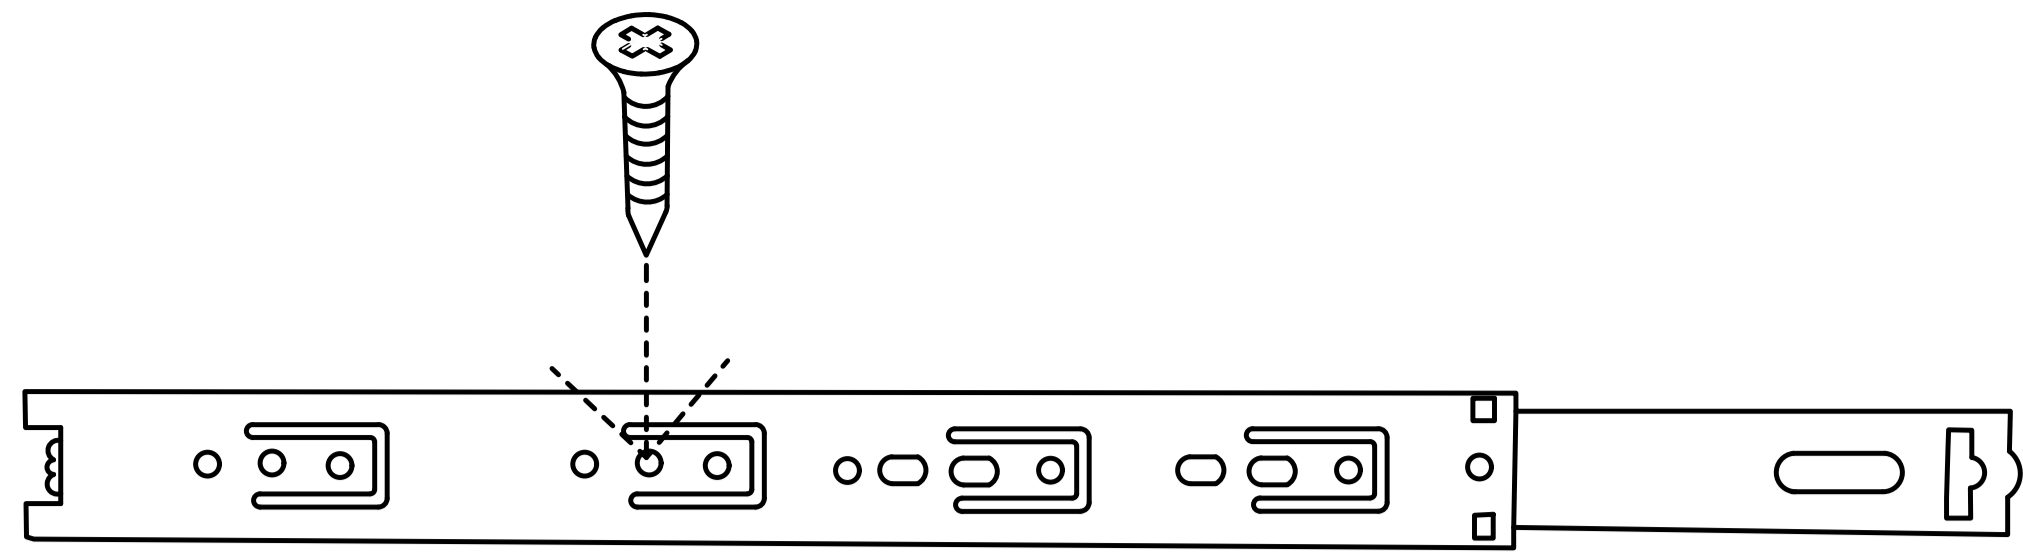

3


2

4

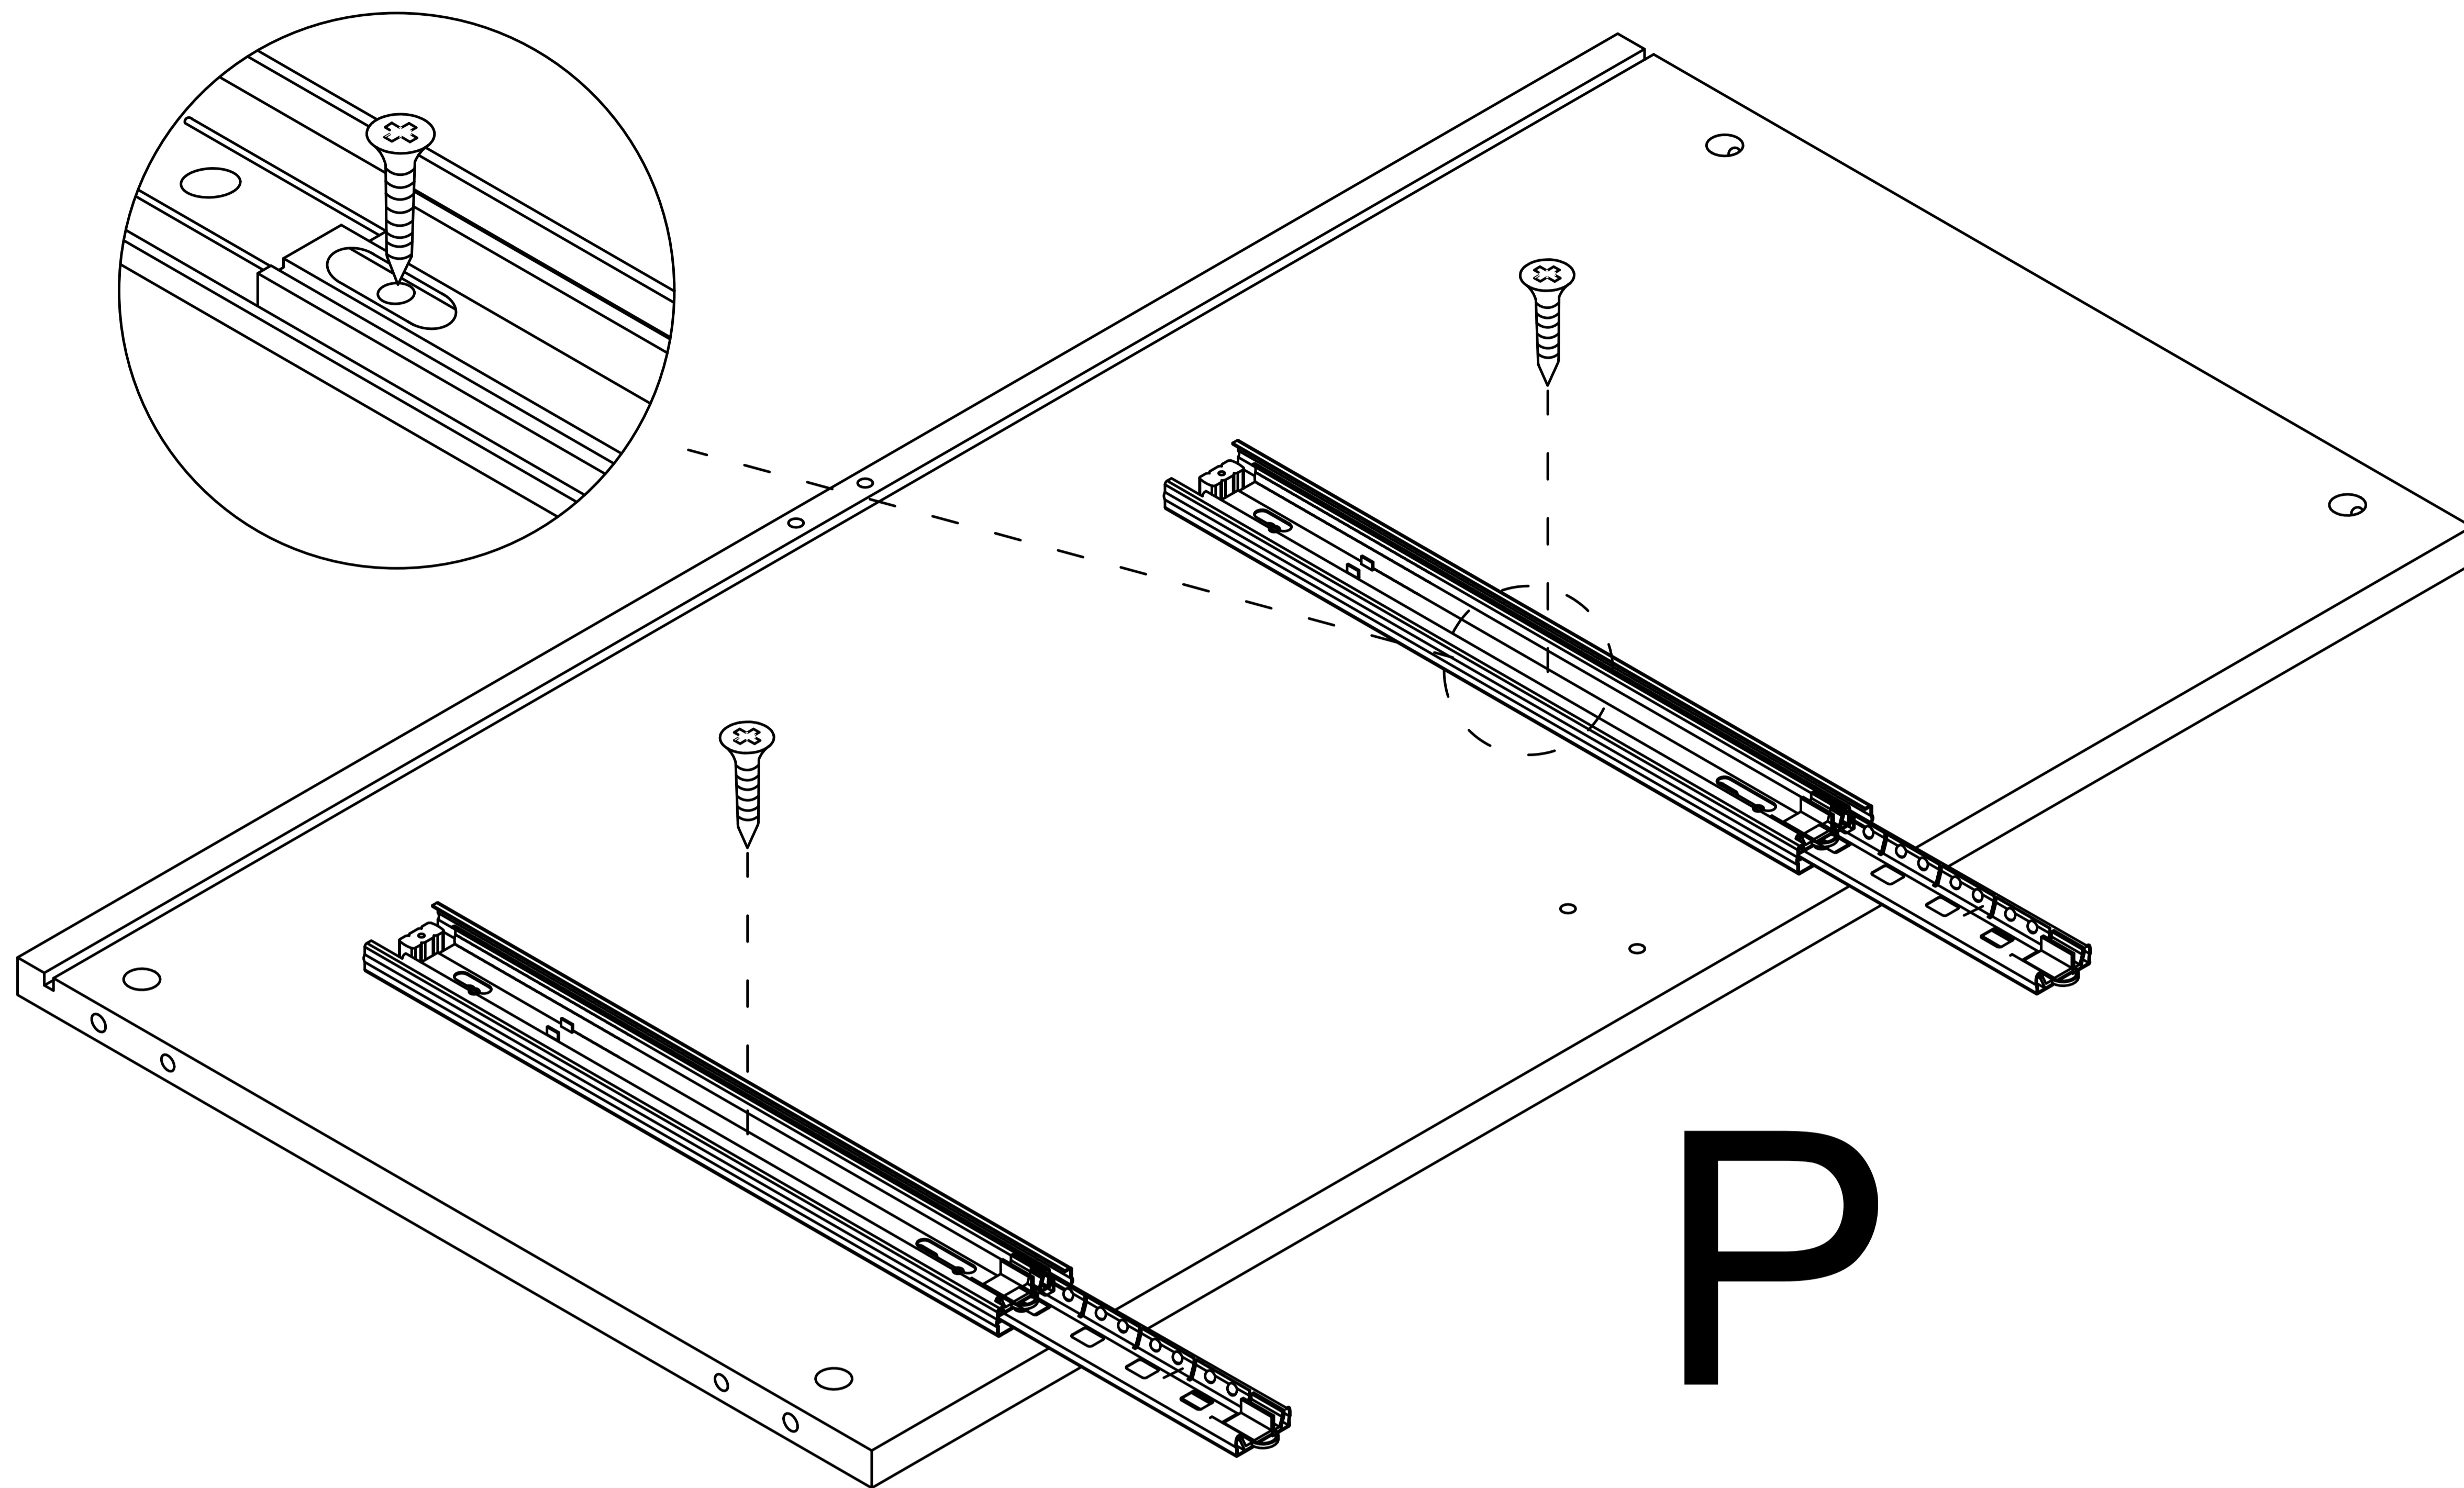
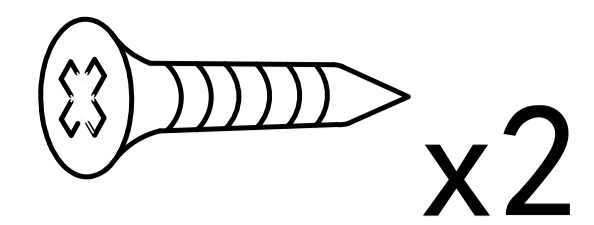


P

Step 33

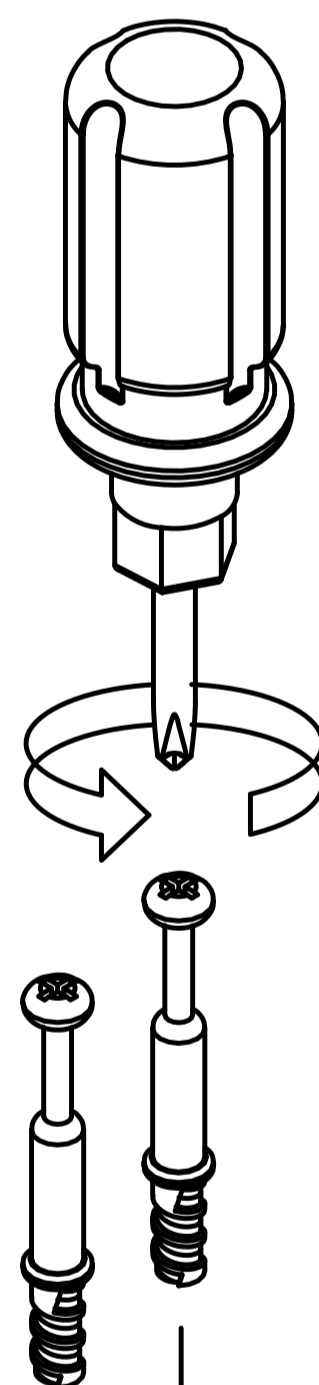


1

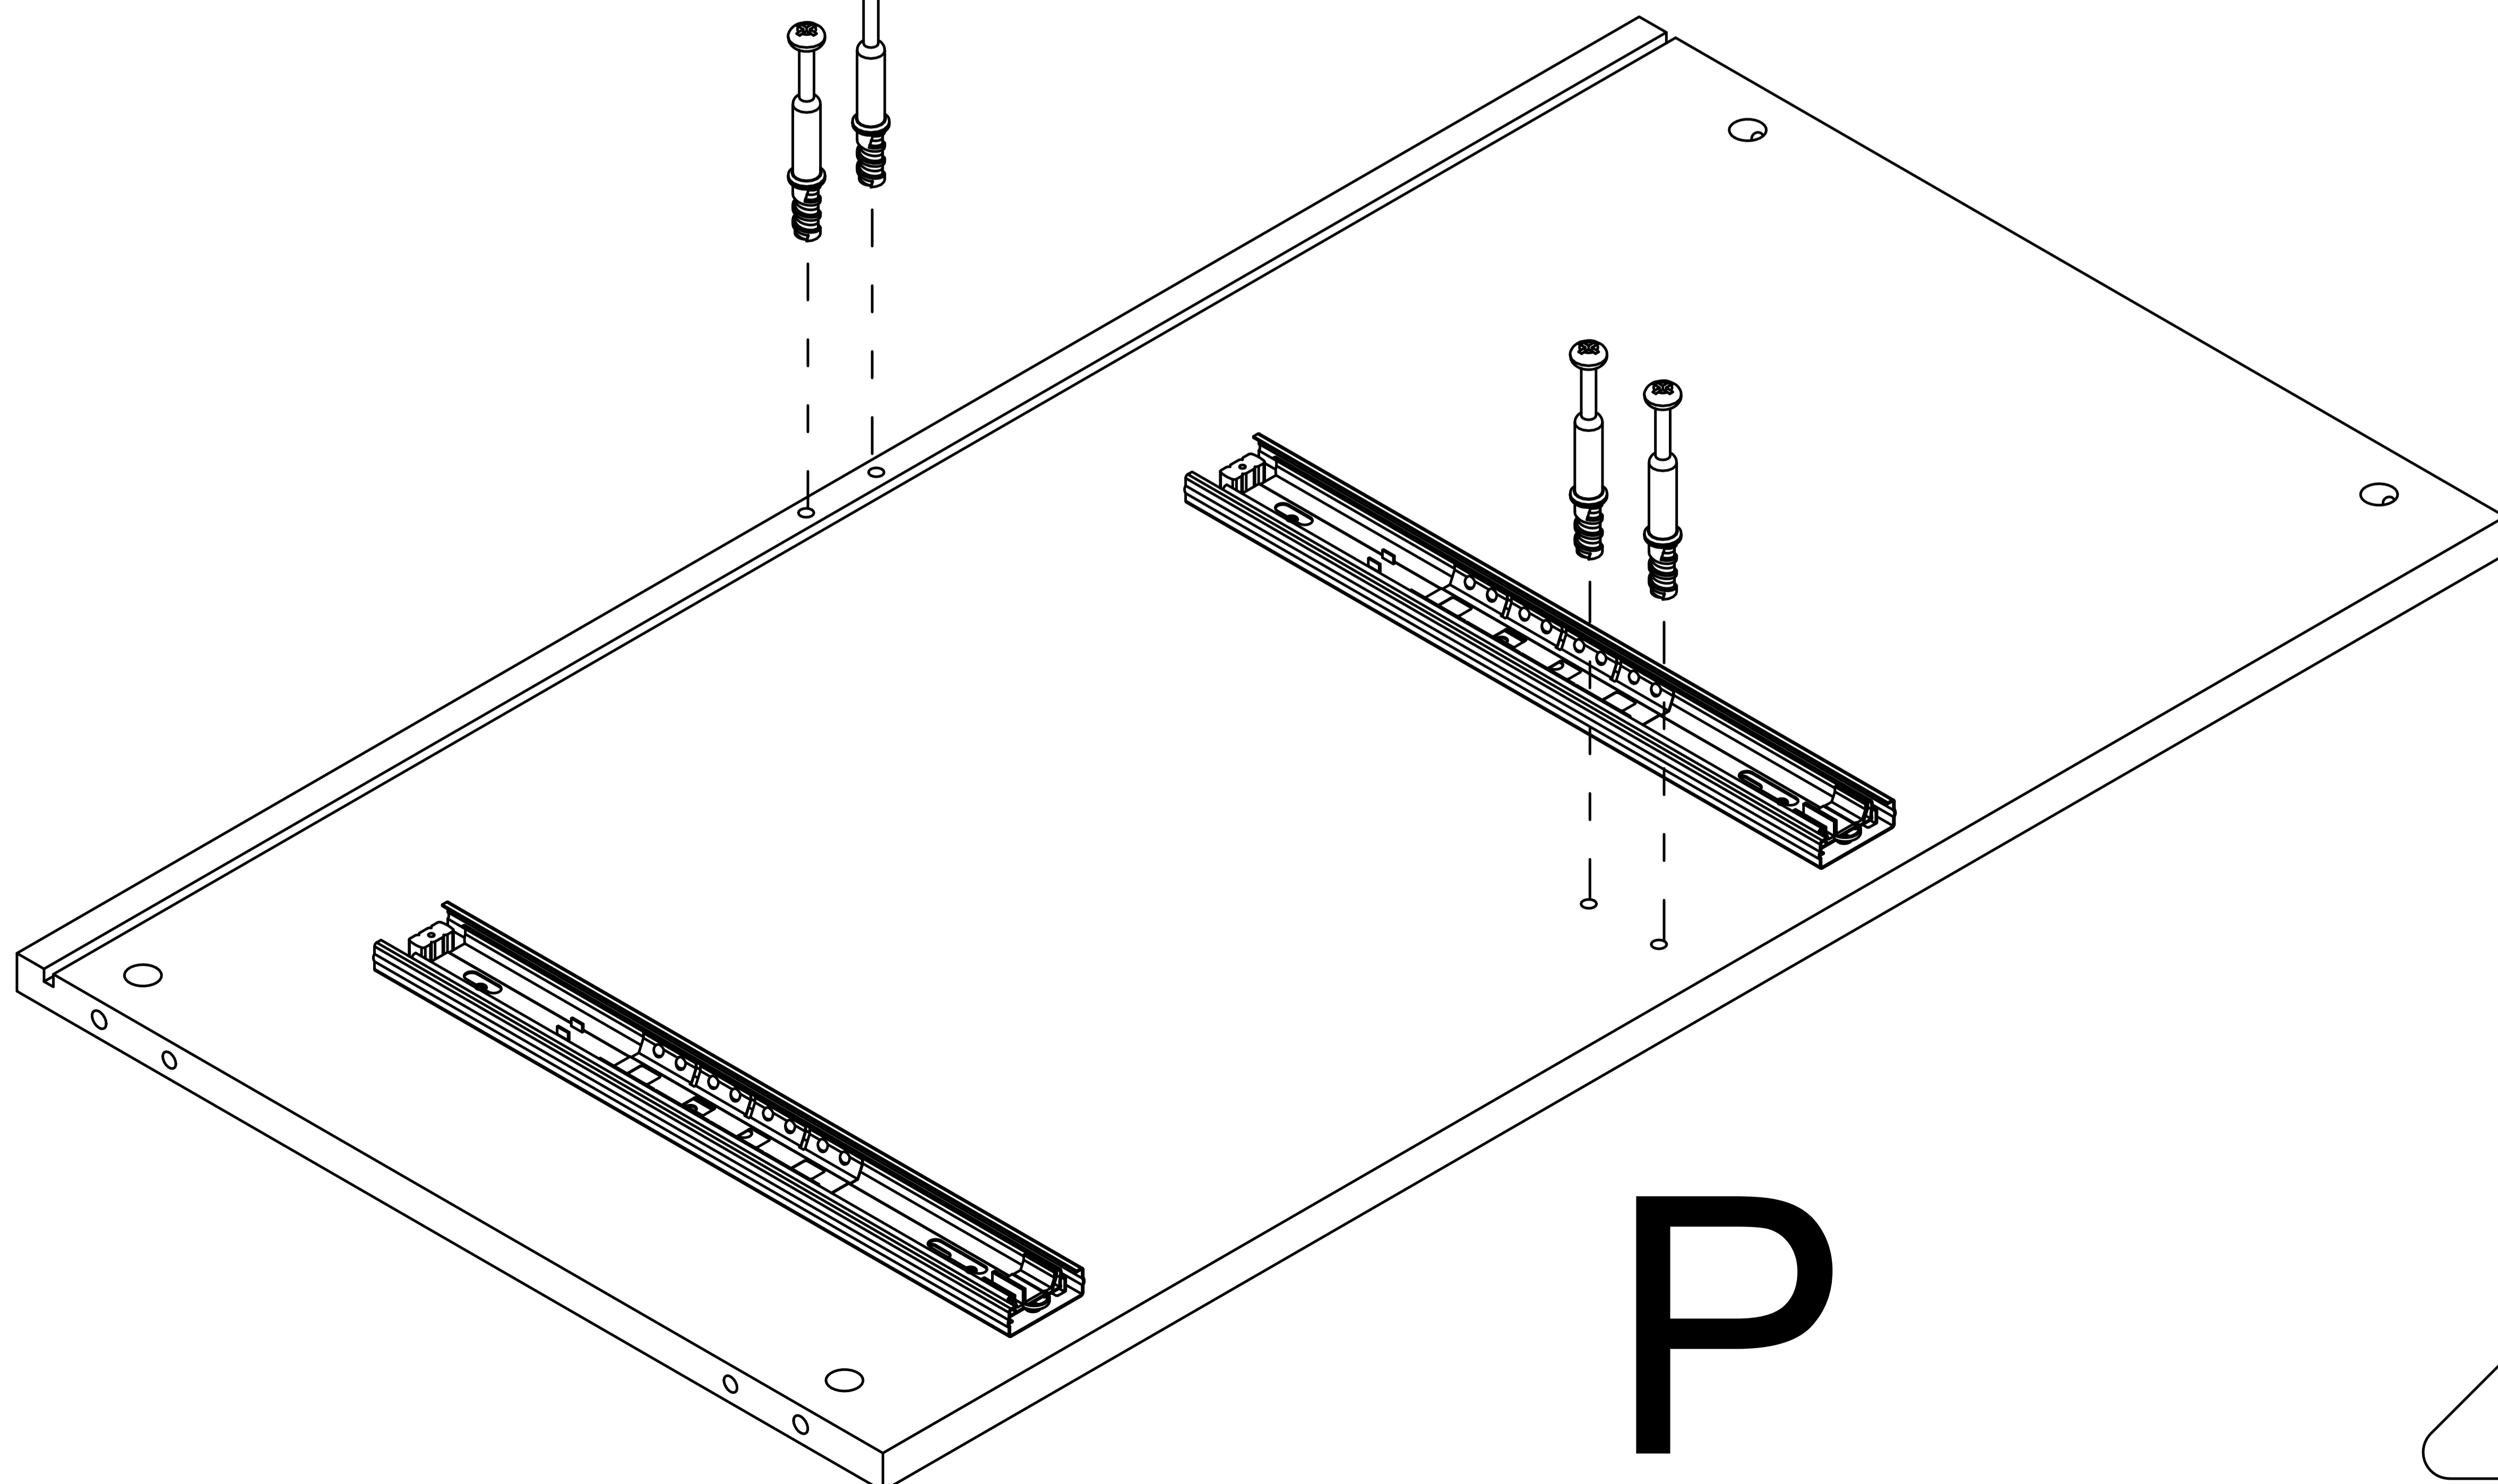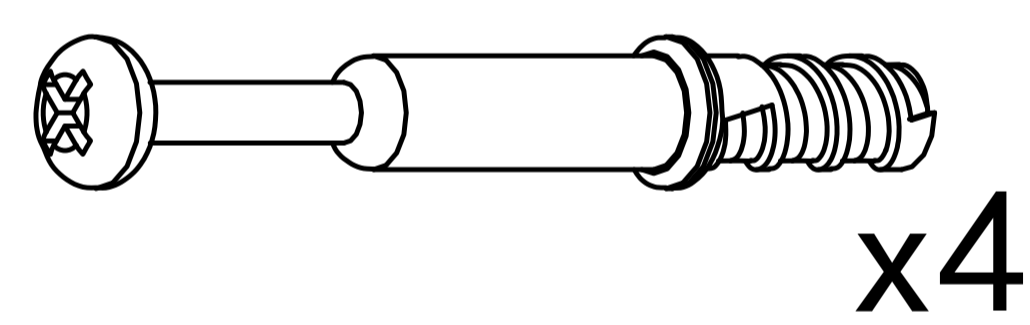


P


25


Step 34

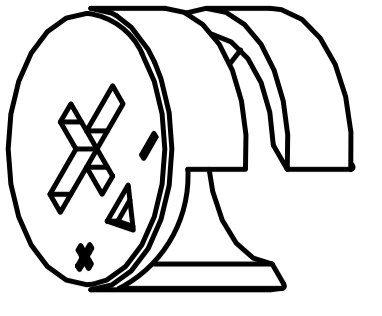2  x4

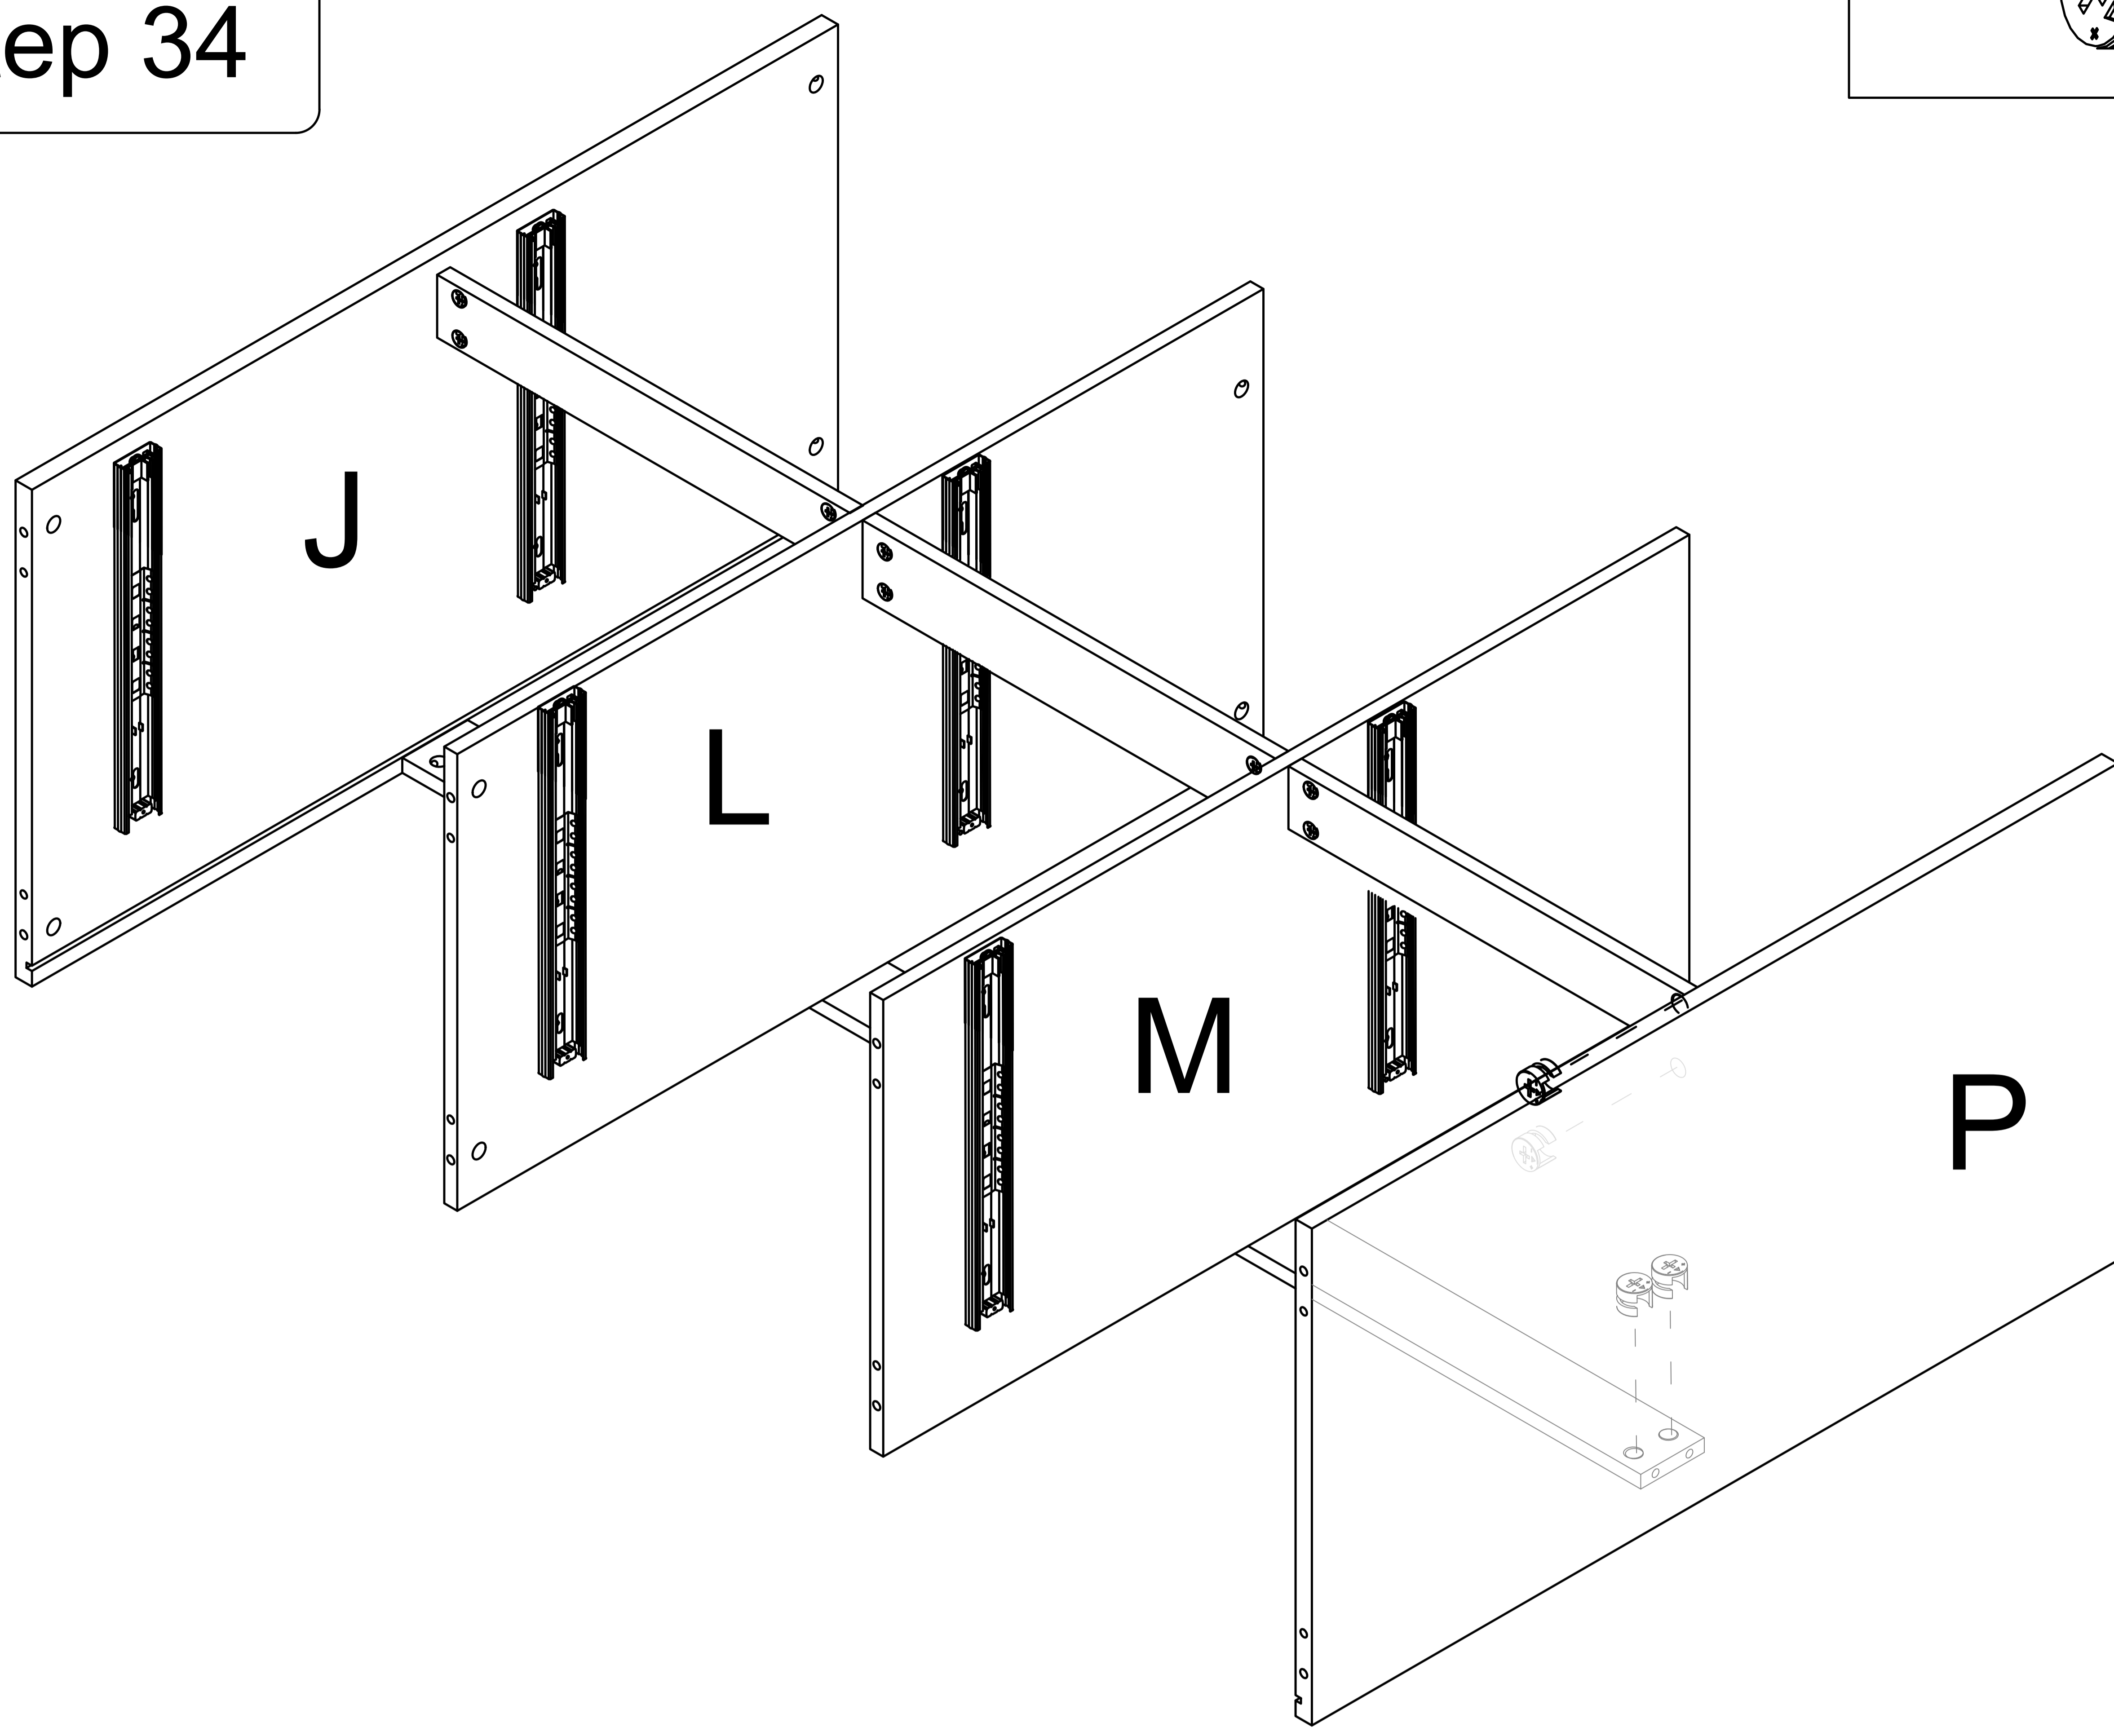



Step 35

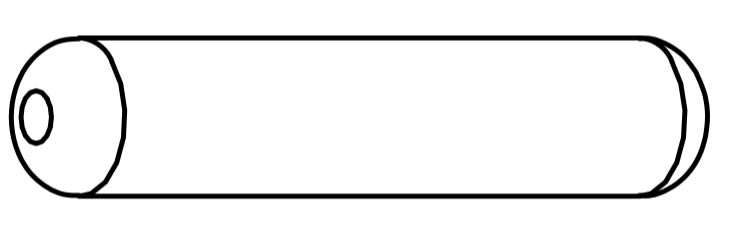3  x8

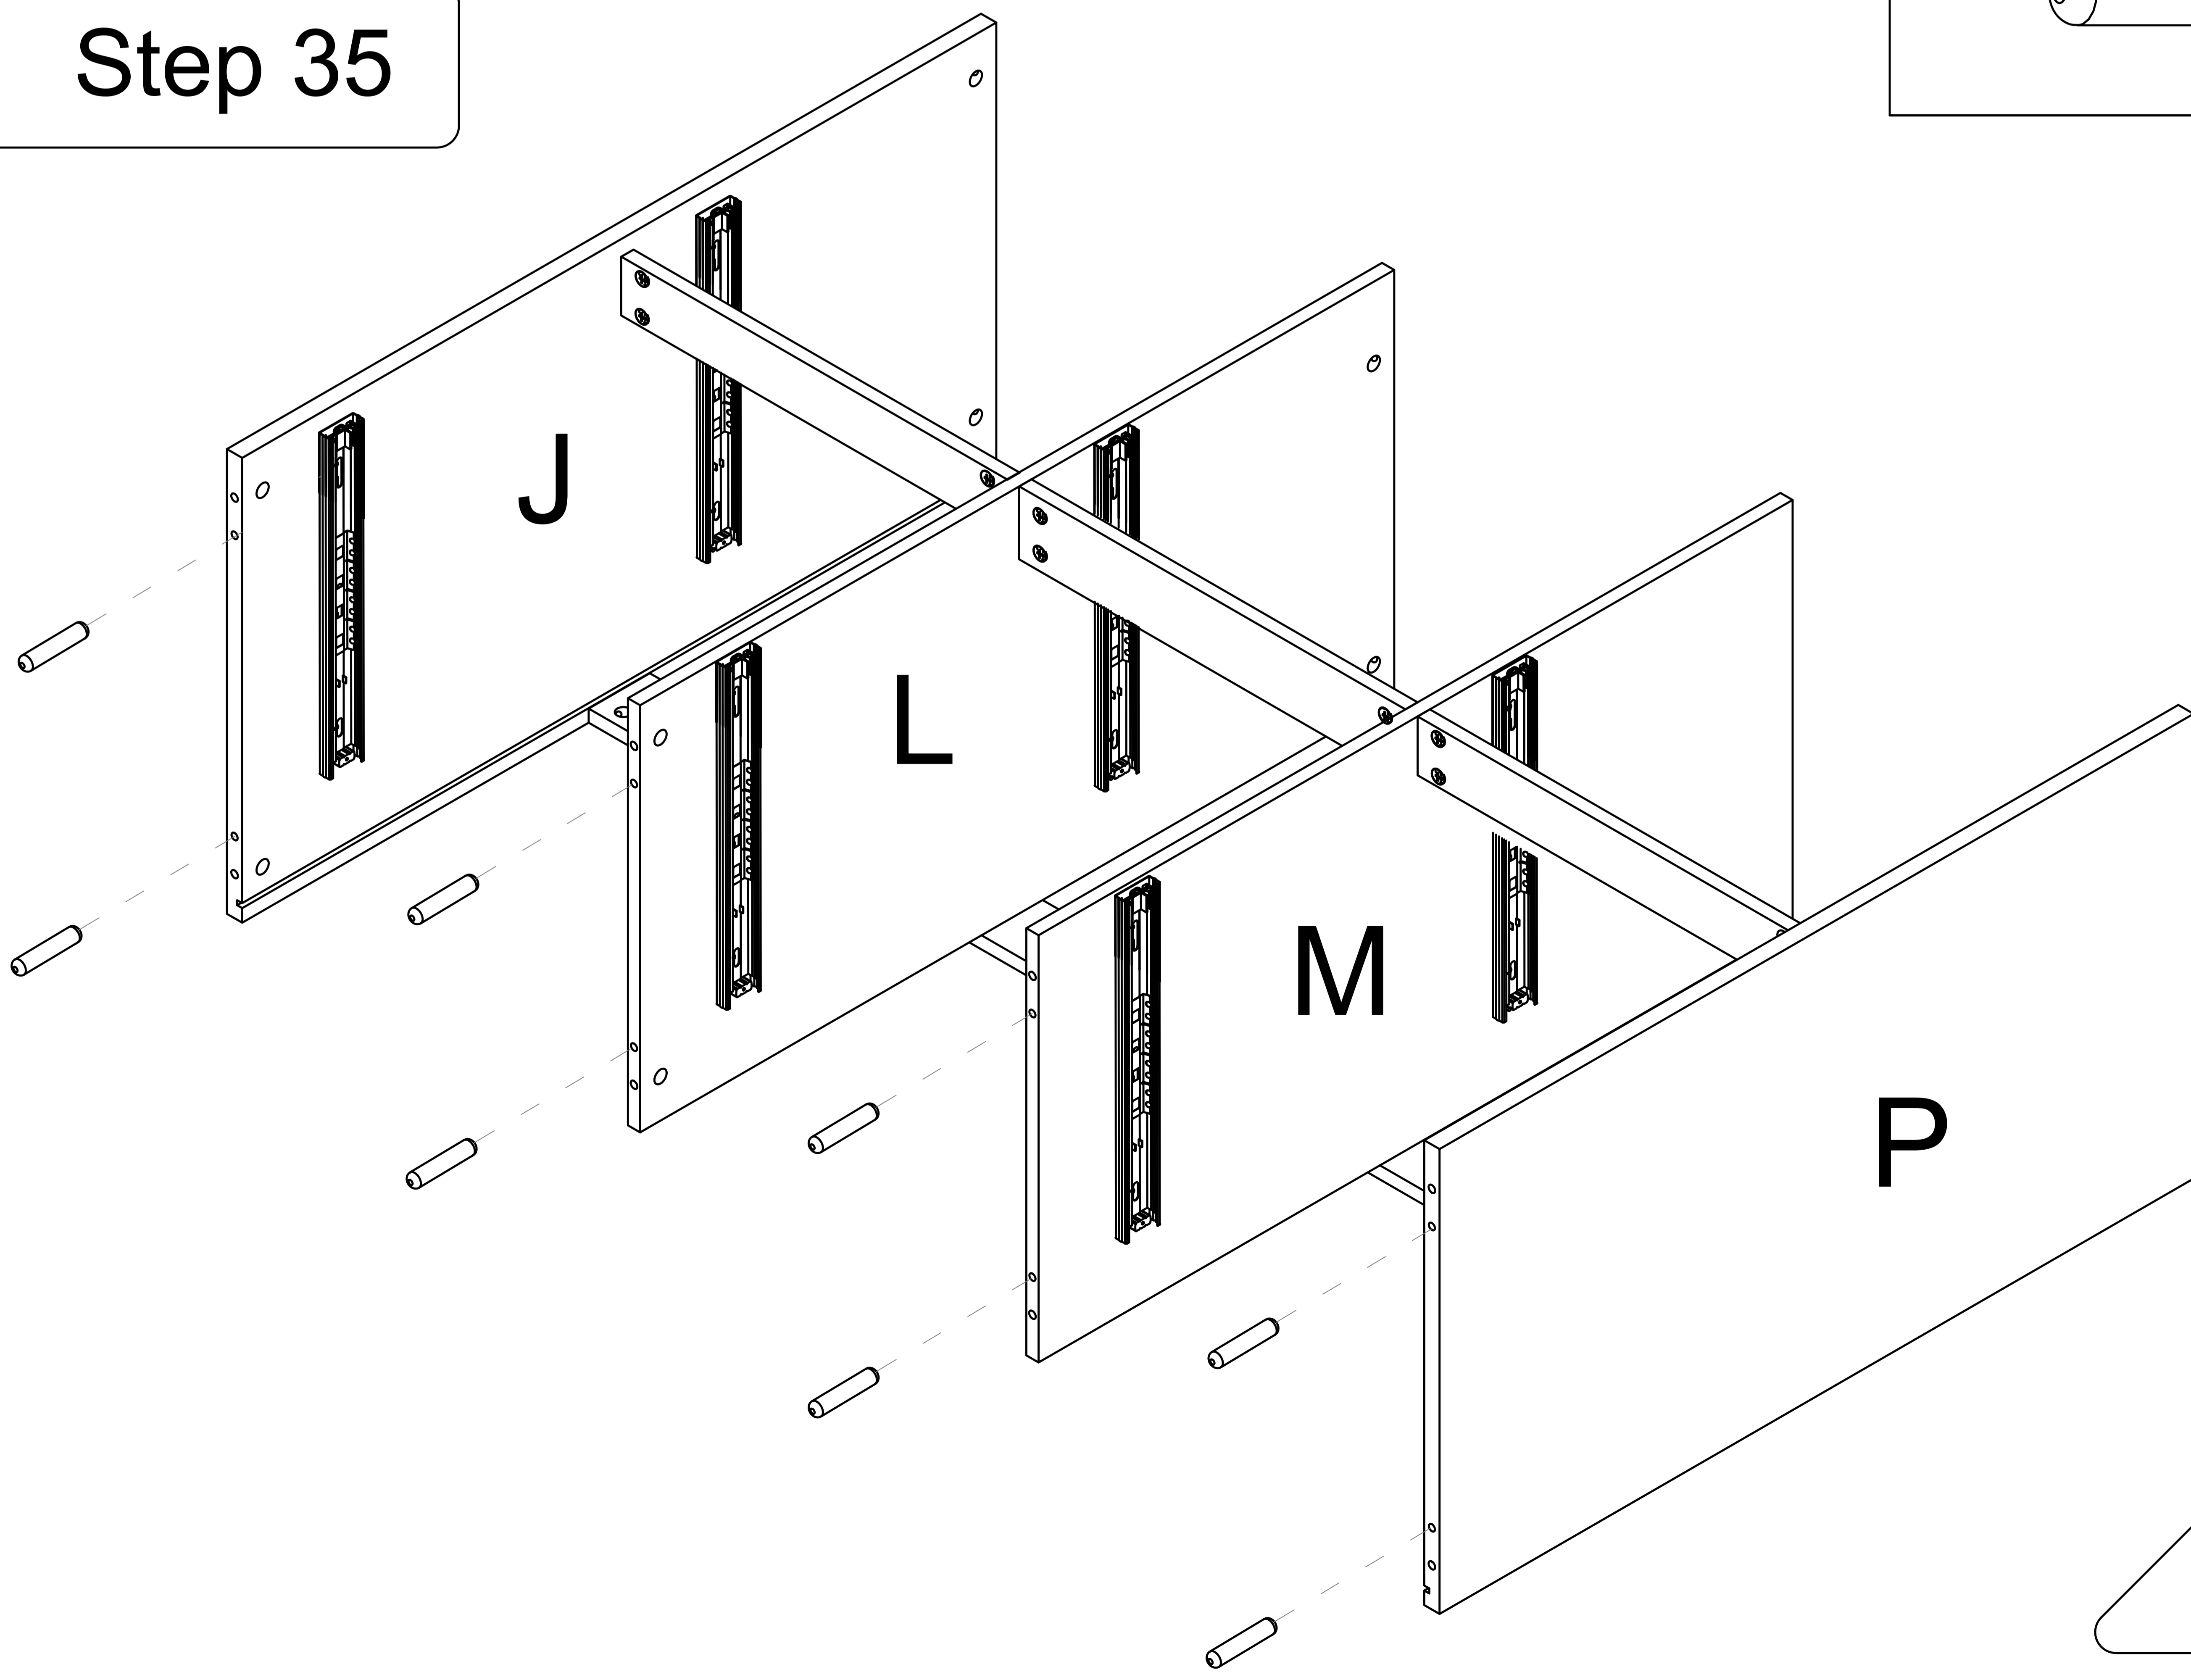



Step 36

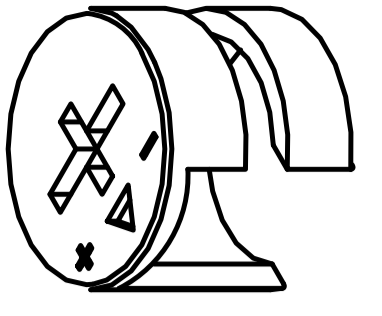2  x8

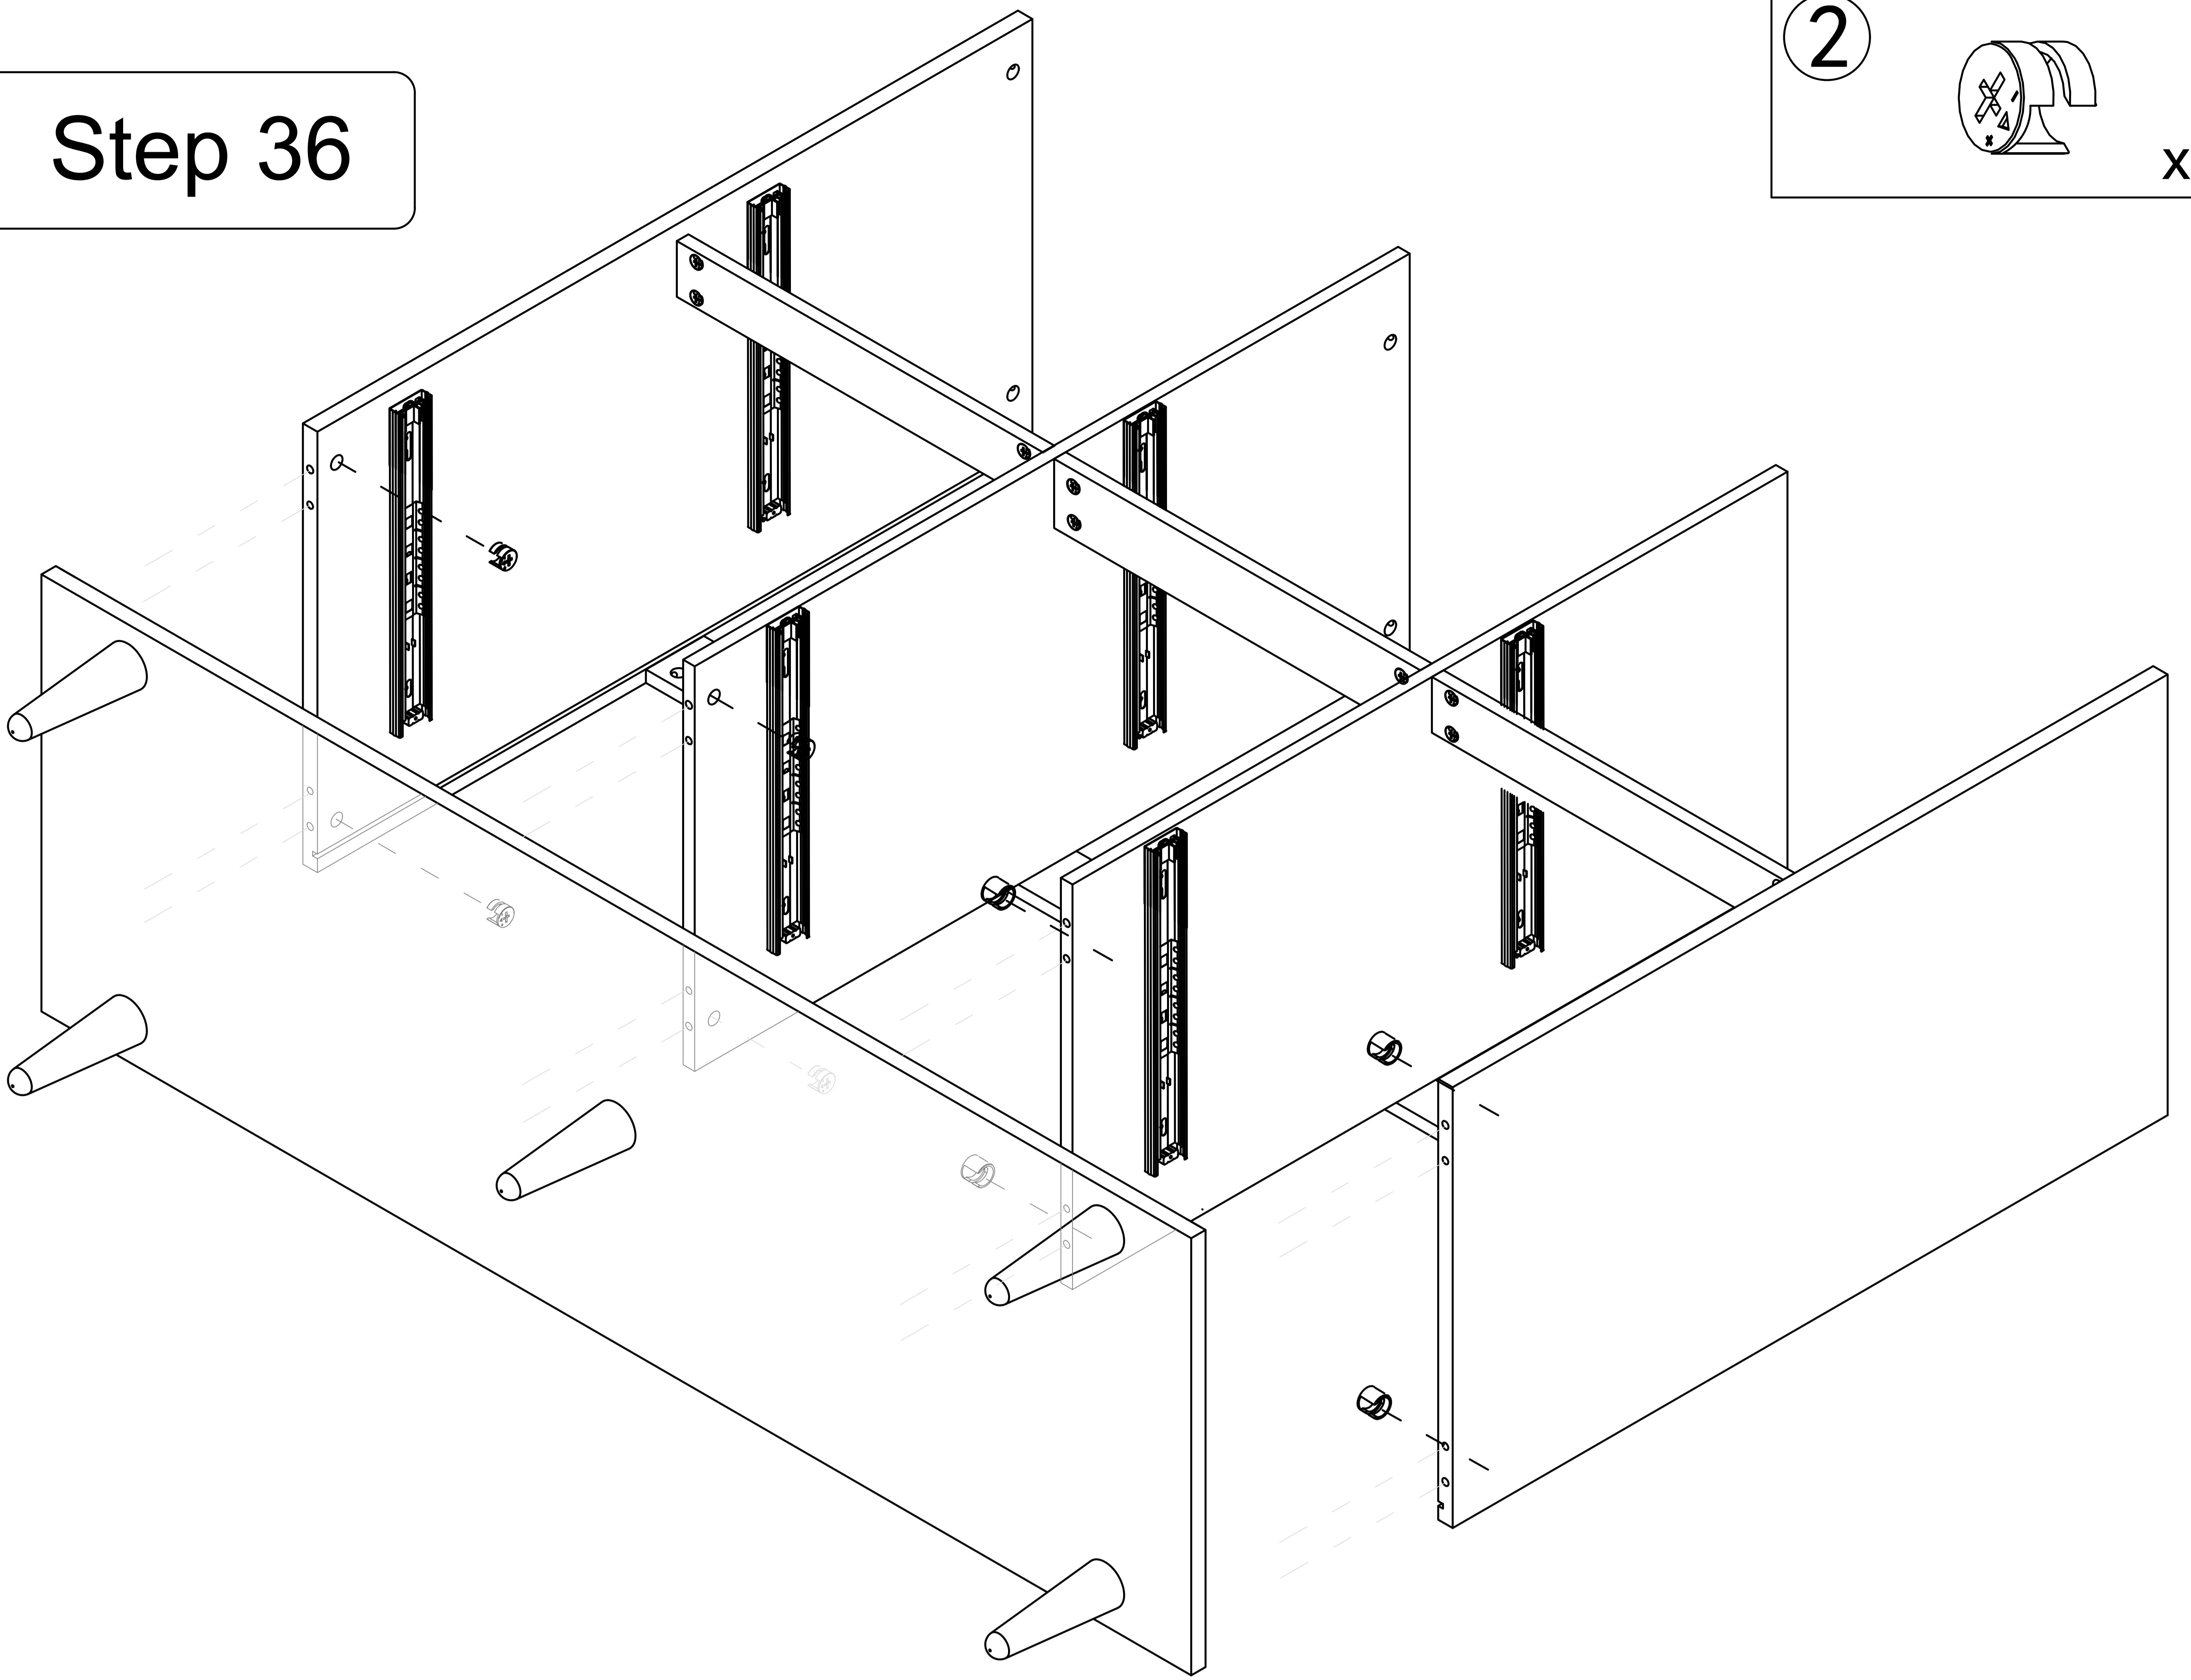


Step 37


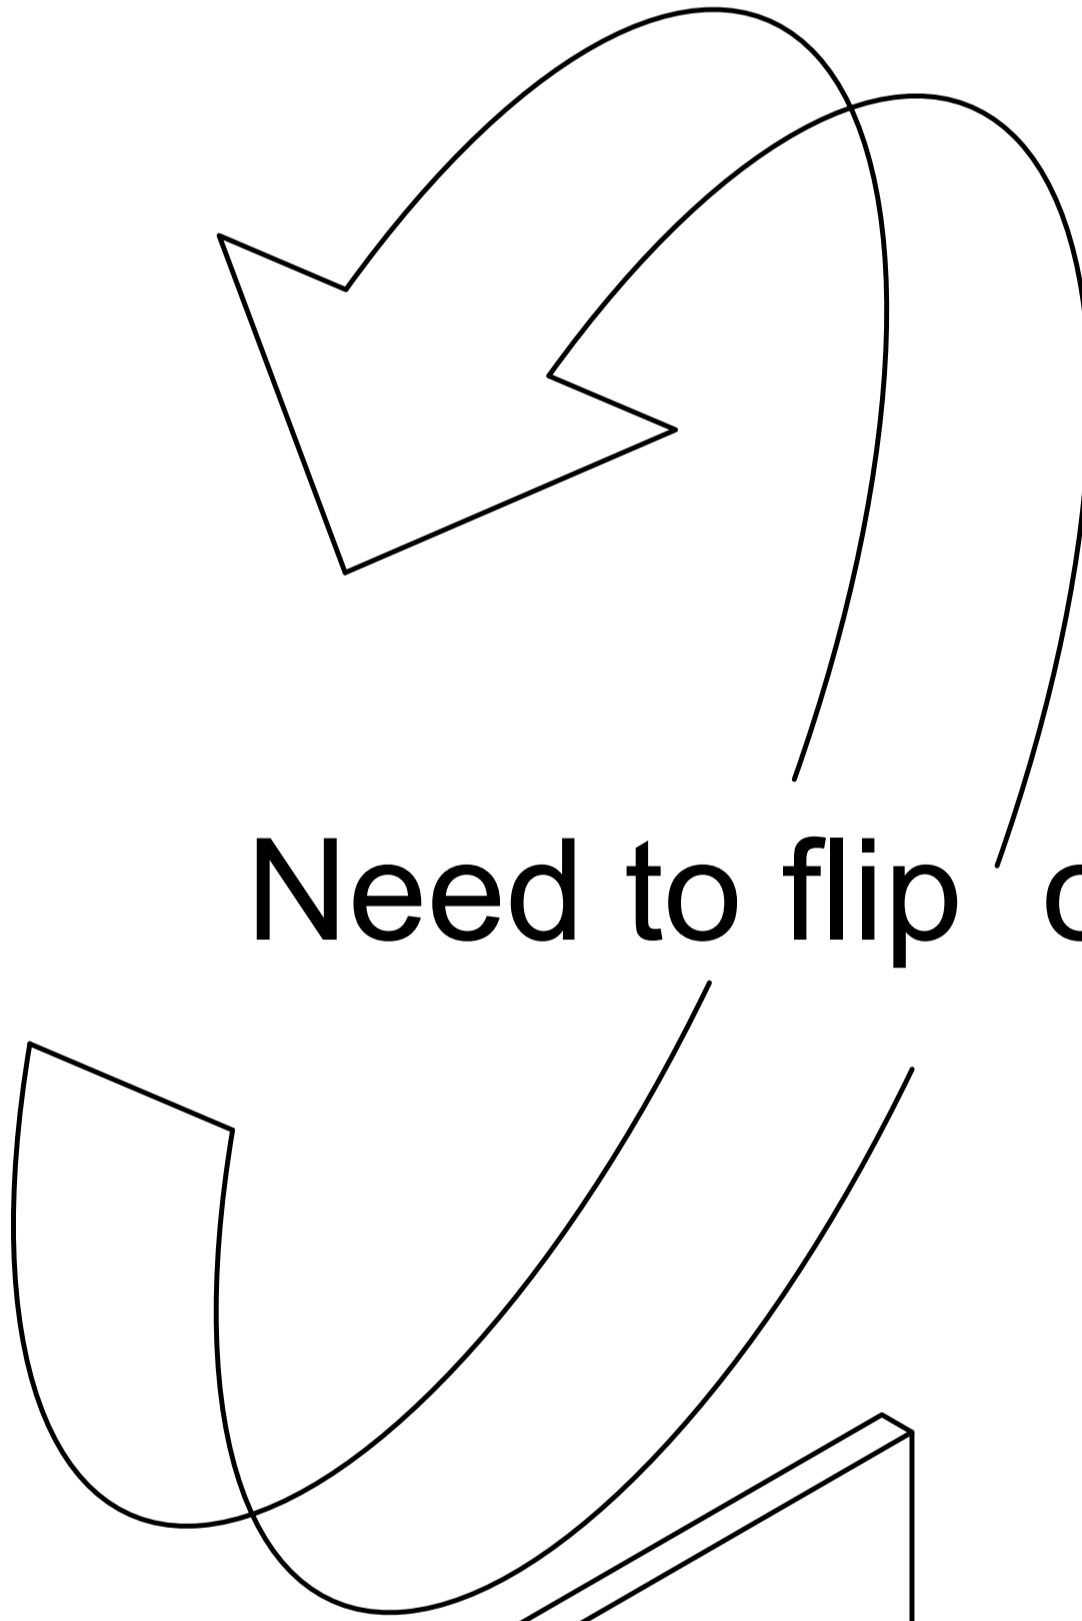
 Need to flip over

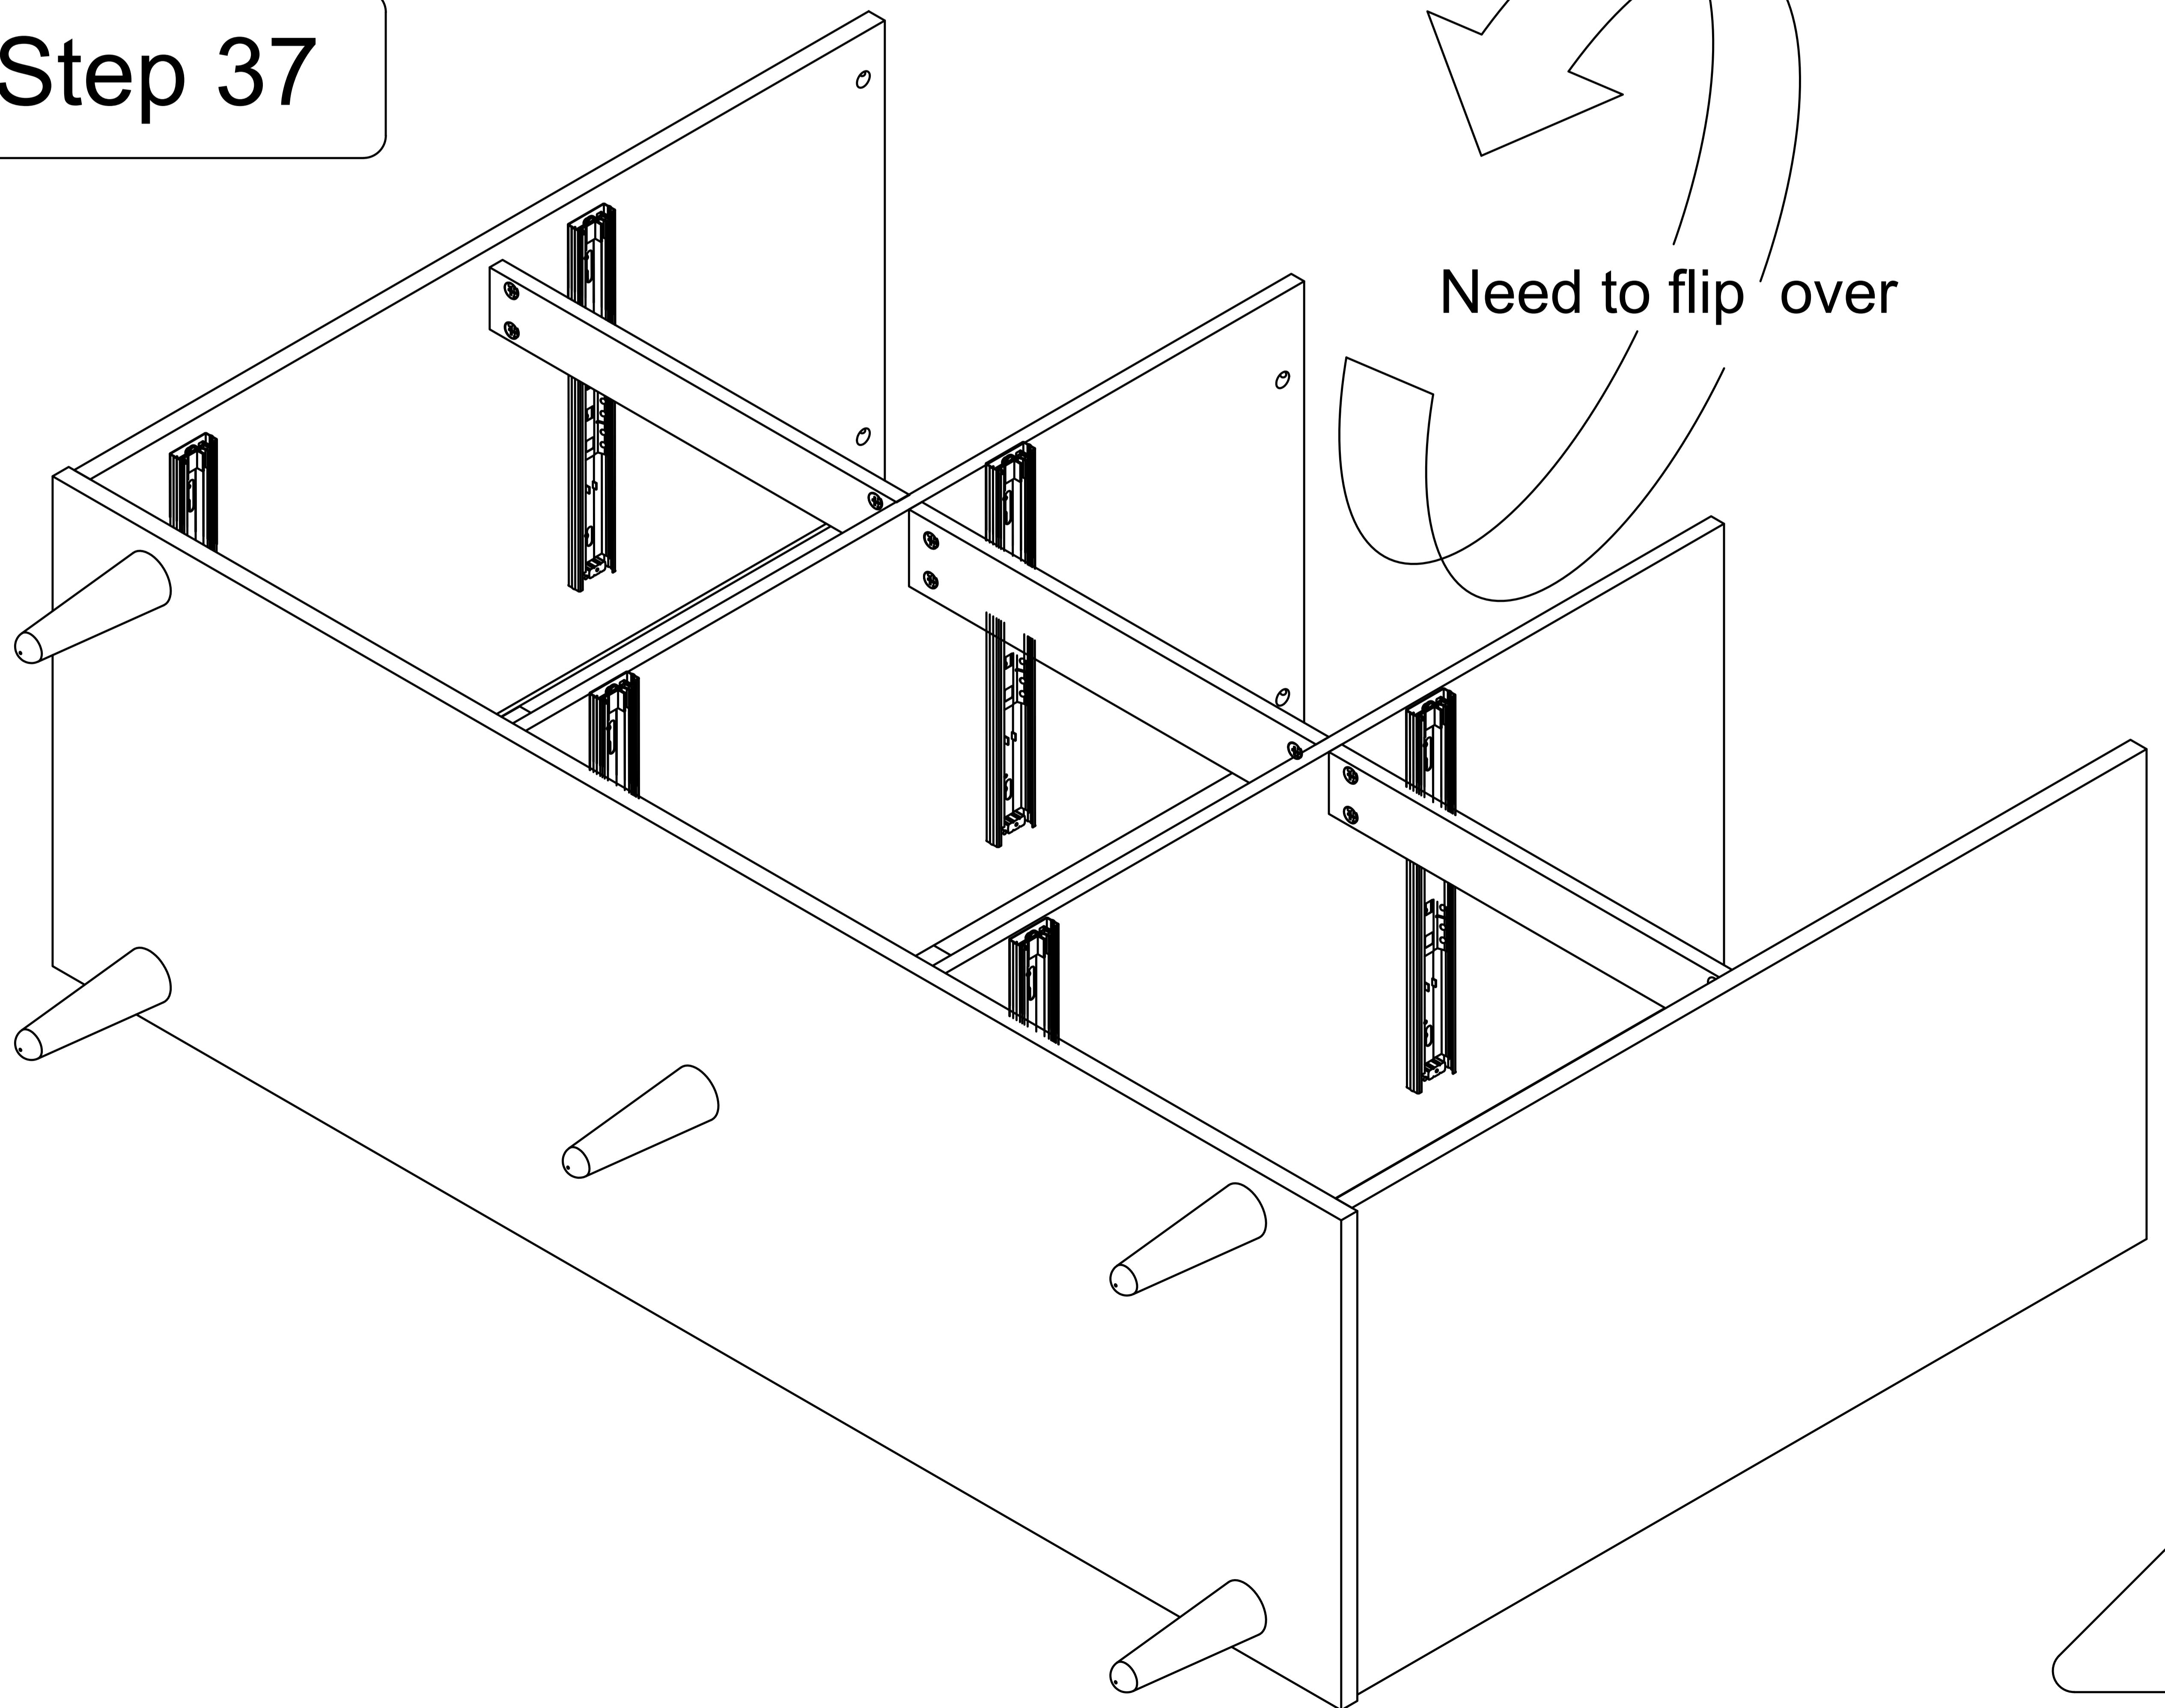



Step 38

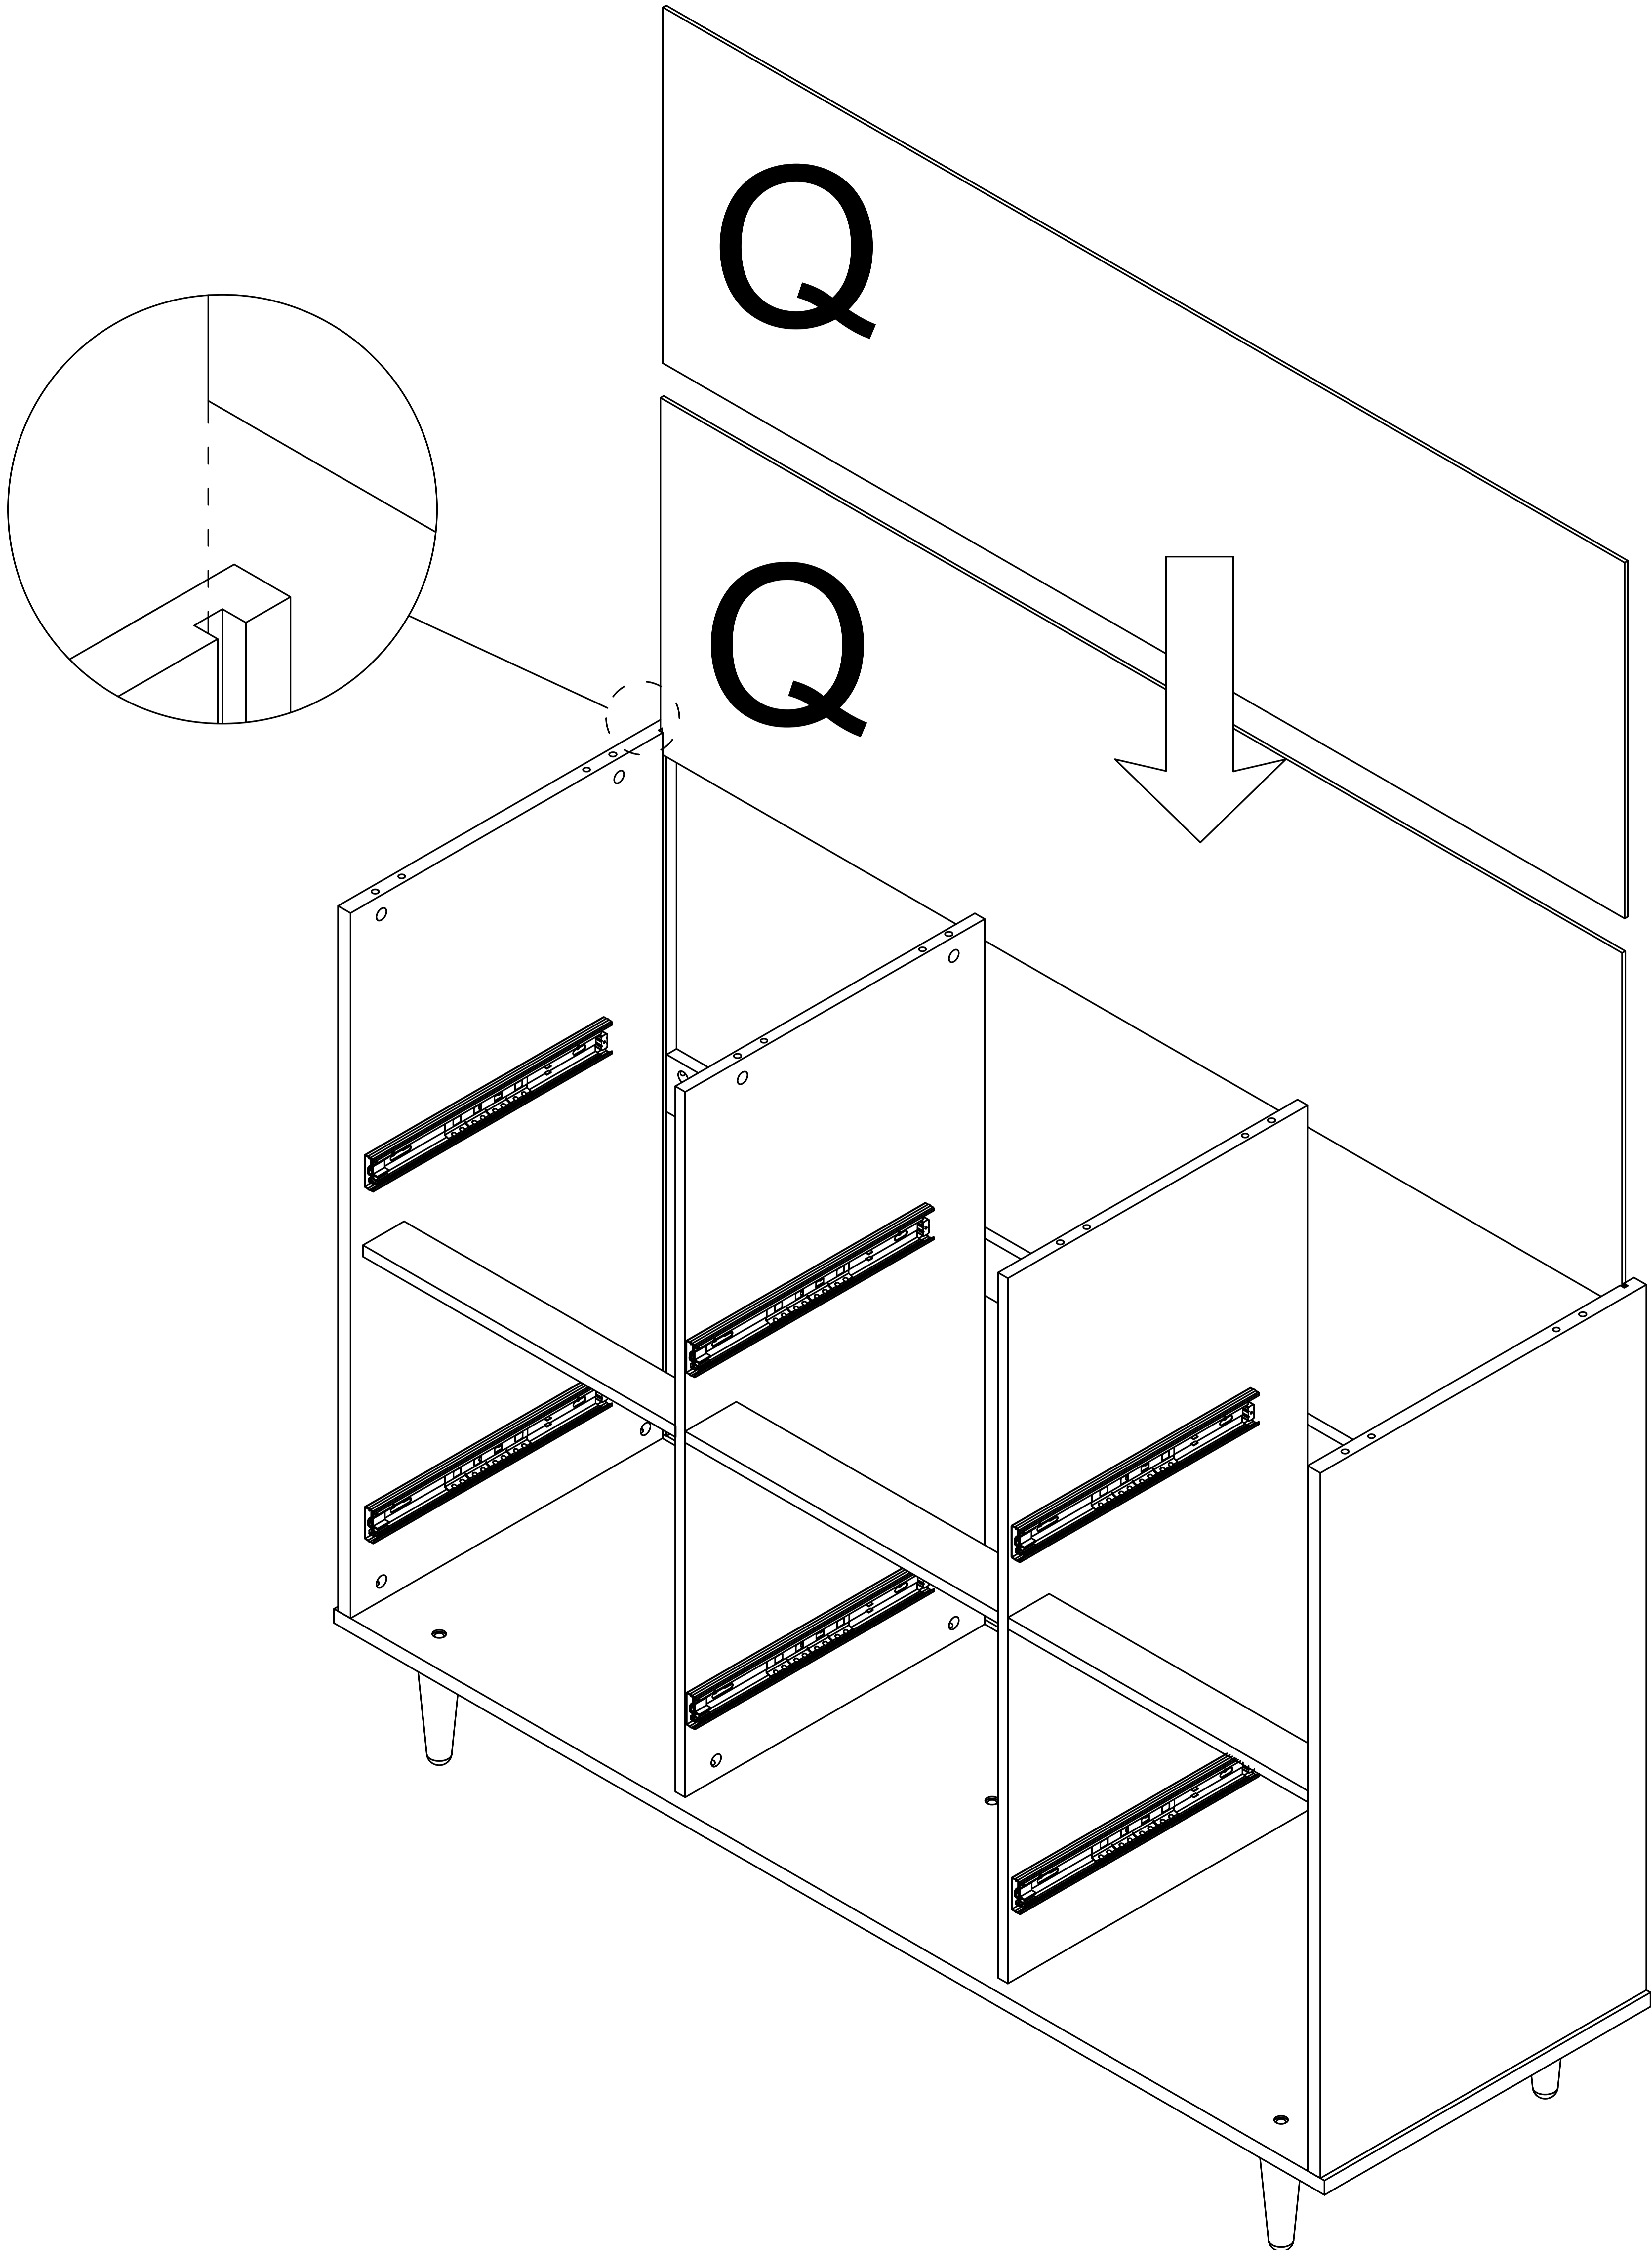


Step 39

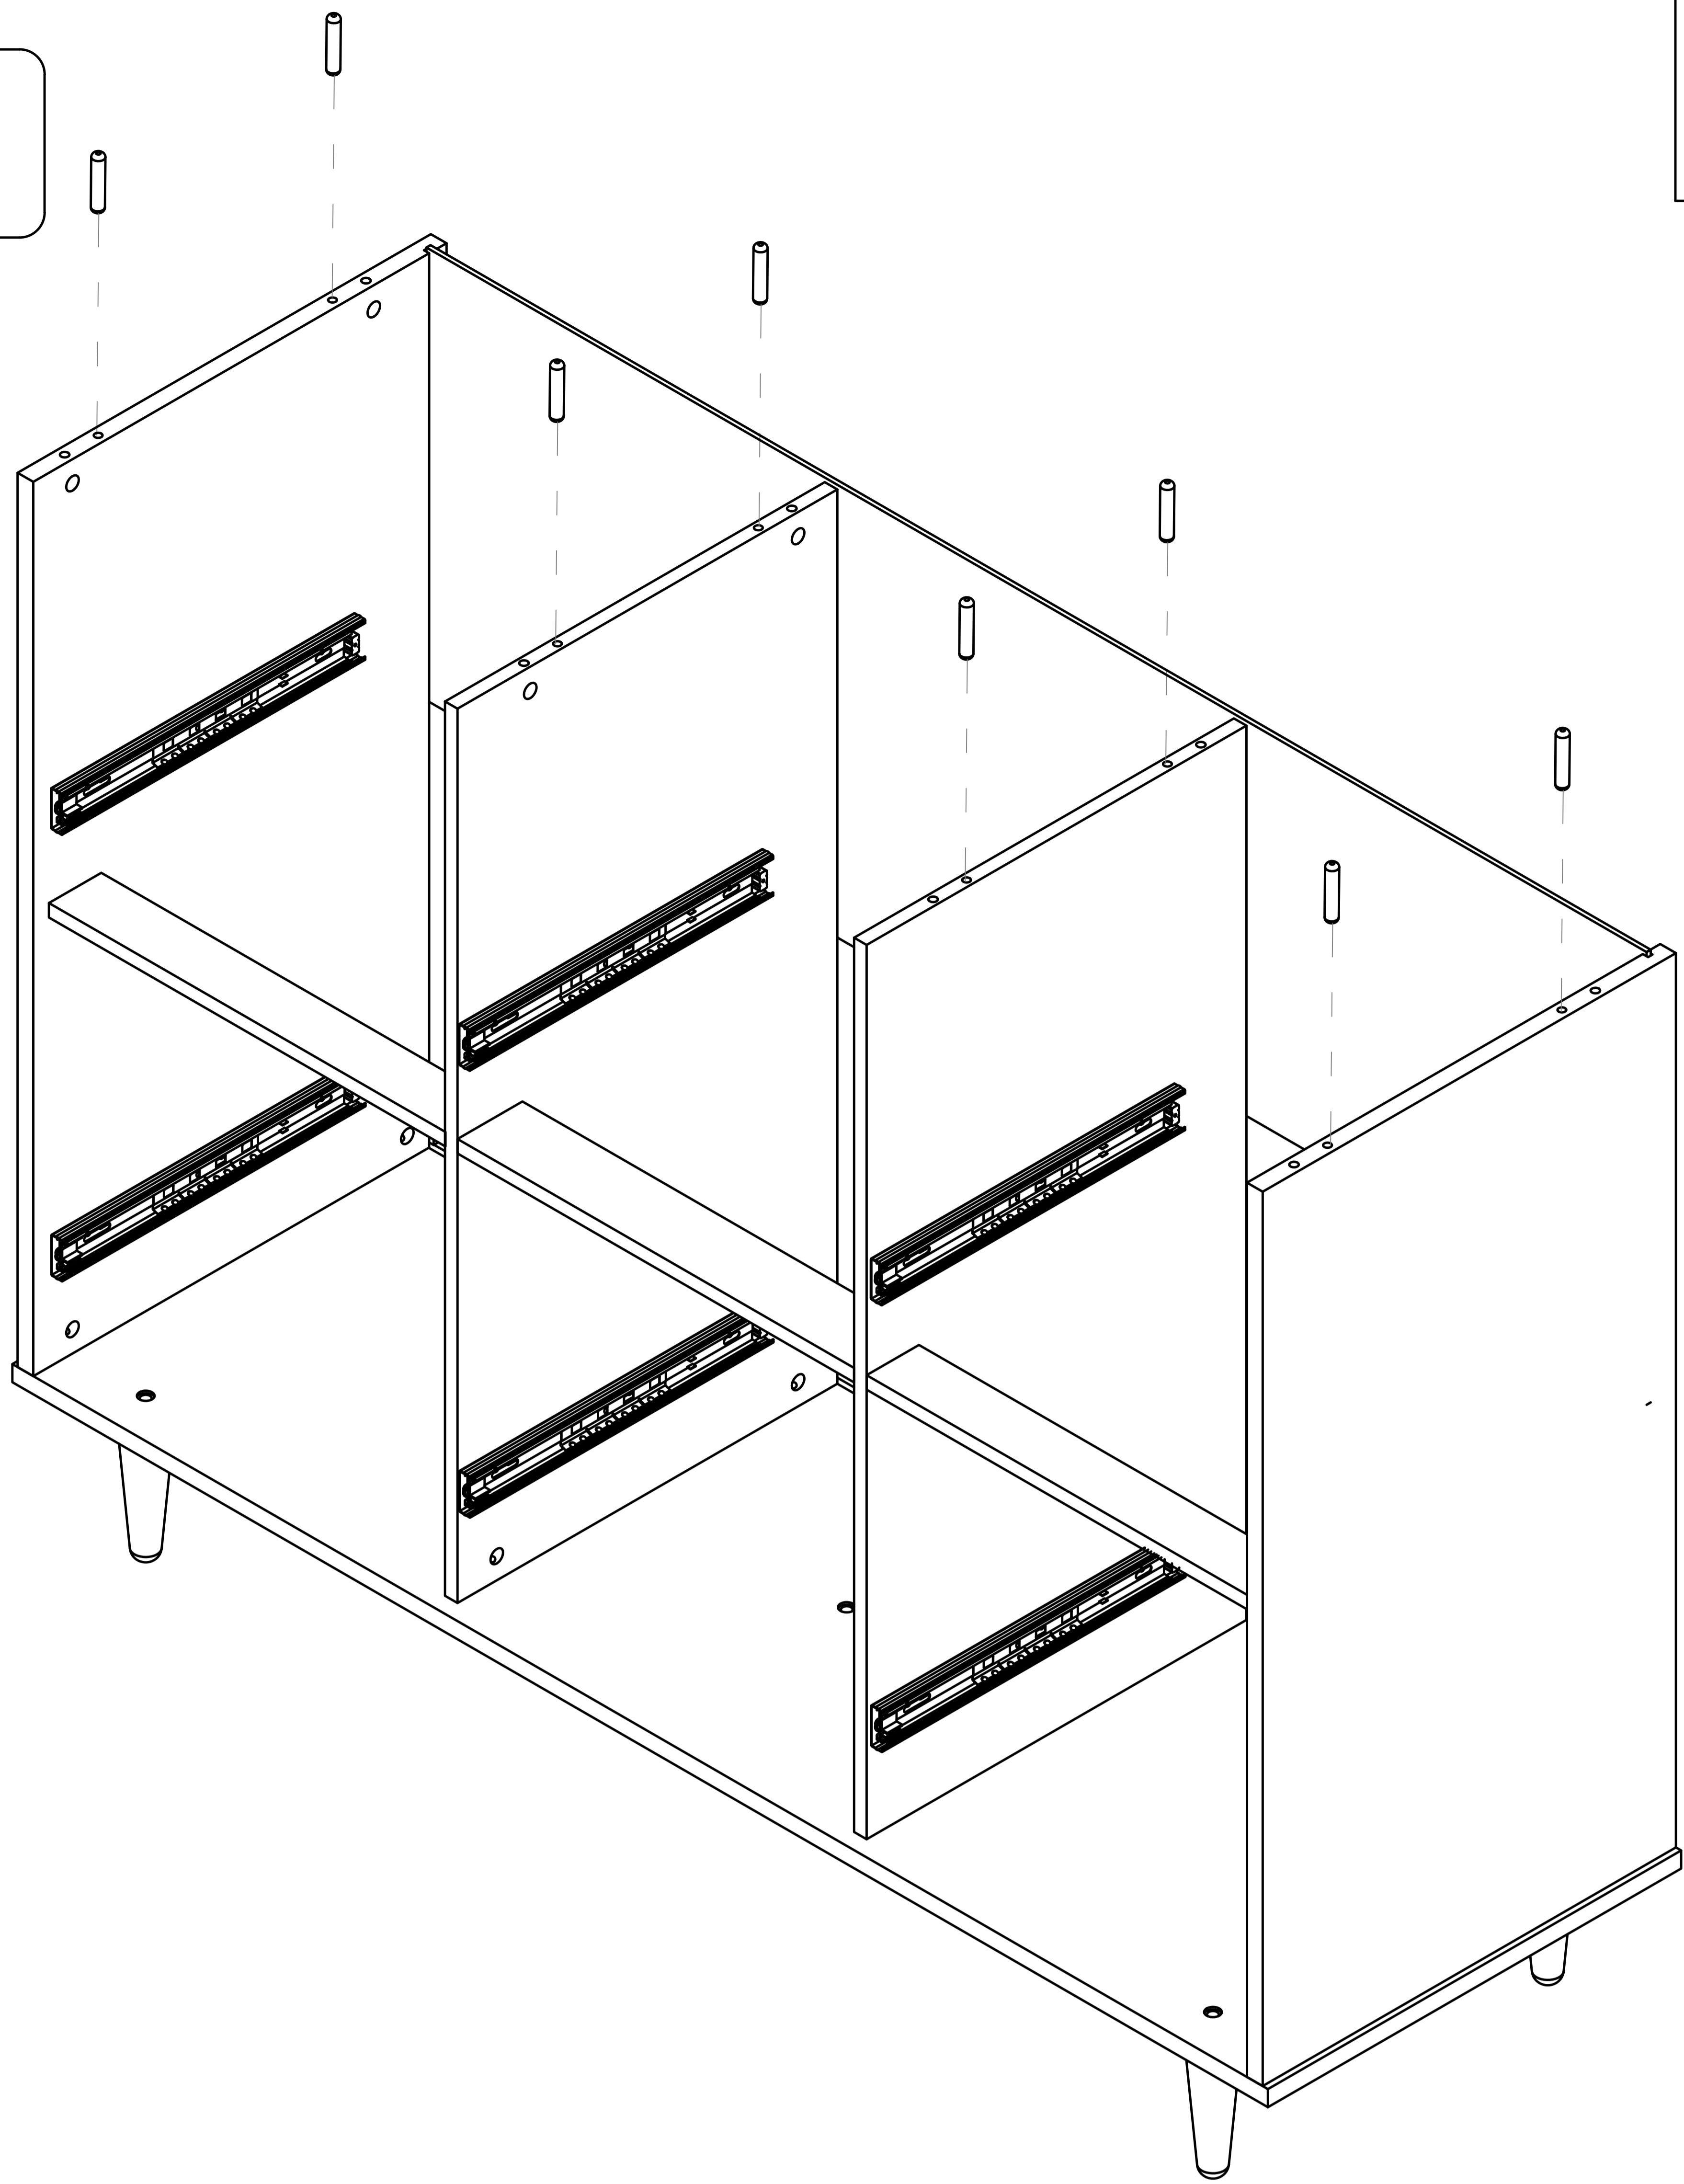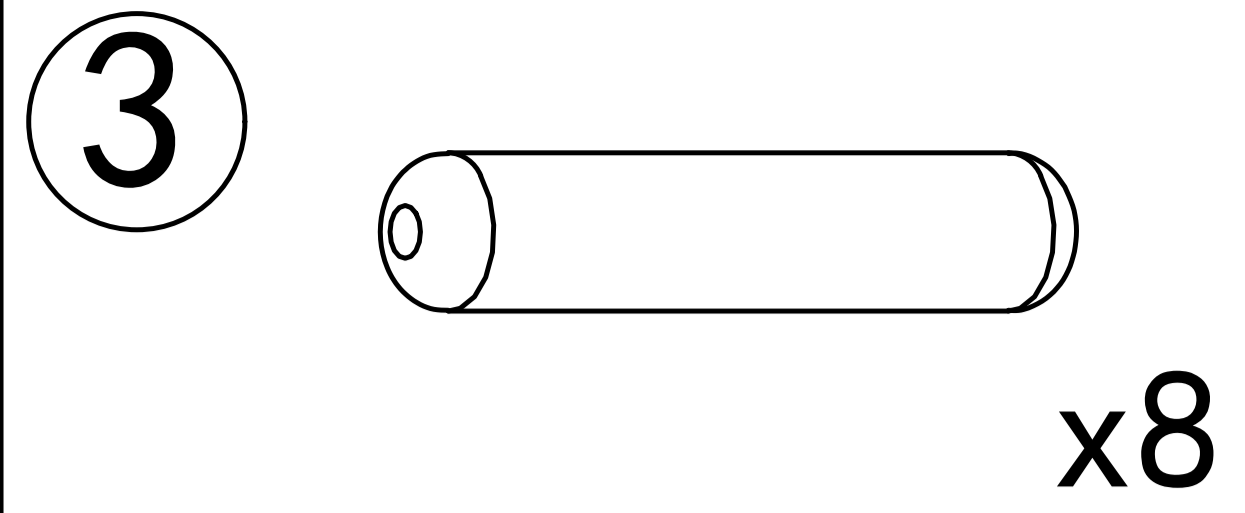

Step 40

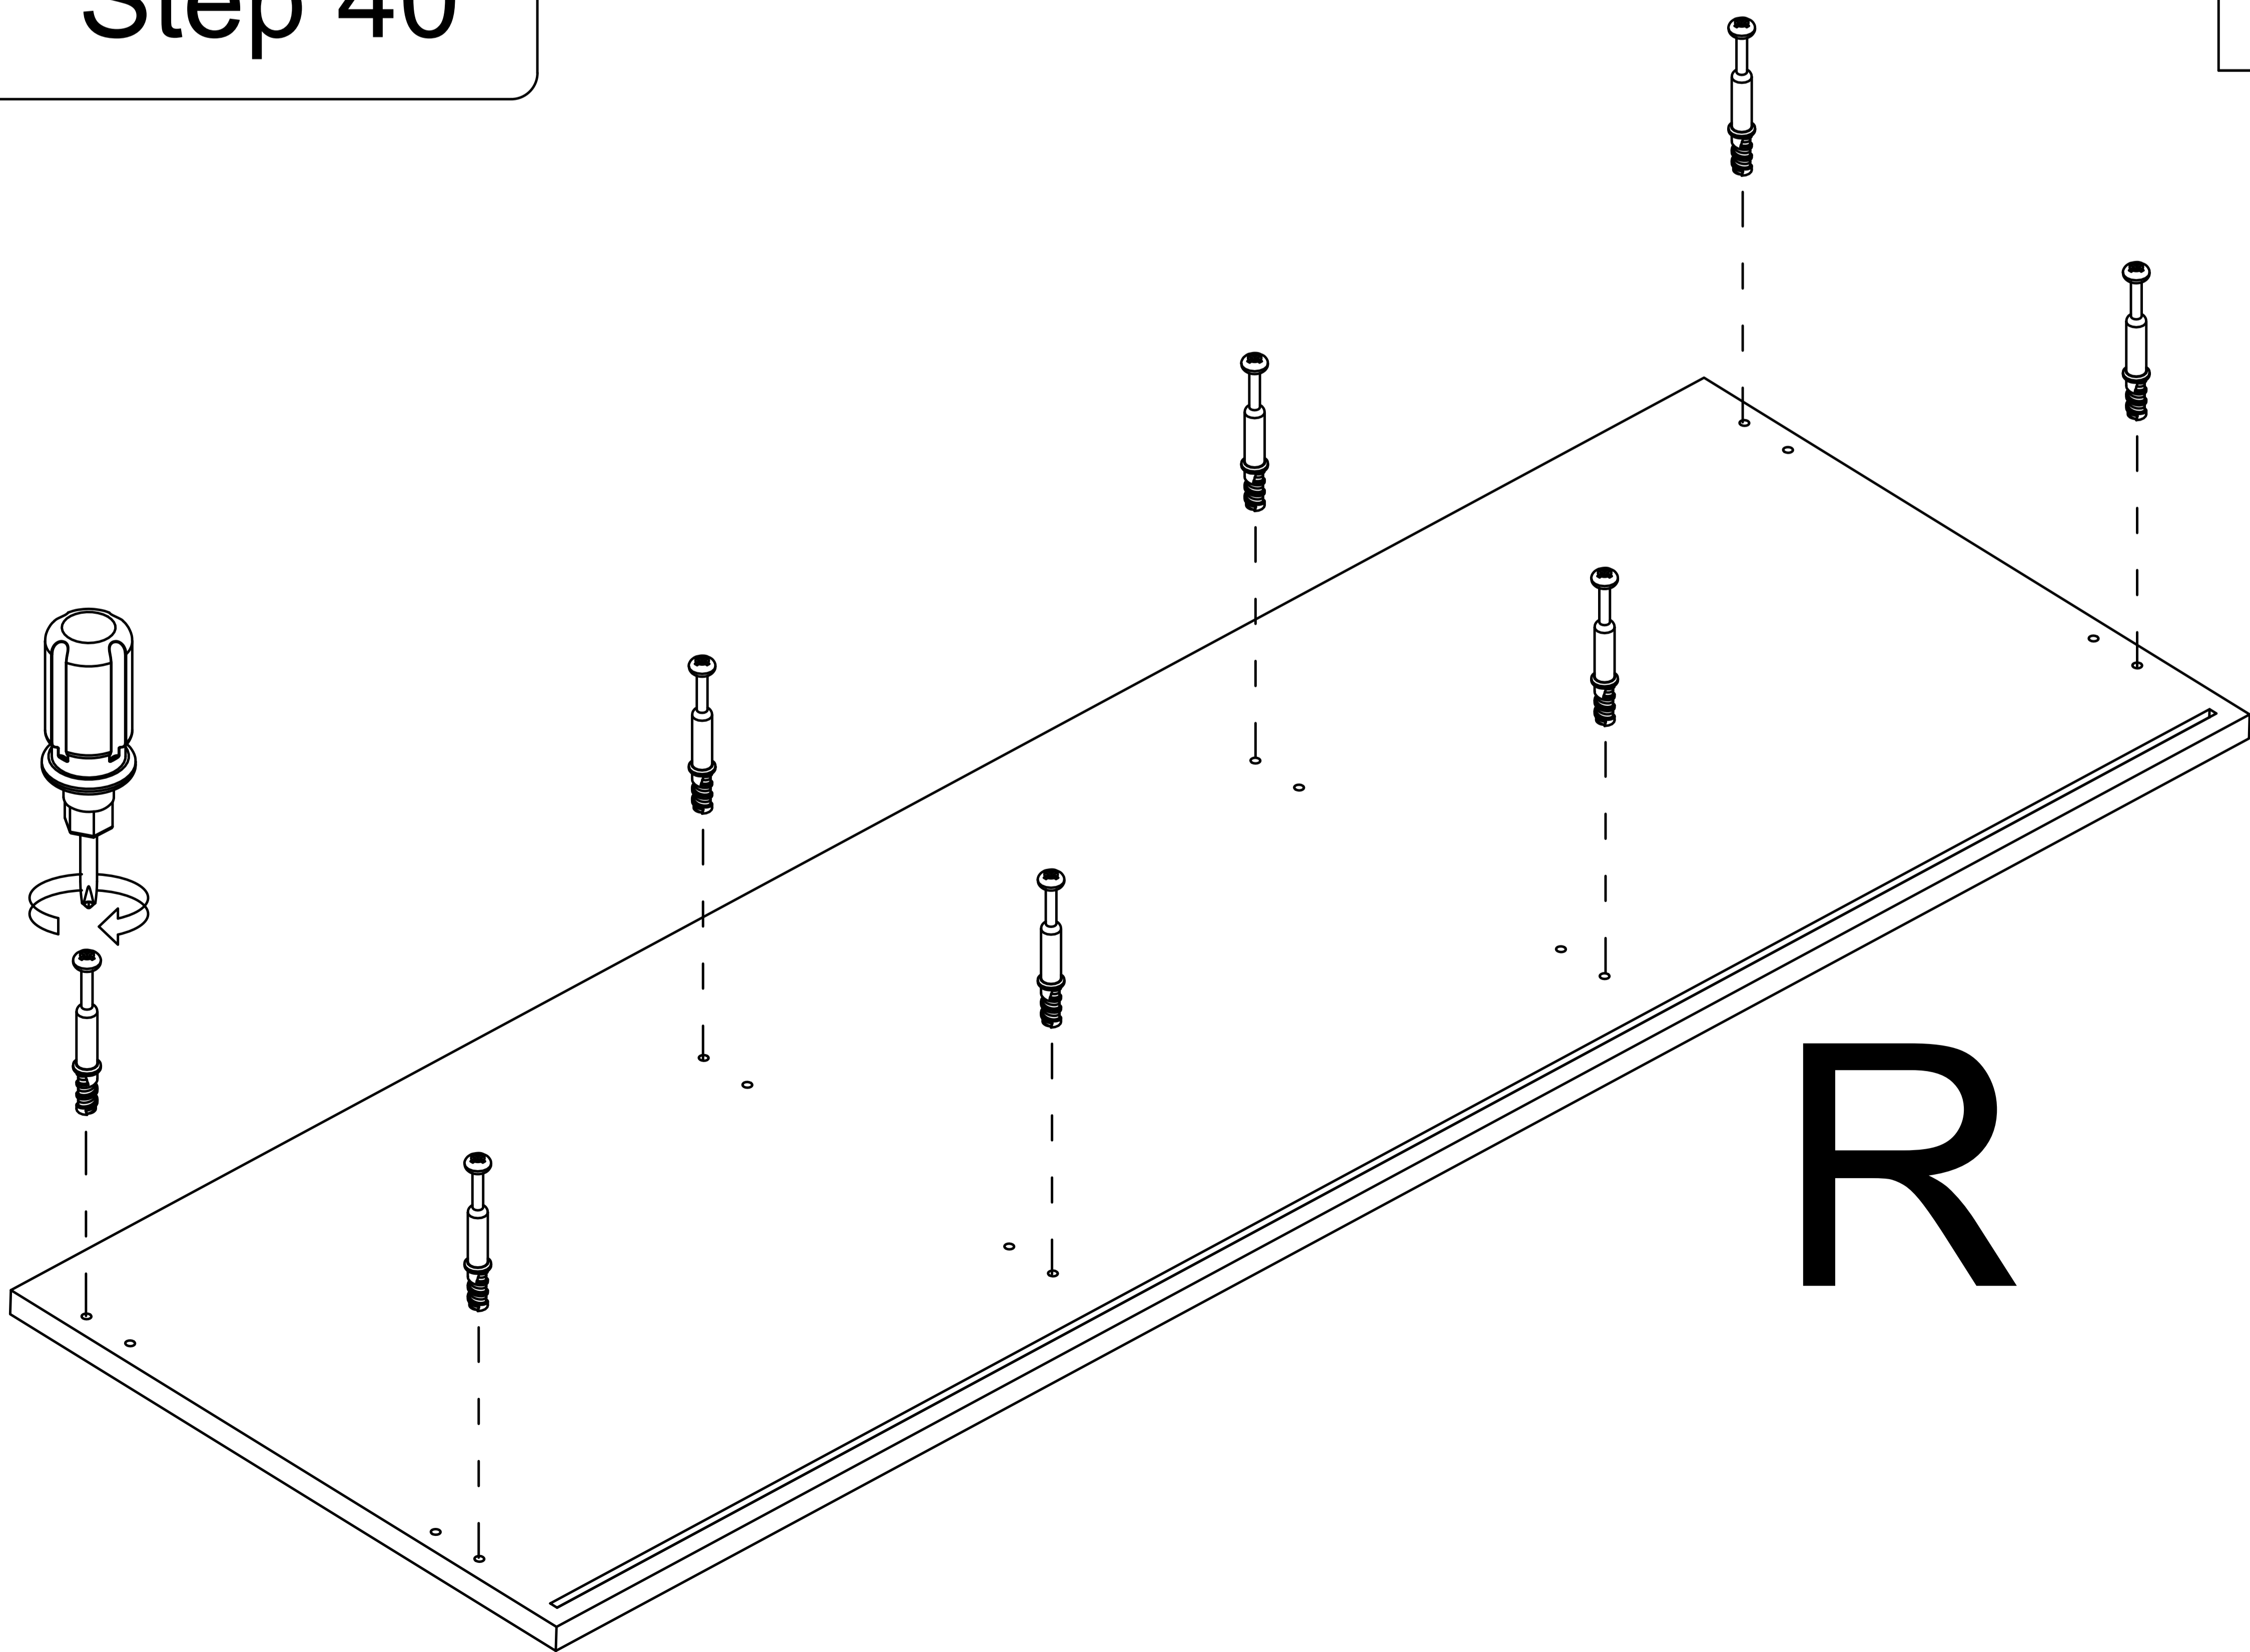
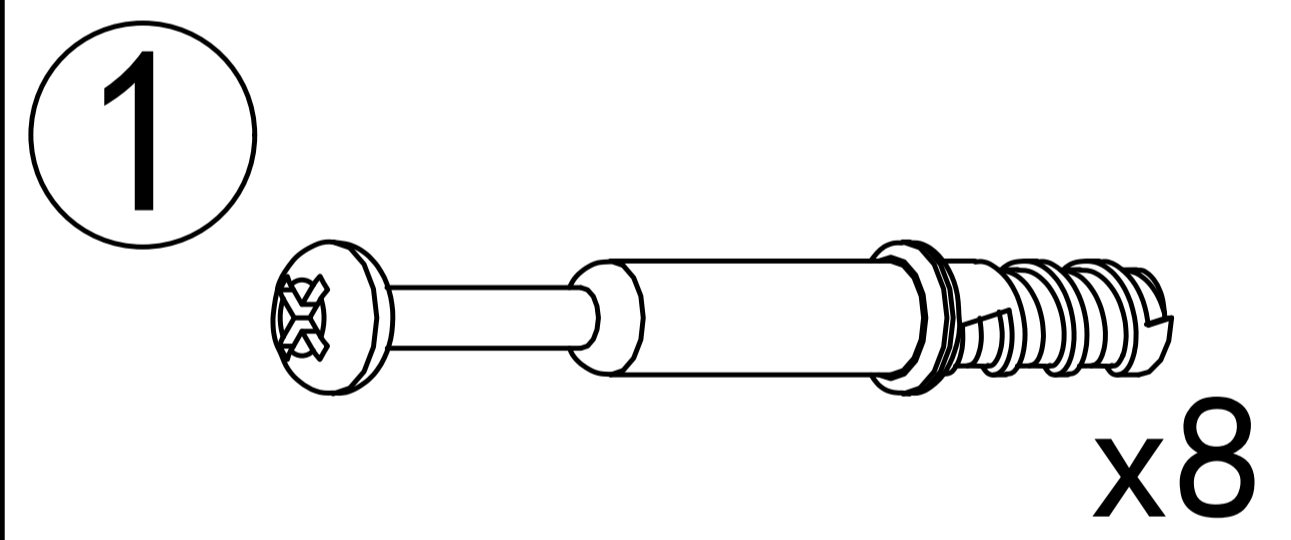


Step 41

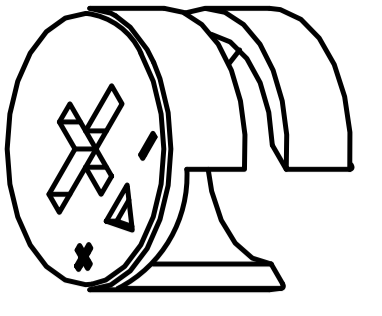2  x8




Step 42

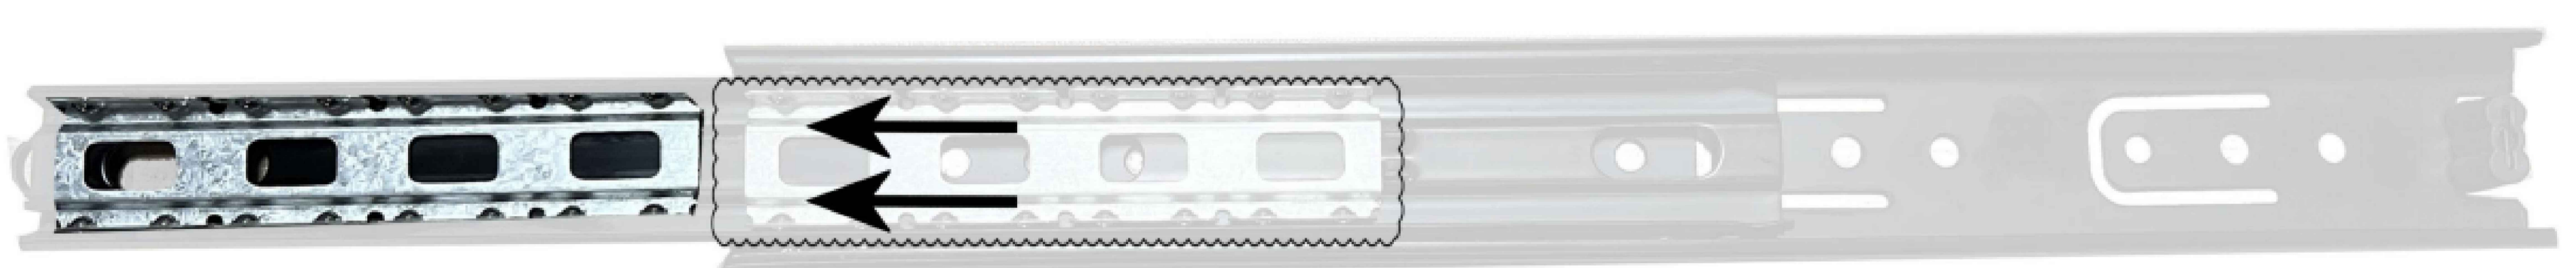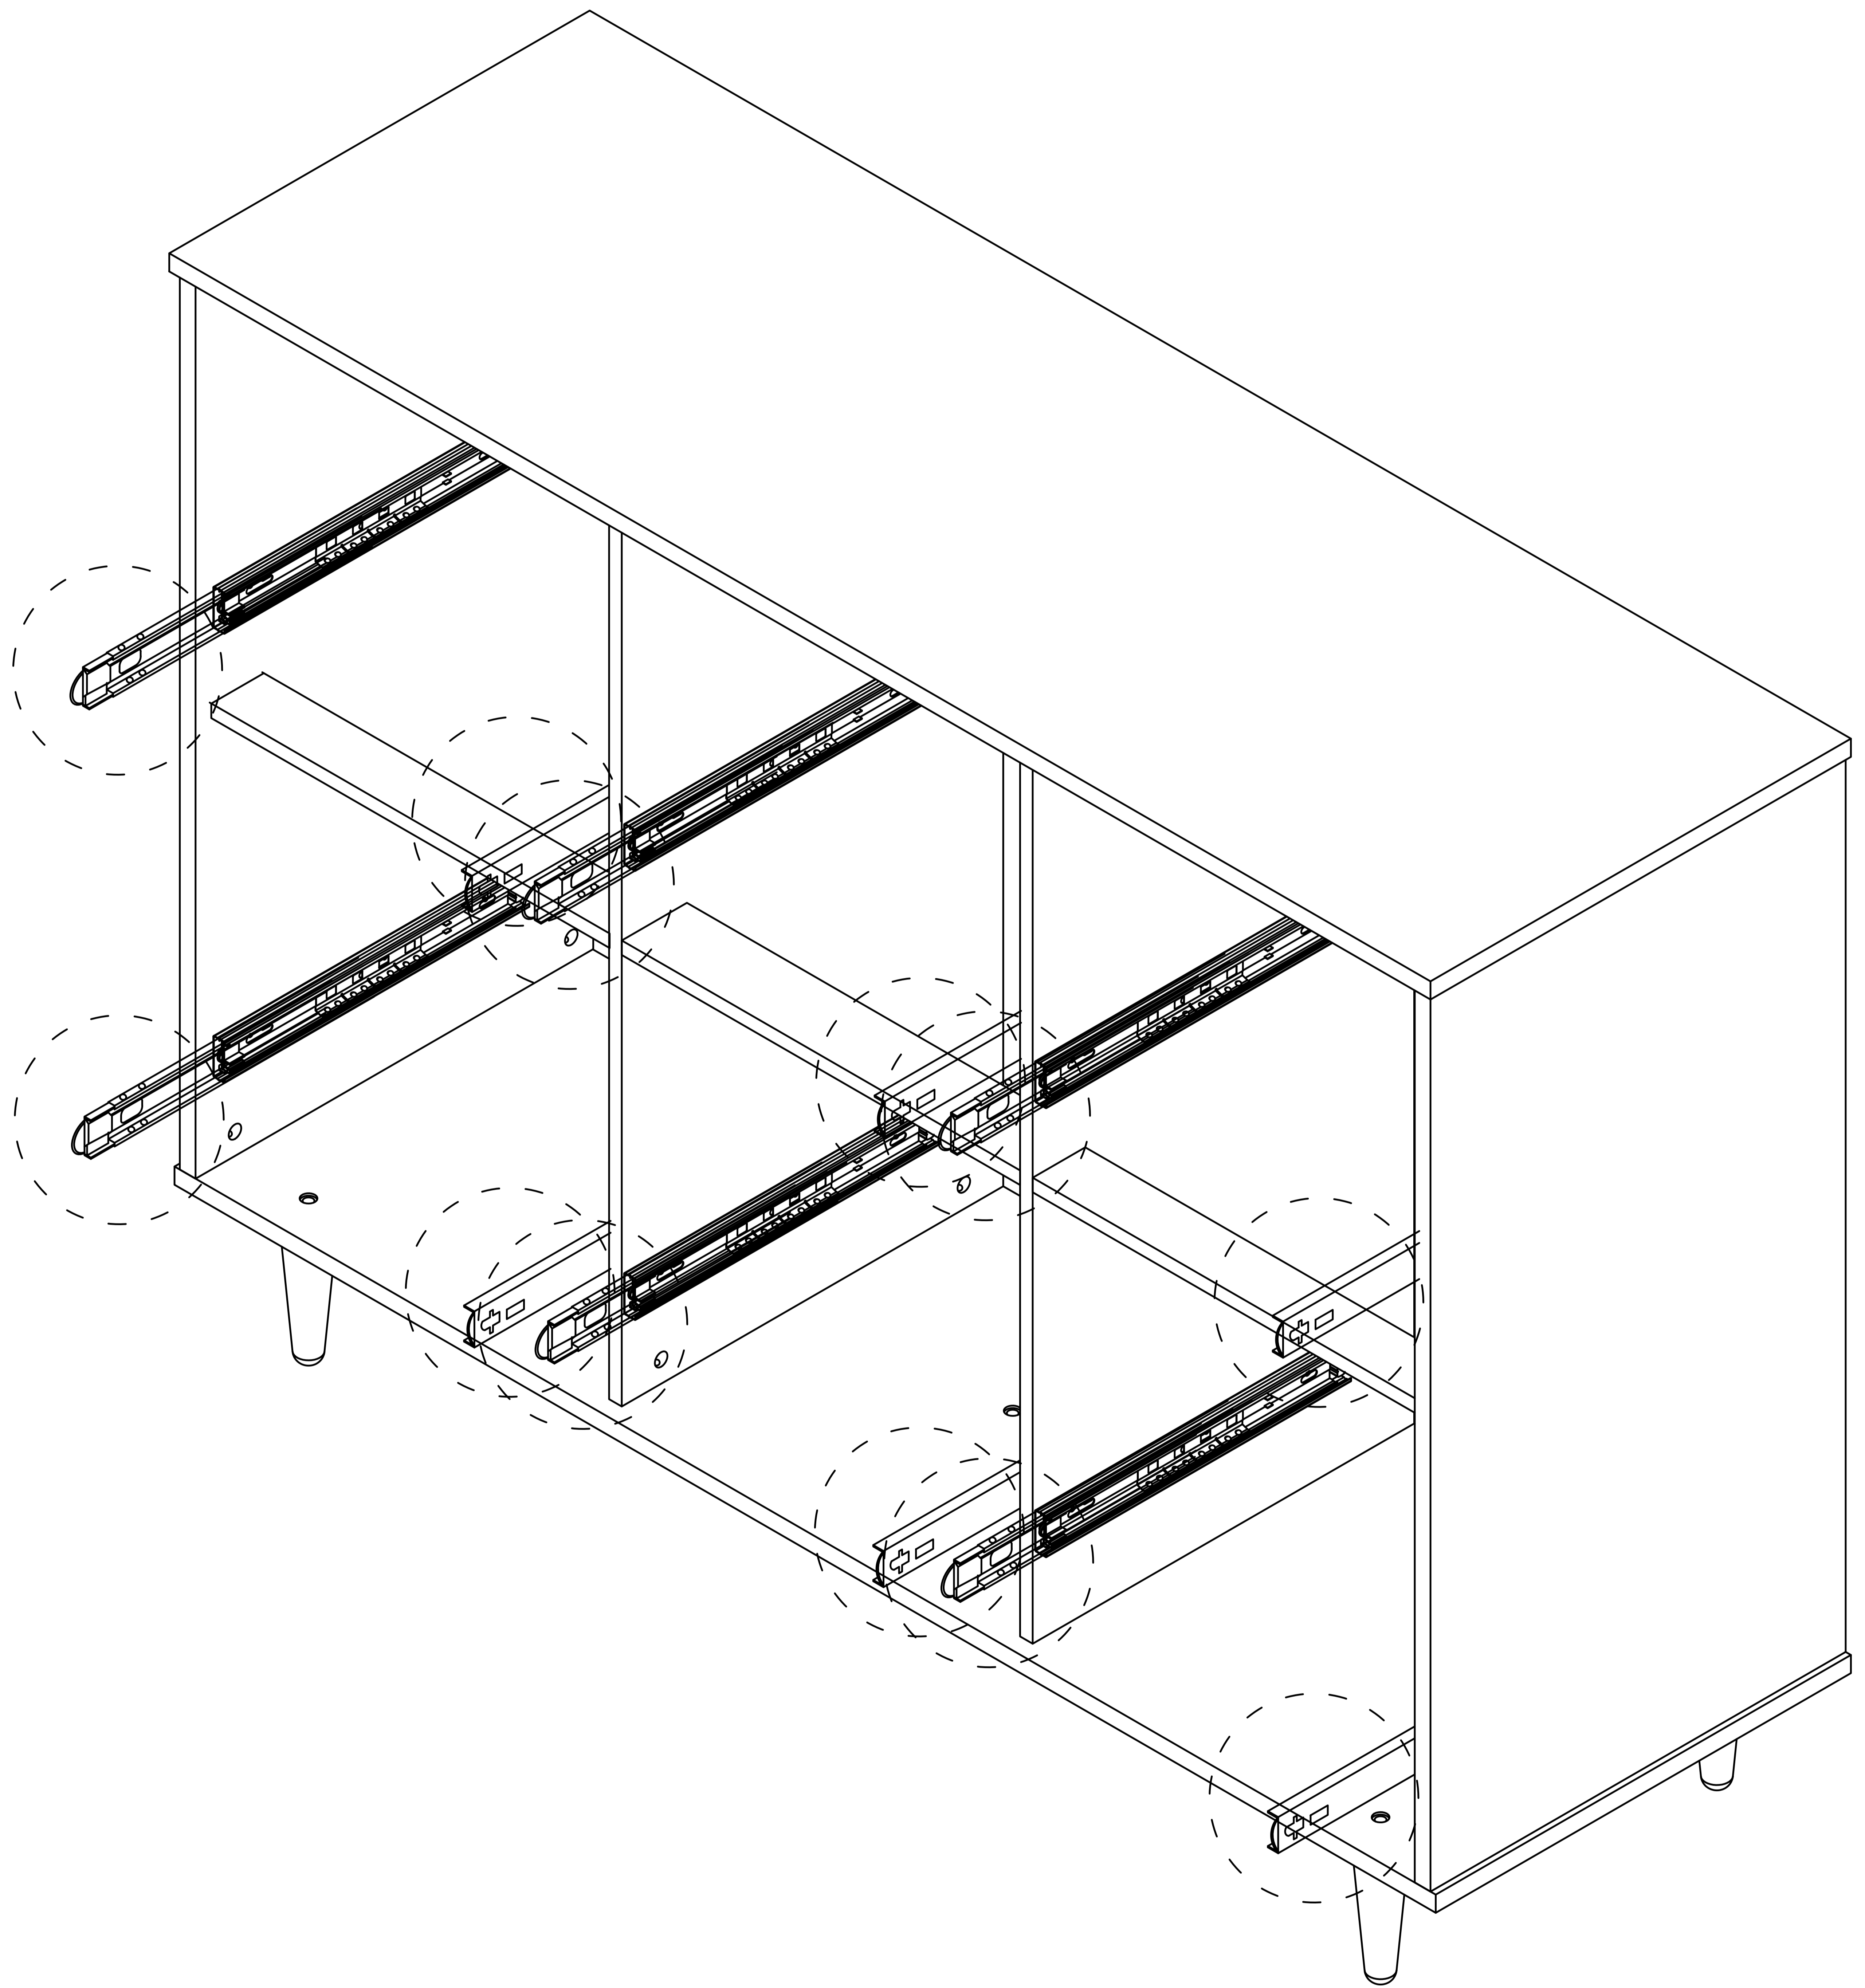





As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 43

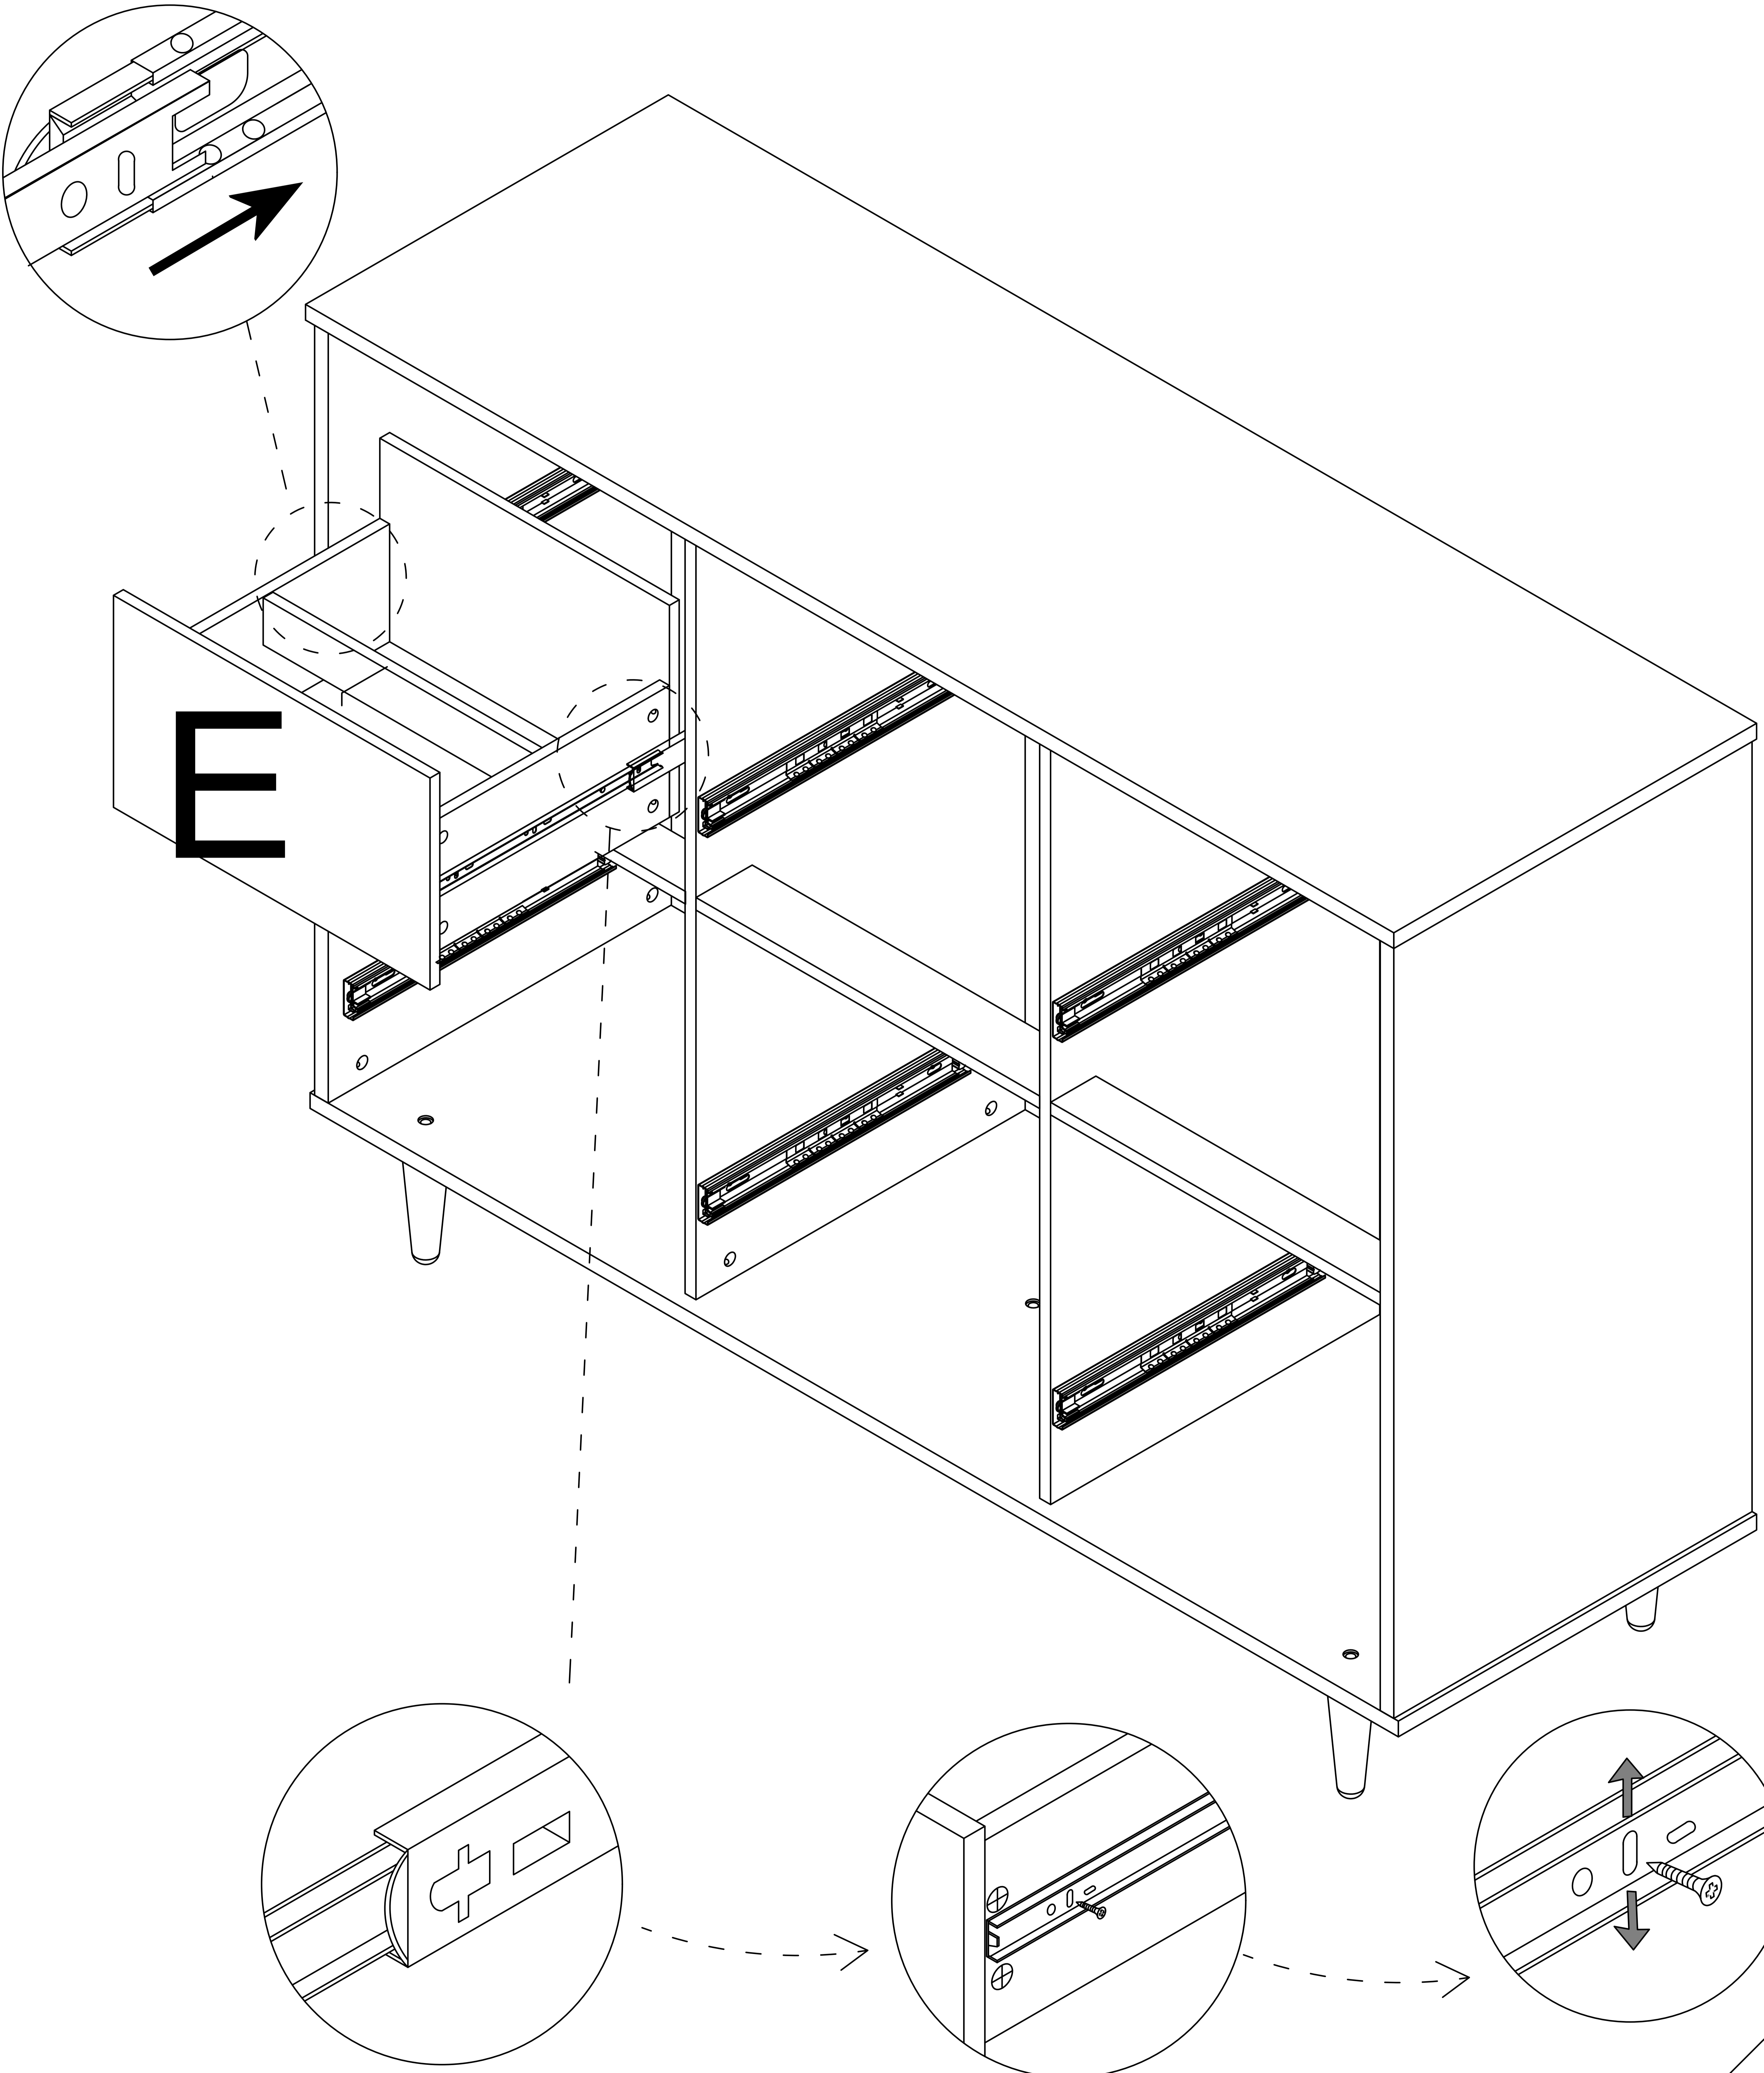

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 44

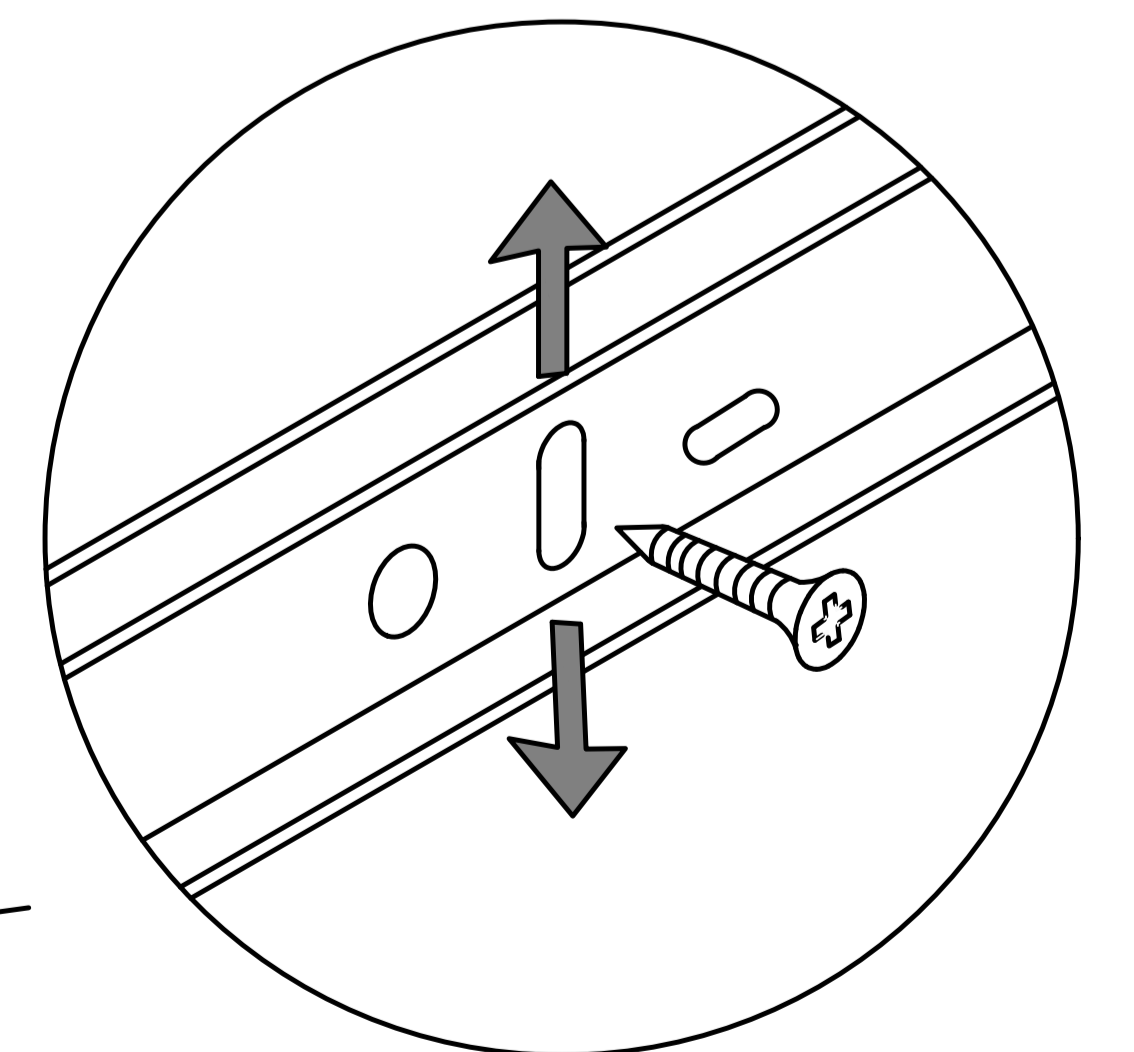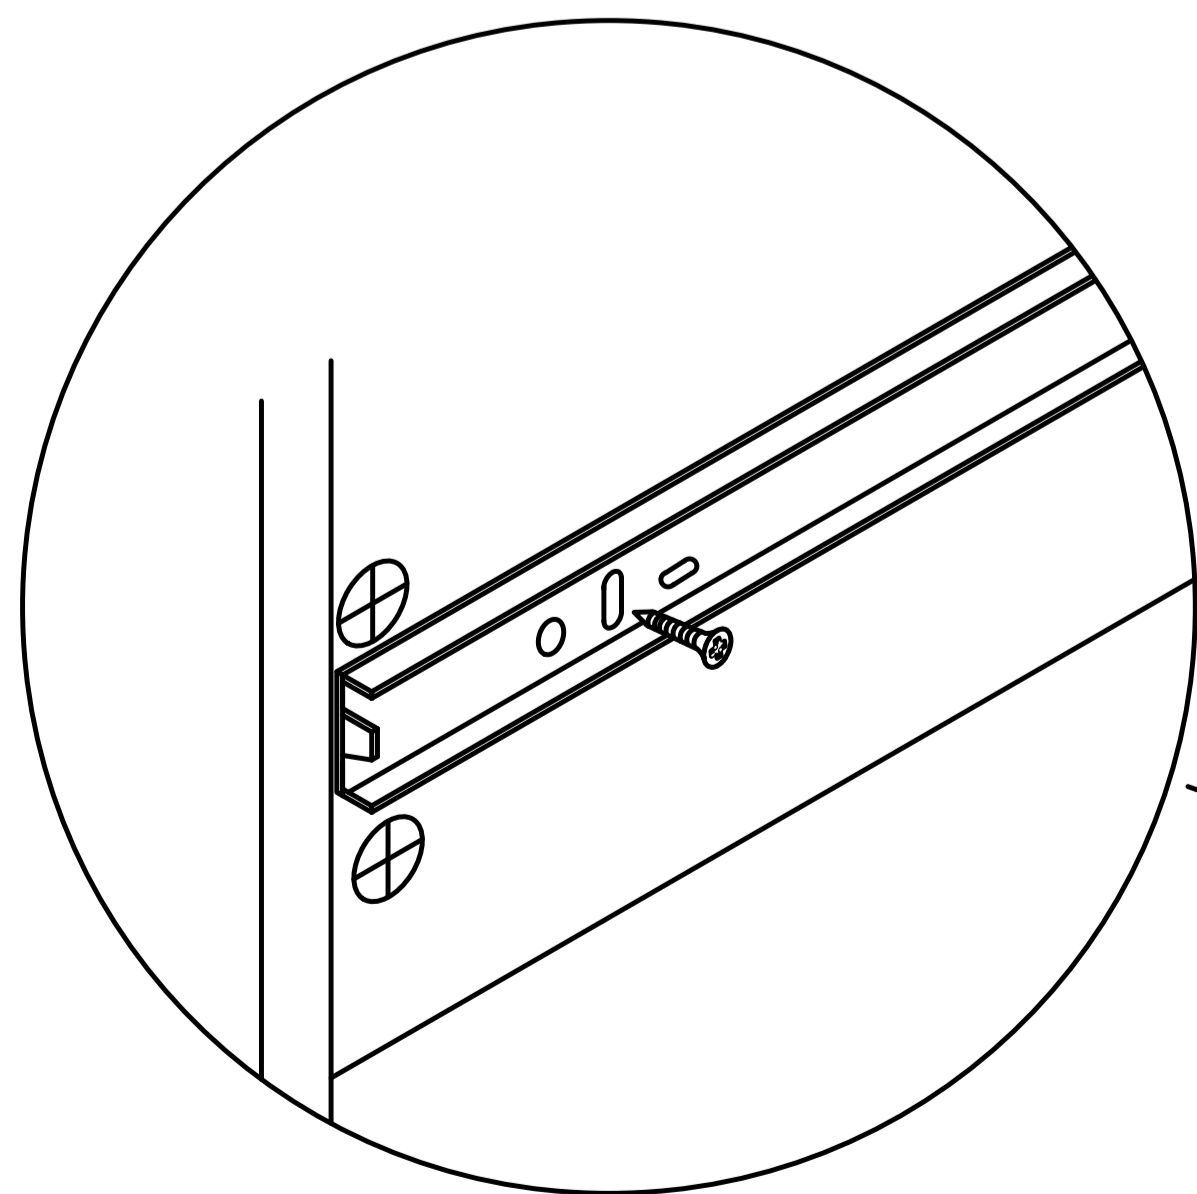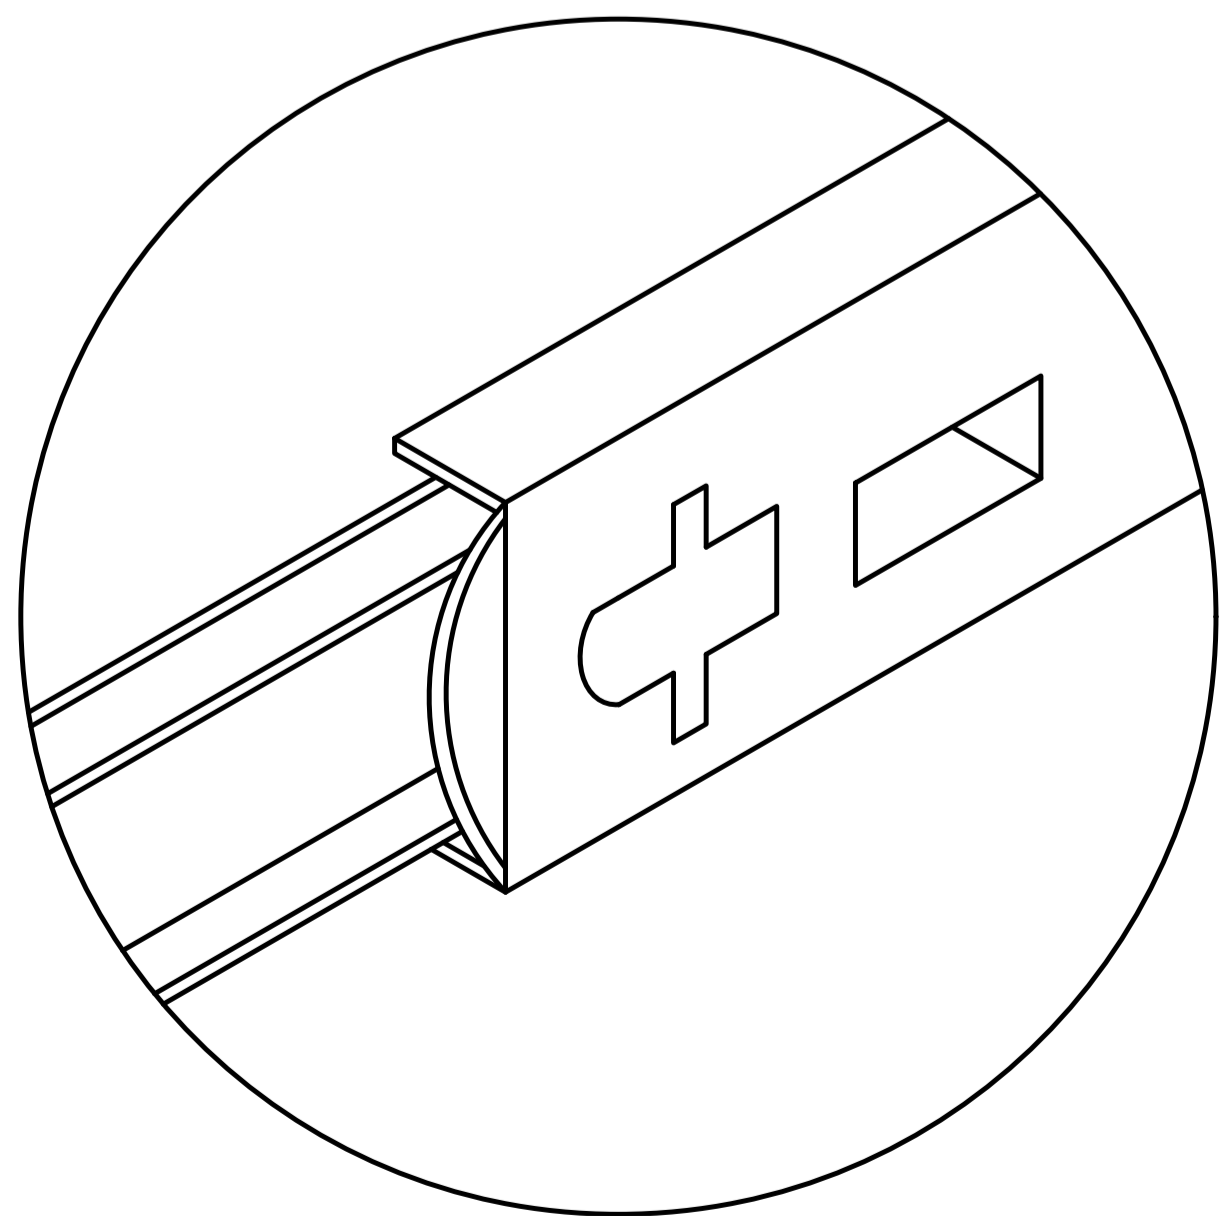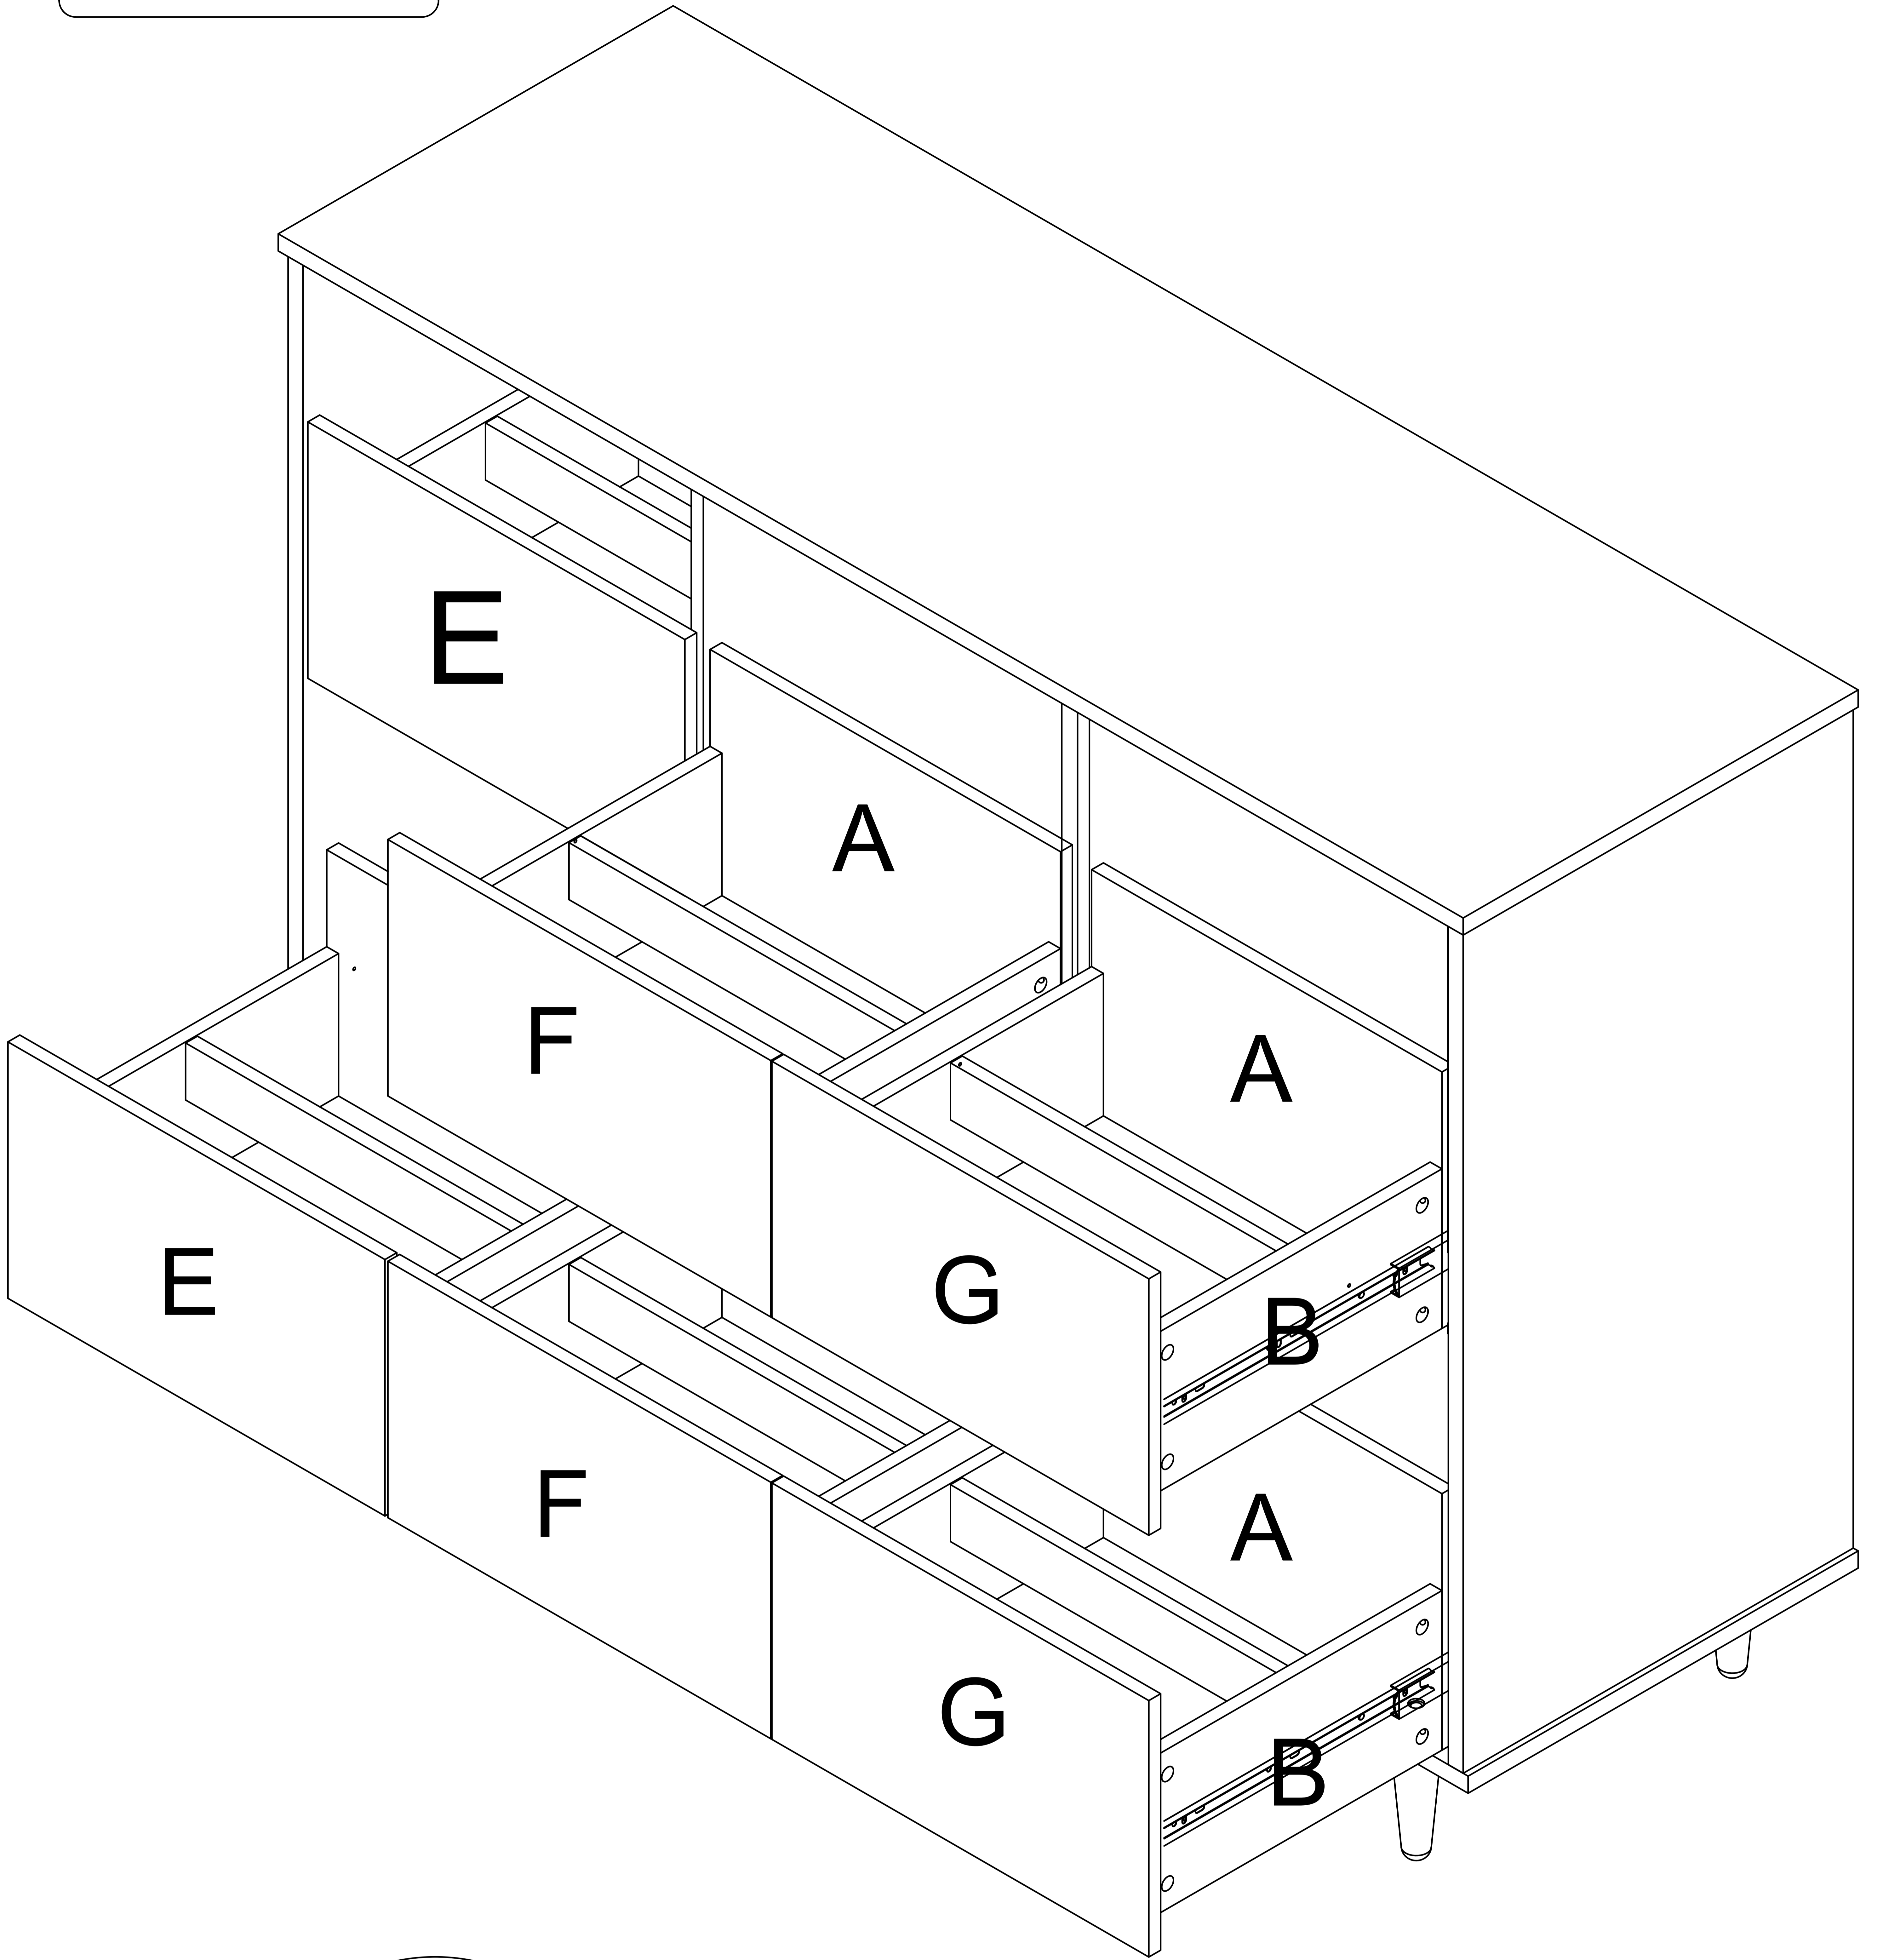


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 45

6

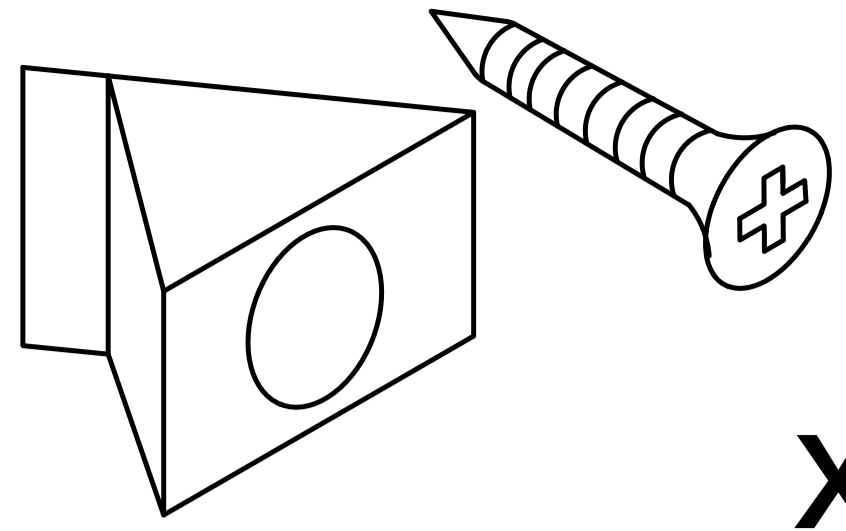


x12

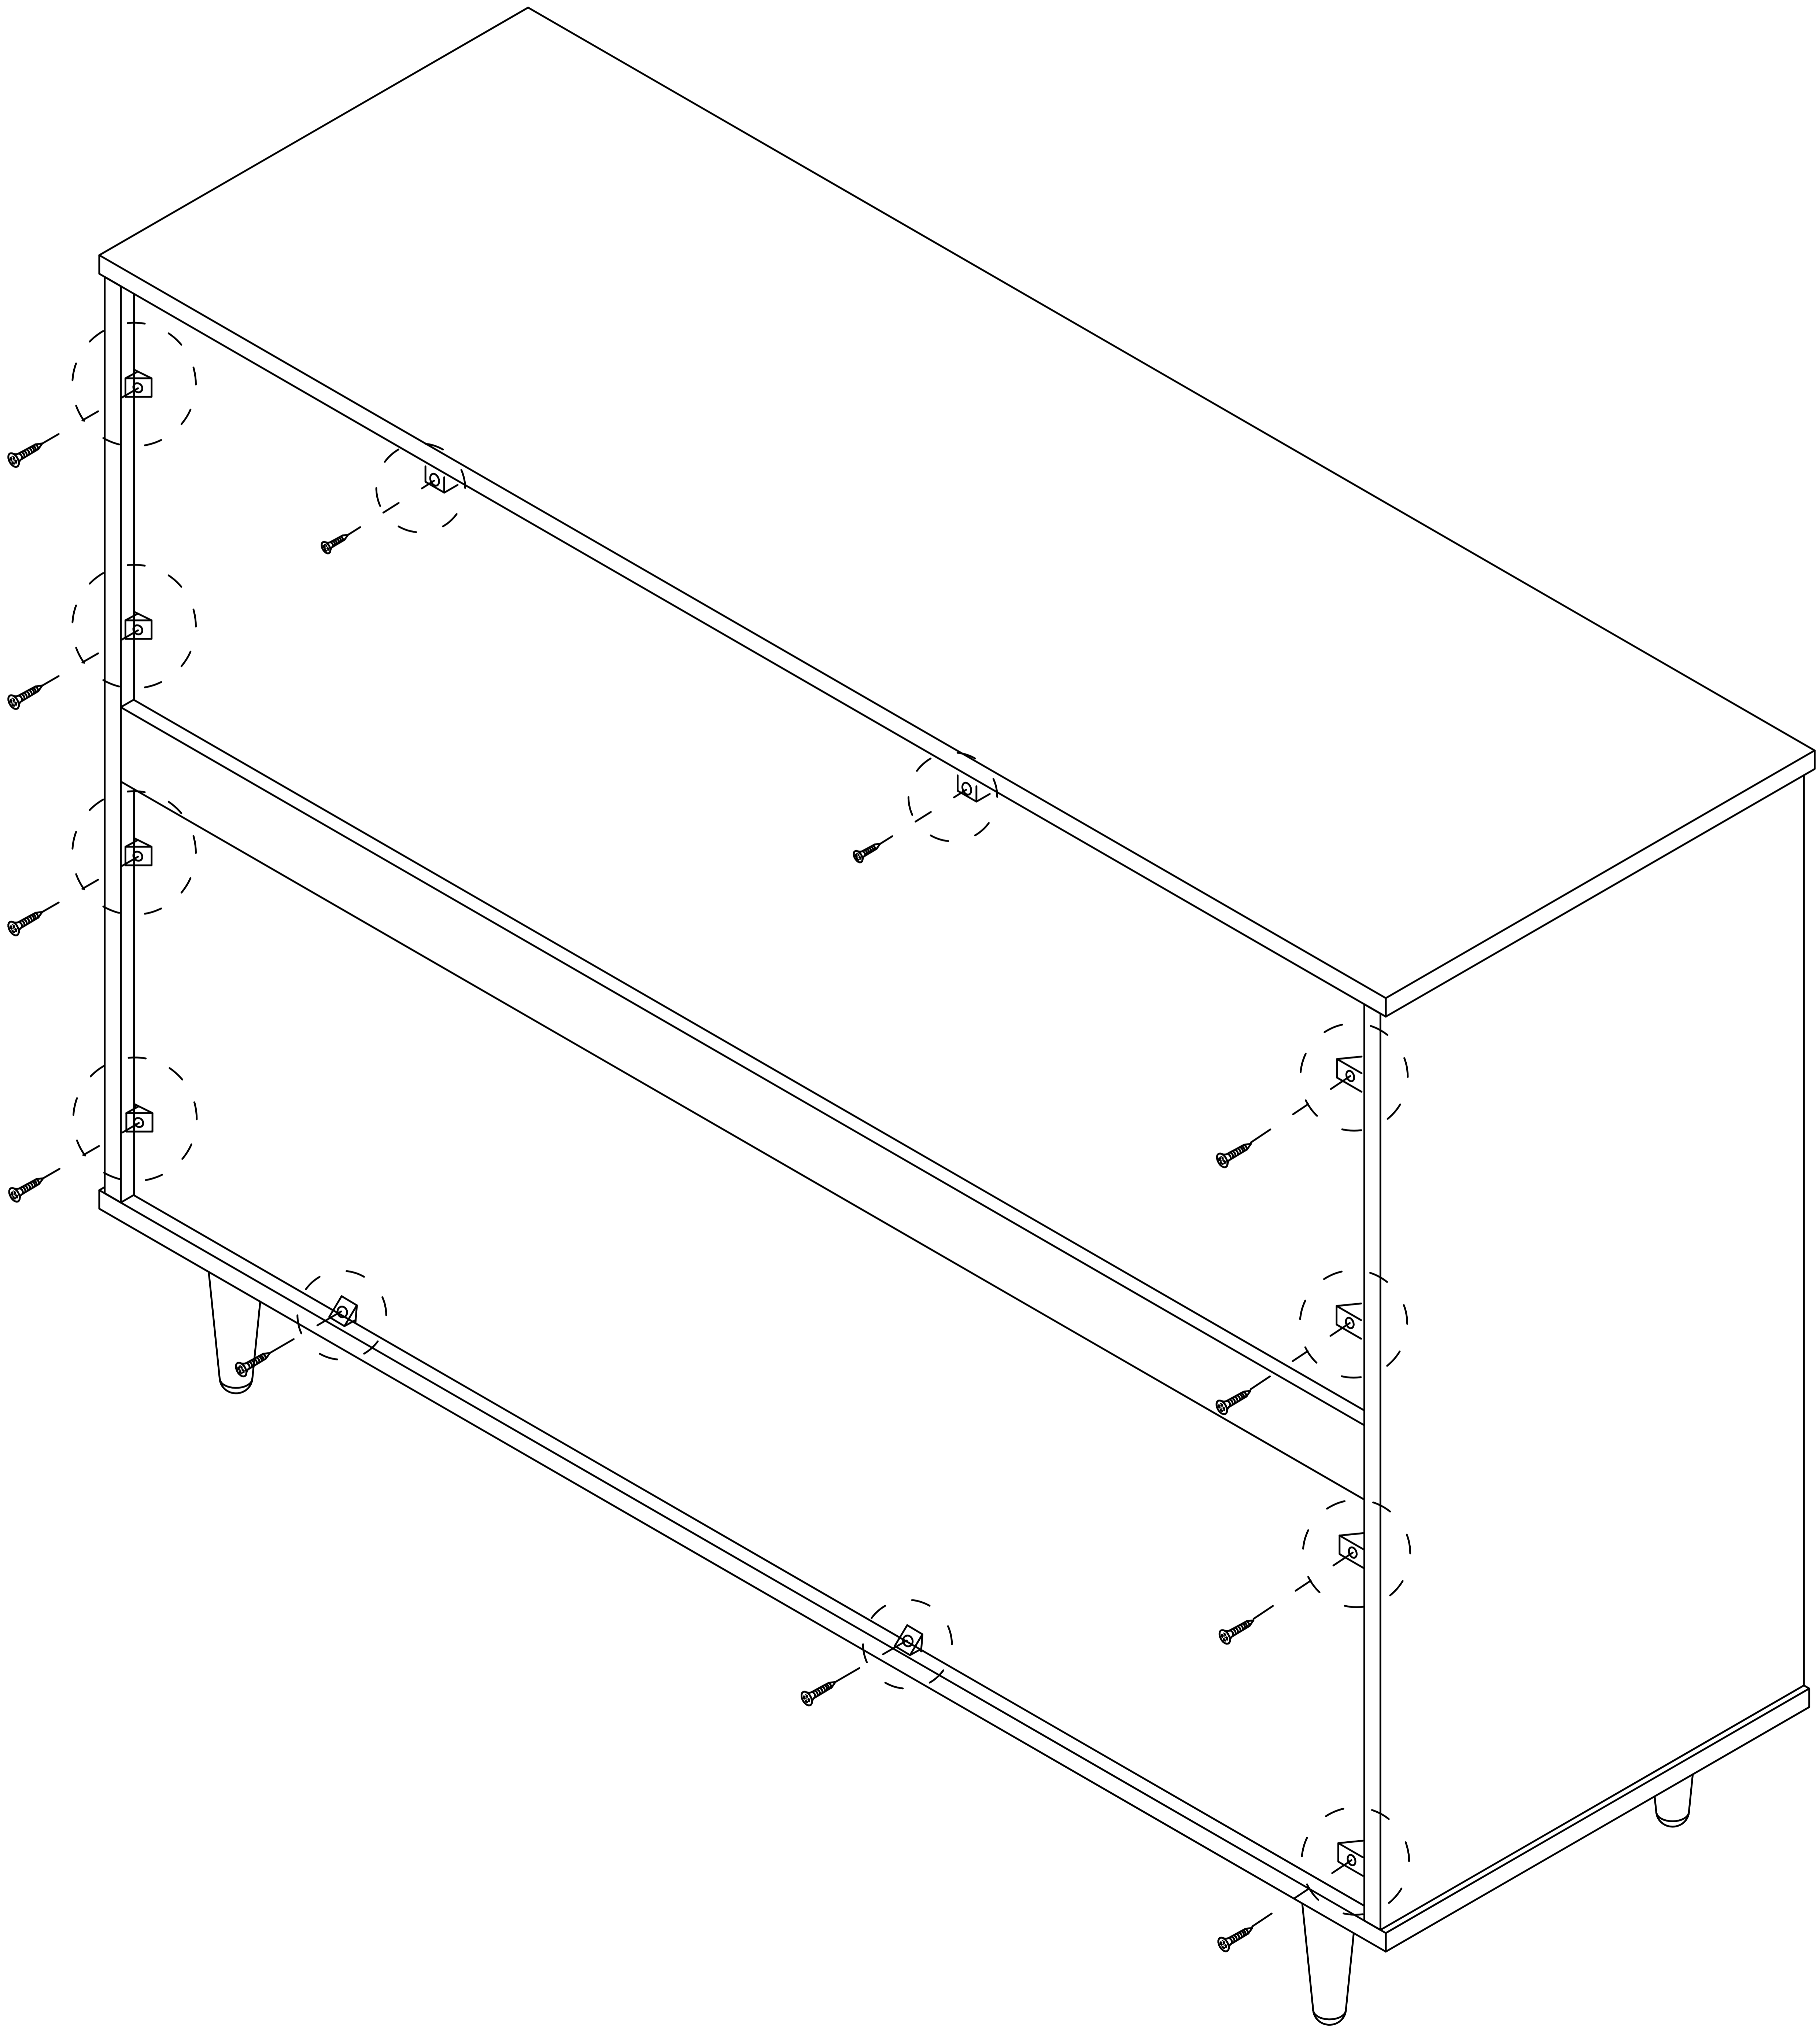


Step 46


7

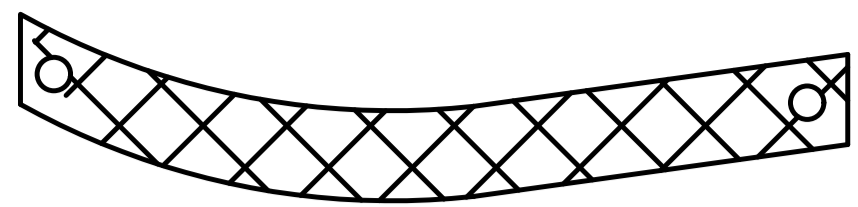


1 pcs

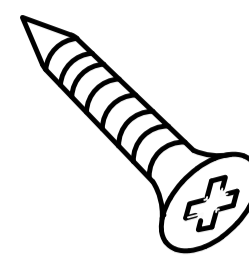

1 pcs


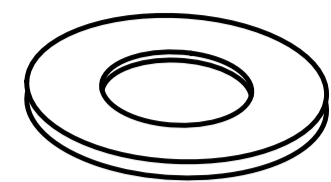


1 pcs

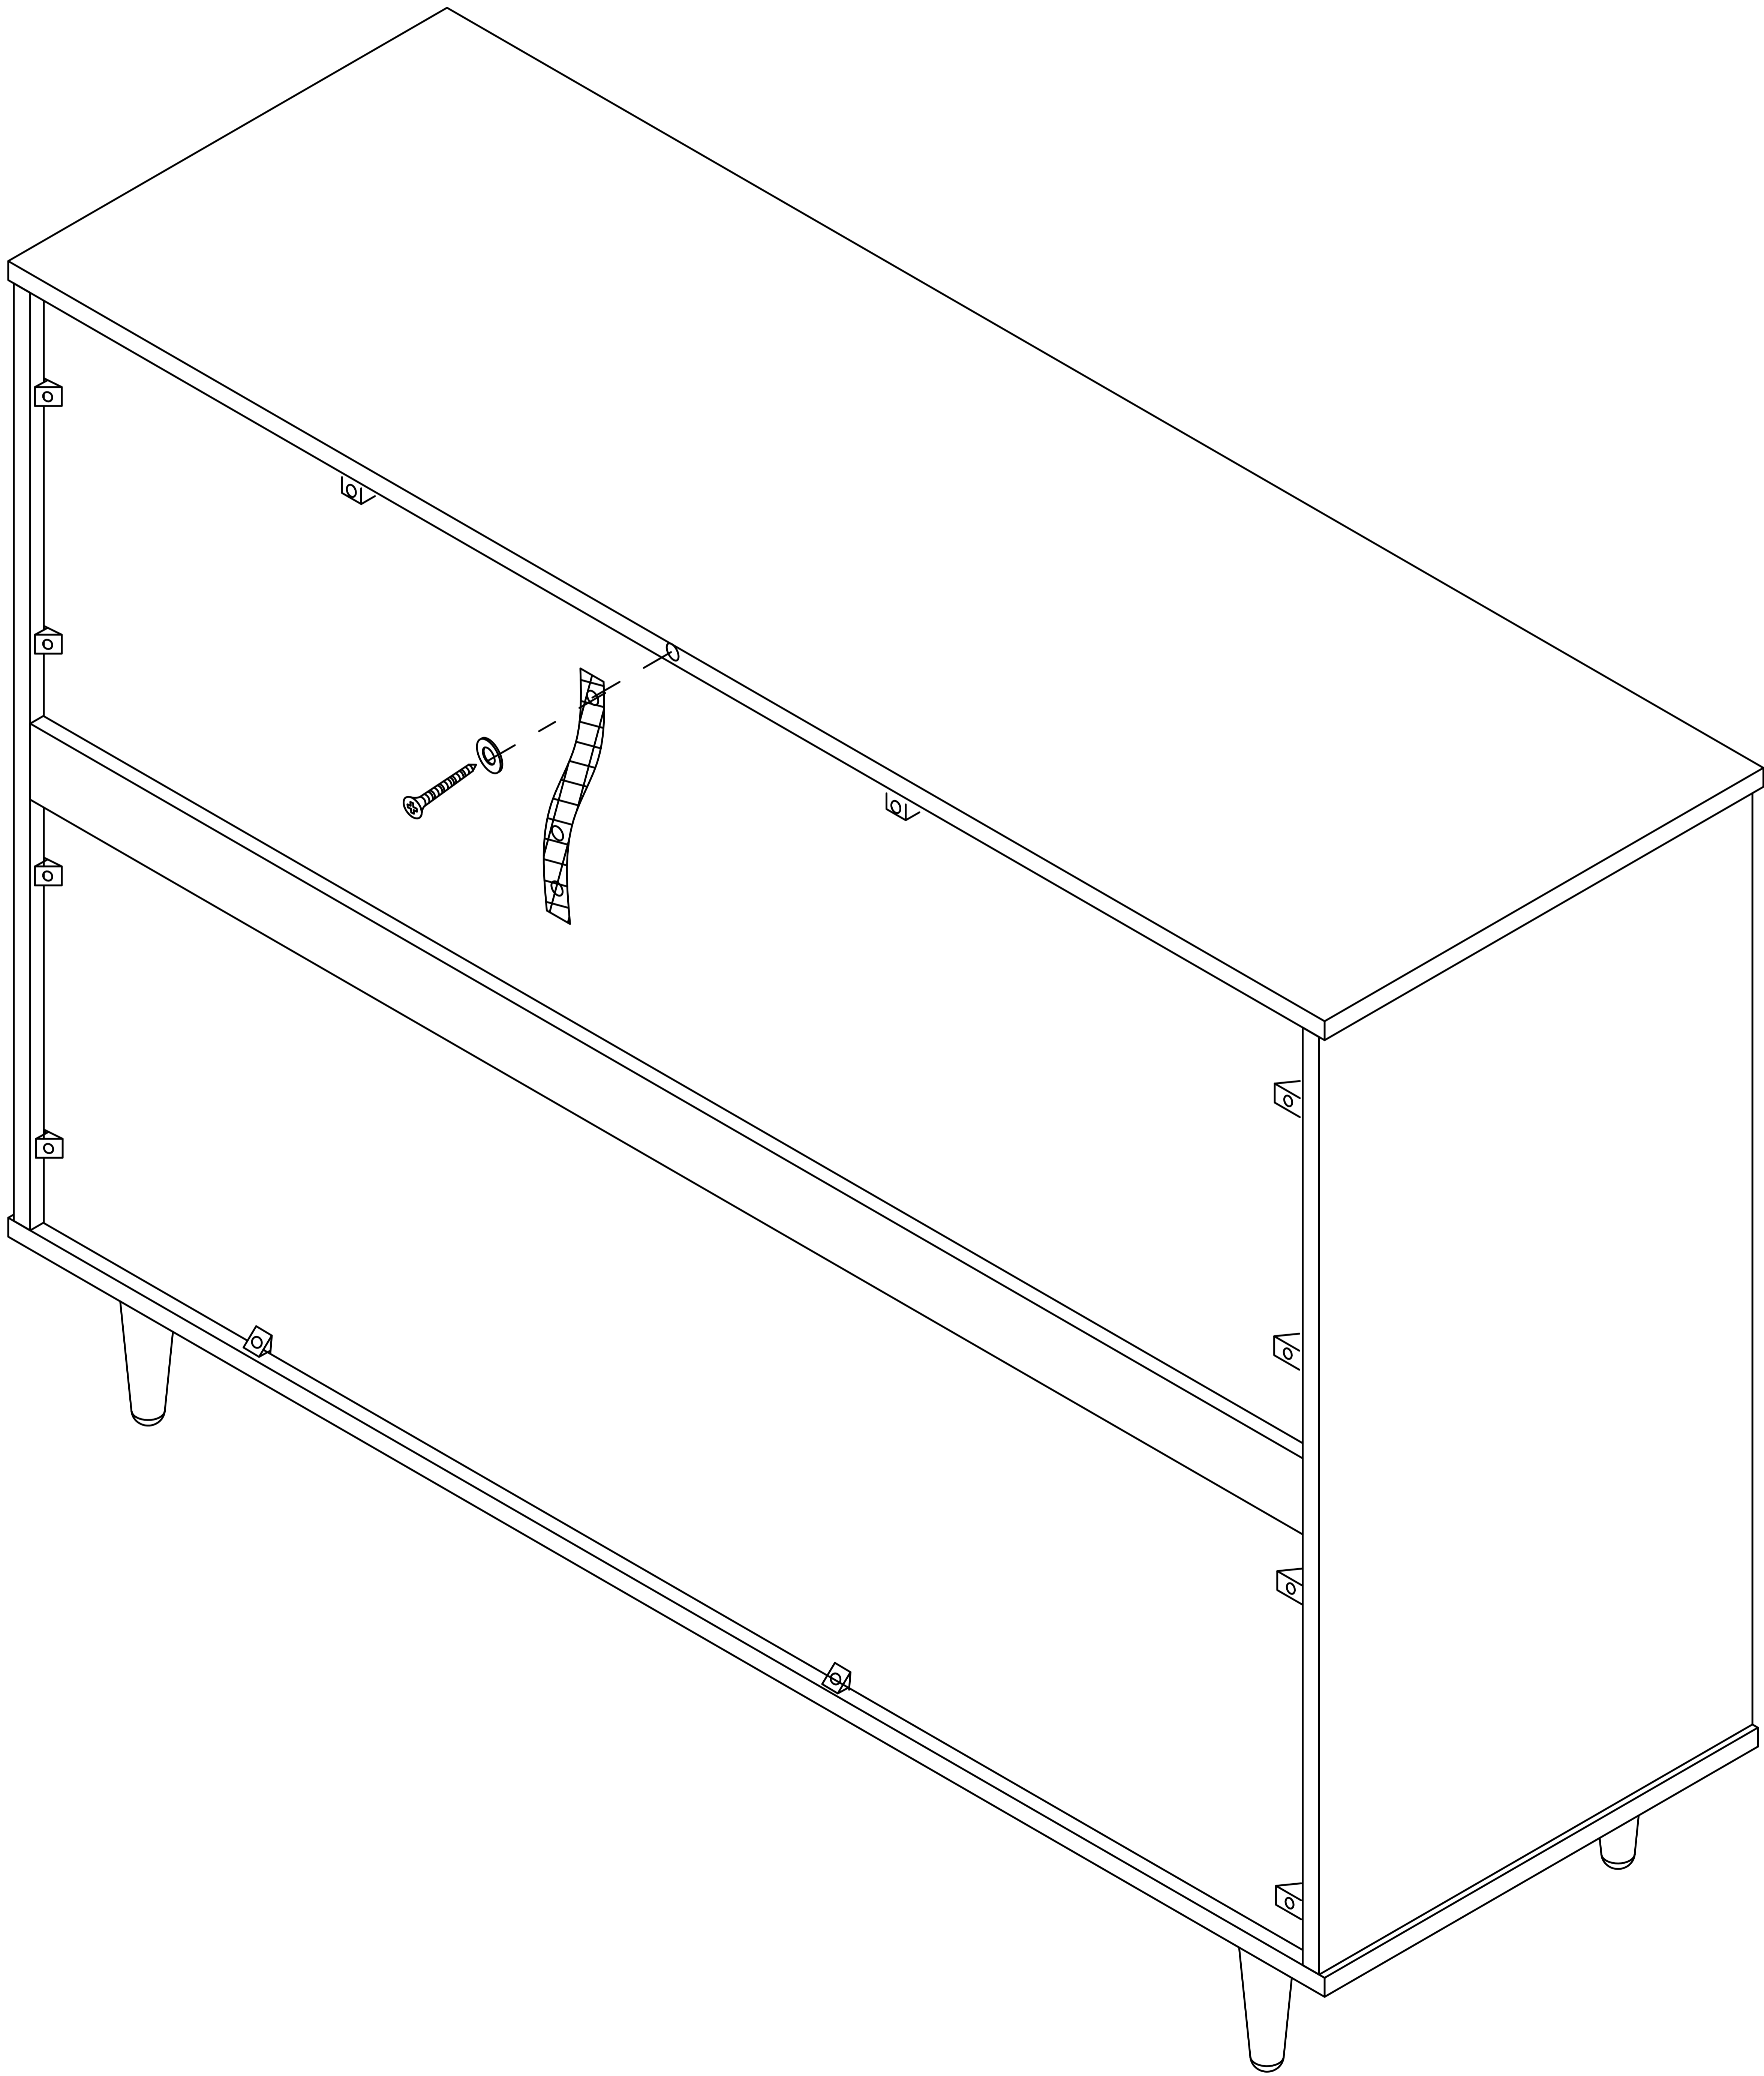

Step 47

use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

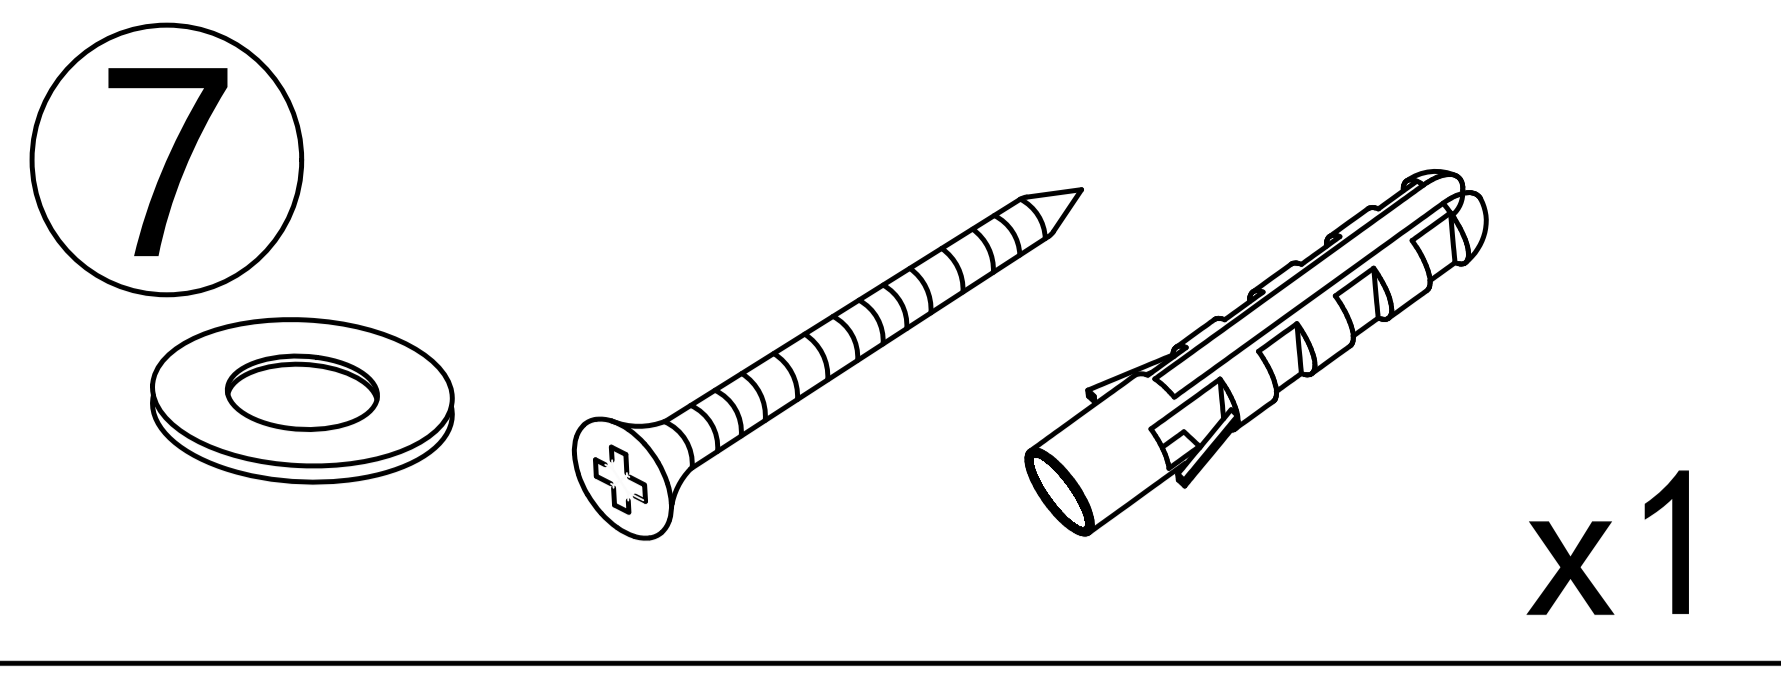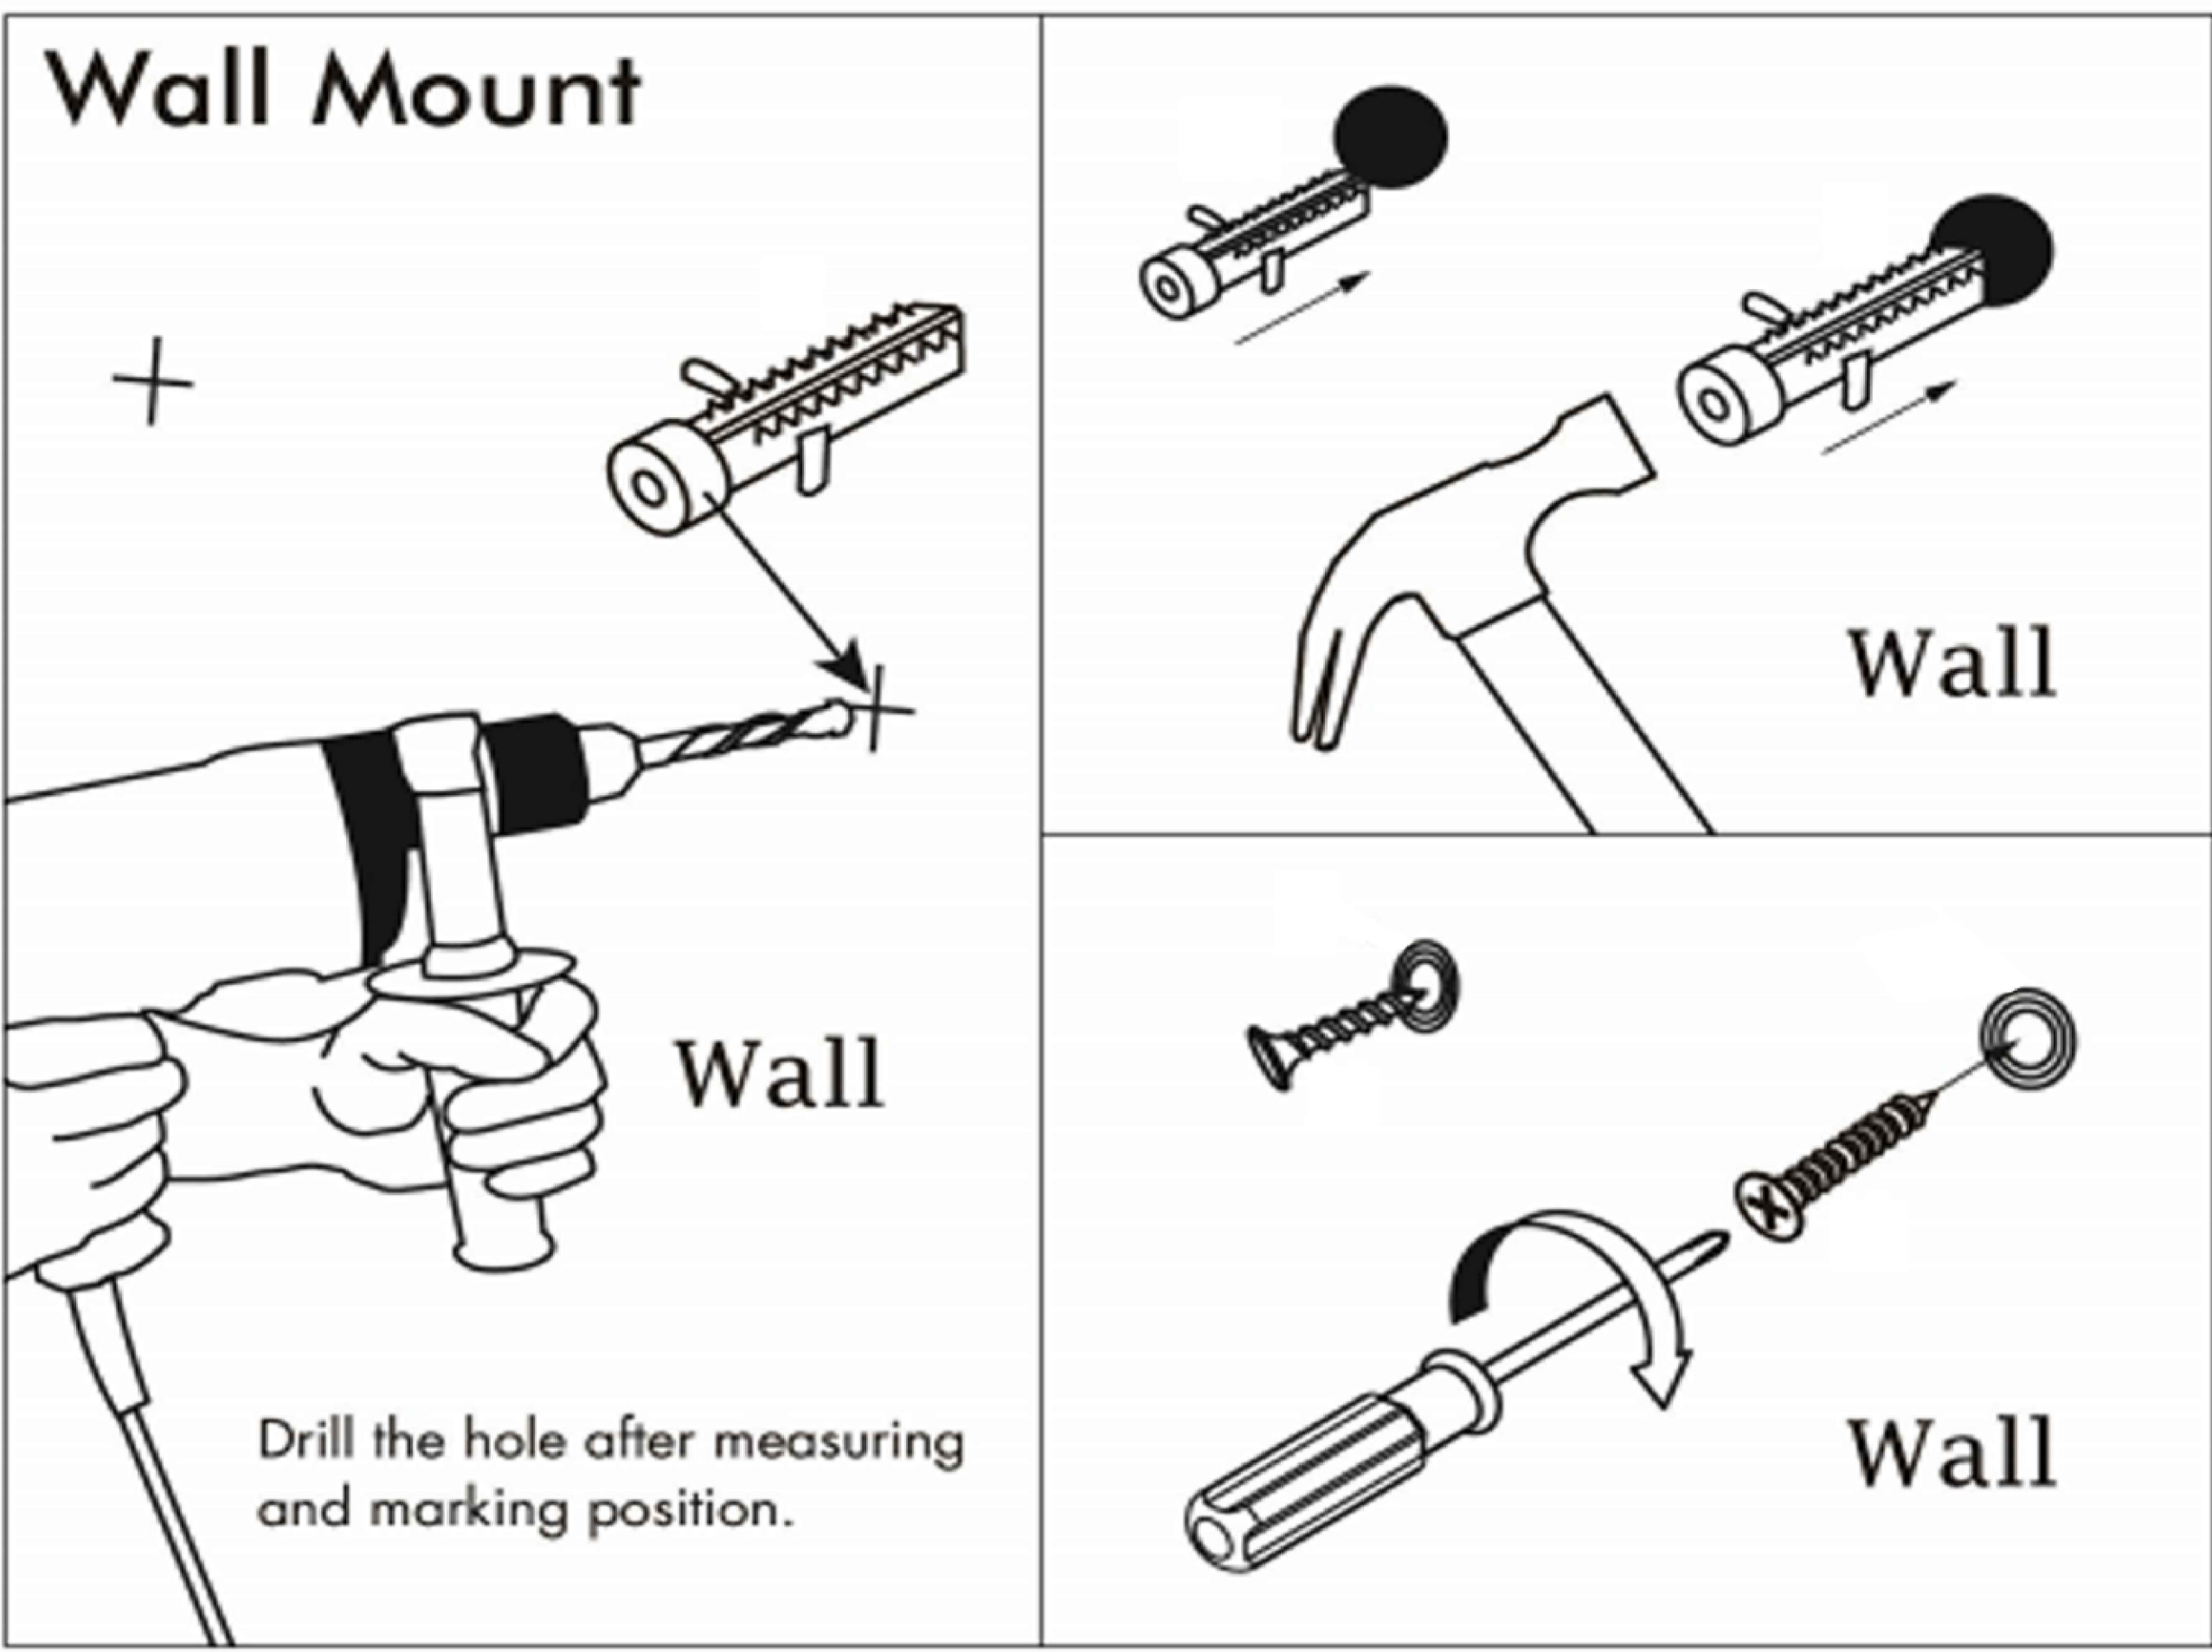

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Use a tape drill to make holes in the wall that are suitable for the product screws.

