


BW00118

THE BED ASSEMBLY INSTRUCTIONS

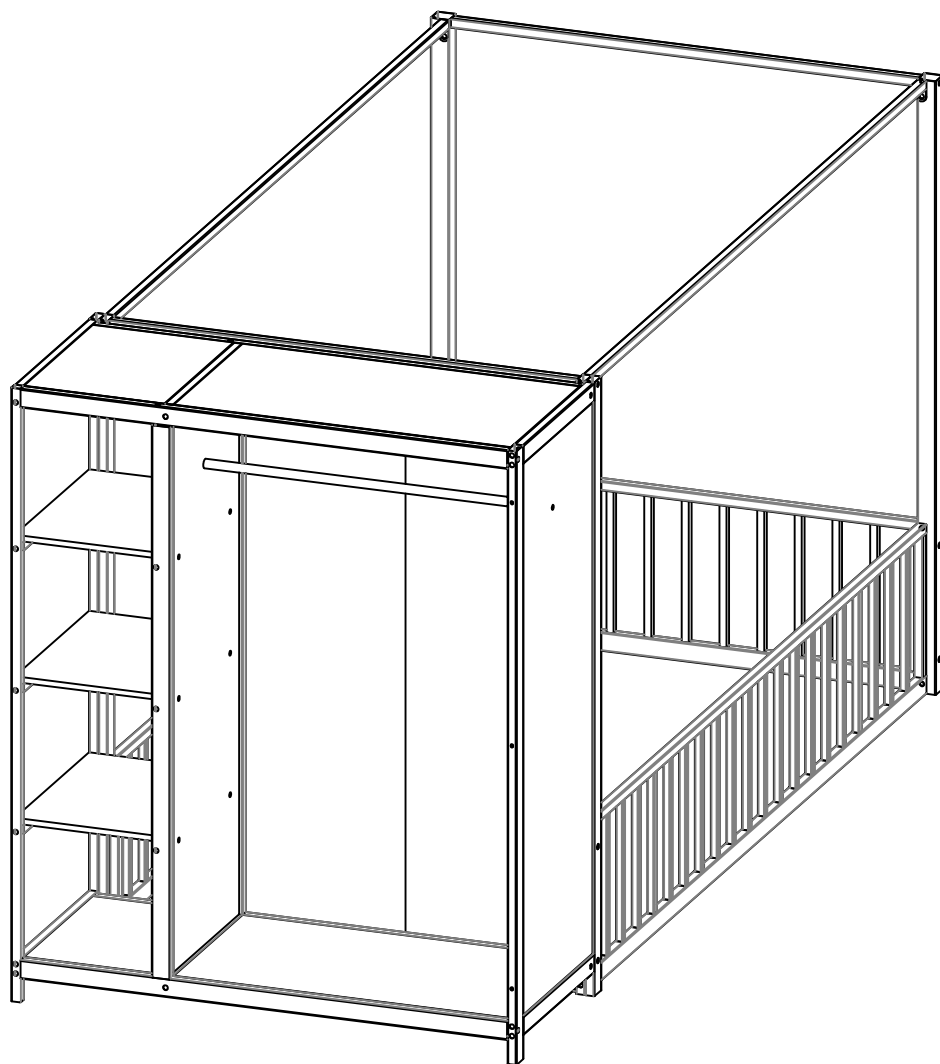













SAFETY WARNINGS AND GENERAL NOTES:


1. Be certain all staples are out of the box before beginning assembly on the shipping carton.
2. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
3. Keep these instructions for future reference.
4. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
5. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON .

Bed type	Length	Width	Height
Twin Standard	75"	39"	6"max
6. Replacement Parts:
Replacement Parts, including additional guardrails, may be obtained from any of our (Shen Zhen Yue Feng Zhi Qi) dealers.


Bed parts view

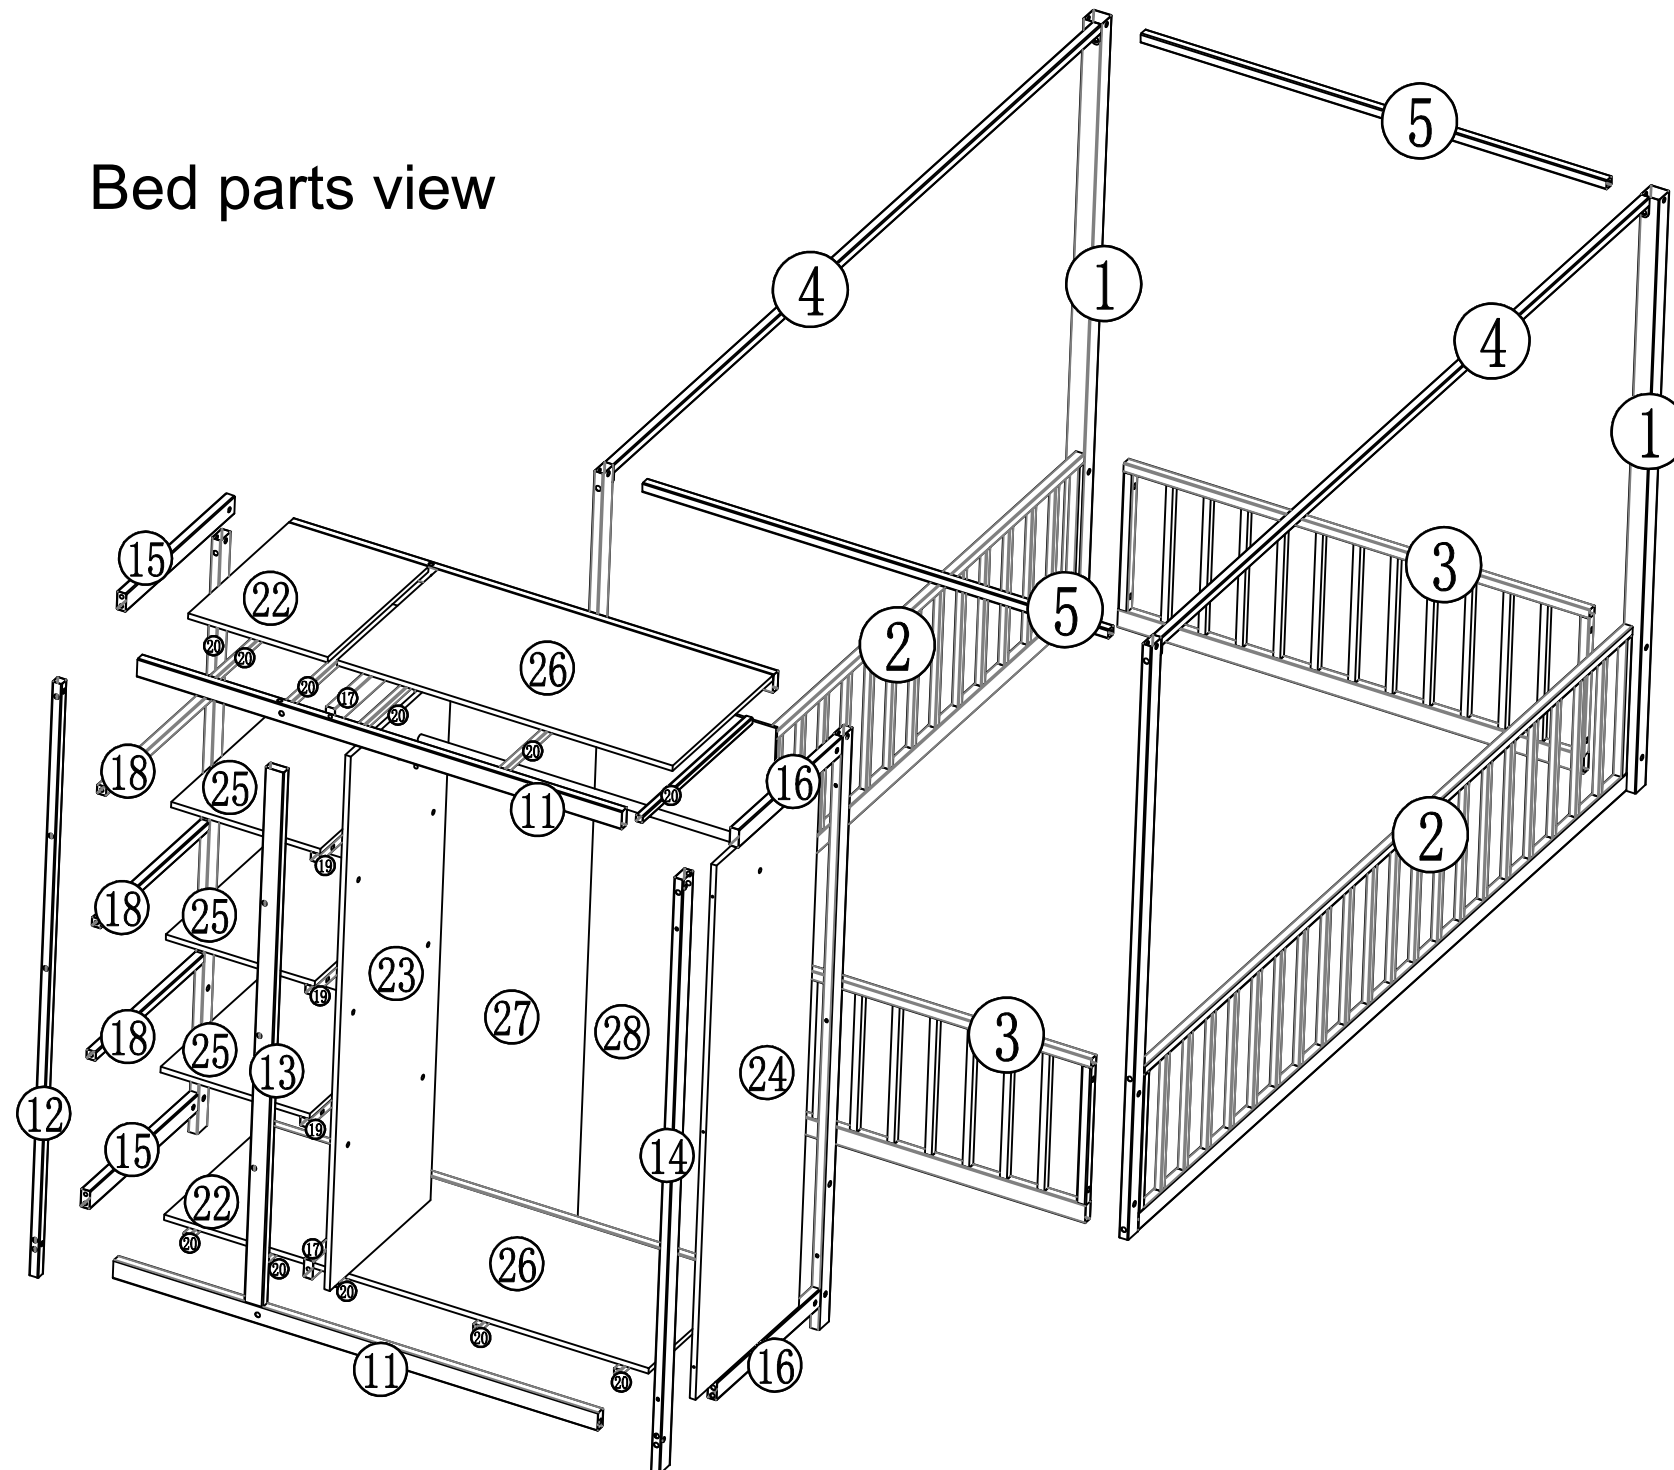

 1-2pcs	 11-2pcs	 21-1pcs	 25-3pcs								
 2-2pcs	 12-1pcs	 22-2pcs	 26-2pcs								
 3-2pcs	 13-2pcs	 23-1pcs	 27-1cs								
 4-2pcs	 14-1pcs	 24-1pcs	 28-1cs								
 5-2pcs	 15-2pcs	Hardware List <table><tr><td> B 8*15 8PCS</td><td> C 8*35 42PCS</td><td> D 8*55 36PCS</td><td> F 8*15 12PCS</td><td> H 4*50 6PCS</td><td> M  L (5mm)</td><td> O</td><td> W</td></tr></table>		 B 8*15 8PCS	 C 8*35 42PCS	 D 8*55 36PCS	 F 8*15 12PCS	 H 4*50 6PCS	 M  L (5mm)	 O	 W
 B 8*15 8PCS	 C 8*35 42PCS			 D 8*55 36PCS	 F 8*15 12PCS	 H 4*50 6PCS	 M  L (5mm)	 O	 W		
 6-2pcs	 16-2pcs										
 7-1pcs	 17-2pcs										
 8-1pcs	 18-3pcs										
 9-1pcs	 19-3pcs										
 10-1pcs	 20-10pcs										

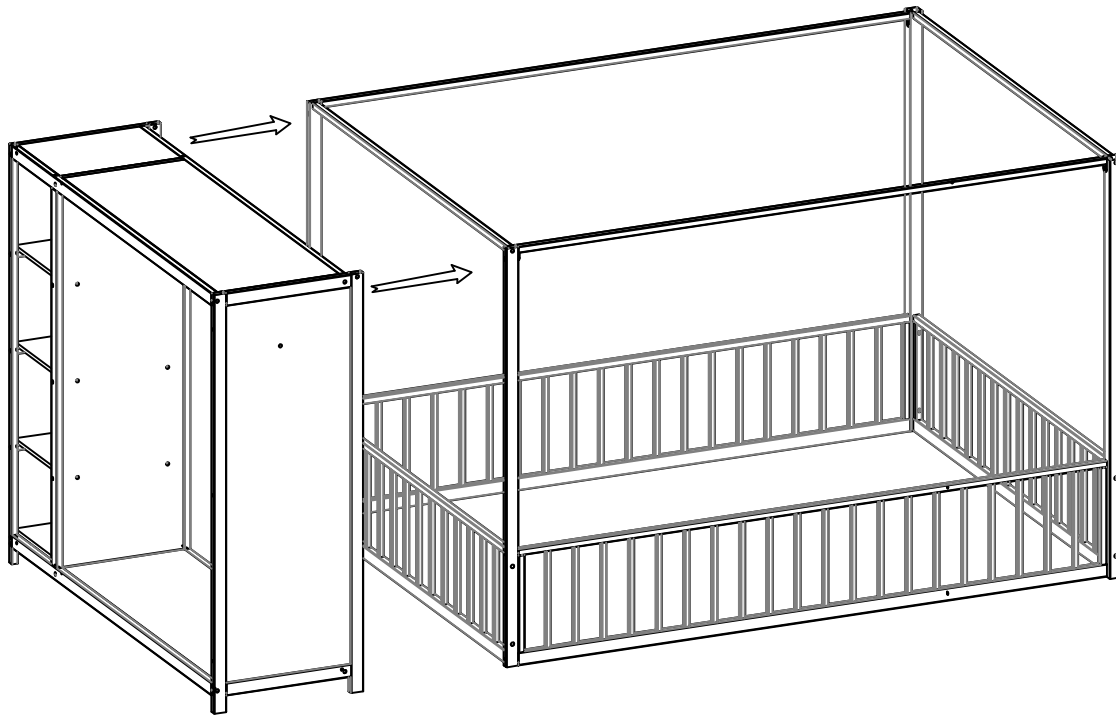


Wardrobe and enclosure
can be separated

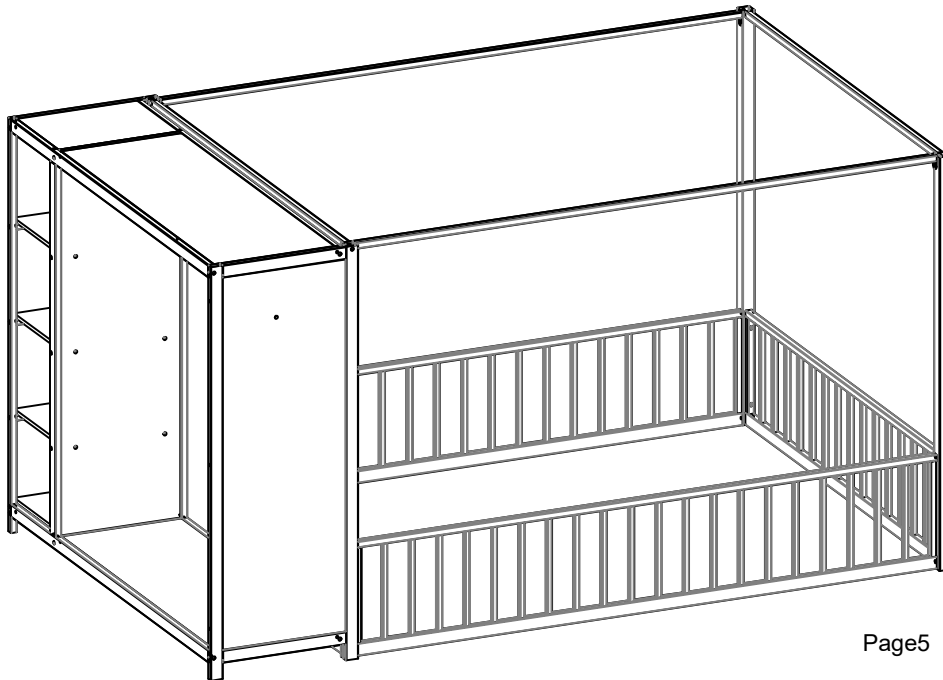



Integral Assembly

Step 1: Use hardware L、C and D to connect #12#15#18 and #7 together.

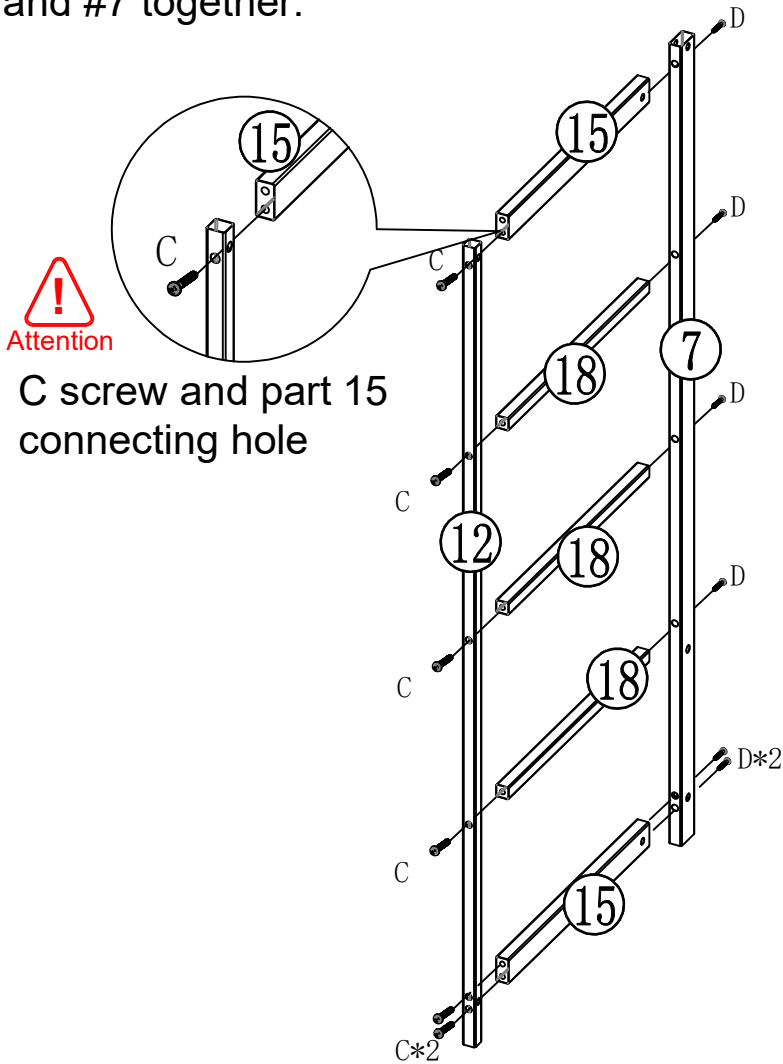


Step 2: Use hardware D, C,L to connect #17#11#13 and #16 to the previously installed components.

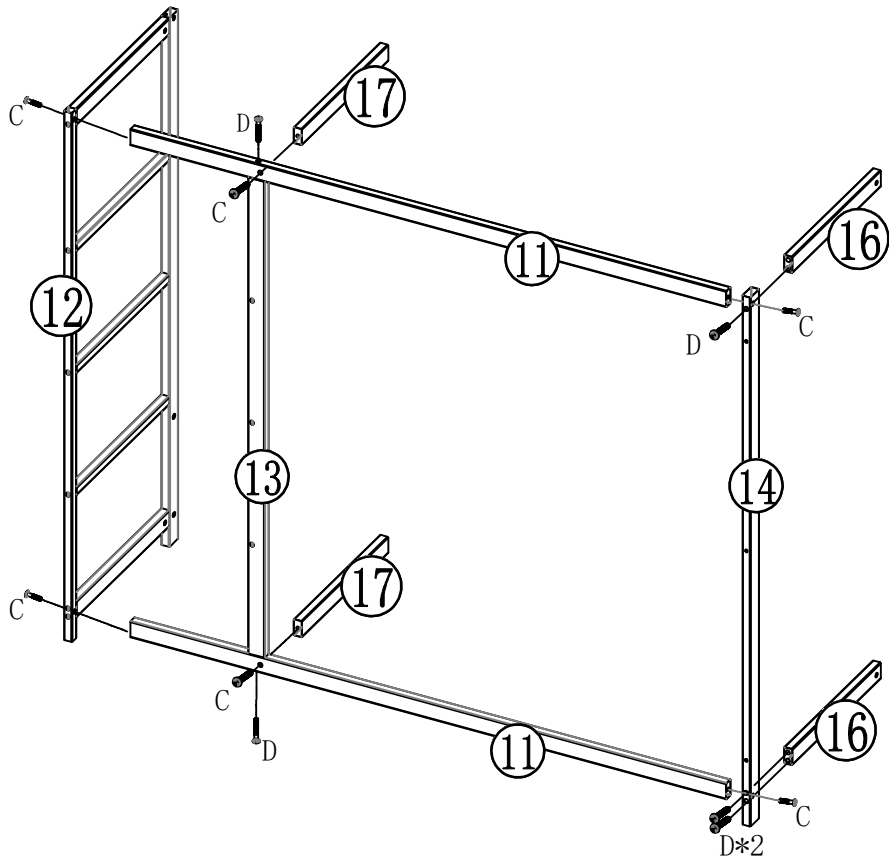



 15-2pcs	 7-1pcs	 C 8*35-6PCS
 18-3pcs	 12-1pcs	 D 8*55-6PCS
		 L

 11-2pcs	 16-2pcs	 13-1pcs	 C 8*35-6PCS
 17-2pcs	 L	 14-1pcs	 D 8*55-5PCS

Step 3: Use hardware L D, C to connect #8 and #19 to the previously installed components.

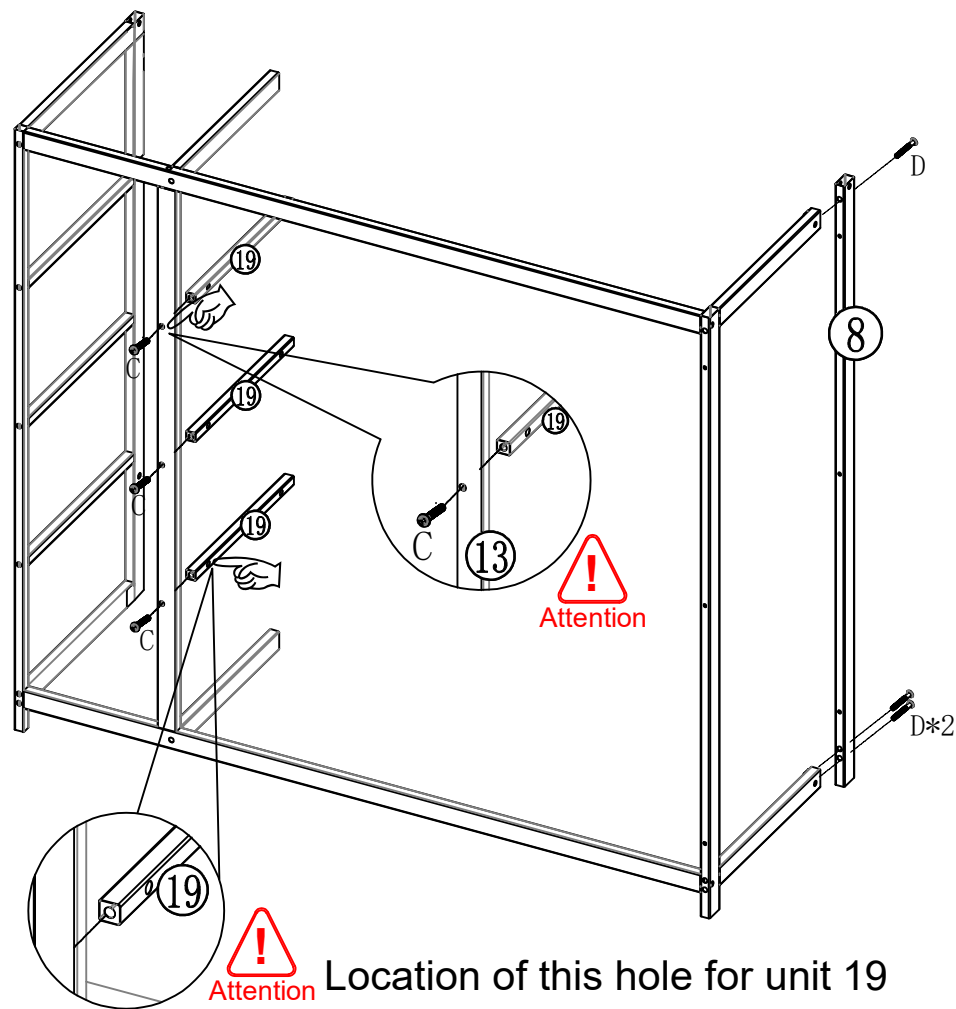

Step 4: Use hardware L D, C to connect #20, #13, #9 and #10 to the previously installed components.

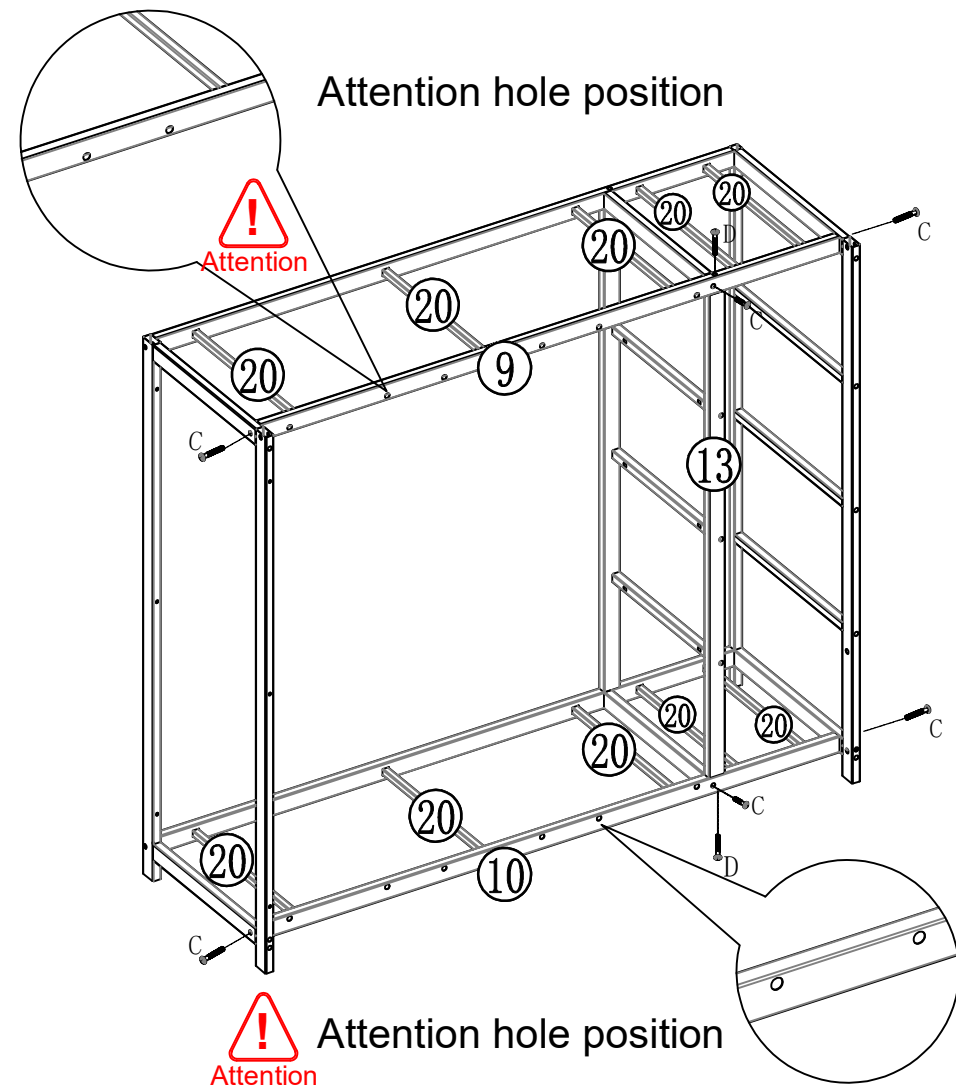

19-3pcs



8-1pcs



C 8*35-3PCS



L



D 8*55-3PCS




13-1pcs



20-10pcs



L



9-1pcs



10-1pcs






C 8*35-6PCS




D 8*55-2PCS

Step 5: Use hardware L ,M,C, H to connect #23and #24 to the previously installed components.

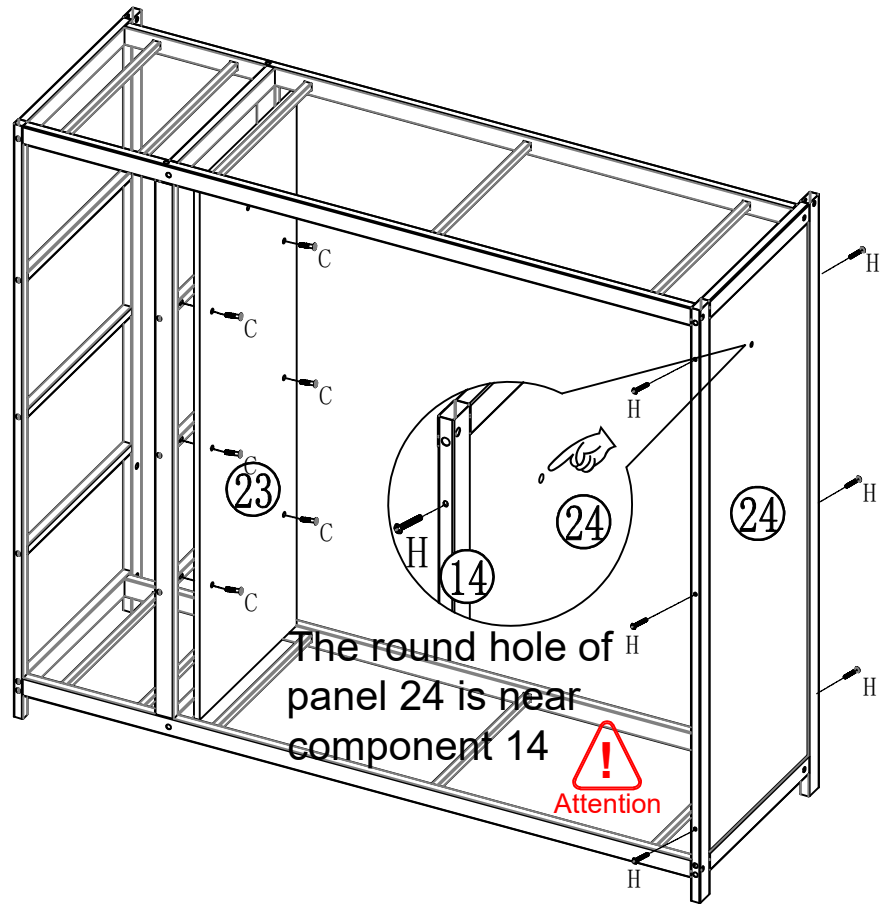


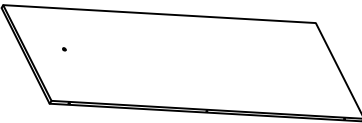 23-1pcs	 24-1pcs	 C 8*35-6PCS  H 4*45-6PCS	 L  M
---	--	---	--


Step 6: Use hardware L, C to connect #26,#22,#25and #21to the previously installed components.

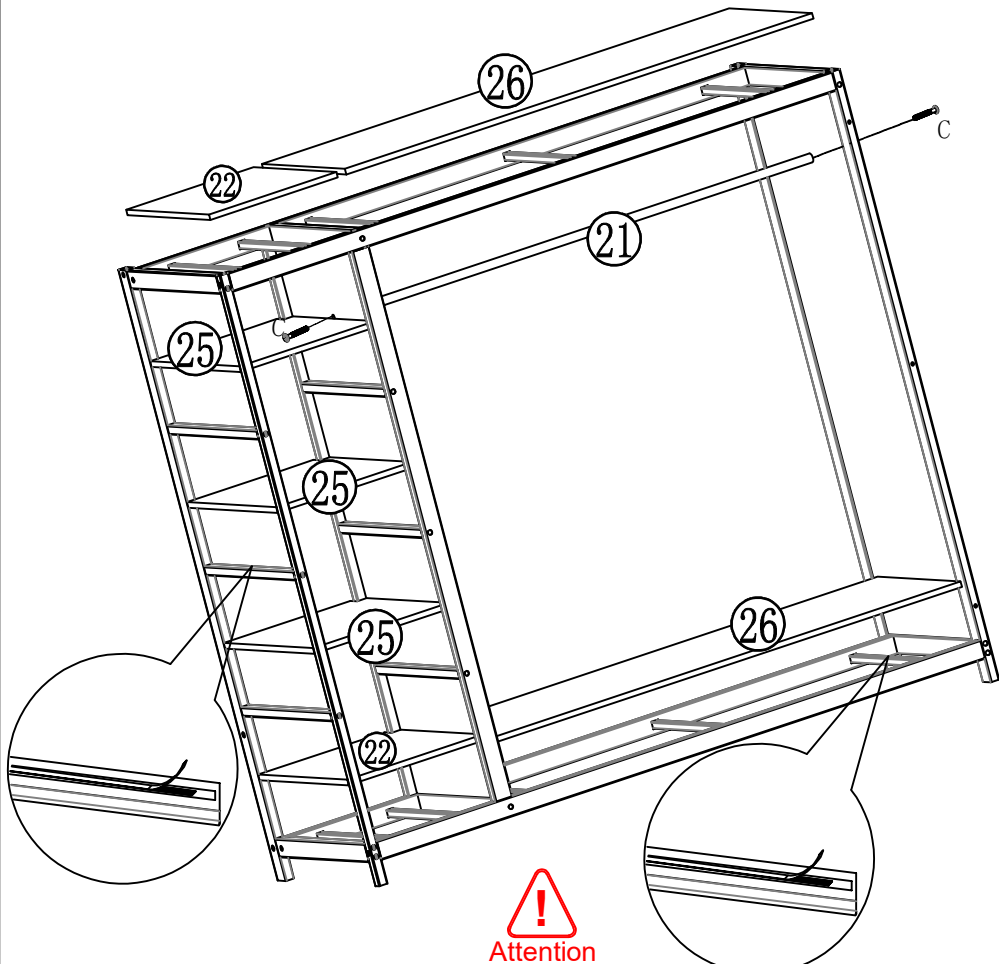


Use double-sided tape O to secure the board

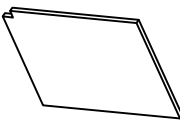 21-1pcs	 C 8*35-2PCS	 L	
 22-2pcs	 25-3pcs	 26-2pcs	


Step 7: Use hardware L, B, C to connect #27 and #28 to the previously installed components.

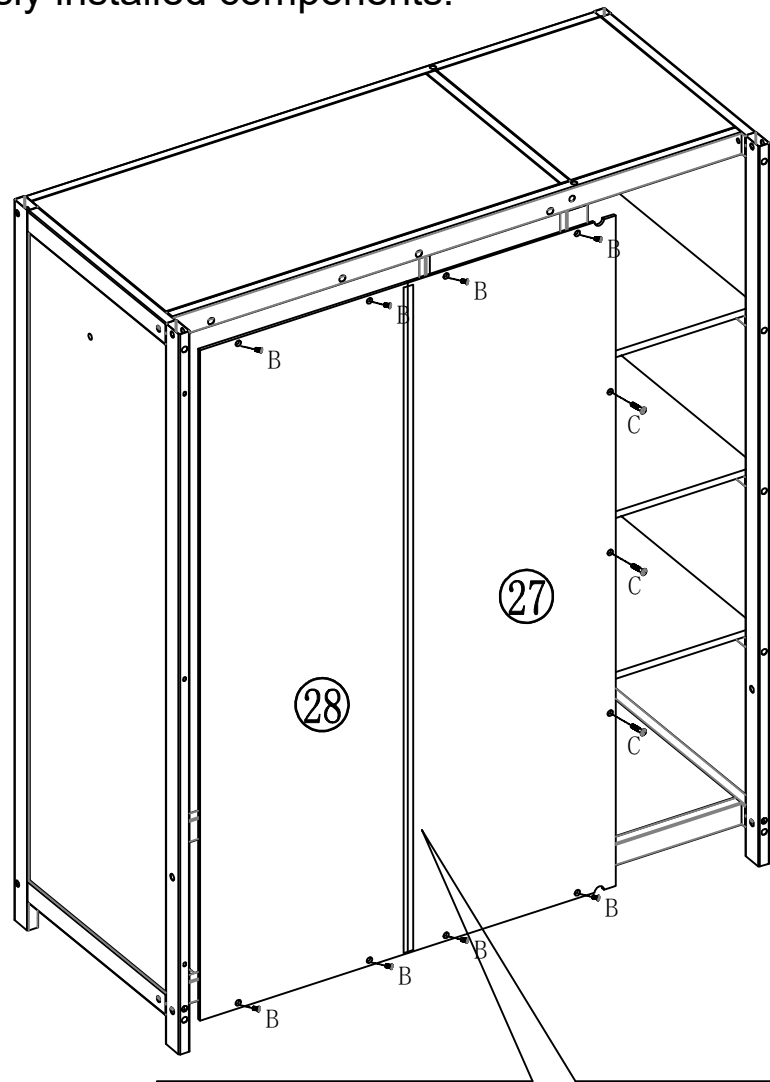

Attach the backboard using duct tape W



27-1pcs



28-1pcs



8*15-8PCS



L




8*35-3PCS






W

The wardrobe is partially completed

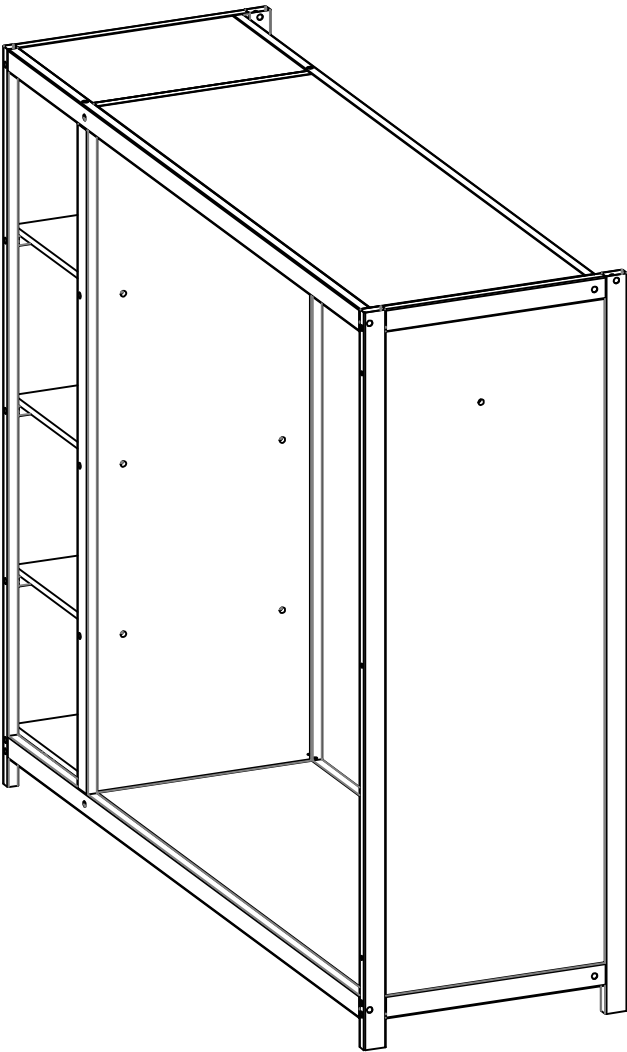


Step 8: Use hardware L, D, F to connect #5,#1and #3 to the previously installed components.

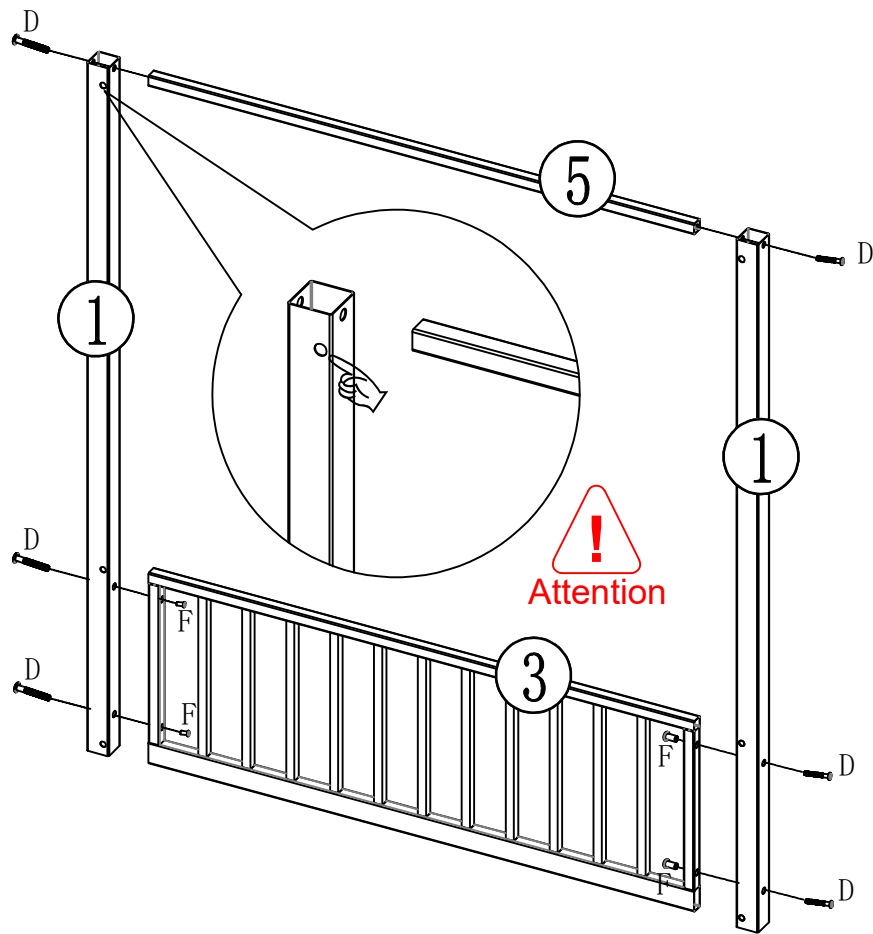

		
1-2pcs	5-1pcs	D 8*55-6PCS
		
3-1pcs	L	F 8*15-4PCS

Step9: Use hardware L, D,C, F to connect #4,#2and #6 to the previously installed components.

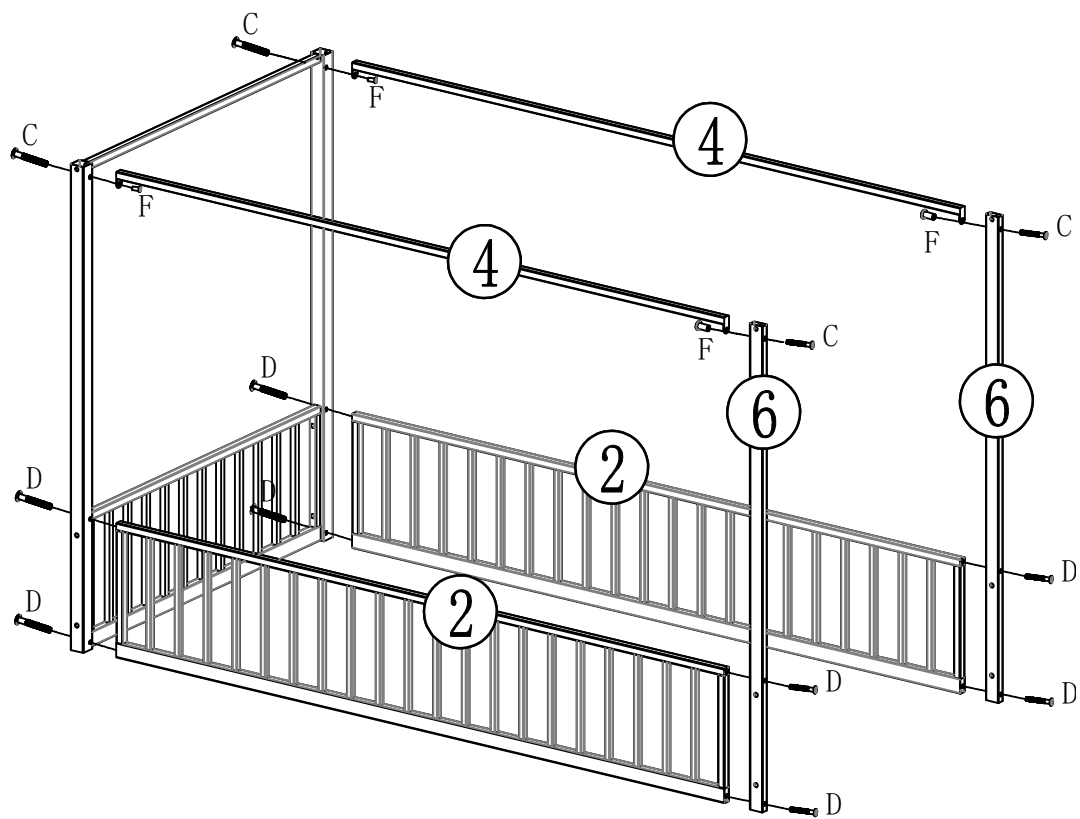


			
2-2pcs	6-2pcs	F 8*15-4PCS	C 8*35-4PCS
			
4-2pcs	L	D 8*55-8PCS	

Step 10: Wardrobe section and enclosure section split instructions

 **Attention** When the two parts are assembled together, please use screw D to connect No. 3 and No. 5

When assembled separately, please connect No. 3 and No. 5 with C screw

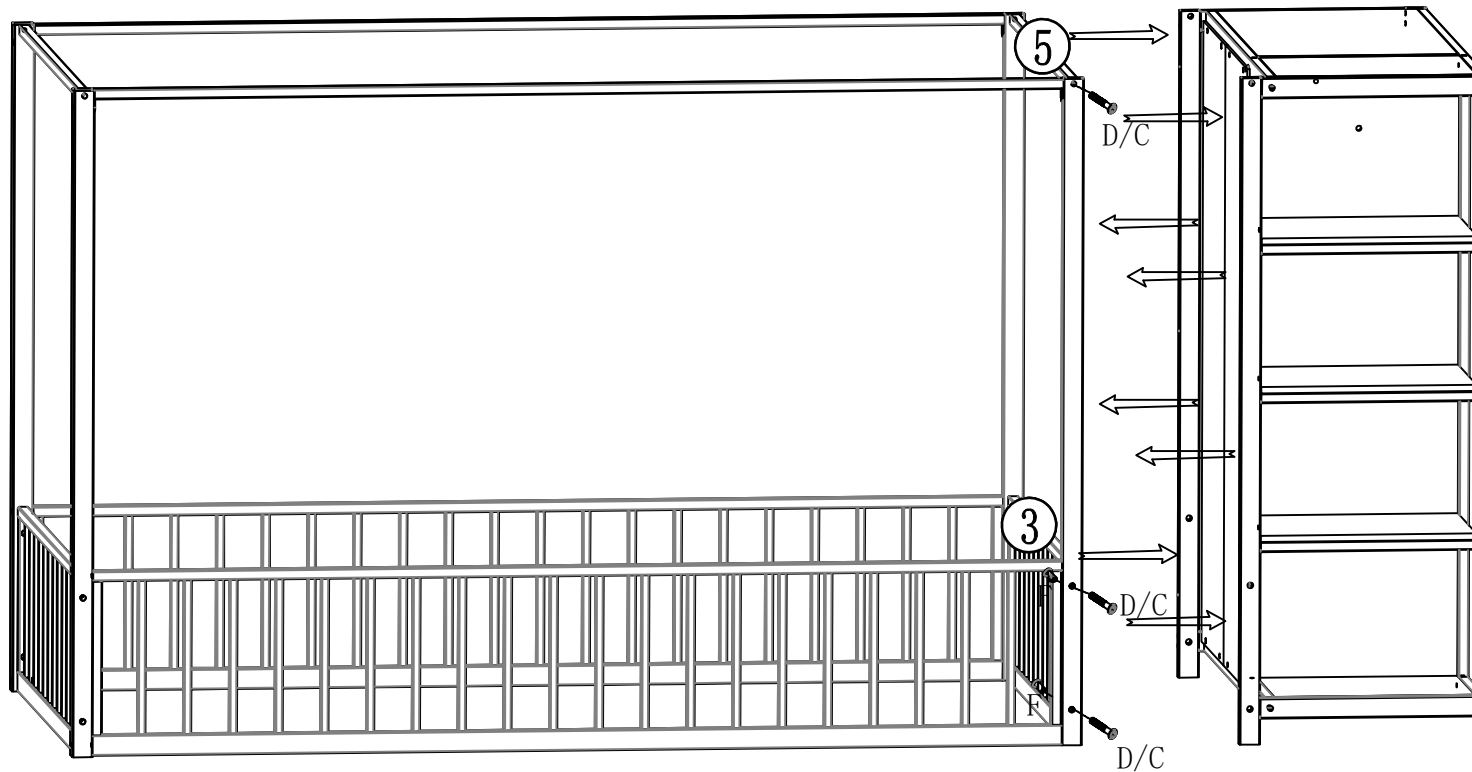


Connect into one 
D 8*55-6PCS

Split installation 
C 8*35-6PCS


F
8*15-4PCS

Assembly Complete

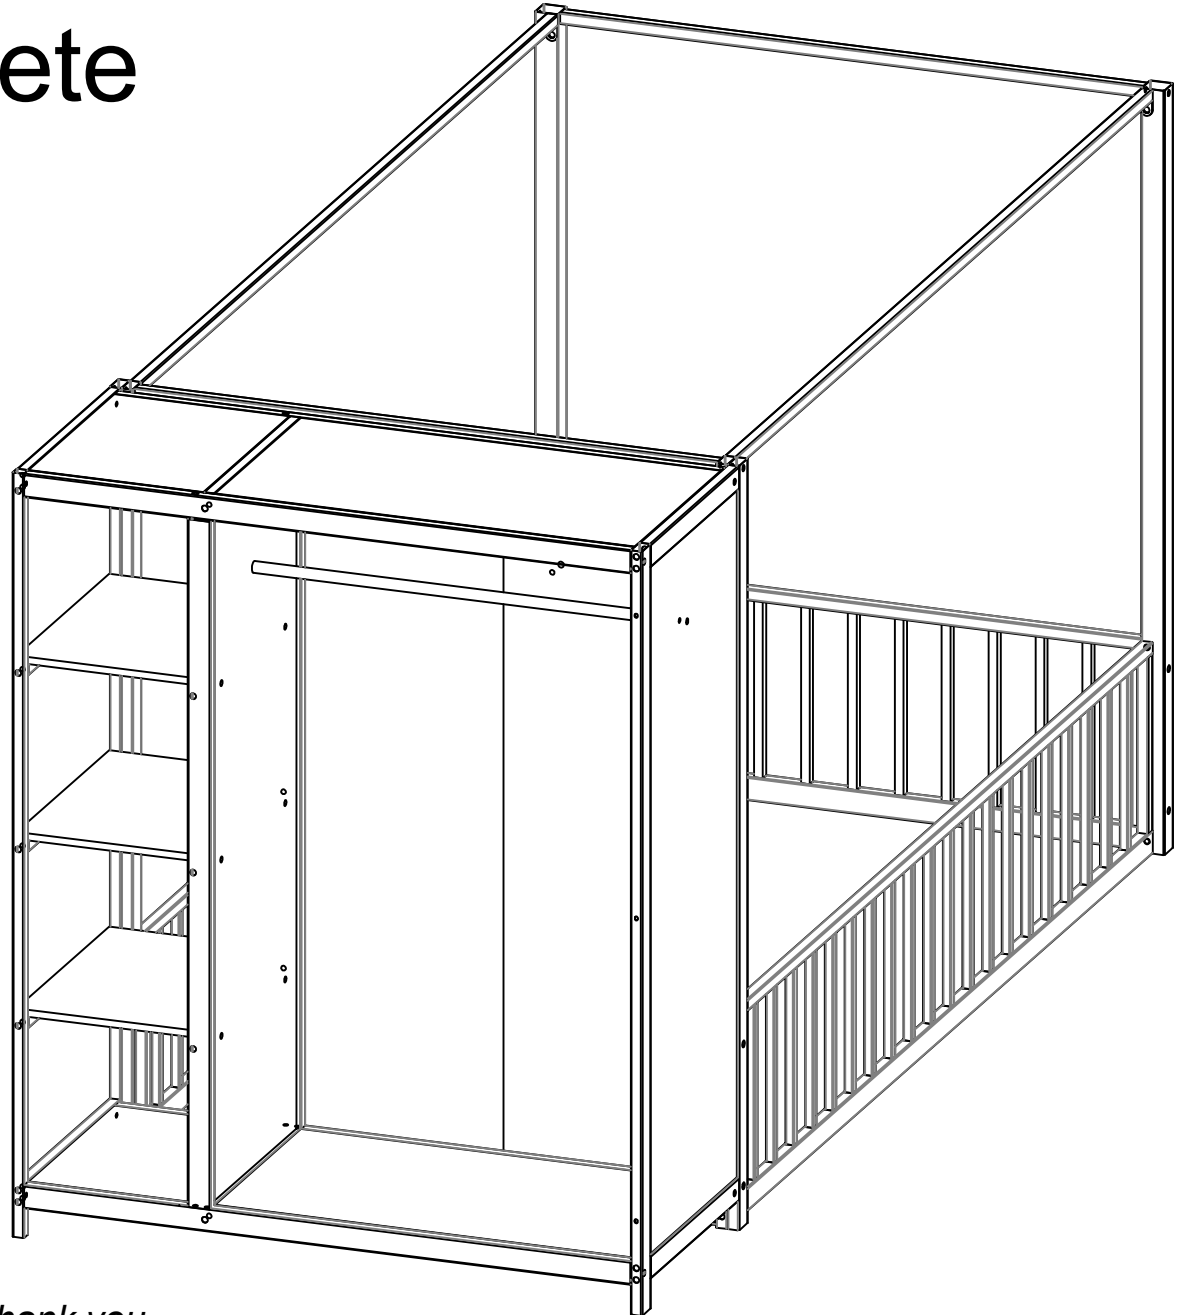

Attention

Please tighten all screws before use, thank you.