

Bathroom cabinet

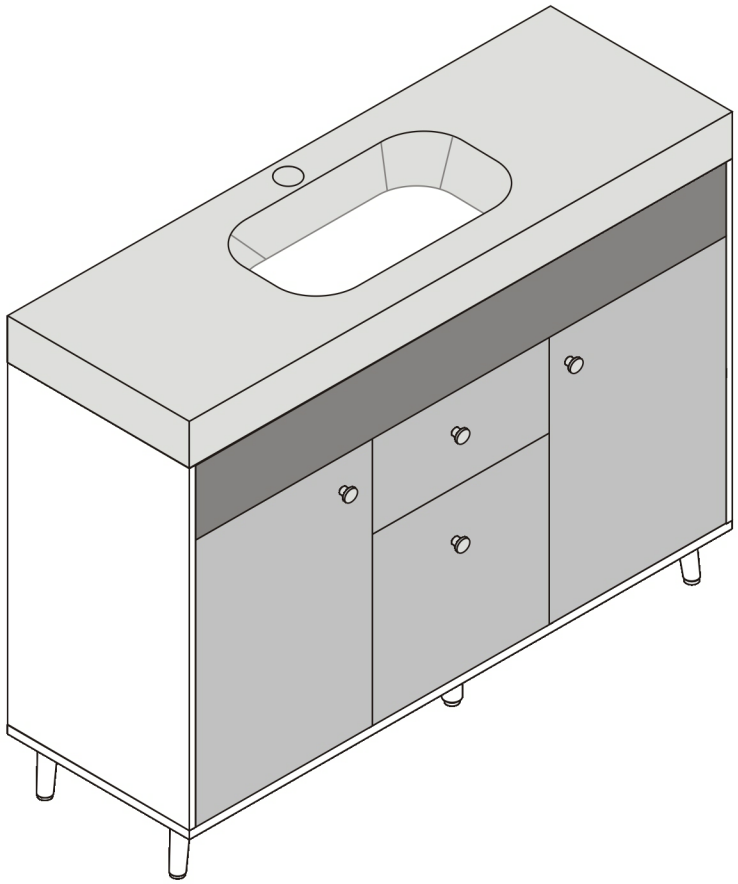


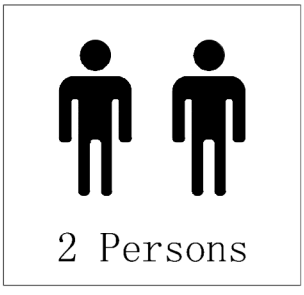


L906*W455*H593MM

Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

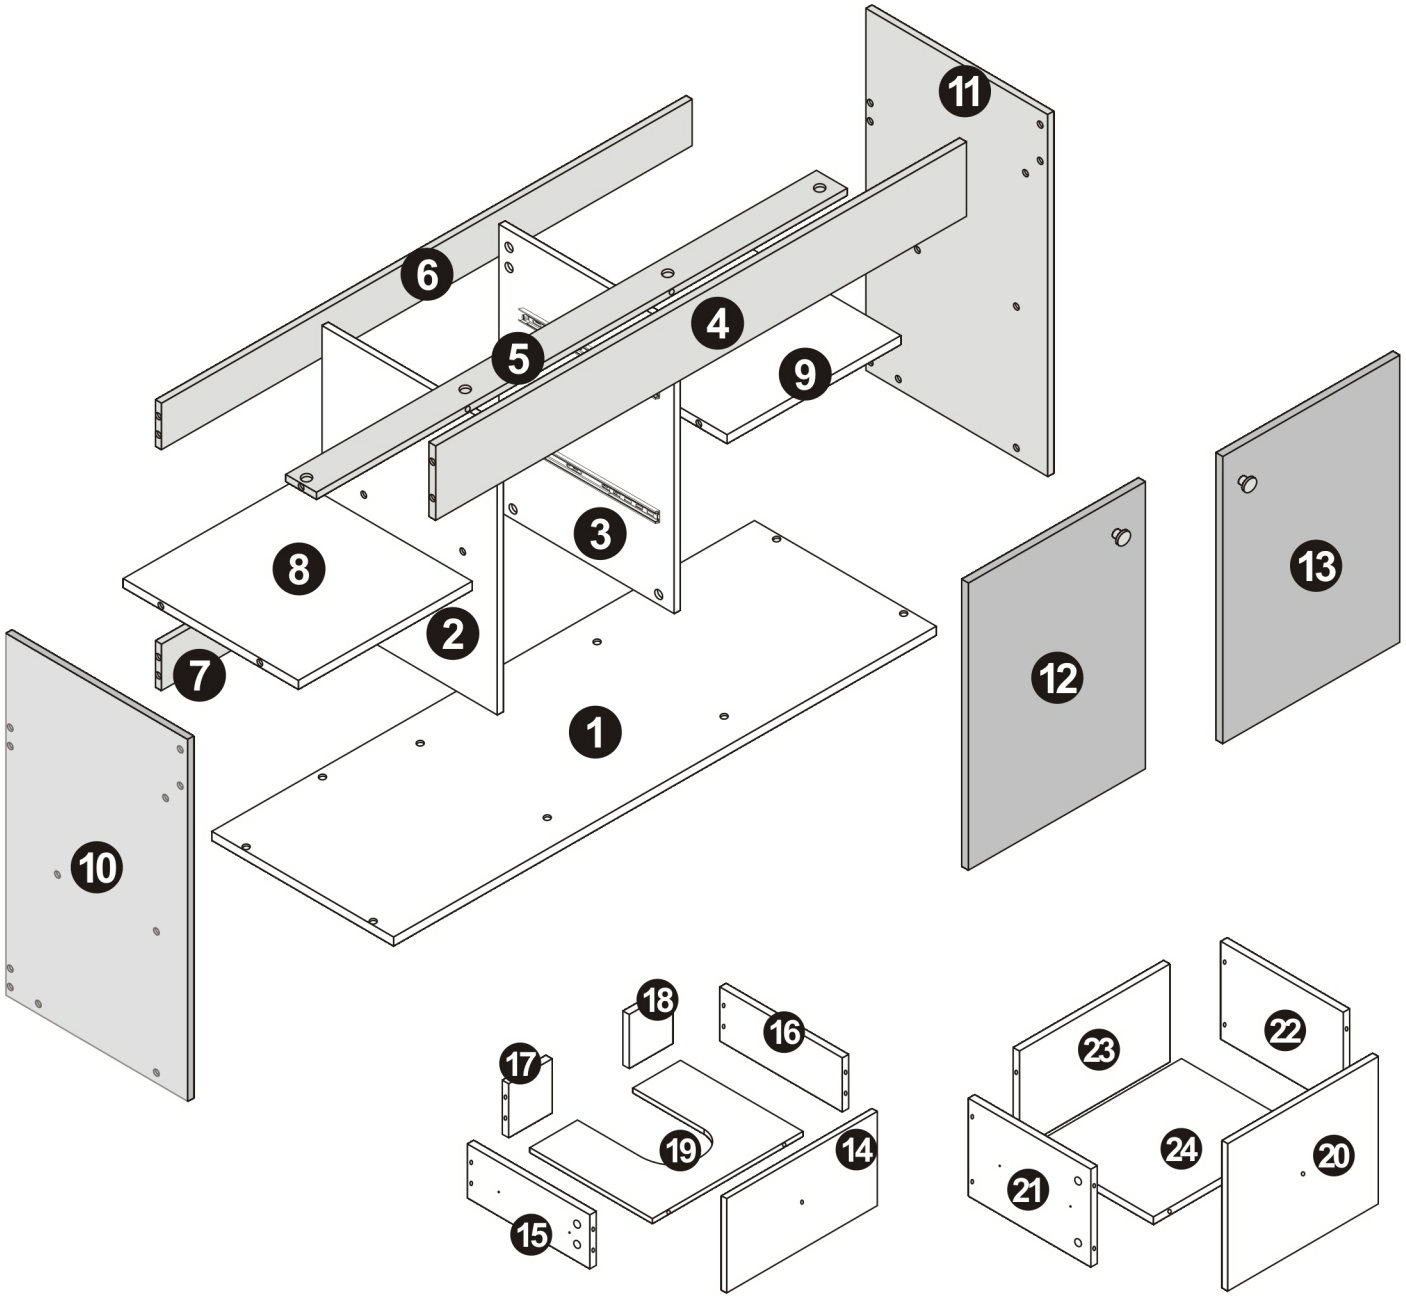


Disassembly and installation of accessories

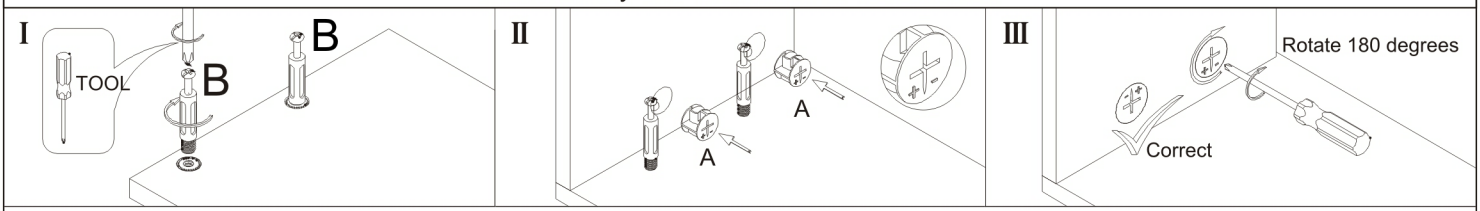

A 52PCS	B 52PCS	C 76PCS	D 20PCS	E 4PCS	F 4PCS	G 4PCS	H 4PCS
15*10mm	6*28mm	3.5*14mm	3.5*35mm	4*20	Handles	Sponge Mat	Mid bend


I 2PCS	J 2PCS	K 2PCS	L 4PCS	M 1PCS
Expansion screw	Corner code	Three-section Rail	Hardware Feet	Hardware Feet

1

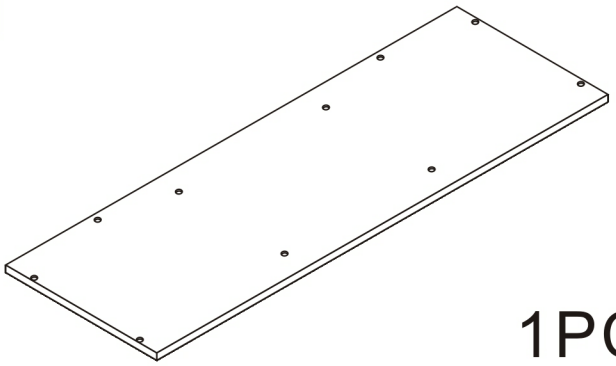


1PC

2

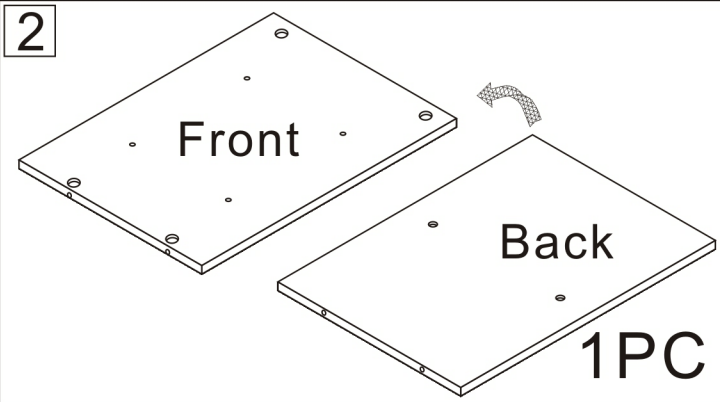


1PC

3

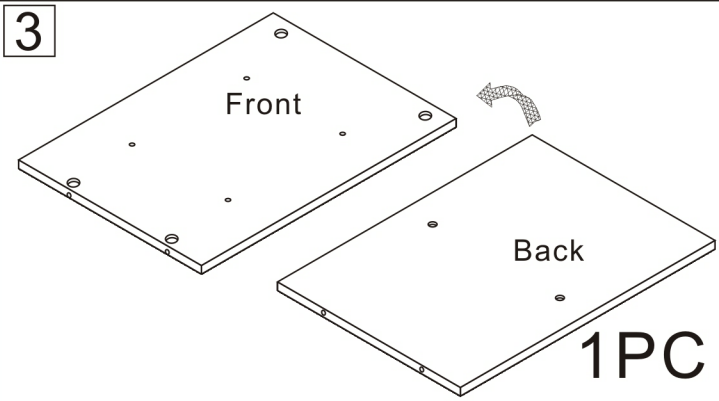


1PC

4

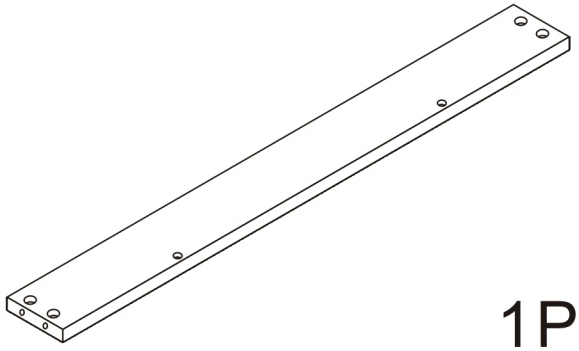


1PC

5

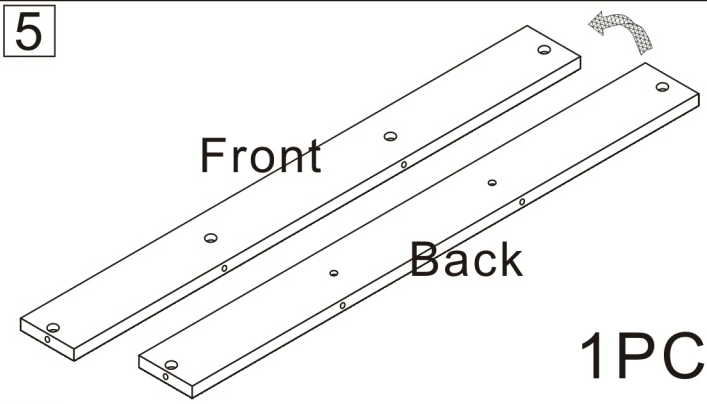


1PC

6

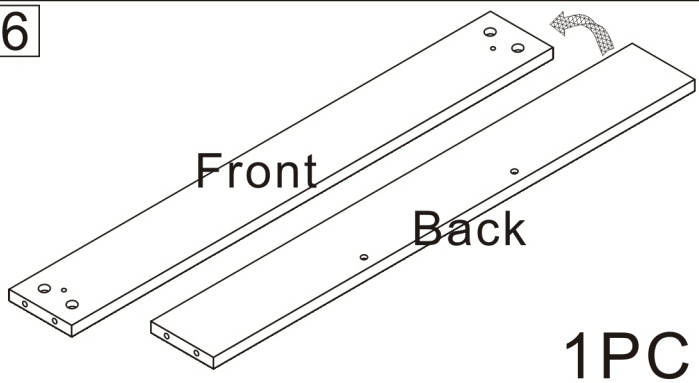


1PC

7

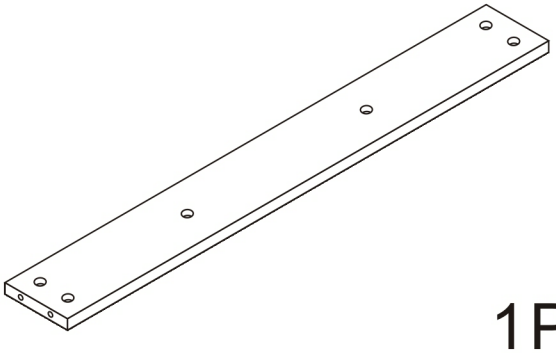


1PC

8

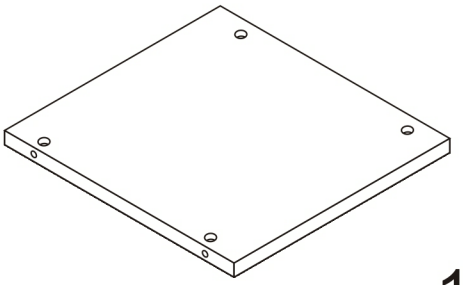


1PC

9

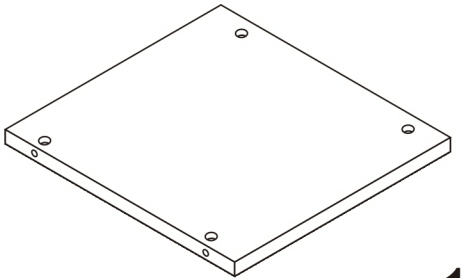


1PC

10

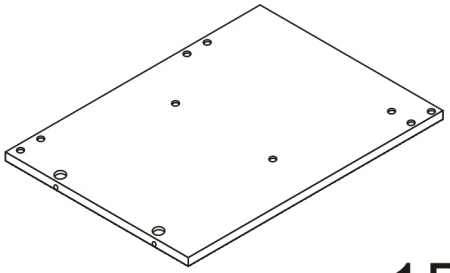


1PCS

11

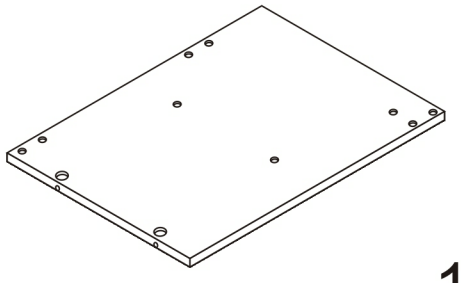


1PC

12

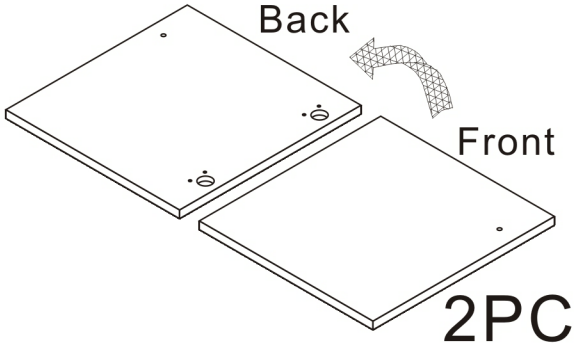


2PCS

13

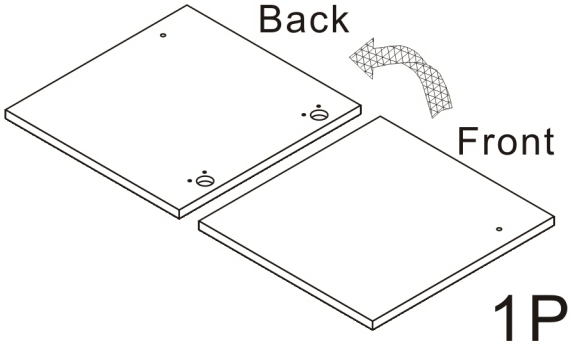


1PC

14

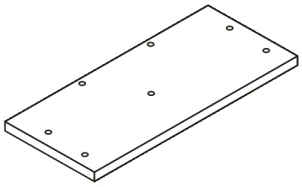


1PC

15

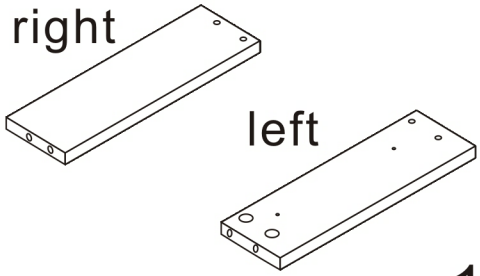


1PC

16

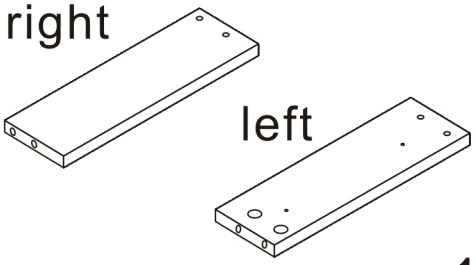


1PC

17




1PC

18




1PC

19

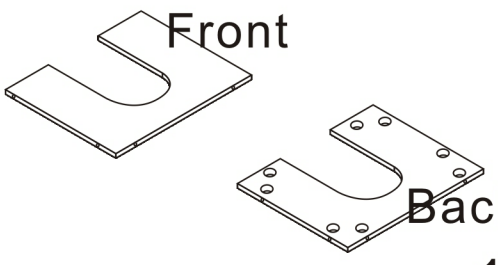


1PC

20

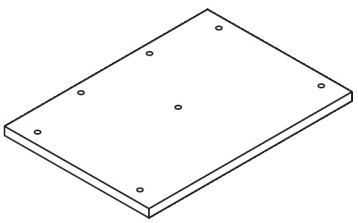


1PC

21

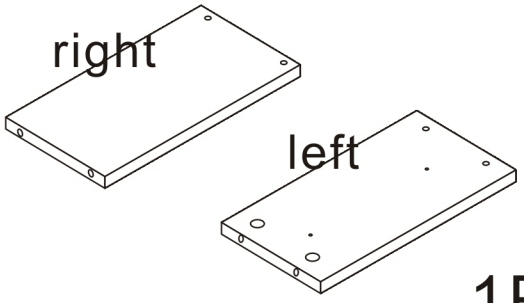


1PC

22

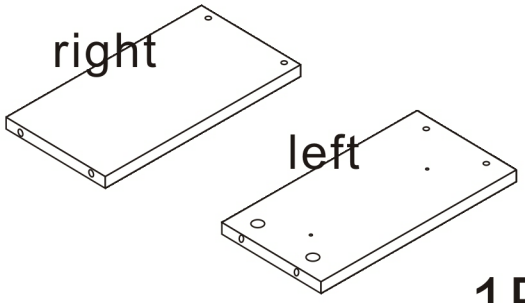


1PC

23

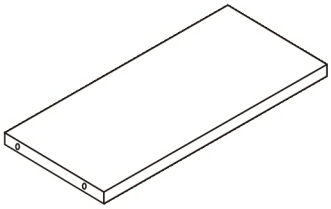


1PC

24

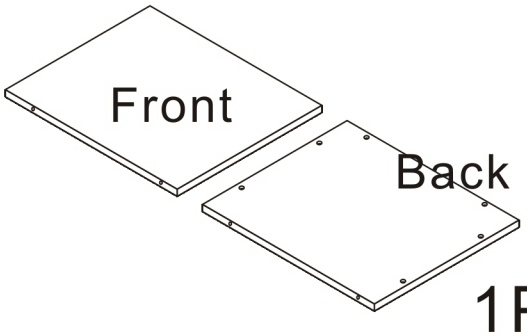



1PC

1

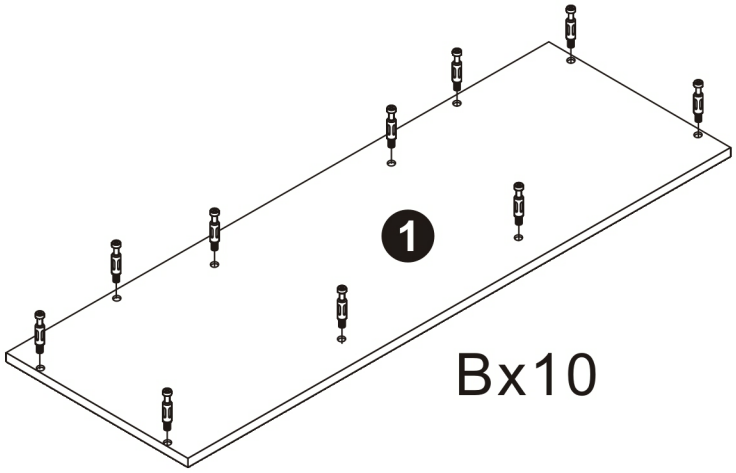


Bx10

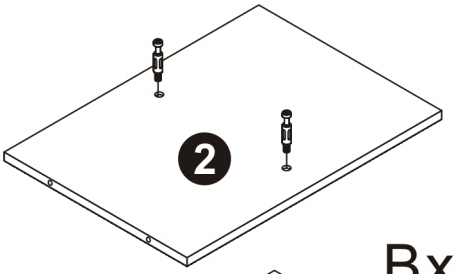


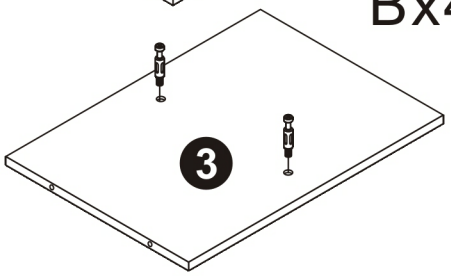


Bx4

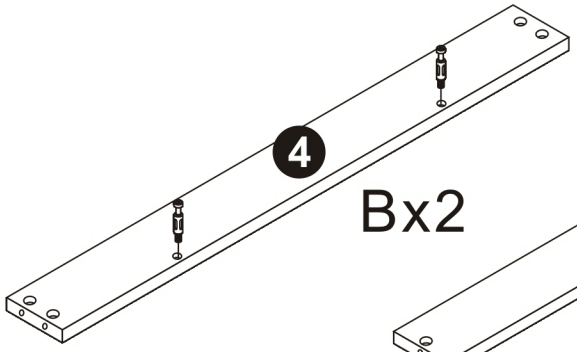


Bx2

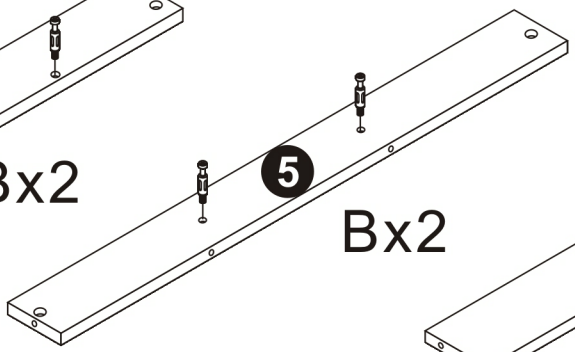


Bx2

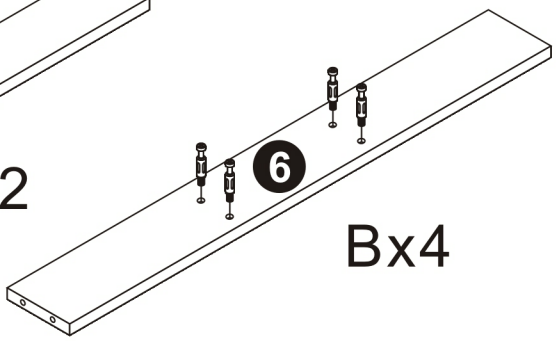


Bx4

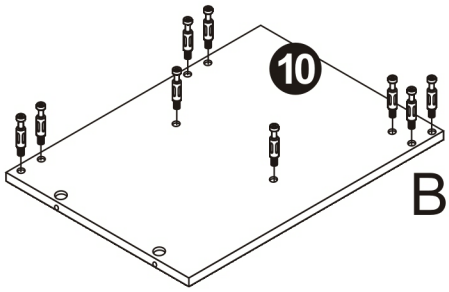


Bx9

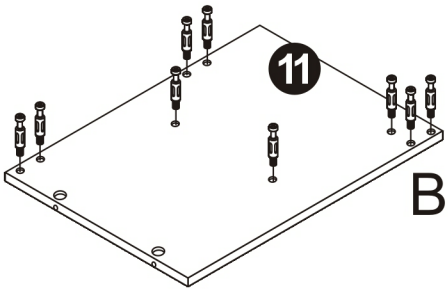

Bx9

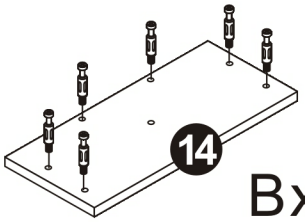


Bx6

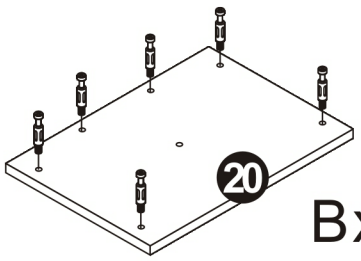

Bx6


B	52PCS
	
6*28mm	


2

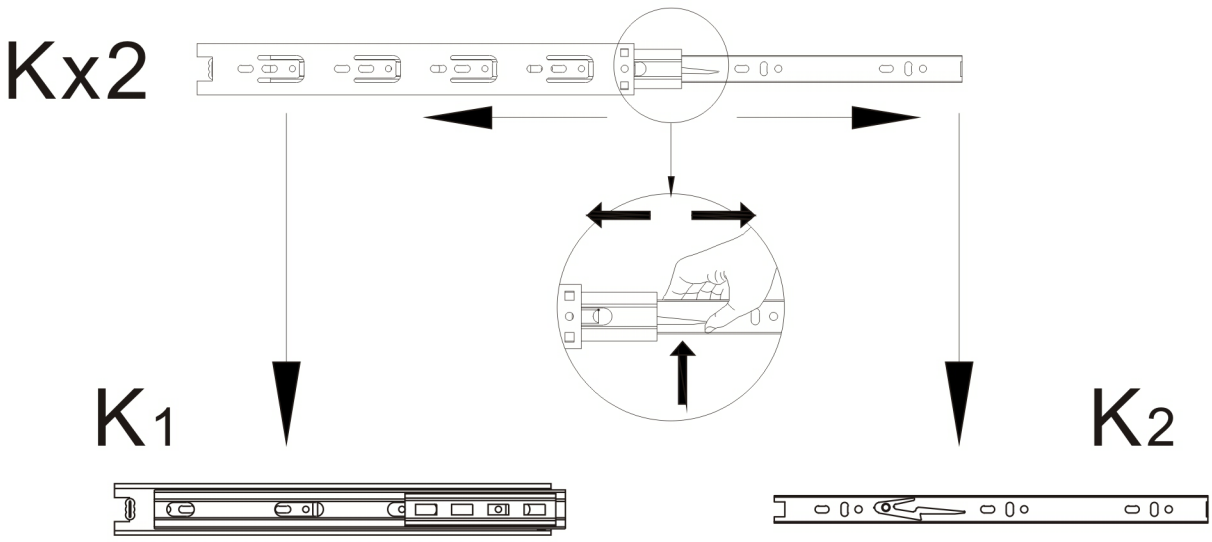

K1	2PCS
	
Three-section Rail	

3

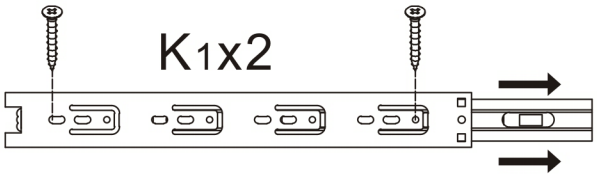


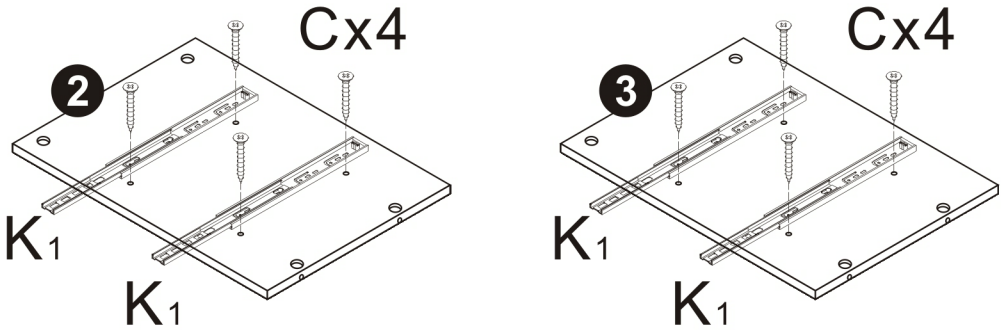

C	8PCS
	
3.5*14mm	


K1	2PCS
	
12 inch Three-section Rail	

4

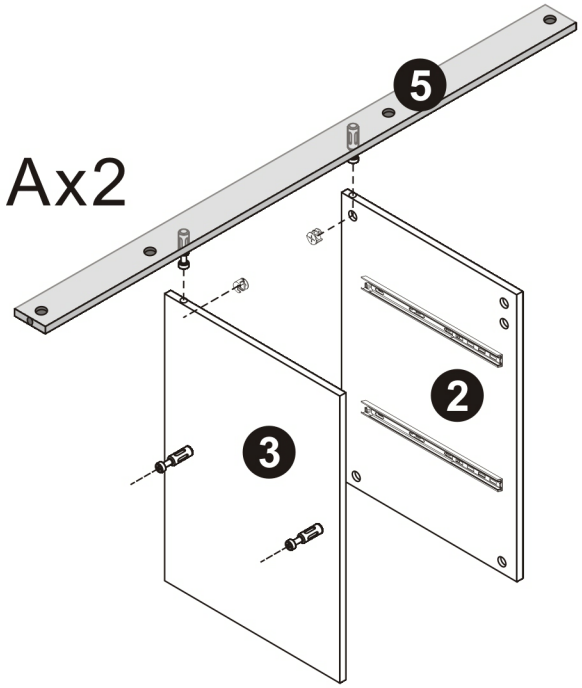


A	2PCS
	
15*10mm	

5

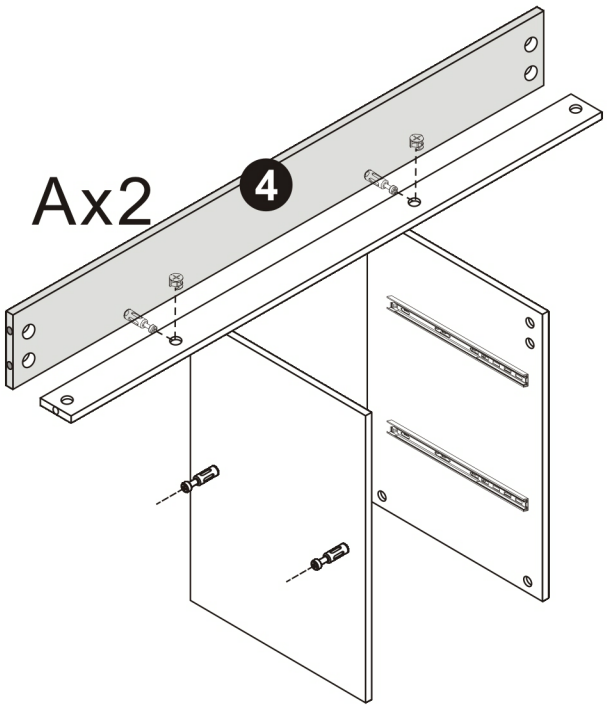


A	2PCS
	
15*10mm	

6

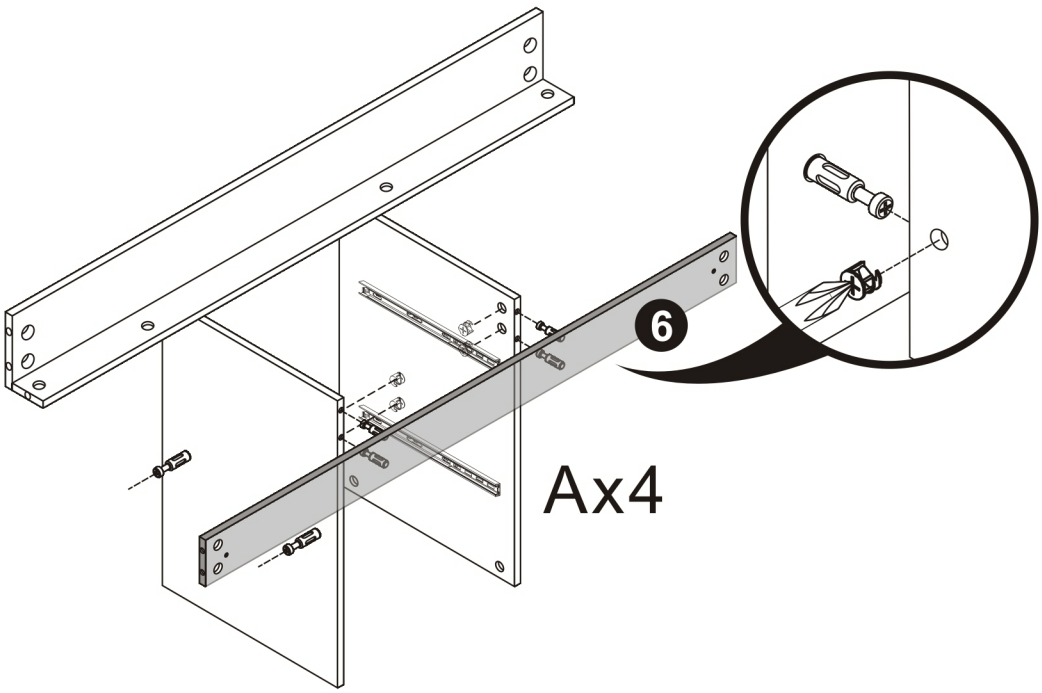


A	4PCS
	
15*10mm	

7

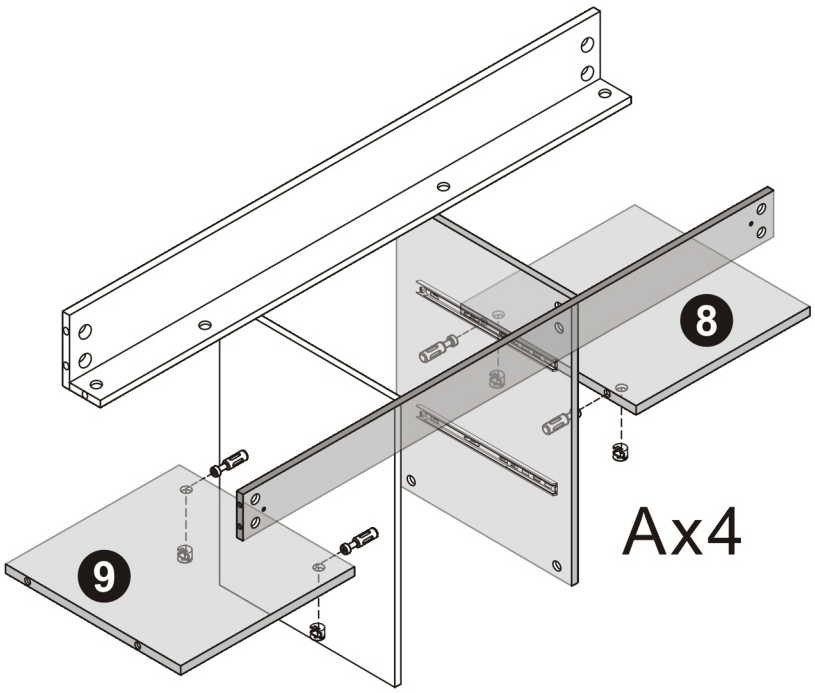


A	4PCS
	
15*10mm	

8

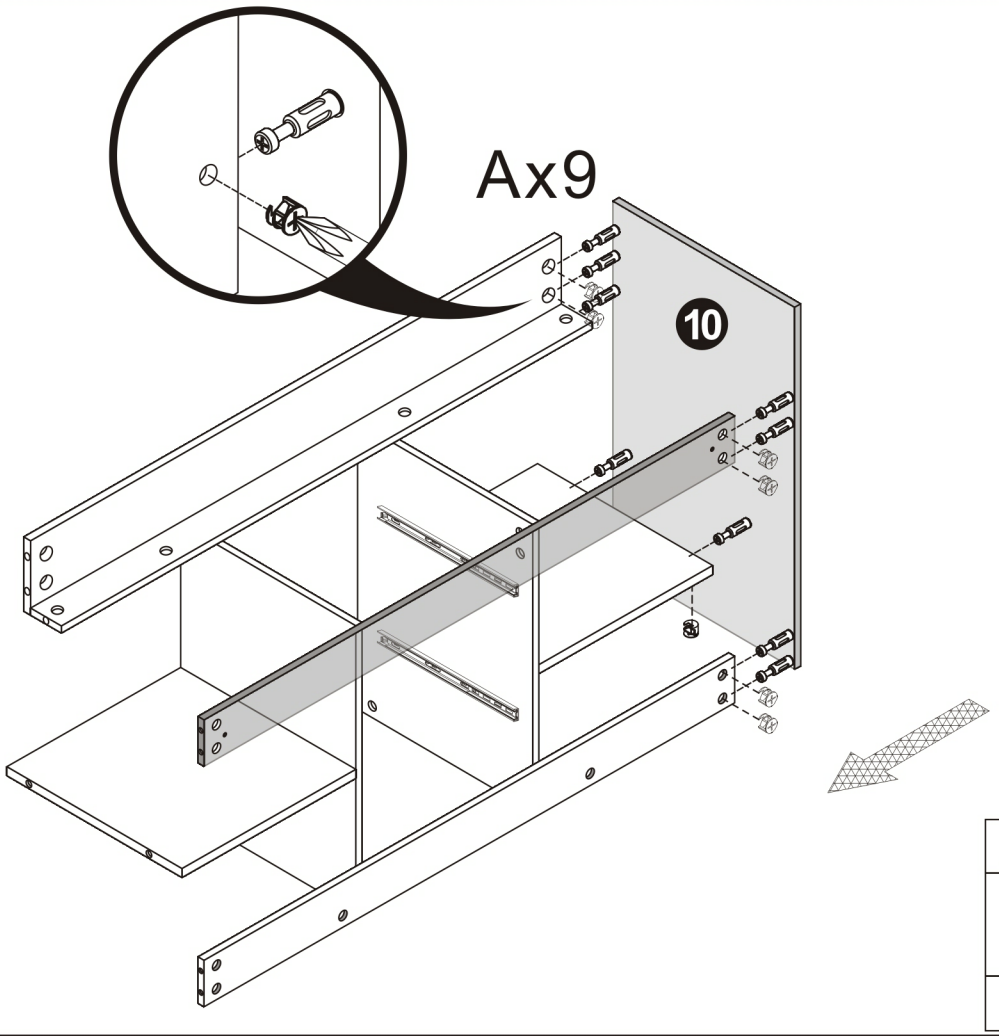


A	9PCS
	
15*10mm	

9

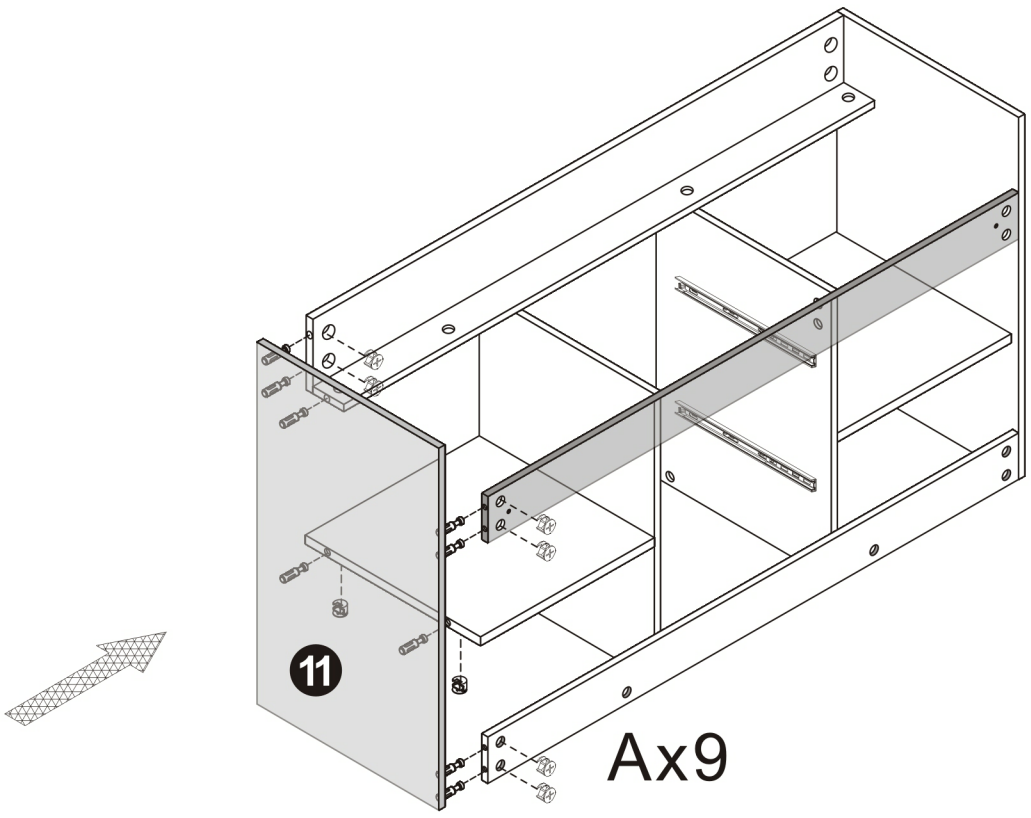


A	9PCS
	
15*10mm	

10

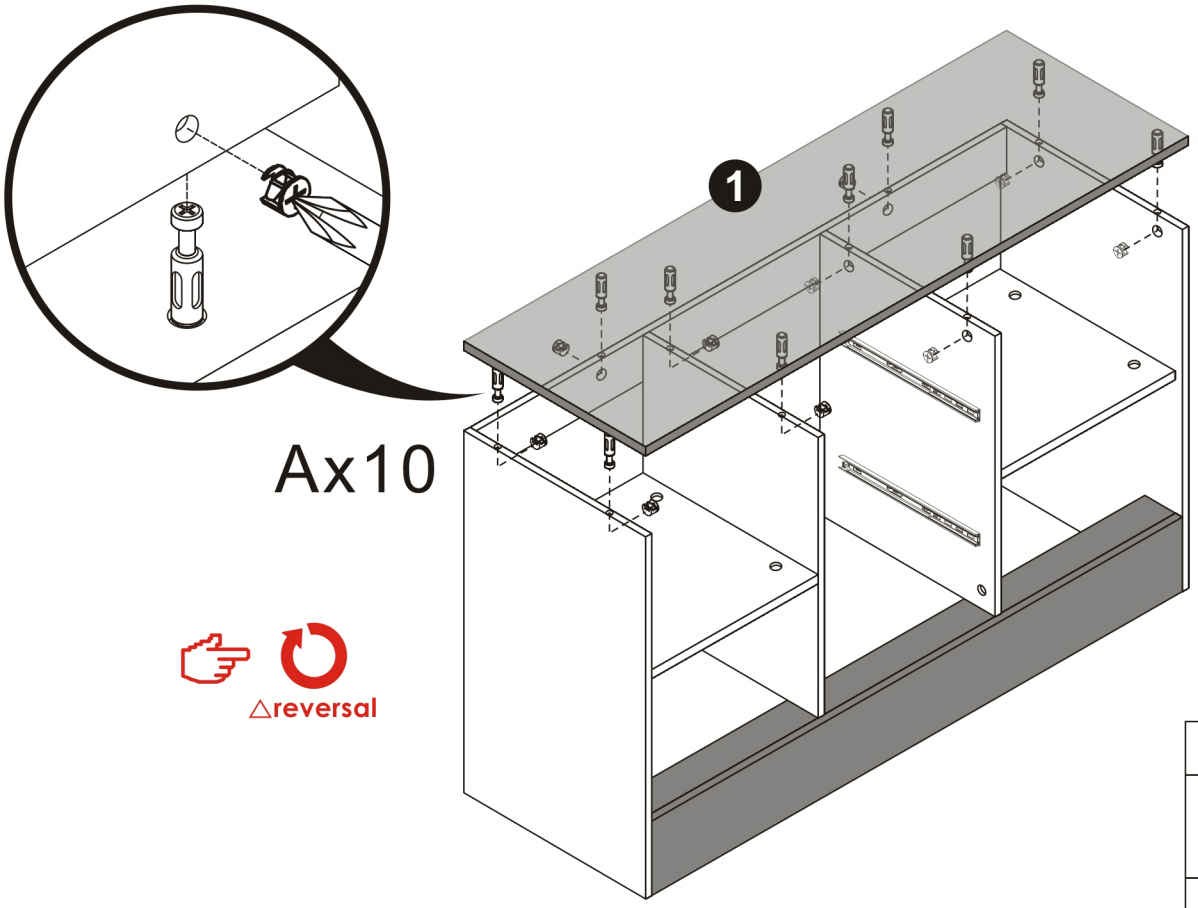

A	10PCS
	
15*10mm	

11

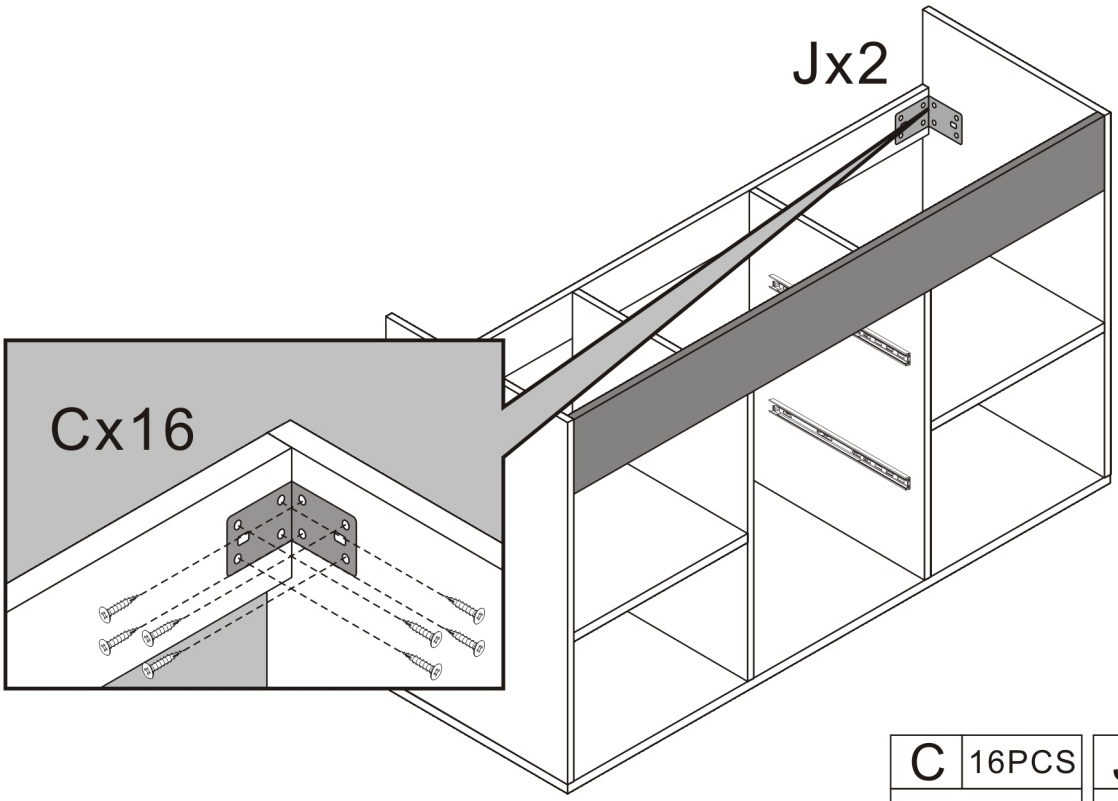


C	16PCS
	
3.5*14mm	


J	2PCS
	
Corner code	

12


Hx2
Cx4

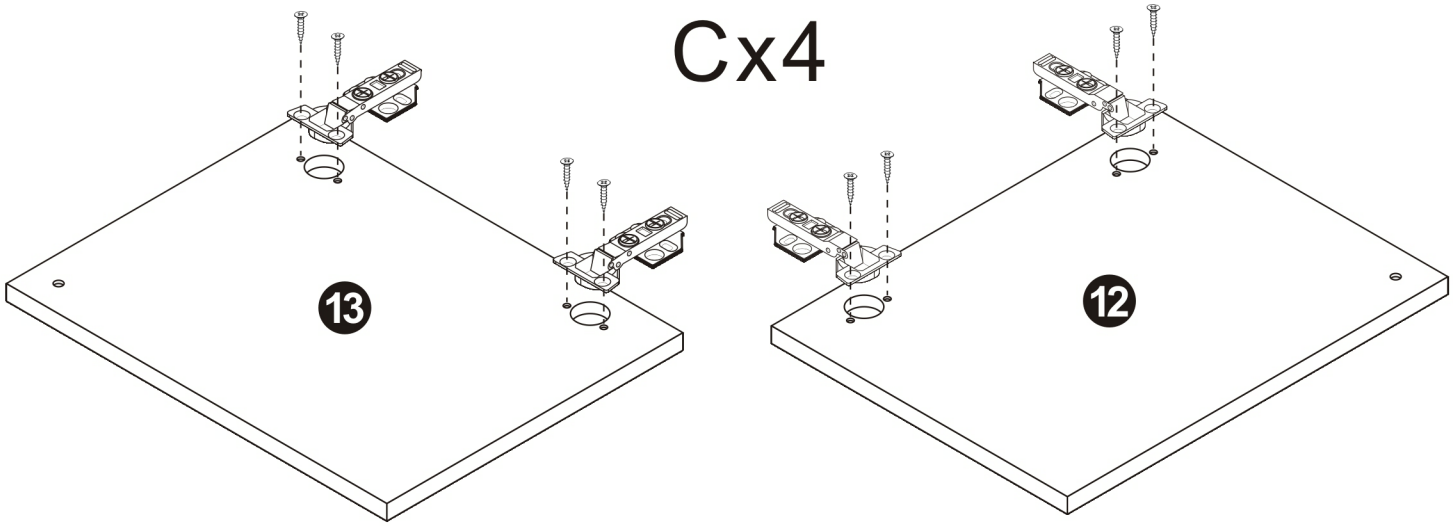

C	8PCS
	
3.5*14mm	

H	4PCS
	
Mid bend	

13

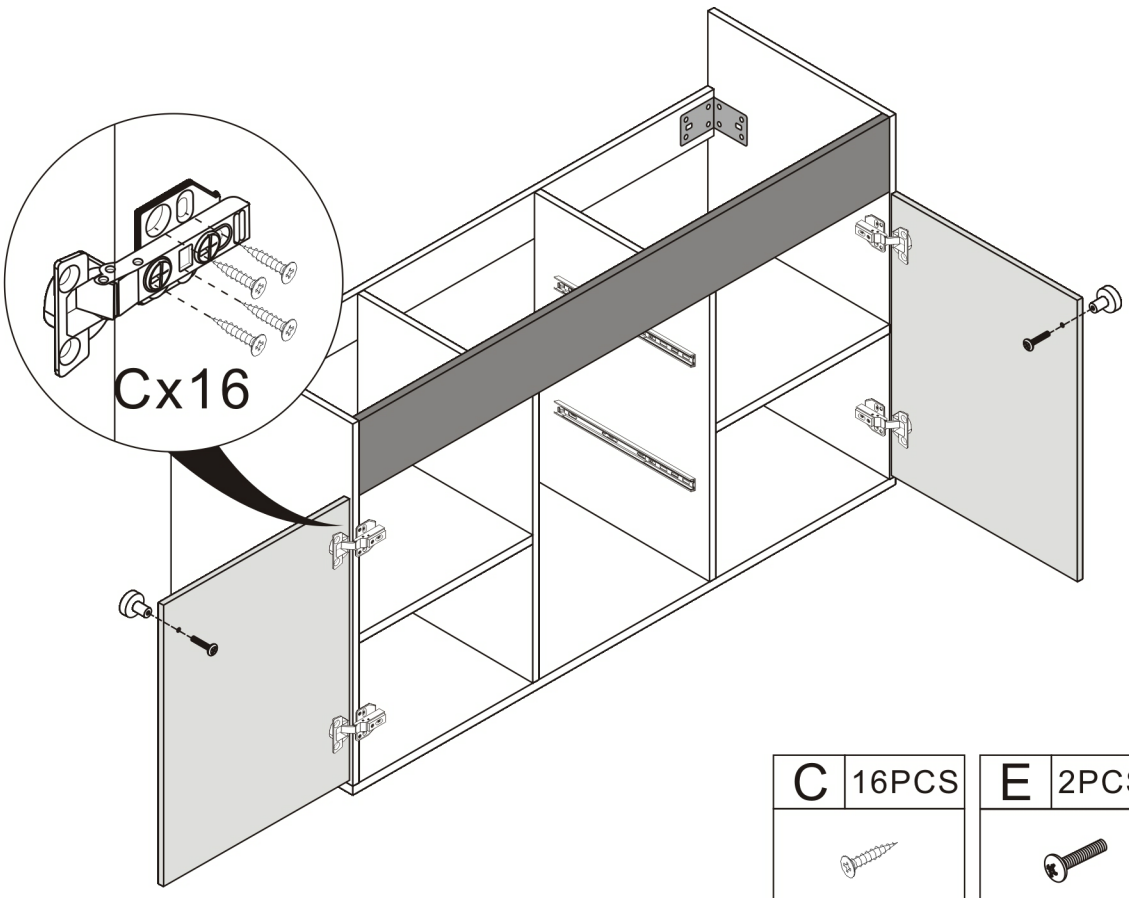

Ex2
Fx2


C	16PCS
3.5*14mm	

E	2PCS
4*20	


F	2PCS
	
Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT
CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS
CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


A. Lateral adjustment (Moving door left-right) by screw adjusting
Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
Réglage latéral (porte mobile gauche-droite) par réglage à vis

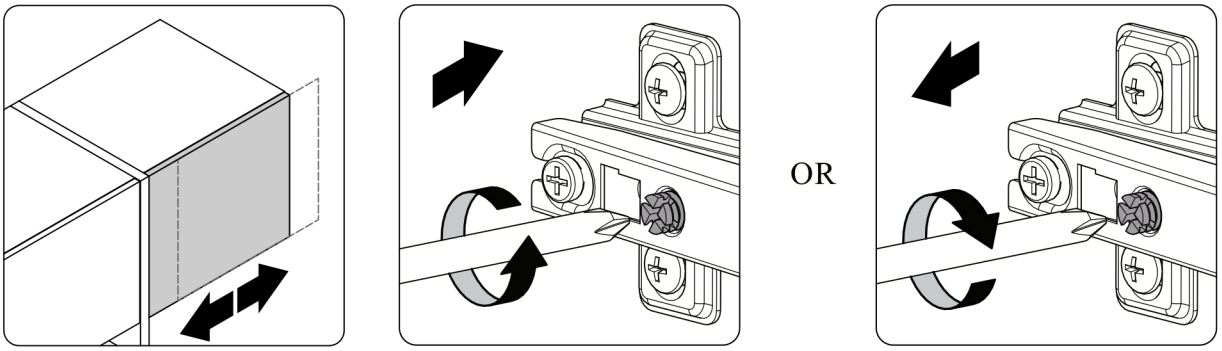


B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

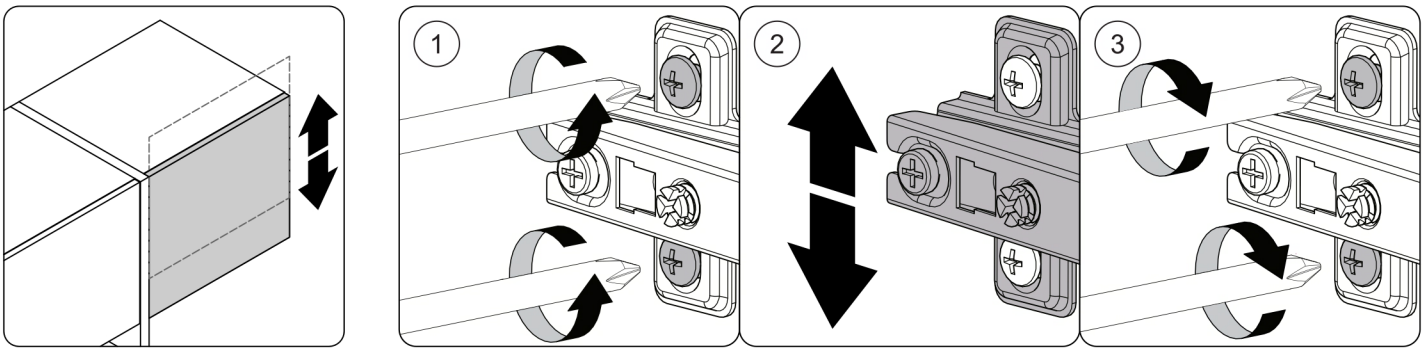

C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

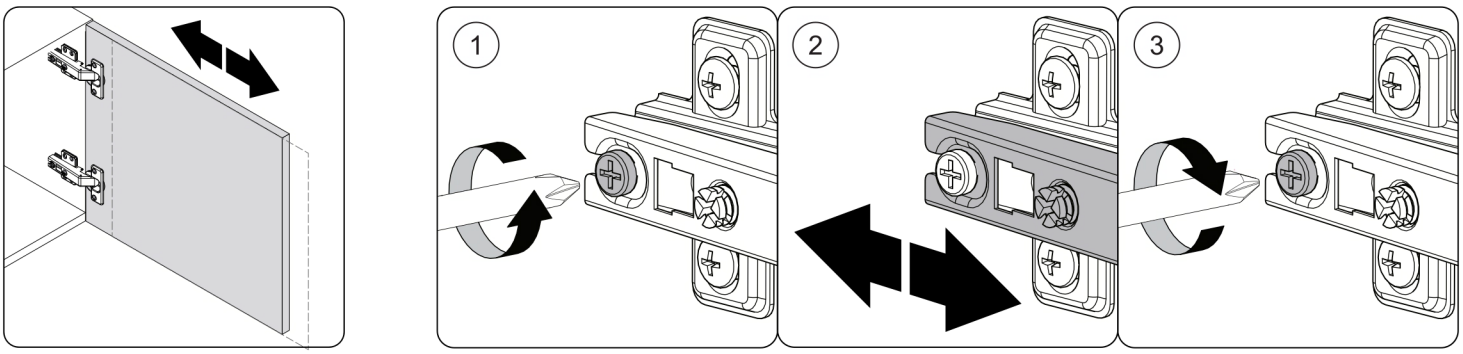



14

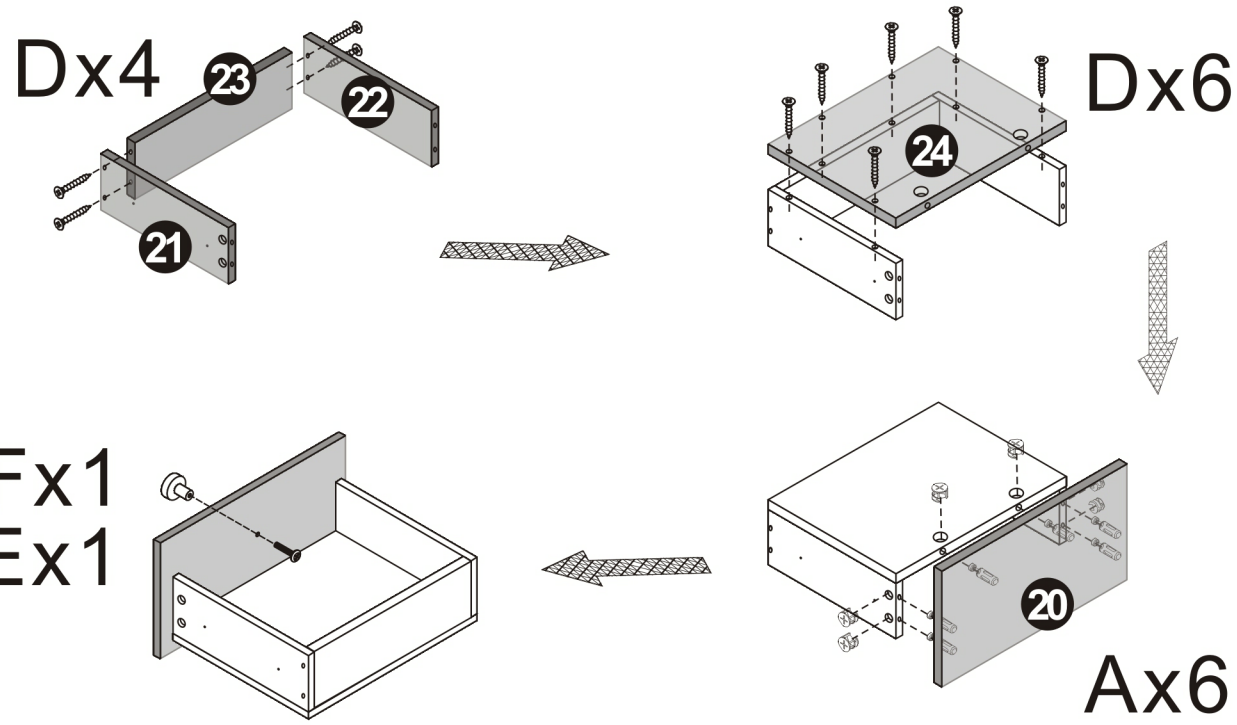

A	6PCS	D	10PCS	E	1PCS	F	1PCS
							
15*10mm		3.5*35mm		4*20		Handles	


15

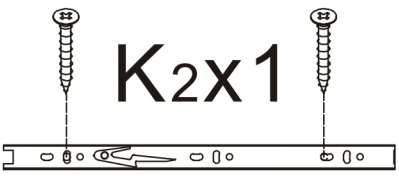


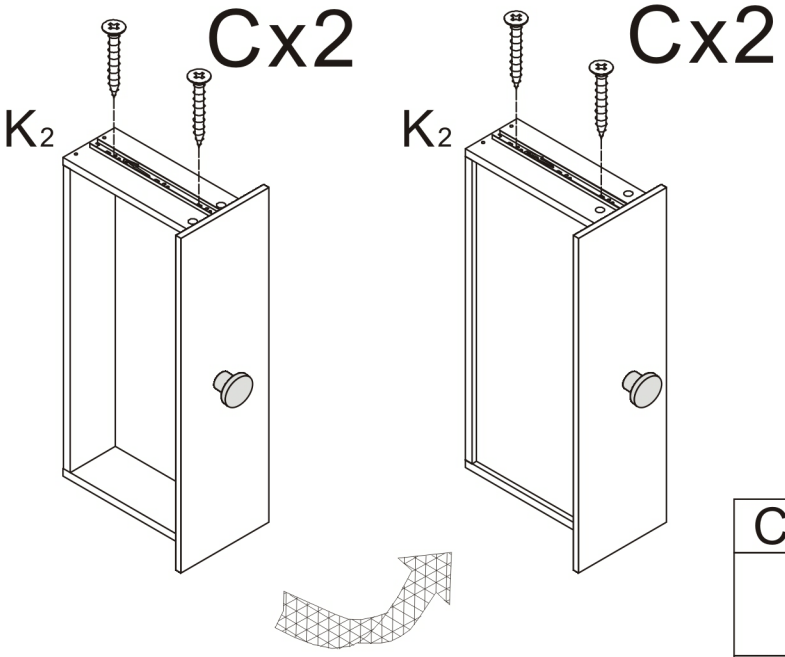

C	4PCS	K	1PCS
			
3.5*14mm		Three-section Rail	


Dx4

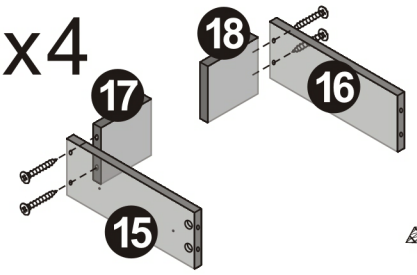


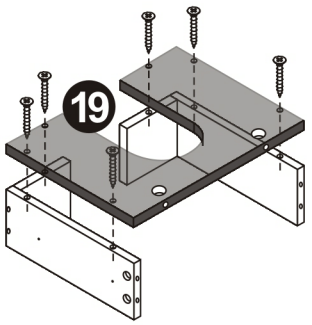


Dx6


Ex1
Fx1

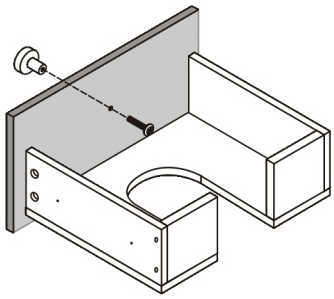

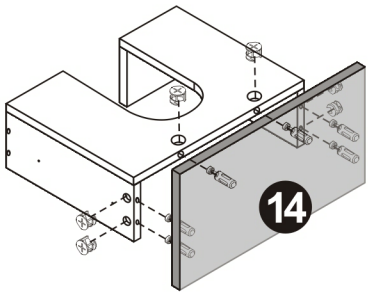



Ax6

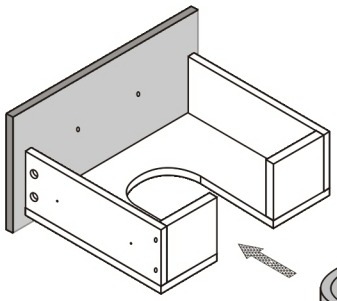

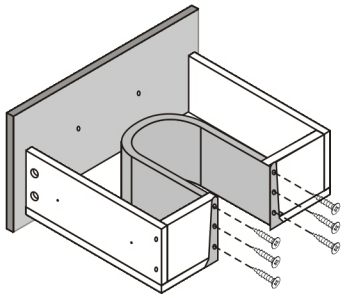


Cx6

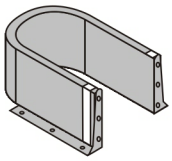

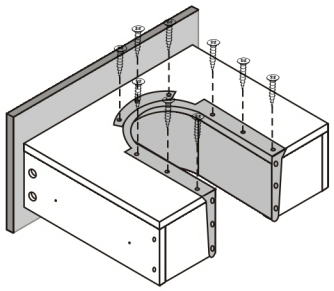


Cx9

Kx2
Cx4

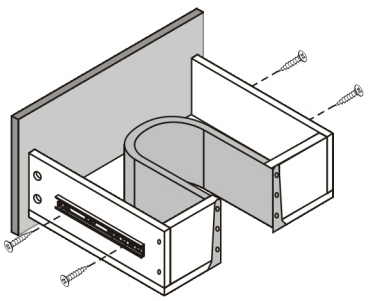

A	6PCS	C	19PCS	D	10PCS	E	1PCS	F	1PCS	K	2PCS
											
15*10mm		3.5*14mm		3.5*35mm		4*20		Handles		Three-section Rail	

17

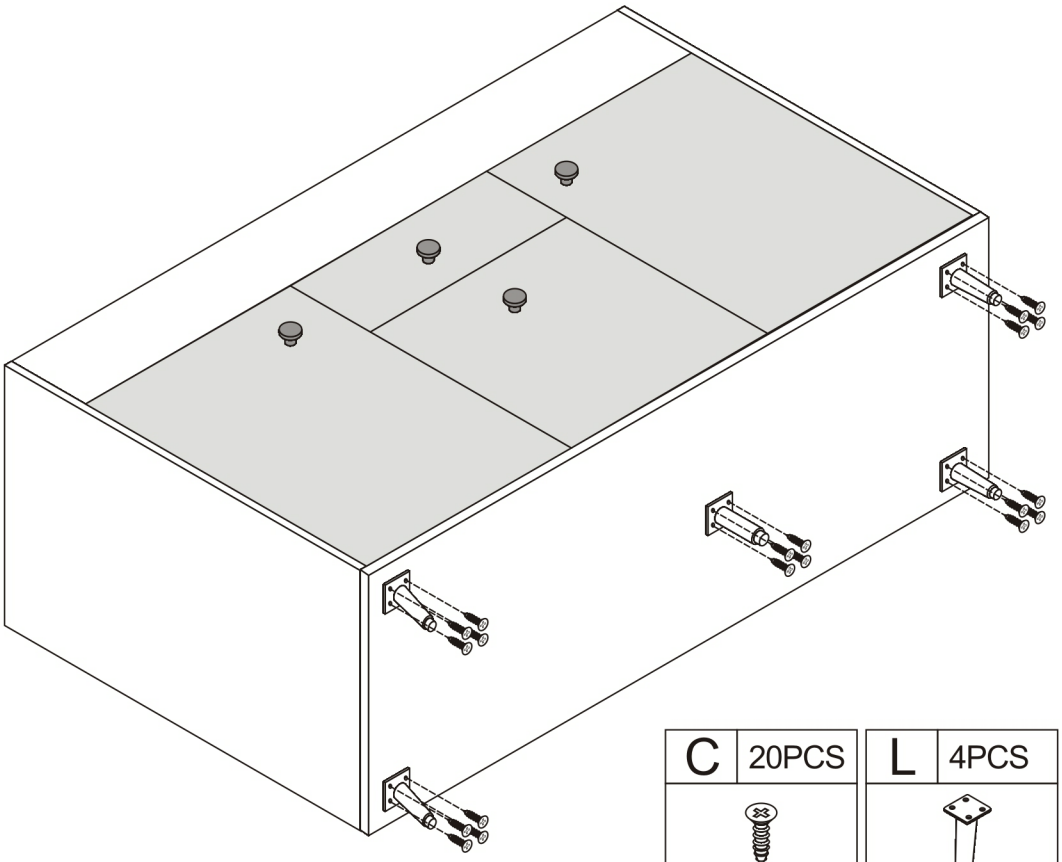


Cx20
Lx4
Mx1

C	20PCS
3.5*14mm	

L	4PCS
Hardware Feet	

M	1PCS
	
Hardware Feet	


18

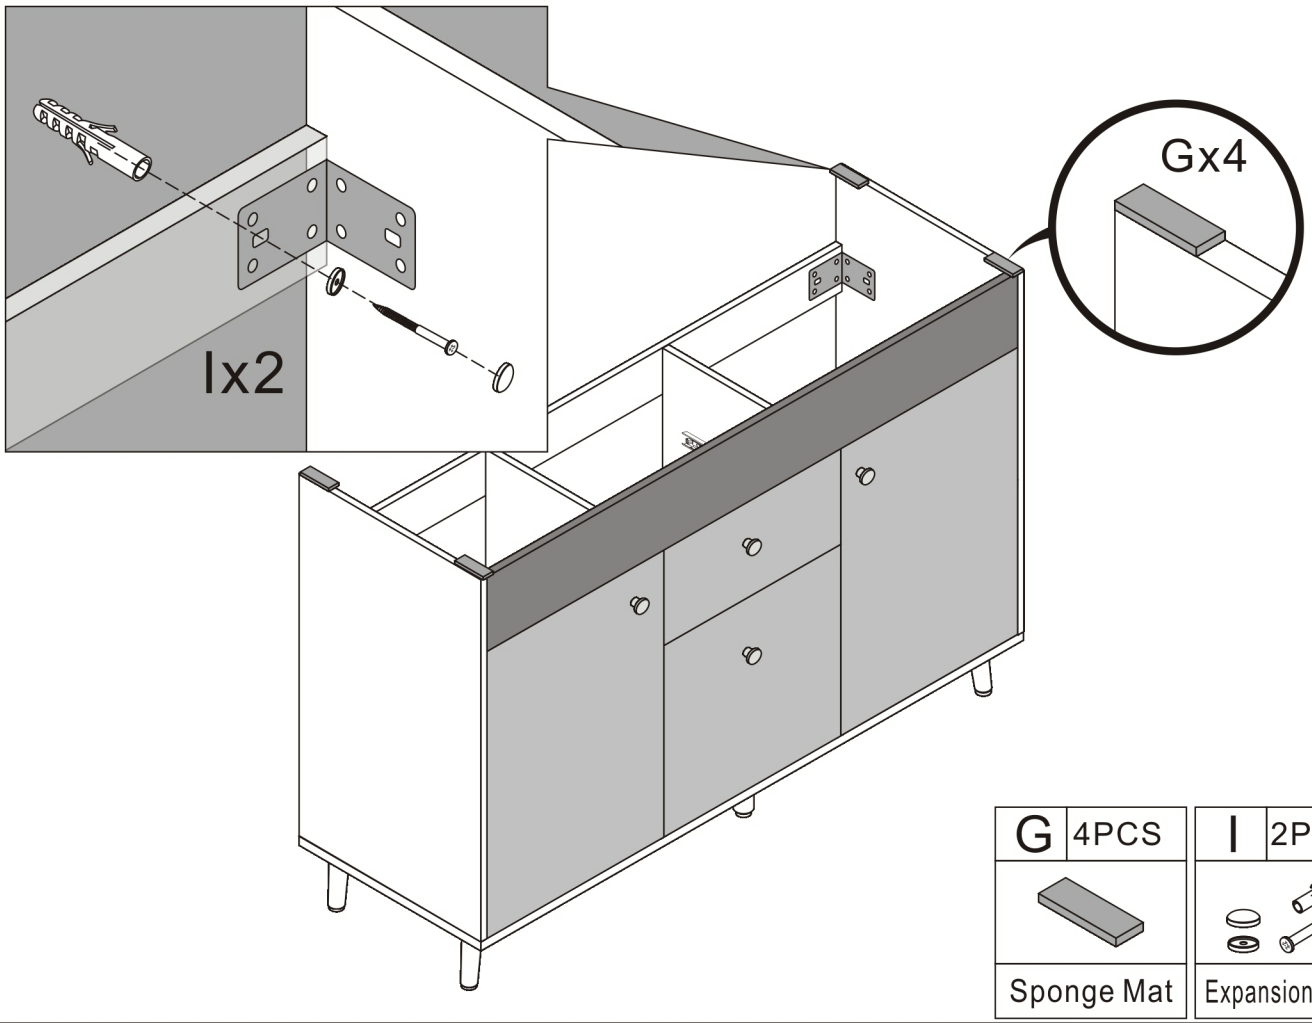


G	4PCS
Sponge Mat	

I	2PCS
Expansion screw	

19

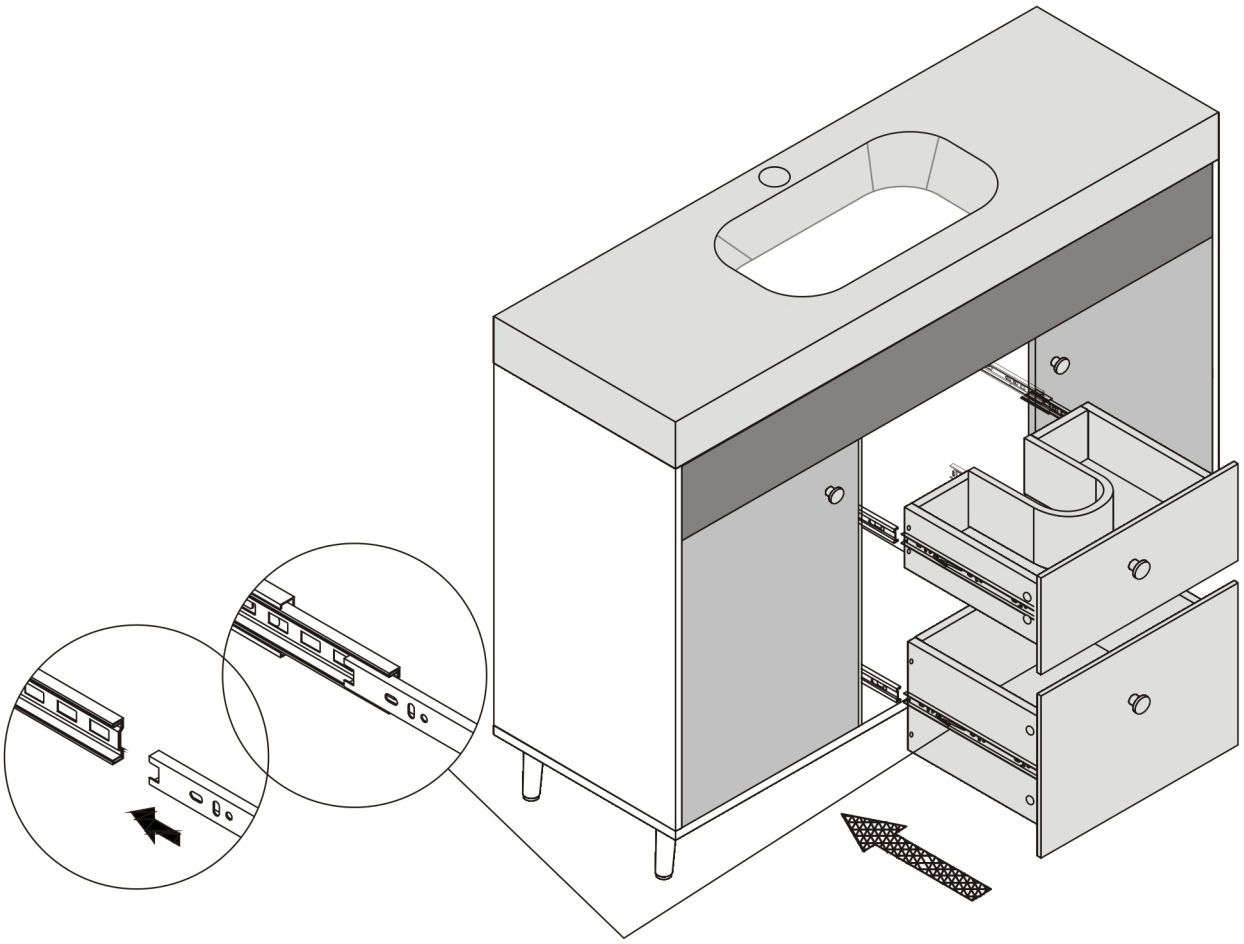

20

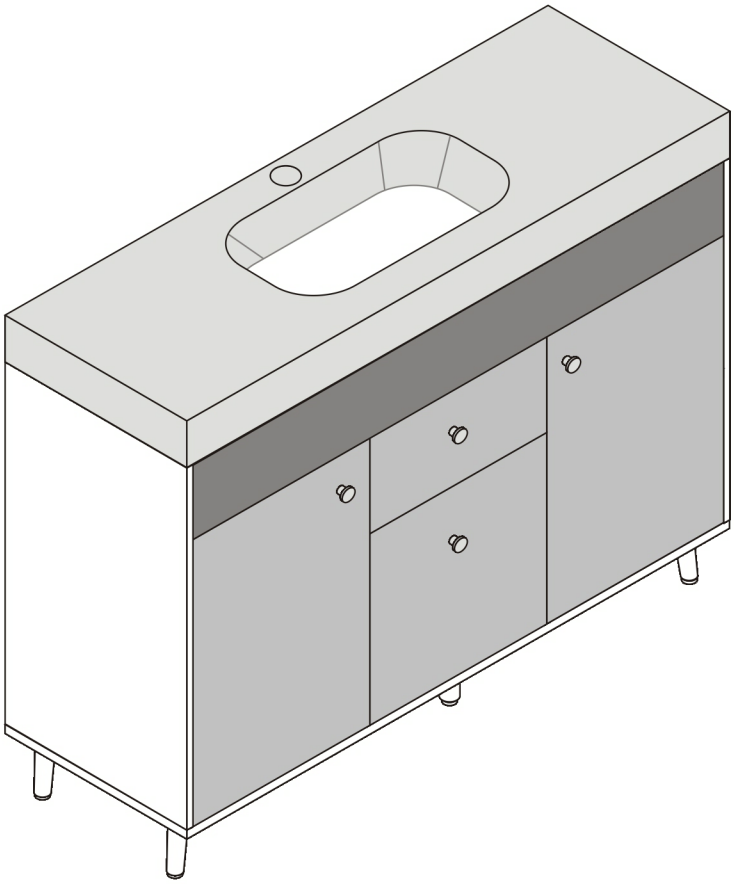

OK