

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#	11463	14947	151199
	161785	192429	

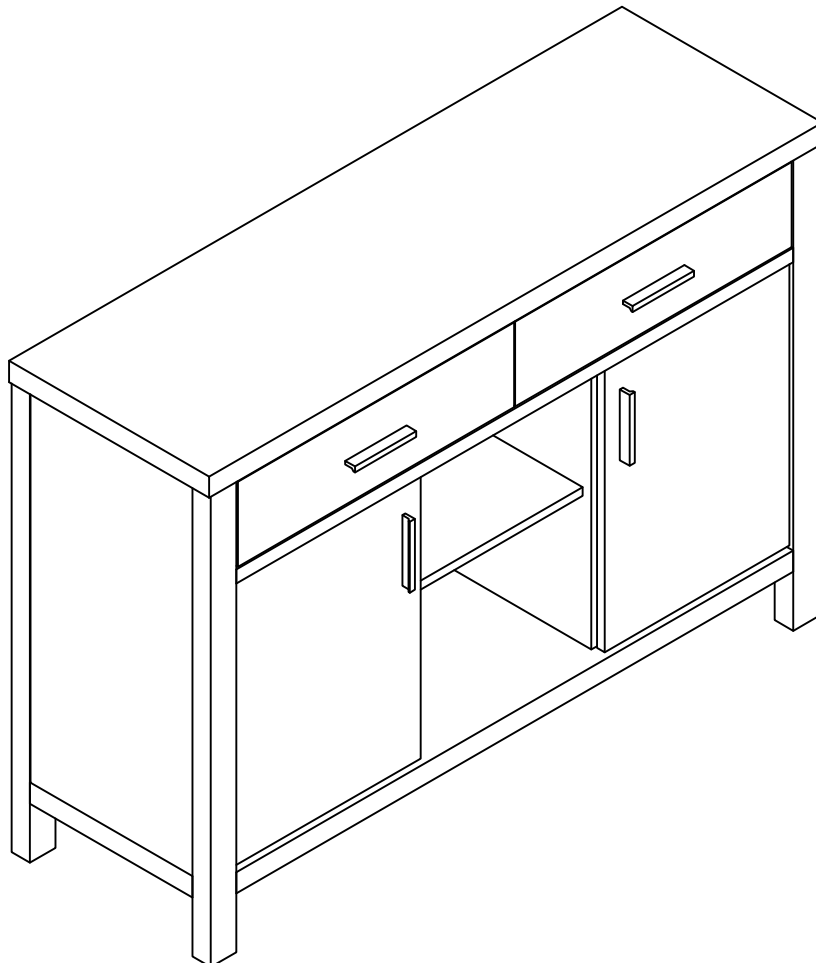

PARTS IDENTIFICATION









ITEM#:11463 151199 161785

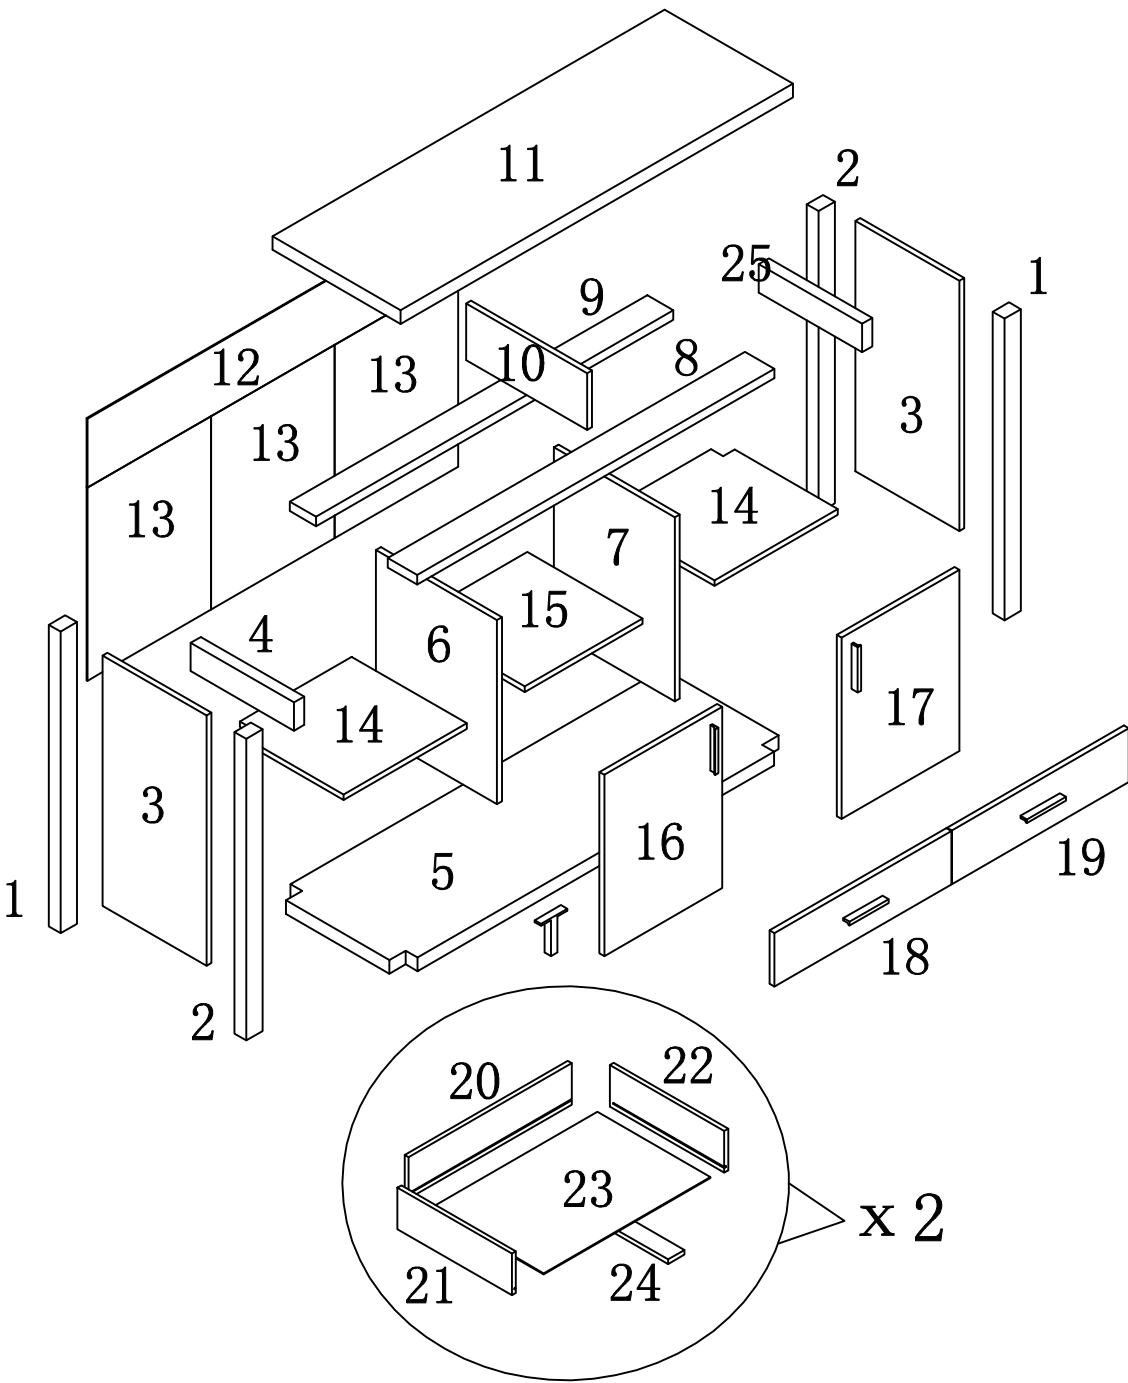

(1)	2pcs	(8)	1pc	(15)	1pc	(22)	2pcs
(2)	2pcs	(9)	1pc	(16)	1pc	(23)	2pcs
(3)	2pcs	(10)	1pc	(17)	1pc	(24)	2pcs
(4)	1pc	(11)	1pc	(18)	1pc	(25)	1pc
(5)	1pc	(12)	1pc	(19)	1pc		
(6)	1pc	(13)	3pcs	(20)	2pcs		
(7)	1pc	(14)	2pcs	(21)	2pcs		






HARDWARE IDENTIFICATION

ITEM#: 11463 151199 161785


A		L29	22pcs	
B		Φ 15	22pcs	
C		Φ 8 x 25	19pcs	
D		Φ 18	8pcs	
E		Φ 4 x 30	20pcs	
F		Φ 4 x 50	8pcs	
G		80 x 25 x 102H	1pc	
H		Φ 4 x 16	2pcs	
I		Z1016	54pcs	
J		Φ 4 x 25	4pcs	
K		L20	8pcs	
L		Φ 10	8pcs	
M		Φ 6 x 30	4pcs	
N		96MM	4pcs	
O		Φ 4 x 22	8pcs	
P		Φ 5	12pcs	
Q		Φ 8	2sets	
R			2sets	
S		Φ 3 x 16	4pcs	
T		Φ 3 x 14	4pcs	
U		Φ 16	5pcs	
V		197×5×1	1pc	
W		Ø4×25	1pc	
X		Ø5×40	1pc	
Y		Ø8×40	1pc	
Z		12×12×1	2pcs	
A1		Glue: For securing please apply to wood dowel first before inserting into panel		1pc

ASSEMBLY INSTRUCTION


ITEM#:11463 151199 161785

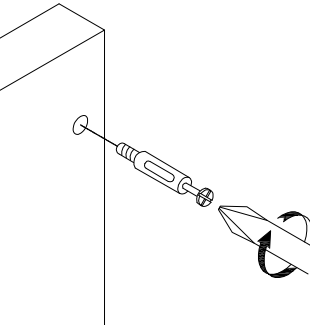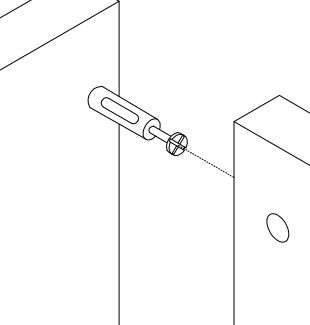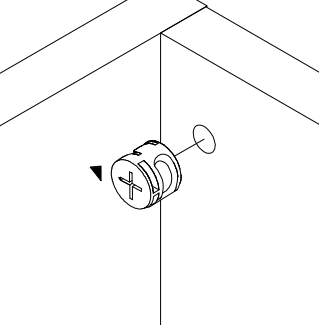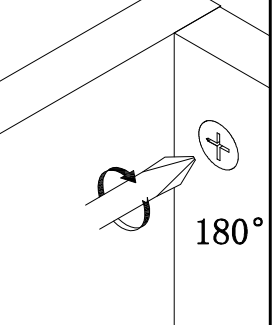HOW TO	1	2	3	4
 Cam Bolt  Cam Lock	 1. Screw Cam Bolt into panel.	 2. Insert Cam Bolt into bolt hole of joining panel.	 3. Insert Cam Lock. arrow facing bolt.	 4. Gently turn Cam Lock clockwise to lock position.

STEP1

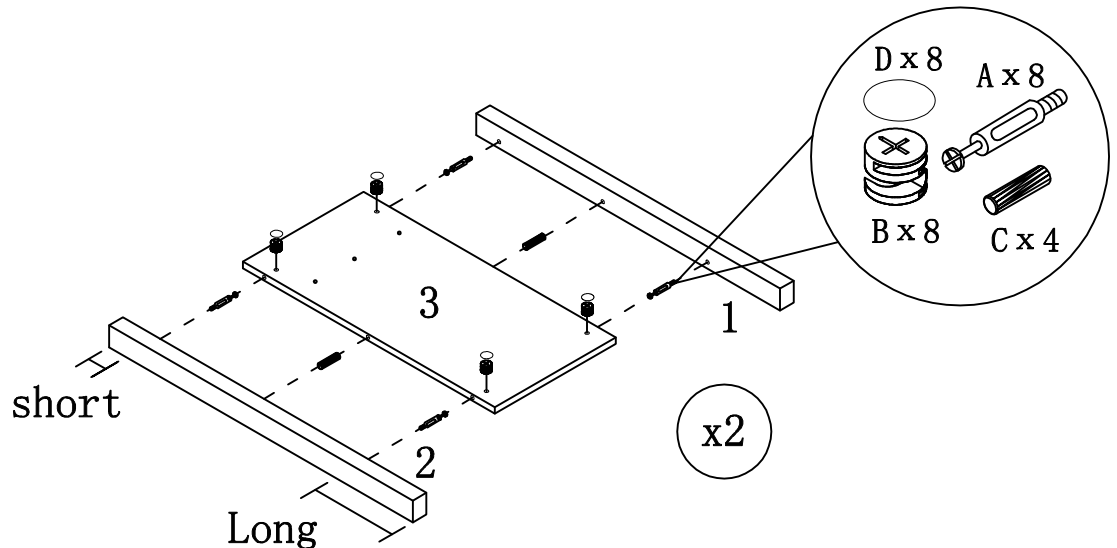


STEP2

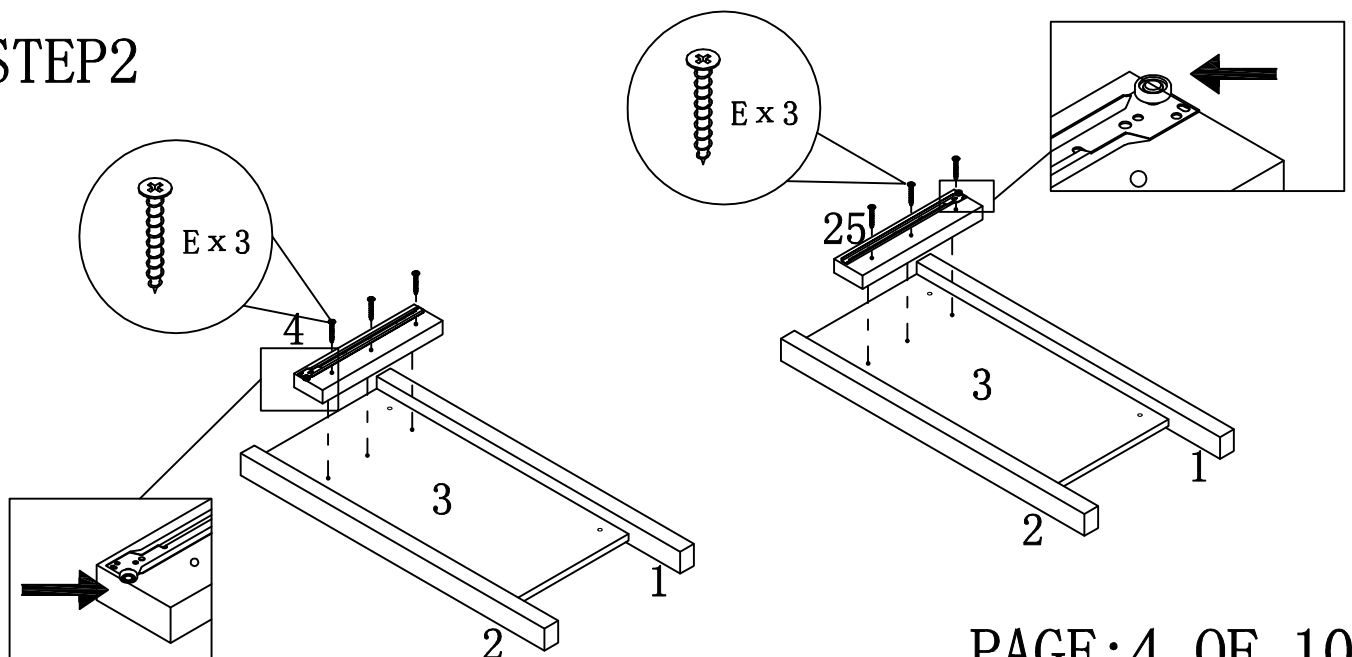


ASSEMBLY INSTRUCTION

ITEM#:11463 151199 161785

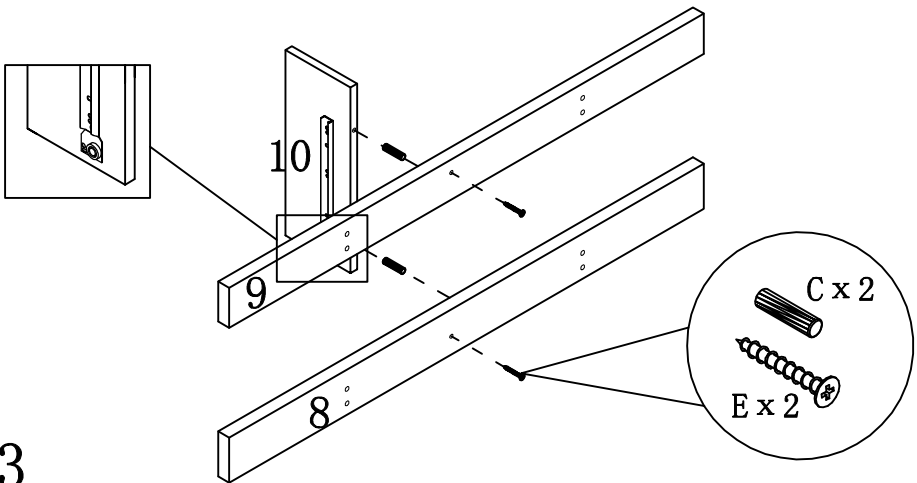


STEP3

STEP4

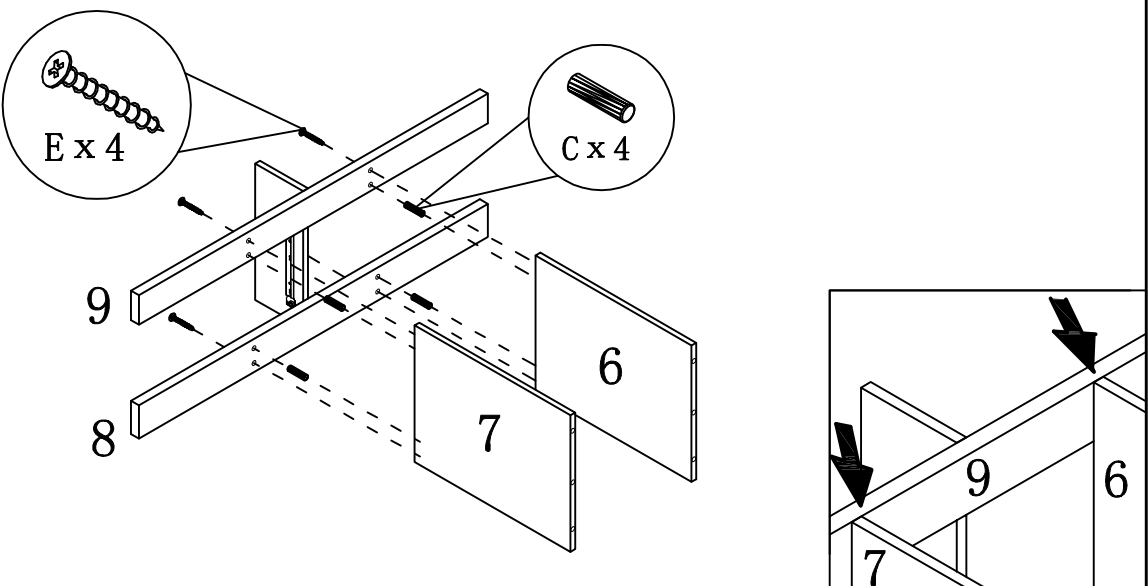


STEP5

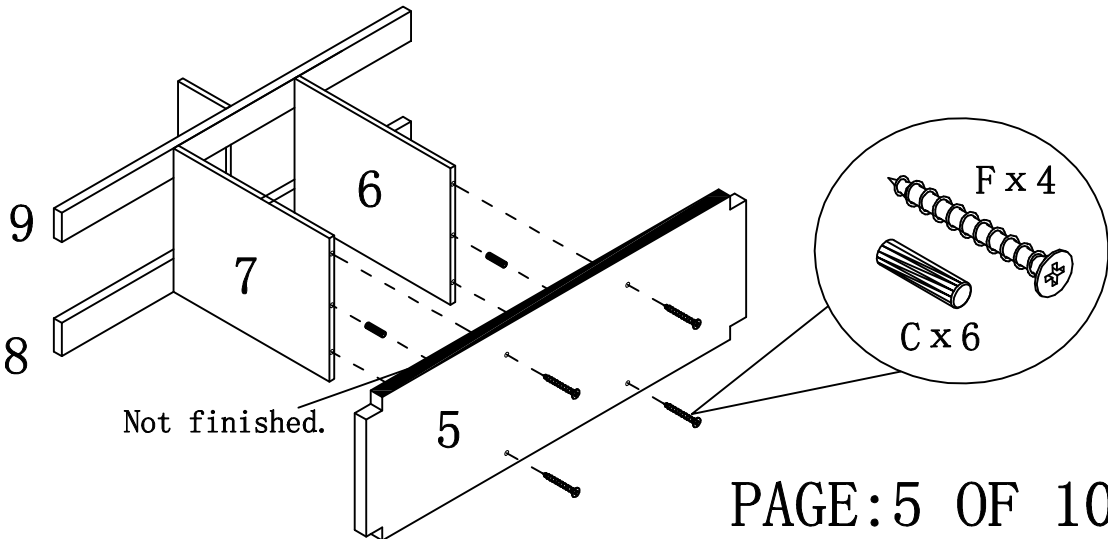


ASSEMBLY INSTRUCTION

ITEM#:11463 151199 161785

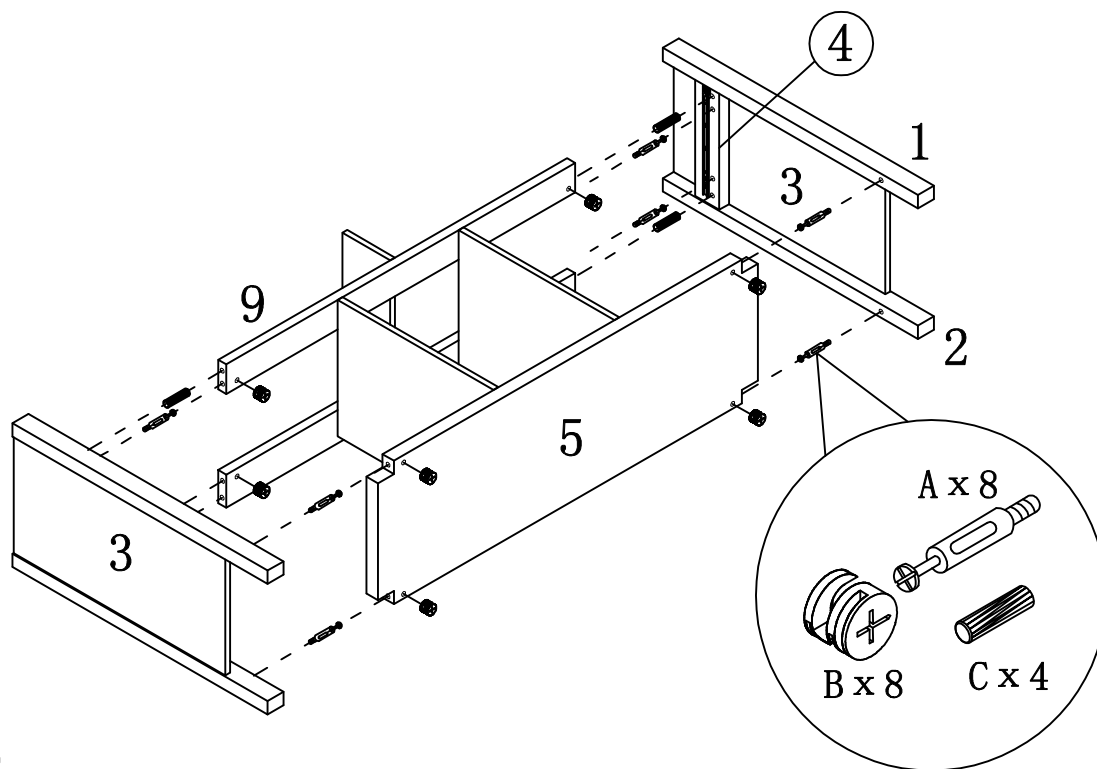

STEP6


STEP7

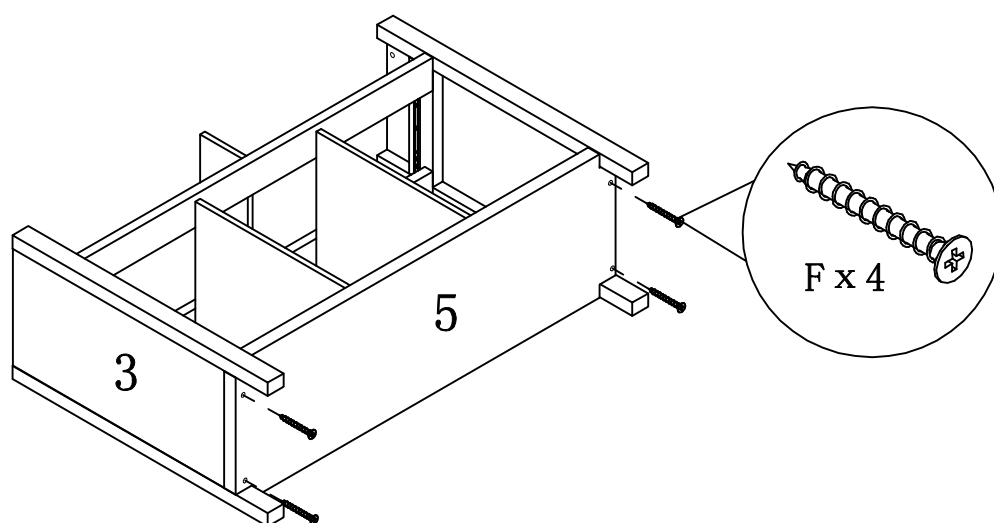

ASSEMBLY INSTRUCTION


ITEM#:11463 151199 161785

Not finished.

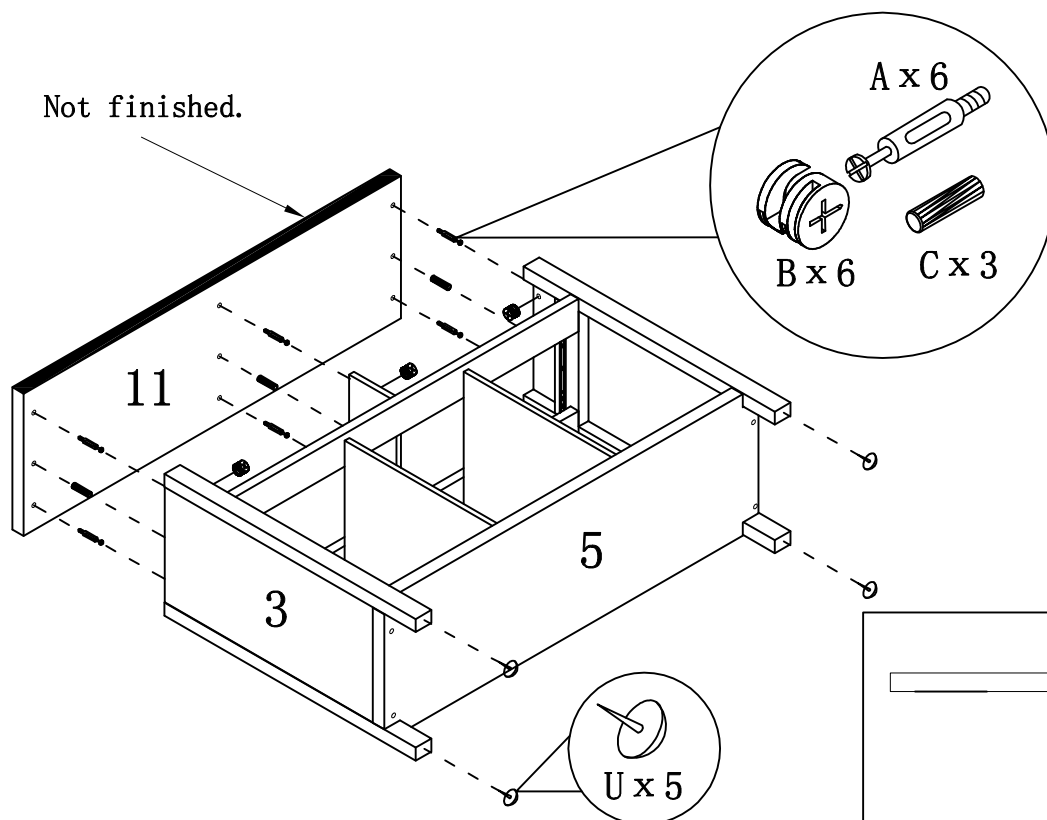


STEP8

STEP9

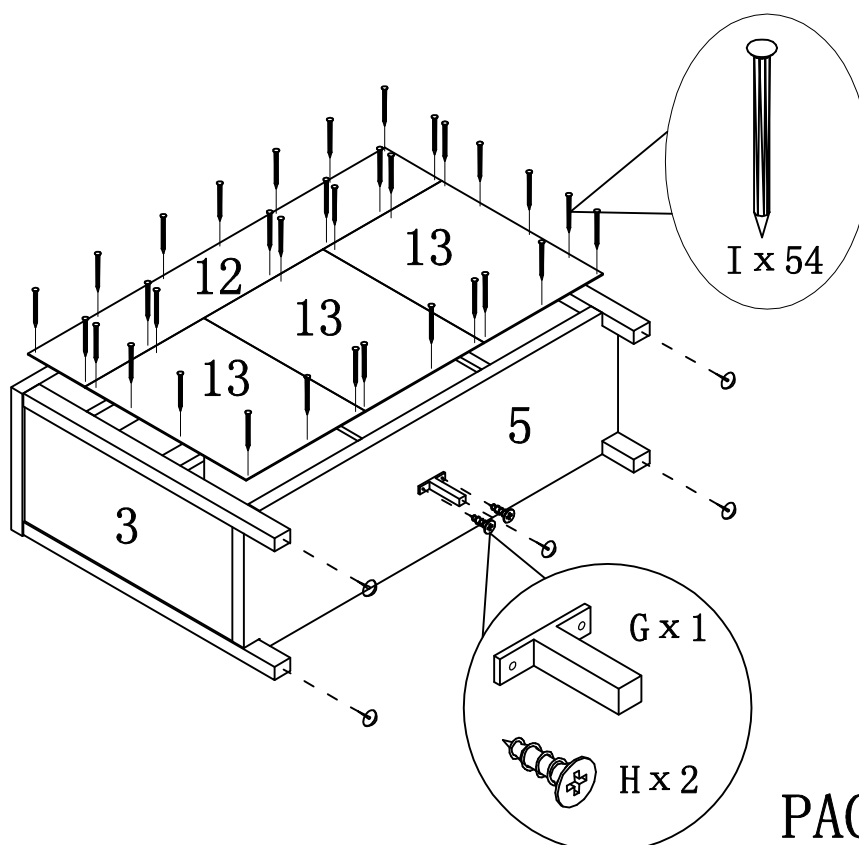


ASSEMBLY INSTRUCTION

ITEM#: 11463 151199 161785

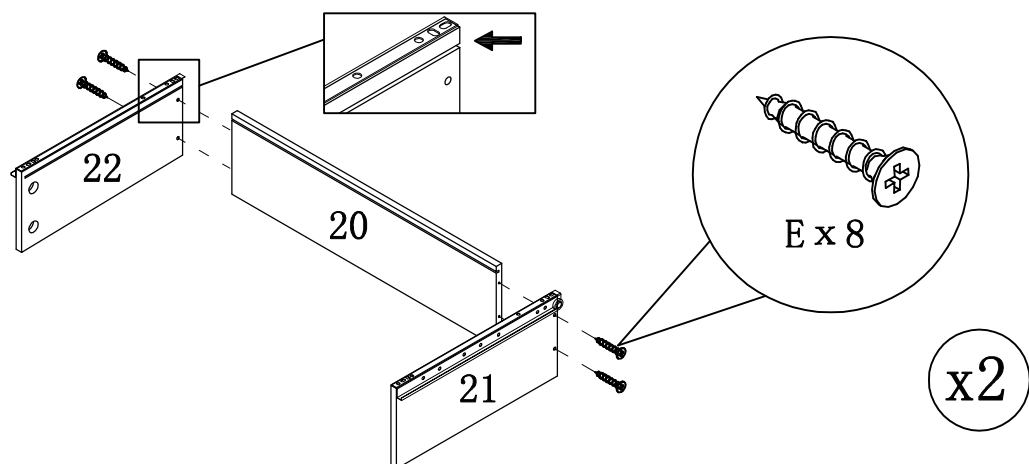


STEP10

STEP11

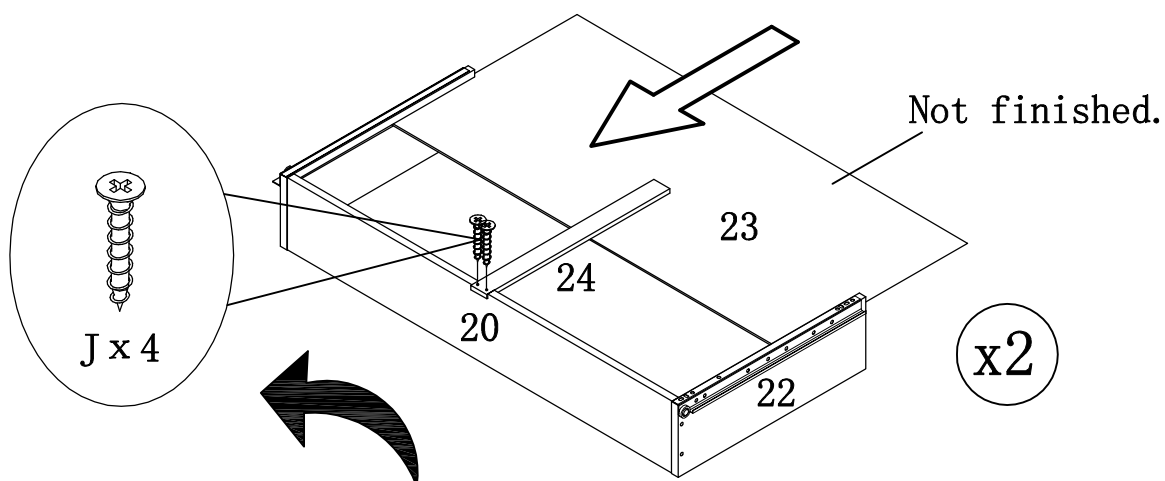


STEP12

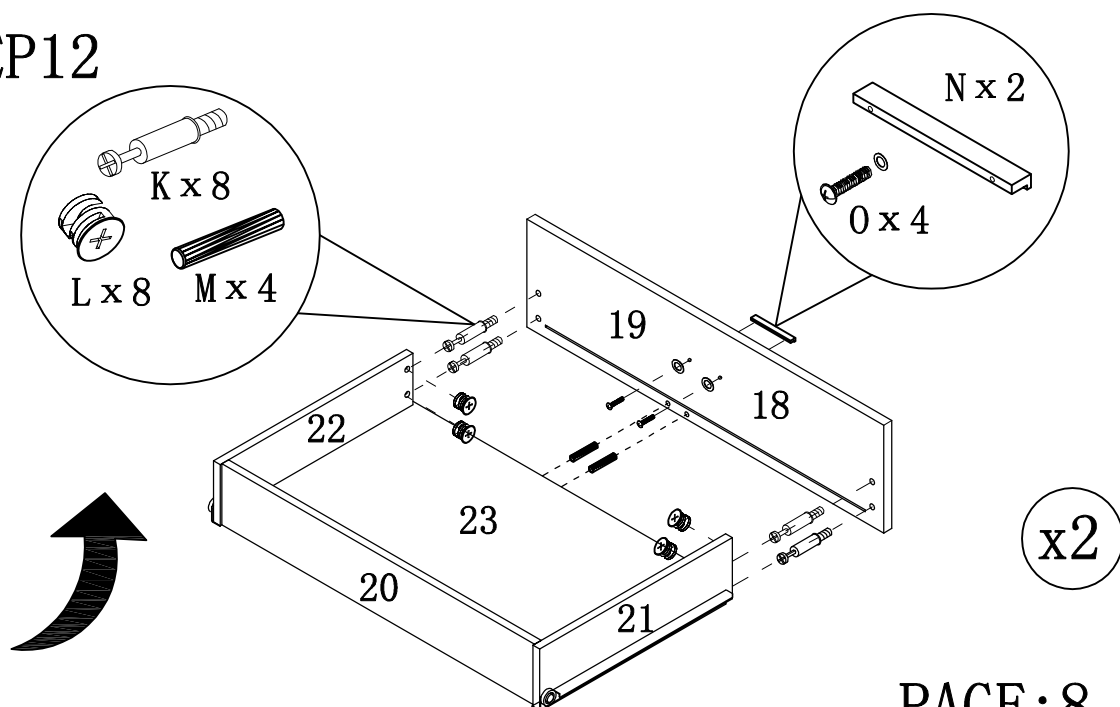


ASSEMBLY INSTRUCTION


ITEM#: 11463 151199 161785

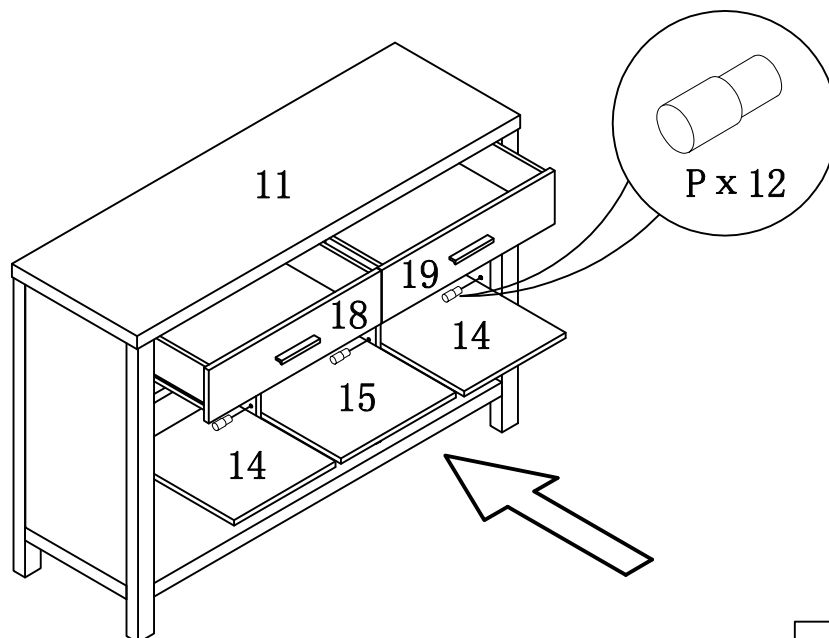

STEP13

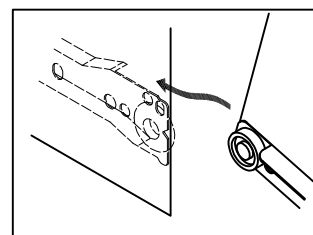


STEP14

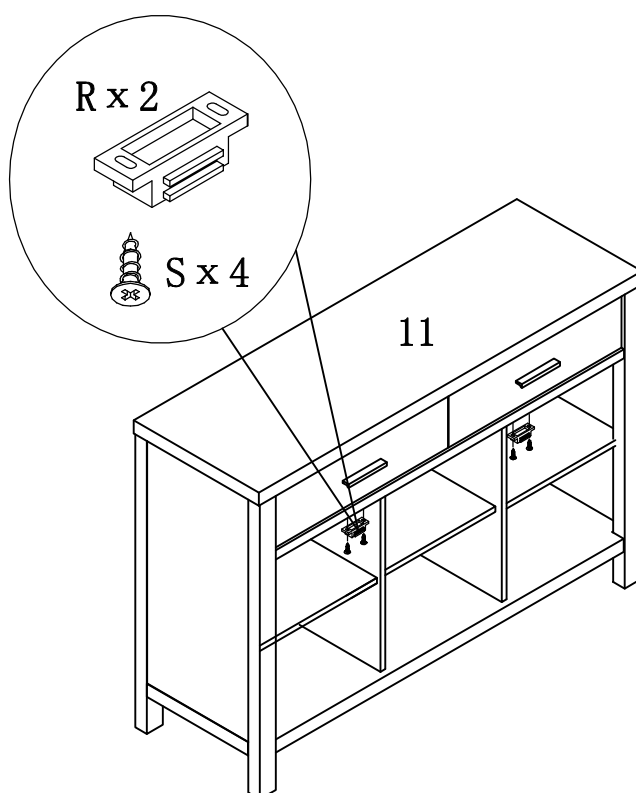


ASSEMBLY INSTRUCTION

ITEM#:11463 151199 161785

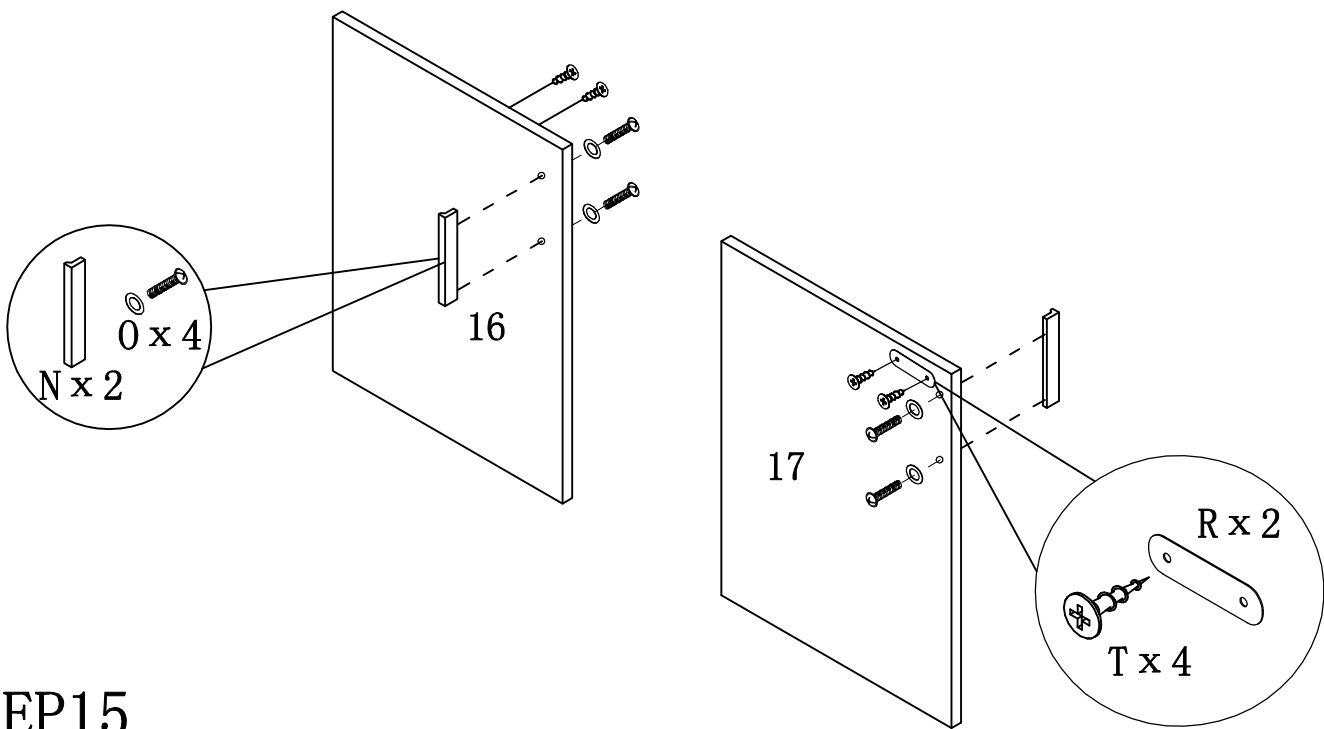


STEP15

STEP16

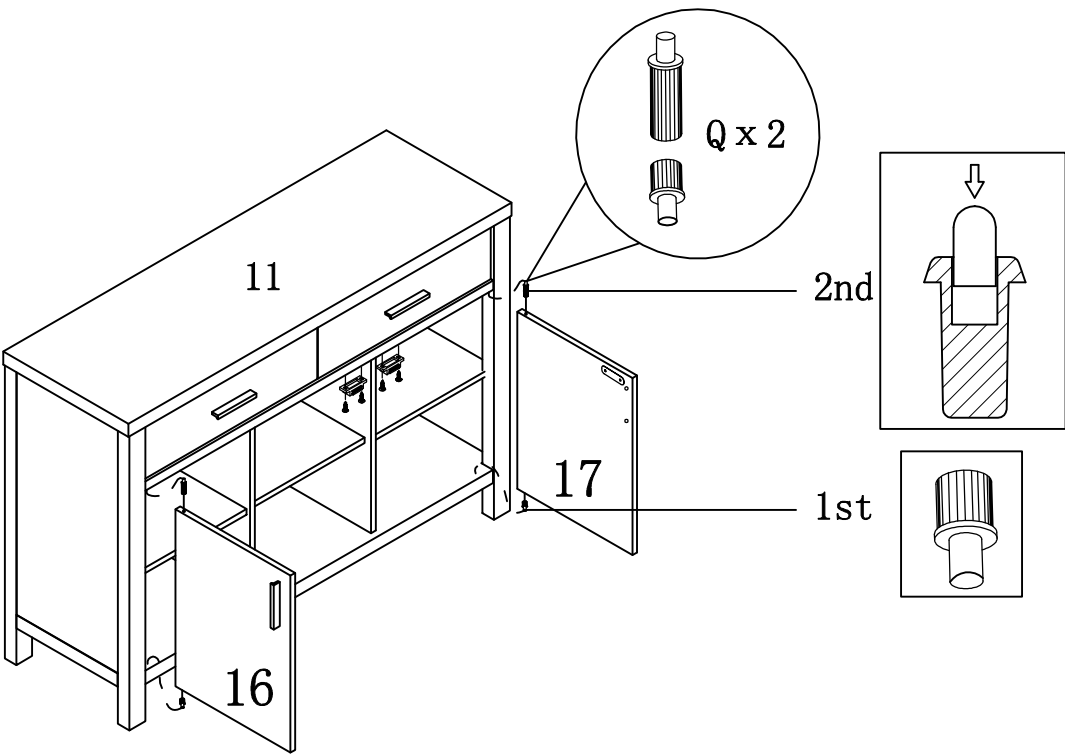


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

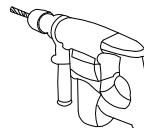


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

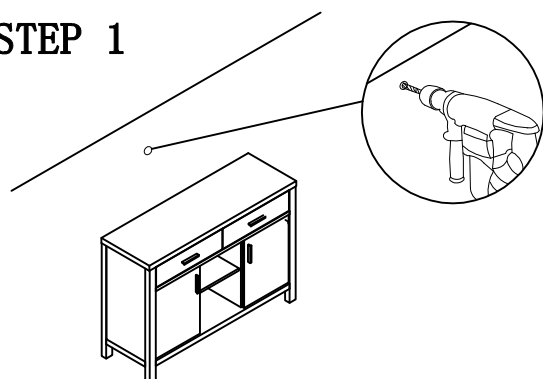


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

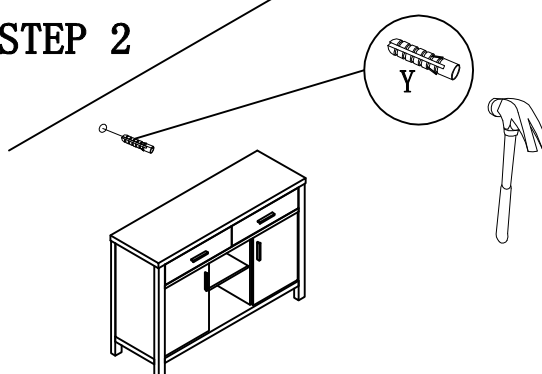


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

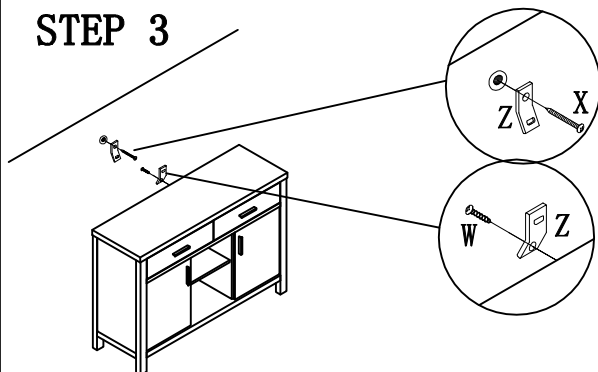

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

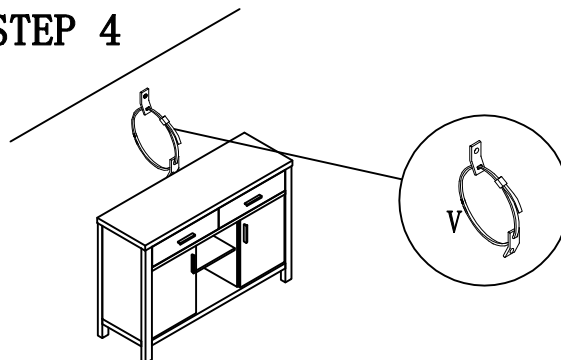

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.