




① ×1




② ×1



③ ×1

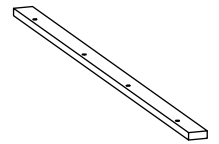

④ ×1

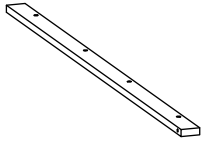


⑤ ×1




⑥ ×1




⑦ ×1




⑧ ×2




⑨ ×1




⑩ ×1




⑪ ×1

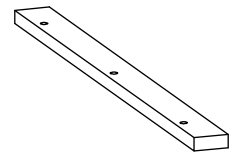


⑫ ×1

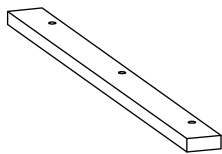

⑬ ×1

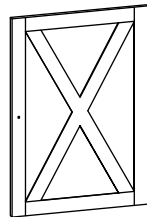


⑭ ×1



⑮ ×1



⑯ ×1

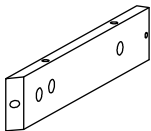

⑰ ×1




⑱ ×1

A	×34	B	×16	C	×50	D	×20	E	×8	F	×1	G	×8
Ø6×35mm		Ø6×45mm		Ø15×12mm		Ø8×30mm		Ø7×47mm		M4×45×45mm		Ø3.5×14mm	

H	×2	I	×1	J	×1	K	×1	L	×1	M	×4
4×35mm		45×12×1mm		46×16×14mm		Ø19×22mm		M4×18mm		Ø5×13mm	


N	×2	O	×2	P	×1	Q	×1	R	×2	S	×1
M6×12mm		Ø6×30mm		L40mm		L40mm		73×24×15mm			

STEP 1

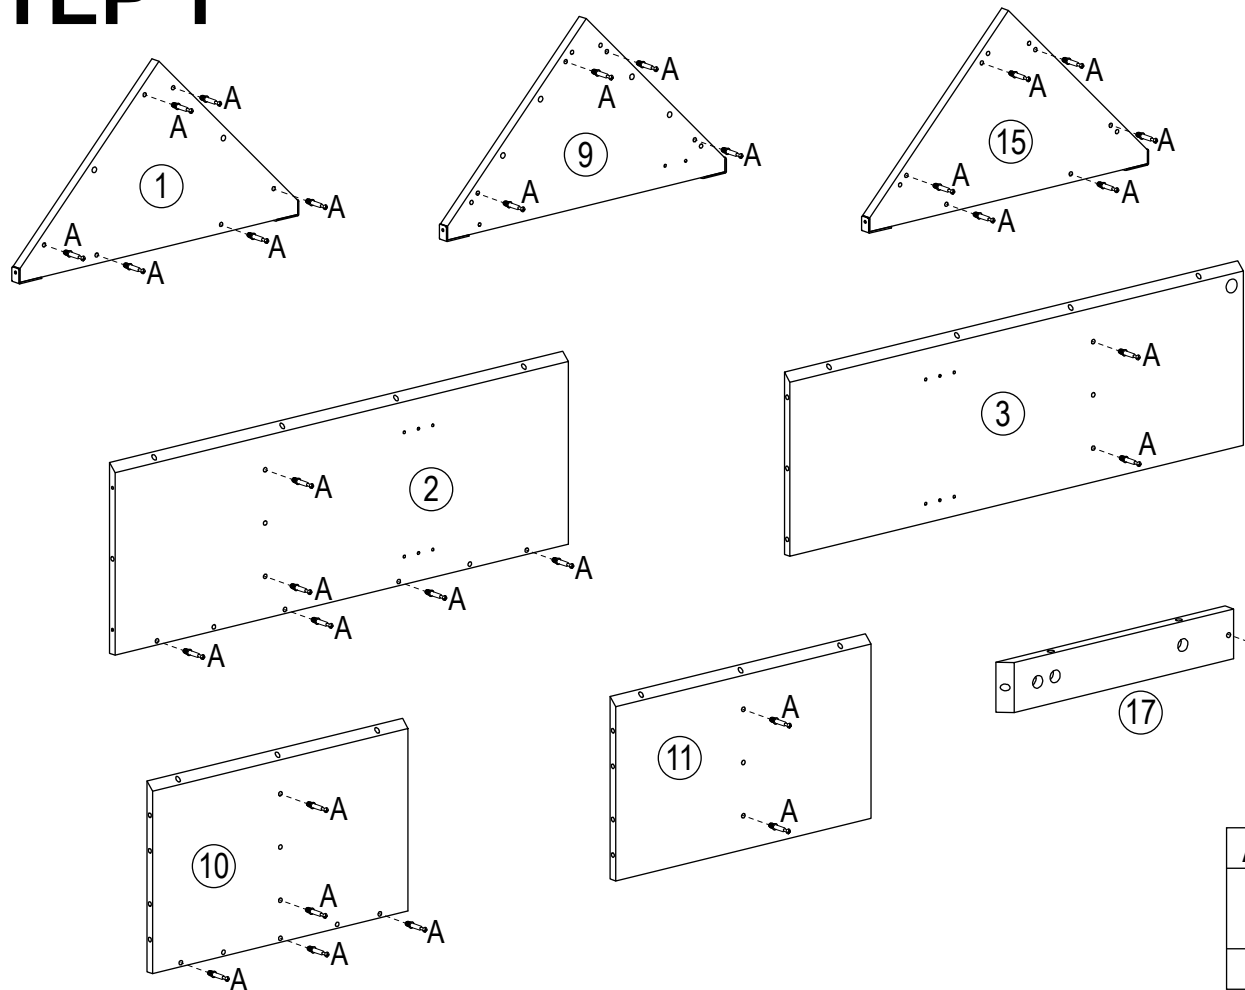


A	×32
Ø6×35mm	

STEP 2

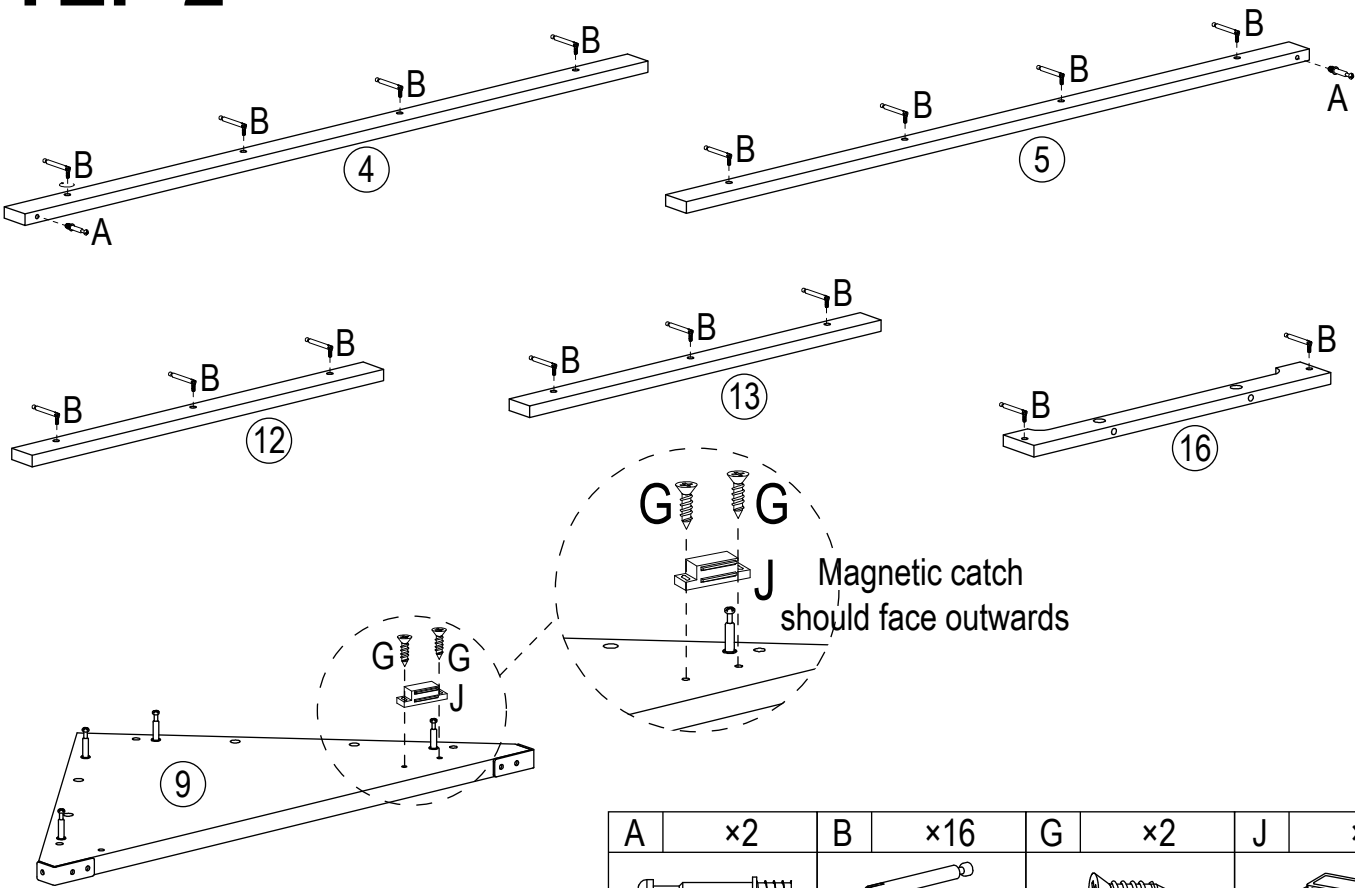



A	×2	B	×16	G	×2	J	×1
Ø6×35mm		Ø6×45mm		Ø3.5×14mm		46×16×14mm	

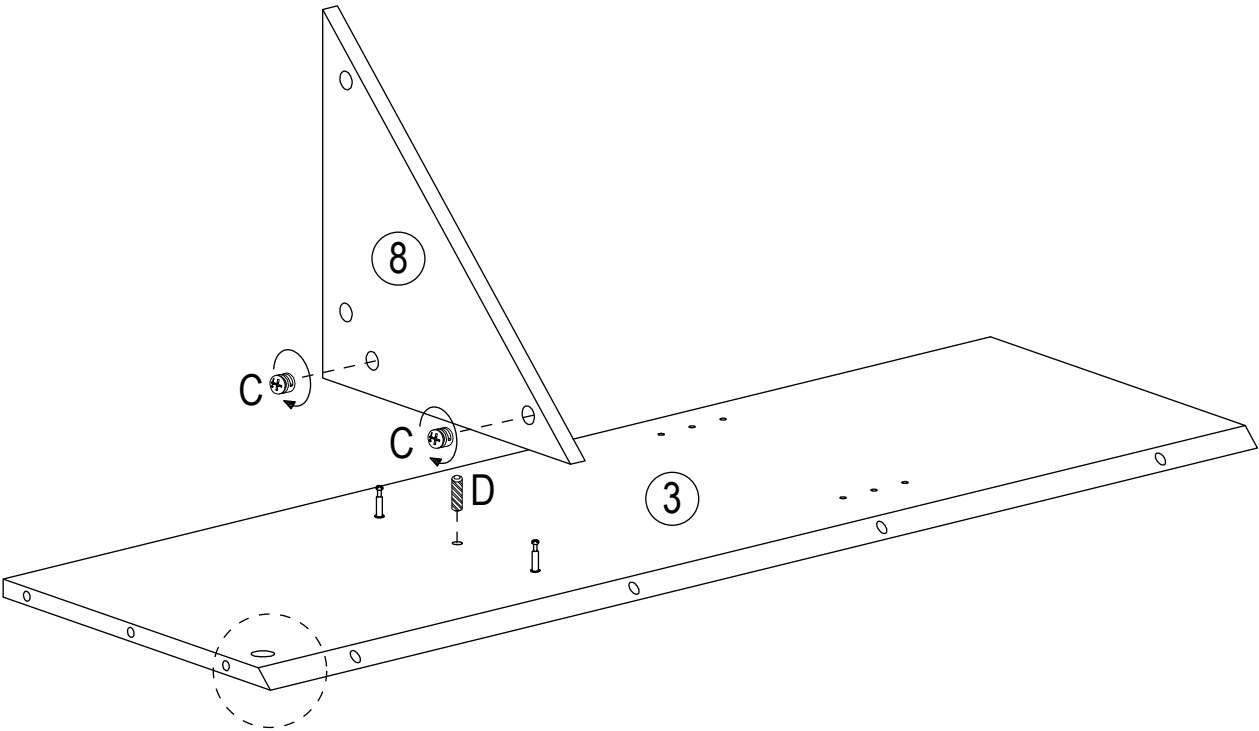
STEP 3





Note: The beveled edge faces out during installation.

C	x2	D	x1
			
Ø15×12mm		Ø8×30mm	

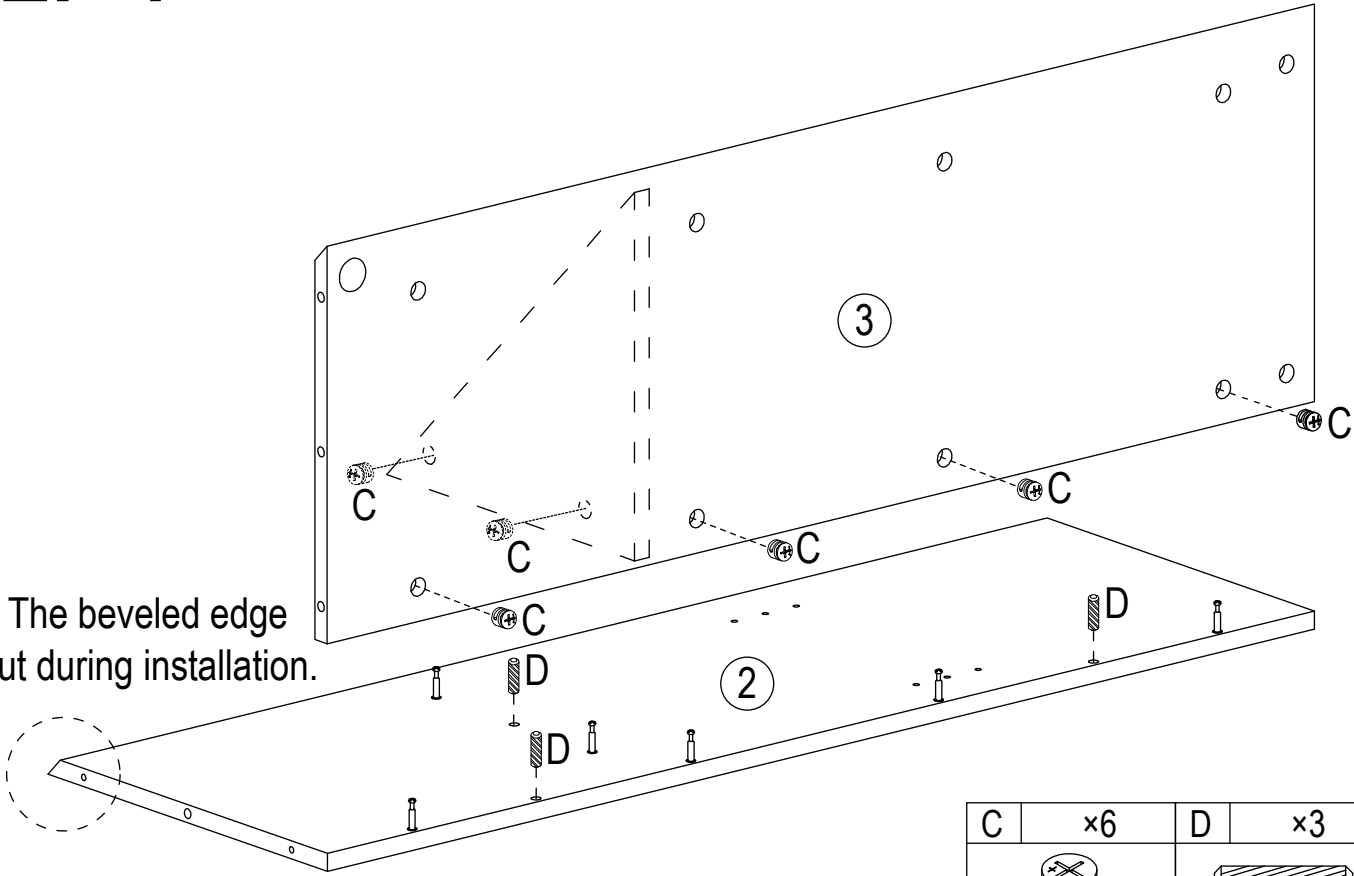
STEP 4





Note: The beveled edge faces out during installation.

C	x6	D	x3
			
Ø15×12mm		Ø8×30mm	

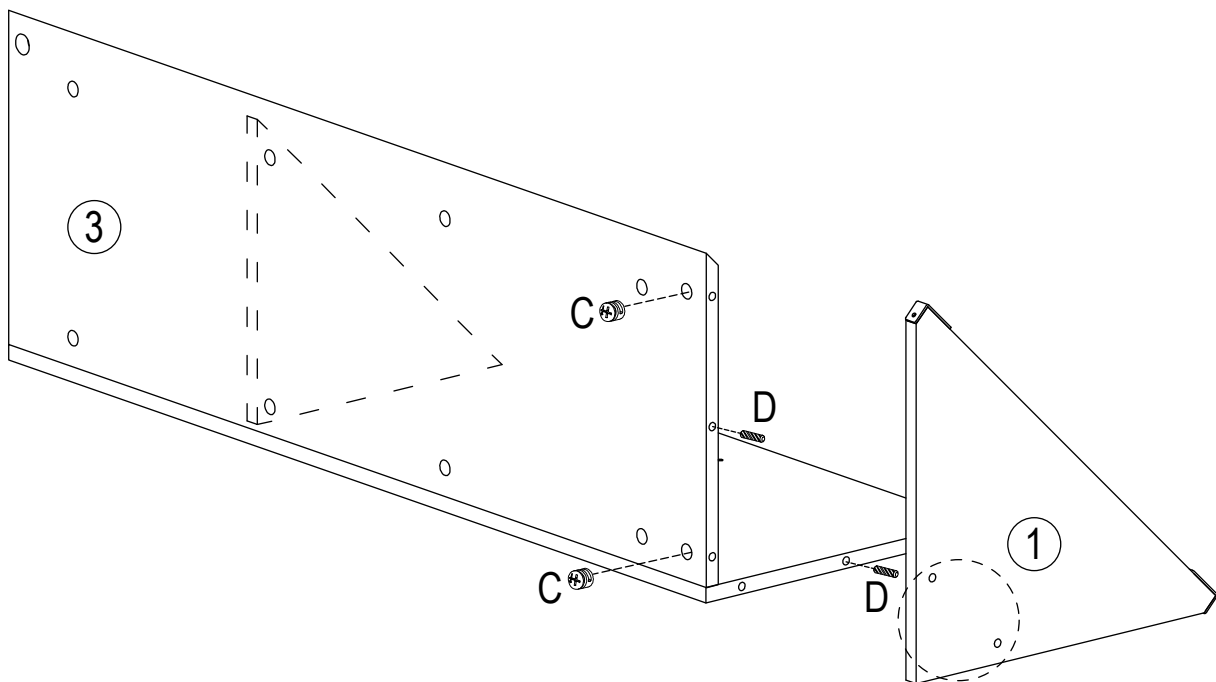
STEP 5




Note: The holes facing up during installation.

C	×2	D	×2
			
Ø15×12mm		Ø8×30mm	


STEP 6

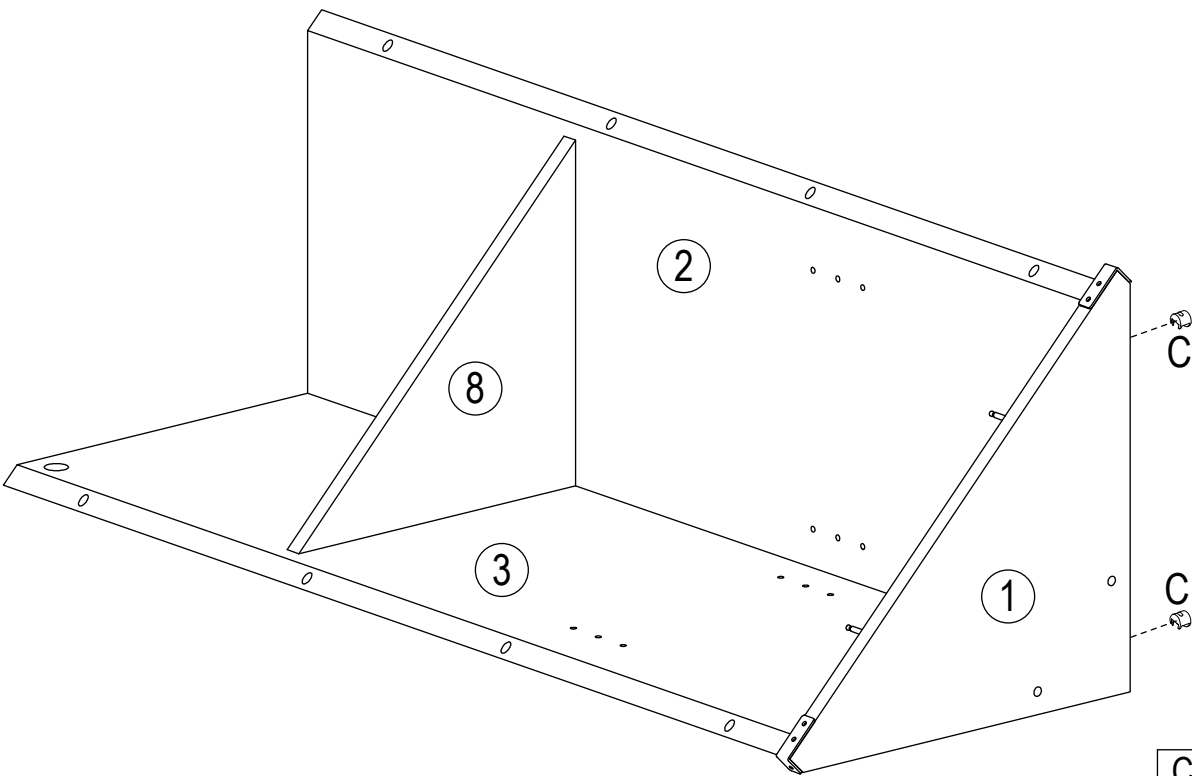



C	×2
	
Ø15×12mm	


STEP 7

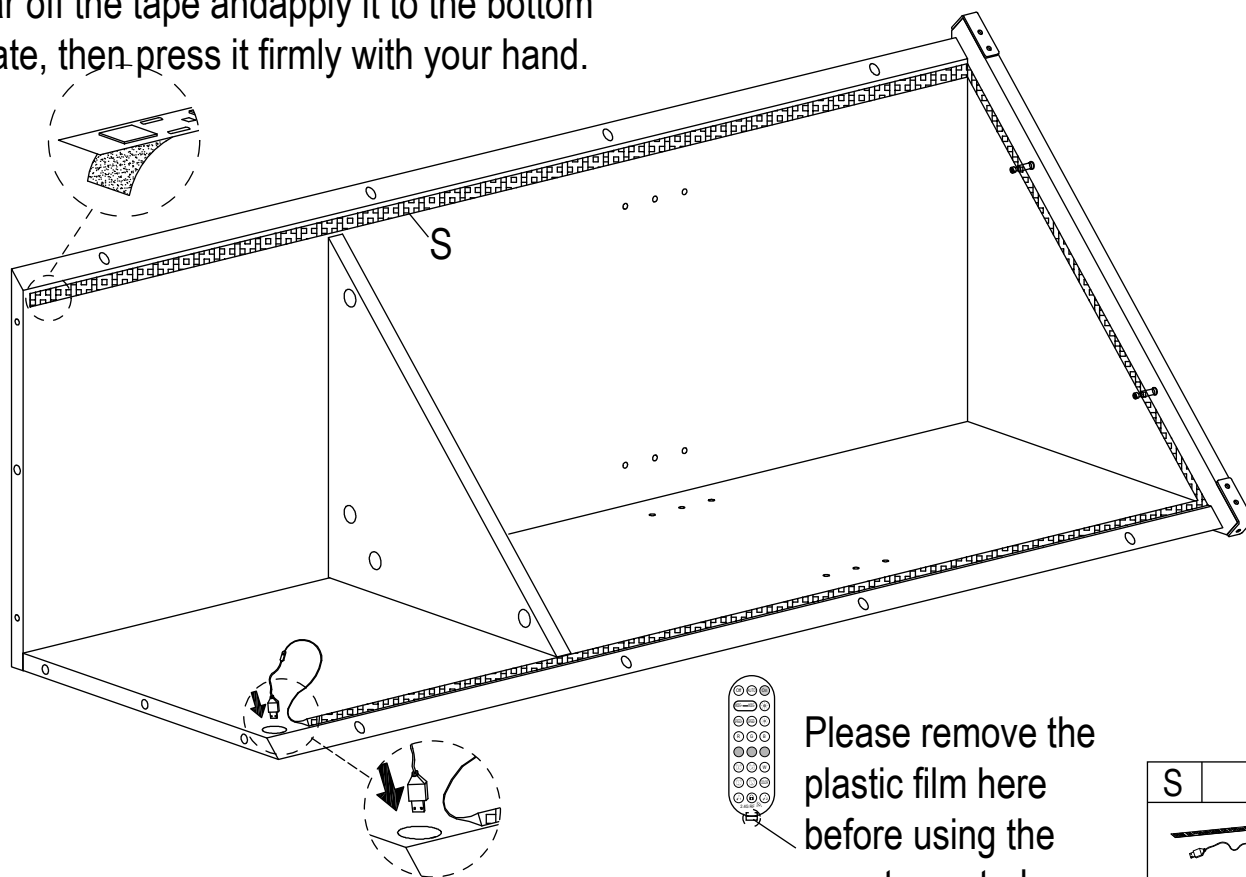Tear off the tape and apply it to the bottom plate, then press it firmly with your hand.




S	x1
	
Ø8×30mm	


STEP 8

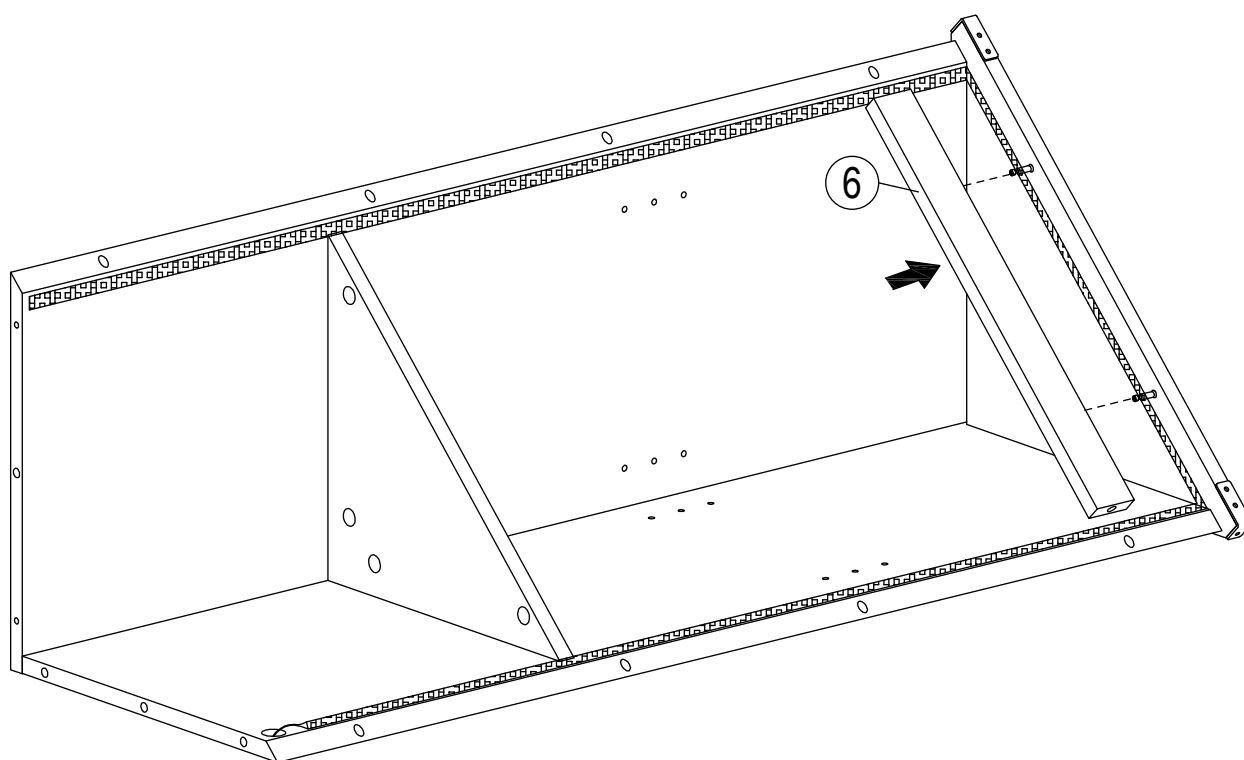

STEP 9

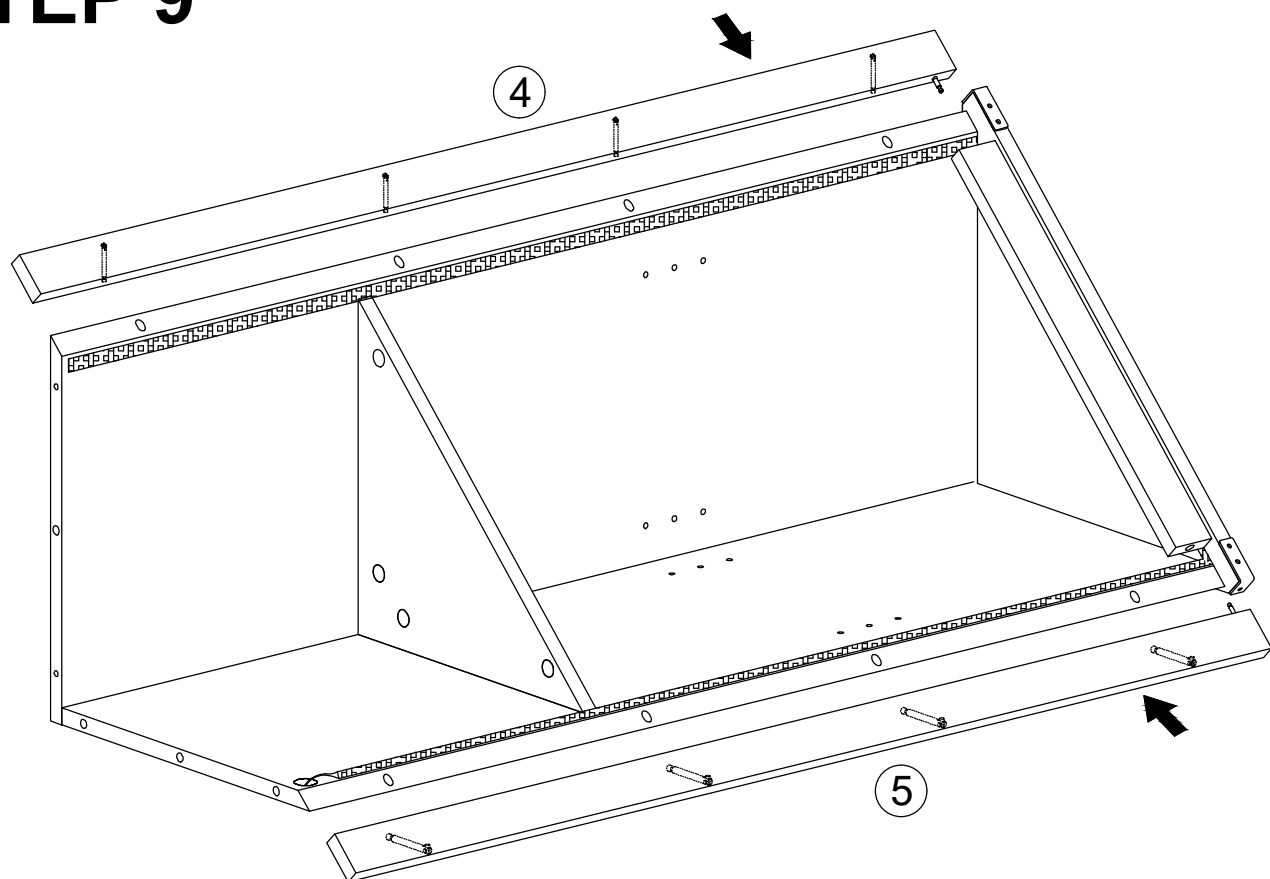


STEP 10

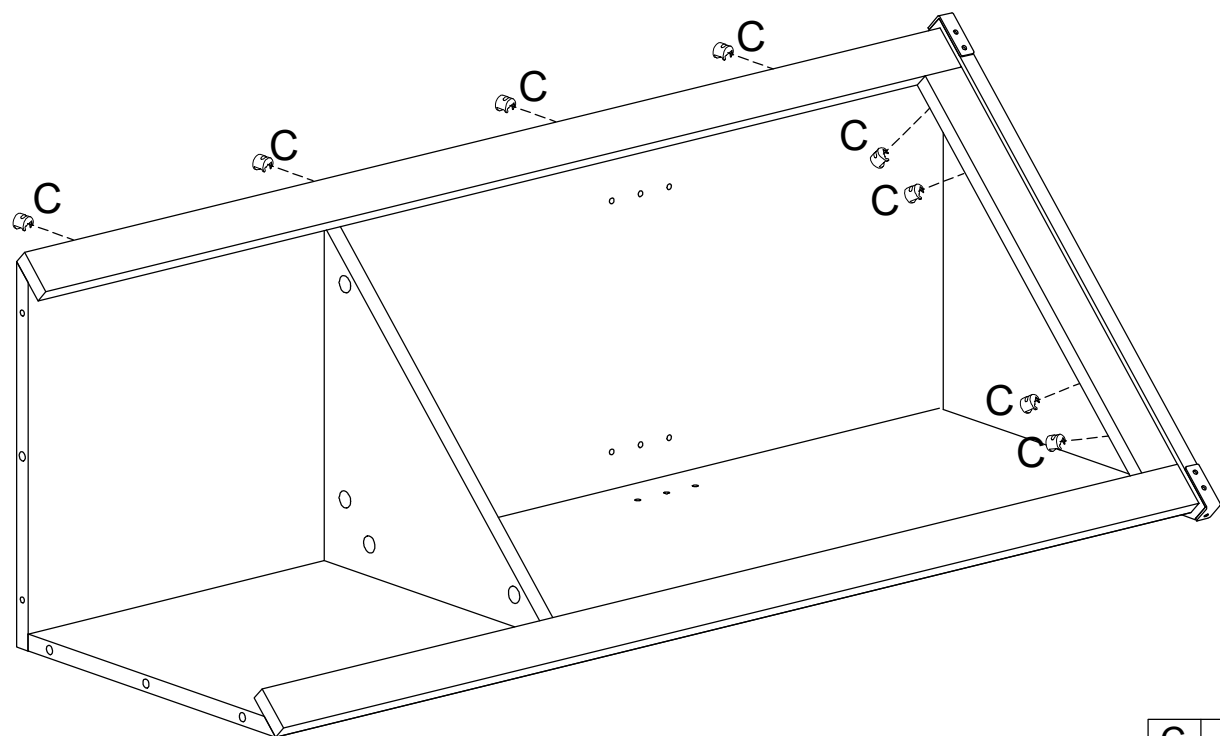

C	x8
Ø15×12mm	


STEP 11

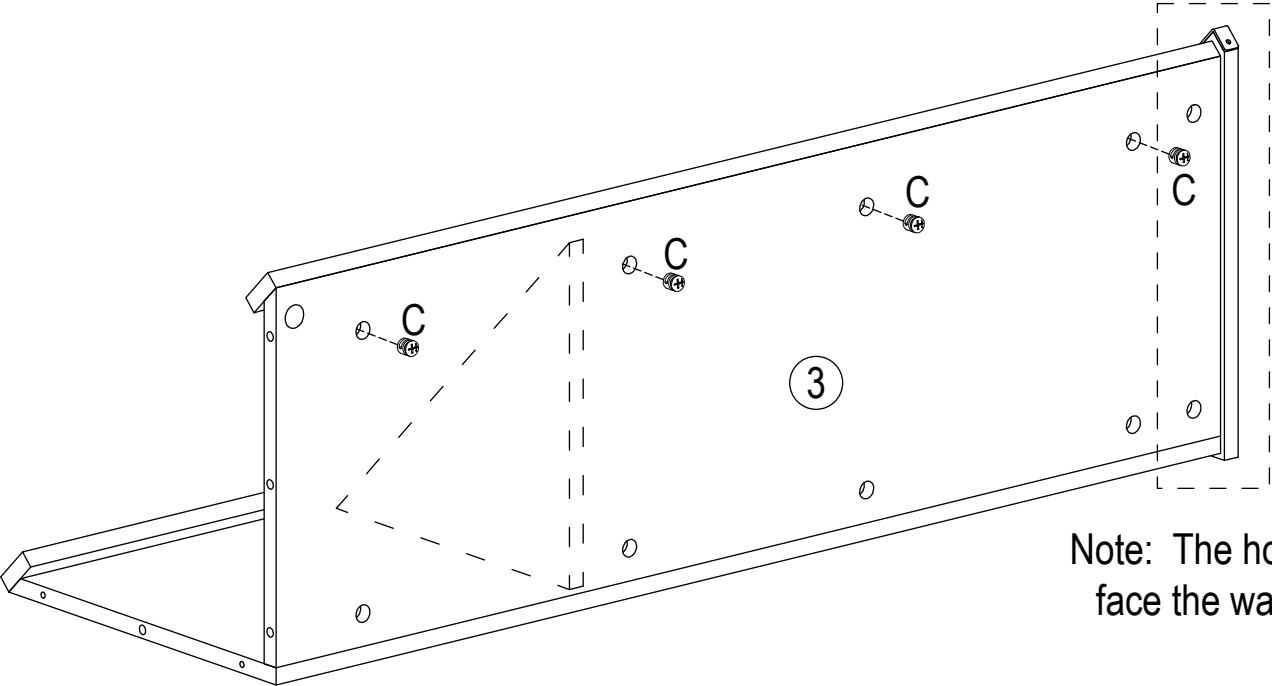

Note: The holes
face the wall .


C	x4
Ø15×12mm	

STEP 12

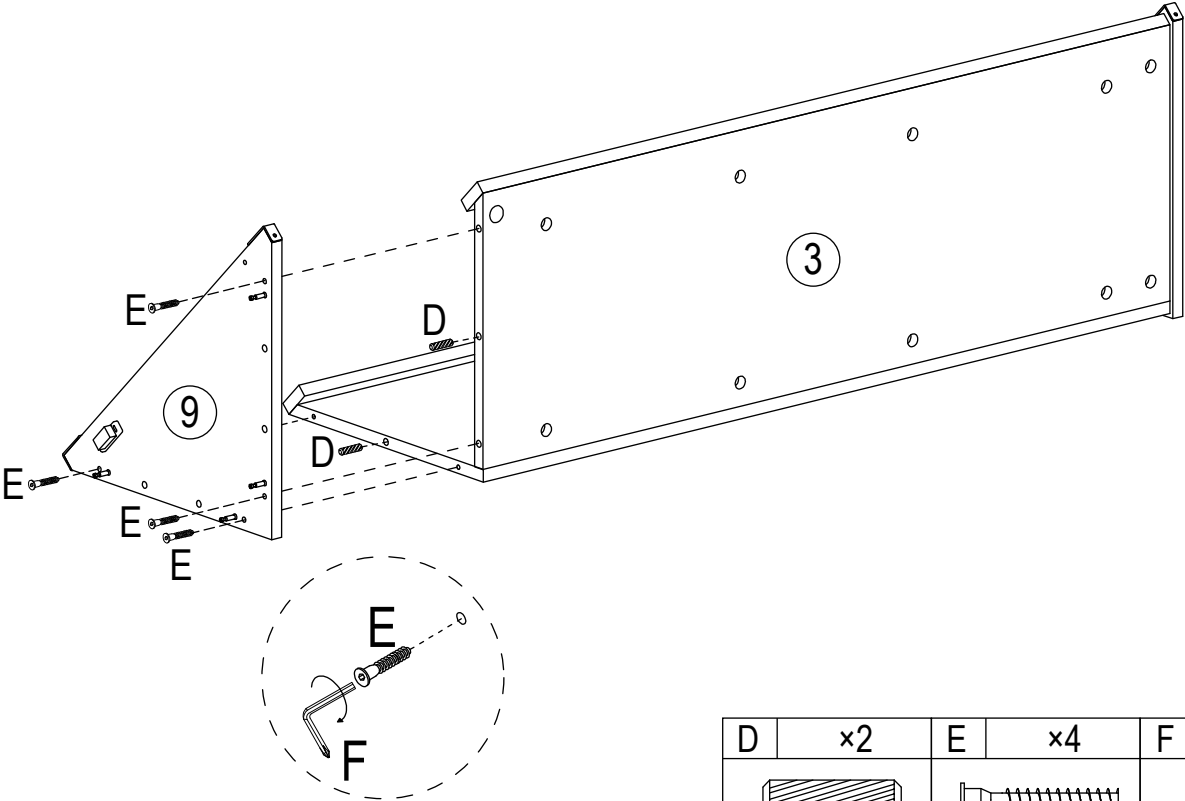



D	x2	E	x4	F	x1
Ø8×30mm		Ø7×47mm		M4×45×45mm	

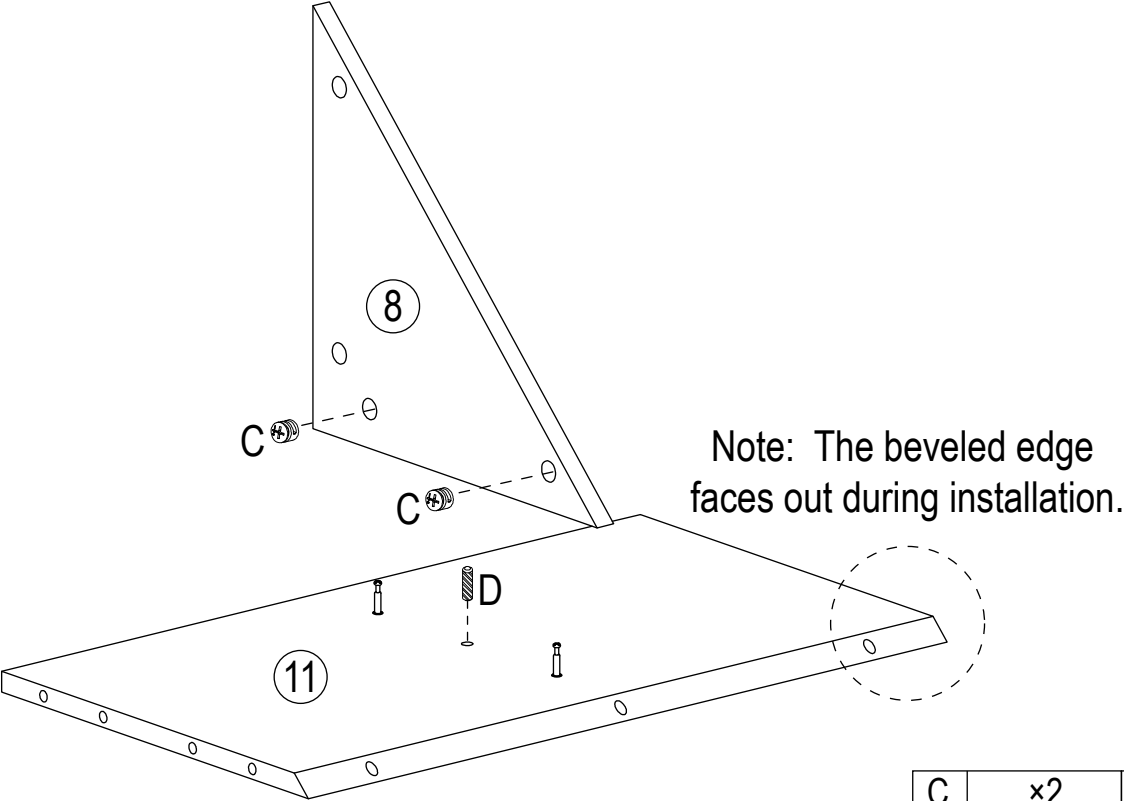
STEP 13





Note: The beveled edge faces out during installation.


C	x2	D	x1
			
Ø15×12mm		Ø8×30mm	

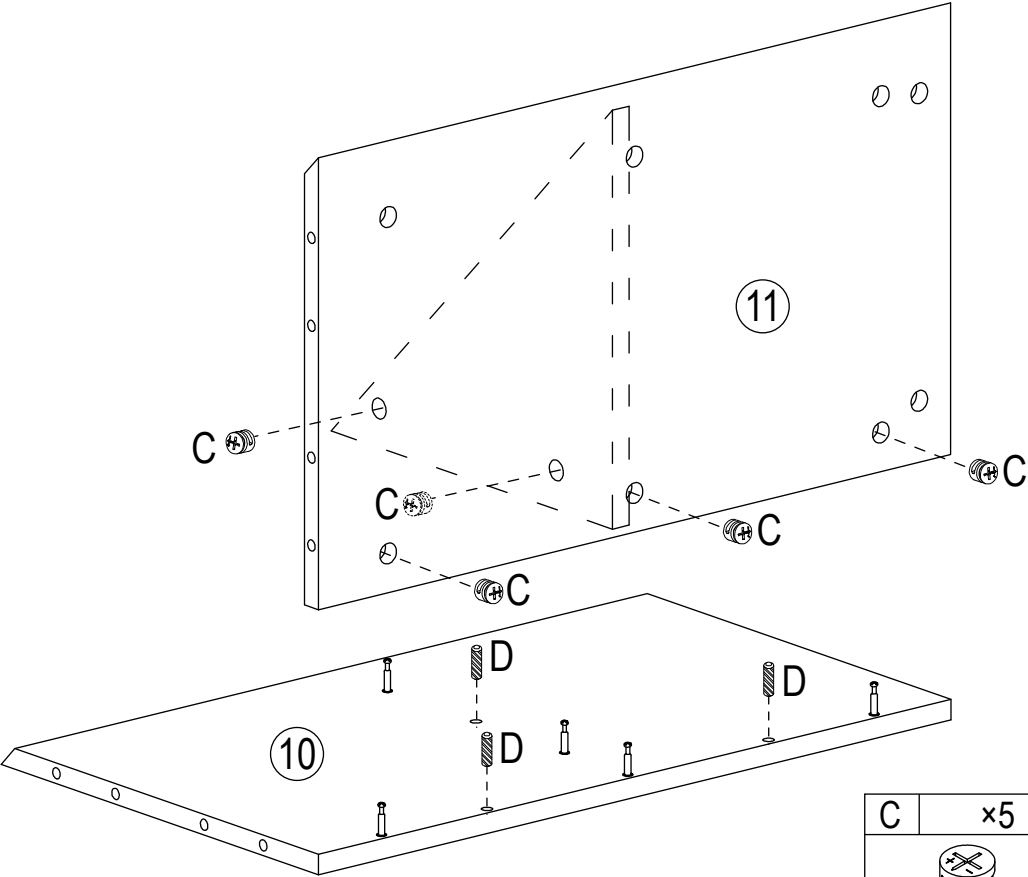STEP 14




C	x5	D	x3
			
Ø15×12mm		Ø8×30mm	


STEP 15

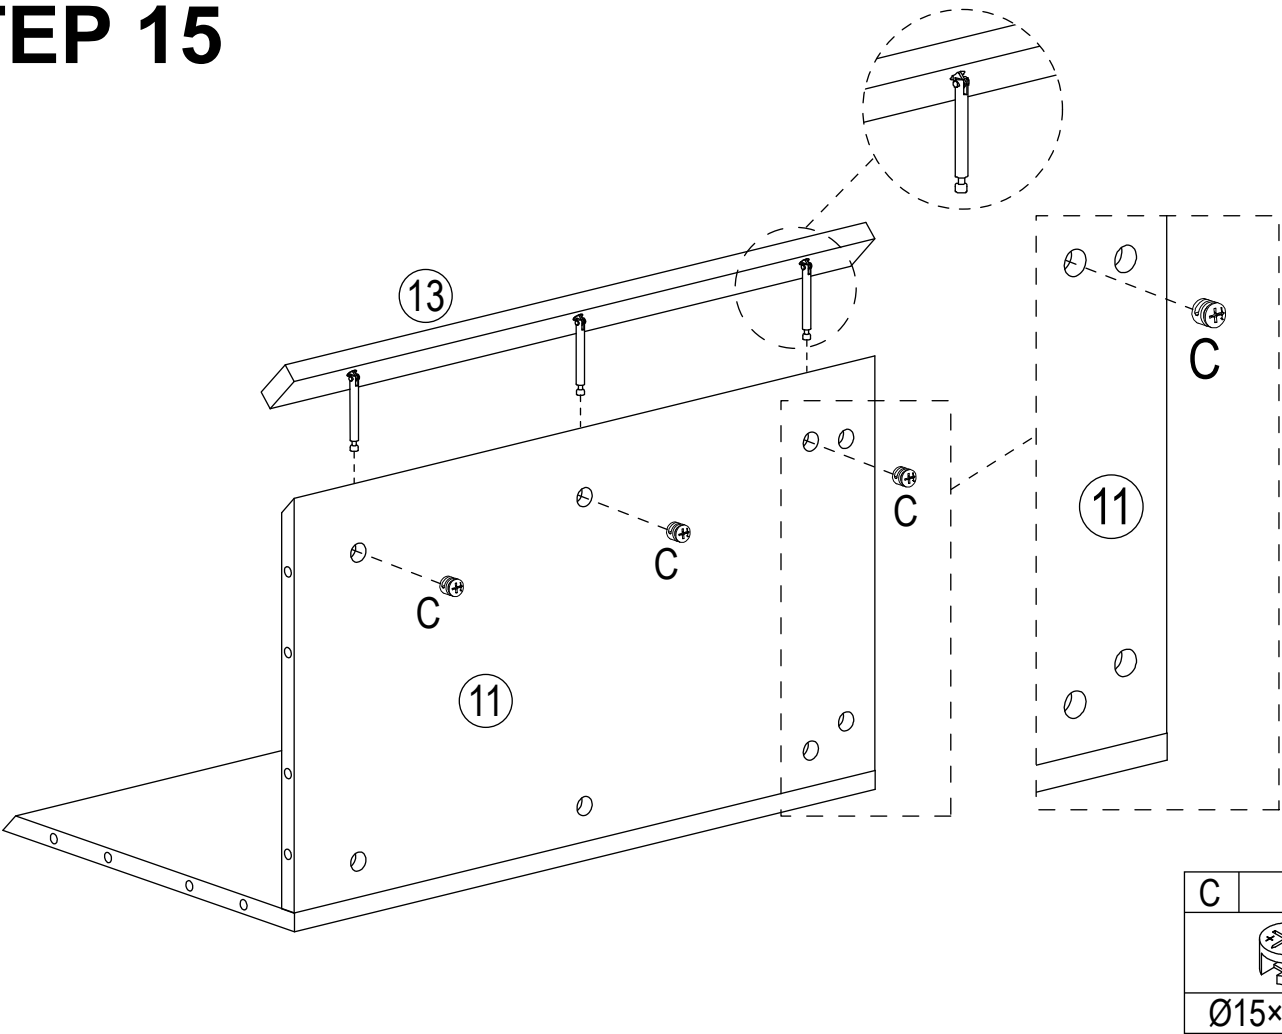



STEP 16

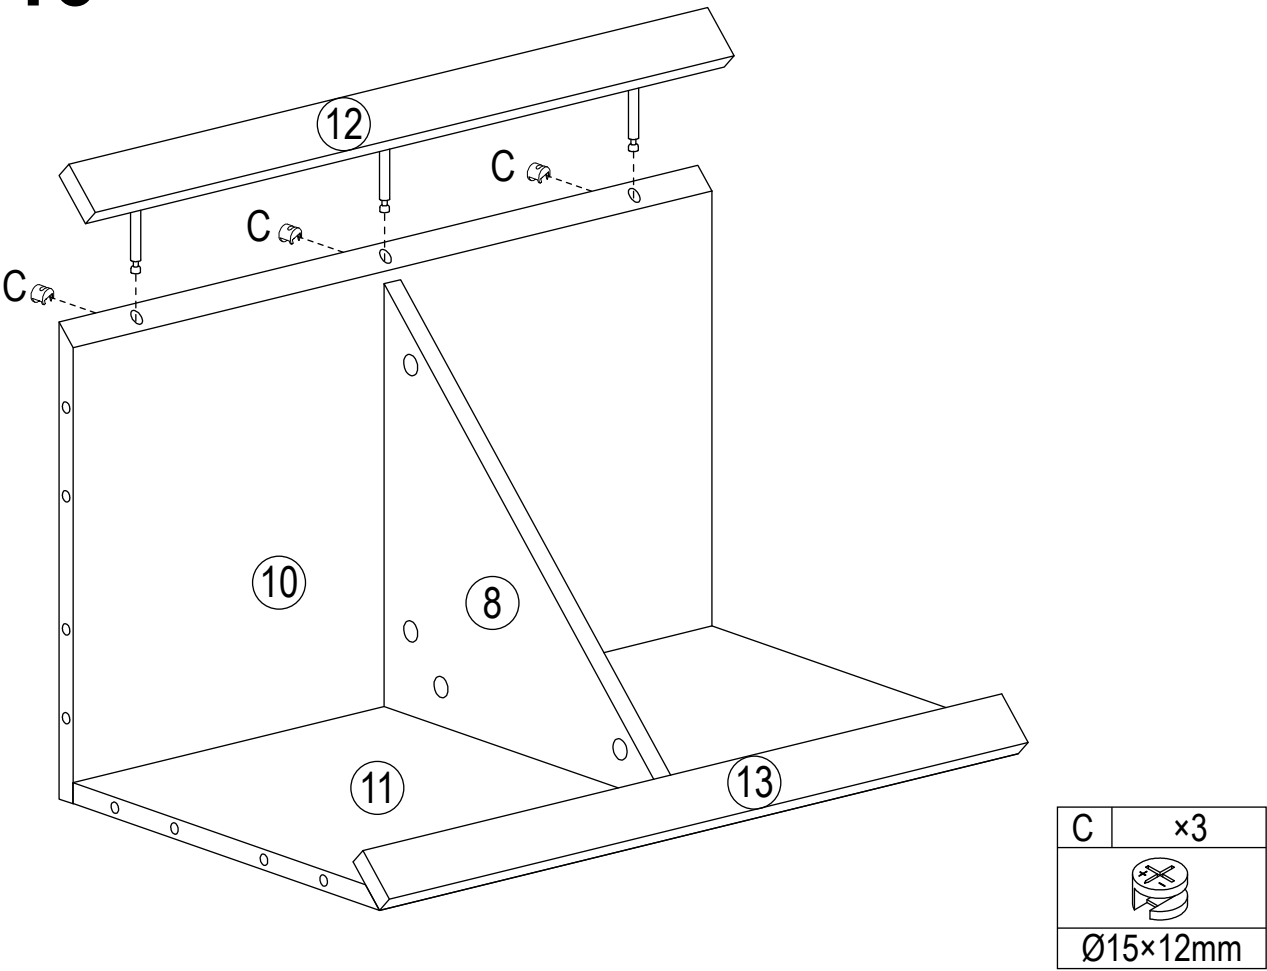


STEP 17

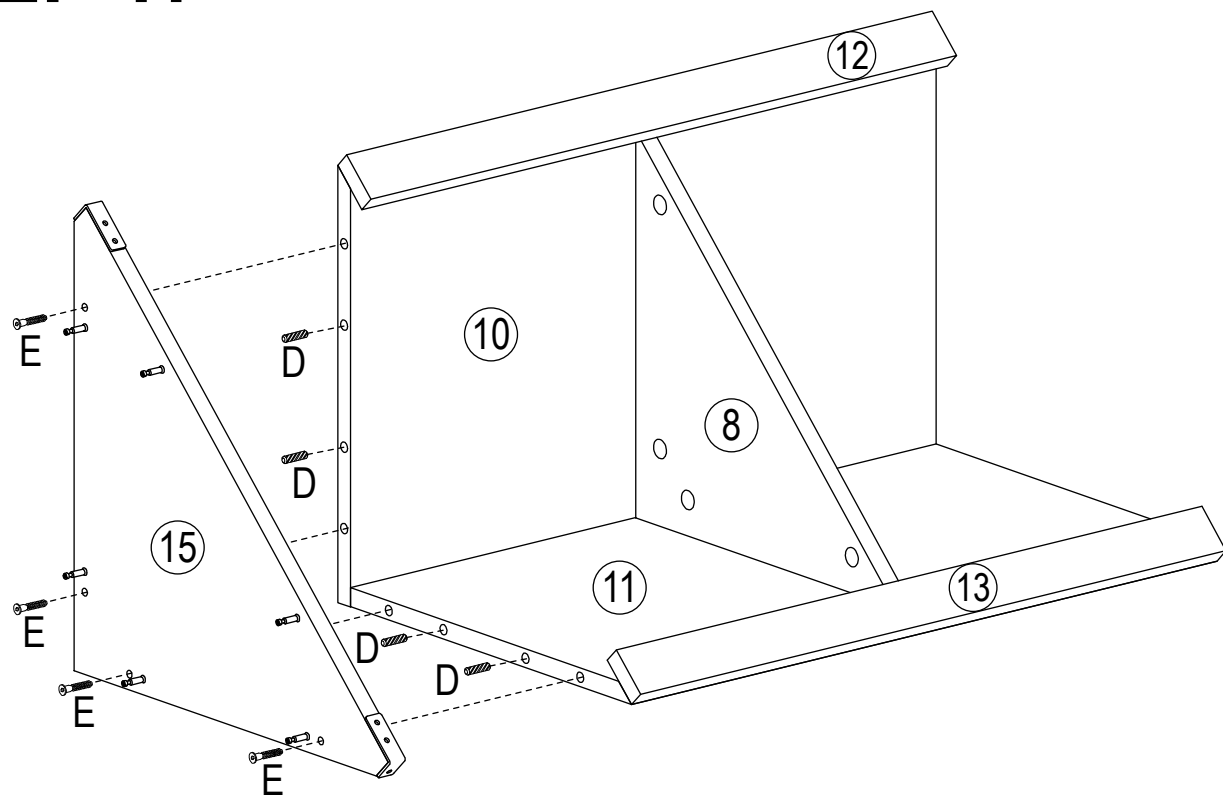


D	×4	E	×4
			
Ø8×30mm		Ø7×47mm	

STEP 18


Note: The holes facing up during installation.

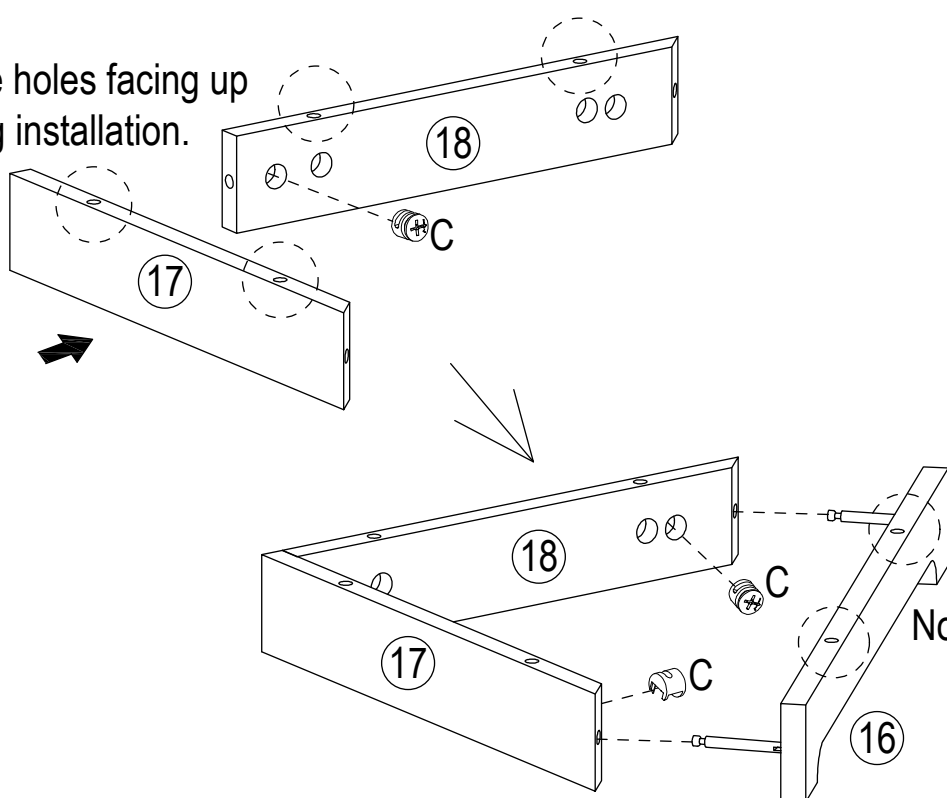


Note: The holes facing up during installation.


C	×3
	
Ø15×12mm	



STEP 19

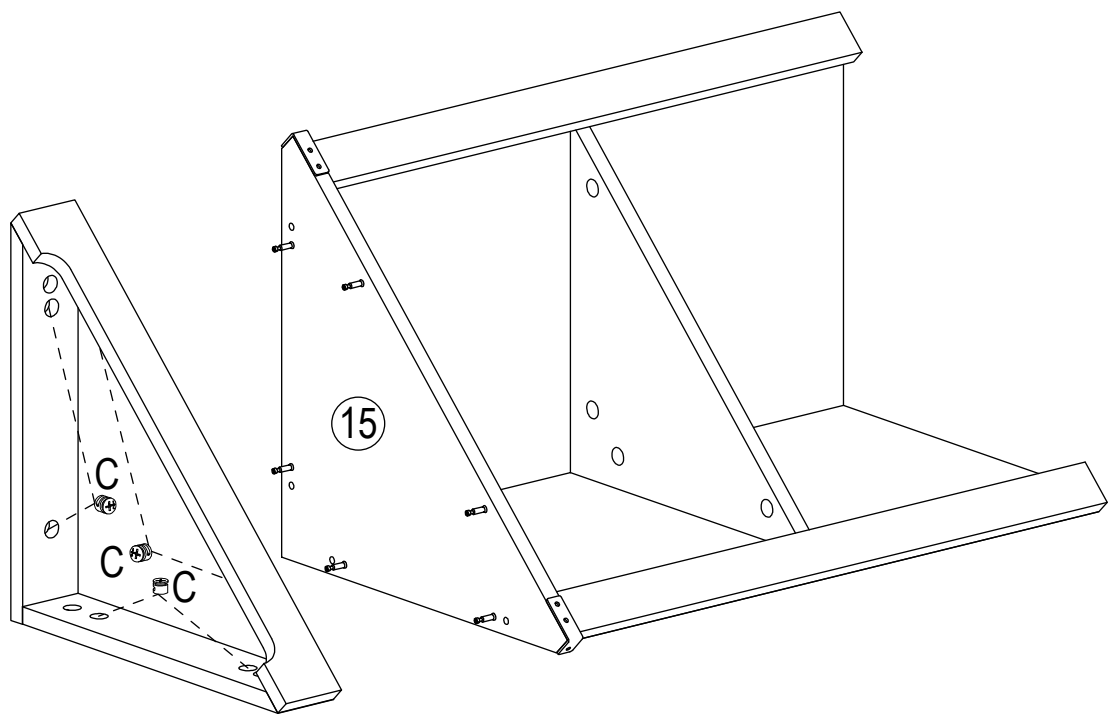


C	x6
	
Ø15×12mm	


STEP 20

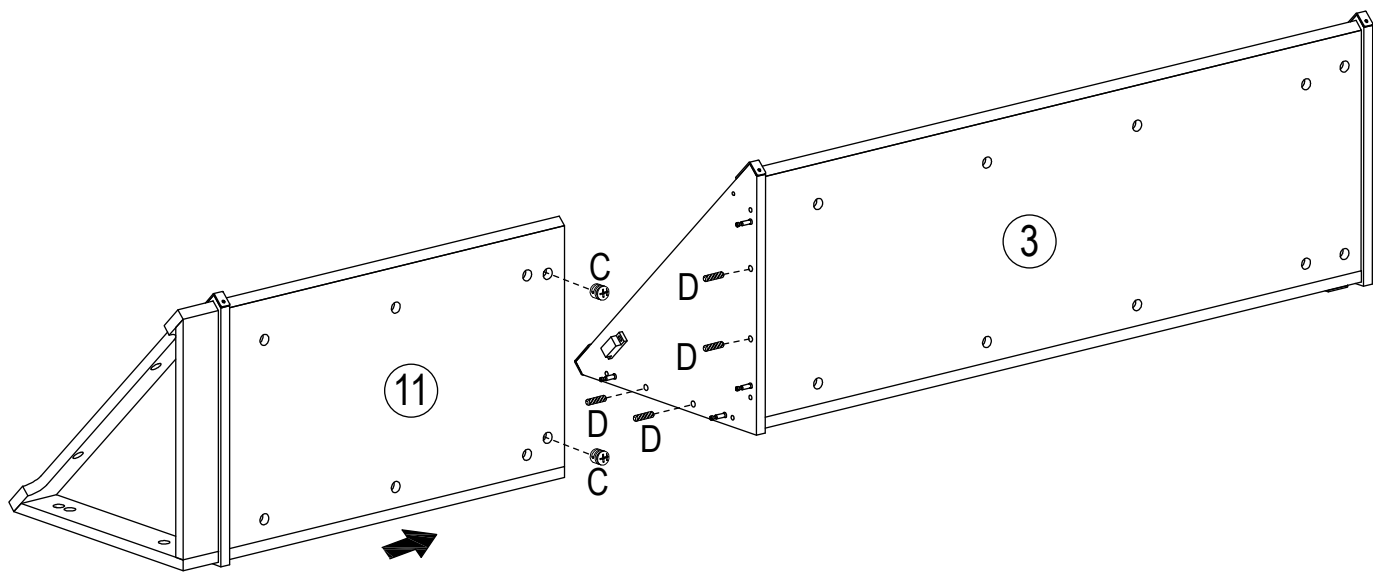


C	x2	D	x4
			
Ø15×12mm		Ø8×30mm	

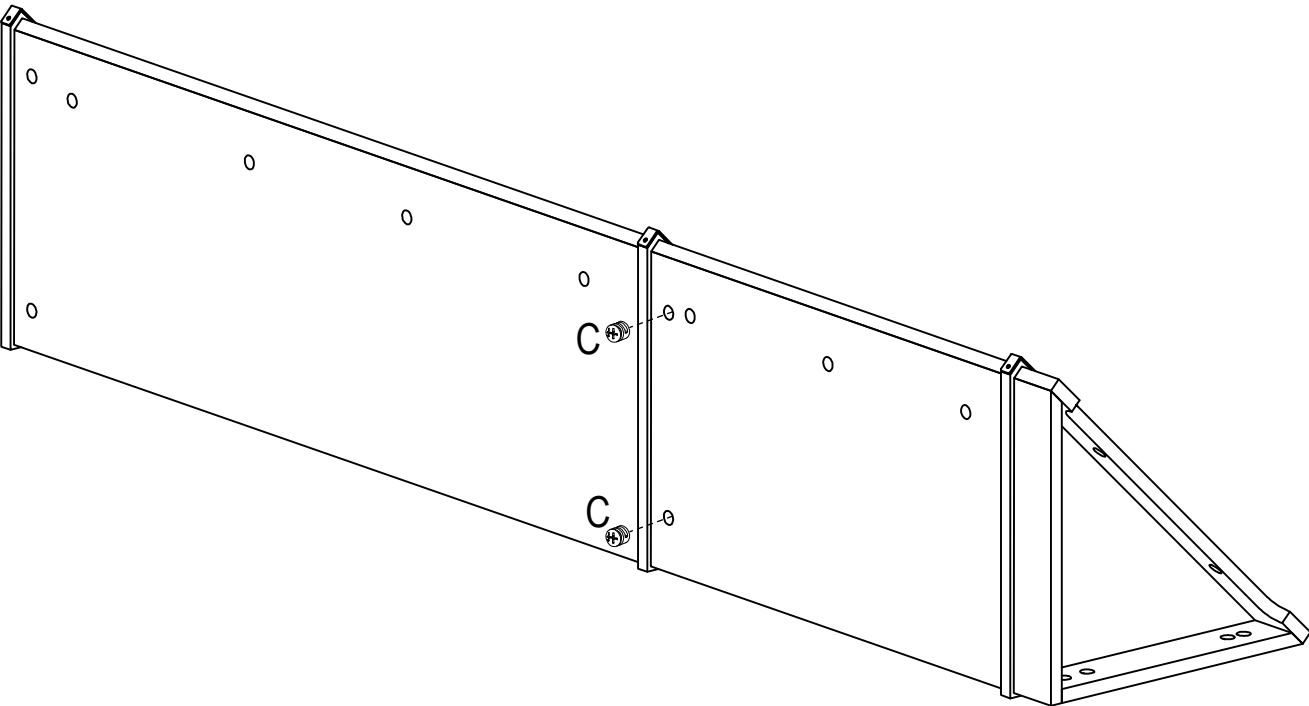


STEP 21




C	x2
	
Ø15×12mm	

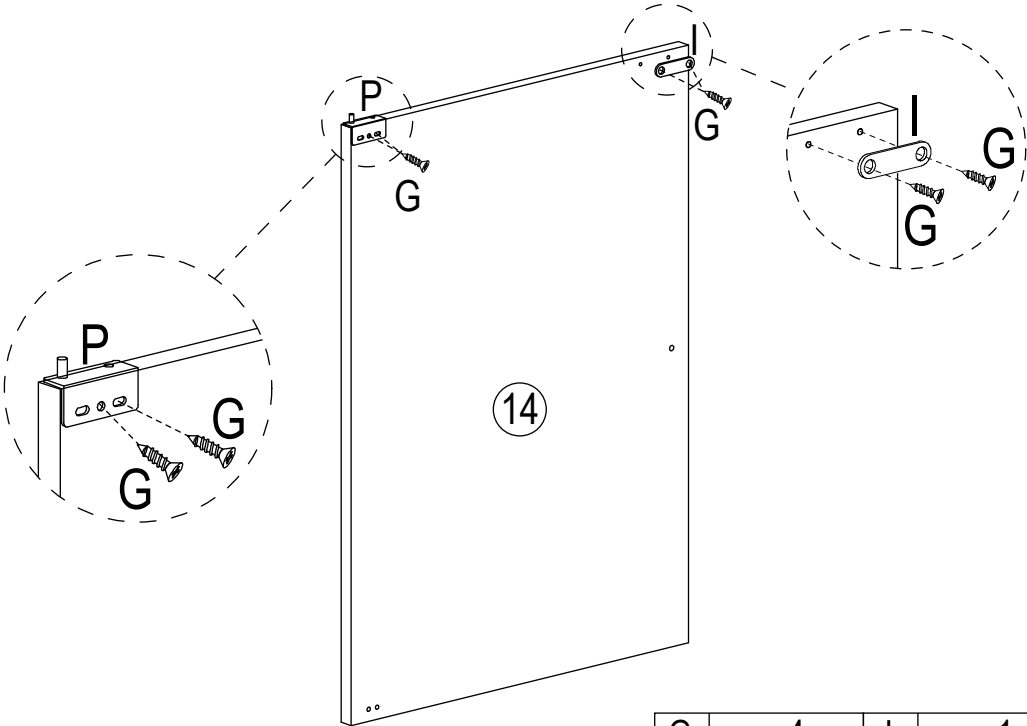
STEP 22




G	x4	I	x1	P	x1
					
Ø3.5×14mm		45×12×1mm		L40mm	

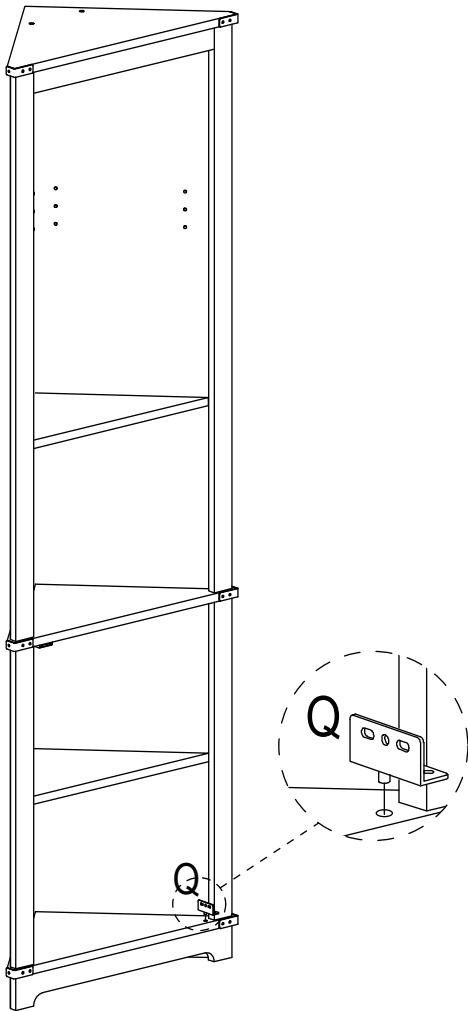


STEP 23




Q	x1
	
L40mm	

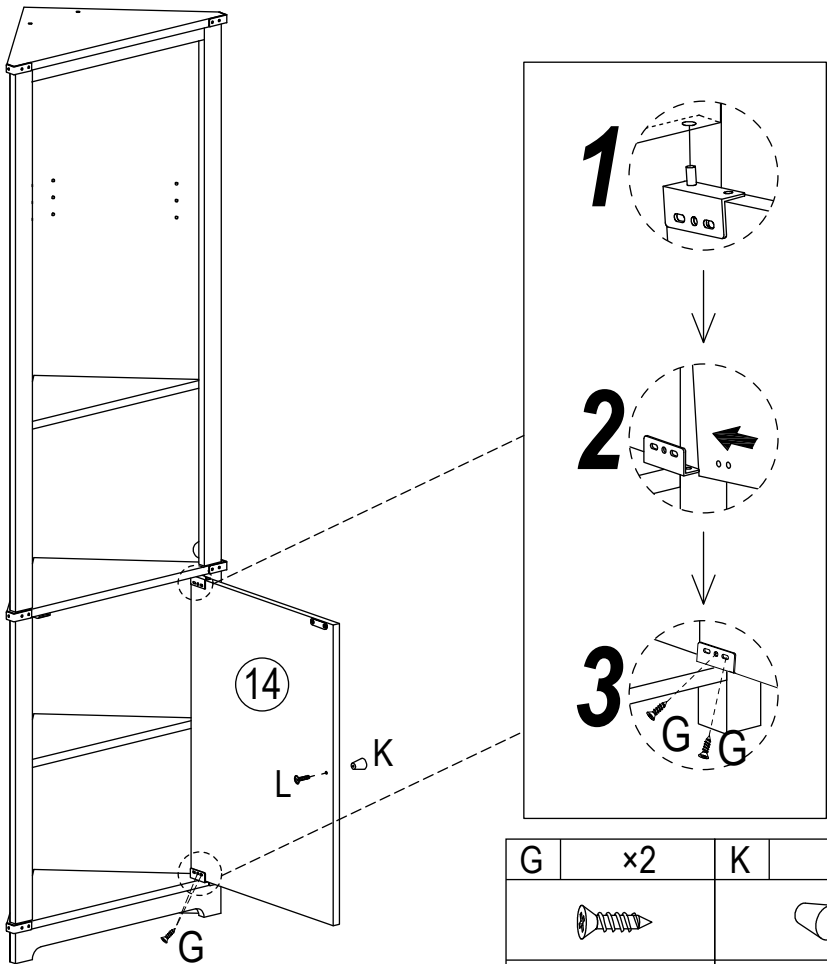
STEP 24




G	x2	K	x1	L	x1
					
Ø3.5×14mm		Ø19×22mm		M4×18mm	



STEP 25

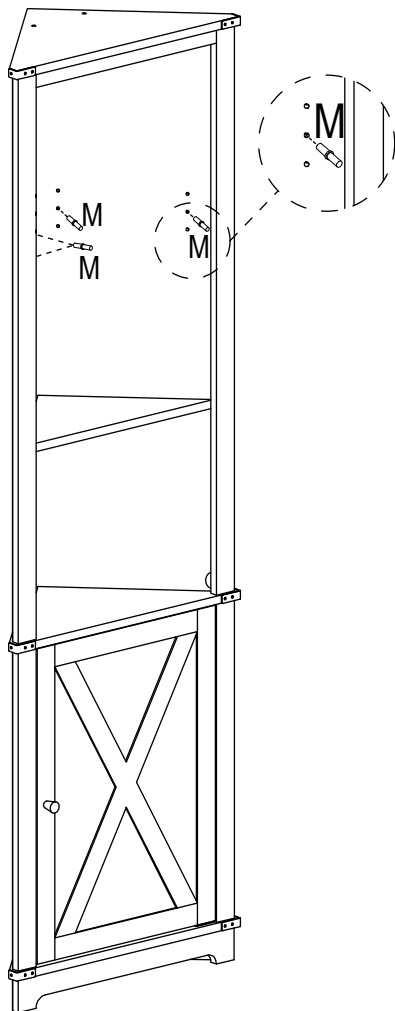

M	x4
	
Ø5×13mm	

STEP 26

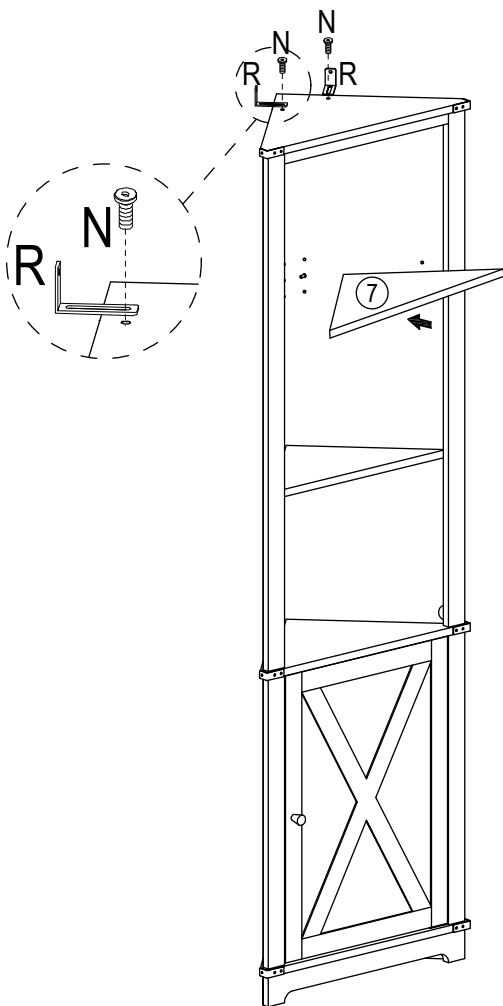


N	x2	R	x2
			
M6×12mm		73×24×15mm	



STEP 27



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

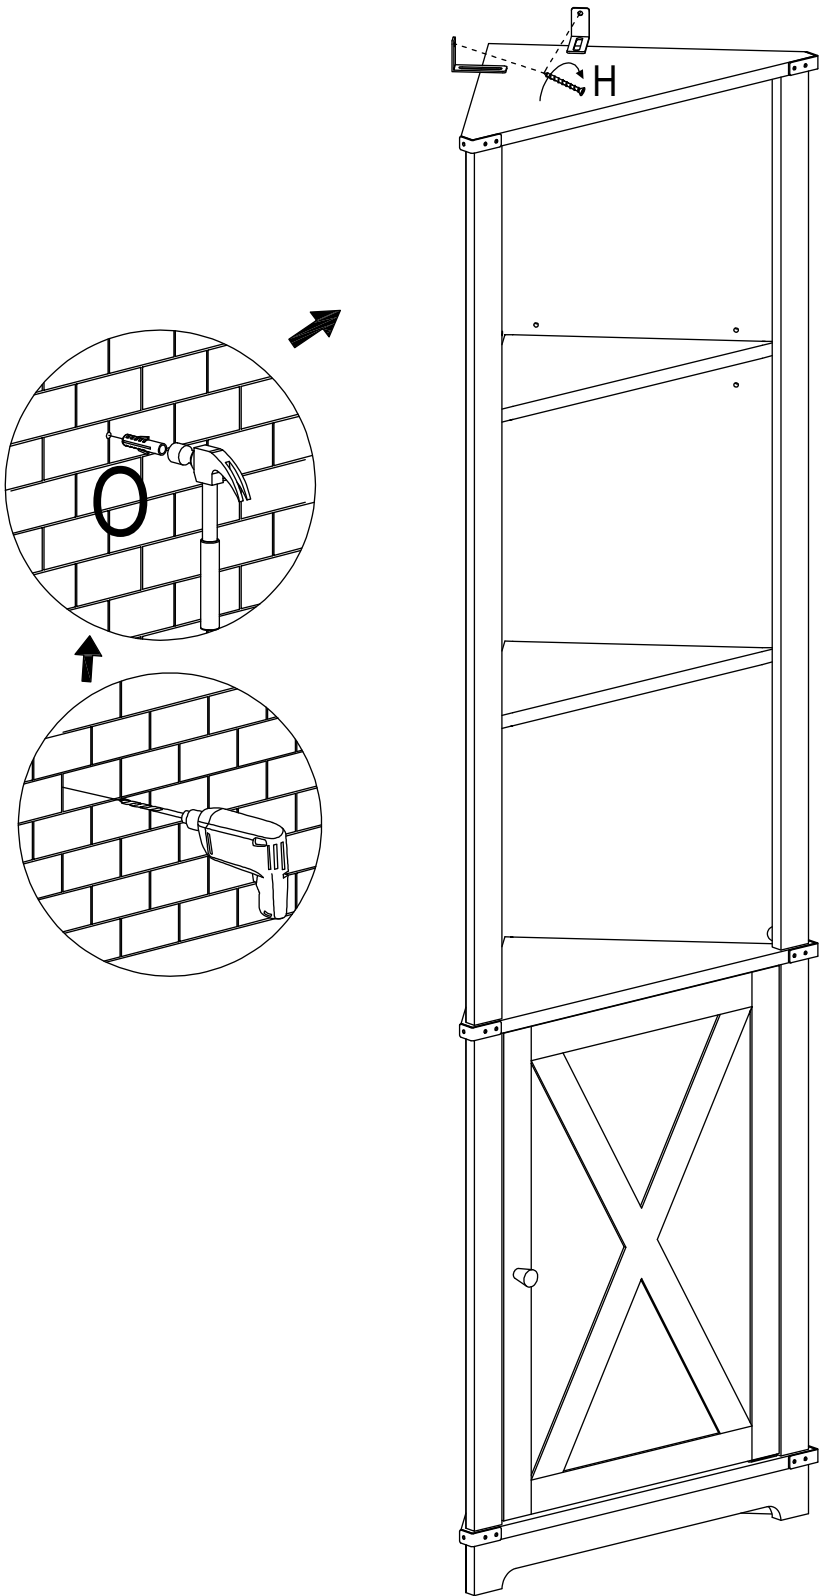

Installation Completed

H	x2	O	x2
			
4x35mm		Ø6x30mm	