




Product Installation Instructions

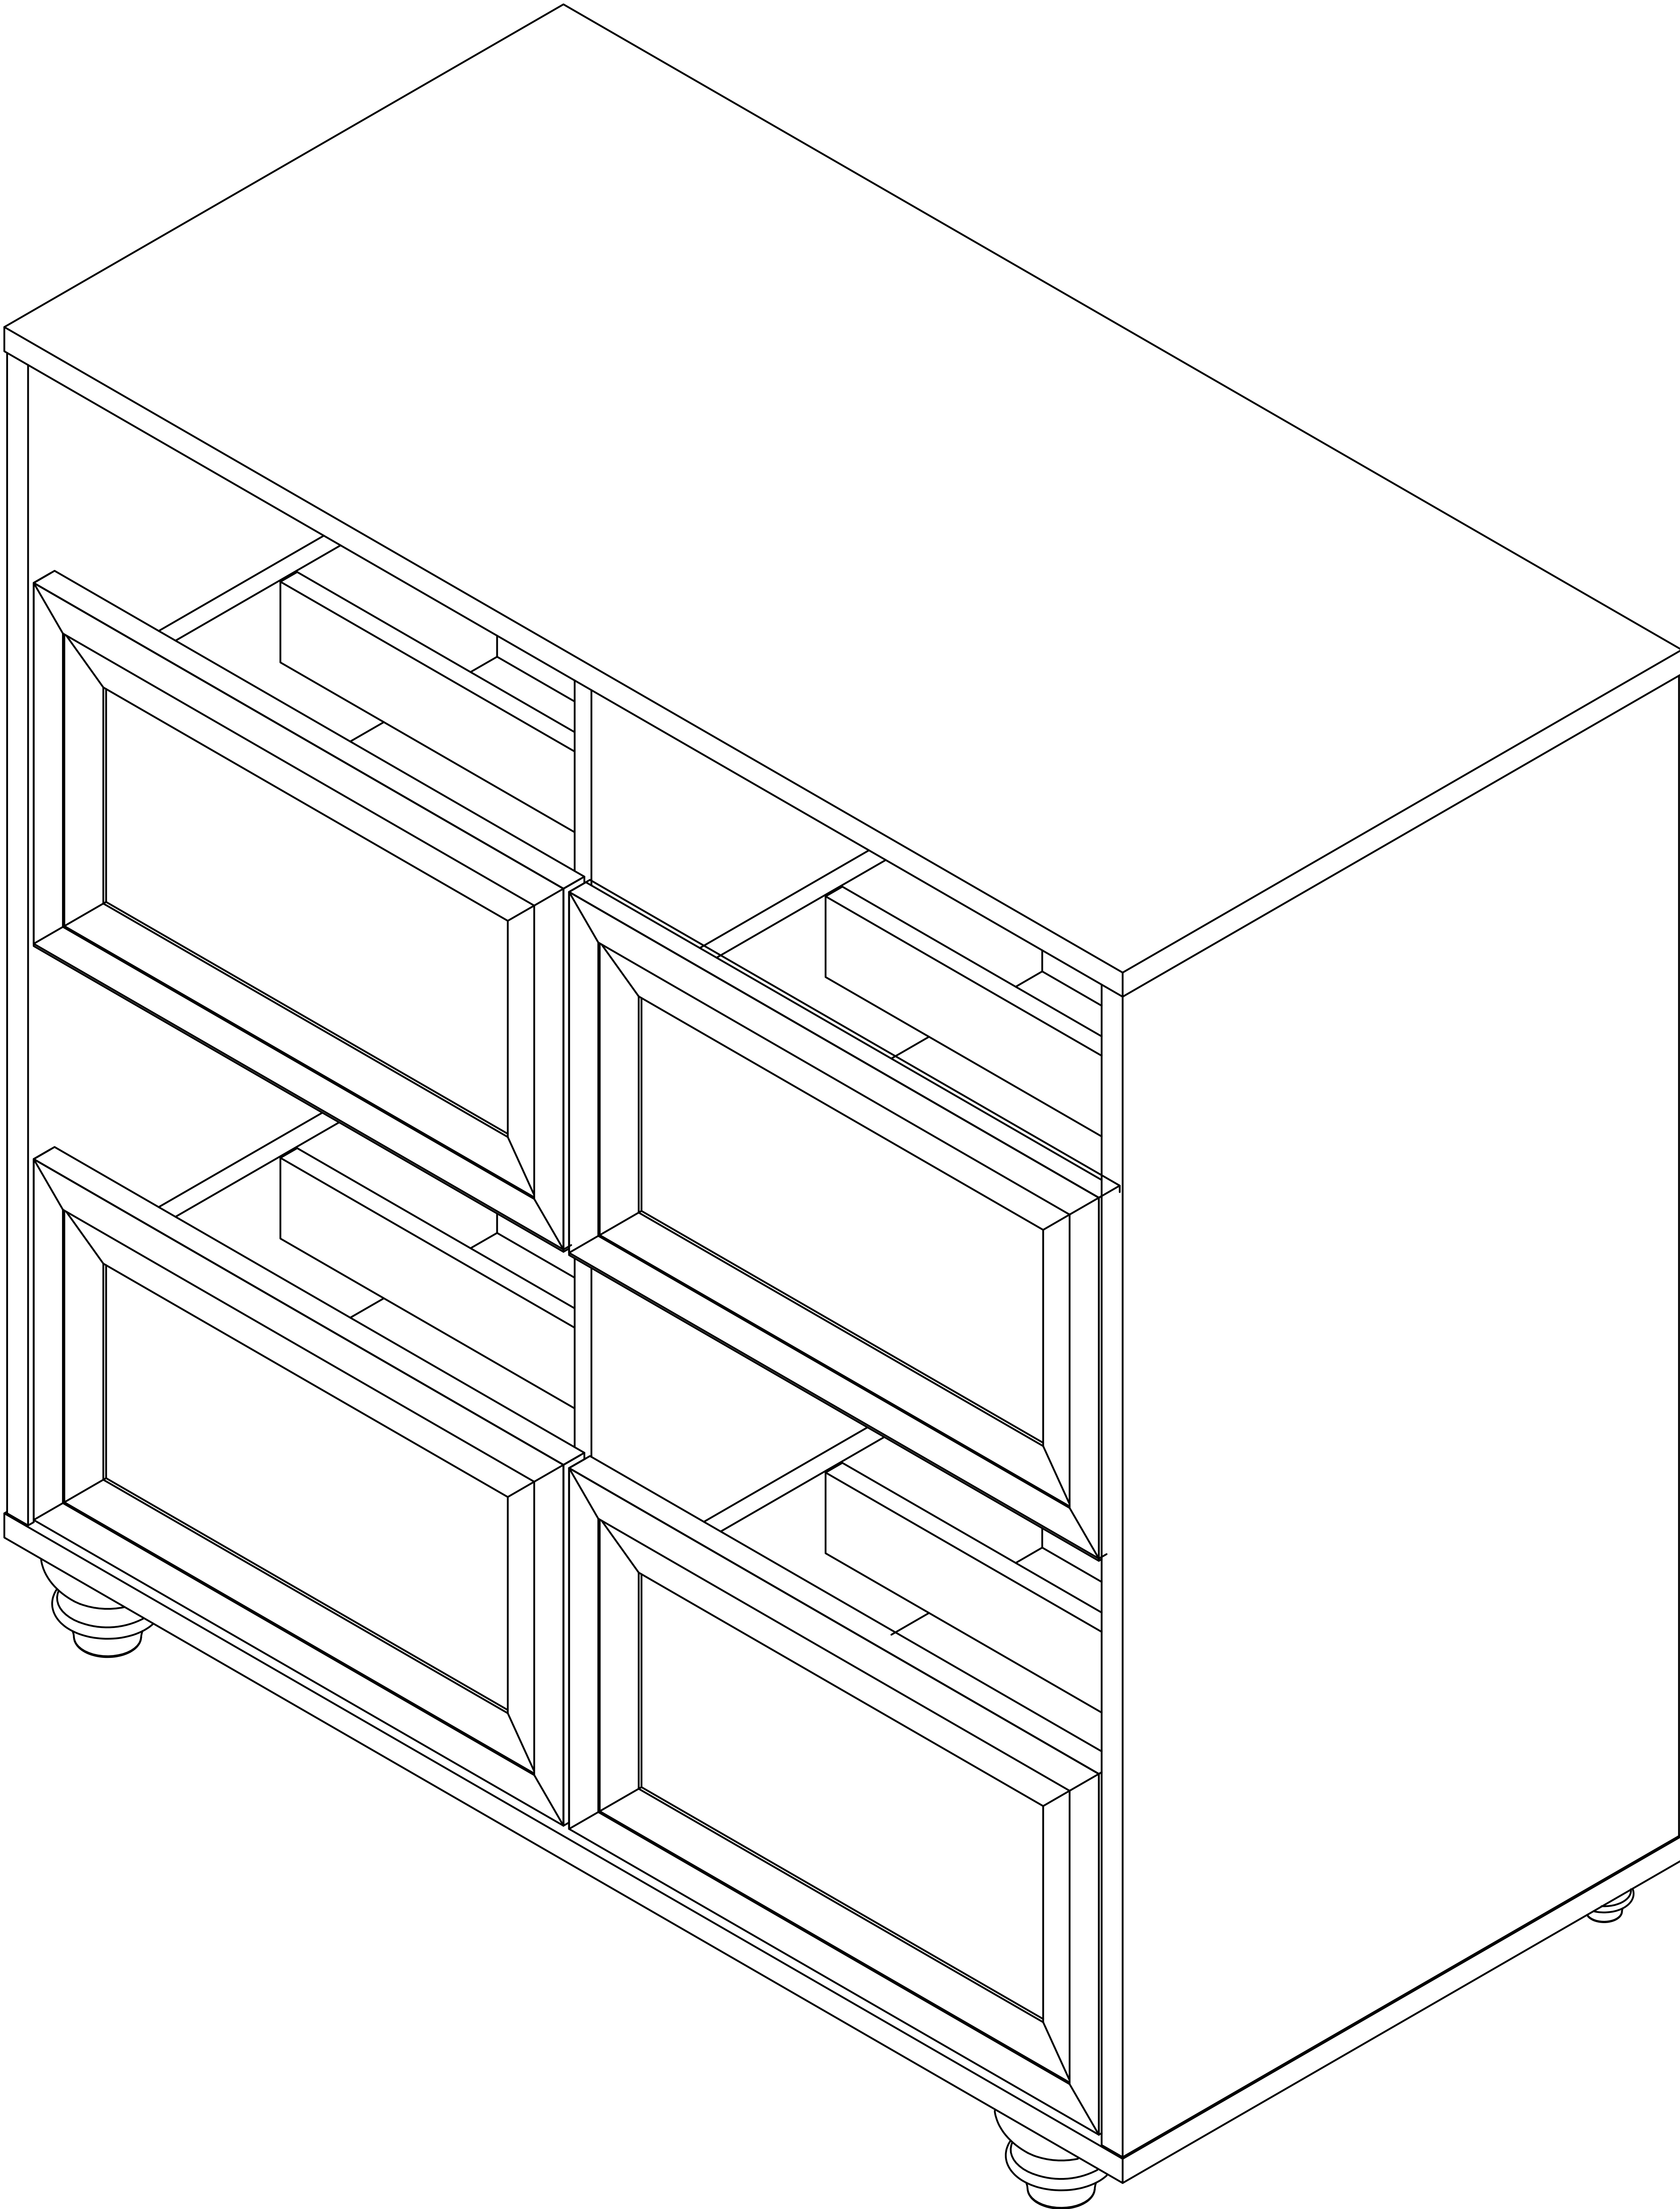


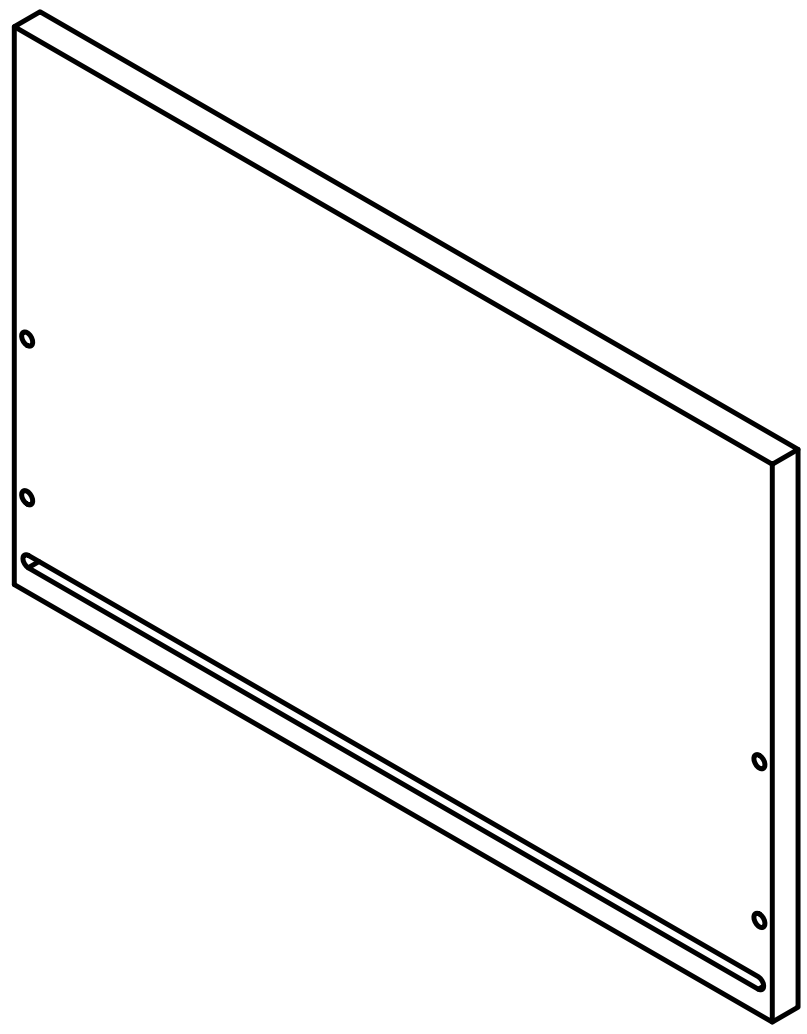


Ax4

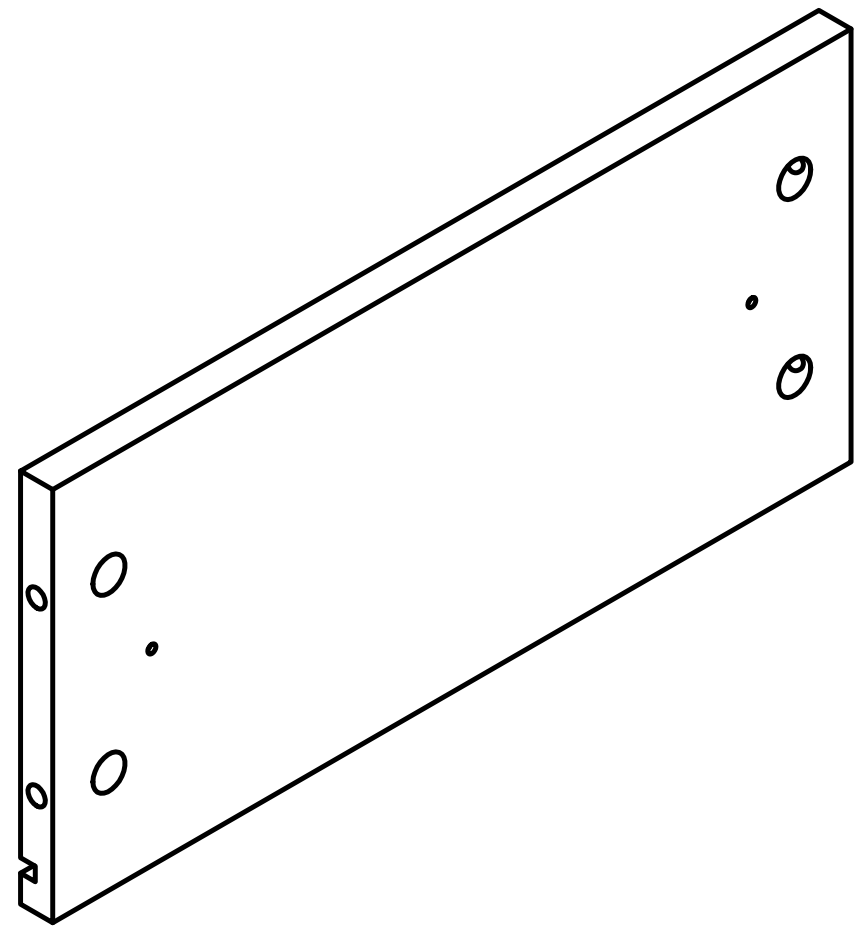


Bx8

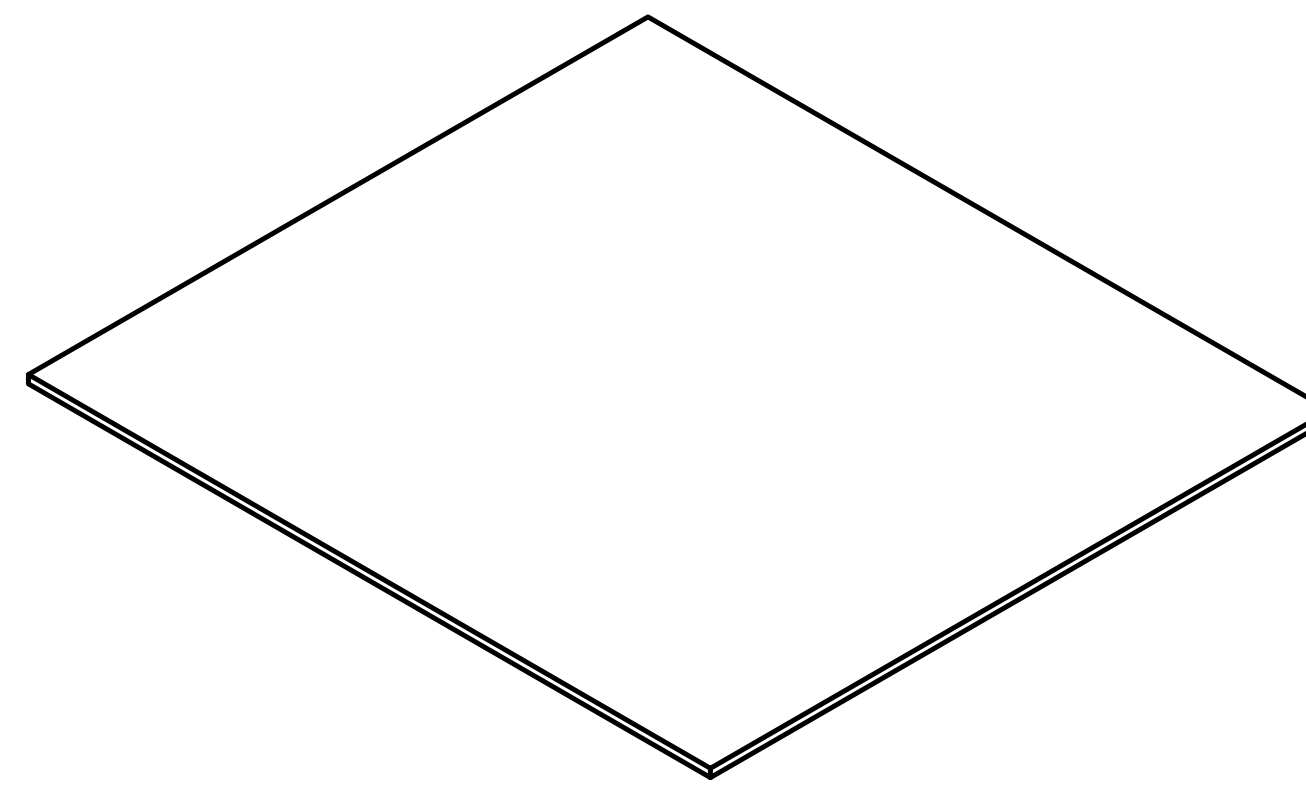


Cx4

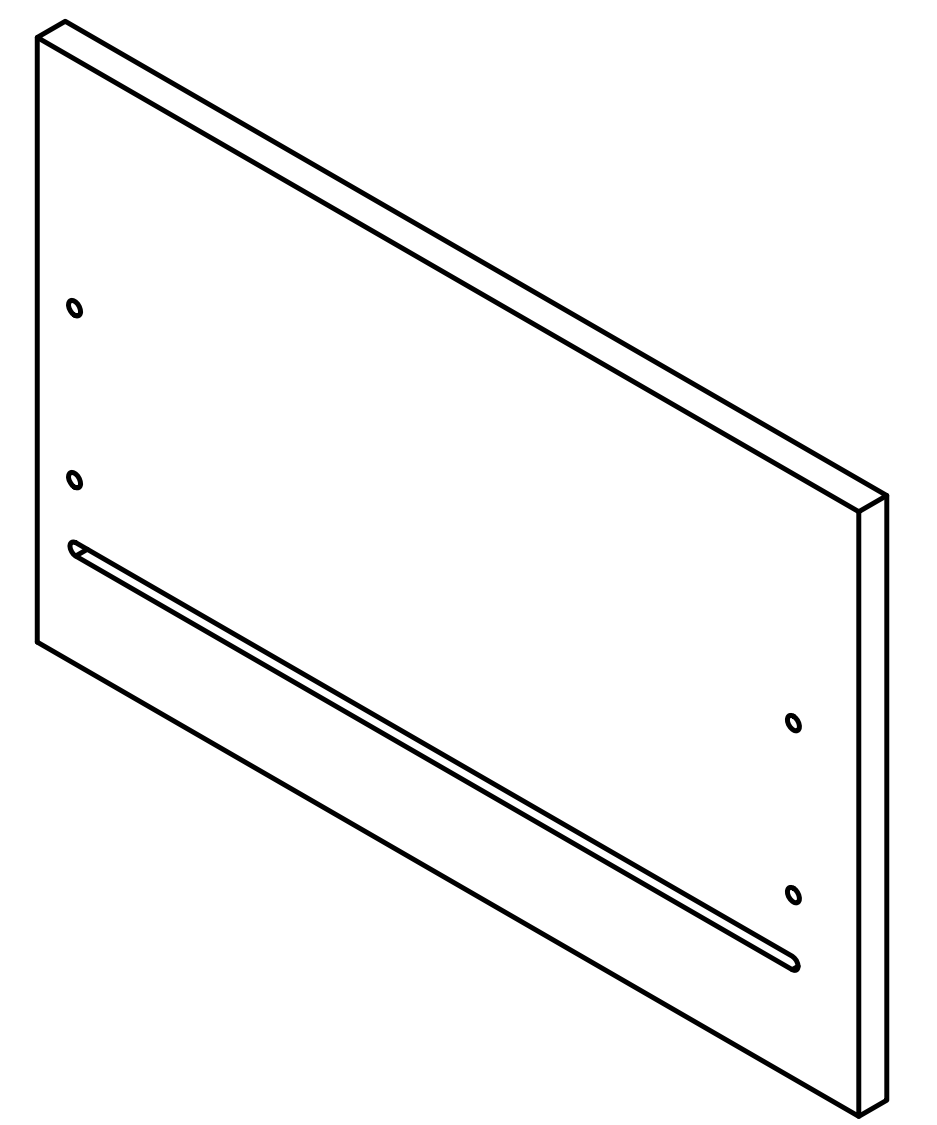


Dx2

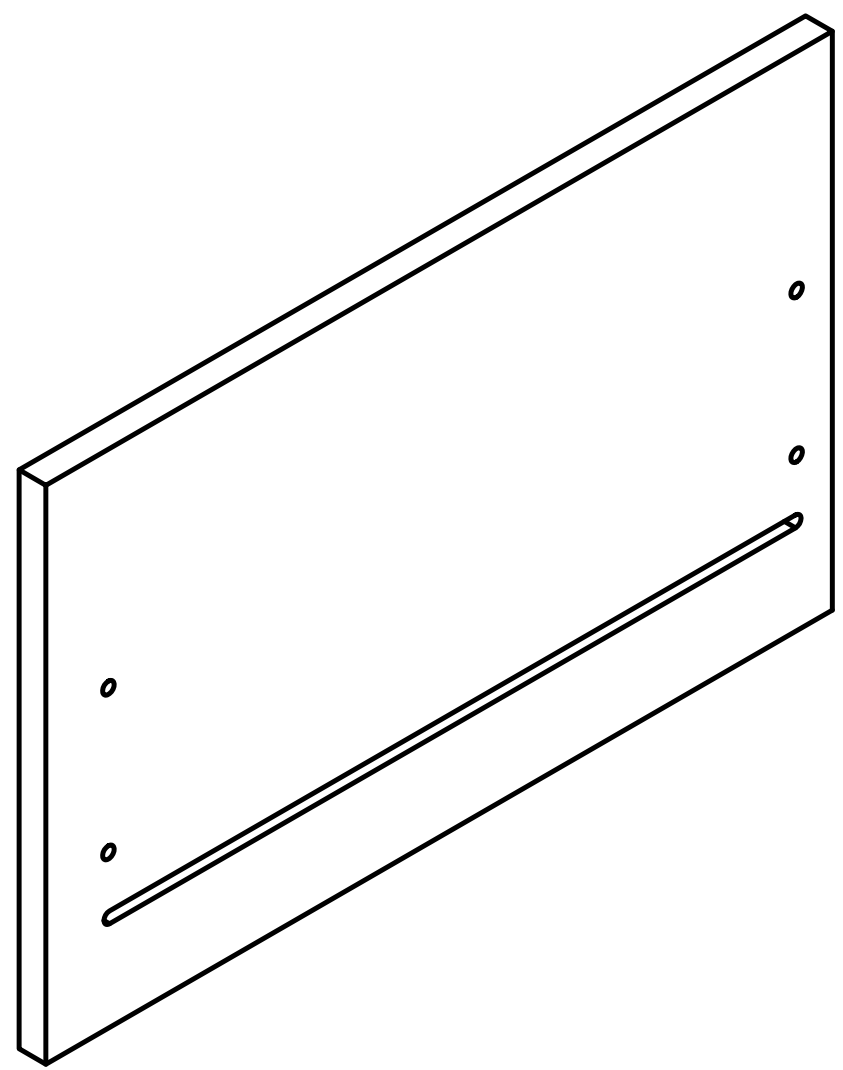


Ex2

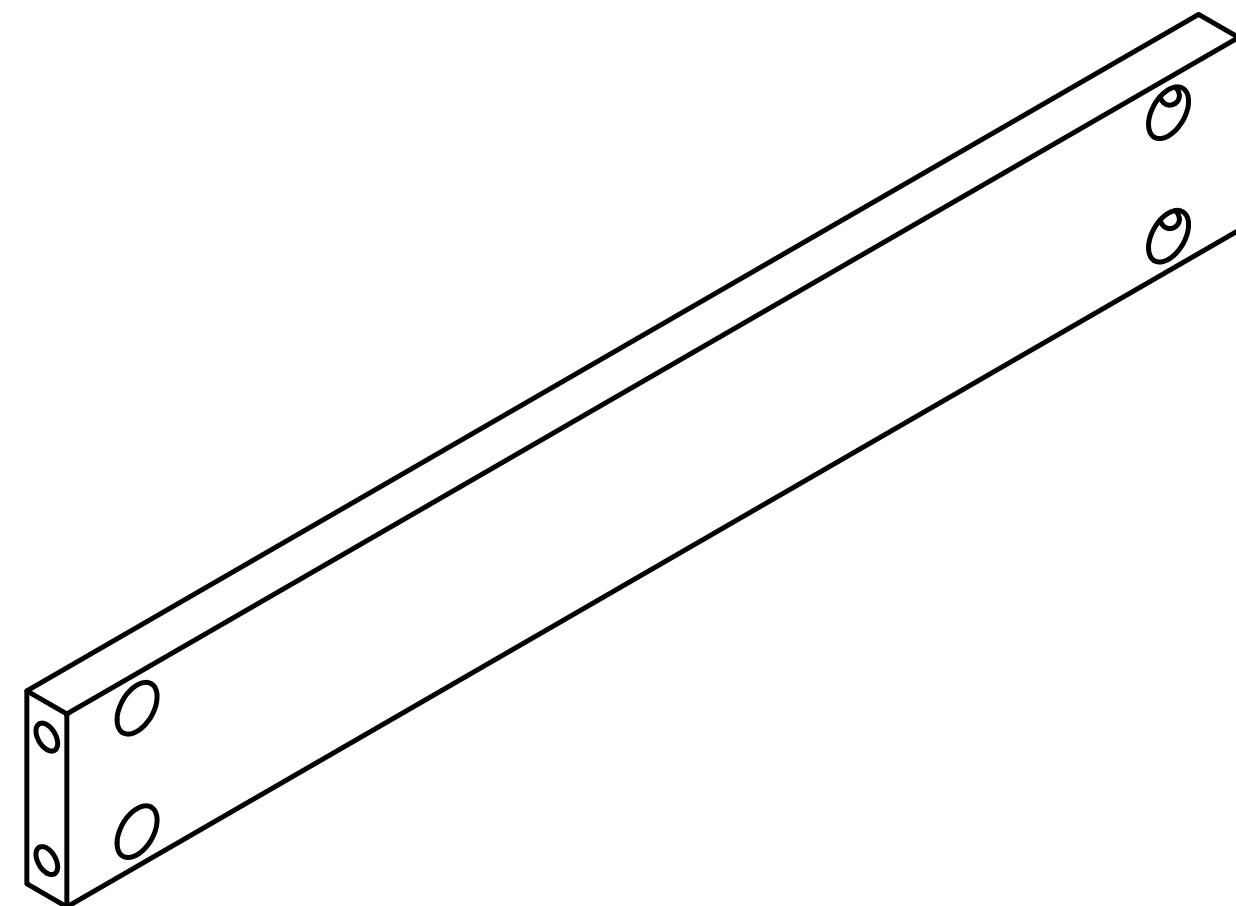


Fx4

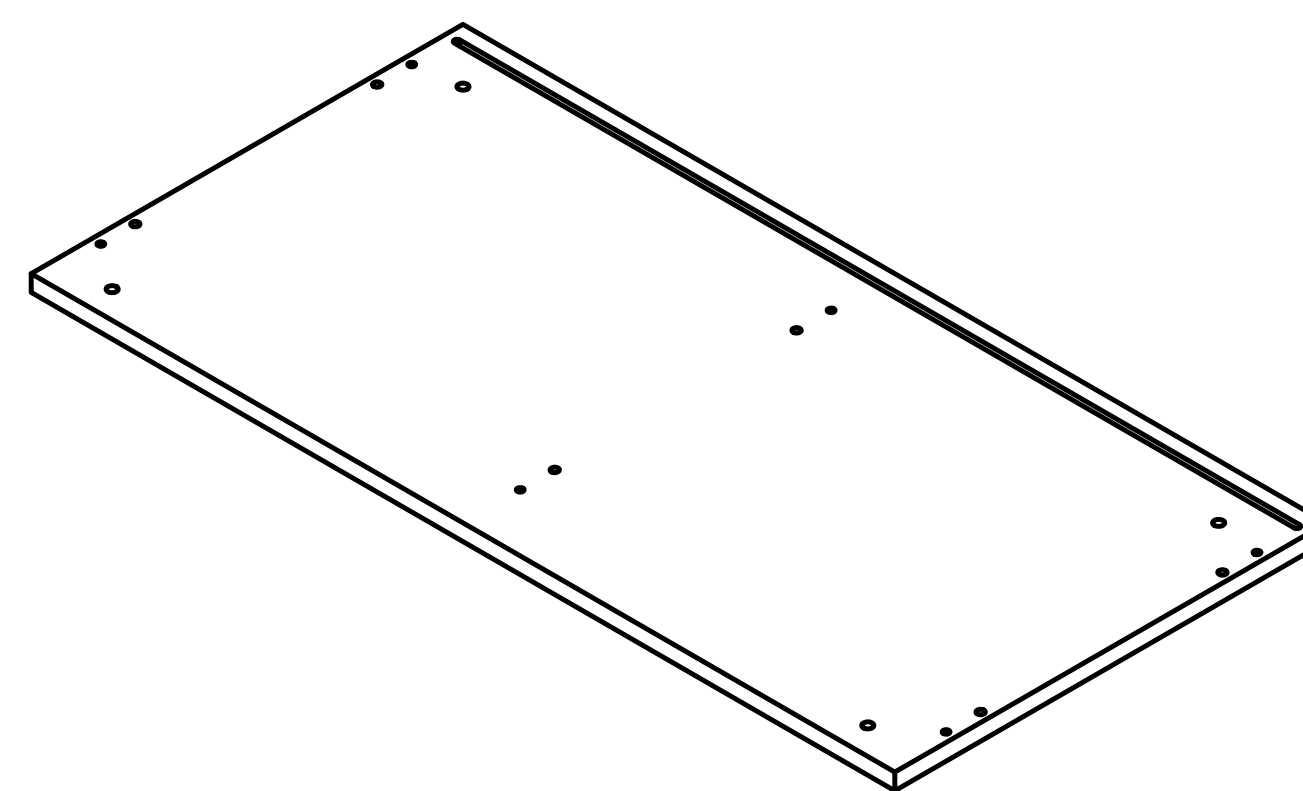


Gx1

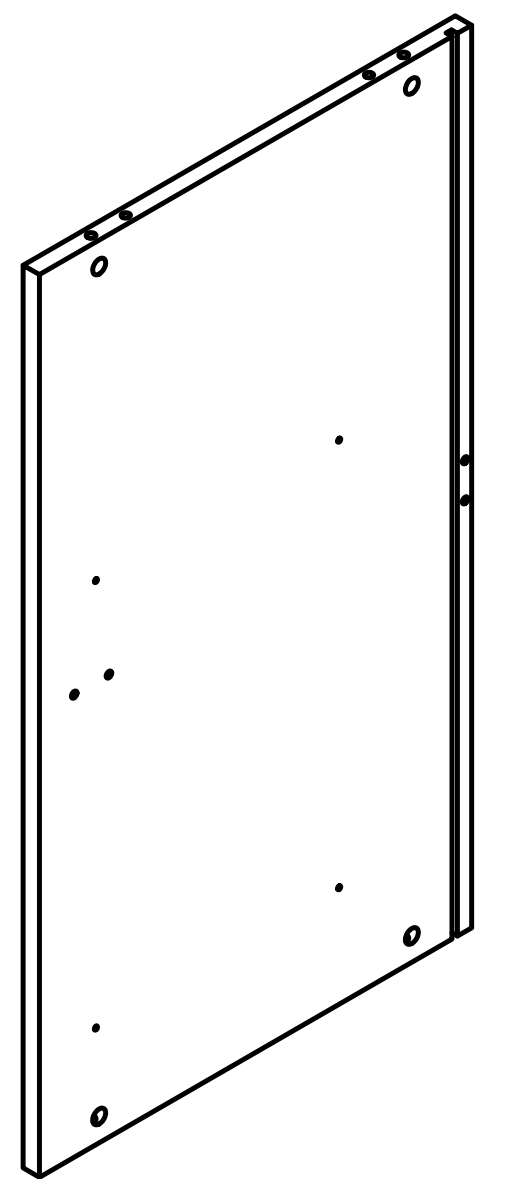


Hx1

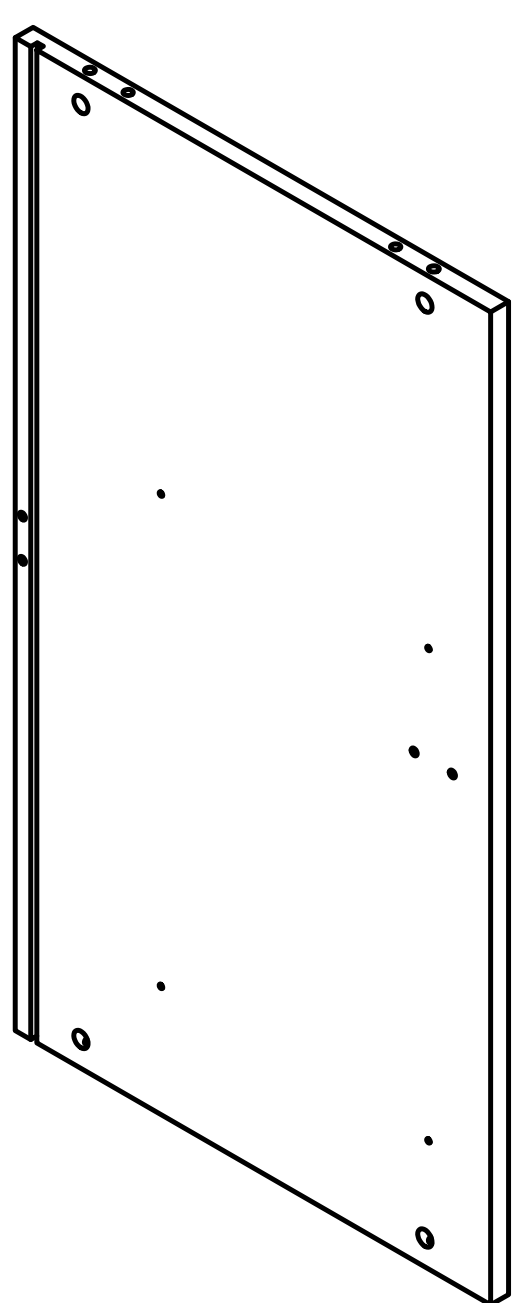


Ix1

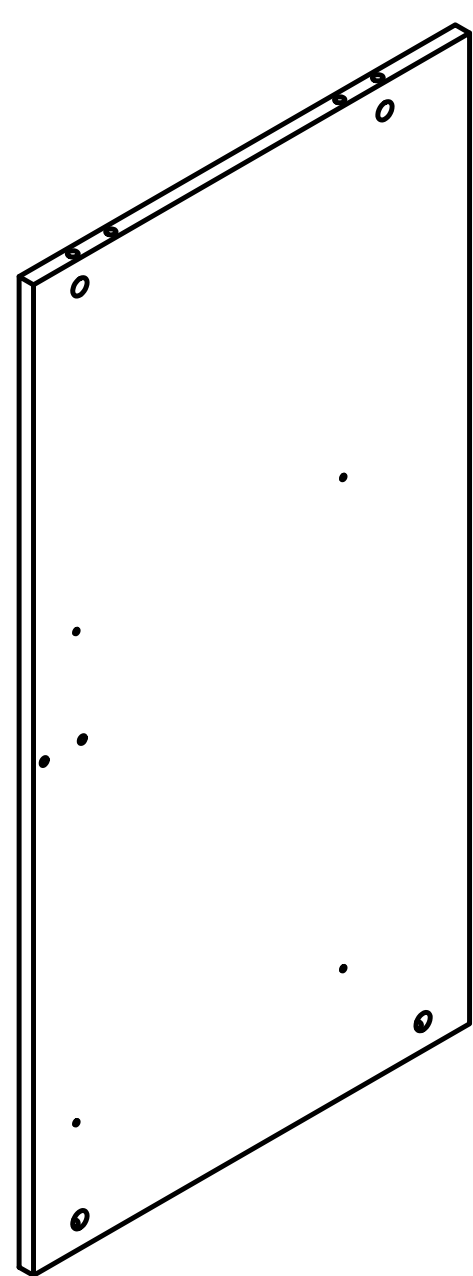


Jx1

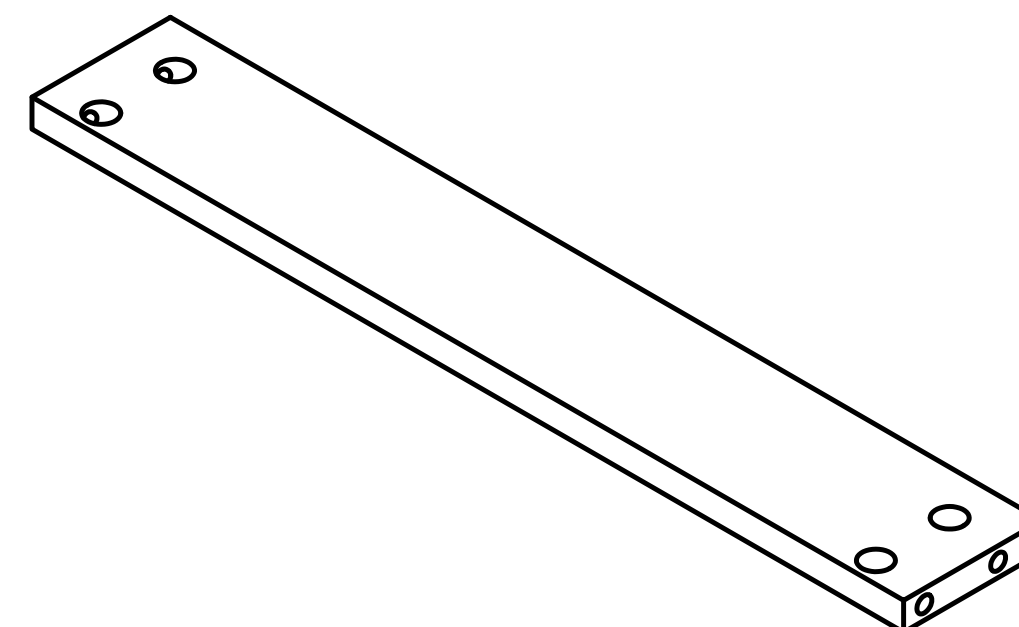


Kx1

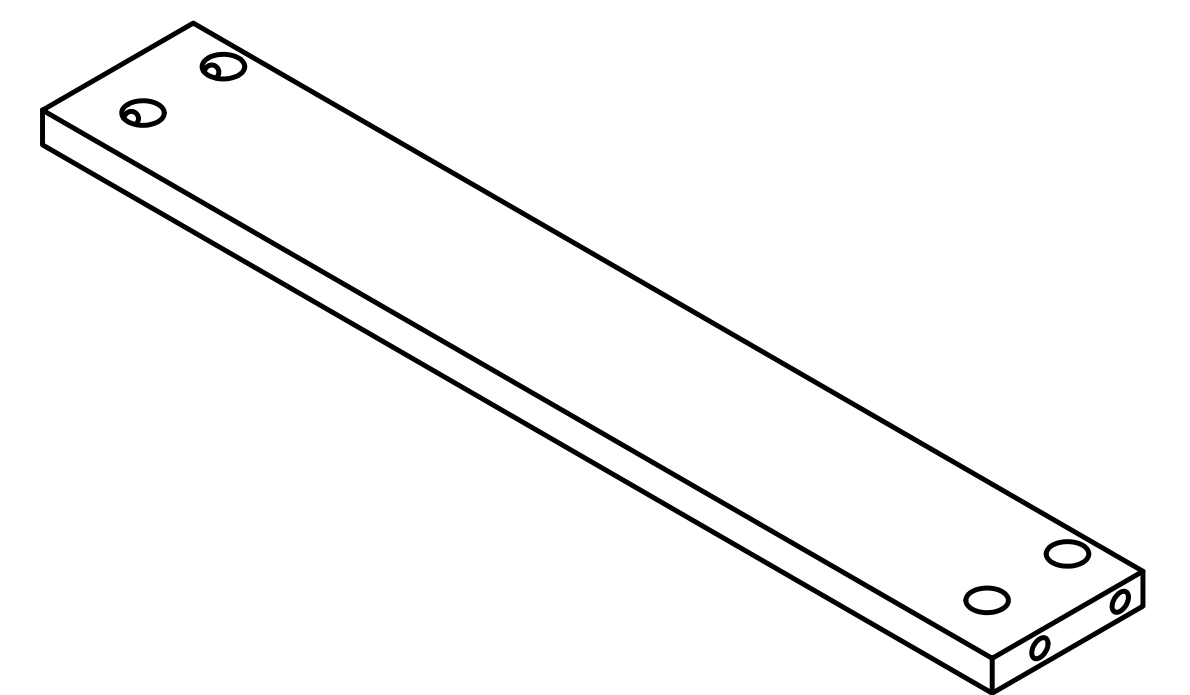


Lx1

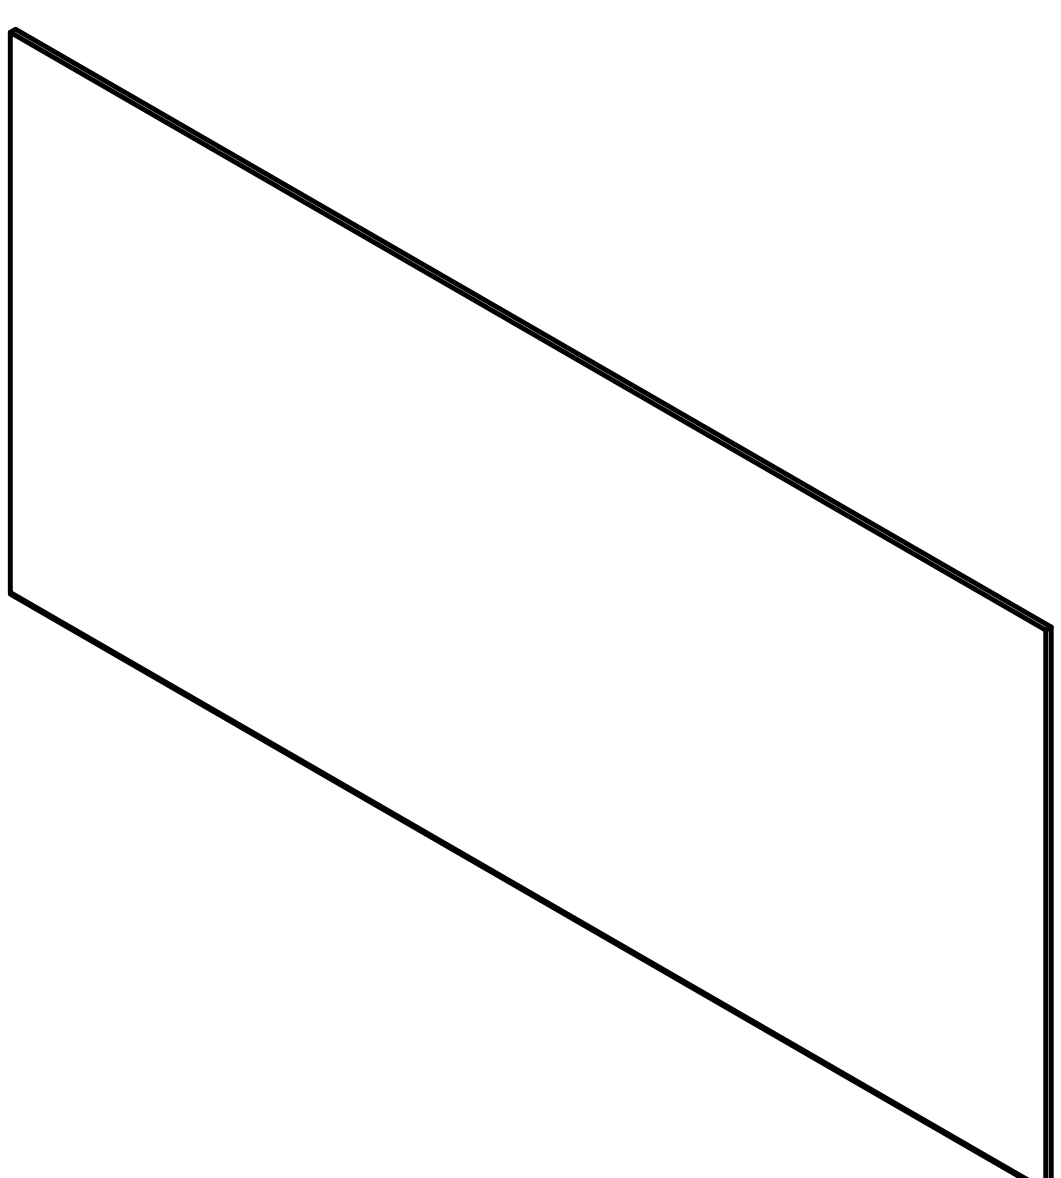


Mx2

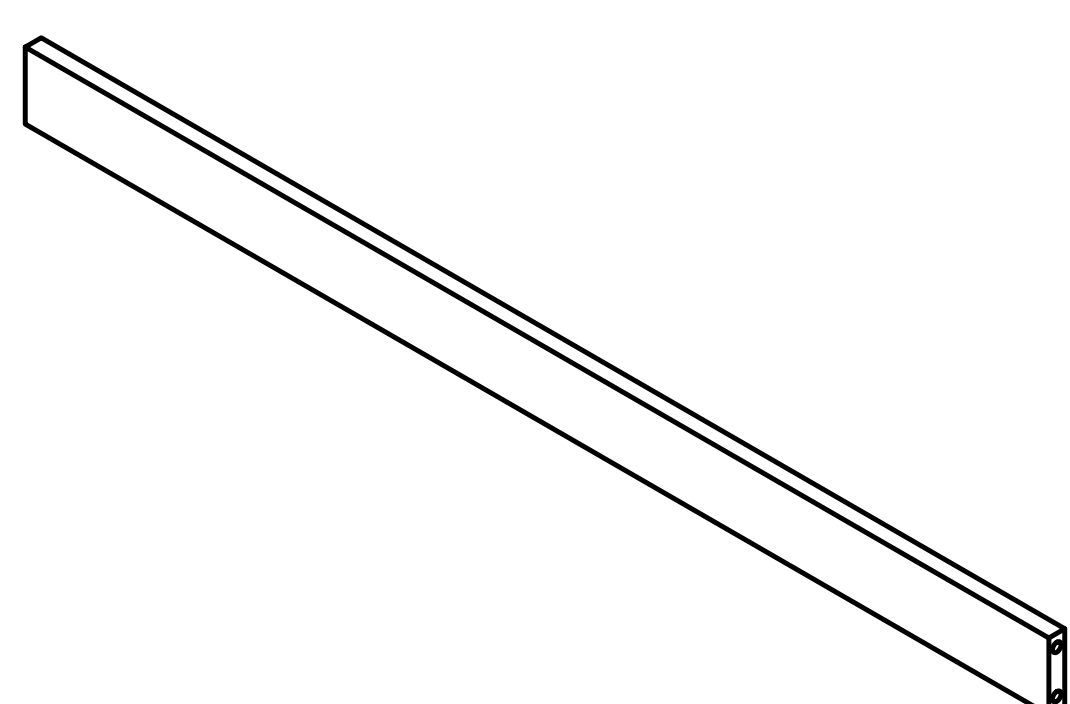

Nx1










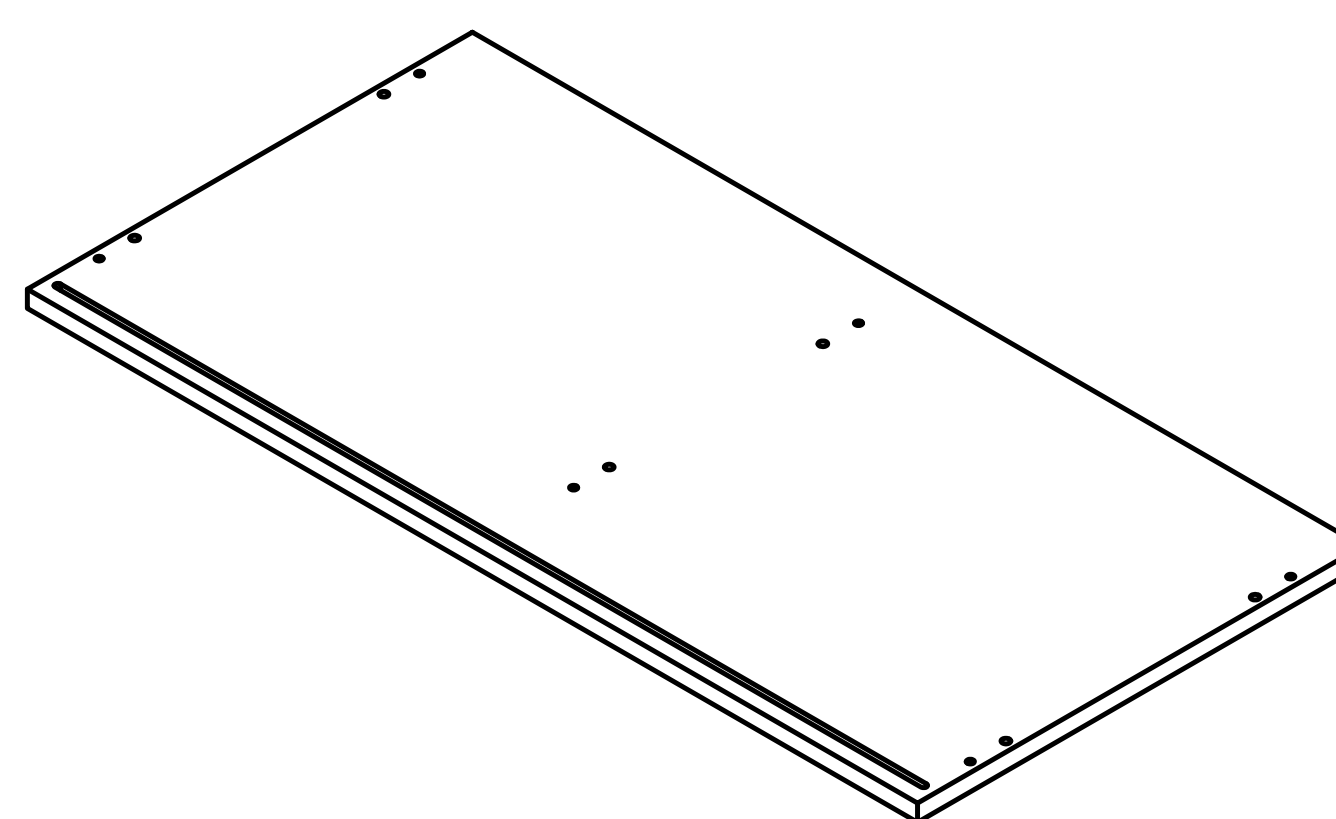


Ox1

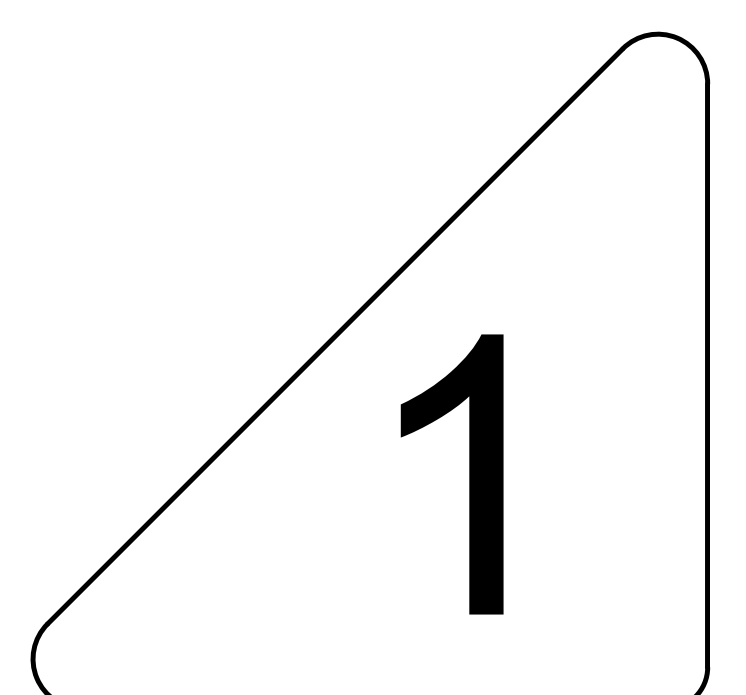


1


Accessories list

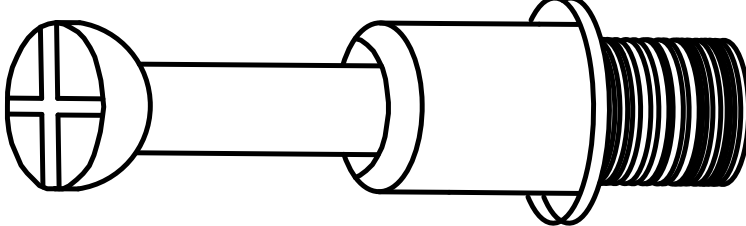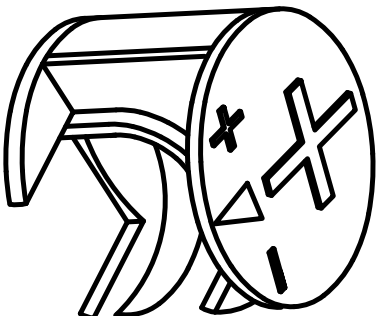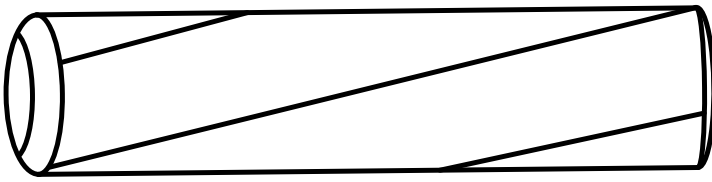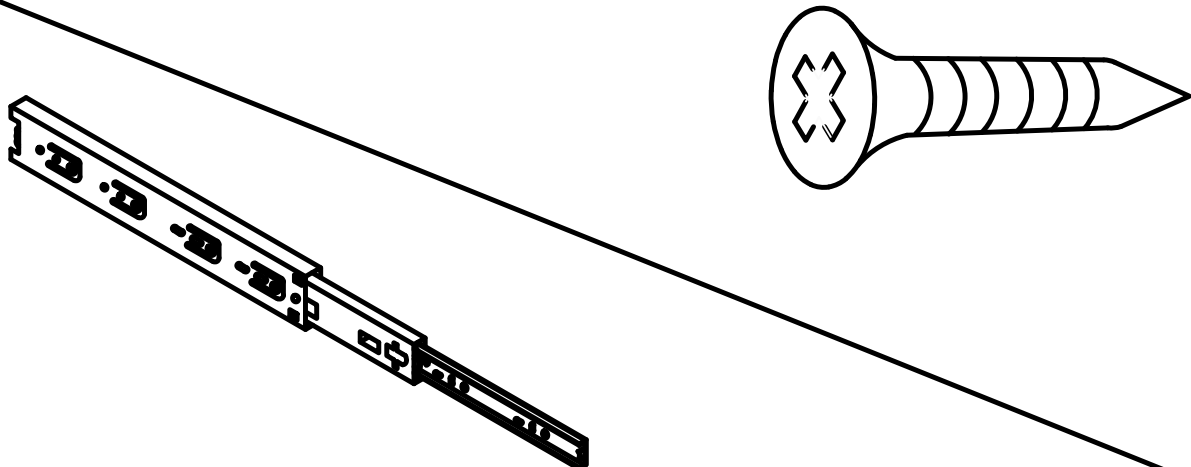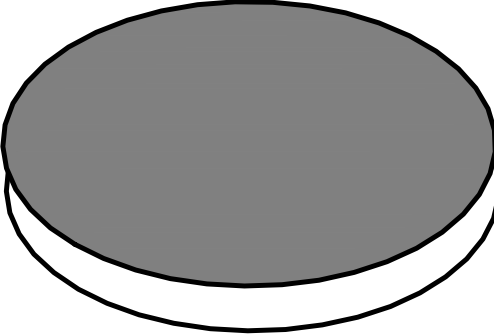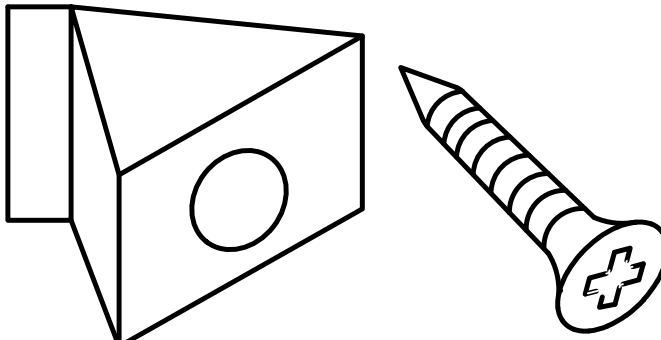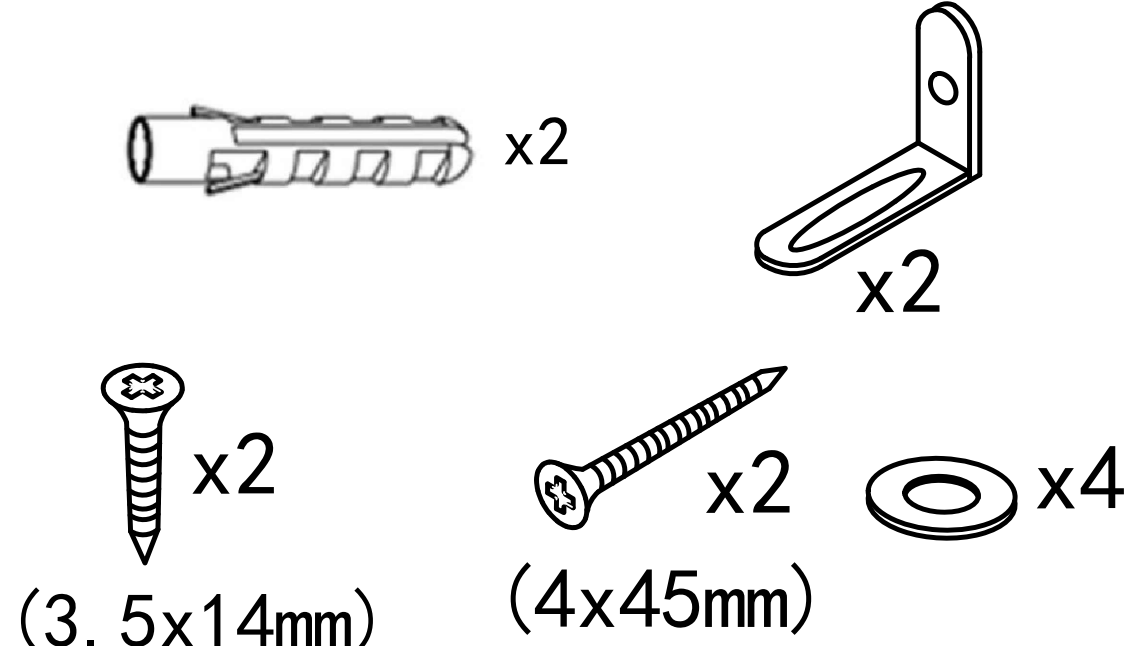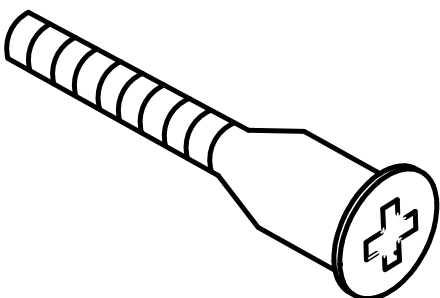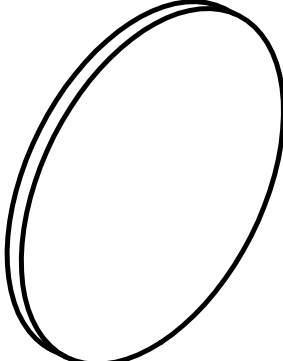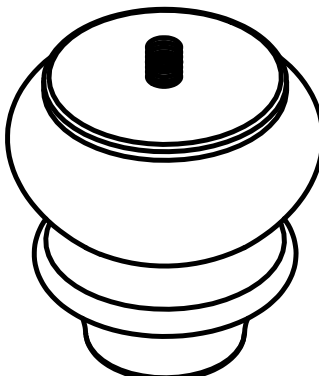①		Two in one screw (6x28mm)	68pcs +5pcs
②		Two in one nut (10x12mm)	68pcs +5pcs
③		Wood chipping (6x30mm)	12pcs +4pcs
④		Guide & Screw(29cm) (3x12mm)	40pcs +8pcs 8pcs
⑤		Non-slip pads (φ20x2mm)	4pcs +1pcs
⑥		Fixing clip & screw (3x16mm)	8pcs +1pcs
⑦		Anti Fall Hardware	1pcs
⑧		Screw (5x40mm)	4pcs +1pcs
⑨		round decorative stickers	4pcs +2pcs
P		wooden foot	4pcs


Double-head screwdriver, use as required

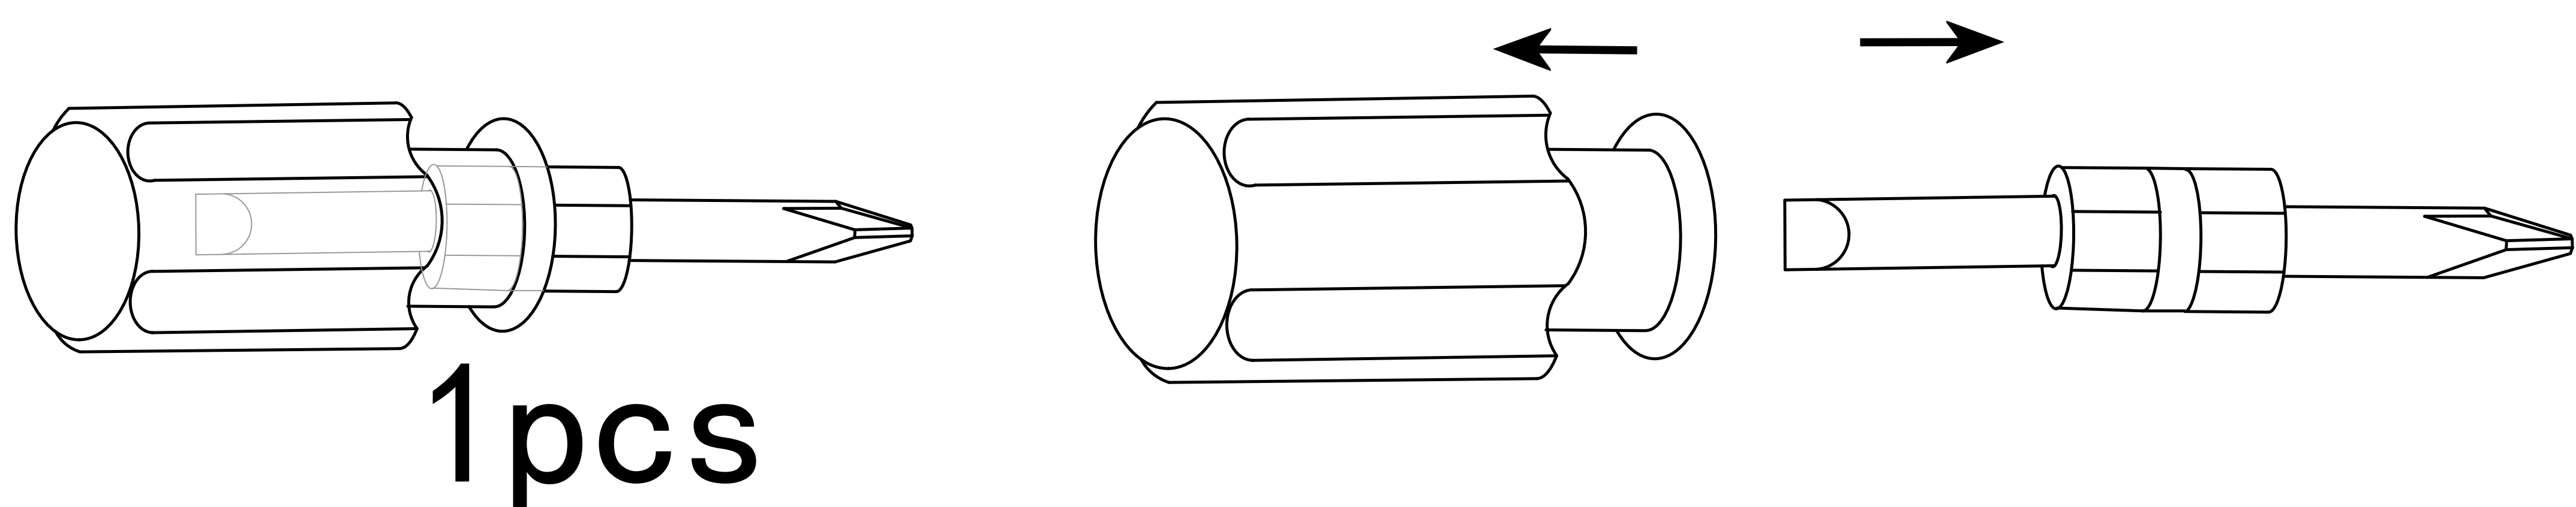

Product structure decomposition

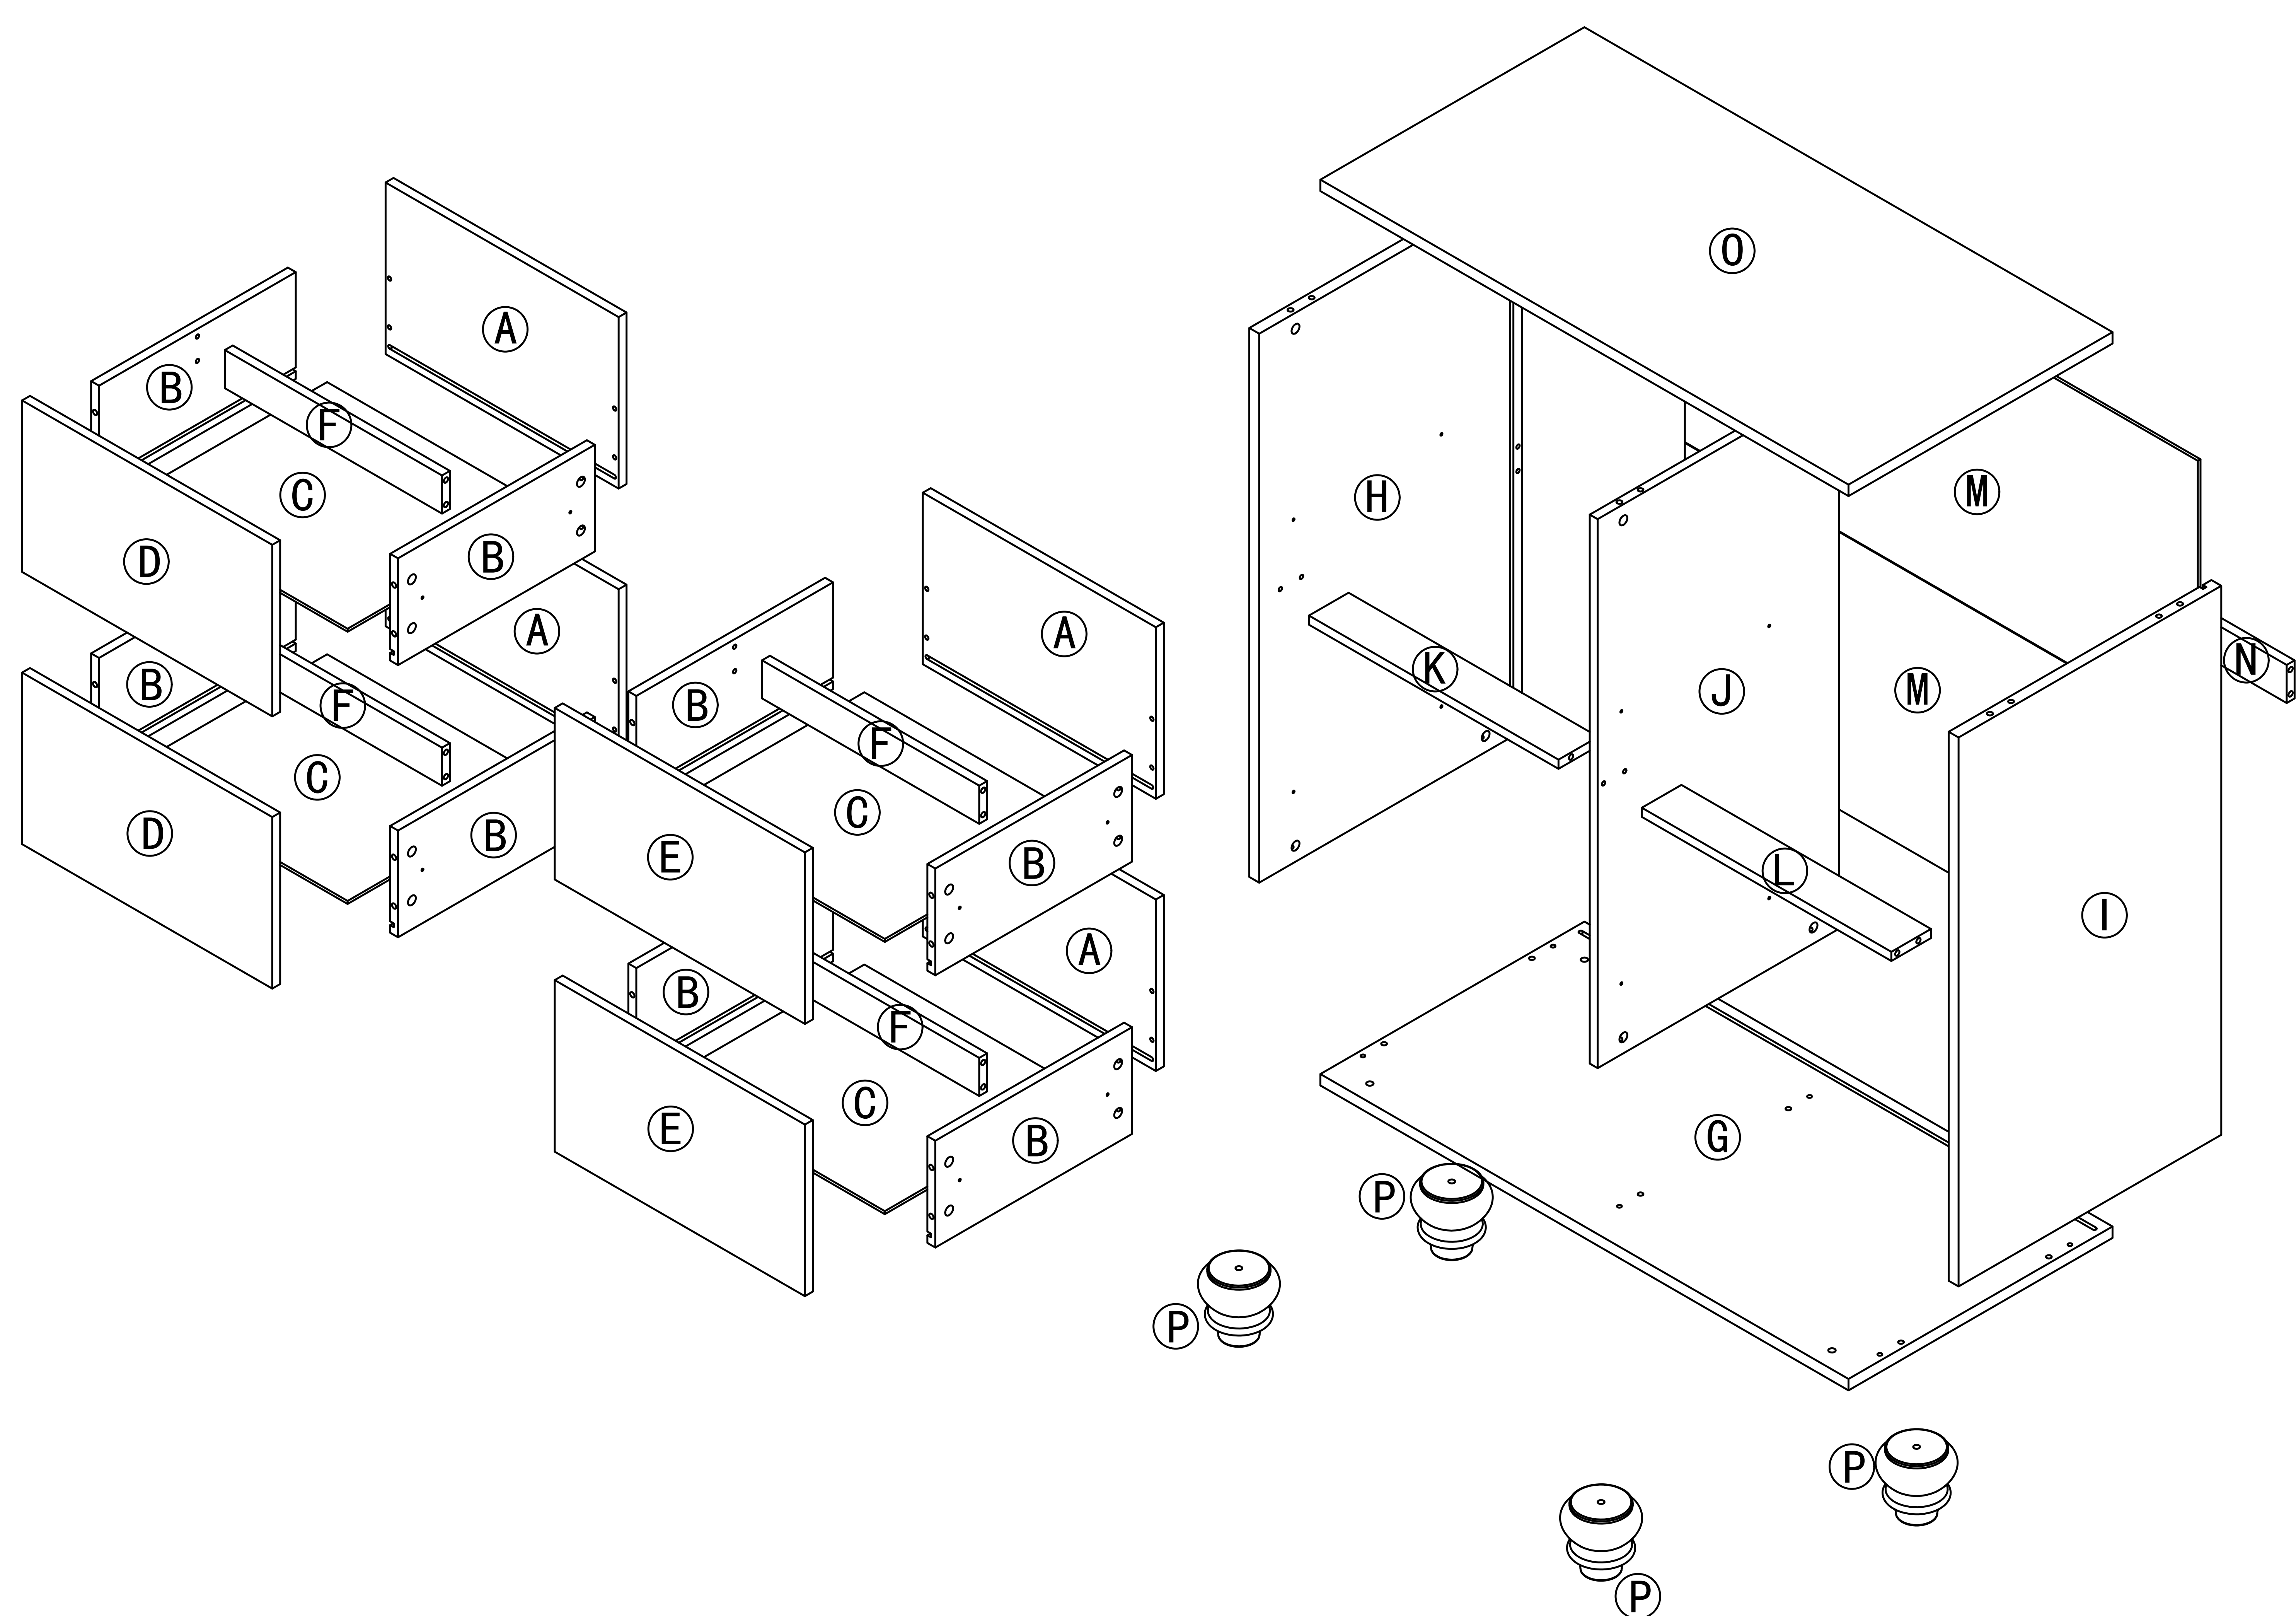


1

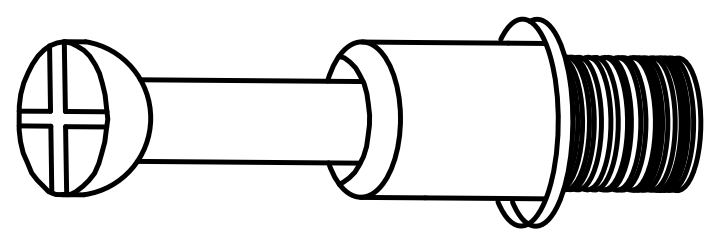


48pcs

2

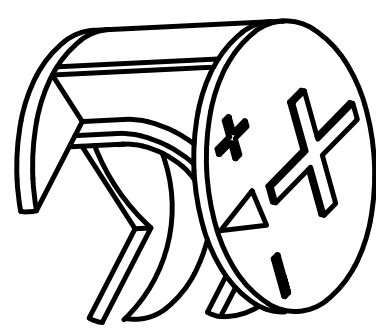


48pcs



4

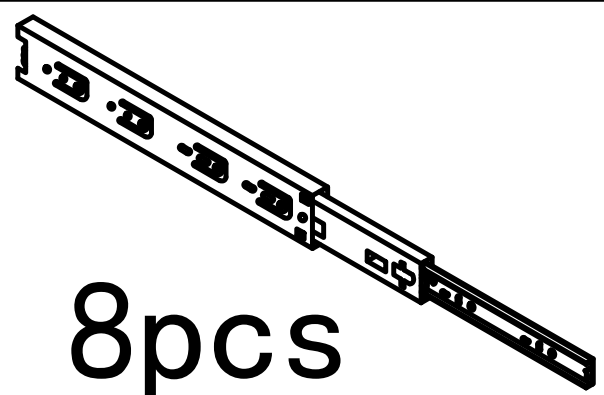

8pcs

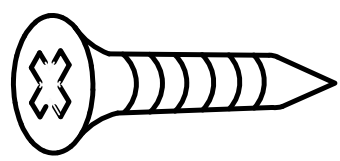


16pcs

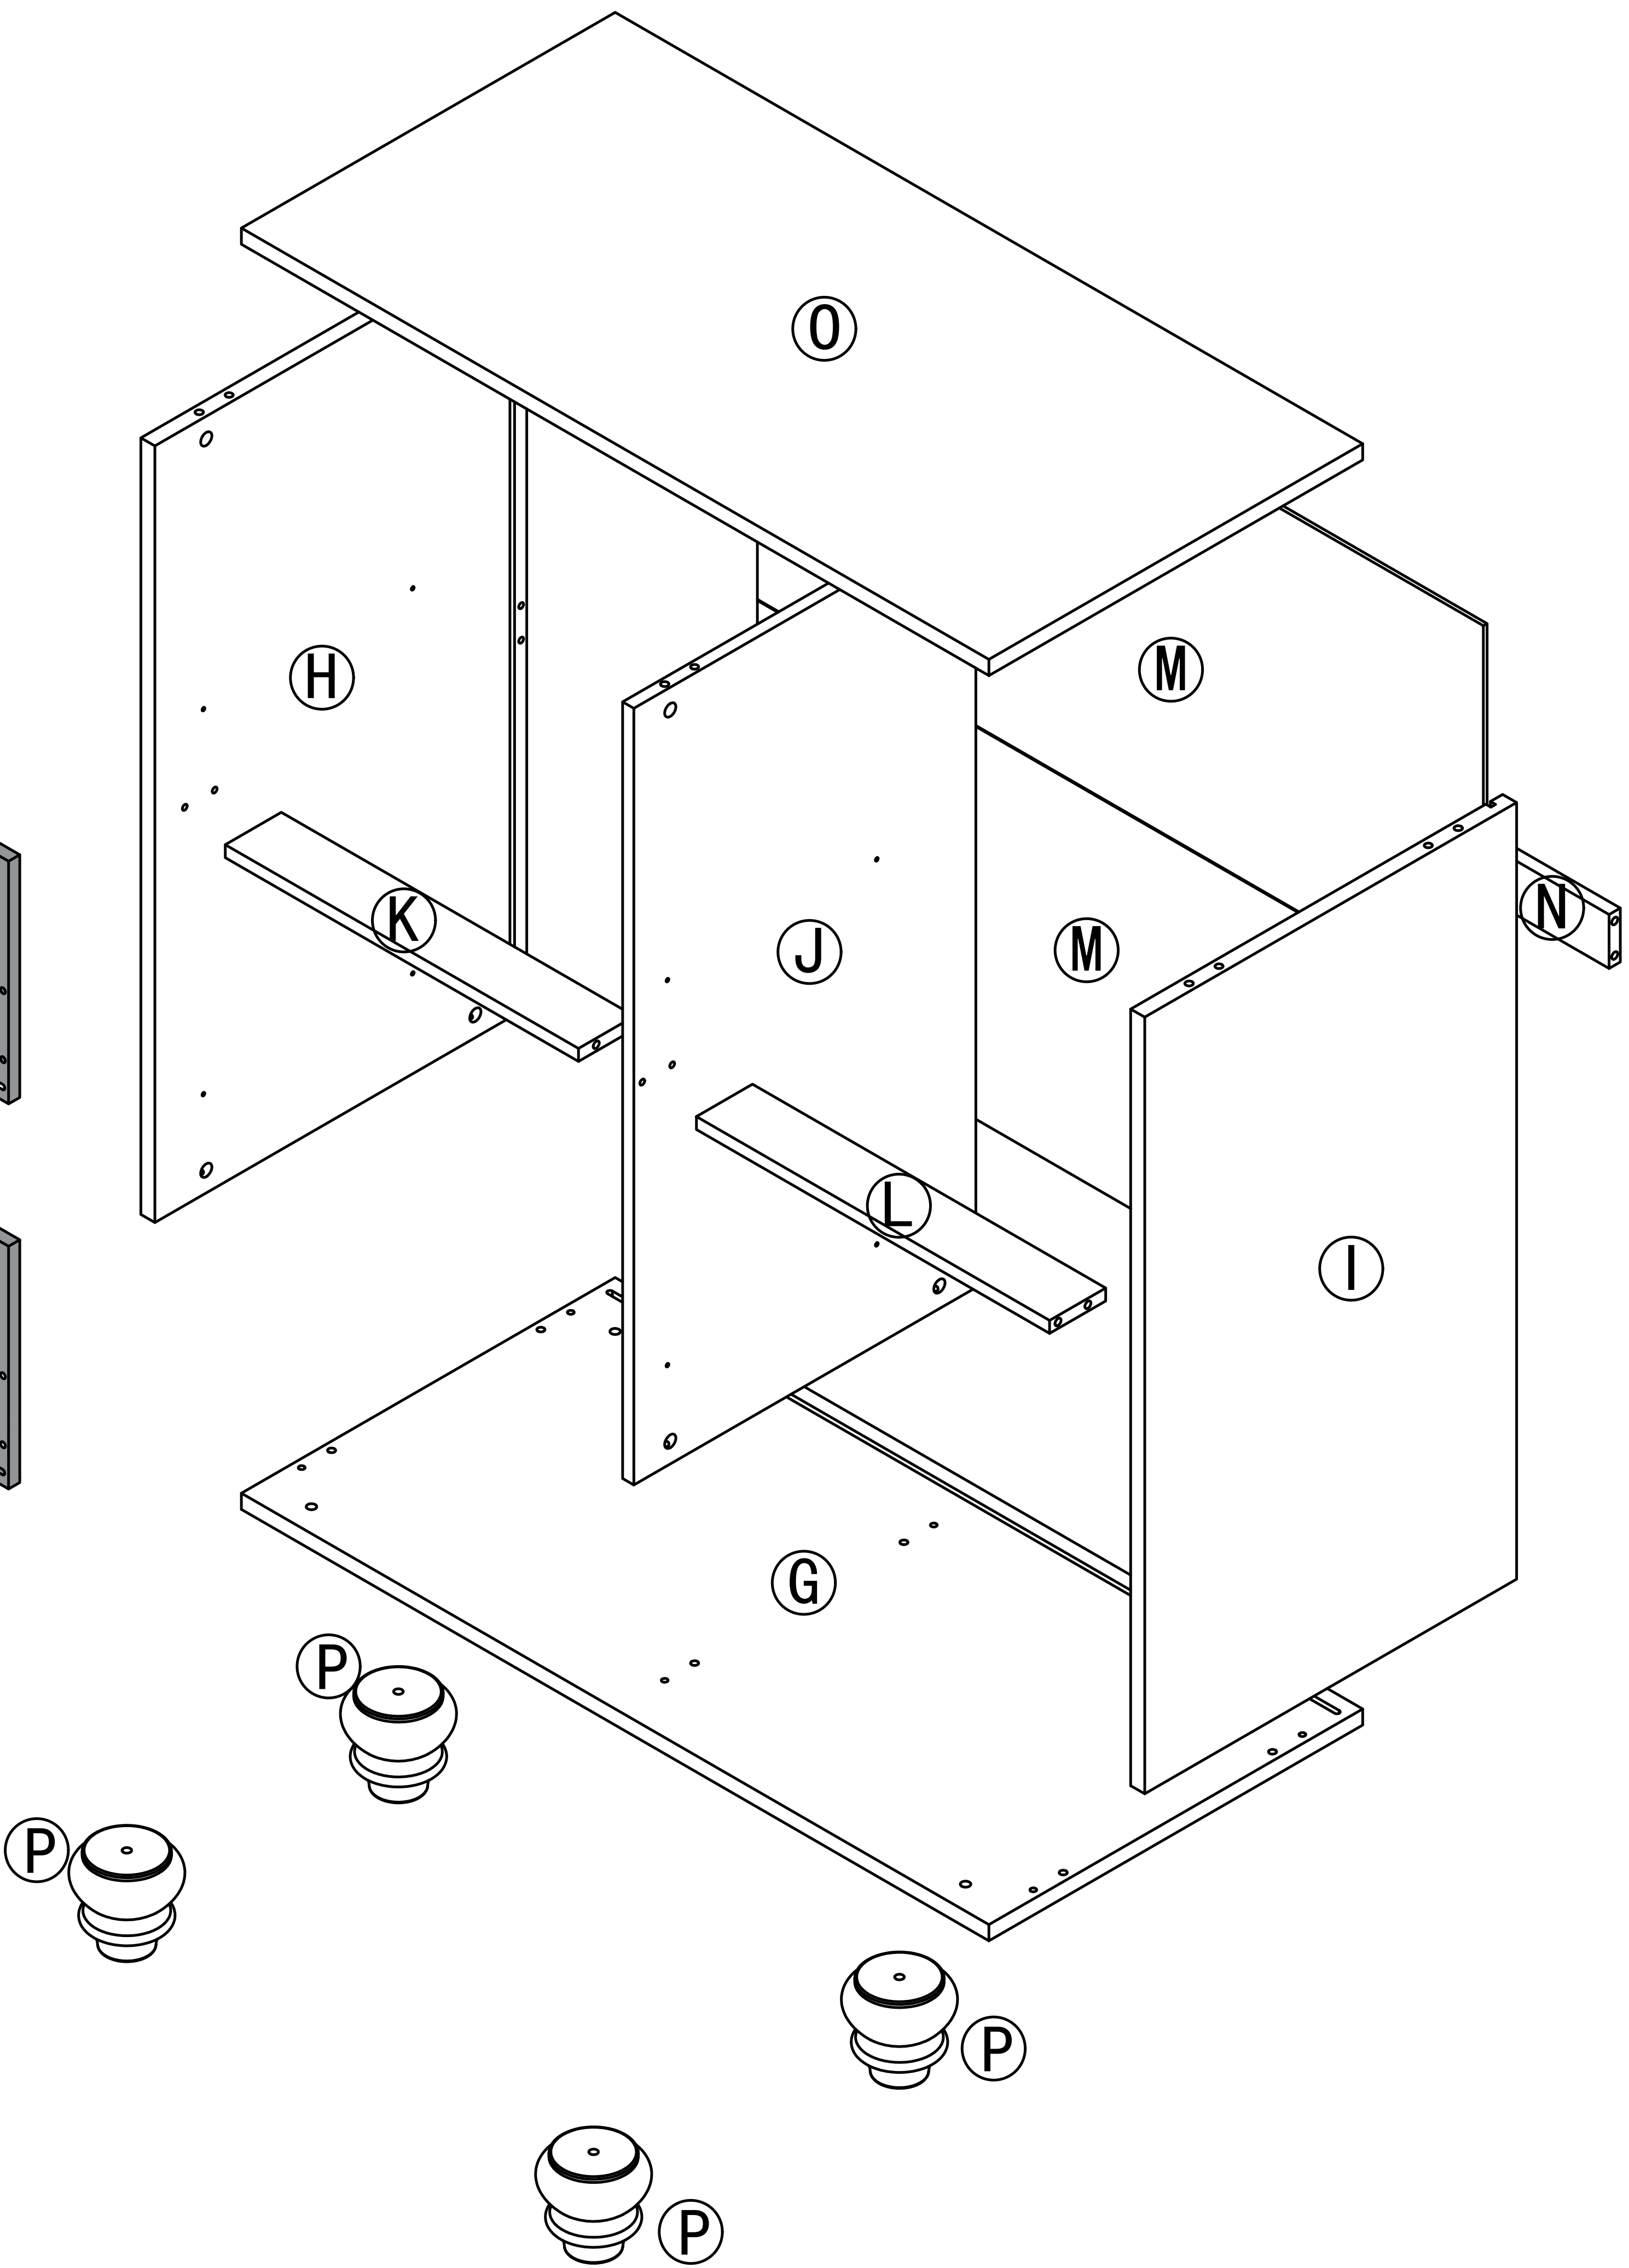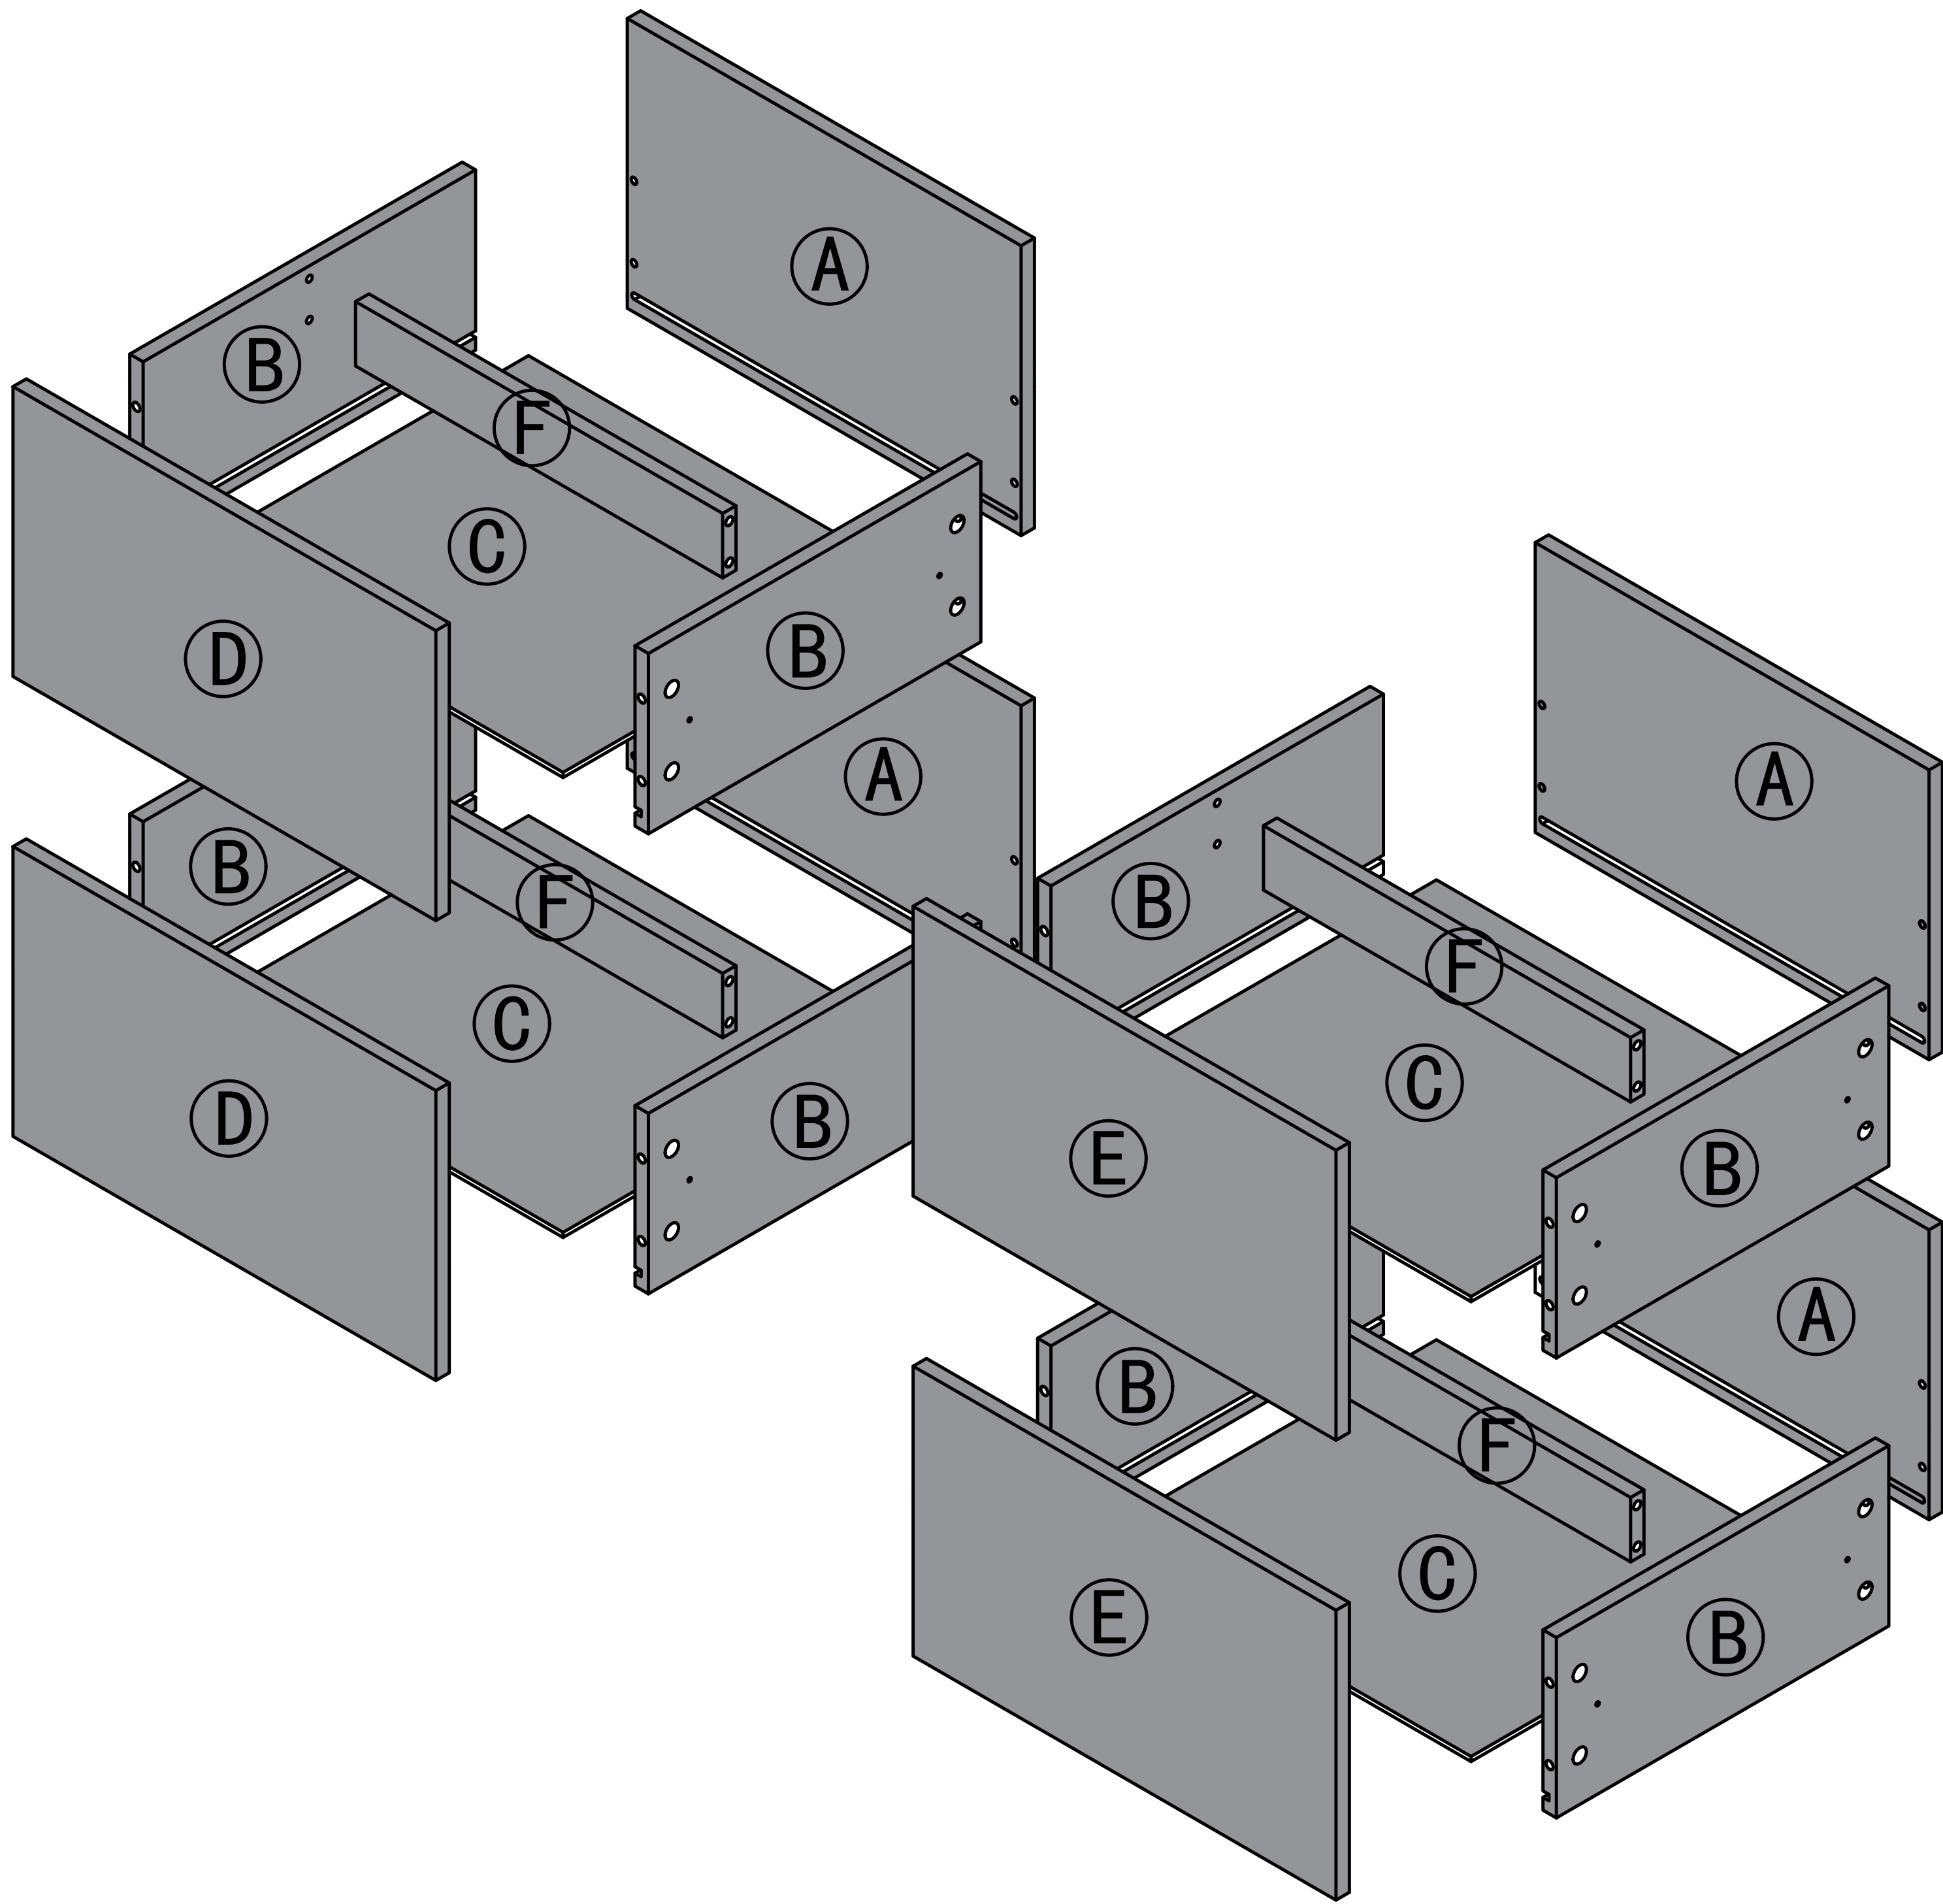


4

Use parts ① and ②




Step1

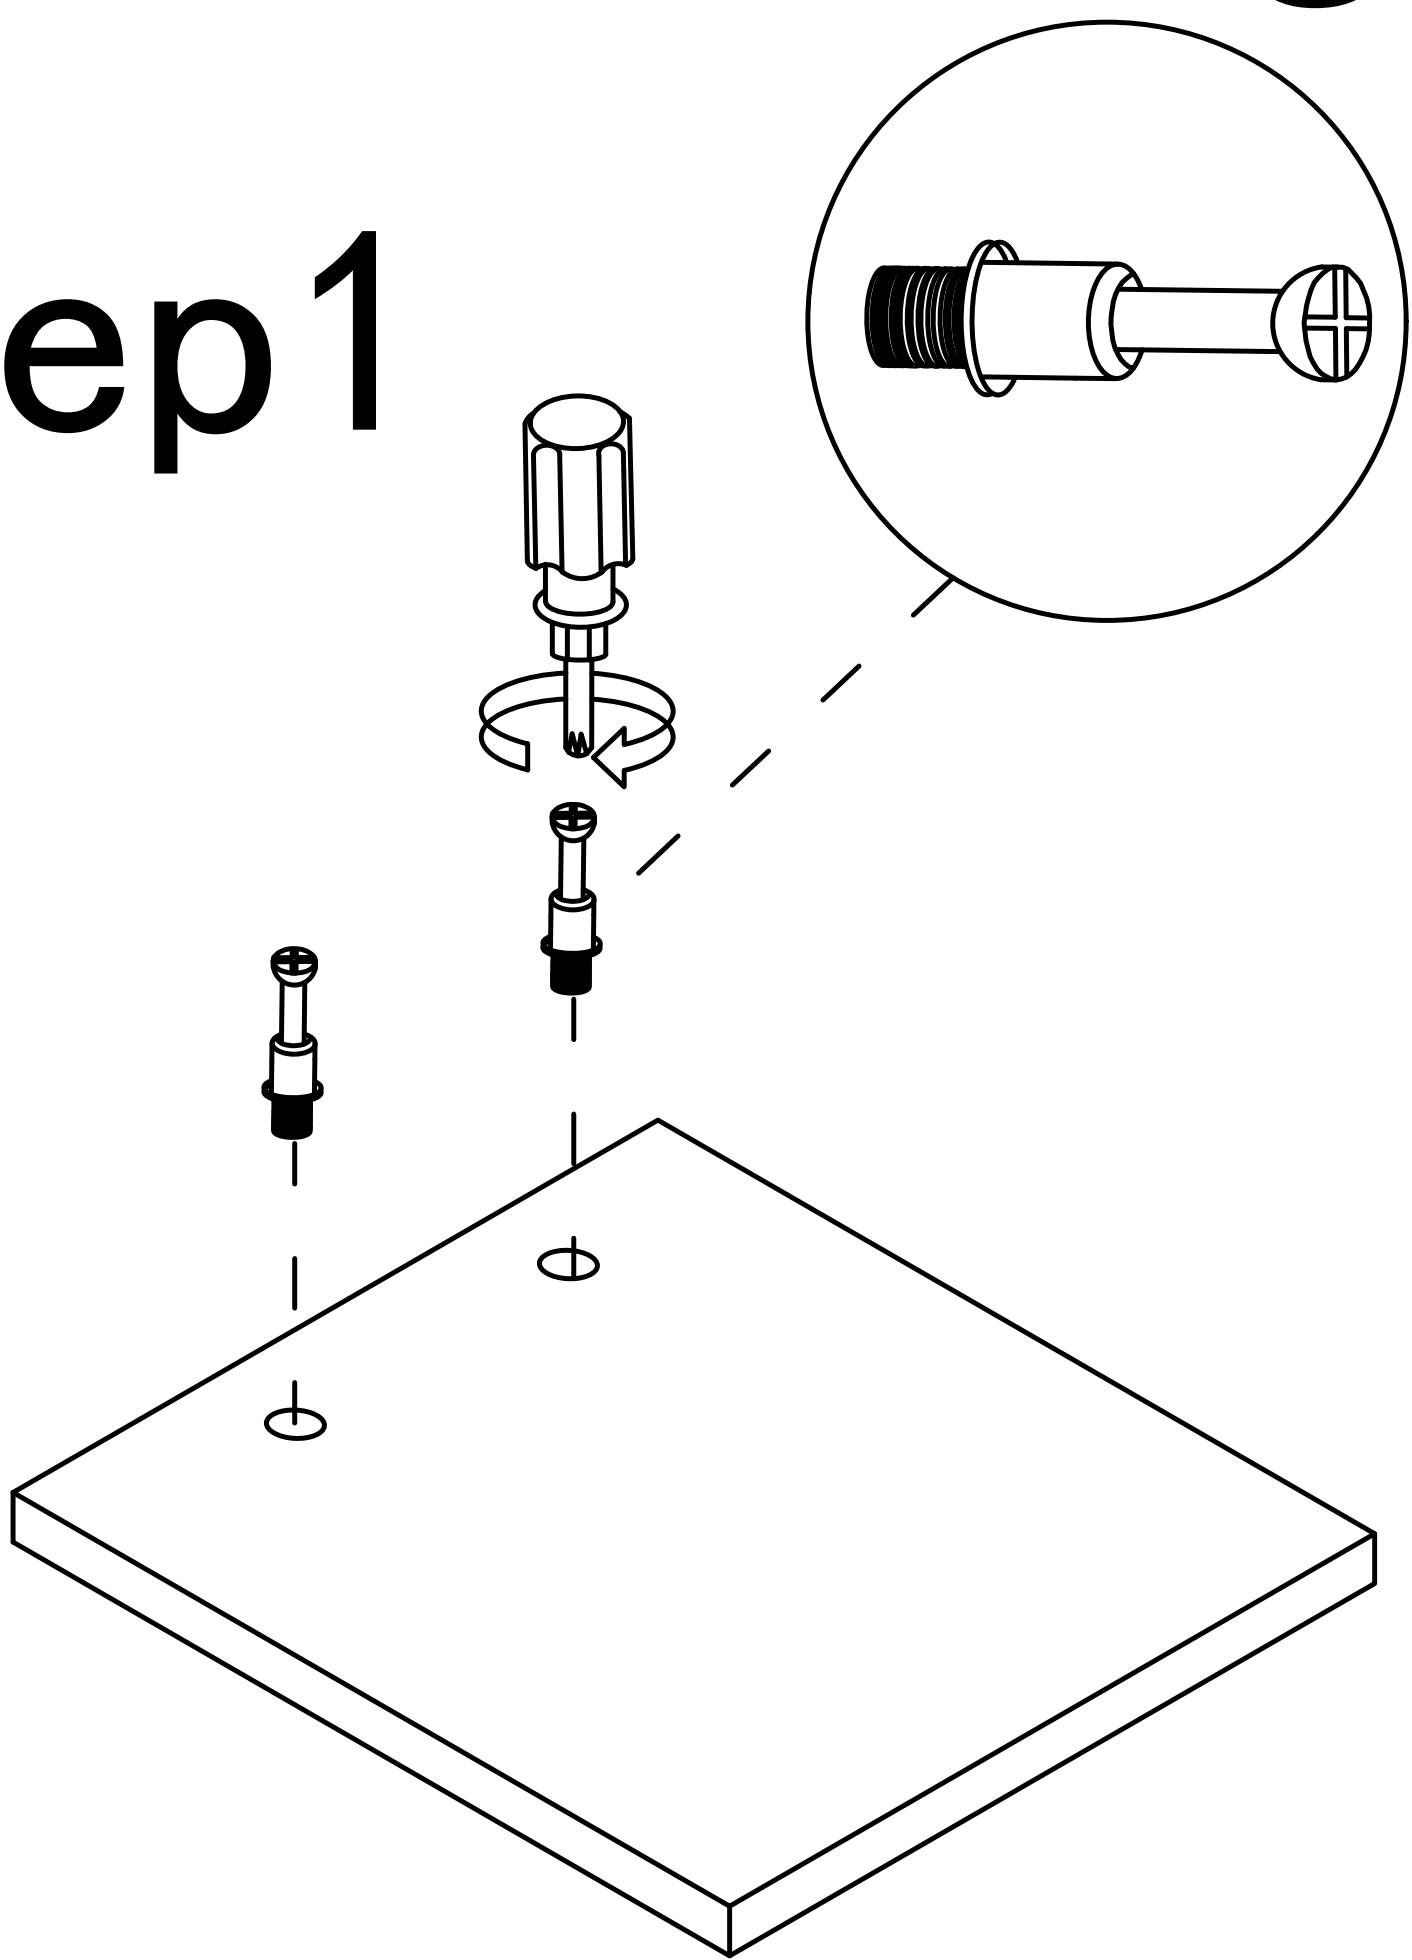

Step2

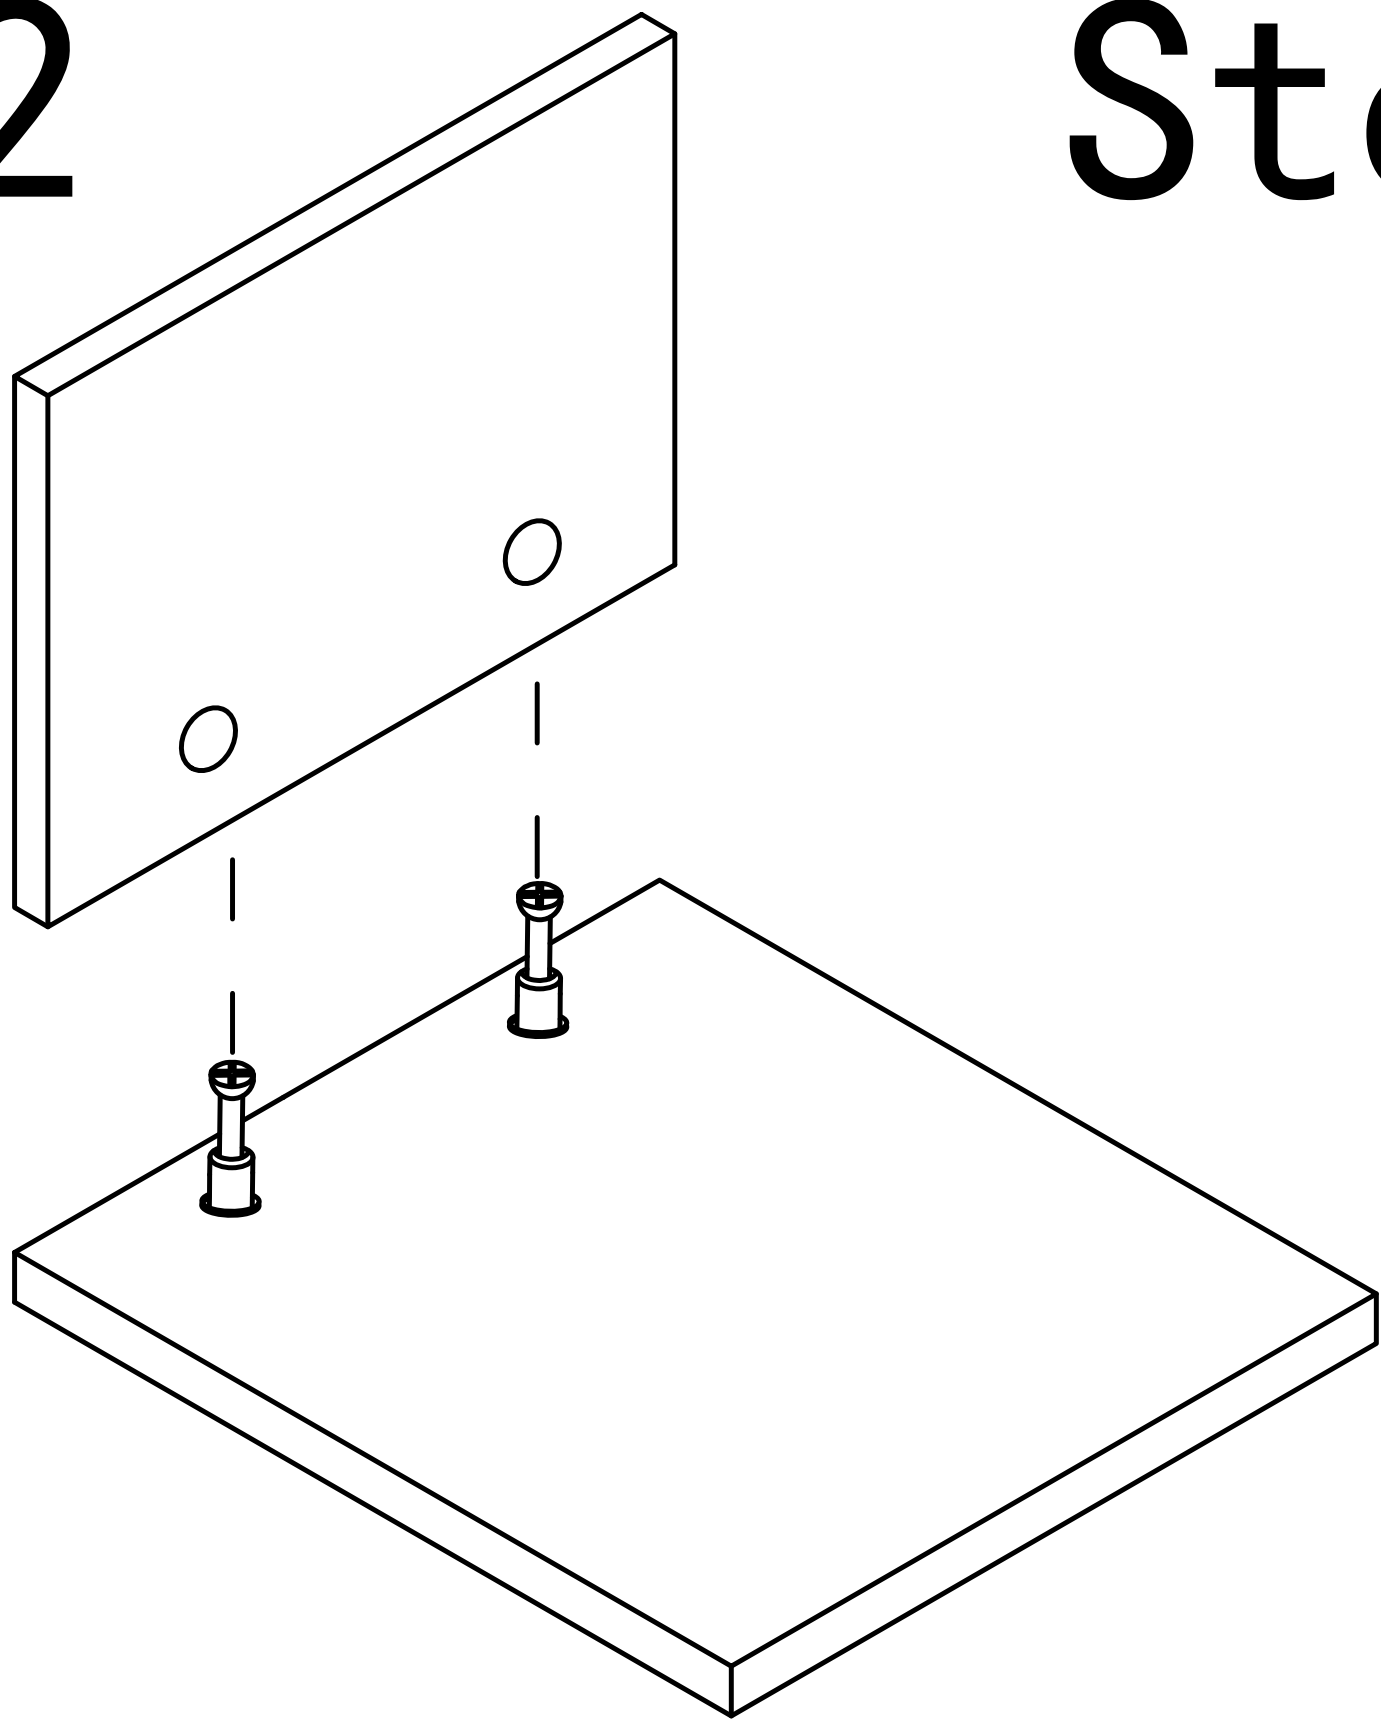



Step3

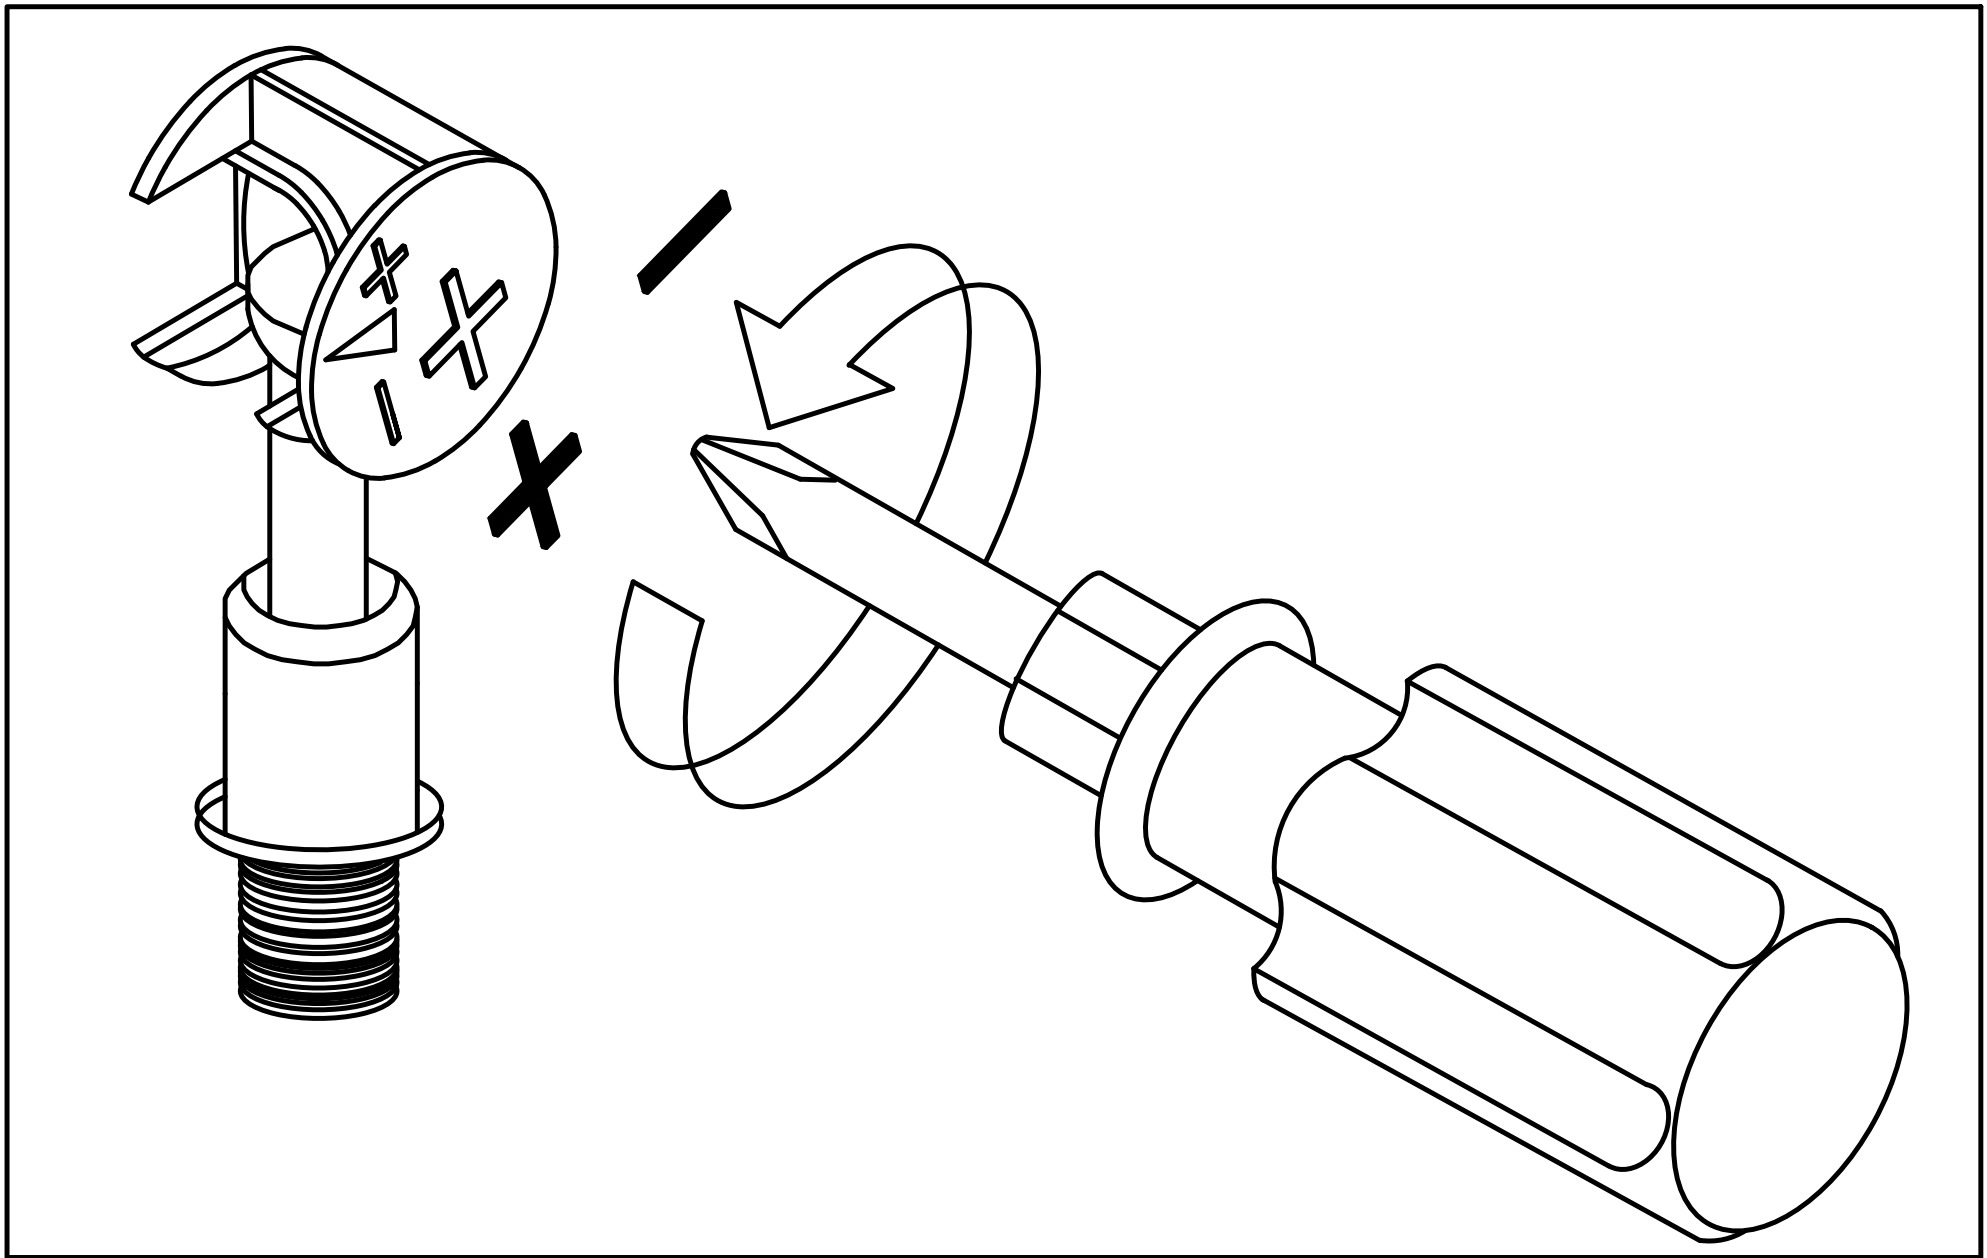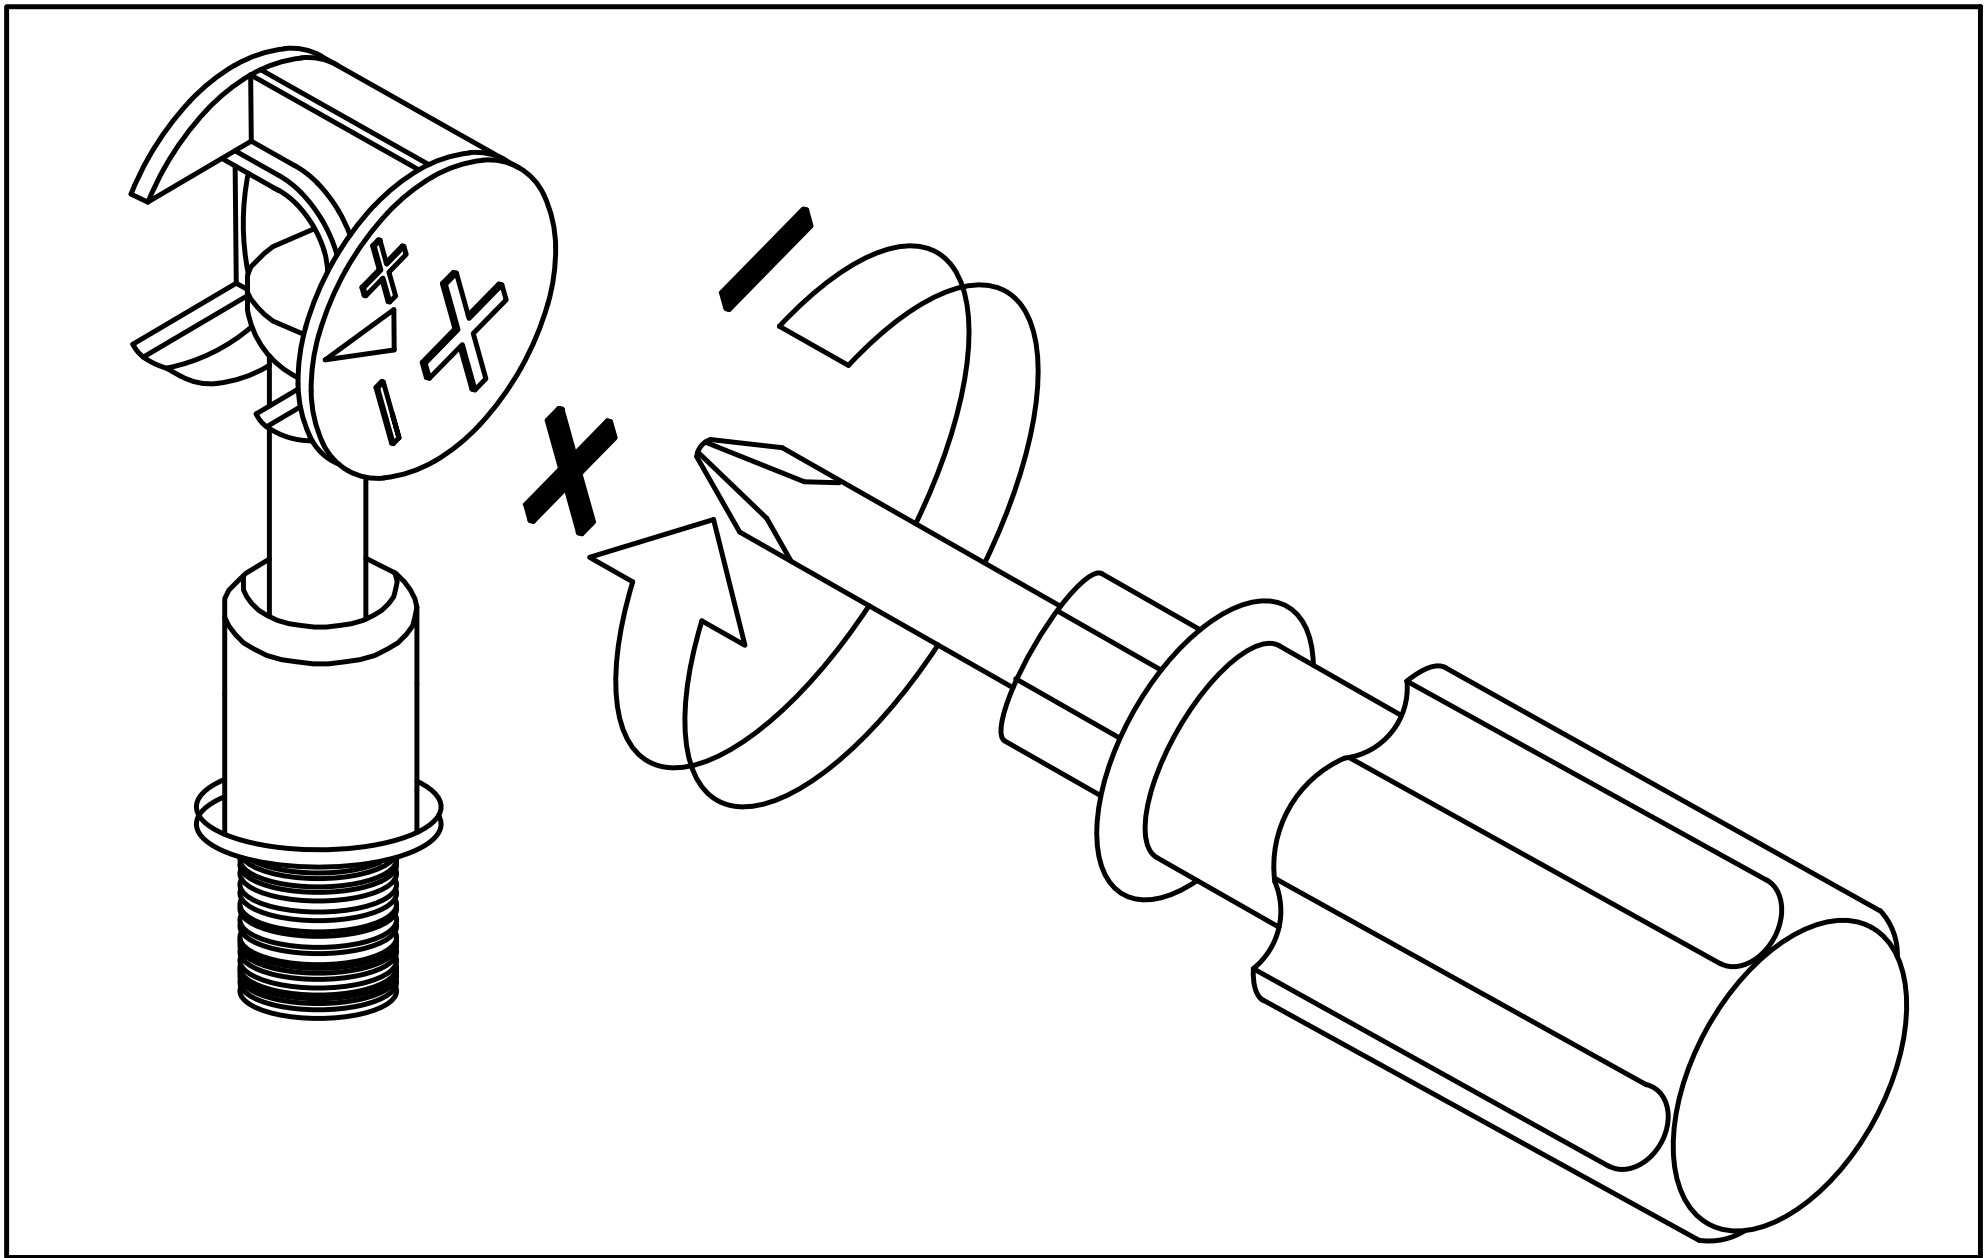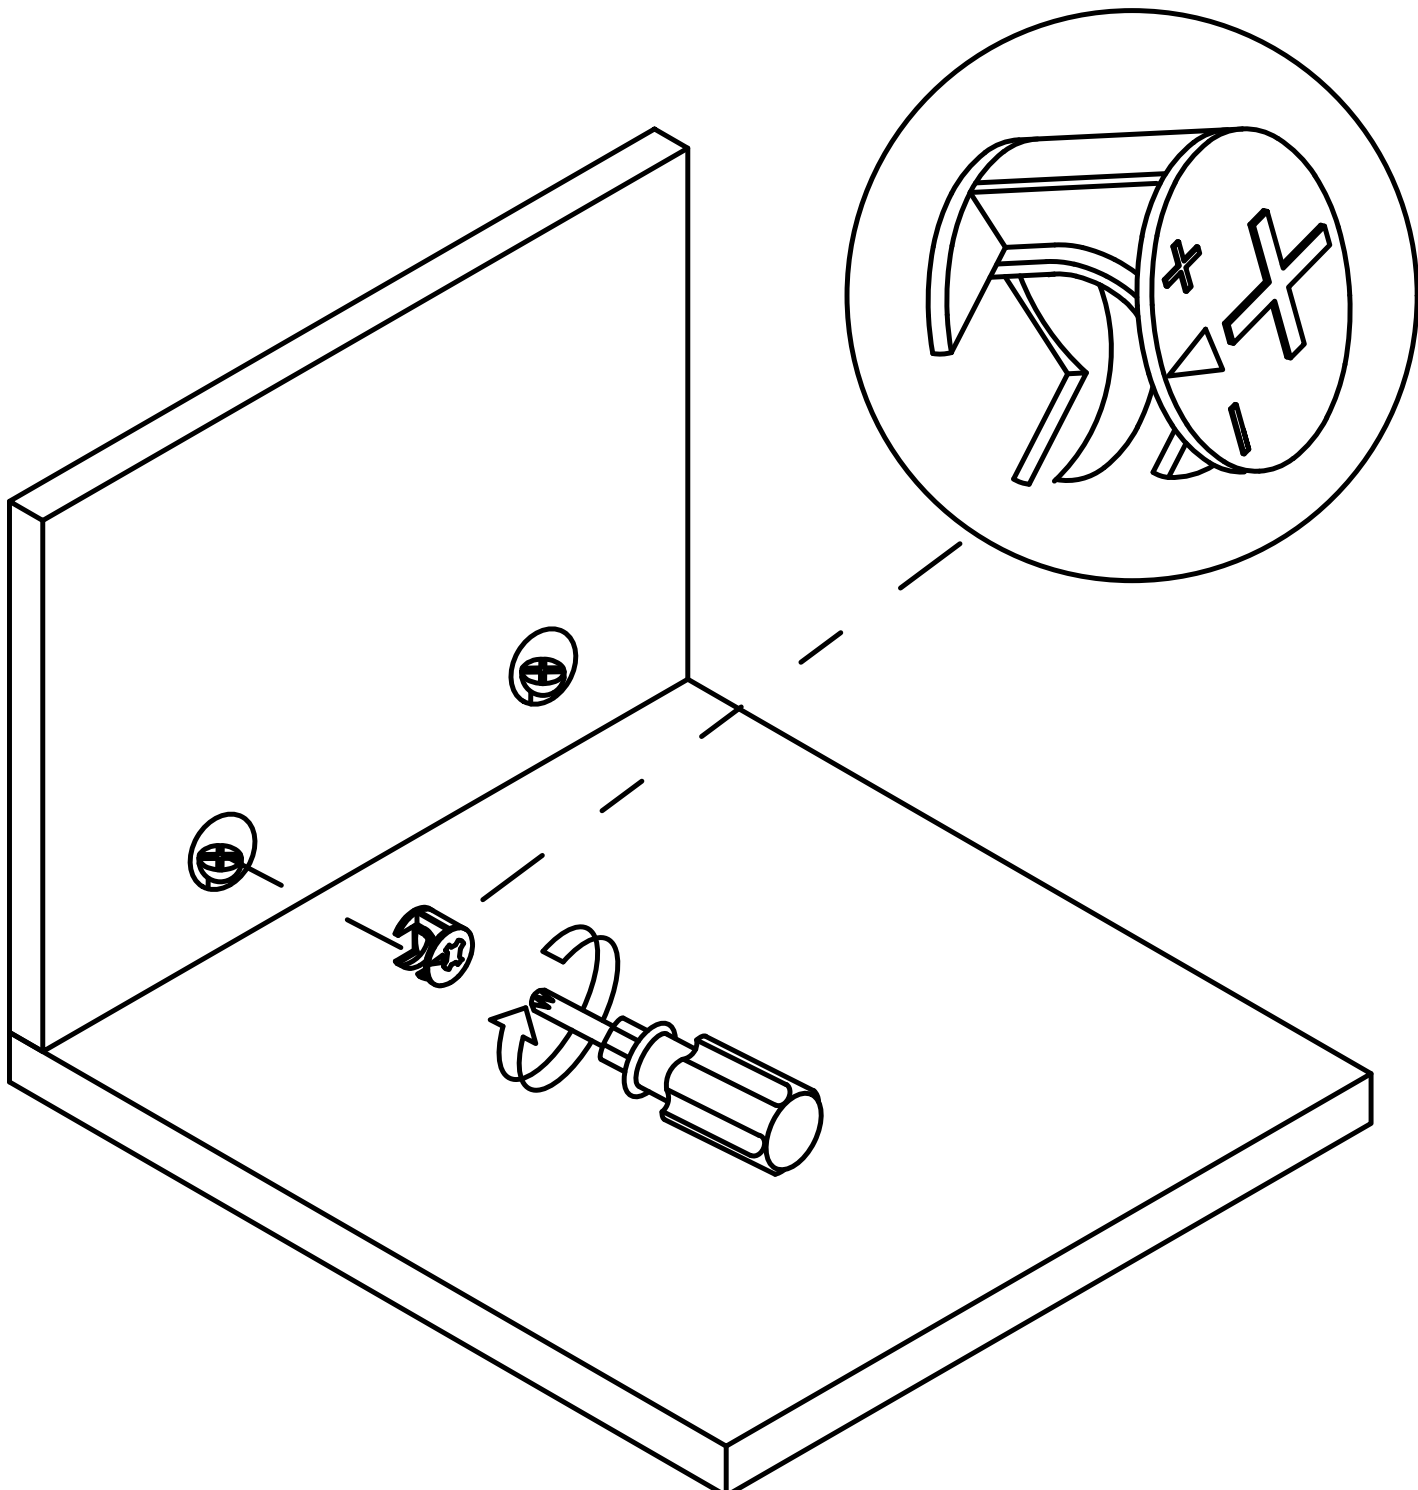

Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

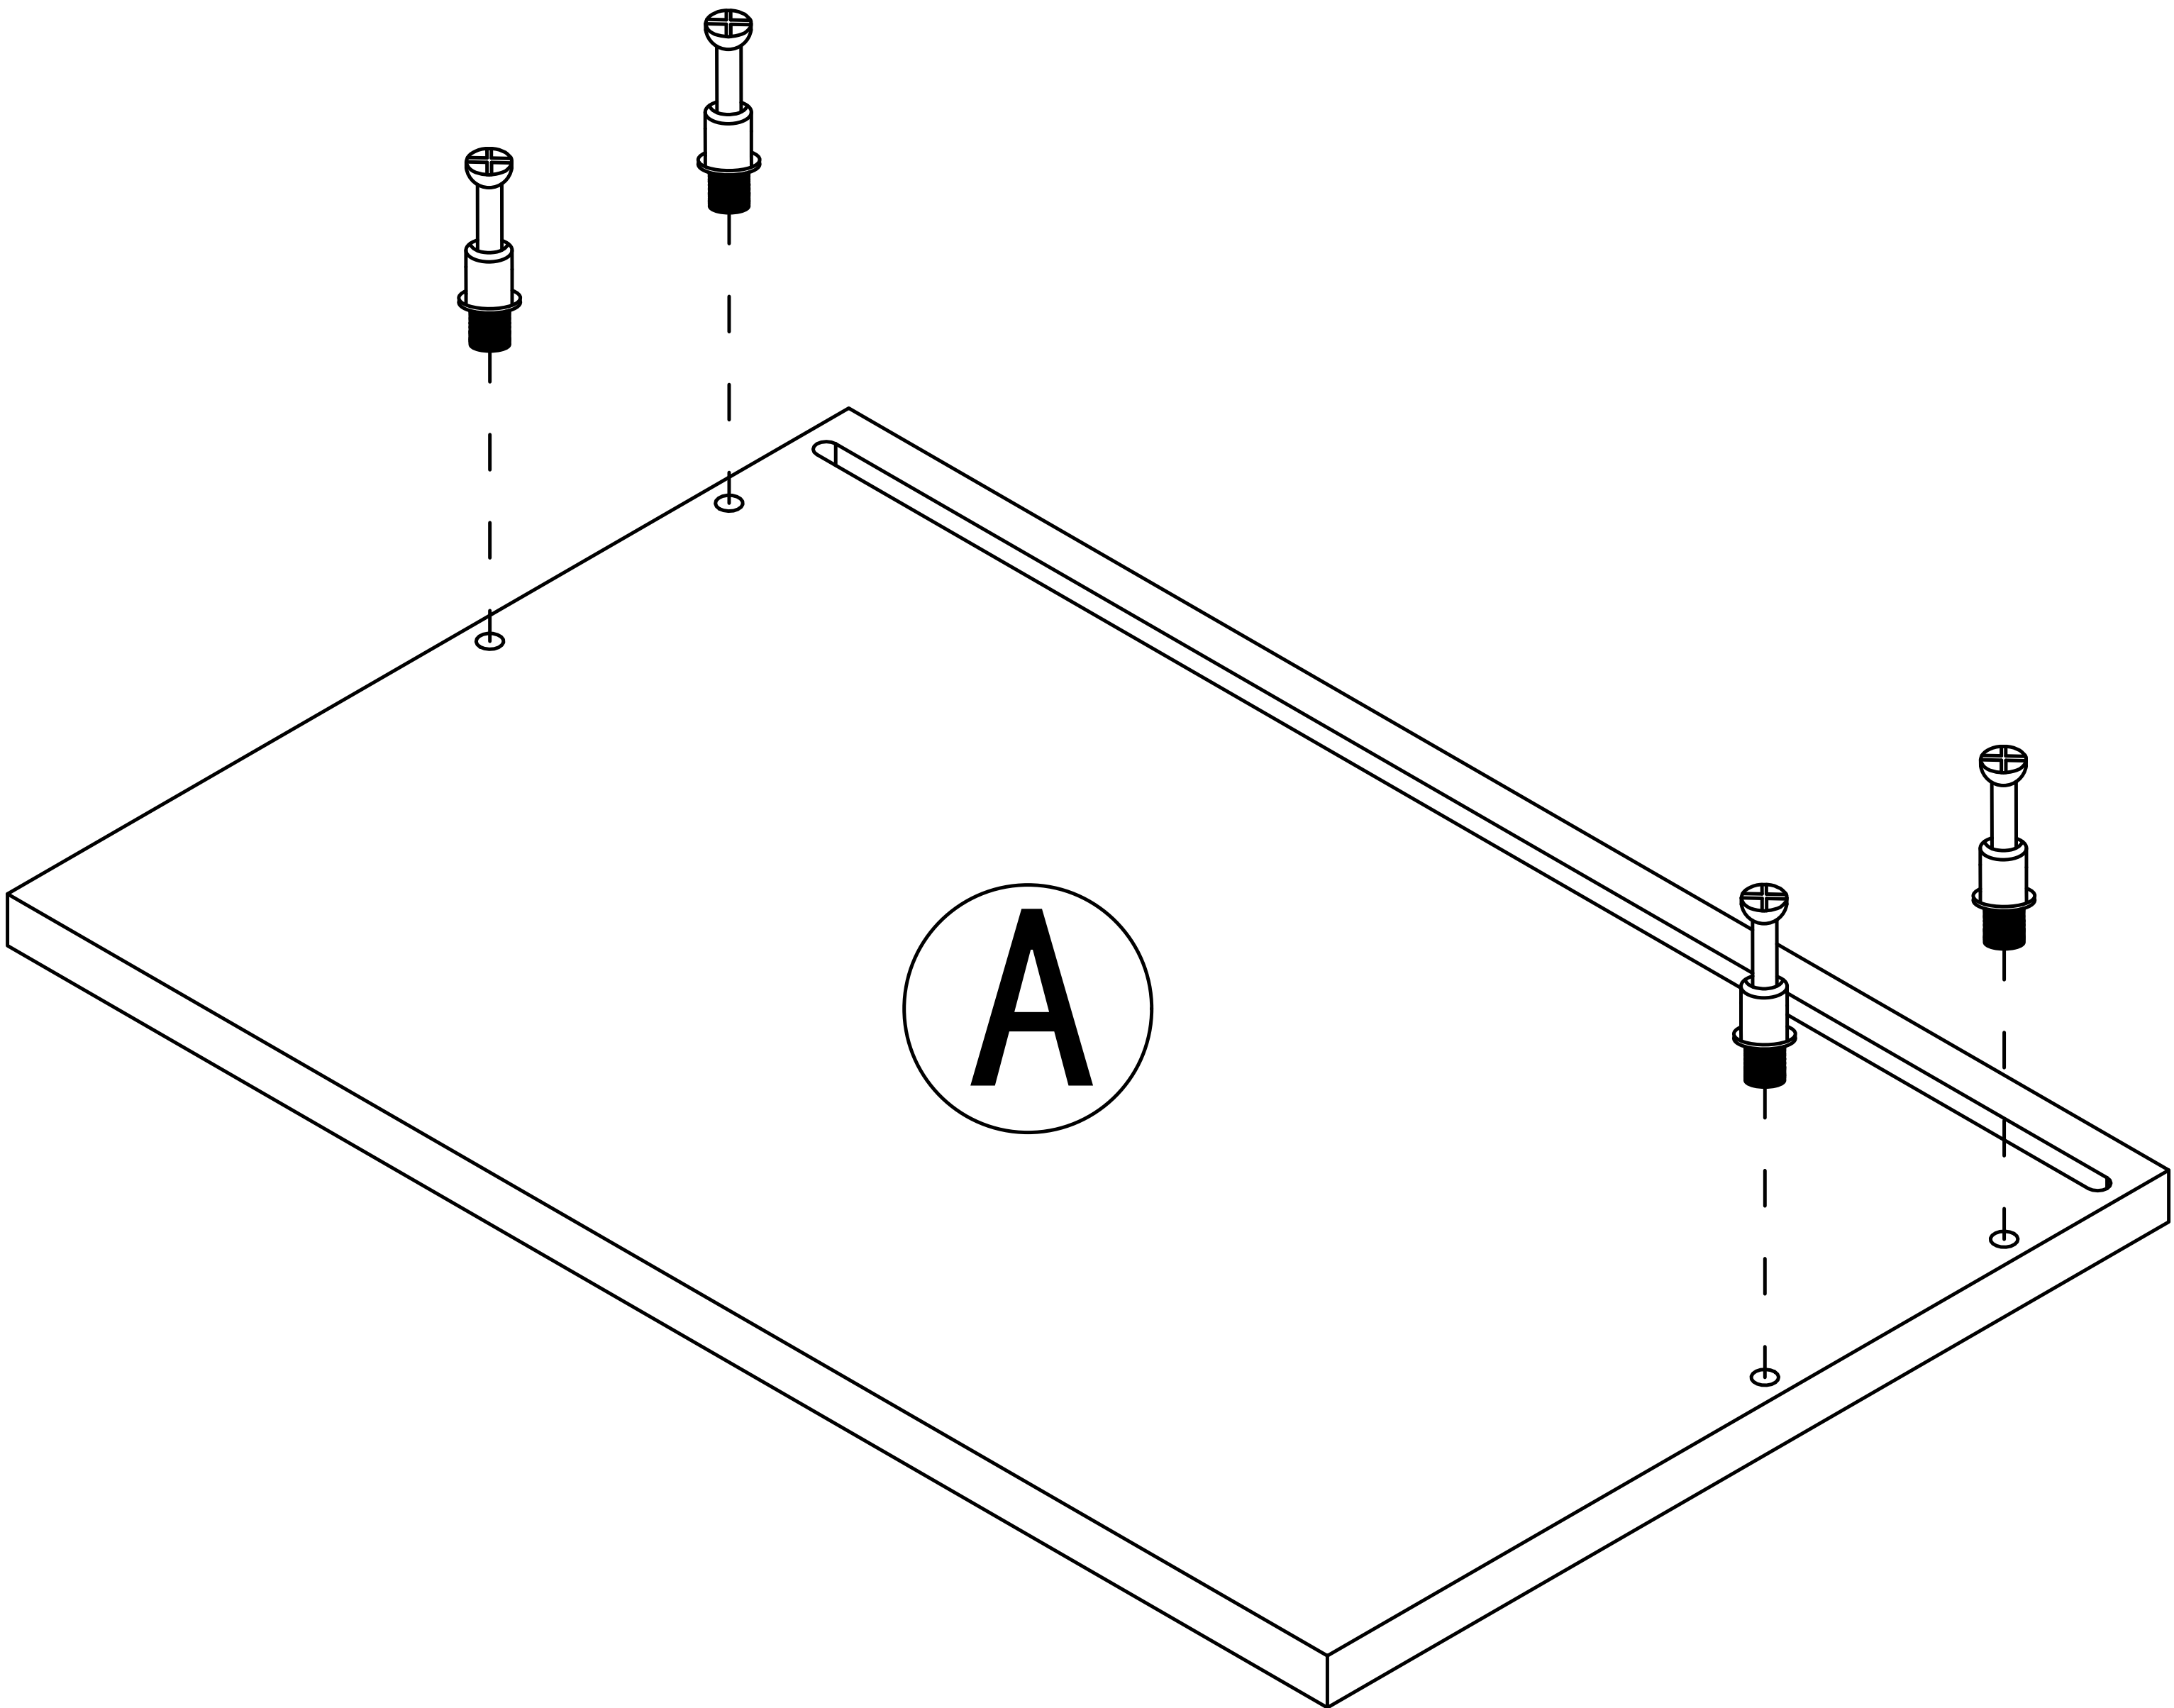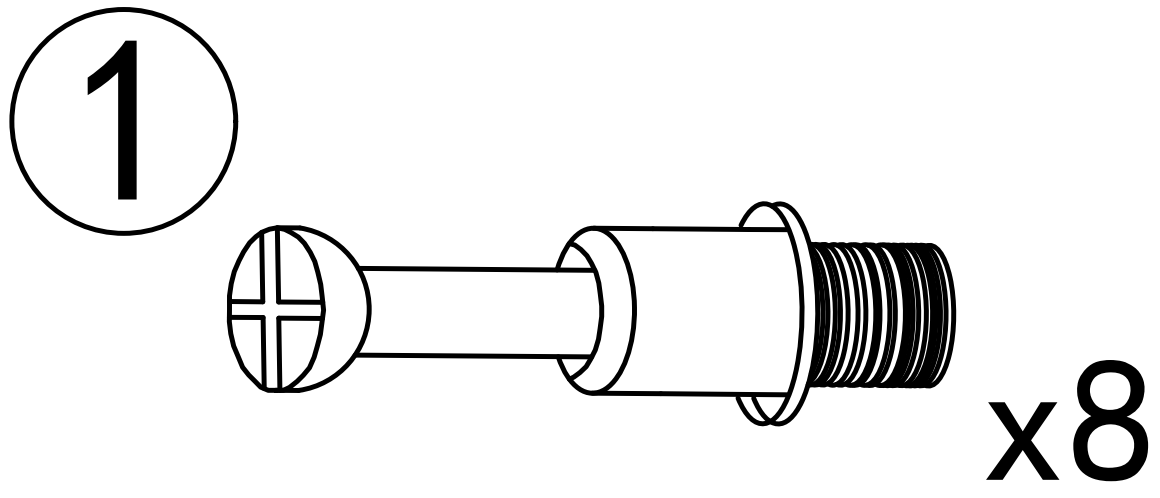


x2


5

Step 2

1

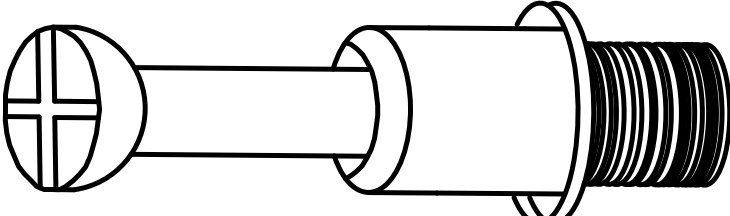


x8

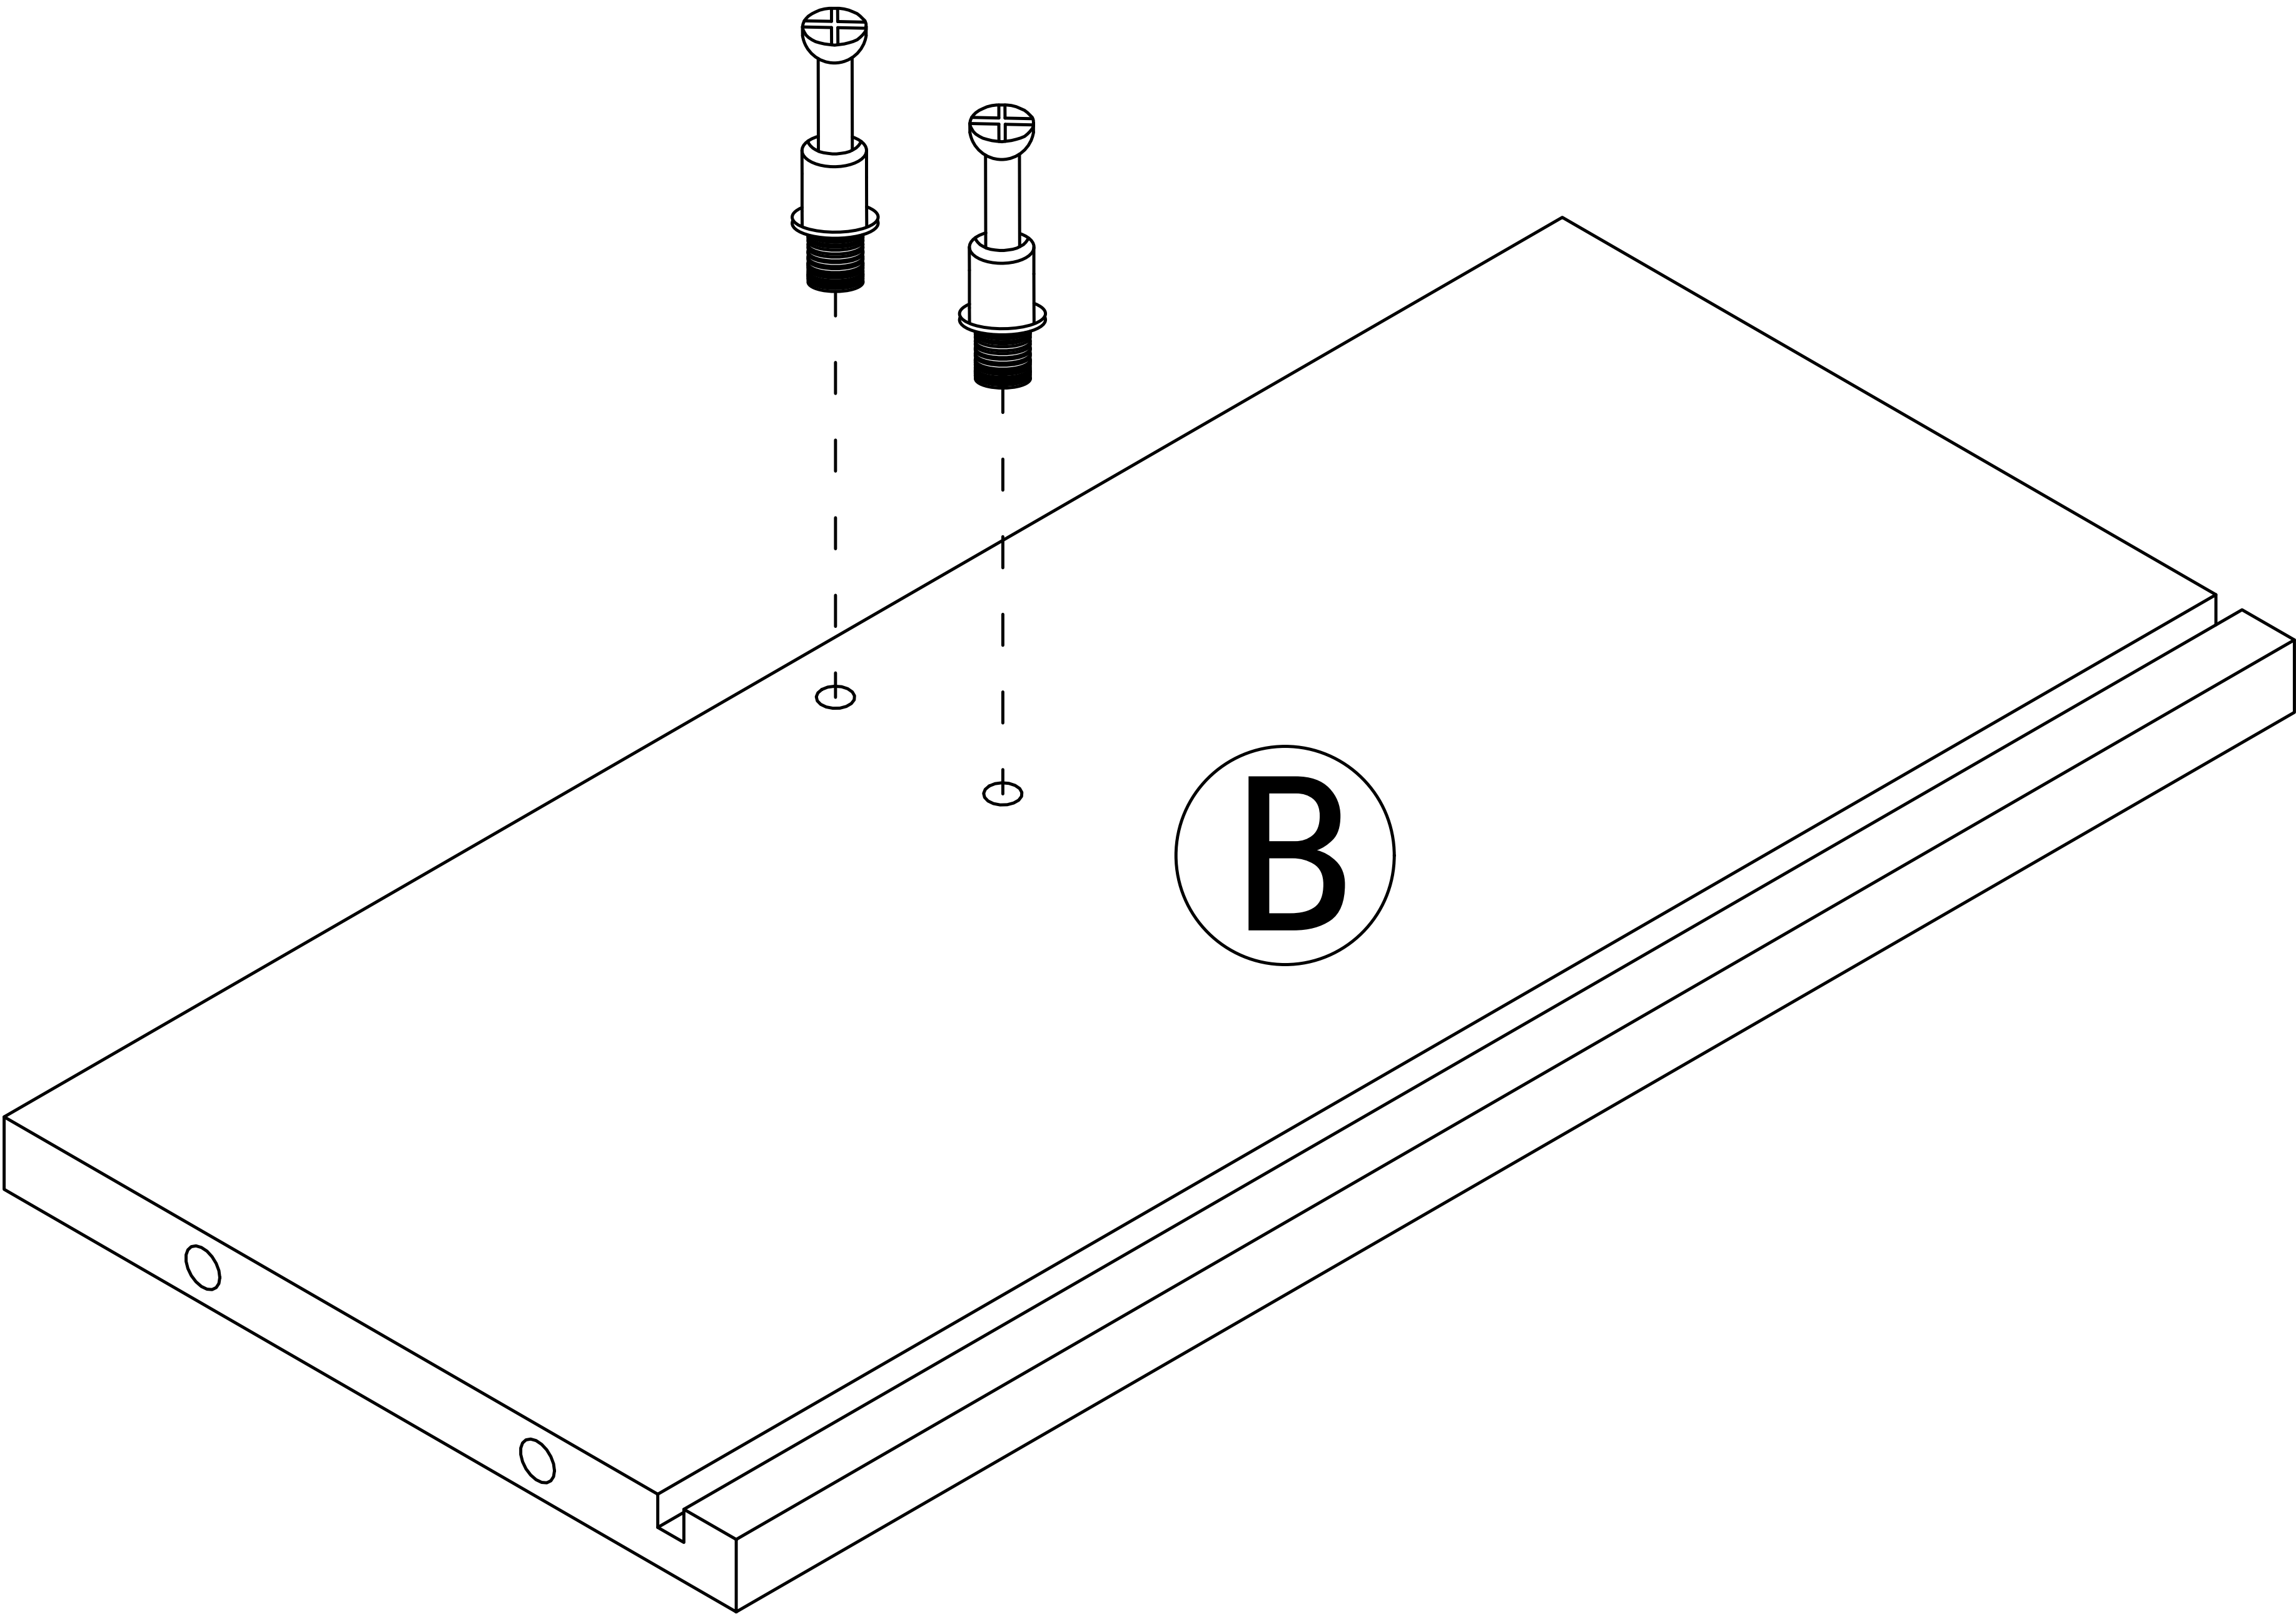


x4

Step 3


2

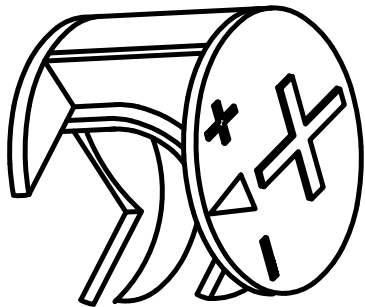


x8

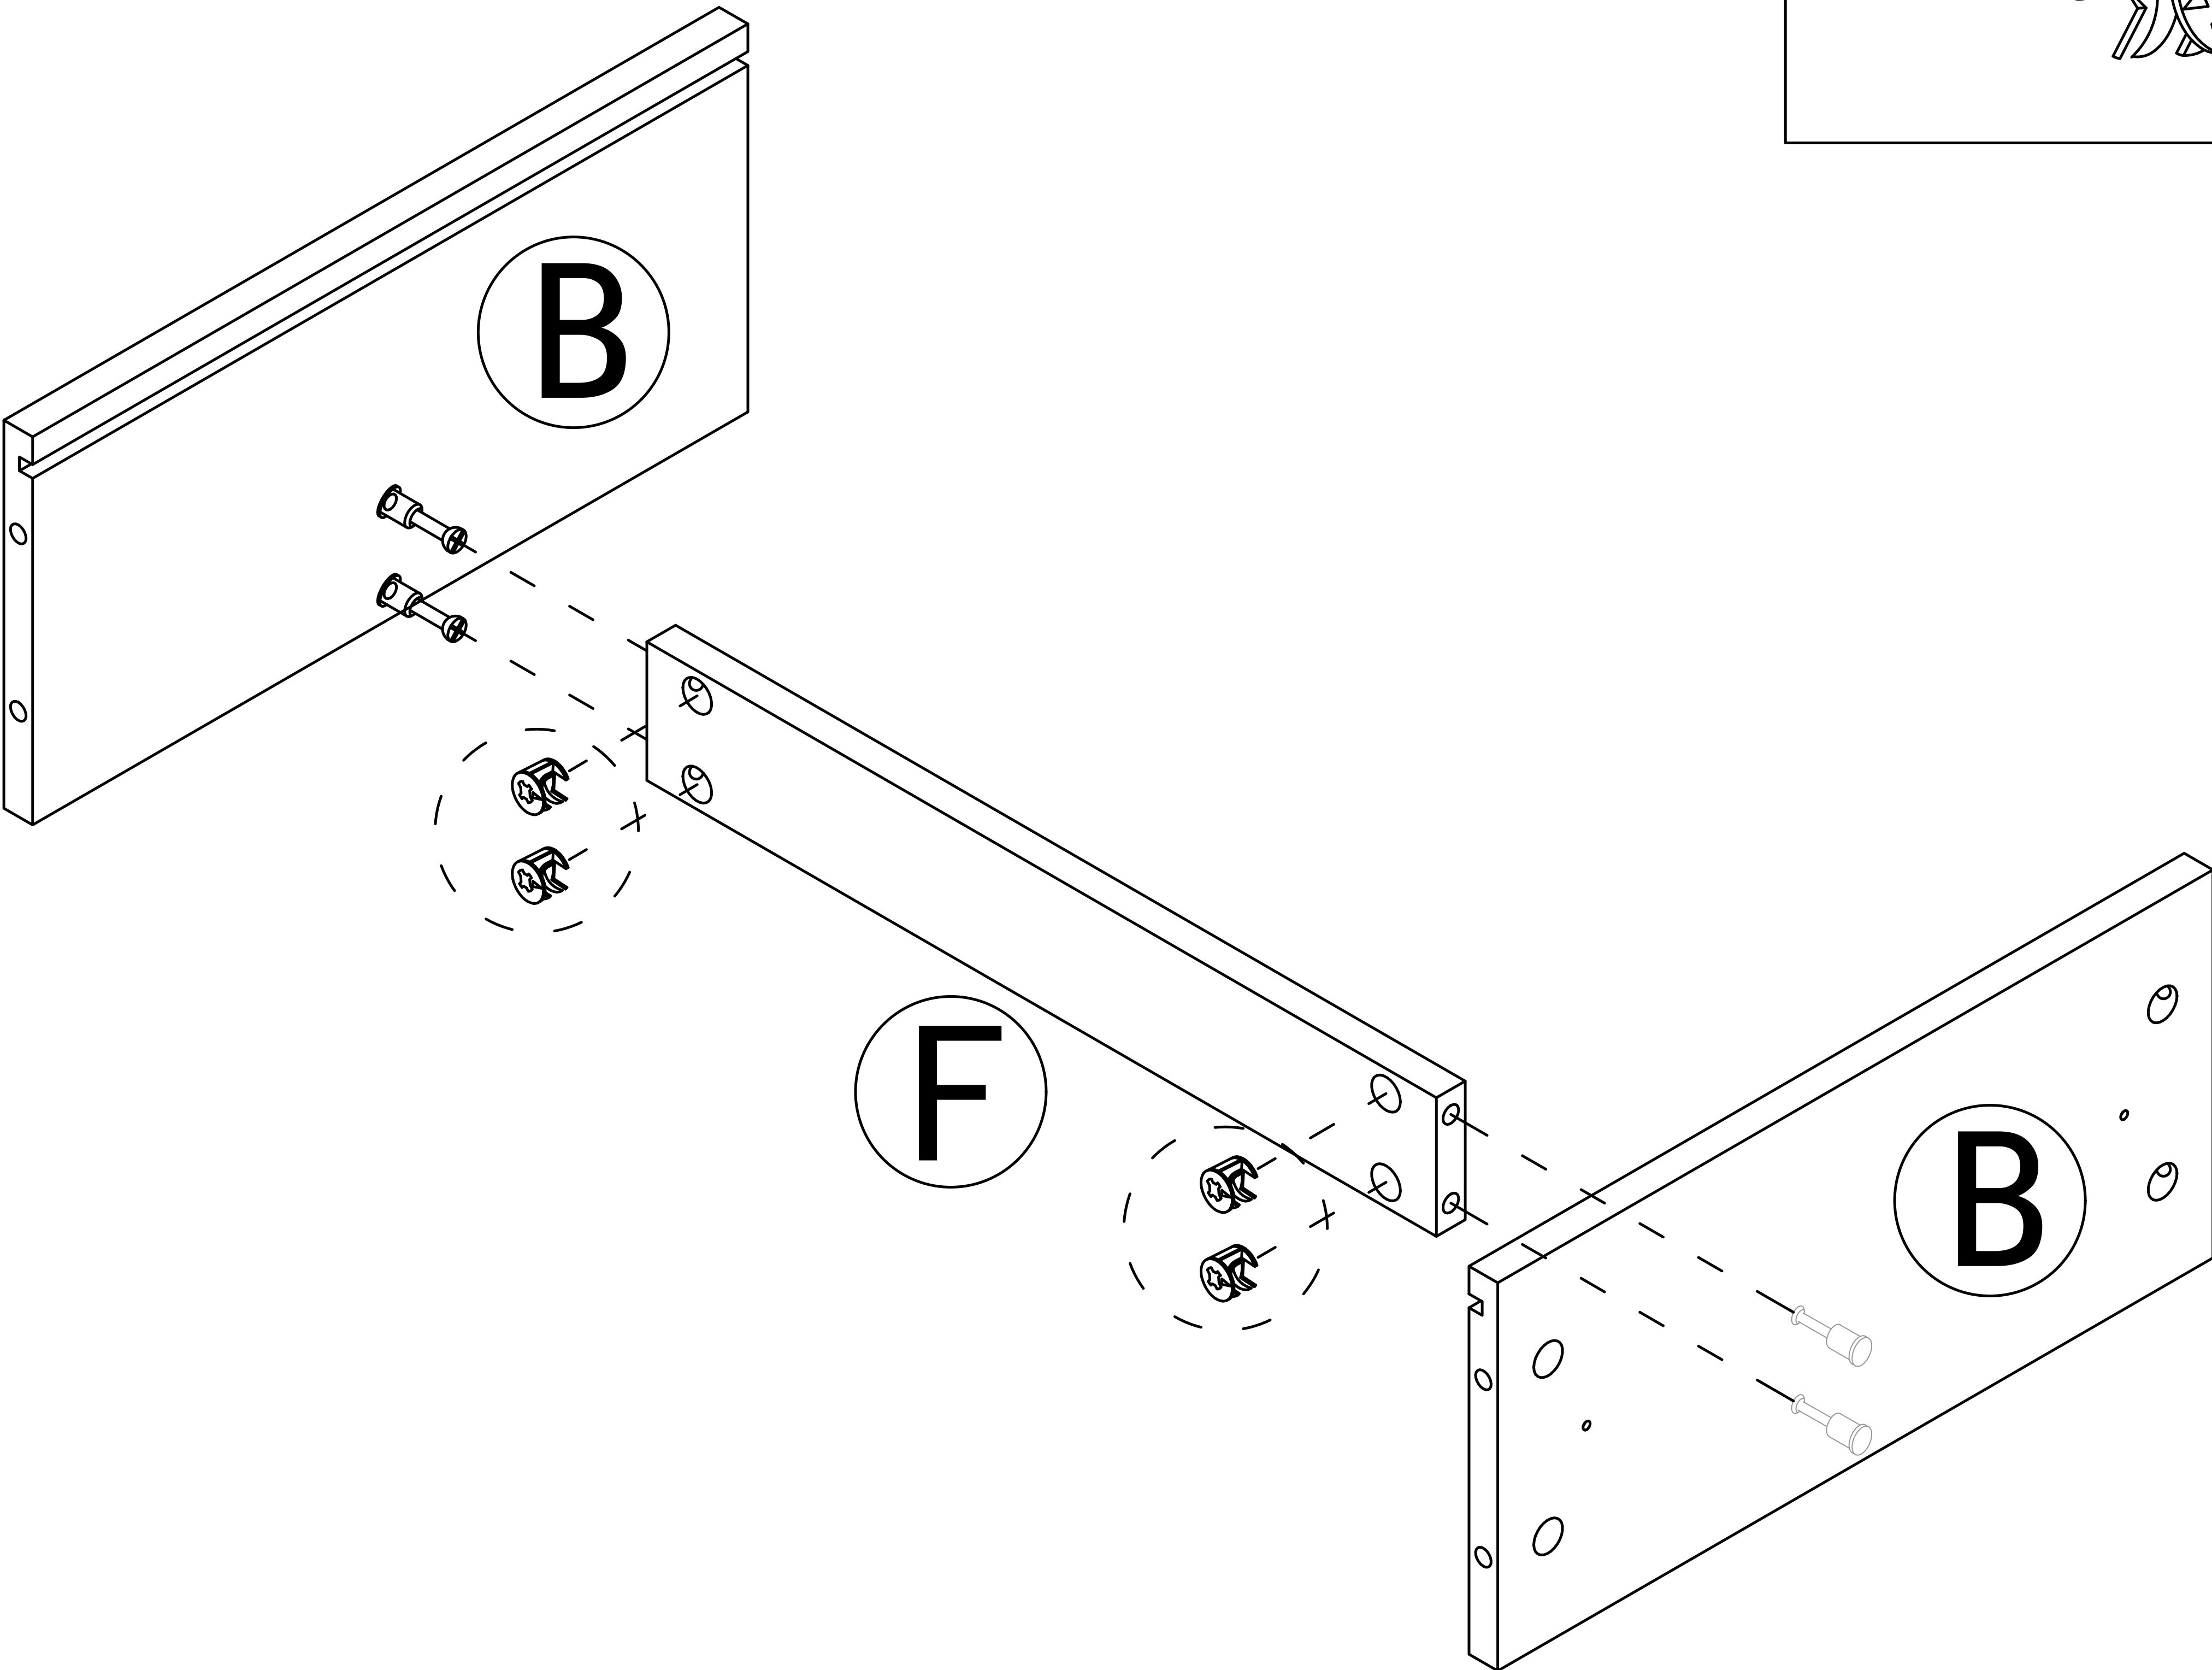

x2

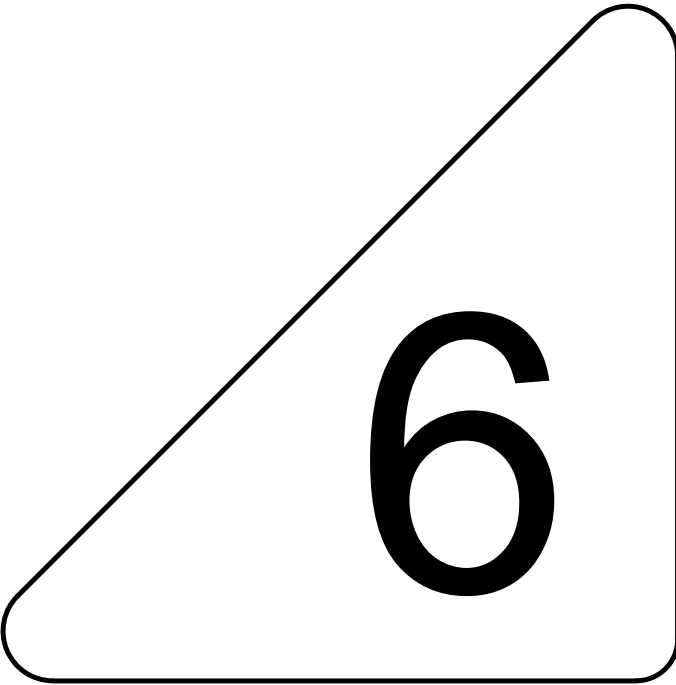


Step 4

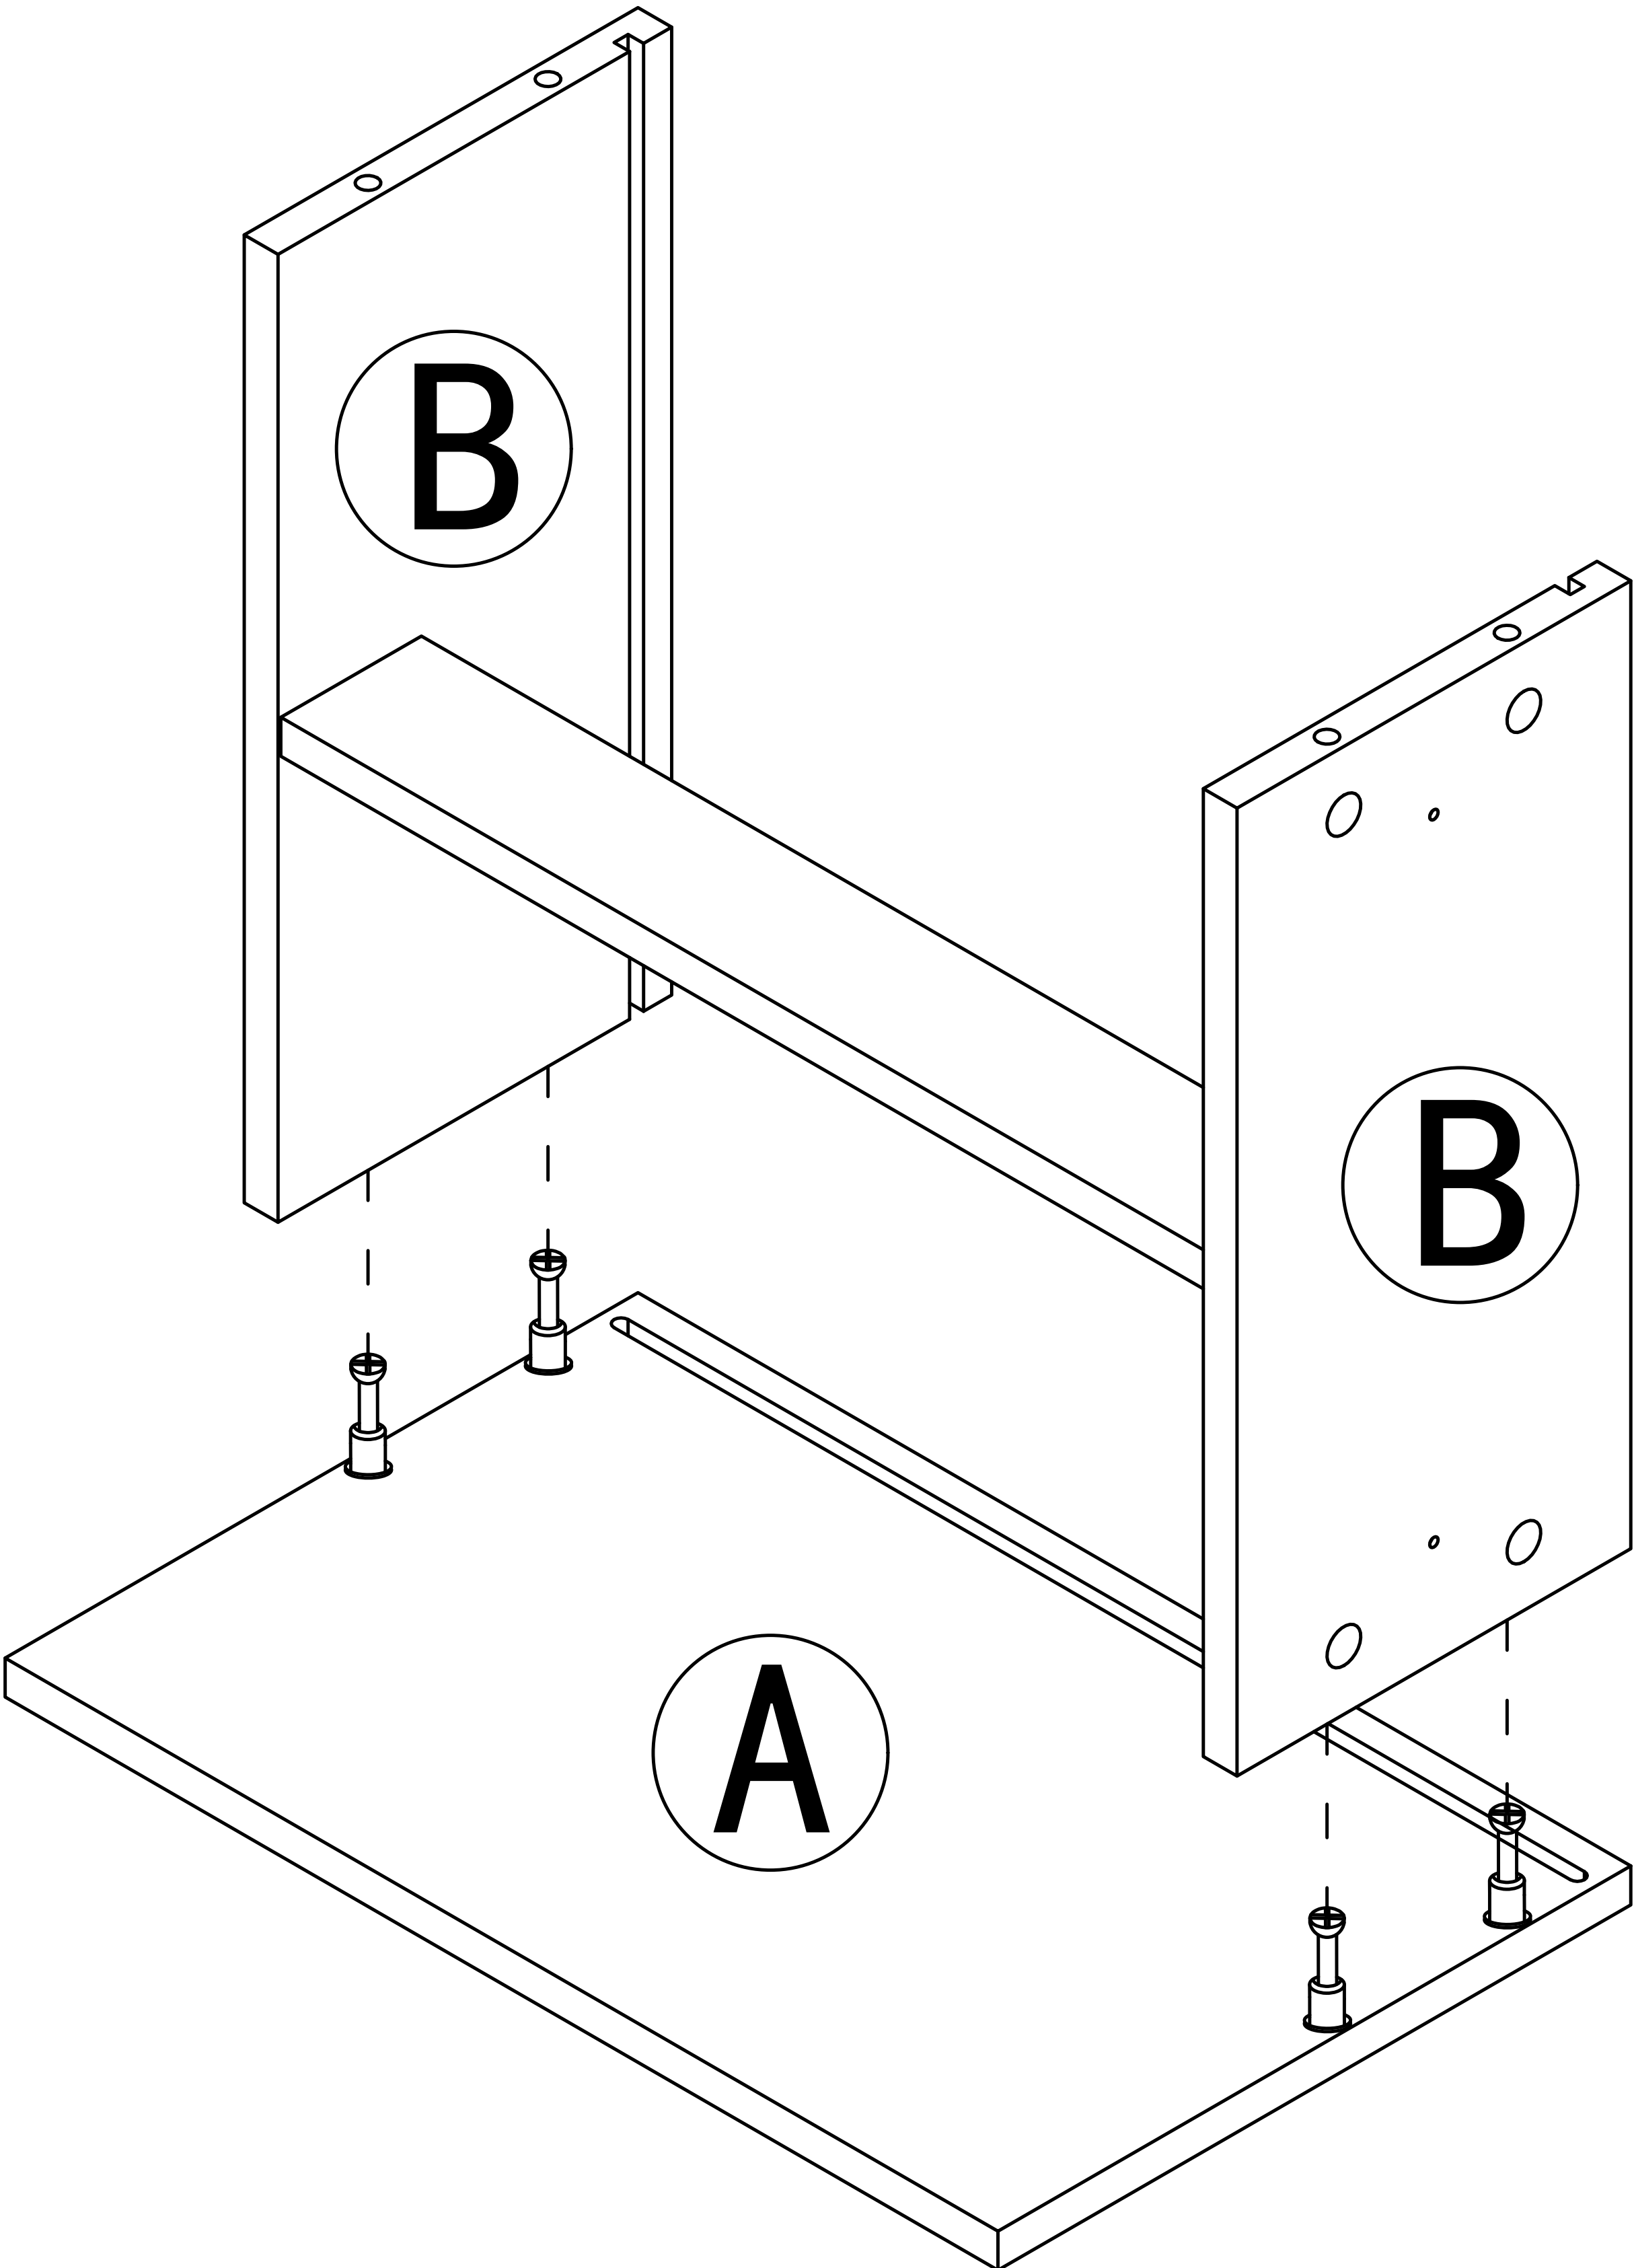


x2



Step 5

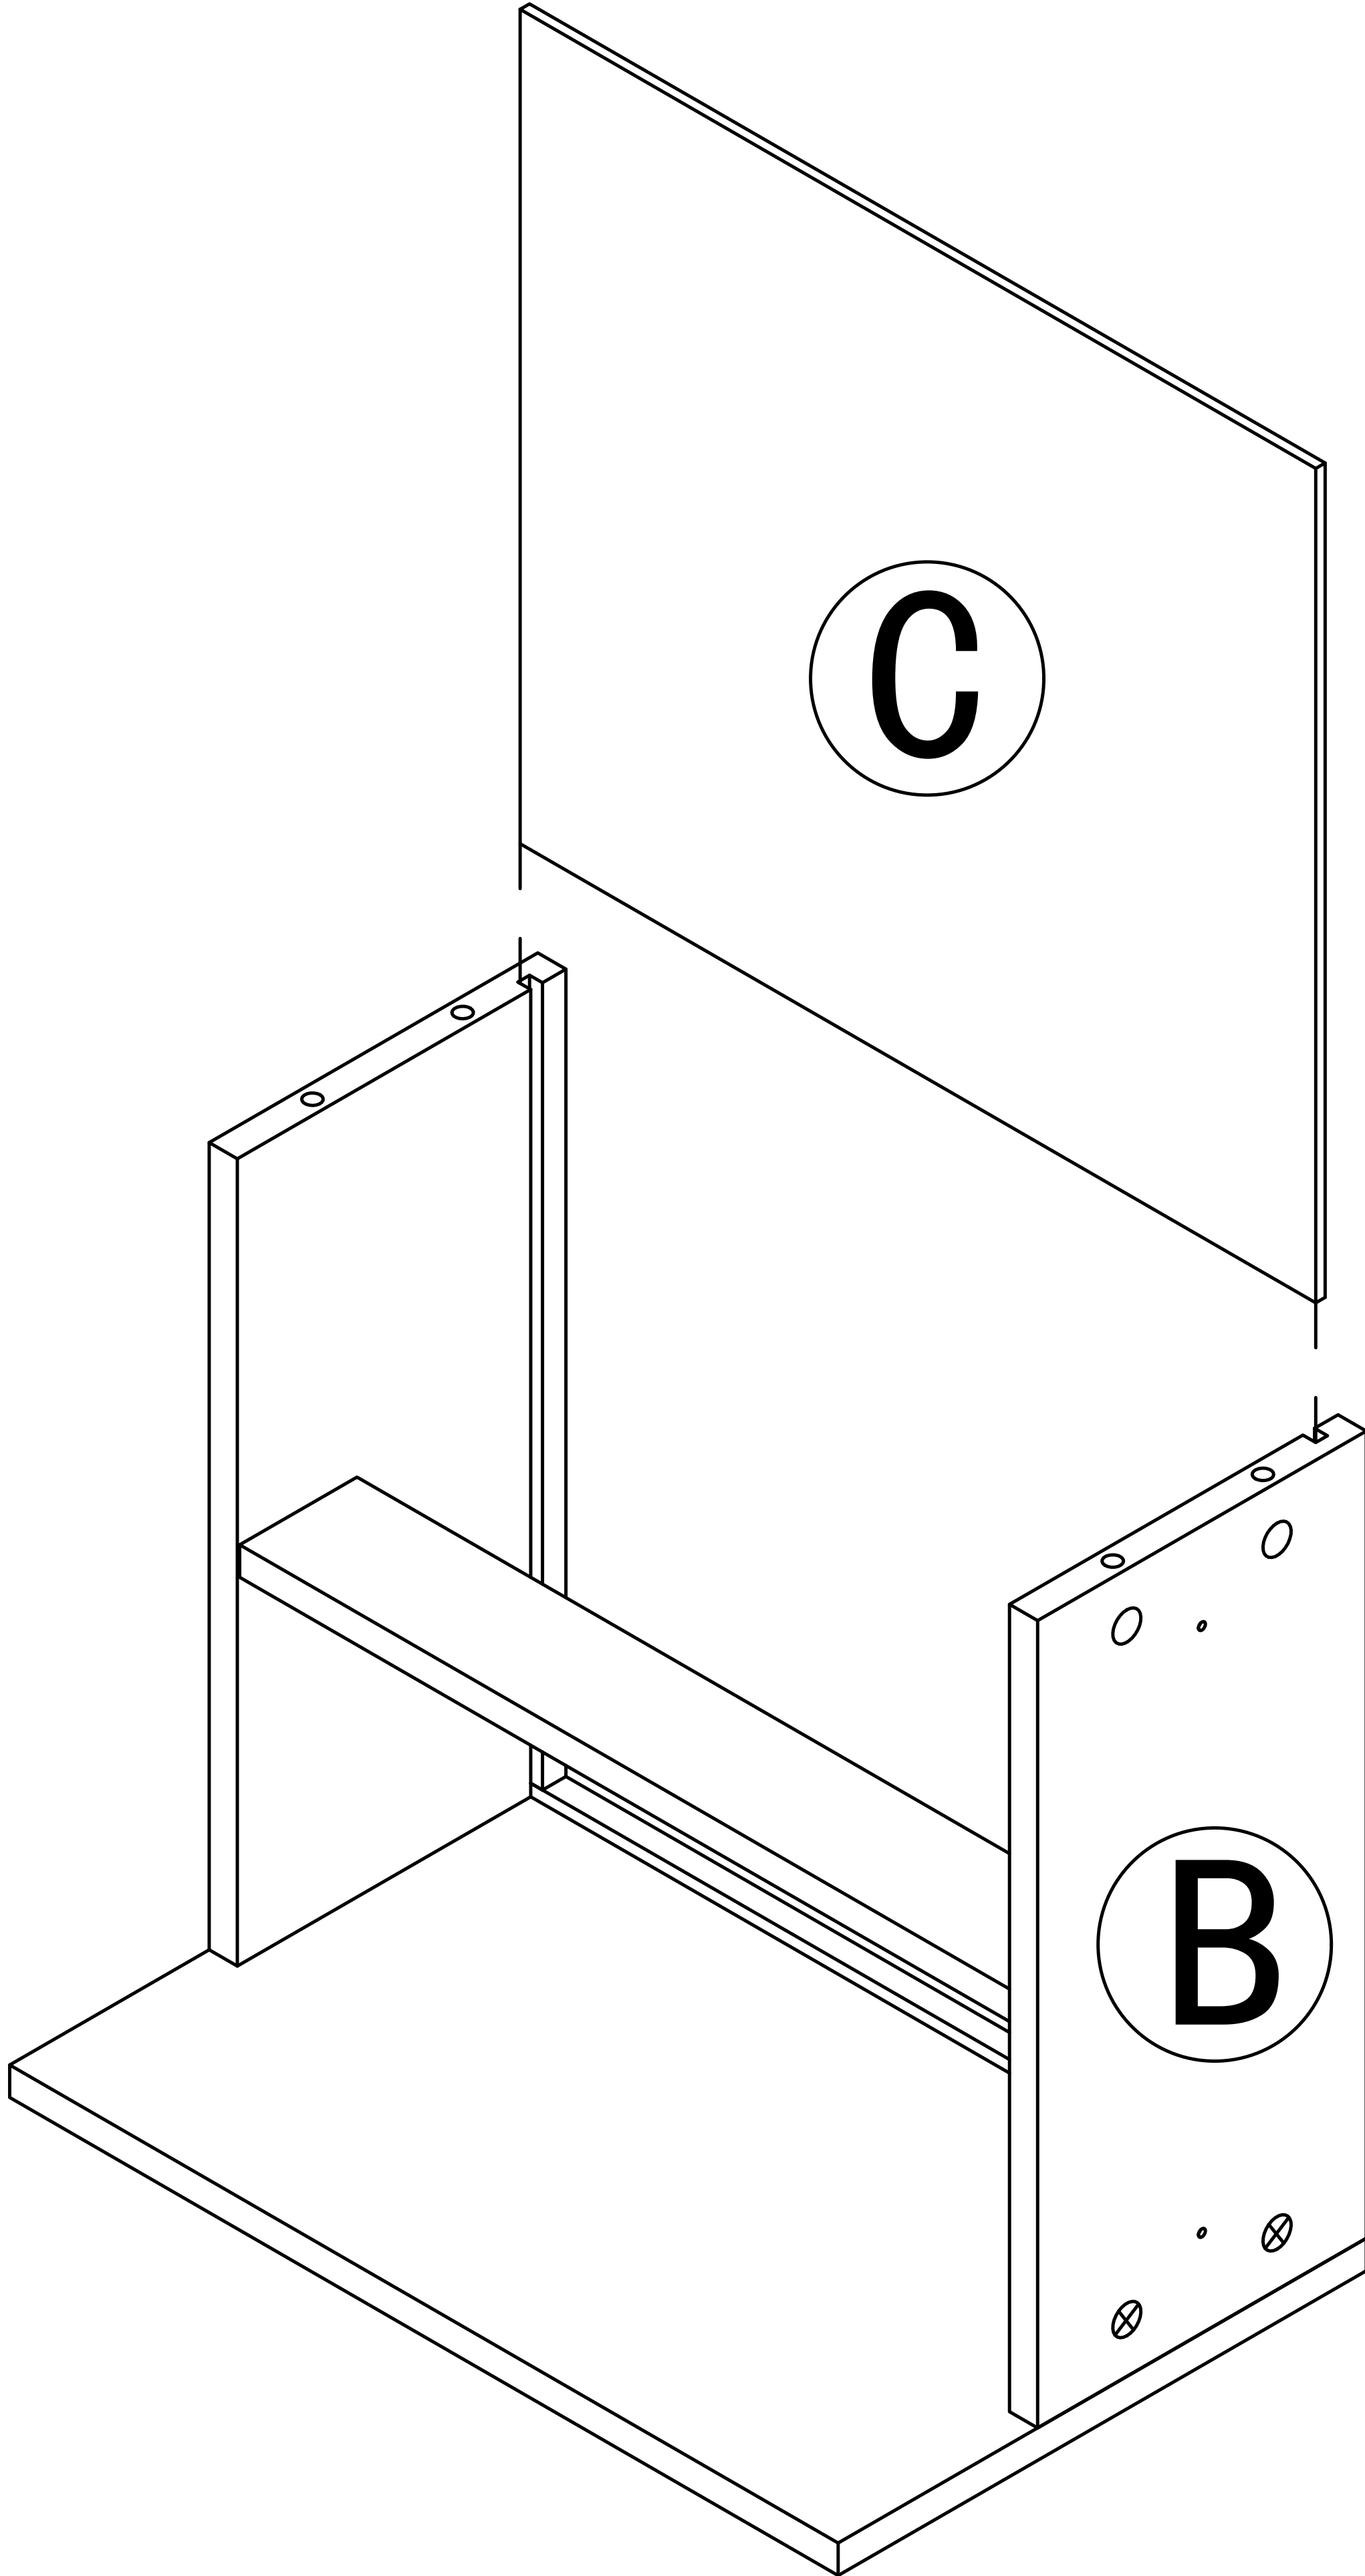



x2

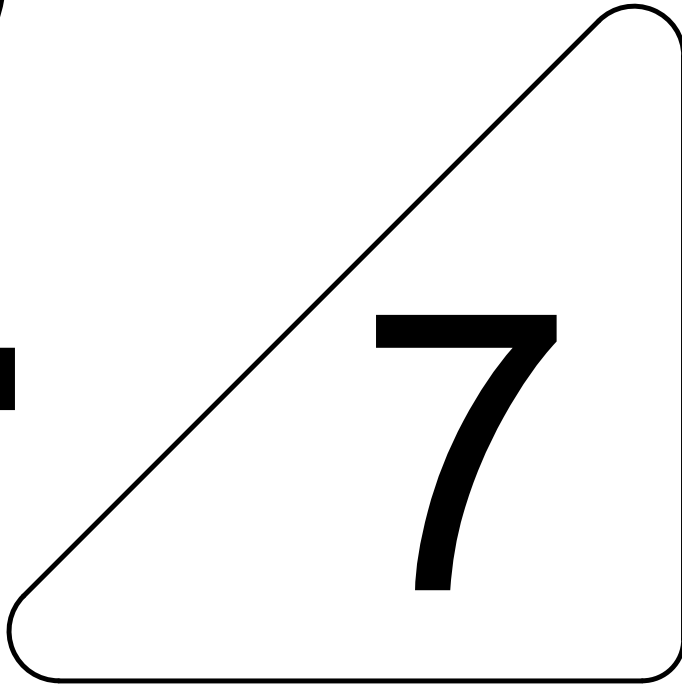

Step 6

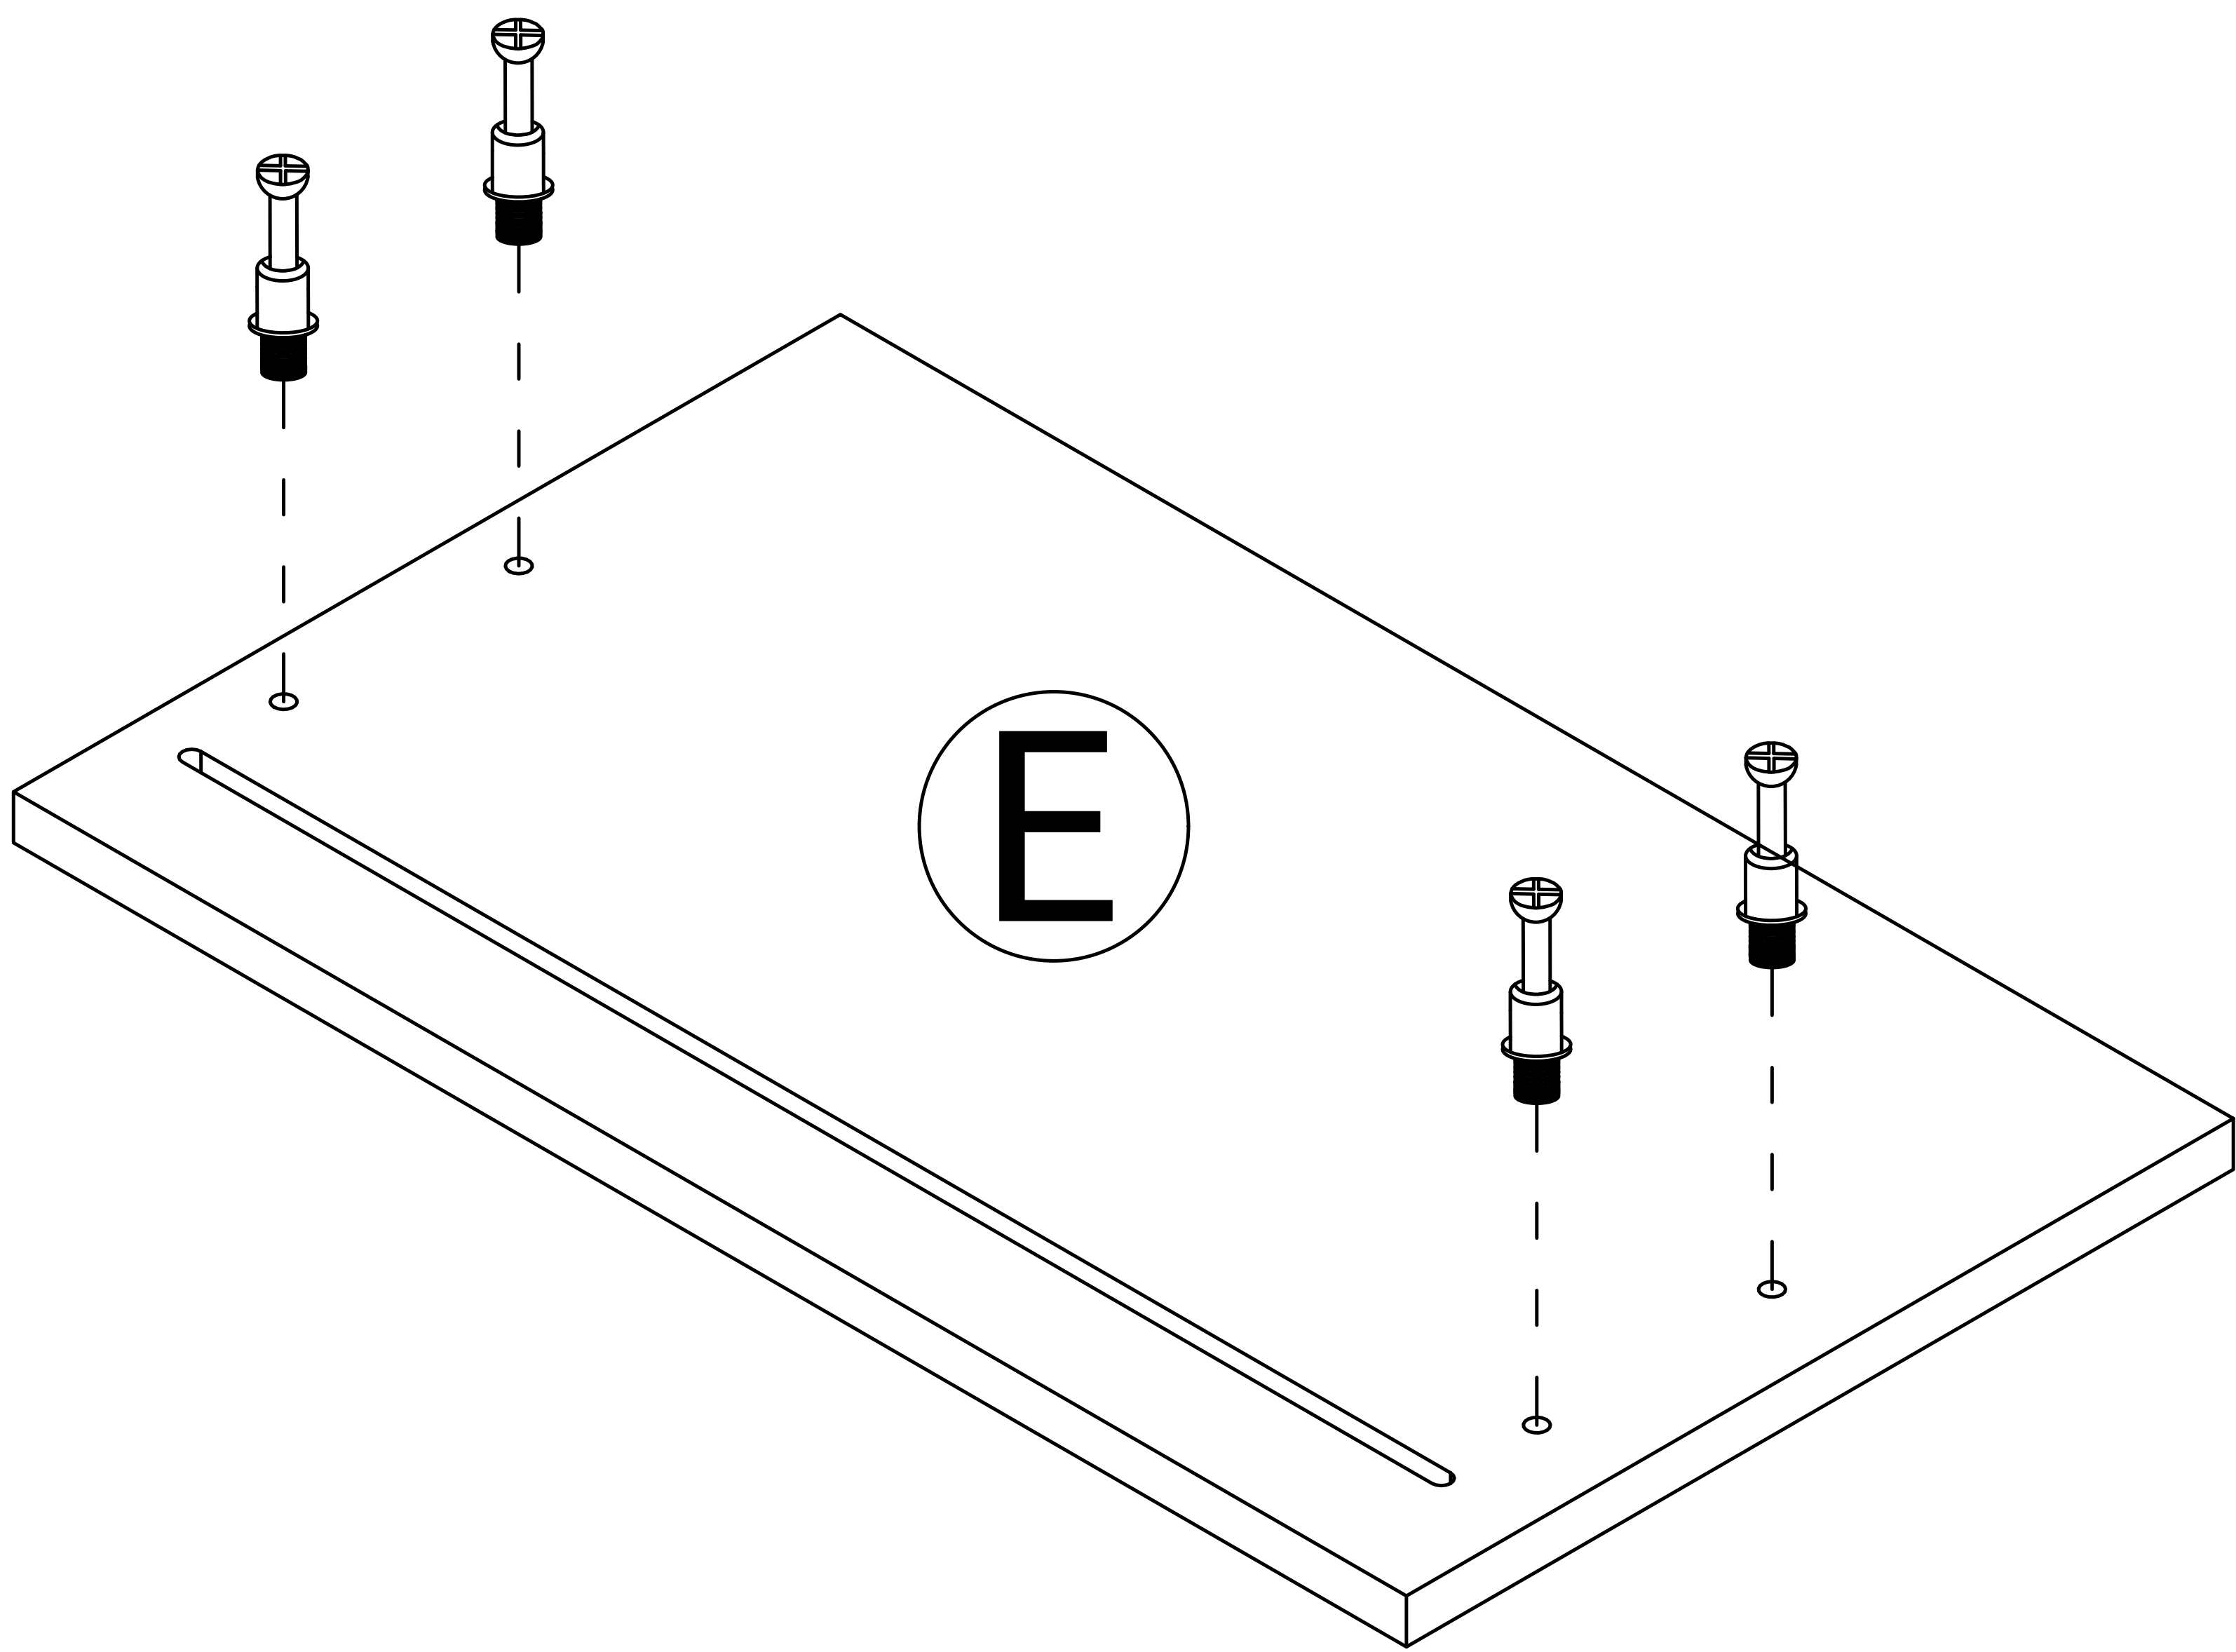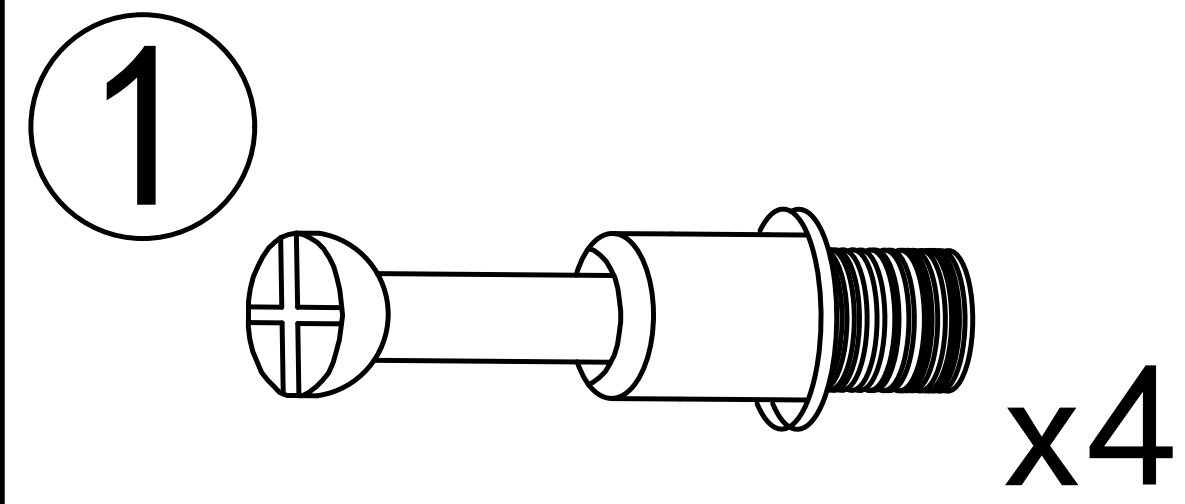



Step 7

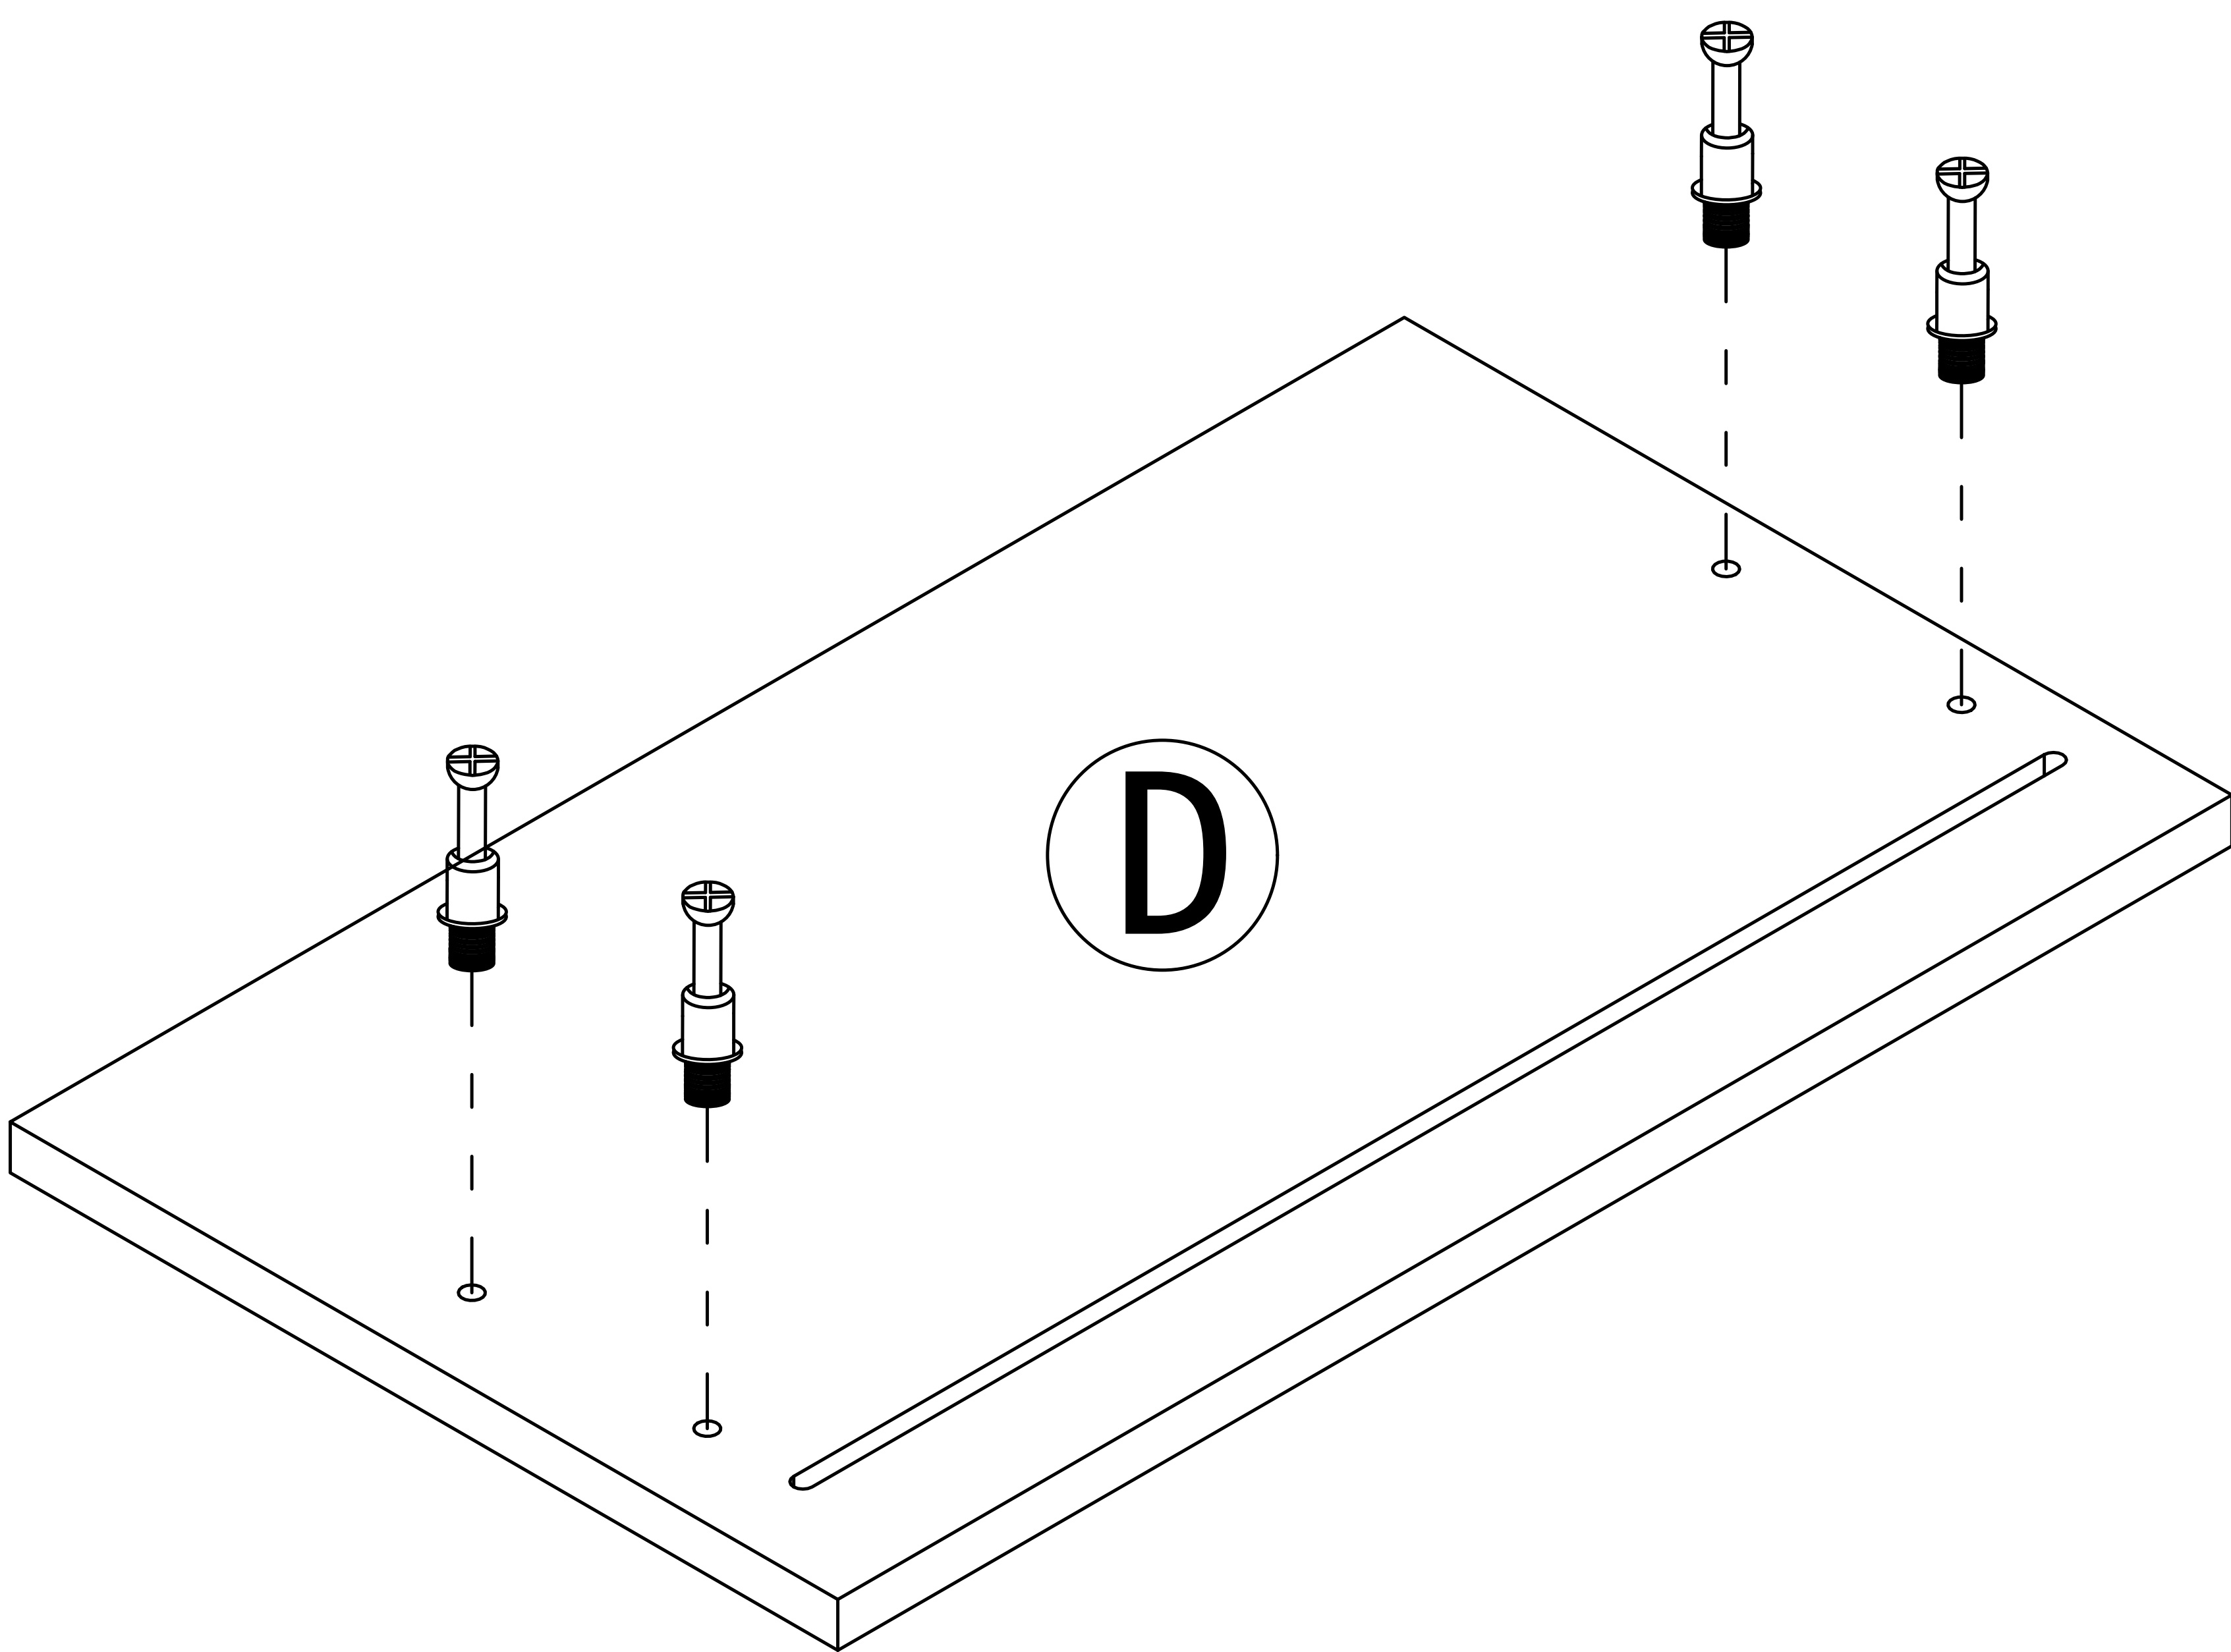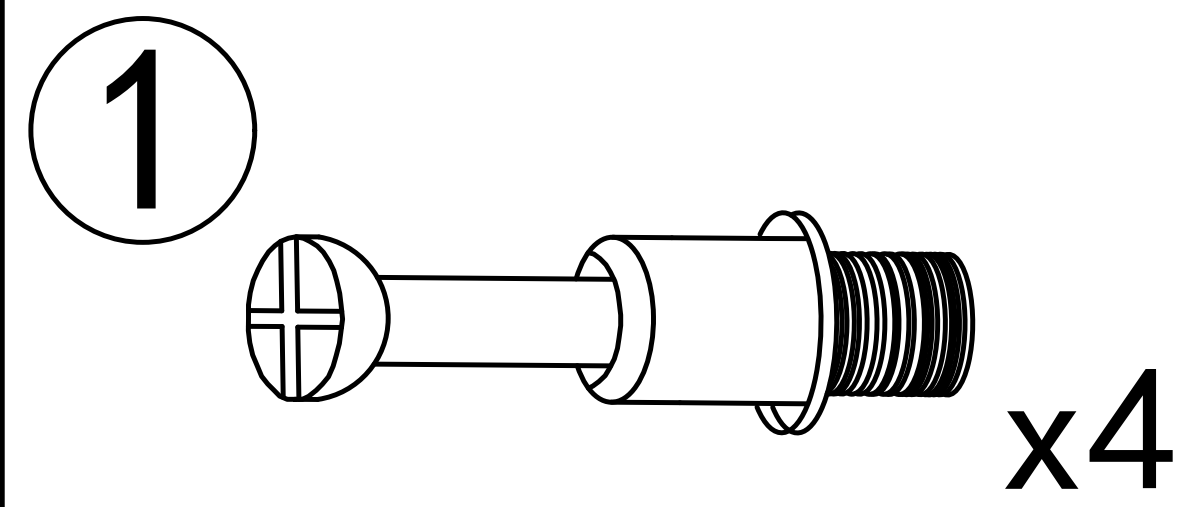

Step 8


2

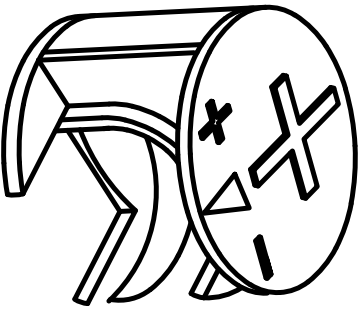
 x8

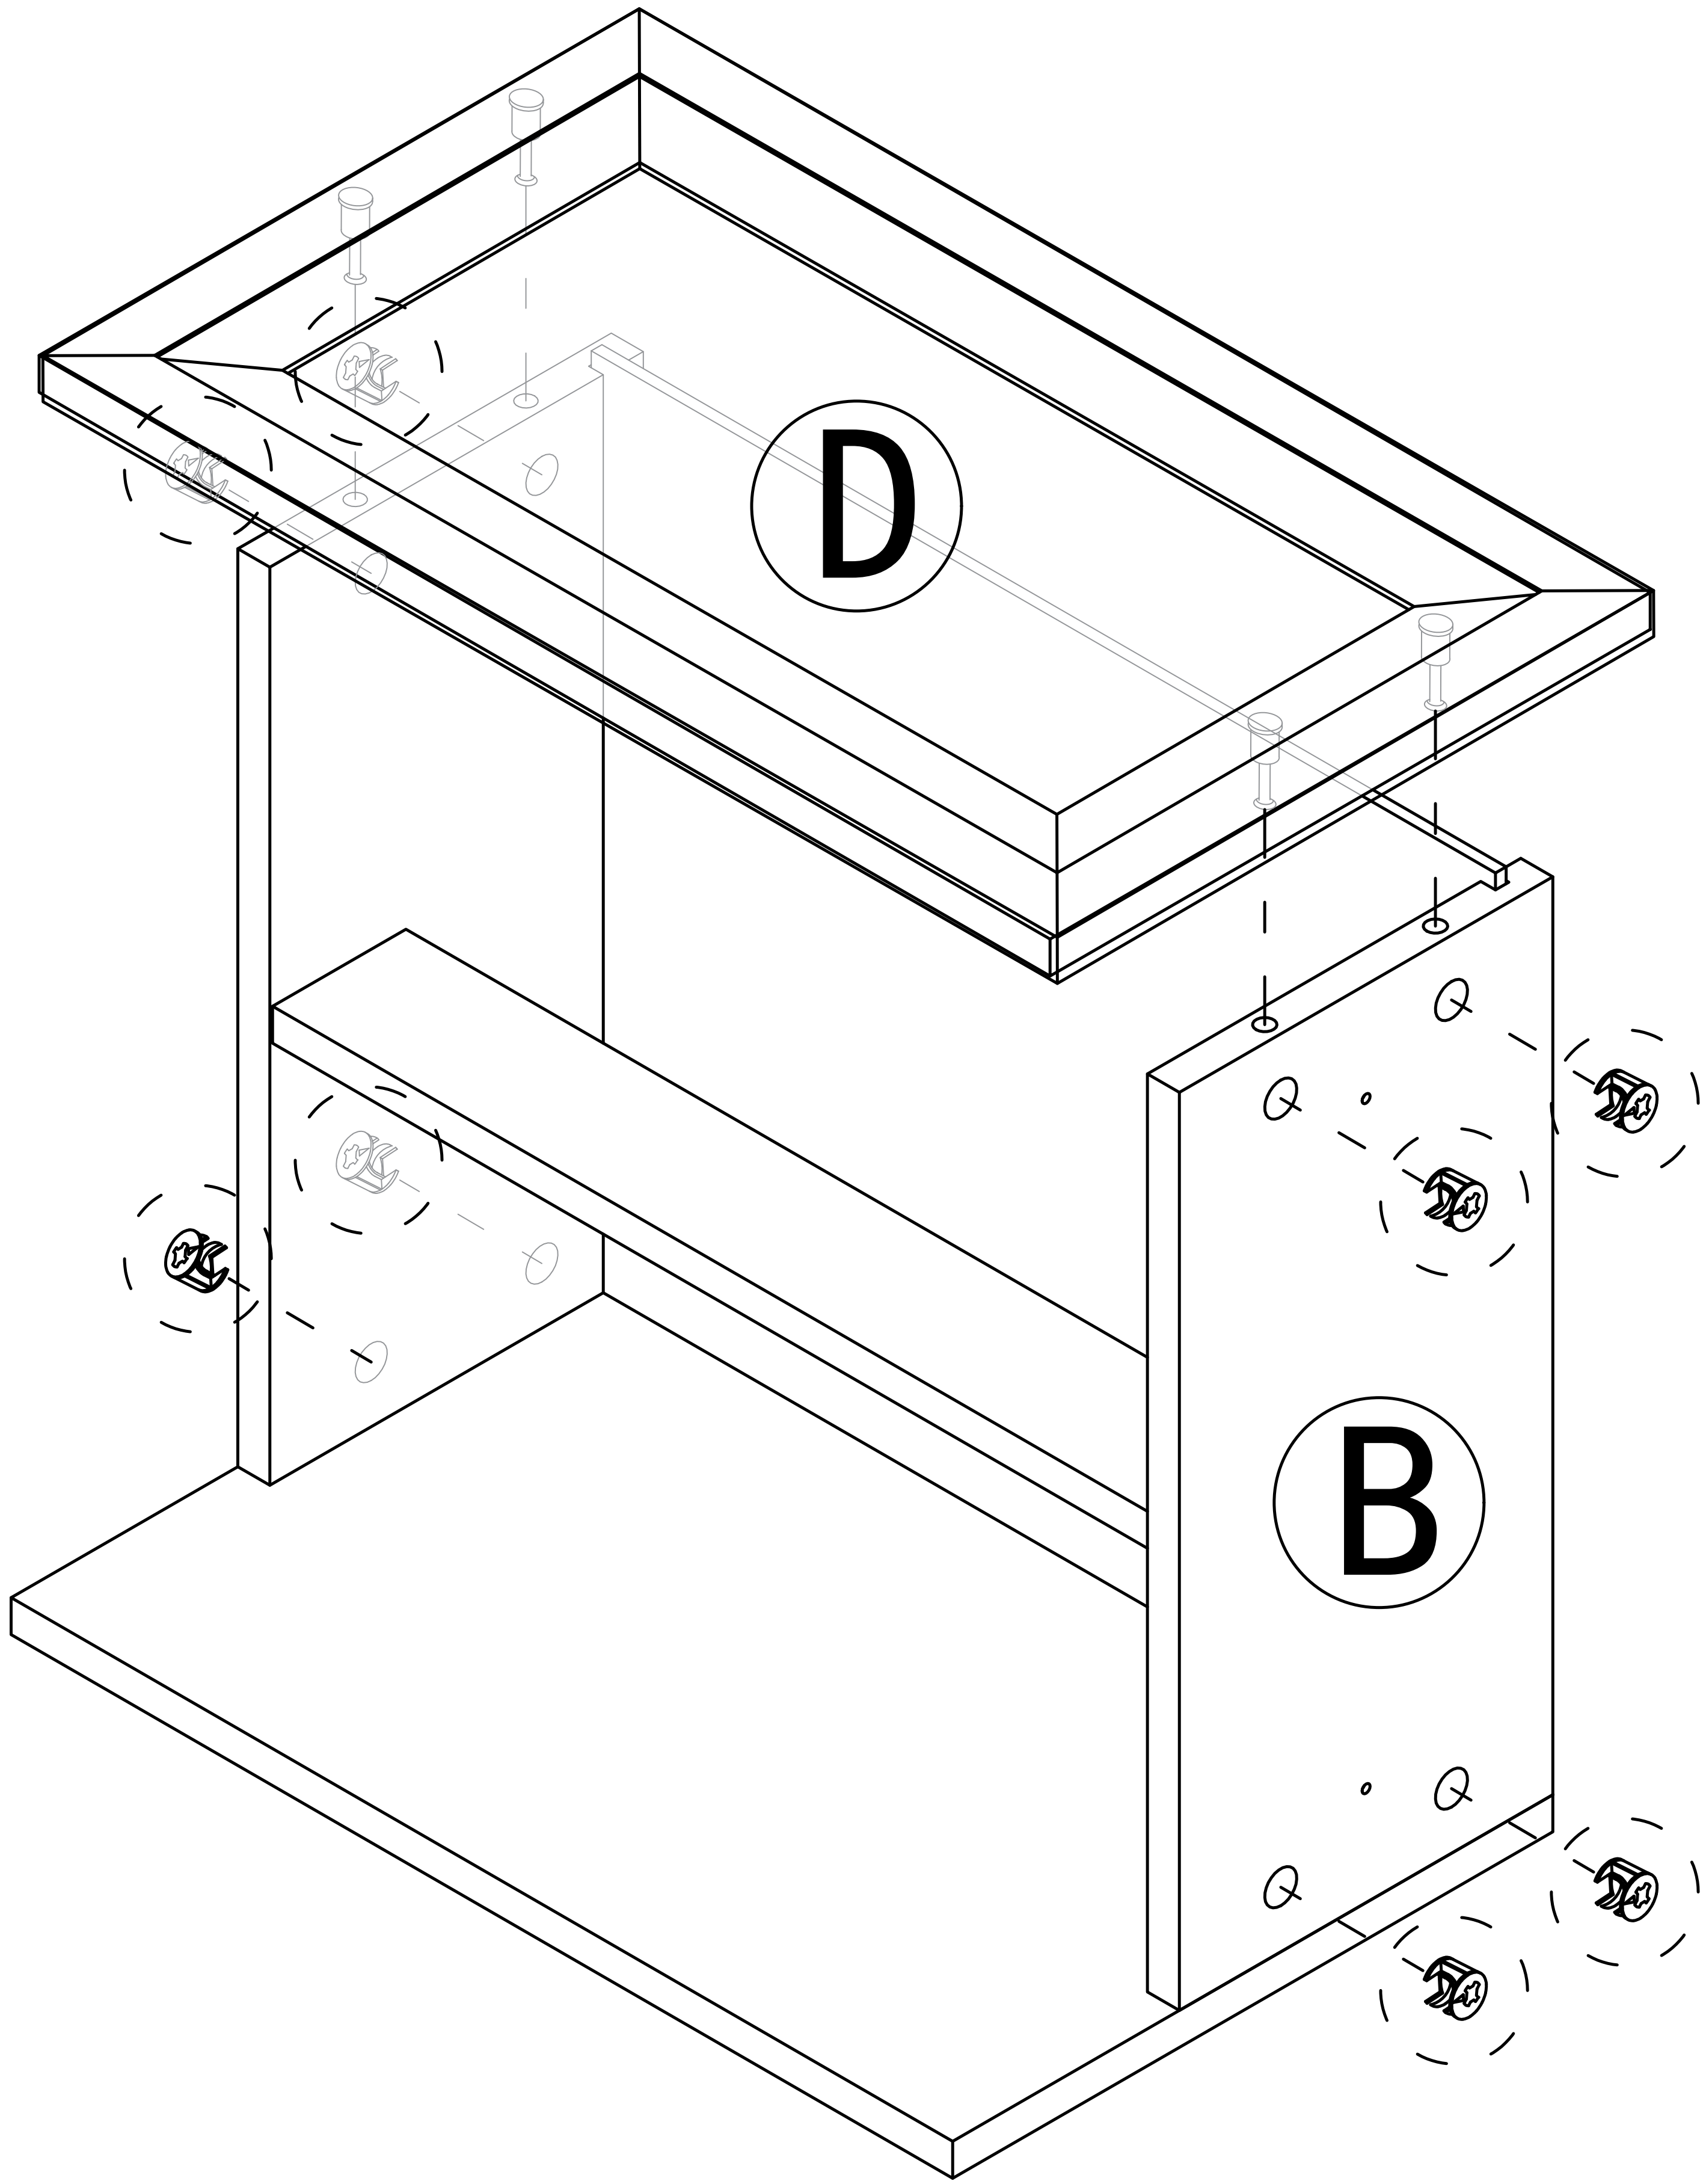


Step 9



2

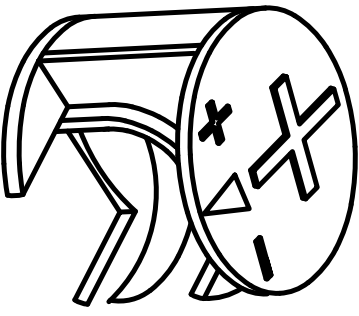 x8

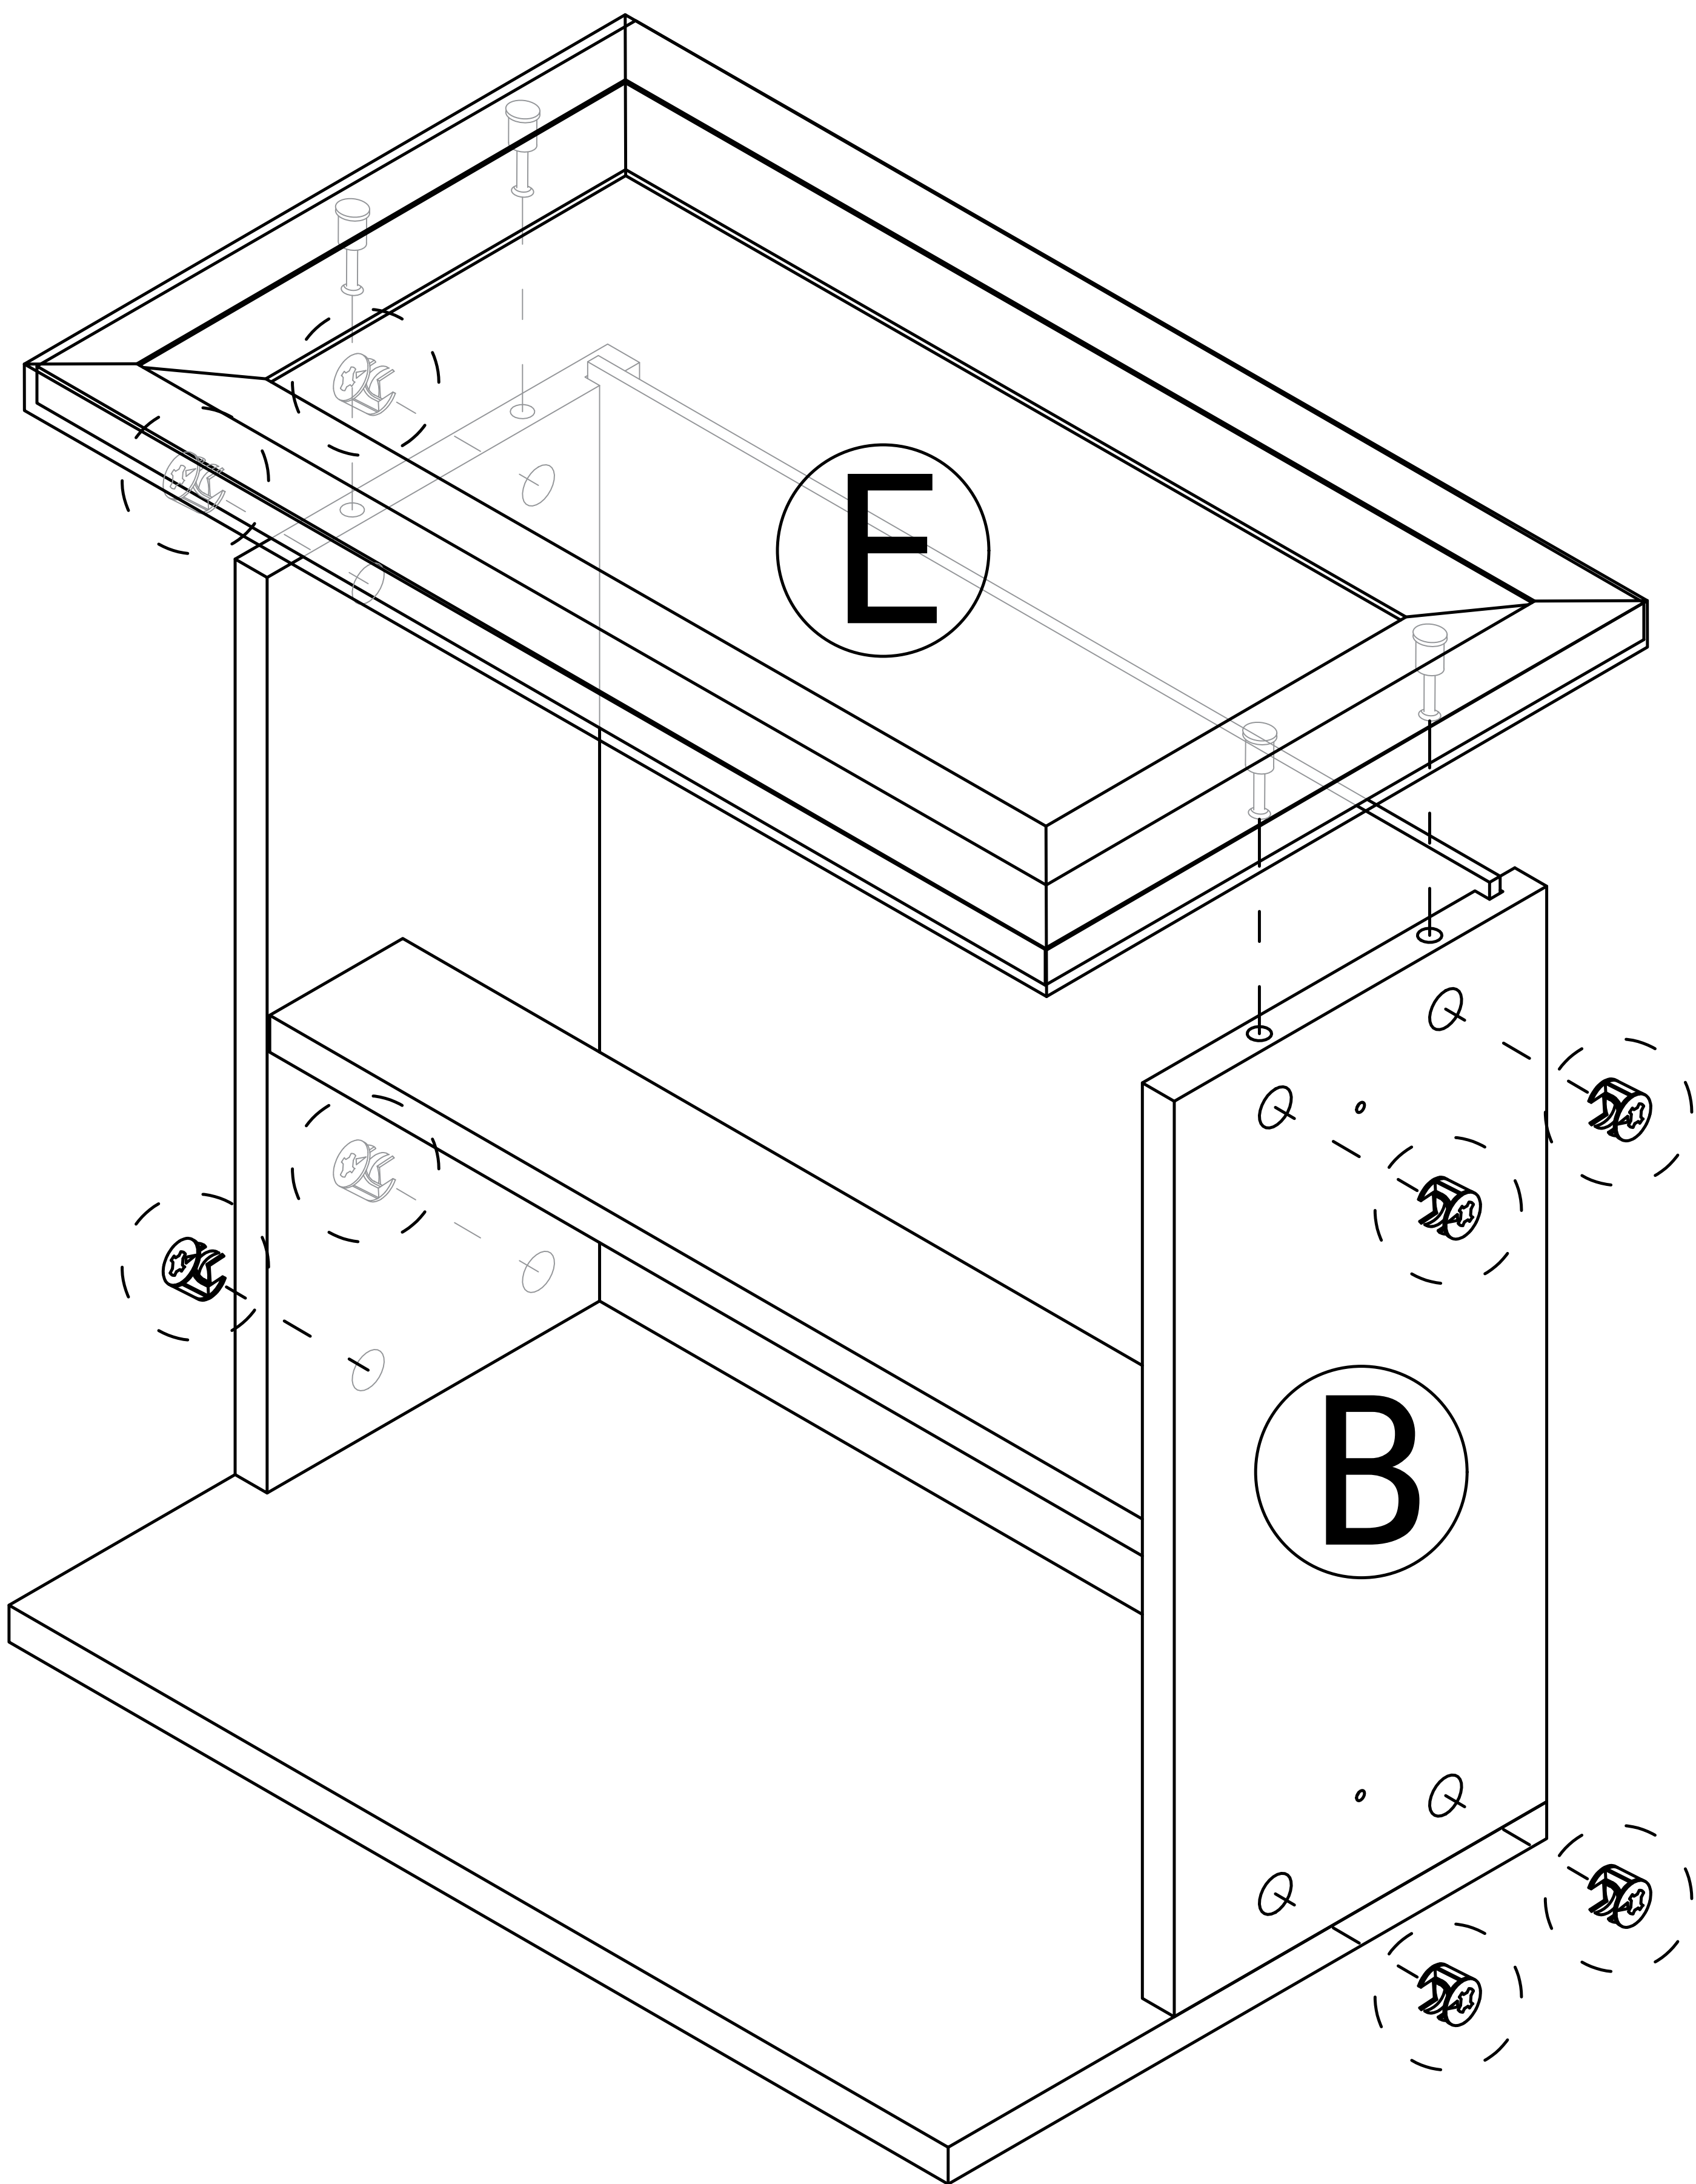

Step 10

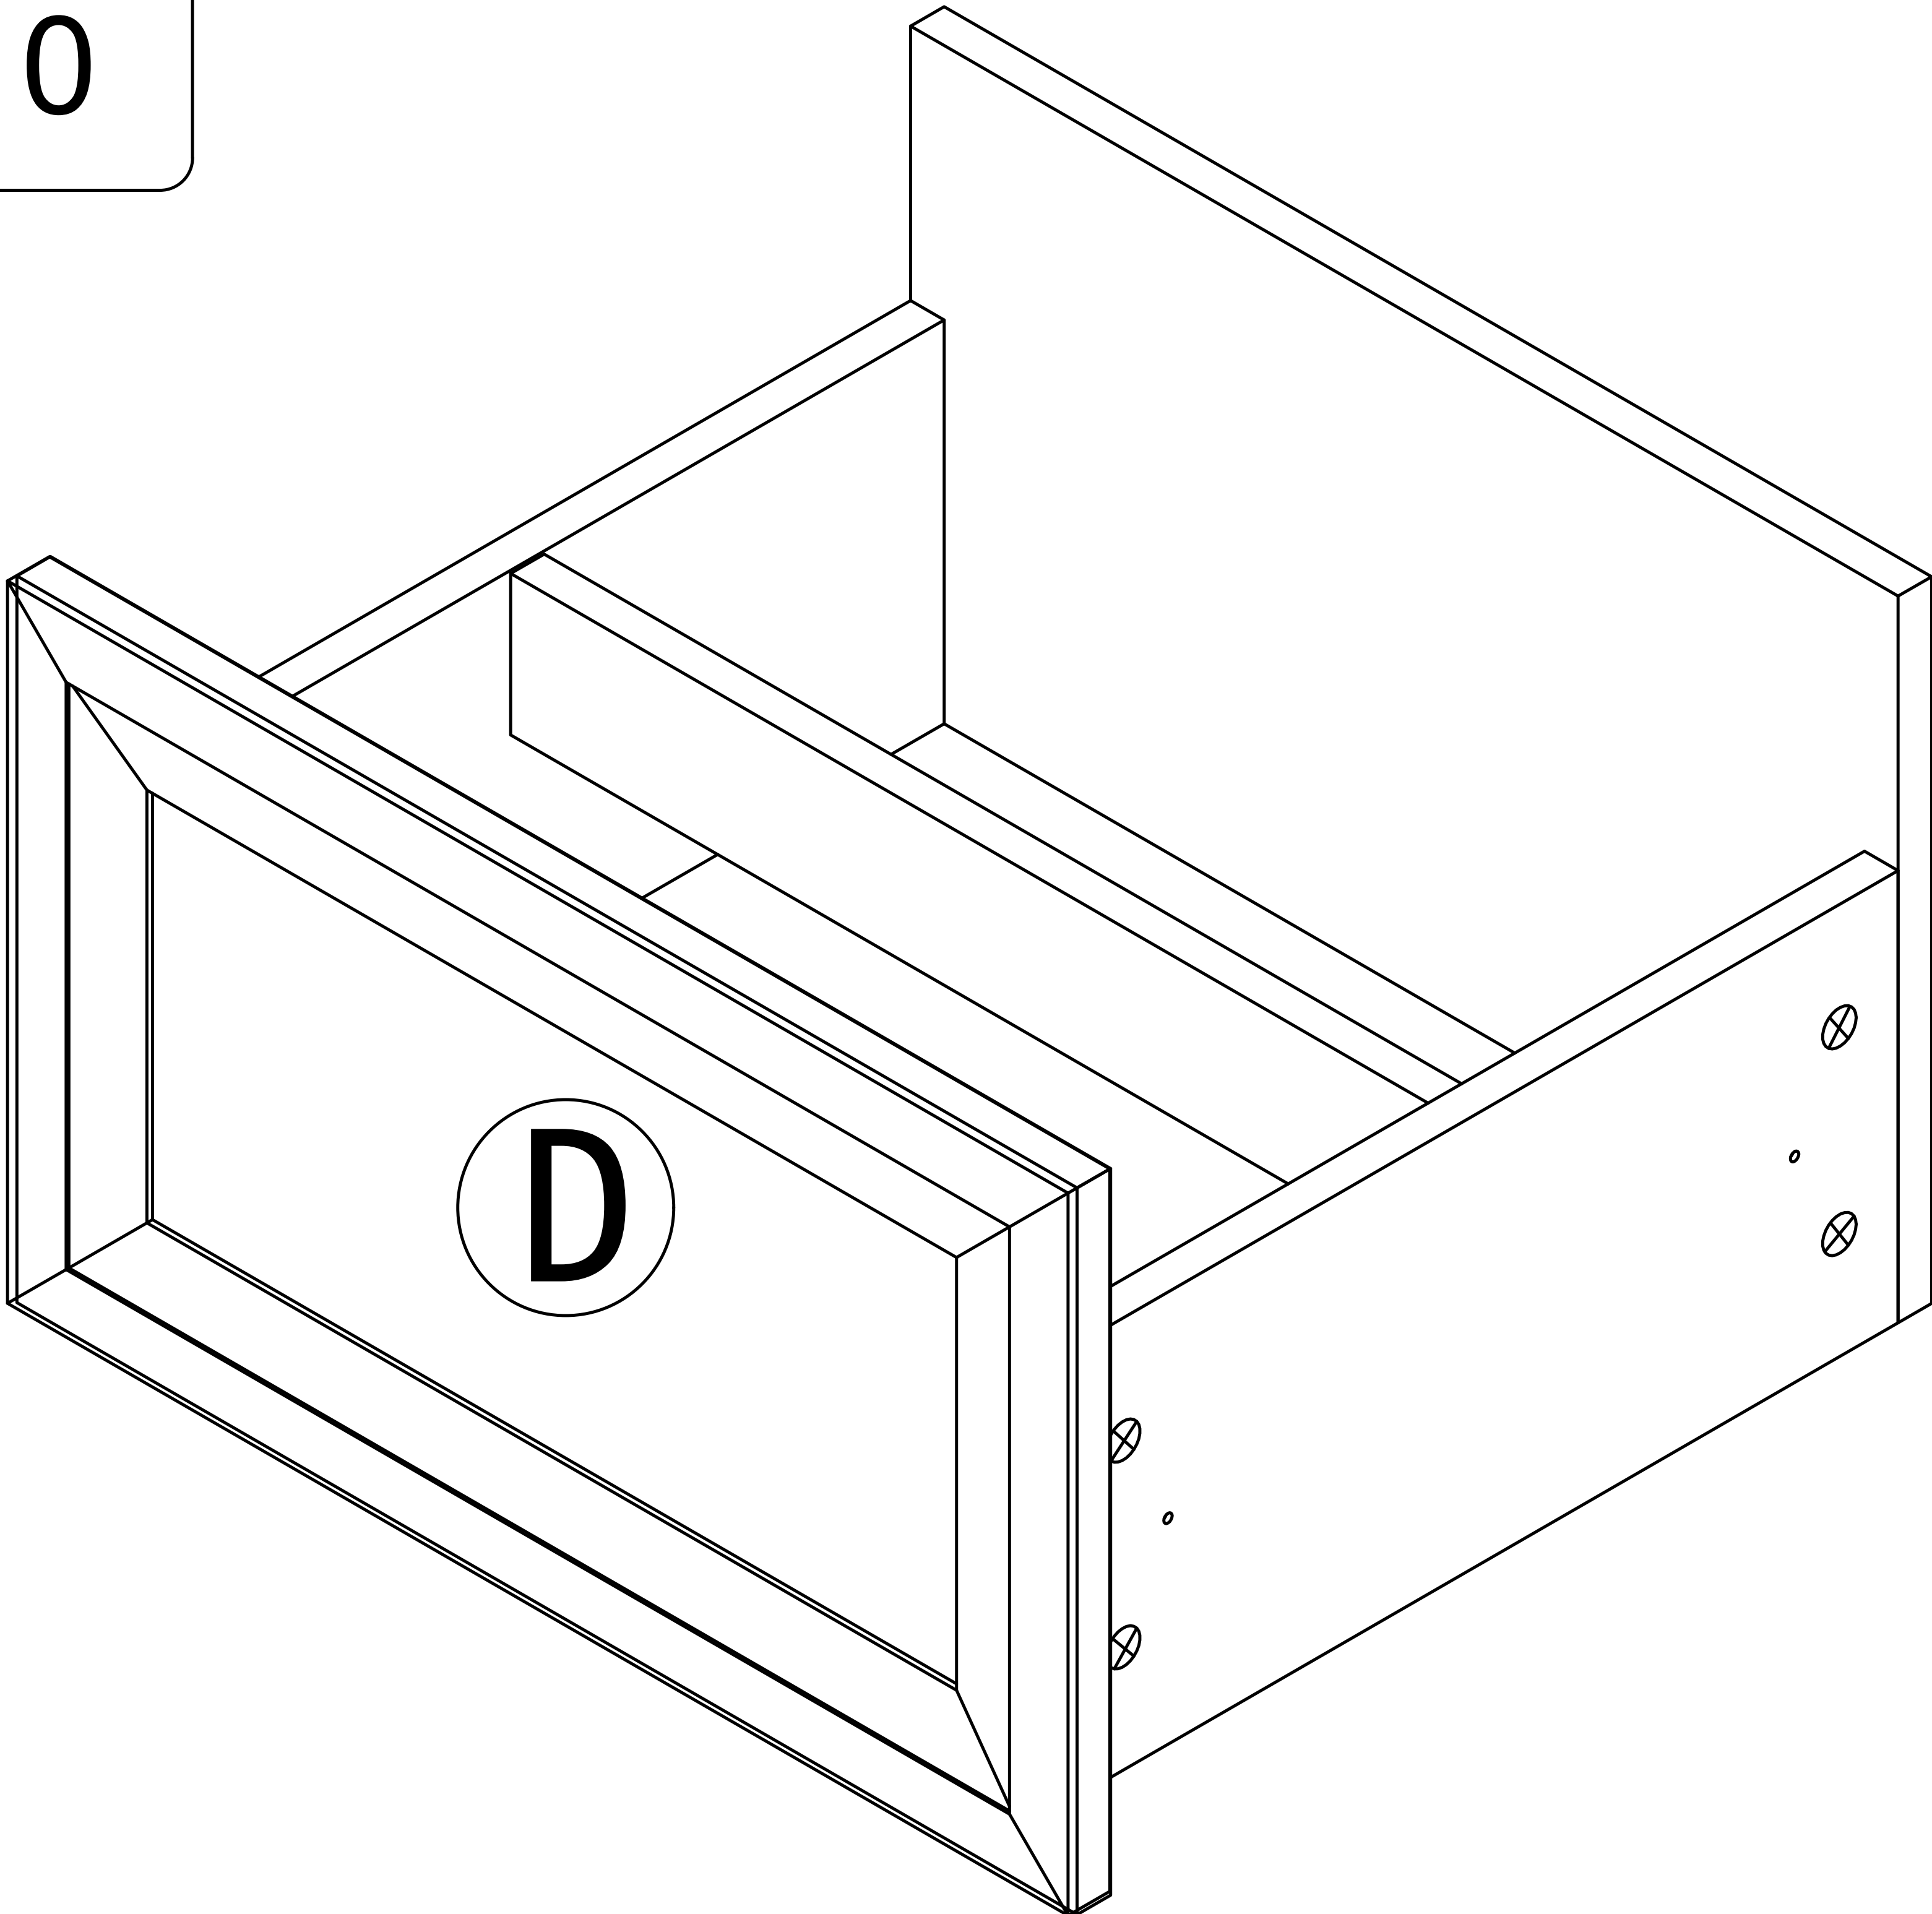


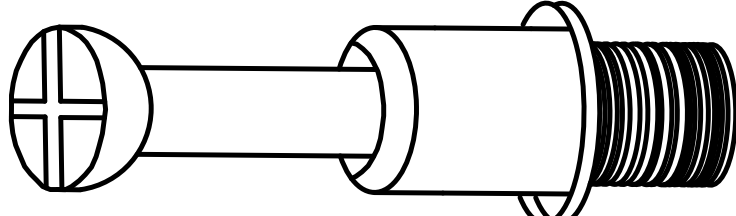
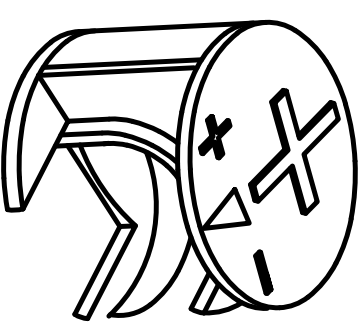
- | | | |
|---|---|-----|
| ① |  | x12 |
| ② |  | x12 |

x2

Repeat the above installation steps.

Step 11

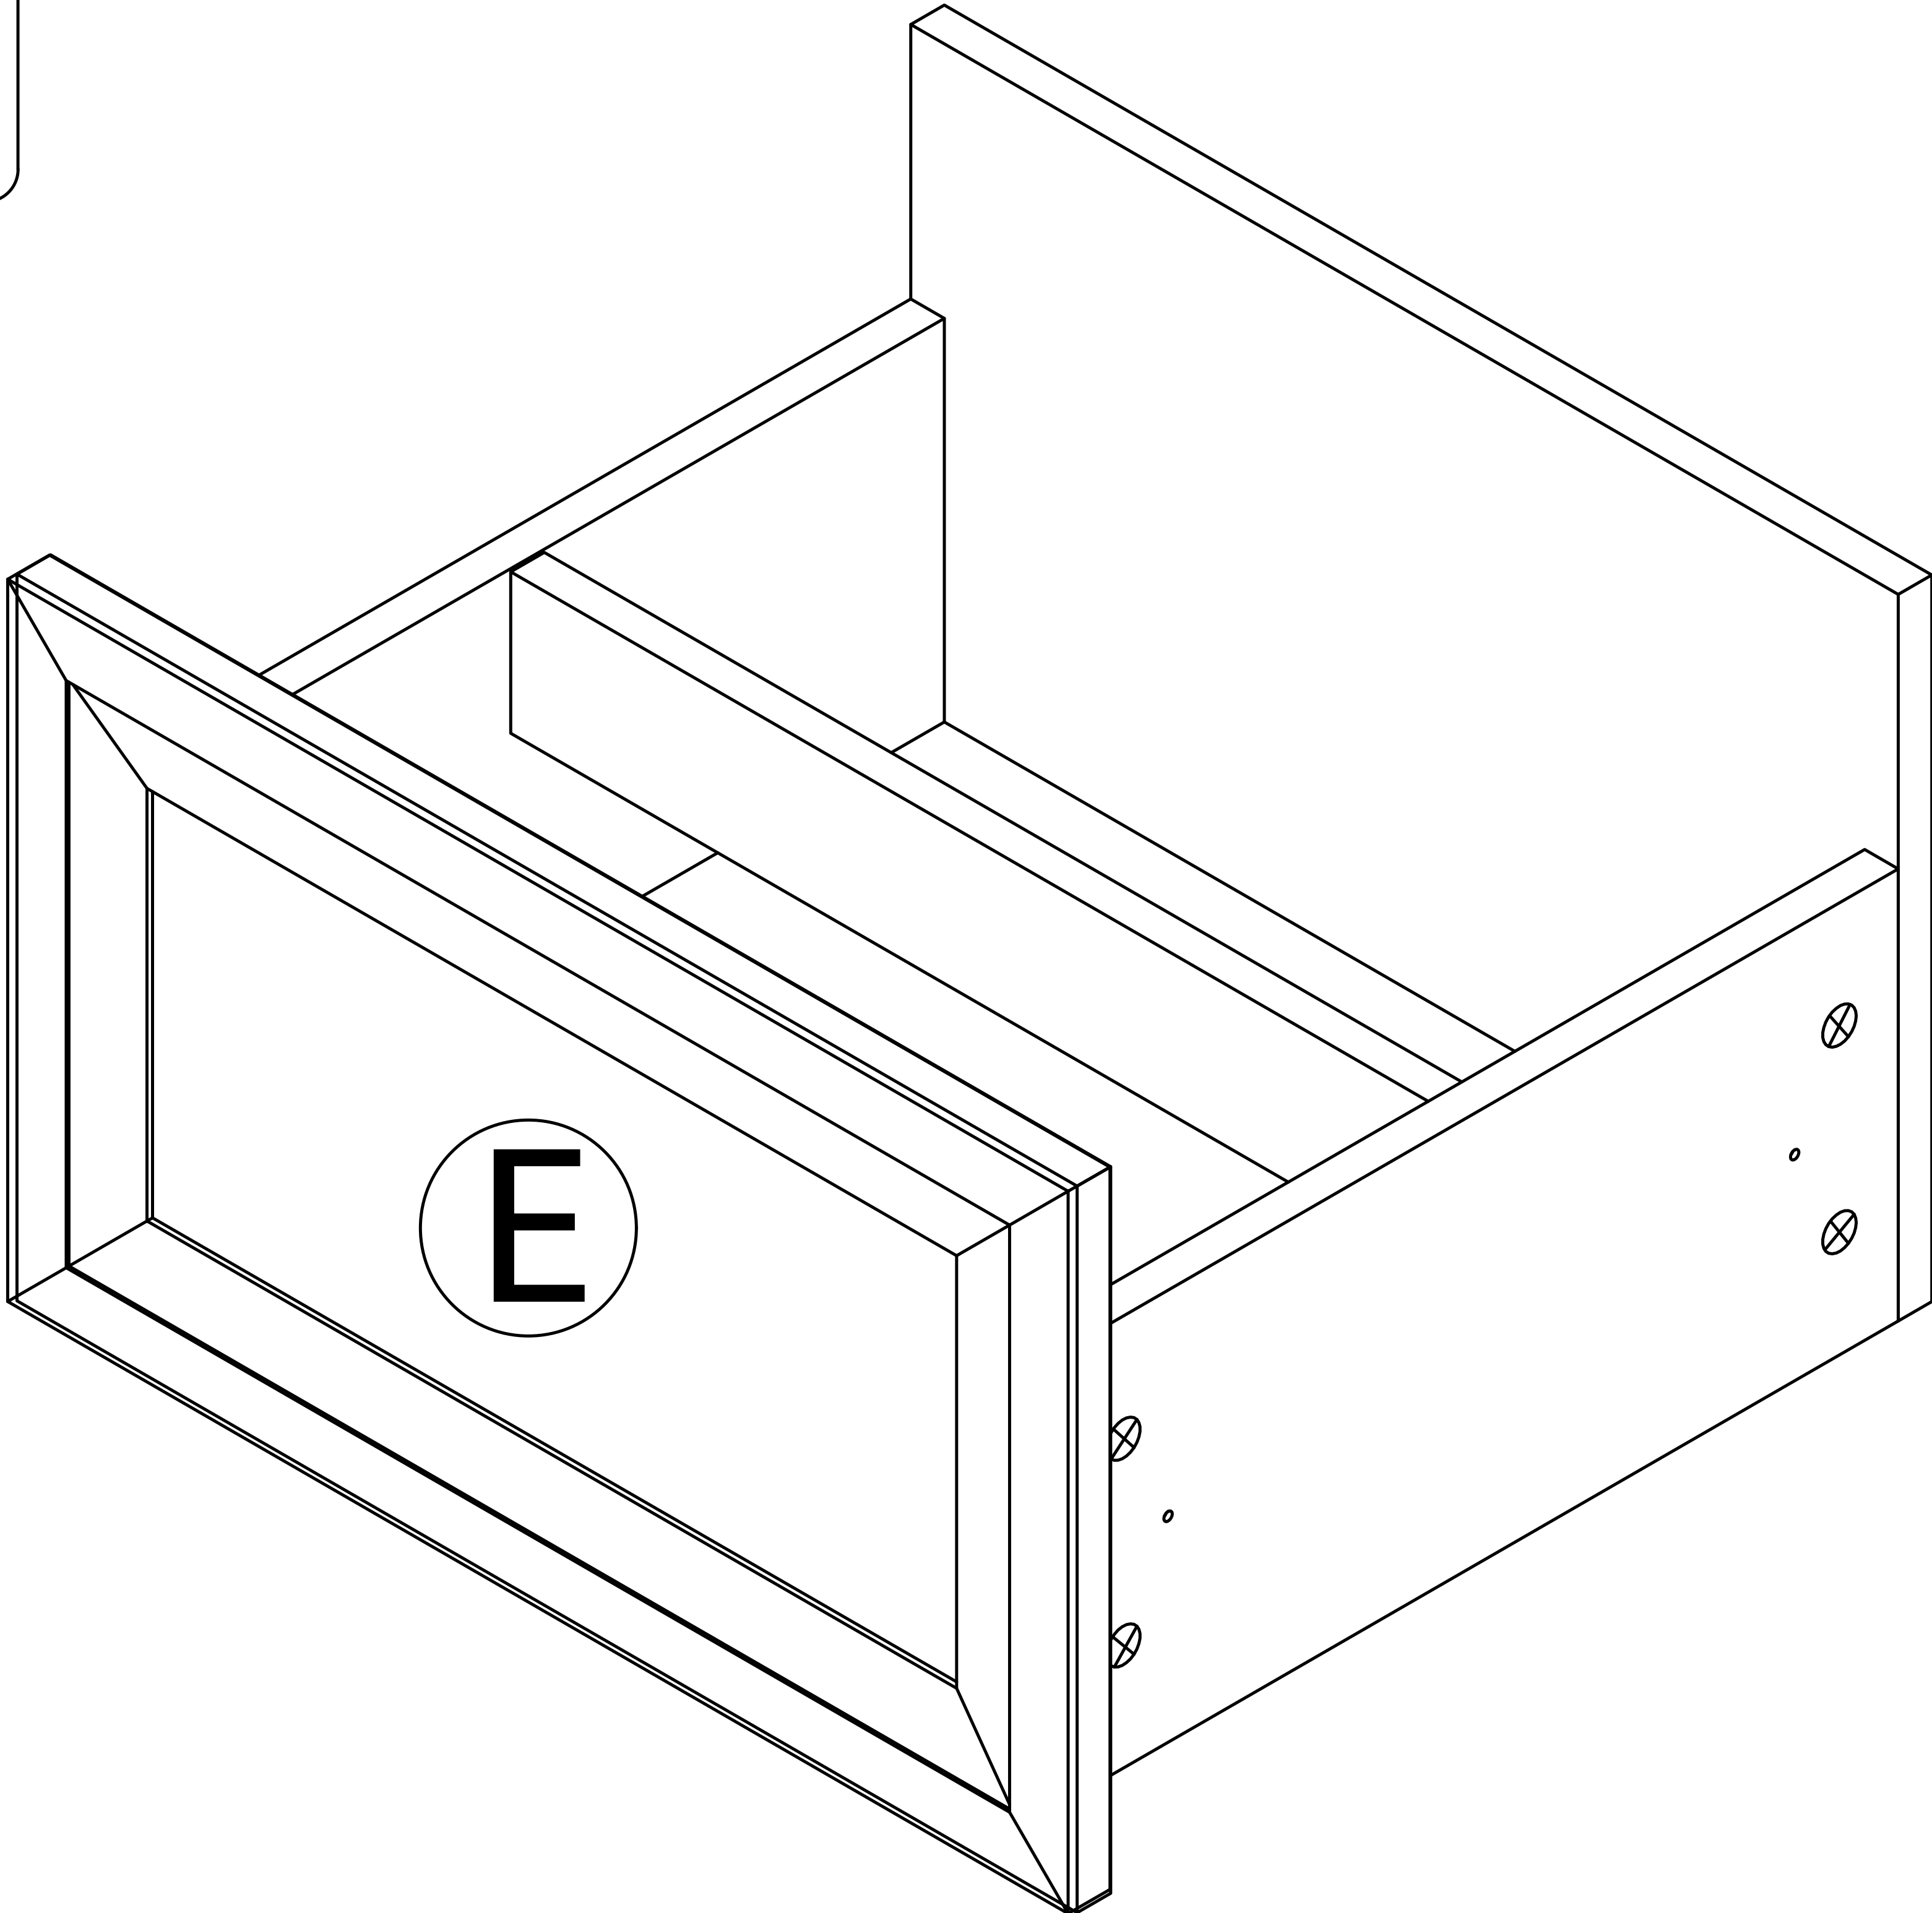


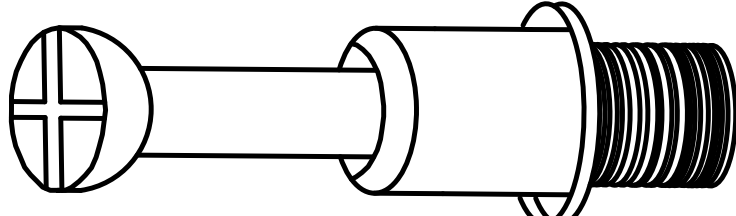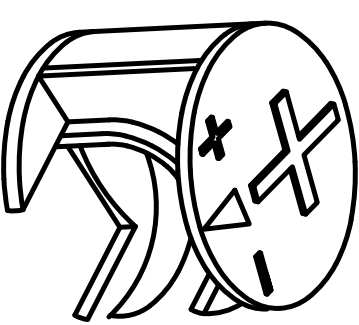- | | | |
|---|---|-----|
| ① |  | x12 |
| ② |  | x12 |

x2


Repeat the above installation steps.

Drawer rail breakdown diagram

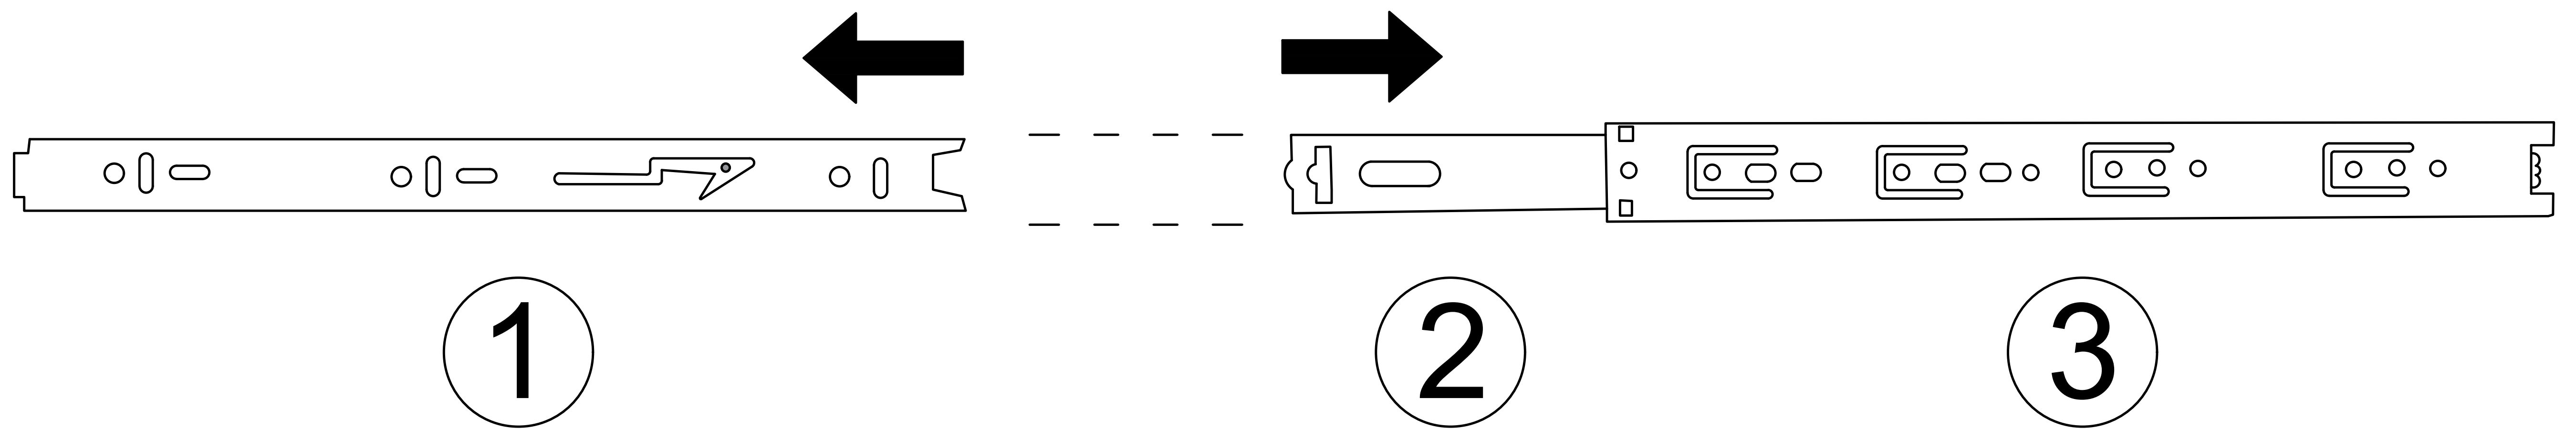


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

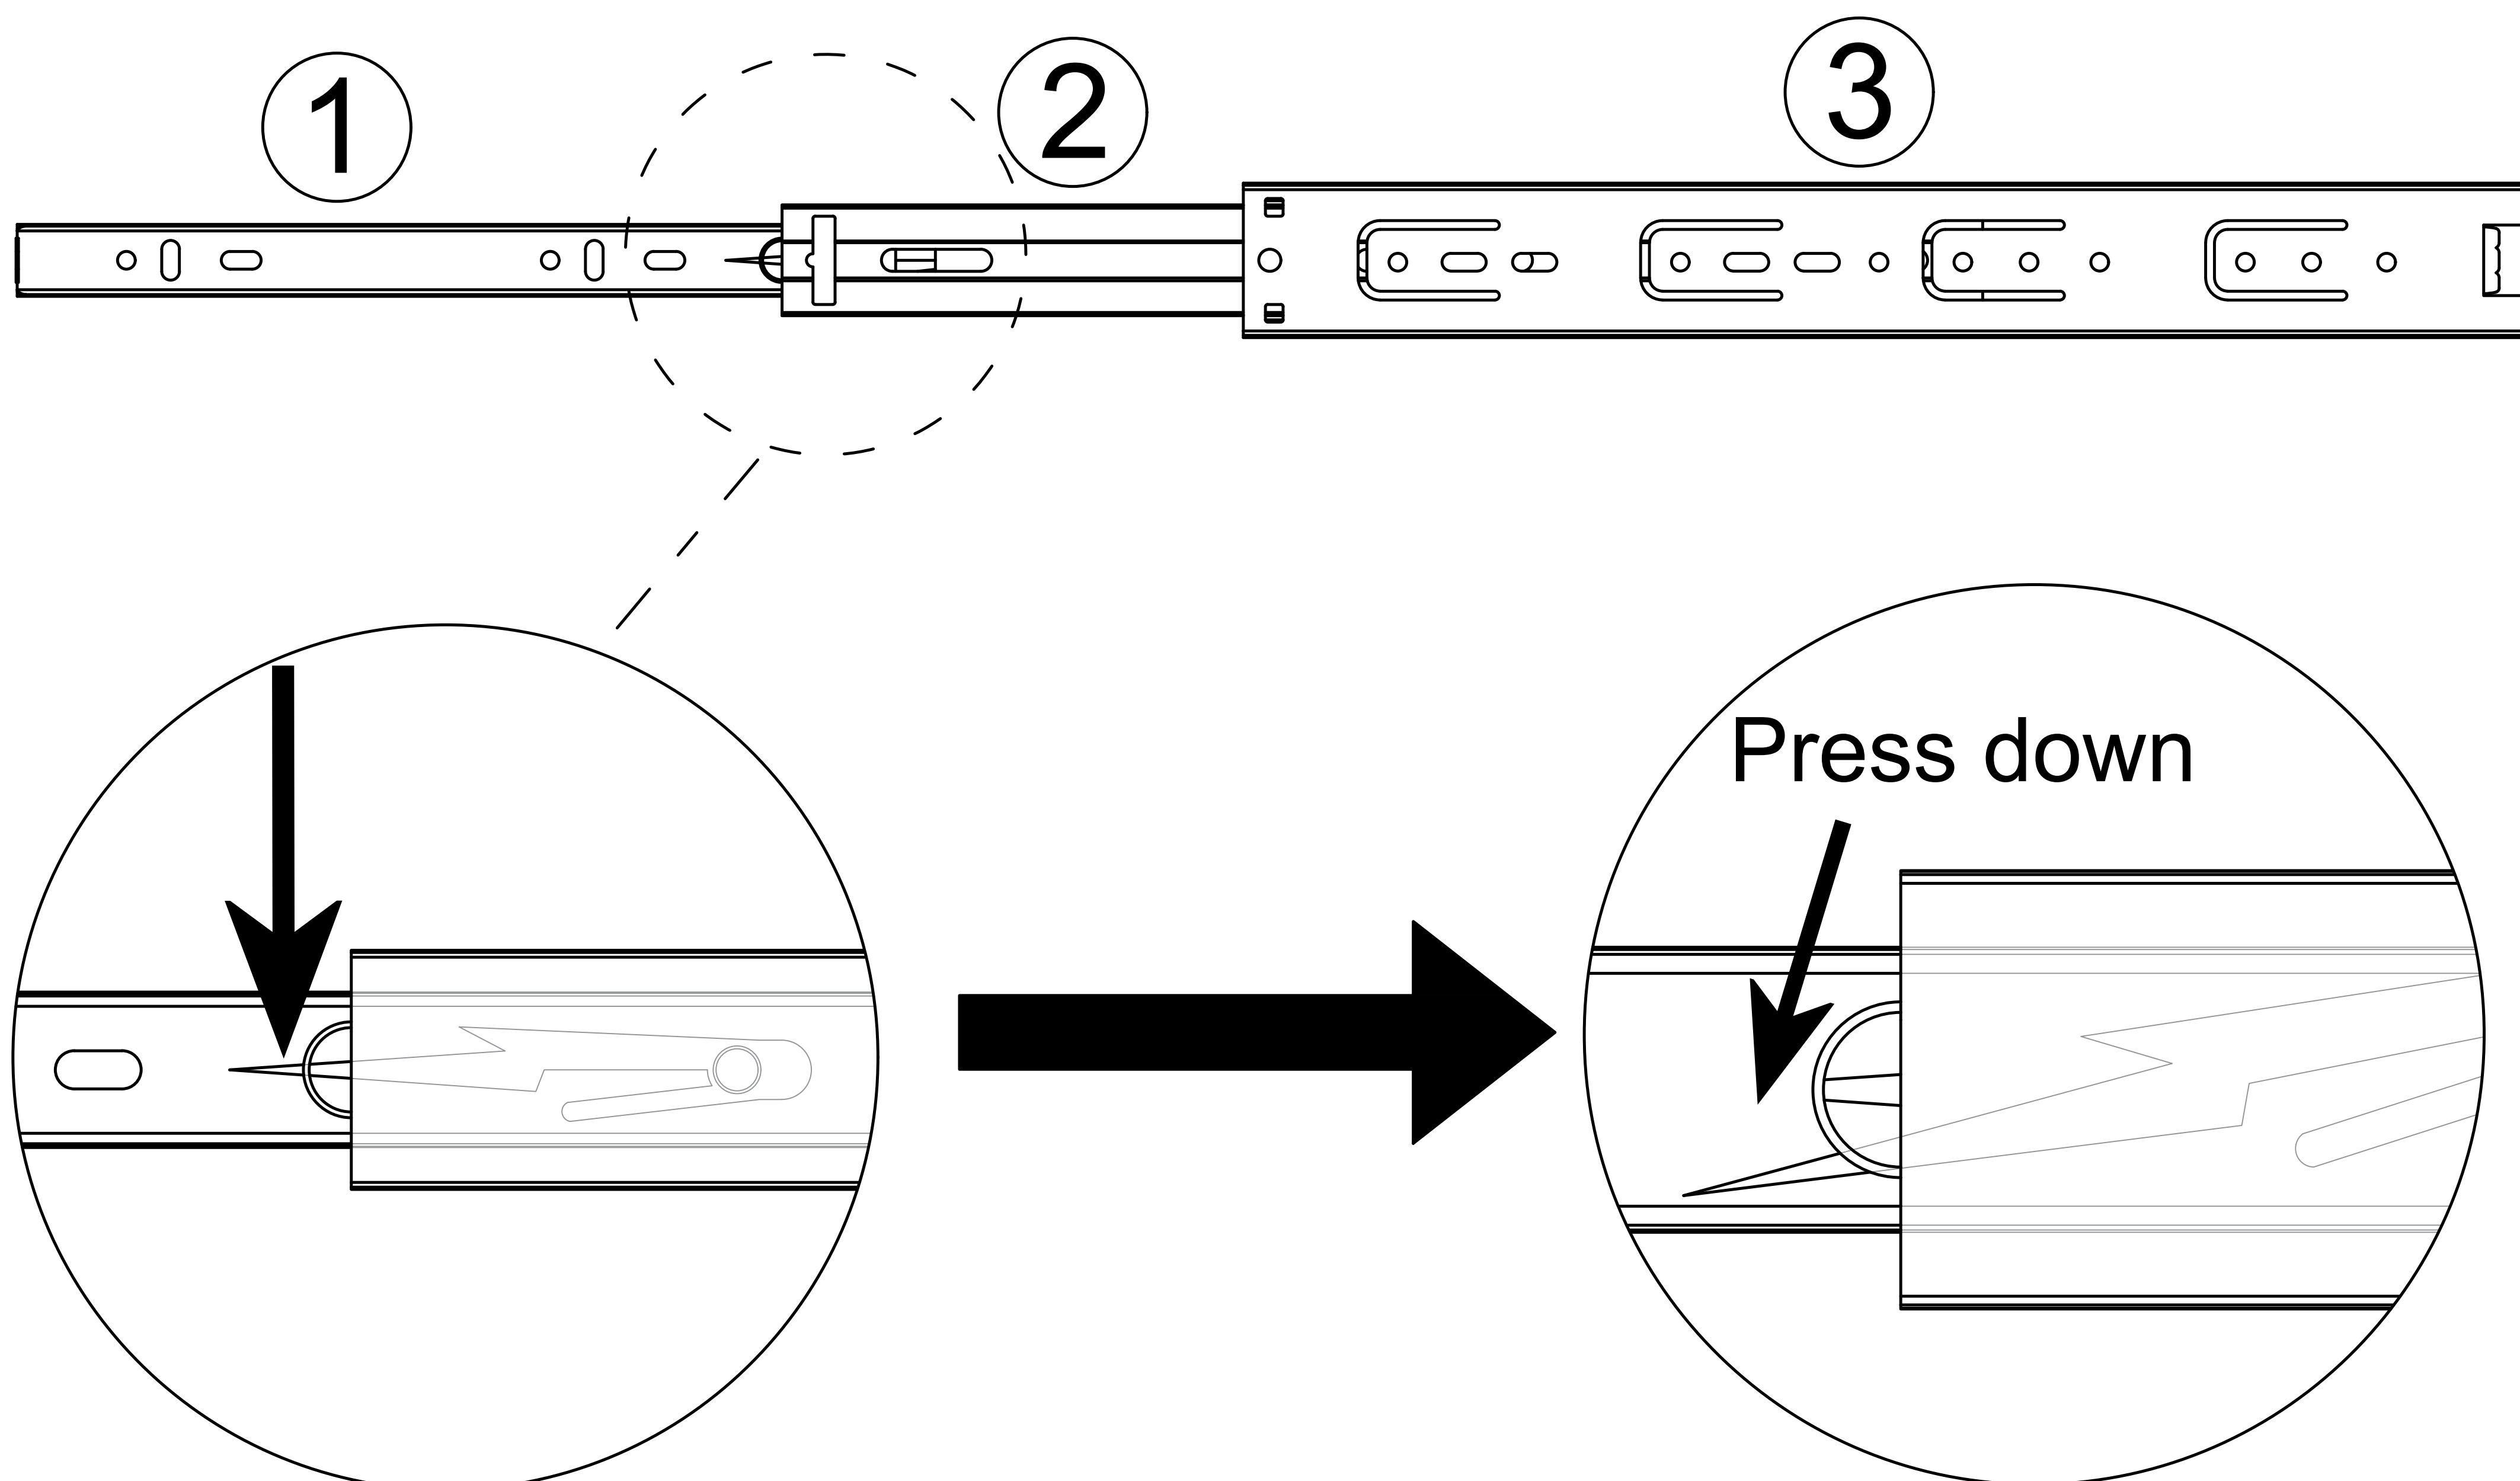


Step 2 : Press the nylon button and pull out ①.



Drawer rail decomposition completed schematic diagram












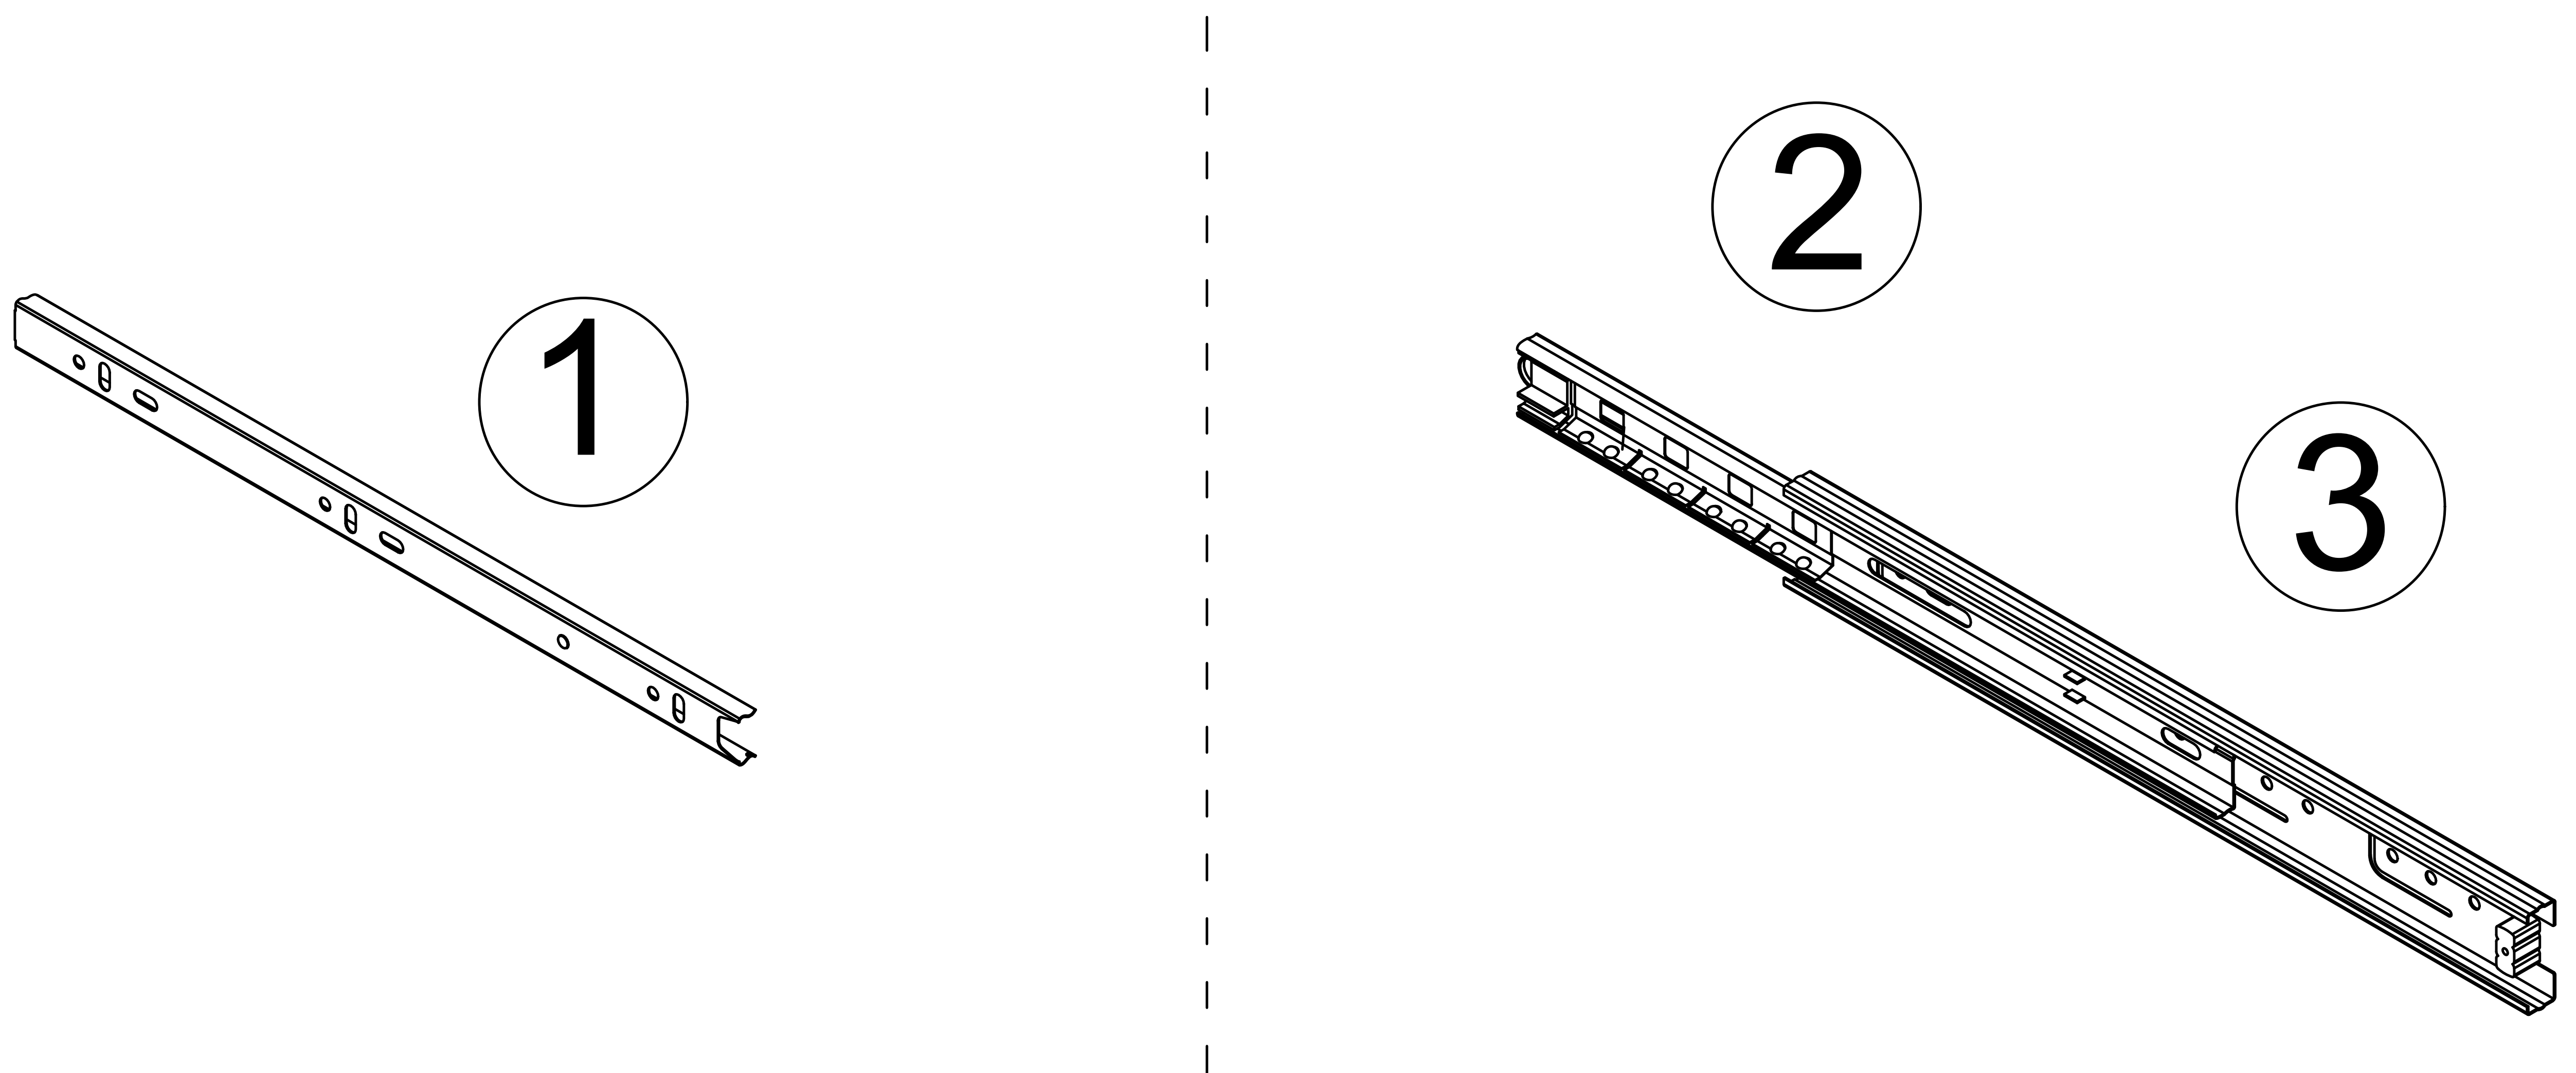




Step 12

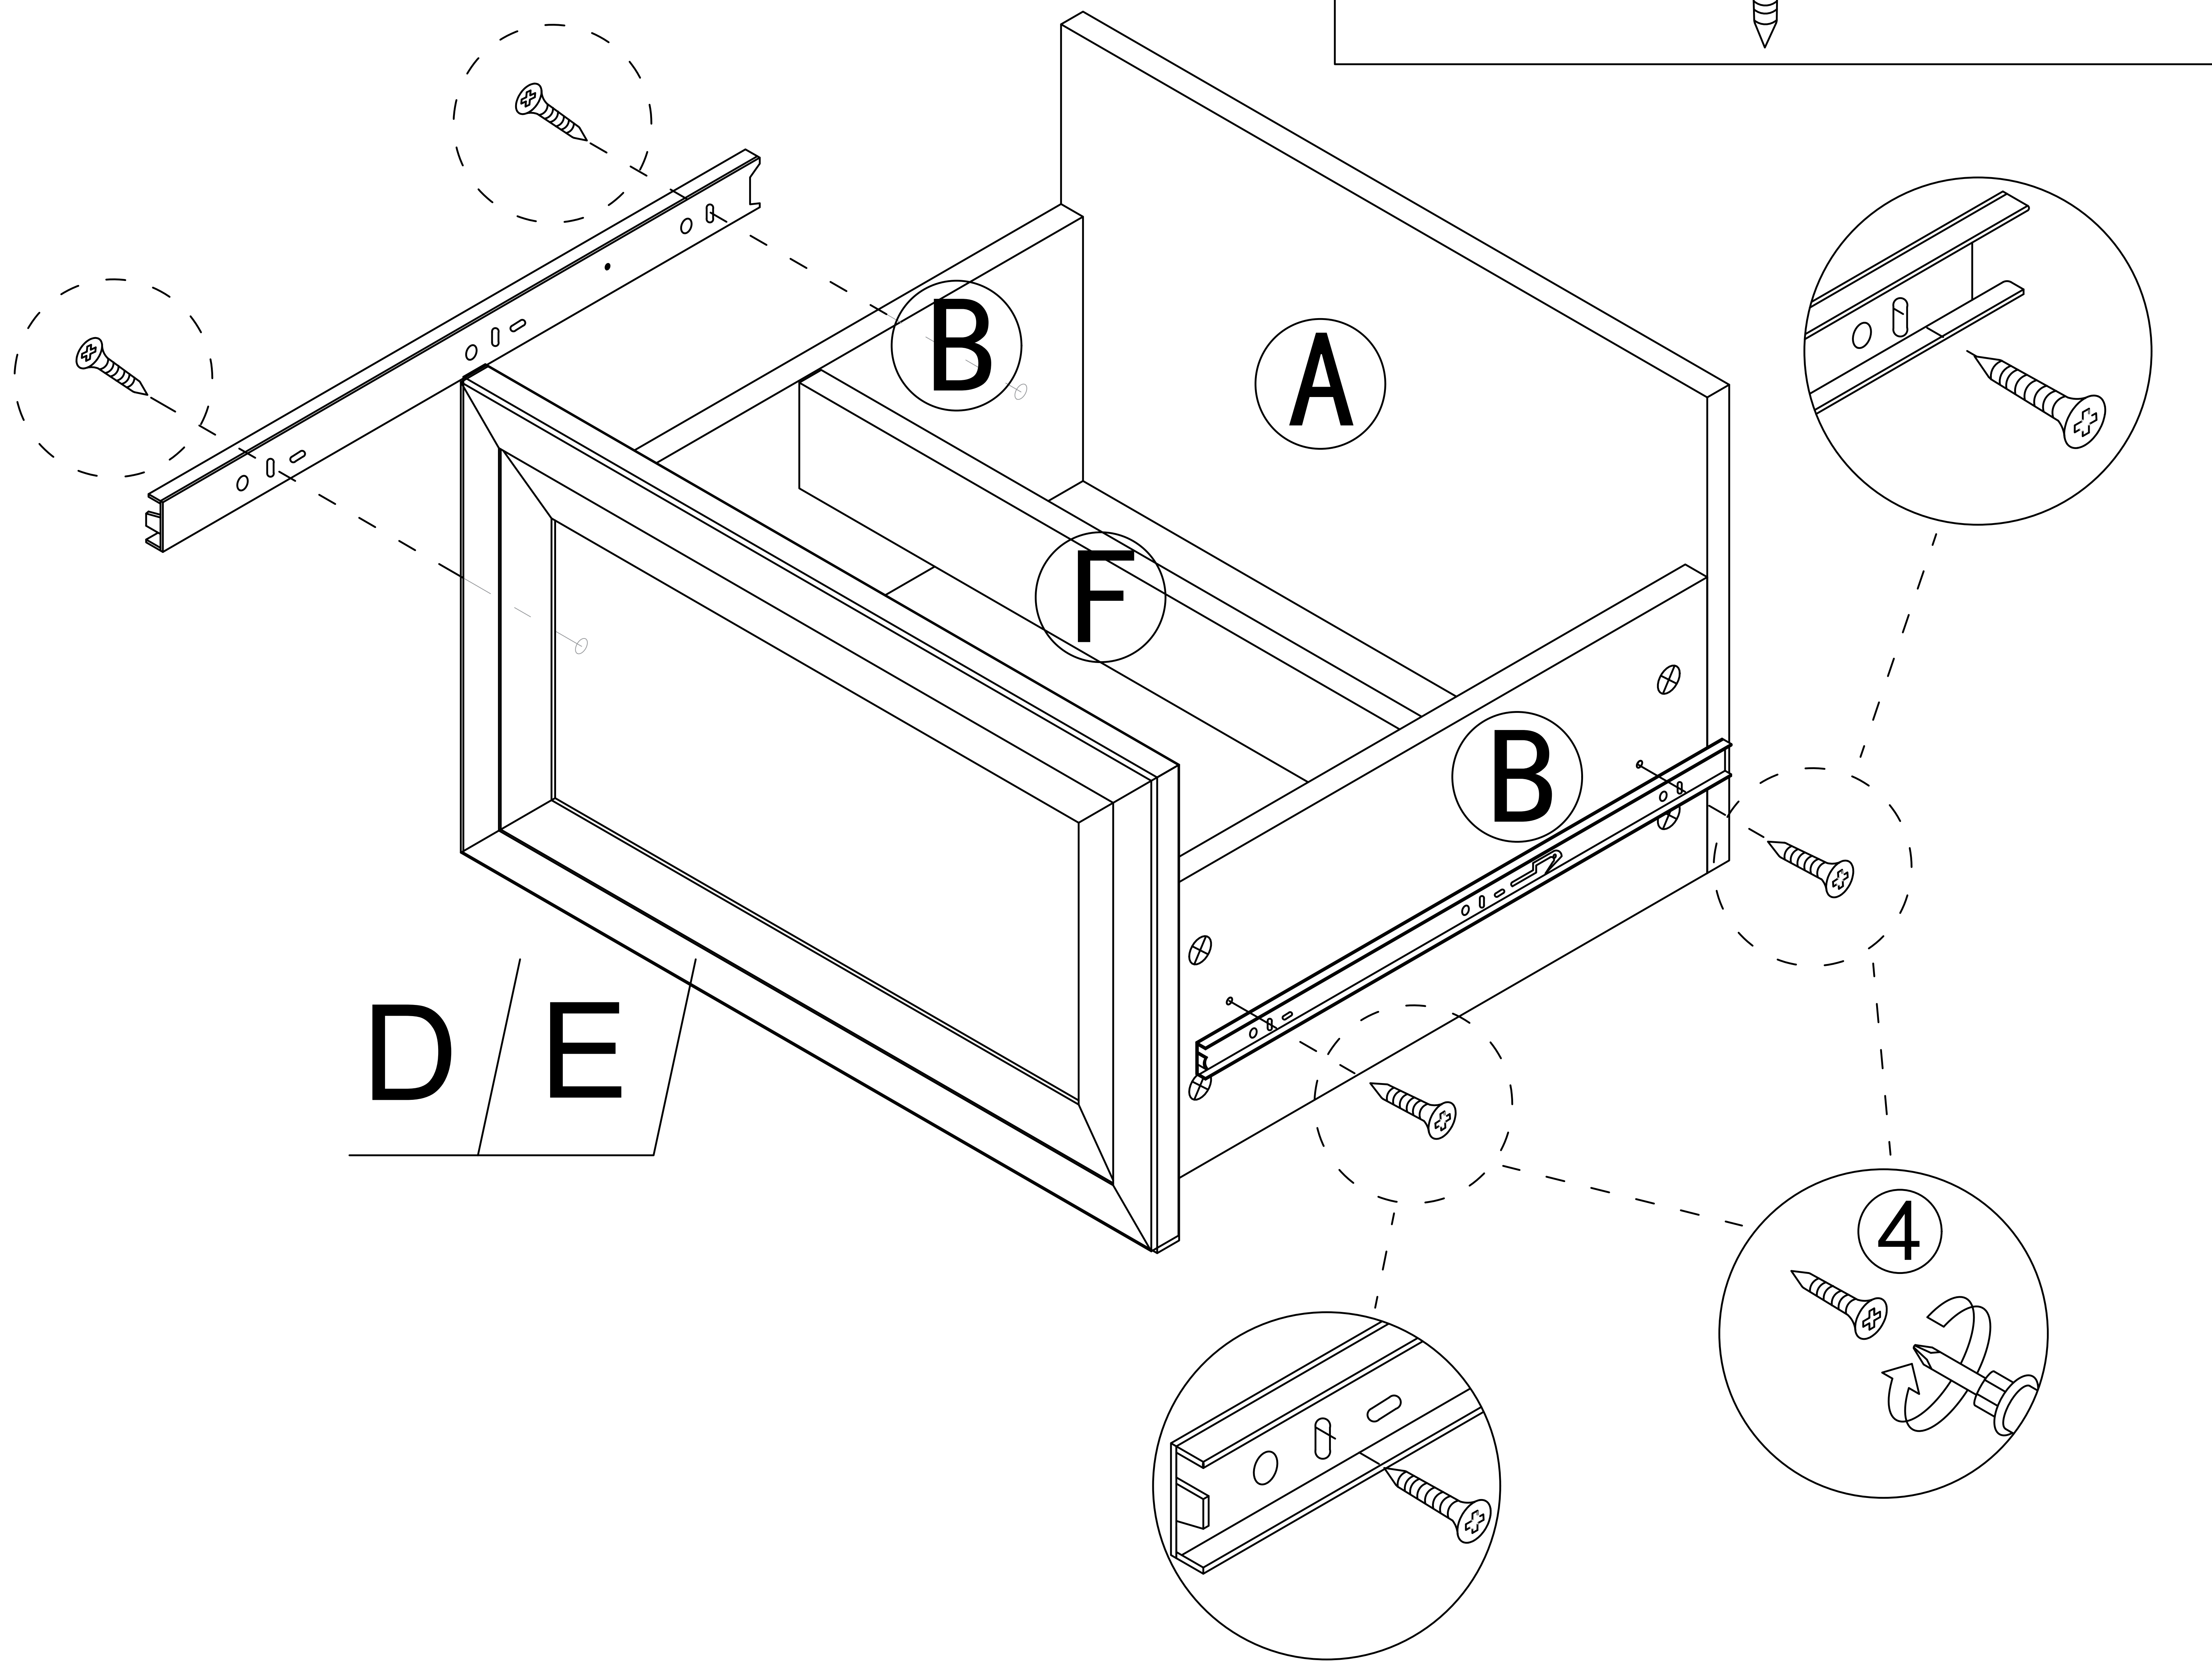



Install the guide rail according to the above steps.

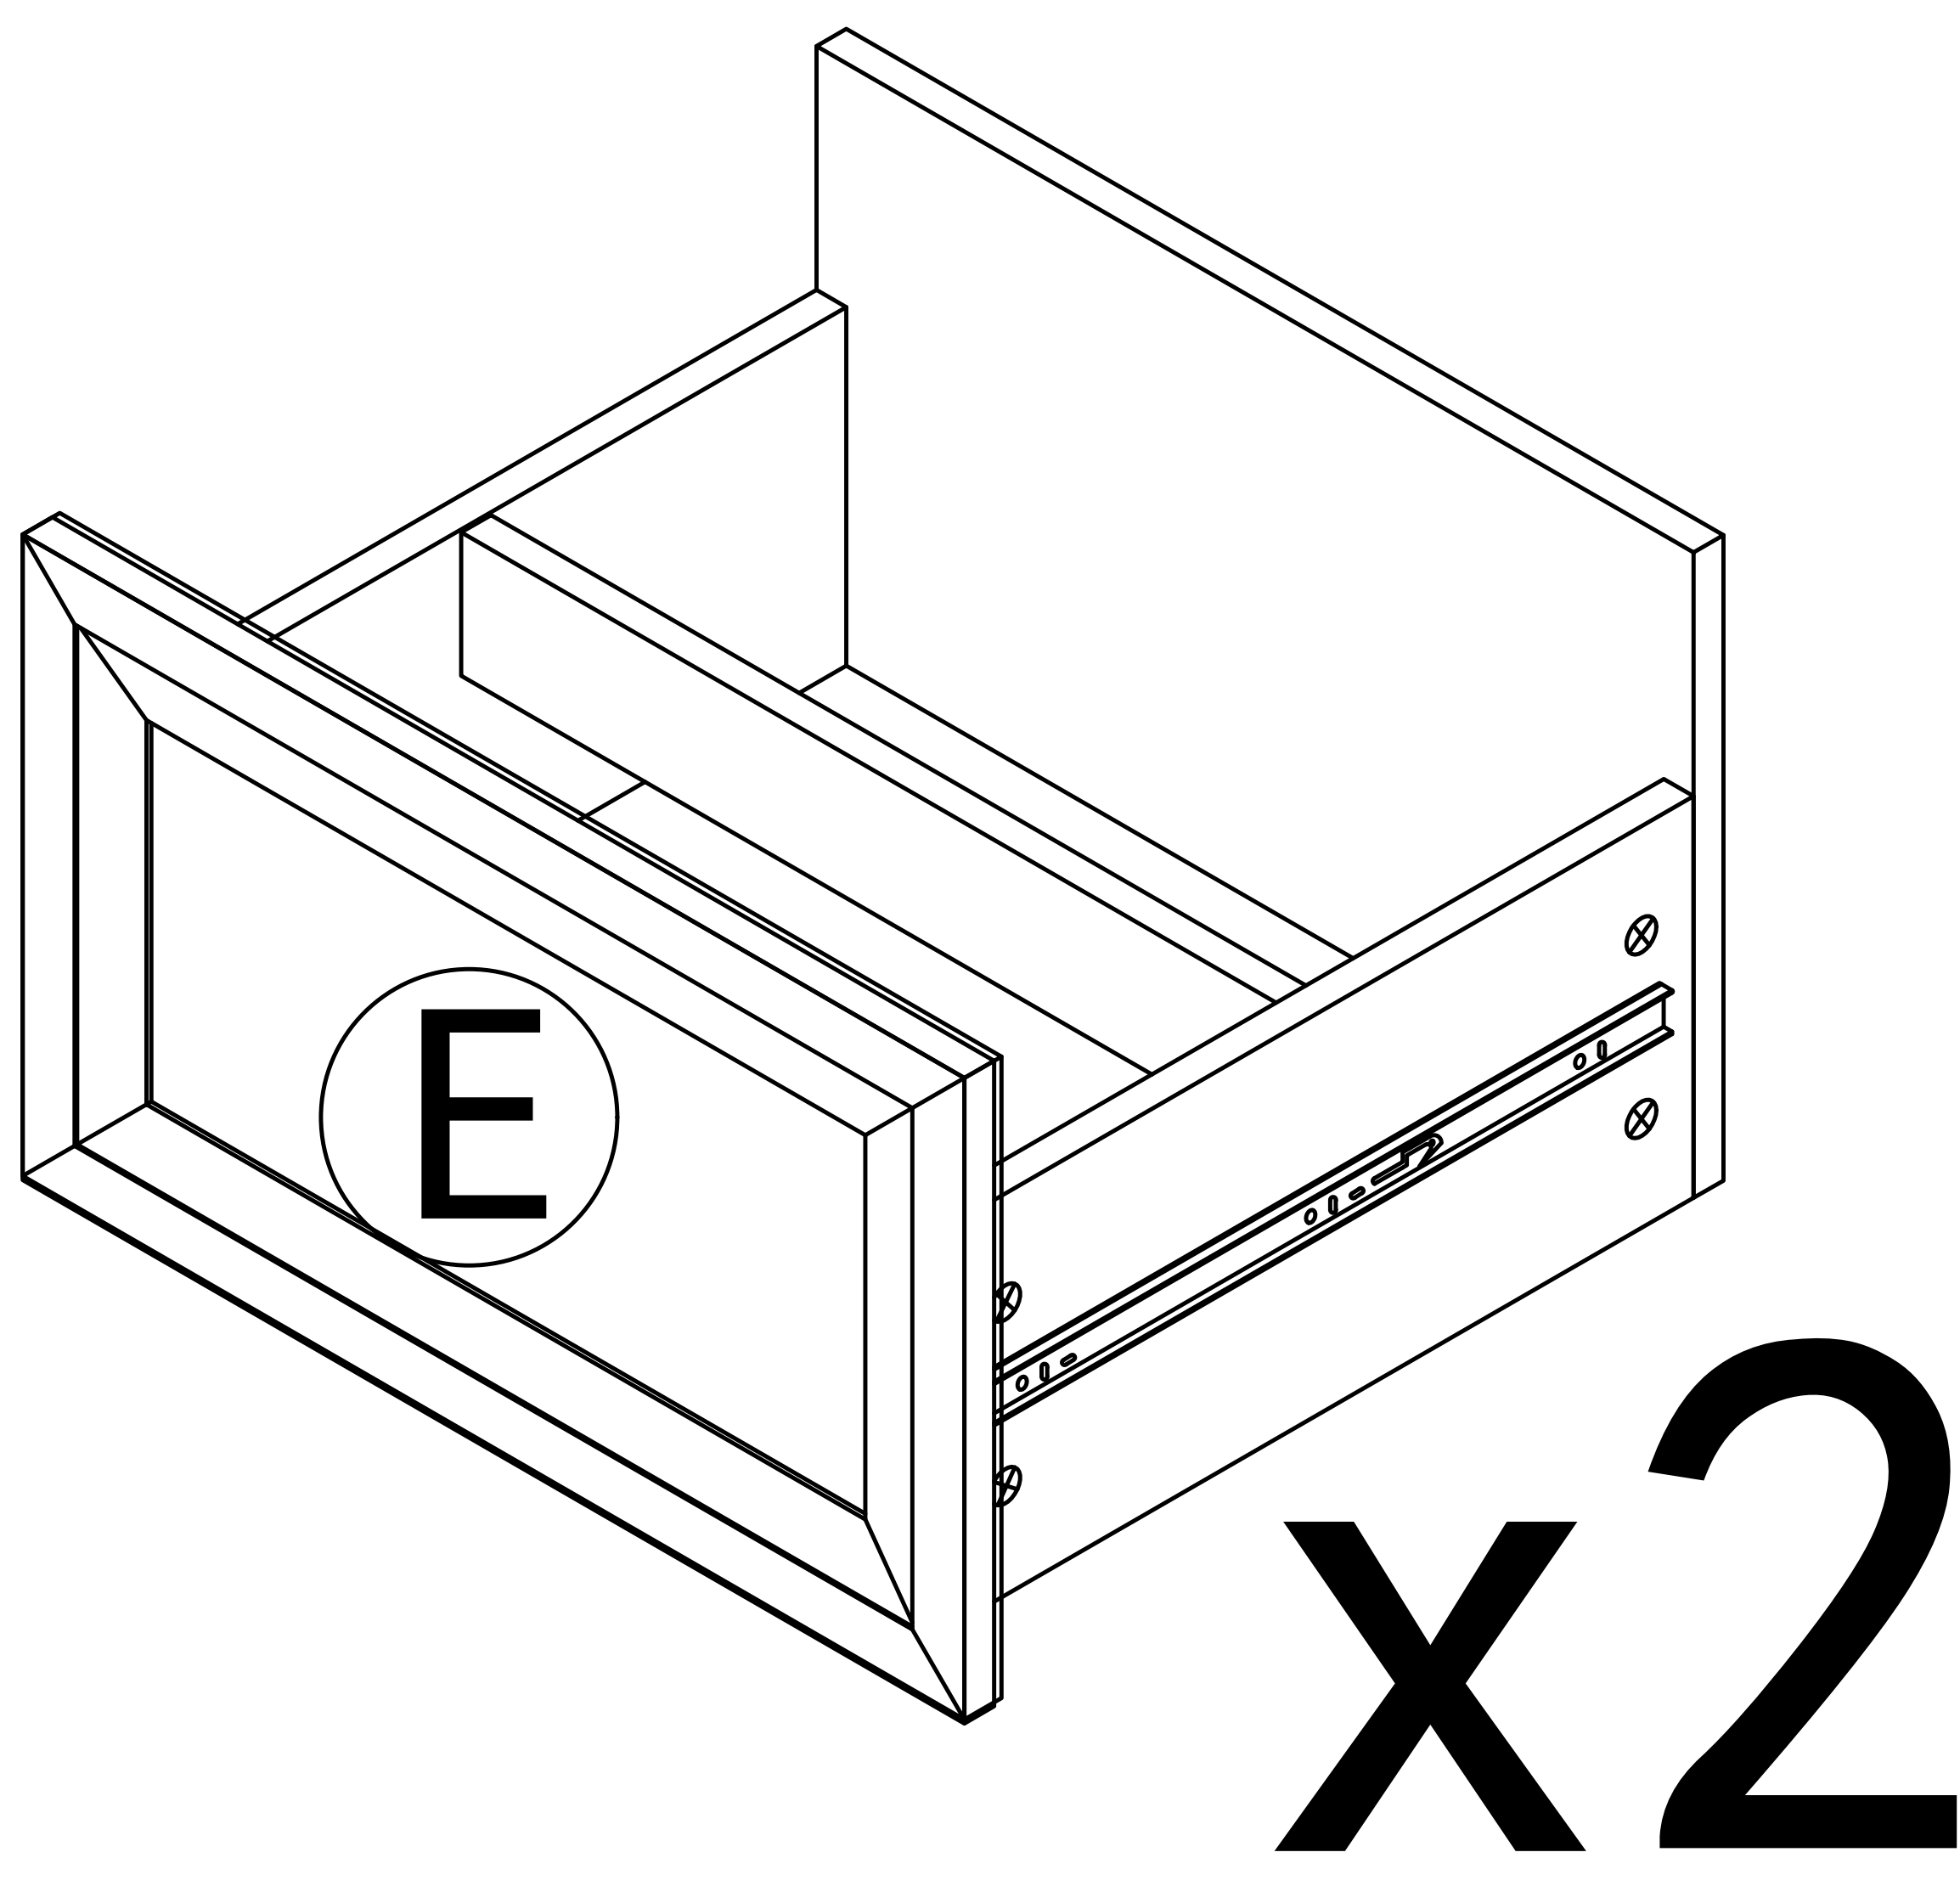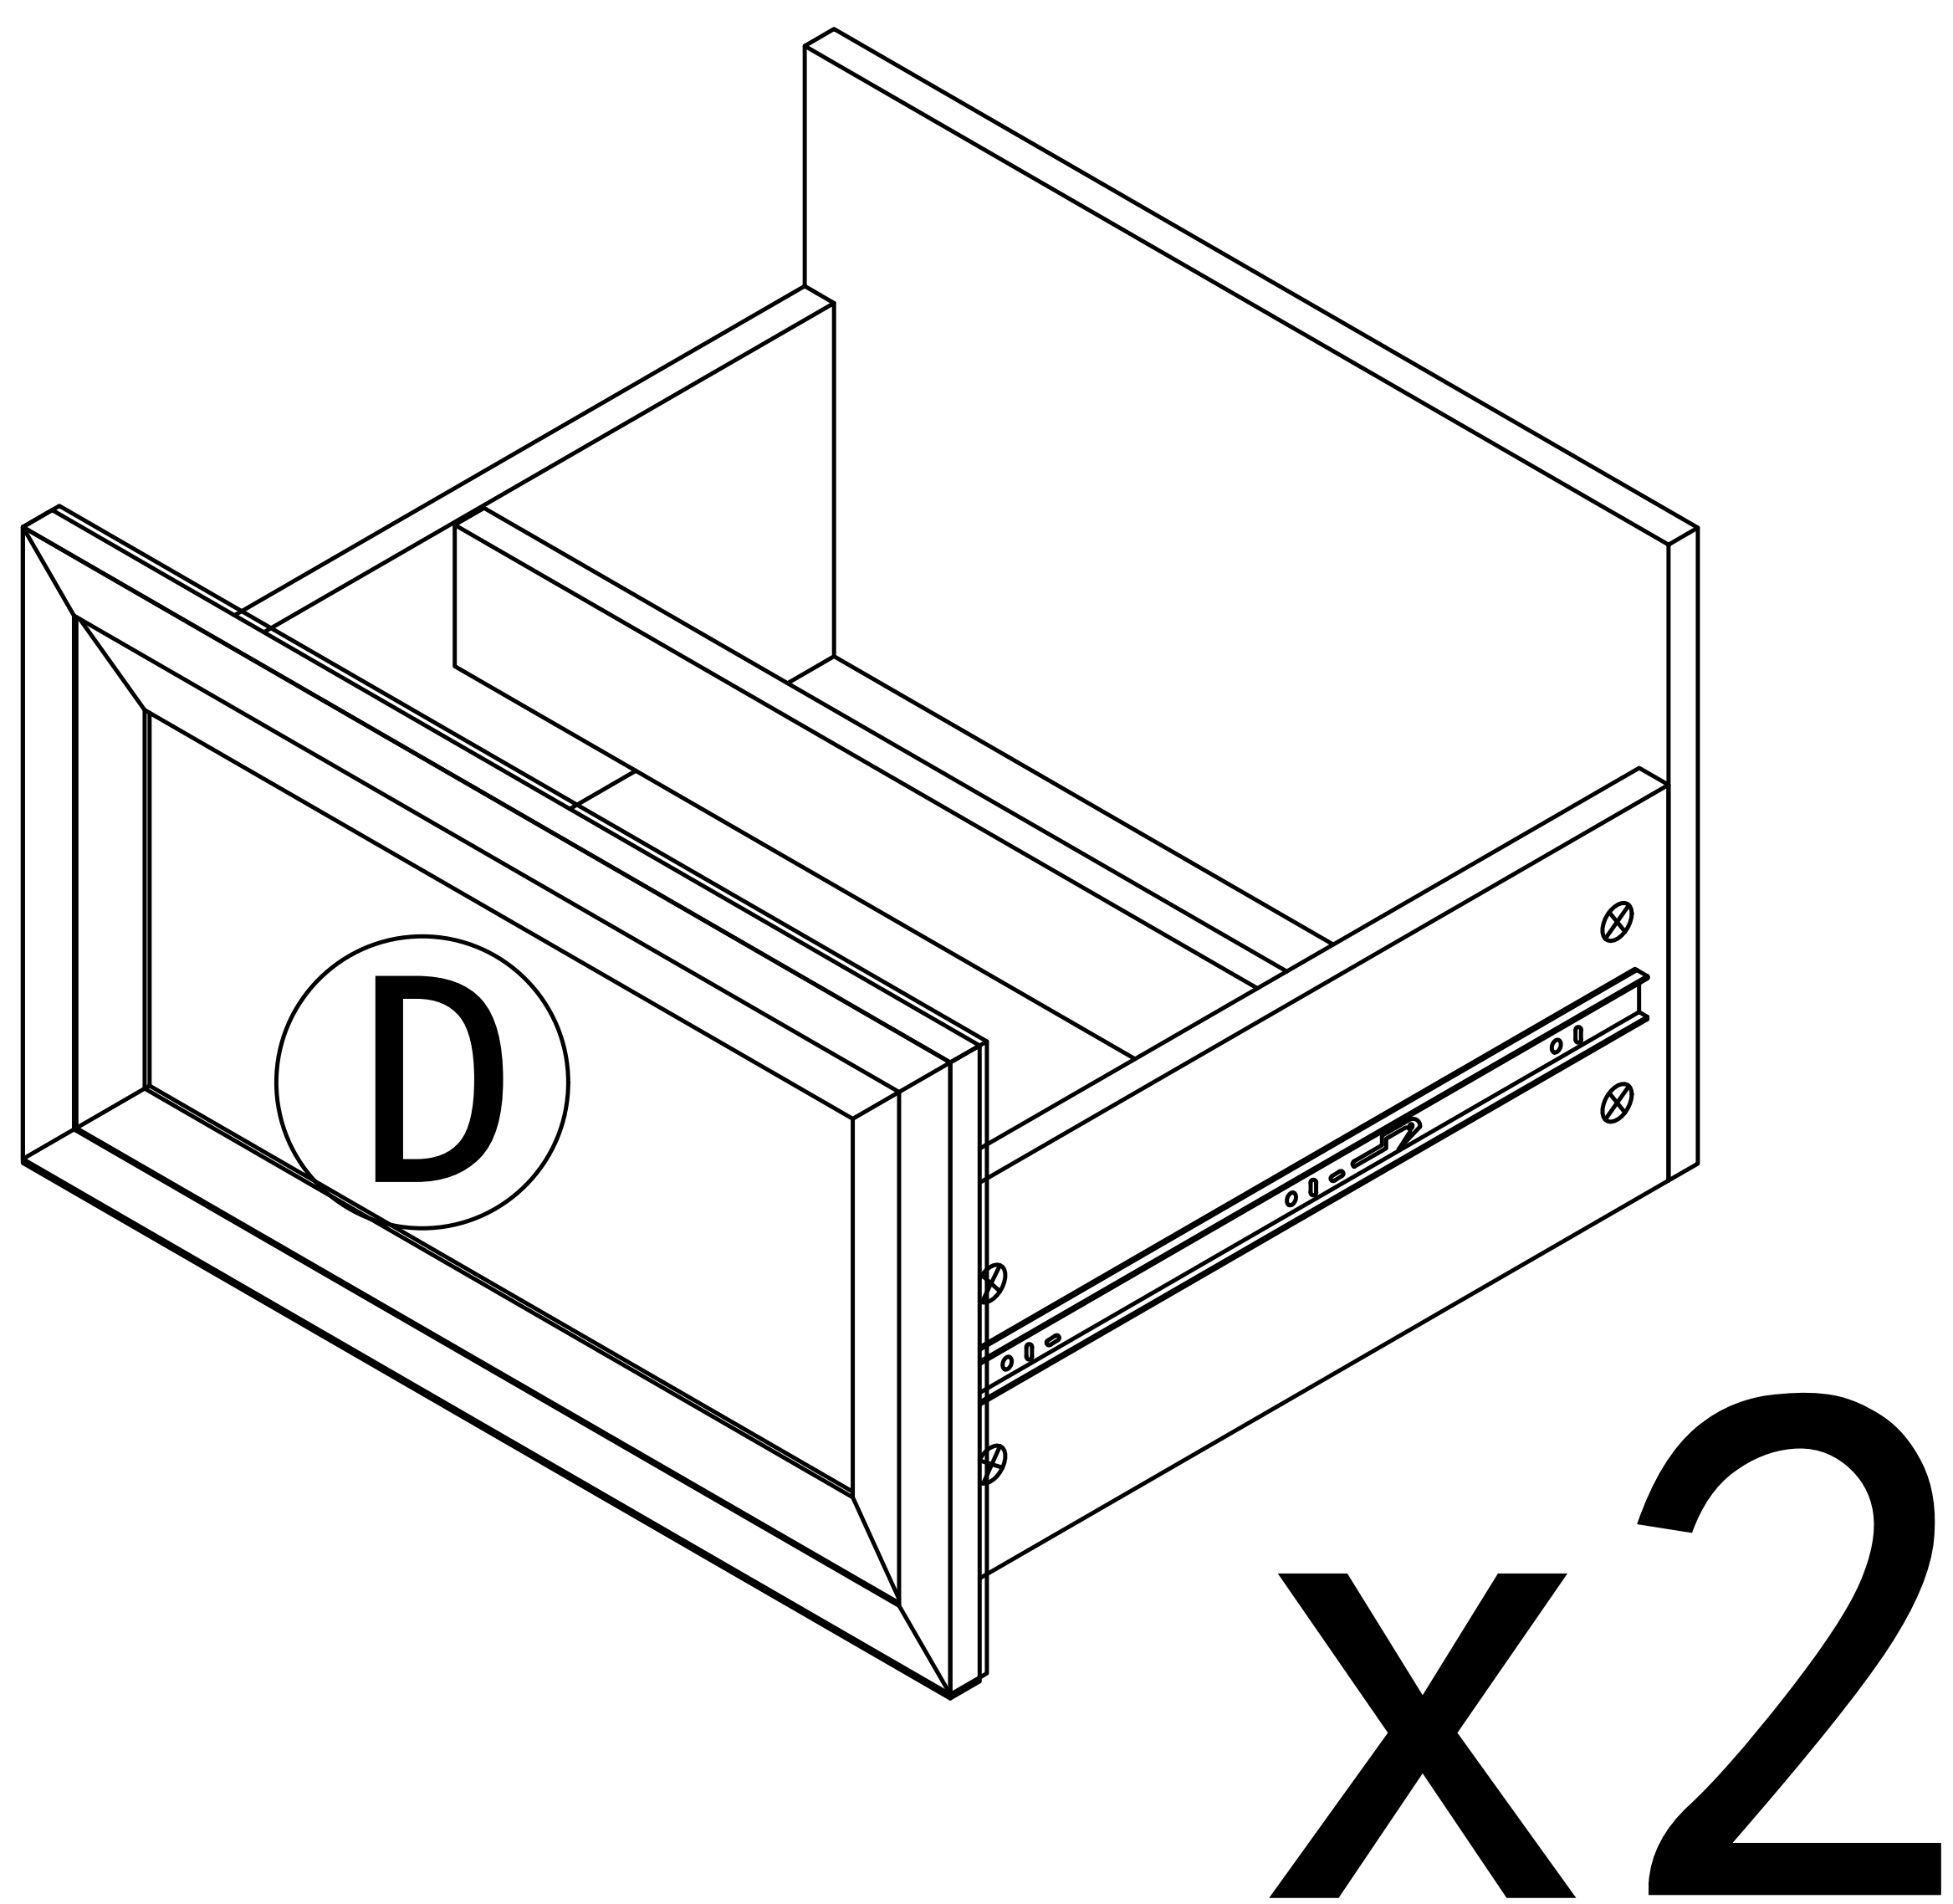

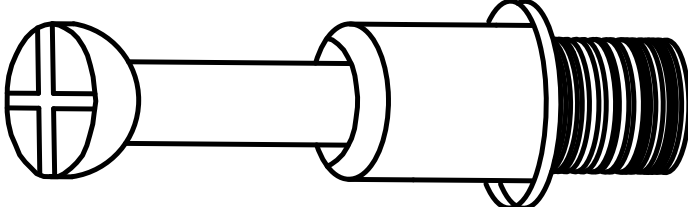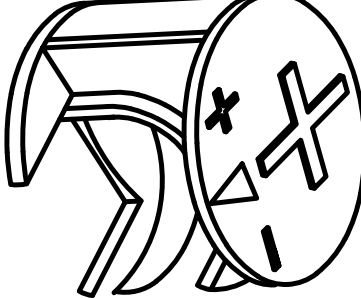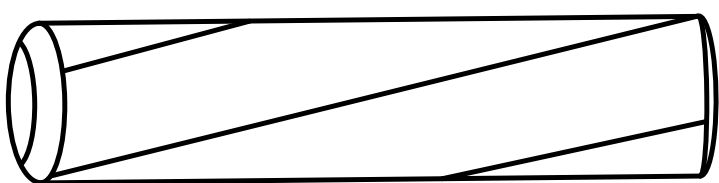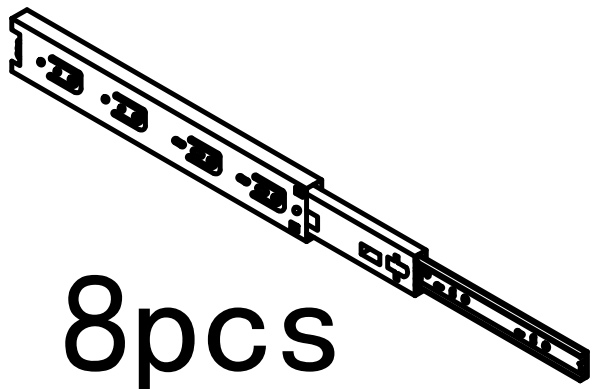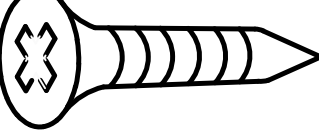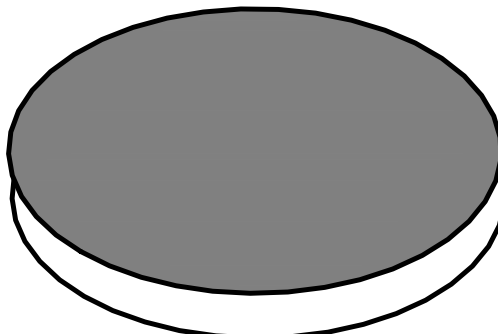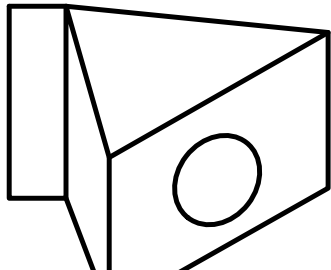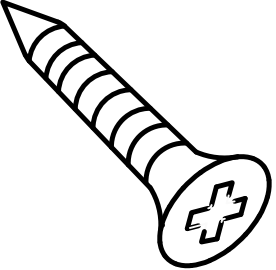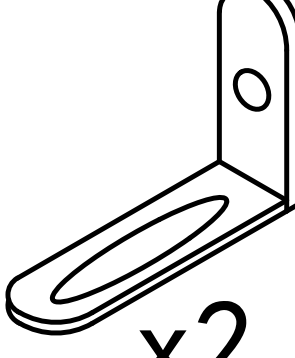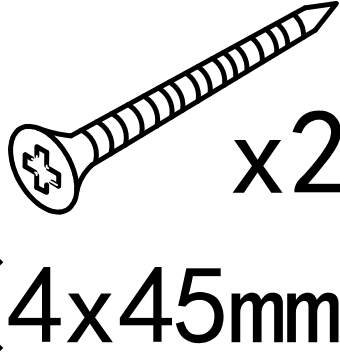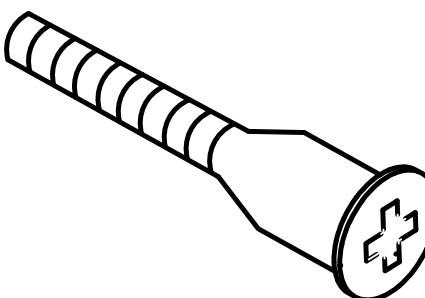1		20pcs	2		24pcs	3		12pcs
4	 8pcs	 24pcs	5		5pcs	6	 8pcs	 8pcs
7	 x2	 x2 (3. 5x14mm)	 x2			 x2 (4x45mm)		
					 x4	8	 4pcs	

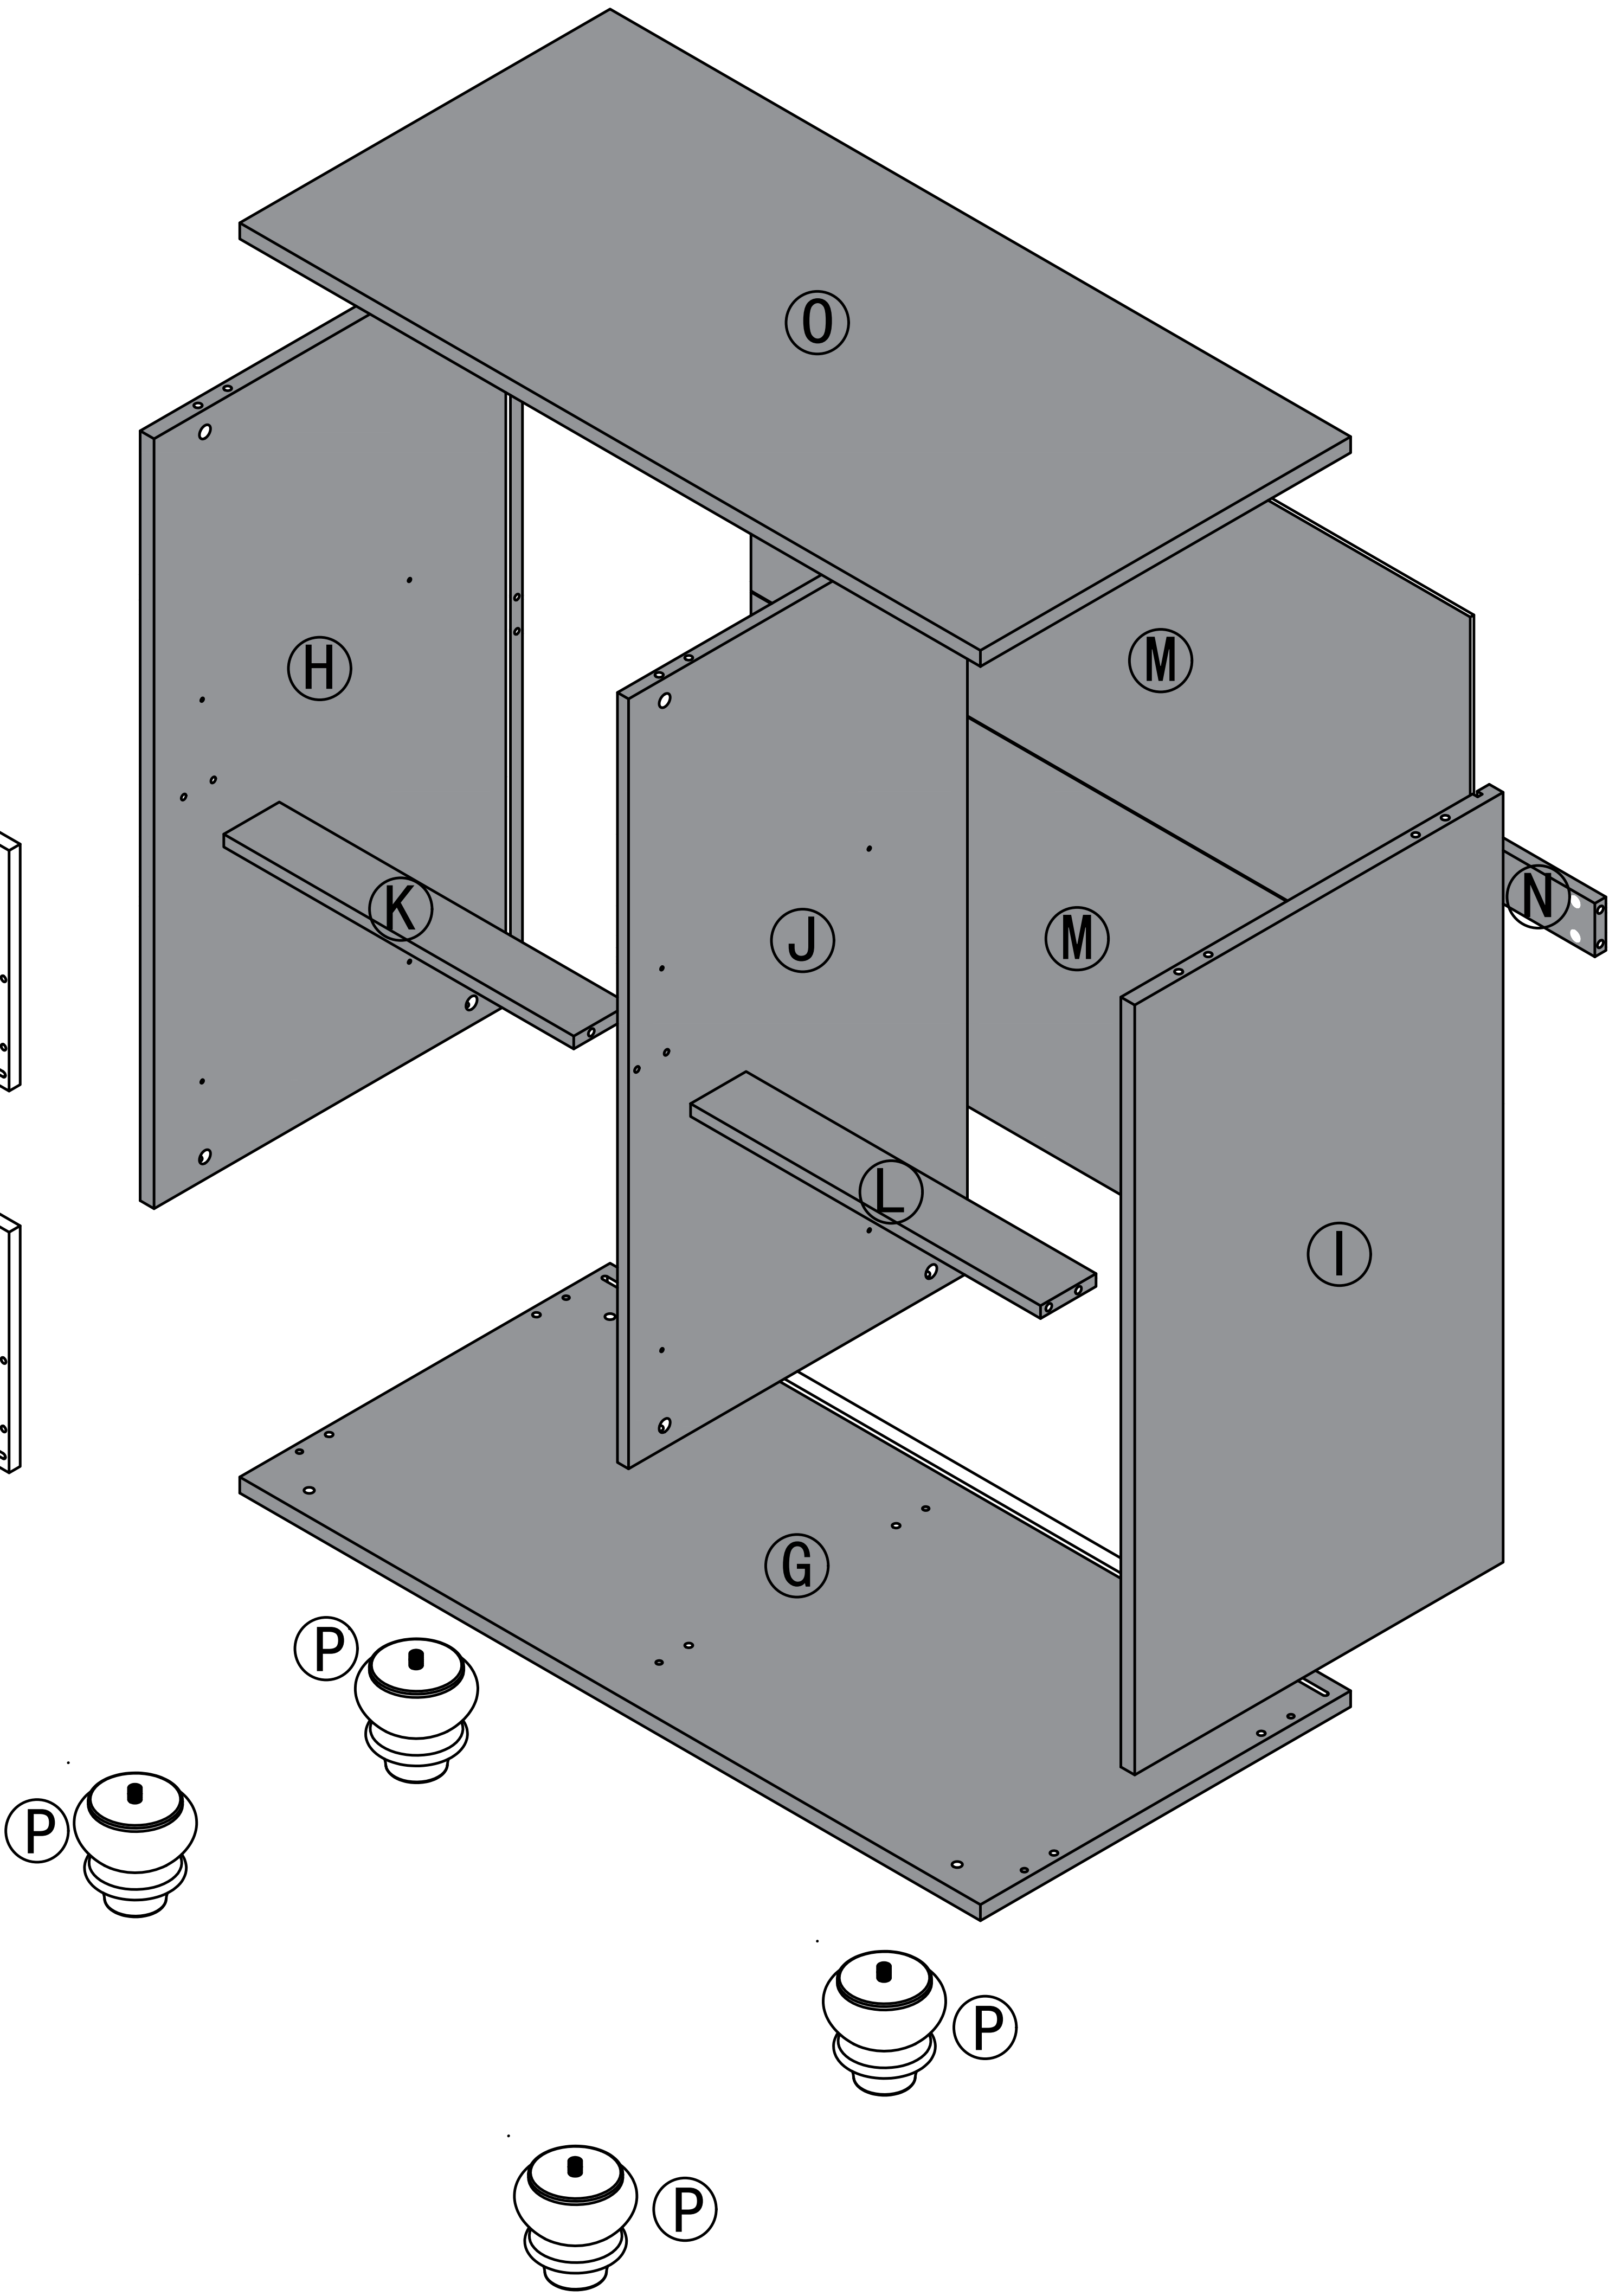
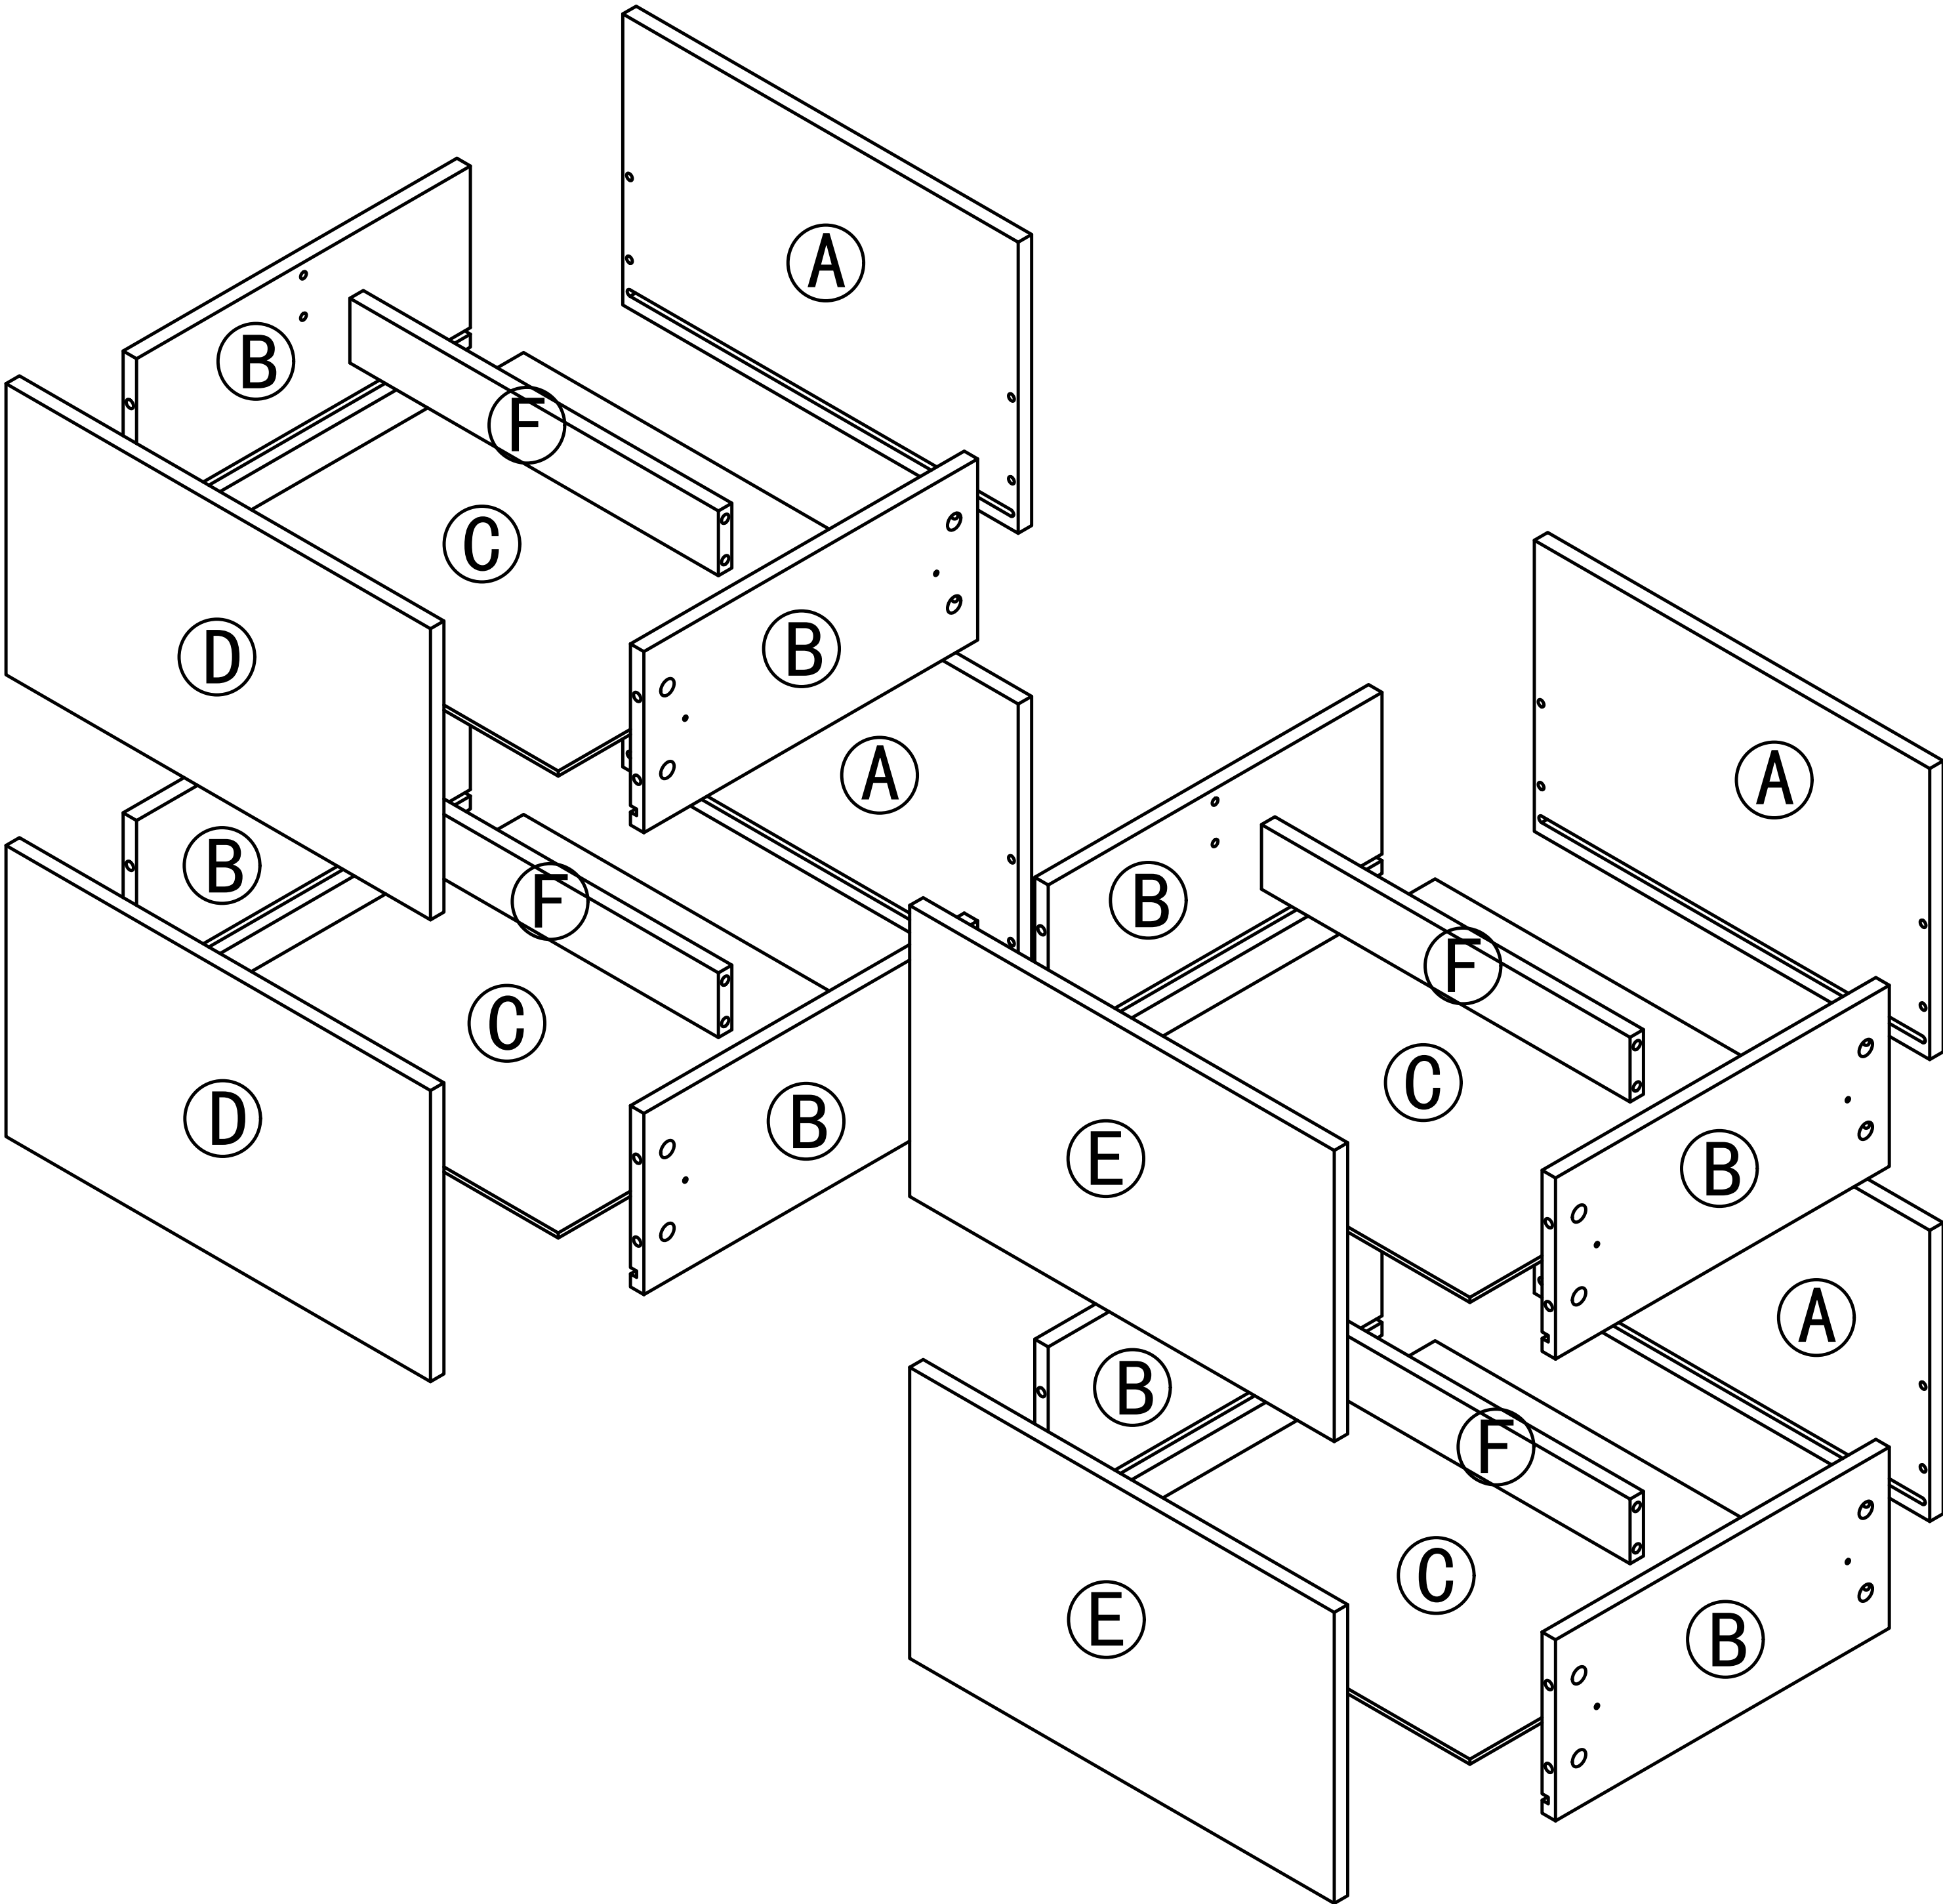


Step 13

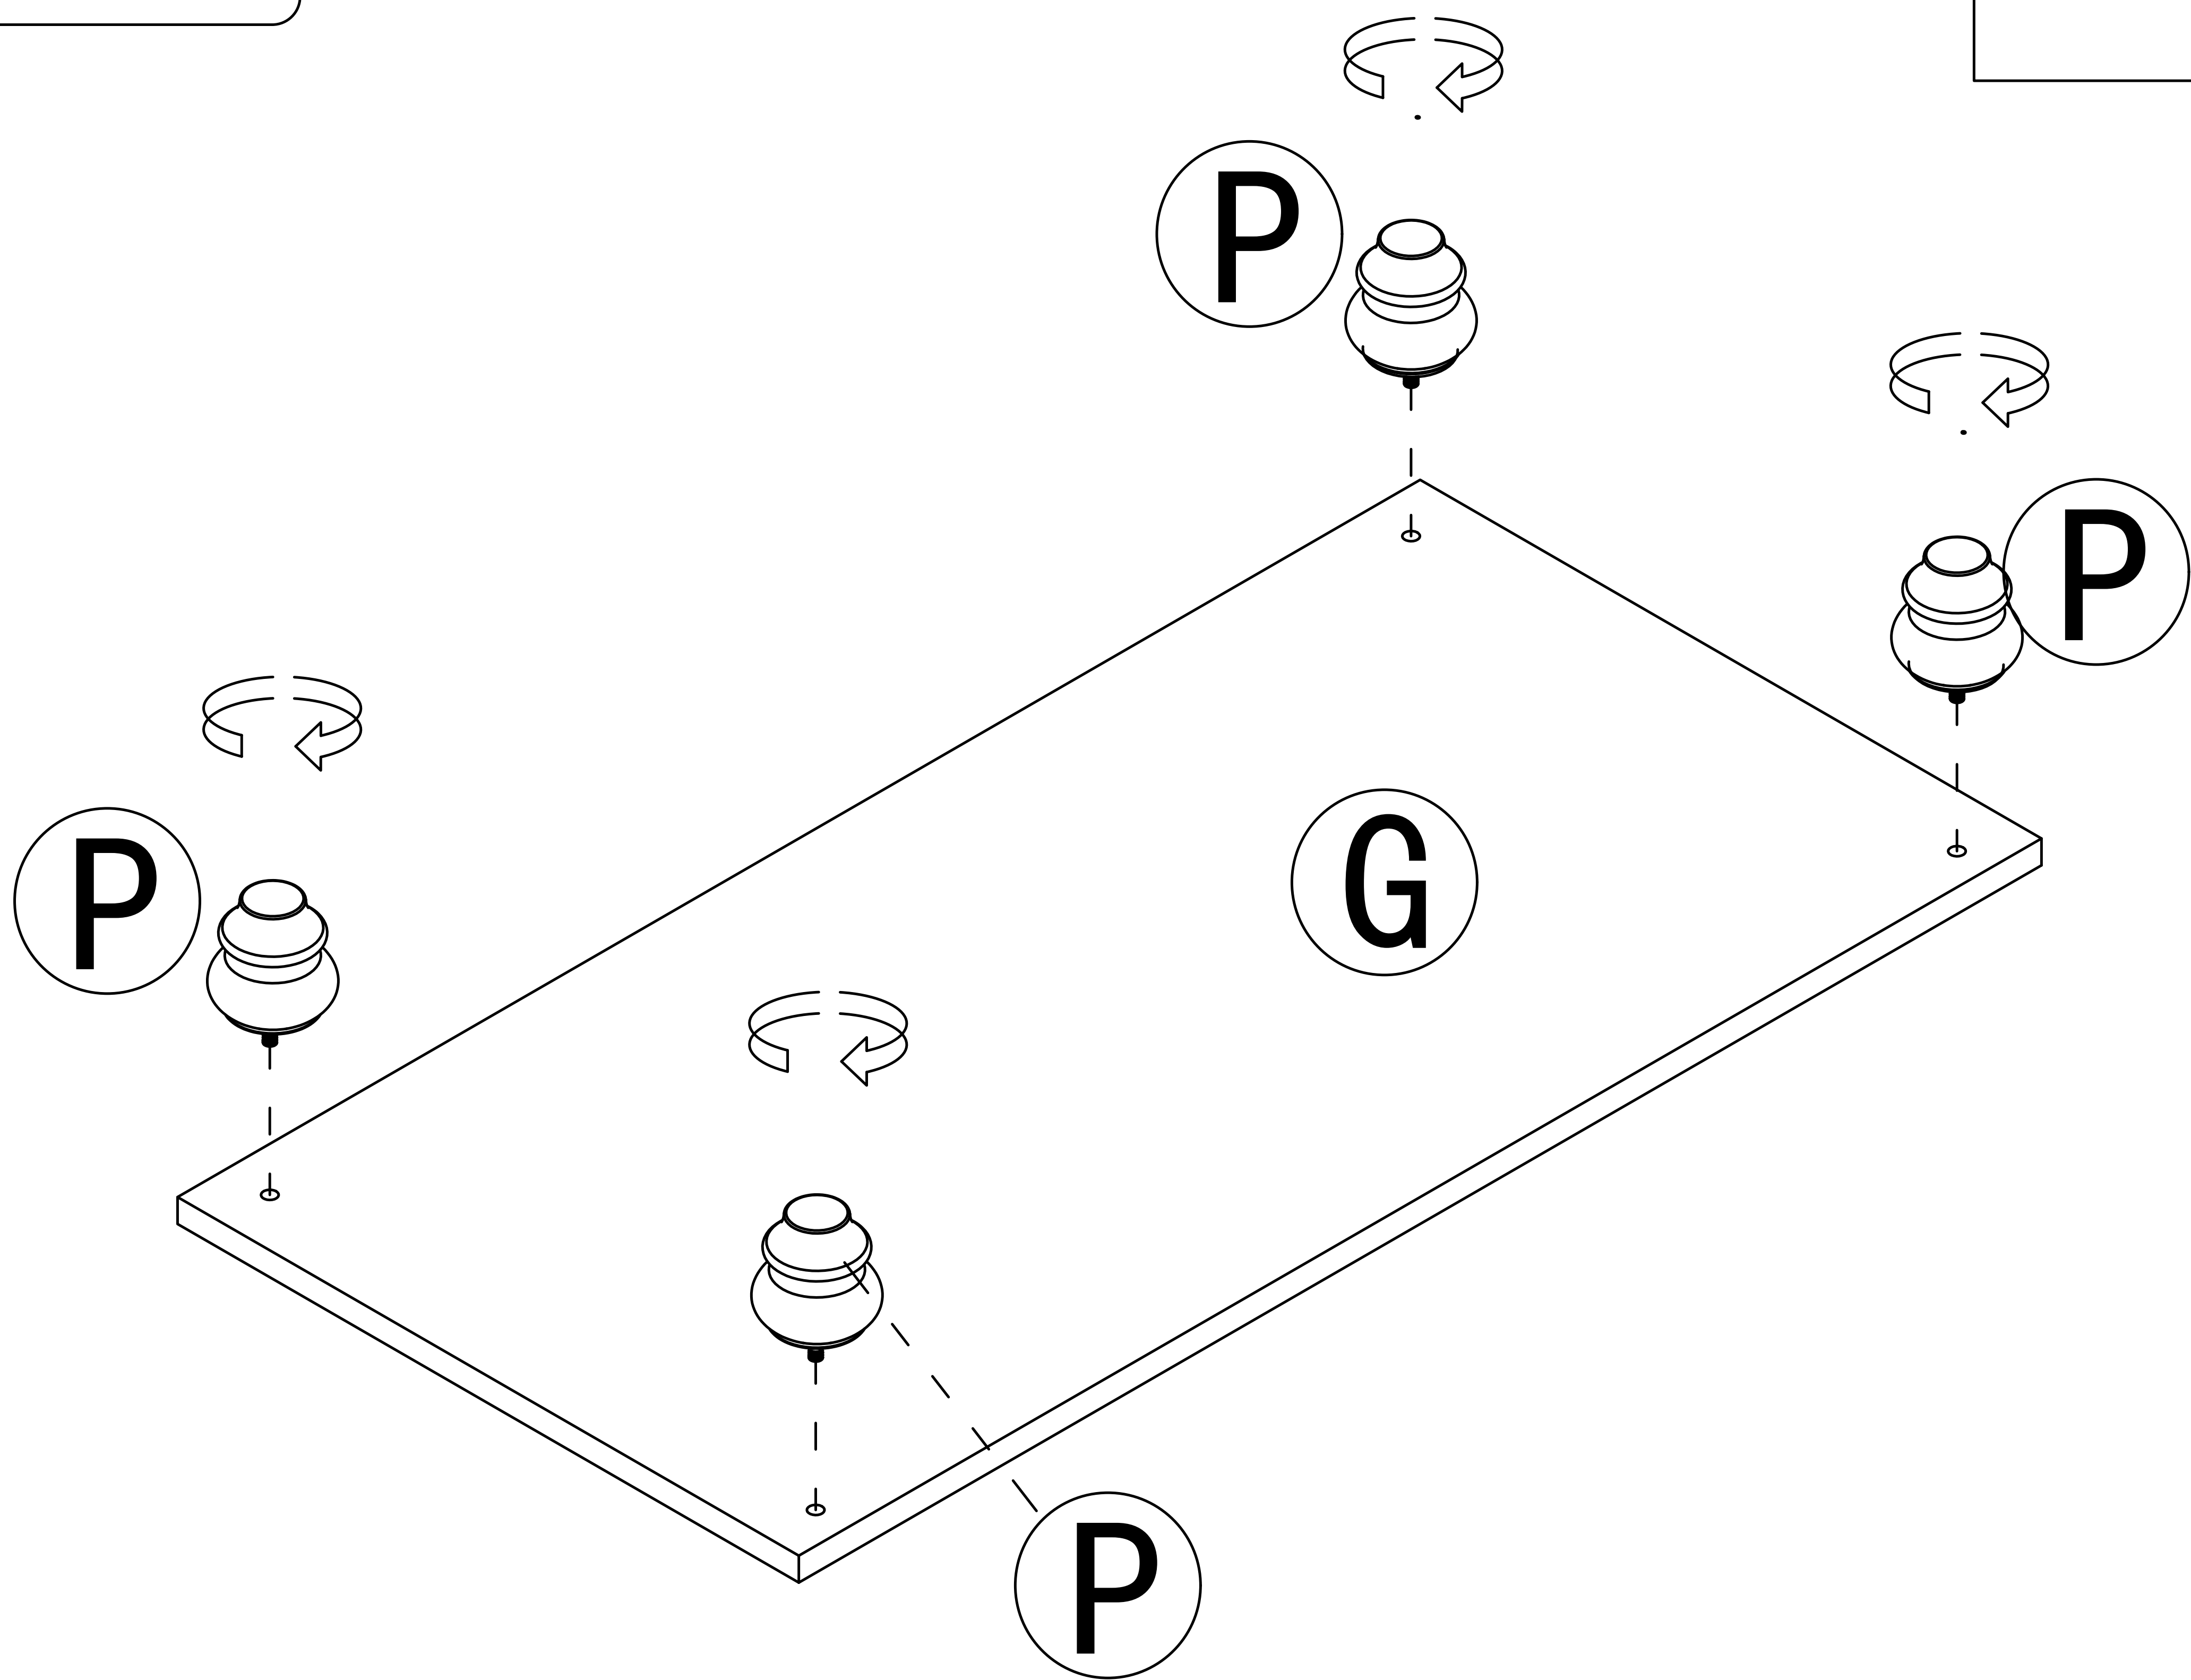
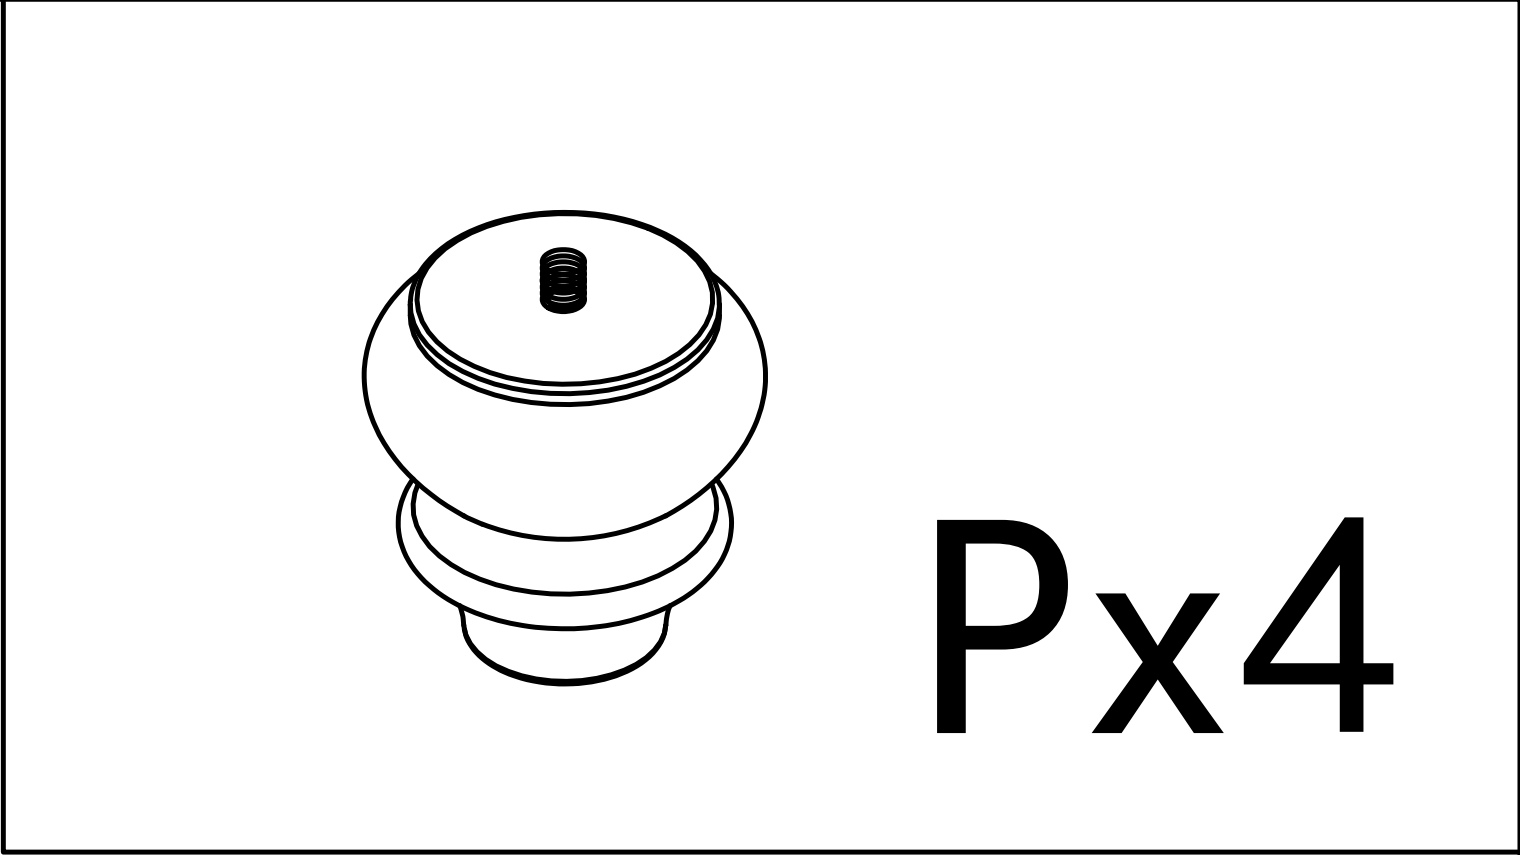


Step 14


Tear off release paper and stick the black foot pad on the board

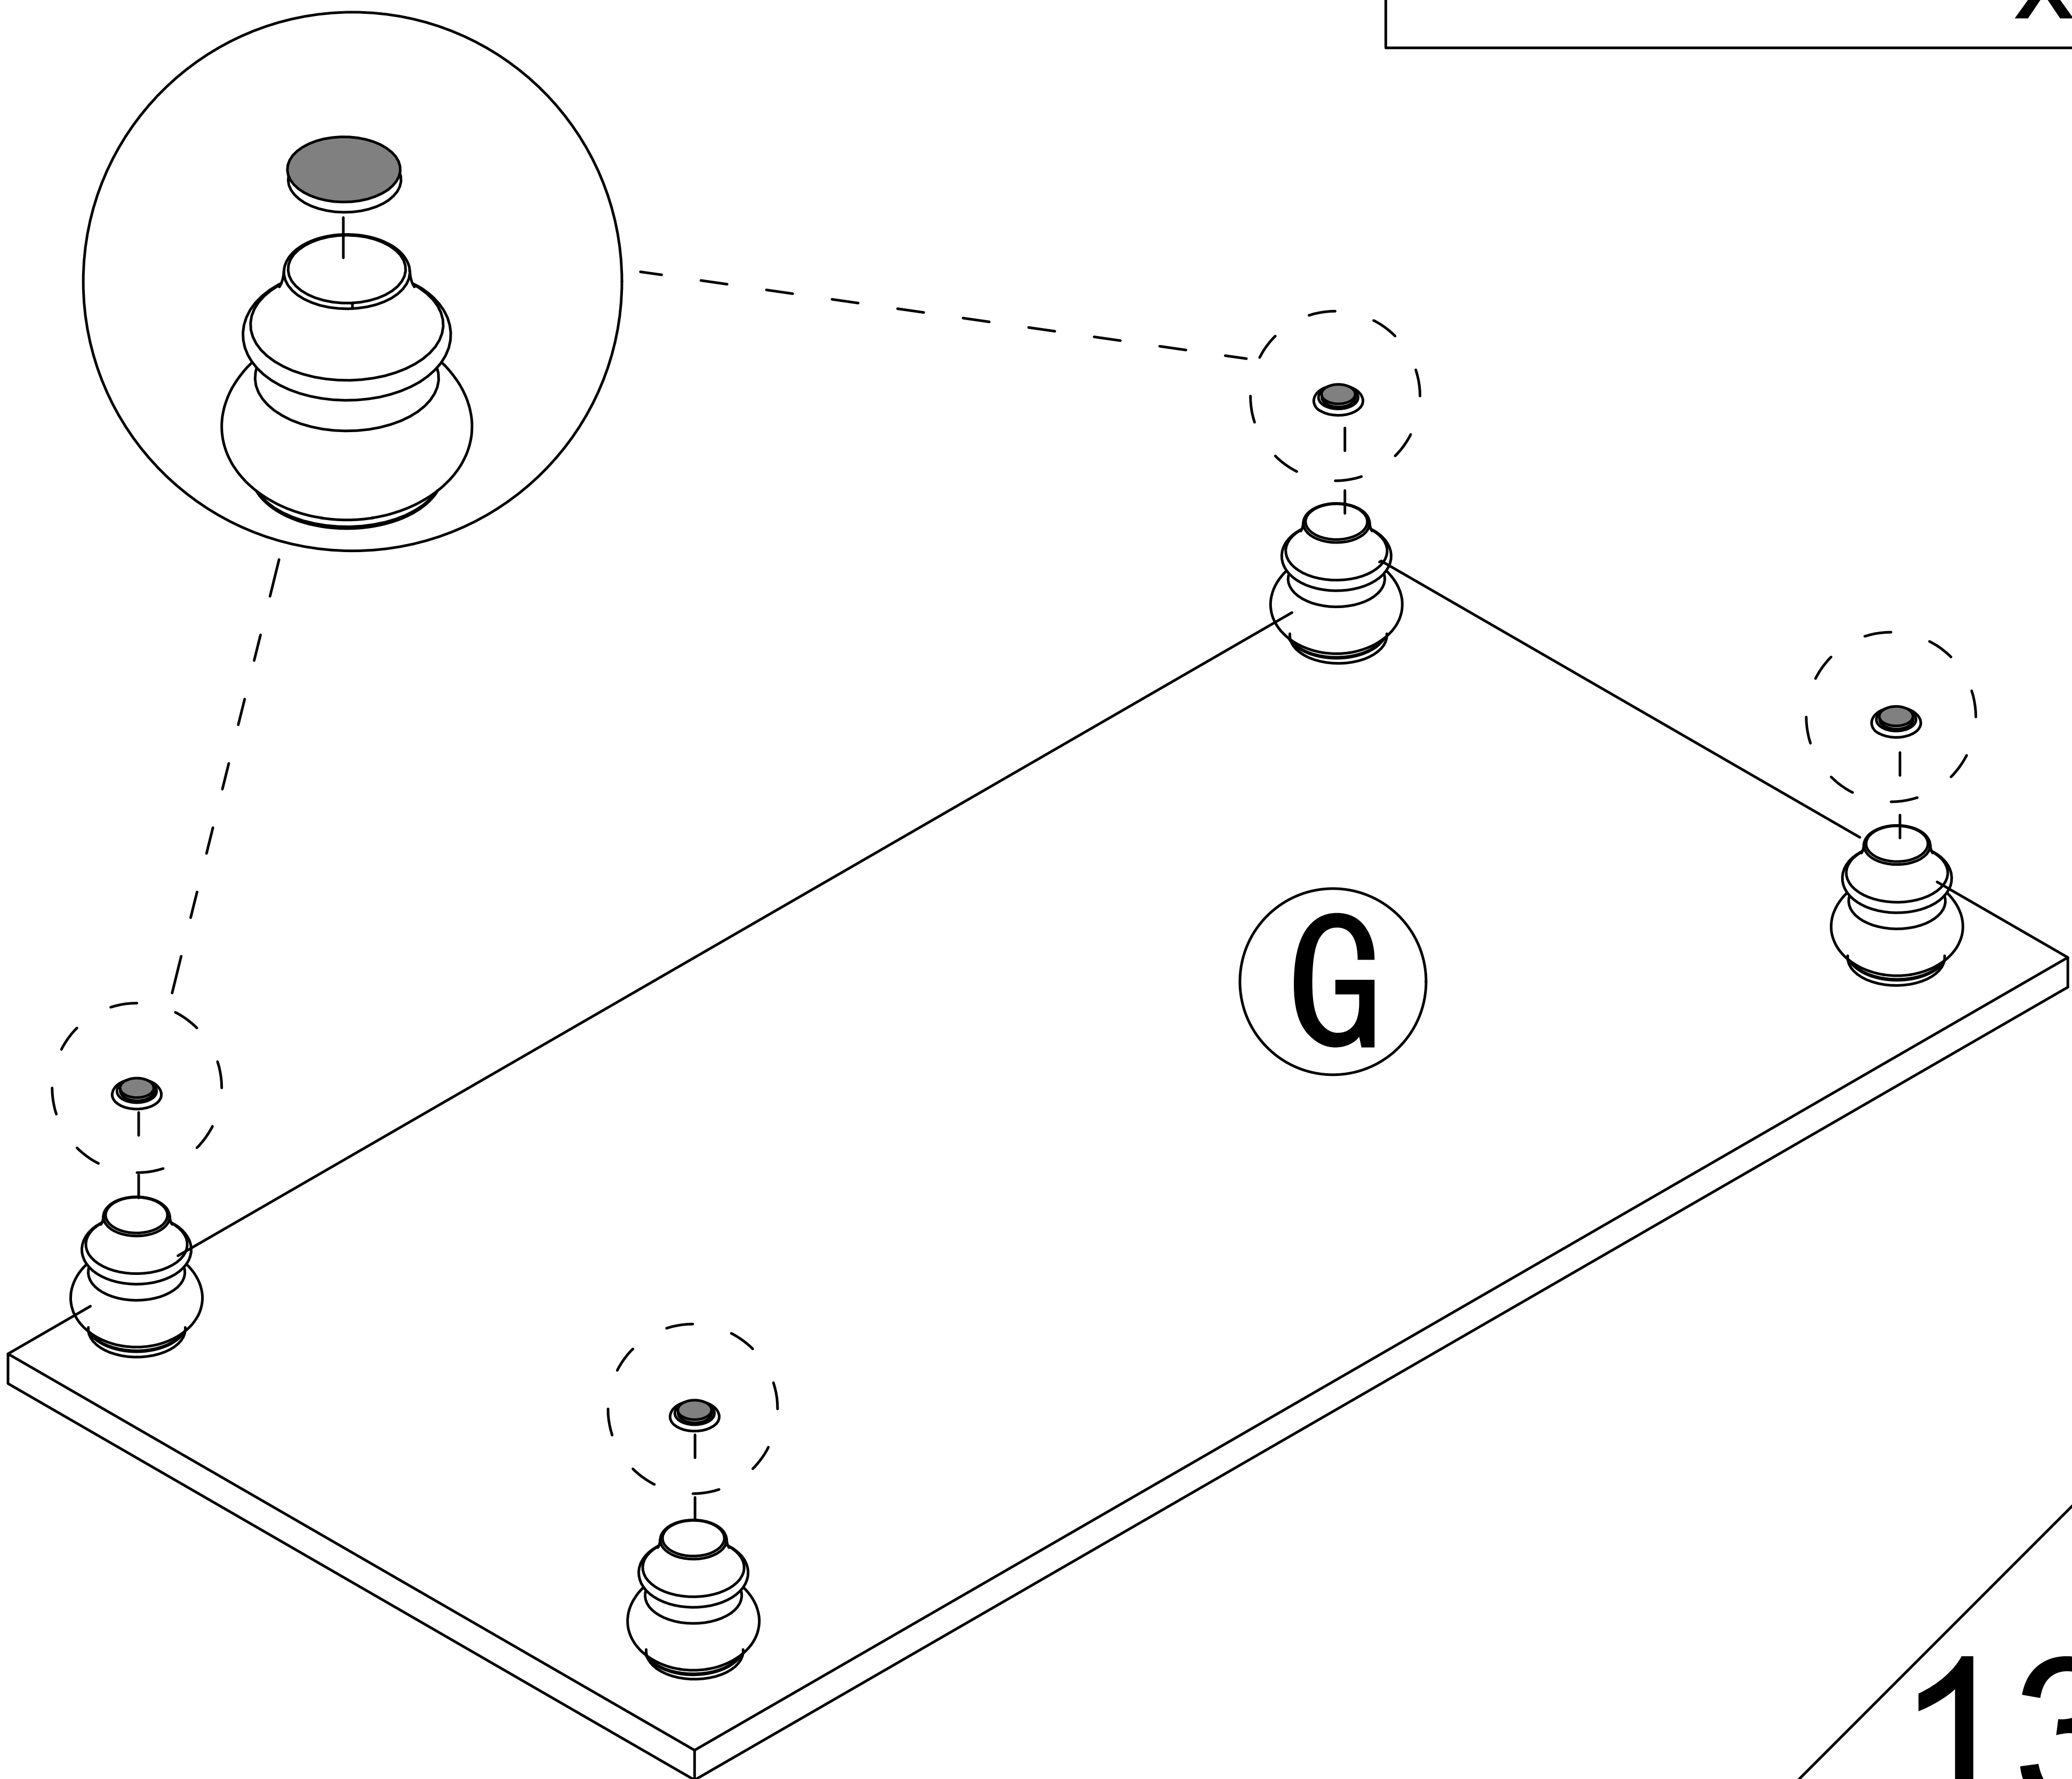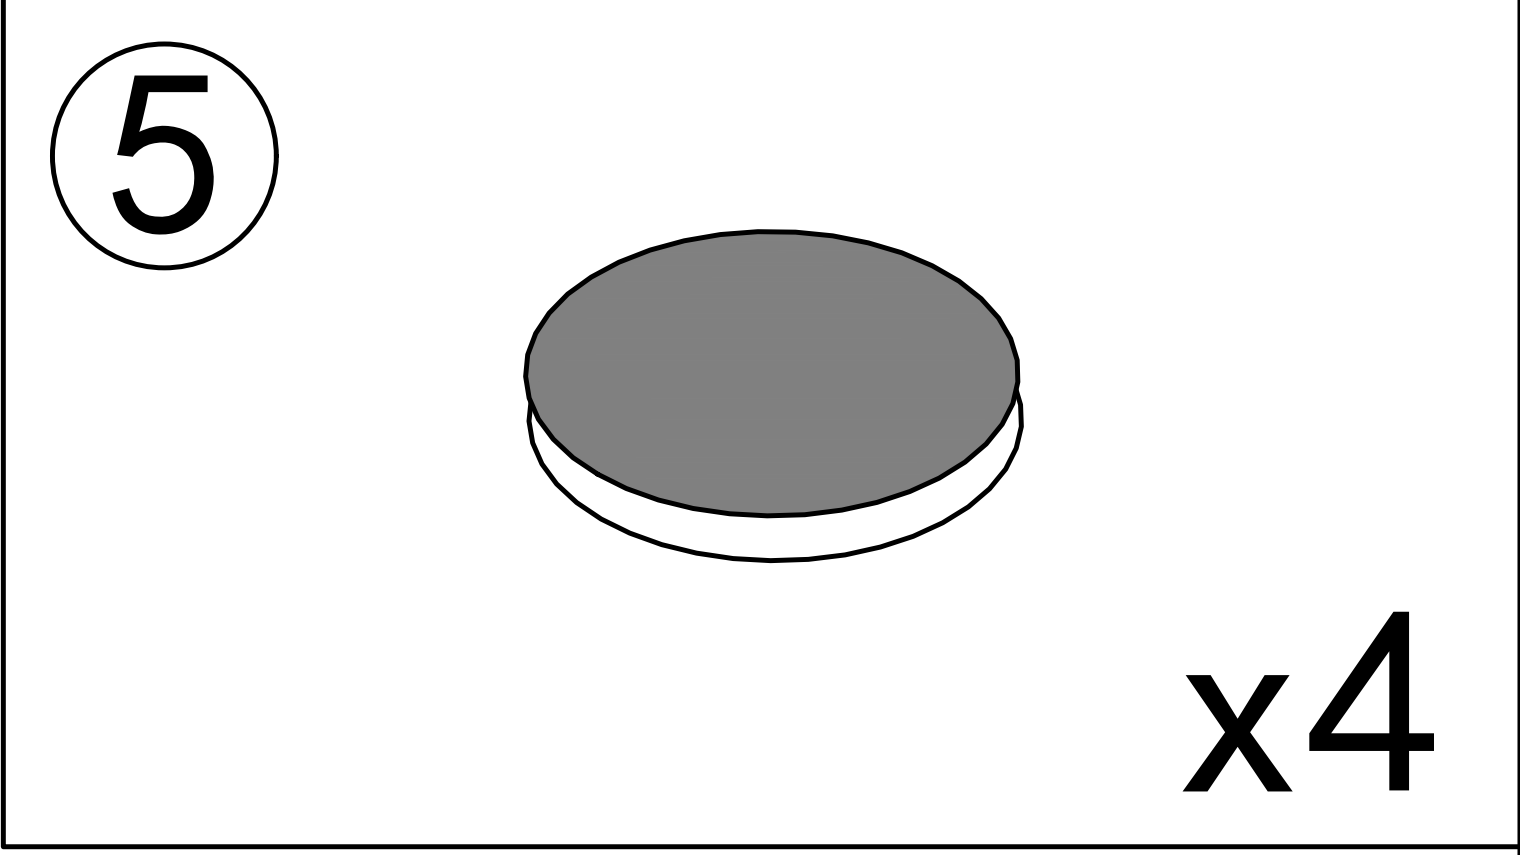


Step 15

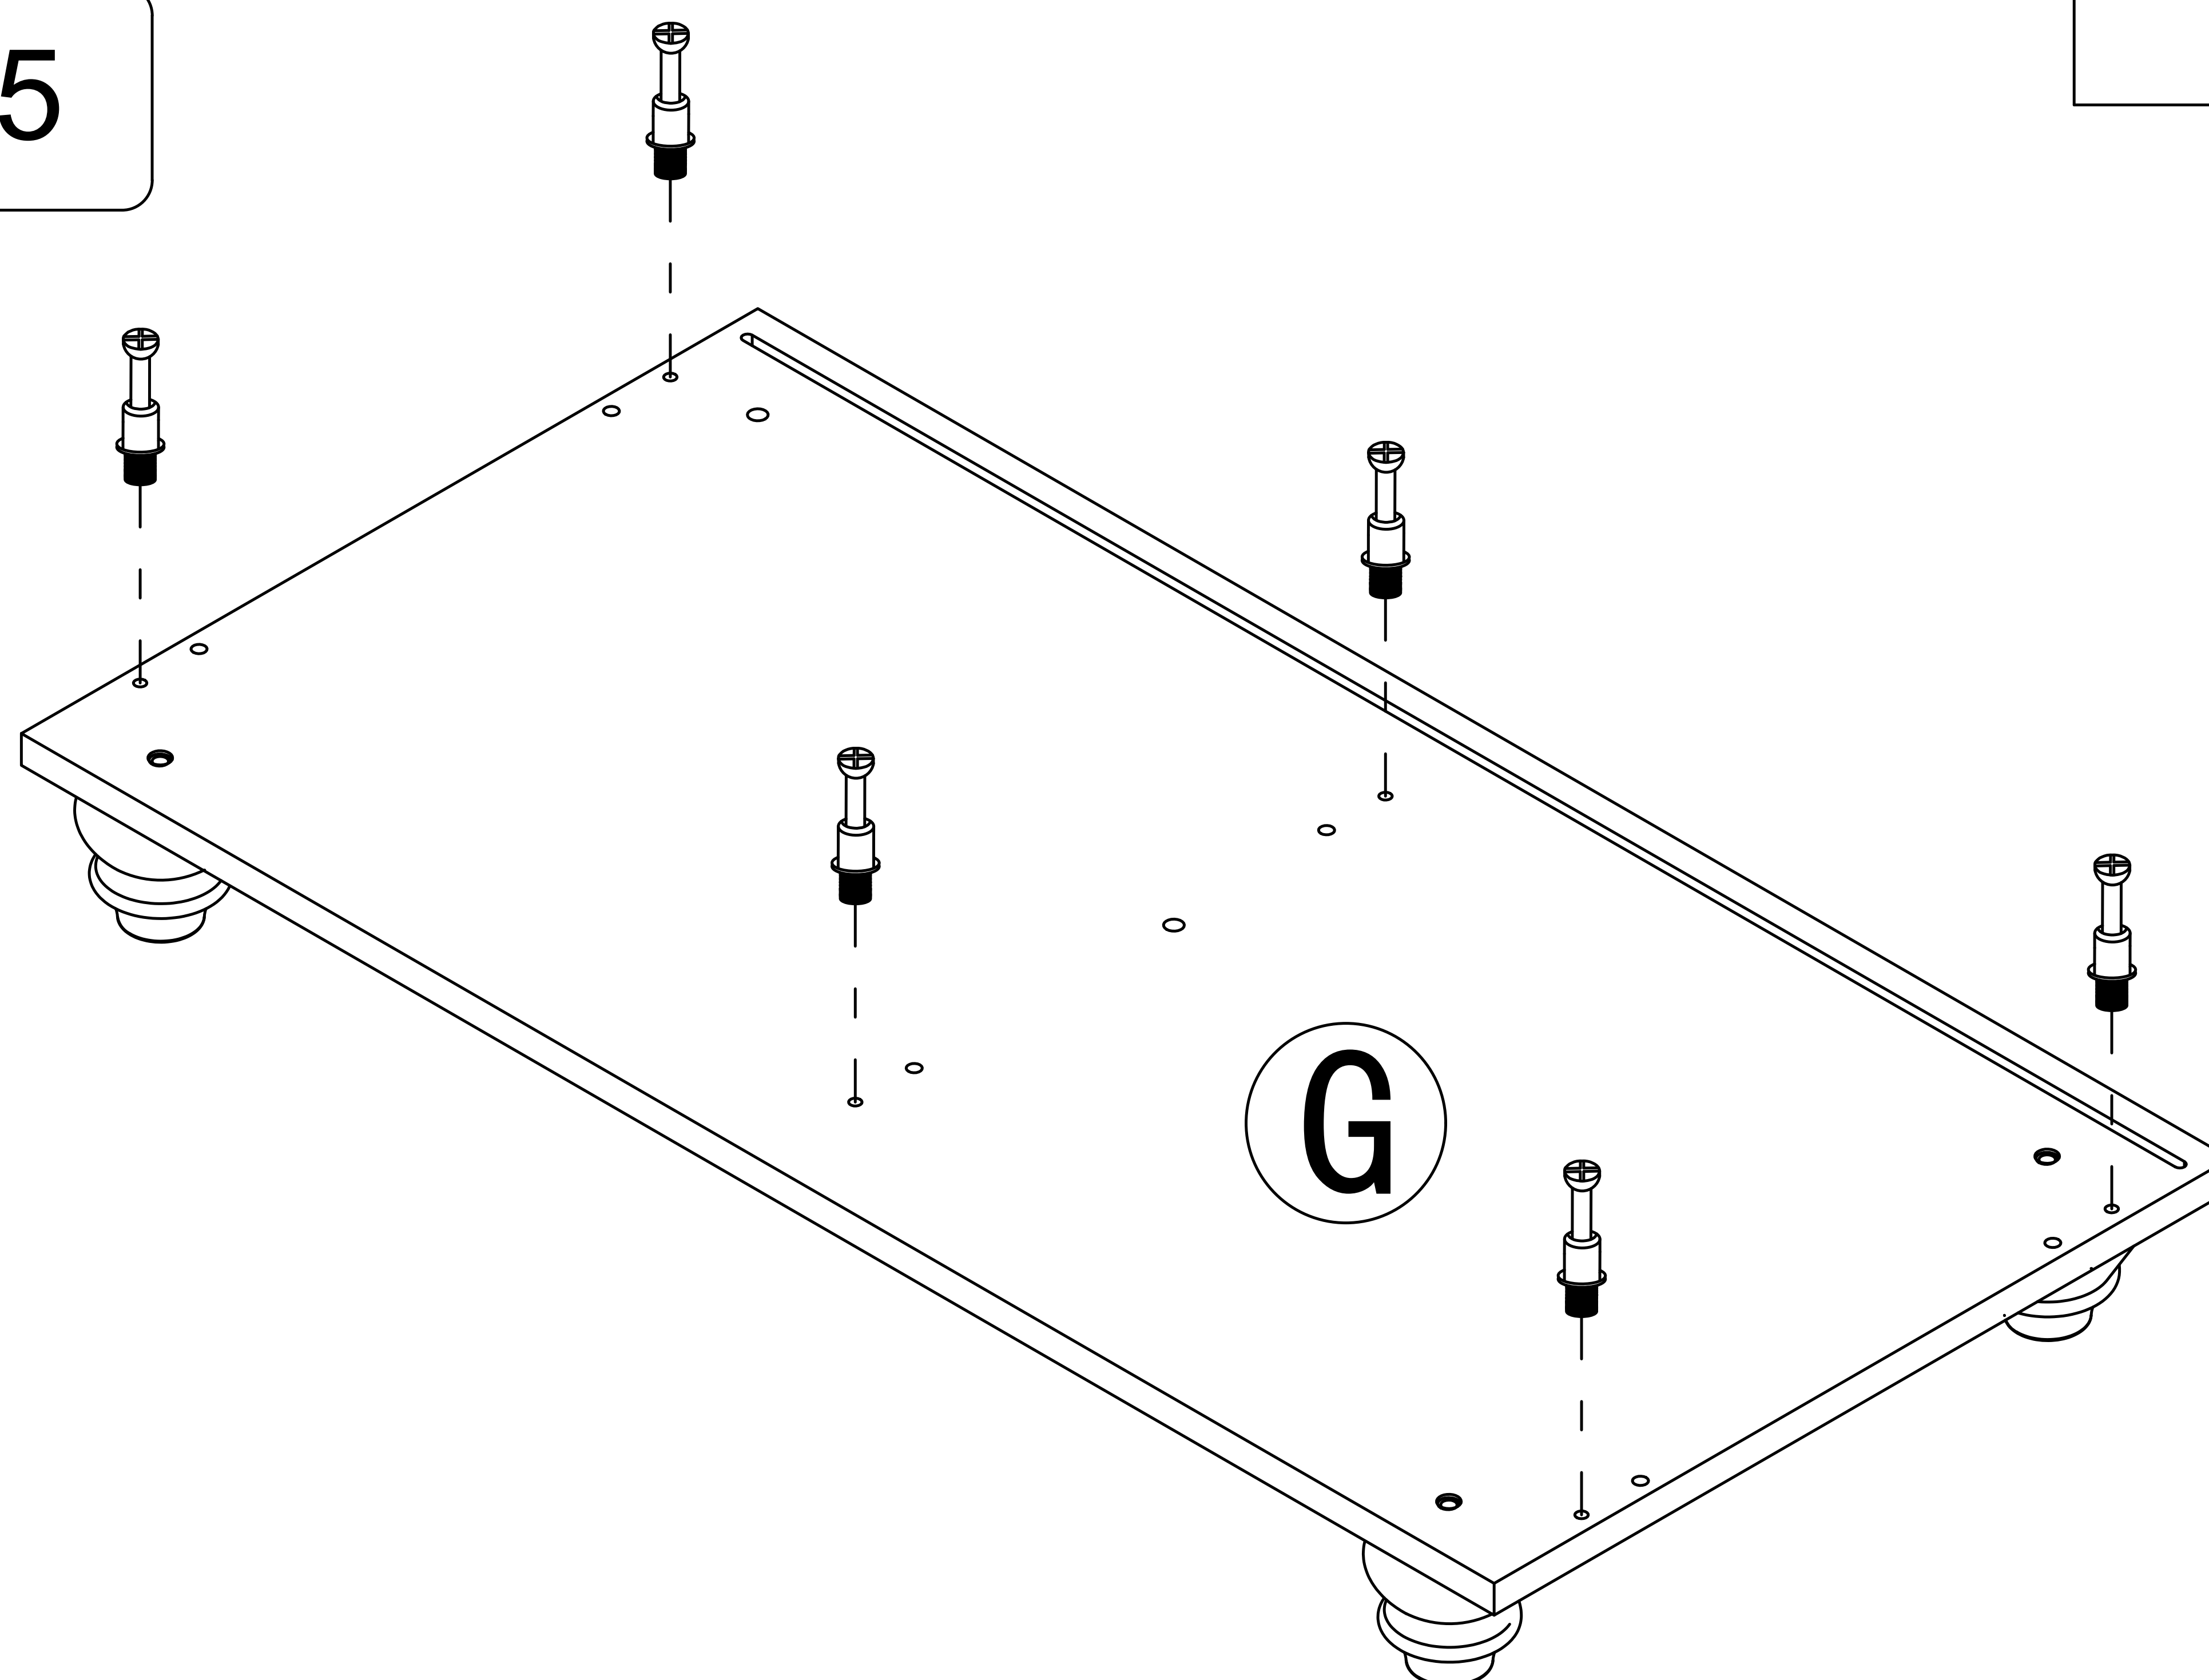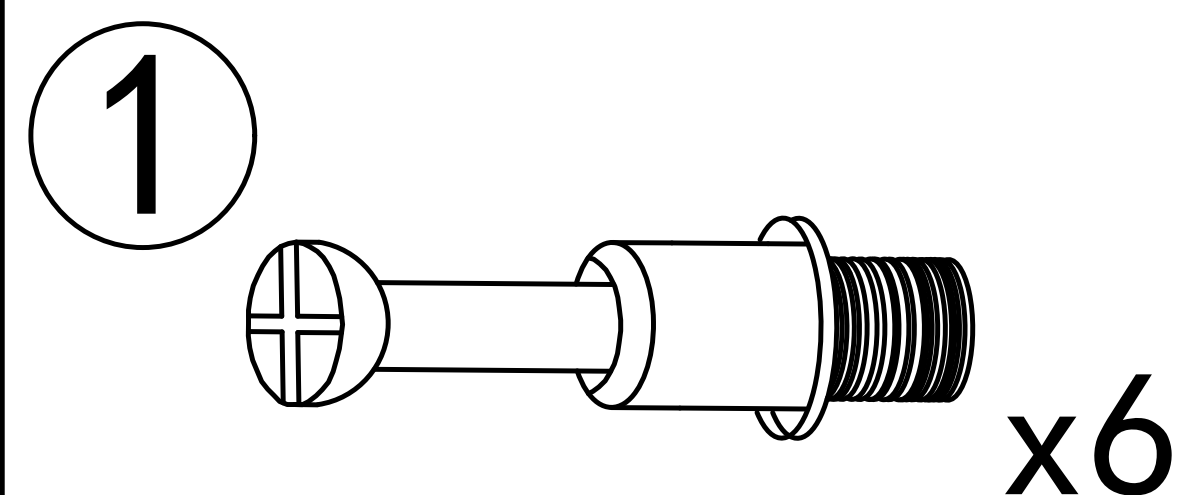



Step 16

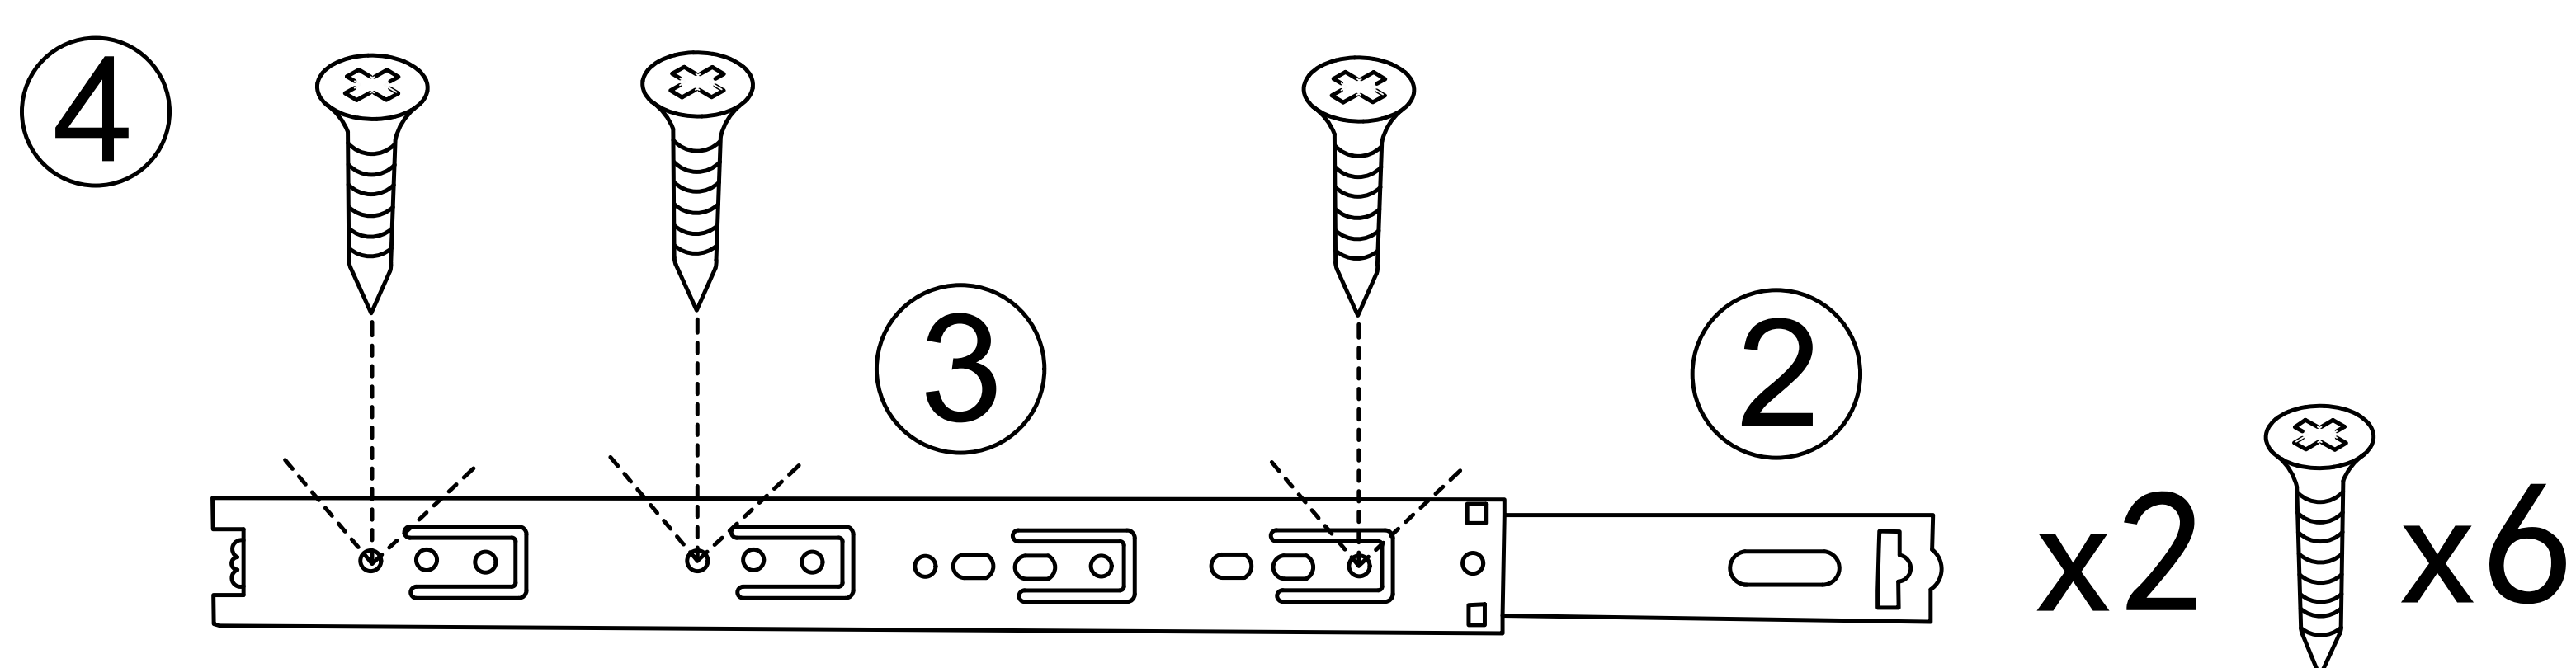


This hole is for strengthening fixed hole customers can choose to install according to their needs.

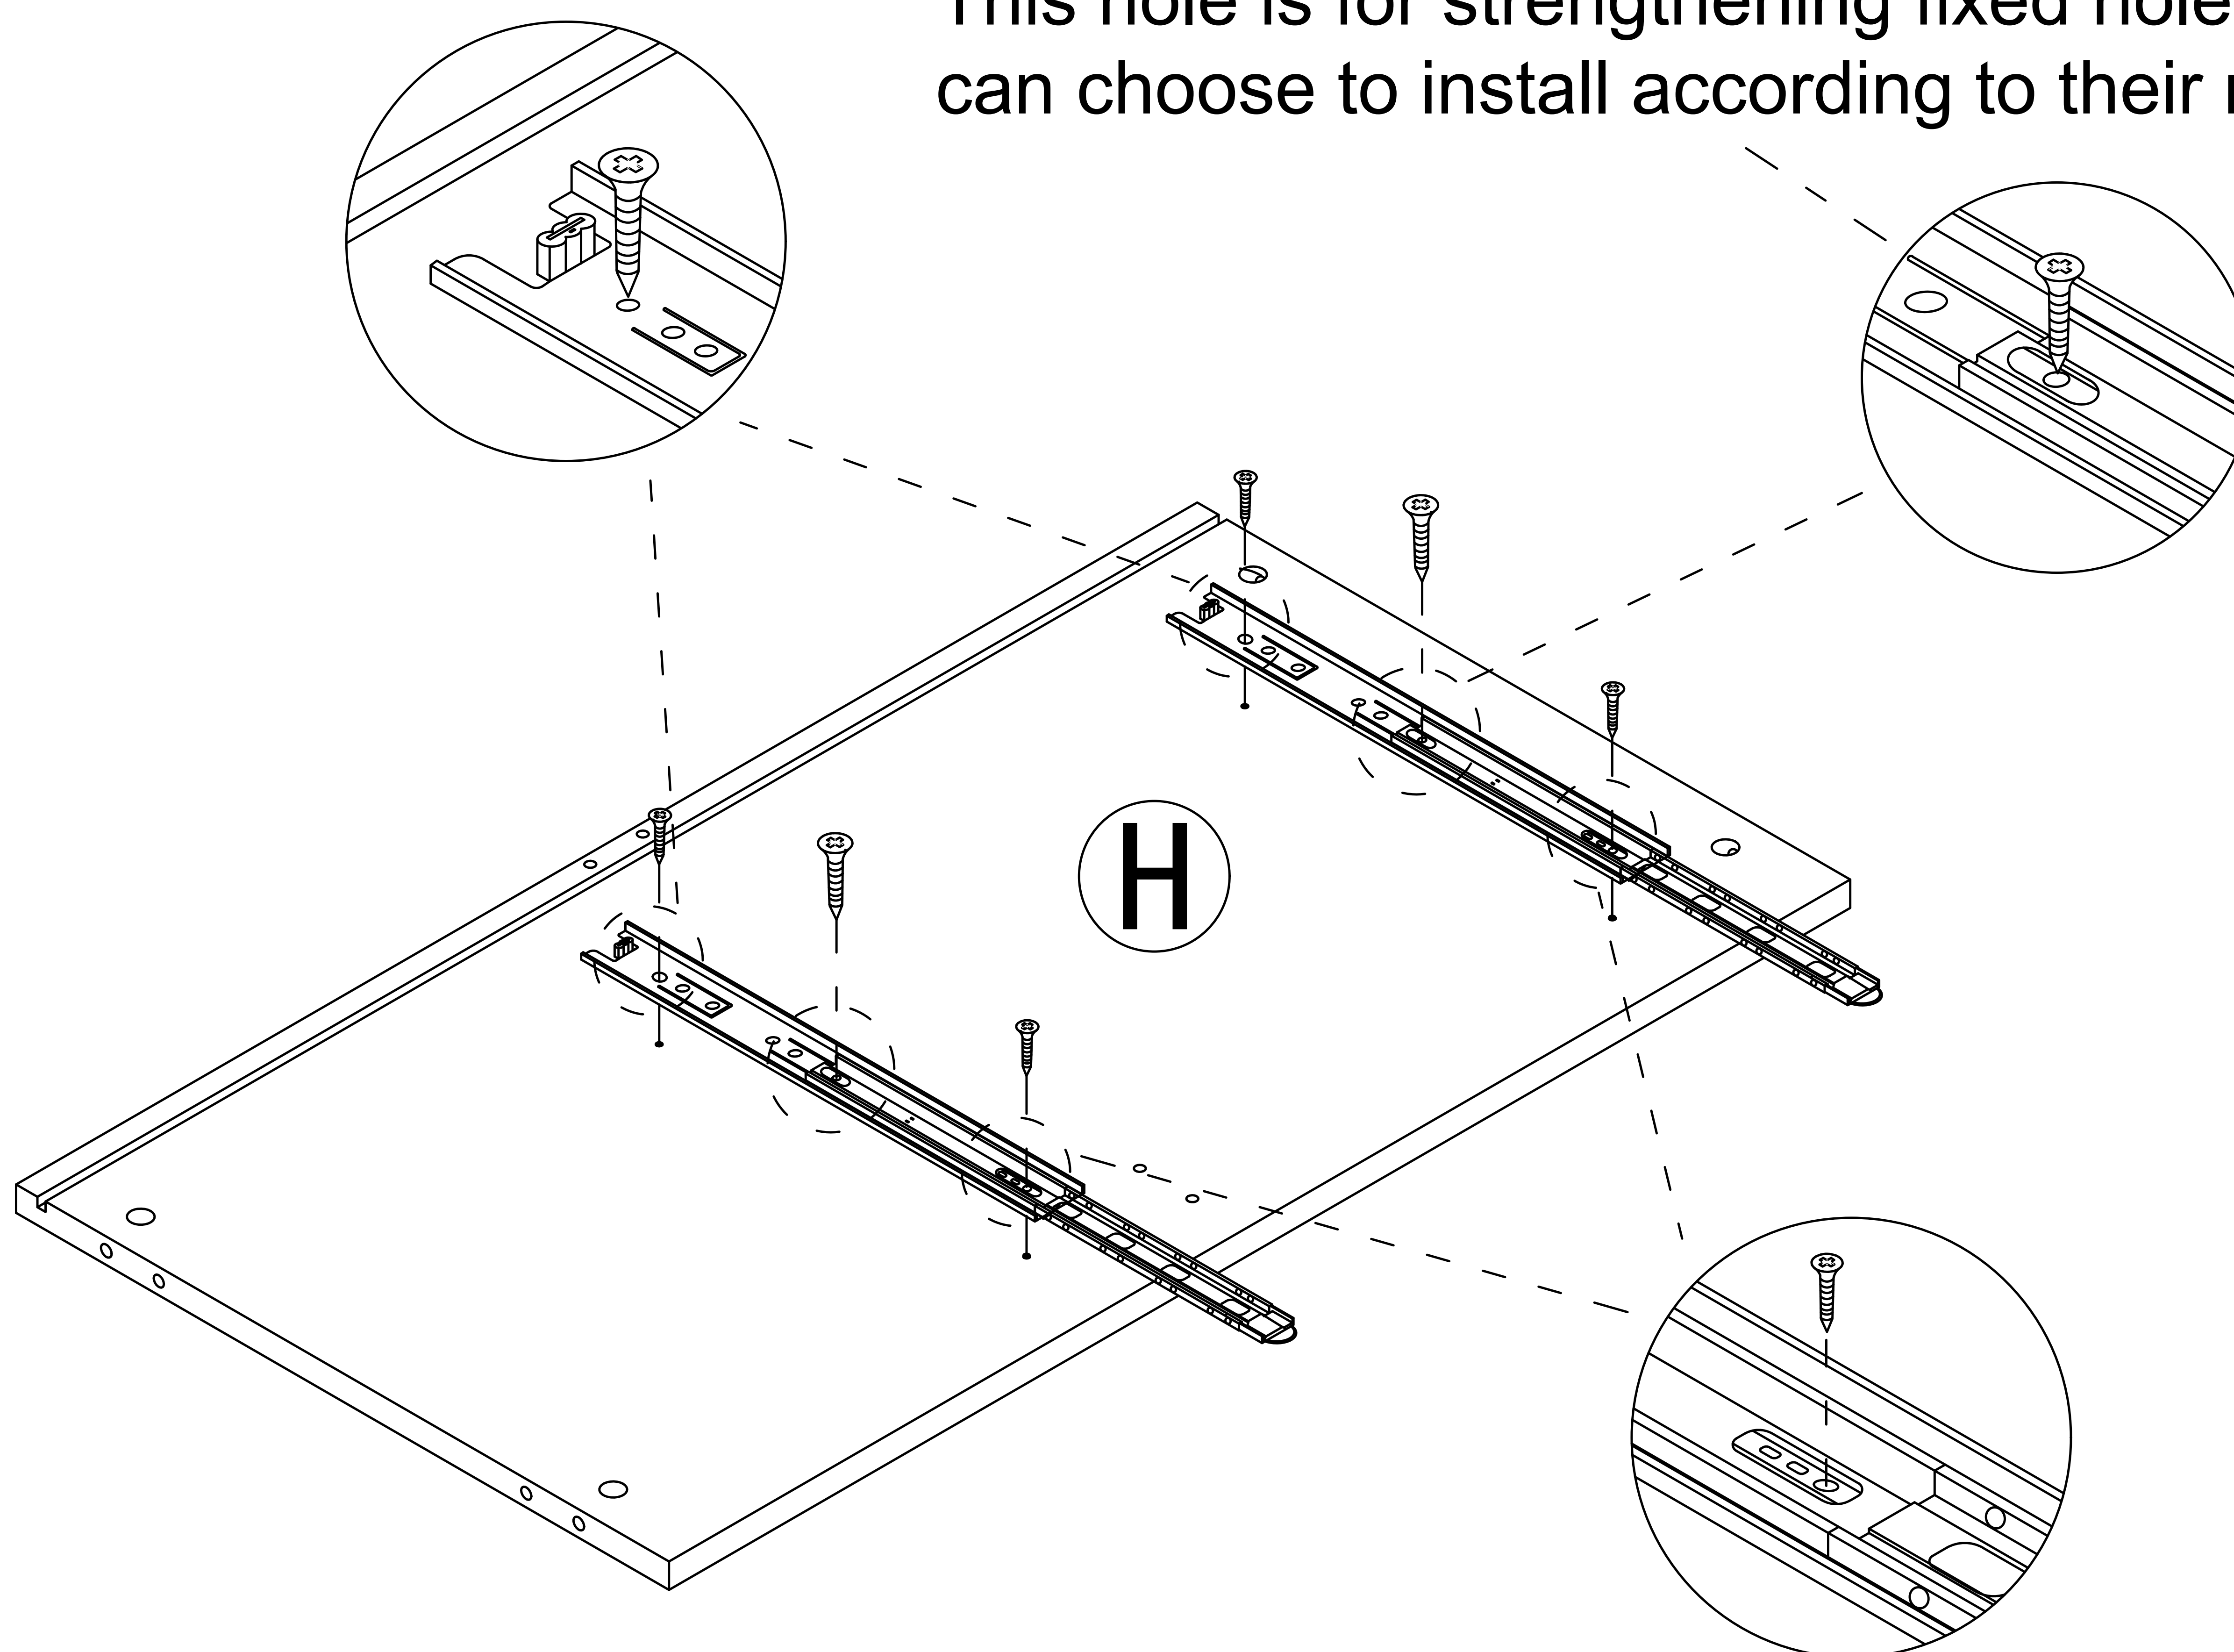


Step 17

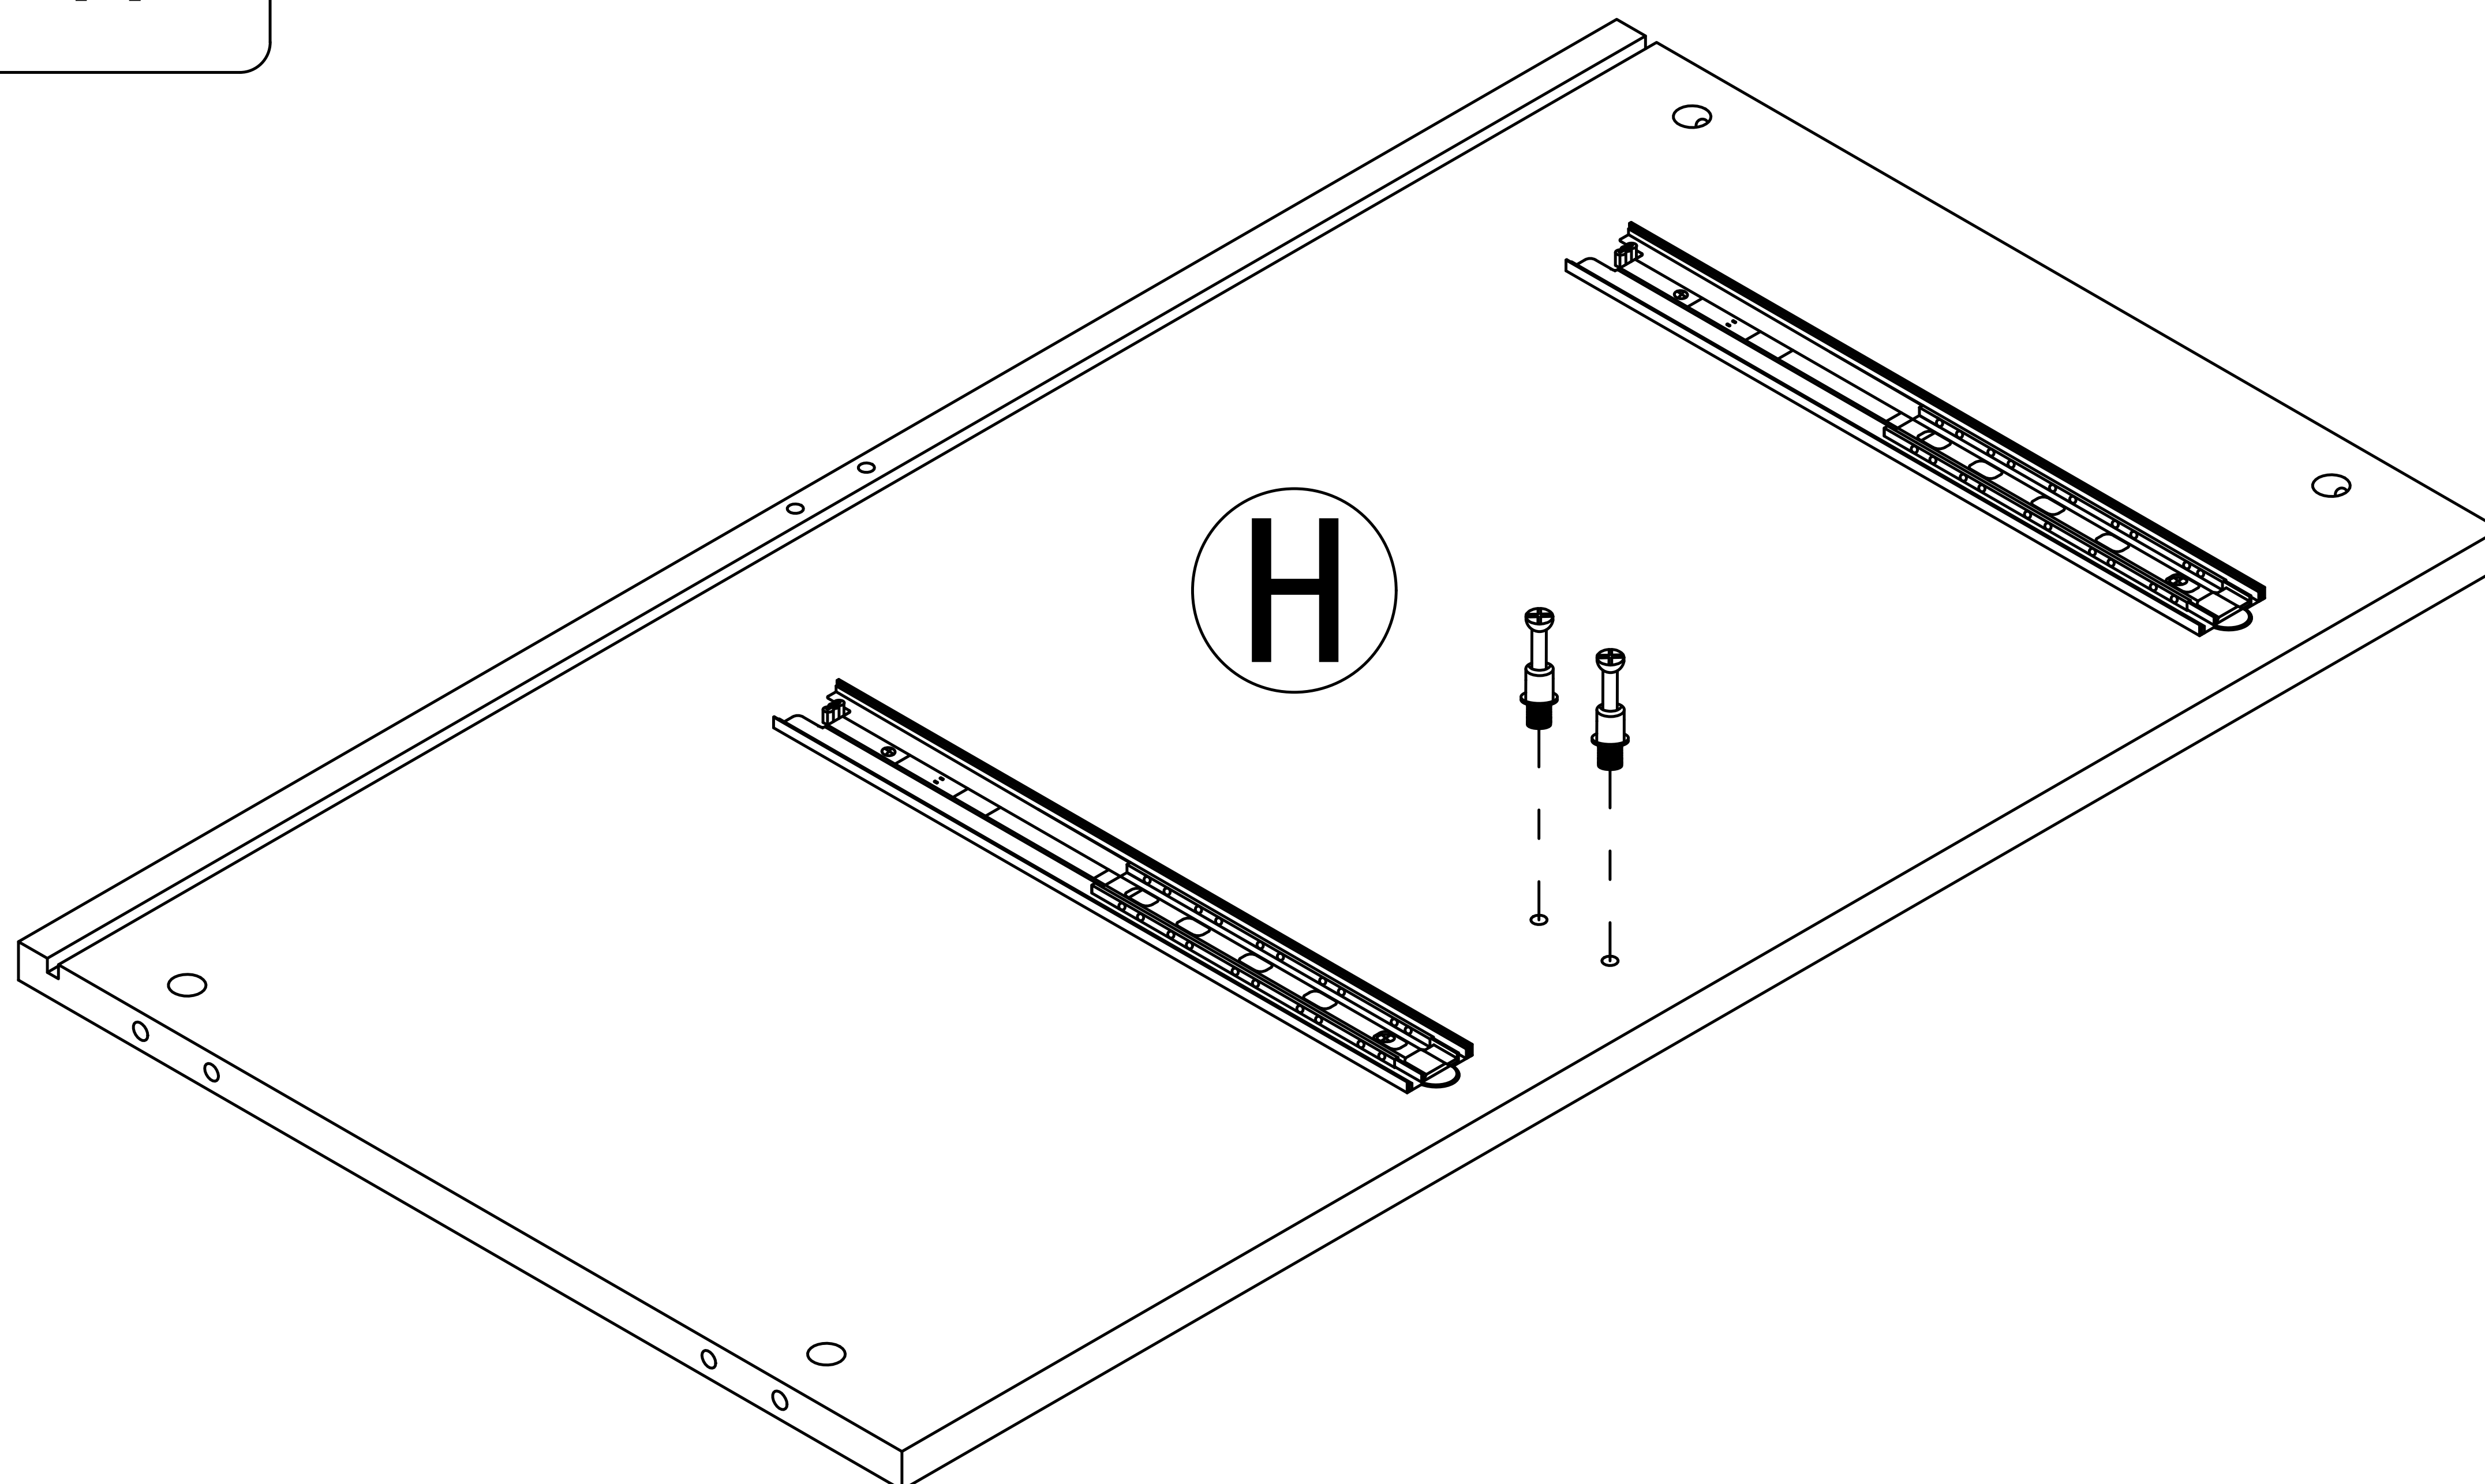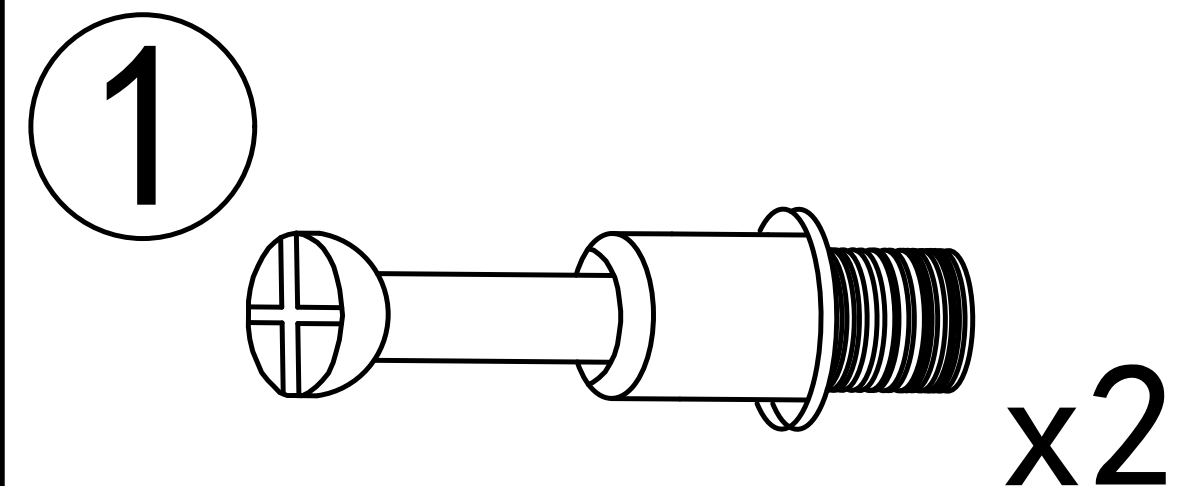

Step 18

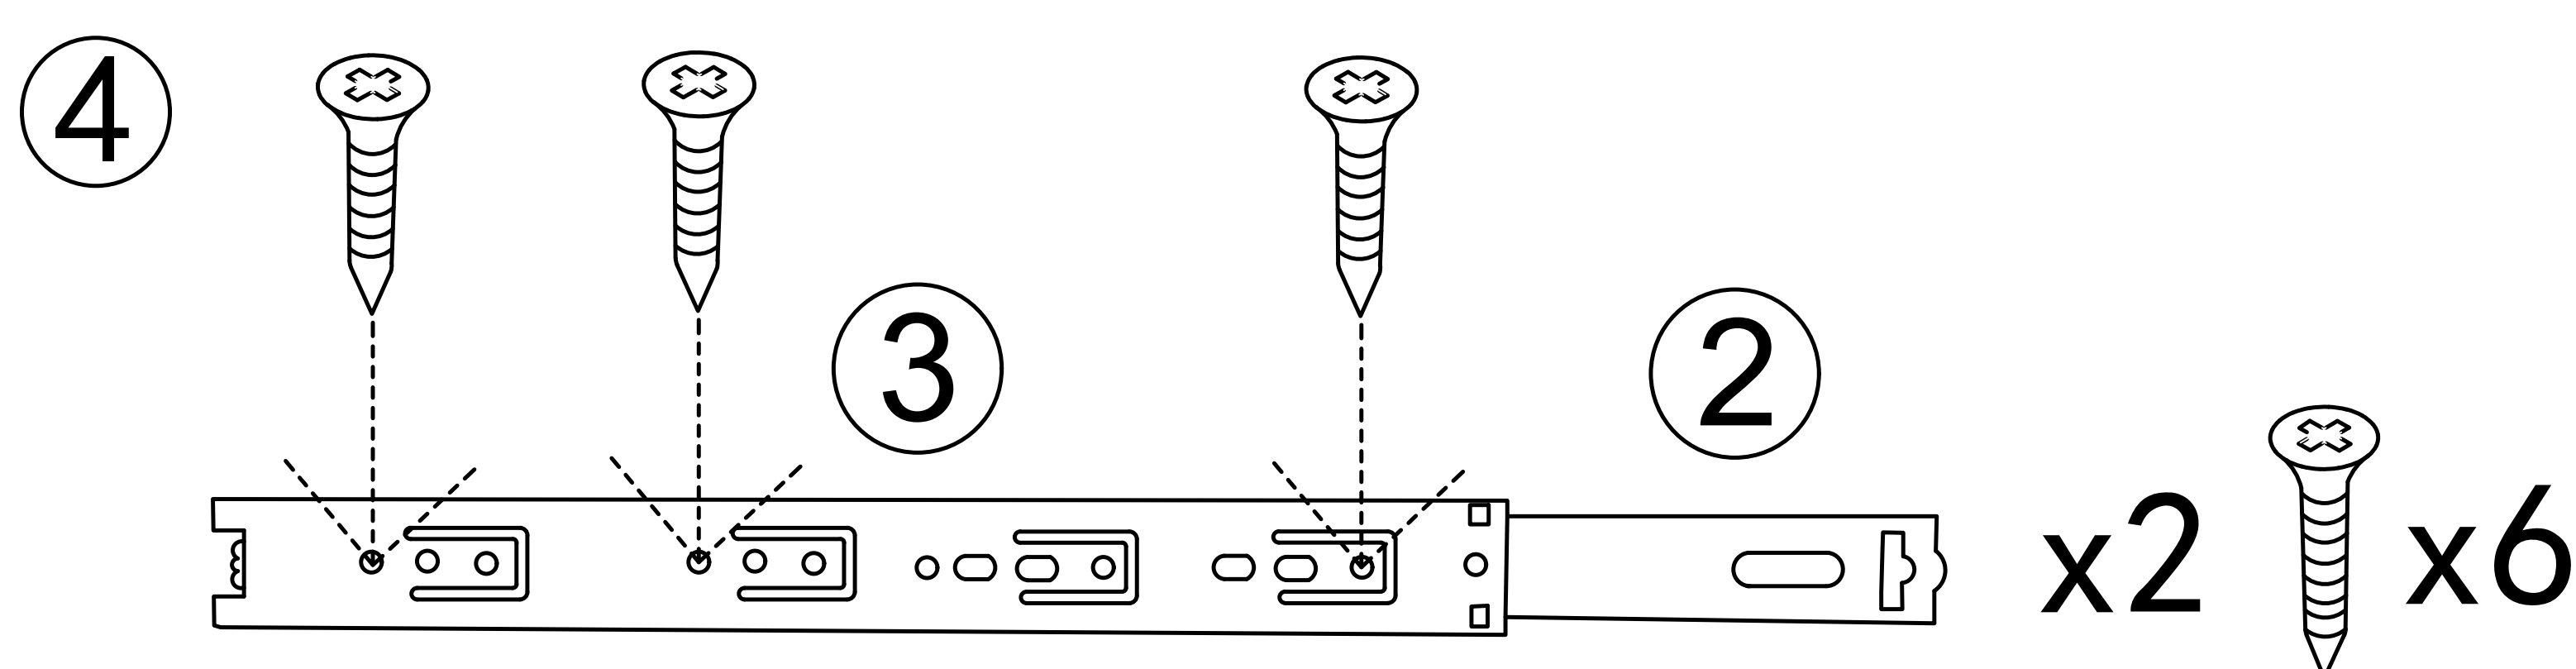


This hole is for strengthening fixed hole customers can choose to install according to their needs.

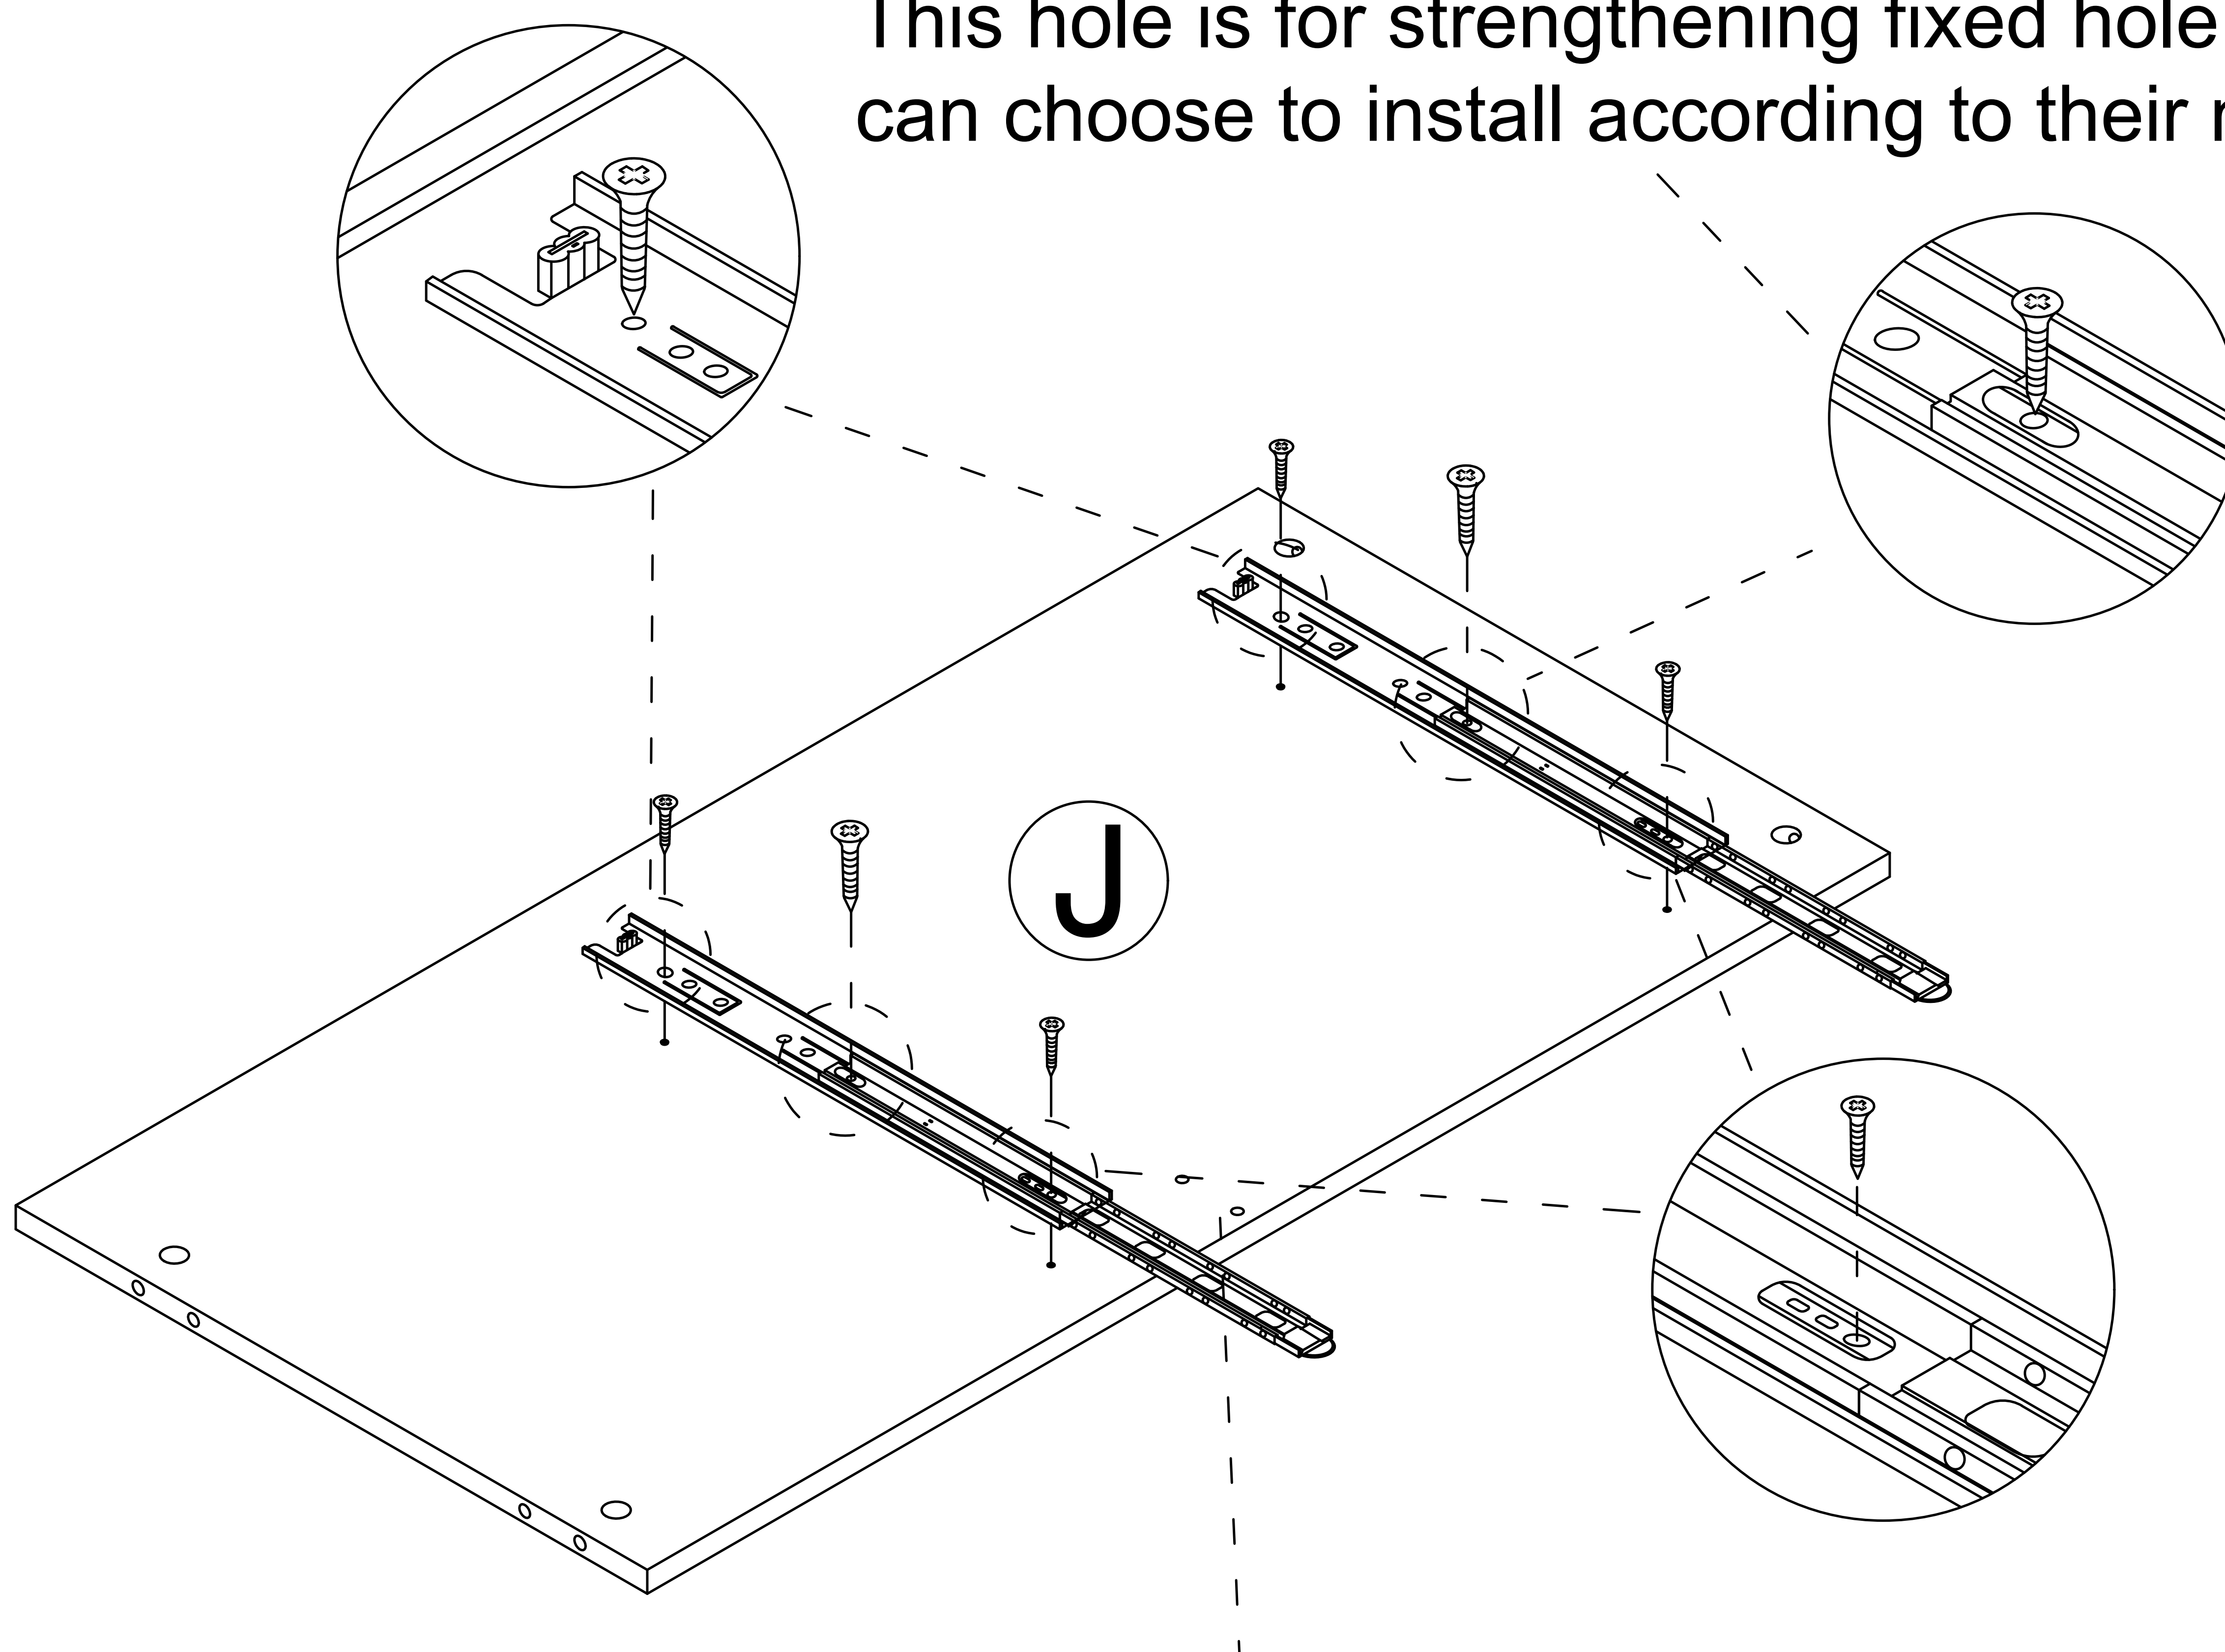


Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.

Step 19

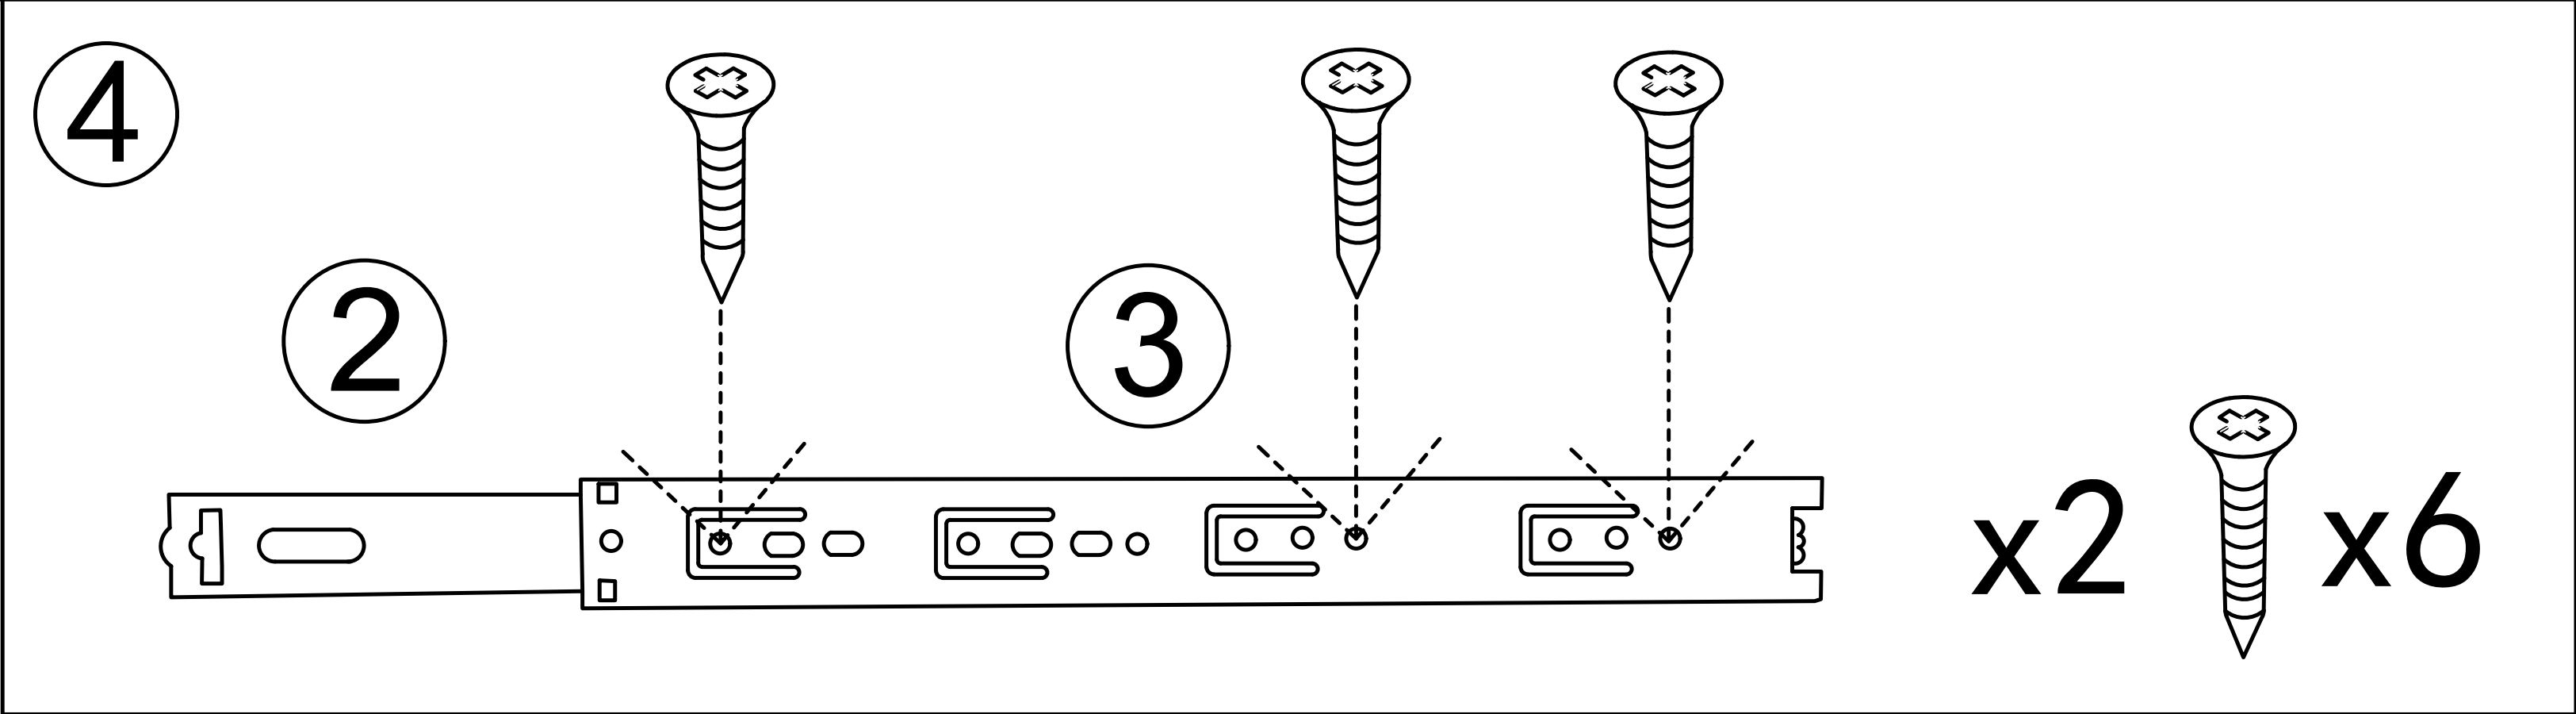



Install by flipping to the back side

This hole is for strengthening fixed hole customers can choose to install according to their needs.


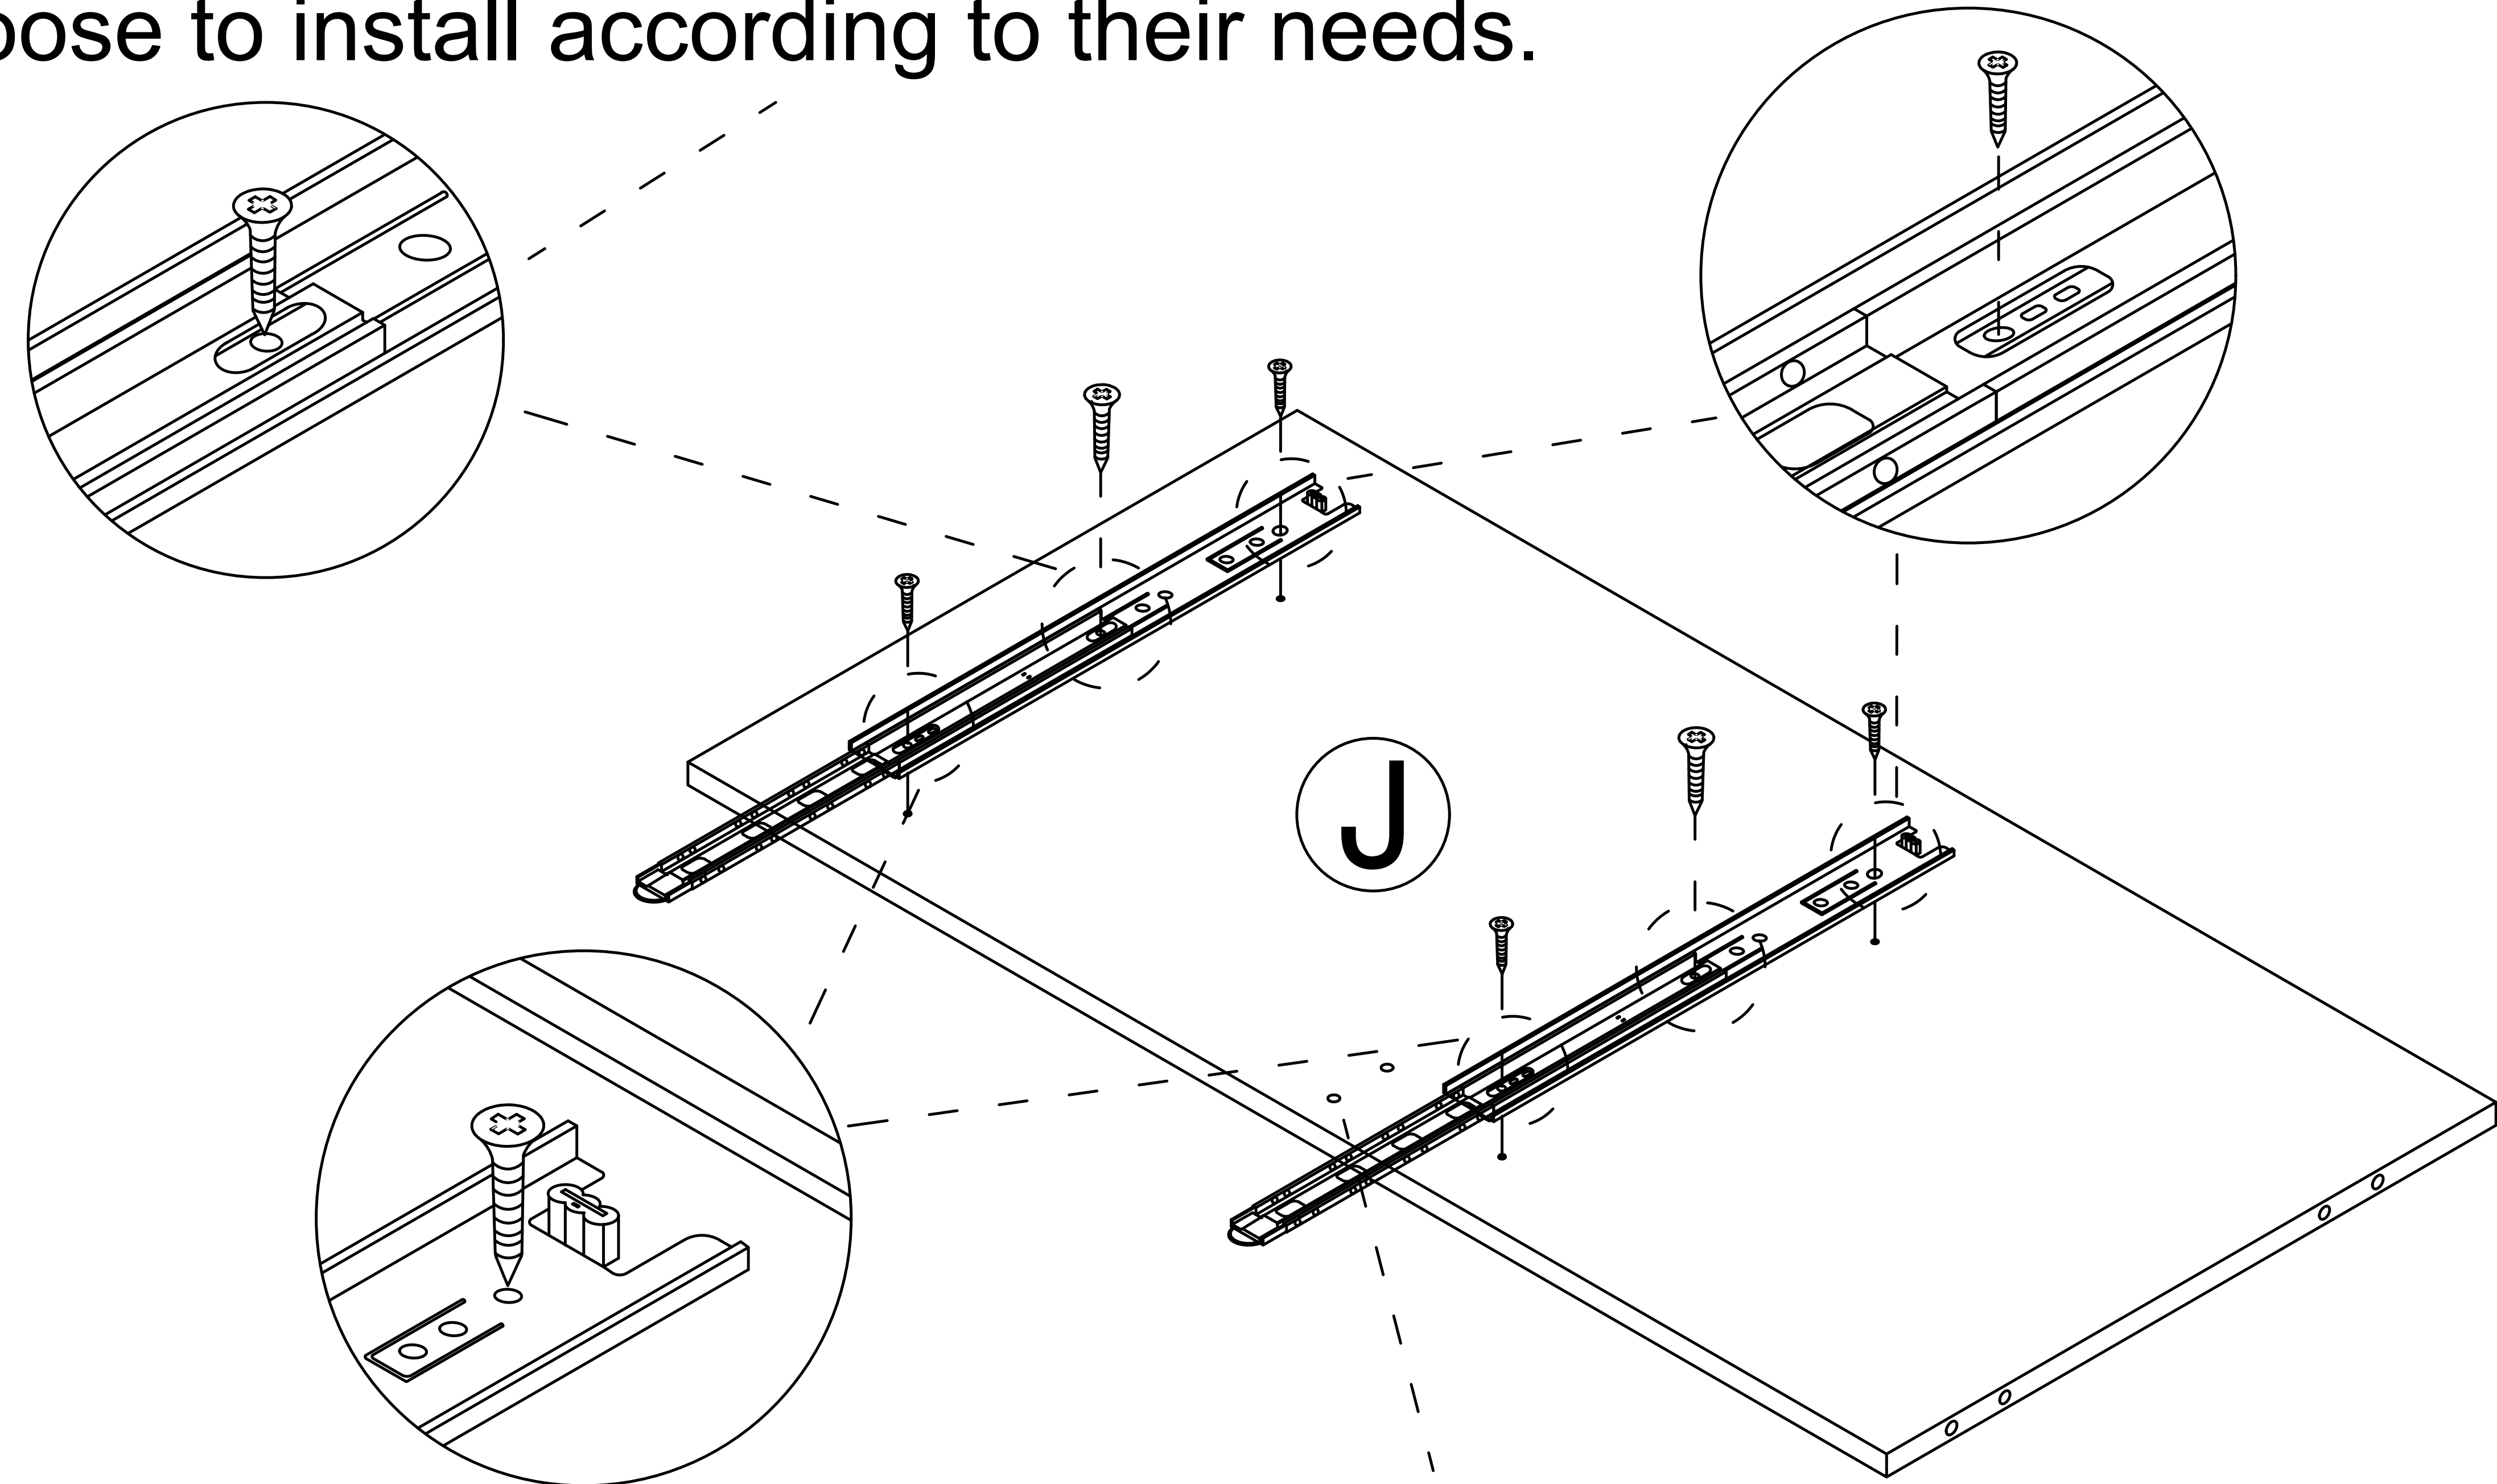


Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.


Step 20

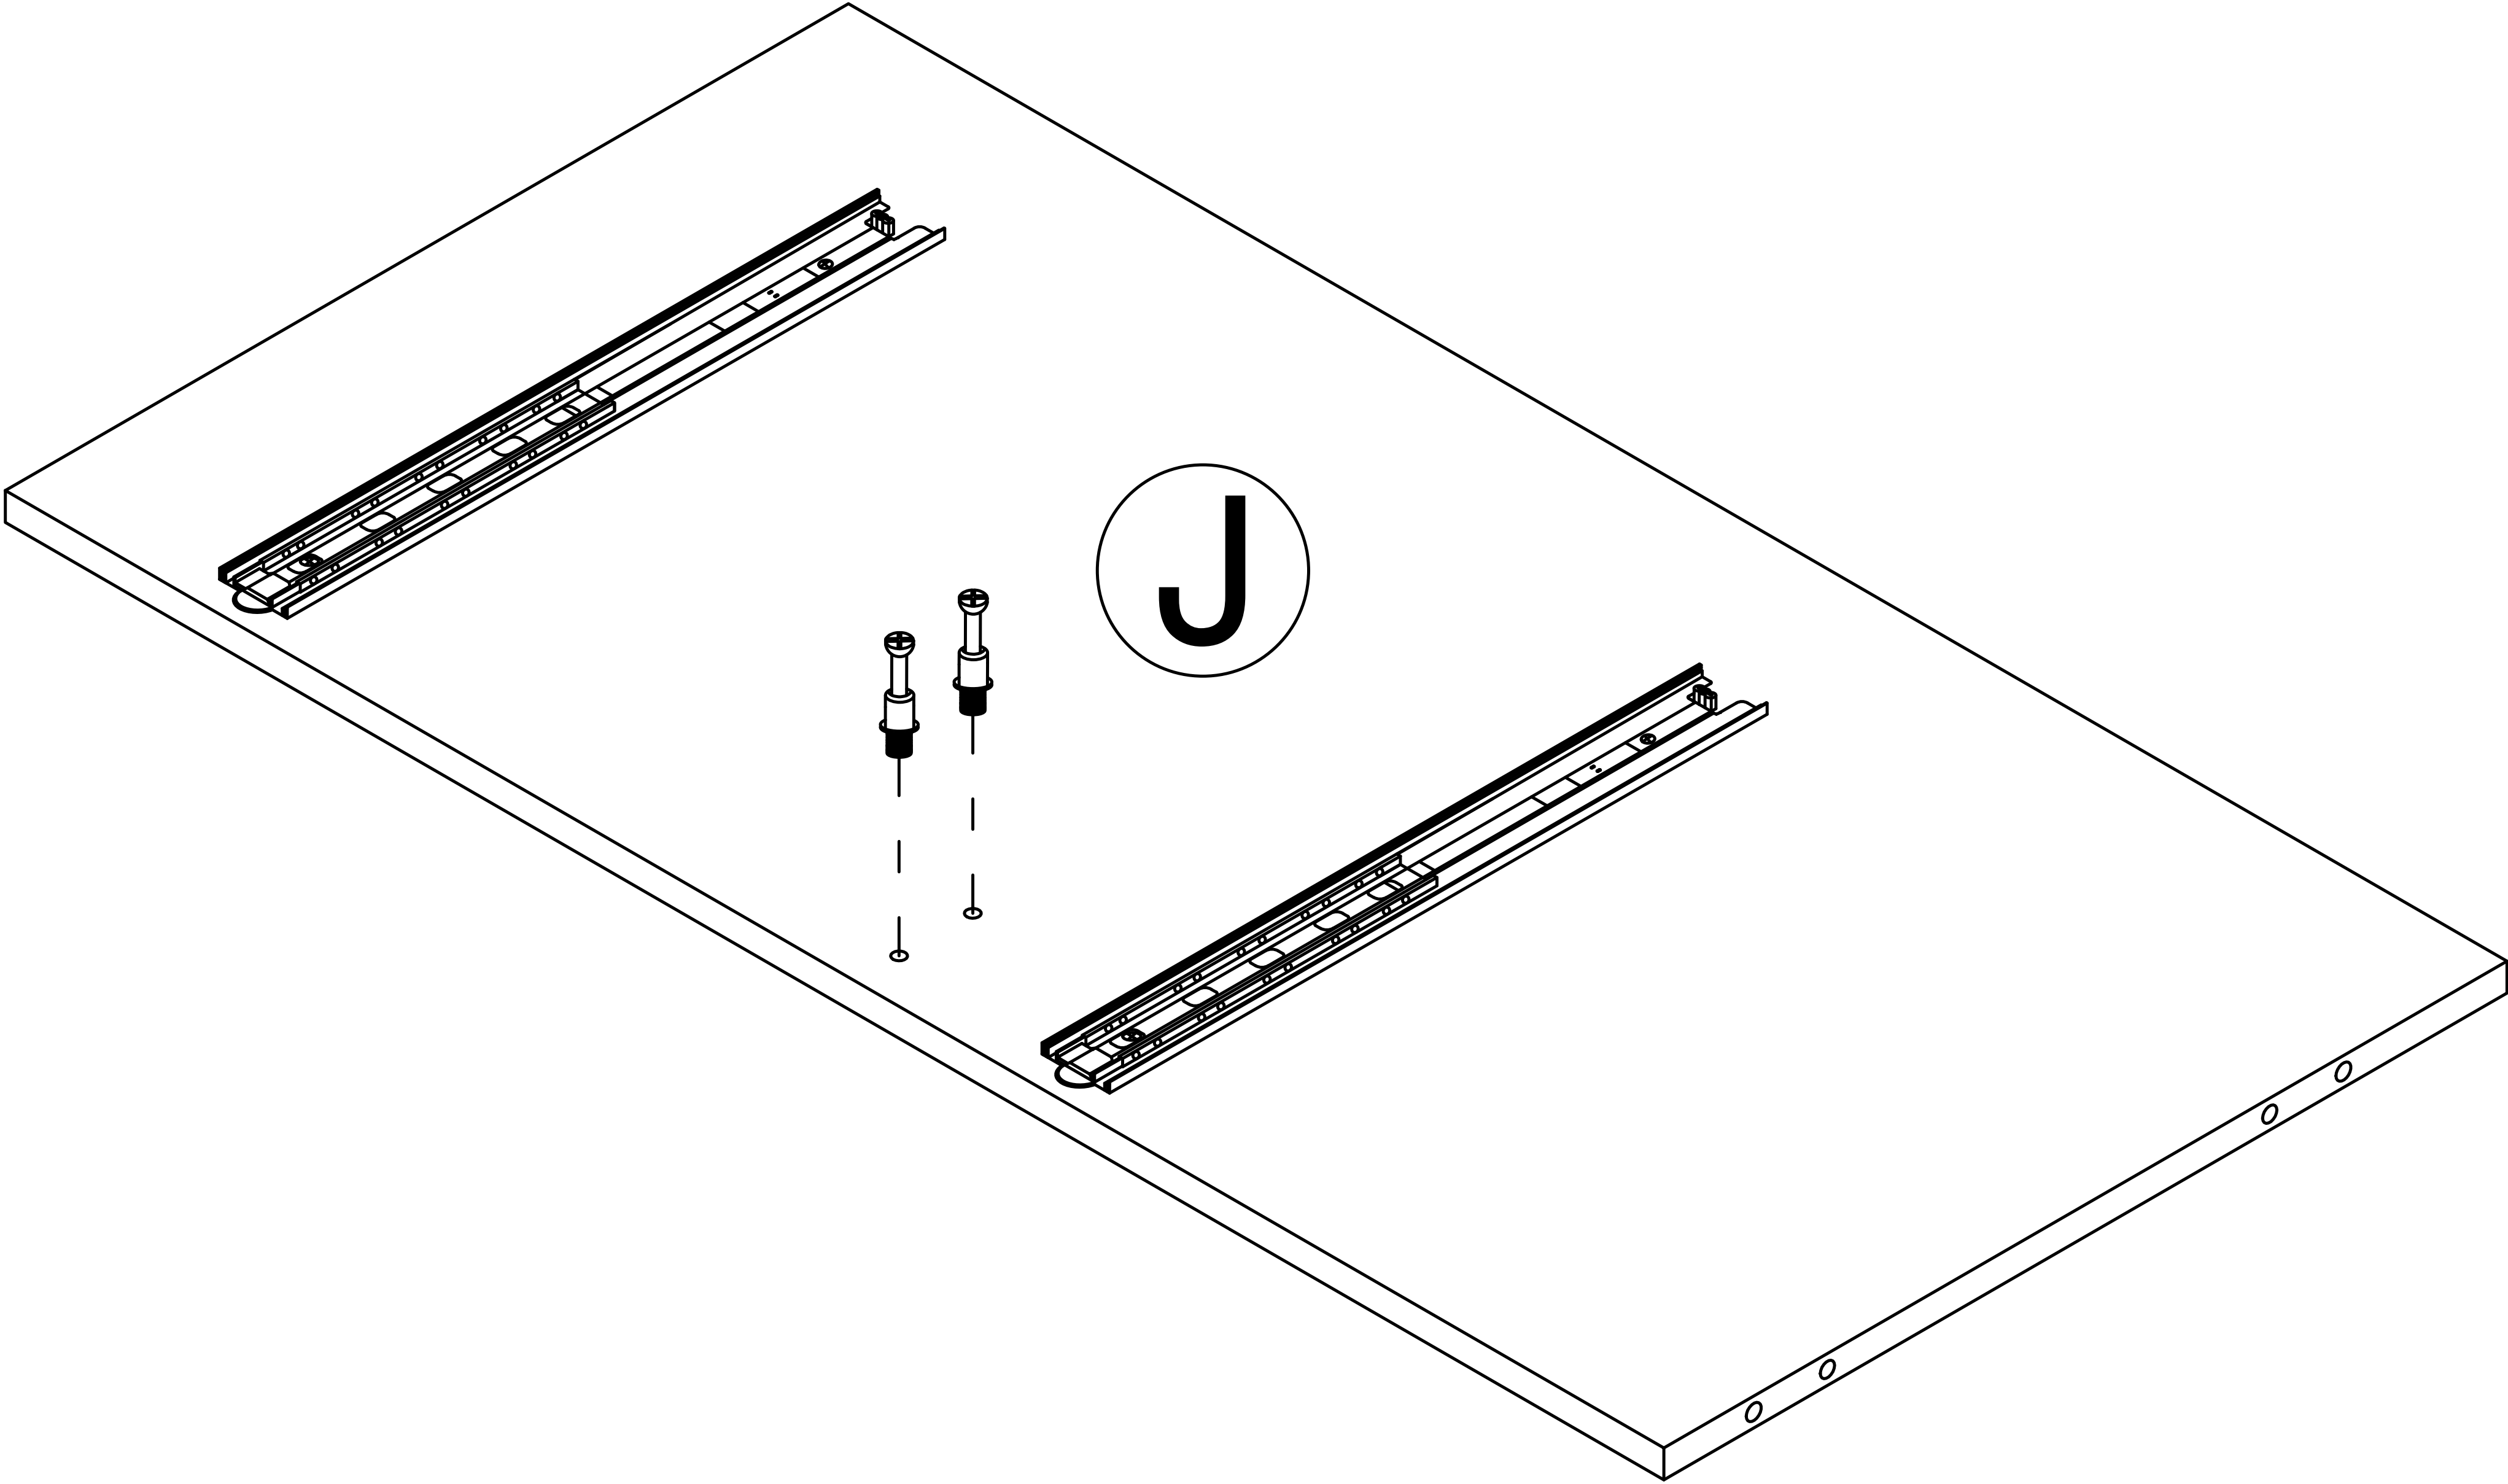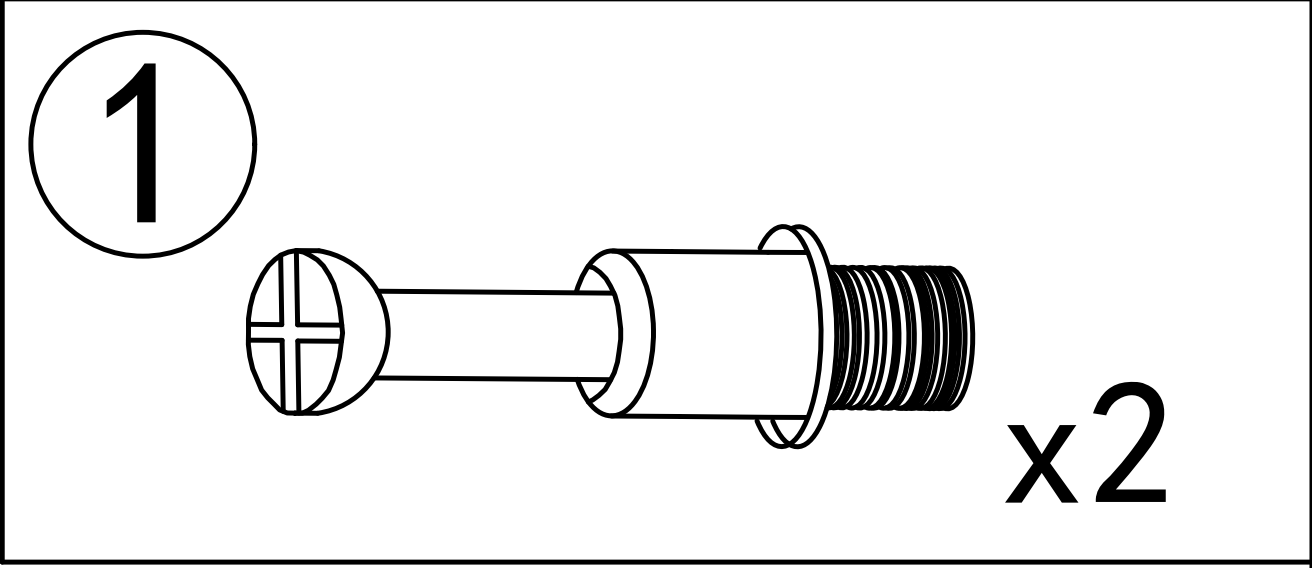


Step 21

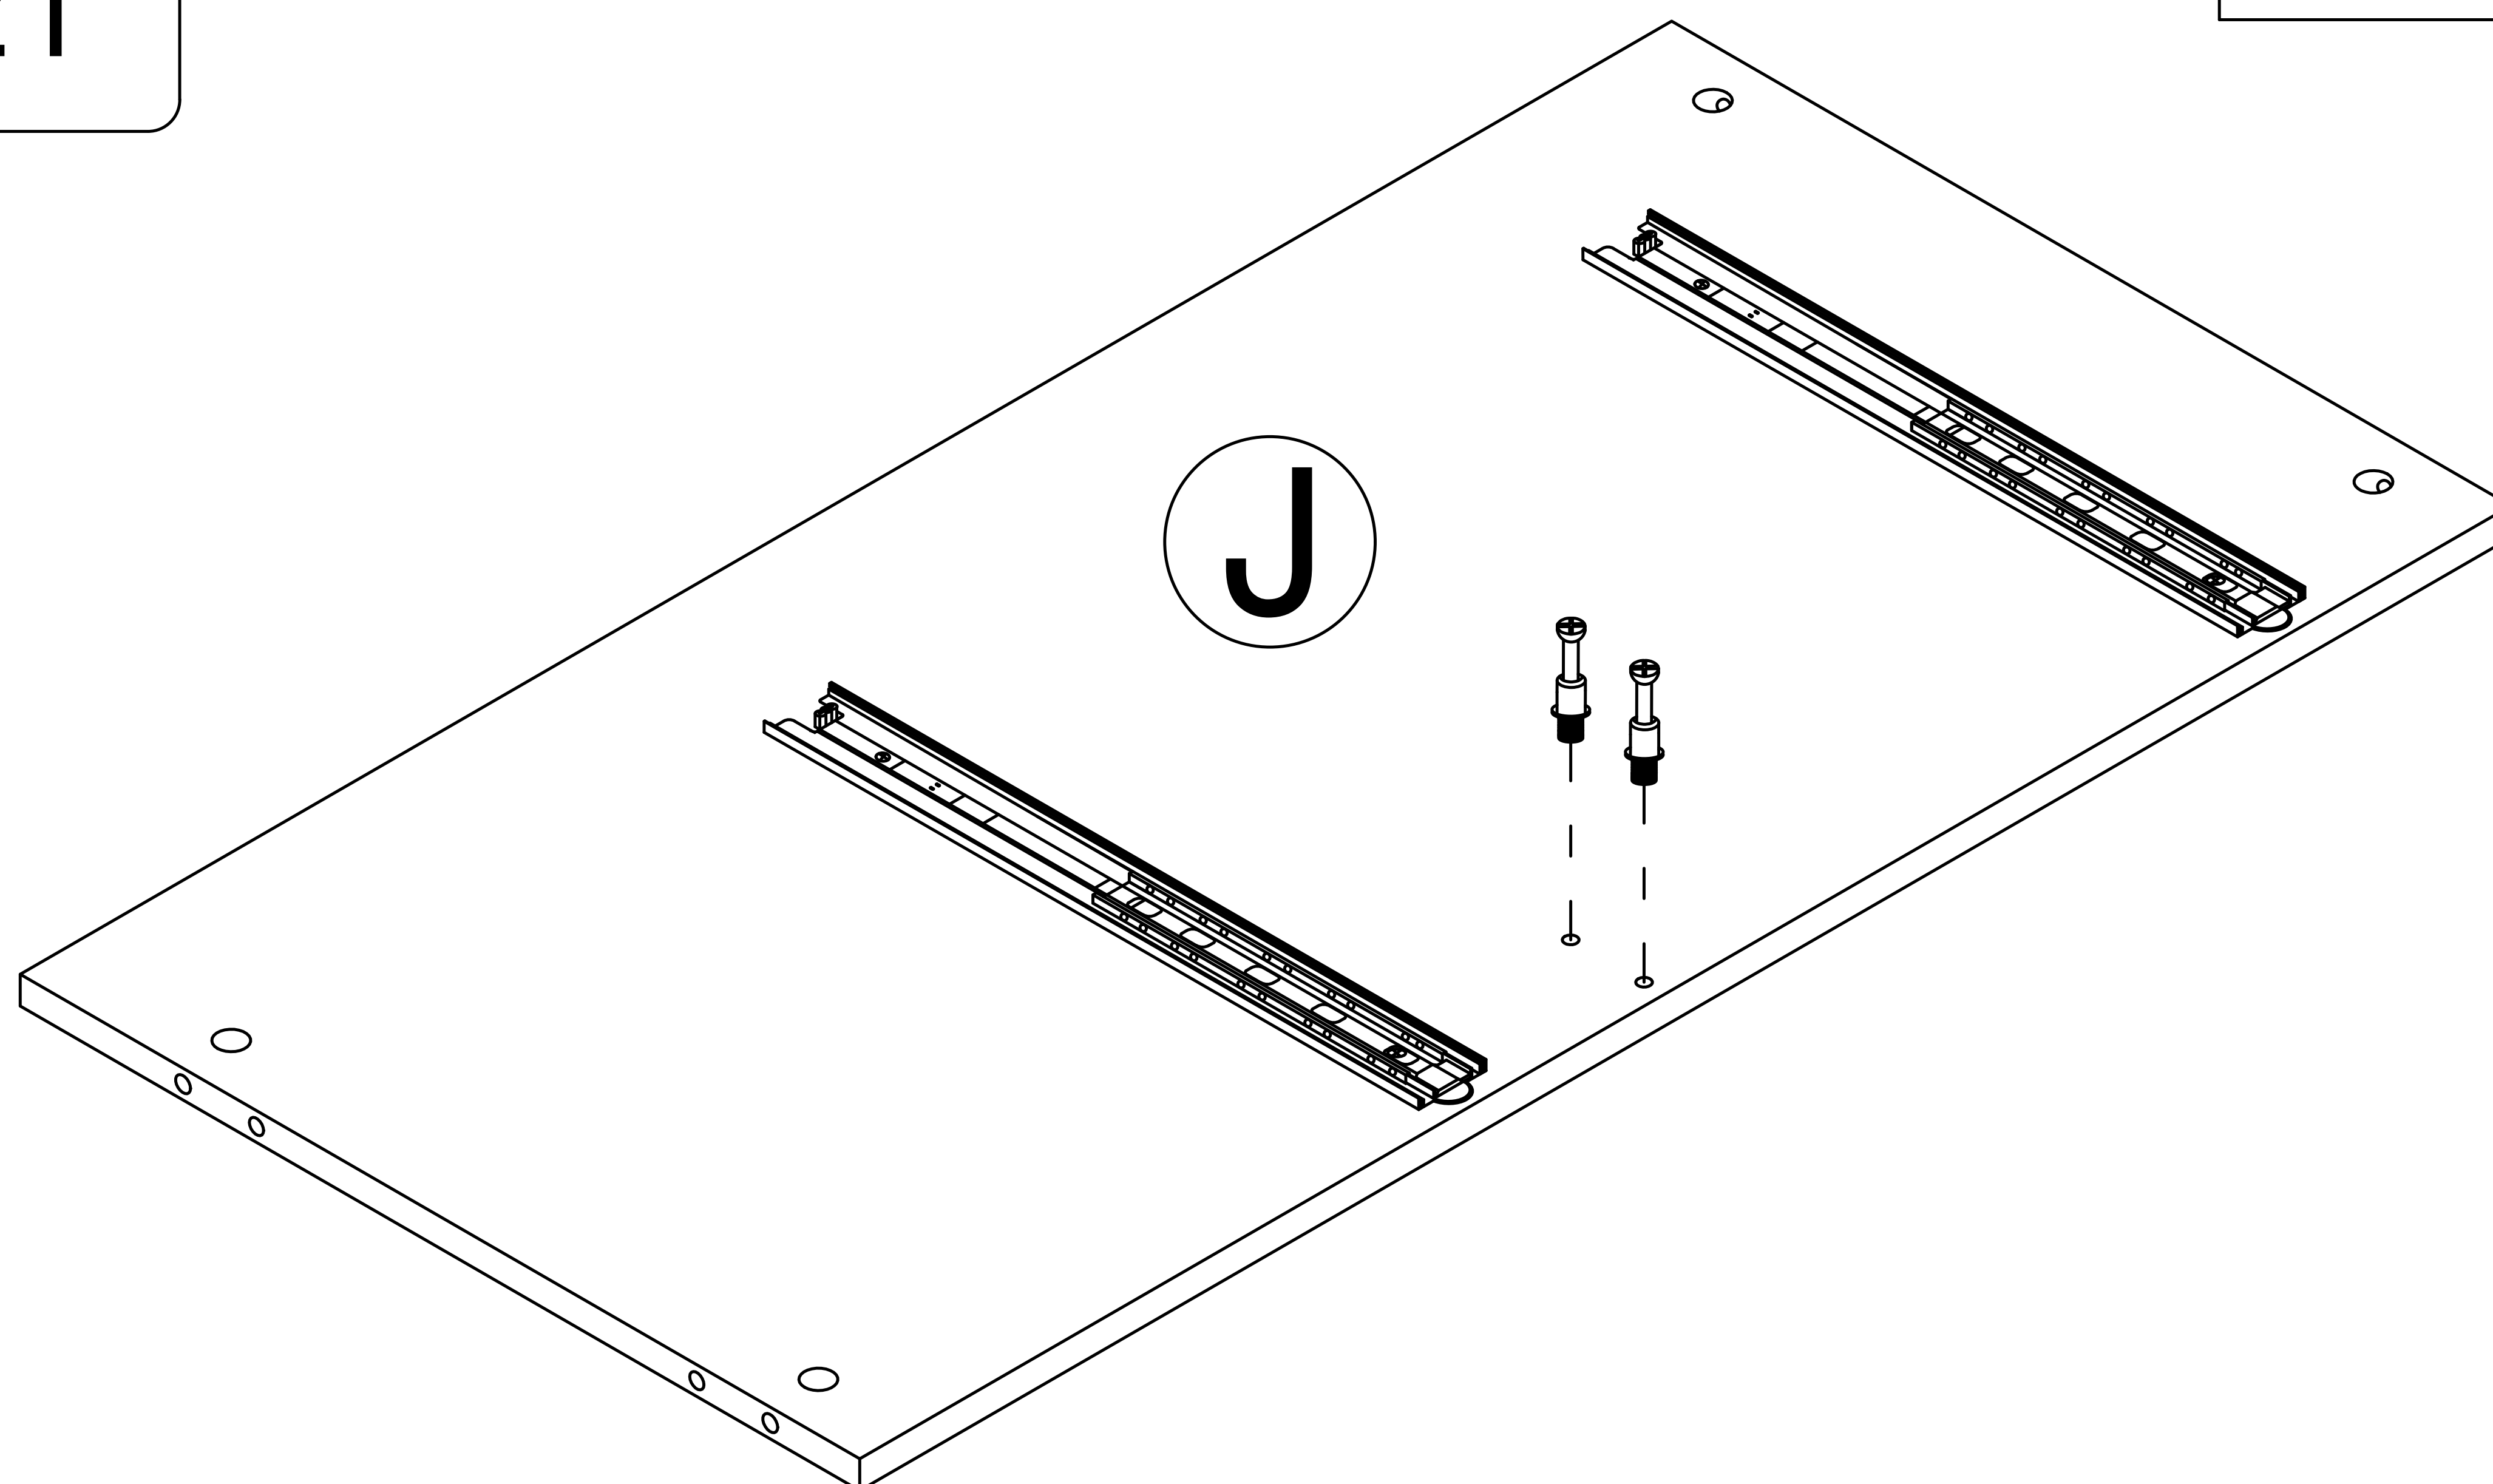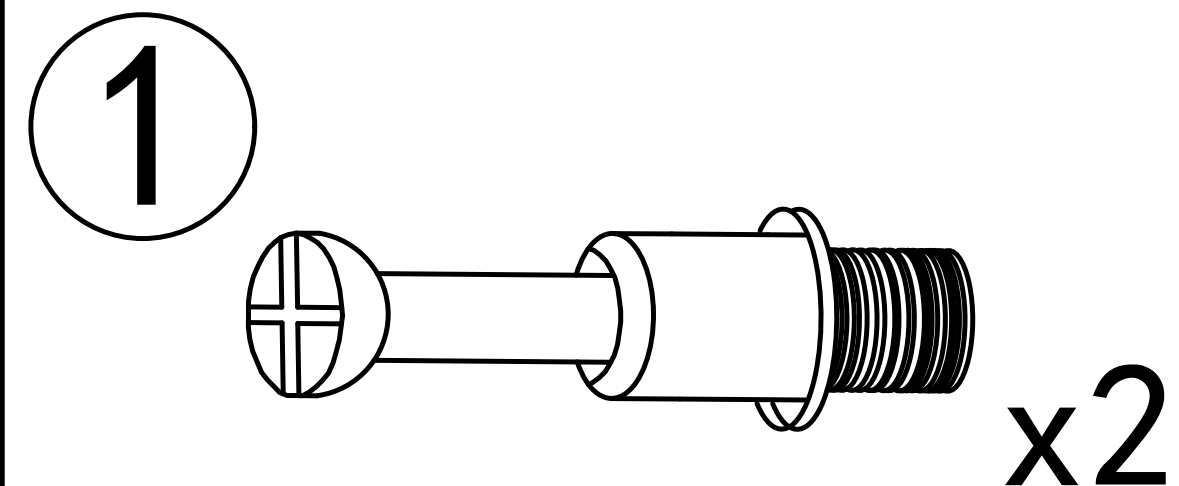



Step 22

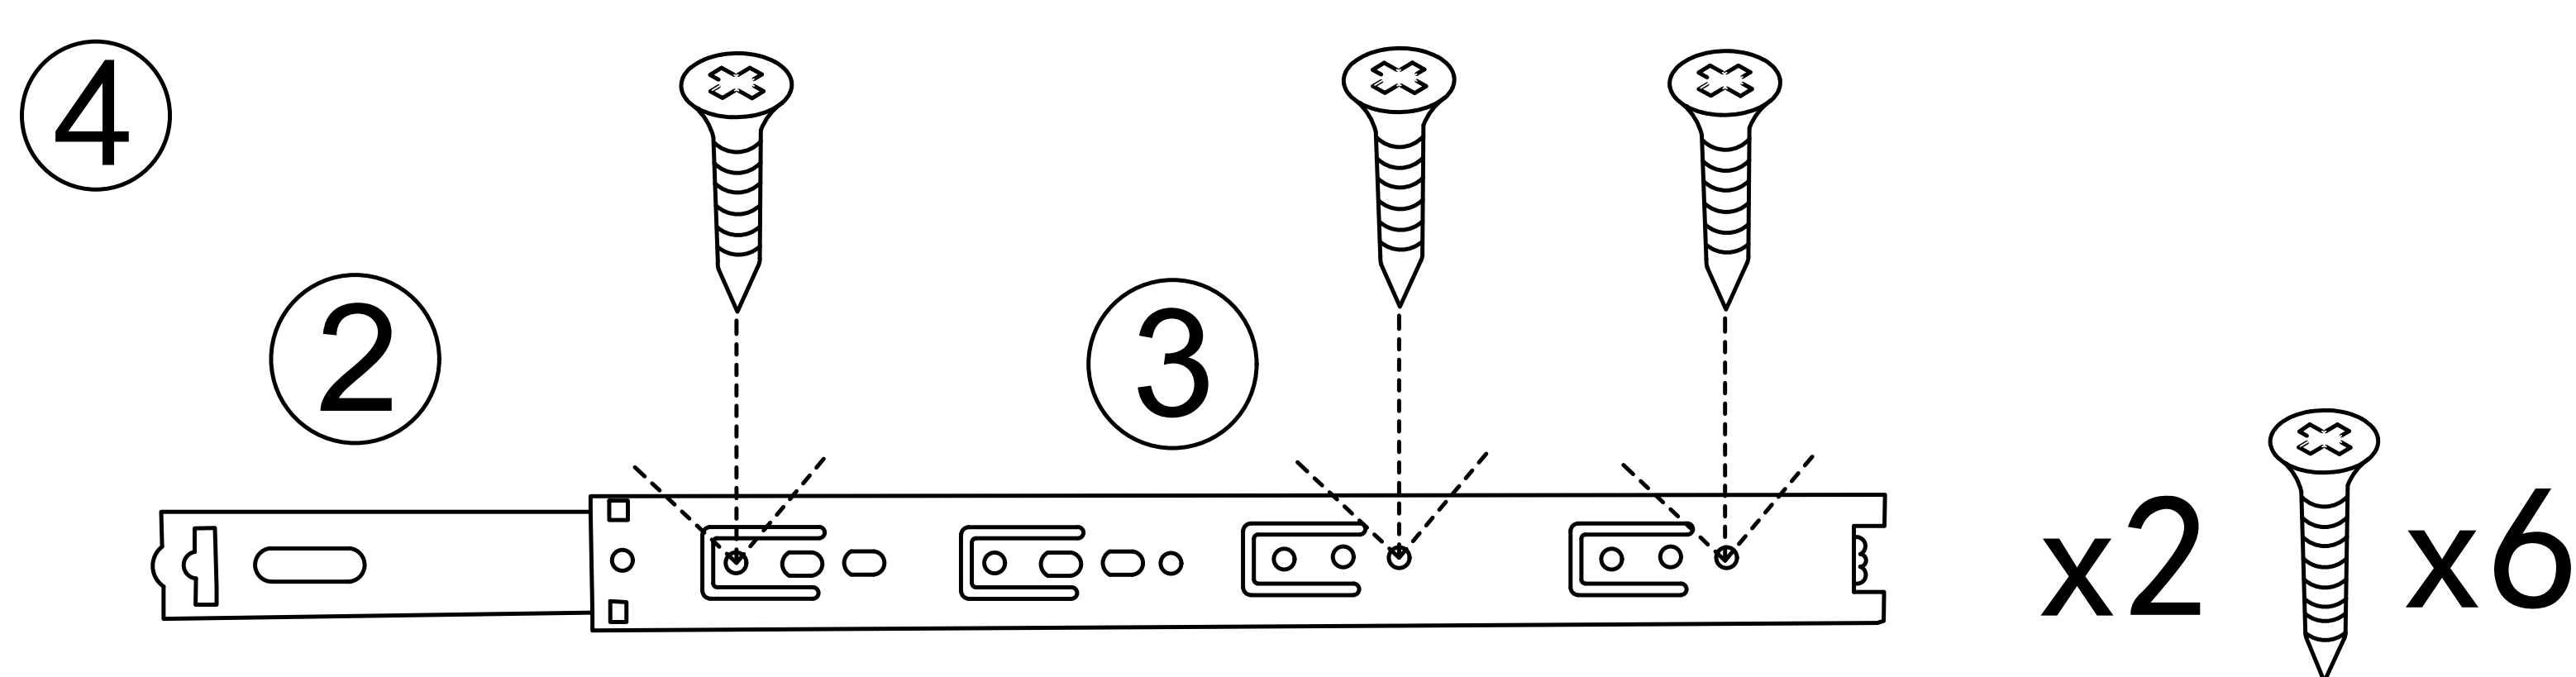



This hole is for strengthening fixed hole customers
can choose to install according to their needs.

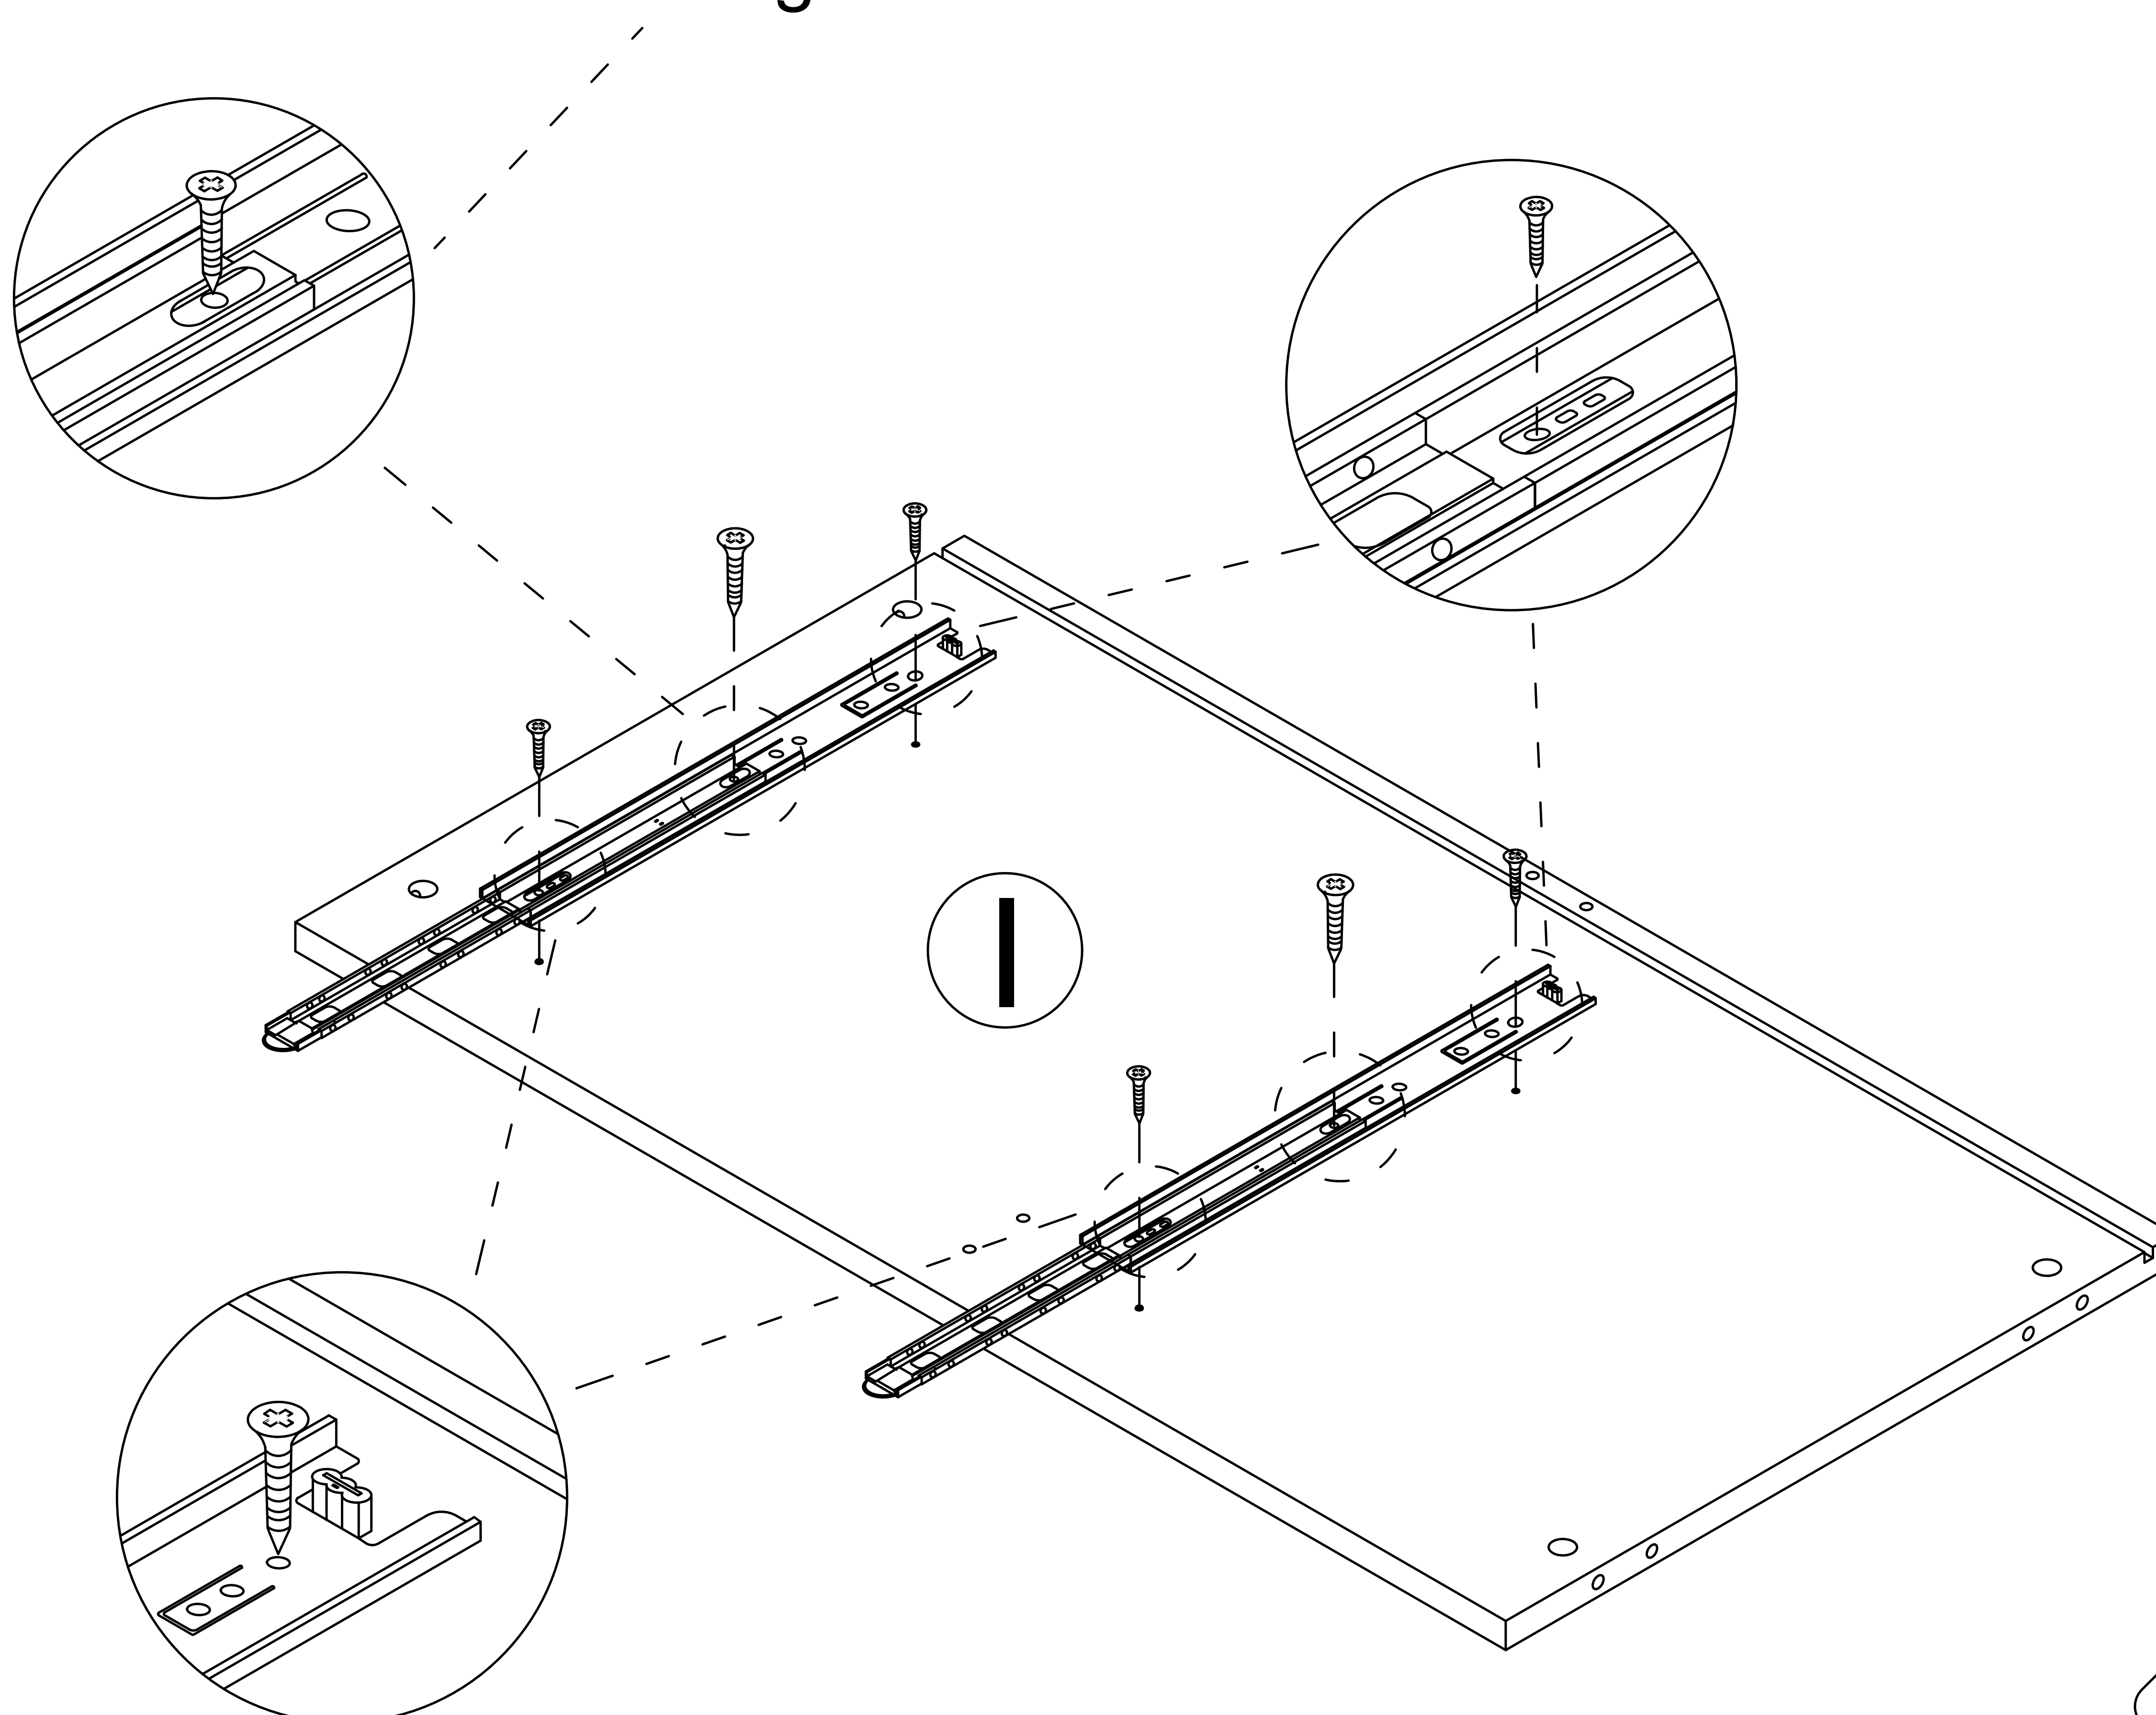

Step 23

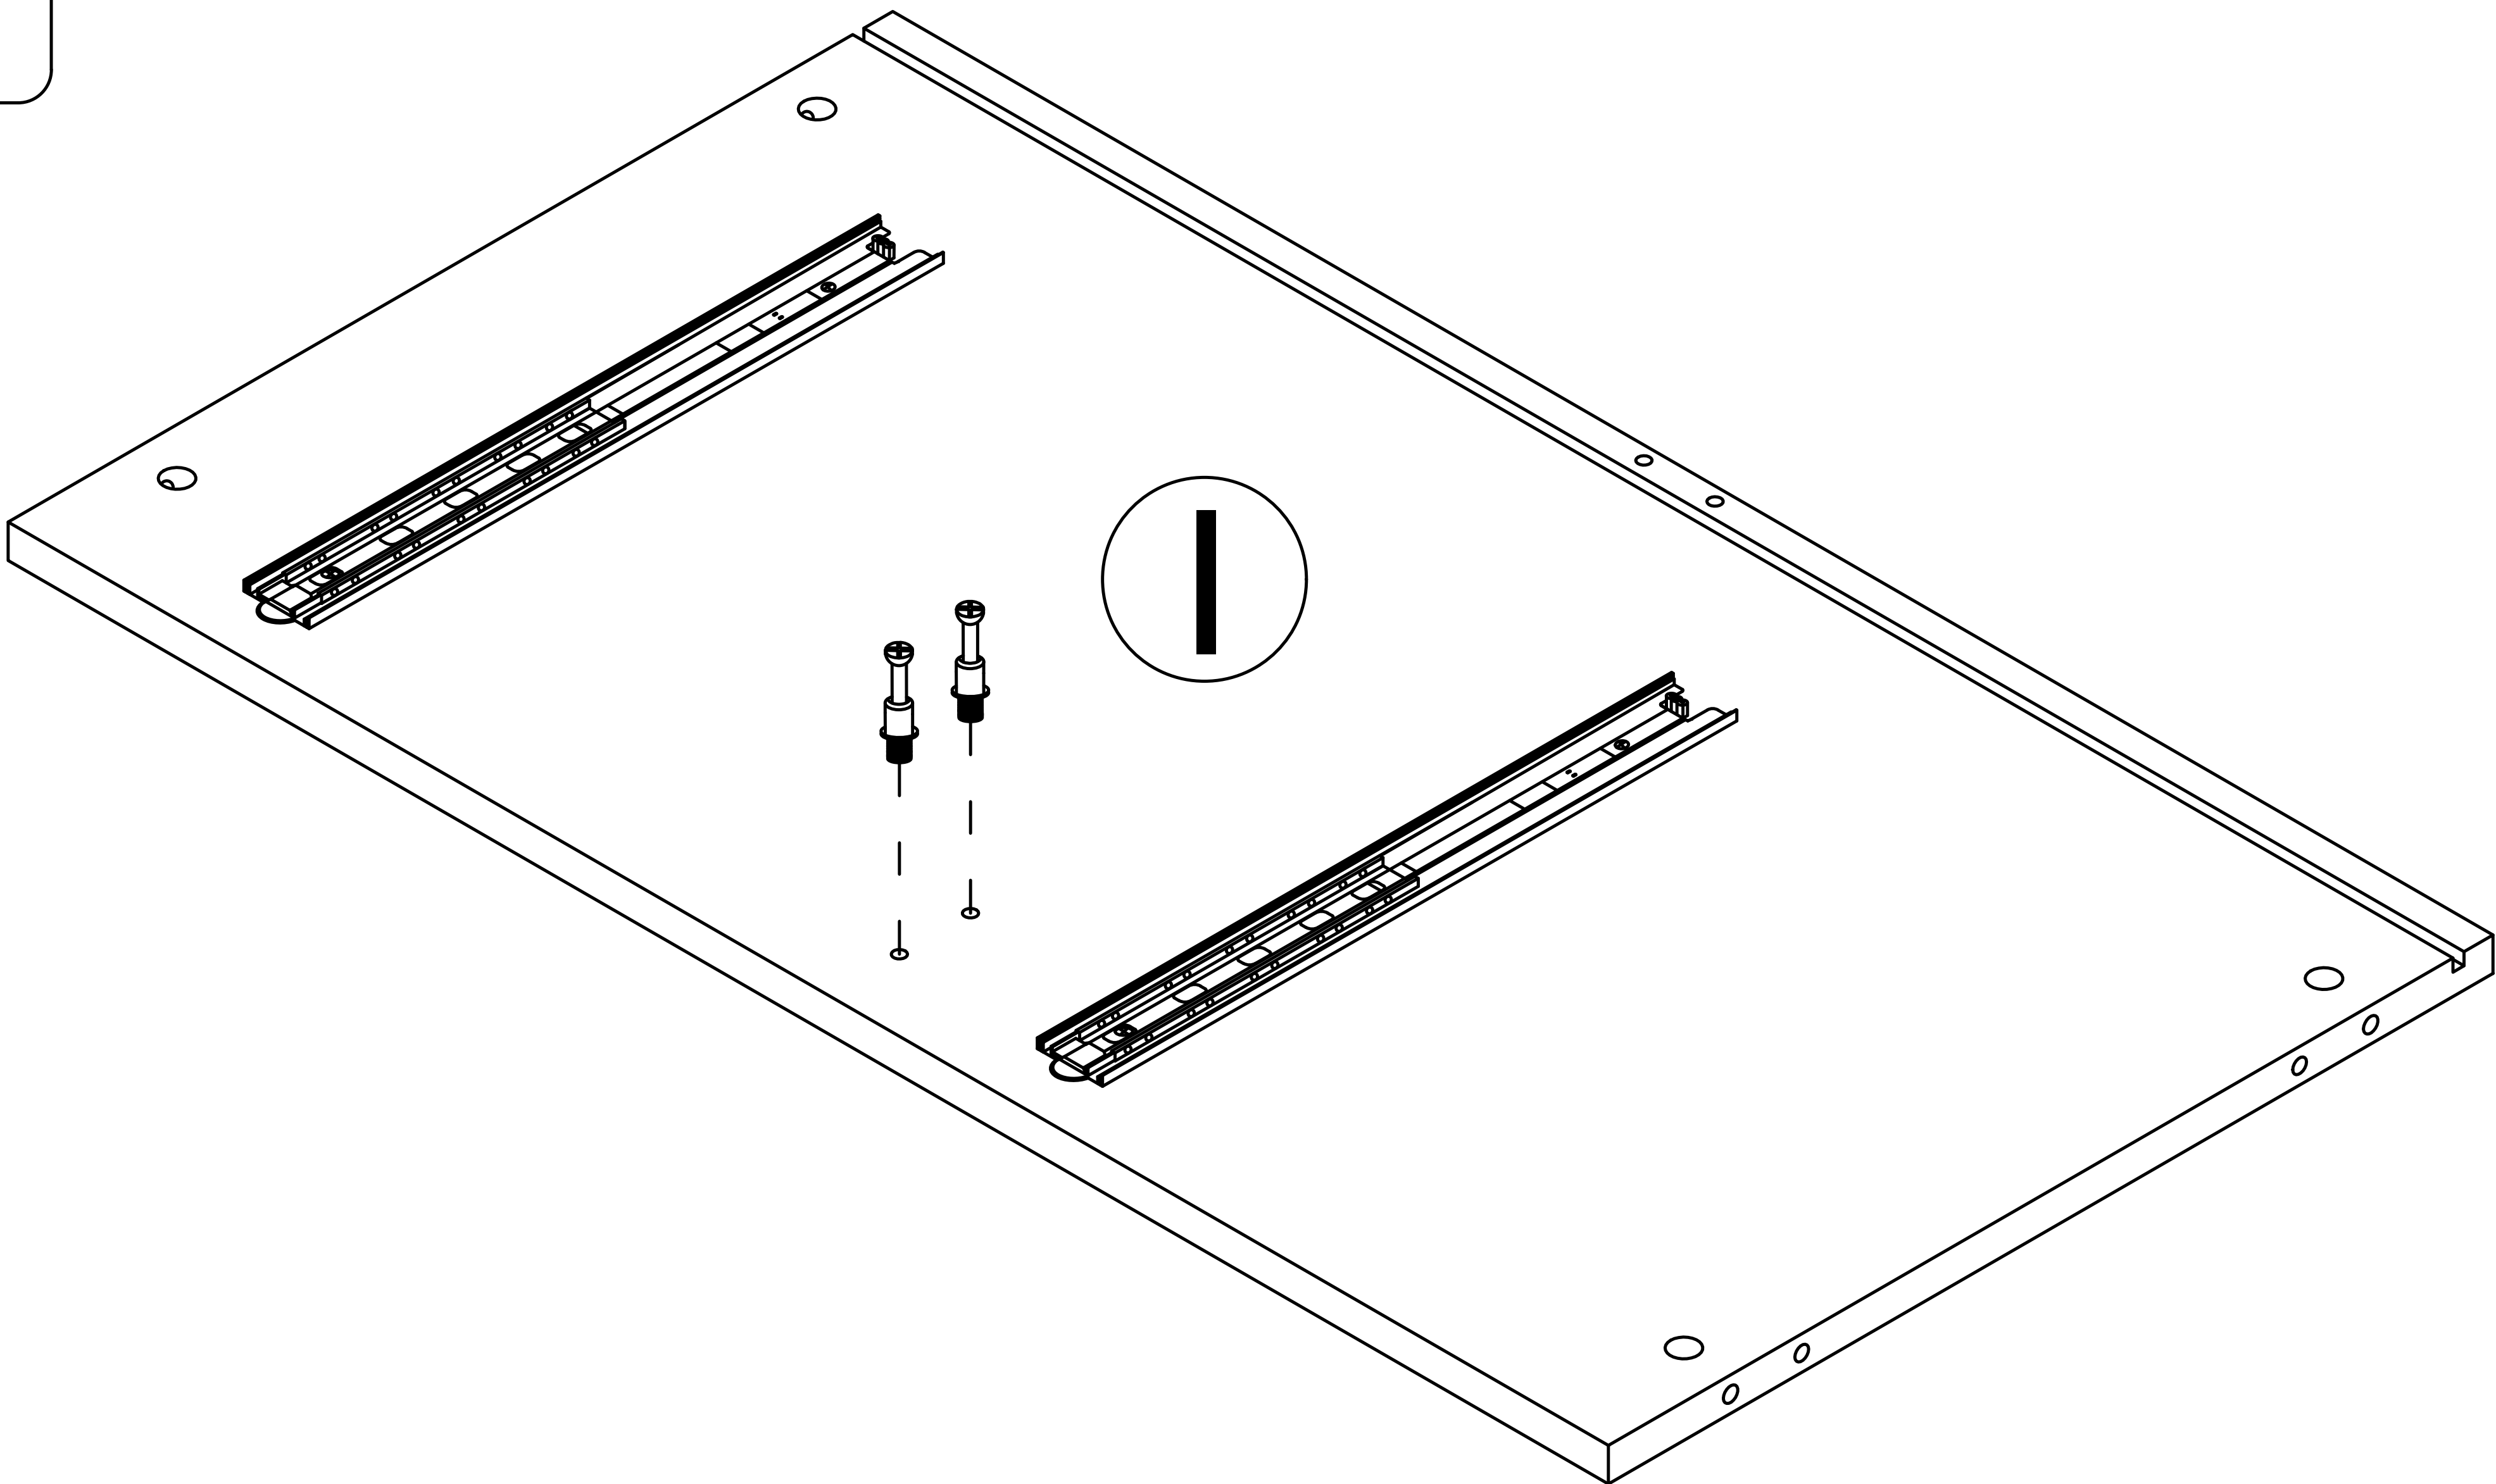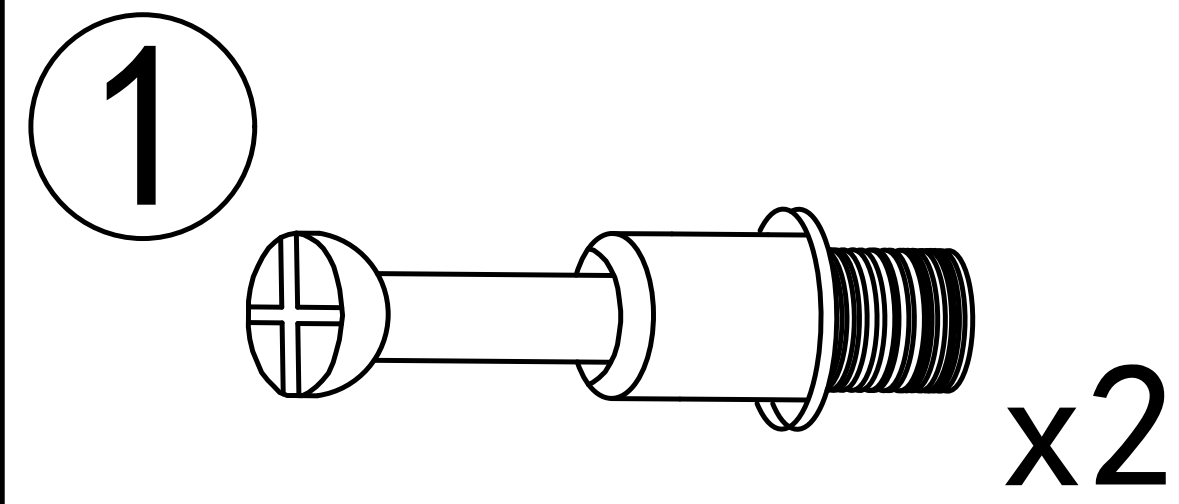


Step 24

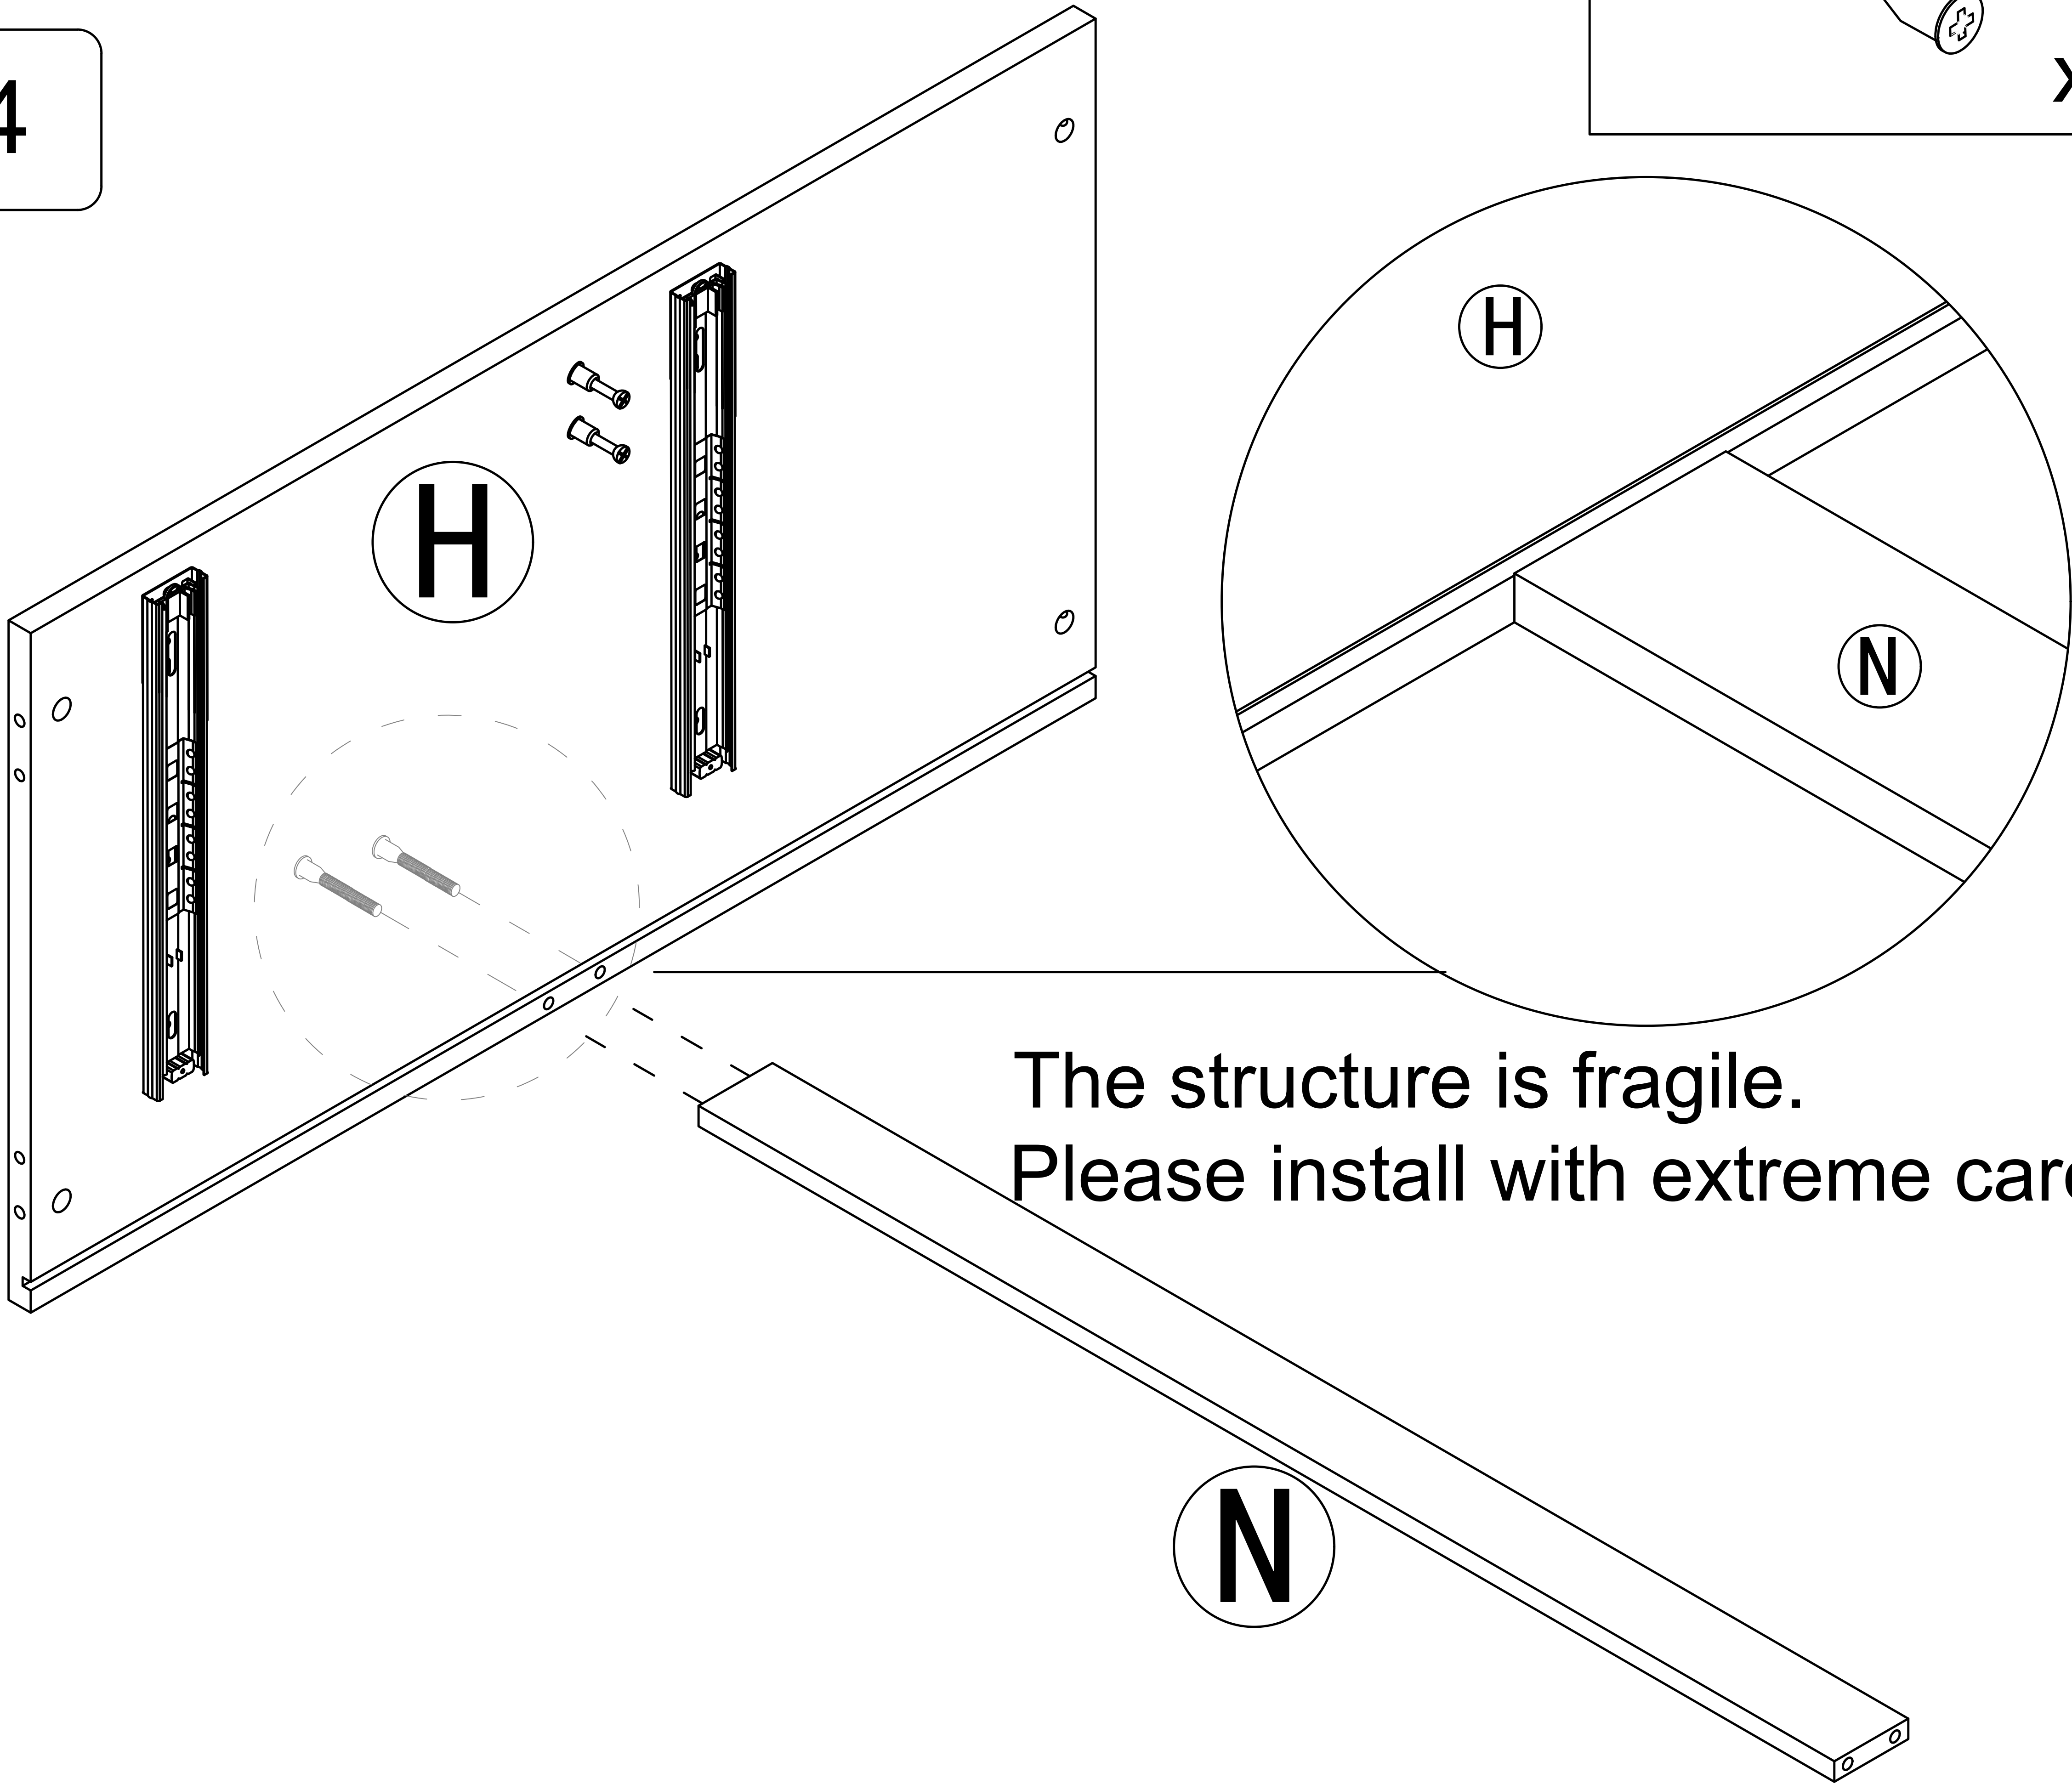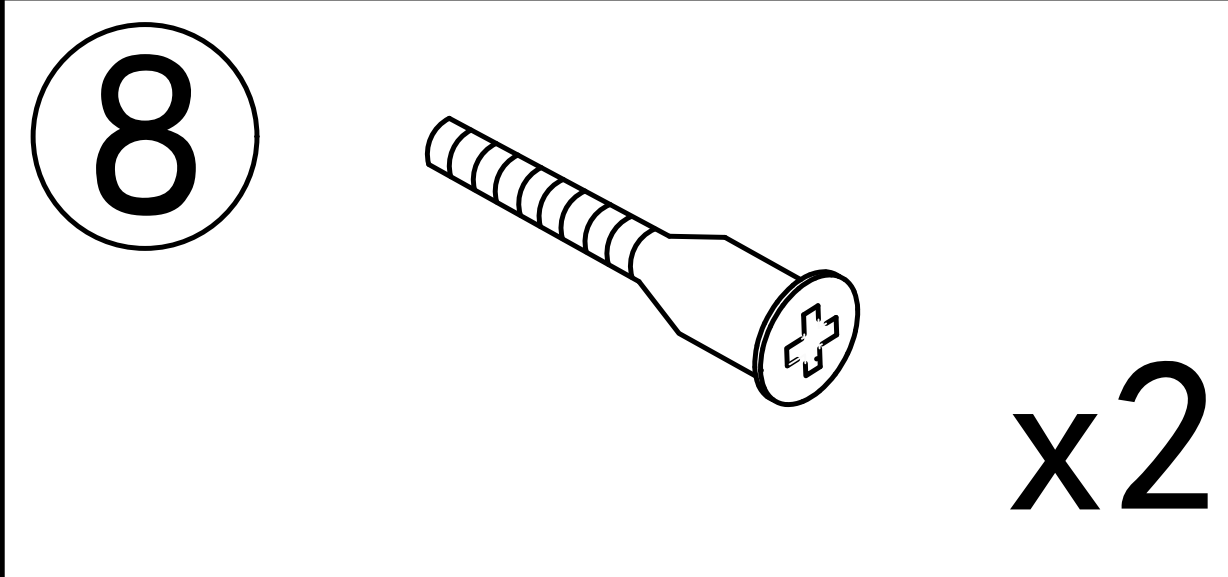


Step 25

2

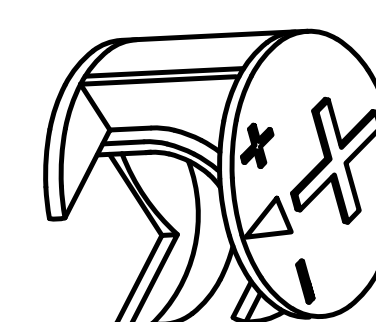


x2

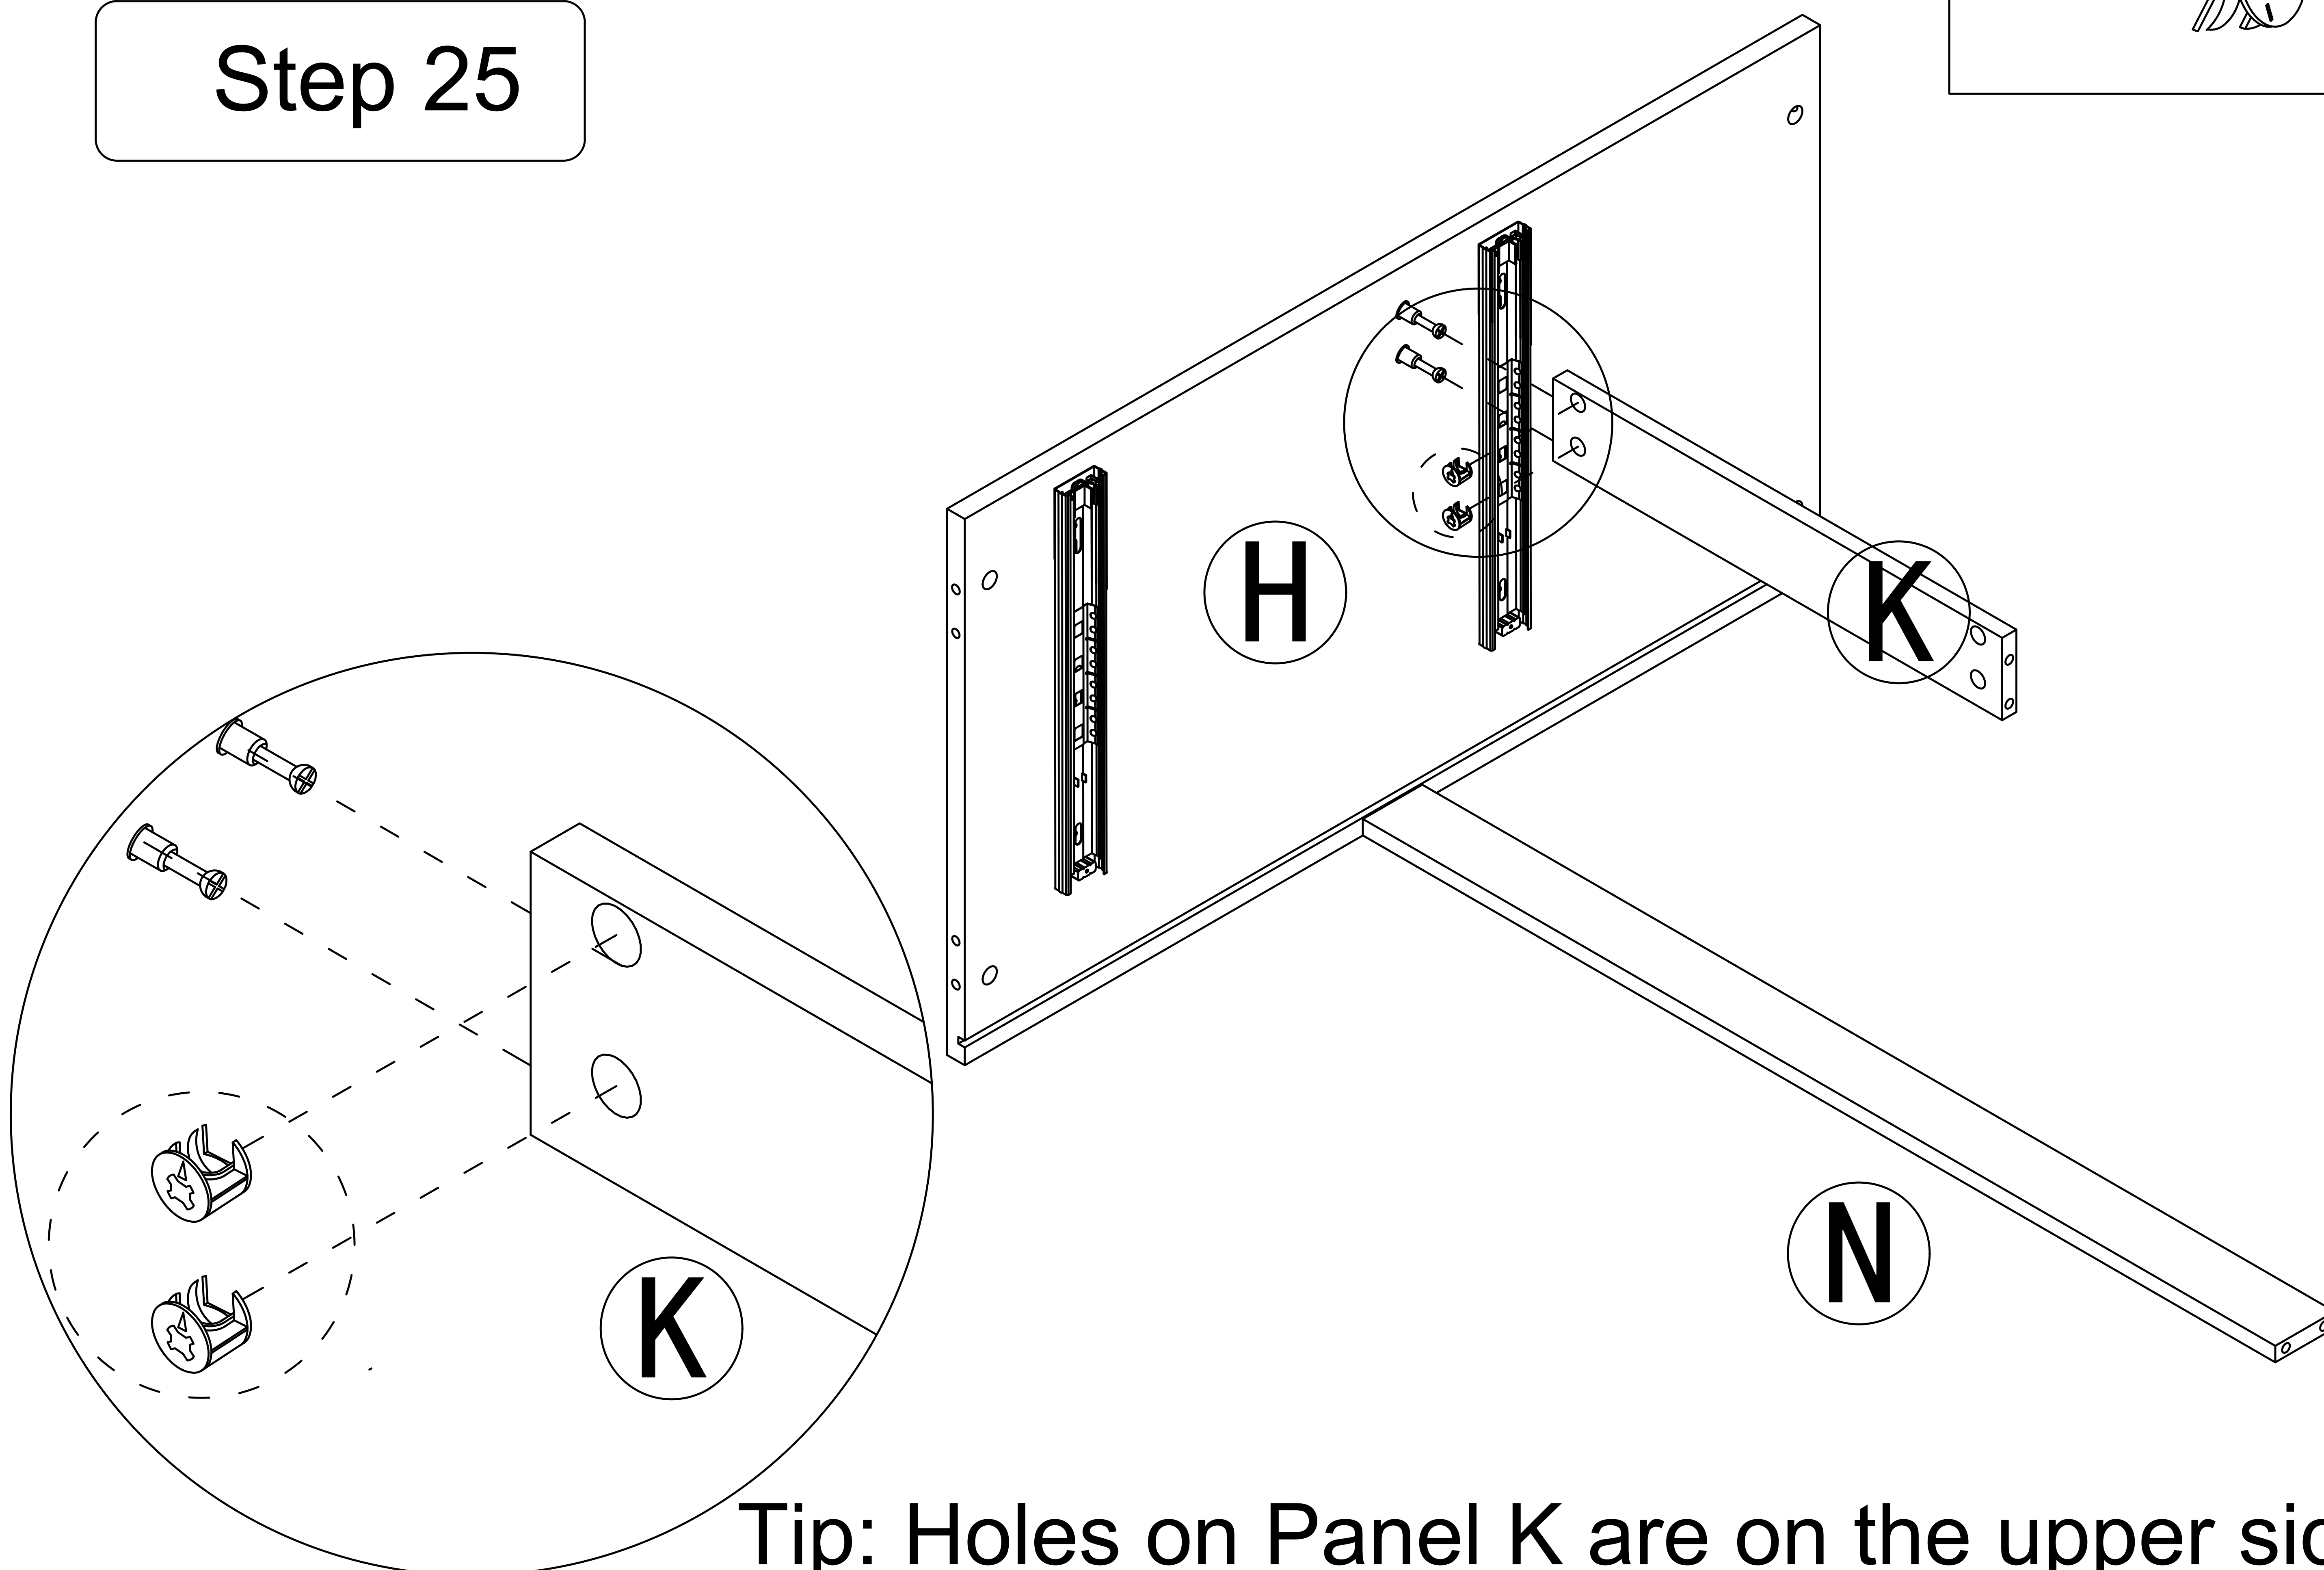


Tip: Holes on Panel K are on the upper side

Step 26

2

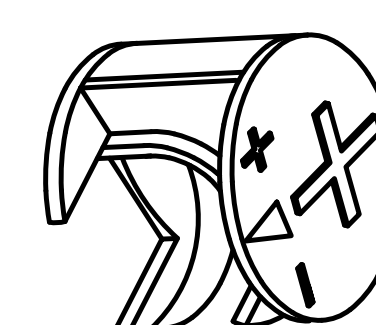


x2


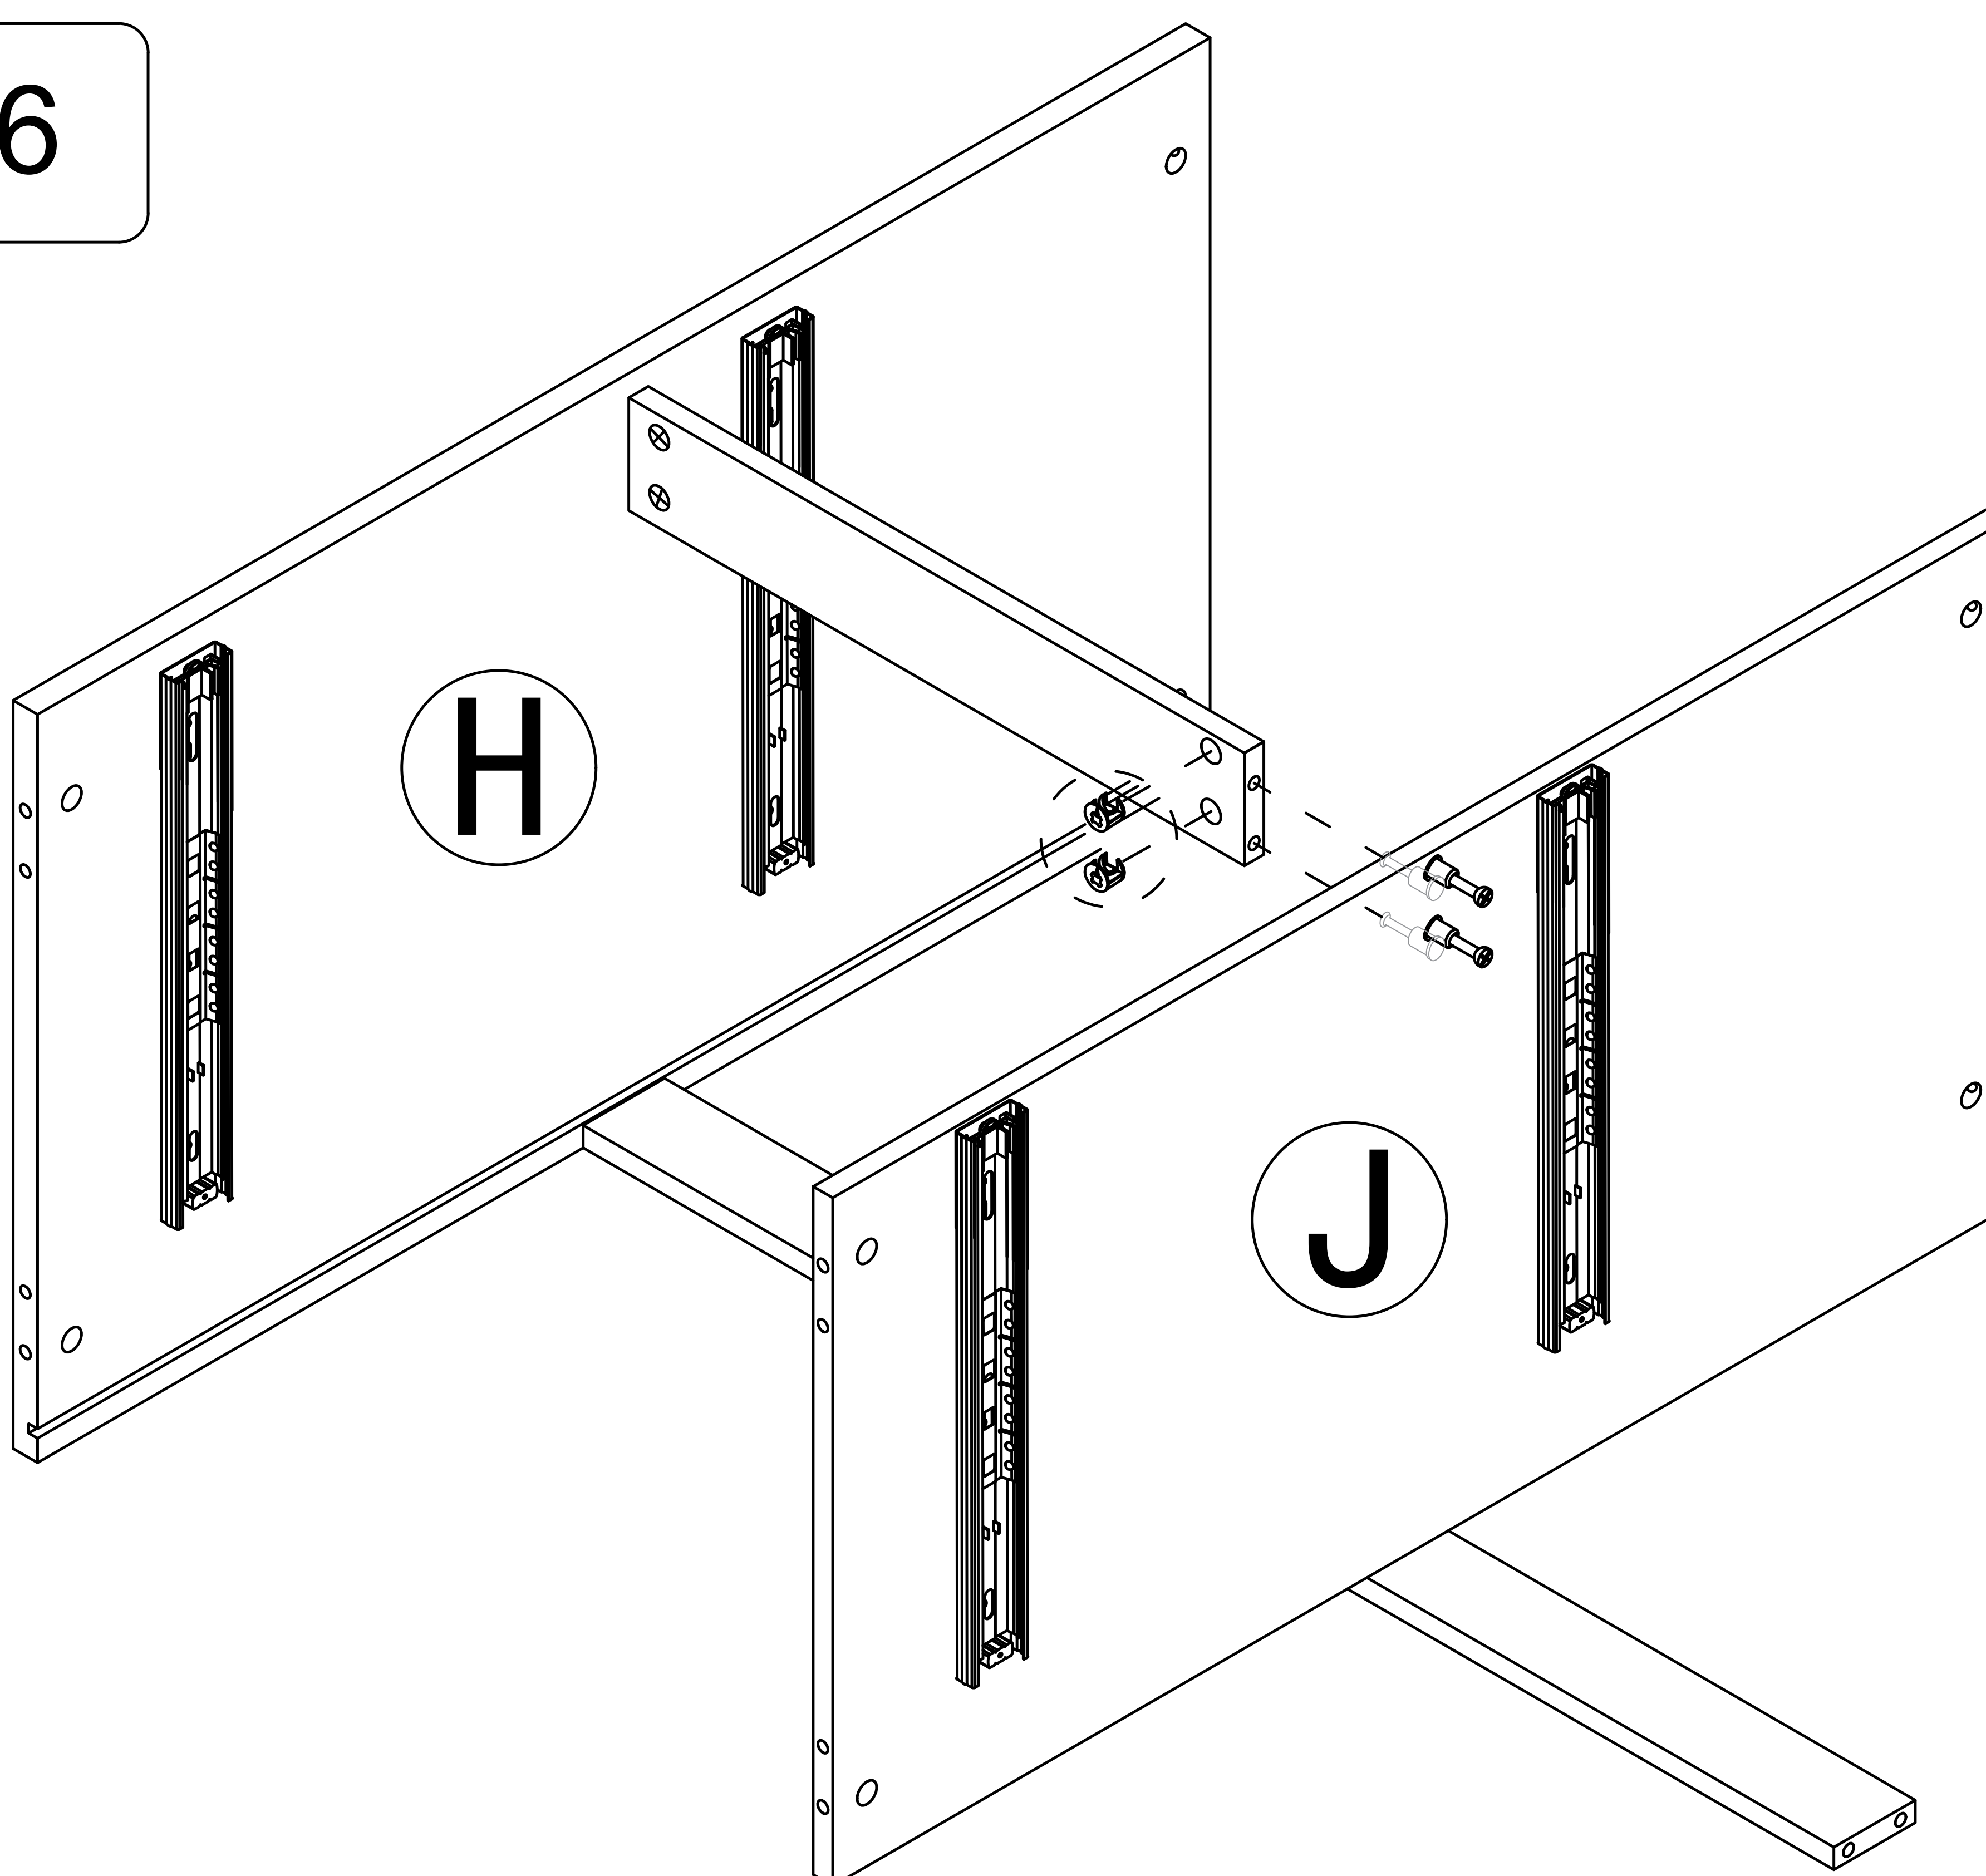


Step 27

2

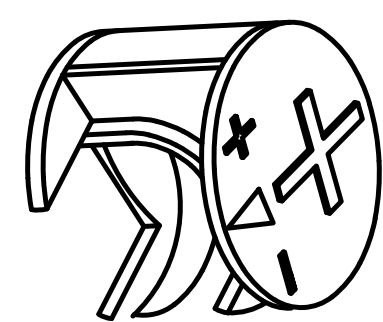


x2

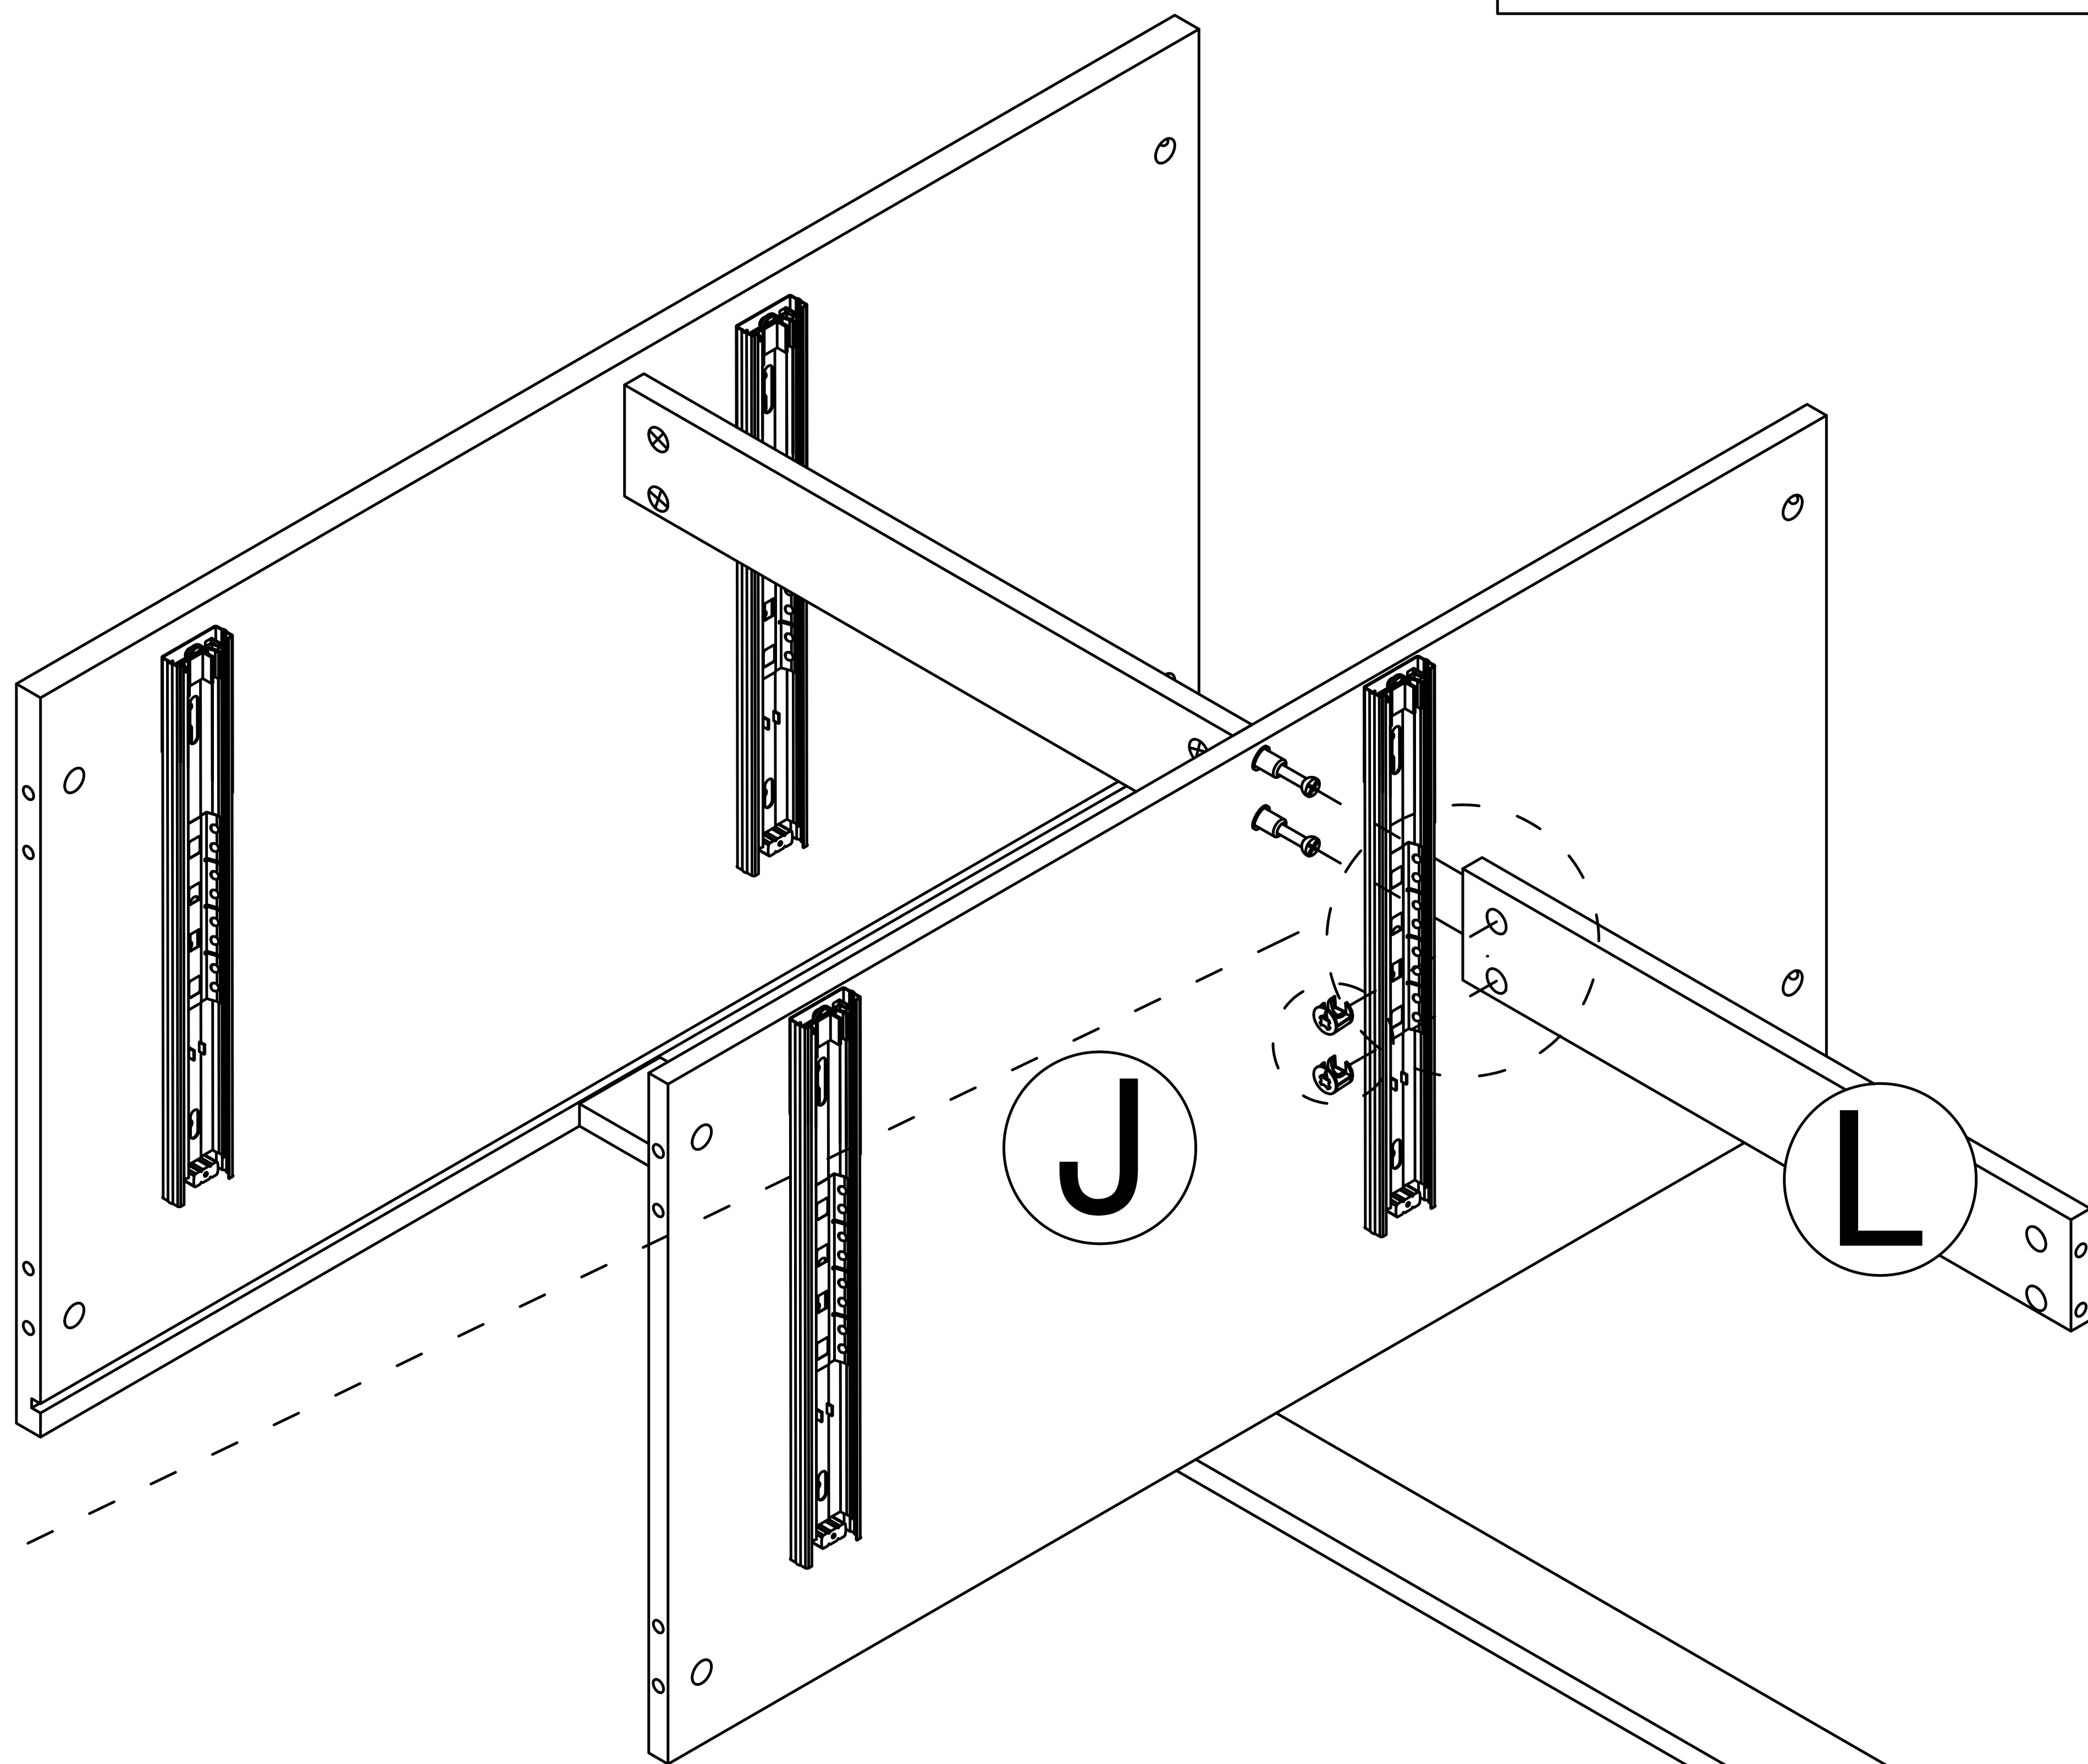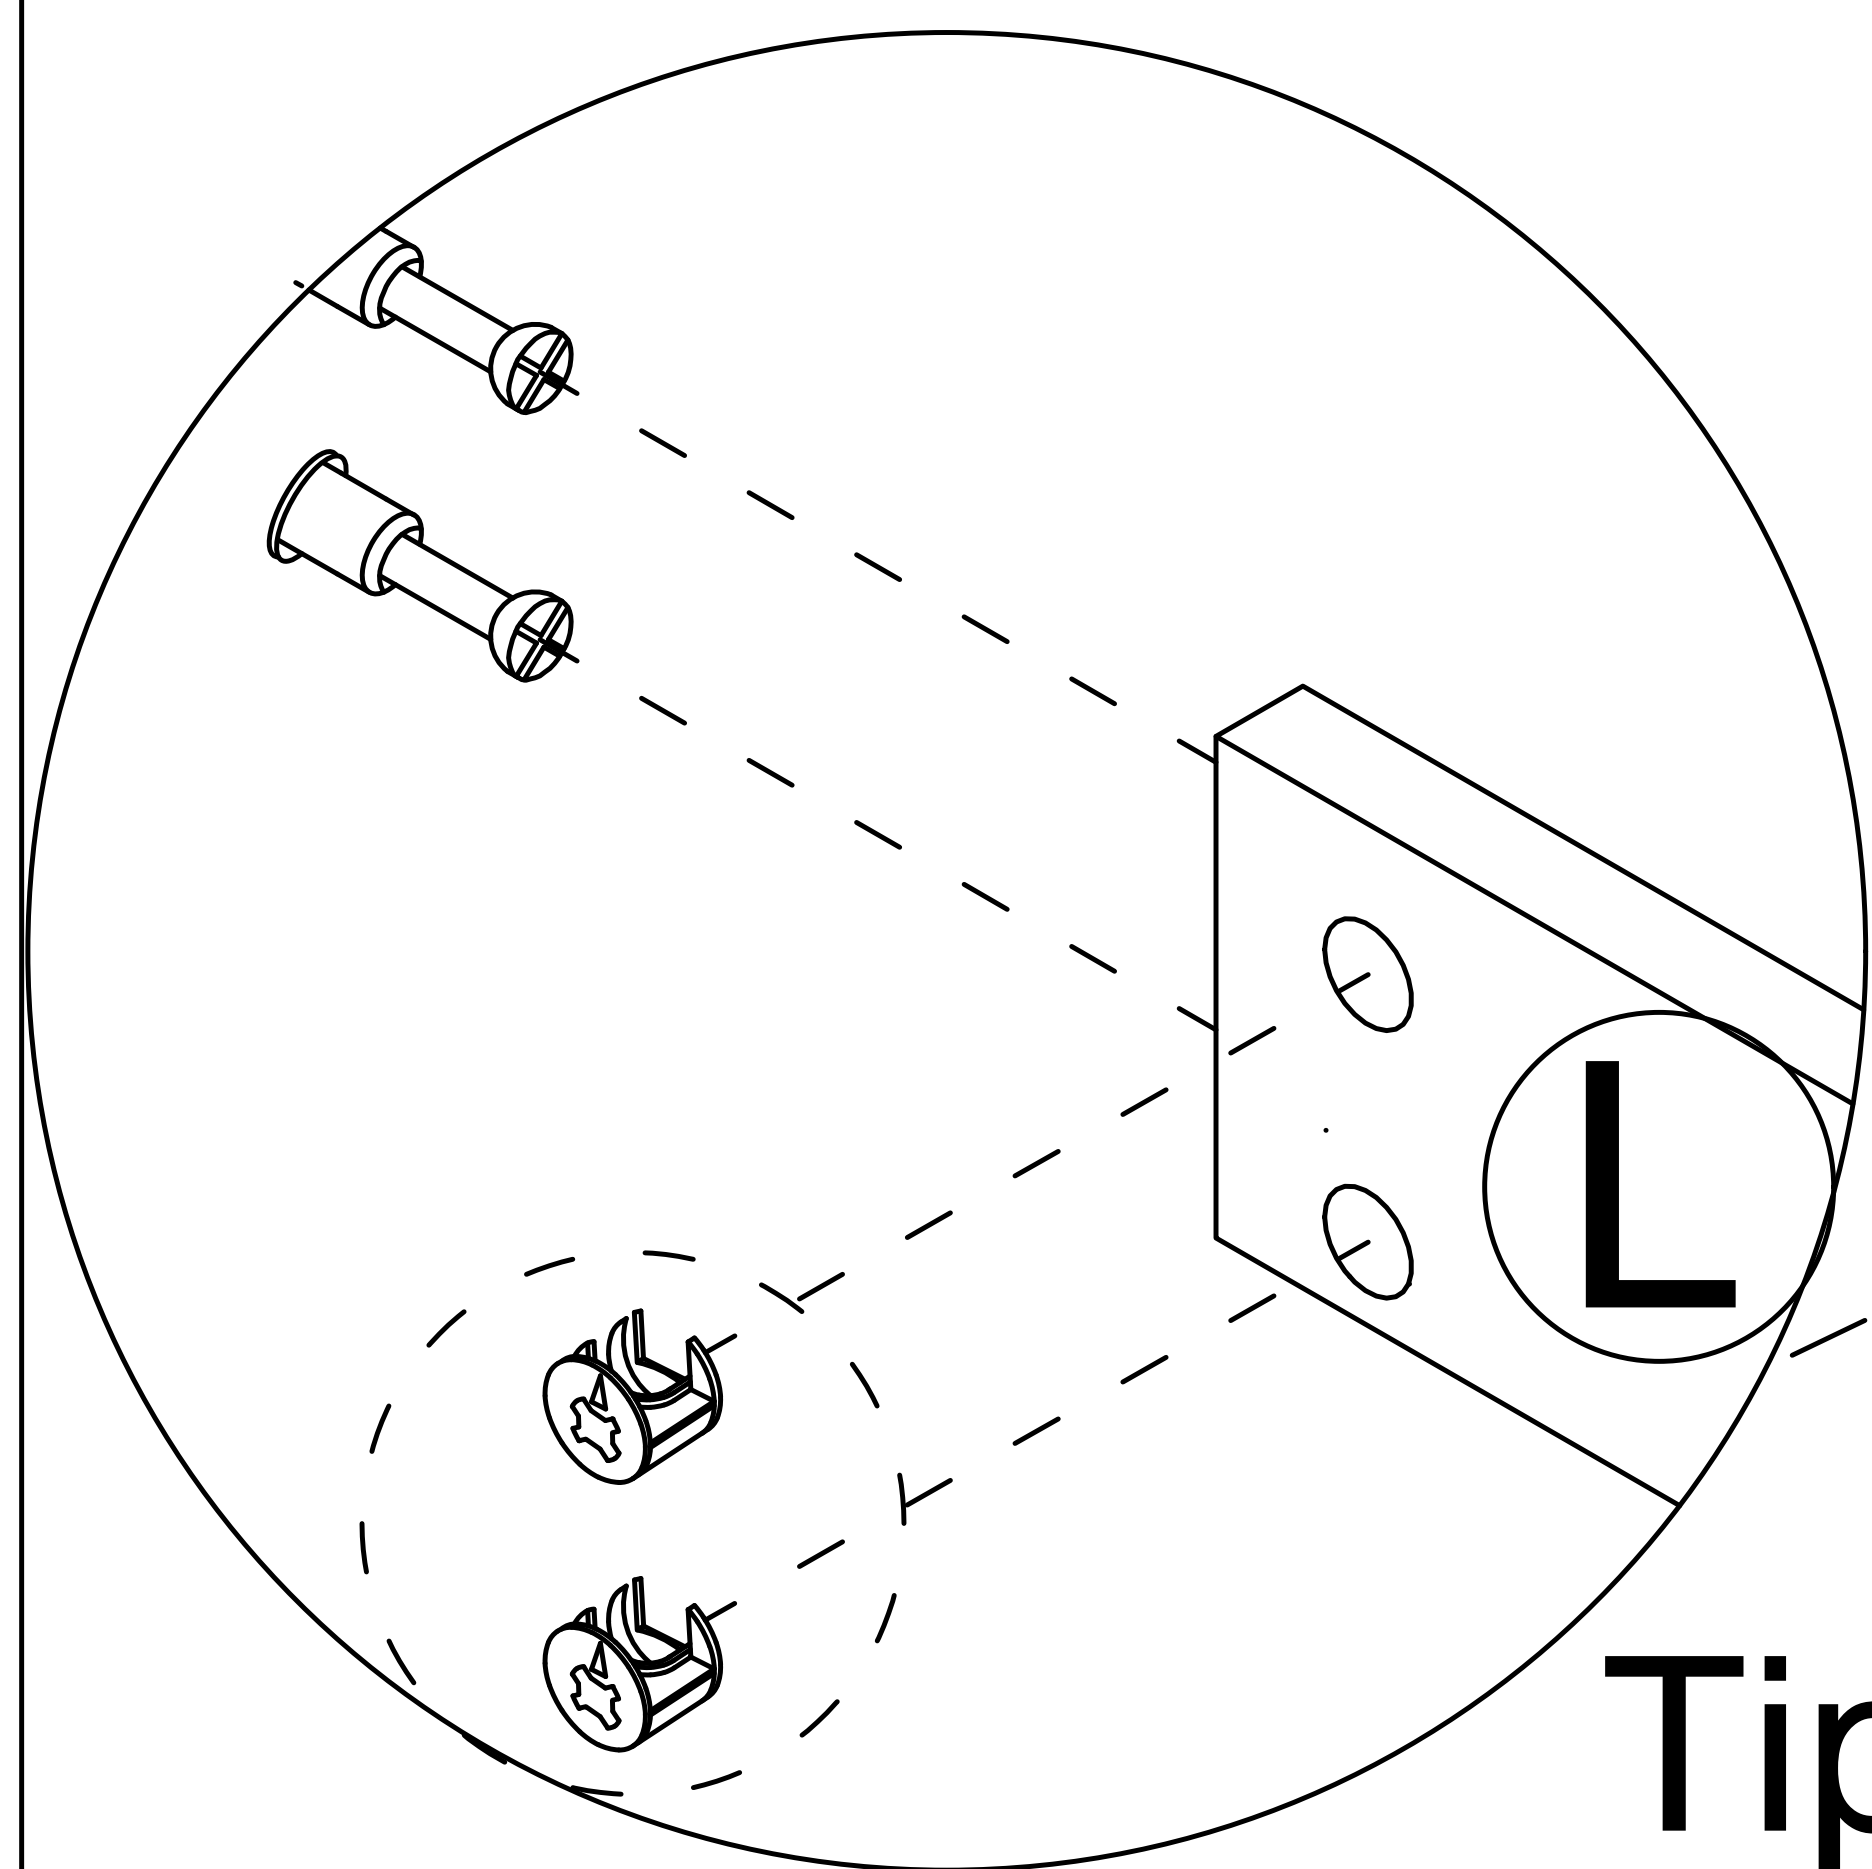

Tip: Holes on Panel L are at the bottom


Step 28

2


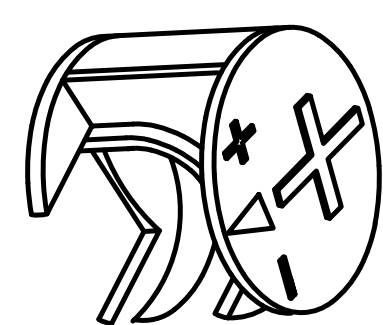


x4

8

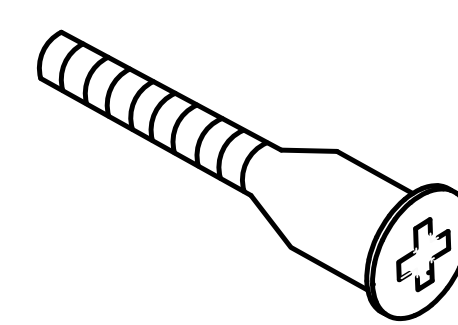


x2

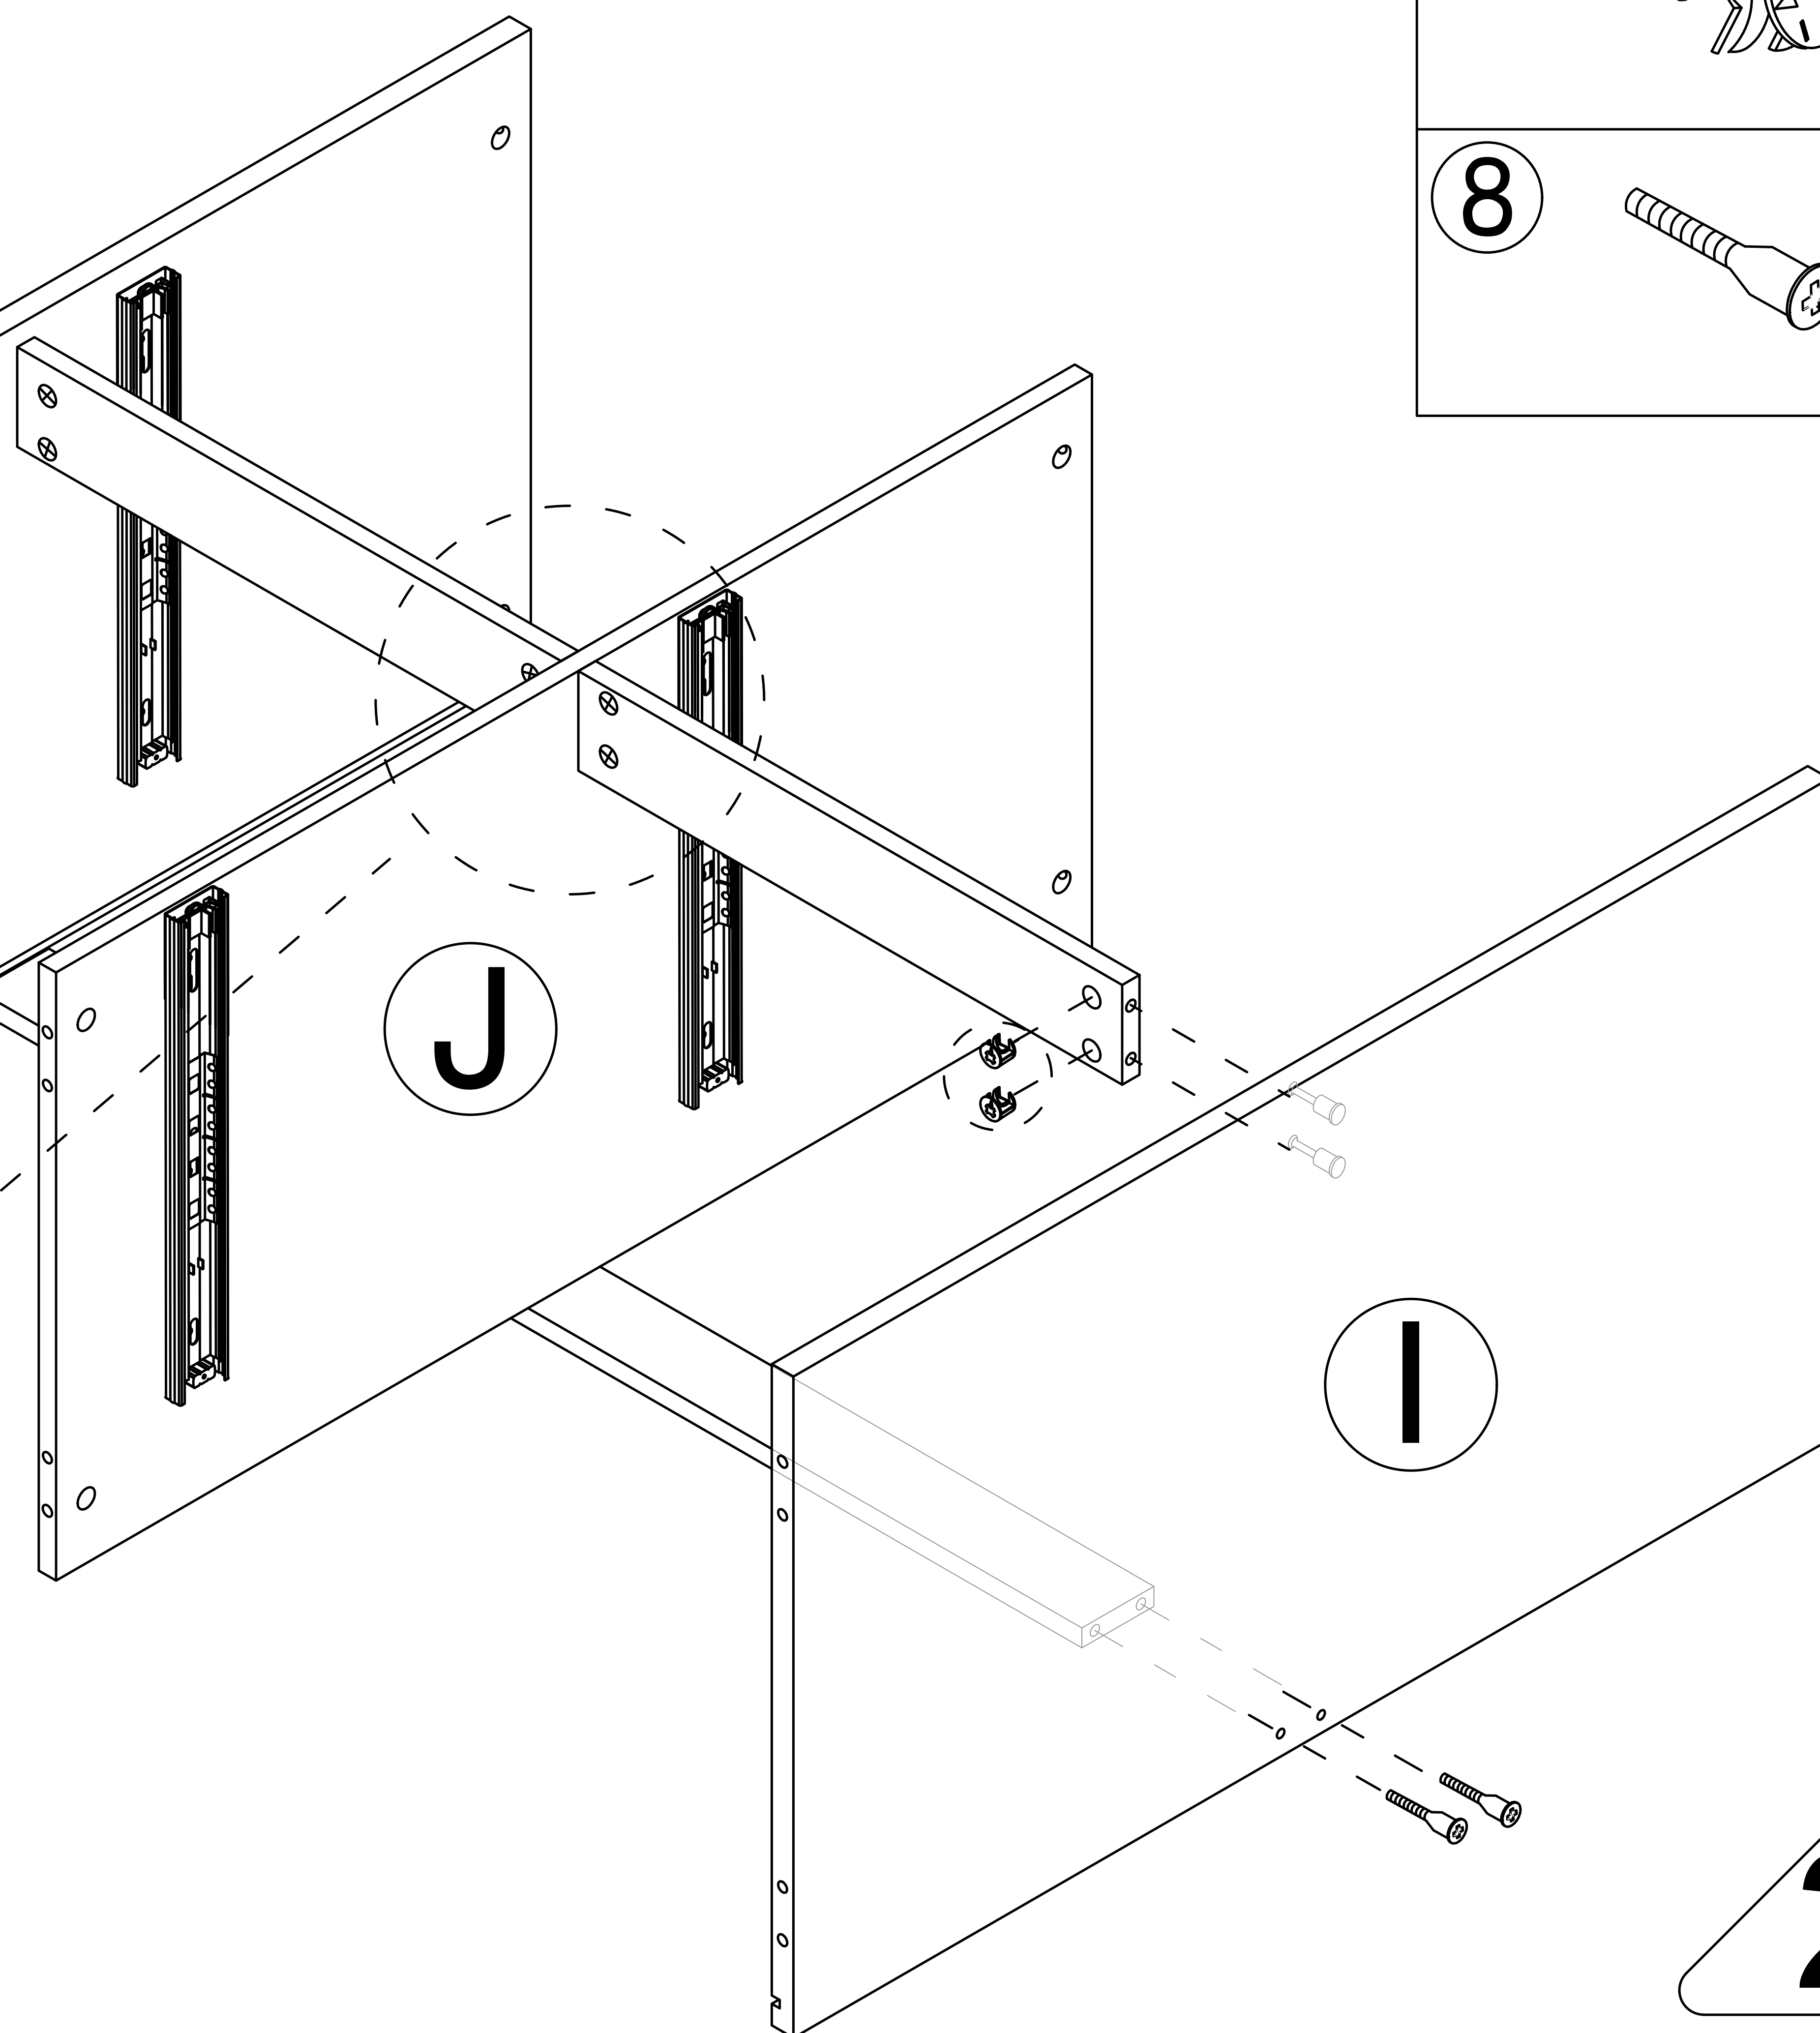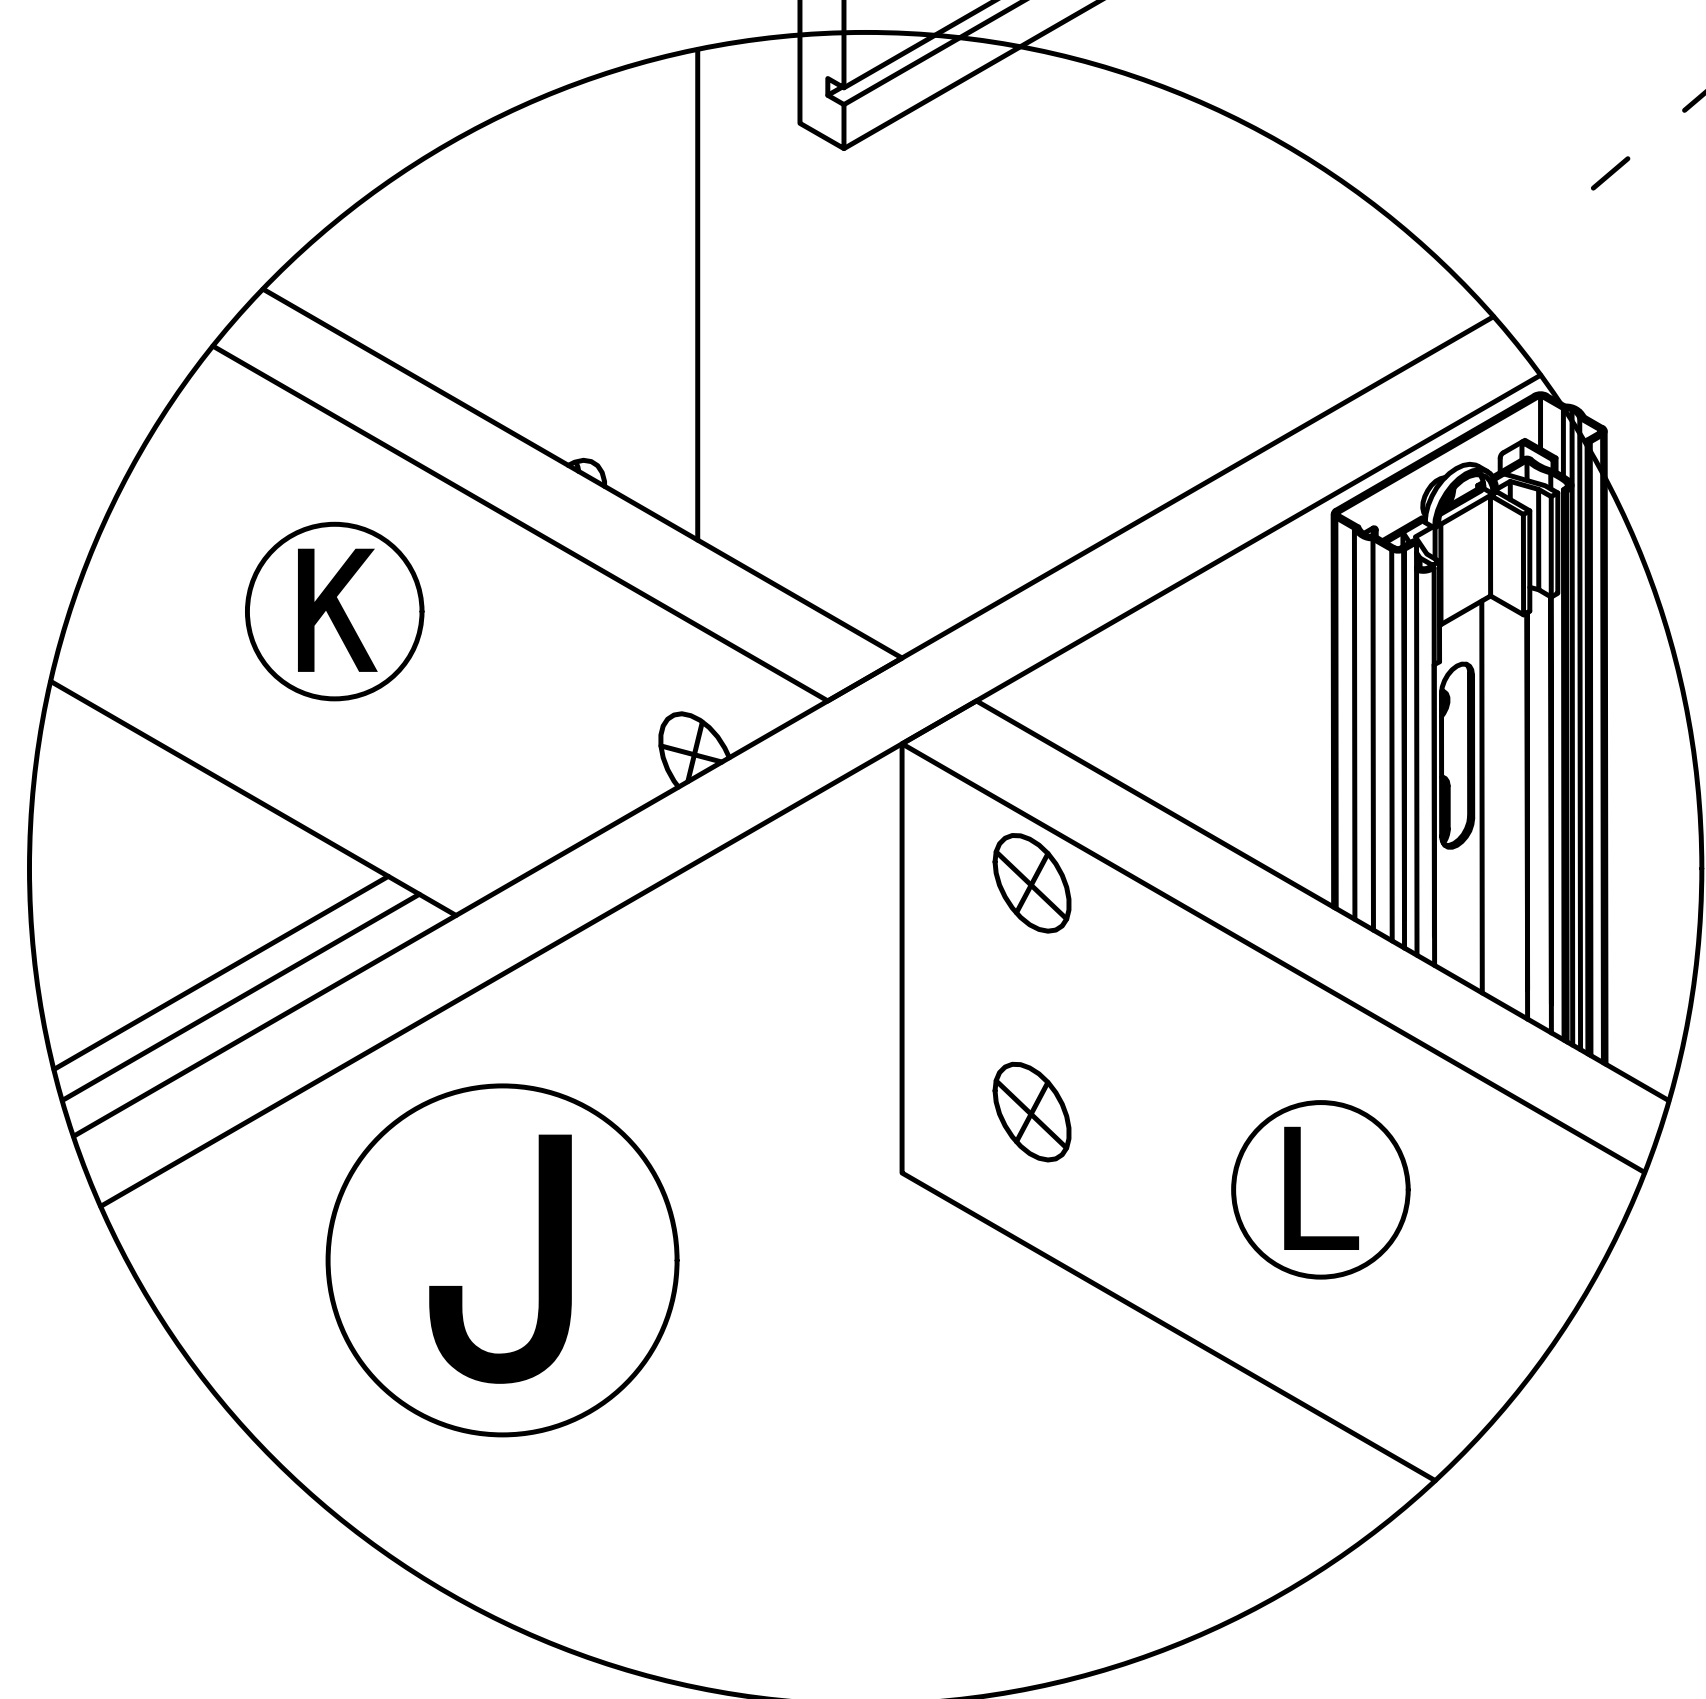


Step 29

3

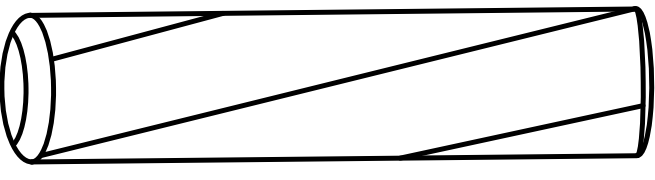


x6

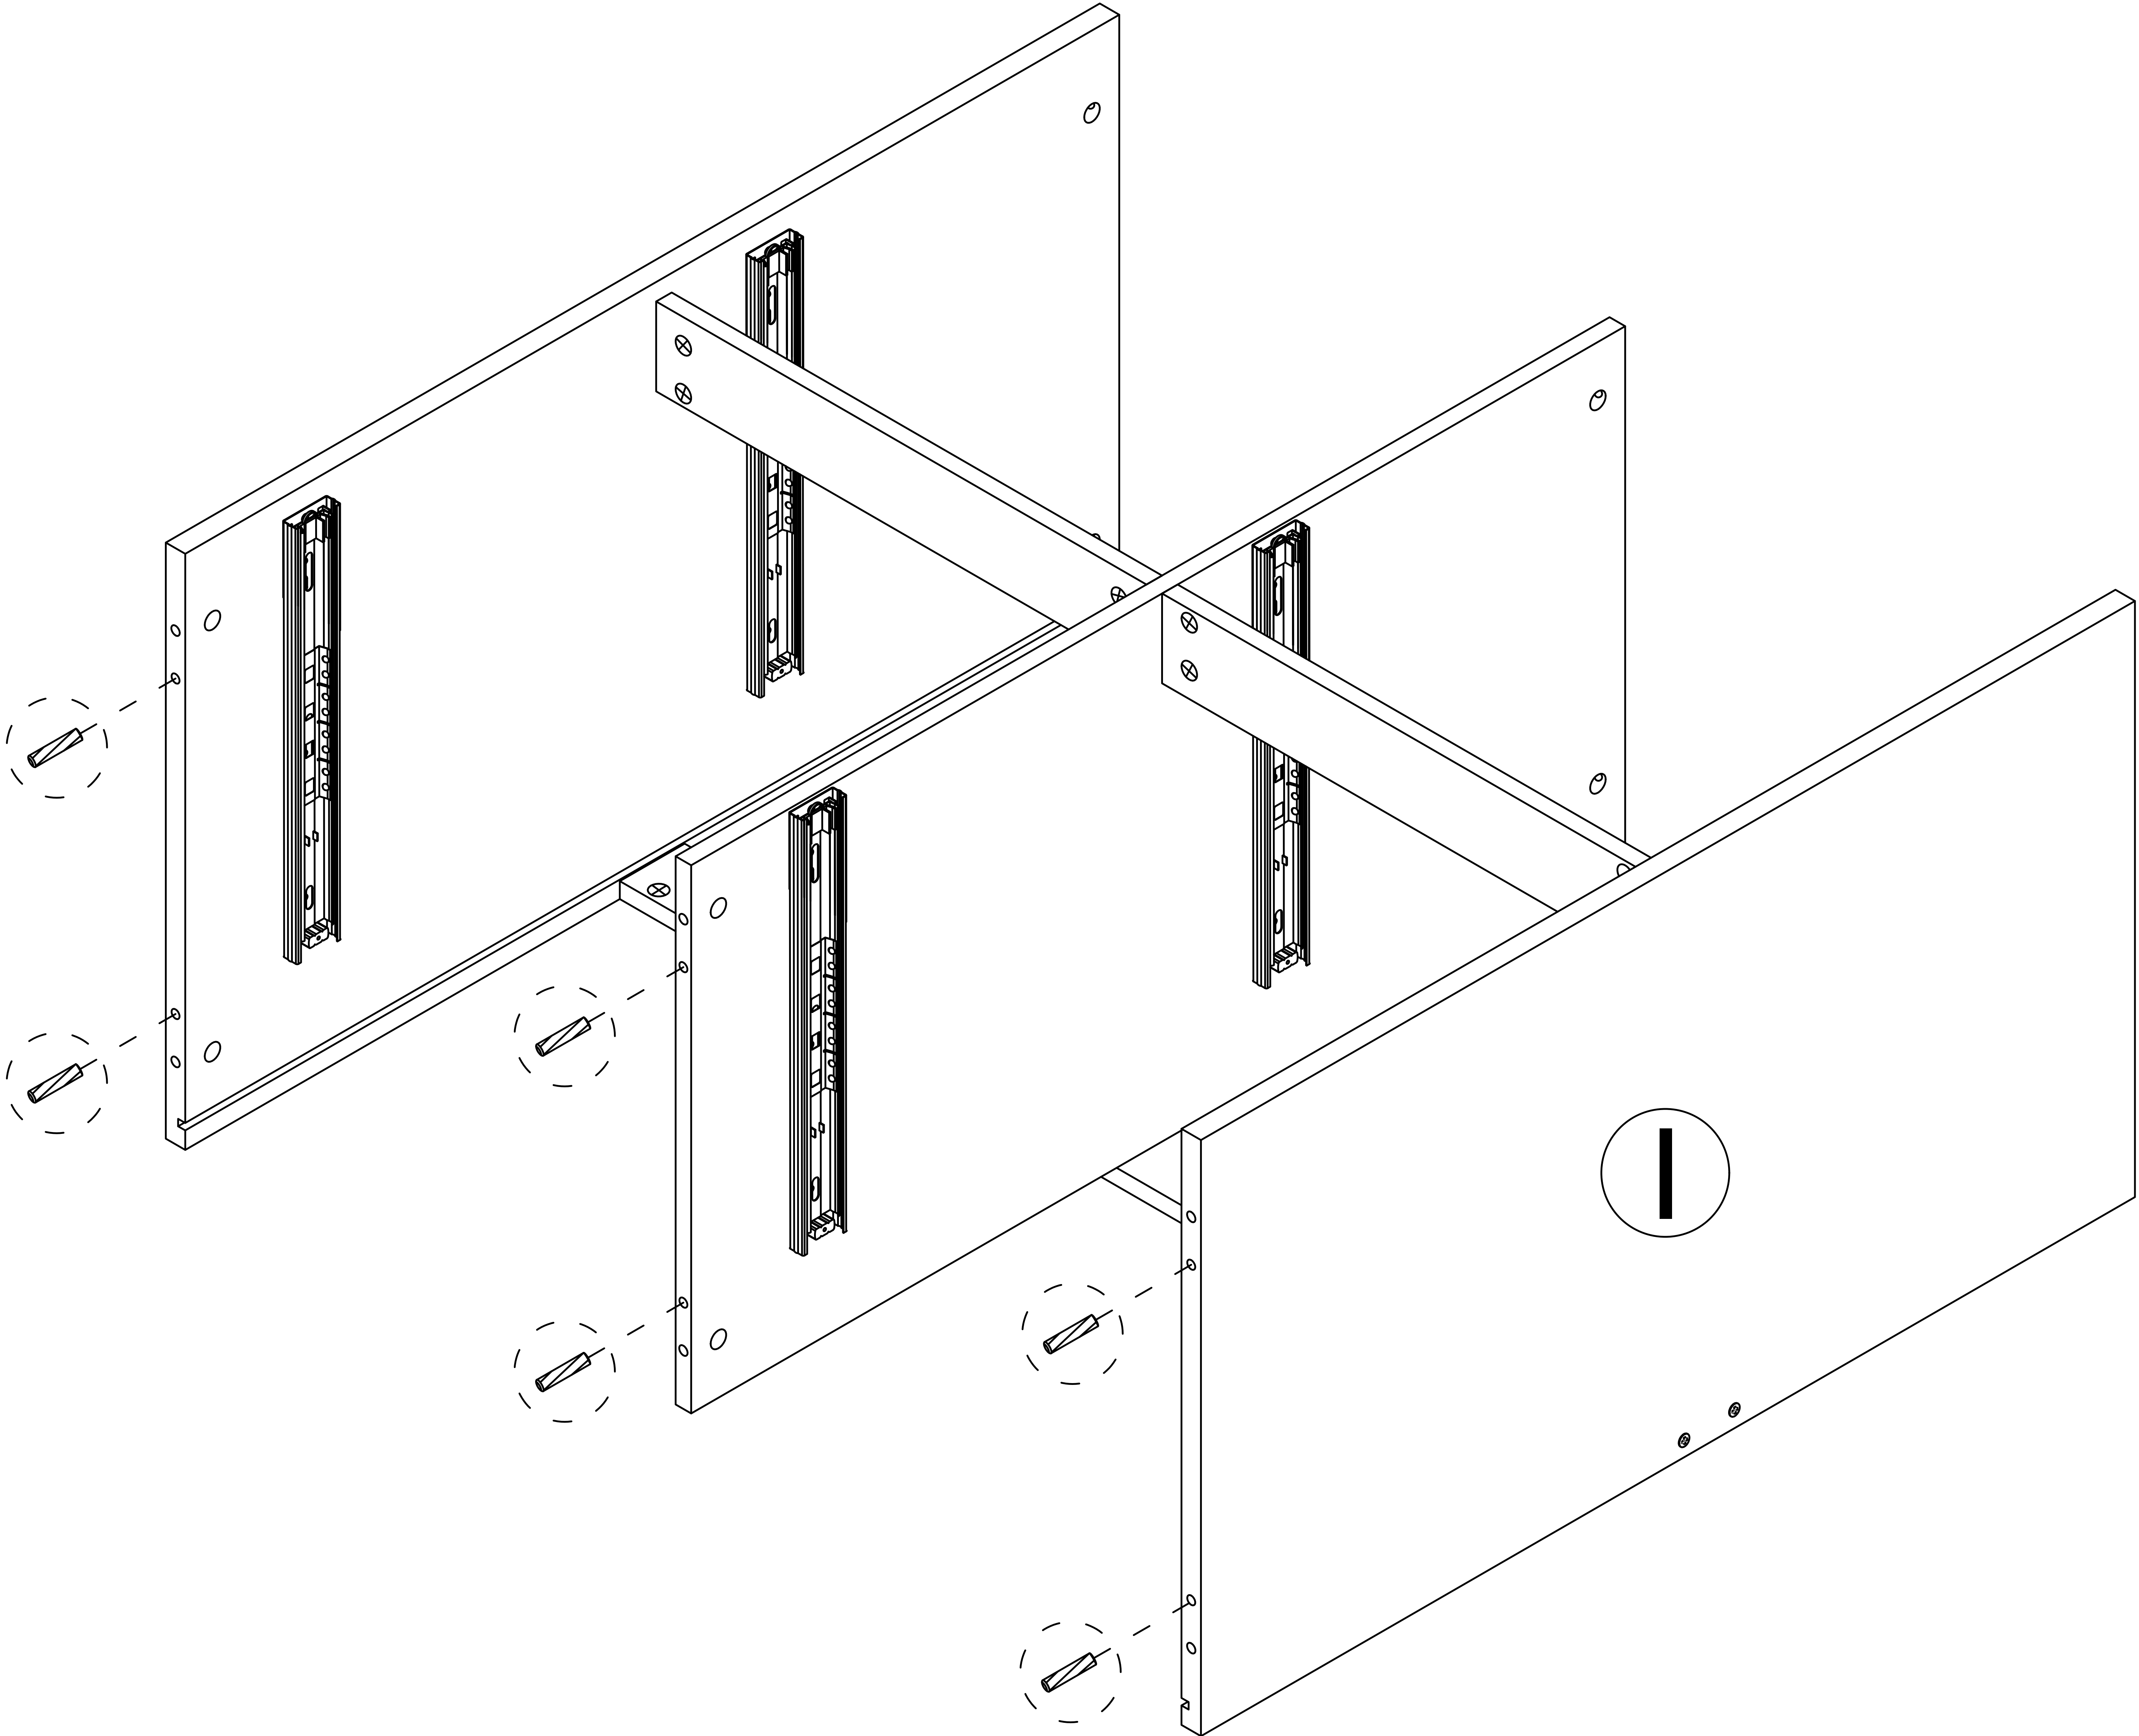


Step 30

2

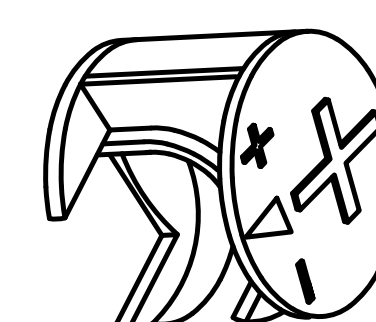



x6

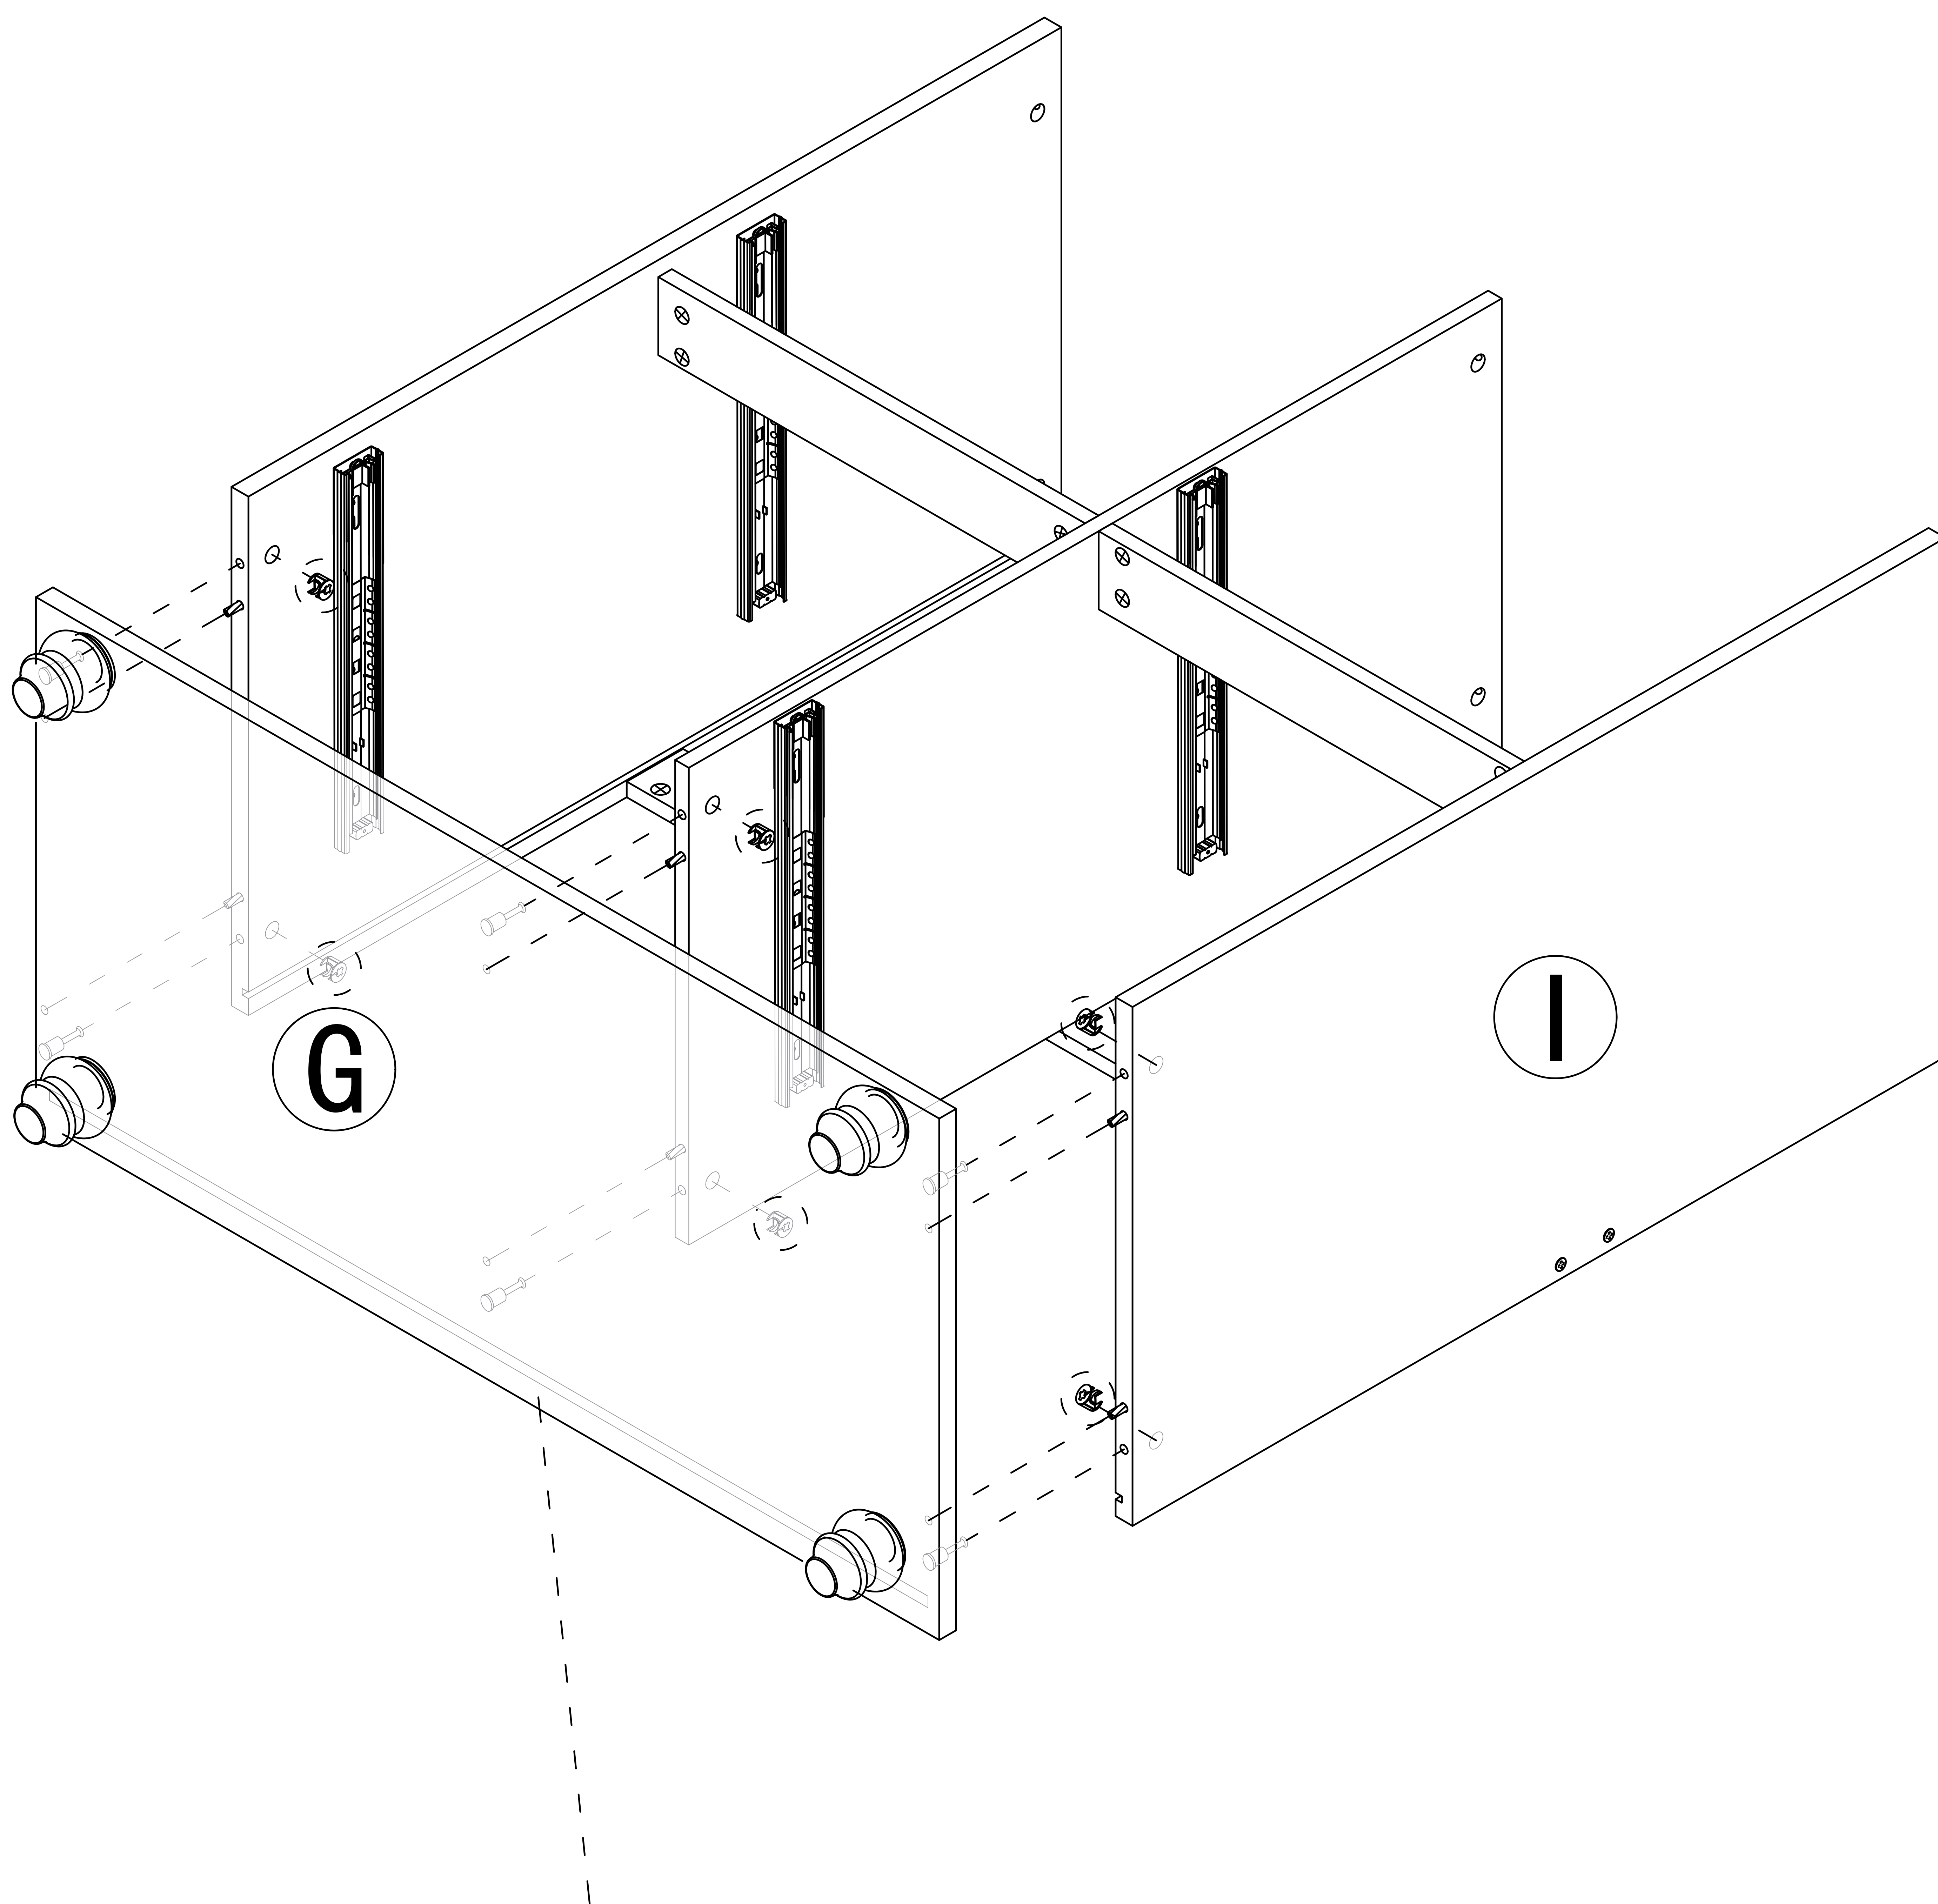

When installing the G board, pay attention to align the slot.


Step 31

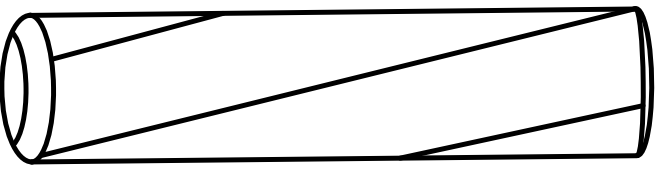
3  x6

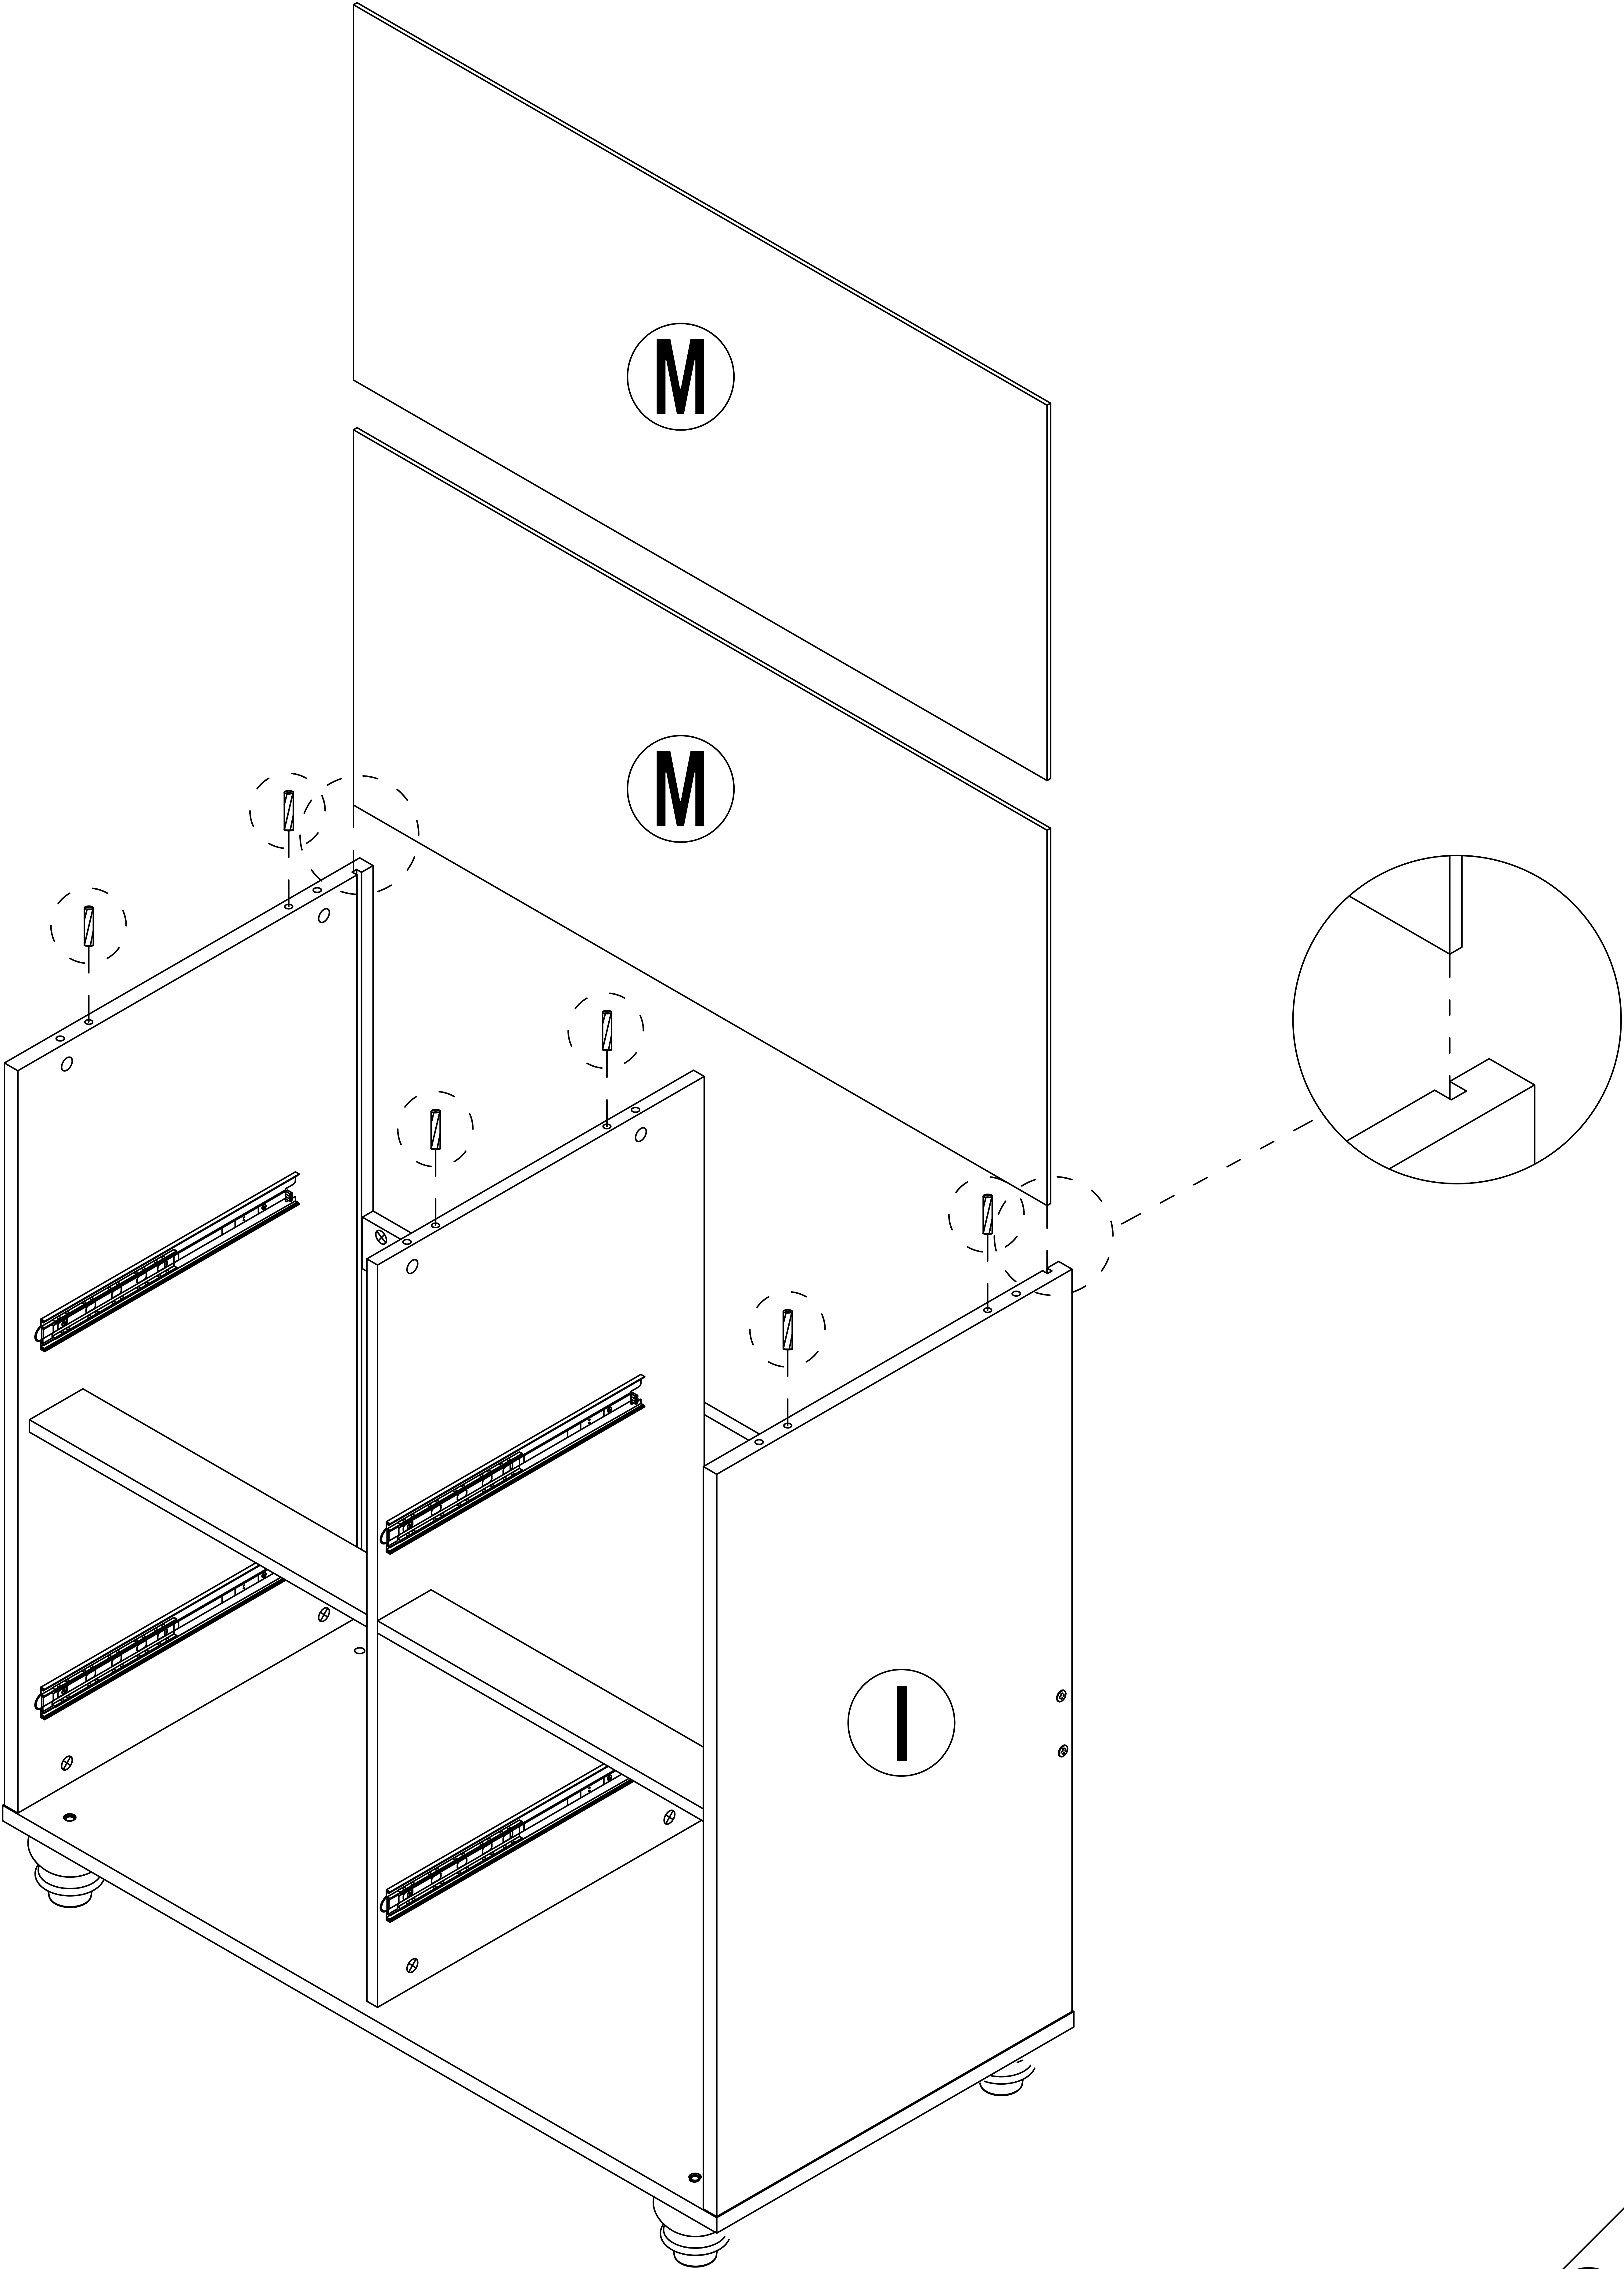

Step 32


1

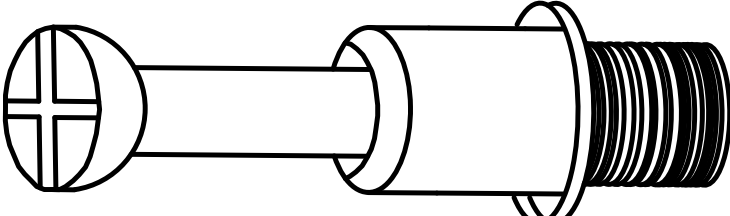
x6

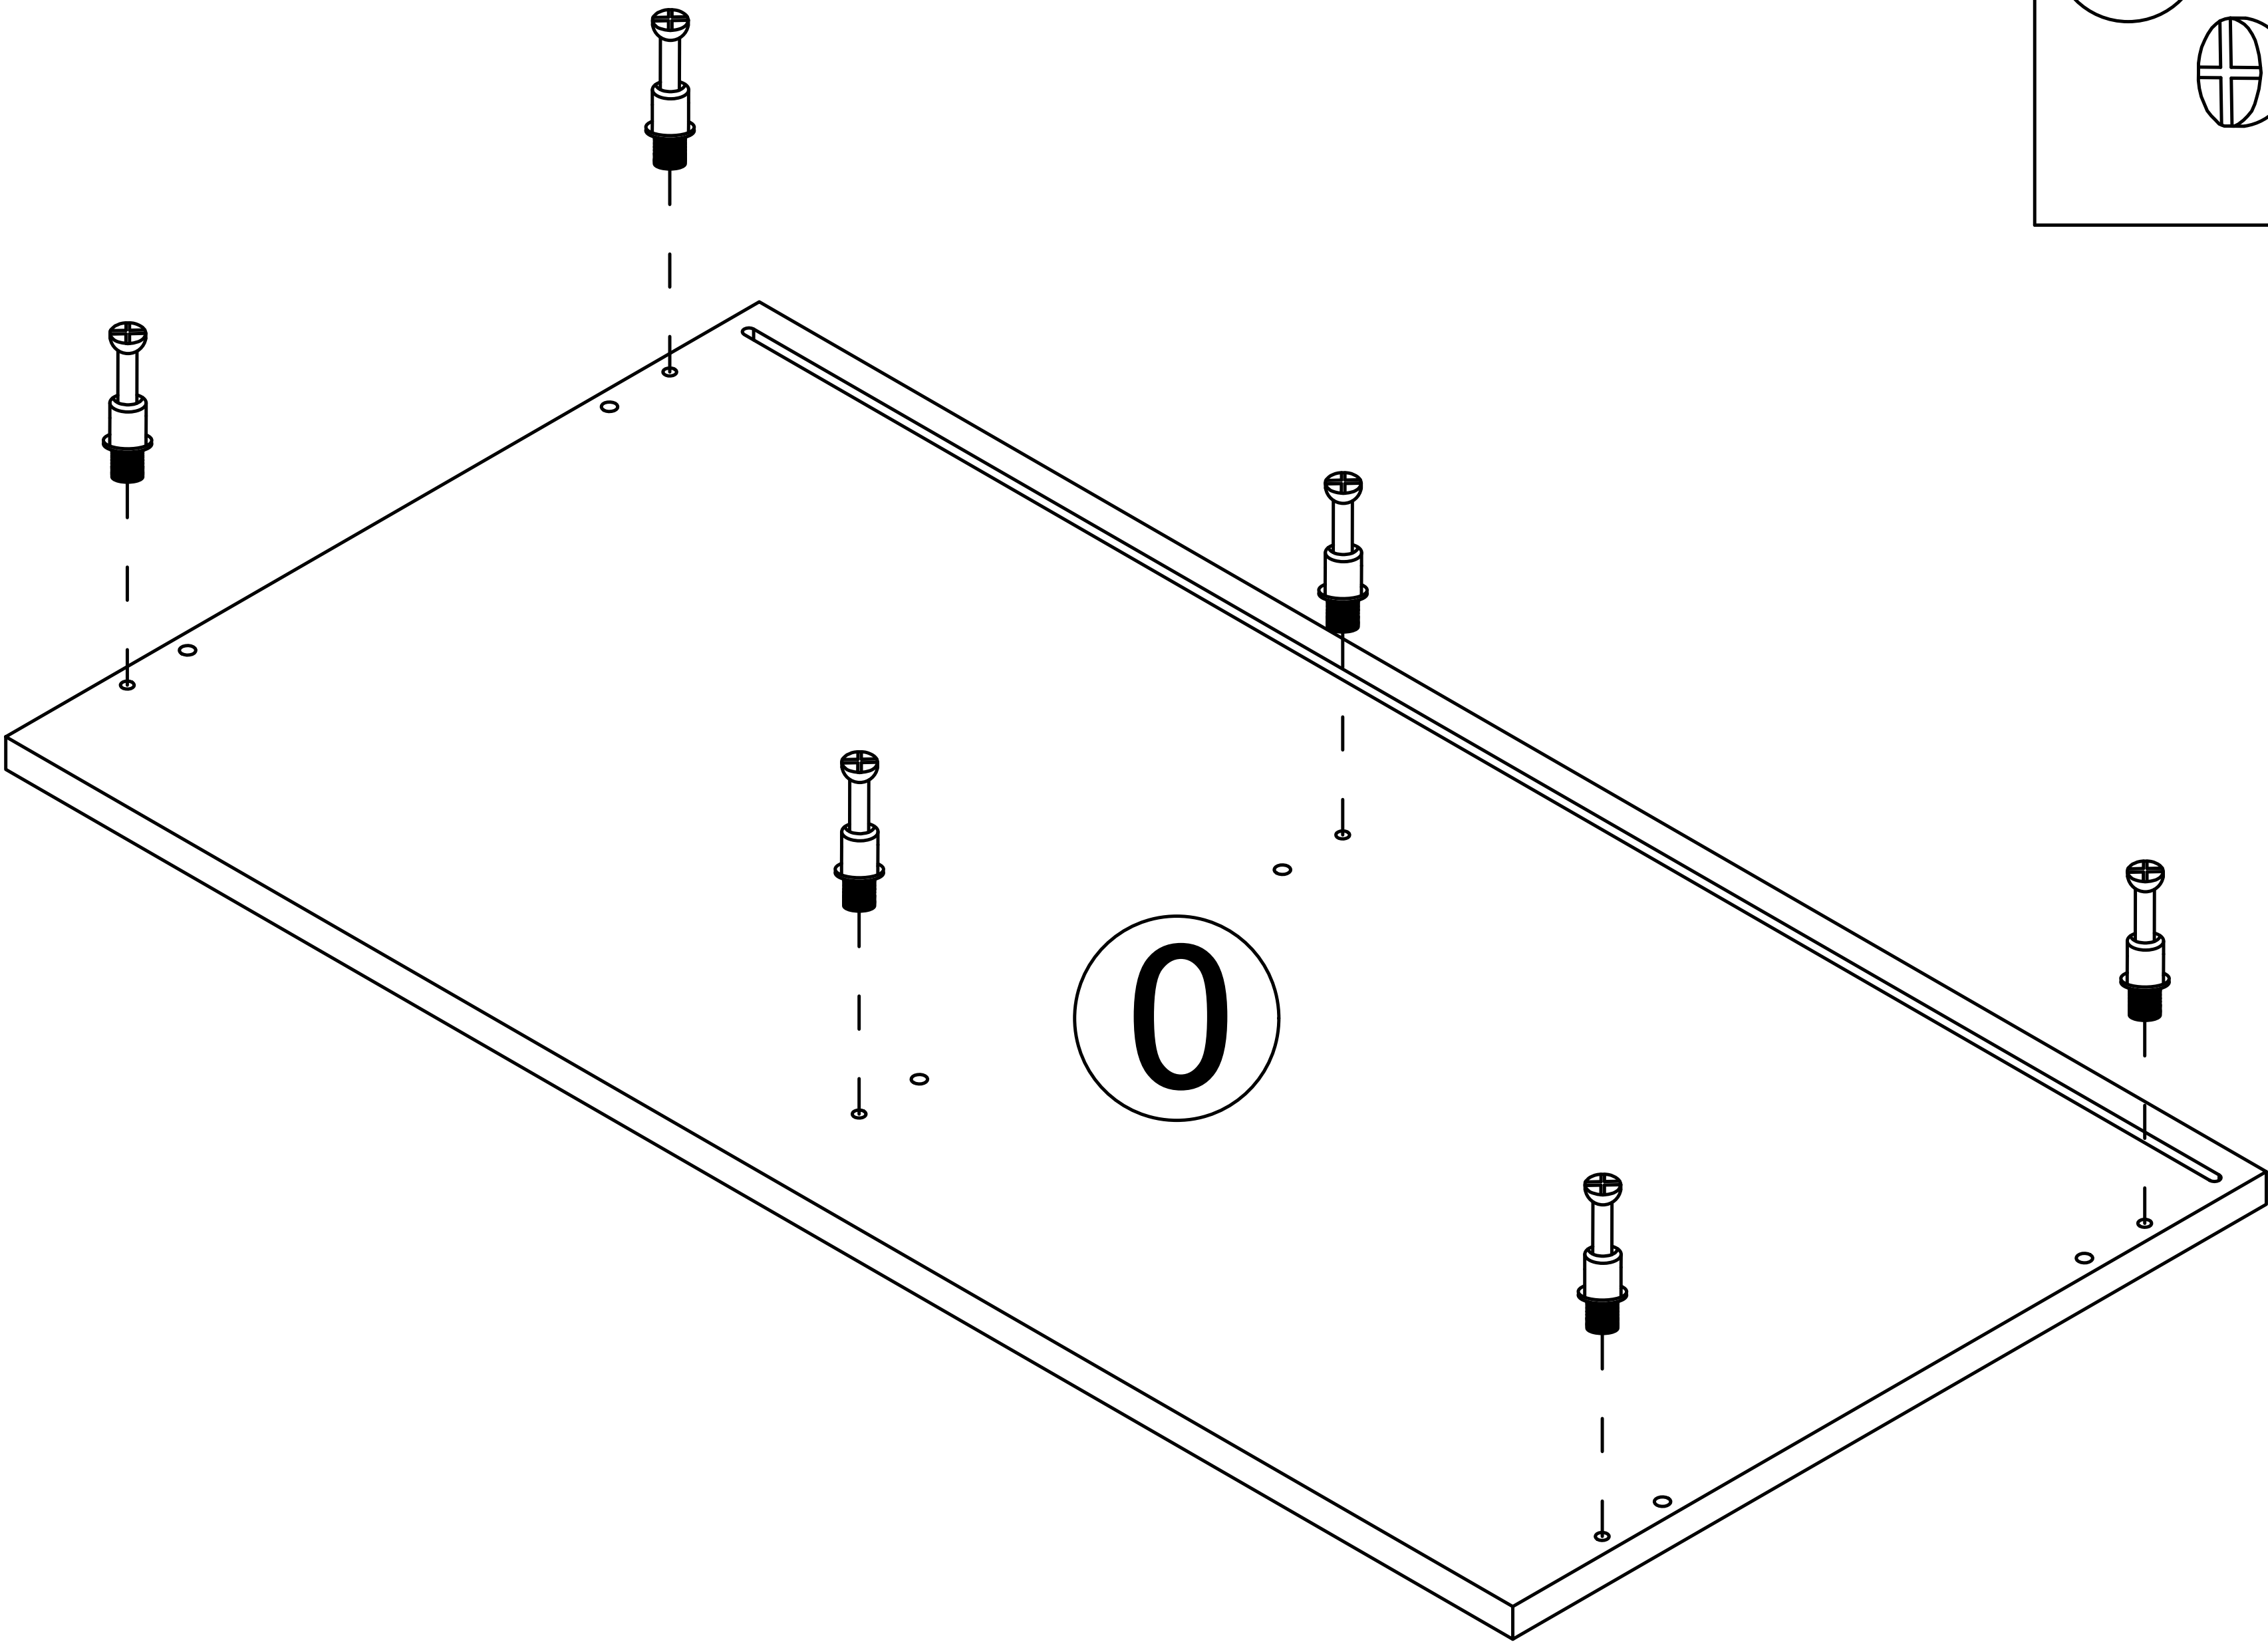


Step 33

2

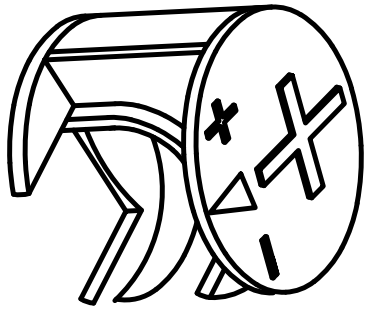x6

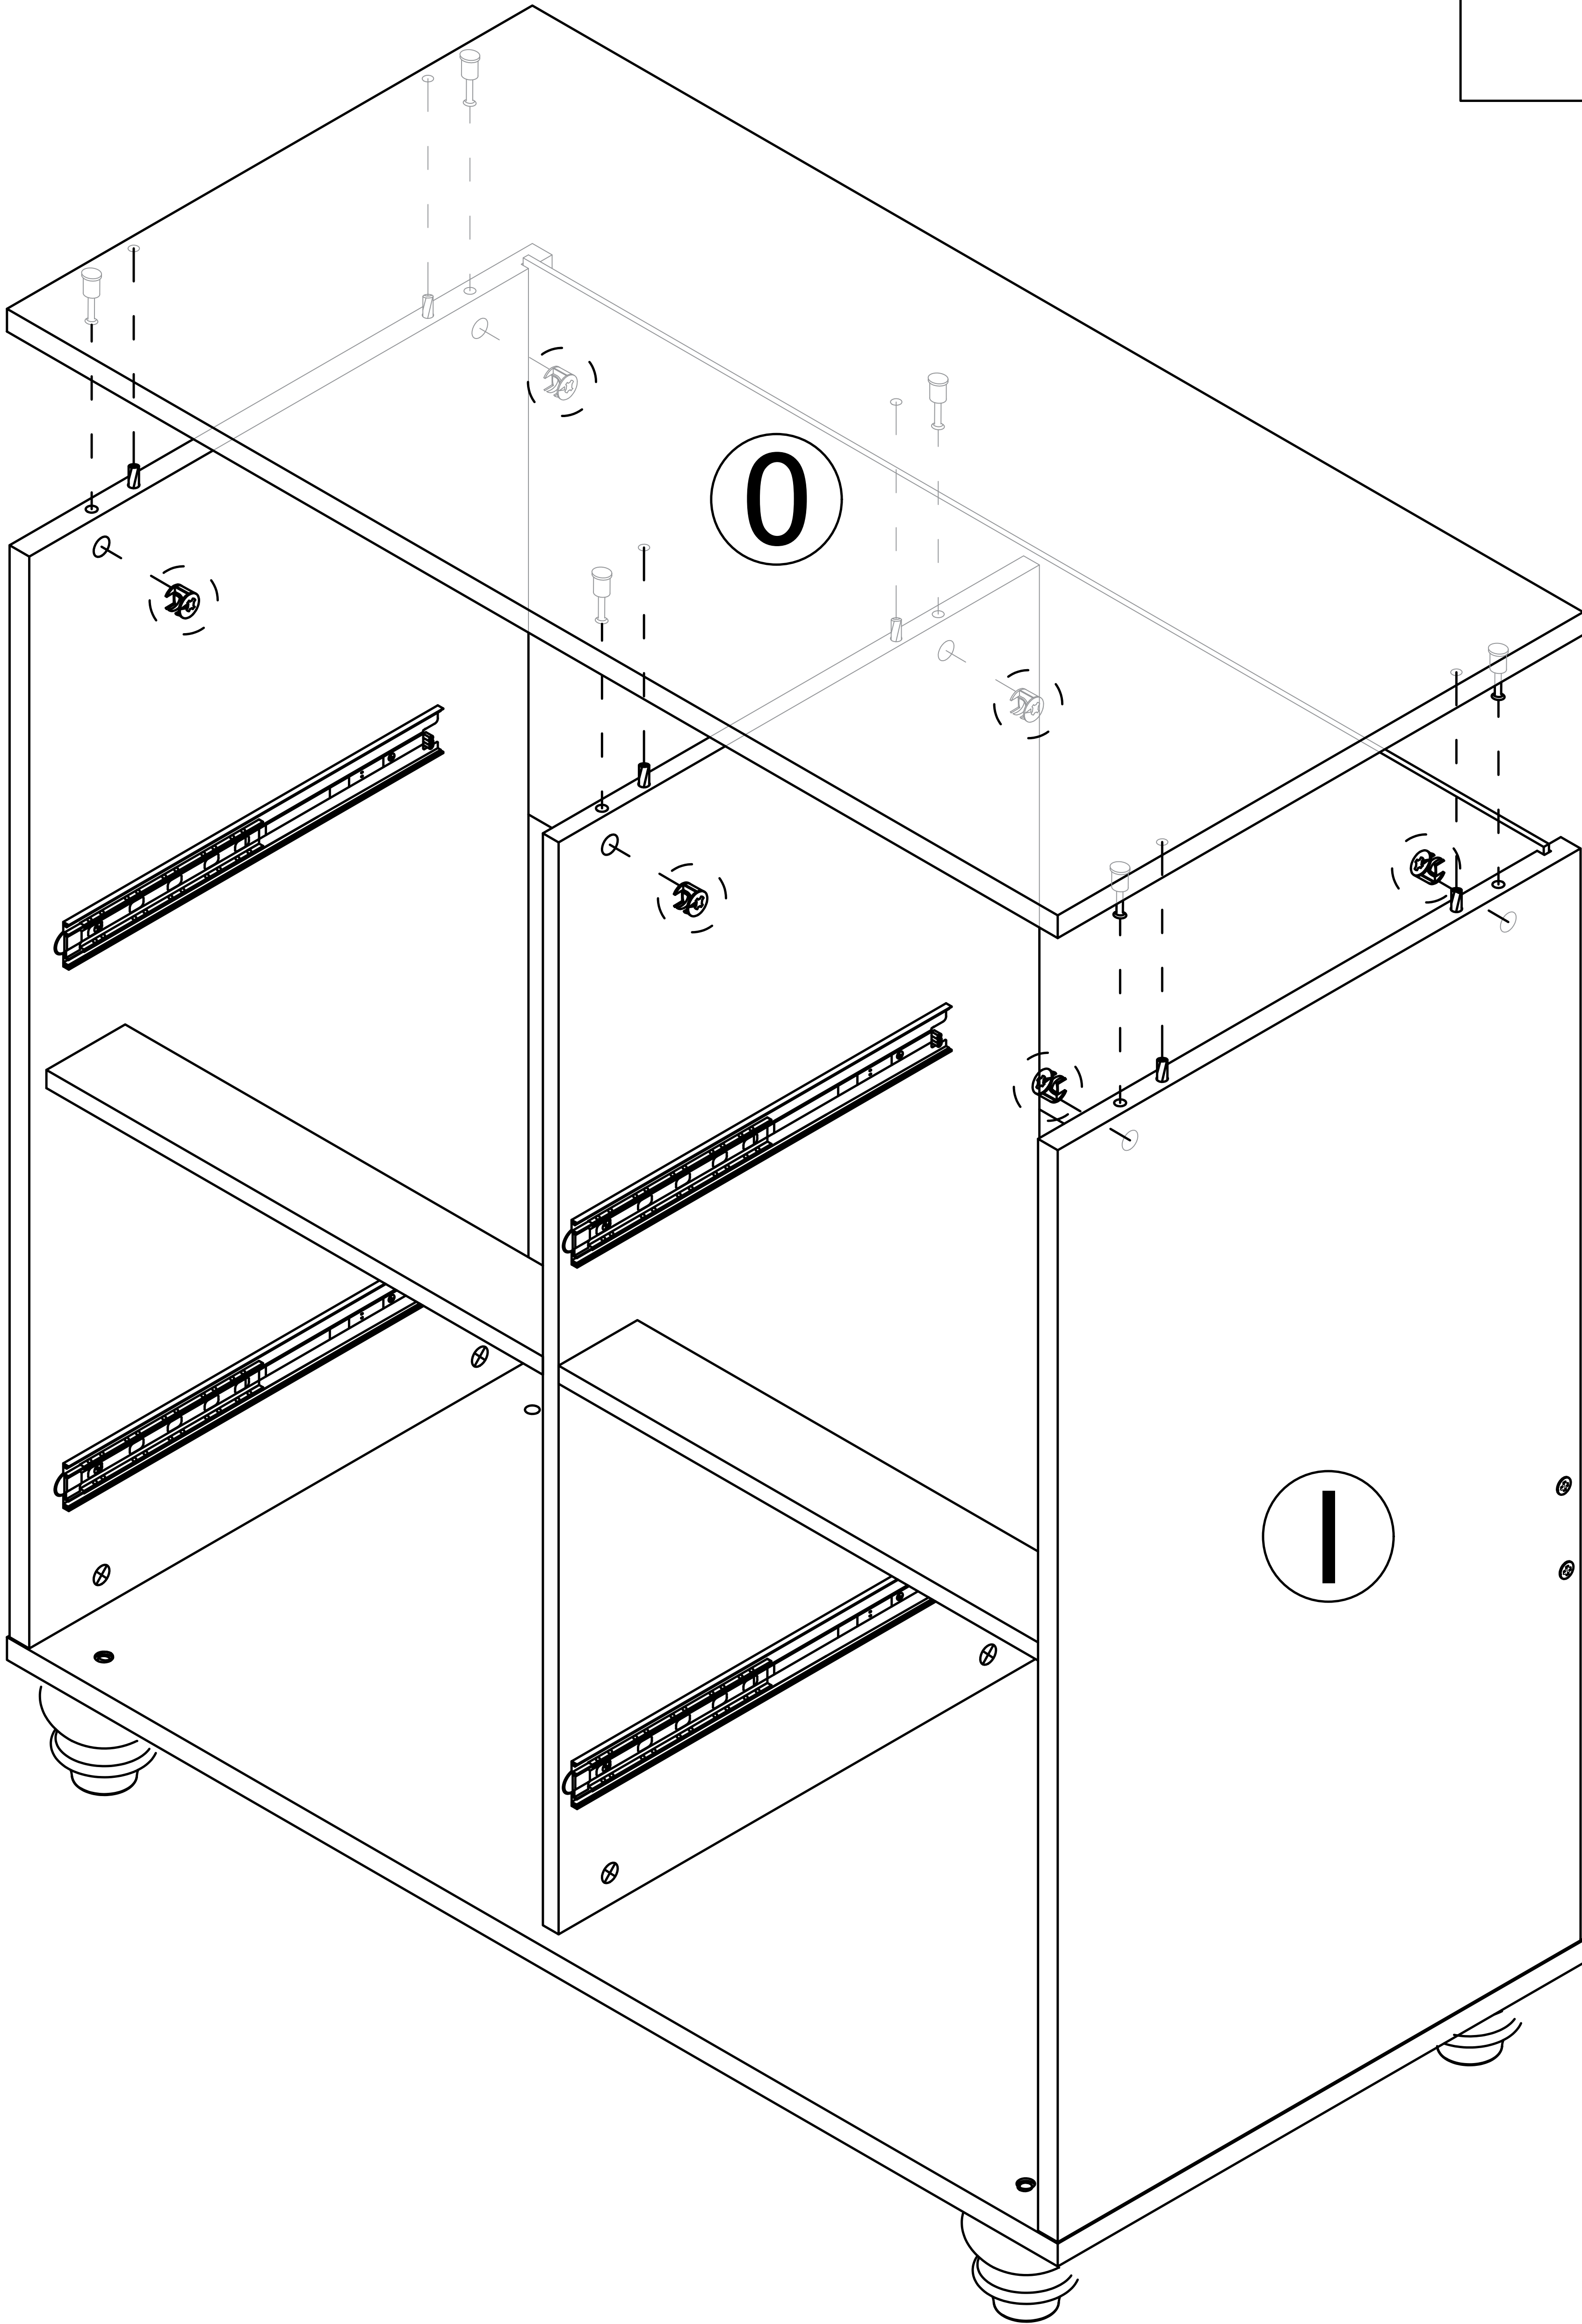


Step 34

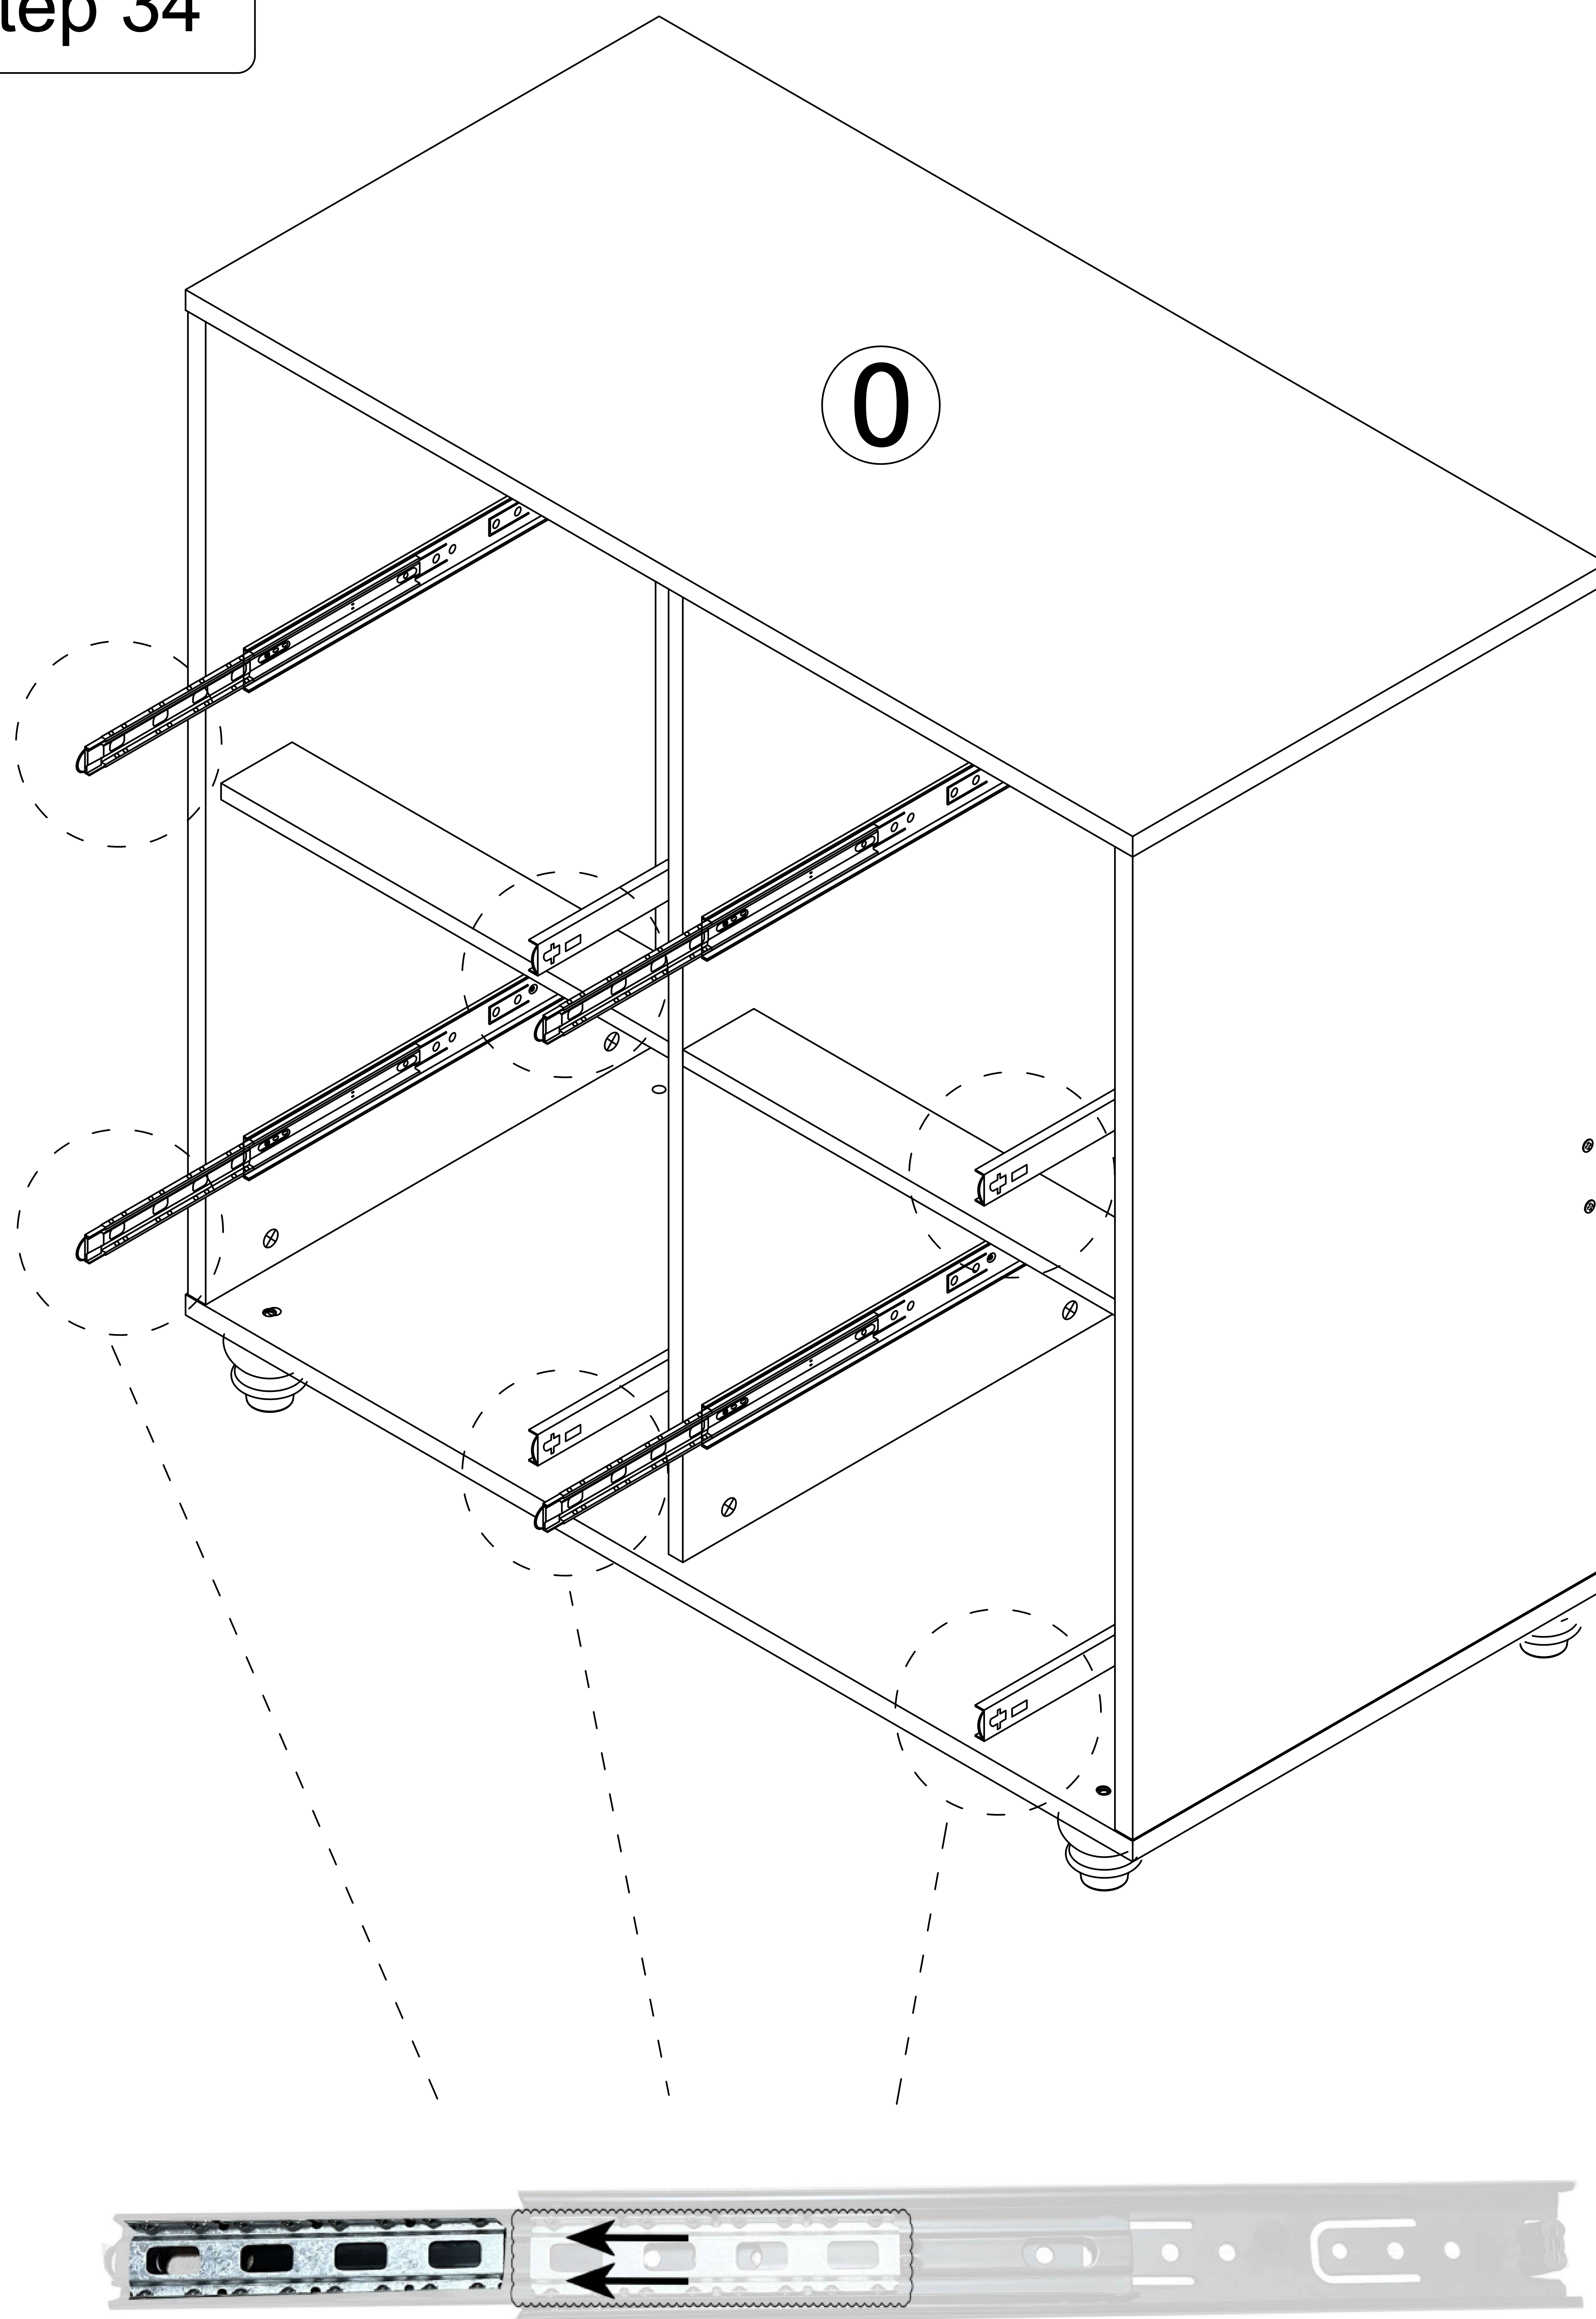


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 35

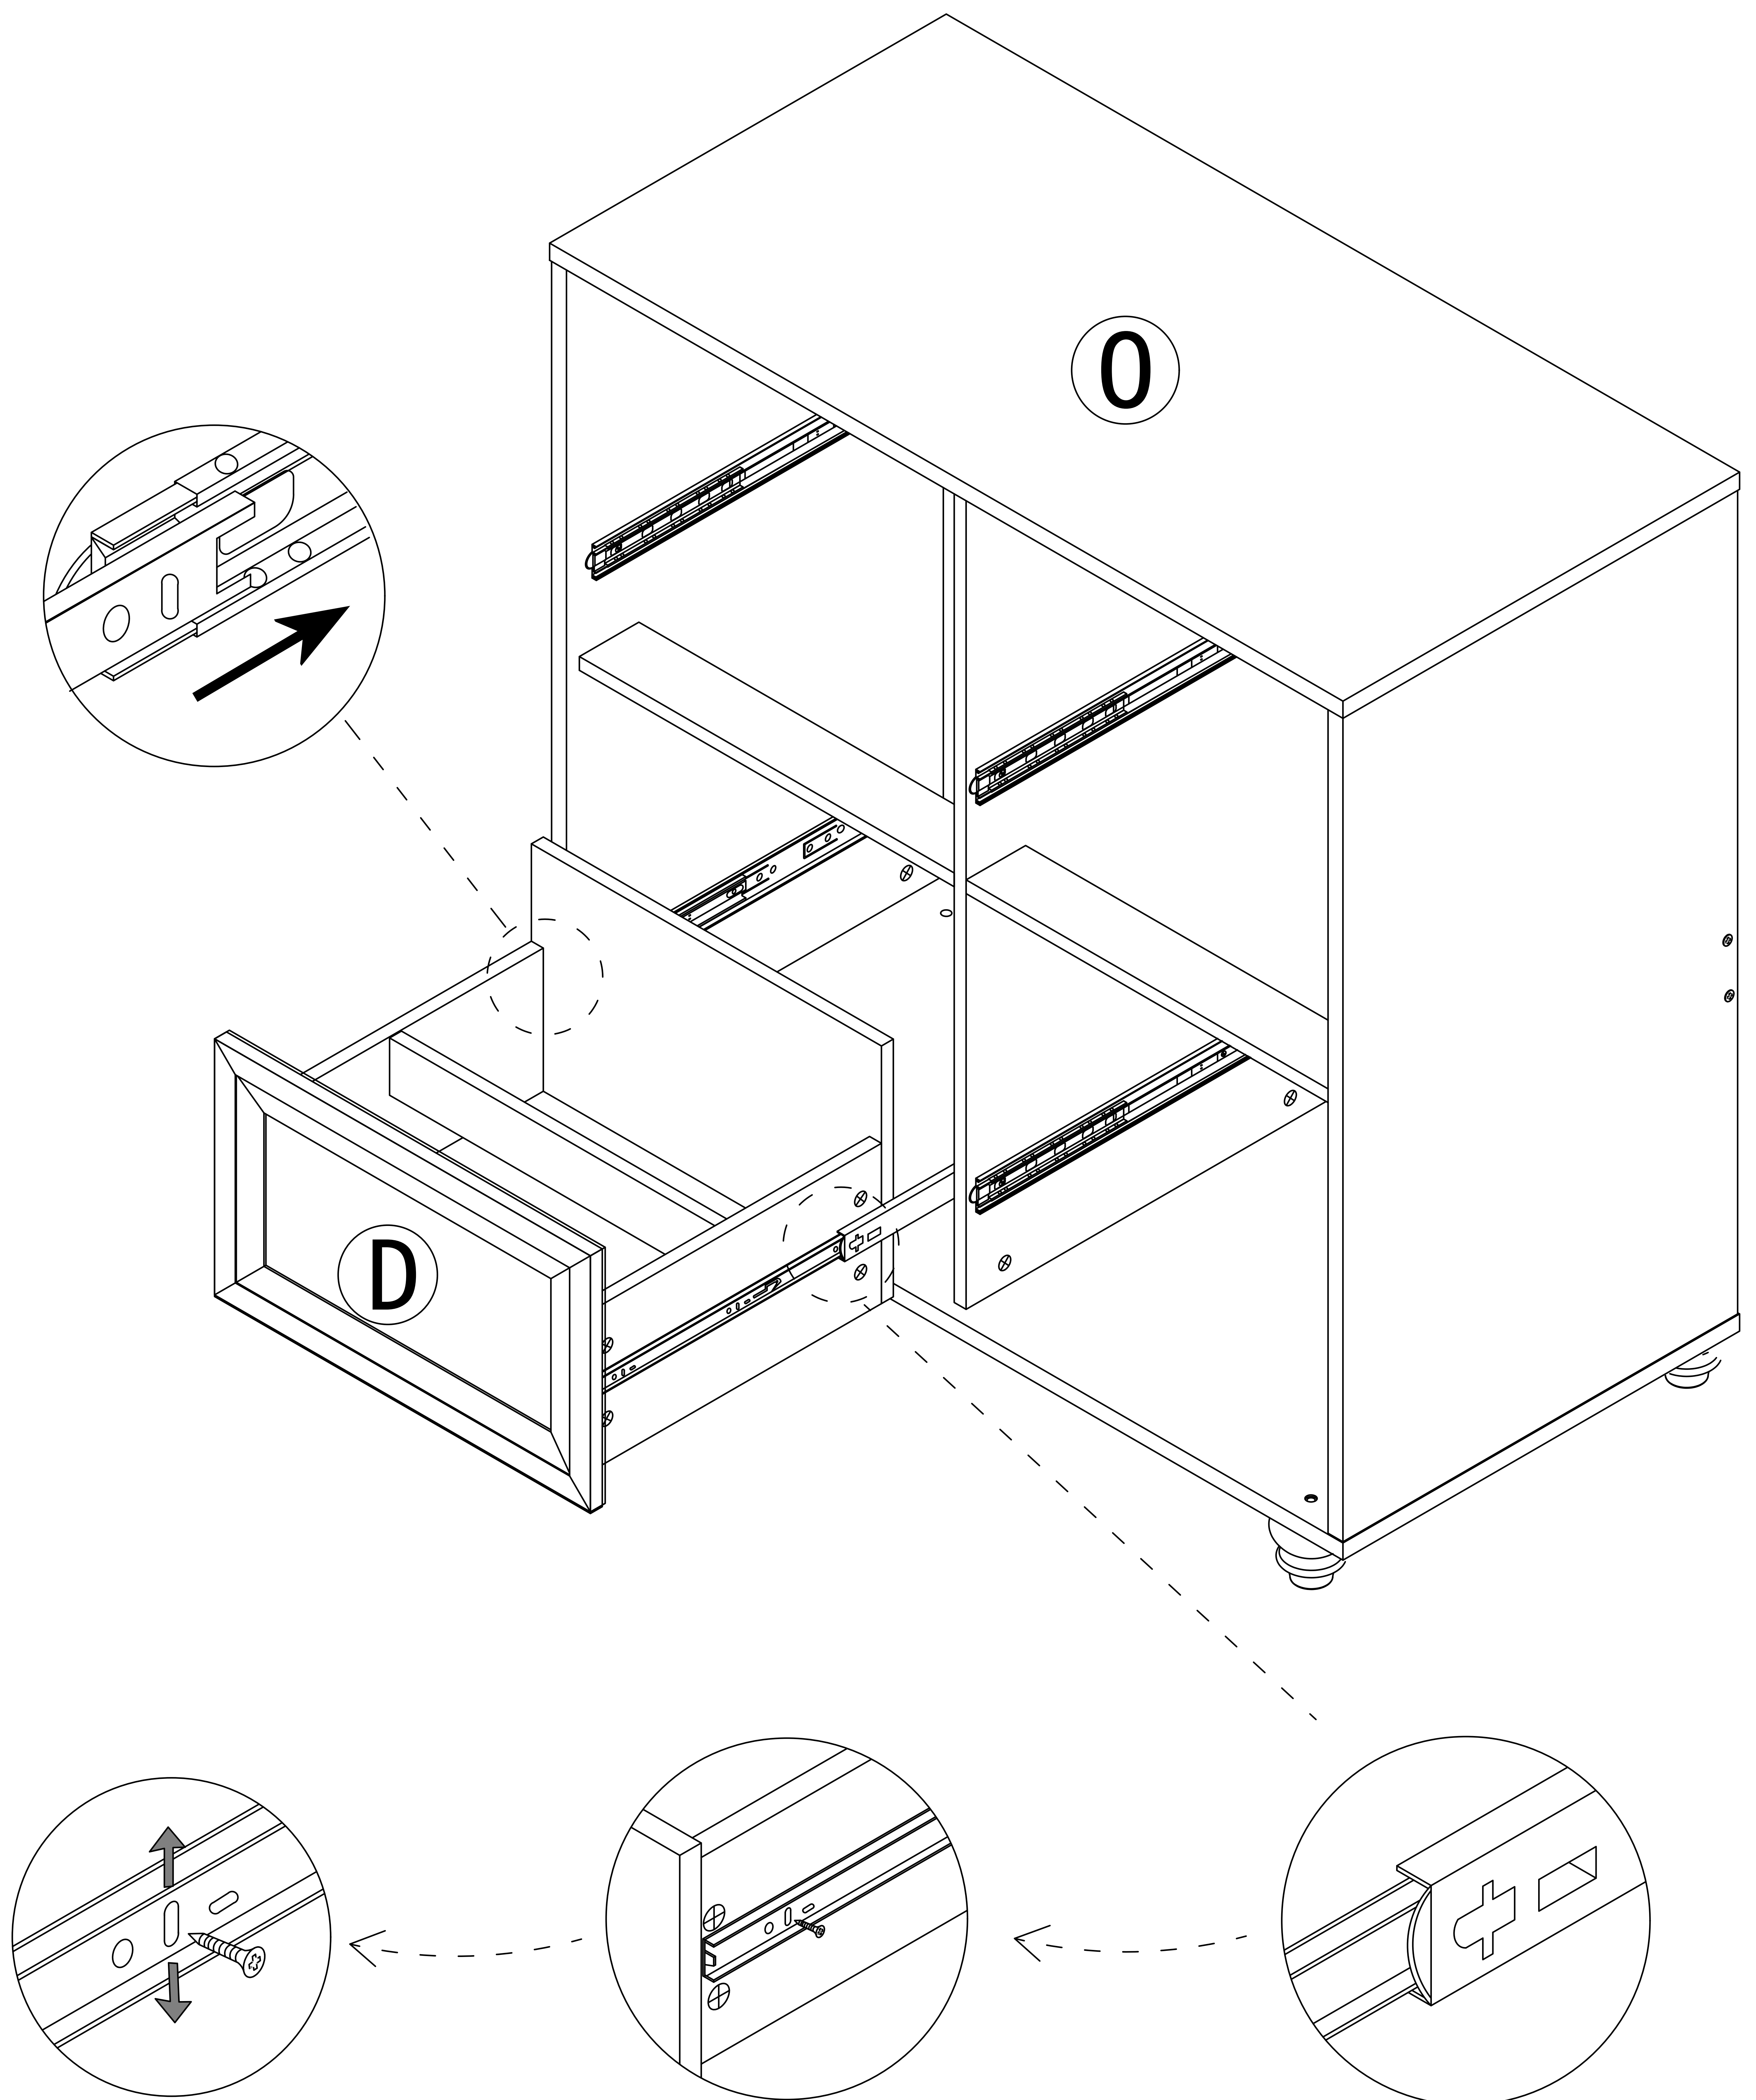

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 36

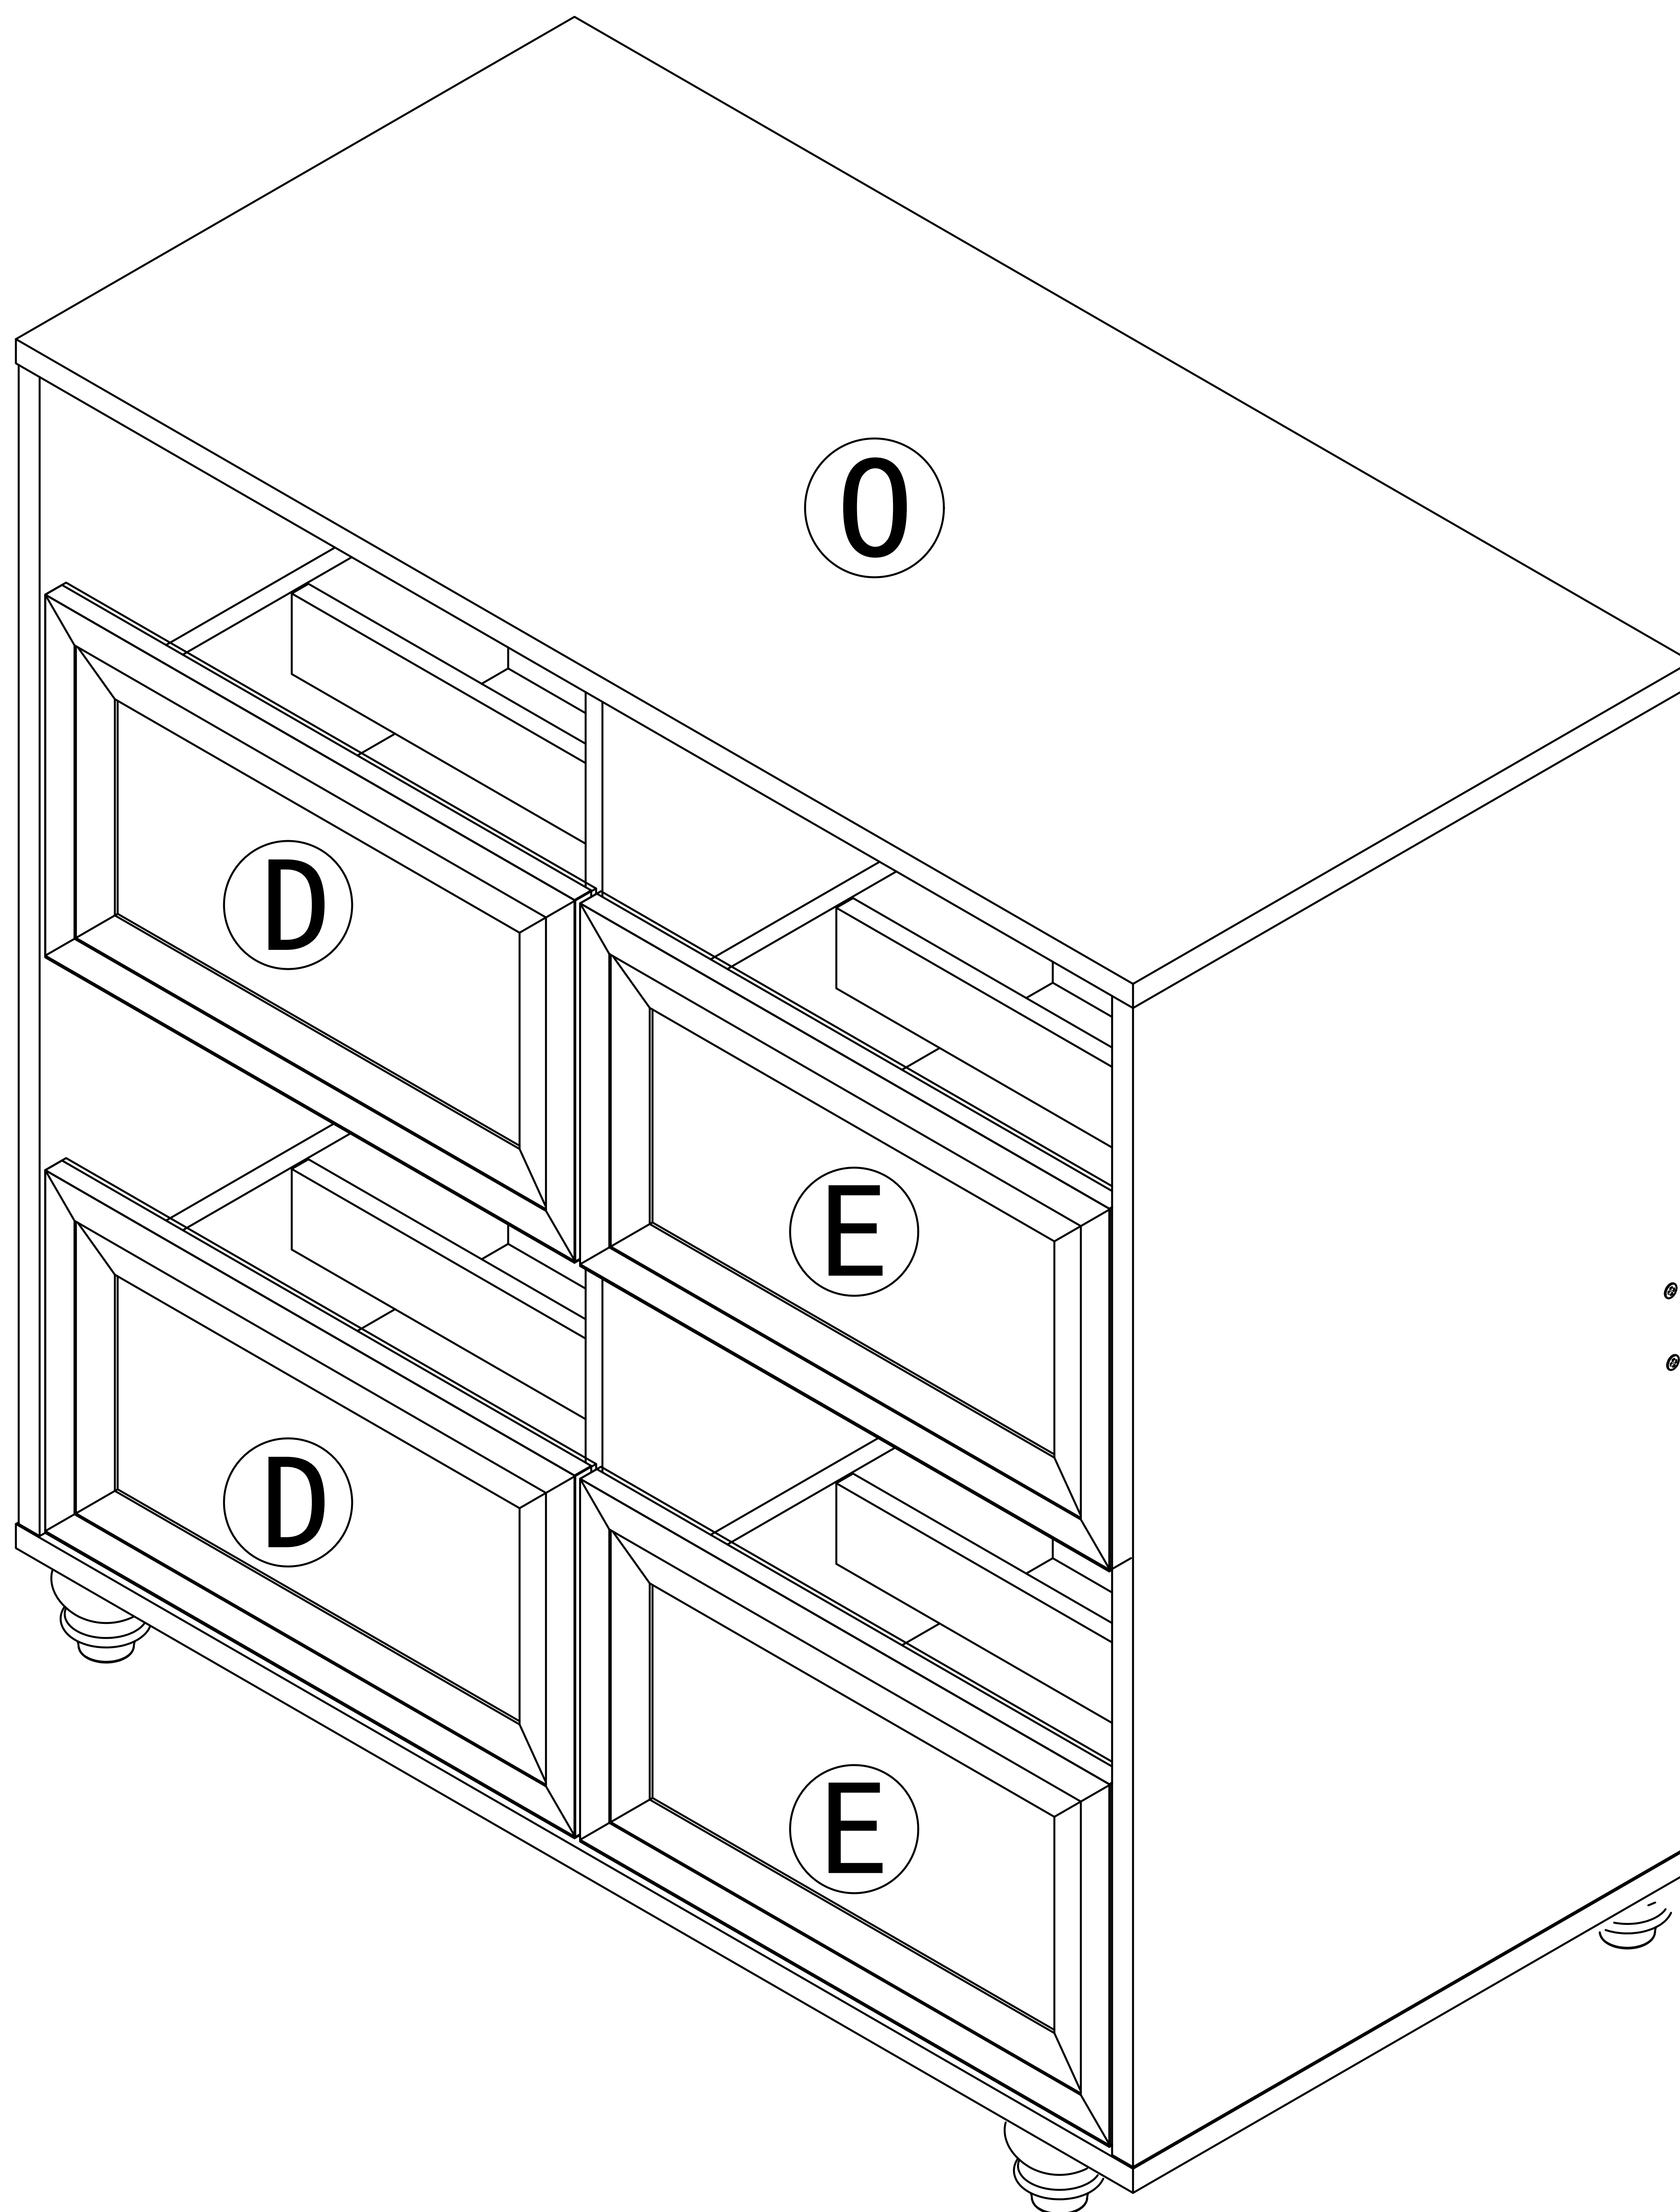


Repeat the drawer installation steps

Step 37

6

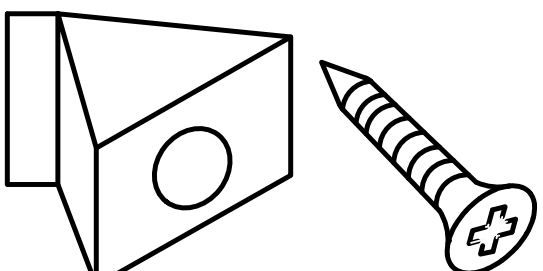
 x8

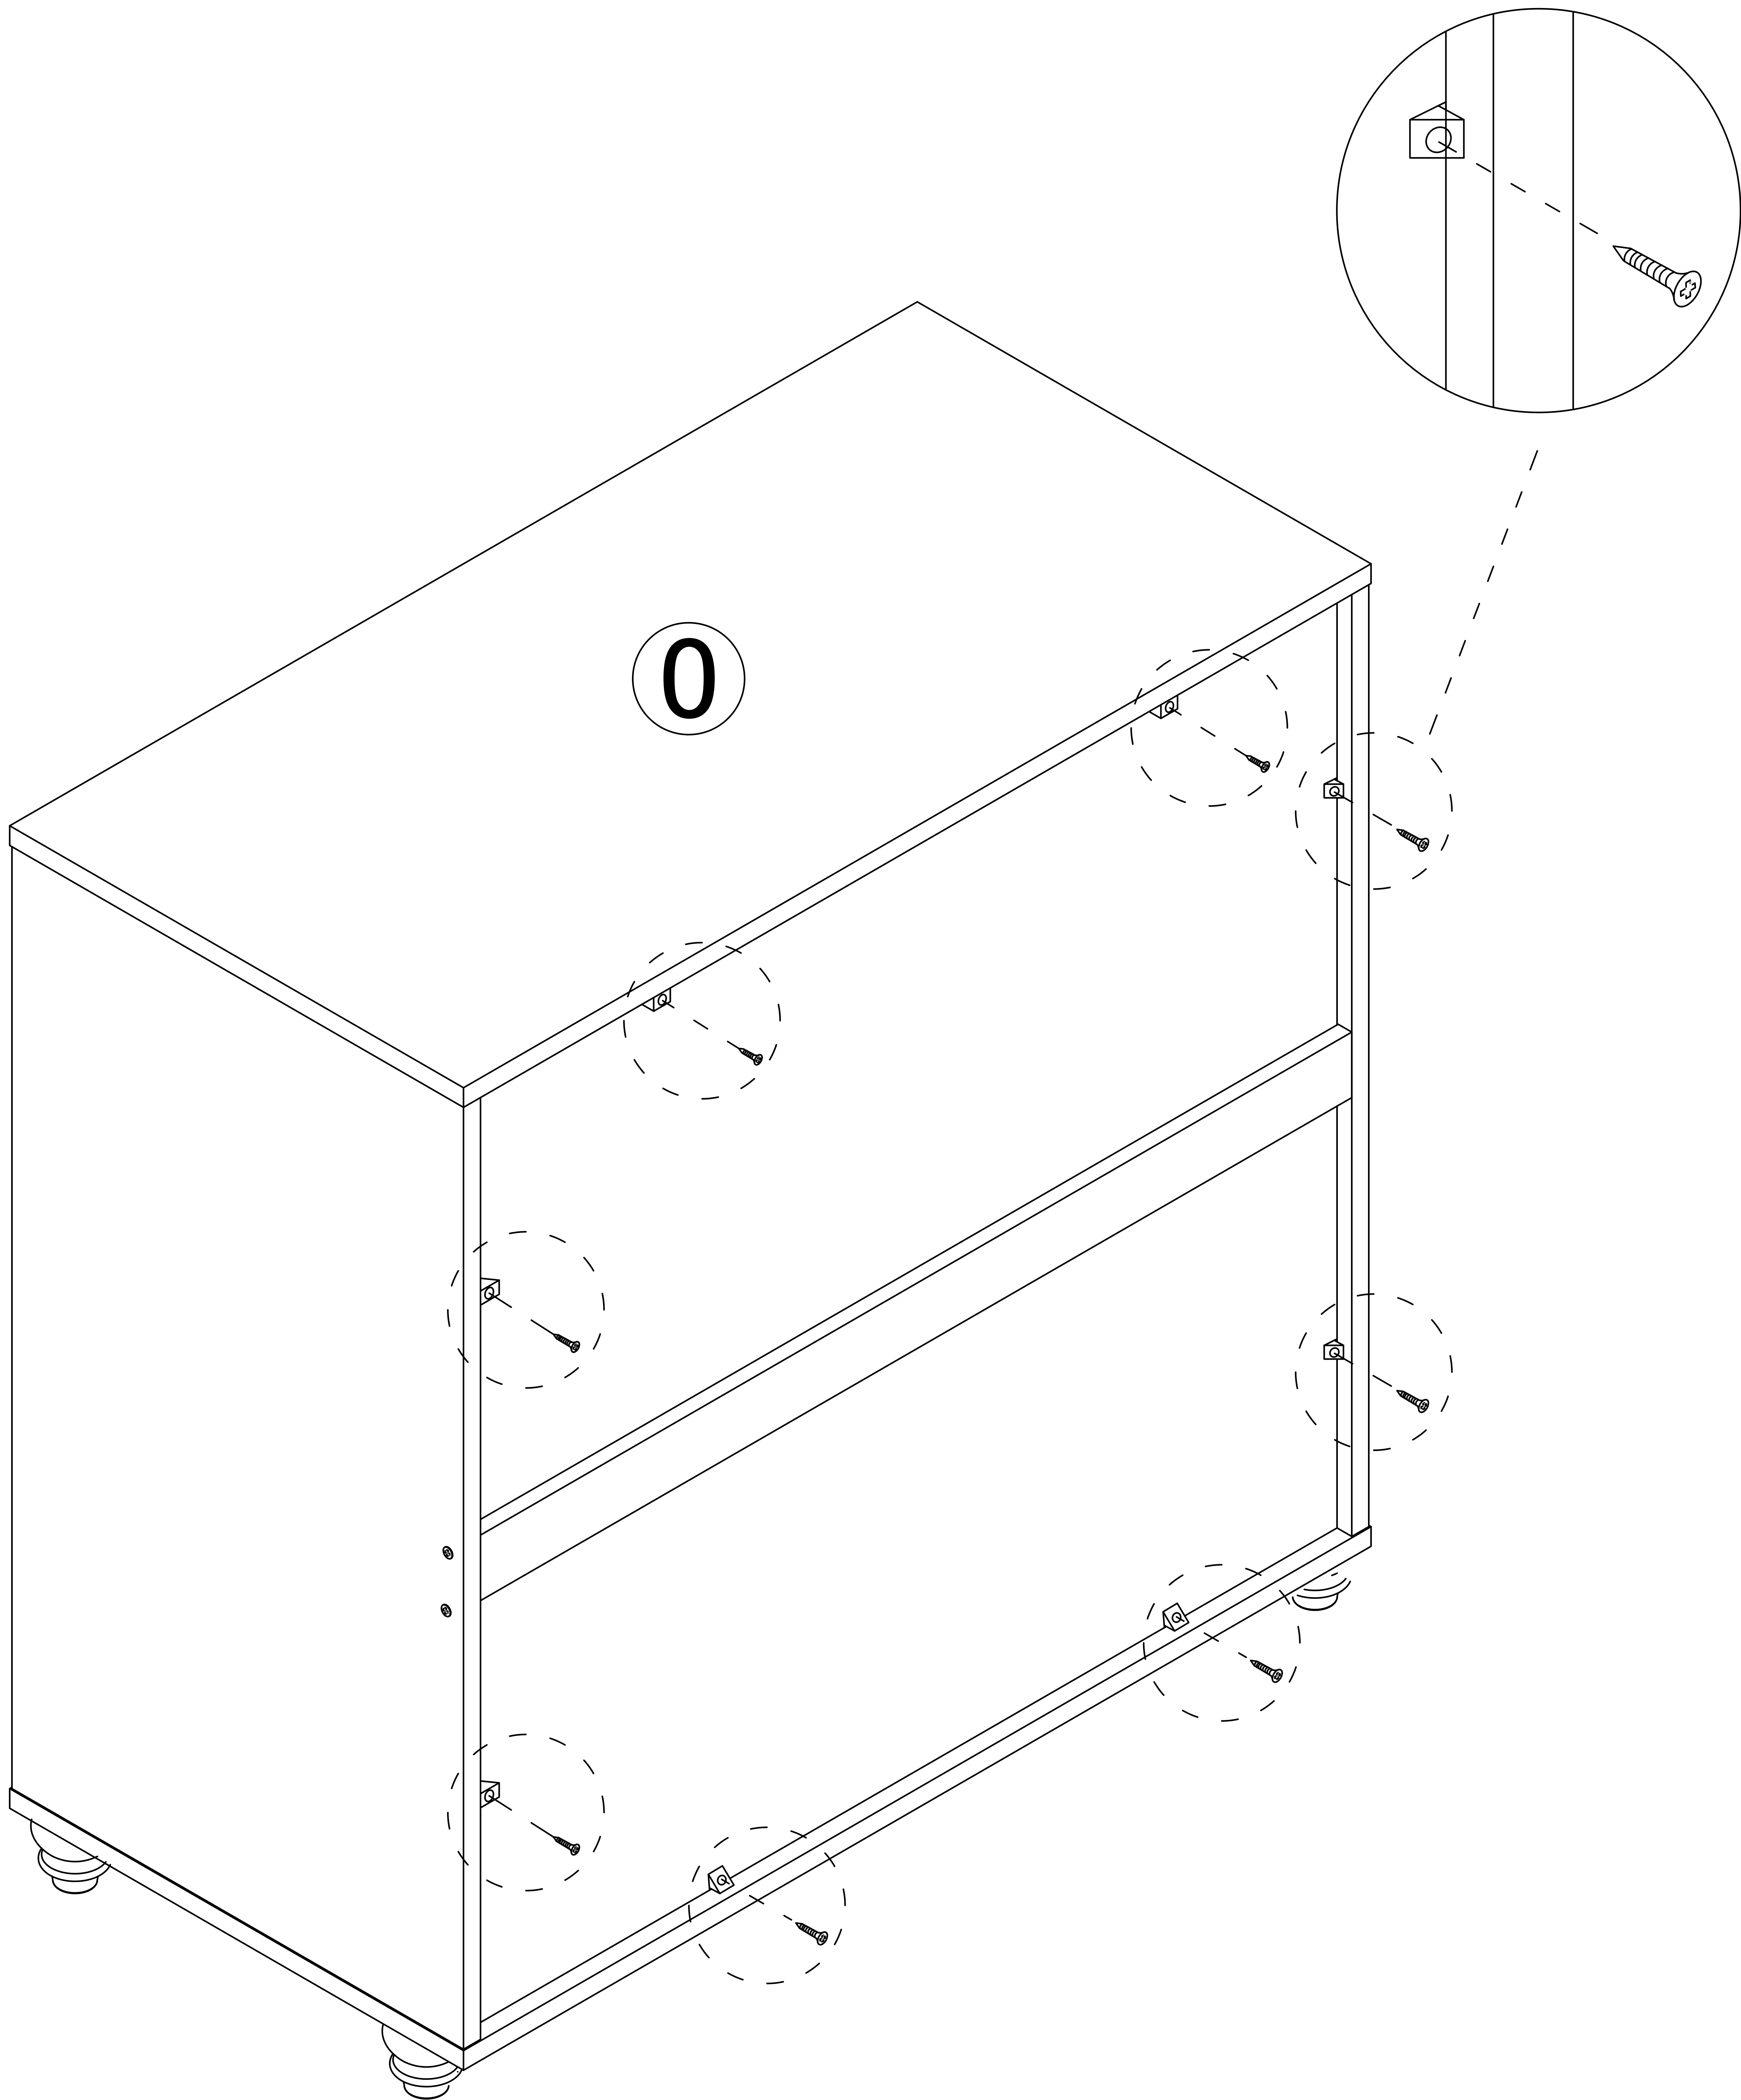



Step 38

Install as required


7

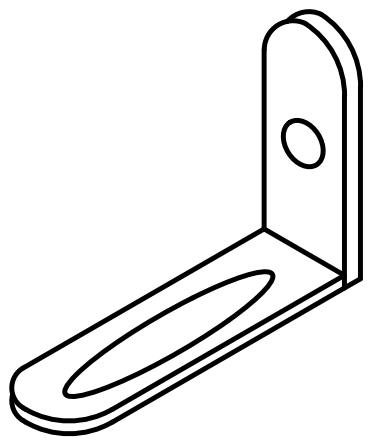 x2


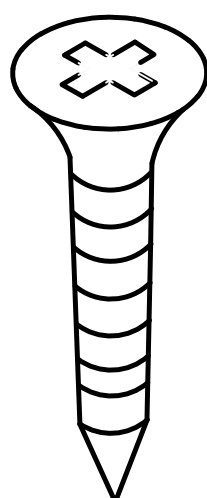
 x2

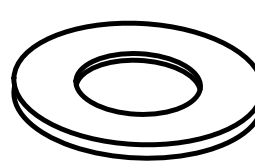 x2


3.5x14mm

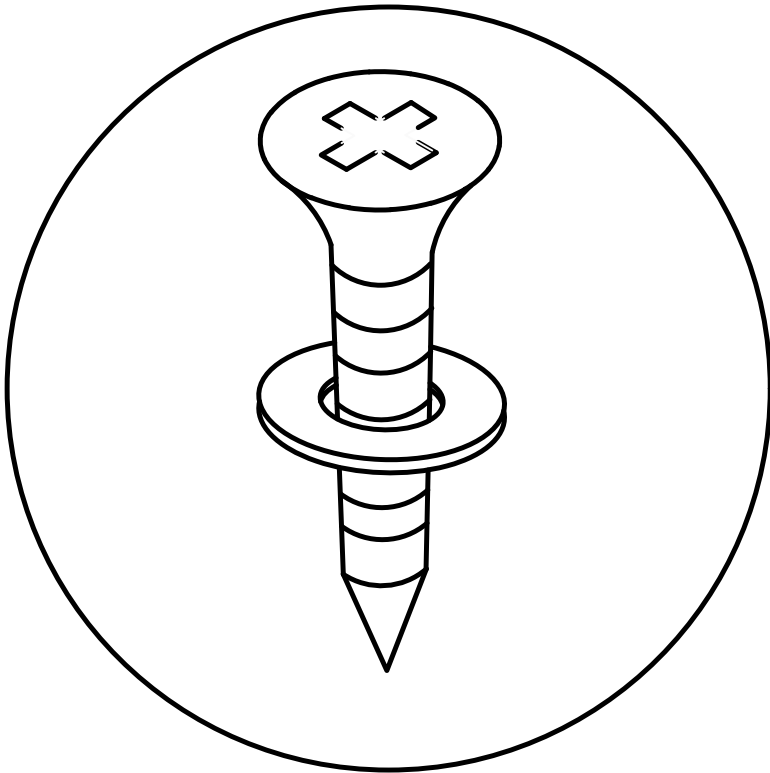

Install the anti fall hardware on the cabinet as shown in the picture first

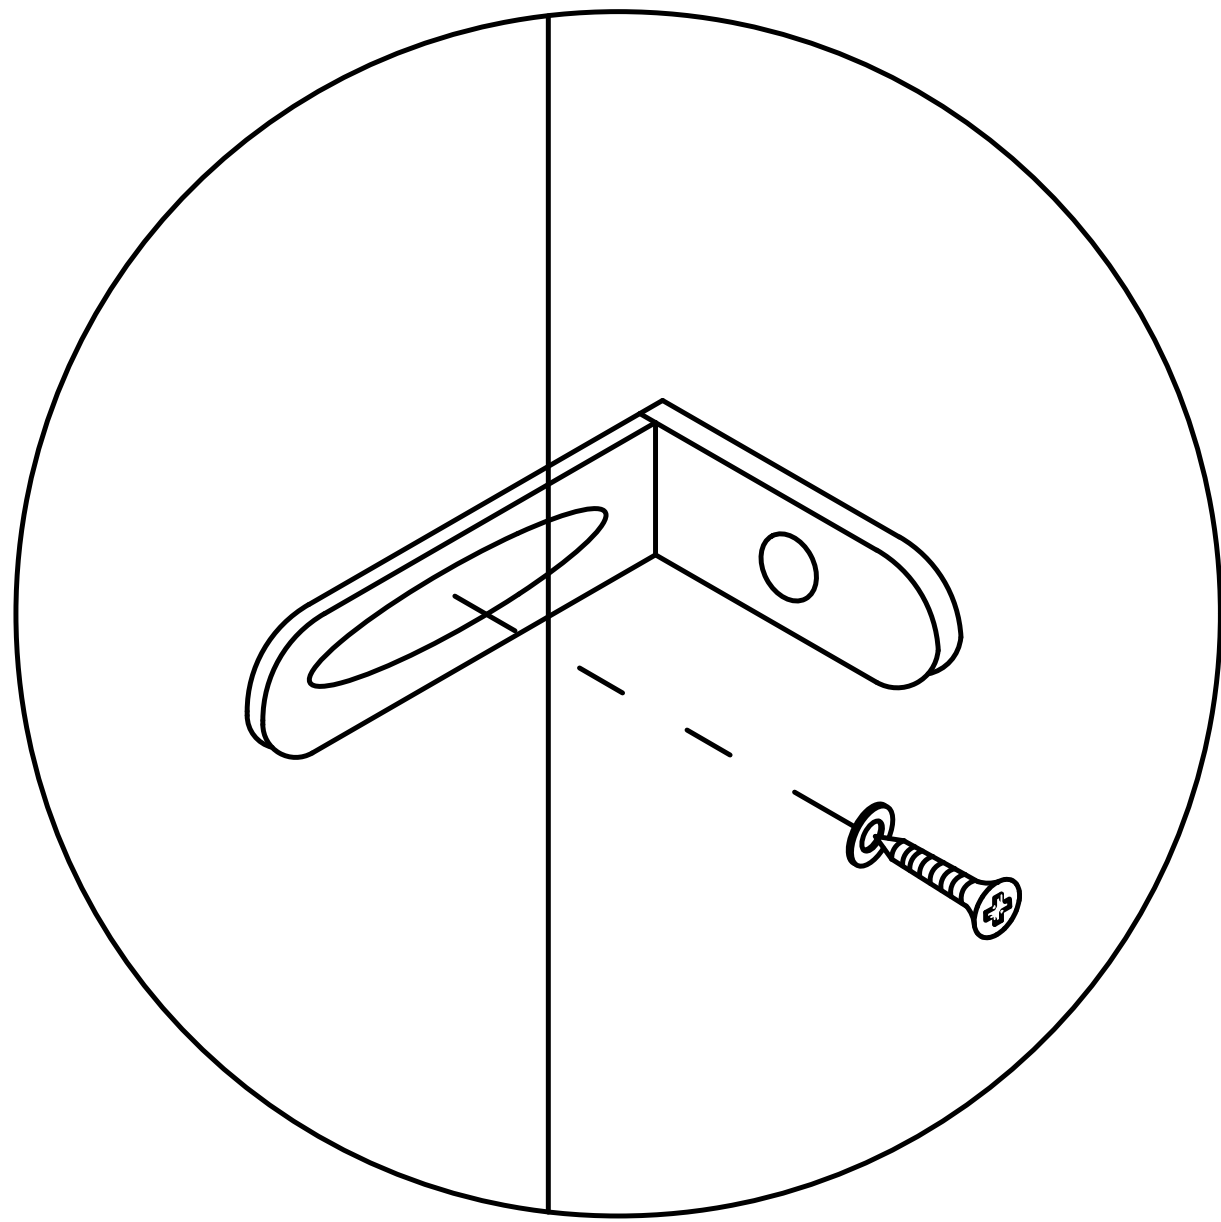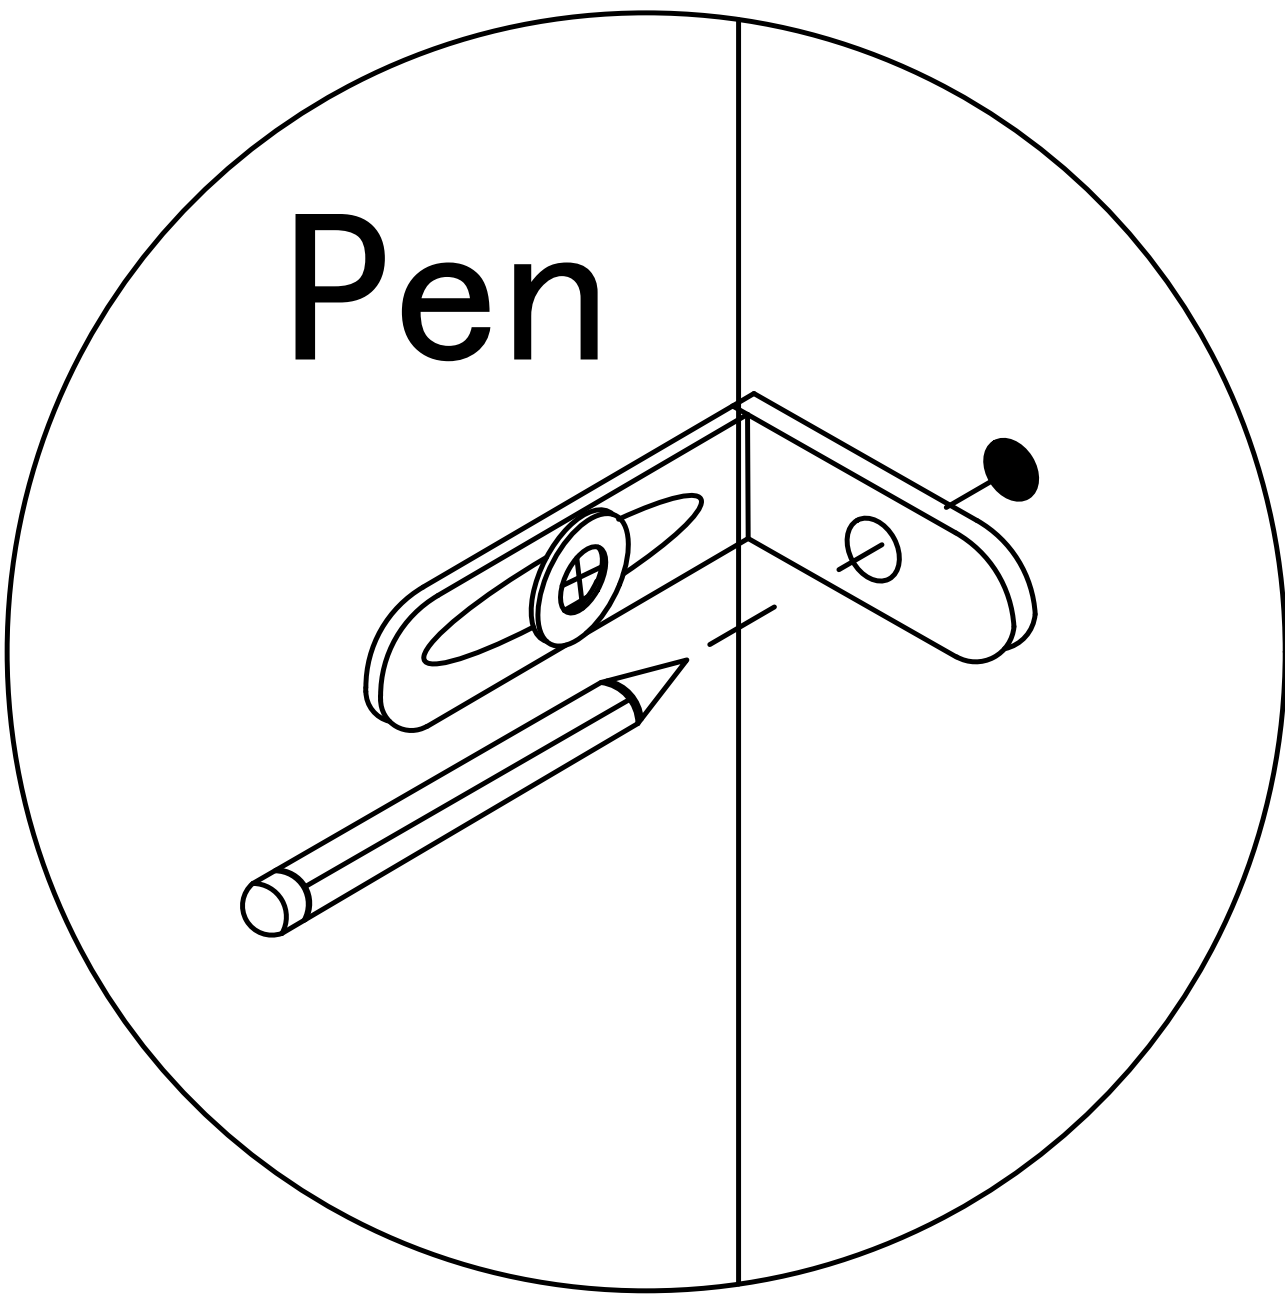



Then mark the wall with a pen through the holes in the anti-fall hardware

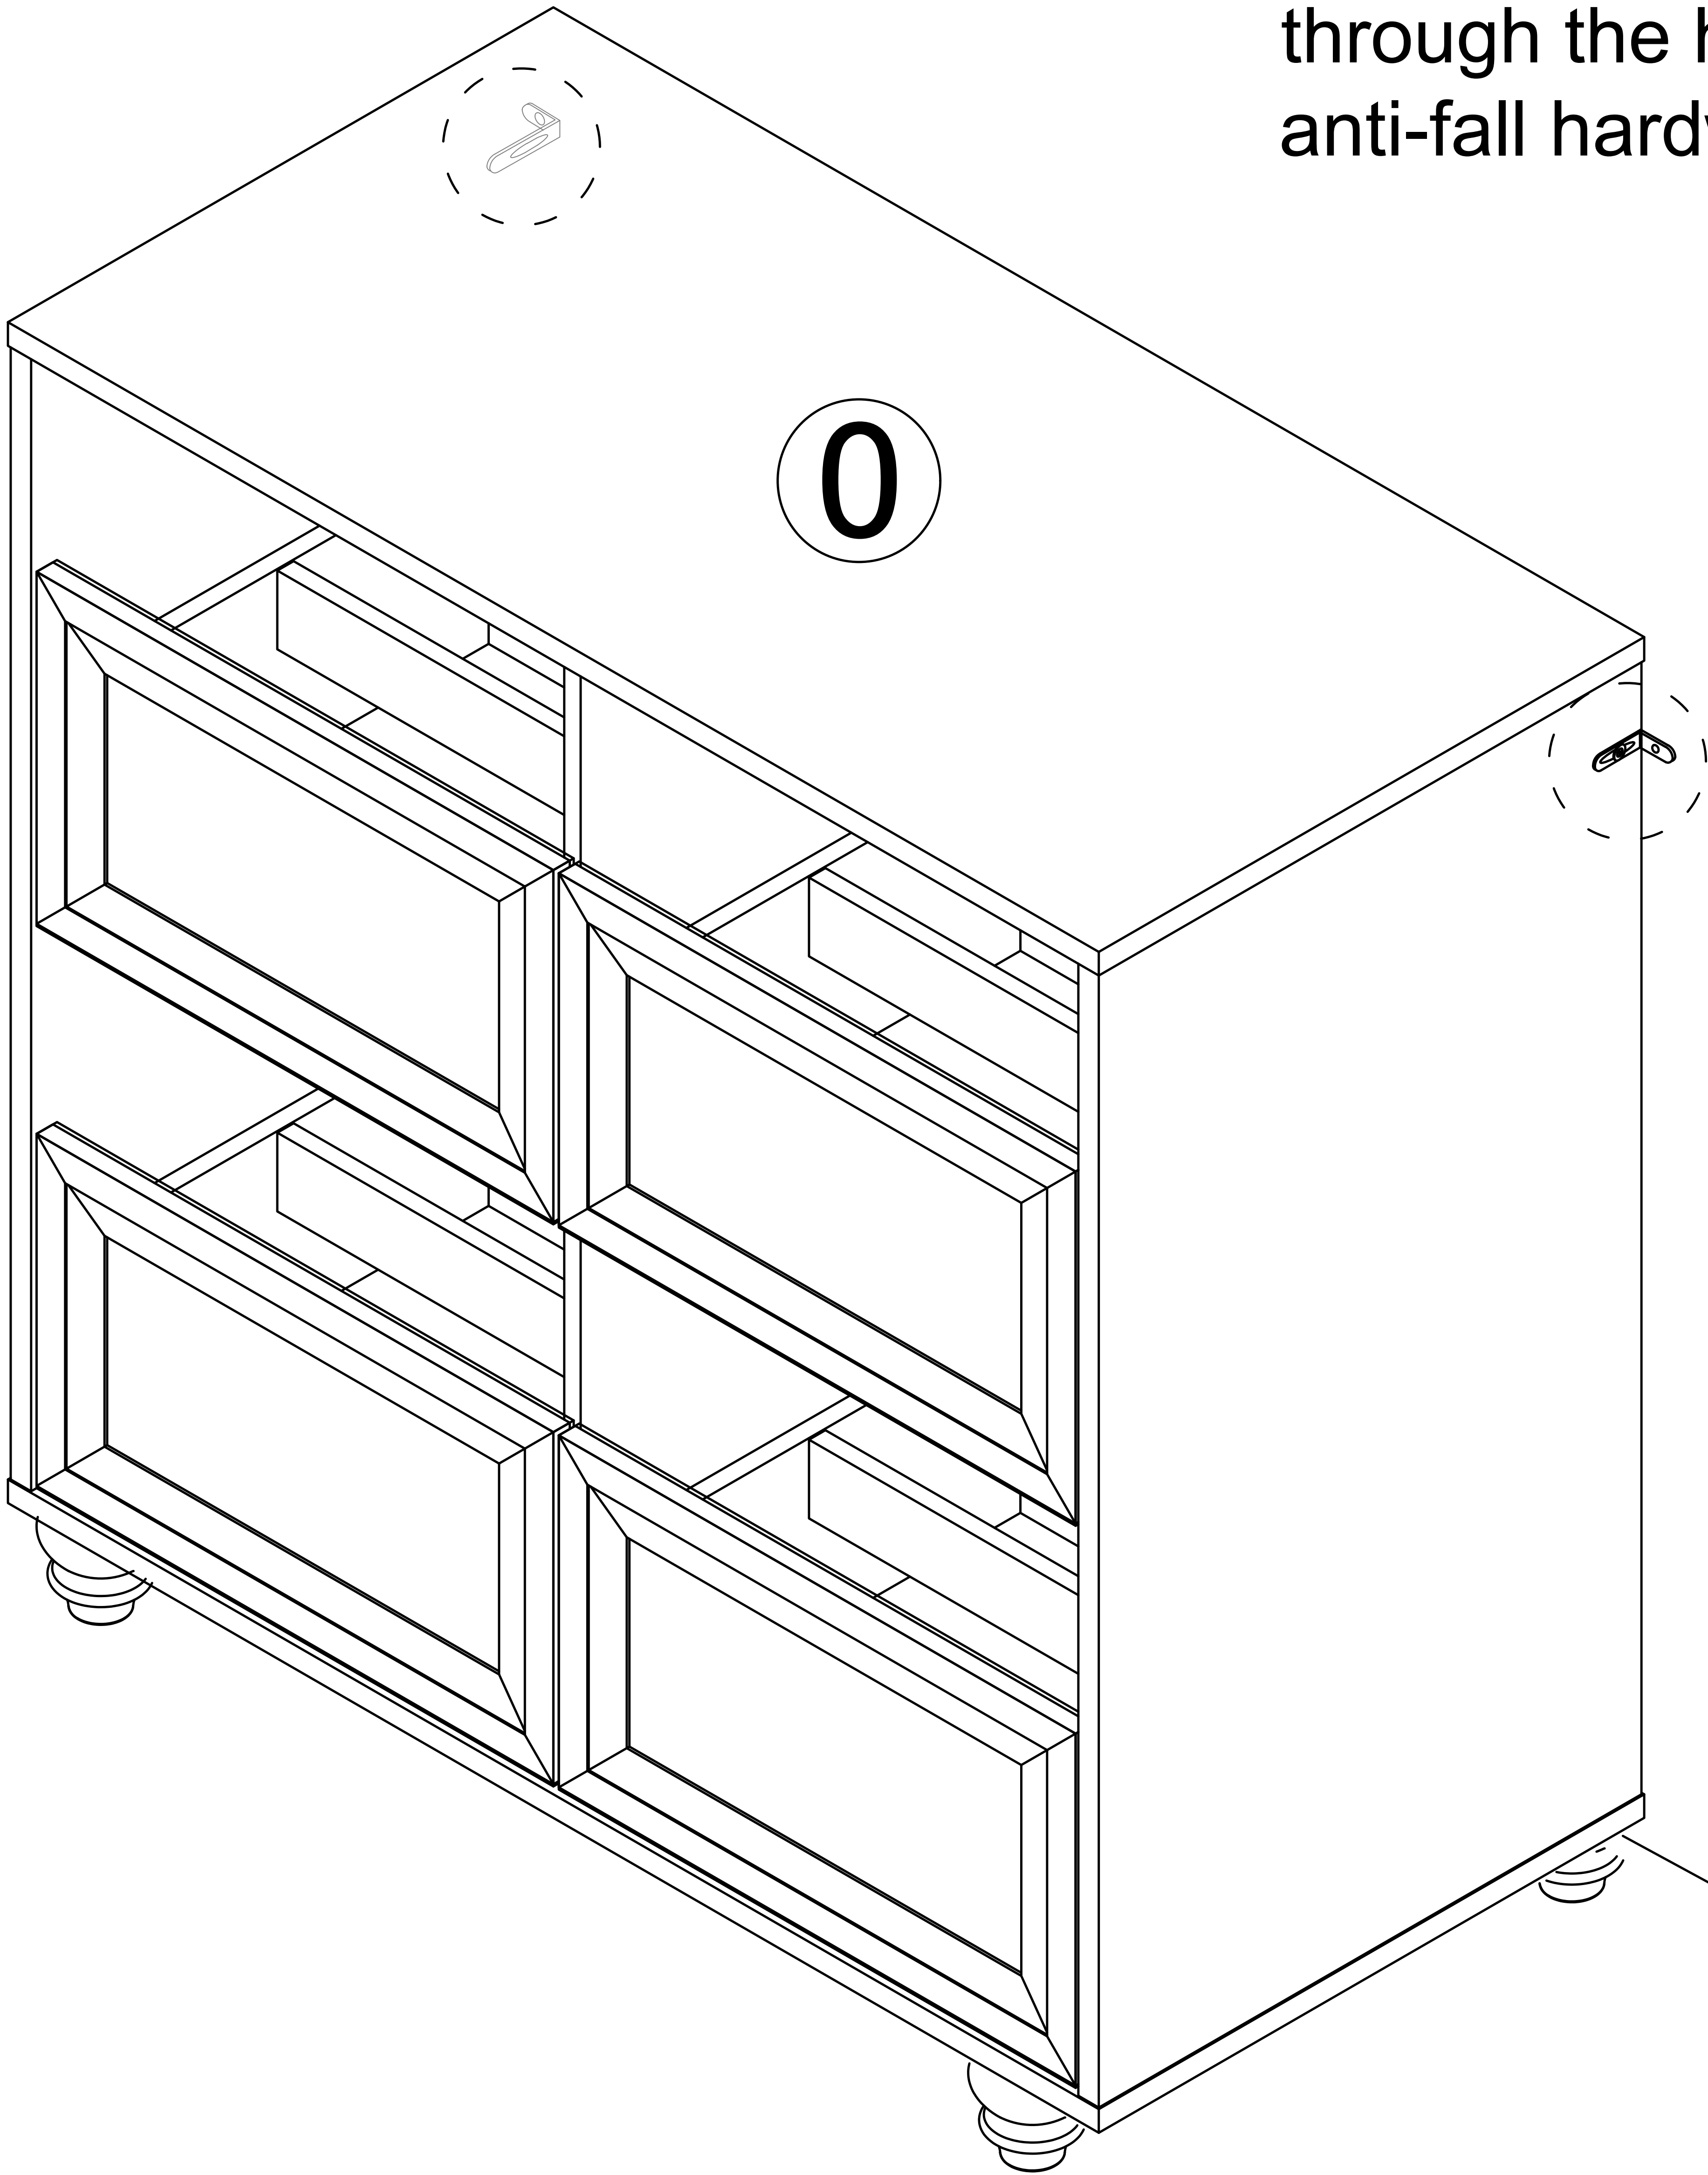

Step 39


use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

Use a tape drill to make holes in the wall that are suitable for the product screws.

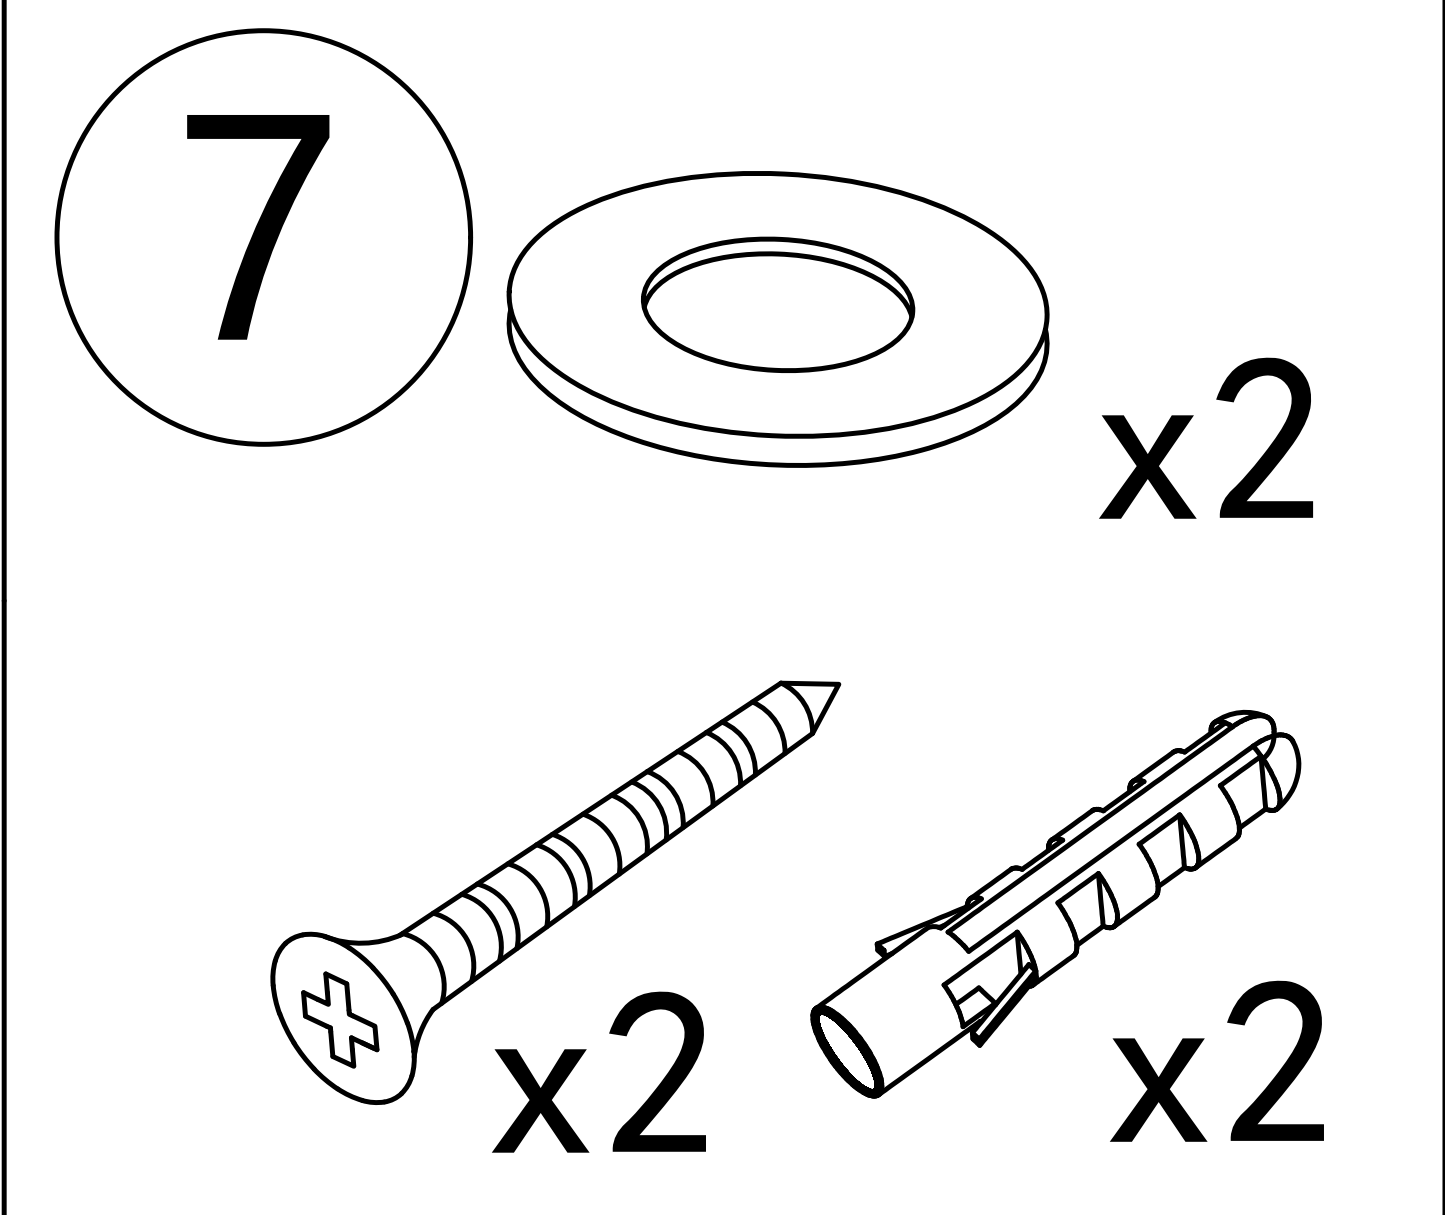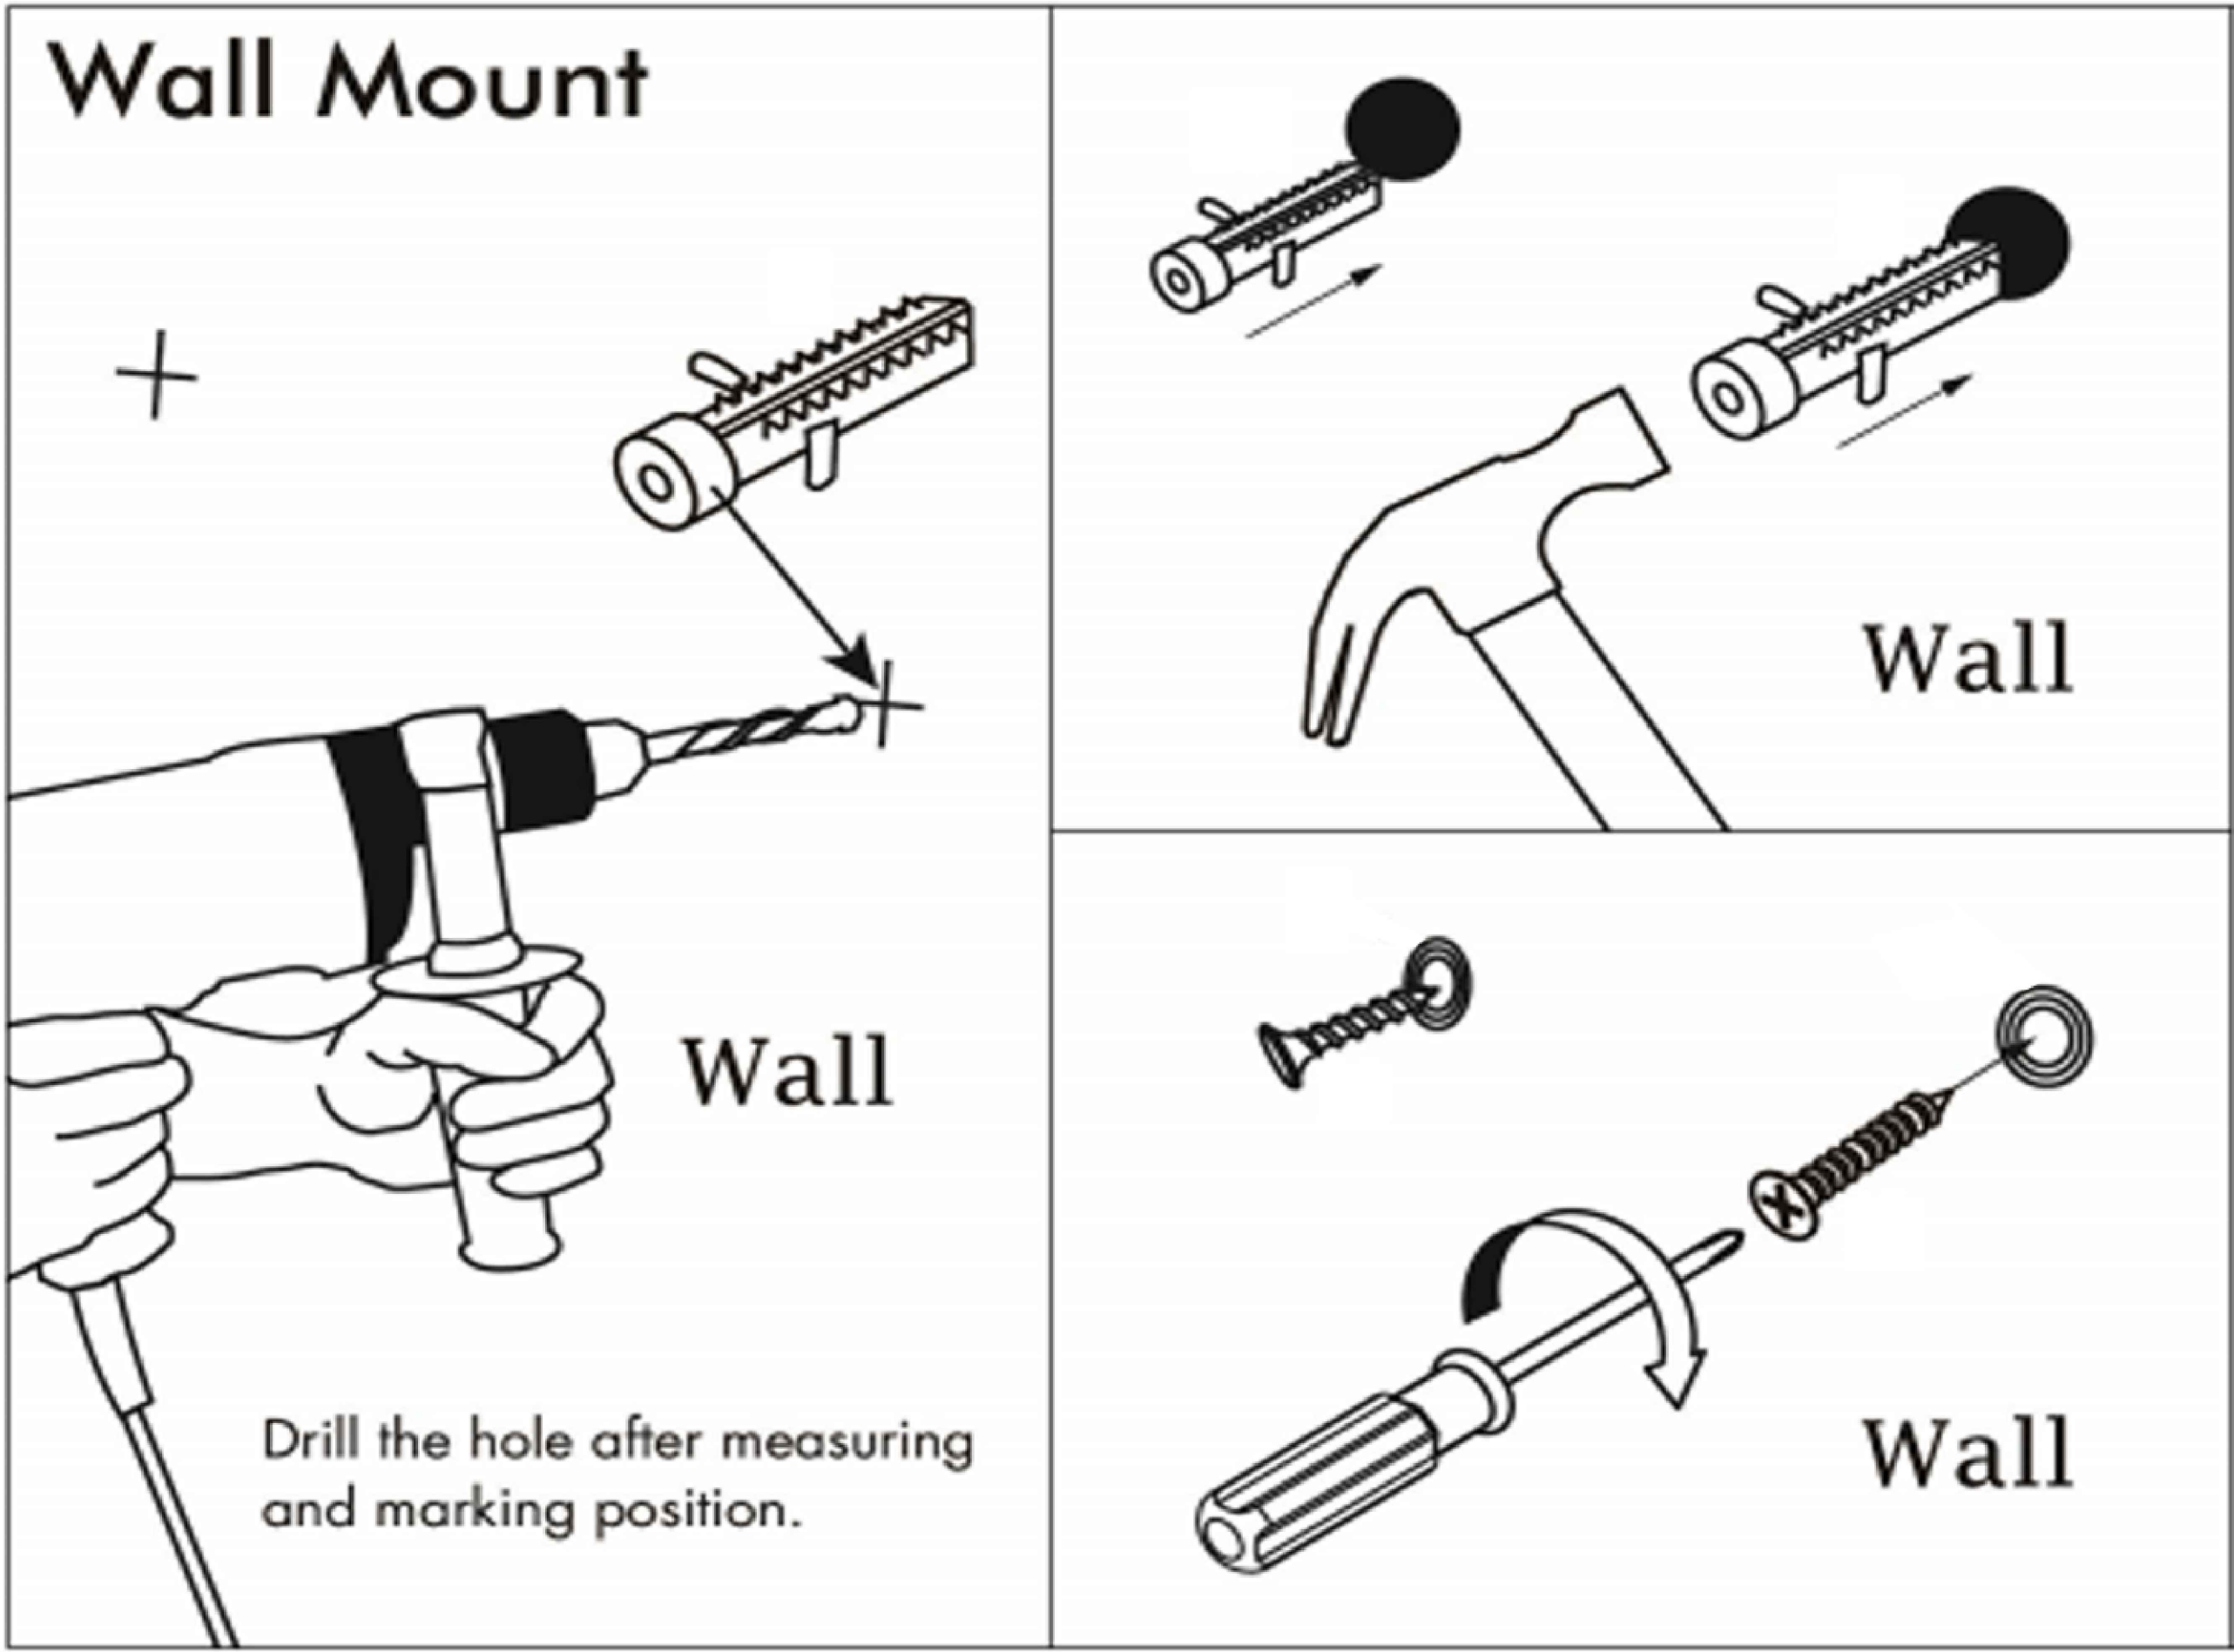

Put the expansion bolt into the hole.


Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

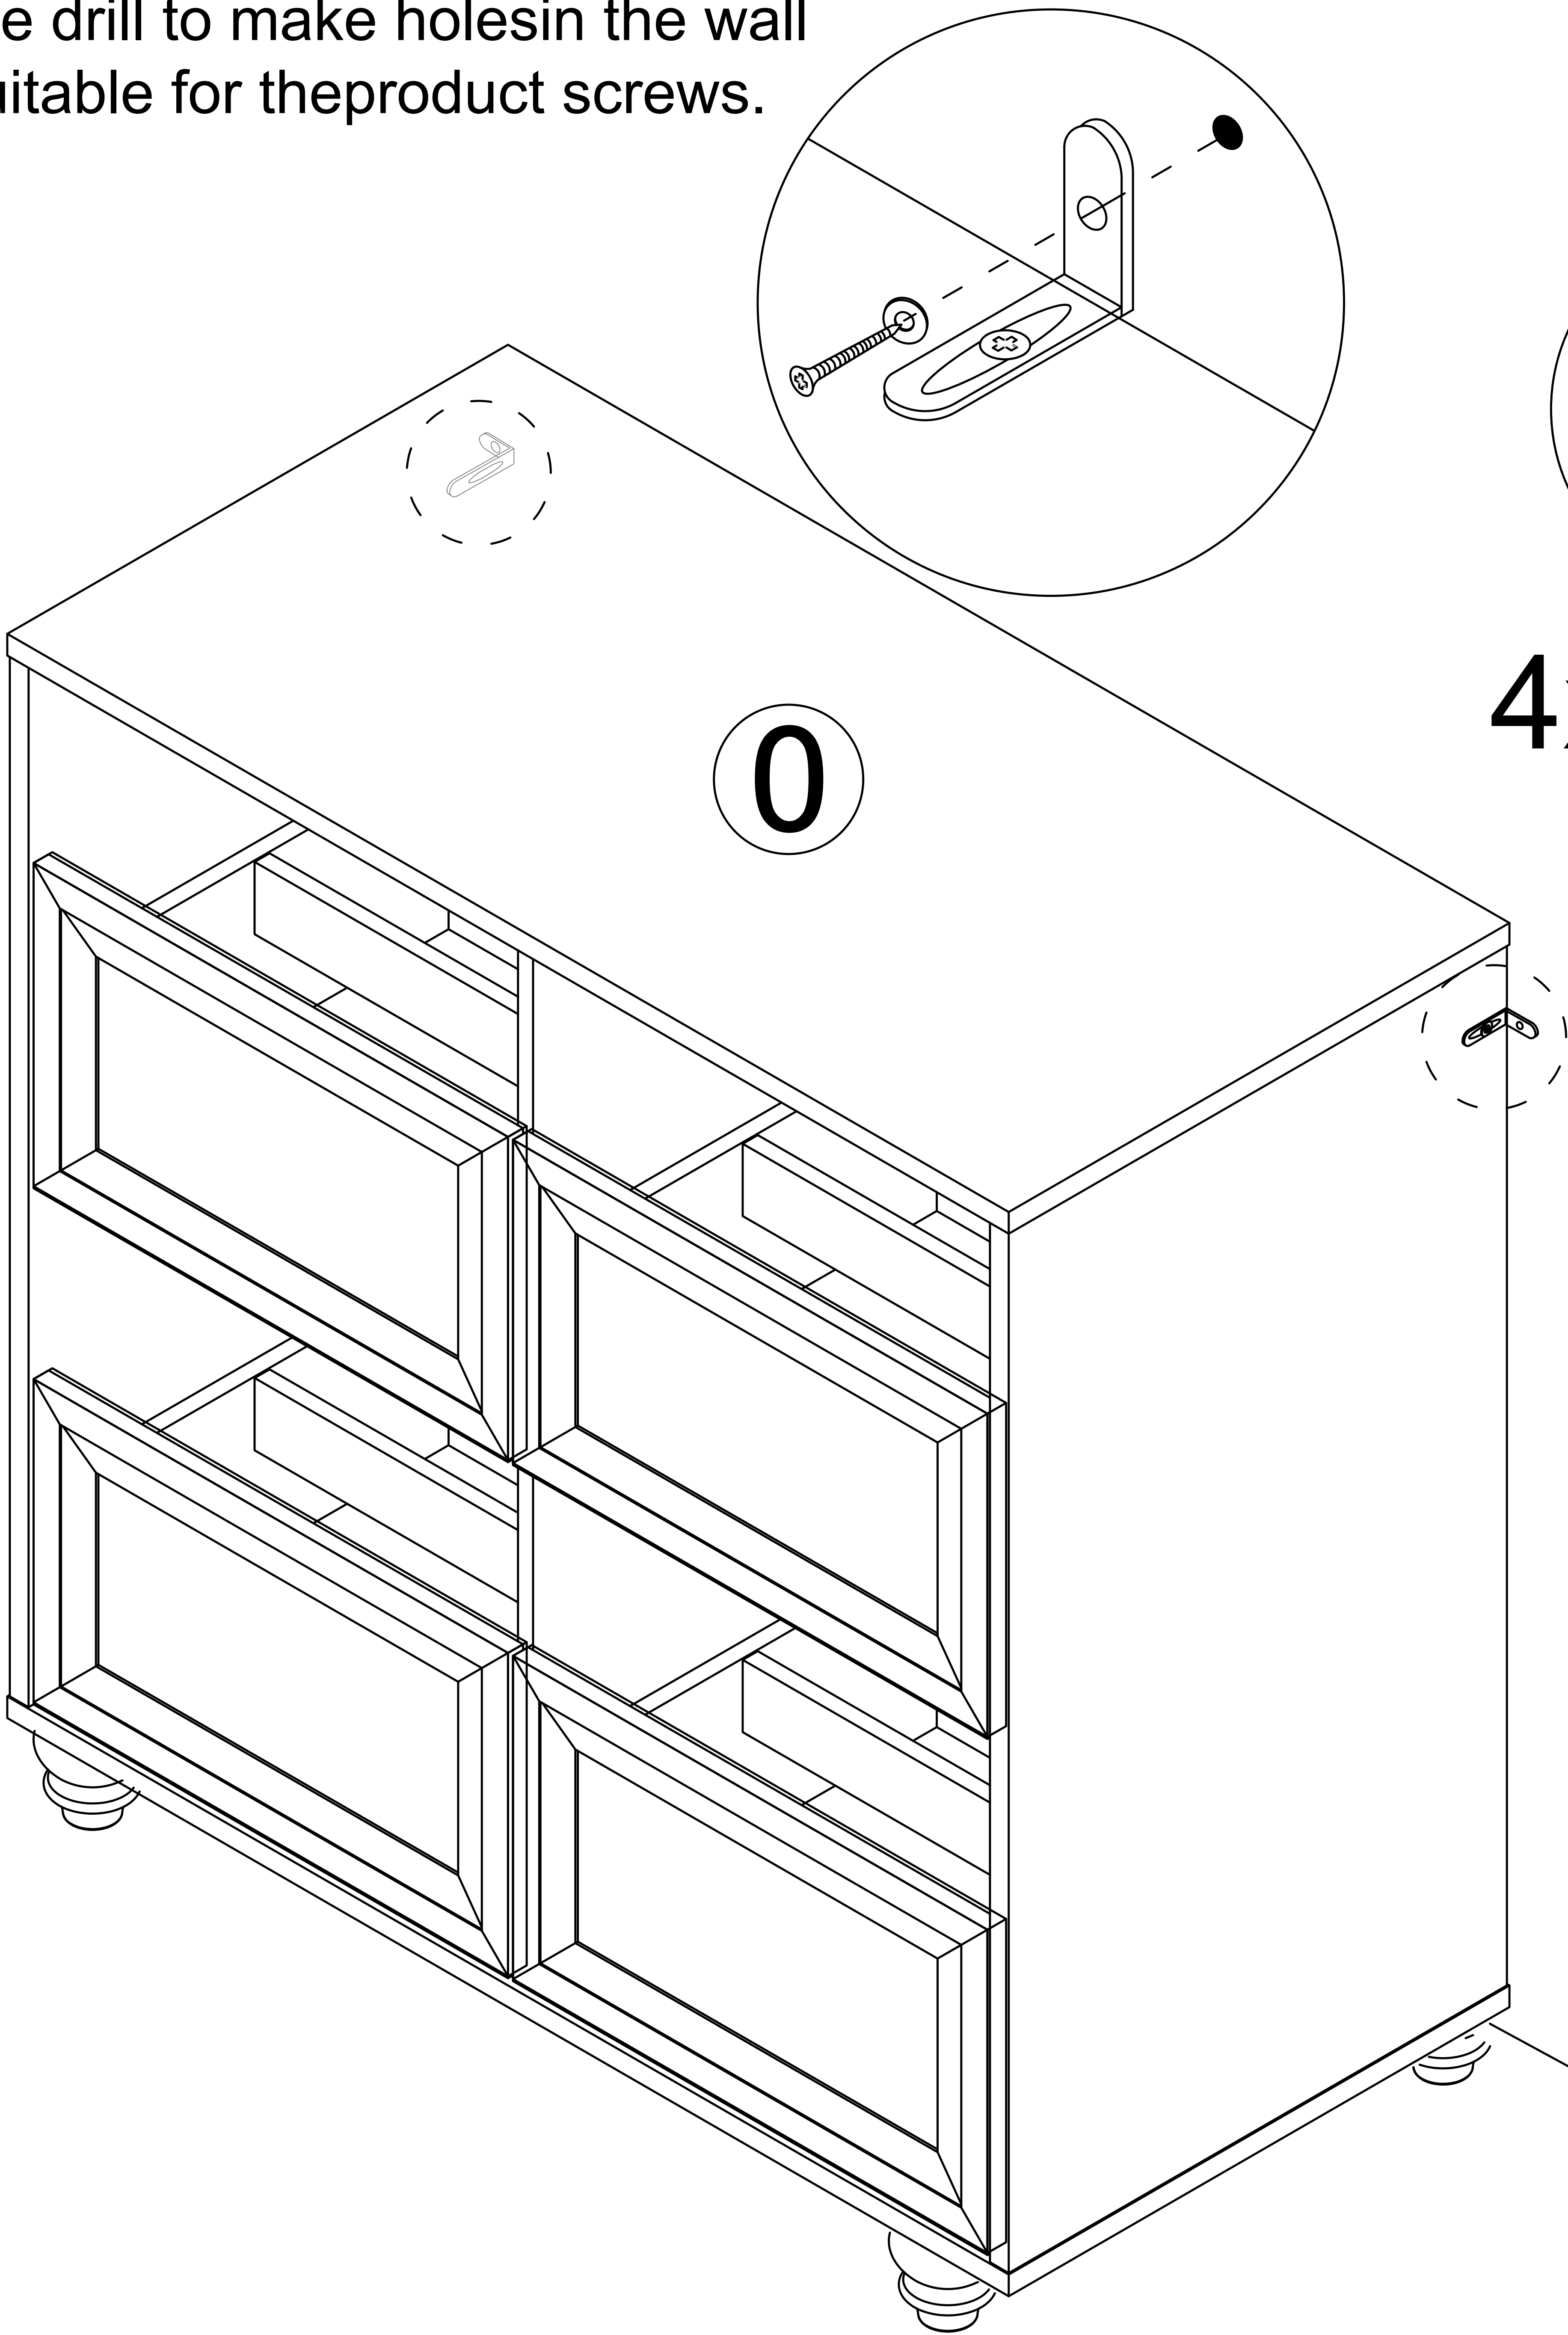

4x45mm

Step 40

9

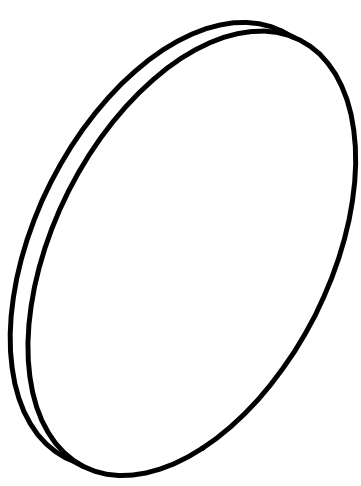

x4

