

Polybird




# 33" ROUND TABLE P17-R



## TOOLS




## HARDWARE

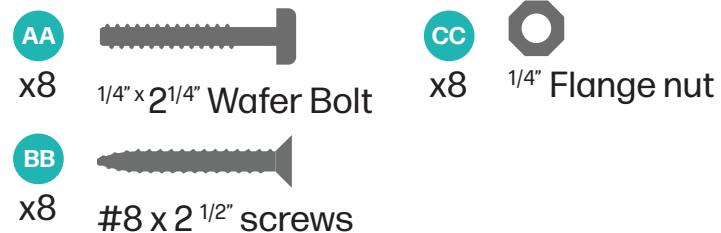

## PARTS

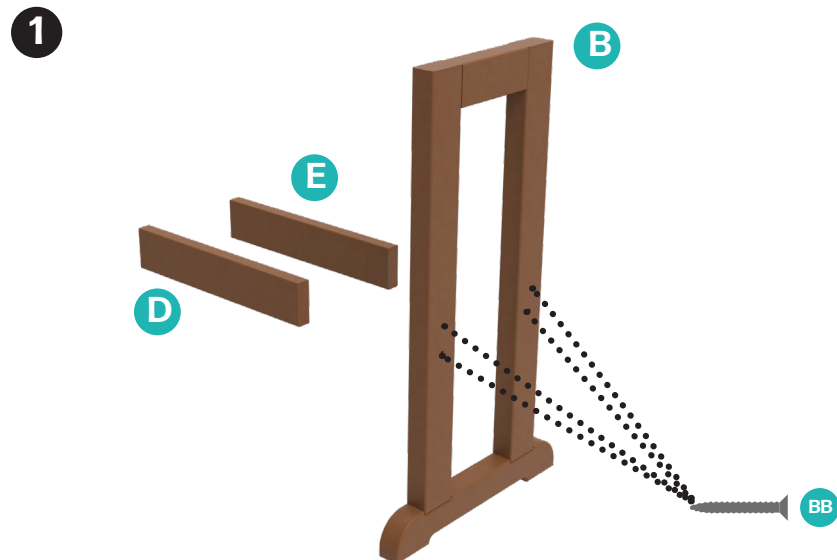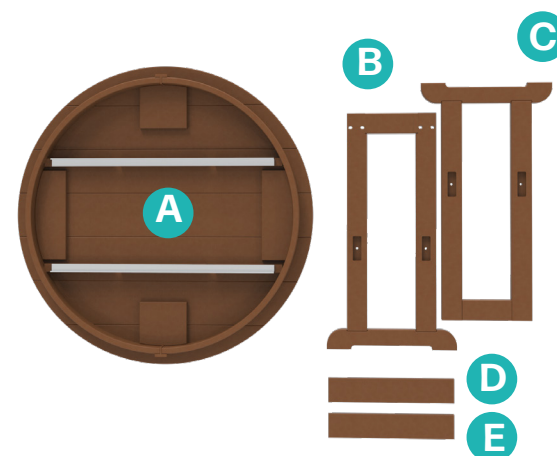


Attach braces D & E to legs B using two 2 1/2" screws (BB) per leg.

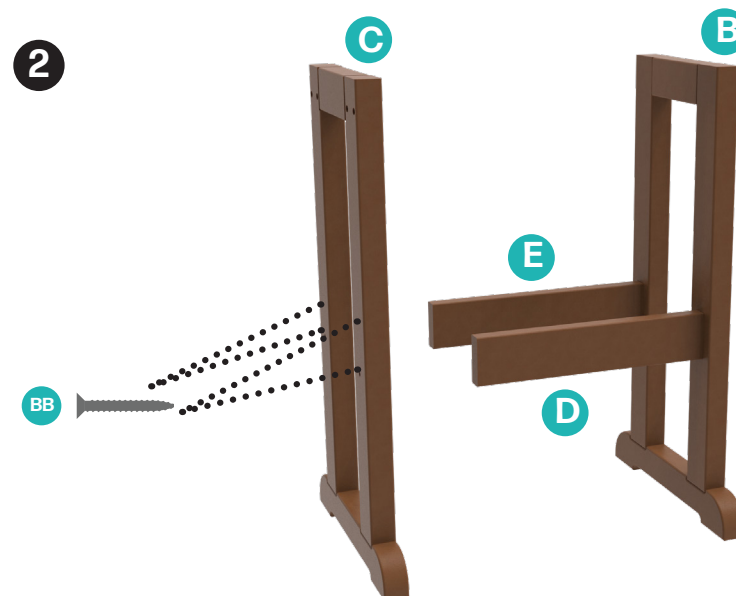

Repeat step 1 on the other side using legs C.

3

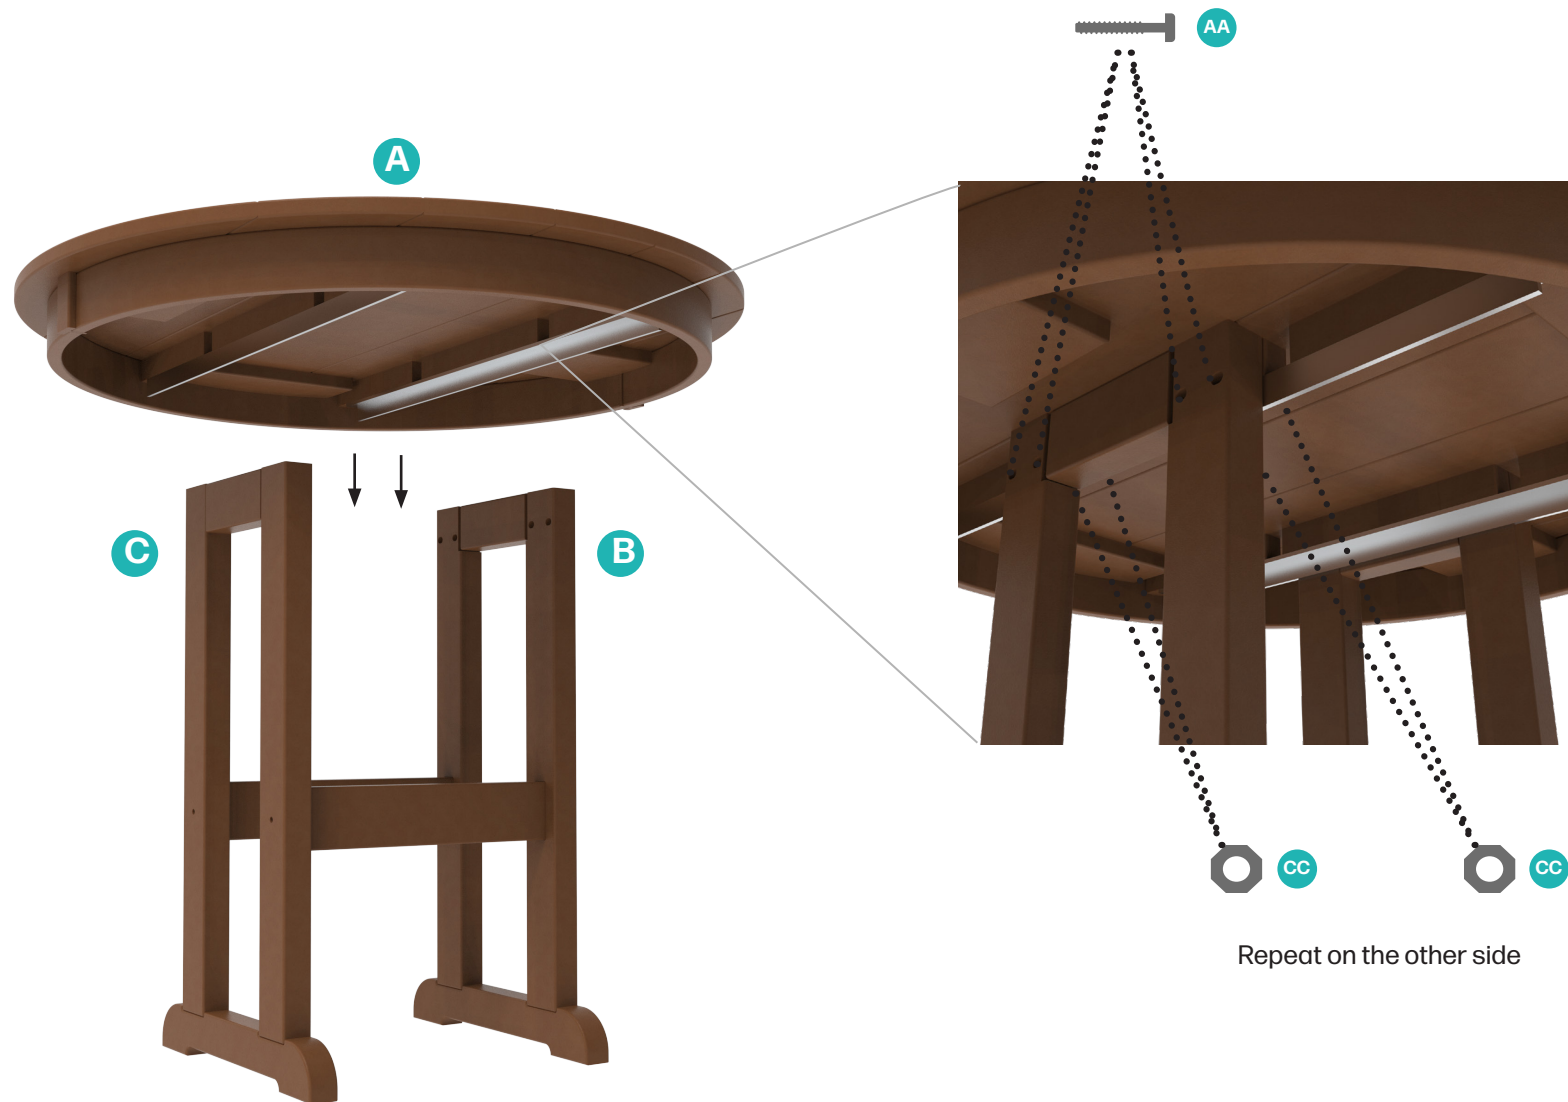

Attach table top A to table assembly from step 2. Use two  $\frac{1}{4}$ " x  $2\frac{1}{4}$ " wafer bolts (AA) at each leg and finish on the inside with eight flange nuts (CC).