LM055

Scan for Help!
Assembly Guide/Customer Support

Item # : LM055-529D

Assembly Instructions



If you have any questions, please follow these steps("Find Your Orders"- "Problem with the Order" - "Contact Seller") to contact our customer service. Thanks !

NOTE: There are two packages A and B for thisitem. Please wait patiently if you only receive one for now

Revised 12/23/2025

General Assembly Guidelines


I. Ensure that all parts and hardware are available before beginning assembly.

II. Follow each step carefully to ensure the proper assembly of this product.


III. Two people are recommended for ease in the assembly of this product.

IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.


V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

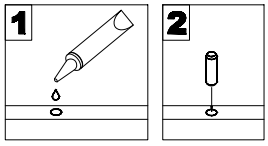


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

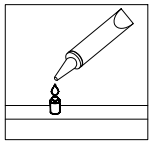


VI. A Phillips head screwdriver is required for the assembly of this product .

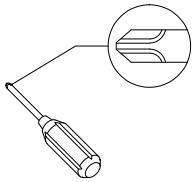


VII. Power tools should not be used to assemble this product .

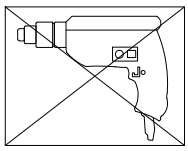



Parts List

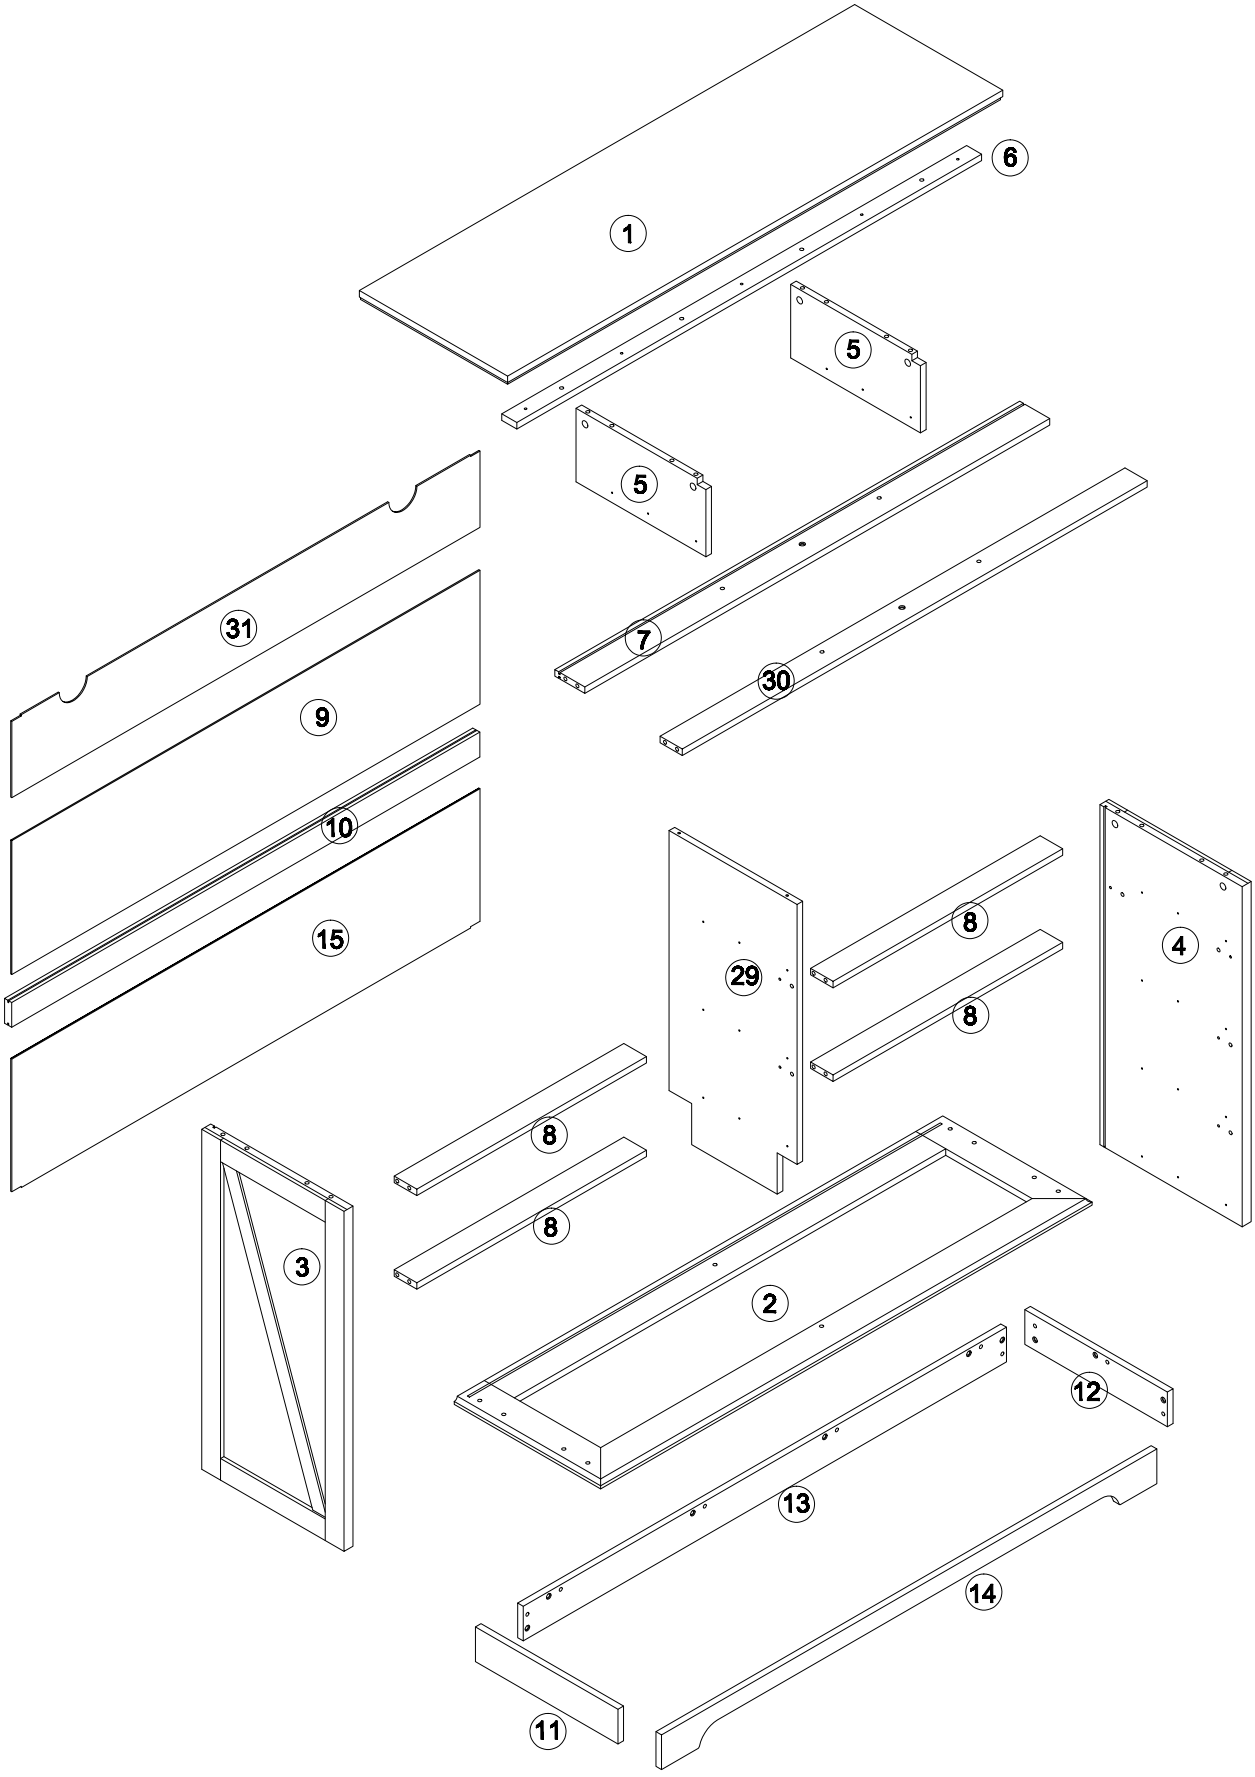




Parts List

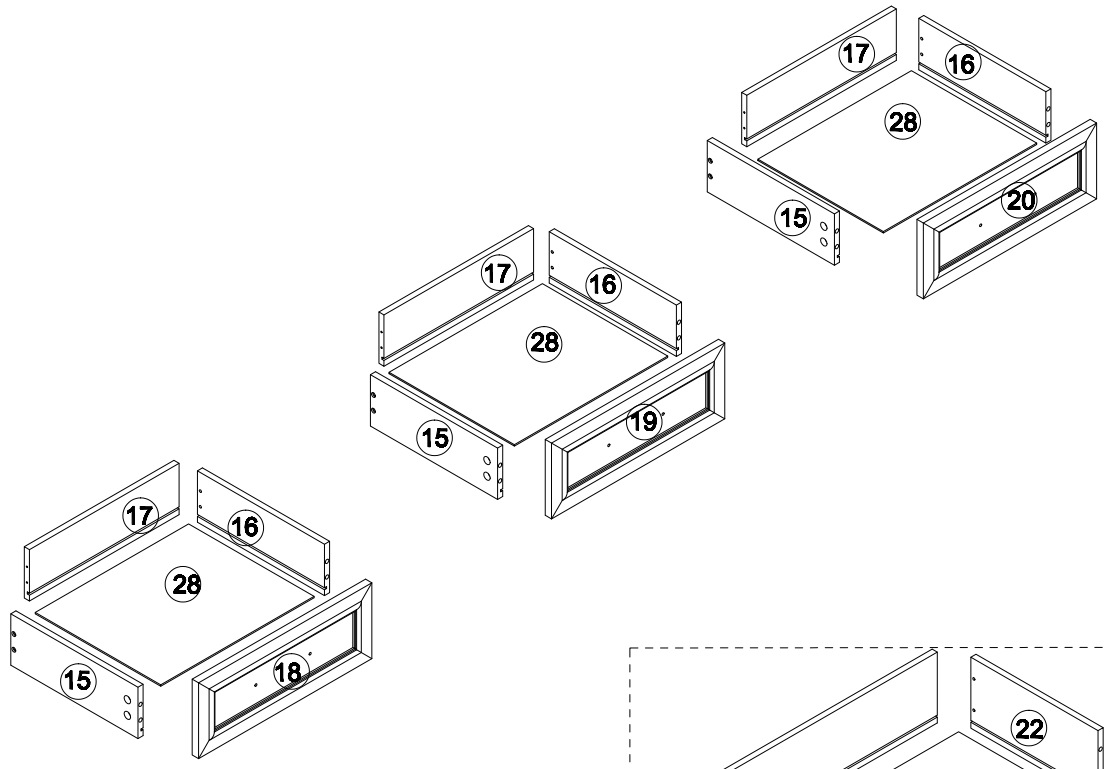

17
16
28
15
20
17
16
28
15
19
17
16
28
15
18

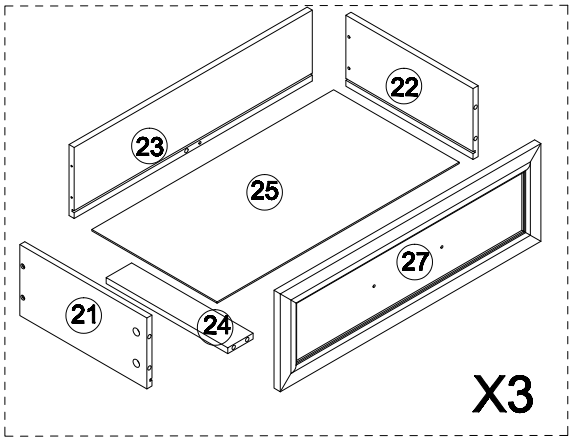
22
23
25
27
21
24
X3

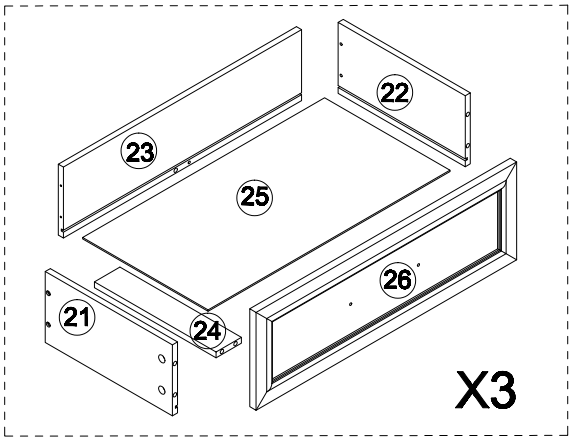
22
23
25
26
21
24
X3

Hardware List

A		**Ø6x30mm**	Wooden dowel	**36**	**pcs**
B		**Ø6x32mm**	Cam bolt	**62**	pcs
D		Ø15x9mm	Cam lock	62	pcs
E		Ø30mm	Sticker	62	pcs
F		Ø6x50mm	Screw	12	pcs
G		M 4	Hex Key	1	pc
H		M6*12mm	Bolt	28	pcs
I			Plastic wedge	14	pcs
J		Ø4x32mm	Screw	42	pcs
K		Ø4x25mm	Screw	5	pcs
L		Ø6x20mm	Wooden dowel	4	pcs
M		12"	Drawer slides	9	sets
N		Ø3x12mm	Screw	108	pcs
O			Plastic wedge	18	pcs
P		Ø3x17mm	Screw	18	pcs

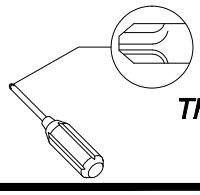


Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.

Hardware List


Q		128mm	Handle	3	pcs
R		160mm	Handle	6	pcs
S		Ø4x9mm	Bolt	18	pcs
T		73x24x15mm	Anti-inversion piece	2	pcs
U		Ø4*15mm	Screw	2	pcs
V		Ø6x40mm	Plastic anchor	2	pcs
W		Ø4x40mm	Screw	2	pcs
Y			Glue tube	2	pcs

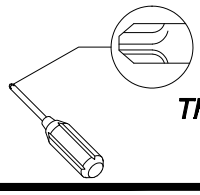

Philips head screwdriver required for assembly
(not included)


The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.

Step 1

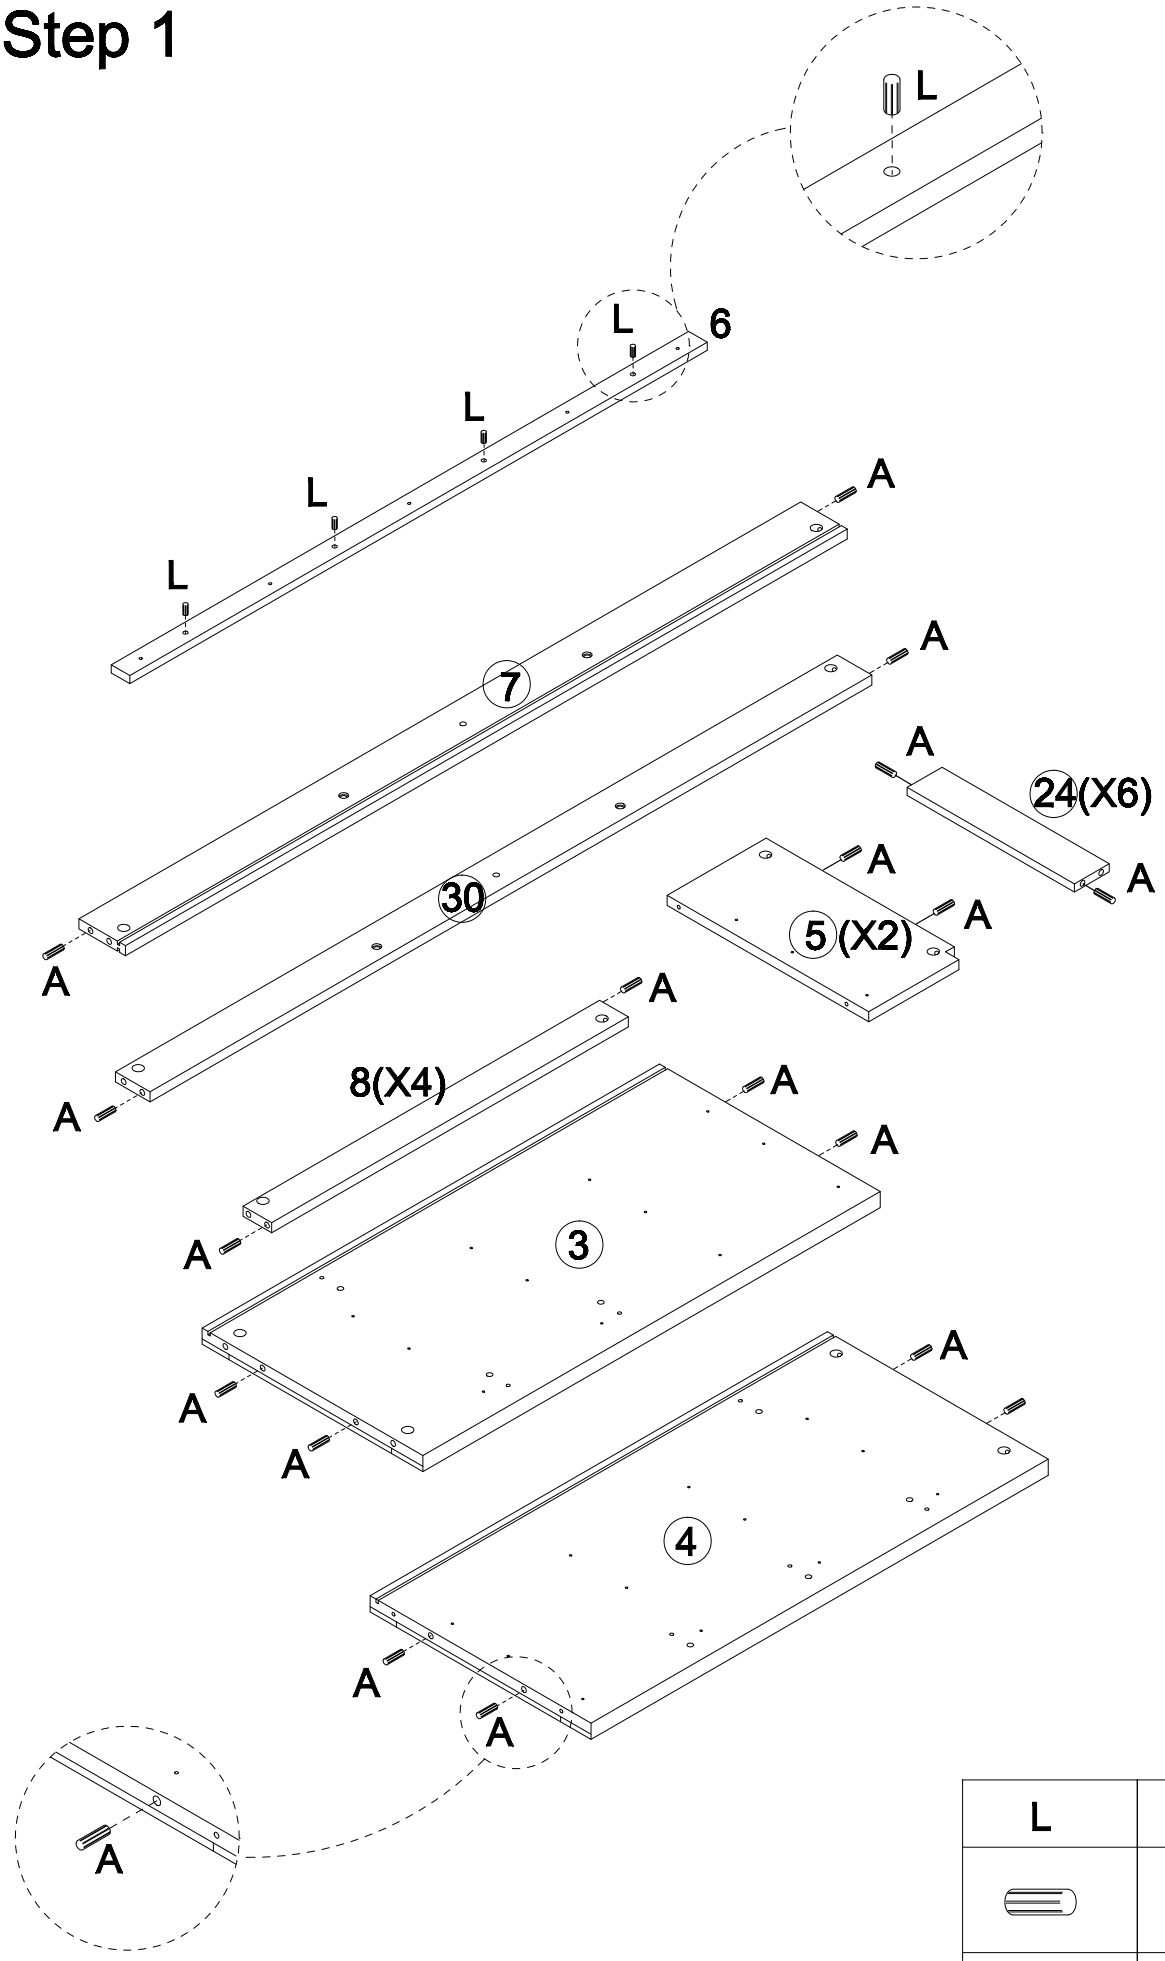

L	A
X4	X36


Step 2

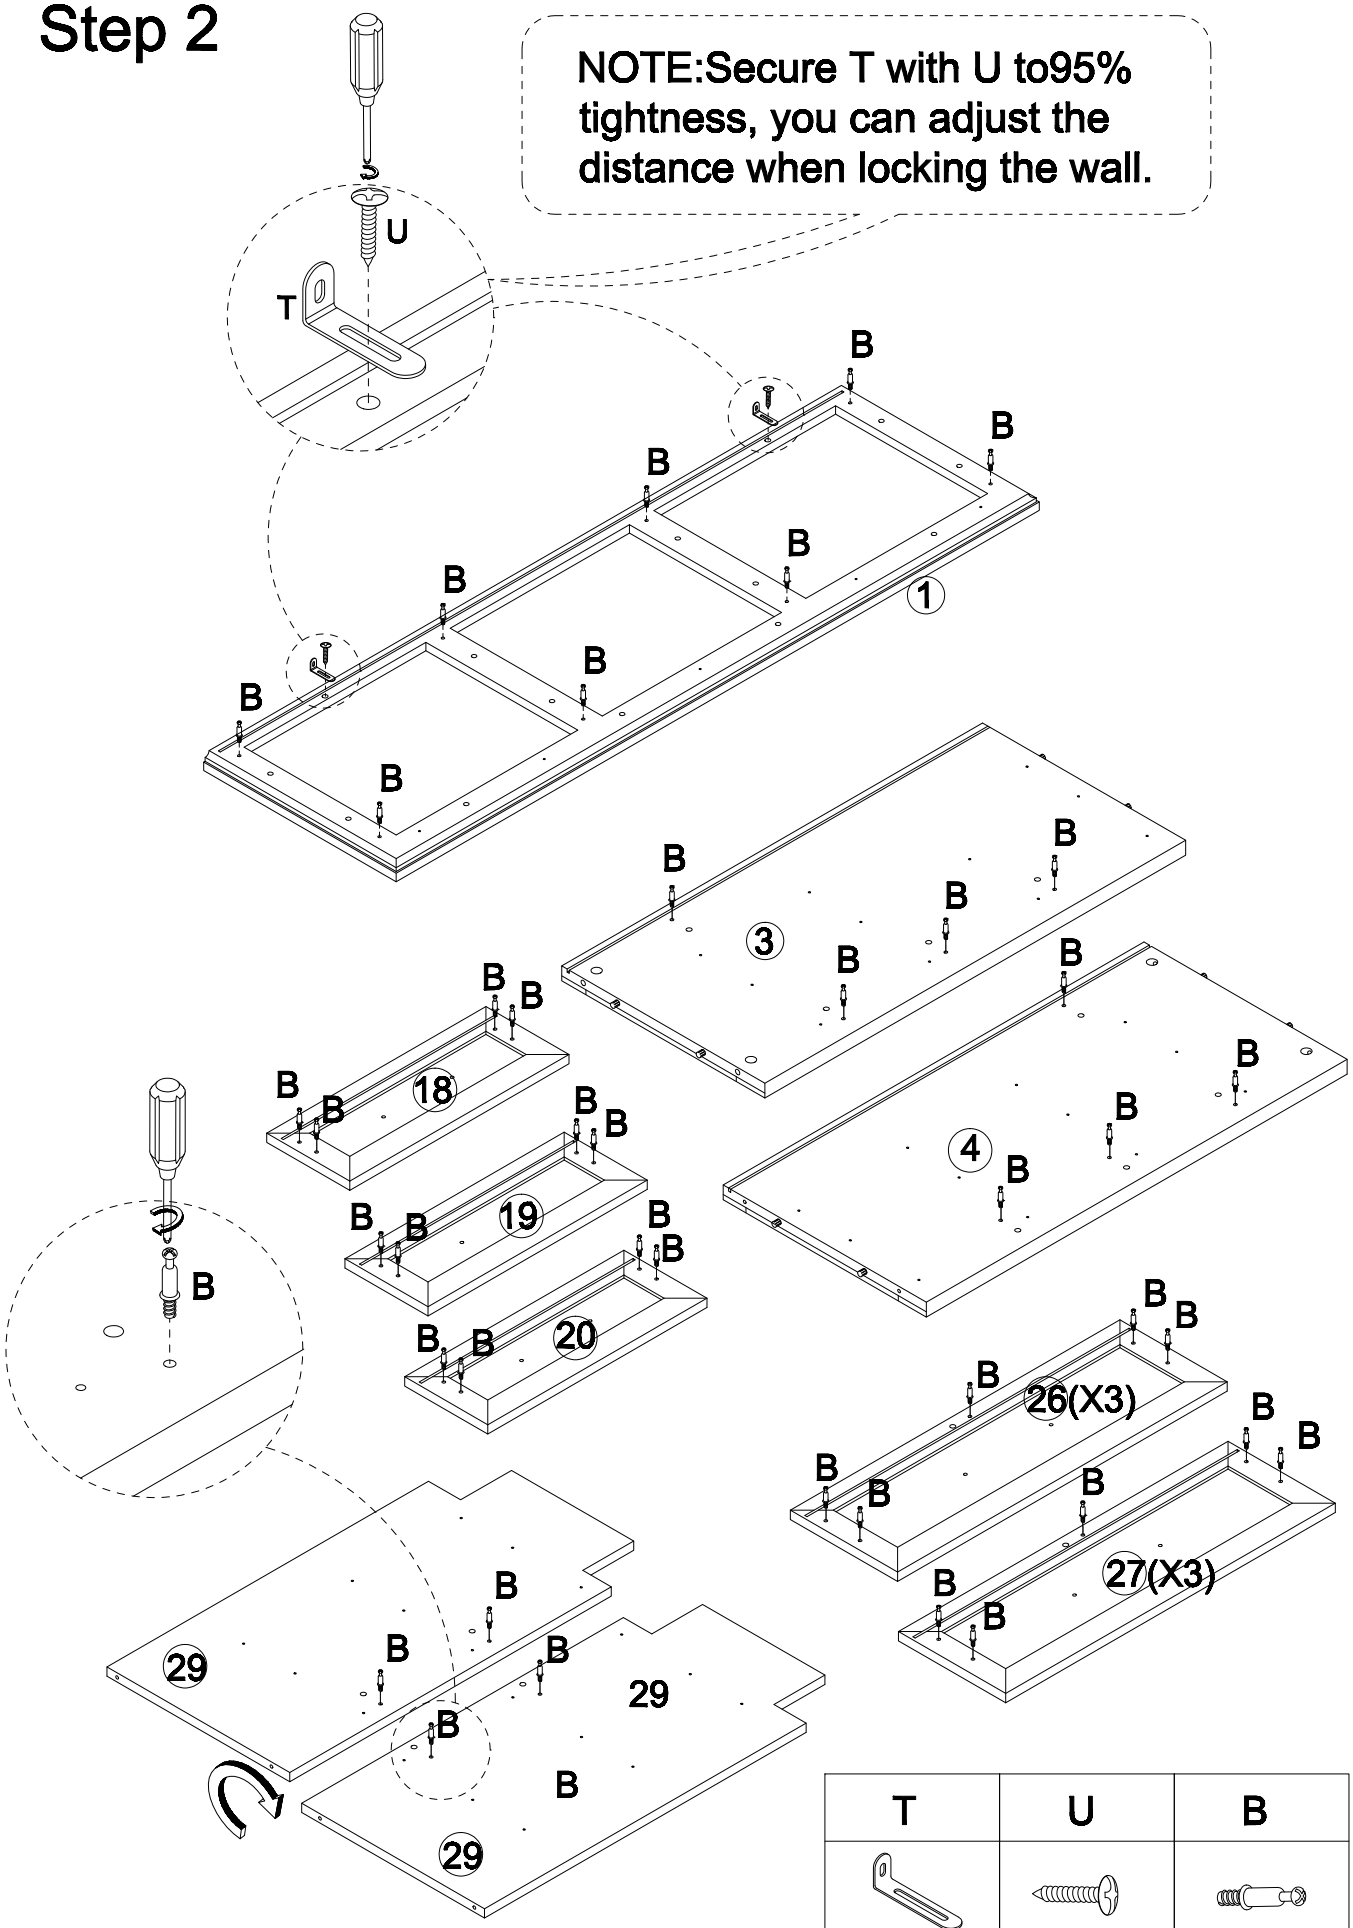


T	U	B
X2	X2	X62

Step 3


M-CL

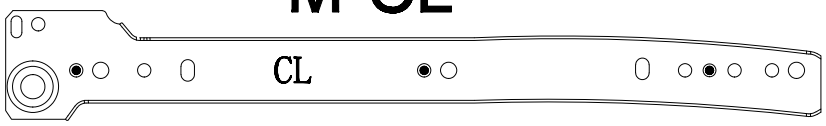


M-CR

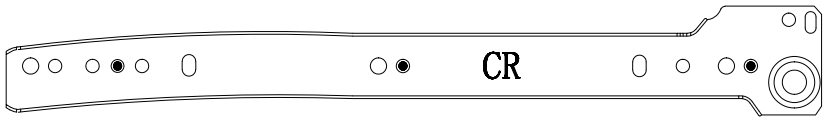

M-DL

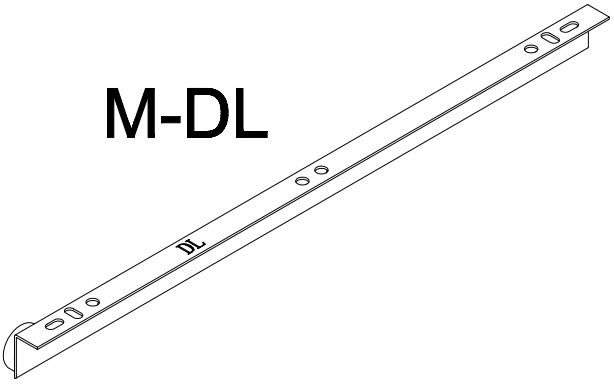



M-DR

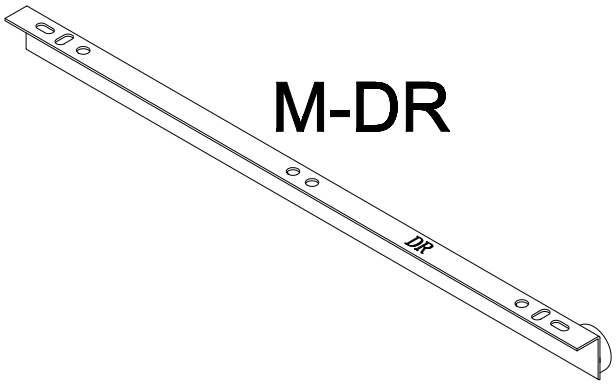


Step 4


NOTE:
Refer to the images to identify M-CL (left) and M-CR (right). Attach M-CL to #3 panel and M-CR to #4 panel. [R] screws must go in the exact spots shown.

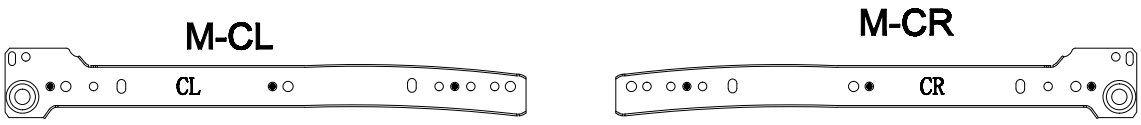


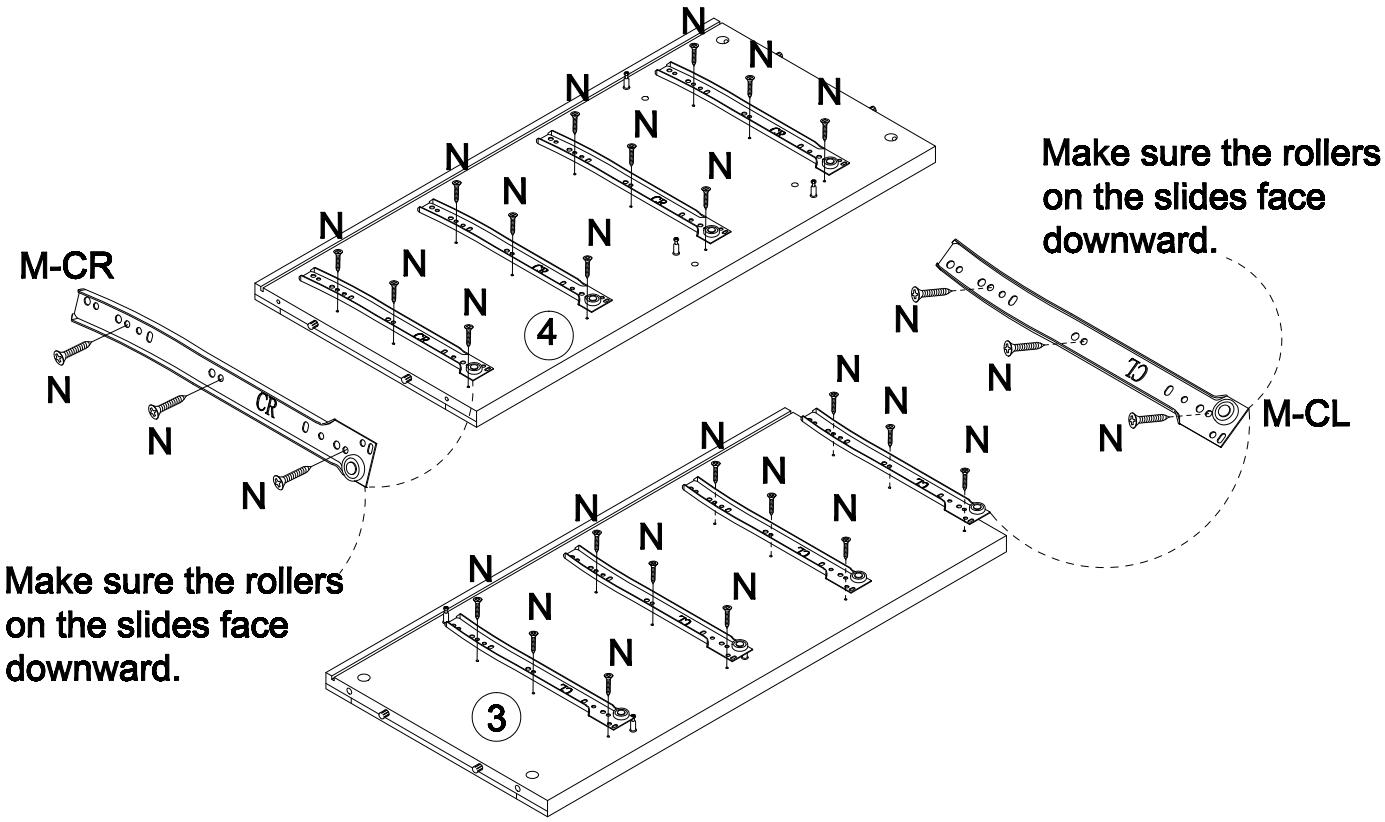

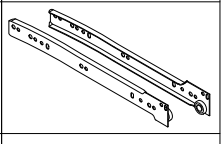
N	M
	
X24	X4


Step 5

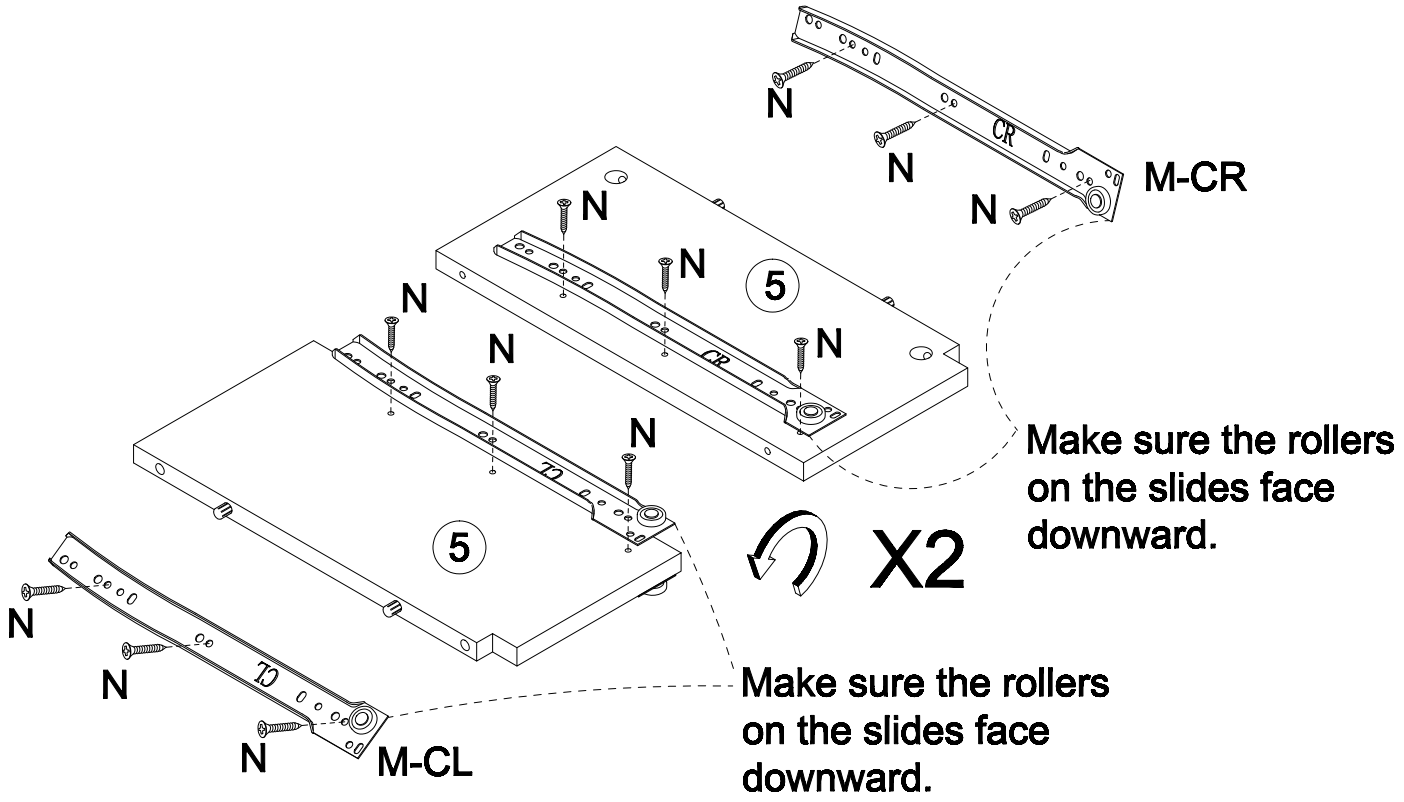

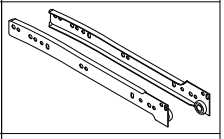
N	M
	
X12	X2


Step 6

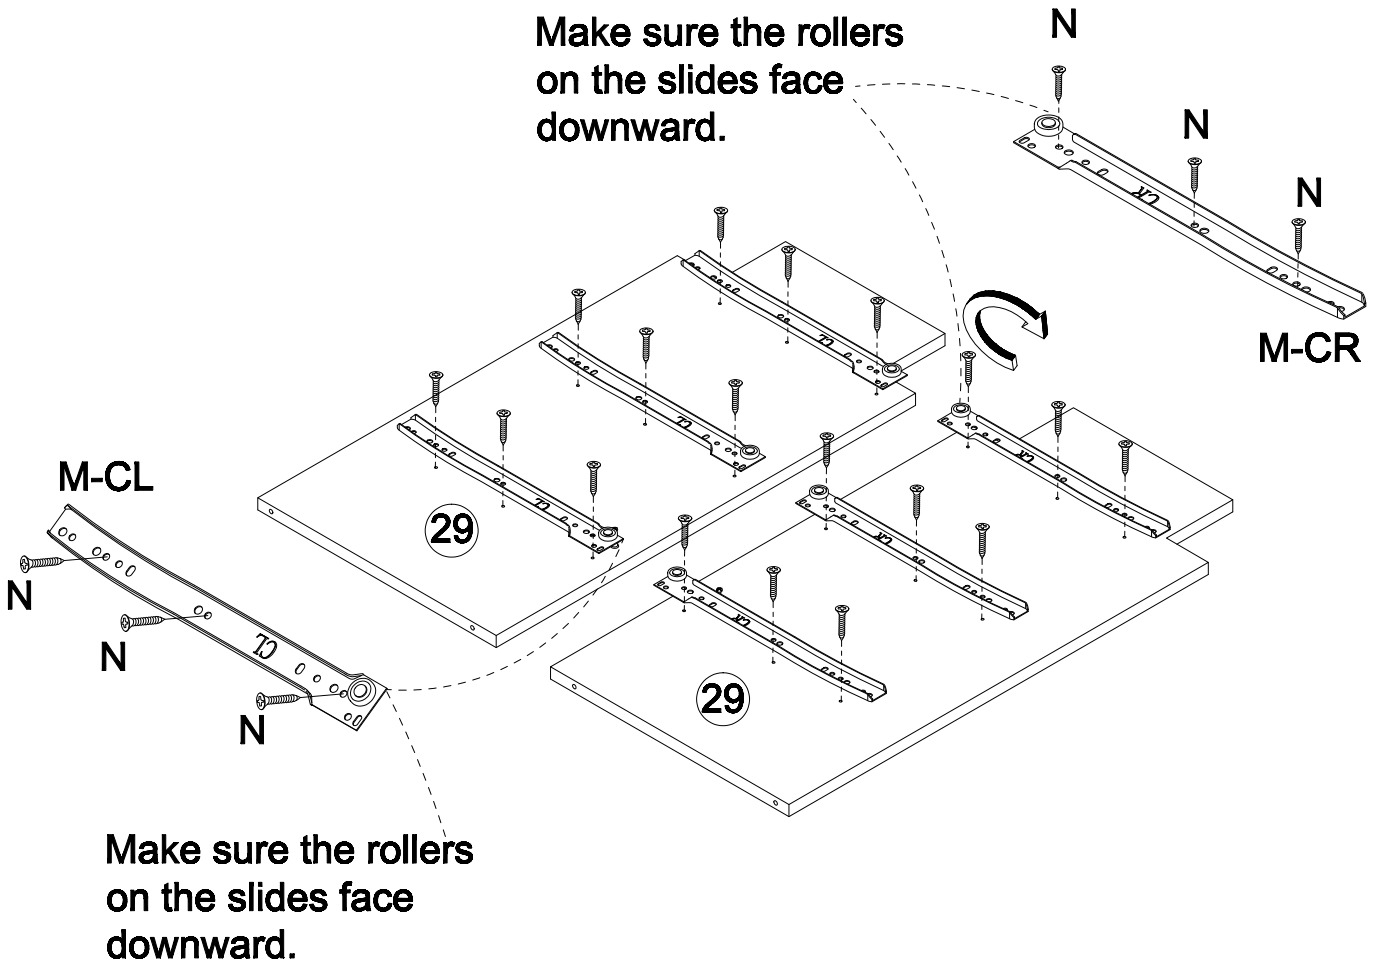

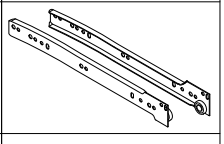
N	M
	
X18	X3


Step 7

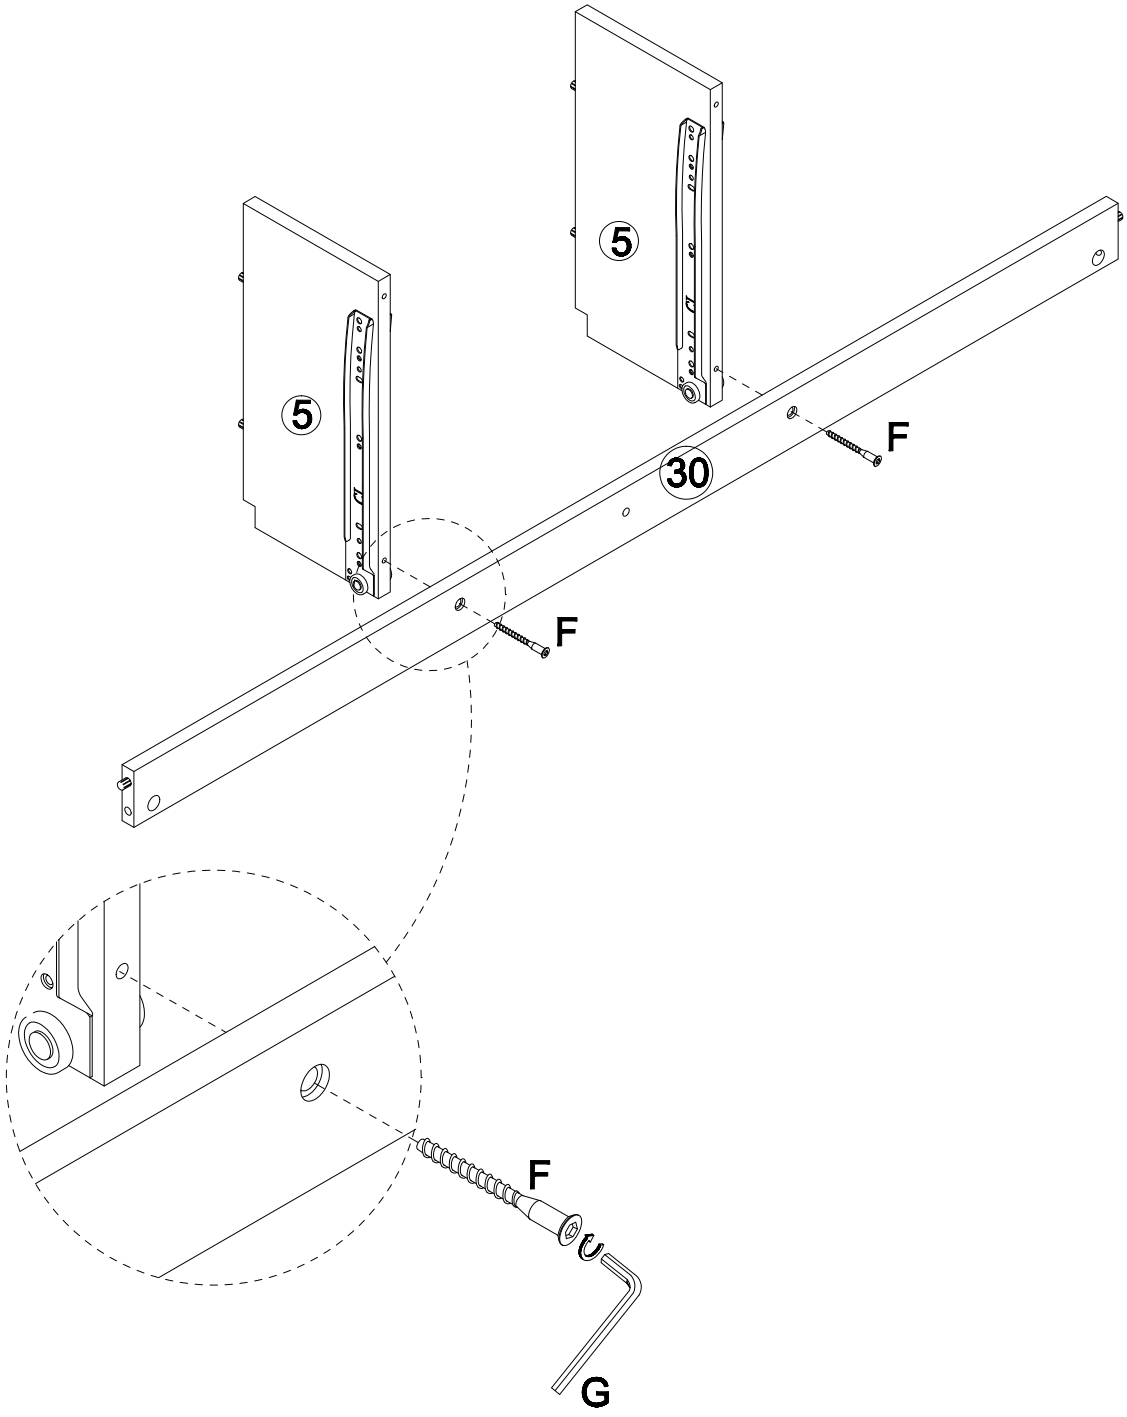


G	F
	
X1	X2


Step 8

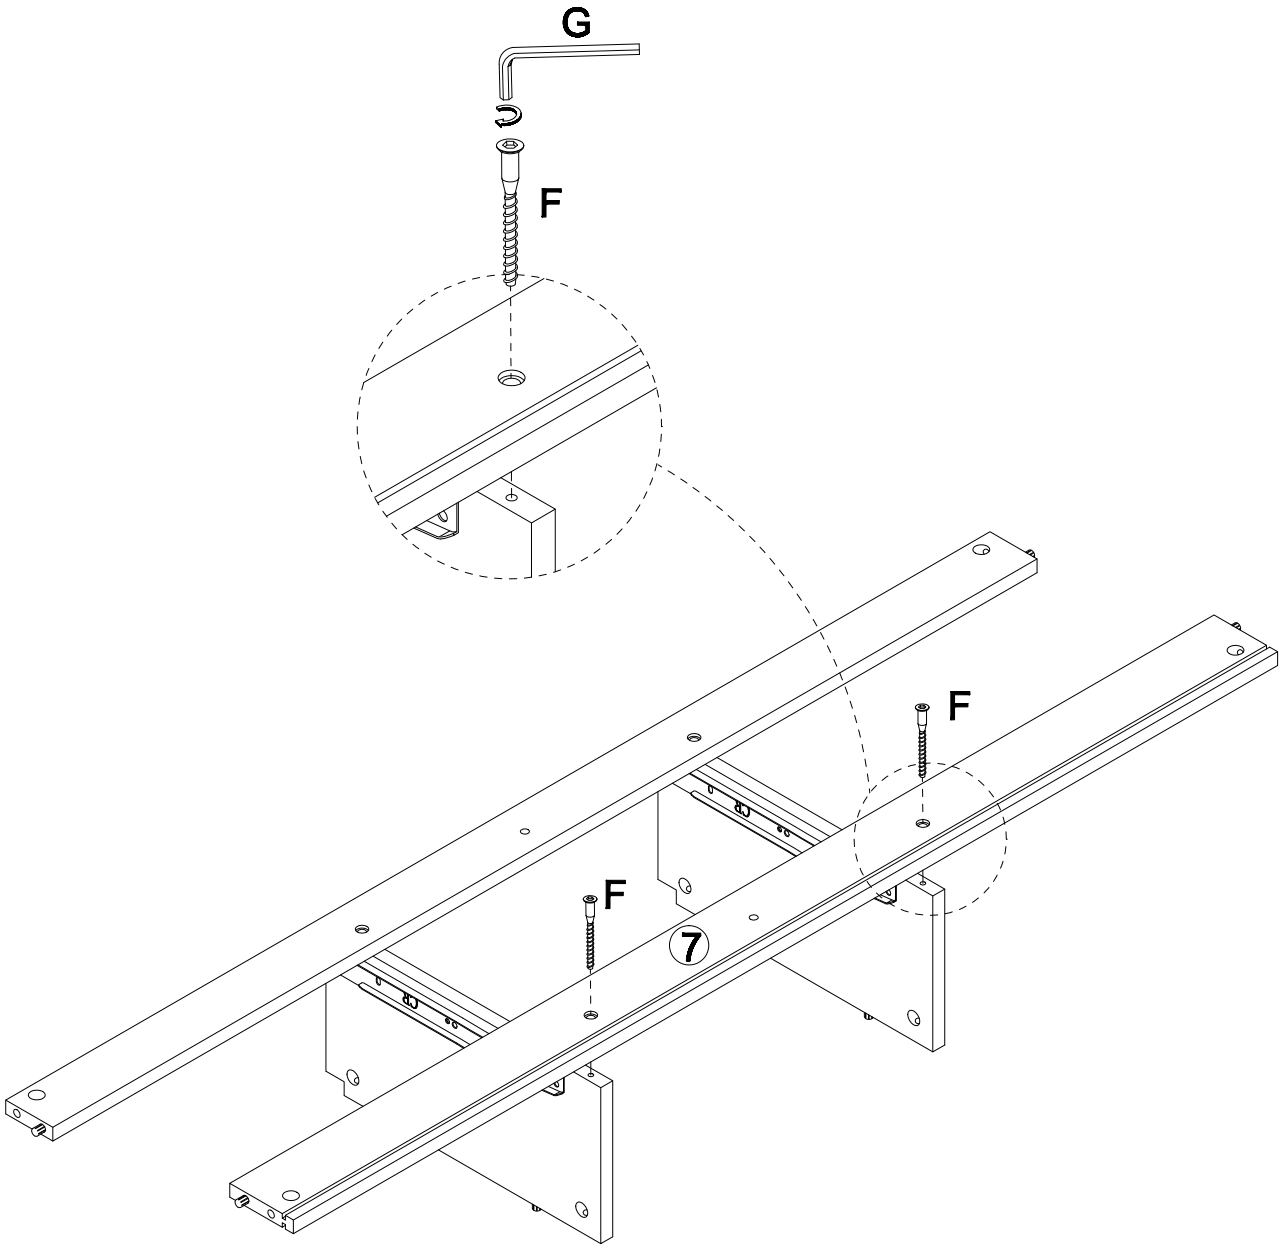

G	F
	
X1	X2

Step 9

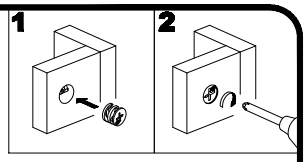


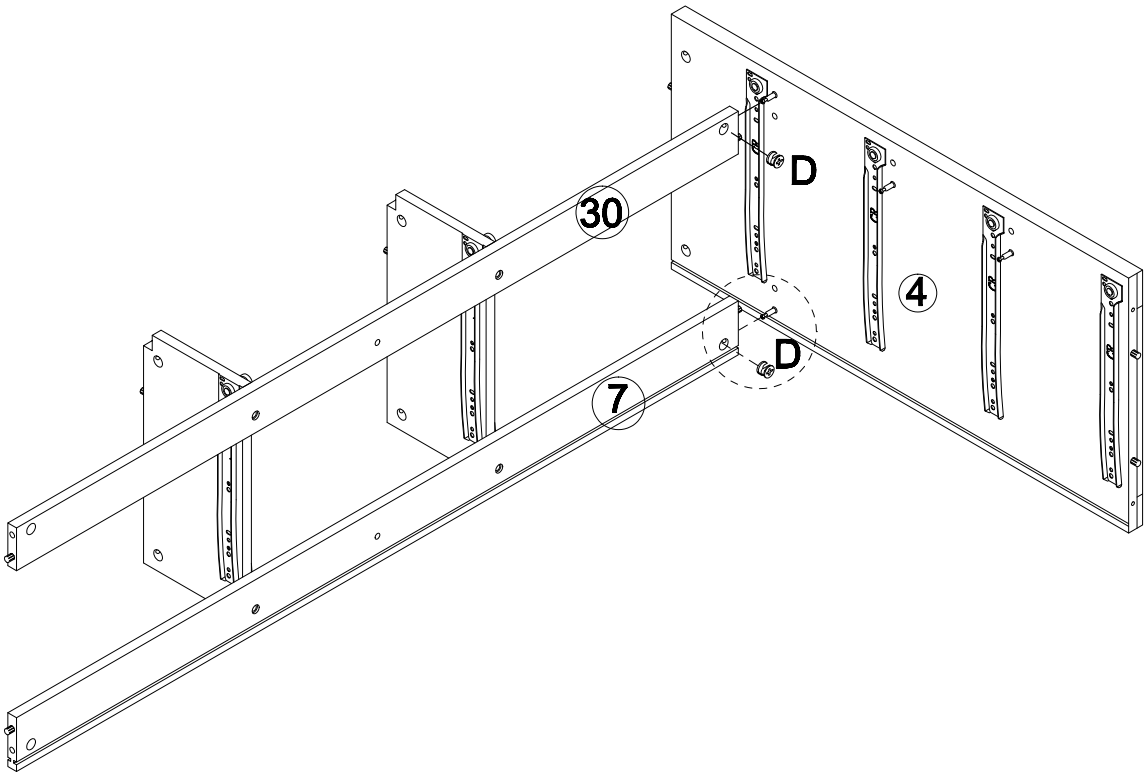


D

X2

Step 10

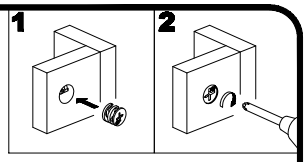


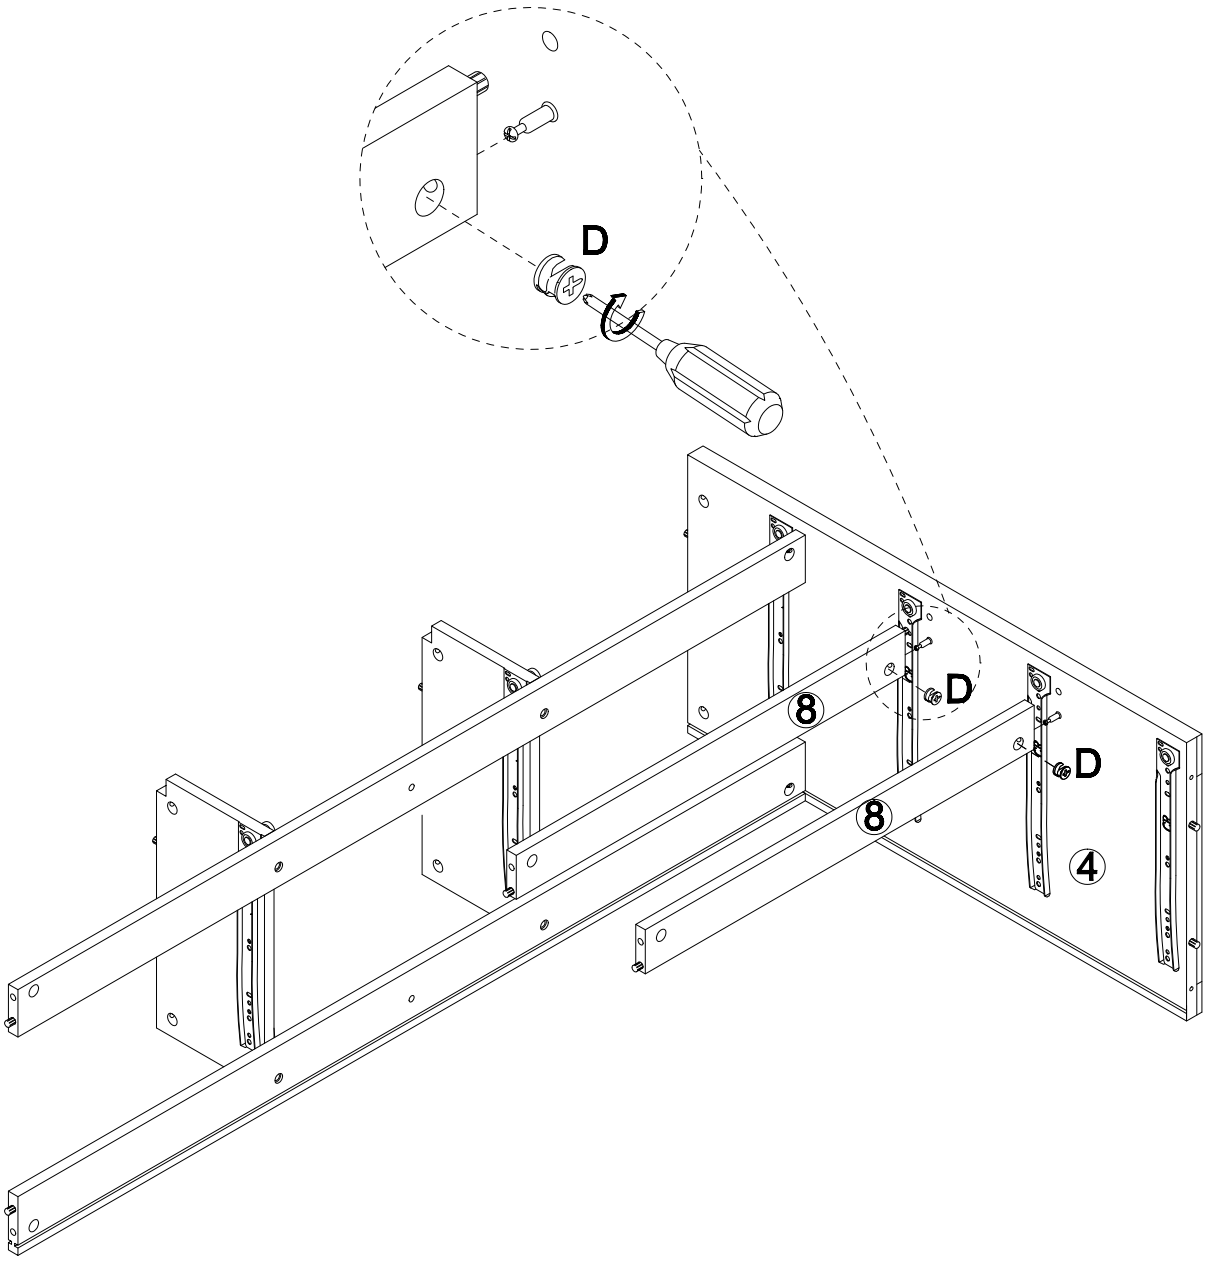


D

X2

Step 11

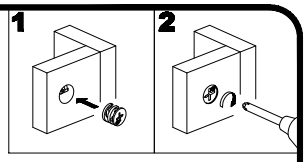


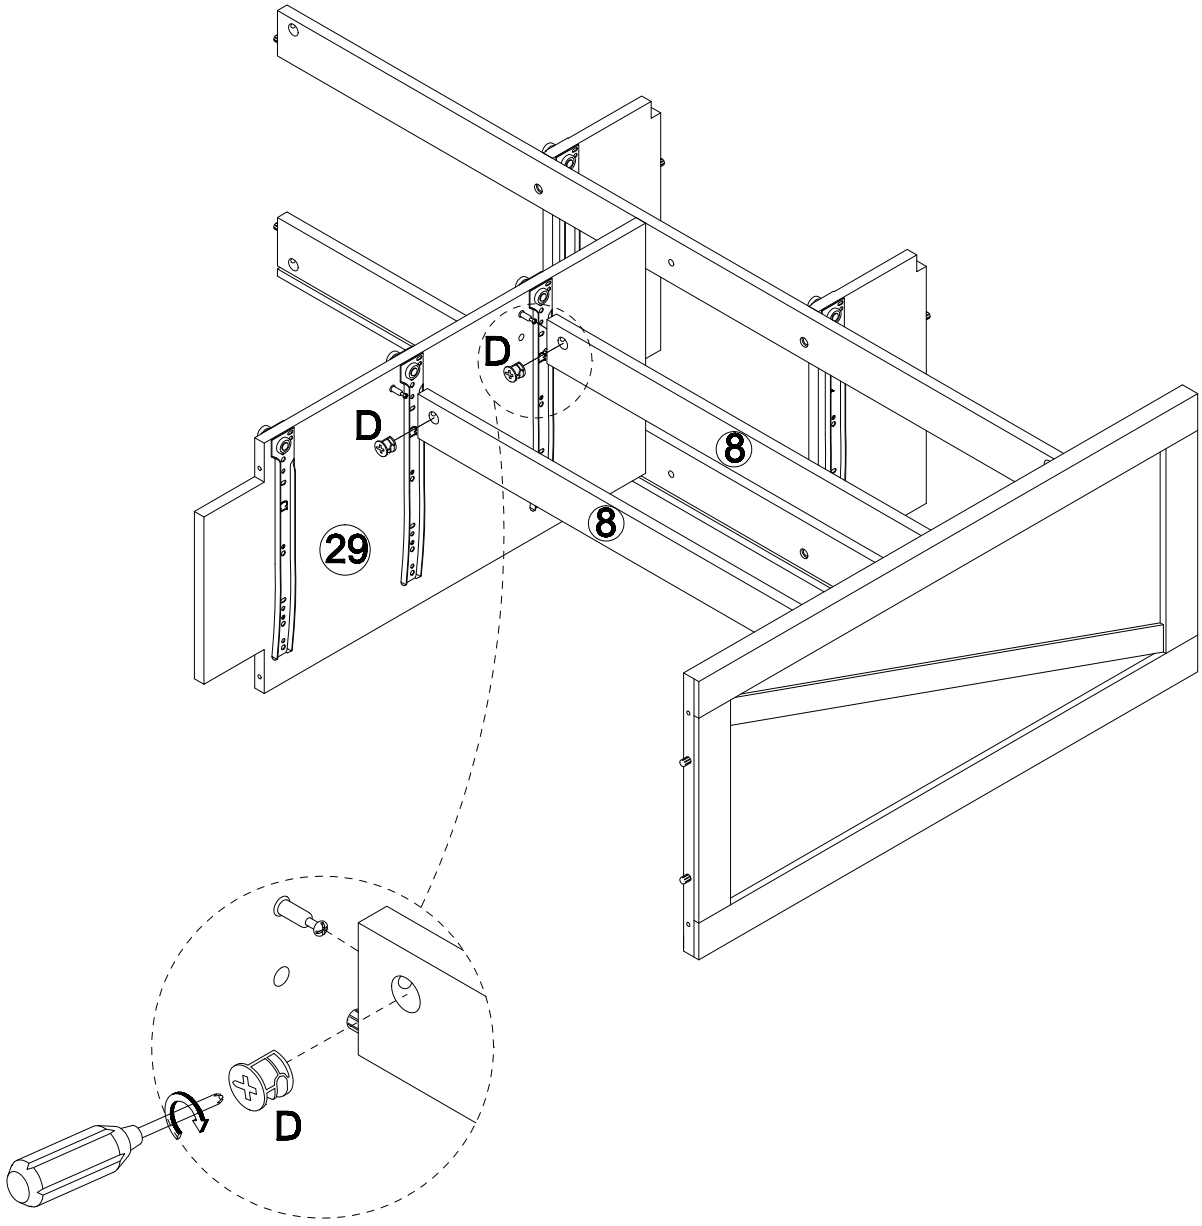


D


X2


Step 12

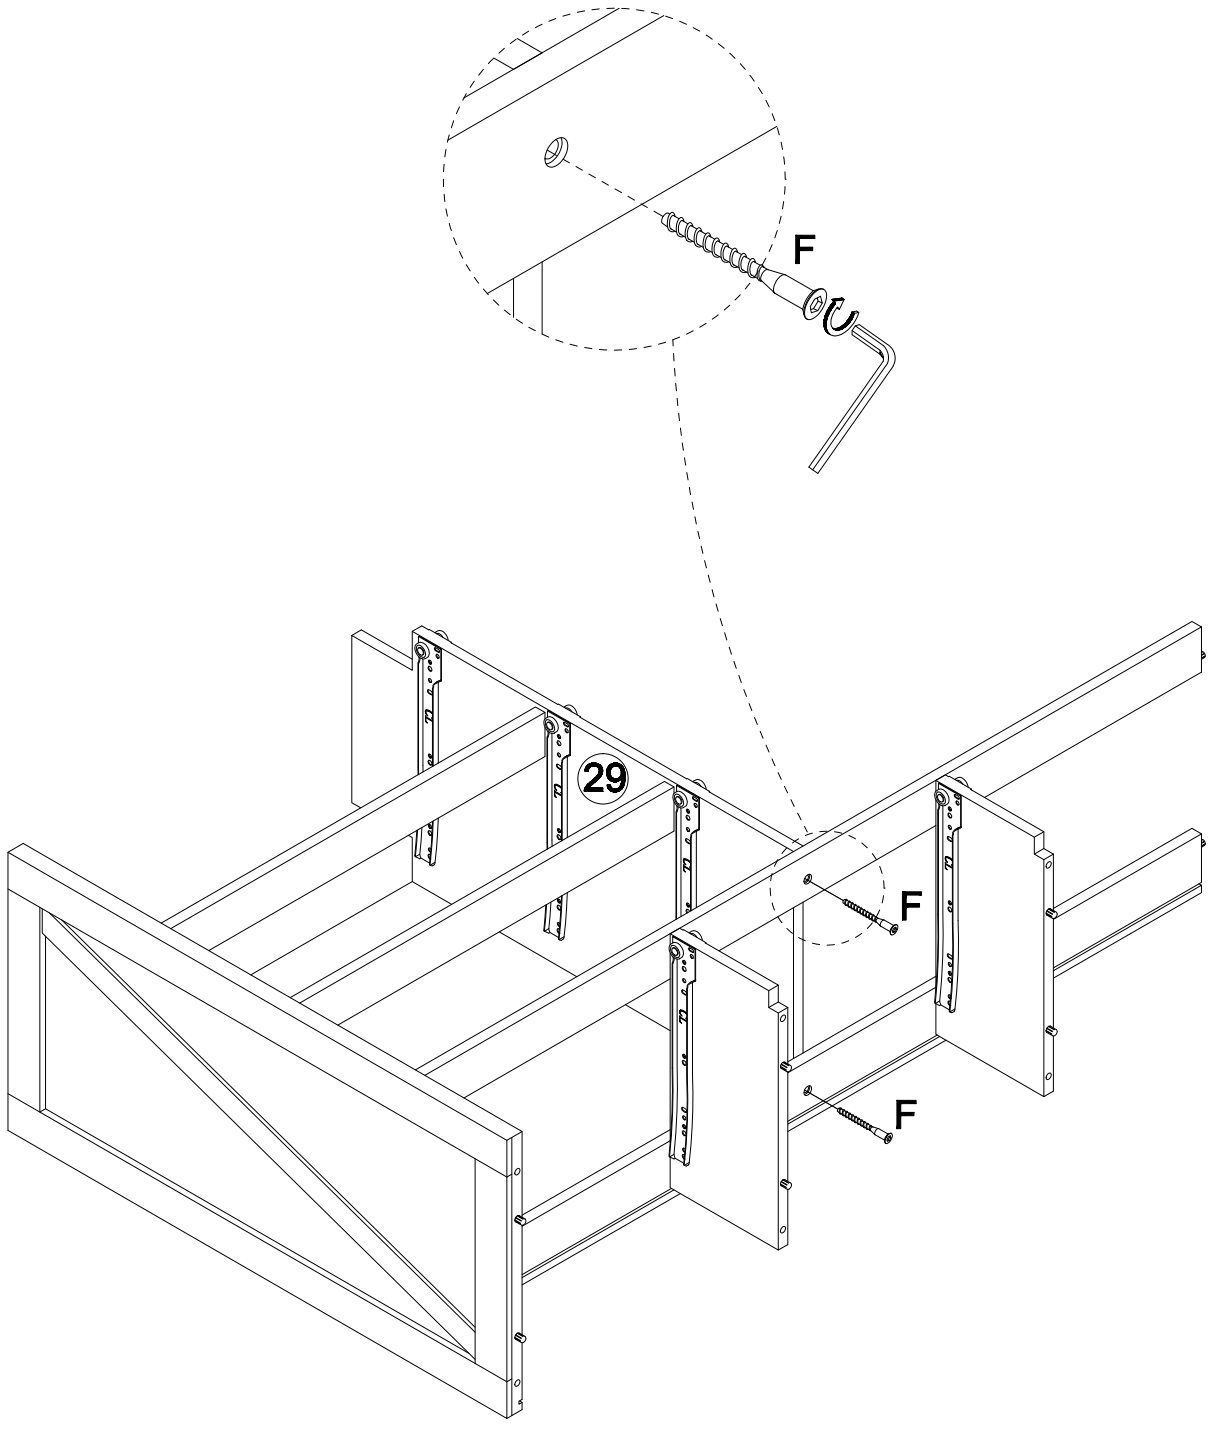

G	F
	
X1	X2

Step 13

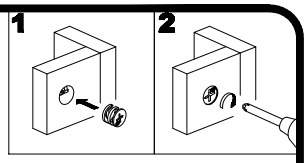


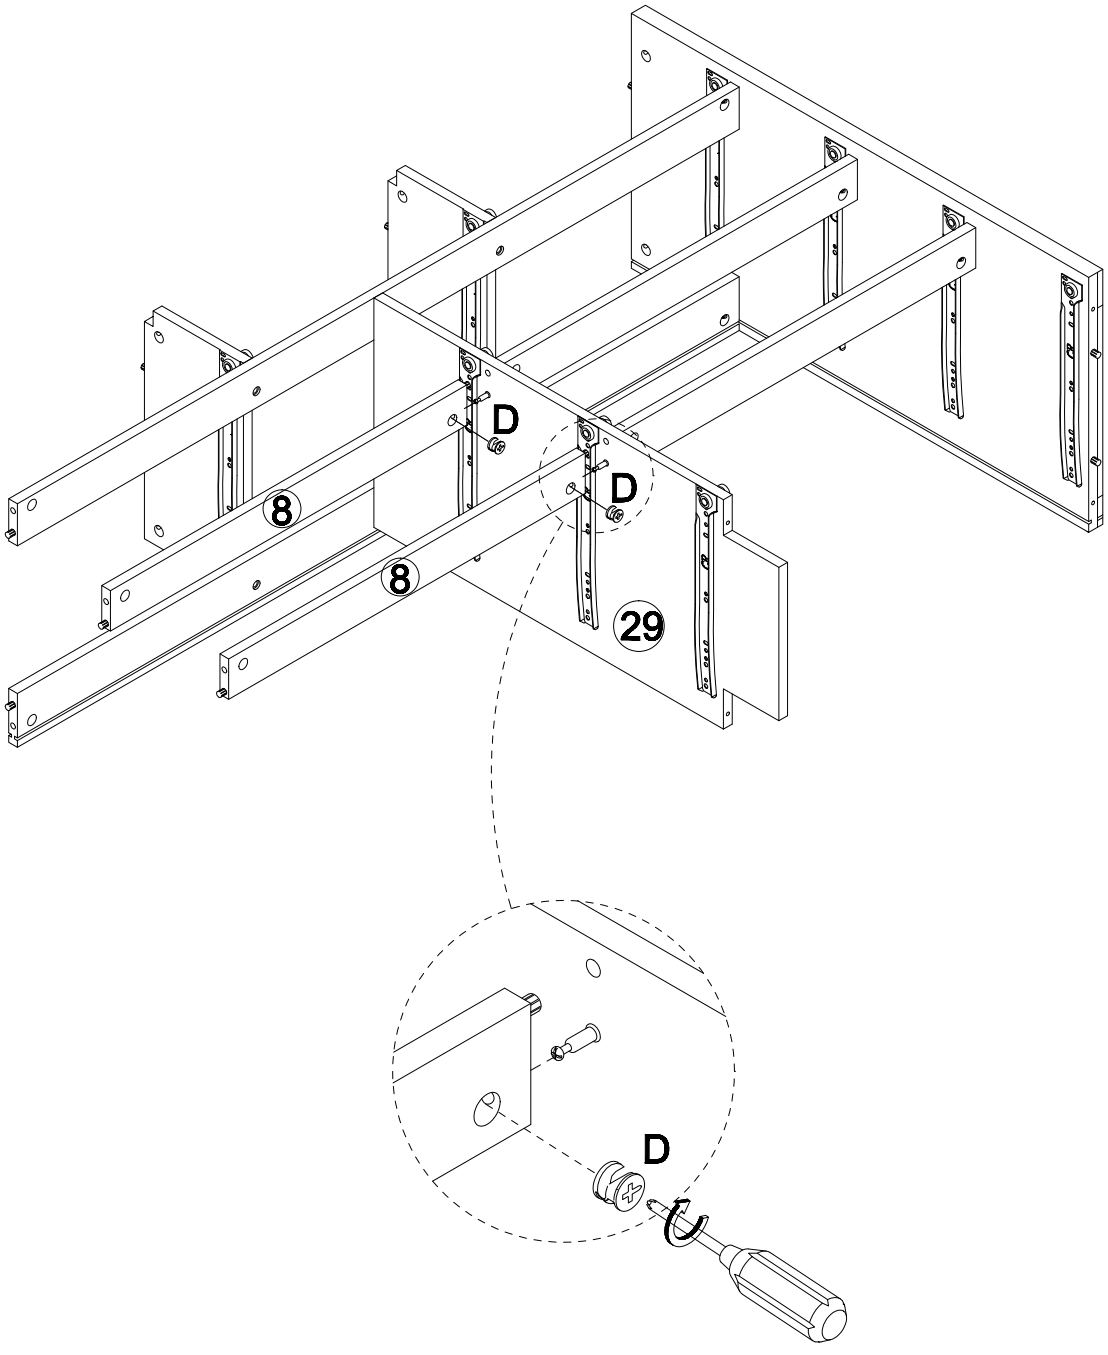


D

X2

Step 14

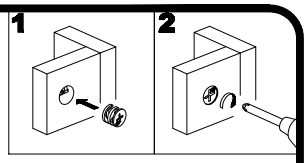


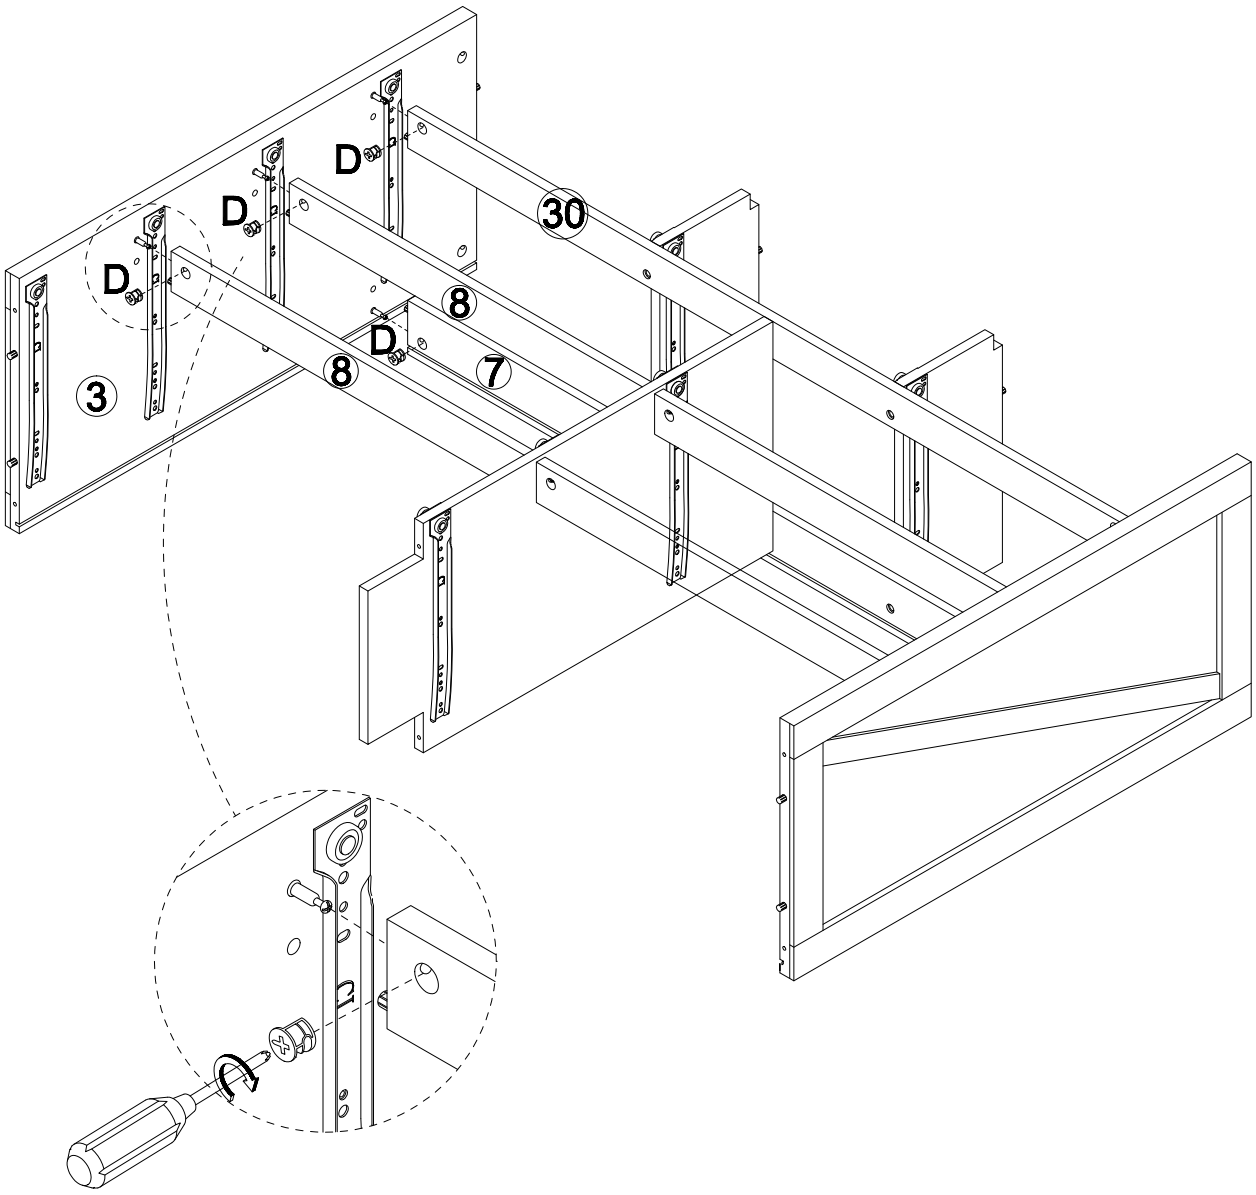


D


X4

Step 15

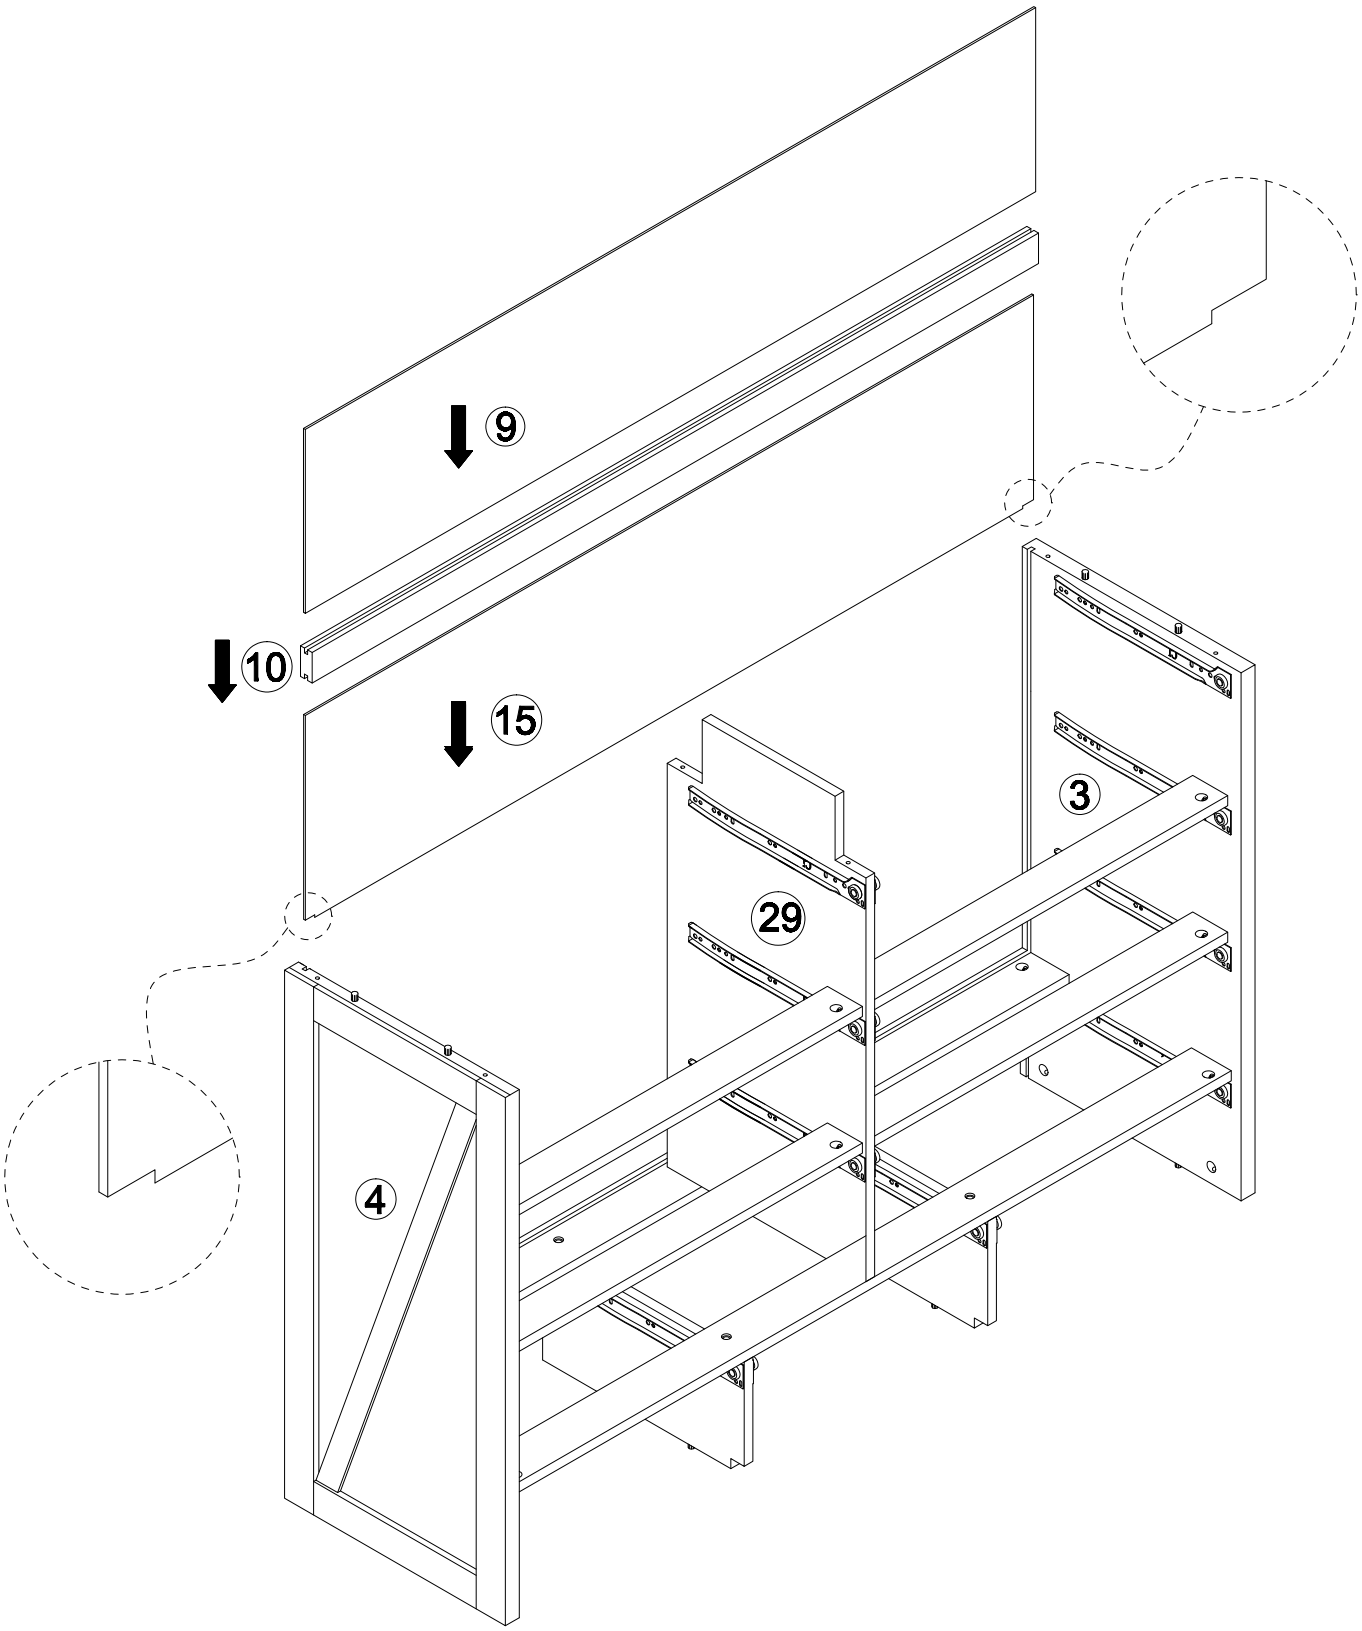


Step 16

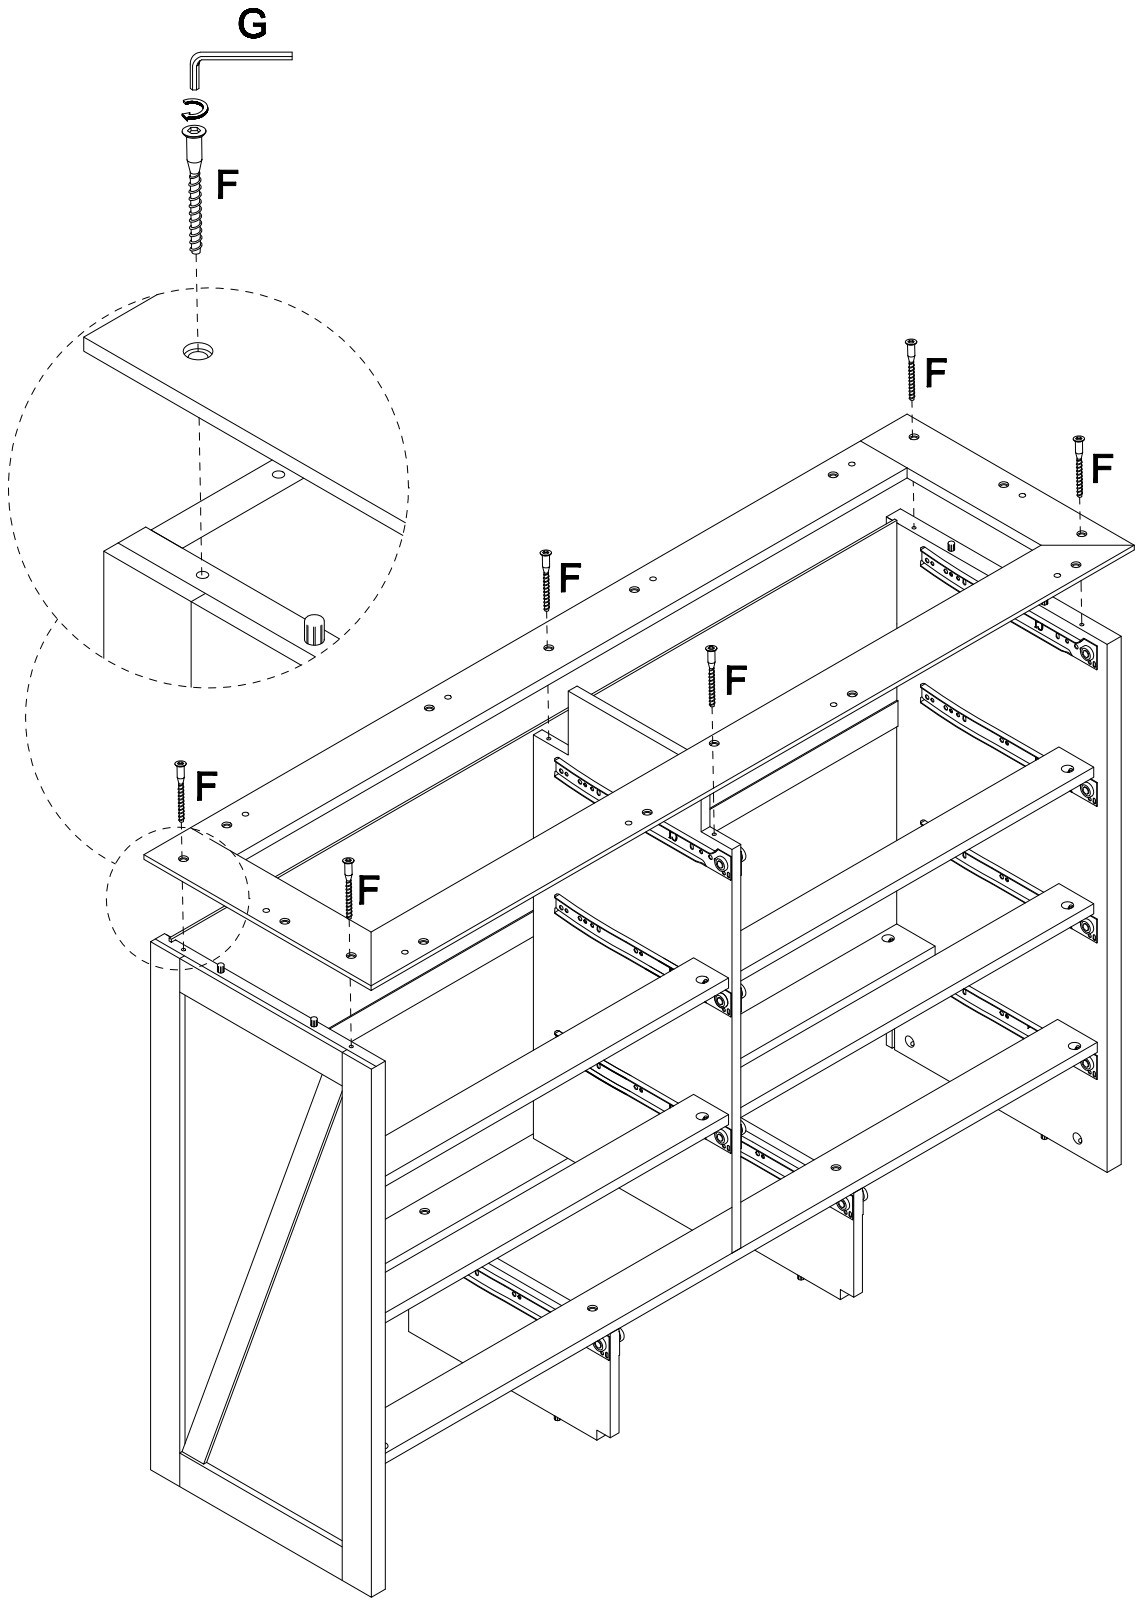


G	F
	
X1	X6

Step 17

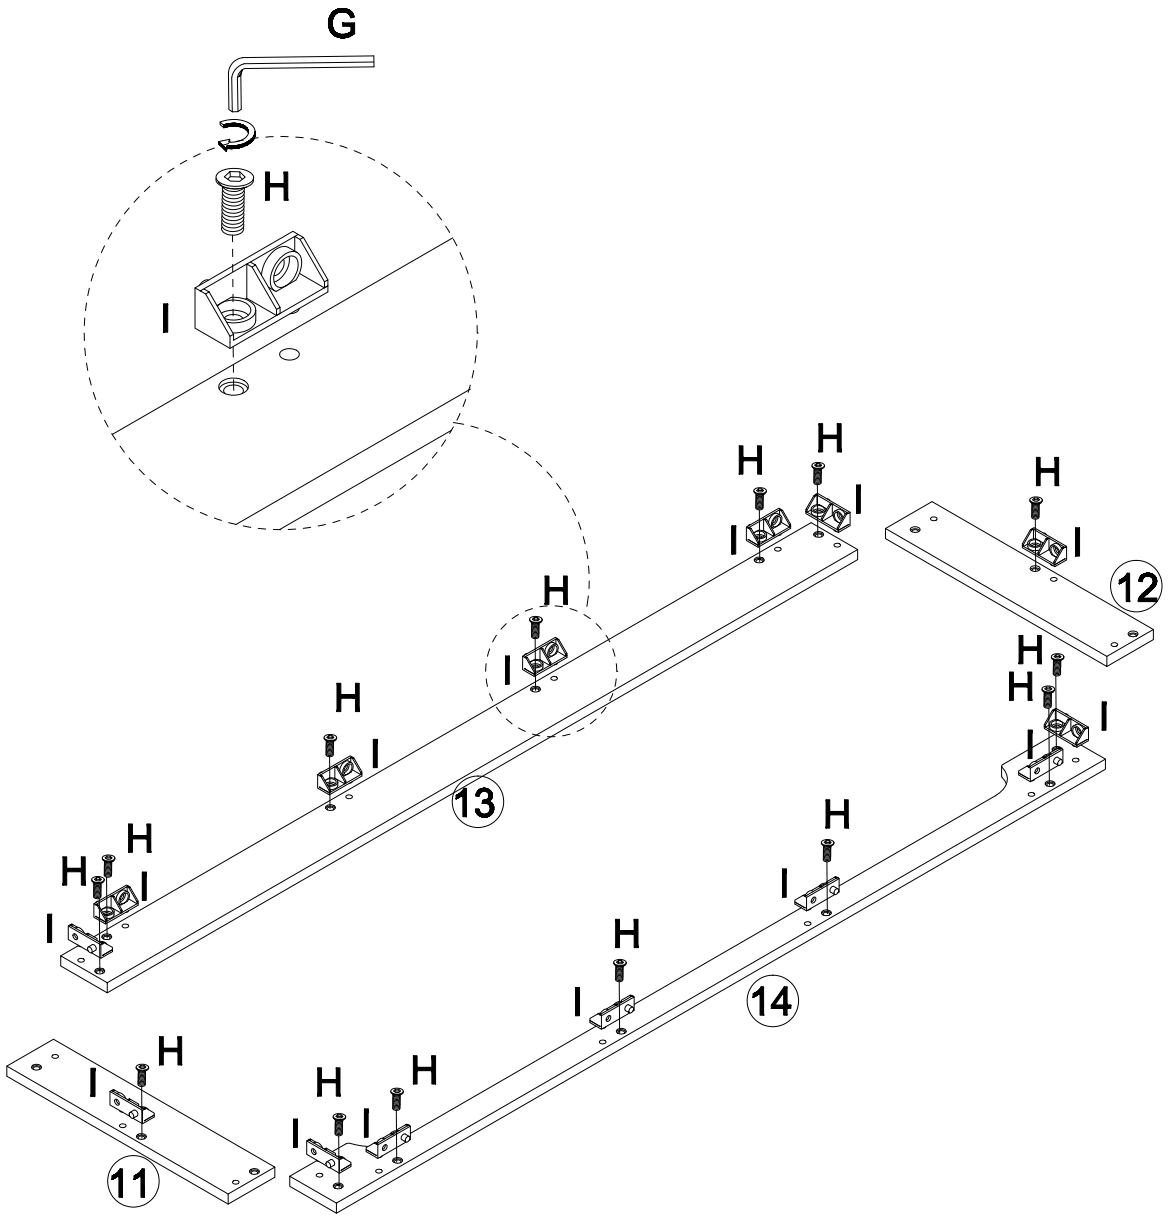


G	I	H
		
X1	X14	X14

Step 18

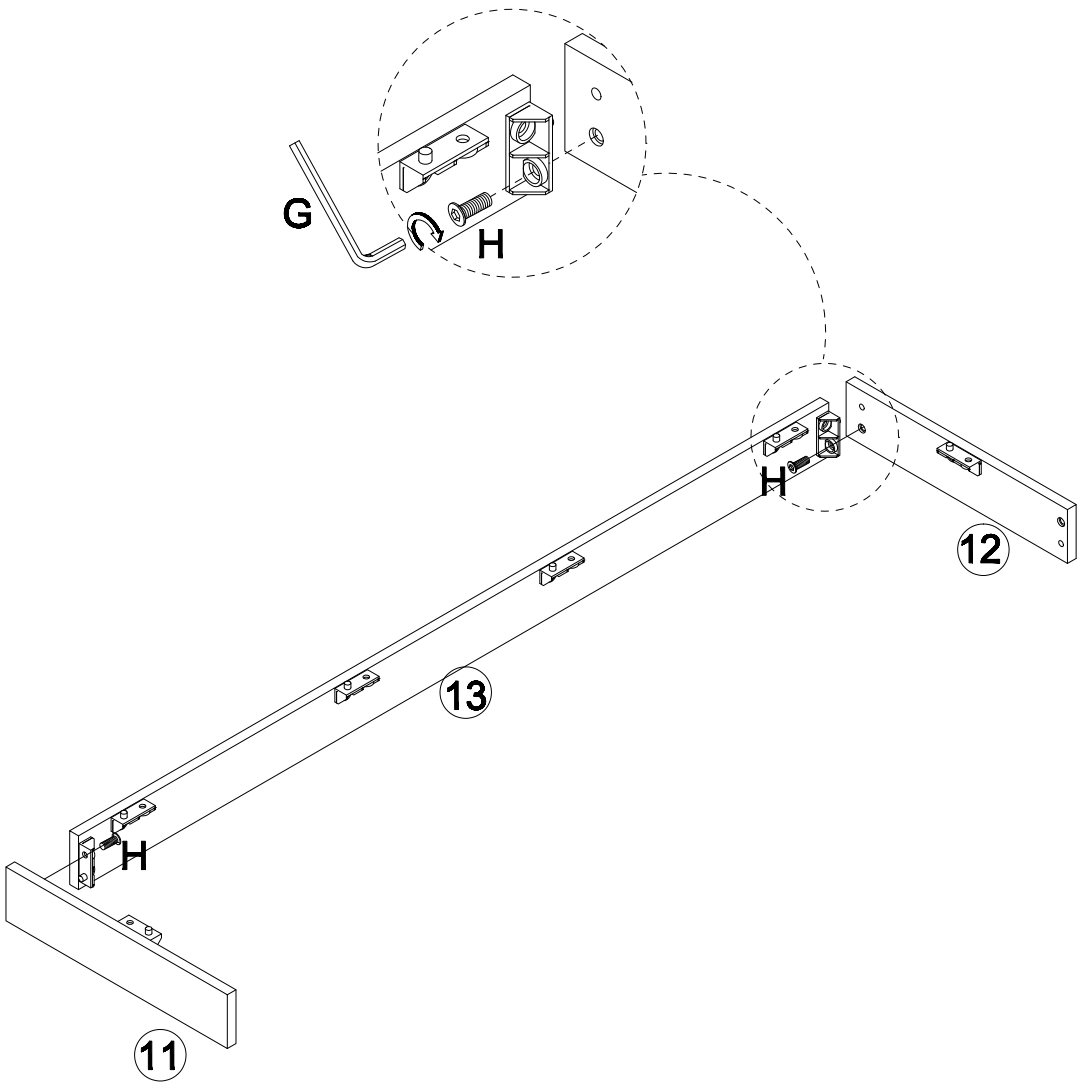


G	H
	
X1	X2

Step 19

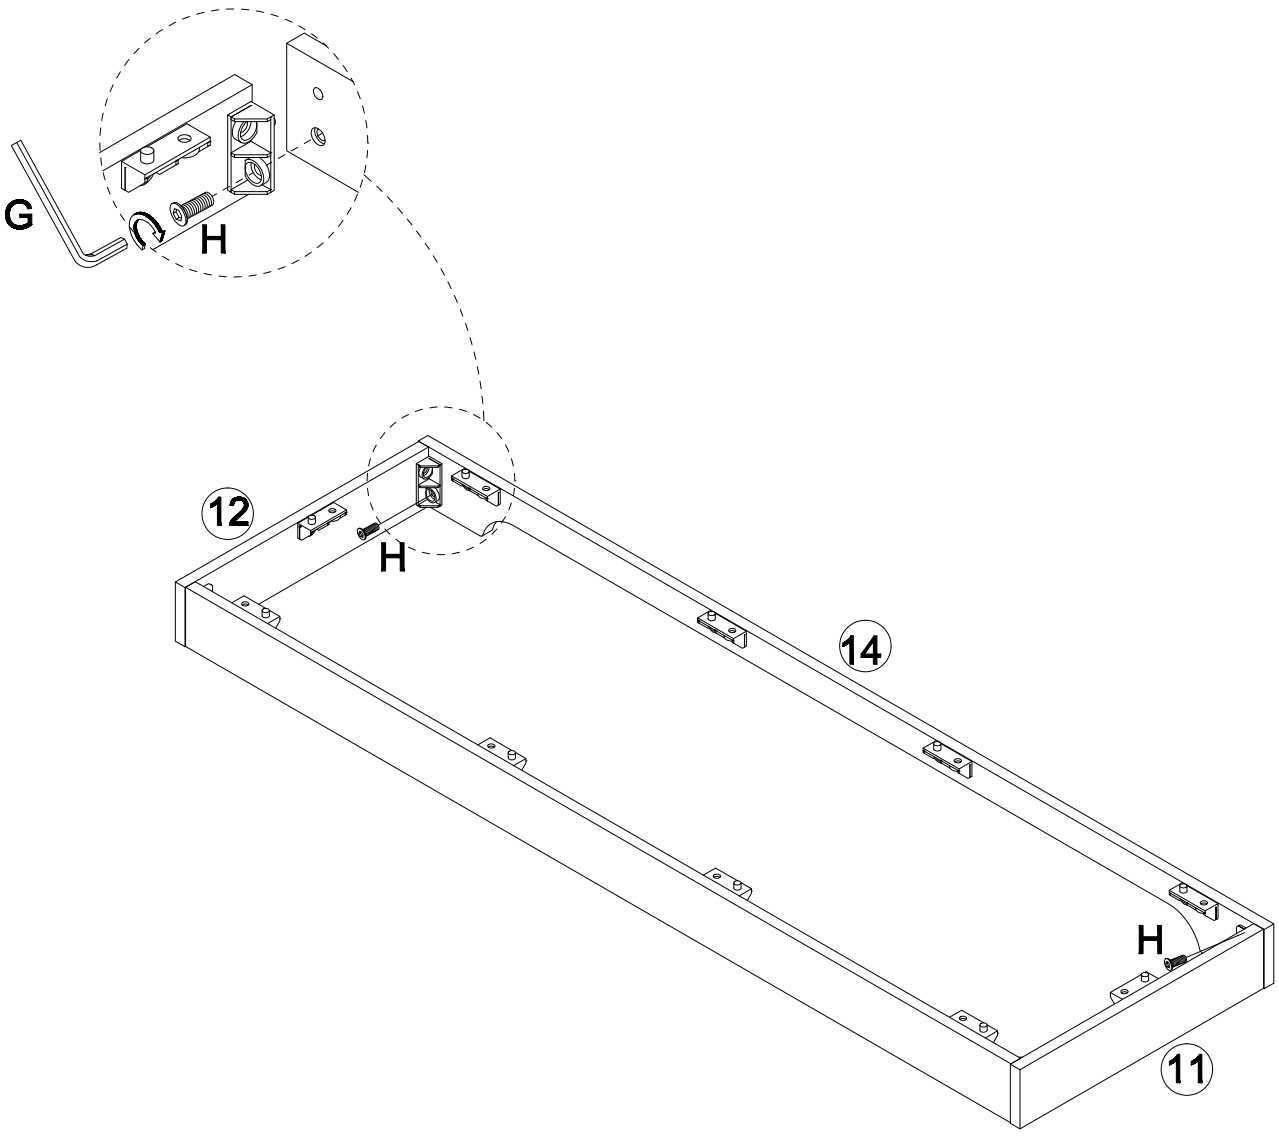


G	H
	
X1	X2

Step 20

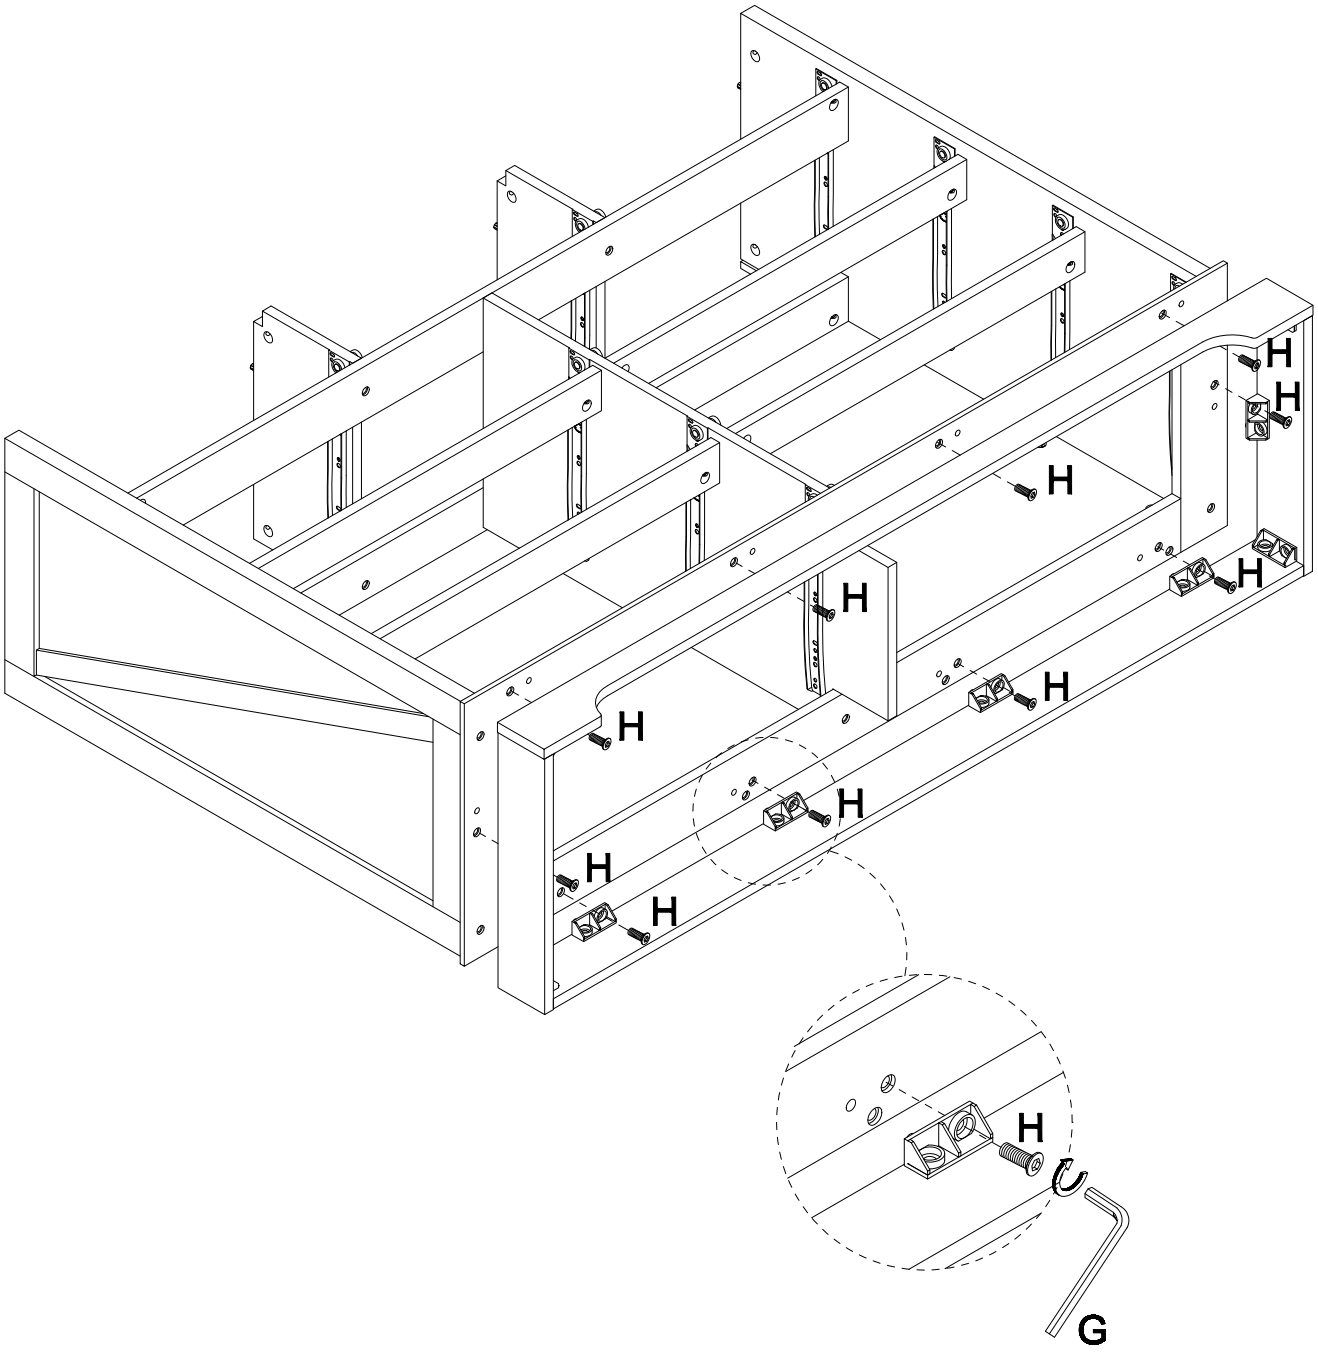


G	H
	
X1	X10

Step 21

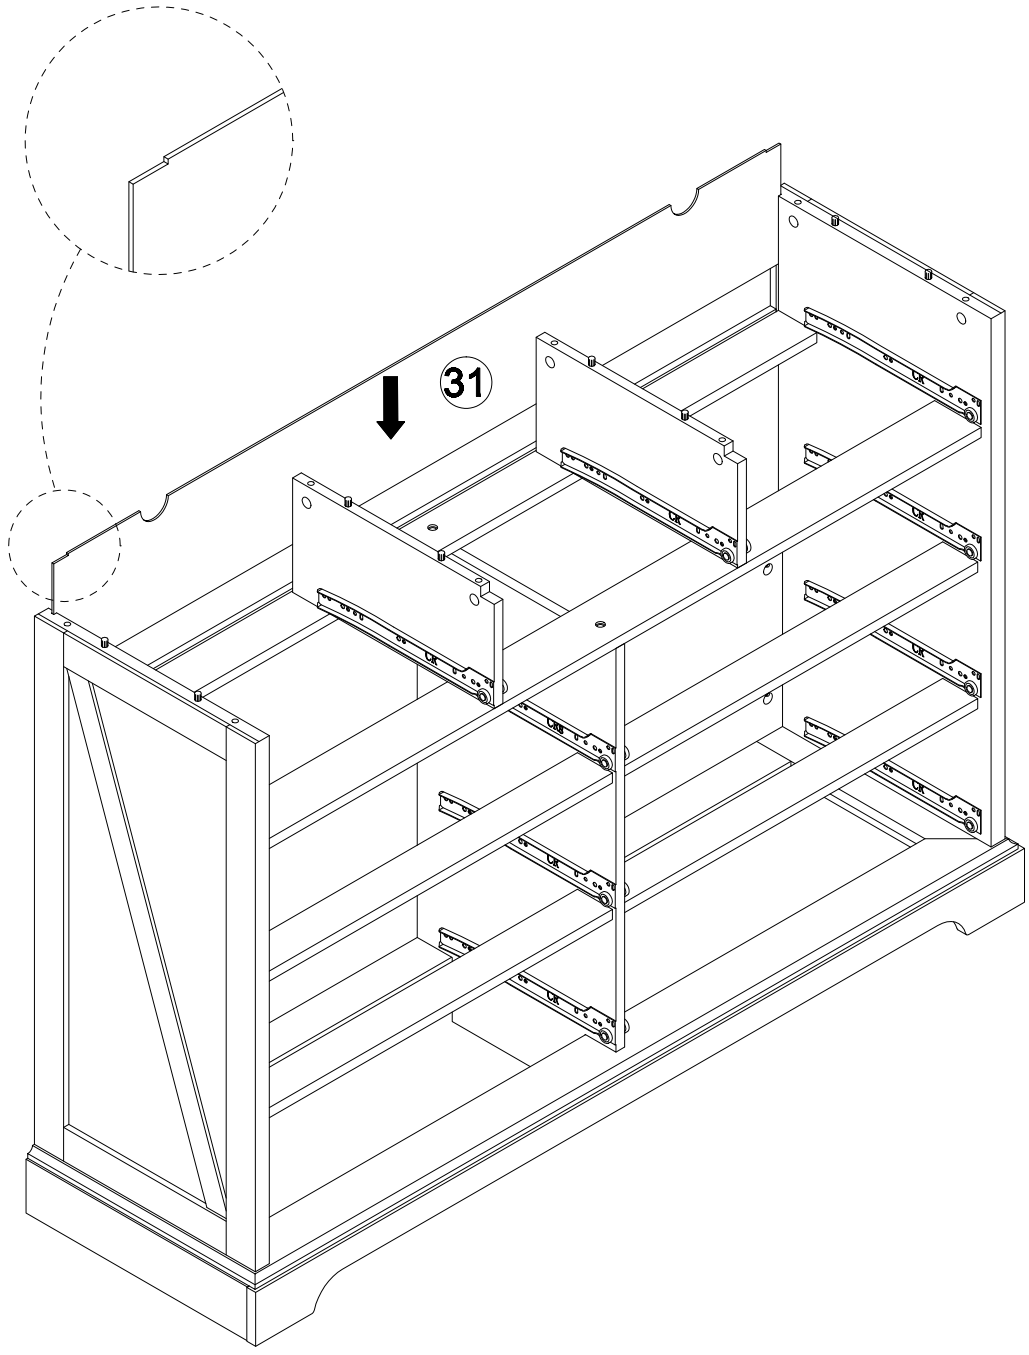


Step 22

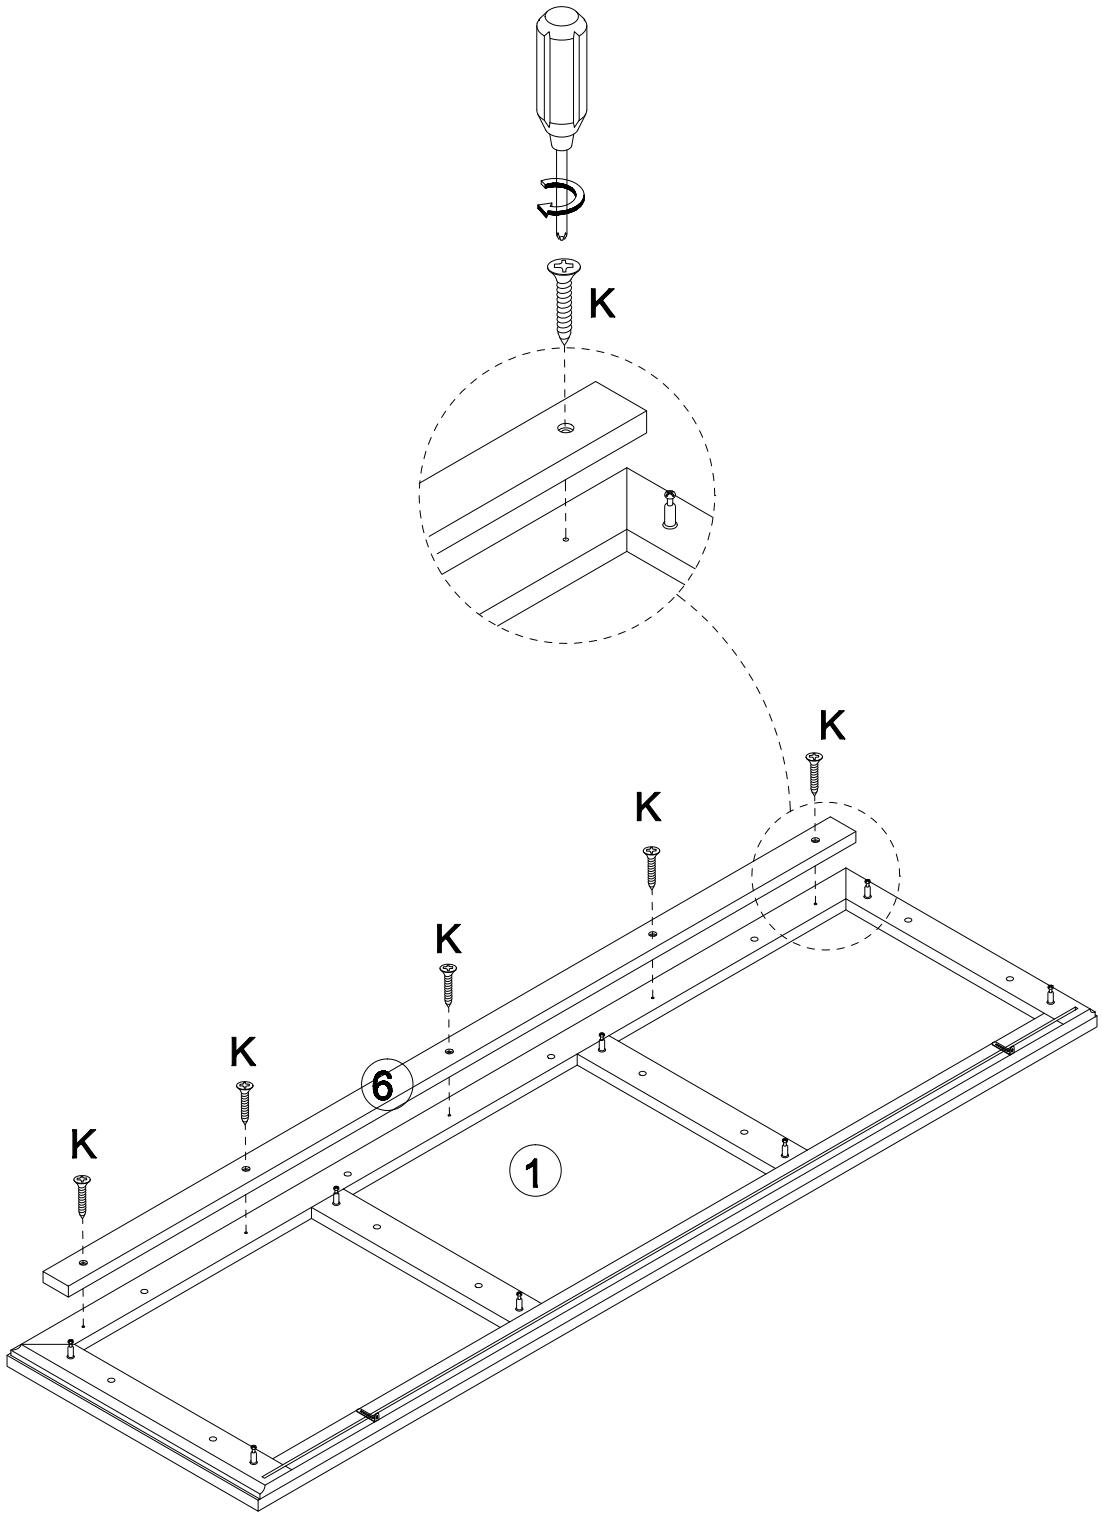


K

X5

Step 23

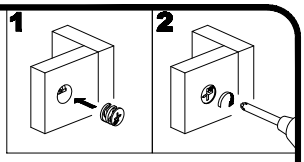

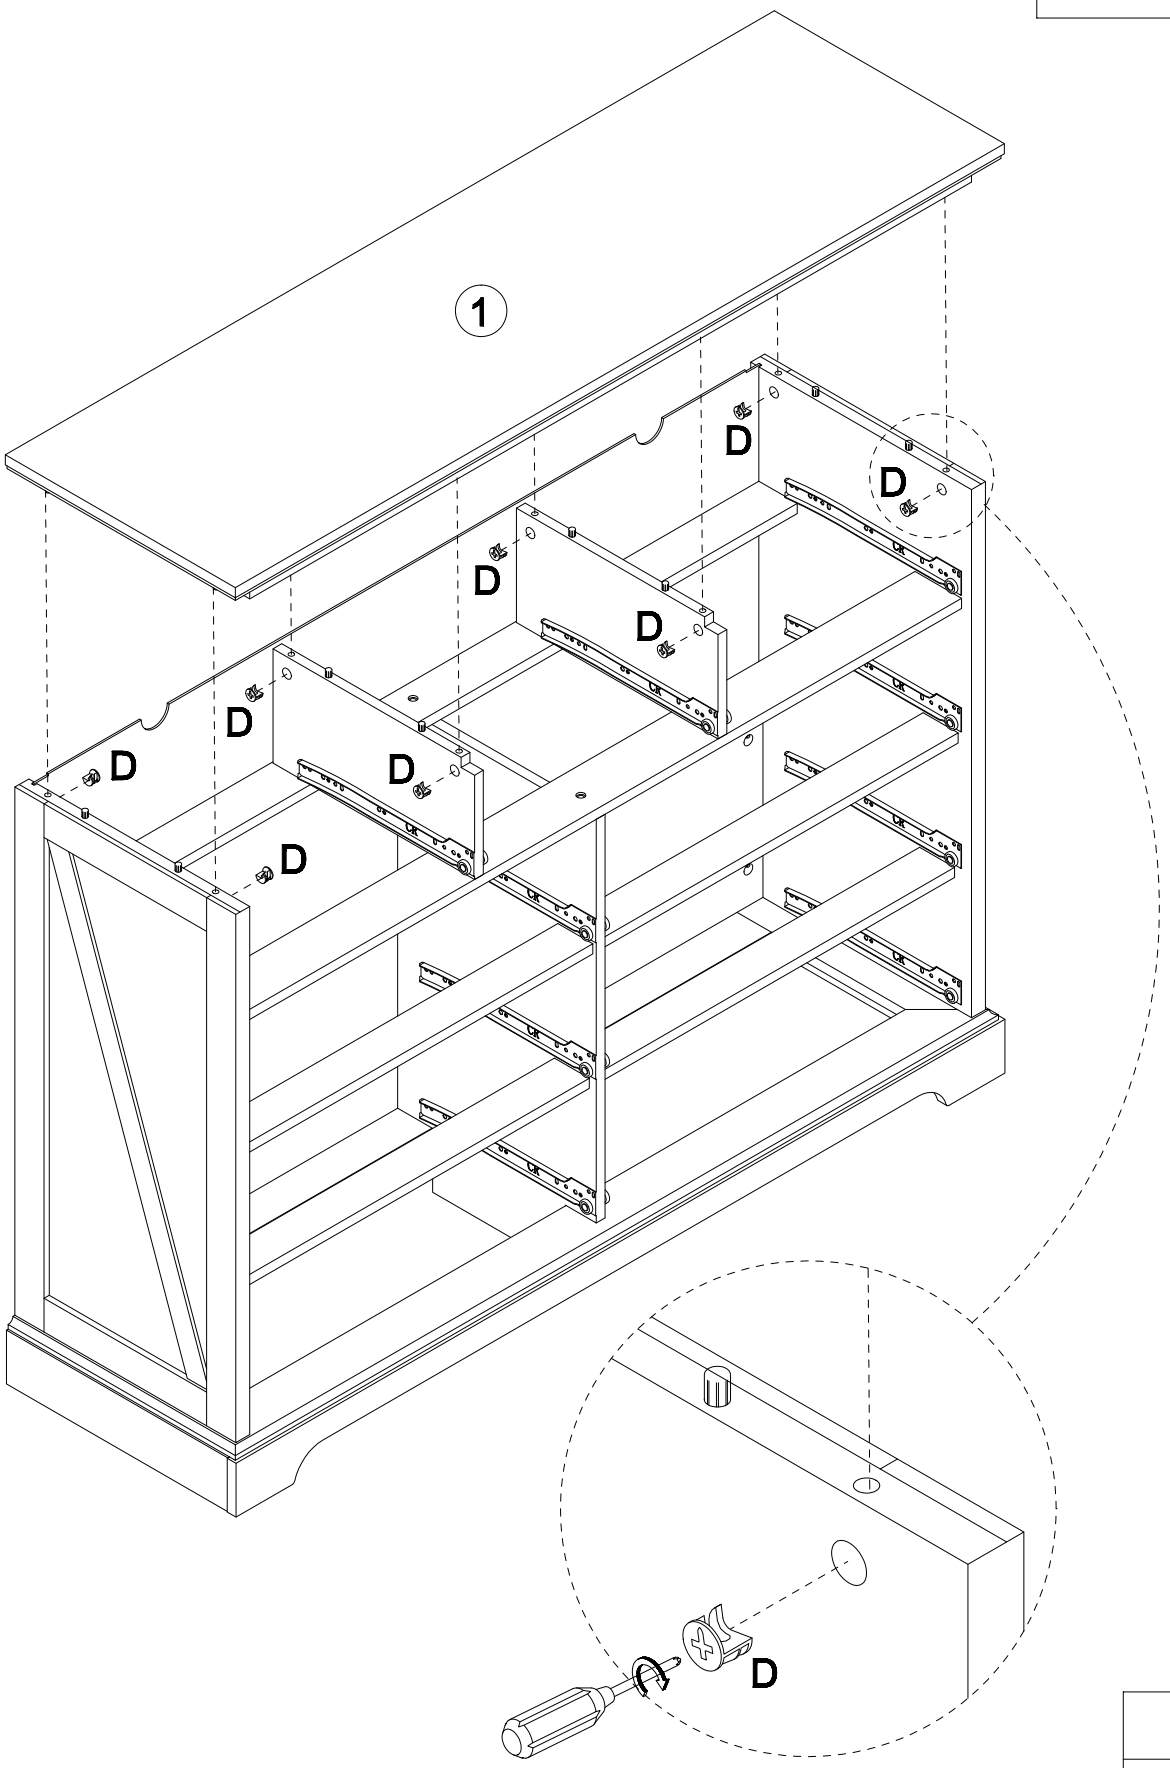


D

X8


Step 24

Notice: Covered all the cam lock holes with the sticker(E).

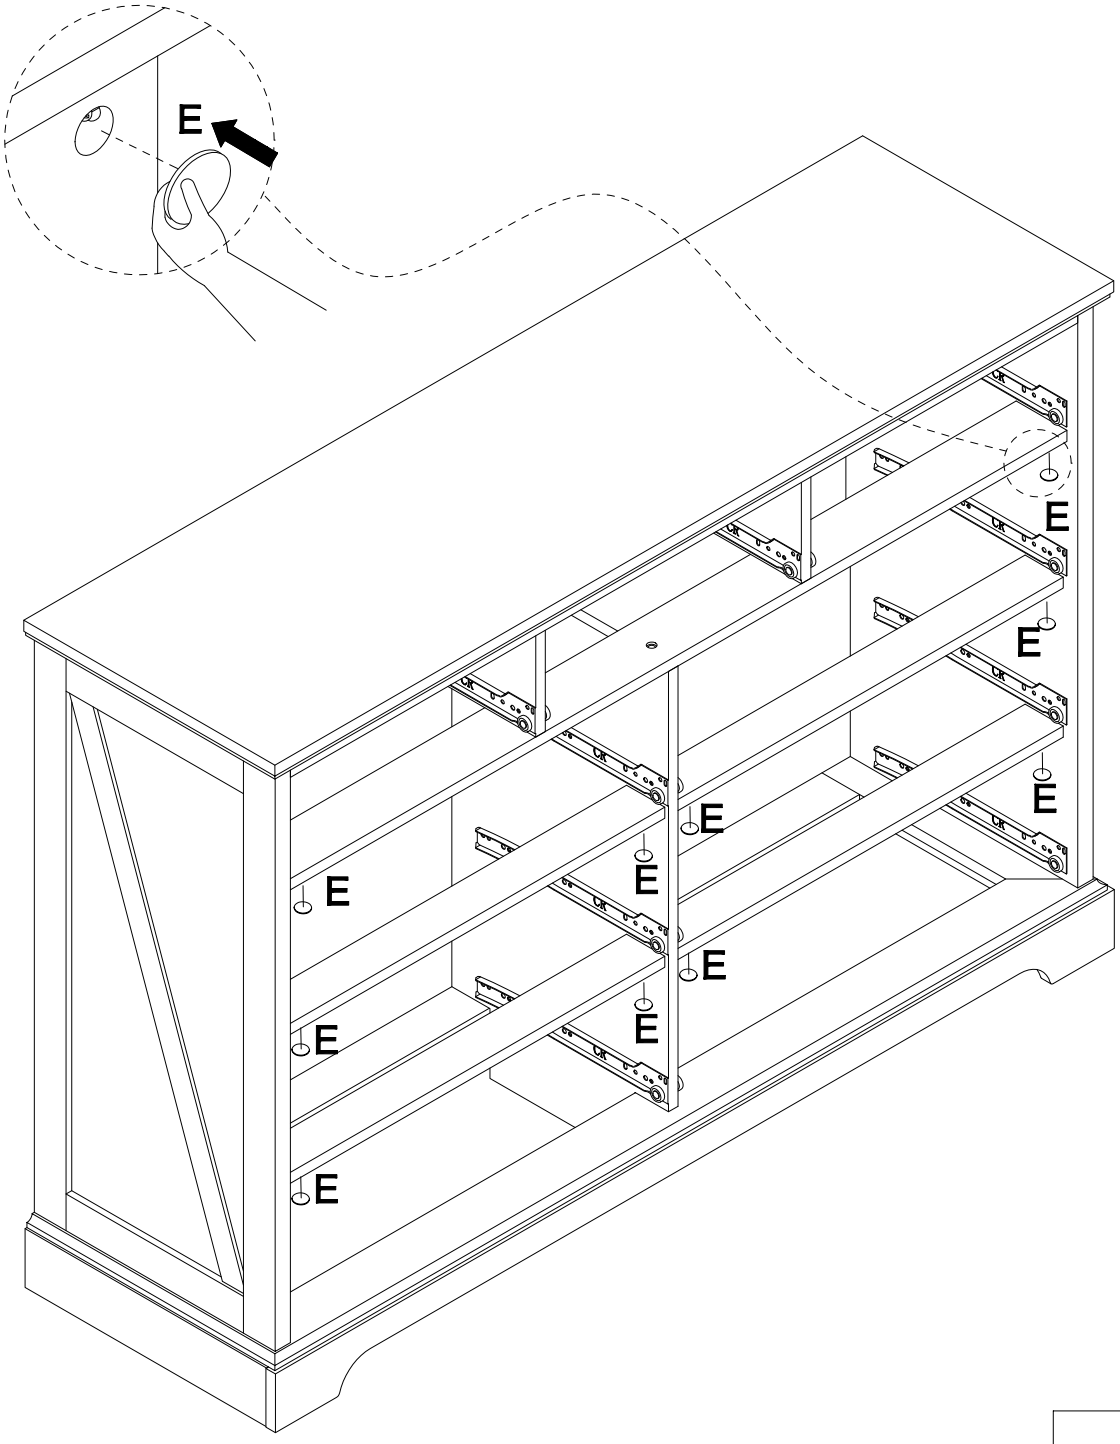

E
⬭
X20


Step 25

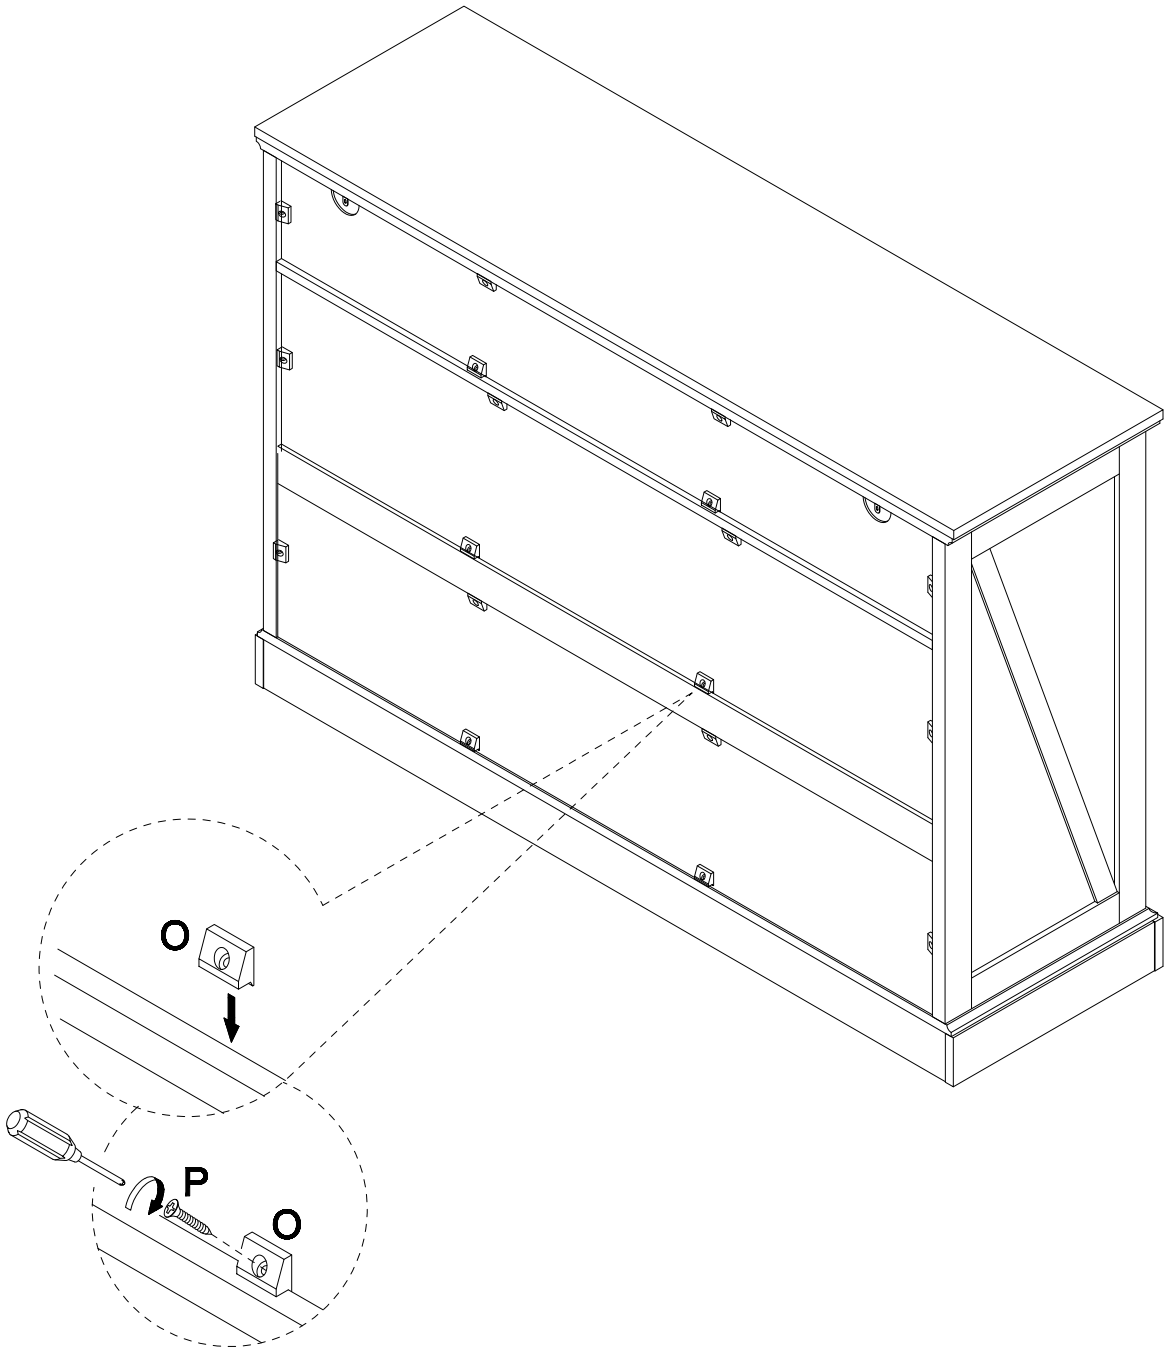

O	P
	
X18	X18


Step 26

Make Four holes 45MM deep

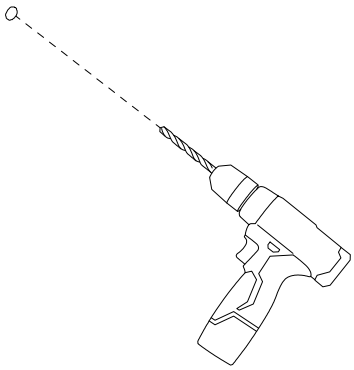

Wall


Step 27

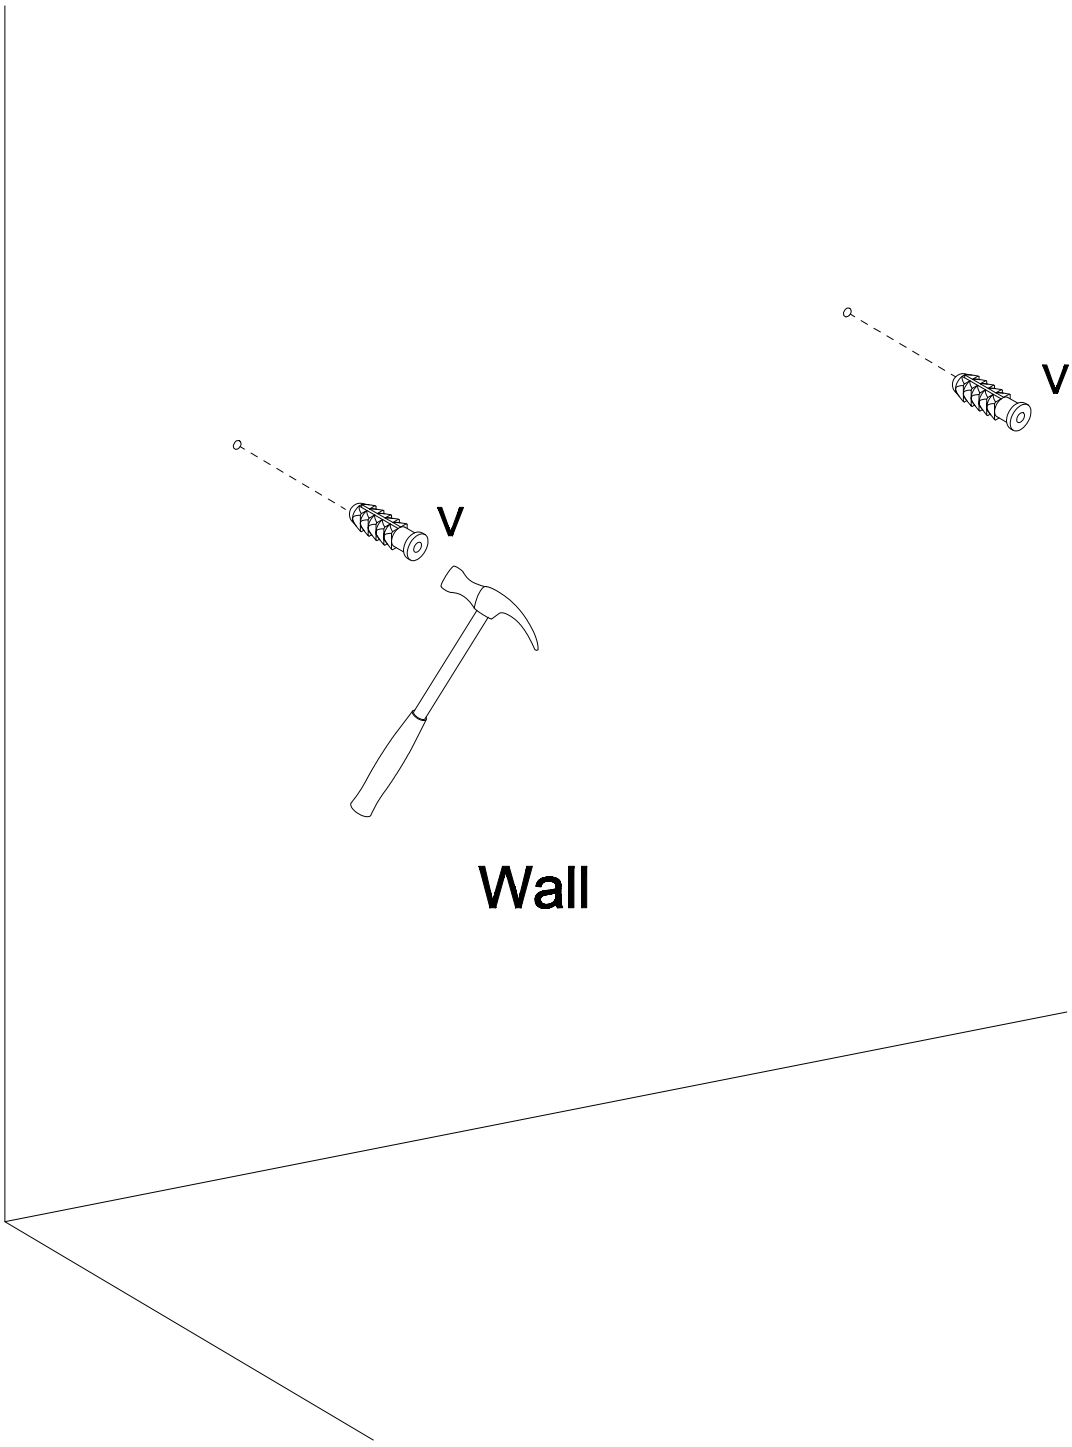

V

X2


Step 28

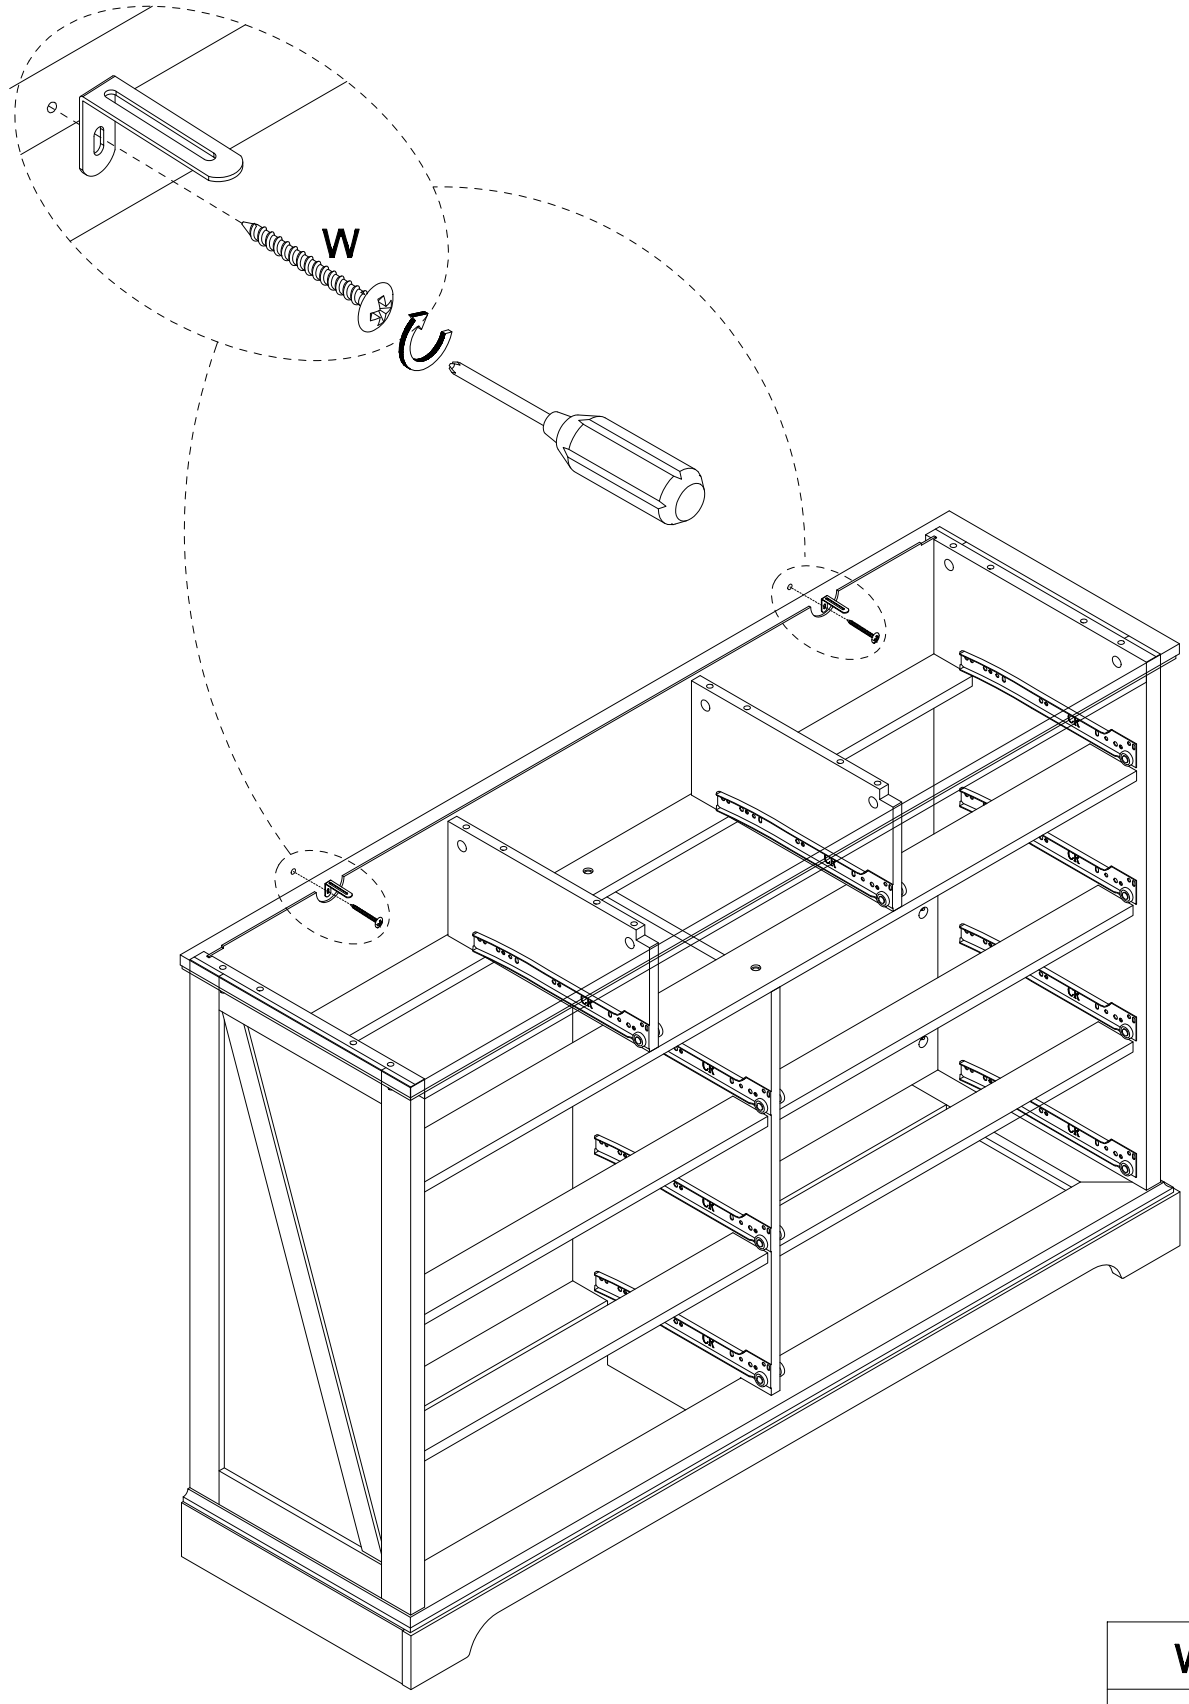

W

X2


Step 29

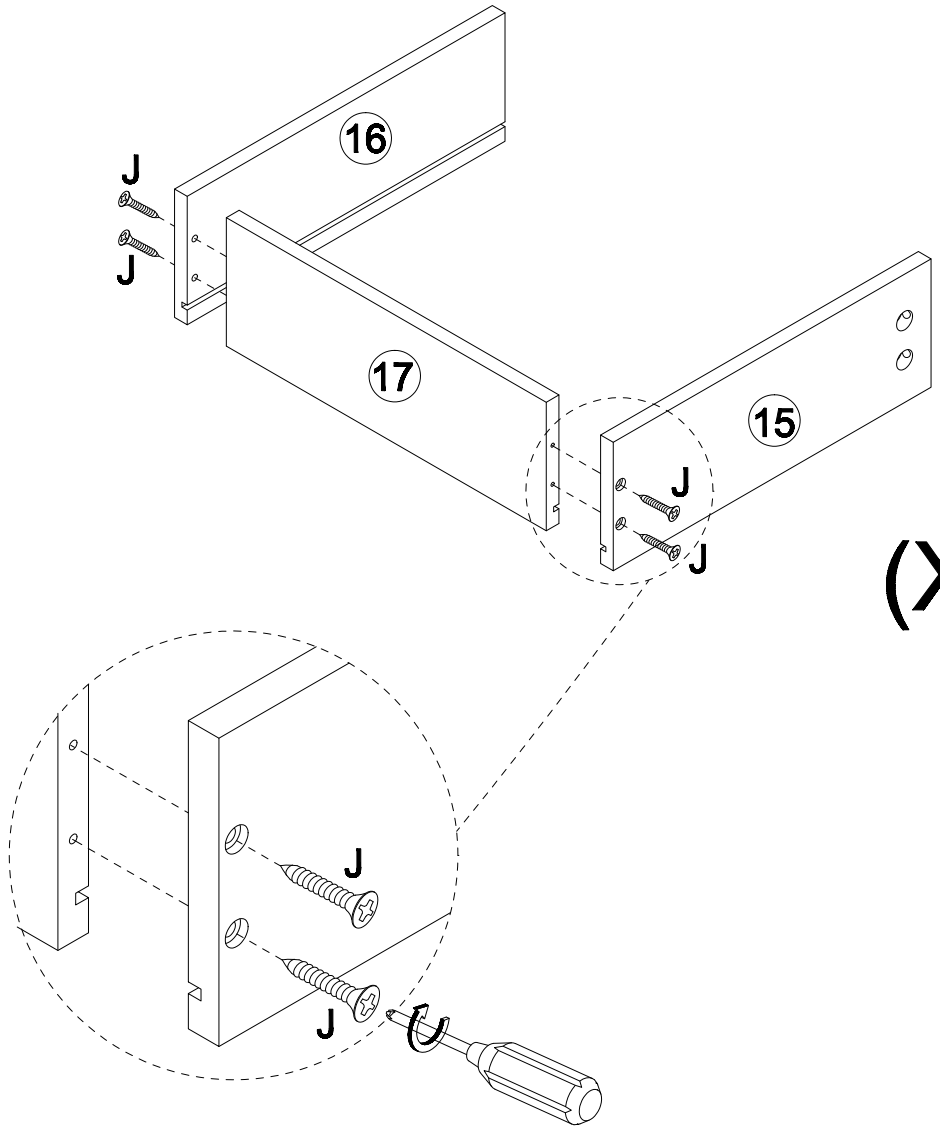

(X3)


J
X12


Step 30

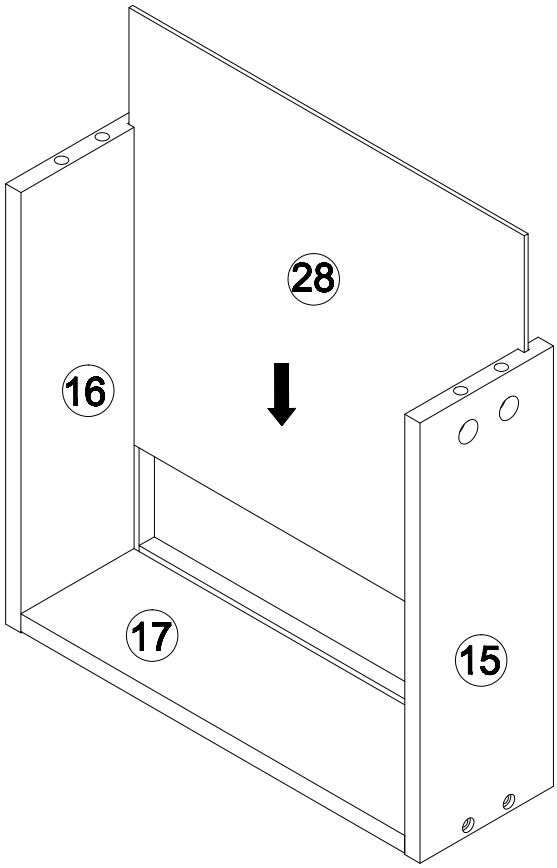

(X3)

Step 31

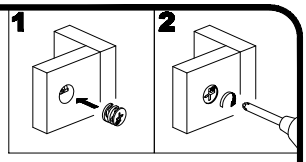

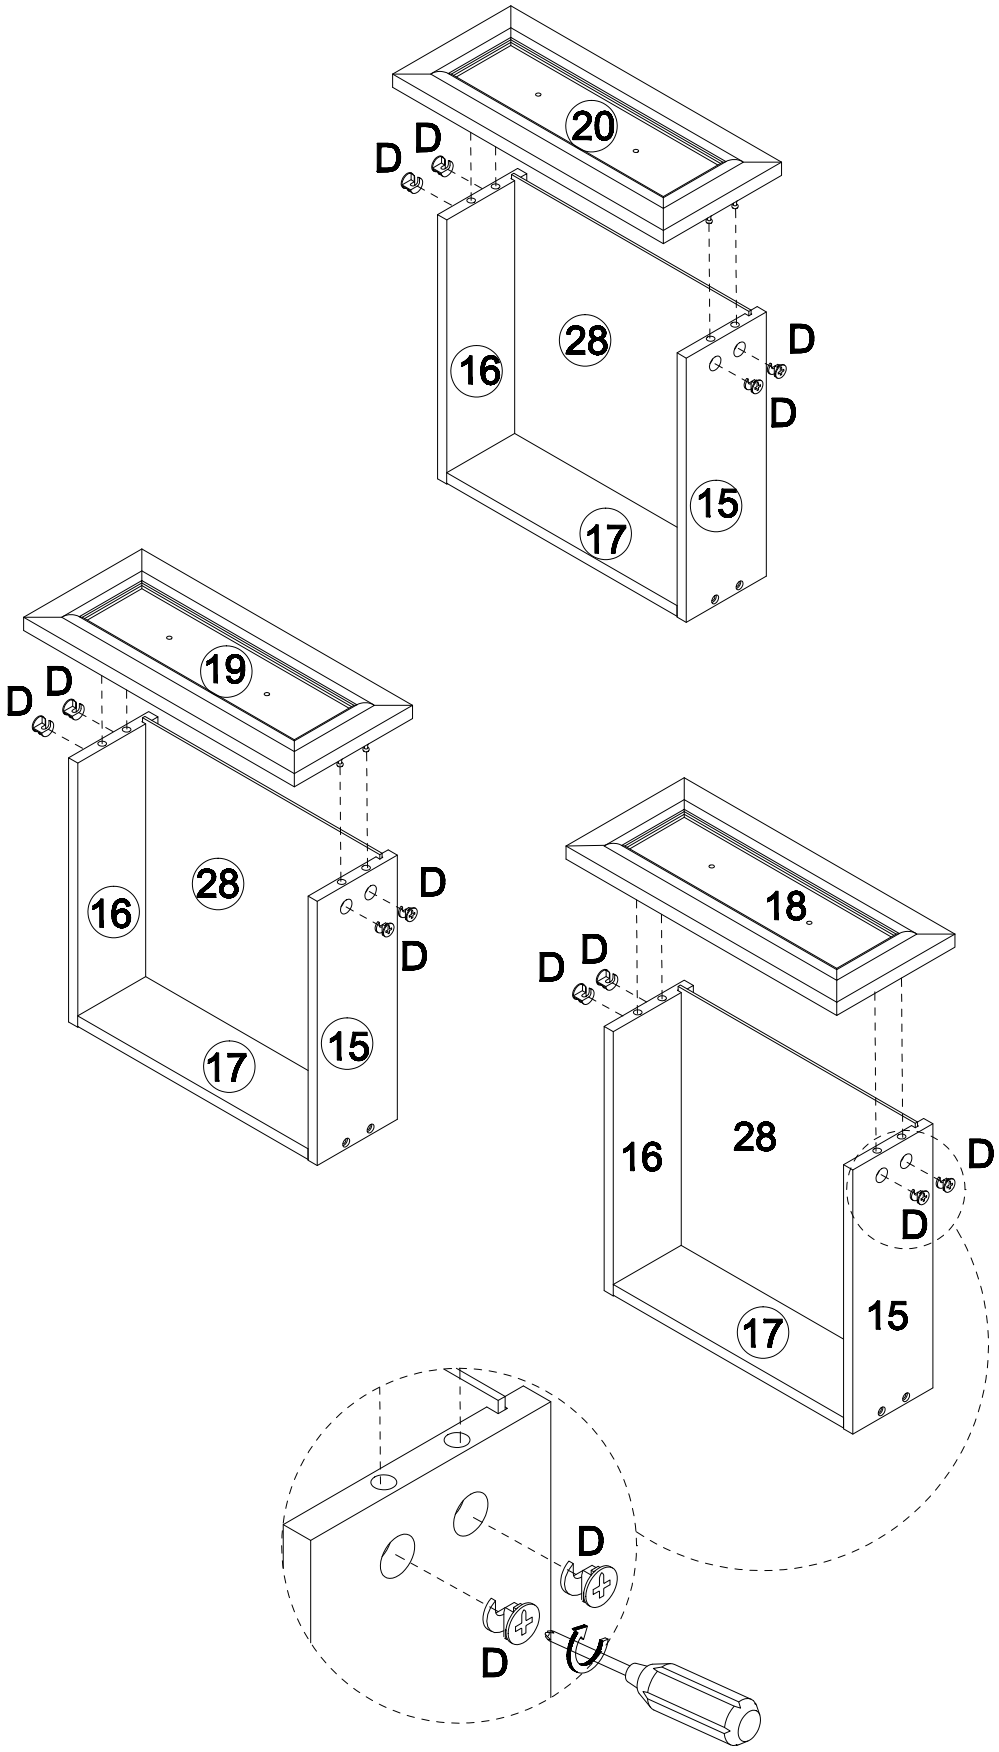



D

X12


Step 32

NOTE:
Refer to the images to identify M-DL (left) and M-DR (right). Attach M-DL to #15 panel and M-DR to #16 panel. [R] screws must go in the exact spots shown.

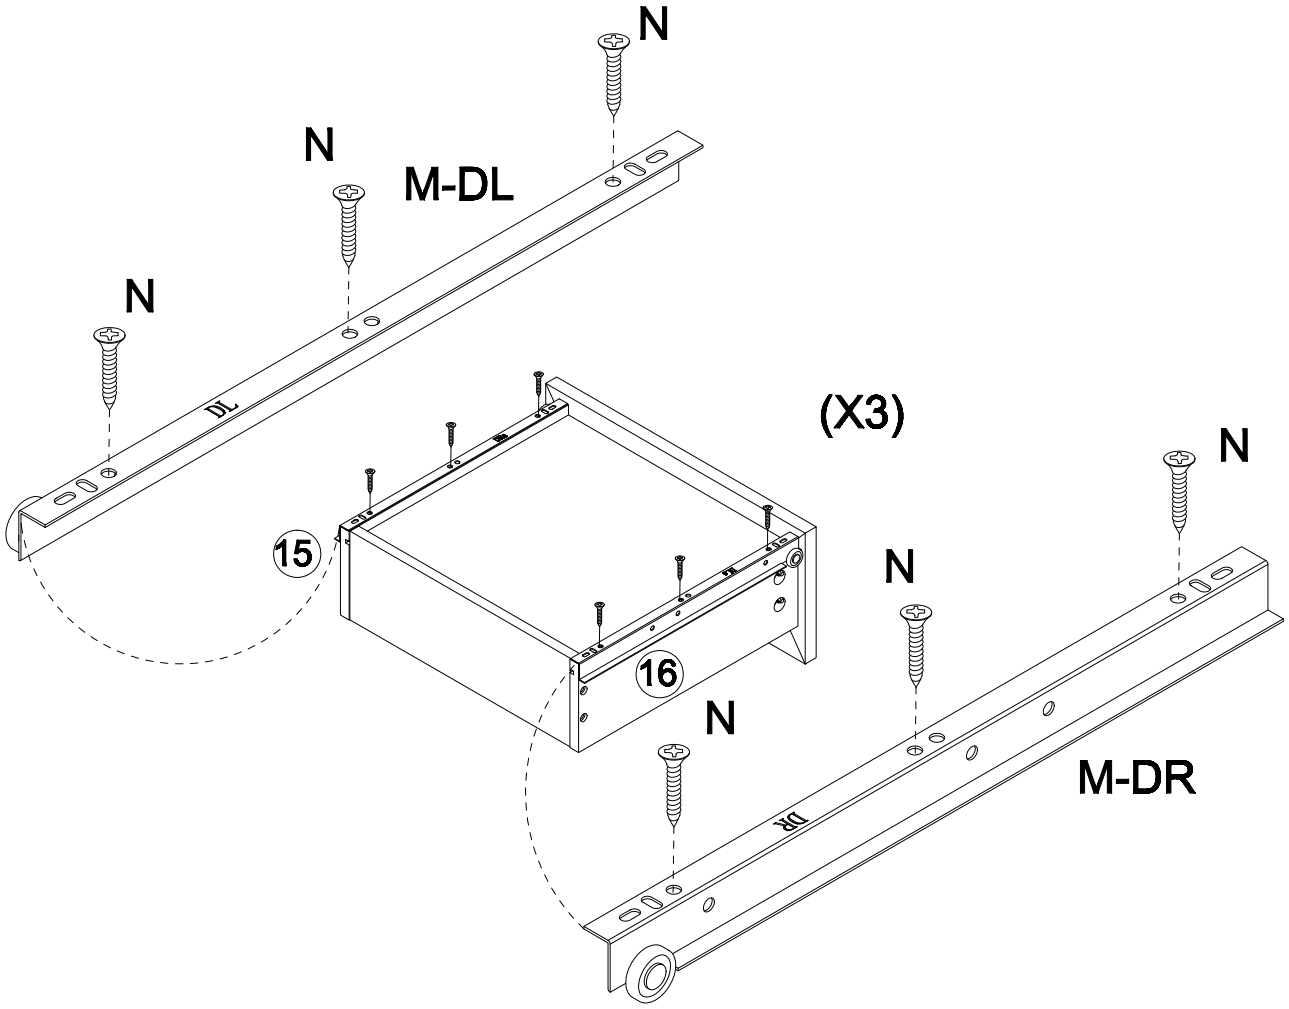


N	M
	
X18	X3

Step 33

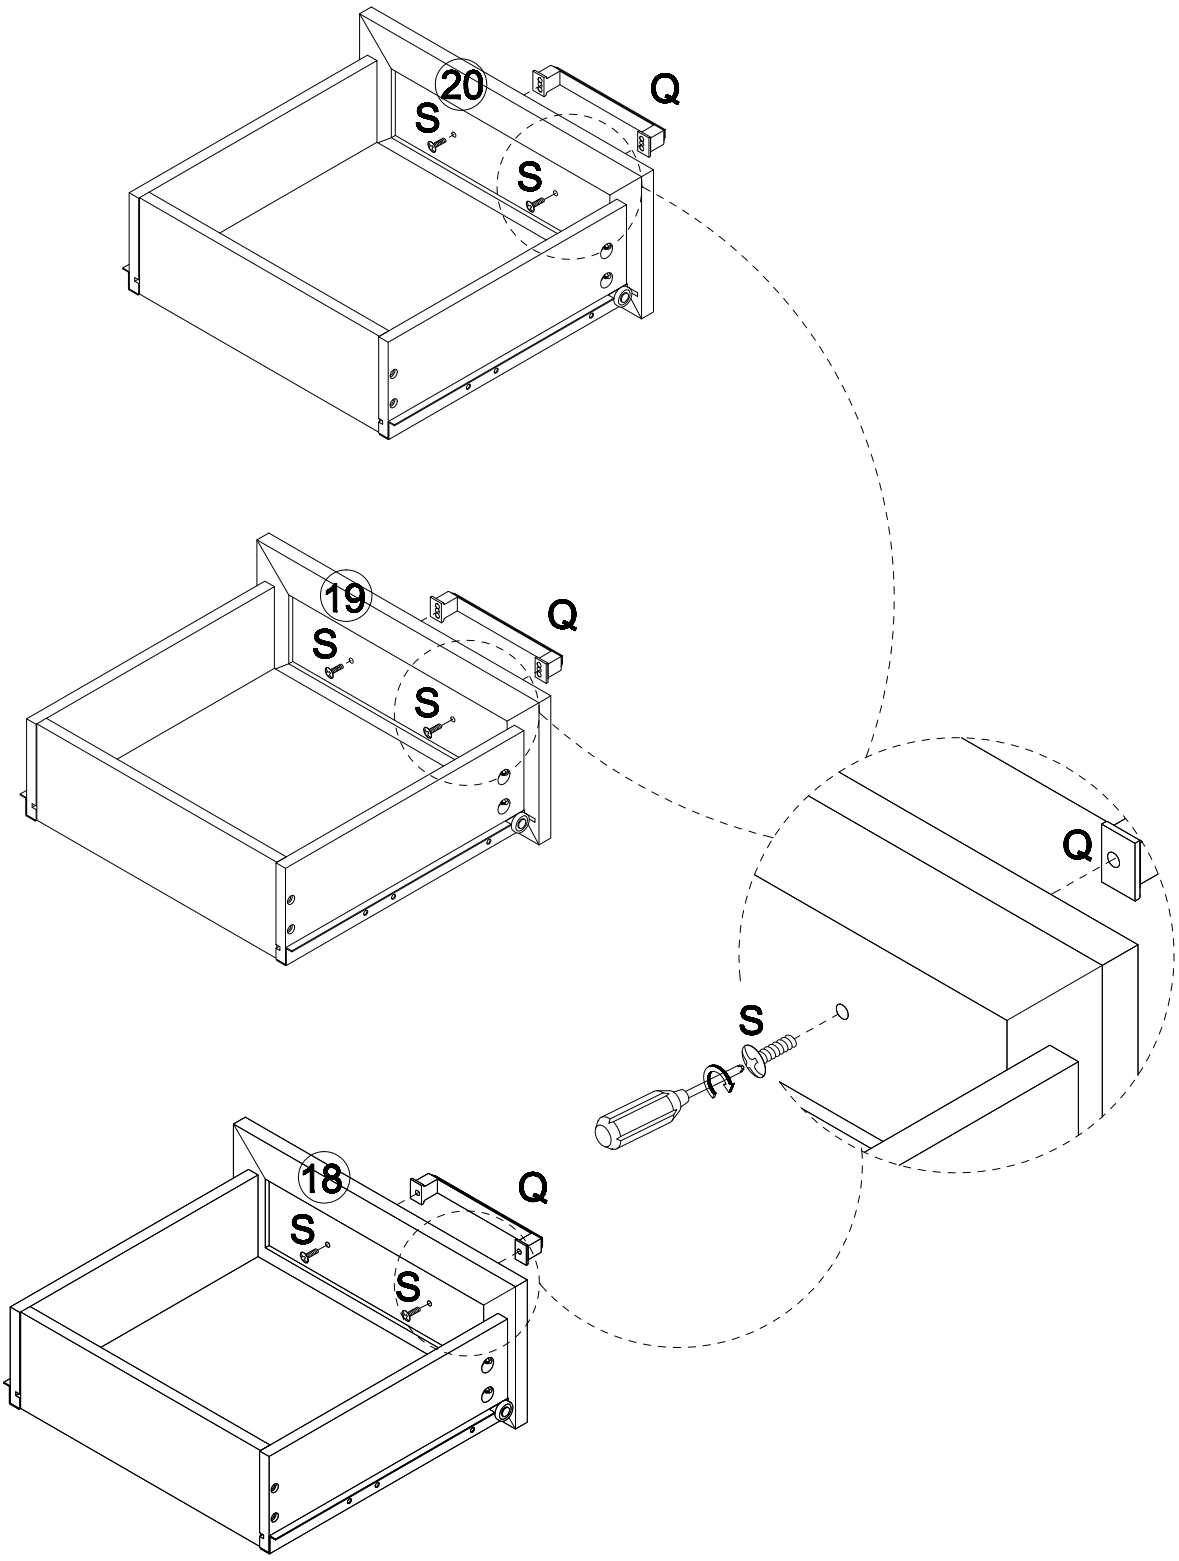

S	Q
	
X6	X3


Step 34

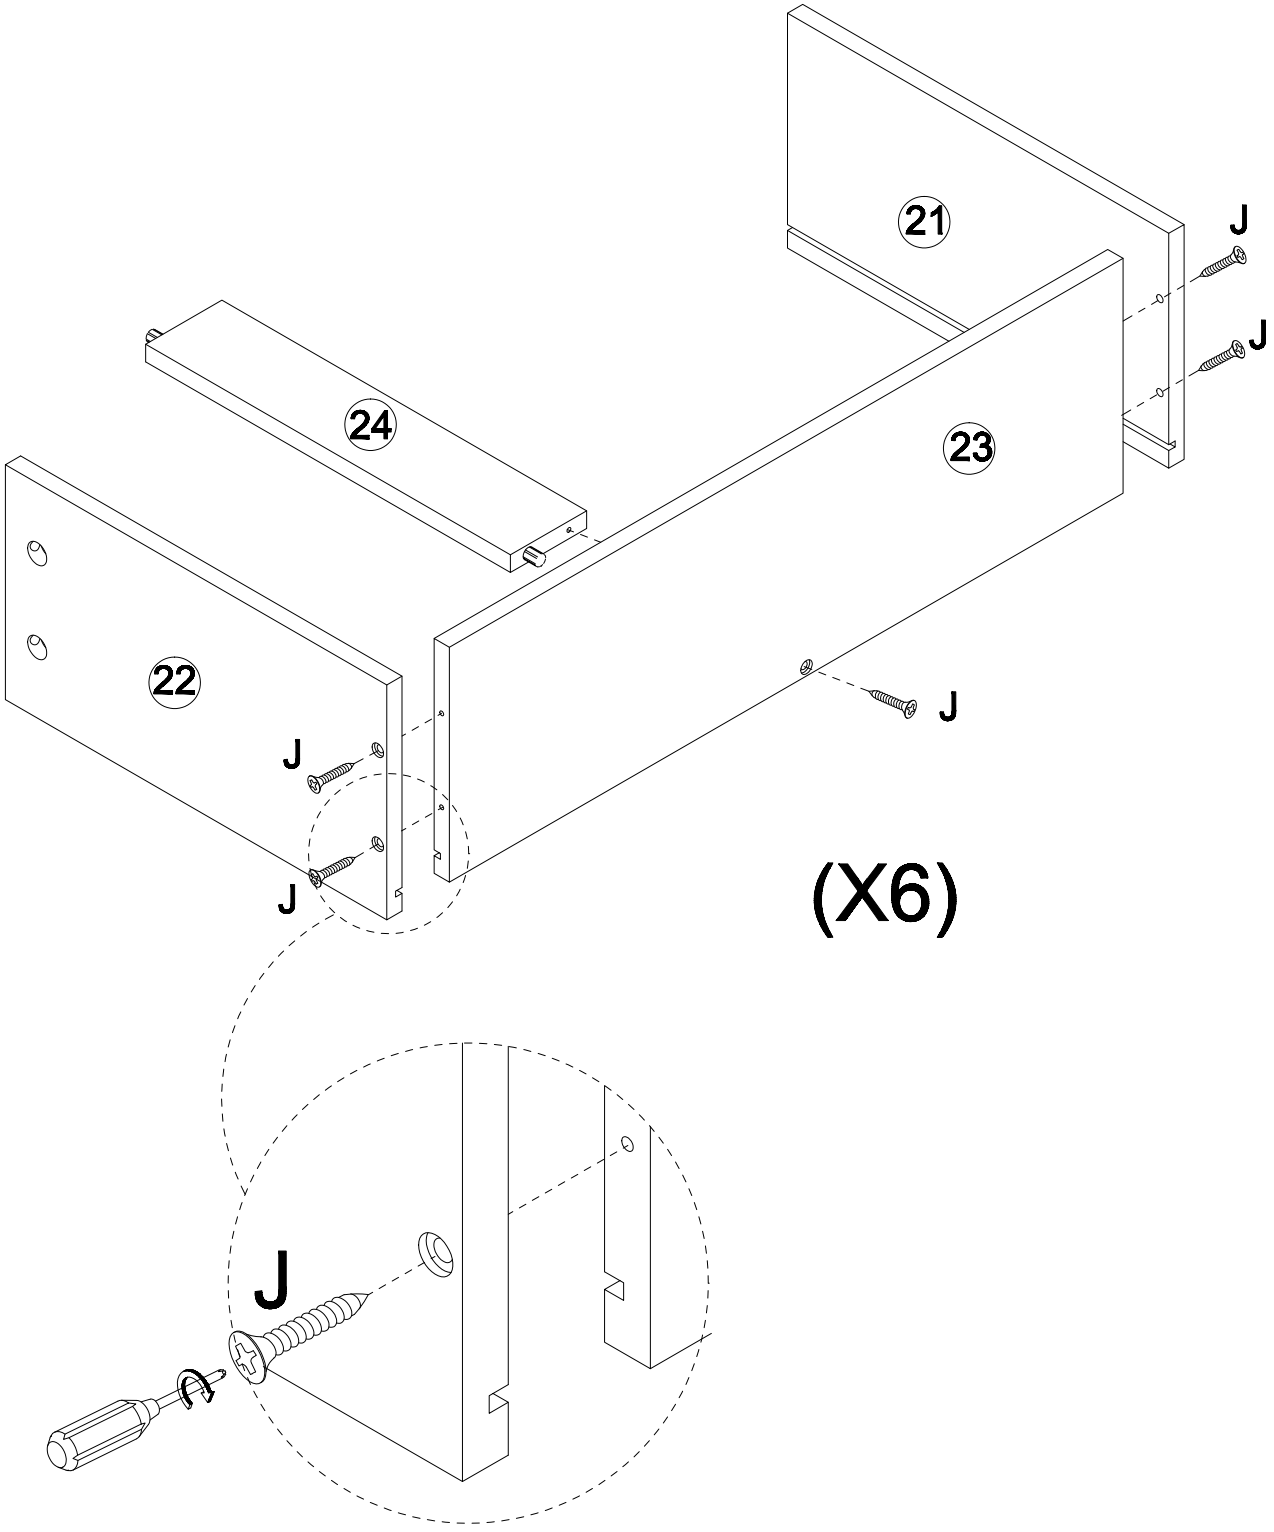

J


X30


Step 35

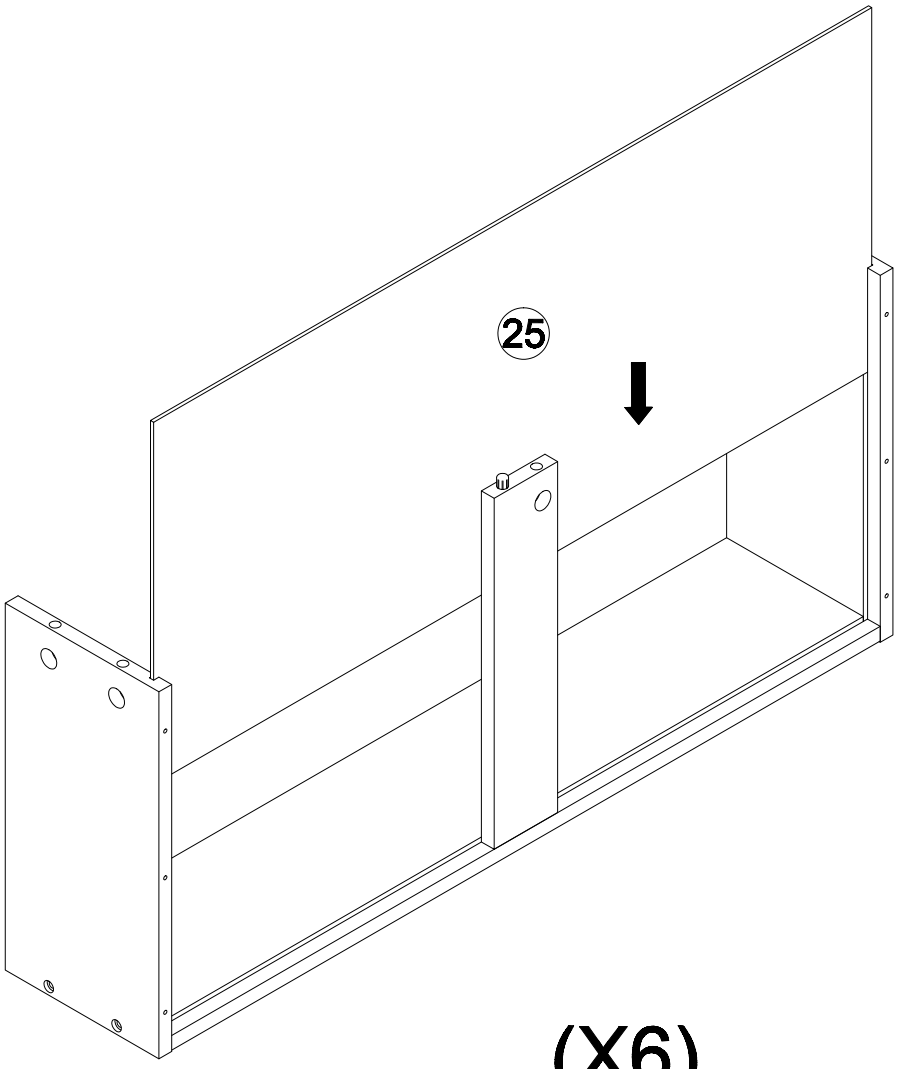

(X6)

Step 36

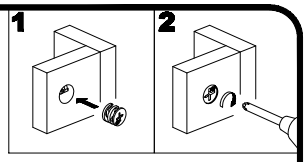


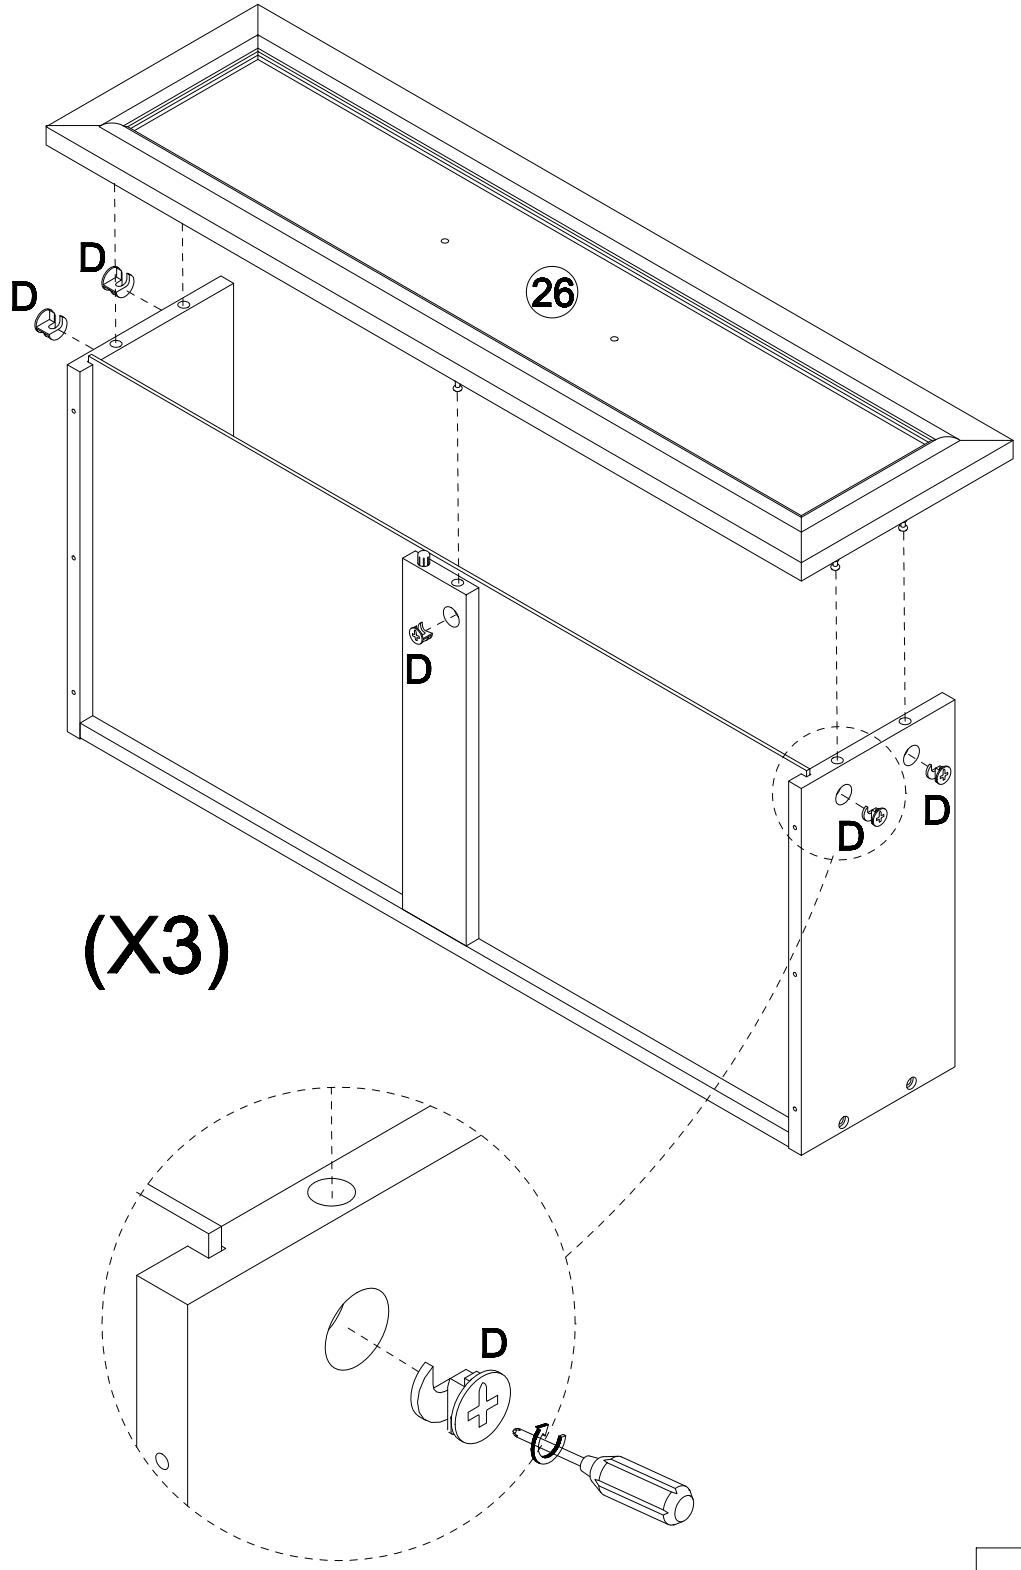


D

X15

Step 37

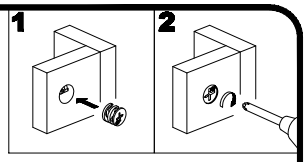

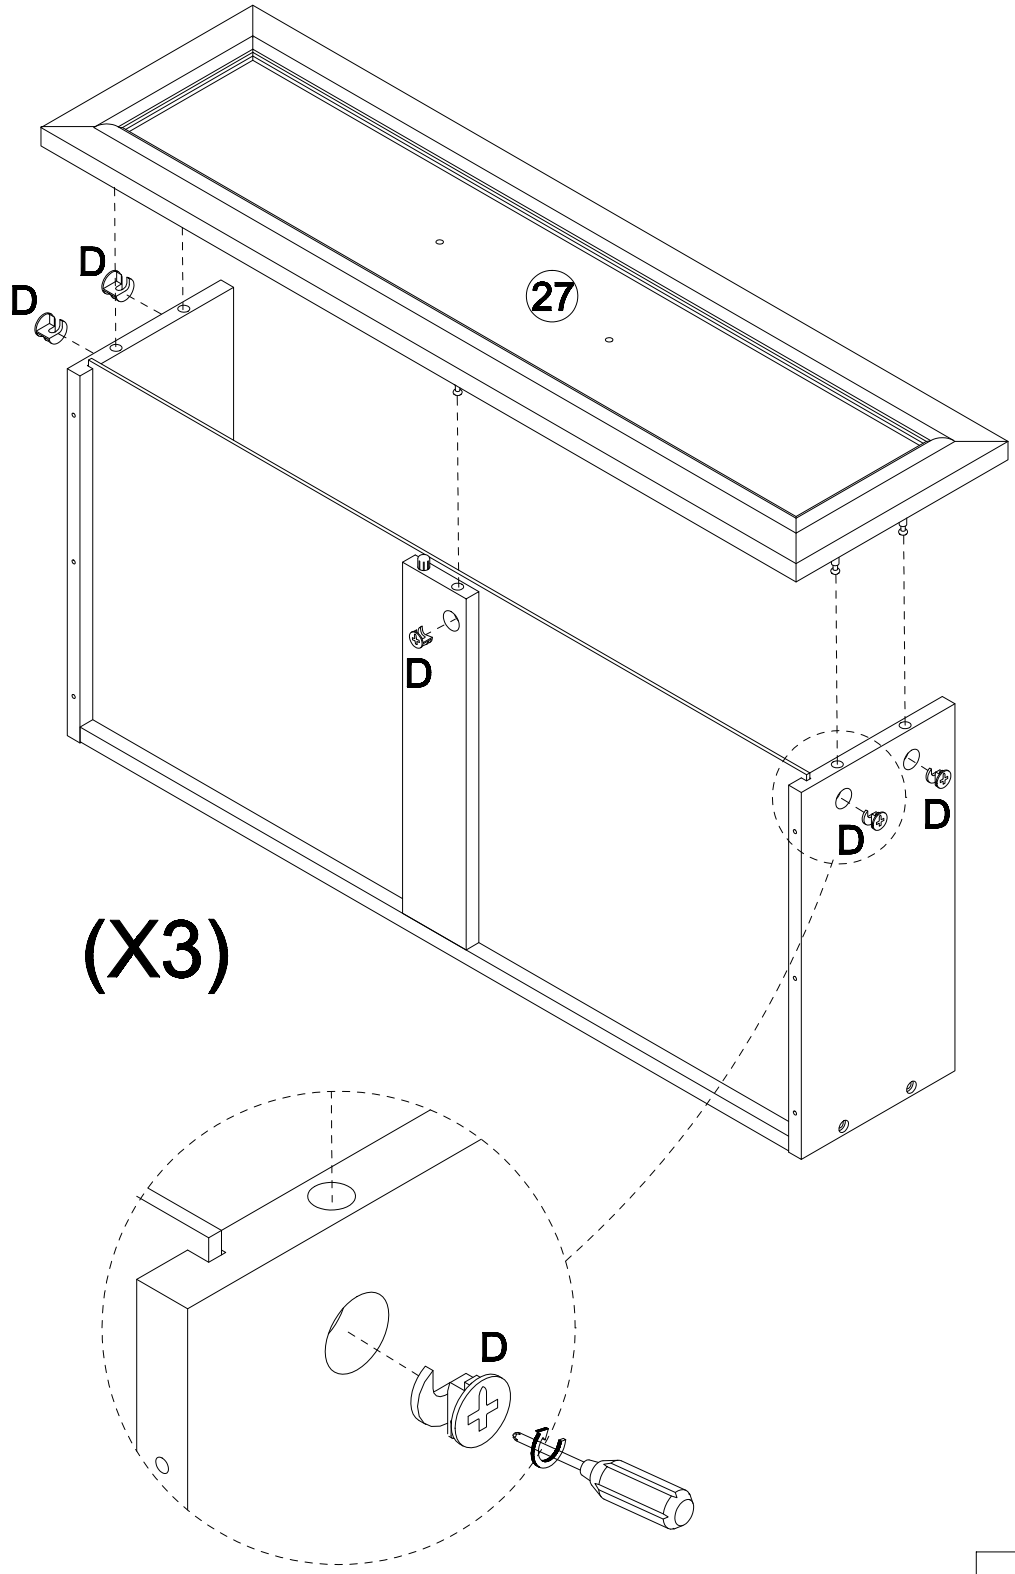


D


X15

Step 38


NOTE:
Refer to the images to identify M-DL (left) and M-DR (right). Attach M-DL to #21 panel and M-DR to #22 panel. [R] screws must go in the exact spots shown.

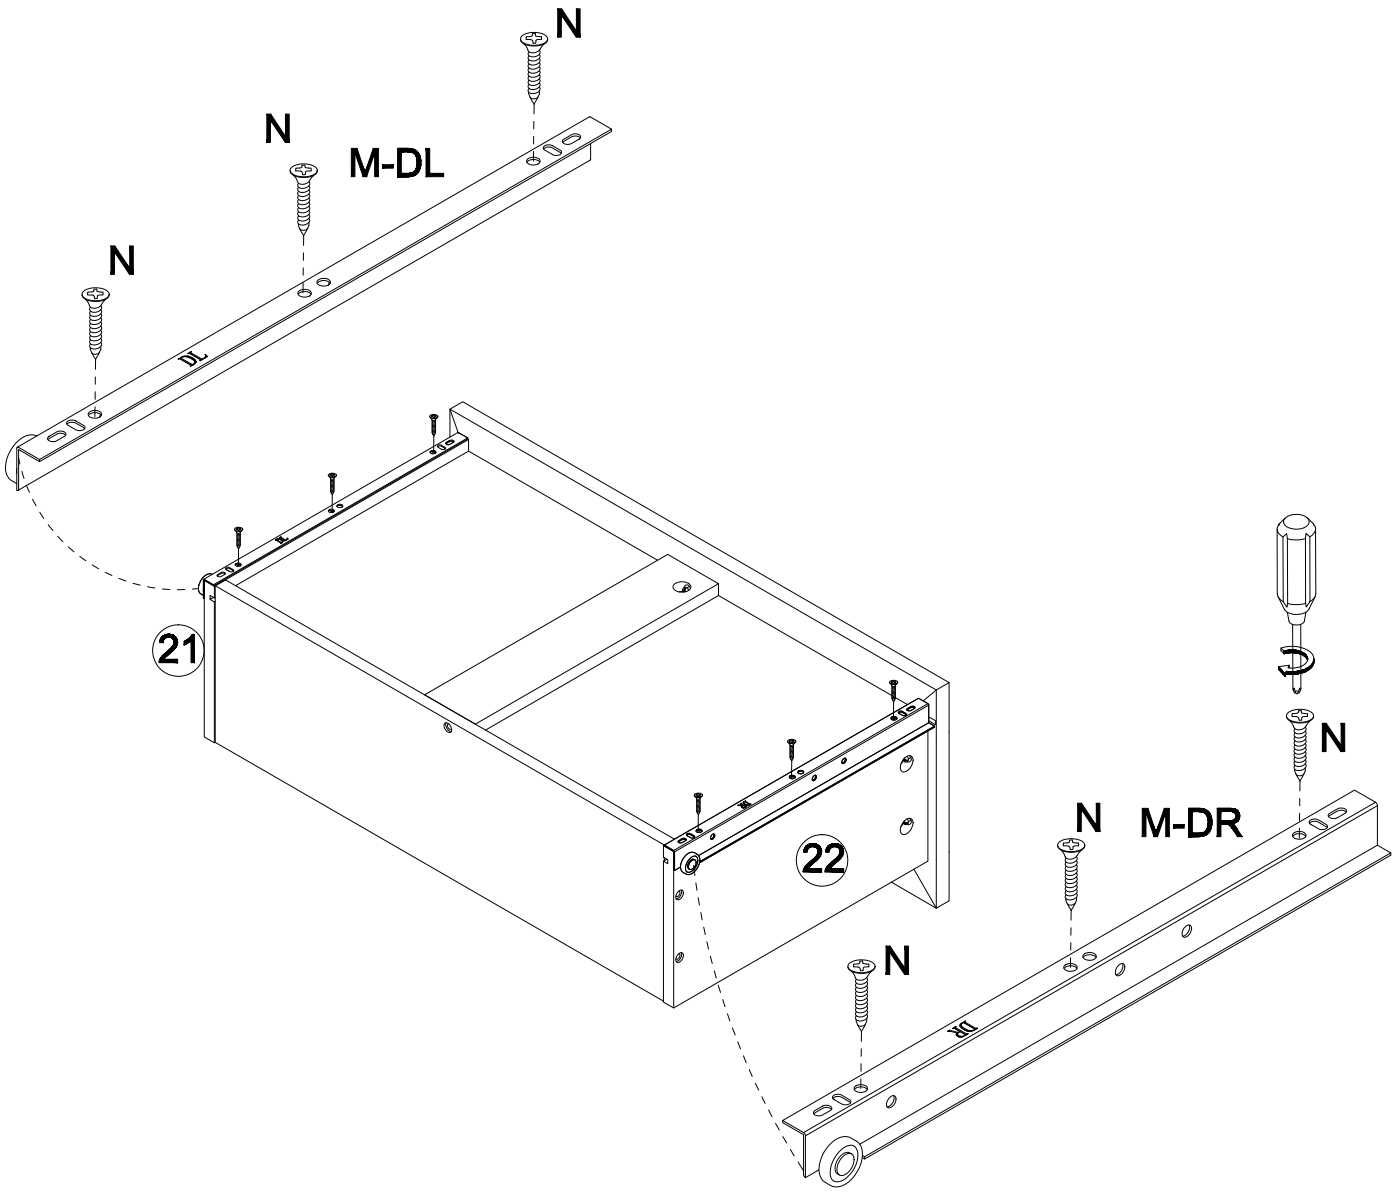

X6

N	M
	
X36	X6


Step 39

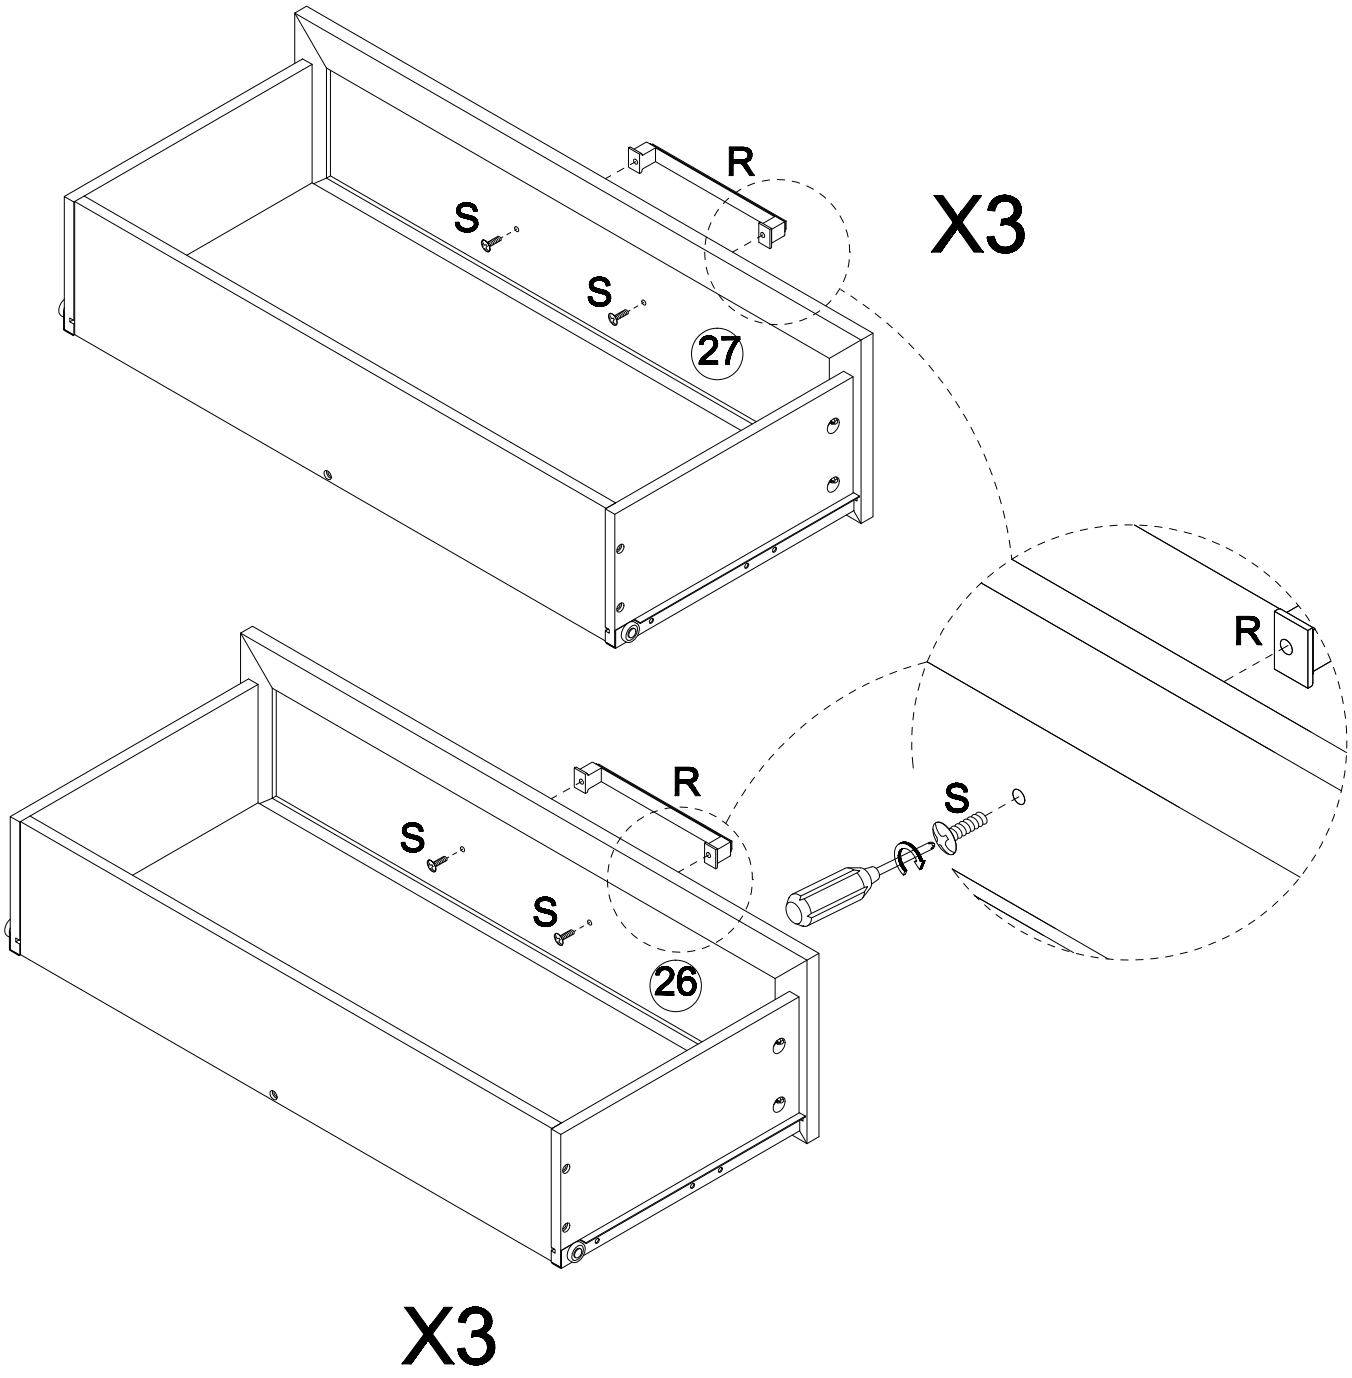

S	R
	
X12	X6


Step 40

Notice: Covered all the cam lock holes with the sticker(E).

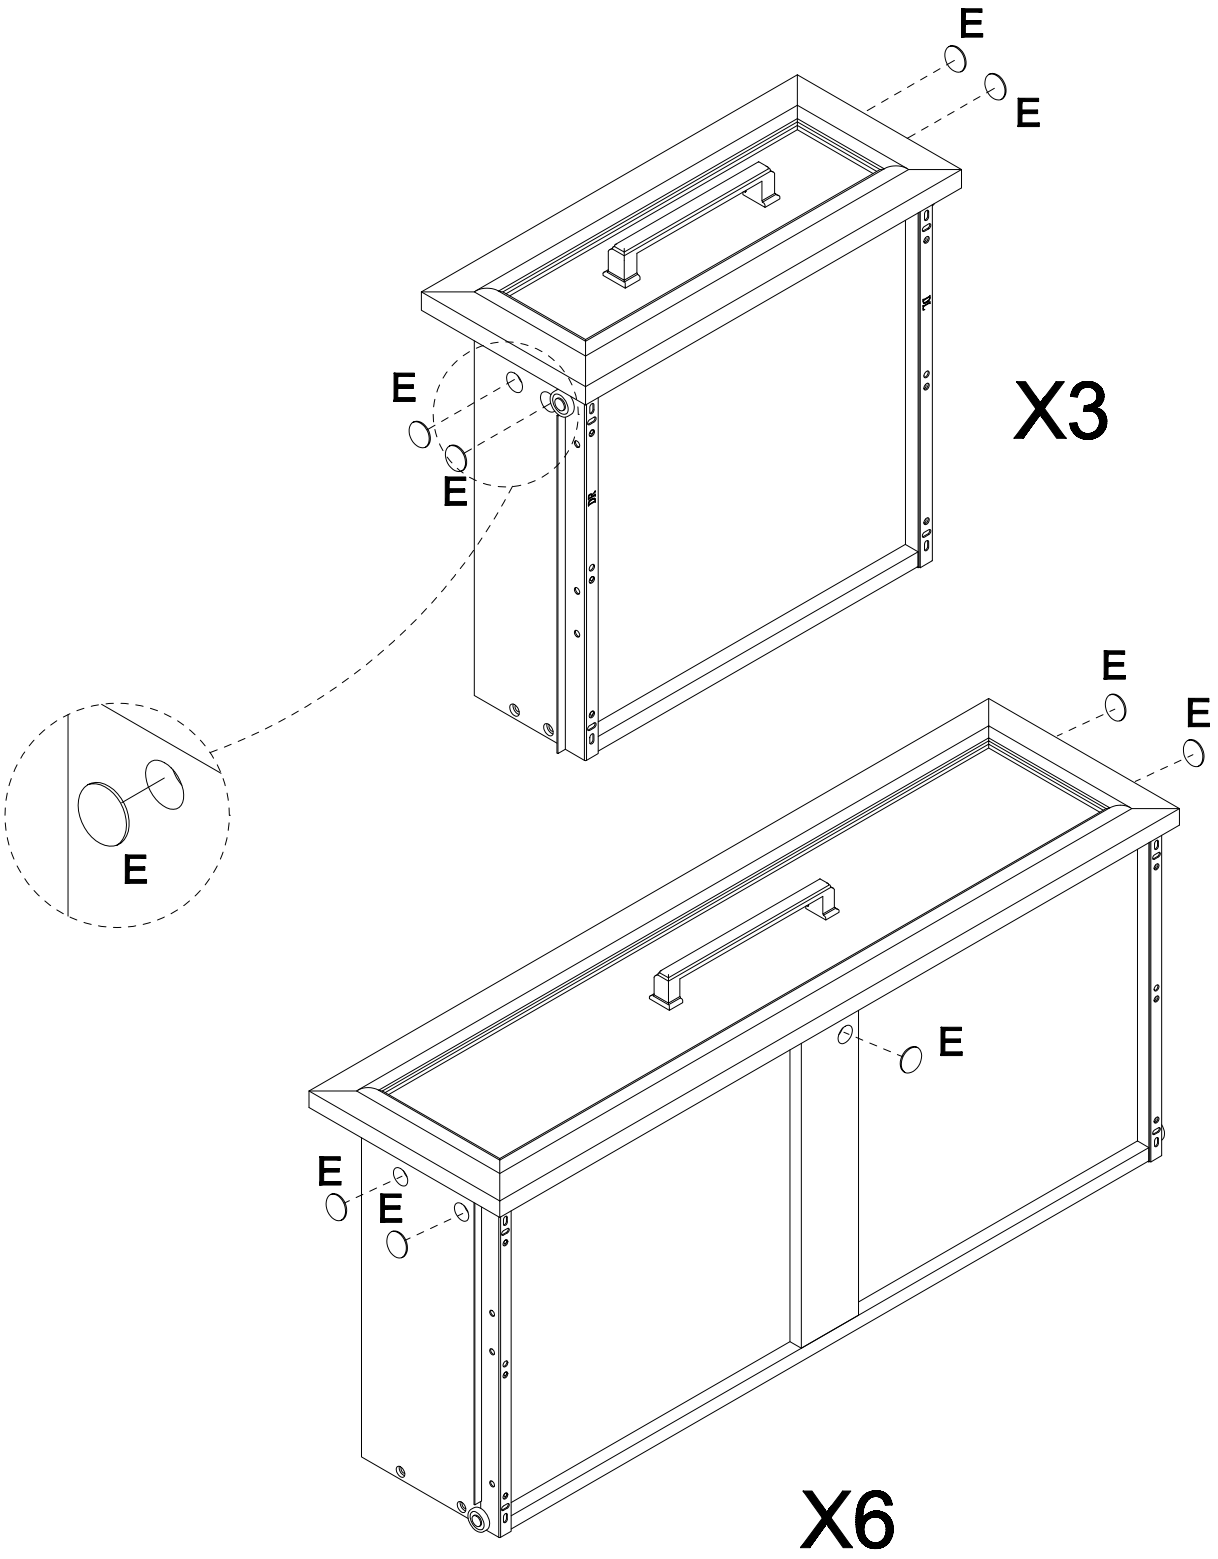

E
⬭
X42

Step 41

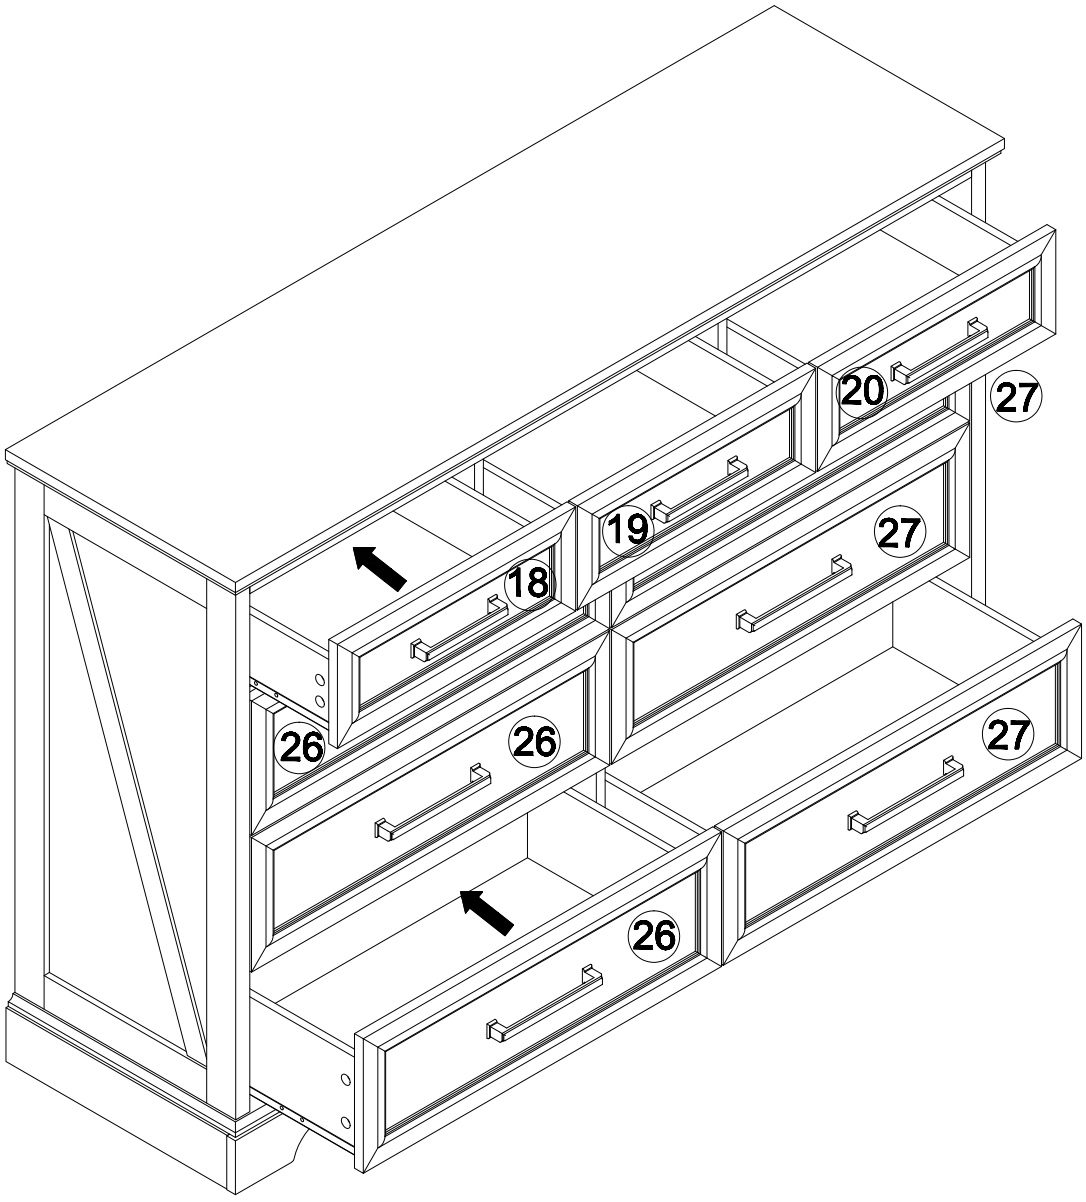

Step 42

Final Assembly



⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.