



P518-150


# Schlage Custom™



## Model FC170/172, Dummy


## Installation Instructions

- a. Lever
- b. Trim
- c. Chassis
- d. Chassis screws
- e. Allen wrench (Do not discard!)

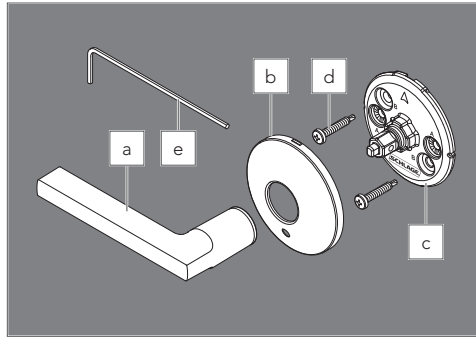


### 1 Determine the location.

1a Measure the location of other knobs/levers in the house.

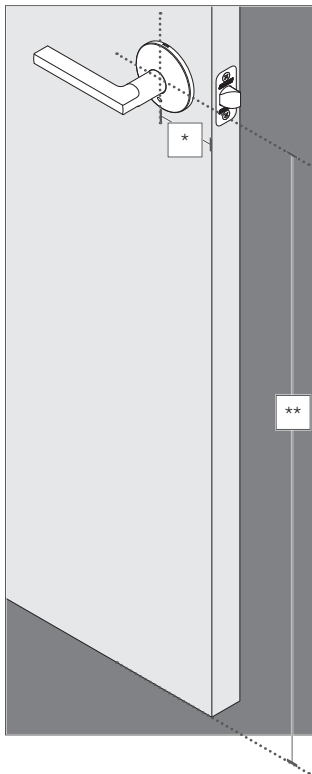


1b Mark these measurements on the dummy door.

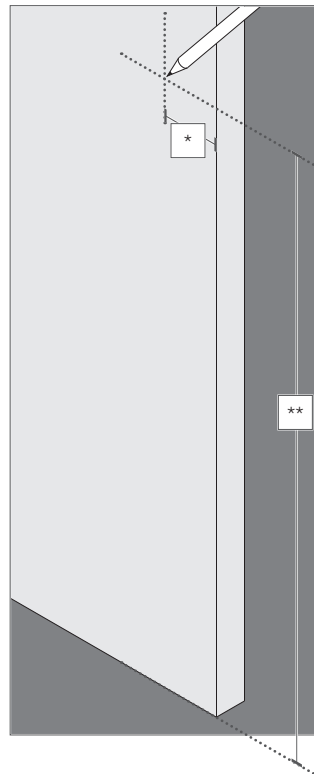


### 2 Install the chassis.

Screws are self-drilling. Do not pre-drill.

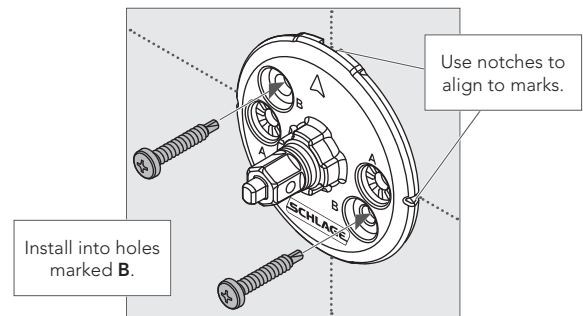


### 3 Install the trim.

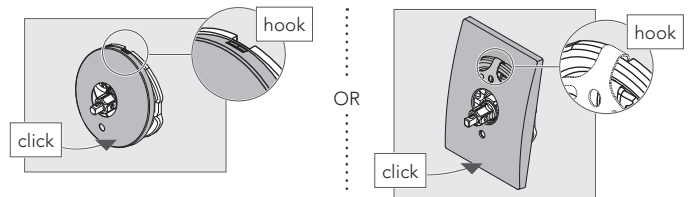


### 4 Install the knob/lever.

4a Push knob/lever into place.

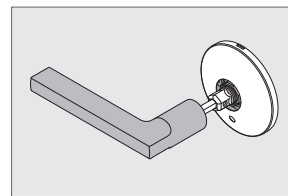

4b Then tighten set screw.

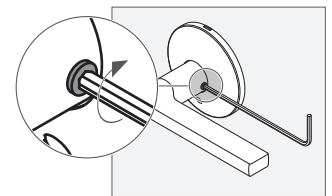

### 5 Repeat all steps for other side of door if necessary.



© Allegion 2017  
Printed in U.S.A.  
P518-150 Rev. 08/17-a