

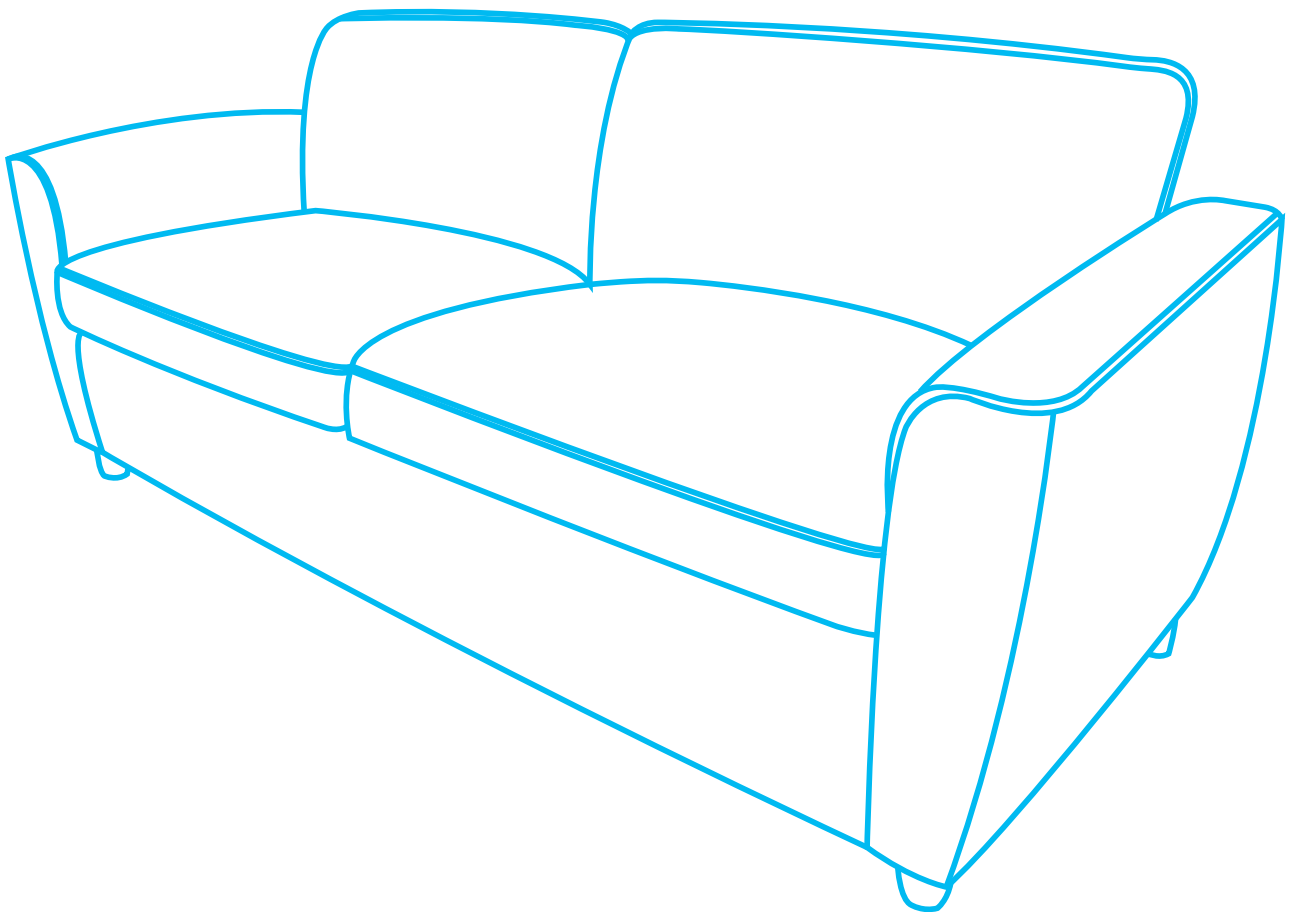
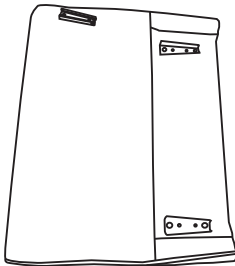
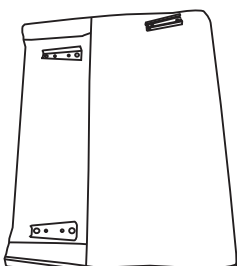
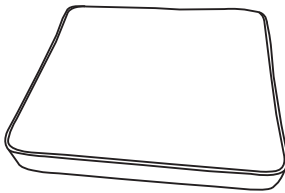
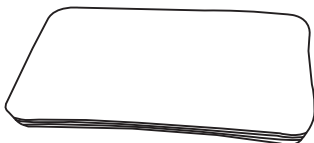



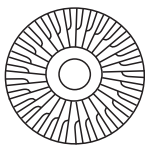




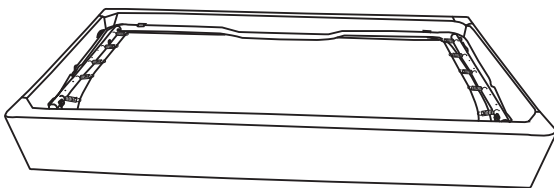


INSTALLATION GUIDE

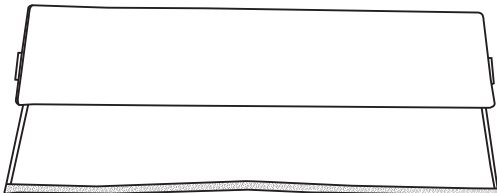


SOFA

<div><div>A</div><div>Right Armrest</div><div></div></div>	<div><div>B</div><div>Left Armrest</div><div></div></div>	<div><div>C</div><div>Seat X2</div><div></div></div>	<div><div>D</div><div>Backrest X2</div><div></div></div>		
<div><div>E</div><div>Base</div><div></div></div>		<div><div>F</div><div>Back Base</div><div></div></div>		<div><div>G</div><div>Allenkey</div><div></div></div>	
<div><div>H</div><div>Pull-tab</div><div></div></div>	<div><div>I</div><div>Screw X4</div><div></div></div>	<div><div>J</div><div>Washer X4</div><div></div></div>	<div><div>K</div><div>Feet X4</div><div></div></div>	<div><div>L</div><div>Wood Peg Guide X4</div><div></div></div>	<div><div>M</div><div>Insert X4</div><div></div></div>
<div><div>N</div><div>Screw X 8</div><div></div></div>					


STEP 1

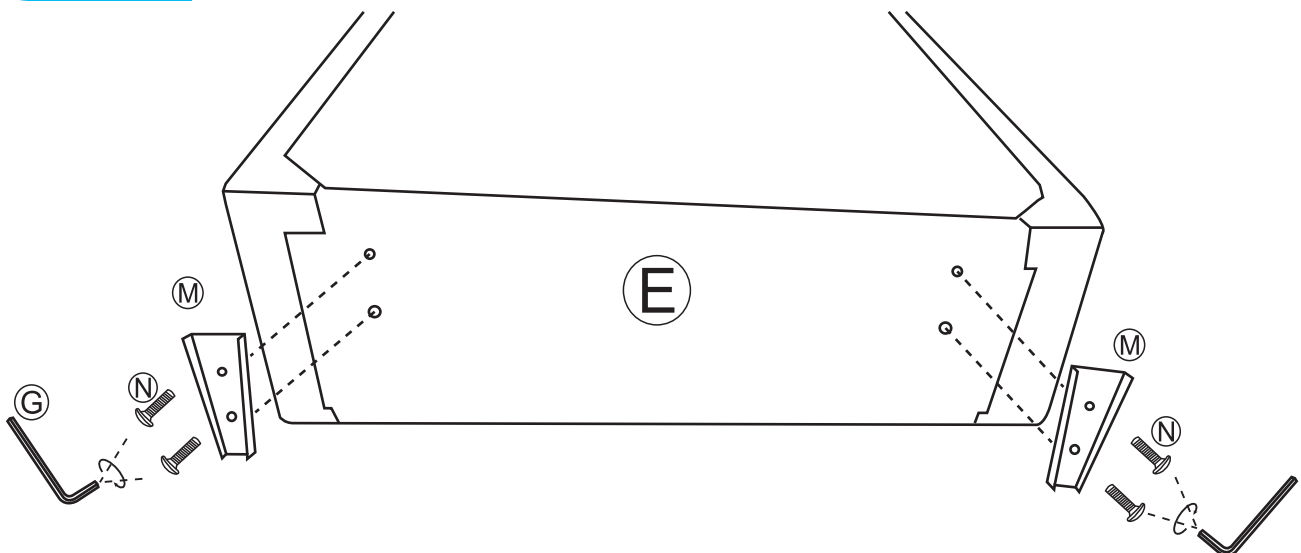


STEP 2

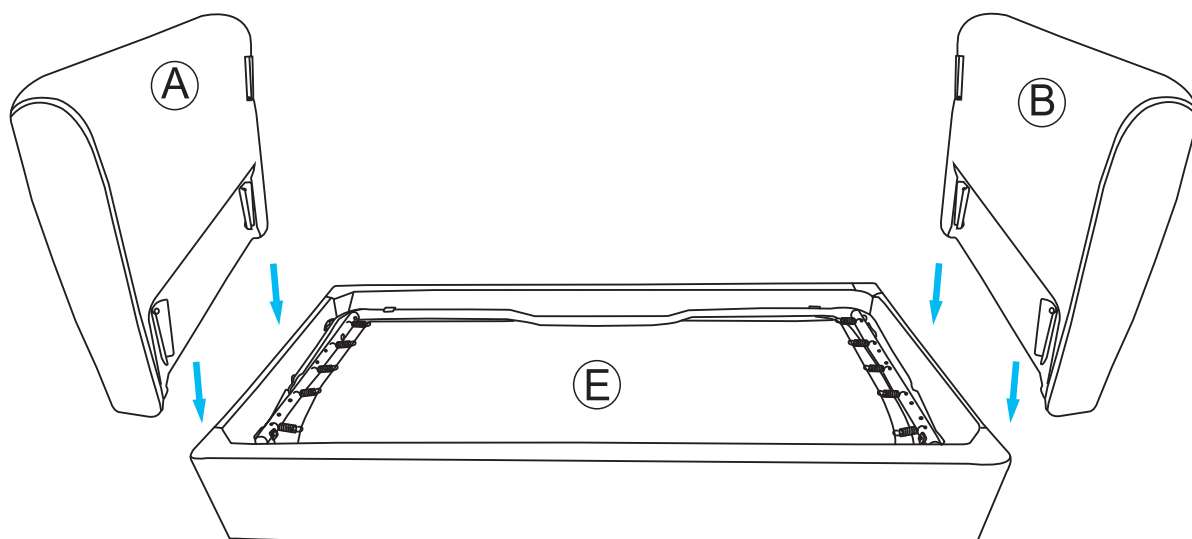


STEP 3

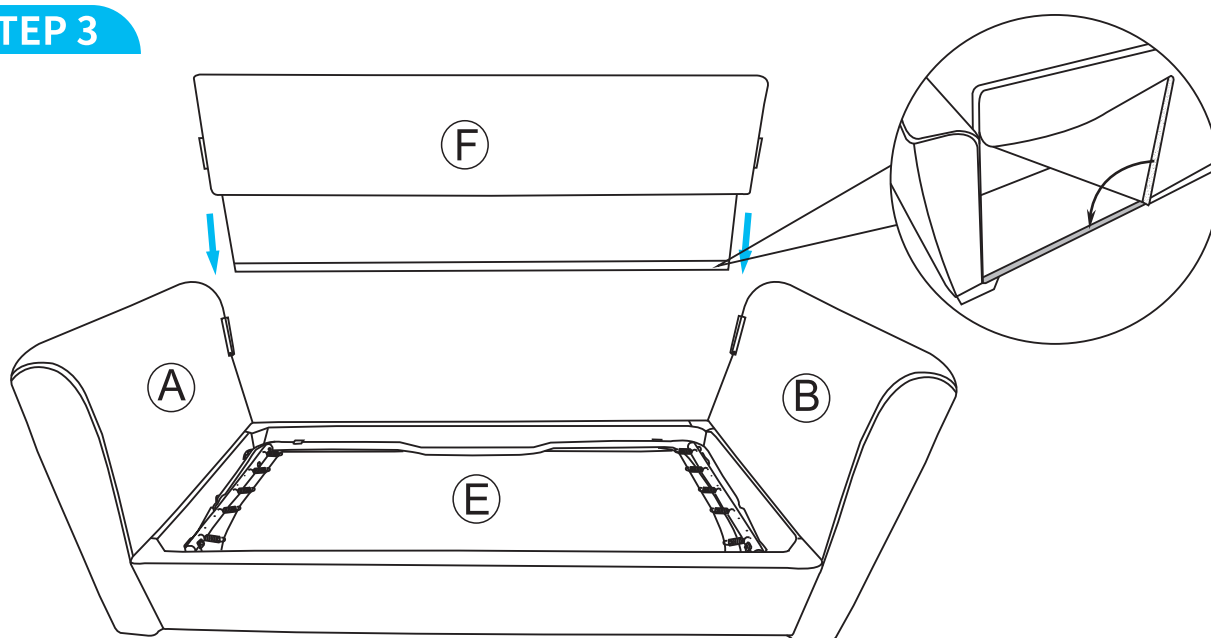


STEP 4

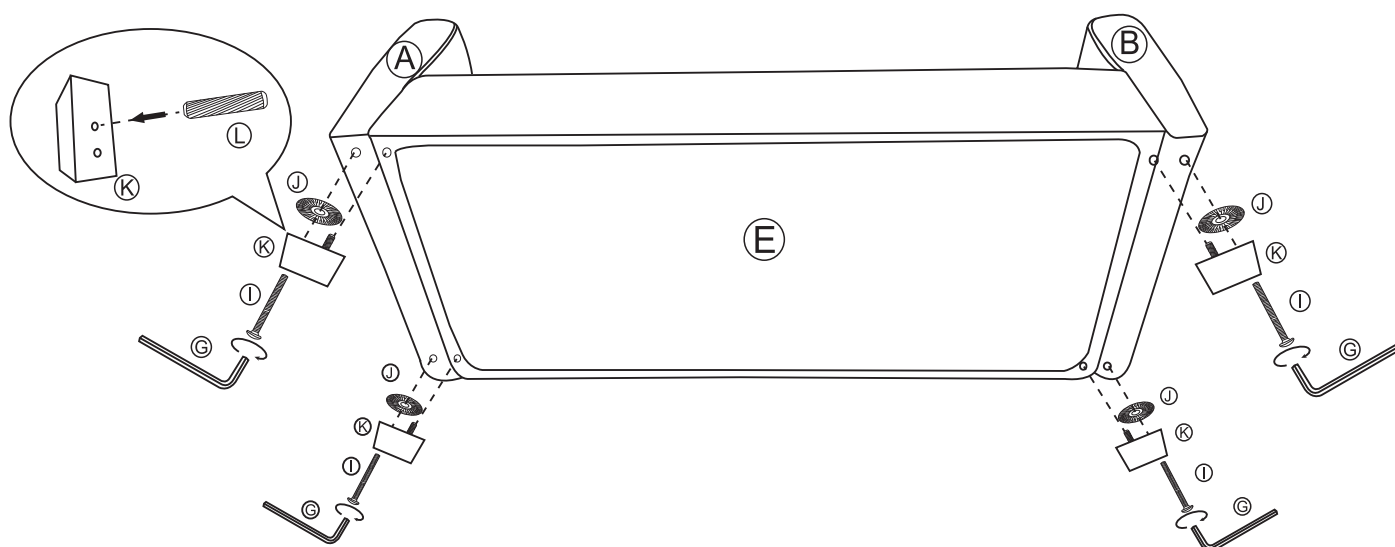


STEP 5

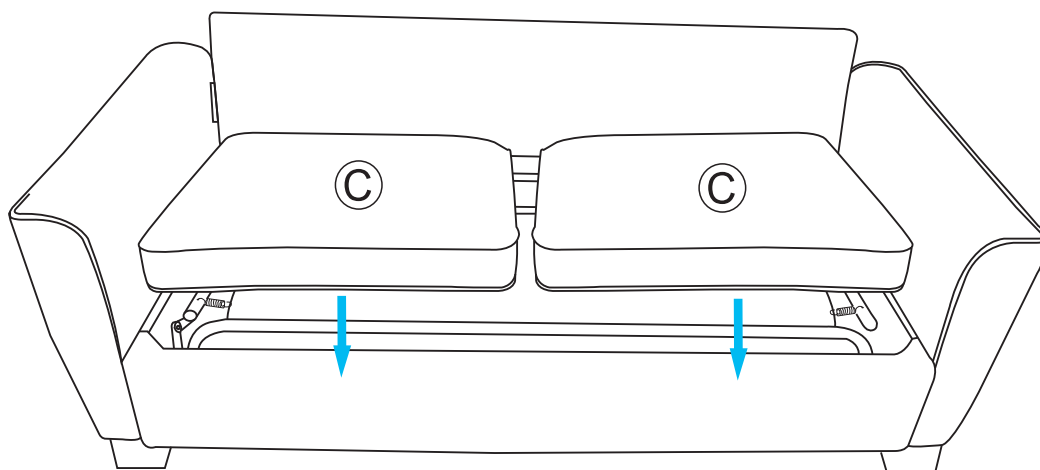

STEP 6

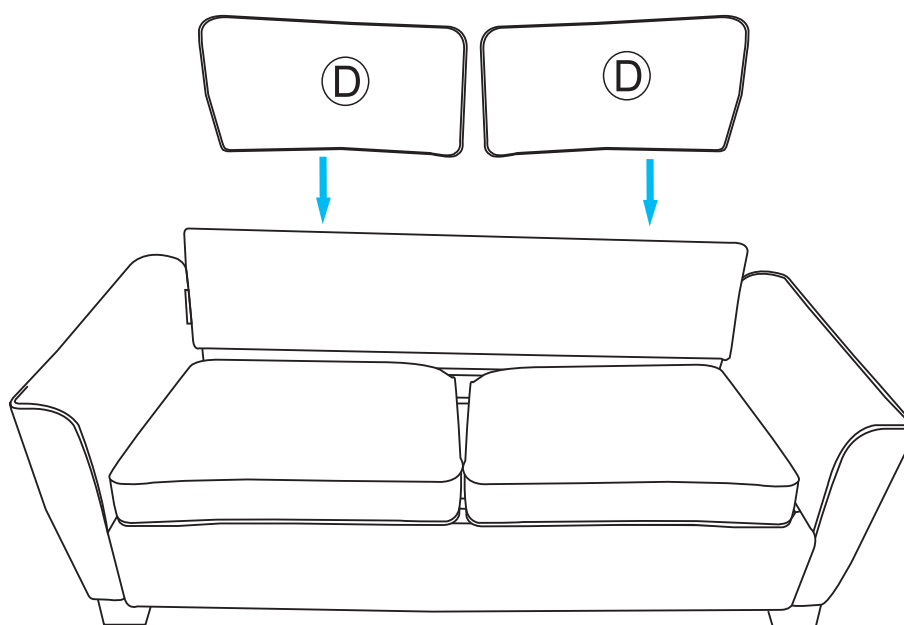


COMPLETE


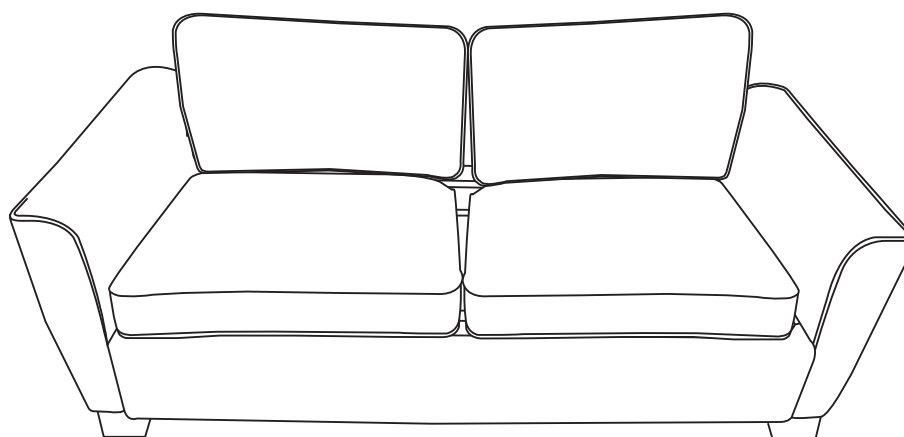


TRANSFORM



STEP 1

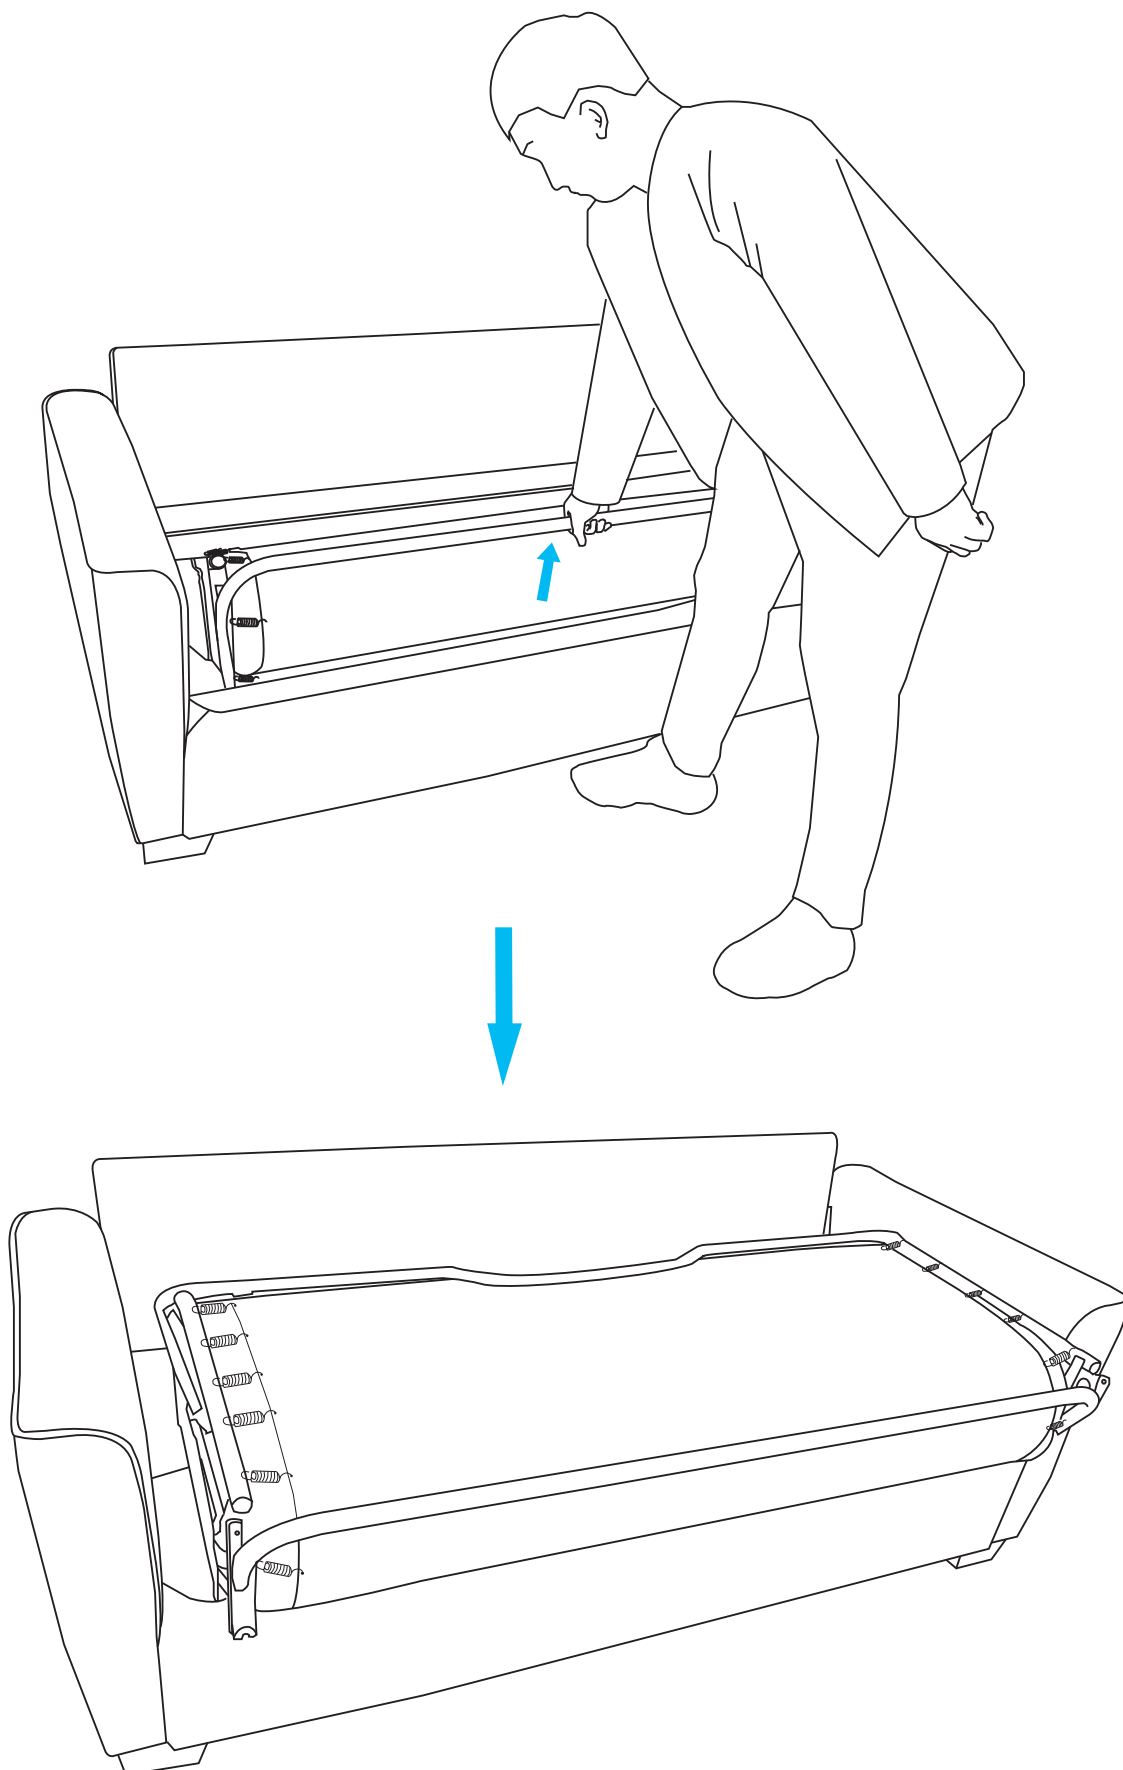

STEP 2

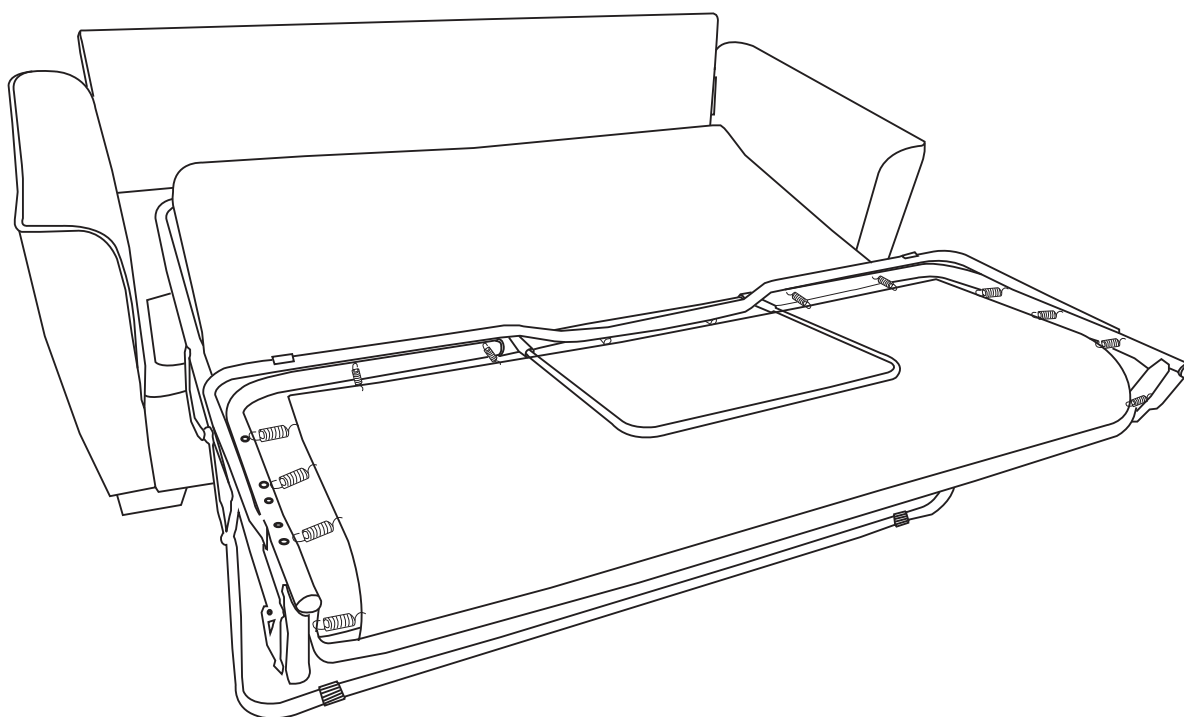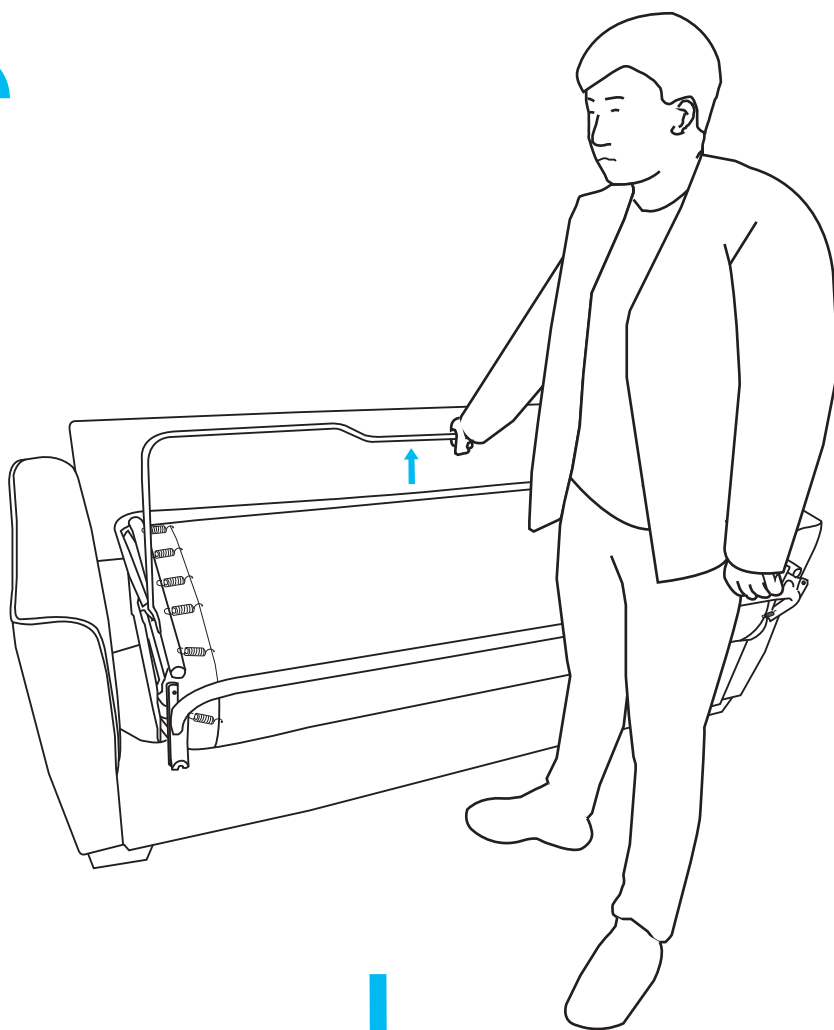

STEP 2

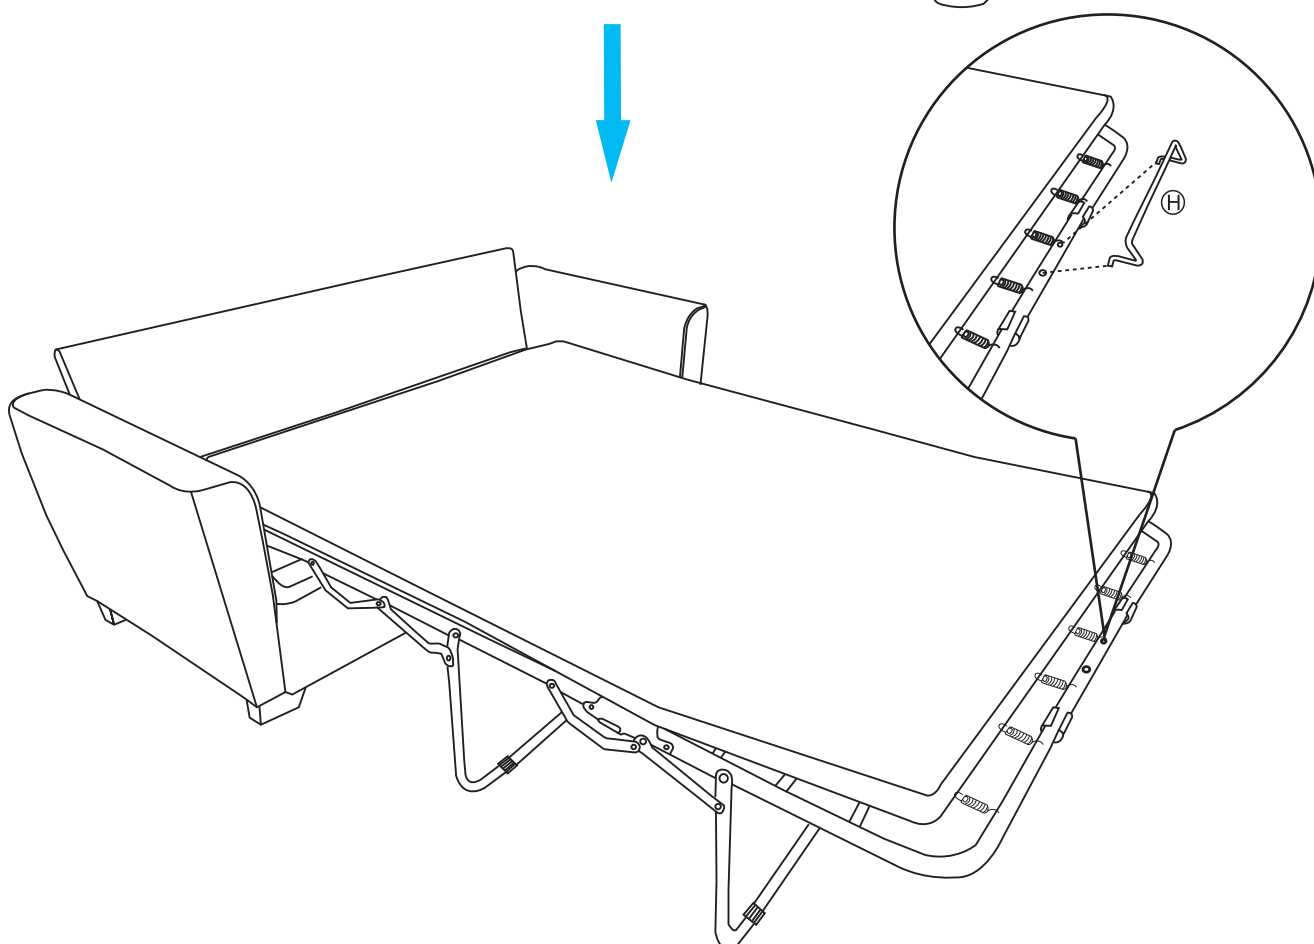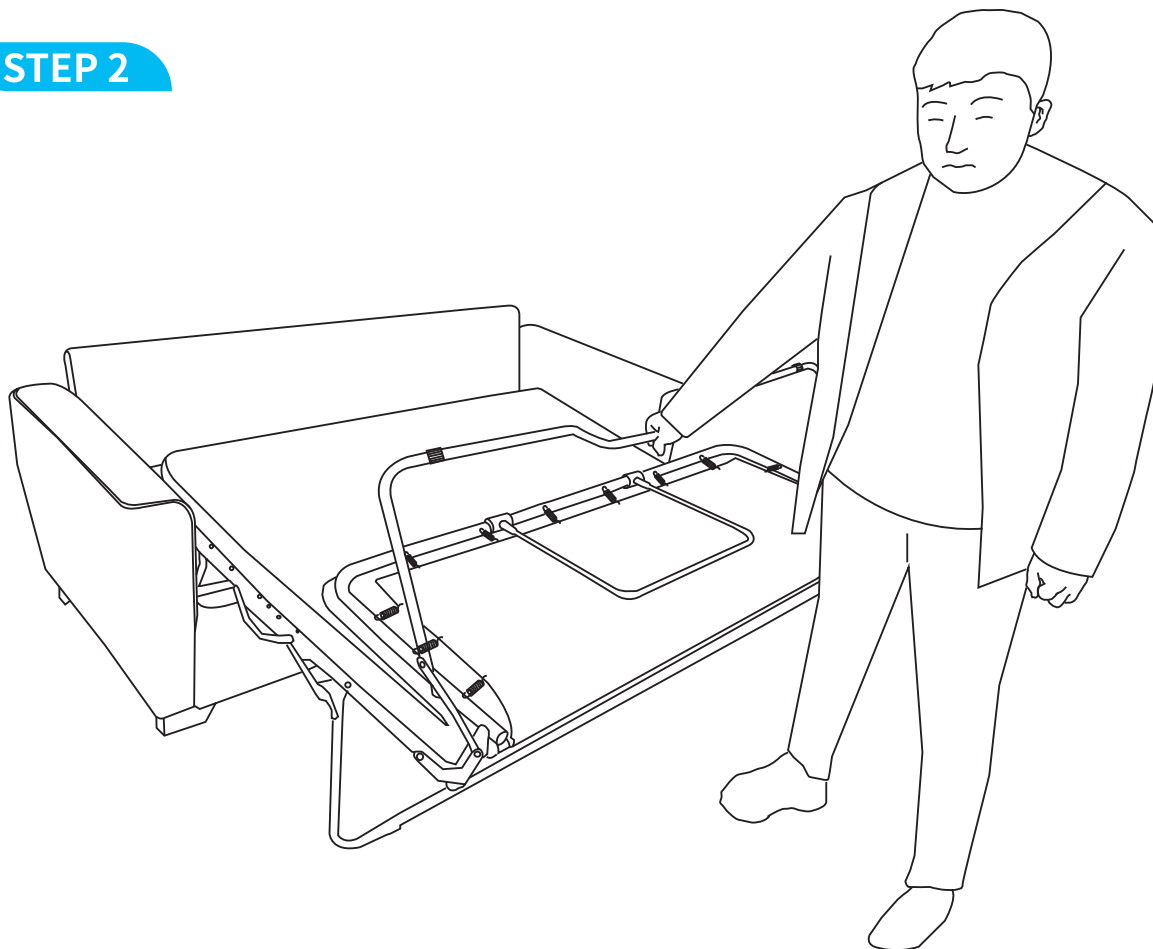

STEP 3

