



A


Assembly Instructions

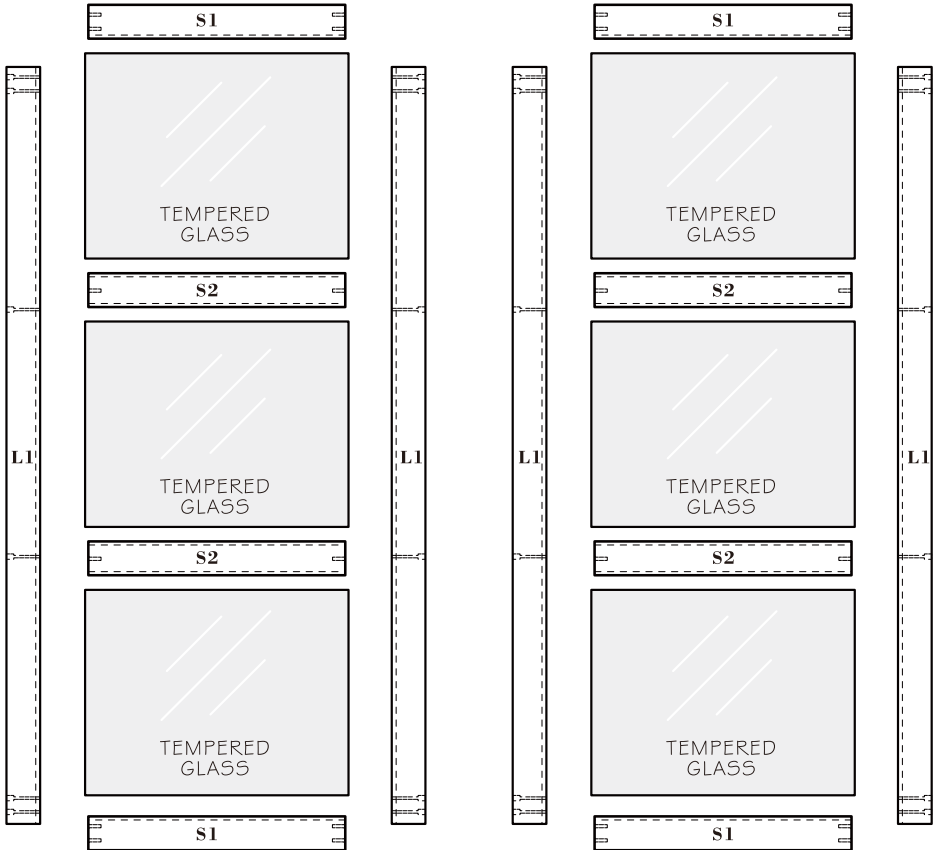

*Note: S1 S2 must be the same place as above


B

Assembly Instructions

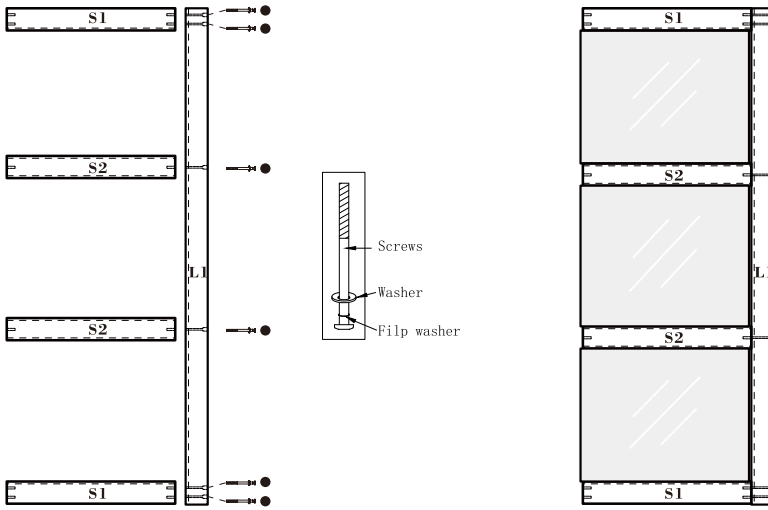


① Connet the rails S1、 S2 with L1 by using bolts and then cover the bolt holes with stickers F.

② Put all the tempered glass in

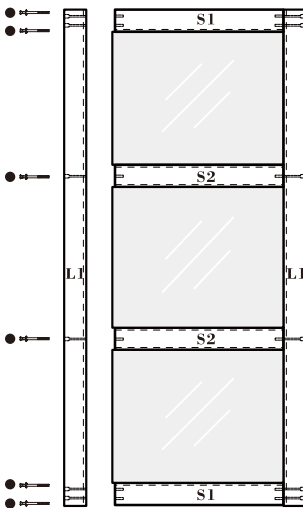

③ Connet the L1 with wood pins and bolts, cover the bolt holes with stickers F

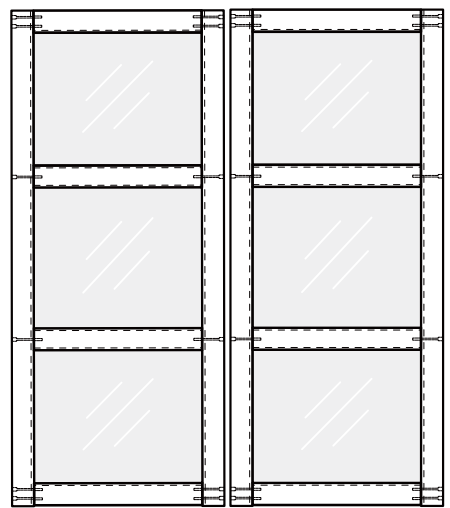

④ Repeat the preceding steps twice.

x 24 pcs