


# Assembly Instructions

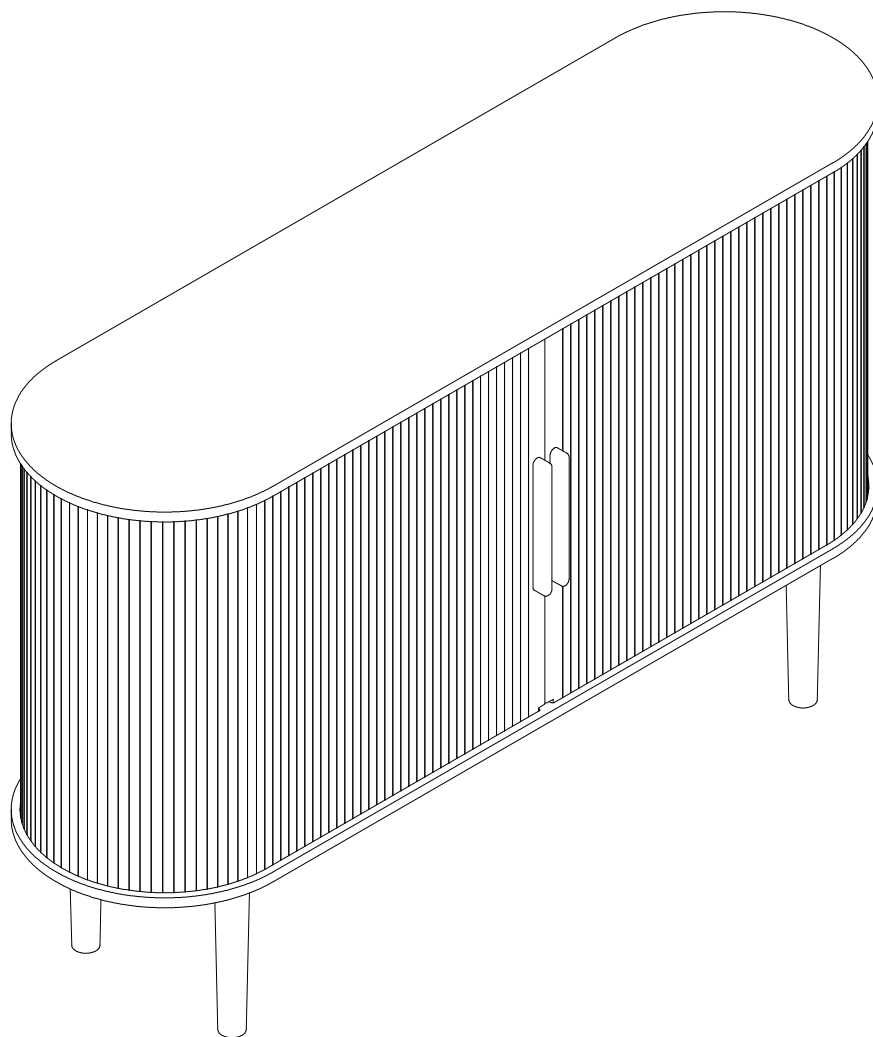


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

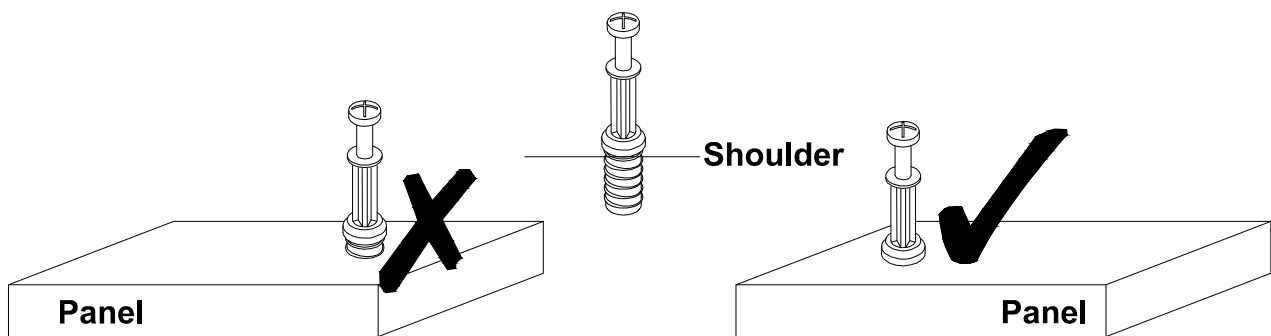

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

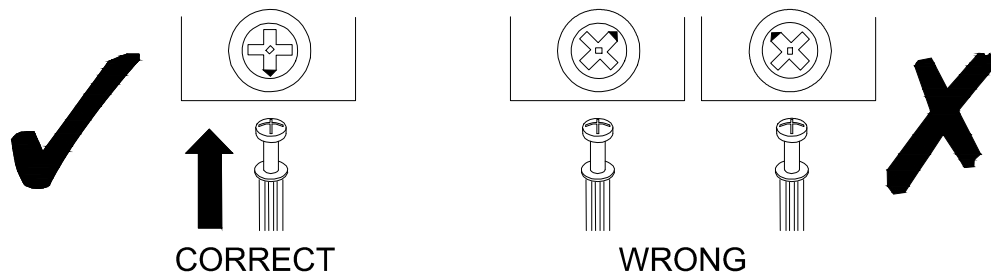

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT








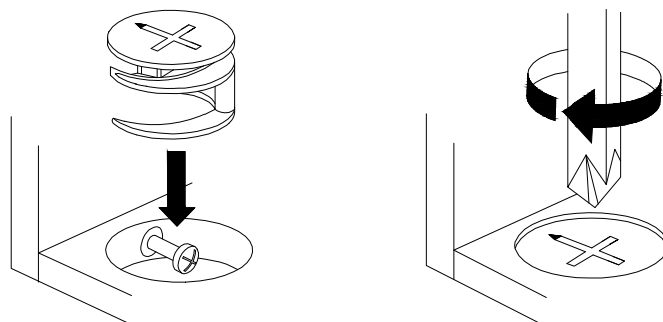



Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.




Turn cam lock clockwise to tighten.


# Part List

<b>No. A</b> Quantity:24 Pcs Cam Lock Dowel 8*28mm 	<b>No. B</b> Quantity:24 Pcs Cam Ø15 	<b>No. C</b> Quantity:24 Pcs Sticker Ø20 	<b>No. D</b> Quantity:3 Pcs Dowel 8*30mm 
<b>No. E</b> Quantity:2 Pcs Handle 200*20mm 	<b>No. F</b> Quantity:18 Pcs Screw M6*40mm 	<b>No. G</b> Quantity:1 Pcs Allen Key 4# 	<b>No. H</b> Quantity:4 Pcs Screw M4*14mm 
<b>No. I</b> Quantity:4 Pcs Foot Pad Ø20 	<b>No. J</b> Quantity:8 Sets Plastic Wedge 	<b>No. K</b> Quantity:1 Sets Anti-falling Parts 	

# Product structure

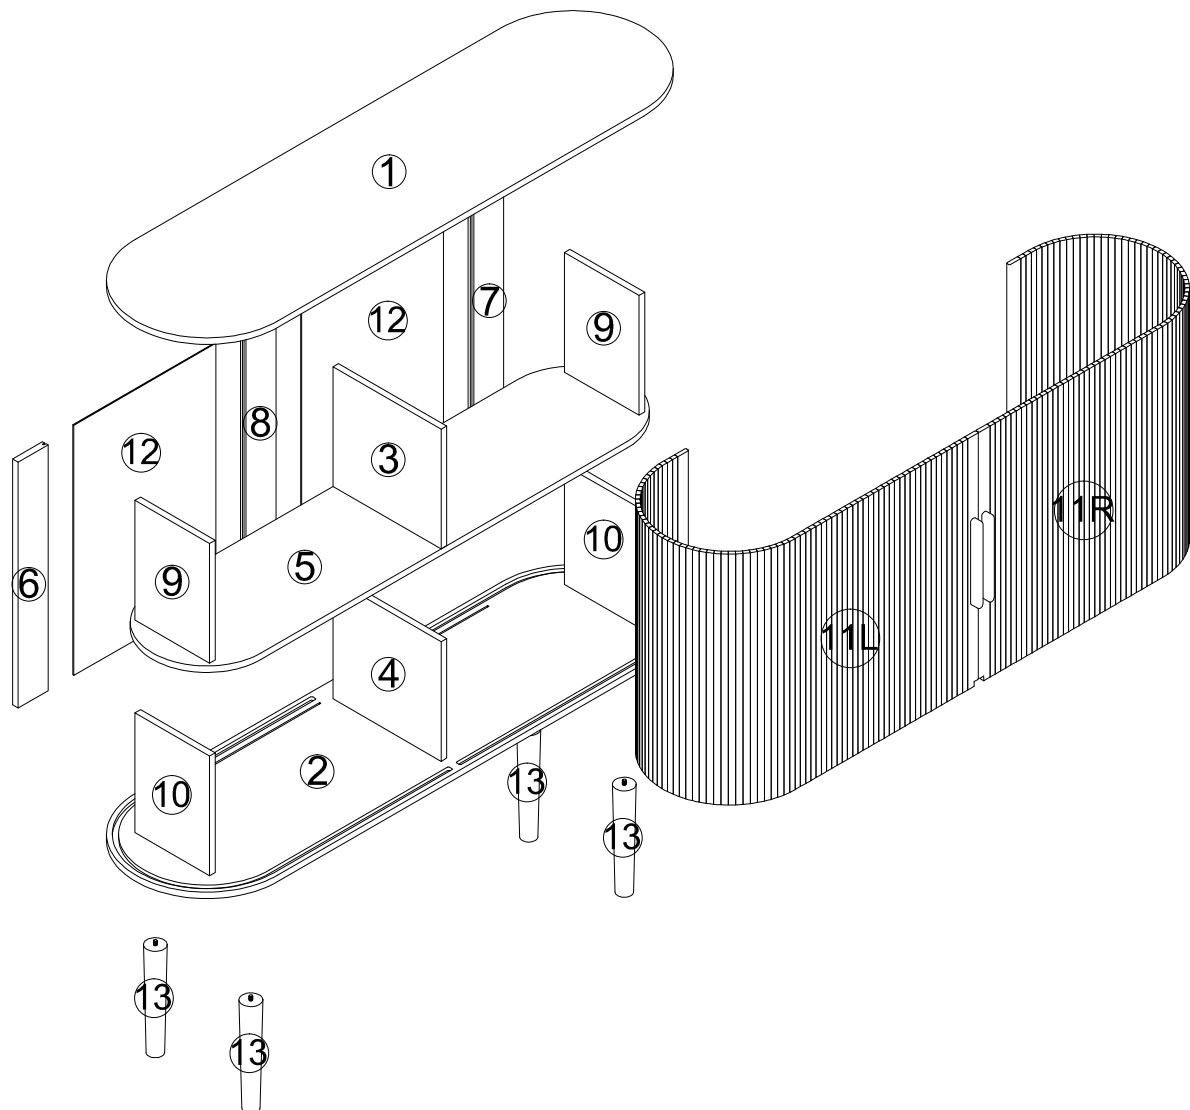


## STEP 1

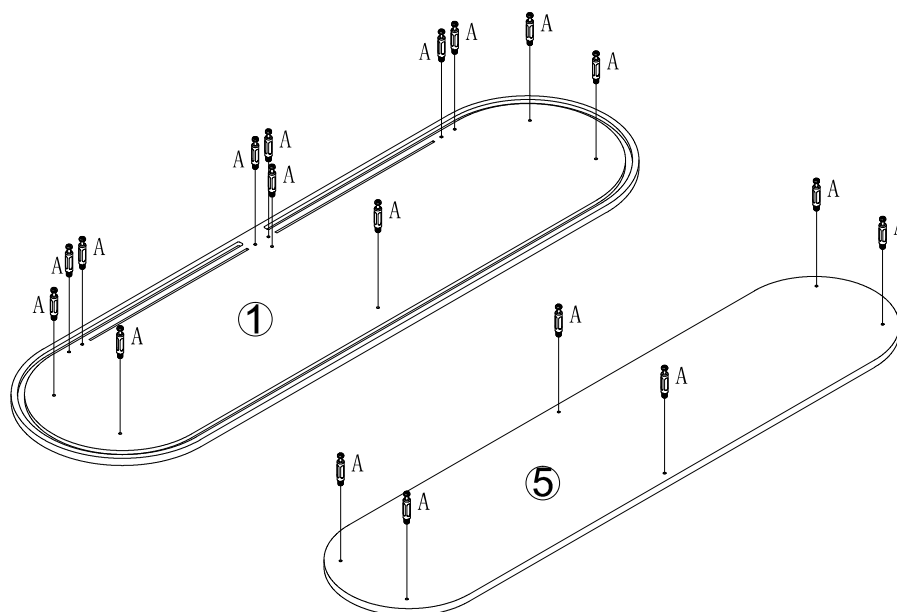

No. A  
Quantity: 18 Pcs  
8\*28mm




## STEP 2

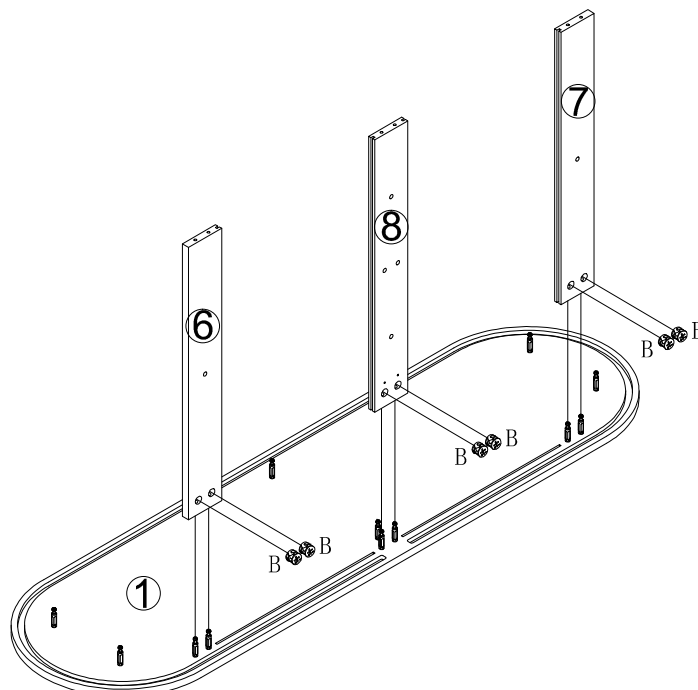

No. B  
Quantity: 6 Pcs  
Ø15




## STEP 3

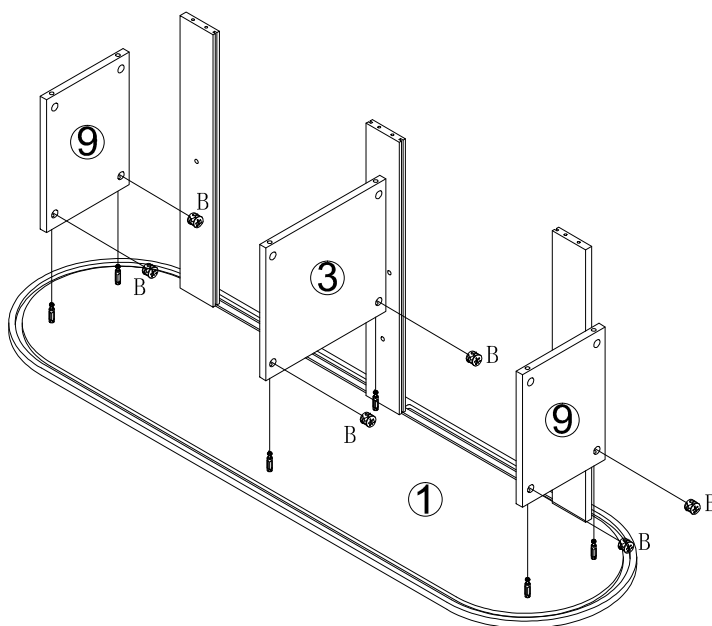

No. B  
Quantity: 6 Pcs  
Ø15




## STEP 4

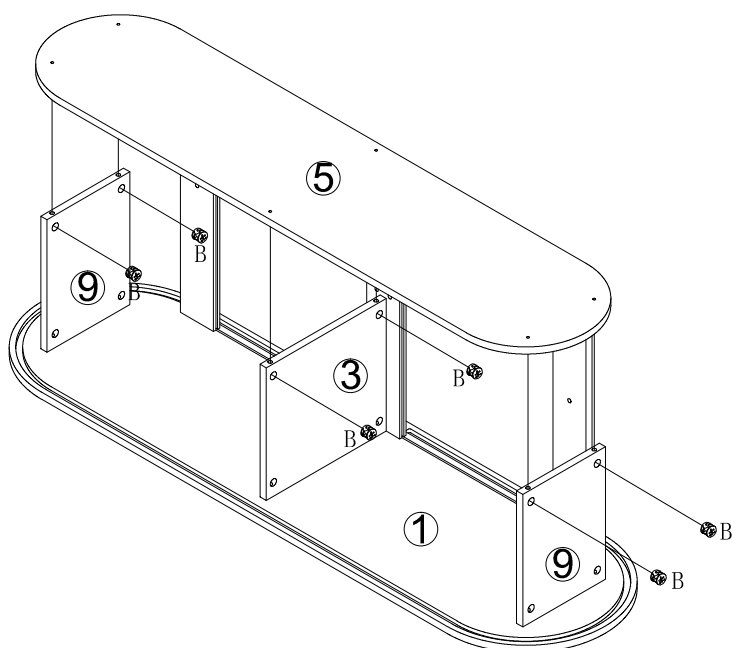

No. B  
Quantity: 6 Pcs  
Ø15




## STEP 5

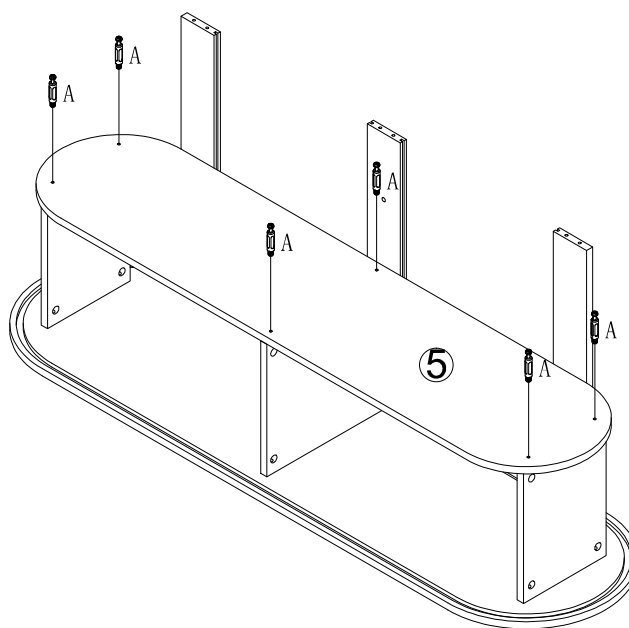

No. A  
Quantity: 6 Pcs  
8\*28mm




## STEP 6

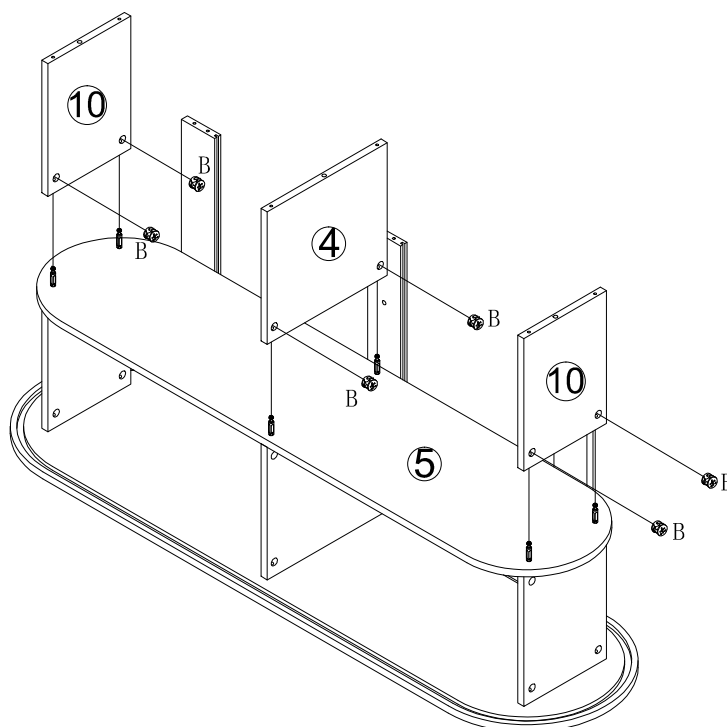


No. B  
Quantity: 6 Pcs  
Ø15



## STEP 7

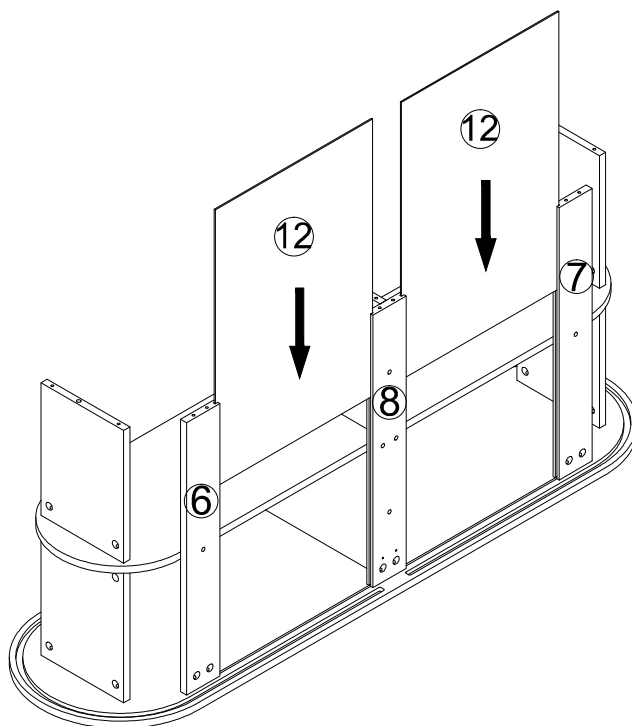

## STEP 8

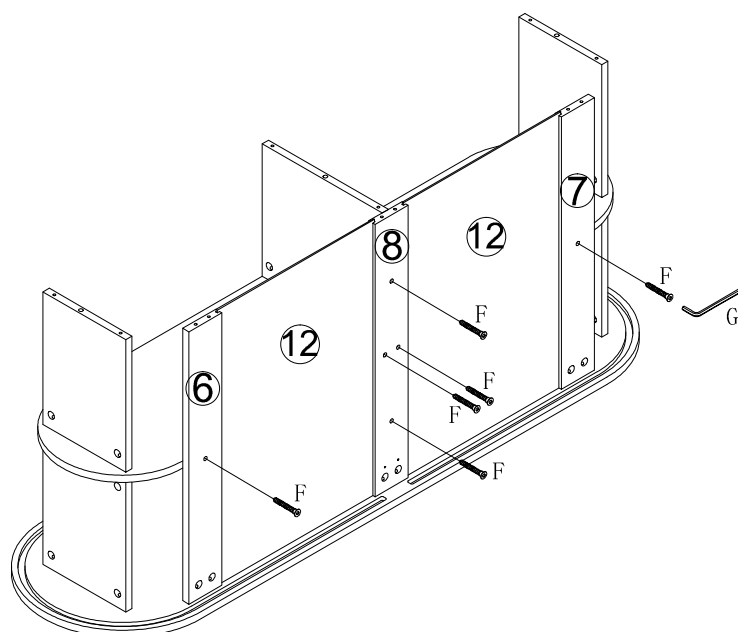

No. F  
Quantity: 6 Pcs  
M6\*40mm




No. G  
Quantity: 1 Pcs  
4#





## STEP 9

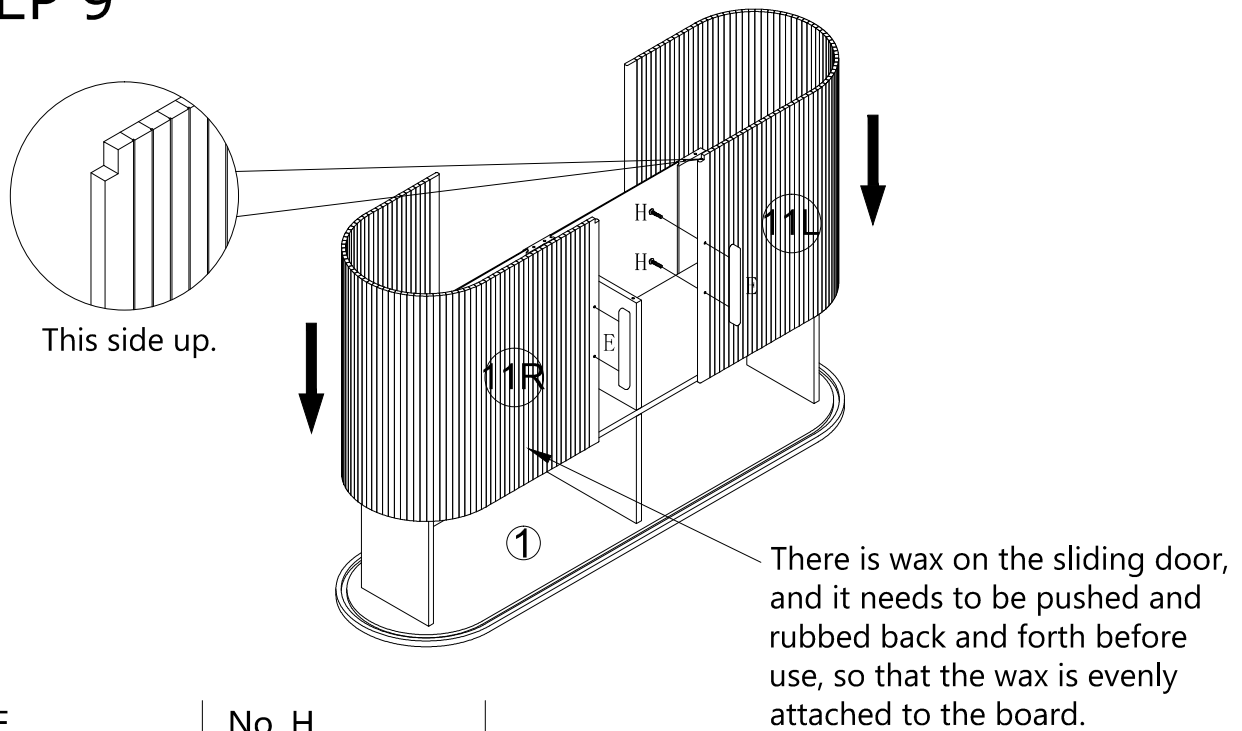


No. E  
Quantity: 2 Pcs  
200\*20mm




No. H  
Quantity: 4 Pcs  
M4\*14mm



## STEP 10

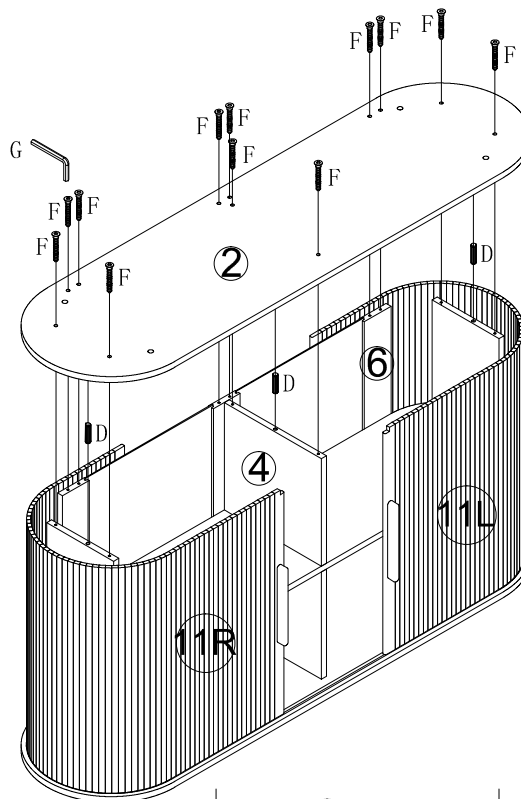

No. D  
Quantity: 3 Pcs  
8\*30mm




No. F  
Quantity: 12 Pcs  
M6\*40mm




No. G  
Quantity: 1 Pcs  
4#



## STEP 11

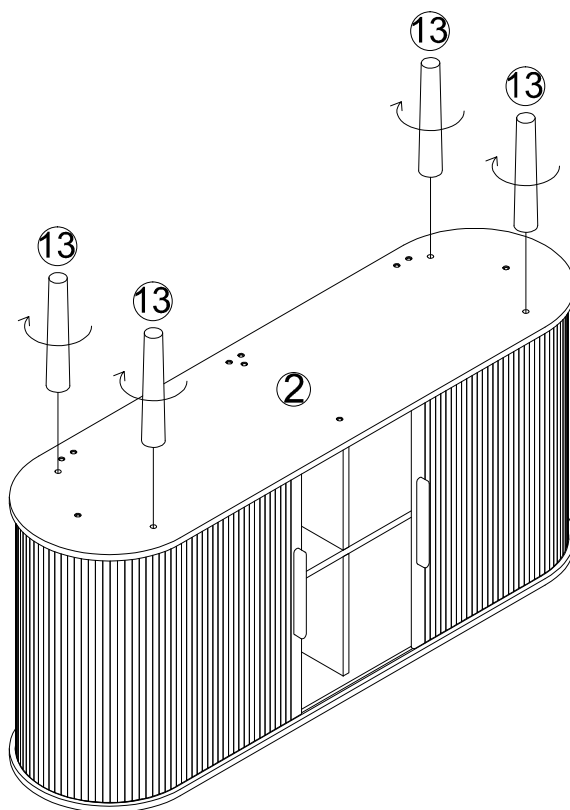


## STEP 12

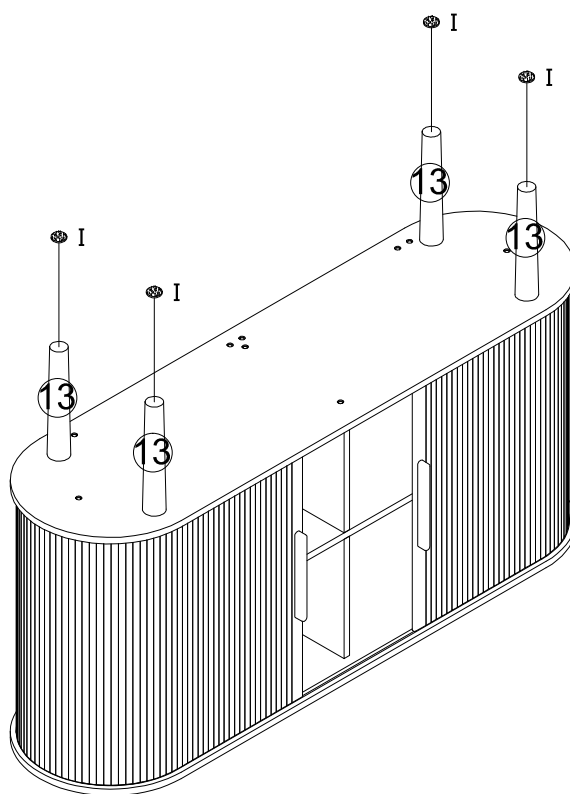


No. I  
Quantity: 4 Pcs  
Ø20




## STEP 13

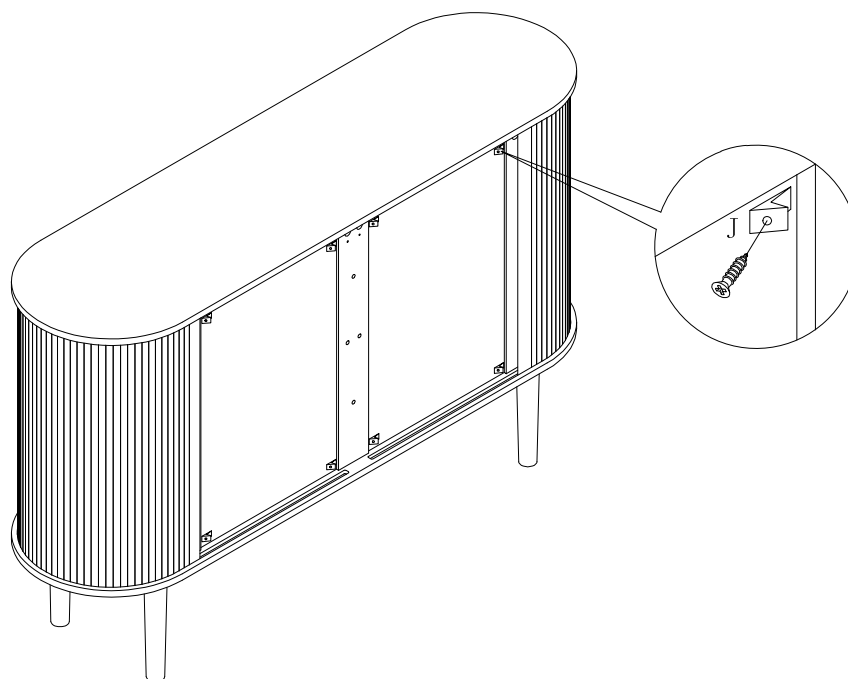


No. J  
Quantity: 8 Sets




## STEP 14

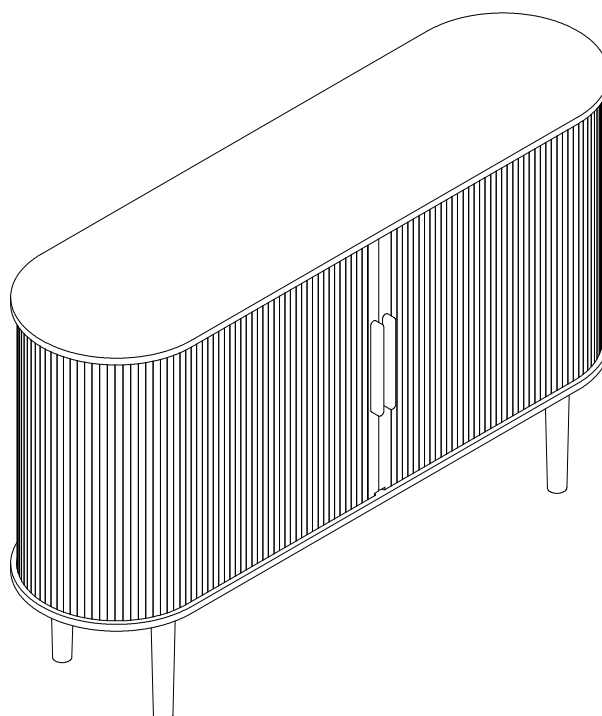

# STEP 15

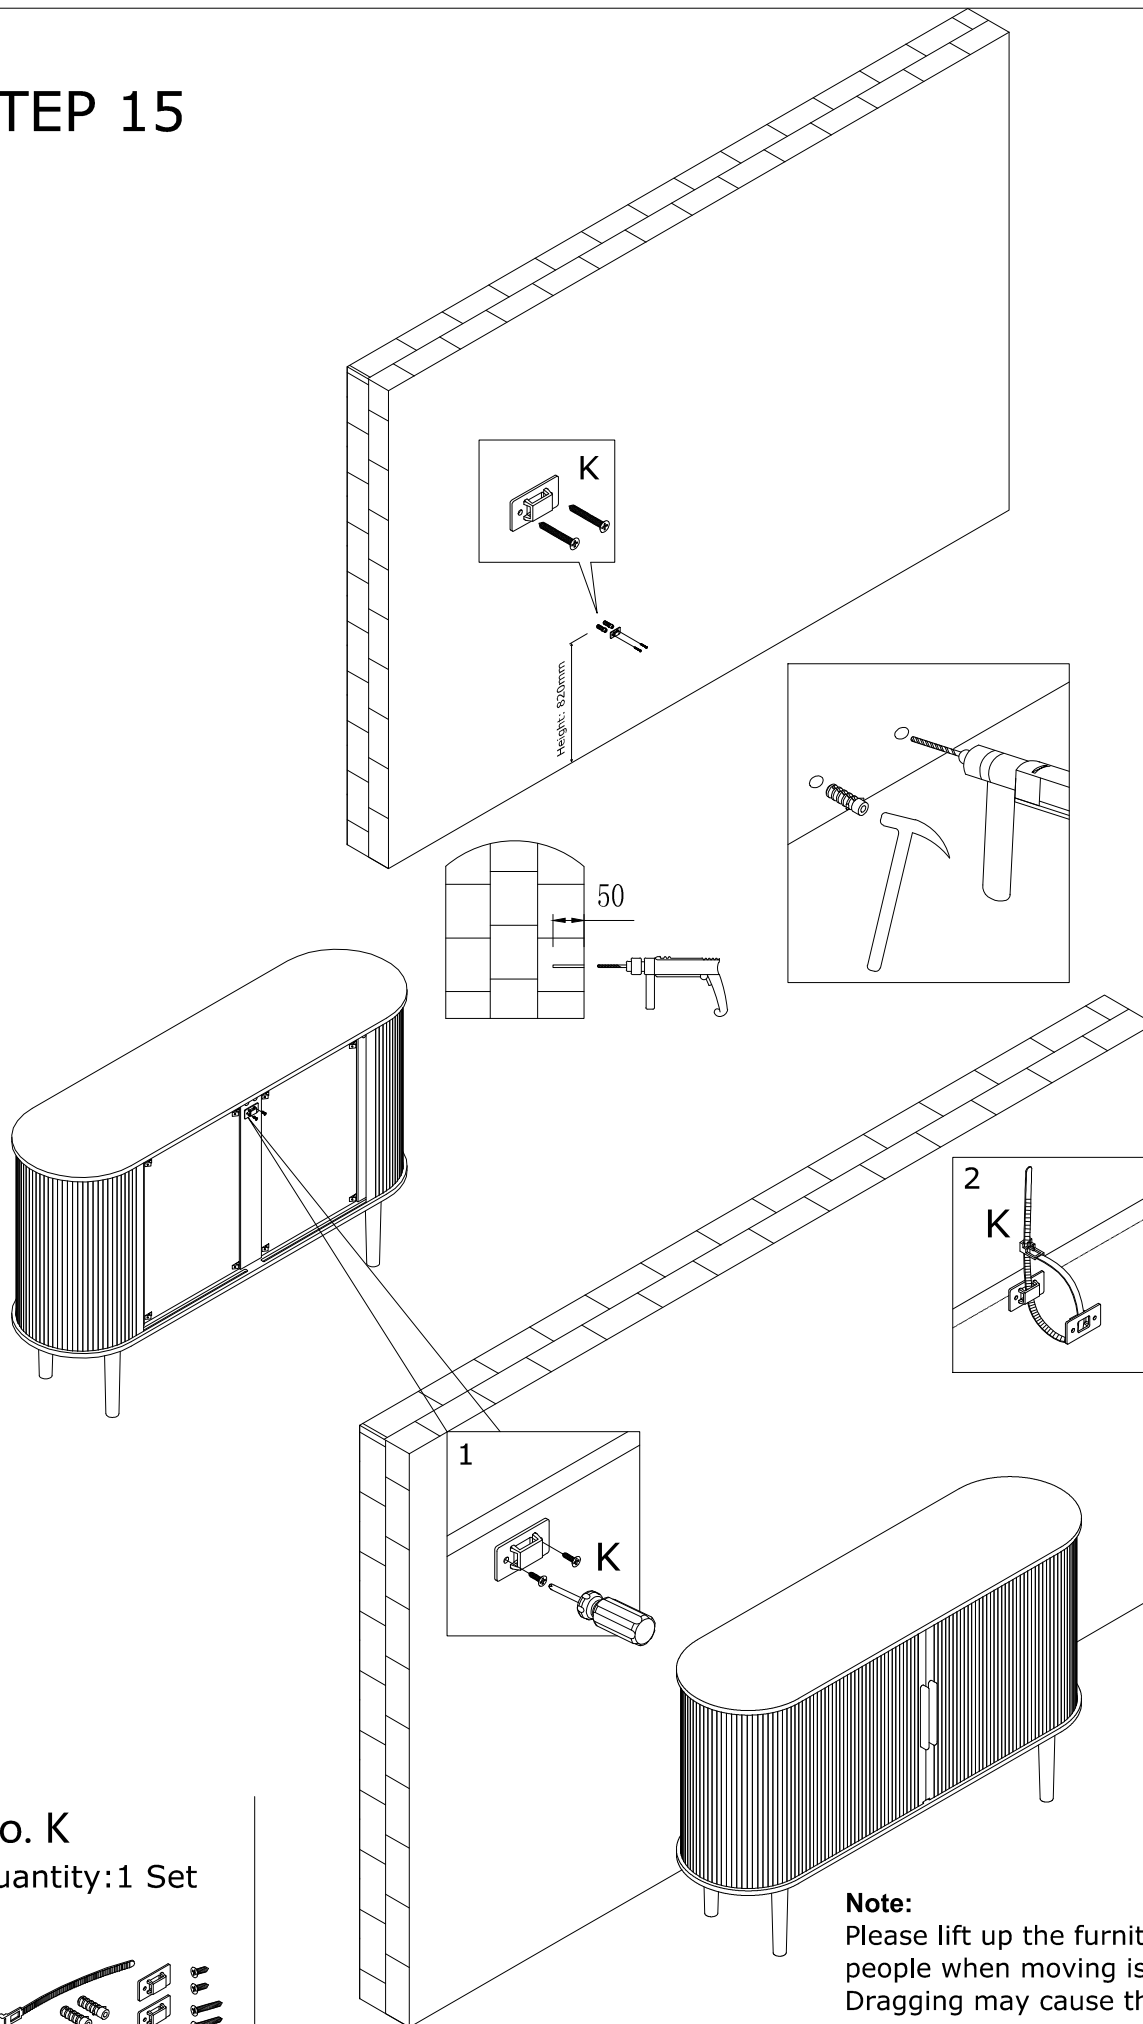

No. K  
Quantity: 1 Set



**Note:**  
Please lift up the furniture by two people when moving is needed.  
Dragging may cause the legs failure.