
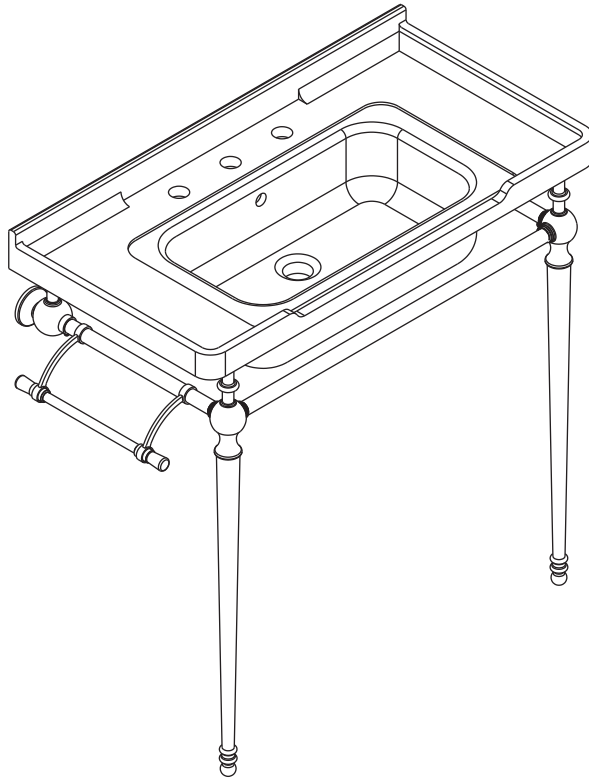

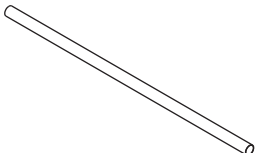
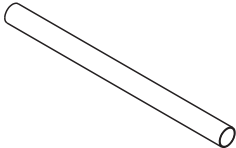


ASSEMBLY INSTRUCTIONS

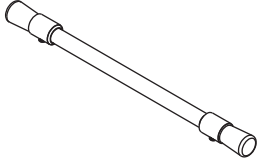

Bathroom Vanity

1		x2	7		x2
2		x2	8		x1
3		x2	9		x2
4		x2			
5		x2			
6		x1			

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.







Recommended installers : 2




Put a carpet on the floor
before unpacking

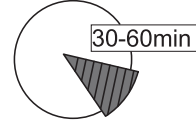



Estimate installation time:
30 minutes

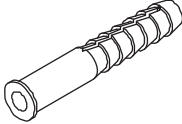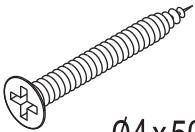
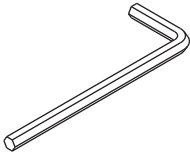
Item no.	Reference Image	Qty
A		x1
B		x4
C	 Ø4x50mm	x4
D		x1

Item no.	Reference Image	Qty

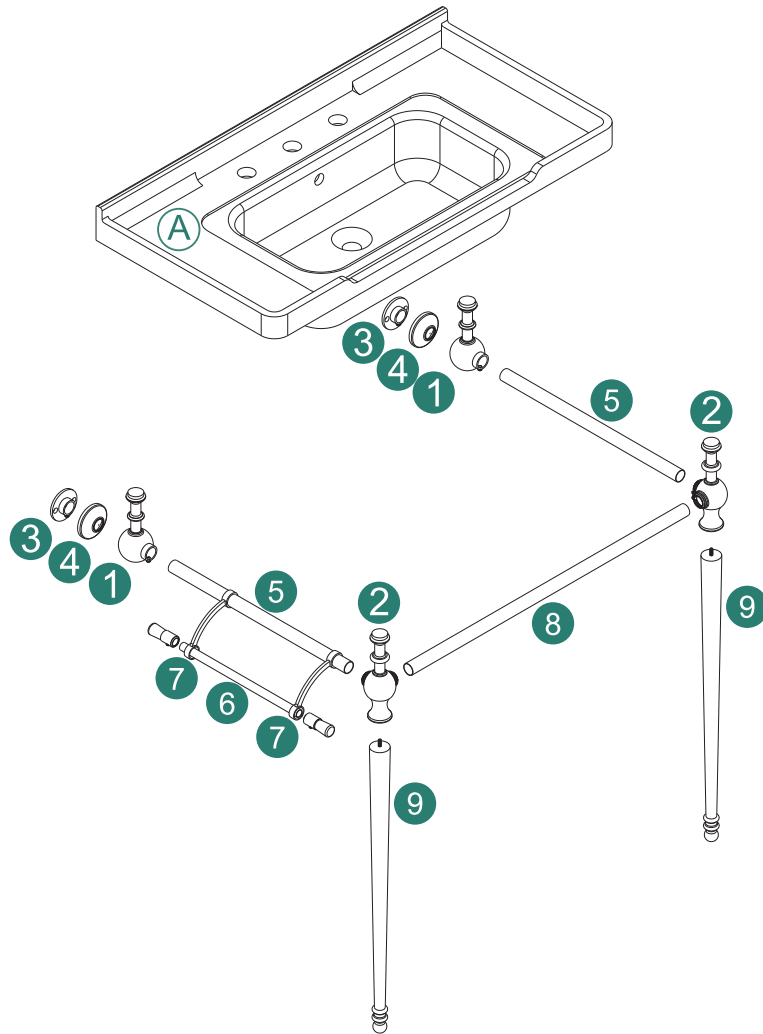


WARNING: To prevent tipping over, this product must be used with the included wall mounting device.
 WARNING: Evaluate the suitability of the wall to ensure that the fixtures can withstand the forces that occur.

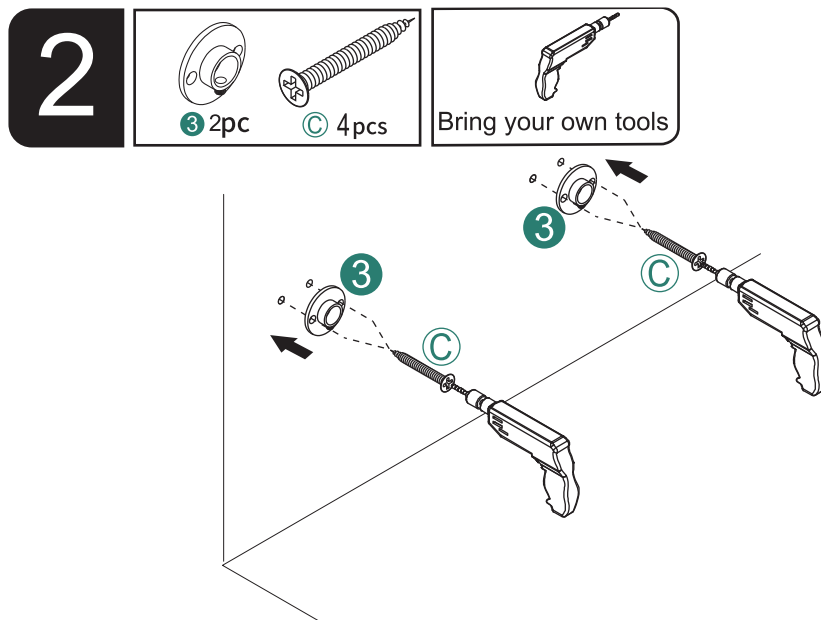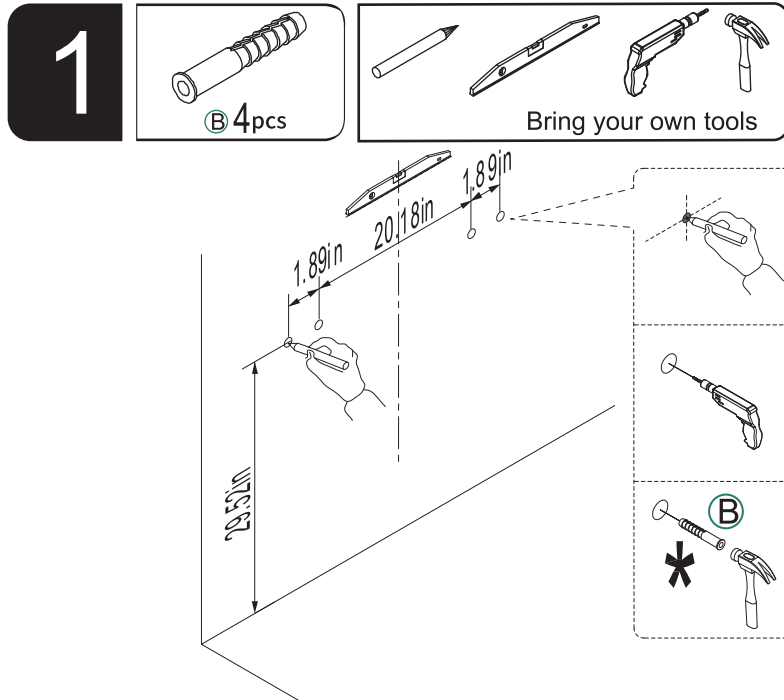

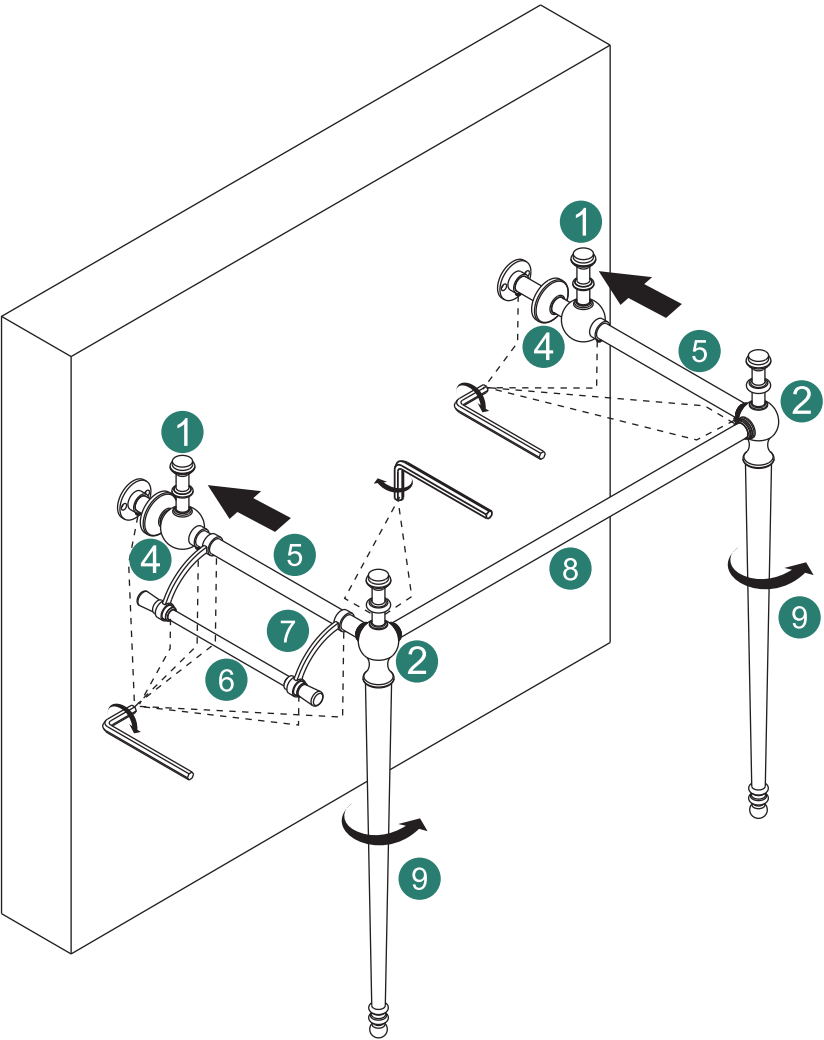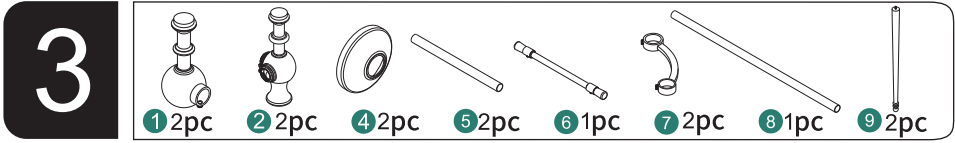

4

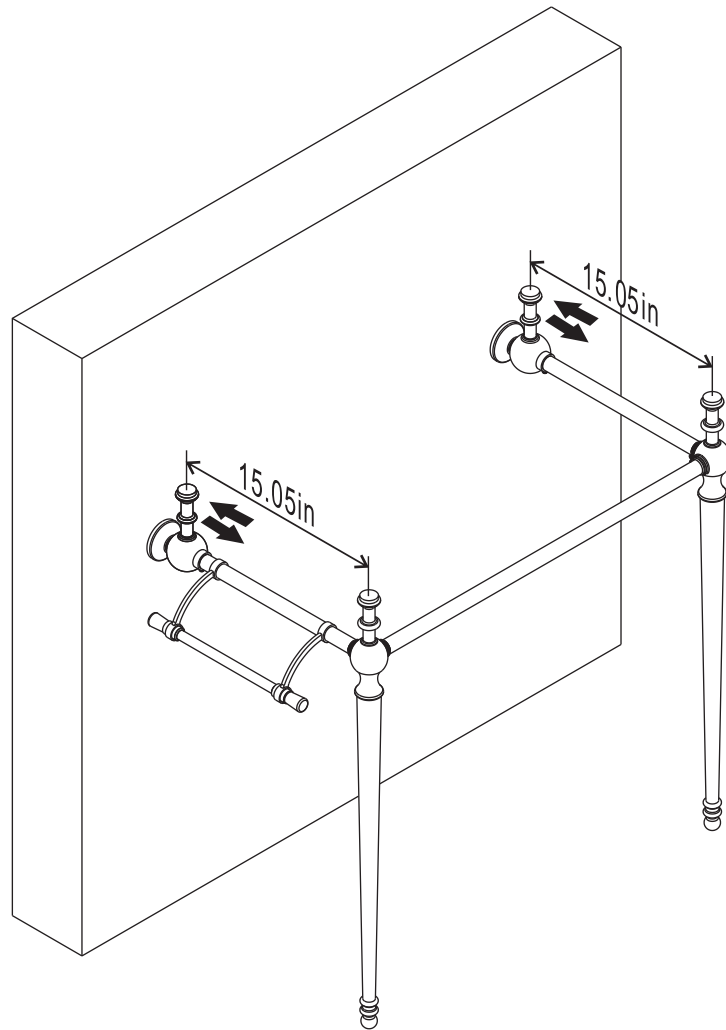

Installation completed

