

# Installation Instructions


## Wall Mounted Bathroom Hook

Following these mounting instructions with the hardware included will be more than sufficient to support wall mounted installation.


### Included Installation Hardware



x2 screw

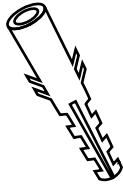


x2 wall anchor



x1 allen wrench


### Tools You May Need

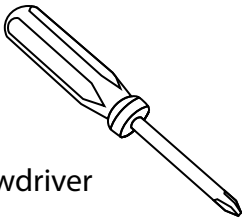


Screwdriver




Level

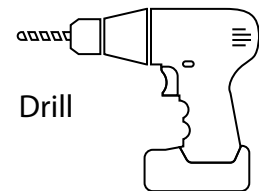

Drill

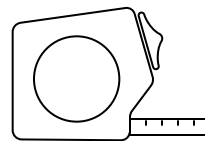

Tape Measure

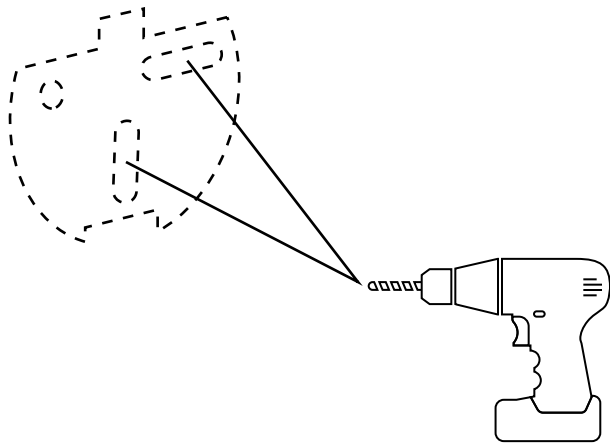

## 1. Drill Anchor Holes



---

Identify installation location. Mark mounting bracket on wall and drill holes the size of the anchors.

## 2. Install Anchors

---

Tap anchors into predrilled holes.

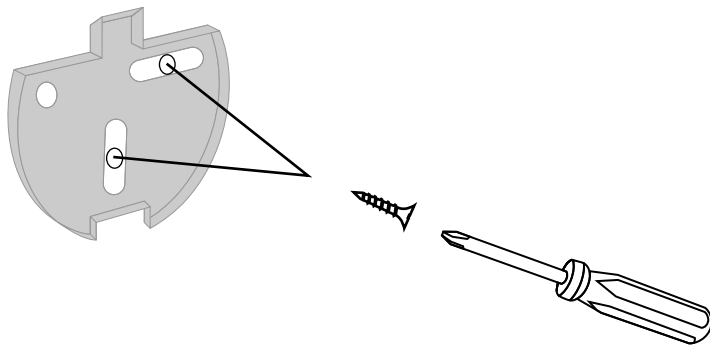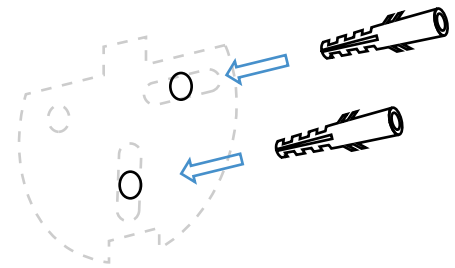

## 3. Mount Bracket

---

Mount bracket with screws.

## 4. Mount Hook

---

Install bathroom hook over mounting bracket and tighten with allen wrench.

