

# UNBOXING

## STEP 1

PLACE BOX OUT ON A FLAT SURFACE  
AND PULL THE MATTRESS OUT




## STEP 2

CUT THE OUTER BAG




## STEP 3

ROLL OUT THE COMPRESSED MATTRESS

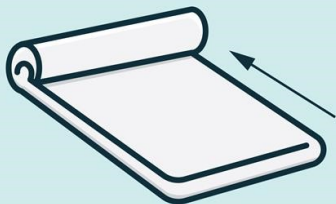

## STEP 4

CAREFULLY CUT THE PLASTIC BAG

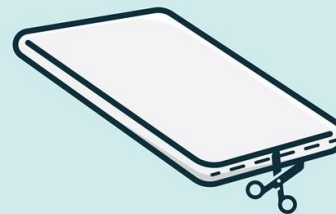

## STEP 5

LET IT TAKE SHAPE FOR 48H



## STEP 6

GET READY TO SLEEP LIKE NEVER BEFORE!

